

Index

- +5V filter assembly 05-335
- +5V plate (location) 05-360

- AC box 05-310
- AC box (second level) 05-315
- actuator speed adjustment, disk drive (62EH) 09-140
- actuator, pressure pad (33FD) 23-140
- adapter card
 - first or second communications adapter 31-200
 - multiline communications adapter 30-200
 - printer
 - 3262 08-000
 - 5211 07-000
 - work station 11-100
- address switches, 4800 bps integrated modem (MLCA) 30-440
- alignment tool
 - 33FD 02-080, 23-070
 - 72MD 27-030
- alignment, index sense, service (72MD) 27-675
- amplifier, phototransistor, service check (53FD) 25-840
- analog wideband adapter (MLCA) 30-700
 - card jumpers 30-750
 - installation 45-700, 45-760
 - location 30-710
 - power requirements 05-600
 - signal lines 30-700
 - voltage levels 30-700
- antistatic brush
 - disk drive motor
 - 62EH 09-060
 - 62PC 10-060
 - disk drive spindle
 - 62EH 09-070
 - 62PC 10-070
- autocall adapter (MLCA) 30-800
 - card and board jumpers 30-850
 - control lines 30-820
 - diagnostic programs 99-070
 - installation 45-700, 45-770
 - locations 30-810
 - power requirements 05-600
 - wrap connector lines 30-820
- backup speed, 4800 bps integrated modem (MLCA) 30-400
- bail and solenoid, 53FD
 - adjustment 25-530
 - removal
 - machines with taper pin block 25-540
 - machines without taper pin block 25-550
 - replacement
 - machines with taper block 25-545
 - machines without taper pin block 25-550
 - service check 25-520
- bail, head load (72MD) 27-655
- band, drive (see drive band)
- base distribution assembly 05-330
- base power supply 05-330
 - ferroresonant capacitor (location) 05-230
 - ferroresonant transformer (location) 05-230
 - sense card, base (C-A1C2) 05-370
- belt guard, disk drive (62EH) 09-030
- belt path, 33FD 23-200
- belt tensioner, disk drive (62PC) 10-050
- belt tracking, 53FD
 - adjustment 25-570
 - service check 25-560
- belt, carriage bed (72MD) 27-255
- belt, 53FD
 - removal 25-580
 - replacement 25-590
- board jumpers
 - first or second communications adapter
 - adapter card 31-200
 - CADUCEE 31-460
 - EIA/CCITT adapter 31-610
 - line plate adjustment 31-320
 - test/operate diagnostics 31-414
 - 1200 bps integrated modem 31-310
 - multiline communications adapter
 - adapter card 30-200
 - autocall adapter 30-850
 - EIA/CCITT adapter 30-610
 - line plate adjustment 30-360
 - wideband adapter 30-200
 - X.21 line adapter 30-960
 - 1200 bps integrated modem 30-350
 - 4800 bps integrated modem 30-460
- board, disk (62PC) 10-170
- bracket and stepper motor, 33FD 23-260
- brake assembly and coil, disk drive spindle (62PC)
 - removal/replacement 10-110
 - service check/adjustment 10-190

brake assembly, disk drive motor (62EH)
removal/replacement 09-040
service check/adjustment 09-050
brake coil assembly, disk drive motor
(62EH)
removal/replacement 09-040
brush, antistatic (see antistatic brush)

cable locations

disk drive

62EH 09-120
62PC 10-200

diskette

33FD 23-300
53FD 25-990
72MD 27-830

first or second communications adapter

digital data service adapter 31-140
EIA/CCITT 31-110

external cables 31-150

1200 bps integrated modem 31-130
2400 bps integrated modem 31-120

multiline communications adapter 30-100

analog wideband adapter 30-710

autocall adapter 30-810

cable tower 30-110

digital data service adapter 30-510

EIA/CCITT adapter 30-610

external cables 30-110

X.21 line adapter 30-920

1200 bps integrated modem 30-310

4800 bps integrated modem 30-405

printer attachment

3262 08-400

5211 07-400

work station attachment

5224 11-400

5225 11-400

5251 11-400

5252 11-400

5256 11-400

cables and connectors, flat 10-150

CADUCEE feature 31-410

card jumpers 31-477

capacitor locations

C-1 through C-6 (feature Power
Supply-A) 05-610

C1 (feature power supply C) 05-630

C4 (feature power supply B) 05-620

C5 (control supply) 05-320

card check, 2400 bps integrated

modem 31-460

card gate (62PC) 10-180

card gate fan assembly, 62PC 10-130

card jumpers

analog wideband adapter 30-750

autocall adapter 30-850

CADUCEE 31-477

channel interface (62PC) 10-210

digital data service adapter (DDSA)

first or second communications

adapter 31-500

multiline communications

adapter 30-550

disk drive (62PC) 10-210

EIA/CCITT

first or second communications

adapter 31-650

multiline communications

adapter 30-650

printer adapter

3262 08-500

5211 07-500

X.21 line adapter 30-950

2400 bps integrated modem 31-470

4800 bps integrated modem (see board
jumpers)

card locations

control processor 15-110

disk drive

62EH 09-120

62PC 10-200

diskette drive

33FD 23-300

53FD 25-990

72MD 27-830

first or second communications

adapter 31-100

main storage processor 15-210

multiline communications adapter 30-100

analog wideband adapter 30-700

autocall adapter 30-810

communications lines (A-B3

board) 30-100

digital data service adapter 30-510

EIA/CCITT adapter 30-610

X.21 line adapter 30-910

1200 bps integrated modem 30-310

4800 bps integrated modem 30-405

4800 bps integrated modem (A-B3

board) 30-100

printer

3262 08-100

5211 07-100

work station 11-100

card retainer

53FD 25-930

72MD 27-815

card sockets, disk drive (62EH) 09-130

card switch settings

first or second communications adapter

1200 bps integrated modem 31-310

- card switch settings (continued)
 - multiline communications adapter
 - 1200 bps integrated modem 30-350
 - 4800 bps integrated modem 30-450
- card, file control (33FD) 23-290
- card, terminator (62PC) 10-140
- cards, disk (62PC) 10-160
- carriage and head assembly
 - 53FD
 - removal 25-500
 - replacement 25-510
 - 72MD
 - adjustment 27-605
 - removal/replacement 27-610
 - service check 27-600
- CE meter 02-080
- CE panel 13-000
 - removal and replacement 13-020
 - troubleshooting position 13-022
- channel interface card jumpers (62PC) 10-210
- checks and adjustments (62PC) 10-190
- clamp and pulley
 - 53FD
 - removal 25-700
 - replacement 25-710
 - 72MD
 - removal/replacement 27-620
- clock stop halt codes, system 99-030
- coil assembly, disk drive motor brake (62EH) 09-040
- collet
 - 33FD 23-120
 - 53FD
 - removal 25-460
 - replacement 25-470
 - 72MD
 - removal/replacement 27-660
- COMMTST, MLCA 99-076
- communications power supply 05-600
- completing the system installation 45-800
- concurrent maintenance 99-041
- configuration change (62EH) 09-150
- connectors, power 05-210, 05-240
- control card
 - 53FD
 - logic pins 25-980
 - removal 25-930
 - replacement 25-940
 - socket and connector pins 25-960
 - test pins 25-950
 - 72MD
 - logic pins 27-825
 - removal/replacement 27-815
 - socket and connector pins 27-830
 - test pins 27-820
- control lines (see modem control lines)
- control processor 15-100
 - card locations 15-110
 - error information 82-000

- control supply
 - ferroresonant capacitor 05-320
 - ferroresonant transformer 05-320
 - second-level diagram 05-325
 - status indicator 05-370
- controller card
 - printer
 - 3262 08-100
 - 5211 07-100
 - work station 11-100
- controller dump/display, I/O 99-067
- controller step and stop on error modes, I/O 99-066
- cover
 - 33FD 23-130
 - 53FD
 - removal 25-420
 - replacement 25-430
- CSIPL
 - diagnostics 99-010
 - error codes 99-020
 - switch options 99-015
- CSIPL/MSIPL from diskette (system tests) 45-620
- data communications (see first or second communications adapter)
- data communications tables 99-077
- data heads 0 and 1 (locations) 09-120
- DC distribution assemblies 05-360
- decibel meter 02-080
- dedicated maintenance 99-043
- device identifiers 99-060
- device TU select, diagnostic 99-065
- diagnostic diskette information 99-045
- diagnostic overview 99-005
- diagnostic programs, data communications 99-070
- diagnostic service guide 99-000
- diagnostic supervisors 99-040
 - concurrent maintenance 99-041
 - dedicated maintenance 99-043
- diagnostic utilities 99-055
- dial tone detect, 2400 bps modem 31-440
- digital data service adapter (DDSA)
 - first or second communications adapter 31-500
 - installation 45-700, 45-720
 - locations 31-140
 - multiline communications adapter 30-500
 - diagnostic programs (MLCA) 99-070
 - installation 45-700, 45-720
 - locations 30-510
 - power requirements (MLCA) 05-600

diode, light-emitting (see light-emitting diode)

disk drive

- 62EH 09-000
 - actuator speed adjustment 09-140
 - cable and card locations 09-120
 - card sockets 09-130
 - configuration change 09-150
 - installation instructions 45-210
 - maintenance 09-010
 - shock mount (top) 09-100
 - shock mounts (bottom) 09-110
 - spindle antistatic brush 09-070
- 62PC 10-000
 - board 10-170
 - brake assembly and coil 10-110
 - cable and card locations 10-200
 - card gate 10-180
 - card gate fan assembly 10-130
 - cards 10-160
 - channel interface card jumpers 10-210
 - checks and adjustments 10-190
 - drive belt tensioner 10-050
 - drive motor assembly 10-100
 - flat cables and connectors 10-150
 - installation instructions 45-220
 - maintenance 10-010
 - shock mounts 10-120
 - spindle antistatic brush 10-070
 - terminator card 10-140
- disk drive motor (62EH) 09-030
 - antistatic brush 09-060
 - brake assembly 09-050
 - brake assembly and brake coil assembly 09-040
 - removal and replacement 09-030
 - tension spring 09-090
- disk enclosure removal and replacement
 - 62EH 09-020
 - 62PC 10-030
- disk error information 83-000
- disk speed transducer (62EH) 09-080
- diskette diagnostics
 - how to run from disk
 - dedicated maintenance 99-043
 - dedicated supervisor 99-040
 - diagnostic diskette information 99-045
 - option F800 99-015
 - procedure 45-630
- diskette drive (installation) 45-300
 - (see also 33FD diskette drive; 53FD diskette drive; 72MD diskette magazine drive)
- diskette error information 84-000
- diskette failure descriptions
 - 33FD 23-311
 - 53FD 25-992
- diskette head wear (53FD) 25-997, 25-998
- diskette magazine drive head wear (72MD)
 - failure descriptions 27-910
 - head wear 27-950
- diskette magazine drive head wear (72MD) (continued)
 - service check 27-900
 - test descriptions 27-920
- diskette protection
 - 33FD 23-090
 - 53FD 25-120
 - 72MD 27-120
- diskette quality service check
 - 33FD 23-310
 - 53FD 25-991
- diskette shipping and receiving,
 - 33FD 23-090
- diskette speed service check
 - 53FD 25-790
 - 72MD 27-700
- diskette storage, long-term (33FD) 23-090
- diskette test descriptions 25-993
- display station diagnostic message formats 99-050
- display station error information (5251) 87-000
- displays, power fault 05-400
- distribution assemblies, DC 05-360
- distribution assembly, Base 05-330
- Dply Pwr Chk switch 05-420
- drive band
 - 53FD
 - adjustment 25-740
 - removal 25-750
 - replacement 25-760
 - service check 25-730
 - 72MD
 - adjustment 27-630
 - removal/replacement 27-635
 - service check 27-625
- drive belt, disk (62PC) 10-040
- drive motor assembly
 - 33FD 23-170
 - 53FD
 - removal 25-600
 - replacement 25-610
 - 72MD
 - removal/replacement 27-225
- drive pulley
 - 33FD 23-190
 - 53FD
 - removal 25-620
 - replacement 25-630
- driver/receiver card, work station 11-100
- dumps, work station controller 99-067

EIA/CCITT

- first or second communications adapter
 - card jumpers 31-610
 - diagnostic programs 99-070
 - installation 45-700, 45-710
 - interface 31-600
 - locations 31-110
 - modem control lines 31-620
 - power requirements (not MLCA) 05-600
- multiline communications adapter 30-600
 - card jumpers 30-650
 - control lines 30-660
 - diagnostic programs (MLCA) 99-070
 - installation 45-700, 45-710
 - locations 30-610
 - power requirements (MLCA) 05-600
- electrostatic discharge (ESD)
 - problems 80-200
 - covers and frame for ESD 80-220
 - I/O devices and cables for ESD 80-230
 - power distribution for ESD 80-210
- enclosure, disk
 - 62EH 09-020
 - 62PC 10-030
- error codes
 - work station controller (remote) 86-320
 - wrap 99-020
- error counter table
 - communications
 - autocall 89-550
 - BSC 89-162
 - SDLC 89-300
 - disk
 - 62EH 83-100
 - 62PC 83-600
 - diskette
 - level 1 84-250
 - level 2 84-750
 - display stations 87-100
 - line printers
 - 3262 85-600
 - 5211 85-100
 - matrix printers (5224, 5225, 5256) 88-100
 - work station controller 86-100
- error history table
 - communications
 - autocall 89-510
 - BSC 89-100
 - MLCA controller 89-410
 - SDLC 89-200
 - control processor 82-200
 - disk
 - 62EH 83-200
 - 62PC 83-700
 - diskette
 - level 1 84-200
 - level 2 84-700
 - display stations 87-200

error history table (continued)

- line printers
 - 3262 85-700
 - 5211 85-200
- main storage processor 81-200
- matrix printers (5224, 5225, 5256) 88-200
- work station controller (local) 86-200
- work station controller (remote) 86-310
- error information
 - communications 89-000
 - control processor 82-000
 - disk 83-000
 - diskette 84-000
 - display station 87-000
 - main storage processor 81-000
 - work station controller 86-000
 - 5211 printer 85-000
 - 5256 printer 88-000
- error recording 80-100
- error recording and analysis procedure (ERAP) 80-111
 - how to run ERAP 99-068
- exerciser programs
 - device 99-080
 - MSP 99-085
- external modem EIA/CCITT
 - connection 45-710
- E10 power connector (location) 05-360

- fan assembly, card gate, 62PC 10-130
- fault locating tests (data communications) 99-072
- feature distribution assembly 05-360
- feature Power Supply-A 05-610
- feature Power Supply-B 05-620
- feature Power Supply-C 05-630
- features, locations of 02-070
- field service logic manual (description) 01-034
- file control card, 33FD 23-290
- filter assembly, base +5V 05-335
- filter assembly, multilevel 05-333
- filters, locations
 - line filter L-1 05-220, 05-230
- first or second communications adapter 31-000
 - adapter card 31-200
 - CADUCEE 31-477
 - diagnostic programs 99-070
 - digital data service adapter 31-500
 - card jumpers 31-500
 - installation 45-700, 45-720
 - EIA/CCITT 31-600
 - card jumpers 31-610

first or second communications
 adapter (continued)
 EIA/CCITT (continued)
 installation 45-700, 45-710
 locations 31-110
 modem control lines 31-620
 error information 89-000
 installation 45-720
 introduction 31-010
 locations 31-100
 digital data service adapter 31-140
 EIA/CCITT adapter 31-110
 external cables 31-150
 1200 bps integrated modem 31-130
 2400 bps integrated modem 31-120
 1200 bps integrated modem 31-300
 card switch settings 31-310
 installation 45-700, 45-730
 line plate adjustment 31-320
 transmit level limiting check 31-340
 2400 bps integrated modem 31-400
 card check 31-460
 card jumpers 31-470
 dial tone detect 31-440
 installation 45-700, 45-740
 interface signal timings 31-450
 operator panel 31-410
 signal quality meter
 adjustment 31-430
 test/operate diagnostics 31-414
 transmit level limiting check 31-420
 waveshapes 31-480
 flat cable and connectors 10-150
 freelancing with MDIs 99-090
 functional units, power 05-300
 fuses
 locations 05-310
 locations (F-101 through F-104) 05-320

gate, card (62PC) 10-180
 general logic probe II 02-015
 test leads 02-080
 gram gauge 02-080
 gram scale (times 10) 02-080

head and carriage assembly
 53FD
 adjustment 25-490
 removal 25-500
 replacement 25-510
 service check 25-480

head and carriage assembly (continued)
 72MD
 adjustment 27-605
 removal/replacement 27-610
 service check 27-600
 head and pressure pad cleaning, 33FD

 head carriage and leadscrew assembly,
 33FD 23-160
 head cleaning tools, 33FD 23-070
 head wear check 25-998
 head wear check (53FD) 25-997
 how to
 check the probe for correct
 operation 02-045
 interpret status messages for MLCA with
 X.21 feature
 BSCA 99-075
 SDLC 99-074
 prepare the probe for use 02-020
 run device exercisers 99-080
 run device TU select 99-065
 run diskette diagnostics from disk
 dedicated supervisor use 99-040
 diagnostic diskette information 45-045
 option F800 99-015
 procedure 45-630
 run System Test (SYSTST) 99-069
 run the error recording and
 analysis procedure (ERAP) 99-068
 run the Main Storage Processor
 (MSP) exerciser 99-085
 run the TU select for work station
 attachment 99-064
 run the work station MDI tests in
 step mode 99-066
 run the work station verification test
 under SSP 99-061
 run work station attachment MDIs
 from the CE panel 99-062
 set and connect the oscilloscope (cable
 quality check) 11-520
 use main storage processor error
 information 81-010
 use the System/34 MAPs and
 maintenance manual 01-100
 use the 5251 model 2 or 12 work station
 controller error information
 (remote) 86-300
 use work station controller error
 information (local) 86-010
 use 5224, 5225, and 5256 printer error
 information 88-010
 hub assembly, 33FD 23-180

I/O coils, disk drive (62EH) 09-120
 I/O controller display/dump 99-067
 I/O counter table
 communications
 autocall 89-540
 BSC 89-050
 SDLC 89-190
 disk
 62EH 83-050
 62PC 83-550
 diskette
 level 1 84-260
 level 2 84-760
 display stations 87-050
 line printers
 3262 85-550
 5211 85-050
 matrix printers (5225, 5256) 88-050
 I/O step and stop on error 99-066
 idler assembly
 33FD 23-210
 53FD
 removal 25-640, 25-770
 replacement 25-650, 25-780
 72MD
 removal/replacement 27-640
 immediate power off (IPO) 05-500
 index pulse, 53FD 25-790
 indications, power fault 05-400
 indicator card (communications) 02-080
 indicator, control supply status 05-370
 input voltage levels of the probe 02-025
 inserting and removing the diskette 23-090
 installation instructions 45-000
 communications 45-700
 analog wideband adapter 45-760
 autocall adapter 45-770
 digital data service adapter 45-720
 external modem 45-710
 testing 45-790
 X.21 line adapter 45-780
 1200 bps integrated modem 45-730
 2400 bps integrated modem 45-740
 4800 bps integrated modem 45-750
 communications cables
 analog wideband adapter 45-470
 autocall adapter 45-480
 cable tower 45-450
 digital data service adapter 45-430
 EIA/CCITT external modem 45-420
 X.21 line adapter 45-490
 1200 bps integrated modem 45-440
 2400 bps integrated modem 45-450
 4800 bps integrated modem 45-460
 completing the system
 installation 45-800
 disk drive 45-200
 62EH 45-210
 62PC 45-220
 diskette drive 45-300

installation instructions (continued)
 line printer cables 45-400
 3262 45-405
 5211 45-410
 matrix printers
 5224 45-550
 5225 45-540
 5256 45-530
 sequence charts 45-010
 system console
 twinaxial cables 45-510
 5251 45-520
 5252 45-525
 5255 45-527
 system preparation and tests 45-100
 system tests 45-600
 systst diagnostic program 99-069
 CSIPL/MSIPL from diskette 45-620
 power-on tests 45-610
 system diagnostics 45-630
 voltage label and TB locations 45-100
 5250 information display system 45-500
 installation sequence charts 45-010
 interface signal timings, 2400 bps
 modem 31-450
 interface, EIA/CCITT 31-600
 internal clock
 first or second communications
 adapter 31-100
 EIA/CCITT adapter 31-110
 1200 bps integrated modem 31-130
 multiline communications adapter
 EIA/CCITT adapter 30-610
 1200 bps integrated modem 30-310

 J-connectors (locations) 05-240
 J1 05-333
 J10 05-333, 05-360
 J11 05-630
 J12 05-630
 J13 05-630
 J14 05-630
 J2 05-333
 J20 05-320, 05-325
 J21 05-320, 05-325
 J4 05-333
 J5 05-333
 J6 05-360
 J7 05-360, 05-620
 J8 05-360, 05-610
 J9 05-333, 05-360
 jumper, 6-inch red (CE tool) 02-080
 jumpers, channel interface card
 (62PC) 10-210
 jumpers, communications (see either card
 jumpers or board jumpers)

- latch assembly
 - 33FD 23-110
 - 53FD
 - removal 25-440
 - replacement 25-450
- leadscrew and head carriage assembly
 - 33FD 23-160
- leadscrew cleaning, 33FD 23-165
- leadscrew wheel, 33FD 23-230
- light-emitting diode (LED)
 - 33FD 23-280
 - 53FD
 - output service check 25-810
 - removal 25-820
 - replacement 25-830
 - 72MD
 - assembly removal/replacement 27-685
 - output service check 27-680
- light-emitting diode and phototransistor alignment, 53FD 25-800
- light-emitting diode, control supply status indicator 05-370
- limit stop, 33FD 23-240
 - lower 23-240
 - upper 23-250
- limiting check, transmit level
 - first or second communications adapter
 - 1200 bps integrated modem 31-340
 - 2400 bps integrated modem 31-420
 - multiline communications adapter
 - 1200 bps integrated modem 30-370
 - 4800 bps integrated modem 30-450
- line filter (L-1) 05-220
- line plate-PSN (public switched network) 30-360
- line plate adjustment
 - first or second communications adapter
 - 1200 bps integrated modem 31-320
 - multiline communications adapter
 - 1200 bps integrated modem 30-360
 - 4800 bps integrated modem 30-470
- line signal quality check, work station attachment 11-510
- list of device IDs 99-060
- locations
 - cable and card, disk drive
 - 62EH 09-120
 - 62PC 10-200
 - card retainer
 - 53FD 25-930
 - 72MD 27-815
 - control card logic pins
 - 53FD 25-980
 - 72MD 27-825
 - control card socket pins
 - 53FD 25-960
 - 72MD 27-830

- locations (continued)
 - control card test pins
 - 53FD 25-950
 - 72MD 27-820
 - features 02-070
 - filters 05-333, 05-335
 - first or second communications adapter 31-100
 - adapter card 31-200
 - digital data service adapter 31-140
 - EIA/CCITT 31-110
 - fuses 05-310, 05-320
 - head cable connector pins, control card
 - 53FD 25-960
 - 72MD 27-835
 - logic pins, control card
 - 53FD 25-980
 - 72MD 27-825
 - multiline communications adapter 30-100
 - adapter card 30-200
 - analog wideband adapter 30-710
 - autocall adapter 30-810
 - digital data service adapter 30-510
 - EIA/CCITT adapter 30-610
 - external cables 30-110
 - X.21 line adapter 30-910
 - 1200 bps integrated modem 30-310
 - 4800 bps integrated modem 30-405
 - power 05-200
 - printer attachment
 - 3262 08-100
 - 5211 07-100
 - work station attachment 11-100
 - external cables 31-150
 - 1200 bps integrated modem 31-130
 - 2400 bps integrated modem 31-120
- logic board, multiline communications adapter 30-100
- logic board, power (C-A1) 05-370
- logic pins, control card
 - 53FD 25-980
 - 72MD 27-825
- lower limit stop, 33FD 23-240

- machine safety
 - 33FD 23-060
 - 53FD 25-020
 - 72MD 27-020
- machine voltage levels 02-040
- machine voltage tolerances 05-710
- magnetic character reader attachment (1255) 40-000
- main storage processor 15-200
 - card locations and uses 15-210
 - error information 81-000

maintenance
 CE panel 13-000
 disk drive
 62EH 09-010
 62PC 10-010
 operator panel 21-000
 printer attachment
 3262 08-200
 5211 07-200
 work station attachment 11-200
 maintenance analysis procedures
 (description) 01-020
 maintenance documents, types of 01-010
 maintenance manual (description) 01-030
 maintenance manual section numbering 01-090
 maintenance, introduction to 01-005
 manual bring-up procedure (power) 05-550
 MAP scope pictures
 1 10-400
 2 10-410
 3 10-420
 4 10-430
 5 10-440
 6 10-450
 7 10-460
 8 10-470
 MAPs
 description of 01-020
 numbering of 01-080
 probing information when using 01-120
 rules for using 01-110
 matrix printers (error information) 88-000
 MDI special (diagnostic program) 99-090
 meter check, signal quality (2400 bps
 modem) 31-430
 metric bill of material 02-080
 MLCA (see multiline communications adapter)
 modem control lines, EIA/CCITT
 first or second communications
 adapter 31-620
 multiline communications adapter 30-660
 modem regulator 05-615
 motor
 AC drive, removal/replacement
 (72MD) 27-225
 carriage bed stepper,
 removal/replacement 27-245
 disk drive (62EH) 09-030
 start relay removal and
 replacement 09-035
 tension spring removal and
 replacement 09-090
 disk drive (62PC) 10-100
 terminal block (TB1) 10-080
 head carriage stepper,
 removal/replacement 27-615
 picker/cam stepper, removal/replacement
 (72MD) 27-430
 motor (continued)
 removal, 53FD drive 25-600
 removal, 53FD stepper 25-680
 replacement, 53FD drive 25-610
 replacement, 53FD stepper 25-690
 mounts, shock, disk drive
 62EH
 bottom 09-110
 top 09-100
 62PC 10-120
 MSP exerciser (diagnostic program) 99-085
 MSP mini MDI (diagnostic program) 99-095
 multilevel filter assembly 05-333
 multiline communications adapter 30-000
 adapter card 30-200
 analog wideband adapter 30-700
 card jumpers 30-750
 control and signal lines 30-700
 installation 45-700, 45-760
 locations 30-710
 voltage levels 30-700
 autocall adapter 30-800
 card jumpers 30-850
 control and signal lines 30-820
 installation 45-700, 45-770
 locations 30-810
 wrap connect lines 30-820
 concurrent wrap test and trace dump
 driver program 99-076
 diagnostic programs 99-070 through 99-076
 digital data service adapter 30-500
 installation 45-700, 45-720
 locations 30-510
 EIA/CCITT adapter 30-600
 card jumpers 30-650
 control lines 30-660
 installation 45-700, 45-710
 locations 30-610
 introduction 30-010
 locations 30-100
 X.21 line adapter 30-900
 board jumpers 30-960
 card jumpers 30-950
 card locations 30-100
 control/data lines 30-920
 diagnostic wrap function 30-970
 installation 45-700, 45-780
 locations 30-910
 1200 bps integrated modem 30-300
 card switch settings 30-350
 installation 45-700, 45-730
 line plate adjustment 30-360
 locations 30-310
 transmit level limiting check 30-370
 4800 bps integrated modem 30-400
 board jumpers 30-460
 card jumpers 30-550

multiline communications adapter (continued)

4800 bps integrated modem (continued)
card switch settings 30-450
installation 45-700, 45-750
locations 30-405
operator panel 30-410
setting modem address 30-440
test diagnostic operation 30-414

new sync, EIA/CCITT adapter (MLCA) 30-650
numbering

of maintenance manual sections 01-090
of MAPs 01-080

online test, BSCA 99-075

online test, SDLC 99-074

online tests (data

communications) 99-074, 99-075

operator panel 21-000

removal and replacement 21-020

operator panel, 2400 bps integrated
modem 31-410

operator panel, 4800 bps integrated
modem 30-410

optional feature power supplies 05-600

overcurrent (O/C) sense plate 05-360

phototransistor (PTX)

33FD 23-270

53FD

removal 25-850

replacement 25-860

phototransistor amplifier service check,
53FD 25-840

phototransistor and light-emitting diode
alignment

53FD 25-800

72MD 27-675

picker finger 27-460

picker finger 27-455

power supply 05-000

AC box 05-310

base 05-330

checks 05-400

control supply 05-320

Dply Pwr Chk switch 05-420

fault indications 05-400

power supply (continued)

functional units 05-300

immediate power off (IPO) 05-500

locations

connector pin 05-210

DC distribution assembly 05-360

feature distribution

assembly 05-220, 05-360

J-connectors 05-240

left side view 05-230

right side view 05-220

voltage distribution 05-700

voltage tolerances 05-710

manual bring-up procedure 05-550

multilevel supply 05-333

base +5 Vdc filter assembly 05-335

power supplies for features 05-600

optional features 05-600

power failure latches 05-410

power fault displays 05-400

power fault indications 05-400

power fault registers 05-410

power logic board C-A1 05-370

Pwr Fault Dply switches 05-430

Prev 05-431

Search 05-432

sense card, base (C-A1C2) 05-370, 05-615

sense card, feature power

supply 05-370, 05-615

pressure pad actuator, 33FD 23-140

pressure pad and head cleaning, 33FD

preventive maintenance (also see

maintenance) 01-130

printer adapter card

3262 08-100

5211 07-100

printer attachment

cable locations

3262 08-400

5211 07-400

card jumpers

3262 08-500

5211 07-500

controller card

3262 08-100

5211 07-100

locations

3262 08-100

5211 07-100

maintenance

3262 08-200

5211 07-200

top card connectors

3262 08-300

5211 07-300

3262 08-000

5211 07-000

printer controller card

3262 08-100

5211 07-100

printer error information
 5211 85-000
 5224 88-000
 5225 88-000
 5256 88-000

probe, general logic II
 checking the probe for correct
 operation 02-045
 input voltage levels 02-025
 meaning of the probe lights 02-035
 preparing the probe for use 02-020

probing information 02-015
 probing information when using MAPs 01-120

Proc Chk light 99-010

processing unit 15-000
 control storage processor 15-100
 card locations and uses (level 1 A-A1
 board) 15-110
 card locations and uses (level 2 A-A1
 board) 15-110
 main storage processor 15-200
 card locations and uses (level 1 A-A1
 board) 15-210
 card locations and uses (level 2 A-A1
 board) 15-210

protection, diskette
 33FD 23-090
 53FD 25-120
 72MD 27-120

PSN (public switched network) line
 plate 30-360

pulley and clamp
 53FD
 removal 25-700
 replacement 25-710
 72MD
 removal/replacement 27-620

pulley, drive (53FD)
 removal 25-620
 replacement 25-630

read preamp and write driver card
 (62EH) 09-120

read/write head, 33FD 23-220

reference information 02-000

registers, power fault 05-410

relay locations, K1 and K2 05-300

rules for using MAPs 01-110

safety
 33FD 23-060
 53FD 25-020
 72MD 27-020

Search switch 05-432

section numbering
 maintenance manual 01-090
 MAPs 01-080

sense card, base power supply 05-370

sense card, feature power supply 05-370

service check, diskette quality
 33FD 23-310
 53FD 25-991

servo head and data head 2 (62EH) 09-120

setting the modem address switches, 4800
 bps integrated modem (MLCA) 30-440

shipping and receiving diskettes,
 33FD 23-090

shock mounts, disk drive
 62EH
 bottom 09-110
 top 09-100
 62PC 10-120

signal quality meter adjustment, 2400 bps
 modem 31-430

socket and connector pins, control card
 53FD 25-960
 72MD 27-830

sockets, card, disk drive (62EH) 09-130

solenoid and bail, 53FD
 adjustment 25-530
 removal 25-540
 replacement
 machines with taper pin block 25-540
 machines without taper pin
 block 25-550
 service check 25-520
 machines with taper pin block 25-545
 machines without taper pin
 block 25-550

special tools
 alignment tool
 33FD 02-080, 23-070
 72MD 27-030
 CE meter (multimeter) 02-080
 decibel meter, communications 02-080
 gram gauge 02-080
 gram scale (times 10) 02-080
 indicator card, communications 02-080
 jumper, 6-inch red (CE tool) 02-080
 metric bill of material 02-080
 system 02-080

wrap card
 MLCA 02-080
 X.21 feature 02-080

wrap plug, communications 02-080
 33FD 23-070
 alignment 23-070
 head cleaning 23-070

special tools (continued)
 53FD 25-030
 timing pins 02-080
 72MD 27-030
 speed adjustment, disk drive actuator
 (62EH) 09-140
 speed check, diskette
 53FD 25-790
 72MD 27-700
 speed transducer, disk (62EH) 09-080
 spindle antistatic brush
 62EH 09-070
 62PC 10-070
 spindle locking arm (62EH) 09-020
 spring, tension (62EH disk drive
 motor) 09-090
 standalone tests, data
 communications 99-073
 start relay, (62EH disk drive motor) 09-035
 stepper motor
 53FD
 removal 25-680
 replacement 25-690
 72MD
 carriage bed,
 removal/replacement 27-245
 head/carriage,
 removal/replacement 27-615
 picker/cam,
 removal/replacement 27-430
 stepper motor and bracket, 33FD 23-260
 storage cards, work station 11-100
 storage, diskette, long term (33FD) 23-090
 subframe, disk (62PC) 10-020
 supervisors, diagnostic 99-040
 switch settings
 first or second communications adapter
 1200 bps integrated modem 31-310
 multiline communications adapter
 1200 bps integrated modem 30-350
 4800 bps integrated modem 30-450
 system clock stop halt codes 99-030
 system console installation
 5251 45-520
 5252 45-525
 5255 45-527
 system diagnostics (installation) 45-630
 system power-off checks 05-401
 system preparation and checks 45-100
 system printer installation
 line printer 45-400
 3262 45-405
 5211 45-410
 matrix printer
 5224 45-550
 5225 45-540
 5256 45-530
 system tests (installation) 45-600
 SYSTST 99-069

 Talk/Data switches, communications 31-410
 tension spring, disk drive motor
 (62EH) 09-090
 tensioner, disk drive belt (62PC) 10-050
 terminal block (TB1), motor
 assembly (62PC) 10-080
 terminal block (TB2), card gate
 fan assembly (62PC) 10-090
 terminal board locations
 TB-1 05-230, 45-100
 TB-10 05-320, 45-100
 TB-5 05-610, 45-100
 TB-6 05-620, 45-100
 TB-7 05-630, 45-100
 terminator card (62PC) 10-140
 test diagnostics operation, 4800 bps
 integrated modem (MLCA) 30-414
 test leads, general logic probe II 02-080
 test/operate diagnostics,
 communications 31-414
 test/operate jumpers 31-473
 Test/Operate switch,
 communications 31-410
 test pins, control card
 53FD 25-950
 72MD 27-820
 testing, communications
 (installation) 45-790
 TESTREQ 99-061
 theory-diagrams manual (description) 01-032
 times 10 gram scale (tools) 02-080
 timing option and test/operate
 jumpers, data communications 31-473
 timing pins
 53FD 02-080, 25-030
 72MD 27-030
 timings, interface signal (2400 bps
 modem) 31-450
 tools, special (see special tools)
 top card connectors
 disk (62PC) 10-200
 multiline communications adapter 30-100
 printer attachment
 3262 08-300
 5211 07-300
 work station attachment 11-300
 trace dump driver program, MLCA 99-076
 tracking, belt (53FD) 25-570
 transducer, speed, disk (62EH) 09-080
 Transmit/Equalizer and
 Receive/Equalizer switches 31-410
 transmit/interface jumpers,
 communications 31-472
 transmit level (see card switch settings)

- transmit level limiting check
 - first or second communications adapter
 - 1200 bps integrated modem 31-340
 - 2400 bps integrated modem 31-420
 - multiline communications adapter
 - 1200 bps integrated modem 30-370
 - 4800 bps integrated modem 30-450
- troubleshooting position, CE panel 13-022
- TU select diagnostic for work station controller 99-064
- TU select for device diagnostics 99-065
- TU test descriptions for work station controller 99-999
- types of System/34 maintenance documents 01-010

- upper limit stop, 33FD 23-250
- utilities, diagnostic 99-055

- voltage levels 02-040
- voltage tolerances 05-710

- waveshapes, 2400 bps integrated modem 31-480
- work station attachment 11-000
 - adapter card (A-A2M2) 11-100
 - cables 11-400
 - controller card (A-A2N2) 11-100
 - diagnostic tests 99-500
 - driver/receiver card (A-A2R2) 11-100
 - error information 86-000
 - line signal quality check 11-510
 - locations 11-100
 - maintenance 11-200
 - storage cards (A-A2P4, A-A2Q4) 11-100
 - top card connectors 11-300
- work station twinaxial cables (installation) 45-510
- wrap card, MLCA 02-080
- wrap error codes, CSIPL 99-020
- wrap plug, communications 02-080
- wrap tests 99-500, 99-010

- X.21 line adapter 30-900
 - board jumpers 30-960
 - card jumpers 30-950
 - card locations 30-100
 - control/data lines 30-920
 - diagnostic wrap function 30-970
 - installation 45-700, 45-780
 - locations 30-910
 - wrap card 30-970

- 1200 bps integrated modem 31-300
 - first or second communications adapter 31-300
 - card switch settings 31-310
 - diagnostic tests 99-070
 - installation 45-700, 45-730
 - line plate adjustment 31-320
 - locations 31-130
 - power requirements 05-600
 - transmit level limiting check 31-340
 - multiline communications adapter 30-300
 - card switch settings (transmit level) 30-350
 - couplers 30-370
 - diagnostic tests 99-070
 - installation 45-700, 45-730
 - line plate adjustment 30-360
 - locations 30-310
 - transmit level limiting check 30-370

- 1255 magnetic character reader attachment 40-000

- 2400 bps integrated modem 31-400
 - card check 31-460
 - card jumpers 31-470
 - diagnostic tests 99-070
 - dial tone detect 31-440
 - installation 45-700, 45-740
 - interface signal timings 31-450
 - locations 31-120
 - operator panel 31-410
 - power requirements 05-600
 - signal quality meter adjustment 31-430
 - transmit level limiting check 31-420
 - waveshapes 31-480

- 3262 line printer attachment 08-000
 - card jumpers 08-500
 - internal cables 08-400
 - introduction 08-010
 - location 08-100
 - maintenance 08-200
 - top card connectors 08-300
 - diagnostic programs 99-060
 - installation 45-405

33FD diskette drive 23-000
 belt path adjustment 23-200
 collet 23-120
 cover assembly 23-130
 data head adjustment 23-220
 diskette protection 23-090
 drive assembly 23-100
 drive motor 23-170
 drive pulley 23-190
 file control card
 pins 23-290
 removal and replacement 23-230, 23-290
 test points 23-290
 head and pressure pad cleaning 23-150
 head cleaning tools 23-070
 head wear check 23-310
 hub assembly 23-180
 idler assembly 23-210
 installation instructions 45-300
 latch assembly 23-110
 leadscrew and head carriage
 assembly 23-160
 leadscrew wheel 23-230
 light-emitting diode 23-280
 lower limit stop
 adjustment 23-240
 machine safety 23-060
 phototransistor 23-270
 pressure pad actuator 23-240
 stepper motor and bracket 23-260
 tools 23-070
 upper limit stop 23-250
 4800 bps integrated modem (MLCA) 30-400
 address switches 30-440
 board jumpers 30-460
 card switch settings (transmit
 level) 30-450
 diagnostic programs (MLCA) 99-070
 installation 45-700, 45-750
 line plate adjustment 30-470
 locations 30-405
 operator panel 30-410
 power requirements (MLCA) 5-600
 test diagnostic operation 30-414
 transmit level limiting check 30-480
 5211 line printer
 attachment 07-000
 card jumpers 07-500
 internal cables 07-400
 introduction 07-010
 location 07-100
 maintenance 07-200
 top card connector 07-300
 diagnostic programs 99-060
 installation 45-410
 5211 printer attachment (see
 also printer attachment) 07-000
 5224 matrix printer
 diagnostic programs 99-060
 installation 45-550
 5224 matrix printer (continued)
 work station attachment 11-000
 cable quality check 11-500
 cables 11-400
 introduction 11-010
 location 11-100
 maintenance 11-200
 top card connector 11-300
 5225 matrix printer
 diagnostic programs 99-060
 installation 45-540
 work station attachment 11-000
 cable quality check 11-500
 cables 11-400
 introduction 11-010
 location 11-100
 maintenance 11-200
 top card connectors 11-300
 5250 information display system
 (installation) 45-500
 5251 work station
 attachment 11-000
 cable quality check 11-500
 cables 11-400
 introduction 11-010
 location 11-100
 maintenance 11-200
 top card connectors 11-300
 diagnostic programs 99-060
 installation 45-510
 5252 work station
 attachment 11-000
 cable quality check 11-500
 cables 11-400
 introduction 11-010
 location 11-100
 maintenance 11-200
 top card connectors 11-300
 diagnostic programs 99-060
 installation 45-520
 5255 work station
 attachment 11-000
 cable quality check 11-500
 cables 11-400
 introduction 11-010
 location 11-100
 maintenance 11-200
 top card connectors 11-300
 installation 45-527
 5256 matrix printer
 diagnostic programs 99-060
 installation 45-530
 work station attachment 11-000
 cable quality check 11-500
 cables 11-400
 introduction 11-010
 location 11-100
 maintenance 11-200
 top card connectors 11-300

53FD diskette drive 25-000
 belt
 removal 25-580
 replacement 25-590
 belt tracking
 adjustment 25-570
 service check 25-560
 collet
 removal 25-460
 replacement 25-470
 control card
 logic pins 25-980
 removal 25-930
 replacement 25-940
 socket and connector pins 25-960
 test pins 25-950
 covers
 removal 25-420
 replacement 25-430
 diskette protection 25-120
 diskette speed service check 25-790
 drive band
 adjustment 25-740
 removal 25-750
 replacement 25-760
 service check 25-730
 drive motor
 removal 25-600
 replacement 25-610
 drive pulley
 removal 25-620
 replacement 25-630
 head and carriage assembly
 adjustment 25-490
 removal 25-500
 replacement 25-510
 service check 25-480
 head wear check 25-997
 idler assembly
 removal 25-640, 25-770
 replacement 25-650, 25-780
 installation instructions 45-300
 latch assembly
 removal 25-440
 replacement 25-450
 light-emitting diode
 output service check 25-810
 removal 25-820
 replacement 25-830
 light-emitting diode and
 phototransistor alignment 25-800
 machine safety 25-020
 phototransistor
 amplifier service check 25-840
 removal 25-850
 replacement 25-860
 pulley and clamp

53FD diskette drive (continued)
 pulley and clamp (continued)
 removal 25-700
 replacement 25-710
 removal and replacement 25-130
 solenoid and bail (machines with taper
 pin block) adjustment 25-530
 adjustment 25-530
 removal 25-540
 replacement 25-545
 service check 25-520
 solenoid and bail (machines without taper
 pin block) adjustment 25-530
 adjustment 25-530
 removal 25-550
 replacement 25-555
 service check 25-520
 special tools 25-030
 stepper motor
 removal 25-680
 replacement 25-690
 timing pins 25-030
 62EH disk drive (see disk drive)
 62PC disk drive (see disk drive)
 72MD diskette magazine drive 27-000
 AC drive motor 27-225
 carriage bed assembly 27-300
 carriage bed belt 27-255
 carriage bed monorail 27-250
 carriage bed orient
 adjustment 27-295
 service check 27-290
 carriage bed orient switch
 adjustment 27-265
 removal/replacement 27-270
 service check 27-260
 carriage bed stepper motor 27-845
 control card signal output check
 removal/replacement 27-245
 windings resistance service
 check 27-275
 carriage bed stop
 adjustment 27-235
 removal/replacement 27-240
 service check 27-230
 carriage bed to diskette drive bezel
 adjustment 27-305
 service check 27-310
 collet assembly 27-660
 control card
 head cable pins 27-835
 logic pins 27-825
 removal/replacement 27-815
 socket and connector pins 27-830
 test pins 27-820
 control card and mounting
 assembly 27-840

72MD diskette magazine drive (continued)

- cover open switch
 - adjustment 27-215
 - removal/replacement 27-220
 - service check 27-210
- diskette drive
 - assembly removal/replacement 27-670
 - bezel removal/replacement 27-665
- diskette in switch
 - adjustment/service check 27-645
 - removal/replacement 27-650
- diskette protection 27-120
- diskette speed service check 27-700
- drive band
 - adjustment 27-630
 - removal/replacement 27-635
 - service check 27-625
- driver board
 - assembly removal/replacement 27-810
 - output to bed stepper motor
 - service check 27-800
 - output to picker/cam
 - stepper motor service check 27-800
- head/carriage
 - adjustment 27-605
 - pulley and clamp removal/replacement 27-620
 - removal/replacement 27-610
 - service check 27-600
 - stepper motor removal/replacement 27-615
- head load bail assembly 27-655
- head wear check 27-950
- idler assembly 27-640
- index sense
 - alignment service check 27-675
 - LED assembly 27-685
 - LED output service check 27-680
 - PTX assembly 27-695
 - PTX output service check 27-690
- installation instructions 45-300
- jam removal wheel 27-495
- magazine interlock/indicator
 - adjustment 27-280
 - removal/replacement 27-285
- magazine pressure roll housing 27-315
- picker/cam
 - bezel 27-425
 - bezel to carriage bed
 - adjustment 27-420
 - bezel to carriage bed service check 27-415
 - casting assembly 27-400
 - removal/replacement 27-430
 - stepper motor 27-430
 - stepper motor control card signal output check 27-850

72MD diskette magazine drive (continued)

- picker/cam (continued)
 - stepper motor windings resistance service check 27-490
 - timing adjustment 27-410
 - timing service check 27-405
- picker carriage
 - adjustment 27-455
 - assembly 27-435
 - detent 27-450
 - detent adjustment 27-445
 - detent service check 27-440
 - removal/replacement 27-450
- picker extend
 - adjustment 27-485
 - service check 27-480
- picker rest sensor
 - adjustment 27-470
 - removal/replacement 27-475
 - service check 27-465
- removal/replacement 27-200
- safety 27-020
- service position 27-205
- stripper magnet and switch
 - assembly 27-510
- stripper magnet service check 27-505
- stripper magnet switch
 - adjustment 27-520
 - removal/replacement 27-525

Please use this form only to identify publication errors or to request changes in publications. Direct any requests for additional publications, technical questions about IBM systems, changes in IBM programming support, and so on, to your IBM representative or to your nearest IBM branch office.

If your comment does not need a reply (for example, pointing out a typing error) check this box and do not include your name and address below. If your comment is applicable, we will include it in the next revision of the manual.

If you would like a reply, check this box. Be sure to print your name and address below.

Page number(s): Comment(s):

Please contact your nearest IBM branch office to request additional publications.

Name _____

Company or
Organization _____

Address _____

IBM may use and distribute any of the information you supply in any way it believes appropriate without incurring any obligation whatever. You may, of course, continue to use the information you supply.

No postage necessary if mailed in the U.S.A.

 
City State Zip Code

USE FOLDING LINE

Fold and tape

Please do not staple

Fold and tape




NO POSTAGE
NECESSARY IF
MAILED IN THE
UNITED STATES

BUSINESS REPLY MAIL
FIRST CLASS PERMIT NO. 40 ARMONK, N. Y.

POSTAGE WILL BE PAID BY . . .

IBM CORPORATION
General Systems Division
Development Laboratory
Publications, Dept. 245
Rochester, Minnesota 55901

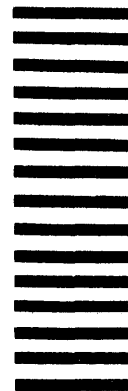

Fold and tape

Please do not staple

Fold and tape



International Business Machines Corporation

**General Systems Division
4111 Northside Parkway N.W.
P.O. Box 2150
Atlanta, Georgia 30055
(U.S.A. only)**

**General Business Group/International
44 South Broadway
White Plains, New York 10601
U.S.A.
(International)**



International Business Machines Corporation

**General Systems Division
4111 Northside Parkway N.W.
P.O. Box 2150
Atlanta, Georgia 30055
(U.S.A. only)**

**General Business Group/International
44 South Broadway
White Plains, New York 10601
U.S.A.
(International)**

IBM System/34 5340 System Unit Maintenance Manual Printed in U.S.A. SY31-0457-6

SY31-0457-6