

Name	Notes	Boot Loader
BASIC Version 3.2 [4K Version]	Delete is underscore, upper case only, 7 bit serial comm, hangs scanning RAM if full 64K w/o ROM.	Version 3.2 for 4K BASIC
4K BASIC 4.0 Copyright MITS 1976	Delete is underscore, accepts lower case, 7 bit serial comm.	Version 4.0 for 4K BASIC
Altair BASIC Rev 4.0 [Eight-K Version] Copyright 1976 by MITS Inc.	Delete is underscore, accepts lower case, 7 bit serial comm, CLOAD and CSAVE present.	Version 4.0 for 8K BASIC
Altair BASIC Rev 4.0 [Extended Version] Copyright 1977 by MITS Inc.	Delete is underscore, accepts lower case, CLOAD and CSAVE present.	Version 4.0 for Extended BASIC
Altair BASIC Rev 4.0 [Disk Extended Version] Copyright 1976 by MITS Inc.	Delete is underscore, accepts lower case, CLOAD and CSAVE present.	Disk Boot Loader (DBL) EEPROM or DBL tape loader ver 4 or 4-5
Altair BASIC Rev 4.1 [Extended Version] Copyright 1977 by MITS Inc.	Delete is underscore, accepts lower case, CLOAD and CSAVE present, has line printer initialization prompt (type C, O, or Q).	Version 4.0 for Extended BASIC
Altair BASIC Rev 4.1 [Disk Extended Version] Copyright 1977 by MITS Inc.	Delete is underscore, accepts lower case, CLOAD and CSAVE present, has line printer initialization prompt (type C, O, or Q). Includes the DSKINI command (inits drive 0 with no params)	Disk Boot Loader (DBL) EEPROM or DBL tape loader ver 4 or 4-5
Altair BASIC 5.0 [14Jul78] [Disk Extended Version] Copyright 1978 by MITS Inc.	Delete (backspace) key works, accepts lower case, CLOAD and CSAVE present, has line printer initialization prompt (type C, O, or Q). Includes the DSKINI command (error if no drive # specified). Had string space collection issues. Not widely distributed. Jump to 5A00h before responding to startup prompts to write an image of BASIC to the system tracks of drive 0. Note: This does not write the boot loader to sectors 0, 2, 4, 6 (required to have a bootable disk).	Version 5.0 for Disk BASIC or Disk Boot Loader (DBL) EEPROM or DBL tape loader ver 4-5

<p>Altair Disk Extended BASIC Version 300-5-C [01Nov78] Copyright 1978 by MITS Inc.</p>	<p>Delete (backspace) key works, accepts lower case, CLOAD and CSAVE present, has line printer initialization prompt (type C, O, or Q). Includes the DSKINI command (error if no drive # specified). Still had some string space collection issues. Jump to 5A00h before responding to startup prompts to write an image of BASIC to the system tracks of drive 0. Note: This does not write the boot loader to sectors 0, 2, 4, 6 (required to have a bootable disk).</p>	<p>Disk Boot Loader (DBL) EEPROM or DBL tape loader ver 4-5</p>
<p>Altair Disk Extended BASIC Version 300-5-F [18May79] Copyright 1979 by MITS Inc.</p>	<p>Delete (backspace) key works, accepts lower case, CLOAD and CSAVE present, has line printer initialization prompt (type C, O, or Q). Includes the DSKINI command (error if no drive # specified). Final "Altair" version of BASIC. Jump to 5C00h before responding to startup prompts to write an image of BASIC to the system tracks of drive 0. Note: This does not write the boot loader to sectors 0, 2, 4, 6 (required to have a bootable disk).</p>	<p>Disk Boot Loader (DBL) EEPROM or DBL tape loader ver 4-5</p>
<p>BASIC Rev 4.45 [CP/M Version] Copyright 1977 by Microsoft</p>	<p>Runs under Lifeboat CP/M 1.4, non destructive backspace works, but leaves "deleted" characters visible. Rubout (0x7f) also deletes and echos the deleted characters as for a hardcopy terminal.</p>	<p>N/A</p>
<p>BASIC-80 Rev 5.21 [CP/M Version] Copyright 1977-1981 by Microsoft Created: 28-Jul-81</p>	<p>Runs under Burcon CP/M 2.2, backspace works as expected.</p>	<p>N/A</p>