

HP-IL/SCSI Interface Assembly, HP P/N 5061-3166

Information Sheet

The following items should be enclosed with the HP-IL/SCSI Interface Assembly:

- HP-IL/SCSI Interface Module, part number 5061-3156
- Field Service SCSI cable, part number 5061-3167
- *SCSIDISK Diagnostic Reference Manual*, part number 5959-3935

The following listed items are *not* included with the HP-IL/SCSI Interface Assembly, but are necessary to perform SCSI diagnostics:

- SCSIDISK Diagnostic Program, part number 5010-0568S

The SCSIDISK diagnostic program is available from Disk Memory Division via a modem. Use the following 1200 baud modem number: 208-323-3455. At the prompt, logon as follows:

Hello HPnnnn, FIELD.SCSI

(where nnnn is your entity number, such as 4800 for Disk Memory Division). No password is required. After transferring the binary file to the HP Portable Plus, rename "SCSIDISK" to "SCSIDISK.EXE".

- Two (three with printer) HP-IL Interface Cables, model number 82167B
- SCSI bus terminator, part number 1252-2297
- HP Series 82241 AC Adapter

Refer to the *SCSIDISK Diagnostic Reference Manual* listed above for connection instructions.

NOTE

The Field Service SCSI cable should extend from the right side of the HP-IL/SCSI Interface Module when looking at the module from the top (RESET button toward you). Ignore any key (if present) on the cable. When connected properly, the bar code on the cable will face up. If the cable is put on backwards, the module will fail self-test (the LED will blink two or three times and then will stay lit). See figure 2-1 in the *SCSIDISK Diagnostic Reference Manual*.

