UDA DIAG DATA FILE AH-S834A-MC FICHE 1 OF 3 OCT 1981 COPYRIGHTO 1981 MADE IN USA RA80 · * *

OCT 1981 COPYRIGHTO 1981 MADE IN USA AH-S834A-MC FICHE 2 OF 3 UDA DIAG DATA FILE RA80:**

AH-S834A-MC FICHE 3 OF OCT 1981 COPYRIGHTO 1981 MADE IN USA UDA DIAG DATA FILE CZUDDAO RA80 - * *

.REM &

IDENTIFICATION

PRODUCT CODE: AC-S833A-MC

PRODUCT NAME: CZUDDAO UDA DIAGNOSTIC DATA FILE

PRODUCT DATE: 10-JULY-81

MAINTAINER: DIAGNOSTIC ENGINEERING

AUTHOR: DALE KECK

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION. DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR ANY ERRORS THAT MAY APPEAR IN THIS DOCUMENT.

NO RESPONSIBILITY IS ASSUMED FOR THE USE OR RELIABILITY OF SOFTWARE ON EQUIPMENT THAT IS NOT SUPPLIED BY DIGITAL OR ITS AFFILIATED COMPANIES.

COPYRIGHT (C) 1981 BY DIGITAL EQUIPMENT CORPORATION

THE FOLLOWING ARE TRADEMARKS OF DIGITAL EQUIPMENT CORPORATION:

DIGITAL

PDP DE CUS UNIBUS

MASSBUS

TABLE OF CONTENTS

1.0 1.1 1.2	GENERAL INFORMATION PROGRAM ABSTRACT SYSTEM REQUIREMENTS
2.0 2.1 2.2 2.3 4.5 2.6 7	OPERATING INSTRUCTIONS COMMANDS SWITCHES FLAGS HARDWARE QUESTIONS SOFTWARE QUESTIONS EXTENDED P-TABLE DIALOGUE QUICK STARTUP PROCEDURE
3.0	ERROR INFORMATION
4.0	PERFORMANCE AND PROGRESS REPORTS
5.0	TEST SUMMARIES

- 1.0 GENERAL INFORMATION
- 1.1 PROGRAM ABSTRACT

THE UDA HOST RESIDENT DIAGNOSTIC CAUSES THE EXECUTION OF THE UDA AND DRIVE RESIDENT DIAGNOSTIC INDIVIDUAL PROGRAMS AND REPORTS THE RESULTS ON THE PDP-11 CONSOLE TERMINAL OR LINE PRINTER. EXERCISES ALSO PERFORMS TO VERIFY THAT:

- 1. THE UDA CAN PROPERLY COMMUNICATE WITH THE PDP-11 PROCESSOR AND CAN TRANSFER BLOCKS OF DATA TO AND FROM UNIBUS MEMORY.
- 2. THE UDA AND THE DISK DRIVES CAN COMMUNICATE AND TRANSFER DATA PROPERLY.
 - 3. THE DISK DRIVES CAN FUNCTION PROPERLY AS DEFINED BY THE SDI.
- 4. THE DISK DRIVES CAN SEEK, READ AND WRITE TO ALL BLOCKS ON THE DISK AND ALLOW THE MEASUREMENT OF THE DRIVES' PERFORMANCE IN A RATIO OF ERRORS PER MILLION BITS TRANSFERRED.

THE UDA HOST RESIDENT DIAGNOSTIC CONSISTS OF ONE PDP-11 DIAGNOSTIC SUPERVISOR PROGRAM THAT RUNS IN THE PDP-11 PROCESSOR AND FOUR PROGRAMS THAT RUNS IN THE UDA'S BUFFER MEMORY THROUGH AN INTER-PRETER CALLED THE 'DIAGNOSTIC MACHINE' WHICH RESIDES IN THE UDA. THE PDP-11 PROGRAM MAINLY IS RESPONSIBLE FOR DOWNLINE LOADING THE 'DIAGNOSTIC MACHINE' PROGRAMS INTO THE UDA AND STARTING THEIR EXECUTION. THE 'DIAGNOSTIC MACHINE' PROGRAM CONTROLS THE TESTING FROM THAT POINT BY REQUESTING THE PDP-11 PROCESSOR TO SUPPLY INFORMATION, PRINT ERROR MESSAGES AND UPDATE STATISTICS. THE 'DIAGNOSTIC MACHINE' PROGRAM INFORMS THE PDP-11 PROCESSOR WHEN A TEST IS COMPLETE.

THE NUMBER OF UDAS AND DISK DRIVES THAT CAN BE TESTED AT ONE TIME BY THIS DIAGNOSTIC PROGRAM IS LIMITED BY THE PDP-11 MEMORY SIZE. WITH THE MINIMUM MEMORY SIZE OF 28K WORDS, AT LEAST TWO UDAS WITH FOUR DISK DRIVES EACH ARE SELECTABLE. THE NUMBER OF UDAS AND DISK DRIVES SELECTABLE BY THE DIAGNOSTIC INCREASES WITH ADDITIONAL MEMORY, BUT THERE IS NO GOAL IMPLIED FOR THE MAXIMUM POSSIBLE CONFIGURATION.

THIS DIAGNOSTIC HAS BEEN WRITTEN FOR USE WITH THE DIAGNOSTIC RUNTIME SERVICES SOFTWARE (SUPERVISOR). THESE SERVICES PROVIDE THE INTERFACE TO THE OPERATOR AND TO THE SOFTWARE ENVIRONMENT. THIS PROGRAM CAN BE USED WITH XXDP+, ACT, APT, SLIDE AND PAPER TAPE. FOR A COMPLETE DESCRIPTION OF THE RUNTIME SERVICES, REFER TO THE XXDP+ USER'S MANUAL. THERE IS A BRIEF DESCRIPTION OF THE RUNTIME SERVICES IN SECTION 2 OF THIS DOCUMENT.

1.2 SYSTEM REQUIREMENTS

THIS PROGRAM WILL BE DESIGNED USING THE PDP-11 SUPERVISOR REVISION C. RUN TIME ENVIRONMENTS ARE DETERMINED BY THE SUPERVISOR AND MAY CHANGE AS NEW VERSIONS OF THE SUPERVISOR ARE DEVELOPED. THE INITIAL VERSION WILL REQUIRE THE FOLLOWING:

PDP-11 PROCESSOR 28K WORDS OF MEMORY (MINIMUM) XXDP+ LOAD MEDIA ONE OR MORE UDA SUB-SYSTEMS LINE CLOCK - EITHER TYPE L OR P

THE LINE CLOCK WILL BE USED FOR ALL TIMED LOOPS IN THE PROGRAM. THE DIAGNOSTIC WILL RUN ON A SYSTEM WITH NO CLOCK BUT WILL HANG WHENEVER AN EVENT FOR WHICH THE PROGRAM IS WAITING DOES NOT HAPPEN (I.E., A TIME-OUT ERROR MESSAGE WILL NOT RESULT).

2.0 OPERATING INSTRUCTIONS

THIS SECTION CONTAINS A BRIEF DESCRIPTION OF THE RUNTIME SERVICES. FOR DETAILED INFORMATION, REFER TO THE XXDP+ USER'S MANUAL (CHQUS).

2.1 COMMANDS

THERE ARE ELEVEN LEGAL COMMANDS FOR THE DIAGNOSTIC RUNTIME SERVICES (SUPERVISOR). THIS SECTION LISTS THE COMMANDS AND GIVES A VERY BRIEF DESCRIPTION OF THEM. THE XXDP+ USER'S MANUAL HAS MORE DETAILS.

COMMAND	EFFECT
START	START THE DIAGNOSTIC FROM AN INITIAL STATE START THE DIAGNOSTIC WITHOUT INITIALIZING
CONTINUE PROCEED	CONTINUE AT TEST THAT WAS INTERRUPTED (AFTER ^C)
EXIT	RETURN TO XXDP+ "ONITOR (XXDP+ OPERATION ONLY!)
ADD	ACTIVATE A UNI FOR TESTING (ALL UNITS ARE CONSIDERED TO BE ACTIVE AT START TIME
DROP PRINT	PRINT STATISTICAL INFORMATION (IF IMPLEMENTED
	BY THE DIAGNOSTIC - SECTION 4.0)
DISPLAY FLAGS	TYPE A LIST OF ALL DEVICE INFORMATION TYPE THE STATE OF ALL FLAGS (SEE SECTION 2.3)
ZFLAGS	CLEAR ALL FLAGS (SEE SECTION 2.3)

A COMMAND CAN BE RECOGNIZED BY THE FIRST THREE CHA ACTERS. SO YOU MAY, FOR EXAMPLE, TYPE "STA" INSTEAD OF "START".

2.2 SWITCHES

THERE ARE SEVERAL SWITCHES WHICH ARE USED TO MODIFY SUPERVISOR OPERATION. THESE SWITCHES ARE APPENDED TO THE LEGAL COMMANDS. ALL OF THE LEGAL SWITCHES ARE TABULATED BELOW WITH A BRIEF DESCRIPTION OF EACH. IN THE DESCRIPTIONS BELOW, A DECIMAL NUMBER IS DESIGNATED BY 'DDDDD'.

SWITCH	EFFECT
/TESTS:LIST	EXECUTE ONLY THOSE TESTS SPECIFIED IN THE LIST. LIST IS A STRING OF TEST NUMBERS, FOR EXAMPLE - /TESTS:1:5:7-10. THIS LIST WILL CAUSE TESTS 1,5,7,8,9,10 TO BE RUN. ALL OTHER TESTS WILL NOT BE RUN.

/PASS:DDDDD
/FLAGS:FLGS

EXECUTE DDDDD PASSES (DDDDD = 1 TO 64000)
SET SPECIFIED FLAGS. FLAGS ARE DESCRIBED
IN SECTION 2.3.

/EOP:DDDDD

REPORT END OF PASS MESSAGE AFTER EVERY
DDDDD PASSES ONLY. (DDDDD = 1 TO 64000)
TEST/ADD/DROP ONLY THOSE UNITS SPECIFIED
IN THE LIST. LIST EXAMPLE - /UNITS:0:5:10-12
USE UNITS 0,5,10,11,12 (UNIT NUMBERS = 0-63)

EXAMPLE OF SWITCH USAGE:

START/TESTS:1-5/PASS:1000/EOP:100

THE EFFECT OF THIS COMMAND WILL BE: 1) TESTS 1 THROUGH 5 WILL BE EXECUTED, 2) ALL UNITS WILL TESTED 1000 TIMES AND 3) THE END OF PASS MESSAGES WILL BE PRINTED AFTER EACH 100 PASSES ONLY. A SWITCH CAN BE RECOGNIZED BY THE FIRST THREE CHARACTERS. YOU MAY, FOR EXAMPLE, TYPE ''/TES:1-5'' INSTEAD OF ''/TESTS:1-5''.

BELOW IS A TABLE THAT SPECIFIES WHICH SWITCHES CAN BE USED BY EACH COMMAND.

	TESTS	PASS	FLAGS	EOP	UNITS
START	X	Х	Х	Х	Х
RESTART CONTINUE PROCEED	: X	X	X X X	X	X
DROP					X
PRINT					X
DISPLAY FLAGS ZFLAGS EXIT					X

2.3 FLAGS

FLAGS ARE USED TO SET UP CERTAIN OPERATIONAL PARAMETERS SUCH AS LOOPING ON ERROR. ALL FLAGS ARE CLEARED AT STARTUP AND REMAIN CLEARED UNTIL EXPLICITLY SET USING THE FLAGS SWITCH. FLAGS ARE ALSO CLEARED AFTER A START COMMAND UNLESS SET USING THE FLAG SWITCH. THE ZFLAGS COMMAND MAY ALSO BE USED TO CLEAR ALL FLAGS. WITH THE EXCEPTION OF THE START AND ZFLAGS COMMANDS, NO COMMANDS AFFECT THE STATE OF THE FLAGS; THEY REMAIN SET OR CLEARED AS SPECIFIED BY THE LAST FLAG SWITCH.

FLAG	EFFECT
HOE	HALT ON ERROR - CONTROL IS RETURNED TO
	RUNTIME SERVICES COMMAND MODE
LOE	LOOP ON ERROR
IER*	INHIBIT ALL ERROR REPORTS
IBR*	INHIBIT ALL ERROR REPORTS EXCEPT
	FIRST LEVEL (FIRST LEVEL CONTAINS
	ERROR TYPE, NUMBER, PC, TEST AND UNIT)

CZUDDAO UDA DIAGNOSTIC DATA FIL MACRO VO4.00 23-JUL-81 16:40:54 PAGE 3-3

IXR*	INHIBIT EXTENDED ERROR REPORTS (THOSE
	CALLED BY PRINTX MACRO'S)
PRI	DIRECT MESSAGES TO LINE PRINTER
PNT	PRINT TEST NUMBER AS TEST EXECUTES
BOE	'BELL'' ON ERROR
UAM	UNATTENDED MODE (NO MANUAL INTERVENTION)
ISR	INHIBIT STATISTICAL REPORTS (DOES NOT
	APPLY TO DIAGNOSTICS WHICH DO NOT SUPPORT
	STATISTICAL REPORTING)
IDR	INHIBIT PROGRAM DROPPING OF UNITS
ADR	EXECUTE AUTODROP CODE
LOT	LOOP ON TEST
EVL	EXECUTE EVALUATION (ON DIAGNOSTICS WHICH
	HAVE EVALUATION SUPPORT)

*ERROR MESSAGES ARE DESCRIBED IN SECTION 3.1

SEE THE XXDP+ USER'S MANUAL FOR MORE DETAILS ON FLAGS. YOU MAY SPECIFY MORE THAN ONE FLAG WITH THE FLAG SWITCH. FOR EXAMPLE, TO CAUSE THE PROGRAM TO LOOP ON ERROR, INHIBIT ERROR REPORTS AND TYPE A 'BELL' ON ERROR, YOU MAY USE THE FOLLOWING STRING:

/FLAGS:LOE: IER: BOE

2.4 HARDWARE QUESTIONS

WHEN A DIAGNOSTIC IS STARTED, THE RUNTIME SERVICES WILL PROMPT THE USER FOR HARDWARE INFORMATION BY TYPING 'CHANGE HW (L) ?' YOU MUST ANSWER 'Y' AFTER A START COMMAND UNLESS THE HARDWARE INFORMATION HAS BEEN 'PRELOADED' USING THE SETUP UTILITY (SEE CHAPTER 6 OF THE XXDP+ USER'S MANUAL). WHEN YOU ANSWER THIS QUESTION WITH A 'Y', THE RUNTIME SERVICES WILL ASK FOR THE NUMBER OF UNITS (IN DECIMAL). YOU WILL THEN BE ASKED THE FOLLOWING QUESTIONS FOR EACH UNIT.

THE PROGRAM WILL ASK THE FOLLOWING QUESTIONS IN RESPONSE TO A START COMMAND (NON-SCRIPT):

CHANGE HW?

ANSWER NO TO USE THE PRE-BUILT ANSWERS FOR ALL HARDWARE QUESTIONS. THIS PROGRAM WILL BE RELEASED PRE-BUILT TO TEST ONE UNIT WITH THE DEFAULT ANSWERS SHOWN BELOW. THE PRE-BUILT ANSWERS MAY BE CHANGED AT ANY TIME WITH THE SETUP UTILITY. ANSWER "YES" TO BE ASKED ALL THE HARDWARE QUESTIONS.

UNITS (D) ?

ANSWER WITH THE NUMBER OF UNITS TO BE TESTED (NO DEFAULT). THIS ANSWER WILL DETERMINE HOW MANY TIMES THE FOLLOWING QUESTIONS ARE ASKED. A UNIT IS A LOGICAL DISK DRIVE ON A UDA. 1 TO 64 UNITS MAY BE SPECIFIED.

UNIBUS ADDRESS OF UDA (O) 177510 ?

ANSWER WITH THE ADDRESS OF THE UDAIP REGISTER OF ONE UDA AS ADDRESSED BY THE PROCESSOR WITH MEMORY MANAGEMENT TURNED OFF (I.E., AN EVEN 16-BIT ADDRESS IN THE RANGE OF 160000 TO 177774).

VECTOR (0) 154 ?

ANSWER WITH THE INTERRUPT VECTOR ADDRESS OF THE UDA. A VECTOR ADDRESS IN THE RANGE OF 4 TO 774 MAY BE SPECIFIED.

BR LEVEL (D) 5 ?

ANSWER WITH THE INTERRUPT PRIORITY USED BY THE UDA. LEVELS 4 TO 7 ARE ACCEPTED.

UNIBUS BURST RATE (D) 0 ?

THE UDA ALLOWS THE ABILITY TO CONTROL THE MAXIMUM NUMBER OF WORDS TRANSFERRED ACROSS THE UNIB S EACH TIME THE UDA BECOMES MASTER. ANSWER WITH THE VALUE YOUR OPERATING SYSTEM USES OR USE ZERO WHICH WILL TELL THE UDA TO SUPPLY A VALUE. A DECIMAL NUMBER IN THE RANGE OF O TO 63 MAY BE SPECIFIED. THE VALUE WILL BE PASSED DIRECTLY TO THE UDA DURING INITIALIZATION.

DRIVE NUMBER (D) 0 ?

ANSWER WITH THE LOGICAL DRIVE NUMBER ON THE FRONT OF THE DRIVE YOU WISH TO TEST. ON A MULTI-UNIT DRIVE, EACH SUB-UNIT NUMBER ON THE DRIVE MUST BE TESTED AS A SEPARATE UNIT TO COMPLETELY TEST THE DRIVE. A MAXIMUM OF EIGHT LOGICAL DRIVES MAY BE TESTED ON ONE UDA AT A TIME (UDA CONFIGURATION LIMIT).

EXERCISE ON CUSTOMER DATA AREA IN TEST 4 (L) N ?

ANSWER NO TO HAVE TEST 4 (DRIVE EXERCISER) RUN ON THE DIAGNOSTIC AREA OF THE DISK. ANSWER YES TO RUN ON THE CUSTOMER DATA AREA. A YES ANSWER WILL DESTROY ANY CUSTOMER DATA THAT MAY BE ON THE DISK. A WARNING MESSAGE WILL BE PRINTED IF THIS QUESTION IS ANSWERED YES (SEE SECTION 4.3).

2.5 SOFTWARE QUESTIONS

AFTER YOU HAVE ANSWERLD THE HARDWARE QUESTIONS OR AFTER A RESTART OR CONTINUE COMMAND, THE RUNTIME SERVICES WILL ASK FOR SOFTWARE PARAMETERS. THESE PARAMETERS WILL GOVERN SOME DIAGNOSTIC SPECIFIC OPERATION MODES. YOU WILL BE PROMPTED BY "CHANGE SW (L)?" IF YOU WISH TO CHANGE ANY PARAMETERS, ANSWER BY TYPING "Y". THE SOFTWARE QUESTIONS AND THE DEFAULT VALUES ARE DESCRIBED IN THE NEXT PARAGRAPH(S).

THE PROGRAM WILL ASK THE FOLLOWING QUESTIONS IN RESPONSE TO THE START,

RESTART, AND CONTINUE COMMANDS.

CHANGE SW ?

ANSWER NO TO BYPASS THE FOLLOWING QUESTIONS IN THIS SECTION. A YES ANSWER WILL CAUSE THE QUESTIONS TO BE ASKED AND ALLOW THE DEFAULT ANSWERS TO BE CHANGED.

ENTER MANUAL INTERVENTION MODE FOR SPECIAL DIAGNOSIS (L) N ?

TESTS 2 AND 4 HAVE MANUAL INTERVENTION MODES WHICH ALLOW ADDITIONAL PARAMETERS TO BE INPUT TO ALTER THE NORMAL TESTING OF A DISK DRIVE. THIS QUESTION SHOULD NORMALLY BE ANSWERED NO WHEN THIS DIAGNOSTIC IS FIRST RUN. THEN, DEPENDING ON THE ERRORS DETECTED, IT MAY BE DESIRABLE TO CHANGE THIS ANSWER TO YES AND ALTER THE TESTING TO FURTHER ISOLATE THE PROBLEM. IF THIS QUESTION IS ANSWERED YES, AND THE UAM (UNATTENDED MODE OPERATION) FLAG IS SET, TESTS 2 AND 4 WILL PRINT A WARNING MESSAGE THAT THE MODE CANNOT BE ENTERED AND WILL PROCEED AS IF ANSWERED NO. SEE THE DESCRIPTION OF THE INDIVIDUAL TESTS FOR MORE INFORMATION.

REMAINING SOFTWARE QUESTIONS APPLY TO TEST 4 ONLY

THIS INFORMATIONAL MESSAGE IS PRINTED TO DESCRIBE THE USE OF THE REMAINING QUESTIONS. IF TEST 4 IS NOT BEING RUN, A ''CONTROL Z'' CAN BE TYPED TO BYPASS THEM.

ERROR LIMIT (D) 32 ?

ENTER THE NUMBER OF HARD ERRORS ALLOWED BEFORE A DRIVE IS DROPPED FROM EXERCISE BY TEST #4. A NUMBER IN THE RANGE OF 1 TO 65535 WILL BE ACCEPTED.

READ TRANSFER LIMIT IN MEGABYTES - 0 FOR NO LIMIT (D) 0 ?

WHEN THE SPECIFIED NUMBER OF BYTES HAVE BEEN READ FROM A DRIVE BY TEST #4, THE DRIVE WILL BE DROPPED FROM TESTING. WHEN ALL DRIVES ARE DROPPED, AN END OF PASS WILL BE INDICATED AND THE SELECTED TESTS WILL BE RUN AGAIN. THIS IS THE METHOD USED TO DETERMINE HOW LONG TEST #4 IS TO RUN. ANSWER WITH A ZERO TO PREVENT TEST FROM ENDING. THE ONLY OTHER WAY TEST #4 CAN END IS TO HAVE ALL DRIVES DROPPED BECAUSE THE ERROR LIMIT ON EACH IS EXCEEDED. OF COURSE, THE OPERATOR CAN ALWAYS STOP TEST #4 BY TYPING A CONTROL—C.

SUPPRESS PRINTING SOFT ERRORS (L) Y?

WHEN TEST #4 NEEDS TO PERFORM RETRIES, SOFT ERROR REPORTS WILL BE PRINTED TO GIVE AS MUCH INFORMATION AS POSSIBLE. THESE ACTIONS ARE CONSIDERED NORMAL OPERATION AND ARE NOT ERROR CONDITIONS UNTIL THE RETRIES FAIL. WHEN THE TEST IS BEING RUN ONLY TO SEE HOW RELIABLE THE DRIVE PERFORMS, THIS QUESTION SHOULD BE ANSWERED YES SO THEY ARE NOT CONFUSED WITH HARD ERRORS. THE NUMBER OF THESE SOFT ERRORS IS ALWAYS REPORTED IN THE STATISTICAL REPORT. ANSWER NO TO SEE ALL THE SOFT ERROR REPORTS.

DO INITIAL WRITE ON START (L) Y ?

IF TEST #4 IS TO DO DATA COMPARES, THE DRIVE WILL NEED TO BE WRITTEN WITH DATA PATTERNS READABLE BY THE PROGRAM.

IF THE DIAGNOSTIC AREA IS SELECTED FOR TESTING, THE INITIAL WRITE IS ALWAYS PERFORMED (REGARDLESS OF HOW THIS QUESTION IS ANSWERED).

IF THE CUSTOMER DATA AREA IS SELECTED FOR TESTING, THE INITIAL WRITE WILL BE PERFORMED WHEN ALL OF THE FOLLOWING ARE TRUE:

- THIS QUESTION IS ANSWERED YES.
- 2. THIS IS THE FIRST TIME TEST #4 IS BEING RUN AFTER A START COMMAND.
 - THE DISK IS WRITE ENABLED.

ANSWERING THIS QUESTION NO WHEN TESTING ON THE CUSTOMER DATA AREA WILL NORMALLY RESULT IN DATA COMPARISON ERRORS IF THE DISK WAS NOT PREVIOUSLY WRITTEN BY THIS DIAGNOSTIC OR THE FORMATTER.

NOTE THAT WRITE CHECKS ARE NOT PERFORMED DURING THE INITIAL WRITE.

ENABLE ERROR LOG (L) N ?

A YES ANSWER WILL CAUSE ERROR MESSAGES IN TEST #4 TO BE STORED IN A LOG BUFFER. ONCE THE LOG BUFFER IS FULL, ADDITIONAL ERROR INFORMATION IS LOST. THE CONTENTS OF THE LOG BUFFER WILL BE PRINTED WHEN TEST #4 IS STOPPED AND A STATISTICAL REPORT REQUESTED. THIS LOG FEATURE IS INTENDED TO ALLOW THE DIGITAL DIAGNOSIS CENTER (DDC) TO START TEST #4 THEN HANG UP FROM THE SYSTEM AND LET IT RUN FOR SOME PERIOD OF TIME. DDC CAN CALL THE SYSTEM BACK LATER, TYPE CONTROL-C, THEN PRINT AND SEE THE ERRORS THAT HAVE OCCURRED (UP TO THE LIMIT OF THE LOG BUFFER). A MESSAGE WILL BE PRINTED TO INDICATE NO ERRORS HAVE OCCURRED IF THE LOG BUFFER IS EMPTY. TEST #4 WILL NOT BE ALLOWED TO END WHILE THE ERROR LOG IS ENABLED EVEN THOUGH TESTING MAY ACTUALLY STOP. THE LOG BUFFER WILL HOLD A MINIMUM OF 30 ERROR MESSAGES.

2.6 EXTENDED P-TABLE DIALOGUE

THE FOLLOWING WARNING WILL BE PRINTED IN RESPONSE TO A START COMMAND IF ANY DRIVE IS SELECTED FOR TESTING ON THE CUSTOMER DATA AREA. THE WARNING WILL APPEAR IMMEDIATELY AFTER THE SOFTWARE QUESTIONING IS COMPLETED.

CUSTOMER DATA WILL BE DESTROYED ON:

CZUDDAO UDA DIAGNOSTIC DATA FIL MACRO VO4.00 23-JUL-81 16:40:54 PAGE 3-7 USER DOCUMENTATION

UNIT UDA AT DRIVE

UNLESS THE DIAGNOSTIC IS BEING RUN IN UNATTENDED MODE (E.G., START/FLAG: UAM TO SUPERVISOR PROMPT), A CONFIRMATION WILL ALSO BE REQUIRED AS FOLLOWS:

ARE YOU SURE CUSTOMER DATA CAN BE DESTROYED (L) ?

IF THE ABOVE QUESTION IS ANSWERED NO, THE ENTIRE DIAGNOSTIC WILL STOP AND THE SUPERVISOR PROMPT WILL BE DISPLAYED. NO DEFAULT ANSWER IS PROVIDED FOR THIS QUESTION.

2.7 QUICK START-UP PROCEDURE (XXDP+)

TO START-UP THIS PROGRAM:

- 1. BOOT XXDP+
- 2. GIVE THE DATE AND ANSWER THE LSI AND 50HZ (IF THERE IS A CLOCK) QUESTIONS
- 3. TYPE 'R NAME', WHERE NAME IS THE NAME OF THE BIN OR BIC FILE FOR THIS PROGRAM
- 4. TYPE "START"
- 5. ANSWER THE 'CHANGE HW' QUESTION WITH 'Y'
- 6. ANSWER ALL THE HARDWARE QUESTIONS
- 7. ANSWER THE "CHANGE SW" QUESTION WITH "N"

WHEN YOU FOLLOW THIS PROCEDURE YOU WILL BE USING ONLY THE DEFAULTS FOR FLAGS AND SOFTWARE PARAMETERS. THESE DEFAULTS ARE DESCRIBED IN SECTIONS 2.3 AND 2.5.

- 3.0 ERROR INFORMATION
- 3.1 TYPES OF ERROR MESSAGES

THERE ARE THREE LEVELS OF ERROR MESSAGES THAT MAY BE ISSUED BY A DIAGNOSTIC: GENERAL, BASIC AND EXTENDED. GENERAL ERROR MESSAGES ARE ALWAYS PRINTED UNLESS THE 'IER' FLAG IS SET (SECTION 2.3). THE GENERAL ERROR MESSAGE IS OF THE FORM:

NAME TYPE NUMBER ON UNIT NUMBER TST NUMBER PC:XXXXXX ERROR MESSAGE

WHERE; NAME = DIAGNOSTIC NAME

TYPE = ERROR TYPE (SYS FATAL, DEV FATAL, HARD OR SOFT)

NUMBER = ERROR NUMBER

UNIT NUMBER = 0 - N (N IS LAST UNIT IN PTABLE)

TST NUMBER = TEST AND SUBTEST WHERE ERROR OCCURRED

PC:XXXXXXX = ADDRESS OF ERROR MESSAGE CALL

CZUDDAO UDA DIAGNOSTIC DATA FIL MACRO VO4.00 23-JUL-81 16:40:54 PAGE 3-8 USER DOCUMENTATION

BASIC ERROR MESSAGES ARE MESSAGES THAT CONTAIN SOME ADDITIONAL INFORMATION ABOUT THE ERROR. THESE ARE ALWAYS PRINTED UNLESS THE ''IER' OR ''IBR'' FLAGS ARE SET (SECTION 2.3). THESE MESSAGES ARE PRINTED AFTER THE ASSOCIATED GENERAL MESSAGE.

EXTENDED ERROR MESSAGES CONTAIN SUPPLEMENTARY ERROR INFORMATION SUCH AS REGISTER CONTENTS OR GOOD/BAD DATA. THESE ARE ALWAYS PRINTED UNLESS THE ''IER'', ''IBR'' OR ''IXR'' FLAGS ARE SET (SECTION 2.3). THESE MESSAGES ARE PRINTED AFTER THE ASSOCIATED GENERAL ERROR MESSAGE AND ANY ASSOCIATED BASIC ERROR MESSAGES.

4.0 PERFORMANCE AND PROGRESS REPORTS

A STATISTICAL REPORT WILL AUTOMATICALLY BE PRINTED PERIODICALLY (APPROXIMATELY EVERY SEVENTEEN MINUTES) AND AT THE END OF TEST #4. IT CAN BE SUPPRESSED BY SETTING THE INHIBIT STATISTICAL REPORT FLAG (E.G. START/FLAGS:ISR). THIS IS THE SAME REPORT THAT CAN BE PRINTED ON DEMAND WITH THE PRINT COMMAND.

DURING TEST 1, 2, AND 3, THE REPORT WILL LOOK LIKE THE FOLLOWING EXAMPLE:

TEST 1 IN PROGRESS RUN TIME 2:24:10

DURING TEST #4, THE REPORT WILL CONTAIN STATISTICS ON EACH DRIVE FOR THE CURRENT PASS OF THE TEST; FOR EXAMPLE:

TEST 4 IN PROGRESS RUN TIME 2:24:10

UNIT	DRIVE	SERIAL-NUMBER	SEEKS	MBYTES READ	MBYTES		SOF T ERRORS	ECC
0	0	1002	12000	36	22	0	0	1
1	4	67342102112	14000	42	29	0	2	0

5.0 TEST SUMMARIES

TEST # 1 - UNIBUSS ADDRESSING TEST

THE PURPOSE OF TEST #1 IS TO COMPLETE THE TESTING OF THE UNIBUS INTERFACE IN THE UDA. THE UDA RESIDENT DIAGNOSTIC IS NOT ABLE TO COMPLETELY TEST THE UNIBUS INTERFACE BECAUSE COMMUNICATION WITH THE PDP-11 PROCESSOR IS NECESSARY. SPECIFICALLY, THIS TEST WILL:

- 1. CHECK THAT EVERY ADDRESS LINE ON THE UNIBUS CAN BE DRIVEN TO BOTH ONE AND ZERO STATES.
- 2. CHECK THAT THE UDA CAN INTERRUPT THE PDP-11 PROCESSOR AT THE PROPER PRIORITY LEVEL AND VECTOR.
- 3. EXERCISE THE UNIBUS INTERFACE BY TRANSFERRING BLOCKS OF DATA TO AND FROM UNIBUS MEMORY.

THIS TEST ASSUMES THAT THE FOLLOWING ARE BEING TESTED BY THE UDA RESIDENT DIAGNOSTIC:

- 1. ALL DATA BITS CAN BE WRITTEN AND READ CORRECTLY.
- NPR CYCLES CAN BE EXECUTED CORRECTLY.

ONE AT A TIME, EACH UDA SELECTED FOR TESTING WILL BE INITIALIZED AND BROUGHT ON-LINE BY FOLLOWING THE INITIALIZATION PROTOCOL. SEVERAL SIZES OF THE HOST COMMUNICATIONS AREA WILL BE SUPPLIED TO ALLOW THE UDA RESIDENT DIAGNOSTIC TO DO THE MOST UNIBUS ADDRESS TESTING POSSIBLE. INTERRUPTS WILL BE DISABLED. ANY UDA RESIDENT DIAGNOSTIC ERRORS WILL BE REPORTED.

THE UDA WILL THEN BE INITIALIZED AGAIN, THIS TIME WITH INTERRUPTS ENABLED. THE VECTOR ADDRESS AND PRIORITY LEVEL WILL BE DETERMINED SOLELY FROM THE ANSWERS TO THE HARDWARE QUESTIONS. IF THE HARDWARE VECTORS TO THE WRONG ADDRESS, IT IS IMPOSSIBLE TO DETERMINE THE RESULT. A DESCRIPTIVE ERROR MESSAGE OF THE PROBLEM WILL NOT OCCUR (THE PROGRAM OR PROCESSOR MAY HANG OR AN UNRELATED MESSAGE MAY OCCUR). THEREFORE, THE MESSAGE 'TESTING INTERRUPT ABILITY OF UDA AT ADR XXXXXX VEC XXX...' WILL BE PRINTED JUST BEFORE THE UDA IS REQUESTED TO CAUSE AN INTERRUPT AND THE WORD 'COMPLETED' WILL BE PRINTED (ON THE SAME LINE) WHEN THE INTERRUPT TEST IS COMPLETED. IF THE WORD 'COMPLETED' DOES NOT FOLLOW THE FIRST MESSAGE, IT SHOULD BE APPARENT THAT THE INTERRUPT CAUSED THE DIAGNOSTIC OR PROCESSOR TO GO ASTRAY. THE PRIORITY LEVEL OF THE INTERRUPT REQUEST WILL ALSO BE VERIFIED.

A 'DIAGNOSTIC MACHINE' PROGRAM WILL THEN BE DOWNLINE LOADED IN THE UDA FROM THE MEMORY SPACE INCLUDED IN THE HOST COMMUNICATIONS AREA WHEN THE UDA WAS FIRST INITIALIZED. THE UDA RESIDENT DIAGNOSTIC HAS ALREADY VERIFIED THAT IT CAN ACCESS THESE MEMORY ADDRESSES, SO THE DOWNLINE LOAD COMMAND SHOULD PERFORM PROPERLY. THE 'DIAGNOSTIC MACHINE' PROGRAM IS THEN STARTED.

THE 'DIAGNOSTIC MACHINE' PROGRAM WILL ASK THE PDP-11 PROGRAM TO FILL FREE MEMORY (THAT MEMORY AVAILABLE TO THE PDP-11 PROGRAM THAT IS NOT BEING JSED BY THE PROGRAM OR THE PDP-11 SUPERVISOR) WITH AN ADDRESSING PATTERN AND REPORT THE LOCATION AND SIZE OF THE FREE MEMORY. EVERY LOCATION OF FREE MEMORY WILL BE READ AND THE DATA CHECKED. THEN, ONE BY ONE, EACH ADDRESS LINE WILL BE TESTED AS FOLLOWS:

- 1. DETERMINE A TEST ADDRESS BY TAKING THE FIRST ADDRESS OF FREE MEMORY AND COMPLIMENTING THE ADDRESS BIT TO BE TESTED.
 - READ FROM THE TEST ADDRESS.
 - 3. IF A NON-EXISTANT MEMORY ERROR OCCURRS, THE TEST IS COMPLETE.
- 4. WRITE ALL ONES TO THE FIRST ADDRESS OF FREE MEMORY THEN READ FROM THE TEST ADDRESS. IF DATA READ IS NOT ALL ONES, THEN TEST IS COMPLETE.
- 5. WRITE ZEROS TO THE FIRST ADDRESS OF FREE MEMORY THEN READ FROM THE TEST ADDRESS. IF DATA READ IS NOT ZEROS, THEN TEST IS COMPLETE.
 - 6. REPORT UNIBUS ADDRESSING ERROR.

WHEN ALL ADDRESS BITS HAVE BEEN TESTED, THEN BLOCK TRANSFERS TO AND

CZUDDAO UDA DIAGNOSTIC DATA FIL MACRO VO4.00 23-JUL-81 16:40:54 PAGE 3-10 USER DOCUMENTATION

FROM MEMORY WILL BE TESTED WITH DIFFERENT DATA PATTERNS. THIS DATA WILL BE TRANSFERRED AT THE RATE DISK DATA IS TRANSFERRED TO AND FROM MEMORY DURING NORMAL UDA OPERATION.

THE NEXT UDA SELECTED FOR TESTING WILL THEN BE TESTED IN THE SAME MANNER. WHEN ALL UDAS HAVE BEEN TESTED, TEST #1 WILL END.

TEST #2 - DISK RESIDENT DIAGNOSTIC TEST

THE PURPOSE OF TEST #2 IS TO EXECUTE THE DIAGNOSTICS THAT RUN IN EACH DISK DRIVE. THESE DIAGNOSTIC PROGRAMS MAY BE RESIDENT IN THE DISK DRIVE OR REQUIRE DOWNLINE LOADING FROM THE XXDP+ LOAD DEVICE. THESE DIAGNOSTIC PROGRAMS THAT RUN IN THE DISK DRIVES ARE NOT PART OF THIS DIAGNOSTIC PRODUCT, BUT ARE PRODUCED BY THE DISK DEVELOPMENT GROUP. THIS UDA DIAGNOSTIC PROGRAM ONLY KNOWS THE PROCEDURE TO EXECUTE THE DISK RESIDENT DIAGNOSTICS AND HOW TO DETERMINE WHETHER A TEST PASSED OR FAILED.

ONE AT A TIME, EACH UDA SELECTED FOR TESTING WILL BE INITIALIZED AND A 'DIAGNOSTIC MACHINE' PROGRAM DOWNLINE LOADED. THE 'DIAGNOSTIC MACHINE' PROGRAM WILL ASK WHAT DRIVES ARE TO BE TESTED, THEN WILL ISSUE SEVERAL ECHO FRAMES TO THE DISK DRIVE AND CHECK FOR THE CORRECT RESPONSE FROM THE DRIVE. THIS SHOULD SERVE AS A GOOD INDICATOR THAT THE UDA AND DISK DRIVE CAN COMMUNICATE.

A DIAGNOSE COMMAND WILL THEN BE ISSUED TO THE DRIVE TO REQUEST THE DRIVE RUN ALL OF ITS DIAGNOSTICS. IF THE DISK DRIVE REQUESTS A DOWNLINE LOAD OF A DRIVE DIAGNOSTIC, THE DIAGNOSTIC PROGRAM WILL BE READ FROM THE XXDP+ LOAD DEVICE, DOWNLINE LOAD THE FILE INTO THE DISK DRIVE AND START ITS EXECUTION. THERE IS NO LIMIT TO THE NUMBER OF DOWNLINE LOADS THAT CAN BE REQUESTED BY A DRIVE.

IF THE 'MANUAL INTERVENTION MODE' SOFTWARE QUESTION WAS ANSWERED NO (DEFAULT) TESTING WILL PROCEED TO THE NEXT DRIVE. WHEN ALL DRIVES ON THE UDA HAVE BEEN TESTED, THE NEXT UDA SELECTED FOR TESTING WILL THEN BE TESTED IN THE SAME MANNER. WHEN ALL UDA'S HAVE BEEN TESTED, TEST W2 WILL END.

IF THE 'MANUAL INTERVENTION MODE' SOFTWARE QUESTION WAS ANSWERED YES. AN INTERACTIVE MODE WILL BE ENTERED TO ALLOW THE OPERATOR TO PERFORM DIAGNOSTIC ACTIVITIES ON THE DISK DRIVE AS DESIRED. THE SERVICE MANUAL FOR THE DISK DRIVE MUST BE USED TO DETERMINE WHAT DIAGNOSTIC CAPABILITIES ARE AVAILABLE.

FIRST, A BRIEF DESCRIPTION OF AVAILABLE COMMANDS WILL BE PRINTED AS FOLLOWS:

TEST #2 MANUAL INTERVENTION ON UNIT XX UDA AT XXXXXX DRIVE XXX
TO WRITE AND READ MEMORY:
W DATA REGION OFFSET
R REGION OFFSET
TO RUN A DIAGNOSTIC:
D REGION
TO EXIT QUESTIONING:

CZUDDAO UDA DIAGNOSTIC DATA FIL MACRO VO4.00 23-JUL-81 16:40:54 PAGE 3-11 USER DOCUMENTATION

DATA, REGION AND OFFSET ARE HEX VALUES.

COMMANDS MAY BE TYPED AFTER THE QUESTION MARK PROMPT. EACH COMMAND WILL BE PROCESSED AS ENTERED AND RESULTS DISPLAYED IMMEDIATELY. THE EXIT COMMAND WILL ALLOW THE DIAGNOSTIC TO PROCEED.

READ AND WRITE COMMANDS WILL REMEMBER THE REGION AND OFFSET VALUES. SUCCESSIVE READ AND SUCCESSIVE WRITE COMMANDS WILL AUTOMATICALLY INCREMENT TO THE NEXT OFFSET IF THE REGION AND OFFSET VALUES ARE NOT TYPED. IF A REGION IS TYPED BUT NOT AN OFFSET, OFFSET ZERO WILL BE USED.

ONE TO FOUR BYTES OF DATA MAY BE ENTERED BY A SINGLE WRITE COMMAND, DEPENDING ON THE NUMBER OF DIGITS TYPED IN THE HEX VALUE. A READ COMMAND WILL ALWAYS RETURN FOUR BYTES OF DATA. EXAMPLES:

- 1. W FF FFFC 4 2. W 010203 3. R FFFC 0004
 - FFFC 0004/ FF 01 02 03
- 4. W FOF1F2F3 FFFC
- 5. R FFFC 0000/ F0 F1 F2 F3
- 6. R FFFC 0004/ FF 01 02 03

COMMAND 1 WRITES ONE BYTE (FF) INTO REGION FFFC, OFFSET 4. COMMAND 2 WRITES THREE BYTES (01, 02 AND 03) INTO THE SAME REGION WITH OFFSETS 5, 6 AND 7. COMMAND 3 READS FOUR BYTES STARTING AT REGION FFFC OFFSET 4. COMMAND 4 WRITES FOUR BYTES AT REGION FFFC OFFSET 0. COMMANDS 5 AND 6 READ THE EIGHT BYTES.

THE DIAGNOSE COMMAND WILL REMEMBER THE REGION FROM PREVIOUS DIAGNOSE COMMANDS ONLY, BECAUSE THE REGION CONTAINING THE DIAGNOSTIC IS GENERALLY NOT THE SAME REGION USED TO WRITE PARAMETERS OR READ RESULTS. IF THE DIAGNOSTIC RETURNS ANY DATA, THE DATA WILL BE PRINTED IMMEDIATELY.

TEST #3 - DISK FUNCTION TEST

THE PURPOSE OF TEST #3 IS TO FUNCTIONALLY TEST THE DISK DRIVE. ON A DRIVE THAT IS WELL DIAGNOSED BY ITS DISK RESIDENT DIAGNOSTICS (EXECUTED BY TEST #2) THESE FUNCTIONAL TESTS WILL HAVE LITTLE VALUE. ON A DRIVE THAT HAS NO OR MINIMAL RESIDENT DIAGNOSTICS, THESE FUNCTIONAL TESTS WILL HAVE MORE VALUE.

TEST #3 WILL START BY INITIALIZING EACH UDA SELECTED FOR TESTING AND THEN DOWNLINE LOAD A 'DIAGNOSTIC MACHINE' PROGRAM INTO EACH UDA. ONCE ALL UDAS HAVE BEEN STARTED, THE PDP-11 PROGRAM WILL RESPOND TO REQUESTS FROM ALL UDAS. WHEN ALL THE UDAS HAVE INDICATED THE END OF TESTING, TEST #3 WILL END.

THE 'DIAGNOSTIC MACHINE' PROGRAM WILL PERFORM THE FOLLOWING FUNCTIONS

ON EACH DRIVE:

- ISSUE A DRIVE CLEAR COMMAND.
- ISSUE INITIATE RECALIBRATE COMMAND.
- 3. ISSUE A CHANGE MODE COMMAND TO ENABLE DIAGNOSTIC CYLINDER ACCESS AND SET THE DRIVE TO 512 BYTE SECTOR SIZE.
 - 4. ISSUE INITIATE SEEK COMMAND TO LAST DIAGNOSTIC CYLINDER.
- 5. READ ALL FACTORY FORMATTED SECTOR HEADERS. IF NO HEADERS ON A TRACK CAN BE READ, REPORT THE ERROR, OTHERWISE CONTINUE.
- 6. STARTING WITH CYLINDER O, GROUP O AND INCREMENTING THROUGH EVERY GROUP ON THE DISK, SEEK TO THE SELECTED GROUP, READ A HEADER ON TRACK O AND THEN SEEK TO THE FACTORY FORMATTED DIAGNOSTIC CYLINDER. READ FROM THE DIAGNOSTIC CYLINDER TO VERIFY DISK POSITIONED CORRECTLY.
 - 7. ISSUE A CHANGE MODE COMMAND TO ENABLE FORMATTING OPERATIONS.
 - 8. FORMAT ALL WRITABLE DBNS IN 512 BYTE FORMAT.
- 9. WRITE AND READ SEVERAL DATA PATTERNS TO EACH WRITABLE DBN. REPORT AN ERROR IF ALL DBNS ON ONE TRACK HAVE AN ERROR.

TEST #4 - DISK EXERCISER

THE PURPOSE OF TEST #4 IS TO EXERCISE THE DISK DRIVES IN A MANNER SIMILAR TO NORMAL USAGE UNDER STANDARD OPERATING SYSTEMS. EXECUTION OF THIS TEST SHOULD GIVE AN INDICATION OF THE PERFORMANCE OF THE DISK DRIVE. THIS TEST MAY BE RUN FOR LONG OR SHORT PERIODS OF TIME, DEPENDING ON HOW THE SOFTWARE QUESTIONS ARE ANSWERED.

THESE ARE TWO MODES OF OPERATION FOR TEST #4:

- 1. DEFAULT OPERATION ON THE ENTIRE AREA SELECTED (CUSTOMER OR DIAGNOSTIC) WITH ALL PARAMETERS SELECTED FOR RANDOM OPERATION AS SHOWN BY DEFAULT ANSWERS BELOW.
- 2. MANUAL INTERVENTION MODE WHERE A NUMBER OF QUESTIONS ARE ASKED AND OPERATION IS CONTROLLED BY THEIR ANSWERS.

WHICH MODE IS ENTIRELY DETERMINED BY THE ANSWER TO THE FIRST SOFTWARE QUESTION ASKING, 'ENTER MANUAL INTERVENTION MODE FOR SPECIAL DIAGNOSIS?' THIS QUESTION WOULD NORMALLY HAVE BEEN ANSWERED NO (DEFAULT) AND TESTING WILL BEGIN IMMEDIATELY. IF ANSWERED YES, THE FOLLOWING SERIES OF QUESTIONS WILL BE ASKED FOR EACH UNIT SELECTED FOR TESTING:

THE FOLLOWING QUESTIONS REFER TO UNIT XX UDA AT XXXXXX DRIVE XXX

THIS MESSAGE WILL IDENTIFY TO WHICH DRIVE THE QUESTIONS ARE BEING ASKED. THE ENTIRE SERIES OF QUESTIONS WILL BE ASKED FOR EACH DRIVE, THERE IS NO SHORT WAY TO ANSWER LIKE IN THE

HARDWARE QUESTIONS.

NUMBER OF BAD BLOCKS (D) 0 ?

AN ANSWER IN THE RANGE OF 1 TO 16 WILL ALLOW THAT MANY BAD BLOCK NUMBERS TO BE ENTERED. THE PROGRAM WILL ALLOW WRITES AND READS TO THESE BLOCKS BUT NO ERROR MESSAGES WILL BE PRINTED FOR THESE BLOCKS. ERRORS ENCOUNTERED ON THESE BLOCKS WILL NOT APPEAR IN THE STATISTICS. ANSWER ZERO TO BYPASS ENTERING BAD BLOCKS.

BAD BLOCK (A) ?

THIS QUESTION WILL BE ASKED THE NUMBER OF TIMES REQUESTED BY THE PREVIOUS ANSWER. ANY DECIMAL NUMBER THAT CAN BE CON-VERTED INTO A 28-BIT BINARY VALUE WILL BE ACCEPTED. NO OTHER ERROR CHECKING WILL BE MADE AT THIS TIME TO DETERMINE IF THE BLOCK NUMBER ACTUALLY EXISTS ON THE DISK.

READ ONLY (L) N ?

ANSWER YES TO DICTATE READ ONLY AND PREVENT TEST #4 FROM PERFORMING ANY WRITES TO THE DISK. NOTE THAT TEST #3 WILL STILL WRITE TO THE DIAGNOSTIC CYLINDERS.

WRITE ONLY (L) N ?

THIS QUESTION WILL ONLY BE ASKED IF THE PREVIOUS QUESTION WAS ANSWERED NO. ANSWER YES TO DICTATE WRITE ONLY.

CHECK ALL WRITES BY READING (L) N ?

ANSWER YES TO CAUSE ALL WRITES TO BE CHECKED BY READING THE DATA IMMEDIATELY AFTER THE WRITE OPERATION.

RANDOMLY CHECK WRITES BY READING (L) Y ?

THIS QUESTION WILL ONLY BE ASKED IF THE PREVIOUS QUESTION WAS ANSWERED NO. ANSWER YES FOR THE WRITE CHECK TO BE PERFORMED RANDOMLY. ANSWER NO IF WRITE CHECKS ARE NOT DESIRED.

DATA PATTERN - O FOR RANDOM SELECTION (D) 0 ?

THERE ARE 16 DATA PATTERNS AVAILABLE, SELECTED AS 1 TO 16. PATTERN NUMBER 0 WILL CAUSE PATTERNS 1 TO 15 TO BE RANDOMLY SELECTED FOR EACH WRITE. IF PATTERN NUMBER 16 IS SELECTED, THE FOLLOWING SET OF QUESTIONS WILL BE ASKED FOR A PATTERN TO BE INPUT.

ENABLE ECC DATA CORRECTION (L) Y ?

A YES ANSWER WILL ENABLE THE USE OF ECC TO CORRECT DATA ERRORS. NO ERROR MESSAGE WILL BE PRINTED WHEN THE ECC PROPERLY CORRECTS THE DATA ON THE FIRST READ OF ANY DISK BLOCK. READ RETRIES WILL END WHEN A RE-READ PRODUCES AN ECC CORRECTABLE ERROR. THE USE OF ECC CORRECTION WILL APPEAR ONLY IN THE STATISTICAL REPORT FOR THE DRIVE.

A NO ANSWER WILL PREVENT THE USE OF ECC. ALL ECC ERRORS WILL CAUSE AN ERROR MESSAGE TO BE PRINTED AND RETRIES TO BE ATTEMPTED.

COMPARE ALL DATA READ (L) N ?

ANSWER YES TO CAUSE A DATA COMPARE AFTER EVERY READ.

RANDOMLY COMPARE DATA READ (L) Y ?

THIS QUESTION WILL ONLY BE ASKED IF THE PREVIOUS QUESTION WAS ANSWERED NO. ANSWER YES FOR THE DATA COMPARE TO BE PERFORMED ON RANDOM RECORDS. ANSWER NO IF DATA COMPARES ARE NOT DESIRED.

ENABLE RETRIES (L) Y

A YES ANSWER WILL ENABLE RETRIES TO BE PERFORMED ON DISK ERRORS.

RANDOM SEEK MODE (L) Y ?

ANSWER YES TO CAUSE BLOCK NUMBERS TO BE CHOSEN RANDOMLY. ANSWER NO TO CAUSE BLOCK NUMBERS TO BE SELECTED SEQUENTIALLY UP AND DOWN THE DISK SURFACE.

DO YOU WISH TO:

0 - TEST ENTIRE AREA SELECTED

1 - SPECIFY BEGIN/END SETS TO TEST

2 - SPECIFY TRACKS AND CYLINDERS TO TEST
3 - SPECIFY GROUPS AND CYLINDERS TO TEST

4 - SPECIFY CYLINDERS TO TEST
(D) 0 ?

THIS QUESTION SPECIFIES THE OPTIONS AVAILABLE TO LIMIT TESTING TO A PORTION OF THE SELECTED AREA (CUSTOMER OR DIAGNOSTIC) OF THE DISK. A ZERO ANSWER IS THE DEFAULT WHICH SPECIFIES TO USE THE ENTIRE AREA FOR THE TEST. OTHER ANSWERS WILL CAUSE ADDITIONAL QUESTIONS TO BE ASKED.

NUMBER OF BEGIN/END SETS (D) 1 ? BEGIN BLOCK (A) 0 ? END BLOCK (A) 0 ?

THESE QUESTIONS ARE ASKED IF BEGIN/END SETS WERE SELECTED TO LIMIT THE TESTING AREA (ANSWER 1). ONE TO FOUR SETS MAY BE SPECIFIED. THE BEGIN BLOCK AND END BLOCK QUESTIONS ARE ASKED AS MANY TIMES AS NEEDED.

NUMBER OF TRACKS TO TEST (D) 1 ? TRACK (D) 0 ?

NUMBER OF GROUPS TO TEST (D) 1 ? GROUP (D) 0 ?

ONE OF THESE SETS OF QUESTIONS IS ASKED IF EITHER TRACKS AND

CZUDDAO UDA DIAGNOSTIC DATA FIL MACRO VO4.00 23-JUL-81 16:40:54 PAGE 3-15 USER DOCUMENTATION

CYLINDERS OR GROUPS AND CYLINDERS WAS SPECIFIED TO LIMIT THE TESTING AREA (ANSWERS 2 OR 3). UP TO SEVEN TRACKS OR GROUPS MAY BE SPECIFIED ON WHICH TESTING WILL BE LIMITED.

DO YOU WISH TO LIMIT THE CYLINDERS TESTED (L) N ?

THIS QUESTION IS ASKED ONLY AFTER THE TRACKS OR GROUPS HAVE BEEN SPECIFIED ABOVE. IF TESTING IS TO BE FURTHER LIMITED TO A SET OF CYLINDERS, ANSWER YES AND THE FOLLOWING TWO QUESTICNS WILL BE ASKED:

STARTING CYLINDER (A) 0 ? ENDING CYLINDER (A) 0 ?

THESE QUESTIONS ARE ASKED IF THE QUESTION IMMEDIATELY ABOVE WAS ANSWERED YES OR IF CYLINDERS WERE SELECTED TO LIMIT THE TESTING AREA (ANSWER 4). ONE SET OF CYLINDER NUMBERS MAY BE SPECIFIED TO LIMIT THE TESTING AREA.

AFTER THE ABOVE QUESTIONS HAVE BEEN ASKED FOR ALL DRIVES SELECTED FOR TESTING, THE FOLLOWING QUESTIONS WILL BE ASKED IF DATA PATTERN 16 WAS SELECTED FOR ANY DRIVE:

NUMBER OF WORDS IN DATA PATTERN 16 (D) 1 ? DATA WORD (O) 0 ?

DATA PATTERN 16 CAN BE INPUT BY THESE QUESTIONS. A DATA PATTERN CONSISTS OF A BUFFER OF ONE TO 16 WORDS WHICH IS REPEATED THROUGHOUT THE DATA PORTION OF THE DISK BLOCK. ENTER THE CONTENTS OF THE DATA PATTERN BUFFER. THE DATA WORD QUESTION WILL BE REPEATED AS NEEDED.

TEST #4 WILL START BY INITIALIZING EACH UDA SELECTED FOR TESTING AND THEN DOWNLINE LOADING A 'DIAGNOSTIC MACHINE' PROGRAM INTO EACH UDA. THE 'DIAGNOSTIC MACHINE' PROGRAM WILL ASK WHAT DRIVES ARE TO BE TESTED AND THEN WILL ASK FOR THE PARAMETERS FOR EACH DRIVE (THE ANSWERS TO THE MANUAL INTERVENTION QUESTIONS OR THEIR DEFAULTS). ONCE ALL UDAS HAVE BEEN STARTED, THE PDP-11 PROGRAM WILL RESPOND TO REQUESTS FROM ALL UDAS.

THE DISK WILL THEN BE EXERCISED ACCORDING TO THE PARAMETERS. THE EXERCISE CONSISTS OF SELECTING A DISK SECTOR, "SEKING TO THE PROPER CYLINDER, THEN READING OR WRITING THE SECTOR. THE PARAMETERS WILL CONTROL HOW THE DISK SECTOR IS SELECTED, WHETHER THE SECTOR IS WRITTEN OR READ AND WHETHER A WRITE IS FOLLOWED BY A READ (WRITE CHECK).

THE 'DIAGNOSTIC MACHINE' PROGRAM WILL PERIODICALLY SEND STATISTICS TO THE PDP-11 PROGRAM. THESE STATISTICS WILL INCLUDE COUNTS OF READS, WRITES, SEEKS AND ERRORS ON A PER DRIVE BASIS. THE PDP-11 PROGRAM WILL ACCUMULATE THE STATISTICS FROM ALL THE UDAS AND WATCH FOR THE TRANSFER LIMIT TO BE EXCEEDED. AS LONG AS THE ERROR LOG IS NOT ENABLED, THE EXCEEDING OF THE TRANSFER LIMIT WILL CAUSE THE END OF TEST #4.

EACH TIME AN ERROR OCCURS, THE 'DIAGNOSTIC MACHINE' WILL TELL THE PDP-11 PROGRAM. A MESSAGE WILL BE PRINTED (OR STORED IN THE LOG BUFFER) AND THEN THE ERROR LIMIT FOR THE DRIVE WILL BE CHECKED. IF THE

ERROR LIMIT HAS BEEN REACHED, THE DRIVE WILL BE DROPPED FROM TESTING. IF NO MORE DRIVES REMAIN TO BE TESTED, TEST #4 WILL END (UNLESS THE ERROR LOG IS ENABLED).

WHEN THE END OF TEST #4 OCCURS, THE ACCUMULATED STATISTICS FOR EACH DRIVE WILL BE PRINTED. THIS STATISTICAL REPORT CAN BE PRINTED AT ANY TIME DURING TEST #4 BY TYPING CONTROL-C THEN THE PRINT COMMAND.

THE DATA PATTERNS TO BE USED BY TEST #4 ARE INDICATED BELOW. EACH PATTERN IS GENERATED BY WRITING THE PATTERN NUMBER IN EACH 4-BIT NIBBLE OF THE FIRST WORD, THEN REPEATING THE DATA PATTERN (SEQUENCE OF ONE TO 16 WORDS) THROUGHOUT THE REST OF THE DATA BUFFER. PATTERN NUMBER 16 WRITES NIBBLES OF ZEROS. WHEN PATTERN NUMBER ZERO IS USED, THE ACTUAL PATTERN NUMBER WRITTEN (1 TO 15) IS PLACED IN THE NIBBLES.

PATTERN 0 THIS PATTERN NUMBER IS USED TO INDICATE ANY PATTERN NUMBER 1 TO 15 CHOSEN AT RANDOM.

PATTERN 1 WORDS IN PATTERN SEQUENCE - 1

SEQUENCE (OCTAL) 105613 SEQUENCE (HEX) 8B8B

PATTERN 2 WORDS IN PATTERN SEQUENCE - 1

SEQUENCE (OCTAL) 031463 SEQUENCE (HEX) 3333

PATTERN 3 WORDS IN PATTERN SEQUENCE - 1

SEQUENCE (OCTAL) 030221 SEQUENCE (HEX) 3091

PATTERN 4 WORDS IN PATTERN SEQUENCE - 16 (SHIFTING ONES)

SEQUENCE (OCTAL) 000001, 000003, 000007, 000017, 000037, 000077, 000177, 000377, 001777, 001777, 003777, 007777, 017777, 037777, 077777, 177777

SEQUENCE (HEX) 0001, 0003, 0007, 000F, 001F, 003F, 007F, 00FF, 01FF, 03FF, 07FF, 0FFF, 1FFF, 3FFF, 7FFF, FFFF

PATTERN 5 WORDS IN PATTERN SEQUENCE - 16 (SHIFTING ZEROS)

SEQUENCE (OCTAL) 177776, 177774, 177770, 177760, 177740, 177700, 177600, 177400, 176000, 176000, 176000, 170000, 160000, 160000, 100000, 000000

SEQUENCE (HEX) FFFE, FFFC, FFF8, FFF0, FFE0, FFC0, FF80, FF00, FE00, FC00, F800, F000, E000, C000, 8000, 0000

PATTERN 6 WORDS IN PATTERN SEQUENCE - 16

```
SEQUENCE (OCTAL) 000000, 000000, 000000, 177777, 177777, 177777, 000000, 177777, 177777, 000000, 177777, 000000, 177777, 000000, 177777, 000000,
SEQUENCE (HEX) 0000, 0000, 0000, FFFF, FFFF, FFFF, 6000, 0000, FFFF, FFFF, 0000, FFFF, 0000, FFFF, 0000, FFFF
 PATTERN 7
                                                     WORDS IN PATTERN SEQUENCE - (BINARY 1011011011011001)
  SEQUENCE (OCTAL)
                                                                              133331
                                                      B6D9
 SEQUENCE (HEX)
PATTERN 8
                                                     WORDS IN PATTERN SEQUENCE - 16
SEQUENCE (OCTAL) 052525, 052525, 052525, 125252, 125252, 125252, 052525, 125252, 125252, 125252, 125252, 125252, 125252, 125252, 125252, 125252
 SEQUENCE (HEX) 5555, 5555, 5555, AAAA, AAAA, AAAA, AAAA, 5555, 5555, AAAA, AAAA, 5555, AAAA, 5555, AAAA
 PATTERN 9 WORDS IN PATTERN SEQUENCE - 1 (BINARY 1101101101100)
  SEQUENCE (OCTAL)
                                                                               155554
  SEQUENCE (HEX)
                                                         DB6C
 PATTERN 10
                                                     WORDS IN PATTERN SEQUENCE - 16
 SEQUENCE (OCTAL) 026455, 026455, 026455, 151322, 151322, 026455, 026455, 151322, 026455, 151322, 026455, 151322, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026455, 026655, 026655, 026655, 026655, 026655, 026655, 026655, 02665
  151322
 SEQUENCE (HEX) 2D2D, 2D2D, 2D2D, D2D2, D2D2, D2D2, 2D2D, 2D2D, D2D2, D2D2, D2D2, D2D2, D2D2, D2D2, D2D2
 PATTERN 11
                                                    WORDS IN PATTERN SEQUENCE - 1 (BINARY 01101101101101)
  SEQUENCE (OCTAL)
                                                                                066666
                                                            6DD6
  SEQUENCE (HEX)
 PATTERN 12
                                                      WORDS IN PATTERN SEQUENCE - 16 (RIPPLE ONE)
  SEQUENCE (OCTAL)
                                                                                000001, 000002, 000004, 000010, 000020,
 000040, 000100, 000200, 000400, 001000,
 002000, 004000, 010000, 020000, 040000,
  100000
 SEQUENCE (HEX) 0001, 0002, 0004, 0008, 0010, 0020, 0040, 0080, 0100, 0200, 0400, 0800, 1000, 2000, 4000, 8000
```

PATTERN 13 WORDS IN PATTERN SEQUENCE - 16 (RIPPLE ZERO)

SEQUENCE (OCTAL) 177776, 177775, 177773, 177767, 177757, 177737, 177677, 177577, 176777, 176777, 175777, 173777, 167777, 157777, 137777, 077777

PATTERN 14 WORDS IN PATTERN SEQUENCE - 3

SEQUENCE (OCTAL) 155555, 133333, 155555 SEQUENCE (HEX) DB6D, B6DB, DB6D

PATTERN 15 WORDS IN PATTERN SEQUENCE - 16

SEQUENCE (OCTAL) 133331, 133331, 133331, 155554, 155554, 155554, 133331, 155554, 155554, 155554, 155554, 155554

SEQUENCE (HEX) B6D9, B6D9, B6D9, DB6C, DB6C, DB6C, B6D9, B6D9, DB6C, DB6C, B6D9, DB6C, B6D9, DB6C, B6D9, DB6C, B6D9, DB6C, B6D9, DB6C, B6D9, DB6C

PATTERN 16 THIS IS THE OPERATOR SELECTABLE PATTERN IN MANUAL INTERVENTION MODE. QUESTIONS ARE ASKED WHEN TEST #4 IS STARTED FOR THE OPERATOR TO INPUT THE NUMBER OF WORDS IN THE SEQUENCE AND THE CONTENTS OF THE WORDS.

```
. ABS. 000000
                  000
        000000
                  001
ERRORS DETECTED: 0
```

VIRTUAL MEMORY USED: 8192 WORDS (32 PAGES)
DYNAMIC MEMORY AVAILABLE FOR 72 PAGES .B:ZUDDAO=B:ZUDDAO.DOC

UDAT1 UNIBUS ADDRESSING MACRO X04.00 9-JUL-81 11:25:16 TABLE OF CONTENTS

UDA DM PROGRAM PARAMETERS TEST 4 SPECIFIC INFORMATION

3-7-9-20-21-22-32-MACRO DEFINITIONS START OF TEST CODE

RDSTAT - GET DRIVE'S REAL TIME DRIVE STATE HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED, ETC.

FREE MEMORY CHECK

.TITLE UDAT1 UNIBUS ADDRESSING

COPYRIGHT (C) 1980 DIGITAL EQUIPMENT CORPORATION, MAYNARD, MASS.

THIS SOFTWARE IS FURNISHED UNDER A LICENSE FOR USE ONLY ON A SINGLE COMPUTER SYSTEM AND MAY BE COPIED ONLY WITH THE INCLUSION OF THE ABOVE COPYRIGHT NOTICE. THIS SOFTWARE, OR ANY OTHER COPIES THEREOF, MAY NOT BE PROVIDED OR OTHERWISE MADE AVAILABLE TO ANY OTHER PERSON EXCEPT FOR USE ON SUCH SYSTEM AND TO ONE WHO AGREES TO THESE LICENSE TERMS. TITLE TO AND OWNERSHIP OF THE SOFTWARE SHALL AT ALL TIMES REMAIN IN DIGITAL.

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION.

DIGITAL ASSUMES NO RESPONSIBILITY FOR THE USE OR RELIABILITY OF ITS SOFTWARE ON EQUIPMENT WHICH IS NOT SUPPLIED BY DIGITAL.

THIS PROGRAM SHALL BE ASSEMBLED WITH THE PROGRAM DMACRO :USING A COMMAND LINE SIMILAR TO:

: UDAT1.BIN, UDAT1/C=[1,2]DMACRO, UDAT1T, UDATP, UDAT1M, UDATR, UDAT1S

: THIS IS NOT TEST4

TEST4 .ENABL ABS DMCODE UDAT1.0.714.3.0

000000

1 23 4 5 6 5		.SBTTL	.LIST ME	PROGRAM PARAMETERS B USABLE LOCATION OF UDA N	AEMODY A 1
8 9 10 11	010000 007774	HIMEM OVSTRT	= =	10000 7774	; HIGH MEMORY+1 ; OVERLAY ADDRESS LOCATION
10 11 12 13		:	OFFSETS	FOR FORMAT TRACK TABLE	
14 15 16 17 18	000000 000001 000002	FT.BUF FT.HI FT.LOW	=	0. 1. 2.	;BUFFER POINTER OFFSET ;HI ORDER HEADER OFFSET ;LOW ORDER HEADER OFFSET
19 20		:	OFFSETS	FOR FORMAT TRACK BUFFER	
21 22 23 24	000000 000400	FB.EDC	:	0. 256.	FIRST DATA WORD OFFSET :EDC WORD OFFSET
25		:	OFFSETS	FOR READ/WRITE I/O CHAIN	N TABLES
15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36	000000 000001 000002 000003 000004 000005 000006	RW.STAT RW.BUF RW.LOW RW.HI RW.CMD RW.SDI RW.ANG	=	0. 1. 2. 3. 4. 5. 6.	;STATUS AND NEXT BUFFER POINTER OFFSET ;POINTER TO DATA BUFFER ;HI ORDER EXPECTED HEADER ;LOW ORDER EXPECTED HEADER ;SDI COMMAND AND HEAD ADDRESS ;DUMMY SDI CONTROL BLOCK POINTER ;THETA FROM INDEX
36			CONSTANT	TS FOR READ AND WRITE XF	c's
38 39 40 41 42 43 44 45 46	140000 040000 100000 000000 100000 122400 013400 010000 100000 040000	WSTOP WCONT RSTOP RCONT FSTOP WREAL RREAL ECCFLG EOC BUFFLG	= = = = = = = = = = = = = = = = = = = =	140000 40000 100000 0 100000 122400 13400 10000 100000 40000	: LAST ENTRY IN CHAIN FOR WRITE : WRITE CONTINUE : LAST ENTRY IN CHAIN FOR READ : READ CONTINUE : LAST ENTRY IN CHAIN FOR FORMAT : WRITE REAL TIME ECOMMAND : READ REAL TIME COMMAND : ECC ERROR IN BUFFER BIT : END OF CHAIN ; BUFFER FULL OR EMPTY FLAG
50			HEADER (CODES	
48 49 50 51 52 53 54 55 56 57	000000 060000 030000 110000 050000 120000	HD.LBN HD.RBN HD.REV HD.BAD HD.PRV HD.XBN	= = = = = = = = = = = = = = = = = = = =	000000 060000 030000 110000 050000 120000	GOOD LBN GOOD RBN, PERHAPS UNUSED REVECTORED LBN BAD BLOCK PRIMARY REVECTORED BLOCK XBN BLOCK

UDAT1 UNIBUS ADDRESSING MACRO X04.00 9-JUL-81 11:25:16 PAGE 3-1 UDA DM PROGRAM PARAMETERS

58	140000	HD.DBN	= 140000	; DBN BLOCK
60		:	OFFSETS FOR DATA BUFF	ERS
60 61 62 63 64 65 66 67 68 69	000000 000400 000401	BF.DAT BF.ECC BF.ECC	= 0. = 256. = 257.	:DATA :ERROR DETECTION CODE :LAST 17 ECC RESIDUES
66		:	BUFFER AND READ/WRITE	CHAIN LINK SIZES
68 69 70	000401 000415 000007	WBUFLN RBUFLN LINKLN	= 257. = WBUFLN+12. = 7.	: WRITE BUFFER SIZE : READ BUFFER SIZE : LINK SIZE

	i.	XFC DEFINITION EQUATES	
000000 000001 000002 000003 000004 000005 000006 000007 000010 000011 000012 000013 000014 000015 000016 000017	SEND RCV COMPARI	= 0. = 1. = 2. = 3. = 4. = 5. = 6. = 7. = 8. = 9. = 10. = 11. = 12. = 13. = 14. = 15. = 16. = 17.	;BREAKPOINT XFC CODE ;FORMAT TRACK XFC CODE ;READ N SECTORS XFC CODE ;WRITE N SECTORS XFC CODE ;SEND SDI COMMAND XFC CODE ;RECEIVE SDI MESSAGE XFC CODE ;COMPARE DATA PATTERN TO BUFFER ;RETURN DRIVE STATUS XFC CODE ;ECHO DATA TO DRIVE XFC CODE ;DRIVE INITIALIZE XFC CODE ;WAIT FOR SECTOR OR INDEX PULSE ;READ UNIBUS MEMORY XFC CODE ;WRITE UNIBUS MEMORY XFC CODE ;DO ECC ON BUFFER XFC CODE ;SEND BUFFER TO MAINTENANCE READ COMMAND ;GET BUFFER FROM MAINTENANCE WRITE COMMAND ;CONVERT TO PHYSICAL ADDRESS XFC CODE ;TERMINATE DM PROGRAM XFC CODE
		GET STATUS OFFSETS	
000000 000000 000001 000001 000002 000002 000002	ST.MSK ST.STA ST.MOD ST.ERR ST.CON ST.C	= 0. = 1. = 1. = 2. = 2. = 2.	:UNIT NUMBER :SUBUNIT MASK :STATUS BYTE :MODE BYTE :ERROR BYTE :CONTROLLER BYTE :C BITS :RETRY COUNT/FAILURE CODE
	1	STATUS BIT DEFINITIONS	
000200 000100 000040 000020 000001 000200 000100 000040 000020 000010 002000 001000 000400	ST. OA ST. RR ST. DR ST. SR ST. PS ST. PE ST. PE ST. PE ST. WE ST. FO ST. DB ST. S7	= 200 = 100 = 40 = 20 = 1 = 200 = 100 = 40 = 20 = 100 = 1000 = 400	; ONLINE TO ANOTHER (SET IF DRIVE UNAVAILABLE) ; READJUSTMENT BIT (SET IF RECALIBRATION REQUIRED) ; DIAGNOSTIC REQUEST (SET IF DIAGNOSTIC REQUESTED) ; SPINDLE READY (SET IF SPINDLE READY) ; PORT SWITCH (SET IF PORT SWITCH IN) ; RUN/STOP SWITCH (SET IF RUN/STOP SWITCH IN) ; FATAL ERROR (SET IF FATAL ERROR OCCURRED) ; RETRIABLE ERROR (SET IF RETRIABLE ERROR OCCURRED) ; PROTOCOL ERROR (SET IF PROTOCOL ERROR OCCURRED) ; INITIALIZATION FAILURE (SET IF INIT FAILED) ; WRITE ENABLE (SET IF WRT ATTEMPTED ON PROT DISK) ; FORMATTING (SET IF FORMATTING ENABLED) ; DIAGNOSTIC CYLS (SET IF DIAG CYL ACCESS ENABLED) ; SECTOR SIZE (SET FOR 576 BYTE SECTORS)
	000001 000002 000003 000004 000005 000006 000007 000010 000011 000012 000013 000014 000015 000016 000017 000020 000021 000002 000002 000002 000002 000002 000002 000003 000000 000000 000000 000000 000000	TORMAT NEW	000000

```
GET COMMON CHARACTERISTICS OFFSETS
                                      SHALLO =
                                                                                 :SHORT TIMEOUT <3:0>
           000000
           000000
                                      SDIVER
                                                                                 ;SDI VERSION <7:4>
                                                                                 ; TRANSFER RATE <15:0>
           000000
                                      XFERRT
 67
           000001
                                      LONGTO
                                                                                 :LONG TIMEOUT <3:0>
           000001
                                             =
                                                                                 ; RETRIES <7:4>
                                      RETS
8
9
10
11
                                     RCTCPS =
           000001
                                                                                 :F/RCT COPIES <11:8>
           000001
                                                                                 :SECTOR SIZE <15:15>
                                      SS
           000002
                                     ERLEV
                                                                                 :ERROR RETRY LEVELS <7:0>
           000002
                                     ECCRSH =
                                                                                 :ECC THRESHOLD <15:8>
000003
                                     MICREV =
                                                                                 :MICROCODE REVISION NUMBER <7:0>
                                     HRDREV =
           000003
                                                                                 ; HARDWARE REVISION NUMBER <15:8>
           000004
                                     DRVID
                                                                                 :UNIQUE DRIVE ID <47:0>
                                     DRTYPE =
           000007
                                                                                 ;DRIVE TYPE IDENTIFIER <7:0>
           000007
                                                                                 :REVS/SECOND <15:8>
                                     REVS
                                              GET SUBUNIT CHARACTERISTICS OFFSETS
                                      :THESE OFFSETS ARE CURRENTLY GIVEN AS FOLLOWING THE COMMON CHARACTERISTICS
           000013
                                      SUB
                                                                                 :OFFSET TO PUT SUBUNIT AFTER COMMON;
           000000
                                     LBNCYL =
                                                                                 :NUMBER OF CYLINDERS IN LBN AREA <31:0>
           000001
                                     HICYL
                                                                                 :HI ORDER CYLINDER BITS <15:12>
           000002
                                      GRPCYL =
                                                                                 GROUPS PER CYLINDER <7:0>
           000002
                                     HILBN
                                             =
                                                                                 ;HI STARTING LBN <11:8>
           000002
                                     HIXBN
                                             =
                                                                                 :HI STARTING XBN <15:12>
                                      TRKGRP =
           000003
                                                                                 :TRACKS PER GROUP <7:0>
           000003
                                     HIRBN =
                                                                                 ;HI STARTING RBN <11:8>
           000003
                                     HIDBN =
                                                                                 :HI STARTING DBN <15:12>
           000004
                                     RBNTRK =
                                                                                 :RBNS PER TRACK <6:0>
           000004
                                             =
                                     RM
                                                                                 : REMOVABLE MEDIA <7:7> 1=REMOVEABLE
           000005
                                     DATPRE =
                                                                                 ;DATA PREAMBLE SIZE IN WORDS <7:0>
                                     HDRPRE =
                                                                                 ; HEADER PREAMBLE SIZE IN WORDS <15:8>
           000005
                                     MEDTYP =
           000006
                                                                                 :MEDIA TYPE <31:0>
                                                                                 :FCT COPY SIZE <15:0>
:LBNS PER TRACK <7:0>
           000010
                                     FCTSIZ =
           000011
                                     LBNTRK =
                                                                                 :GROUP OFFSET (SECTORS) <15:8>
:LBNS IN HOST AREA <31:0>
           000011
                                             =
                                      GRPOFF
           000012
                                                       10.
                                     LBNHST =
                                                                                 :RCT COPY SIZE <15:0>
:CYLS IN XBN AREA <15:0>
:CYLS IN DBN AREA <15:8>
           000014
                                      RCTCSZ =
           000021
                                     XBNCYL =
           000022
                                     DBNCYL =
                                                       18.
                                              UNIT CODES
           000001
                                     UNITO
                                              =
                                                                                 :UNIT ZERO CODE
           000002
                                              =
                                     UNIT1
                                                                                 ;UNIT ONE CODE
           000004
                                     UNIT2
                                              =
                                                                                 :UNIT TWO CODE
           000010
                                     UNIT3
                                                                                 :UNIT THREE CODE
                                              BIT MASK DEFINITIONS
           177400
                                     HIBYTE =
                                                       177400
                                                                                 :HIGH BYTE MASK
                                                       000377
           000377
                                     LOBYTE =
                                                                                 : LOW BYTE MASK
           007777
                                                                                 :HI BYTE, HI NIBBLE MASK
:HI BYTE, LO NIBBLE MASK
                                     HBHINB =
                                                       170377
                                     HBLONB =
           170377
```

UDAT1	UNIBUS A	DDRESSING	MACRO	X04.00	9-JUL-81	11:25:16	PAGE	5-1
UDA DM	PROGRAM	PARAMETER	25					

58 59	177417 177760	LBHINB LBLONB	= =	177417 177760	
58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73	000001 000002 000004	TIMEOUT HEADER REVECT	= -	1. 2. 4.	
65 66 67	000002 000004 000010	WRONG FRAME CHECK	=	2. 4. 8.	
69 70 71	000001 000002	toobic rom	=	1:	
72			BIT	MASK	
74 75	000001 000002	LARGE OVERFL	=	1.	

:LO BYTE, HI NIBBLE MASK :LO BYTE, LO NIBBLE MASK

; DRIVE TIMEOUT CODE ; HEADER COMPARE FAILURE CODE ; REVECTOR NEEDED CODE

;FIRST WORD NOT START FRAME CODE ;FRAMING ERROR CODE ;CHECKSUM ERROR CODE

:NUMBER OF WORDS EXCEEDS 7064 :DM BUFFER ADDRESS IS LESS THAN 714


;BLOCK NUMBER TOO LARGE ;SECTOR NUMBER LARGER THAN 16 BITS

1		:MAINTANENC	E READ/WRITE REQUEST N	UMBERS	
4 00 5 00 6 00 7 00 8 00 9 00 10 00 11 00 12 00 13 00 14 00 15 00	00000 00001 00002 00003 00004 00005 00006 00007 00010 00011 00012 00013	T1MSIZ = T2DLL = T2CMD = T4MPRM = T4UPRM = T4BB1 = T4BB2 = T4SOFT = T4SEEK = T4MXFR = UTOTST = ERRMES = ERRMC = MESSAG = DONE =	0. 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13.	GET FREE MEMORY PARAMETE DOWNLINE LOAD DRIVE DIAG MANUAL INTERVENTION TEST GET MASTER PARAMETERS FROM GET BAD BLOCKS (1 THRU 1) GET REST OF BAD BLOCKS (2) ADD TO SOFT ERROR AND ECT ADD TO SEEK COUNT ADD TO MEGABITS READ AND GET UNITS TO TEST PRINT ERROR MESSAGE TEST 4 ERROR REPORTING INFORMATION MESSAGE MARK DM PROGRAM AS NO LO	NOSTIC 2 PROTOCOL OM SW QUESTIONS 1 HW QUESTIONS 4) 15 AND 16) C COUNT
19		: OTH	HER BIT DEFINITIONS		
22 00 23 00 24 00 25 00	00001 00002 00004 00100 00400 00000	RCVRDY = ATTN = RCVERR = AVAIL = XMTERR = RWRDY =	1 2 4 100 400 100000		N DRIVE SIGNALS XFC
28 29		: SDI	COMMANDS AND RESPONSE	S	
38 00 39 00 40 00 41 00 42 00 43 00 44 00 45 00	00204 00006 00201 00213 00014 00005 00207 00210 00011 00216 00176 00176 00175 00170 00167 00366	DISCON = ERECOV = CHGMOD = DRVONL = DRVCLR = GETCHR = GETSUB = IRECLB = INSEEK = COMPLT = UNSSUC = CHRRES = SBCRES = STSRES = ECHOC = ERR	204 6 201 213 14 5 207 210 11 216 12 176 175 170 167 366 350 ROR CODES	DISCONNECT DRIVE ERROR RECOVERY CHANGE MODE DRIVE ONLINE DRIVE RUN DRIVE CLEAR OPCODE GET CHARACTERISTICS GET SUBUNIT CHARACTERIS RECALIBRATE INITIATE SEEK SUCCESSFUL COMPLETION UNSUCCESSFUL COMPLETION GET CHARACTERISTICS RES GET SUBUNIT CHARACTERIS GET STATUS RESPONSE DIAGNOSTIC ECHO COMMAND	PONSE TICS RESPONSE
50 00 51 00 52 00 53 00	00000 00400 01000 01400	FTLSYS = FTLDEV = ERHARD = ERSOFT =	0 400 1000 1400	: SYSTEM FATAL ERROR : DEVICE FATAL : HARD ERROR : SOFT ERROR	

1	.SBTTL	TEST 4 S	SPECIFIC INFORMATION	
2		TEST 4 S	SPECIFIC INFORMATION	
4				
6		CONSTANTS		
8 00037		=	255.	; NUMBER OF WORDS IN SECTOR TO FILL
9 00010	1 TLEN.U		69. U.LGRP+1	; INITIAL EDC VALUE ; UNIT PARAMETER LENGTH
11 00771 12	7 FIRSTU	-	HIMEM-TLEN.U	: LOCATION OF FIRST UNIT PARAMETER BLOCK
12 13 14		UNIT PAR	RAMETER OFFSETS	
15 00000 16 00000	0 U.NEXT	=	0. U.NEXT+1	; POINTER TO NEXT UNIT (RING LINKED LIST) ; 4 WORDS OF SUBUNIT PARAMETER POINTERS
17 00000	5 U.TIMO	-	U.SUBP+4	: AREA TO STORE VARIOUS TIMEOUT VALUES
17 00000 18 00000 19 00000	1 U.SUBP 5 U.TIMO 6 U.RWTO 7 U.SEEK	=	U.TIMO+1 U.RWTO+1	; READ/WRITE TIMEOUT AREA ; NUMBER OF SEEKS ISSUED
20 00001 21 00001	U.NFUN	5	U.SEEK+1 U.NFUN+1	; NEXT FUNCTION ADDRESS (FOR DEFERRED CALLS) ; PATTERN NUMBER TO WRITE
22 00001	2 U.CCNT		U.PAT+1	; CURRENT COUNT OF T/G LOOPS
23 00001 24 00001	U.PCTG U.CTRK	-	U.CCNT+2 U.PCTG+1	: POINTER TO CURRENT TRACK OR GROUP : TRACK COUNT FOR GROUP OPERATIONS
25 00001	6 U.NSEC	=	U.CTRK+1	: NUMBER OF SECTORS R/W THIS TRY
26 00001 27 00002	7 U.MSEC U.TSEC	=	U.NSEC+1	NUMBER OF SECTORS TO BE R/W NUMBER OF SECTORS TO BE R/W THIS OP
28 00002 29 00002	1 U.CSEC	=	U.TSEC+1 U.CSEC+1	: COUNT OF SECTORS R/W SO FAR : UNIT MASK FOR XFC CALLS (0001 - 1000)
30 00002	3 U.WRIT	=	U.MASK+1	; WRITE PROTECTION STATUS
31 00002 32 00002	U.ELEV U.RTRY		U.WRIT+1 U.ELEV+1	CURRENT ERROR RECOVERY LEVEL MAXIMUM NUMBER OF READ RETRIES
33 00002	6 U.MLEV	=	U.RTRY+1	; MAXIMUM NUMBER OF ERROR RECOVERY LEVELS
34 00002 35 00003	U.SDIS		U.MLEV+1 U.ECCT+1	: ECC THRESHOLD : SDI SHORT TIMEOUT
36 00003 37 00003	1 U.SDIL	=	U.SDIS+1 U.SDIL+1	: SDI LONG TIMEOUT : MASK TO WRITE PROTECT READ-ONLY DRIVES
38 00003	U.PARM	=	U.WPRT+1	; UNIT PARAMETER WORD
39 00003 40 00003		=	U.PARM+1 U.SUBU+1	: SUBUNIT OFFSET (0 - 3) : MASTER L/DBN
41 00003	7 U.CBN	=	U.MBN+2	; CURRENT L/DBN FOR START OF CHAIN
42 00004 43 00004	3 U.COPY	=	U.CBN+2 U.RBN+2	RBN TO BE READ/WRITTEN IF LBN REVECTORED NUMBER OF RCT COPIES ON EACH SUBUNIT
44 00004 45 00004		=	U.COPY+1 U.CCOP+1	CURRENT RCT COPY THAT WE'RE WORKING ON ERROR (IF ANY) ON THE LAST R/W
46 00004	6 U.RVER	=	U.RWER+1	; ERROR THAT OCCURRED BEFOR THE REVECTOR OPERATION
47 00004 48 00005		=	U.RVER+1 U.SNUM+4	: 4 WORDS THAT HOLD THE SUBUNIT LOGICAL NUMBERS : CURRENT CYLINDER
49 00005	5 U.CGRP	=	U.CCYL+2	
51 00006		=	U.CGRP+1 U.LCYL+2	: LAST CYLINDER SEEKED TO : LAST GROUP SEEKED TO
50 00005 51 00006 52 53 54 55 00000 56 00000		SUBUNIT	PARAMETER OFFSET	
54 00000	S.PARM	=	0.	: SUBUNIT PARAMETER WORD
	1 S.SDCL	=	S.PARM+1	: STARTING DIAGNOSTIC CYLINDER
57 00000	S.PAT	- EX	S.SDCL+2	; PATTERN TO USE FOR WRITES

58	000004	S.TRKL	=	S.PAT+1	NUMBER OF SECTORS IN ONE TRACK
59	000005	S.SCHR	=	S.TRKL+1	POINTER TO SUBUNIT CHARACTERISTICS
60	000006	S.MEGR	=	S.SCHR+1	SECTORS READ (UP TO 245)
61	000007	S.MEGW	=	S.MEGR+1	SECTORS WRITTEN (UP TO 245)
62	000010	S.BADP	=	S.MEGW+1	POINTER TO BAD BLOCK AREA
63	000011	S.BESS	=	S.BADP+1	START OF BEGIN/END SETS
64	000011	3.5533		3.13/10/ 1	START OF BEOTH END SETS
58 59 60 61 62 63 64 65 66 67 68 69				TRACK/GROUP LIMITS ARE LOWING FIELDS ADDED TO	THE SUBUNIT PARAMETERS HAVE THE
49	000011	S.MCNT	_	C DECC	MAYIMIM TRACK/CROUR COUNT
40			=	S.BESS	MAXIMUM TRACK/GROUP COUNT
64	000013	S. I GOF	=	S.MCNT+2	ORIGINAL TRACK/GROUP OFFSET
10	000015	S.TGSS	=	S.TGOF+2	START OF TRACK/GROUP SETS

1			DUMMY SDI CONTROL	BI DCK DEESETS
3			DOINT SDI CONTROL	
5	000001 000002	D.LIMT D.SCHR	= 1 2	DUMMY SDI SEARCH LIMIT DUMMY POINTER TO SUBUNIT CHAR-5
6				
8			UNIT PARAMETER BIT	(U.PARM(R5))
10	100000	DROP	= 100000	: DROP BIT (SET IF UNIT OR SUBUNIT DROPPED)
11	040000 020000	INITW RESEEK	= 40000	: INITIAL WRITE (SET IF INITIAL WRITE IN PROG) : IF 1, INDICATES THAT A SEEK IS NECESSARY
12	010000	DIREC	= 10000	: DIRECTION (SET IF SEQUENTIAL ACCESSES DECREASING)
14	004000 002000	145 4303	= 4000 = 2000	: SET IF SEQUENTIAL SEEKS MOVED TO NEW SUBUNIT : SEEK IN PROGRESS - SET IF TRUE
16 17	001000 000400	FTIME	= 1000	: FIRST TIME FLAG - SET FOR INIT CODE : REVECTOR BIT (SET IF BLOCK REVECTORED)
18	000200	RBNBN	= 200	: SEE IF WORKING ON RBN
19	000100 000040	REDWRT REVINP	= 100 = 40	REDWRT (READ OR WRITE IN PROGRESS SET IF WRITE)
21	000020	DATERR	= 20	: DATA ERROR IF SET
23	000004 C00001	RE TRY RCLB	= 1	: IF CLEAR, START RETRIES AT ZERO : RECALIBRATION BIT (SET IF RECALIBRATE JUST DONE)
18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40			SUBUNIT PARAMETER	BITS (S PARM(R4))
26				
28	020000 010000	DCYLS ECCCHK	= 20000 = 10000	: DIAGNOSTIC CYLINDER FLAG (SET IF DBNS) : 1 IF ECC CORRECTION ALLOWED MASTER BITS
29	004000	RONLY	= 4000	; READ ONLY (SET IF READ ONLY)
31	002000 001000	WONLY RTRIES	= 2000 = 1000	; WRITE ONLY (SET IF WRITE ONLY) ; 1 IF RETRIES ALLOWED
32	000200	ONLYCL	= 200	: SET IF ONLY CYLINDERS SPECIFIED : USED DURING SETUP ONLY
34	000100	SEQLEK		: SEQUENTIAL SEEK (START UP TESTING ONLY)
35	000040 000020	00000	= 40 = 20	: BEGIN/END SETS (USED IF SET) : TRACKS OR GROUPS (TRACK IF SET)
37	000010	WCHECK	= 10	: WRITE CHECK BIT (IF SET, WRITE CHECK WILL BE DONE)
39	000004	WCHKAL	= 4	WCHECK IS ALSO USED FOR THE UNIT PARAMETERS ; SET IF WRITE CHECK ALWAYS TO BE DONE
40	000002		= 2	: DATA COMPARE (SET IF DATA COMPARE TO BE DONE)
41	000001	DCMPAL	= 1	DATEMP IS ALSO USED FOR THE UNIT PARAMETERS ; SET IF DATA COMPARE ALWAYS TO BE DONE

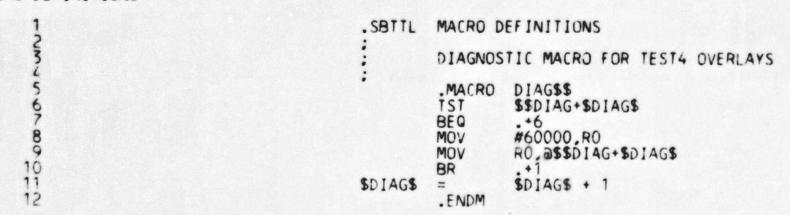

1 2			
234			
5 6 7 8 9 10 11			
89			
10			

MESSAGE CONTROL TABLE MACRO

.MACRO MSG CMDBUF, CMDSZ, RPLBUF, RPLSZ, SUCCOM
.WORD CMDBUF ;ADDRESS OF COMMAND
.WORD CMDSZ ;SIZE OF COMMAND IN BYTES
.WORD RPLBUF ;ADDRESS OF REPLY
.WORD RPLSZ ;SIZE OF REPLY IN WORDS
.IF NB NUMBER
.WORD SUCCOM ;SUCCESSFUL COMPLETION CODE

.ENDC

SEQ 0035

.ENDM

BCC .+2 LAB..

1		:	PUSH REGISTER MACRO
3			.MACRO PUSH R9 .IRP X, <r9></r9>
6			.ENDR
9			POP REGISTER MACRO
11 12			.MACRO POP R9 .IRP X, <r9></r9>
14			.ENDR

MOV X,-(SP)

MOV (SP)+,X

```
: ERROR MACROS
                                        THESE MACROS ARE CALLED TO REPORT ERRORS TO THE HOST PROGRAM.
                                         THE MACRO NAMES ARE : ERRSF, ERRDF, ERRHRD, ERRSFT. EACH RESULTS IN THE HOST
                                         BEING REQUESTED TO REPORT THE ERROR
                                                             (MS$) MESSAGE POINTER
                                         : ARGUMENTS:
                                                             (P1$) PARAMETER #1
                                                             (P2$) PARAMETER #2
8910123145167890122324567890333333333333344444444444444551
                                                             (P3$) PARAMETER #3
                                                             (P4$) PARAMETER #4
                                                             (P5$) PARAMETER #5
                                                             (P6$) PARAMETER #6
                                                             (P7$) PARAMETER #7
                                                             (P8$) PARAMETER #8
                                        THE MESSAGE POINTER MUST POINT TO AN ADDRESS IN THE OVERLAY "MS" IMMEDIATELY FOLLOWING THE MAIN CODE. ANY ADDRESS MODE MAY BE USED (E.G. #MS1, @R2).
                                         THE ADDRESS MUST CONTAIN AN ASCII FORMAT STRING TO DETERMINE THE MESSAGE
                                        : TO PRINT.
                                        THE PARAMETER ARGUMENTS ARE OPTIONAL. THEY SHOULD BE SUPPLIED ONLY WHEN THERE IS DATA TO BE PASSED TO THE HOST THAT WILL BE USED IN PRINTING THE
                                        MESSAGE. THESE PARAMETER ARGUMENTS ARE THE ADDRESS OF DATA TO BE PASSED
                                        :USING ANY ADDRESSING MODE DESIRED.
                                        :ALL REGISTERS ARE RETURNED UNCHANGED. IT SHOULD BE NOTED THAT ARGUMENTS
                                        CONTAINING SOMETHING OTHER THAN A REGISTER NAME (E.G. #100 OR MEMADR)
                                        :ASSEMBLE TO INSTRUCTIONS THAT SAVE AND RESTORE A REGISTER ON THE STACK.
                                                  .MACRO ERRSF MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$
                                                  .NARG ARGS$
                                                  .RADIX 10
                                                 ERROR$ 0,MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$,\ERRN
                                                  . ENDM
                                                  .MACRO ERROF MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$
                                                  NARG ARGS$
                                                  .RADIX 10
                                                 ERROR$ 1,MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$,\ERRN
                                                  . ENDM
                                                  .MACRO ERRHRD MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$
                                                  .NLIST
                                                  .NARG ARGS$
                                                  RADIX 10
                                                 ERROR$ 2.MS$.P1$.P2$.P3$.P4$.P5$.P6$.P7$.P8$.\ERRN
                                                  .LIST
                                                  . ENDM
                                                  .MACRO ERRSFT MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$
                                                  .NARG ARGS$
                                                  RADIX 10
                                                 ERROR$ 3,MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$,\ERRN
                                                  . ENDM
```

```
:THE FOLLOWING MACRO ACTUALLY PROCESSES THE ERROR CALL TO THE HOST PROGRAM
                                                   .MACRO ERROR$ ET$,MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$,ERRN$
                                                     .RADIX 8
                                                    PRMS=ARGS$-1
                                                     . IF LT. <PRMS>
                                                       .ERROR: NOT ENOUGH ARGUMENTS IN ERROR CALL
 89
                                                    REGS$=-1
101123456789012334567890412344444444444555555
                                                    .IIF GE. <PRMS-8.>,PARGS. P8$
.IIF GE. <PRMS-7.>,PARGS. P7$
                                                    .IIF GE. <PRMS-6.>, PARGS. P6$
.IIF GE. <PRMS-5.>, PARGS. P5$
                                                     .IIF GE. <PRMS-4.>, PARGS. P4$
                                                     .IIF GE, <PRMS-3.>, PARGS. P3$
                                                     .IIF GE, <PRMS-2.>, PARGS. P2$
                                                     .IIF GE, <PRMS-1.>, PARGS. P1$
                                                     . IF GE REGS$
                                                       RSTR$ \REGS$
                                                     .ENDC
                                                     .RADIX 10
                                                     .LIST
                                                                                                             CALL RERROR
                                                                                                                               :ERROR # ERRNS".
                                                     .NLIST
                                                     .RADIX 8
                                                     .LIST
                                                                                                             .WORD <PRMS*2000>+<ET$*400>+ERRN
                                                                                                             . WORD MS$
                                                     .NLIST
                                                    ERRN=ERRN+1
                                                   . ENDM
                                                   .MACRO PARGS. , ADDR$
                                                     .NTYPE PTYPE$, ADDR$
                                                     . IF EQ. <PTYPE$870>
                                                       .IIF EQ. <PTYPE$&7>-REGS$, RSTR$ \REGS$
                                                       .LIST
                                                                                                             MOV ADDR$,-(SP)
                                                       .NLIST
                                                     . IFF
                                                       .IF EQ, <PTYPE$&7>-1
                                                                                        ;PICK A REGISTER TO USE
                                                                                        :SELECT R2 IF R1 IS USED IN PARAMETER FETCH
                                                         REGU$=2
                                                       . IFF
                                                         REGU$=1
                                                                                        :OTHERWISE USE R1
                                                       .ENDC
                                                       . IF NE, < REGUS-REGS$>
                                                                                        : IF REGISTER NOT ALREADY SAVED
                                                         . IF GE , REGS$
                                                           RSTR$ \REGS$
                                                                                        RESTORE CURRENT SAVED REGISTER
                                                          .ENDC
                                                         SAVR$ \REGU$
                                                                                        : THEN SAVE SELECTED REGISTER
                                                        .ENDC
                                                       GETP$ \REGS$, ADDR$
                                                     .ENDC
                                                   . ENDM
```

.MACRO SAVR\$ REGN

.NLIST REGS\$=REGN .ENDM

.MACRO RSTR\$ REGN

.NLIST REGS\$=-1 .ENDM


.MACRO GETP\$ REGN.ADDR\$

.NLIST

MOV R'REGN, SAVREG

MOV SAVREG, R'REGN

MOV ADDR\$, R'REGN MOV R'REGN, - (SP)

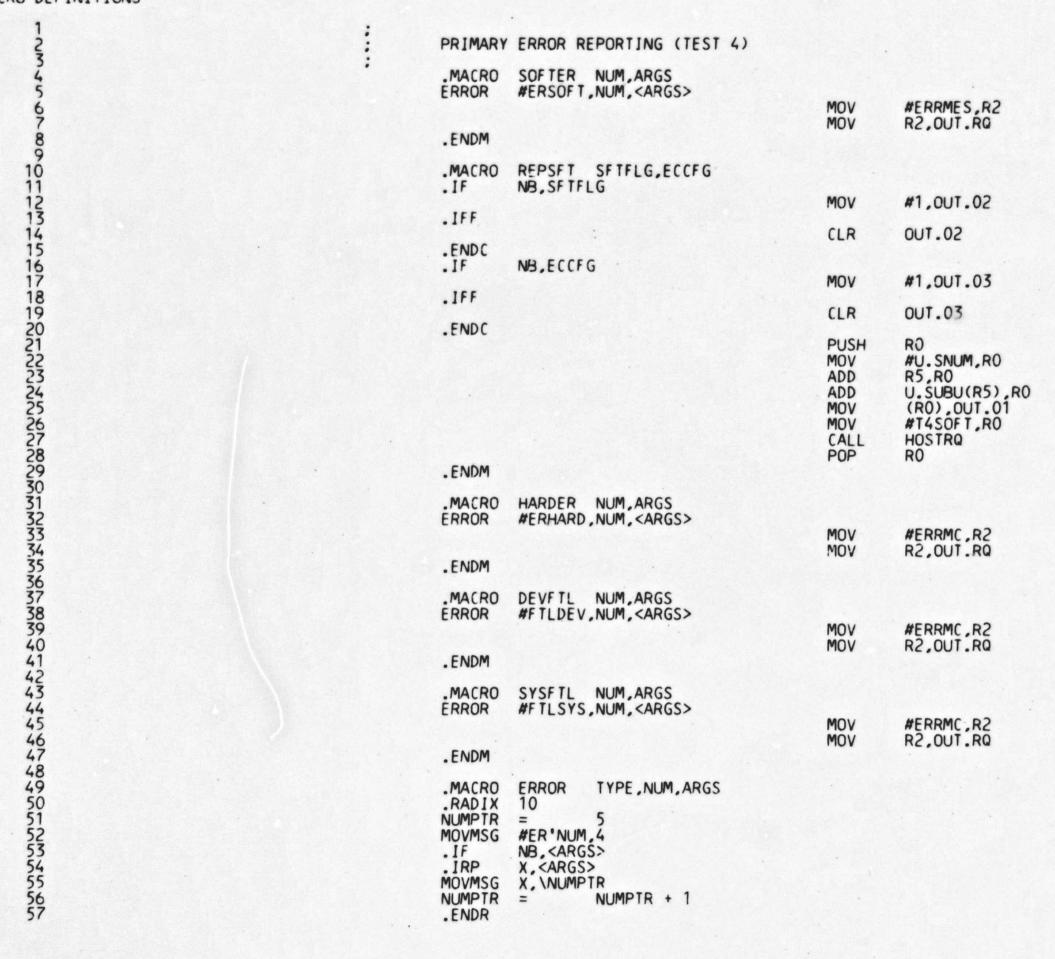

MACRO DEFINITIONS						
58 59 60 61		RADIX		MOV BIS MOV	#NUM,OUT.02 TYPE,OUT.02 #.,OUT.01	
63 64	:Ei	NDM				
65 66 67 68	NUMPTR = .II		CERROR STNUM, ARGS 10 STNUM X, <args></args>			
69 70 71 72 73	NUMPTR = .EI	OVMSG) ENDR RADIX ENDM	X, <args> X, \NUMPTR NUMPTR + 1</args>			
58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93	.R/ .I/ MO/ NUMPTR =	RADIX IRP) OVMSG)	ERRORC ARGS 10 X, <args> X,\NUMPTR NUMPTR + 1</args>			
80 81 82 83	.EI	ENDR RADIX ENDM				
84 85	.M	MACRO I	MOVMSG ARG, INDX			
86 87	.11		LT, INDX-10	MOV	ARG,OUT.0'INDX	
88 89 90 91	.EI	IFF ENDC ENDM		MOV	ARG,OUT.'INDX	
92 93 94 95	NDI	FRR F	ENDERR POS NB.POS POS			
97 98 99	.EI	FF DERR NDC NDM	NUMPTR			
101 102	.M.	MACRO I	NDERR POS NE.POS			
103 104		[FF		BIS	#POS,ERRPOS	; SET THE POSITION
105 106 107	.EI	NDC NDM		CLR	ERRPOS	: CLEAR THE POSITION
108	. ME	SSAGE I	REPORTING MACRO			
94 95 96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114	.M. .R. NUI MO	MACRO	MSSG NUM, ARGS 10 = 3 #MS'NUM, 2			

MACRO	O DEFINITIONS	(04.00 9-JUL-81 1	1:25:16	PAGE 16-2		
	115 116 117 118 119		.IF .IRP MOVMSG NUMPTR .ENDR .ENDC	NB, <args> X, <args> X, \NUMPTR = NUMPTR + 1</args></args>		
	116 117 118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136				PUSH MOV ADD ADD MOV MOV CALL	#U.SNUM,R1 R5,R1 U.SUBU(R5),R1 (R1),OUT.01 #MESSAG,R0 HOSTRQ
	129 130 131		.RADIX .ENDM		POP	<r1,r0></r1,r0>
	140 141		.MACRO .RADIX NUMPTR MOVMSG .IF .IRP MOVMSG NUMPTR .ENDR	MSSGE NUM, ARGS 10 = 3 #'NUM, 2 NB, <args> X, <args> X, \NUMPTR = NUMPTR + 1</args></args>		
	142 143 144 145		.ENDC		PUSH MOV CALL POP	<ro,r1> #MESSAG,RO HOSTRQ <r1,ro></r1,ro></ro,r1>
	147 148		.RADIX .ENDM			

```
: RETURN DRIVE STATUS MACRO WITH ERROR REPORTING
                                                            .MACRO DSTAT, LABS, E1, E2
                                                           .NLIST
.NLIST
.LIST
45678910112314516789012
                                                                       MEB
                                                                       ME
                                                            .LIST
                                                                                                        : GET DRIVE STATUS
                                                            CALL
                                                                       RDSTAT
                                                                                                          SEE IF ANY ERRORS
IF NO ERROR, BRANCH
SEE IF XMIT ERROR
IF SO, BRANCH
REPORT INVALID STATUS ERROR
                                                            BIT
                                                                       #10000,R1
                                                            BEQ
                                                                       2$
                                                                       #4000,R1
                                                            BIT
                                                            BEQ
                                                                       1$
                                                           ERRHRD
                                                                       E1
                                                                                                           BRANCH TO DONE
                                                                       LAB$
                                                            BR
                                                                                                        : REPORT XMIT ERROR
                                                            ERRHRD
                                                 15:
                                                                       E2
                                                                       LAB$
                                                            BR
                                                                                                           BRANCH TO DONE
                                                 28:
                                                           .NLIST
.NLIST
.LIST
                                                                       MEB
                                                            .LIST
                                                            . ENDM
```

SEQ 0044

```
SDI INTERCHANGE WITH DRIVE WITH ERROR REPORTING
                                                     .MACRO TALKX ERRLAB, E1, E2
                                                     .NLIST
                                                               MEB
                                                               ME
                                                     .LIST
67 89 10 11 123 145 167 189 201 1
                                                     .LIST
                                                                                             : INITIATE SDI INTERCHANGE
                                                     CALL
                                                               TALKER
                                                                                            : SEE IF ERROR OCCURRED
: IF NOT, BRANCH
: IF SO, BRANCH
                                                               R3
12$
                                                     BEQ
                                                     BPL
                                                               11$
                                                     ERRHRD E1: SEND COMMAND ERROR
                                                     BR
                                                               ERRLAB
                                                     ERRHRD EZ; RECEIVE COMMAND ERROR
                                           11$:
                                                     BR
                                                               ERRLAB
                                           12$:
                                                     .NLIST
                                                               ME
                                                     .NLIST
                                                     .LIST
                                                               MEB
                                                     .LIST
.ENDM
```

SBTTL START OF TEST CODE
THE FOLLOWING IS FOR DEBUG PURPOSES ONLY. CAN BE NOP OR BREAKPOINT.

CLR RO
CRANGE TO BREAKPOINT FOR DEBUG
STACK
POINTER
BRANCH OVER SUPPORT CODE

2 000720			.SBTTL RDSTAT:	RDSTAT	- GET DRIVE'S REAL TIME	DR.	IVE STATE
4				DRIVE S RETURNE	TATUS D IN DM REGISTER 1		
7 000720 000720	100463			PUSH	<r3,r0></r3,r0>	:	SAVE R3 AND RO MOV R3,-(SP)
000721 8 000722 9 000724	100467 104203 060007	000003	STATLP:	MOV XFC	#3,R3 STATUS		ALLOW ONLY 3 ERRORS GET DRIVE'S STATUS MOV RO,-(SP)
10 000725 11 000727 12 000731 13 000732 14 000733	103201 102201 010737 117403 050724	014000 000400		BIC BIT BEQ DEC BNE	#14000,R1 #XMTERR,R1 STATOK R3 STATLP		CLEAR ERROR PASSING BITS CHECK XMIT ERRORS IF NO ERRORS, BRANCH DECREMENT TRANSMIT ERROR COUNT IF ERROR COUNT INCOMPLETE, BRANCH
15 000734 16 000736	104201	010000		MOV BR	#10000,R1 STATEX	:	FLAG AS TRANSMIT ERROR BRANCH
17 000737 18 000741 19 000742 20 000743	102201 050746 117403 050724	000004	STATOK:	BIT BNE DEC BNE	#RCVERR,R1 STATEX R3 STATLP		RECIEVER ERRORS IF VALID, BRANCH DECREMENT ERROR COUNT IF ERROR COUNT NON-ZERO, BRANCH
21 000744 22 000746	104201	014000	STATEX:	MOV	#14000,R1 <r0,r3></r0,r3>	:	FLAG AS INVALID STATUS ERROR RESTORE RO. R3
000746 000747 23 000750	104267 104263 000000			RETURN			MOV (SP)+,RO MOV (SP)+,R3 RETURN TO CALLING MODULE

2 000751		.SBTTL HOSTRQ:	HOSTRQ - HOST REQUEST - REPORT	ERRORS, MEGABYTES TRANSFERRED, E	ETC.
456		:CLEAR	EQUEST BUFFER TO HOST AND WAIT F ARGUMENT AREA OF OUT BUFFER IN P KT HOSTRQ (ALL.	OR RESPONSE. REPARATION	
8 10 11		INPUTS	RO - HOST REQUEST NUMBER OUT BUFFER LOADED WITH DATA		
11 000751 000751 000752 100461 000753 100462 13 000754 104070 14 000756 104207 15 000760 104201 16 000762 060016 17 000763 115001 18 000764 050756 19 000765 104207 20 000767 104201 21 000771 22 000772 104207 23 000774 104201 24 000776 114002 25 000777 100272 26 001000 117401 27 001001 28 001002 001004 104267 29 001005 000000	001044 000036 001007 000034	SNDAGN:	MOV RO,OUT.RQ MOV #OUT.RQ,RO MOV #BUFSIZ,R1 XFC MRD TST R1 BNE SNDAGN MOV #IN.RQ,RO MOV #BUFSIZ,R1 XFC MWR MOV #OUT.01,RO MOV #OUT.29-OUT.01,R1 CLR R2 MOV R2,(RO)+ DEC R1 BPL CLRBUF POP <r2,r1,r0></r2,r1,r0>	MOV RO. MOV R1. MOV R2. STORE REQUEST NUMBER IN BUFFER SEND BUFFER TO HOST CHECK FOR ERROR IF ERROR, TRY AGAIN WAIT FOR RESPONSE FROM HOST CLEAR ARGUMENT WORDS IN BUFFER MOV (SE	-(SP) -(SP) R

```
:STORAGE AREA FOR MAINTENANCE WRITE AND READ BUFFERS
                                                                                                                                                                                                                                                                                                                                                                                  :OUT BUFFER - DATA TO SEND TO HOST
                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     ## HOST REQUEST CODE

## DATA ARGUMENT 1

## DATA ARGUMENT 2

## DATA ARGUMENT 3

## DATA ARGUMENT 5

## DATA ARGUMENT 6

## DATA ARGUMENT 7

## DATA ARGUMENT 7

## DATA ARGUMENT 8

## DATA ARGUMENT 10

## DATA ARGUMENT 10

## DATA ARGUMENT 11

## DATA ARGUMENT 12

## DATA ARGUMENT 13

## DATA ARGUMENT 15

## DATA ARGUMENT 15

## DATA ARGUMENT 15

## DATA ARGUMENT 16

## DATA ARGUMENT 17

## DATA ARGUMENT 17

## DATA ARGUMENT 19

## DATA ARGUMENT 20

## DATA ARGUMENT 21

## DATA ARGUMENT 21

## DATA ARGUMENT 22

## DATA ARGUMENT 23

## DATA ARGUMENT 25

## DATA ARGUMENT 26

## DATA ARGUMENT 27

## DATA ARGUMENT 27

## DATA ARGUMENT 28

## DATA ARGUMENT 29

## DATA ARGUMENT 29
                                                                                                                                                                                                      OUT BUFFER - DA

OUT .RQ: .WORD 0

OUT .O1: .WORD 0

OUT .O2: .WORD 0

OUT .O3: .WORD 0

OUT .O4: .WORD 0

OUT .O5: .WORD 0

OUT .O6: .WORD 0

OUT .O7: .WORD 0

OUT .O8: .WORD 0

OUT .O9: .WORD 0

OUT .O9: .WORD 0

OUT .10: .WORD 0

OUT .11: .WORD 0

OUT .12: .WORD 0

OUT .13: .WORD 0

OUT .14: .WORD 0

OUT .15: .WORD 0

OUT .16: .WORD 0

OUT .16: .WORD 0

OUT .17: .WORD 0

OUT .18: .WORD 0

OUT .19: .WORD 0

OUT .19: .WORD 0

OUT .20: .WORD 0

OUT .21: .WORD 0

OUT .22: .WORD 0

OUT .23: .WORD 0

OUT .24: .WORD 0

OUT .25: .WORD 0

OUT .26: .WORD 0

OUT .27: .WORD 0

OUT .28: .WORD 0

OUT .29: .WORD 0

OUT .29: .WORD 0
5 001006 000000
6 001007 000000
7 001010 000000
8 001011 000000
10 001013 000000
11 001014 000000
12 001015 000000
13 001016 000000
14 001017 000000
15 001020 000000
16 001021 000000
17 001022 000000
18 001023 000000
20 001025 000000
21 001026 000000
22 001027 000000
23 001030 000000
24 001031 000000
24 001031 000000
25 001032 000000
26 001033 000000
27 001034 000000
28 001035 000000
29 001036 000000
29 001036 000000
30 001037 000000
30 001037 000000
31 001040 000000
32 001041 000000
33 001042 000000
34 001043 000000
35 001045 000000
40 001046 000000
41 001047 000000
42 001050 000000
43 001051 000000
43 001051 000000
45 001053 000000
47 001055 000000
48 001056 000000
49 001057 000000
51 001061 000000
51 001061 000000
52 001062 000000
53 001063 000000
55 001065 000000
                                                                                                                                                                                                                                                                                                                                                                               : IN BUFFER - DATA RECEIVED FROM HOST
                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             HOST REQUEST CODE (ECHO)
DATA ARGUMENT 1
DATA ARGUMENT 2
DATA ARGUMENT 3
DATA ARGUMENT 4
DATA ARGUMENT 5
DATA ARGUMENT 6
DATA ARGUMENT 7
DATA ARGUMENT 8
DATA ARGUMENT 9
DATA ARGUMENT 10
DATA ARGUMENT 11
DATA ARGUMENT 11
DATA ARGUMENT 12
DATA ARGUMENT 12
DATA ARGUMENT 13
DATA ARGUMENT 14
DATA ARGUMENT 15
DATA ARGUMENT 15
DATA ARGUMENT 16
DATA ARGUMENT 17
DATA ARGUMENT 17
DATA ARGUMENT 17
DATA ARGUMENT 19
                                                                                                                                                                                                          IN.RQ: .WORD 0
IN.01: .WORD 0
IN.02: .WORD 0
IN.03: .WORD 0
IN.03: .WORD 0
IN.04: .WORD 0
IN.05: .WORD 0
IN.06: .WORD 0
IN.07: .WORD 0
IN.08: .WORD 0
IN.09: .WORD 0
IN.09: .WORD 0
IN.10: .WORD 0
IN.11: .WORD 0
IN.12: .WORD 0
IN.13: .WORD 0
IN.14: .WORD 0
IN.15: .WORD 0
IN.16: .WORD 0
IN.16: .WORD 0
IN.17: .WORD 0
IN.17: .WORD 0
IN.18: .WORD 0
IN.19: .WORD 0
                                                                                                                      56 001066
57 001067
```

58 001070 000000 59 001071 000000 60 001072 000000 61 001073 000000 62 001074 000000 63 001075 000000 64 001076 000000 65 001077 000000 66 001100 000000 67 001101 000000 68 000036	IN.20: .WORD 0 IN.21: .WORD 0 IN.22: .WORD 0 IN.23: .WORD 0 IN.24: .WORD 0 IN.25: .WORD 0 IN.26: .WORD 0 IN.27: .WORD 0 IN.27: .WORD 0 IN.28: .WORD 0 IN.29: .WORD 0 BUFSIZ = IN.RQ
---	---

DATA ARGUMENT 20 DATA ARGUMENT 21 DATA ARGUMENT 22 DATA ARGUMENT 23 DATA ARGUMENT 24 DATA ARGUMENT 25 DATA ARGUMENT 25 DATA ARGUMENT 27 DATA ARGUMENT 27 DATA ARGUMENT 28 DATA ARGUMENT 29 SIZE OF BUFFER

** *

-

.

```
. IF
                                                               NE . TEST4
                                                     .NLIST
                                                      . IFF
                                                     TALKER SENDS AND RECEIVES AN SDI INTERCHANGE
                                            : INPUTS:
                                                     R2 - SDI INTERCONNECT
R3 - POINTER TO COMMAND TABLE CONTAINING APPROPRIATE COMMAND
10
                                                     SDILTO/SDISTO SDI LONG AND SHORT TIMEOUTS, RESPECTIVELY
                                               . S:
                                            :01
12
                                                     RO - RETURN OP CODE FROM UNIT
                                                     R3 - ERROR CODE - 0 = NO ERROR, 1 = RECEIVE ERROR, 100001 = SEND ERROR
15
   001102
                                           TALKER: PUSH
                                                               <R1.R4>
                                                                                   : SAVE REGISTERS
   001102
             100461
                                                                                                                           MOV R1,-(SP)
   001103
             100464
                                                                                                                           MOV R4,-(SP)
16 001104
17 001105
18 001106
19 001107
              104237
                                                               (R3) + .R0
                                                                                   ; SET ADR OF SDI COMMAND BUFFER
                                                     MOV
                                                               (R3) + R1
             104231
                                                                                   : SET BUFFER LENGTH
                                                     MOV
                                                                                   : SEND COMMAND
             060004
                                                     XFC
                                                               SEND
             115001
                                                                                     DID UNIT ACCEPT COMMAND
                                                     TST
                                                               R1
20 001110
21 001111
22 001113
23 001114
24 001116
25 001117
26 001121
27 001122
28 001124
29 001125
30 001127
31 001130
32 001131
33 001132
34 001136
37 001137
38 001140
39 001141
             011114
                                                                                   : IF SO, BRANCH
                                                     BEQ
                                                               TALK1A
                                                               #100001,R3
                                                                                   : FLAG AS SEND ERROR
              104203
                       100001
                                                     MOV
                                                                                     BRANCH TO EXIT
             001145
                                                               TALK2B
                                                     BR
              106203
                                                               #LONG,R3
                                                                                     SEE IF LONG TIMEOUT TO BE USED
                       001360
                                           TALKIA: CMP
                                                                                  : IF SO, BRANCH
: SET UP SHORT TIMEOUT
             071122
                                                     BMI
                                                               1$
                                                               SDISTO,R4
              104304
                       001150
                                                     MOV
                                                                                   : BRANCH
             001124
                                                     BR
                                                               TALK1B
                                                                                   ; SET UP LONG TIMEOUT
              104304
                        001151
                                                     MOV
                                                               SDILTO,R4
                                           15:
              104137
                                           TALK1B: MOV
                                                                                     SET DATA BUFFER ADDRESS
                                                               (R3),R0
              104631
                        000001
                                                     MOV
                                                               1(R3),R1
                                                                                     SET BUFFER LENGTH
              060005
                                                                                     SEND RECEIVE SDI COMMAND
                                                     XFC
                                                               RCV
              115001
                                                                                     DID ERROR OCCUR
                                                     TST
                                                               R1
                                                                                  : IF NOT, BRANCH

: SEE IF TIMEOUT

: IF SO, BRANCH

: MOVE ERROR TYPE TO R3 FOR REPORTING
             011144
                                                               TALK2A
                                                     BEQ
              106201
                        000001
                                                     CMP
                                                               #1,R1
             011137
                                                     BEQ
                                                               1$
                                                               R1.R3
              104013
                                                     MOV
              001145
                                                     BR
                                                               TALK2B
                                                                                     EXIT
              117404
                                           15:
                                                     DEC
                                                               R4
                                                                                     DECREMENT TIMEOUT VALUE
              051124
                                                               TALK1B
                                                                                     IF NOT TIMEOUT, BRANCH
                                                     BNE
              104203
                                                                                     FLAG AS RECIEVE ERROR
                        000001
                                                     MOV
                                                               #1,R3
              001145
                                                               TALK2B
40 001143
                                                                                     BRANCH TO EXIT
                                                     BR
                                                                                     FLAG AS NO ERRORS
41 001144
             114003
                                           TALKZA: CLR
                                                               R3
42 001145
                                                                                     RESTORE R4, R1
                                           TALK2B: POP
                                                               <R4,R1>
             104264
104261
000000
    001145
                                                                                                                           MOV (SP)+,R4
    001146
                                                                                                                           MOV (SP)+,R1
   001147
43
                                                     RETURN
45 001150
             000012
                                           SDISTO: .WORD
                                                               10.
                                                                                   : SDI SHORT TIMEOUT
46 001151
             000024
                                                               20.
                                           SDILTO: . WORD
                                                                                   : SDI LONG TIMEOUT
```

UDAT1 UNIBUS ADDRESSING MACRO X04.00 9-JUL-81 11:25:16 PAGE 25 HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED.

```
:MREAD
                                            : READ ONE WORD FROM UNIBUS MEMORY
                                            : INPUTS:
                                                      R5 - ADDRESS OF WORD TO READ (LOW 16 BITS)
                                                      R4 -
                                                                          (HIGH 2 BITS)
                                            :OUTPUTS:
                                                      RO - DATA READ
10 001152
001152
001153
11 001154
12 001155
13 001156
                                            MREAD: PUSH <R2,R3>
                                                                                              :SAVE SOME REGISTERS
              100462
                                                                                                                            MOV R2,-(SP)
MOV R3,-(SP)
              100463
                                                      MOV R5, RO
                                                                                              ; PUT UNIBUS ADDRESS IN RO AND R1
              104041
104202
104203
060013
104307
                                                      MOV R4,R1
                        000001
                                                      MOV #1,R2
                                                                                              ; TRANSFER ONE WORD
14 001160
                        001210
                                                      MOV #UDATA, R3
                                                                                              :LOCATION TO PUT DATA
15 001162
16 001163
17 001165
001165
                                                      XFC UREAD
                                                                                              : DO THE READ
                        001210
                                                      MOV UDATA, RO
                                                                                              GET DATA READ
                                                      POP <R3,R2>
                                                                                              RESTORE OTHER REGISTERS
              104263
                                                                                                                            MOV (SP)+, R3
    001166
                                                                                                                            MOV (SP)+, R2
18 001167
              000000
                                                      RETURN
```

1 23 4 5 6 7 8 9		:MWRITE :WRITE (:INPUTS	R5 - ADDRESS OF WORD TO WRITE R4 - (HIGH 2 BITS) R0 - DATA TO WRITE	(LOW 16 BITS)	
10 001170 001170 100467 001171 100462 001172 100463 11 001173 104070	001210	MWRITE:	PUSH <ro,r2,r3> MOV RO,UDATA</ro,r2,r3>	; SAVE SOME REGISTERS ; PUT DATA TO BE WRITTEN	MOV RO,-(SP) MOV R2,-(SP) MOV R3,-(SP) INTO BUFFER
12 001175 104057 13 001176 104041 14 001177 104202 15 001201 104203 16 001203 060014 17 001204	000001 001210		MOV R5,R0 MOV R4,R1 MOV #1,R2 MOV #UDATA,R3 XFC UWRITE POP <r3,r2,r0></r3,r2,r0>	:PUT UNIBUS ADDRESS IN :TRANSFER ONE WORD :ADDRESS OF DATA WORD :DO THE WRITE :RESTORE THE REGISTERS	RO AND R1
001204 104263 001205 104262 001206 104267 18 001207 000000			RETURN	, NEGYONE THE NEGISTERS	MOV (SP)+,R3 MOV (SP)+,R2 MOV (SP)+,R0
20 001210 000000		UDATA:	.WORD 0	; DATA BUFFER FOR TRANSF ; UNIBUS MEMORY	ERS TO AND FROM

1 23 4 5 6 7 8 9	PERFOR INPUTS	R1, R2 - DATA	SISTERS	
10 001211 001211 100463 11 001212 104013 12 001213 103023 13 001214 103012 14 001215 101032 15 001216 001216 104263 16 001217 115002 17 001220 000000	XOR:	PUSH R3 MOV R1.R3 BIC R2.R3 BIC R1.R2 BIS R3.R2 POP R3 TST R2 RETURN	;RESTORE R3 ;SET CONDITION CODES	MOV R3,-(SP) MOV (SP)+,R3

1 001221		10:			
3 4			CALCULA 9 SEC)	TE THE TIMEOUT	IN 9SEC INTERVALS (SDI RECEIVE XFC TAKES
6 001221 104201 7 001223 110201 8 001224 103201	000001 000001	1\$:	MOV ROL BIC	#1,R1 R1 #1,R1	SET UP LOG2 SHIFTER DOUBLE THE TIMEOUT VALUE
9 001226 117407 10 001227 051223 11 001230 114007	000001		DEC BNE CLR	R0 1\$ R0	; CLEAR THE LOW BIT ; DECREMENT COUNT ; IF COUNT INCOMPLETE, BRANCH ; CLEAR 9SEC COUNT
12 001231 115407 13 001232 107201 14 001234 031231 15 001235 000000	000011	2\$:	INC SUB BPL RETURN	RO #9.,R1 2\$; INCREMENT 9 SEC COUNT ; SUBTRACT 9 SEC FROM TIMEOUT ; IF MORE TIME TO GO, BRANCH ; RETURN TO CALLING PROGRAM

```
: RERROR
                                        REPORT ERROR TO HOST PROGRAM
                                        :THIS ROUTINE IS CALLED BY THE ERROR MACROS:
                                        :ERRSF, ERRDF, ERRHRD AND ERRSFT
   001236
001236
001237
                                        RERROR: PUSH RO
                                                                                      : SAVE ONE REGISTER
            100467
                                                                                                                  MOV RO, - (SP)
                                                 MOV SP.RO
            104067
                                                                                      GET STACK POINTER
   001240
                                                 PUSH <R1,R2,R3,R4>
                                                                                      : SAVE MORE REGISTERS
   001240
            100461
                                                                                                                  MOV R1, -(SP)
                                                                                                                  MOV R2,-(SP)
MOV R3,-(SP)
   001241
            100462
   001242
            100463
            100464
                                                                                                                  MOV R4,-(SP)
10 001244
            115407
                                                 INC RO
                                                                                      CHANGE SAVED STACK POINTER TO POINT TO
11
                                                                                      ; ADDRESS OF LOCATION AFTER CALL
12 001245
13 001246
            104271
104202
                                                 MOV (R0)+,R1
                                                                                      :GET RETURN PC
                     001007
                                                 MOV #OUT.01,R2
                                                                                      GET ADDRESS OF WHERE TO PUT DATA
14 001250
            117401
                                                                                      ; REDUCE TO PC OF ERROR CALL
                                                 DEC R1
15 0C1251
16 001252
17 001253
                                                 MOV R1, (R2)+
            100221
                                                                                      :PUT PC IN OUT BUFFER
                                                                                      GET BACK TO RETURN PC
            115401
                                                 INC R1
                                                                                      GET ERROR NUMBER AND TYPE
            104113
                                                 MOV (R1) . R3
18 001254
                                                 BIC #*C001777,R3
            103203
                     176000
                                                                                      : CLEAR OTHER BITS
19 001256
20 001257
21 001261
22 001262
23 001263
24 001264
25 26 001265
27 001266
28 001267
29 001270
30 001272
31 001274
32 001275
33 001277
35 001300
36 001301
37 001302
38 001304
19 001256
            100223
                                                 MOV R3. (R2)+
                                                                                      : PUT IN BUFFER
            104303
                     001315
                                                 MOV LUNIT.R3
                                                                                      PUT UNIT NUMBER IN BUFFER
            100223
                                                 MOV R3, (R2)+
            104214
                                                 MOV (R1)+,R4
                                                                                      GET COUNT OF PARAMETERS
            104213
                                                 MOV (R1)+,R3
                                                                                      GET MESSAGE POINTER
            100223
                                                 MOV R3, (2)+
                                                                                      :PUT IN OUT BUFFER
                                                                                      :R1 IS NOW POINTING TO INSTRUCTION AFTER ERROR CALL
            110704
                                                 SWAB R4
            110604
                                                 ROR R4
                                                                                      EXTRACT NUMBER OF PARAMETERS FROM ERROR MACRO
            110604
                                                 ROR R4
            103204
                                                 BIC #177700.R4
            104040
                     001313
                                                 MOV R4, SPADJU+1
                                                                                      ; SAVE FOR LATER ADJUSTMENT OF STACK POINTER
            011301
                                                 BEQ RERRCA
                                                                                      :BRANCH IF NO PARAMETERS
            104273
                                        RERRPA: MOV (RO)+,R3
                                                                                      GET PARAMETER
            100223
                                                 MOV R3, (R2)+
                                                                                      STORE PARAMETER IN OUT BUFFER
            117404
                                                 DEC R4
                                                                                      COUNT THE PARAMETERS
            051275
                                                 BNE RERRPA
                                                                                      GET NEXT IF MORE
            100471
                                        RERRCA: MOV R1 .- (RO)
                                                                                      :PUT RETURN ADDRESS ON STACK
                                                 MOV #ERRMES, RO
            104207
                     000013
                                                                                      SEND ERROR PACKET TO HOST PROGRAM
38 001304
39 001305
            020751
                                                 CALL HOSTRO
                                                 POP <R4,R3,R2,R1,R0>
                                                                                      :RESTORE REGISTERS
   001305
            104264
                                                                                                                  MOV (SP)+,R4
   001306
                                                                                                                  MOV (SP)+, R3
   001307
            104262
                                                                                                                  MOV (SP)+,R2
   001310
            104261
                                                                                                                  MOV (SP)+,R1
   001311
            104267
                                                                                                                  MOV (SP)+,R0
40 001312
            105206
                     000000
                                        SPADJU: ADD #0, SP
                                                                                      : ADJUST STACK OVER PARAMETERS
41
                                                                                      : VALUE CHANGED ABOVE
   001314
            000000
42
                                                 RETURN
43
44 001315 177777
                                        LUNIT: . WORD -1
                                                                                      ;LOGICAL UNIT NUMBER (-1 FOR NOT AVAILABLE)
46 001316 000000
                                        SAVREG: . WORD 0
                                                                                      STORAGE FOR REGISTER AT CALL TIME
                                                 . IFT
```

UDATI UNIBUS ADDRESSING MACRO X04.00 9-JUL-81 11:25:16 PAGE 29-1 HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED,

48

.LIST

UDAT1 UNIBUS ADDRESSING MACRO X04.00 9-JUL-81 11:25:16 PAGE 30 HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED,

3 001317 123456 4 001320 5 001357 123456

:STACK AREA

.WORD 123456 .BLKW 31. STACK: .WORD 123456

:END MARKER FOR STACK

STACK MARKER FOR STACK UNDERFLOW

1			.SBTTL	FREE MEMORY CHECK		
3	000001			ERRN=1.	START ERROR NUMBERS FROM 1.	
5			:ASK HOS	ST WHERE FREE MEMORY IS AND TO FI	ILL IT WITH AN ADDRESS PATTERN	
7 001360 8 001360 9 001362 10 001363 11 001365 12 001367 13 001371 14 001372 15 001373 16 001374	104207 020751 104207 104201 104202 104273 100213 117402 051371	000000 001045 002057 000010	LONG: START:	MOV #T1MSIZ.RO CALL HOSTRO MOV #IN.01,RO MOV #FWADR.R1 MOV #8.,R2 MOV (RU)+,R3 MOV R3,(R1)+ DEC R2 BNE FMEMFL	;UNUSED LABEL THAT MUST BE DEFINED ;GET REQUEST NUMBER ;ASK HOST ;TRANSFER DATA FROM HOST ;TO STORAGE	
17 18			:READ AL	LL OF SPECIFIED MEMORY AND CHECK	FOR DATA SAME AS ADDRESS	
19 20 001375	104305	002057		MOV FWADR, R5	GET STARTING ADDRESS	
21 001377 22 001401 23 24 25	104304 021152	002060	ACHK1:	MOV FWADRH,R4 CALL MREAD	READ FROM UNIBUS MEMORY	
24			: COMPARI	E DATA READ WITH EXPECTED		
26 001402 27 001403 28 001404 001404 001405 001406 001407 001410 001411	106075 011413 100467 100465 100464 100465 021236 011001 000123		ACHK2:	CMP RO,R5 BEQ ACHK3 ERRHRD MS3,R5,R4,R5,R0 ;UNIBUS	COMPARE DATA READ WITH ADDRESS BRANCH IF A MATCH ADDRESSING ERROR - INCORRECT DATA REAL MOV RO(SP) MOV R5(SP) MOV R4(SP) MOV R5(SP) CALL RERROR WORD <prms*2000>+4 WORD MS3</prms*2000>	ROR # 1.
29 30 31			: INCREM	ENT TO NEXT LOCATION UNTIL ALL TE	ESTED	
32 001413 33 001415 34 001416 35 001420 36 001421 37 001423 38 001424 39 001425	106305 051421 106304 011426 105205 041401 115404 001401	002061 002062 000002	ACHK3:	CMP LWADR,R5. BNE ACHK4 CMP LWADRH,R4 BEQ BCHK ADD #2,R5 BCC ACHK1 INC R4 BR ACHK1	CHECK IF AT LAST ADDRESS GO TO NEXT TEST IF SO INCREMENT TEST ADDRESS CARRY TO HIGH BITS LOOP IF STILL IN SPECIFIED MEMORY	

	1 2			: CHECK : ADDRES	EACH ADDRESS LINE BY S LINE DIFFERENT AND	LOOKING AT TWO LOCATIONS WITH ONLY THAT VERIFYING TWO LOCATIONS ARE ACTUALLY ACCESSED
	4 001426	104307	002060 002070	BCHK:	MOV FWADRH, RO MOV RO, TADRH	:LOAD TEST ADDRESS HIGH BITS
	6 001432	104203	000002	BCHK1:	MOV #2,R3 MOV R3,R2	GET STARTING ADDRESS BIT TO TEST
	8 001435 9 001437	104301	002057	OCH III.	MOV FWADR, R1 CALL XOR	GET FIRST ADDRESS OF FREE MEMORY
1	0 001440	104020	002067		MOV R2, TADR	CHANGE JUST THE ONE BIT IN ADDRESS
1	1 001442 2 001443	021742			CALL BCHKM ADD R3,R3 BNE BCHK1	:TEST THE MEMORY ADDRESS :GET NEW ADDRESS BIT TO TEST
	3 001444	051434			BNE BCHK1	; LOOP IF STILL AN ADDRESS BIT TO TEST
	5 001445	104307 104070	002057 002067		MOV FWADR, RO MOV RO, TADR	:NOW MOVE TO HIGH TWO BITS :COPY LOW BITS TO TEST ADDRESS
1	7 001451 8 001453	104203	000001	BCHK2:	MOV #1,R3	START BIT
1	9 001454	104301	002060	BURKZ:	MOV R3,R2 MOV FWADRH,R1	GET TEST BIT GET FIRST ADDRESS
5	0 001456	021211	002070		CALL XOR MOV R2, TADRH	CHANGE ONLY THE ONE BIT
5	2 001461 3 001462	021742			CALL BCHKM ADD R3.R3	: TEST THE MEMORY ADDRESS : CHANGE TEST BIT
5	4 001463 5 001465	102203	000004		BIT #4,R3 BEQ BCHK2	CHECK IF PAST TWO ADDRESS BITS
						시크는 이 집에 살아 있는 아이들이 가지 않는데 그 사람들이 가지 않는데 하는데 하는데 되었다.

1 2 3 4 5 6 7 8 9 10 11 12 13 14	BREAK THE HOST MEMORY INTO RUFFERS	SEVERAL BUFFERS. ALL BUFFERS WILL ND THE DATA COMPARED TO PATTERN O. ATTERN 1 WITH A READ OF ALL BUFFERS WE BEEN WRITTEN WITH PATTERN 1, THEN BUFFER WITH PATTERN 2 AND THEN OF THREE WORDS) 5555 3 - 000377 5333 170017 5666 177400
16 17 001466 104202 C10000 18 001470 107202 002103 19 001472 105022 20 0C1473 104205 002103 21 001475 104304 002057 22 001477 104303 002060 23 001501 114001	CCHK: MOV #10000,R2 SUB #FREE,R2 ADD R2,R2 MOV #FREE,R5 MOV FWADR,R4 MOV FWADRH,R3	COMPUTE SIZE OF DATA BUFFER IN M MEMORY CHANGE TO BYTE COUNT GET ADDRESS OF FIRST TABLE ENTRY GET ADDRESS OF FIRST BUFFER IN HOST INIT COUNT OF BUFFERS STORE HOST BUFFER ADDRESS IN TABE ENTRY REDUCE BUFFER SIZE BY TABLE ENTRY INCREADE HOST ADDRESS TO NEXT BUFFER CHECK IF BUFFER LARGER THEN HOST MEMORY REMAINING
24 001502 100254 25 001503 100253 26 001504 107202 000004 27 001506 105024 28 001507 041511 29 001510 115403	2\$: MOV R4,(R5)+ MOV R3,(R5)+ SUB #4,R2 ADD R2,R4 BCC 1\$ INC R3 1\$: CMP LWADRH,R3	STORE HOST BUFFER ADDRESS IN TABE ENTRY REDUCE BUFFER SIZE BY TABLE ENTRY INCREADE HOST ADDRESS TO NEXT BUFFER
30 001511 106303 002062 31 001513 071523 32 001514 051521 33 001515 106304 002061 34 001517 041521 35 001520 001523 36 001521 115401	1\$: CMP LWADRH,R3 BMI 4\$ BNE 3\$ CMP LWADR,R4 BCC 3\$ BR 4\$ 3\$: INC R1	CHECK IF BUFFER LARGER THEN HOST MEMORY REMAINING COUNT THE TABLE ENTRY
37 001522 001502 38 39 001523 104050 002074	BR 2\$	GO BACK AND DO AGAIN
40 001525 105207 000000 41 001527 110602 42 001530 104020 002075 43 001532 104010 002071	4\$: MOV R5.DATBUF ADD #0.R0 ROR R2 MOV R2.SIZBUF MOV R1.BUF (NT	;SAVE ADDRESS OF DATA BUFFER ;CLEAR CARRY ;SAVE SIZE OF DATA BUFFER ; IN WORDS ;SAVE COUNT OF BUFFERS

1			;WRITE	ALL BUFFERS TO PATTERN O	
3 001534 4 001535 5 001537 6 001541 7 001542 8 001544 9 001545 10 001547 11 001550	114007 104070 104070 021601 104307 115407 106307 051537 021651	002073 002072 002072 002071	10\$:	CLR RO MOV RO, CURPAT MOV RO, CURBUF CALL WRITE MOV CURBUF, RO INC RO CMP BUFCNT, RO BNE 10\$ CALL READ	:LOAD PATTERN 0 : IN SAVE WORD :SELECT BUFFER 0 :WRITE THE BUFFER :INCREMENT TO NEXT BUFFER :WRITE ANOTHER IF : NOT AT LAST :READ ALL HOST BUFFERS
13 001551 14 001553 15 001554	104307 115407 106207 011575 104070	002073 000004 002073	12\$:	MOV CURPAT,RO INC RO CMP #4,RO BEG DONECD MOV RO,CURPAT	:INCREMENT PATTERN NUMBER :EXIT SUBTEST IF NO : NO PATTERNS REMAINING
19 001561 20 001562 21 001564 22 001565 23 001566 24 001570 25 001571	114007 104070 021601 021651 104307 115407 106307 051562 001551	002072 002072 002071	14\$:	CLR RO MOV RO, CURBUF CALL WRITE CALL READ MOV CURBUF, RO INC RO CMP BUF CNT, RO BNE 14\$ BR 12\$:POINT TO BUFFER 0 :WRITE A BUFFER :READ ALL HOST BUFFERS :INCREMENT TO NEXT BUFFER :C'IECK IF AT LAST : WRITE NEXT BUFFER : WRITE NEXT PATTERN

1 001575 104207 000016 2 001577 020751 3 001600 001575

DONECD: MOV #DONE,RO CALL HOSTRO BR DONECD

:END OF PROGRAM, TELL PDP-11
:KEEP SENDING IF RETURNED

••

	3			:IS IN :WRITE :TO BY	A DATA BUFFER BEGINNING AT ADDREST SIZBUF WITH A DATA PATTERN SPECTHIS BUFFER TO HOST STARTING AT CURBUF. THEN PLACE THE PATTERN ADDRESS	SS IN DATBUF AND WHOSE SIZE SIFIED BY CONTENTS OF CURPAT. T ADDRESS IN TWO WORDS POINTED NUMBER IN THE SECOND WORD OF THE
				;FILL E	BUFFER WITH DATA PATTERN	
10	001601 001603 001604	104307 105077 105077	002073	WRITE:	MOV CURPAT,RO ADD RO,RO ADD RO,RO	GET PATTERN NUMBER TIMES FOUR
1	001605	104072 105207 104273 104274 104275	001723		MOV CURPAT,RO ADD RO,RO ADD RO,RO MOV RO,R2 ADD #PATO,RO MOV (RO)+,R3 MOV (RO)+,R4 MOV (RO)+,R5	;SAVE FOR ADDING TO TABLE ENTRY ;ADD START OF PATTERN TABLES ;GET PATTERN WORDS
18	001611 001612 001613 001615	104307 104301	002074 002075		MOV (RO)+,R5 MOV DATBUF,R0 MOV SIZBUF,R1	GET ADDRESS OF BUFFER; GET SIZE OF BUFFER
5,	001617 001620 001621 001622	100273 117401 011630 100274		1\$:	MOV R3,(R0)+ DEC R1 BEQ 2\$ MOV R4.(R0)+	:LOAD ONE WORD :COUNT THE WORDS :LOAD ONE WORD
50	6 001623 5 001624 6 001625 7 001636	1623 117401 1624 011630 1625 100275		MOV R4, (R0) + DEC R1 BEQ 2\$ MOV R5, (R0) + DEC R1 BNE 1\$	COUNT THE WORDS LOAD ONE WORD COUNT THE WORDS	
30					THE BUFFER TO HOST MEMORY	
3	001627 001627 001630 3 001632 4 001633 5 001635	105205	002072 002103	2\$:	MOV CURBUF,R5 ADD R5,R5 ADD #FREE,R5 MOV (R5)+,R0 MOV (R5),R1 BIC #177774,R1 BIS R1,R2 MOV R2,(R5) MOV SIZBUF,R2 MOV DATBUF,R3 XFC UWRITE RETURN	GET POINTER TO HOST ADDRESS COUNT TIMES TWO PLUS START ADDRESS GET LOW ADDRESS BITS
30	001636 001637 001641 001642	104151 103201 101012 100152	177774		MOV (R5),R1 BIC #177774,R1 BIS R1,R2 MOV R2,(R5)	GET HIGH ADDRESS BITS CLEAR CURRENT PATTERN SET IN NEW PATTERN STORE IN TABLE ENTRY
4	0 001643 1 001645 2 001647 3 001650	104302 104303 060014 000000	002075 002074		MOV SIZBUF,R2 MOV DATBUF,R3 XFC UWRITE RETURN	GET WORDS TO TRANSFER GET DM ADDRESS WRITE TO THE HOST MEMORY

1 2 3 4 5 6	; TABLE ENTRIES STARTING AT ; BUFFERS AND THE PATTERN NO ; NUMBER OF BUFFERS IS IN BU	OMPARE ON ALL THE HOST BUFFERS. TWO WORD FREE CONTAIN THE HOST ADDRESS OF THE UMBER LAST WRITTEN TO THE BUFFER. THE UFONT AND THE SIZE OF THE BUFFERS IS IN EAD INTO THE DM AT ADDRESS IN DATBUF.
7 001651 104205 002103 8 001653 104304 002071	READ: MOV #FREE,R5 MOV BUF CNT,R4	GET ADDRESS OF TABLE ENTRIES GET COUNT OF BUFFERS
10 11	READ DATA FROM HOST BUFFER	R INTO DM MEMORY
12 001655 104257 13 001656 104151 14 001657 103201 177774 15 001661 104302 002075 16 001663 104303 002074 17 001665 060013	1\$: MOV (R5)+,R0 MOV (R5),R1 BIC #177774,R1 MOV SIZBUF,R2 MOV DATBUF,R3 XFC UREAD	GET BUFFER ADDRESS CLEAR PATTERN NUMBER SIZE OF BUFFER PLACE TO READ DATA READ THE DATA FROM HOST MEMORY
19	COMPARE DATA READ WITH DA	TA PATTERN
20 21 001666 104207 002076 22 001670 104071 23 001671 104303 002075 24 001673 100213 25 001674 104303 002074 26 001676 100213 27 001677 104252 28 001700 103202 177763 29 001702 105202 001723 30 001704 104223 31 001705 100213 32 001706 104223 33 001707 100213 34 001710 104223 35 001711 100213 36 001712 060006 37 001713 115001 38 001714 011720	MOV #CMPSIZ.RO MOV RO.R1 MOV SIZBUF.R3 MOV R3.(R1)+ MOV DATBUF.R3 MOV R3.(R1)+ MOV (R5)+,R2 BIC #177763.R2 ADD #PATO.R2 MOV (R2)+,R3 MOV R3.(R1)+ MOV (R2)+,R3 MOV R3.(R1)+ MOV (R2)+,R3 MOV R3.(R1)+ MOV (R2)+,R3 MOV R3.(R1)+ XFC COMPARE IST R1 BEQ 3\$	GET STORAGE ADDRESS OF DATA COMPARE DATA STORE BUFFER SIZE STORE ADDRESS GET PATTERN NUMBER AND COMPUTE PATTERN ADDRESS MOVE DATA PATTERN WORDS TO DATA COMPARE STORAGE AREA COMPARE DATA IN BUFFER TO PATTERN CHECK FOR ERRORS
39 001715 001715 021236 001716 001002 001717 000411		OMPARE FAILED AFTER WRITE THEN READ FROM UNIBUS CALL RERROR ; ERROR # 2. .WORD <prms*2000>+<2*400>+ERRN .WORD MS6</prms*2000>
40	CYCLE THROUGH ALL HOST BUR	
42 43 001720 117404 44 001721 051655 45 001722 000000	3\$: DEC R4 BNE 1\$ RETURN	COUNT BUFFERS ; REPEAT FOR ALL BUFFERS

1		:DATA	PATTERN	TABLES	
3 001723 4 001724 5 001725 6 001726	111111 04444 022222 000000	PATO:	.WORD .WORD .WORD .WORD	^B1001001001001001 ^B0100100100100100 ^B0010010010010010	
8 001727 9 001730 10 001731 11 001732 12	177400 007760 000377 000000	PAT1:	. WORD	^B1111111100000000 ^B00001111111110000 ^B00000000011111111	
13 001733 14 001734 15 001735 16 001736	155555 133333 066666 000000	PAT2:	. WORD	^B1101101101101101 ^B1011011011011011 ^B0110110110110110	
18 001737 19 001740 20 001741	000377 170017 177400	PAT3:	.WORD .WORD	^B0000000011111111 ^B1111000000001111 ^B11111111100000000	

1			:CHECK	IF TEST ADDRESS IS IN BOUNDS OF	READABLE MEMORY
4 001745 011 5 001746 041 6 001747 002	755 056			CMP TADRH, FRADRH BEQ 1\$ BCC 2\$ BR BCHKMX	COMPARE TEST ADDRESS WITH FIRST READABE ADDRESS BRANCH IF EQUAL BRANCH IF TEST ADDRESS HIGHER BRANCH IF TEST ADDRESS LOWER
7 001750 106 8 001753 041	300 002067 755	002063	1\$:	CMP TADR, FRADR BCC 2\$;BRANCH IF HIGHER OR SAME
9 001754 002 10 001755 106 11 001760 011 12 001761 041 13 001762 002	300 002066 763 770	002070	2\$:	BR BCHKMX CMP LRADRH, TADRH BEQ 3\$ BCC 4\$ BR BCHKMX	;BRANCH IF LOWER ;COMPARE TEST ADRESS WITH LAST READABLE ADDRESS ;BRANCH IF EQUAL ;BRANCH IF READABLE ADDRESS HIGHER ;BRANCH IF READABLE ADDRESS LOWER
14 001763 106 15 001766 041 16 001767 002	300 002065 770	002067	3\$:	CMP LRADR, TADR BCC 4\$ BR BCHKMX	BRANCH IF HIGHER OR SAME BRANCH IF LOWER
18 001770 104 19 001772 104 20 001774 104	207 177777		4\$:	MOV FWADR,R5 MOV FWADRH,R4 MOV #177777,R0	;WRITE ONES INTO FIRST ADDRESS
21 001776 021 22 001777 104 23 002001 104 24 002003 021	305 002067 304 002070			CALL MWRITE MOV TADR,R5 MOV TADRH,R4 CALL MREAD	;READ FROM TEST ADDRESS
25 002004 1060 26 002006 0520	207 177777			CMP #177777,RO BNE BCHKMX	CHECK DATA READ FOR ALL ONES GO TO NEXT BIT IF NOT ALL ONES
27 28 002007 104 29 002011 104 30 002013 114	305 002057 304 002060 007 170 305 002067			MOV FWADR, R5 MOV FWADRH, R4 CLR RO	;WRITE ALL ZEROS TO FIRST ADDRESS
34 002017 104	152			CALL MWRITE MOV TADR, R5 MOV TADRH, R4 CALL MREAD	READ FROM TEST ADDRESS
35 002022 1150 36 002023 0520 37	056			TST RO BNE BCHKMX	GO TO NEXT BIT IF NOT ALL ZEROS
38 002024 1043 39 002026 1049 40 002027 0213	052 211			MOV FWADR,R1 MOV R5,R2 CALL XOR	COMPUTE XOR OF FIRST ADDRESS ; AND TEST ADDRESS
41 002030 1040 42 002031 1040 43 002033 1040 44 002034 0210	301 002060 042			MOV R2,R0 MOV FWADRH,R1 MOV R4,R2 CALL XOR	; RESULT TO RO ; NOW DO IT FOR HIGH BITS
45 002035 002035 1004 002036 1004	462			ERRHRD MS7, FWADR, FWADRH, R5, R4, R	0,R2 ;UNIBUS ADDRESSING ERROR. TWO ADDRESSES READ SAM MOV R2,-(SP)
002037 1004 002040 1004 002041 104	464 465				MOV RO,-(SP) MOV R4,-(SP) MOV R5,-(SP) MOV R1,SAVREG
002043 1043 002045 1004	301 002060 461				MOV FWADRH, R1
002046 104 002050 1004 002051 104	461 301 001316				MOV FWADR,R1 MOV R1,-(SP) MOV SAVREG,R1
002053 0212 002054 0150	236				CALL RERROR :ERROR # 3. .WORD <prms*2000>+<2*400>+ERRN</prms*2000>

UDAT1 UNIBUS ADDRESSING MACRO X04.00 9-JUL-81 11:25:16 PAGE 40-1 FREE MEMORY CHECK

002055 000446

46 47 002056 000000

BCHKMX: RETURN

. WORD MS7

SEQ 0068

1		;PROGRAM VARIABLES	
3 002057 4 002060 5 002061	000000 000000 000000	FWADR: .WORD 0 FWADRH: .WORD 0 LWADR: .WORD 0	; FIRST ADDRESS CONTAINING ADDRESS DATA ; LAST ADDRESS CONTAINING ADDRESS DATA
6 002062	000000	LWADRH: .WORD 0	
8 002063 9 002064	000000	FRADR: .WORD 0 FRADRH: .WORD 0	;FIRST ADDRESS READABLE
10 002065 11 002066	000000	LRADR: .WORD 0 LRADRH: .WORD 0	;LAST ADDRESS READABLE
12 13 002067 14 002070	000000	TADR: .WORD U TADRH: .WORD 0	:TEST ADDRESS
16 002071 17 002072 18 002073 19 002074 20 002075	000000 000000 000000 000000	BUFCNT: .WORD 0 CURBUF: .WORD 0 CURPAT: .WORD 0 DATBUF: .WORD 0 SIZBUF: .WORD 0	COUNT OF BUFFERS IN HOST MEMORY CURRENT BUFFER BEING WRITTEN IN HOST CURRENT DATA PATTERN BEING WRITTEN ADDRESS OF DATA BUFFER IN DM MEMORY SIZE OF DATA BUFFER IN HOST MEMORY
21 22 23 24 25 26 27		: SECOND WORD - BITS 1-0	AFTER THE PROGRAM AT FREE. SITS OF HOST ADDRESS HIGH TWO BITS OF HOST ADDRESS PATTERN LAST WRITTEN
28 002076 29 002077 30 002100 31 002101 32 002102	000000 000000 000000 000000	CMPSIZ: .WORD 0 CMPADR: .WORD 0 CMP1: .WORD 0 CMP2: .WORD 0 CMP3: .WORD 0	;TABLE FOR COMPARE DATA PATTERN XFC

1					:MESSAGE	STORAGE OVERLAY
34	002103 002103 002103	154530			FREE:	DMOVLY MS.O .WREDC ;OUTPUT EDC FOR THIS OVERLAY
	000000 000034 000044	042 042	116 011	117 101	MS1:	.ASCII\'NON-EXISTANT MEMORY ERROR TRYING TO READ FROM UNIBUS.'N\ .ASCII\' ADDRESS '018N\
10	000045 000067 000077 000107	000 042 042 042 042 000	120 011 011 011	101 101 104 104	MS2:	BYTE 0 .ASCII\'PARITY ERROR ON READ FROM UNIBUS.'N\ .ASCII\' ADDRESS 'O18N\ .ASCII\' DATA READ 'O16N\ .ASCII\' DATA EXPECTED 'O16N\ .BYTE 0
15 16 17 18	000123 000153	042 042 042 042 042 042	125 115 011 011 011	116 105 101 104 104	MS3:	ASCII\'UNIBUS ADDRESSING ERROR - INCORRECT DATA READ.'N\ .ASCII\'MEMORY LOCATION SHOULD CONTAIN OWN ADDRESS.'N\ .ASCII\' ADDRESS 'O18N\ .ASCII\' DATA READ 'O16N\ .ASCII\' DATA EXPECTED 'O16N\ .BYTE 0
21 22 23	000236 000251 000266 000305	042 042 042 042 042	125 011 011 011	116 105 106 127	MS4:	.ASCII\'UNIBUS WRITE FAILED.'N\ .ASCII\'' ERROR CODE FROM R1 ''016N\ .ASCII\'' FIRST ADDRESS WRITTEN ''018N\ .ASCII\'' WORDS TRYING TO WRITE 'D''.'N\ .BYTE 0
26 27	000325 000340 000355 000372	042 042 042 042 042	125 011 011 011	116 105 106 127	MS5:	.ASCII\'UNIBUS READ FAILED.'N\ .ASCII\'' ERROR CODE FROM R1 ''016N\ .ASCII\'' FIRST ADDRESS READ ''018N\ .ASCII\'' WORDS TRYING TO READ 'D''.'N\ .BYTE 0
31 32	000411	042	104	101	MS6:	.ASCIIN'DATA COMPARE FAILED AFTER WRITE THEN READ FROM UNIBUS.'N' .BYTE 0
33 34 35 36 37	000446 000504 000521 000534 000552	042 042 042 042 042 000	125 011 011 011	116 113 105 101	MS7:	.ASCII\'UNIBUS ADDRESSING ERROR. TWO ADDRESSES READ SAME LOCATION.'N\ .ASCII\'' KNOWN GOOD ADDRESS ''018N\ .ASCII\'' ERROR ADDRESS ''018N\ .ASCII\'' ADDRESS BIT IN ERROR ''018N\ .BYTE 0
38 39 40	000553	066640 000001				DMEND .WREDC :OUTPUT EDC FOR THIS OVERLAY .END

UDAT1 UNIBUS	ADDRESSING MACE	0 X04.00	9-JUL-81	11:25:16	PAGE	42-1
SYMBOL TABLE						

```
UDAT1 UNIBUS ADDRESSING MACRO X04.00 9-JUL-81 11:25:16 PAGE 42-2
SYMBOL TABLE
ST.C = 000002
                                                                                           U. COPY= 000043
                                                                                                                          U.SEEK= 000007
                              S.MCNT= 000011
                                                             T1MSIZ= 000000
                                                                                           U.CSEC= 000021
                                                                                                                          U.SNUM= 000047
ST.CON= 000002
                              S.MEGR= 000006
                                                             T2CMD = 000002
                                                                                                                          U.SUBP= 000001
U.SUBU= 000034
ST.DB = 001000
                              S.MEGW= 000007
                                                             T2DLL = 000001
                                                                                           U.CTRK= 000015
ST.DF = 000020
                              S.PARM= 000000
                                                             T4BB1 = 000005
                                                                                           U.ECCT= 000027
ST.DR = 000040
                              S.PAT = 000003
                                                             14882 = 000006
                                                                                           U.ELEV= 000024
                                                                                                                          U.TIMO= 000005
                              S.SCHR= 000005
S.SDCL= 000001
S.TGOF= 000013
S.TGSS= 000015
S.TRKL= 000004
ST.ERR= 000002
                                                                                           U.LCYL= 000056
U.LGRP- 000060
                                                             T4MPRM= 000003
                                                                                                                          U.TSEC= 000020
ST.FE = 000200
ST.FO = 002000
                                                                                                                          U.WPRT= 000032
U.WRIT= 000023
                                                             T4MXFR= 000011
                                                                                           U.MASK= 000022

U.MBN = 000035

U.MLEV= 000026

U.MSEC= 000017

U.NEXT= 000000

U.NFUN= 000010
                                                             T4SEEK= 000010
                                                             T4SOFT= 000007
T4UPRM= 000004
                                                                                                                          WAITSI = 000012
ST.MOD= 000001
                                                                                                                          WBUFLN= 000401
WCHECK= 000010
ST.MSK= 000000
ST.OA = 000200
ST.PE = 000040
                                                             UDATA 001210
                              TADR
                                        002067
                                                                                                                          WCHKAL = 000004
                                                             UNITO = 000001
                              TADRH
                                        002070
ST.PS = 000002
                              TALKER
                                        001102
                                                             UNIT1 = 000002
                                                                                                                          WCONT = 040000
                                                            UNIT2 = 000004
UNIT3 = 000010
                                                                                           U.NSEC= 000016
U.PARM= 000033
                                                                                                                          WONLY = 002000
ST.RE = 000100
                              TALK1A
                                        001114
ST.RR = 000100
                              TALK1B 001124
                                                                                                                          WREAL = 122400
                              TALK2A 001144
TALK2B 001145
                                                             UNSSUC= 000175
                                                                                           U.PAT = 000011
ST.RTY= 000003
                                                                                                                          WRITE
                                                                                                                                  001601
                                                                                           U.PCTG= 000014
U.RBN = 000041
U.RTRY= 000025
                                                            UREAD = 000013
UTOTST= 000012
                                                                                                                          WRONG = 000002
ST.RU = 000001
ST.SR = 000020
                              TEST4 = 000000
                                                                                                                          WSTOP = 140000
                                                                                                                          XBNCYL= 000021
                              TIMEOU= 000001
                                                             UWRITE = 000014
ST.STA= 000001
                              TLEN.U= 000061
TO 001221
                                                                                                                          XFERRT= 000000
ST.S7 = 000400
                                                             U.CBN = 000037
                                                                                           U.RVER= 000046
ST.UNT= 000000
                                                            U.CCNT= 000012
                                                                                           U.RWER= 000045
                                                                                                                          XMTERR= 000400
                              TOOBIG= 000001
                                                            U.CCOP= 000044
                                                                                           U.RWT0= 000006
                                                                                                                                    001211
ST.WE = 000010
                                                                                                                          XOR
                                                            U.CCYL = 000053
U.CGRP = 000055
                                                                                         U.SDIL= 000031
U.SDIS= 000030
                              TRACKS= 000020
                                                                                                                          XREAD = 000002
SUB = 000013
                              TRKGRP= 000003
                                                                                                                          XWRITE = 000003
S.BADP= 000010
S.BESS= 000011
. ABS. 004750
                        000
          000000
                        001
```

ERRORS DETECTED: 0

VIRTUAL MEMORY USED: 4286 WORDS (17 PAGES)

A:UDAT1.BIN.SY:UDAT1/C=[1,33]DMACRO,UDAT1T,UDATP,UDATR,UDAT1M,UDAT1S

DYNAMIC MEMORY AVAILABLE FOR 69 PAGES

ACHK1	32-22#	32-37	32-39					
ACHK2 ACHK3 ACHK4 ARGS\$	32-26# 32-27 32-33 32-28	32-32# 32-36# 32-28#	38-39	38-39#	40-45	40-45#		
ATTN AVAIL BCHK	6-22# 6-24# 32-35	33-4#						
CHK1 BCHK2 BCHKM	33-7# 33-18# 33-11	33-13 33-25 33-22	40-3#	10-14	(0-26	10-74	/0-/ 7#	
BEUSED BF.DAT BF.ECC BF.EDC BREAK	40-6 8-35# 3-62# 3-64# 3-63# 4-3#	40-9	40-13	40-16	40-26	40-36	40-47#	
BUFCNT	34-43* 3-47#	35-9	35-25	38-8	41-16#			
OUFSIZ CHK CHECK CHGMOD	22-15 34-17# 5-67# 6-32#	22-20	23-68#					
HRRES LRBUF MP1 MP2 MP3	6-43# 22-25# 41-30# 41-31# 41-32#	22-27						
MPADR MPSIZ OMPAR OMPLT	41-29# 38-21 4-9# 6-41#	41 - 28# 38 - 36						
URBUF URPAT VT LIMT	35-5* 35-4* 4-19# 8-4#	35-7 35-13	35-20* 35-17*	35-23 37-9	37-32 41-18#	41-17#		
SCHR ATBUF ATCMP ATERR	8-5# 34-39* 8-40# 8-21#	37-17	37-41	38-16	38-25	41-19#		
ATPRE BNCYL CMPAL CYLS INIT IREC ISCON ONE ONECD ROP RYCLR RVID RVONL RVRUN	5-33# 5-42# 8-42# 8-12# 8-13# 6-30# 6-17# 35-16 8-10# 5-15# 6-33# 6-34#	36-1 36-1#	36-3					

	-	~	~	1	71
2		u	u	U	74

CROSS R	EFERENCE	TABLE (REF V01-0	5)	-81 11:25								SE
ECCCHK ECCFLG ECCRSH ECHOC ECHOC ECHOC ERECOV ERHARD ERLEV ERRMC	8-28# 3-45# 5-11# 4-11# 6-46# 3-46# 6-31# 6-52# 5-10# 6-15#												
ERRMES ERRN ERSOFT EXIT FB.DAT	6-14# 32-3# 6-53# 4-20# 3-22#	29 - 37 32 - 28	32-28	32-28	32-28#	38-39	38-39	38-39	38-39#	40-45	40-45	40-45	40-45#
FB.EDC FCTSIZ	3-23# 5-36# 7-11#												
FIRSTU FMEMFL FORMAT	32-13#	32-16											
FRADR FRADRH	40-7* 40-3*	41-8#											
FRAME FREE FSTOP	5-66# 34-18 3-42#	34-20	37-34	38-7	42-3#								
T.BUF T.HI T.LOW TIME TLDEV	3-15# 3-16# 3-17# 8-16# 6-51#												
WADR WADRH GETCHR GETSTA GETSUB GRPCYL	6-50# 32-11 32-21 6-36# 6-38# 6-37# 5-25#	32 - 20 33 - 4	33-8 33-19	33-15 34-22	34-21 40-19	40-18 40-29	40-28 40-42	40-38 40-45	40-45 40-45	40-45 41-4#	41-3#		
GRPOFF HBHINB HBLONB HD.BAD HD.DBN HD.LBN	5-38# 5-56# 5-57# 3-55# 3-58# 3-52#												
HD.PRV HD.RBN HD.REV HD.XBN HDRPRE HEADER	3-56# 3-53# 3-54# 3-57# 5-34# 5-62#												
HEADER HIBYTE HICYL HIDBN HILBN HIMEM	5-54# 5-24# 5-30# 5-26#												
HIKRN	3-9#	7-11											
HIXBN HOSTRO	5-29# 5-27# 22-2#	29-38	32-9	36-2									

HRDREV IN.01 IN.02 IN.03 IN.04 IN.05 IN.06 IN.07 IN.08 IN.09 IN.10 IN.11 IN.12 IN.13 IN.14 IN.15 IN.15 IN.16 IN.17 IN.18 IN.19 IN.20 IN.21 IN.22 IN.23 IN.25 IN.25 IN.25 IN.25 IN.27 IN.27 IN.27 IN.28	5-13# 23-30# 23-40# 23-40# 23-43# 23-45# 23-45# 23-46# 23-46# 23-50# 23-51# 23-56# 23-56# 23-60# 23-60# 23-61# 23-61# 23-61# 23-61# 23-64#	32-10		
IN.27 IN.28 IN.29 IN.RQ INITW INSEEK INTEDC IRECLB LARGE LBHINB LBLONB LBNCYL LBNHST LBNTRK LINKLN LOBYTE	23-65# 23-67# 23-67# 22-19 8-11# 6-40# 7-9# 5-58# 5-59# 5-39# 5-37# 5-55#	23-38#	23-68	
LONG LONGTO LOW LRADR LRADRH LUNIT LWADR LWADRH MEDTYP MESSAG	24-23 5-6# 5-70# 40-14 40-10 29-20 32-32 32-34 5-35# 6-16#	32-7# 41-10# 41-11# 29-44# 34-33 34-30	41-5# 41-6#	
MICREV MRD MREAD MS1	5-12# 4-17# 25-10# 42-7#	22 - 16 32 - 22	40-24	40-34

	CROSS R	EFERENCE	TABLE (CI	REF V01-0	5)	-61 11:25	: TO PAGE	5-4							3EQ 0076
	MS2 MS3 MS4	42-10# 32-28 42-21#	42-15#												
	MS5 MS6 MS7 MWR	42-26# 38-39 40-45 4-18#	42-31# 42-33# 22-21												
	MWRITE NEWSUB ONLYCL	26-10# 8-14# 8-32#	22 - 21 40 - 21	40-31											
	0UT.01	22-22 23-7# 23-8#	22-23	23-6#	29-13										
	OUT.03 OUT.04 OUT.05 OUT.06	23-9# 23-10# 23-11#													
	OUT.07 OUT.08 OUT.09	23-12# 23-13# 23-14#													
	OUT.10 OUT.11 OUT.12	23-15# 23-16# 23-17#													
	OUT.13 OUT.14 OUT.15	23-18# 23-19# 23-20#													
	OUT.16 OUT.17	23-21# 23-22# 23-23#													
	OUT.19 OUT.20 OUT.21	23-24# 23-25# 23-264													
	OUT.23 OUT.24	23-27# 23-28# 23-29#													
	OUT .19 OUT .20 OUT .21 OUT .22 OUT .23 OUT .24 OUT .25 OUT .25	23-30# 23-31# 23-32#													
	OUT RQ	23-33# 22-23 22-13*	23-34# 22-14 2-38	23-5# 2-38#	42-4	12-1	12-1	42-4#	42-39	42-39#					
	OV OVE.MN OVE.MS OVERFL	2-38 2-38# 42-4# 5-75#	42-4 42-39	2-30#		42-4	42-4	42-4#	42-39	42-37#					•
	OVL OVL.MN OVL.MS OVS.MN	2-38 2-38 42-39 2-38#	2-38# 2-38 42-39	42-4 42-4 42-39#	42-4#	42 - 39 42 - 4#	42-39#								
	OVS.MS OVSTRT PATO PAT1	42-4# 3-10# 37-13 39-8#	38-29	39-3#											
	PAT2 PAT3 PRMS	39-13# 39-18# 32-28 38-39 40-45	32-28 38-39 40-45	32-28 38-39 40-45	32-28 38-39 40-45	32-28 38-39 40-45#	32 - 28 38 - 39	32 - 28 38 - 39	32-28 38-39#	32-28 40-45	32-28 40-45	32-28# 40-45	38-39 40-45	38-39 40-45	38-39 40-45
- 11															

ATT U	NIBUS ADD	DRESSING TABLE (C	MACRO X04 REF V01-0	.00 9-JUL	-81 11:25	:16 PAGE	s-5 M							SEQ 0077
YPE\$ BNBN BNTRK BUFLN LB ONT	32-28 40-45 40-45# 8-18# 5-31# 3-69# 8-23# 3-41#	32-28 40-45 40-45#	32-28 40-45	32-28 40-45	32-28 40-45	32-28 40-45	32-28 40-45	32-28 40-45	32-28# 40-45	32-28# 40-45	32-28# 40-45#	32-28# 40-45#	40-45 40-45#	40-45 40-454
TCPS TCSZ V VERR VRDY	5-8# 5-40# 4-8# 6-23# 6-21#	24-30 21-17												
STAT	21-2# 35-11	35-22	38-7#											
DWRT GS\$ GU\$ RRCA	8-19# 32-28 40-45 40-45 29-31	32-28 40-45 40-45 29-36#	32-28 40-45 40-45	32-28 40-45 40-45#	32-28 40-45 40-45#	32-28# 40-45#	38-39 40-45#	38-39# 40-45#	40-45	40-45	40-45	40-45	40-45	40-45
RROR RRPA	29-7# 29-32#	32 - 28 29 - 35	38-39	40-45										
SEEK TRY TS VEC VECT VINP VS	8-12# 8-22# 5-7# 8-17# 5-63# 8-20# 5-16# 5-32#													
RIES ANG BUF CMD HI LOW SDI STA RDY BESS MCNT MEGR MEGW PARM	8-29# 3-44# 3-40# 8-31# 3-32# 3-32# 3-31# 3-33# 3-28# 6-26# 7-63# 7-63# 7-61# 7-55#	7-63 7-68 7-69 7-61 7-62 7-56												
PAT SCHR SDCL TGOF TGSS TRKL VREG CRES TWRD	7-57# 7-59# 7-56# 7-69# 7-70# 7-58# 29-46# 6-44# 7-8#	7-58 7-60 7-57 7-70 7-59 40-45	40-45*											

```
UDAT1 UNIBUS ADDRESSING MACRO X04.00 9-JUL-81 11:25:16 PAGE S-6 CROSS REFERENCE TABLE (CREF V01-05)
SDILTO
```

```
24-27
                       24-46#
SDISTO
SDIVER
            5-4#
SEKINP
SEND
SEQSEK
            8-15#
                       24-18
            8-34#
SHRTTO
           34-42*
22-14#
29-30*
SIZBUF
                       37-18
22-18
29-40#
                                                             38-23
                                    37-40
                                                38-15
                                                                         41-20#
SNDAGN
SPADJU
SS
ST.C
ST.CON
            5-9#
            4-30#
4-29#
4-47#
ST.DB
ST.DF
            4-44#
ST.DR
            4-37#
            4-28#
ST.ERR
            4-41#
ST.FE
            4-46#
ST.FO
            4-27#
4-25#
4-35#
4-43#
ST.MOD
ST.MSK
ST.OA
ST.PE
            4-39#
ST.PS
            4-42#
ST.RE
ST.RR
ST.RTY
            4-31#
ST.ST
ST.SR
ST.STA
            4-40#
            4-48#
            4-38#
4-26#
4-24#
ST.UNT
            4-45#
ST.WE
STACK
           20-8
                       30-5#
                        32-8#
START
           20-9
                       21-18
21-14
21-17#
21-9
           21-16 21-9#
STATEX
                                    21-22#
STATLP
STATOK
           21-12
STATUS
            4-10#
           6-45#
5-22#
6-3#
6-5#
STSRES
SUB
TIMSIZ
                       32-8
T2CMD
T2DLL
            6-4#
            6-8#
T4881
T4882
            6-9#
T4MPRM
            6-6#
T4MXFR
            6-12#
T4SEEK
            6-11#
            6-10#
T4SOFT
T4UPRM
            6-7#
           33-10*
33-5*
                       33-16*
33-21*
24-23#
24-28#
24-41#
TADR
                                                40-14:
                                                            40-22
                                                                         40-32
                                    40-7
                                                                                     41-13#
                                    40-3
TADRH
                                                                                     41-14#
TALK1A
           24-20
           24-26
24-32
24-22
TALK18
                                    24-38
TALKZA
TALK28
                       24-36
                                    24-40
                                                24-42#
```

```
UDAT1 UNIBUS ADDRESSING MACRO X04.00 9-JUL-81 11:25:16 PAGE S-7 CROSS REFERENCE TABLE (CREF V01-05)
```

١	C.1055 11	C. CILLIACE	TABLE YEN			
AND DESCRIPTION OF REAL PROPERTY AND DESCRIPTION OF REAL PROPERTY AND DESCRIPTION OF THE PERSON OF T	TALKER TEST4 TIMEOU TLEN.U TO	24-15# 2-36# 5-61# 7-10# 28-1#	24 - 1 7 - 11			
	TOOBIG TRACKS TRKGRP U.CBN U.CCNT U.CCOP	5-69# 8-36# 5-28# 7-41# 7-22#	7-42 7-23 7-45			
	U.CCYL U.CGRP U.COPY U.CSEC U.CTRK	7-48# 7-49# 7-43# 7-28# 7-24#	7-49 7-50 7-44 7-29 7-25			
	U.ECCT U.ELEV U.LCYL U.LGRP U.MASK U.MBN	7-34# 7-31# 7-50# 7-10 7-29# 7-40#	7-35 7-32 7-51 7-51# 7-30 7-41			
	U.MLEV U.MSEC U.NEXT U.NFUN U.NSEC	7-33# 7-26# 7-15# 7-20# 7-25#	7-34 7-27 7-16 7-21 7-26			
	U.PARM U.PAT U.PCTG U.RBN U.RTRY	7-38# 7-21# 7-23# 7-42# 7-32#	7-39 7-22 7-24 7-43 7-33			
	U.RVER U.RWER U.RWTO U.SDIL U.SDIS	7-46# 7-45# 7-18# 7-36# 7-35#	7-47 7-46 7-19 7-37 7-36			
	U.SEEK U.SNUM U.SUBP U.SUBU U.TIMO U.TSEC	7-19# 7-47# 7-16# 7-39# 7-17# 7-27#	7-20 7-48 7-17 7-40 7-18 7-28			
	U.WPRT U.WRIT UDATA UNITO UNIT1	7-37# 7-30# 25-14 5-46# 5-47#	7-38 7-31 25-16	26-11*	26-15	26-20#
	UNIT2 UNIT3 UNSSUC UREAD UTOTST	5-48# 5-49# 6-42# 4-14# 6-13#	25-15	38-17		
١	UWRITE	4-15#	26-16	37-42		
	WAITSI WBUFLN WCHECK	4-13# 3-68# 8-37#	3-69			

UDAT1 UNIBUS ADDRESSING MACRO X04.00 9-JUL-81 11:25:16 PAGE S-8 CROSS REFERENCE TABLE (CREF V01-05)

40-40

8-39# 3-39# 8-30# 3-43# 35-6 5-65# 3-38# 5-41# 5-5# 6-25# 27-10# 4-5# 4-6# WCHKAL WCONT WONLY WREAL WRITE WRONG WSTOP 35-21 37-9# XBNCYL XFERRT XMTERR 21-11 33-9 XOR 33-20 KREAD

XWRITE

40-44

40-45

```
UDAT1 UNIBUS ADDRESSING MACRO X04.00 9-JUL-81 11:25:16 PAGE M-1
CROSS REFERENCE TABLE (CREF VO1-05 )
BCS
         11-1#
         16-65#
16-37#
CERROR
DEVFTL
DIAG$$
          9-5#
                   2-38
42-39
2-38
DMCODE
          1-3#
DMEND
          1-32#
                              42-4
          1-18#
DMOVLY
         17-3#
DSTAT
         16-93#
ENDERR
ERRDF
         13-33#
ERRHRD
         13-39#
                    32-28
                               38-39
                                         40-45
ERROR
         16-49#
ERROR$
         14-3#
                    32-28
                               38-39
                                         40-45
         16-75#
ERRORC
         13-27#
ERRSF
ERRSFT
         13-47#
GETP$
         15-15#
                    40-45
                              40-45
HARDER
         16-31#
         16-84#
MOVMSG
         10-3#
MSG
MSSG
         16-111#
MSSGE
         16-133#
NDERR
         16-101#
                   2-38#
32-28
21-22
21-7
                              2-38#
32-28
22-28
22-12
                                         42-4
32-28
24-42
24-15
                                                    42-4#
32-28
25-17
25-10
         2-38
14-33#
                                                              42-39
40-45
OVTERM
                                                                         40-45
27-15
27-10
PARGS.
                                                                                   40-45
                                                                                              40-45
                                                                                                         40-45
                                                              26-17
                                                                                    29-39
POP
         12-11#
         12-3#
PUSH
                                                                                              29-9
REPSFT
         16-10#
                    40-45
RSTR$
         15-8#
RXOR
         18-4#
SAVR$
         15-1#
                    40-45
SOFTER
         16-4#
         16-43#
SYSFTL
         19-3#
TALKX
UDAT2 DISK RESIDENT MACRO X04.00 9-JUL-81 11:39:12
TABLE OF CONTENTS
    3<del>-</del>
                   UDA DM PROGRAM PARAMETERS
                   TEST 4 SPECIFIC INFORMATION
   9-
20-
21-
22-
33-
33-
33-
33-
41-
43-
44-
44-
47-
                   MACRO DEFINITIONS
                   START OF TEST CODE
                   RDSTAT - GET DRIVE'S REAL TIME DRIVE STATE
                   HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED, ETC.
                   DISK DRIVE SEQUENCER
                   INITIALIZE DRIVE AND LOOK AT DRIVE SIGNALS
                   ECHO DATA TO DRIVE
                   GET STATUS COMMAND
                   GET DRIVE CHARACTERISTICS
                   CHECK WHICH COMMAND HAS BEEN GIVEN
                   MEMORY WRITE
                   MEMORY READ
                   DIAGNOSE
                   DIAGNOSE/READ MEMORY TO SEE IF ERROR OCCURRED
                  DIAGNOSE/DO A DRIVE CLEAR
DIAGNOSE/GET PROGRAM NAME SPECIFIED BY DRIVE AND DOWNLINE LOAD
                   DIAGNOSE/REPORT ERROR -- NO DOWNLINE LOAD PROGRAM
                   DIAGNOSE/GET EXTENDED STATUS
                   DIAGNOSE/SET UP RESPONSE TO HOST AND EXIT
                   TEST 2 SPECIFIC ROUTINES
```

47-	2	READ MEMORY SUBROUTINE
48-	1	WRITE MEMORY SUBROUTINE
49-	1	CONVERT MEMORY SKEWED BY BYTE
50-	1	GET BYTE COUNT
50- 51- 52- 54- 55-	1	TYPE WHAT KIND OF RECEIVE ERROR
52-	1	GET UNITS FROM HOST
54-	1	GET STATUS SUBROUTINE
55-	1	CLEAR DRIVE SUBROUTINE
56-	1	DIVIDE BY OCTAL 50 AND FIND ASCII EQUIVALENT

.TITLE UDATE DISK RESIDENT

COPYRIGHT (C) 1981 DIGITAL EQUIPMENT CORPORATION, MAYNARD, MASS.

THIS SOFTWARE IS FURNISHED UNDER A LICENSE FOR USE ONLY ON A SINGLE COMPUTER SYSTEM AND MAY BE COPIED ONLY WITH THE INCLUSION OF THE ABOVE COPYRIGHT NOTICE. THIS SOFTWARE, OR ANY OTHER COPIES THEREOF, MAY NOT BE PROVIDED OR OTHERWISE MADE AVAILABLE TO ANY OTHER PERSON EXCEPT FOR USE ON SUCH SYSTEM AND TO ONE WHO AGREES TO THESE LICENSE TERMS. TITLE TO AND OWNERSHIP OF THE SOFTWARE SHALL AT ALL TIMES REMAIN IN DIGITAL.

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION.

DIGITAL ASSUMES NO RESPONSIBILITY FOR THE USE OR RELIABILITY OF ITS SOFTWARE ON EQUIPMENT WHICH IS NOT SUPPLIED BY DIGITAL.

THIS PROGRAM SHALL BE ASSEMBLED WITH THE PROGRAM DMACRO USING A COMMAND LINE SIMILAR TO:

UDATZ.BIN, UDATZ/C=[1,2]DMACRO, UDATZT, UDATP, UDATZM, UDATR, UDATZS

TEST4 = 0 .ENABL ABS DMCODE UDAT2.0.714.3.0 : THIS IS NOT TEST4

1		.SBTTL	UDA DM F	PROGRAM PARAMETERS	
3			.LIST ME	B,100	
5			EQUATES		
7			HIGHEST	USABLE LOCATION OF UDA N	MEMORY + 1
10	010000 007774	HIMEM OVSTRT	=	10000 7774	: HIGH MEMORY+1 : OVERLAY ADDRESS LOCATION
12			OFFSETS	FOR FORMAT TRACK TABLE	
16 17.	000000 000001 000002	FT.BUF FT.HI FT.LOW	= = = = = = = = = = = = = = = = = = = =	0. 1. 2.	;BUFFER POINTER OFFSET ;HI ORDER HEADER OFFSET ;LOW ORDER HEADER OFFSET
19 20			OFFSETS	FOR FORMAT TRACK BUFFER	
21 22 23 24	000000 000400		=	0. 256.	:FIRST DATA WORD OFFSET :EDC WORD OFFSET
25		:	OFFSETS	FOR READ/WRITE I/O CHAIN	TABLES
29 30 31 32 33	000000 000001 000002 000003 000004 000005 000006	RW.LOW RW.HI	= = = = = = = = = = = = = = = = = = = =	0. 1. 2. 3. 4. 5.	;STATUS AND NEXT BUFFER POINTER OFFSET ;POINTER TO DATA BUFFER ;HI ORDER EXPECTED HEADER ;LOW ORDER EXPECTED HEADER ;SDI COMMAND AND HEAD ADDRESS ;DUMMY SDI CONTROL BLOCK POINTER ;THETA FROM INDEX
36 37			CONSTANT	S FOR READ AND WRITE XFO	c's
38 39 40 41 42 43 44 45 46 47	140000 040000 100000 000000 100000 122400 013400 010000 100000 040000	WSTOP WCONT RSTOP RCONT FSTOP WREAL RREAL ECCFLG EOC BUFFLG	= = = = = = = = = = = = = = = = = = = =	140000 40000 100000 0 100000 122400 13400 10000 100000 40000	: LAST ENTRY IN CHAIN FOR WRITE : WRITE CONTINUE : LAST ENTRY IN CHAIN FOR READ : READ CONTINUE : LAST ENTRY IN CHAIN FOR FORMAT : WRITE REAL TIME ECOMMAND : READ REAL TIME COMMAND : ECC ERROR IN BUFFER BIT : END OF CHAIN : BUFFER FULL OR EMPTY FLAG
48 49 50			HEADER (CODES	
53 54 55 56	000000 060000 030000 110000 050000 120000	HD.LBN HD.RBN HD.REV HD.BAD HD.PRV HD.XBN	= = = = = = = = = = = = = = = = = = = =	000000 060000 030000 110000 050000 120000	GOOD LBN GOOD RBN, PERHAPS UNUSED REVECTORED LBN BAD BLOCK PRIMARY REVECTORED BLOCK XBN BLOCK

58	140000	HD.DBN	= 140000	DBN BLOCK
58 59 60		*	OFFSETS FOR DATA BUFFE	RS
61 62 63 64 65 66 67 68 69 70	000000 000400 000401	BF.DAT BF.ECC BF.ECC	= 0. = 256. = 257.	:DATA :ERROR DETECTION CODE :LAST 17 ECC RESIDUES
66			BUFFER AND READ/WRITE	CHAIN LINK SIZES
68 69 70	000401 000415 000007	WBUFLN RBUFLN LINKLN		: WRITE BUFFER SIZE : READ BUFFER SIZE : LINK SIZE

M

1		: XFC DEFINITION EQU	MATES
23 4 5 6 7 8 9 10 11 23 14 5 6 7 18 19 20 21	000000 000001 000003 000004 000005 000006 000007 000010 000011 000012 000013 000014 000015 000016 000017 000020 000021	BREAK = 0. f ORMAT = 1. XREAD = 2. XWRITE = 3. SEND = 4. RCV = 5. COMPARE = 6. STATUS = 7. ECHO = 8. DINIT = 9. WAITSI = 10. UREAD = 11. UWRITE = 12. ECC = 13. MRD = 14. MWR = 15. CVT = 16. EXIT = 17.	;BREAKPOINT XFC CODE ;FORMAT TRACK XFC CODE ;READ N SECTORS XFC CODE ;WRITE N SECTORS XFC CODE ;SEND SDI COMMAND XFC CODE ;RECEIVE SDI MESSAGE XFC CODE ;COMPARE DATA PATTERN TO BUFFER ;RETURN DRIVE STATUS XFC CODE ;ECHO DATA TO DRIVE XFC CODE ;DRIVE INITIALIZE XFC CODE ;WAIT FOR SECTOR OR INDEX PULSE ;READ UNIBUS MEMORY XFC CODE ;WRITE UNIBUS MEMORY XFC CODE ;DO ECC ON BUFFER XFC CODE ;SEND BUFFER TO MAINTENANCE READ COMMAND ;GET BUFFER FROM MAINTENANCE WRITE COMMAND ;CONVERT TO PHYSICAL ADDRESS XFC CODE ;TERMINATE DM PROGRAM XFC CODE
22		GET STATUS OFFSETS	
18 19 20 21 22 23 24 22 26 27 28 29 31 33 34 35 36 37	000000 000000 000001 000002 000002 000002 000003	ST.UNT = 0. ST.MSK = 0. ST.STA = 1. ST.MOD = 1. ST.ERR = 2. ST.CON = 2. ST.C = 2. ST.RTY = 3.	;UNIT NUMBER ;SUBUNIT MASK ;STATUS BYTE ;MODE BYTE ;ERROR BYTE ;CONTROLLER BYTE ;C BITS ;RETRY COUNT/FAILURE CODE
33		STATUS BIT DEFINIT	IONS
35 36 37 38 39 40 41 42 43 44 45 46 47 48	000200 000100 000040 000020 000001 000200 000100 000040 000020 000010 002000 001000 000400	ST.OA = 200 ST.RR = 100 ST.DR = 40 ST.SR = 20 ST.PS = 2 ST.RU = 1 ST.FE = 200 ST.RE = 100 ST.PE = 40 ST.DF = 20 ST.WE = 10 ST.BE = 100 ST.BE = 1000 ST.BE = 400	; ONLINE TO ANOTHER (SET IF DRIVE UNAVAILABLE) ; READJUSTMENT BIT (SET IF RECALIBRATION REQUIRED) ; DIAGNOSTIC REQUEST (SET IF DIAGNOSTIC REQUESTED) ; SPINDLE READY (SET IF SPINDLE READY) ; PORT SWITCH (SET IF PORT SWITCH IN) ; RUN/STOP SWITCH (SET IF RUN/STOP SWITCH IN) ; FATAL ERROR (SET IF FATAL ERROR OCCURRED) ; RETRIABLE ERROR (SET IF RETRIABLE ERROR OCCURRED) ; PROTOCOL ERROR (SET IF PROTOCOL ERROR OCCURRED) ; INITIALIZATION FAILURE (SET IF INIT FAILED) ; WRITE ENABLE (SET IF WRT ATTEMPTED ON PROT DISK) ; FORMATTING (SET IF FORMATTING ENABLED) ; DIAGNOSTIC CYLS (SET IF DIAG CYL ACCESS ENABLED) ; SECTOR SIZE (SET FOR 576 BYTE SECTORS)

1	GET COMMON CHARACTERISTICS	OFFSETS
3 000000 4 000000 5 000000 6 000001 7 000001 8 000001 10 000002 11 000002 12 000003 13 000003 14 000004 15 000007 16 000007	SHRTTO = 0. SDIVER = 0. XFERRT = 0. LONGTO = 1. RETS = 1. RCTCPS = 1. SS = 1. ERLEV = 2. ECCRSH = 2. MICREV = 3. HRDREV = 3. DRVID = 4. DRTYPE = 7. REVS = 7.	:SHORT TIMEOUT <3:0> :SDI VERSION <7:4> :TRANSFER RATE <15:0> :LONG TIMEOUT <3:0> :RETRIES <7:4> :F/RCT COPIES <11:8> :SECTOR SIZE <15:15> :ERROR RETRY LEVELS <7:0> :ECC THRESHOLD <15:8> :MICROCODE REVISION NUMBER <7:0> :HARDWARE REVISION NUMBER <15:8> :UNIQUE DRIVE ID <47:0> :DRIVE TYPE IDENTIFIER <7:0> :REVS/SECOND <15:8>
18 19	GET SUBUNIT CHARACTERISTICS	
18 19 20 21 22 000013 23 000000 24 000001 25 000002 27 000002 28 000003 30 000003 30 000003 31 000004 32 000004 33 000005 34 000005 35 000006 37 000011 38 000011 39 000012 40 000014 41 000021 42 000022	SUB = 11. LBNCYL = 0. HICYL = 1. GRPCYL = 2. HILBN = 2. HIXBN = 2. TRKGRP = 3. HIRBN = 3. HIDBN = 3. RBNTRK = 4. RM = 4. DATPRE = 5. HDRPRE = 5. MEDTYP = 6. FCTSIZ = 8. LBNTRK = 9. GRPOFF = 9. LBNHST = 10. RCTCSZ = 12. XBNCYL = 17. DBNCYL = 18.	; OFFSET TO PUT SUBUNIT AFTER COMMON; ; NUMBER OF CYLINDERS IN LBN AREA <31:0>; HI ORDER CYLINDER BITS <15:12>; GROUPS PER CYLINDER <7:0>; HI STARTING LBN <11:8>; HI STARTING XBN <15:12>; TRACKS PER GROUP <7:0>; HI STARTING RBN <11:8>; HI STARTING DBN <15:12>; RBNS PER TRACK <6:0>; REMOVABLE MEDIA <7:7> 1=REMOVEABLE; DATA PREAMBLE SIZE IN WORDS <7:0>; HEADER PREAMBLE SIZE IN WORDS <15:8>; MEDIA TYPE <31:0>; FCT COPY SIZE <15:0>; LBNS PER TRACK <7:0>; GROUP OFFSET (SECTORS) <15:8>; LBNS IN HOST AREA <31:0>; RCT COPY SIZE <15:0>; CYLS IN XBN AREA <15:0>; CYLS IN XBN AREA <15:8>; CYLS IN XBN AREA <15:8>; CYLS IN DBN AREA <15:8>
43	: UNIT CODES	Actes in both American
38 000011 39 000012 40 000014 41 000021 42 000022 43 44 45 46 000001 47 000002 48 000004 49 000010 50 51 52 53 54 177400 51 177400 55 000377 56 007777 57 170377	UNITO = 1. UNIT1 = 2. UNIT2 = 4. UNIT3 = 8.	UNIT ZERO CODE UNIT ONE CODE UNIT TWO CODE UNIT THREE CODE
52	BIT MASK DEFINITIONS	
54 177400 55 000377 56 007777 57 170377	HIBYTE = 177400 LOBYTE = 000377 HBHINB = 7777 HBLONB = 170377	:HIGH BYTE MASK :LOW BYTE MASK :HI BYTE, HI NIBBLE MASK :HI BYTE, LO NIBBLE MASK

	ESIDENT MACRO X04.0	0 9-JUL-81 11:39:12	PAGE 5-1	K 7	
58 59	177417 177760	LBHINB = LBLONB =	177417 177760		; LO BYTE, HI NIBBLE MASK ; LO BYTE, LO NIBBLE MASK
61 62 63	000001 000002 000004	TIMEOUT = HEADER = REVECT =	1. 2. 4.		:DRIVE TIMEOUT CODE :HEADER COMPARE FAILURE CODE ;REVECTOR NEEDED CODE
58 59 60 61 62 63 64 65 66 67 68 69 70	000002 000004 000010	WRONG = FRAME = CHECK =	2. 4. 8.		;FIRST WORD NOT START FRAME CODE ;FRAMING ERROR CODE ;CHECKSUM ERROR CODE
68 69 70	000001 000002	TOOBIG =	1:		:NUMBER OF WORDS EXCEEDS 7064 ;DM BUFFER ADDRESS IS LESS THAN 714
72 73		81	T MASK		
74 75	000001 000002	LARGE = OVERFL =	1.		;BLOCK NUMBER TOO LARGE ;SECTOR NUMBER LARGER THAN 16 BITS

1	;MAINTANEN	CE READ/WRITE R	REQUEST NUMBERS	
14 000013 15 000014 16 000015 17 000016	T1MSIZ = T2DLL = T2CMD = T4MPRM = T4BB1 = T4BB2 = T4SOFT = T4SEEK = T4MXFR = UTOIST = ERRMES = ERRMC = MESSAG = DONE =	0. 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13.		GET FREE MEMORY PARAMETERS DOWNLINE LOAD DRIVE DIAGNOSTIC MANUAL INTERVENTION TEST 2 PROTOCOL GET MASTER PARAMETERS FROM SW QUESTIONS GET UNIT PARAMETERS FROM HW QUESTIONS GET BAD BLOCKS (1 THRU 14) GET REST OF BAD BLOCKS (15 AND 16) ADD TO SOFT ERROR AND ECC COUNT ADD 1 TO SEEK COUNT ADD TO MEGABITS READ AND WRITTEN GET UNITS TO TEST PRINT ERROR MESSAGE TEST 4 ERROR REPORTING INFORMATION MESSAGE MARK DM PROGRAM AS NO LONGER RUNNING
19	. 011	HER BIT DEFINIT	TIIONS	
22 23 000002 000004	RCVRDY = ATTN = RCVERR = AVAIL = XMTERR = RWRDY =	1 2 4 100 400 100000		RECIEVER READY 1 = READY ATTENTION BIT FOR RETURN DRIVE SIGNALS XFC RECIEVER ERROR AVAILABLE 1 = AVAILABLE TRANSMIT ERROR IF SET, UDA IS ABLE TO READ AND/OR WRITE TO DRIVE
. 28 29	; SD		RESPONSES	
32 000201 33 000213 34 000014 35 000005 36 000207 37 000210 38 000011 39 000216 40 000012 41 000176	DISCON = ERECOV = CHGMOD = DRVONL = DRVCLR = GETCHR = GETSTA = IRECLB = INSEEK = COMPLT = UNSSUC = CHRRES = SBCRES = STSRES = ECHOC =	204 6 201 213 14 5 207 210 11 216 12 176 175 170 167 366 350 ROR CODES		DISCONNECT DRIVE ERROR RECOVERY CHANGE MODE DRIVE ONLINE DRIVE RUN DRIVE CLEAR OPCODE GET CHARACTERISTICS GET SUBUNIT CHARACTERISTICS GET STATUS RECALIBRATE INITIATE SEEK SUCCESSFUL COMPLETION UNSUCCESSFUL COMPLETION GET CHARACTERISTICS RESPONSE GET SUBUNIT CHARACTERISTICS RESPONSE GET STATUS RESPONSE DIAGNOSTIC ECHO COMMAND AND RESPONSE
50 000000 51 000400	FTLSYS = FTLDEV =	400		: SYSTEM FATAL ERROR : DEVICE FATAL
52 53 001400	ERHARD = ERSOFT =	1000		; HARD ERROR ; SOFT ERROR

1		.SBTTL	TEST 4	SPECIFIC INFORMATION	
2		:			
4		:	1E31 4	SPECIFIC INFORMATION	
5			CONSTAN	TS	
7 8 9 10 11	000377 000105 000055 007723	SCTWRD INTEDC TLEN.U FIRSTU		255. 69. U.LGRP+1 HIMEM-TLEN.U	: NUMBER OF WORDS IN SECTOR TO FILE : INITIAL EDC VALUE : UNIT PARAMETER LENGTH : LOCATION OF FIRST UNIT PARAMETER BLOCK
12 13 14		•	UNIT PA	RAMETER OFFSETS	
15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 33 33 33 33 33 34 35 36 46 46 46 46 46	000000 000001 000005 000006 000007 000010 000011 000012 000014 000015 000016 000020 000021 000022 000023 000024 000025 000025 000031 000032 000031 000032 000031 000035 000031 000035 000031 000035 000047 000041 000043	U.TIMO U.RWTO U.SEEK U.NFUN U.PAT U.CCNT U.PCTG U.CTRK U.NSEC U.MSEC U.MASK U.WPRT U.BLEV U.B		0. U.NEXT+1 U.SUBP+4 U.TIMO+1 U.RWTO+1 U.SEEK+1 U.NFUN+1 U.PAT+1 U.CCNT+2 U.PCTG+1 U.MSEC+1 U.MEV+1 U.MEV+1 U.MEV+1 U.MEV+1 U.MBN+2 U.CBN+2 U.CBN+2 U.CGRP+1 U.CCYL+2 U.CGRP+1 U.CCYL+2	POINTER TO NEXT UNIT (RING LINKED LIST) 4 WORDS OF SUBUNIT PARAMETER POINTERS AREA TO STORE VARIOUS TIMEOUT VALUES READ/WRITE TIMEOUT AREA NUMBER OF SEEKS ISSUED NEXT FUNCTION ADDRESS (FOR DEFERRED (ALLS)) PATTERN NUMBER TO WRITE CURRENT COUNT OF T/G LOOPS POINTER TO CURRENT TRACK OR GROUP TRACK COUNT FOR GROUP OPERATIONS NUMBER OF SECTORS R/W THIS TRY NUMBER OF SECTORS TO BE R/W NUMBER OF SECTORS TO BE R/W NUMBER OF SECTORS R/W SO FAR UNIT MASK FOR XFC (ALLS (0001 - 1000) WRITE PROTECTION STATUS CURRENT ERROR RECOVERY LEVEL MAXIMUM NUMBER OF READ RETRIES MAXIMUM NUMBER OF READ RETRIES MAXIMUM NUMBER OF ERROR RECOVERY LEVELS ECC THRESHOLD SDI SHORT TIMEOUT SDI LONG TIMEOUT SDI LONG TIMEOUT MASK TO WRITE PROTECT READ-ONLY DRIVES UNIT PARAMETER WORD SUBUNIT OFFSET (0 - 3) MASTER L/DBN CURRENT L/DBN FOR START OF CHAIN RBN TO BE READ/WRITTEN IF LBN REVECTORED 4 WORDS THAT HOLD THE SUBUNIT LOGICAL NUMBERS CURRENT CYLINDER LAST CYLINDER SEEKED TO LAST GROUP SEEKED TO
48			SUBLINIT	PARAMETER OFFSET	
48 49 50 51 52 53 54 55 56 57	000000 000001 000003 000004 000005 000006 000007	S.MEGR	= = =	O. S.PARM+1 S.SDCL+2 S.PAT+1 S.TRKL+1 S.SCHR+1 S.MEGR+1	SUBUNIT PARAMETER WORD STARTING DIAGNOSTIC CYLINDER PATTERN TO USE FOR WRITES NUMBER OF SECTORS IN ONE TRACK POINTER TO SUBUNIT CHARACTERISTICS SECTORS READ (UP TO 245) SECTORS WRITTEN (UP TO 245)

UDAT2 DISK RESIDENT MACRO X04.00 9-JUL-81 11:39:12 PAGE 7-1 TEST 4 SPECIFIC INFORMATION

58	00001C 000011	S.BADP S.BESS		S.MEGW+1 S.BADP+1			BAD BLOCK AREA GIN/END SETS	
60 61 62 63			IF T	RACK/GROUP LIMITS AR OWING FIELDS ADDED TO	E CIVEN,	THE SUBUNIT	PARAMETERS HAVE	THE
64 65 66	000011 000013 000015	S.MCNT S.TGOF		S.BESS S.MCNT+2 S. TGOE+2		: ORIGINAL TR	ACK/GROUP COUNT	

N 7

123456780	000001 000002	D.LIMT D.SCHR	=	SDI CONTROL 1 2 PARAMETER BI		;	DUMMY SDI SEARCH LIMIT DUMMY POINTER TO SUBUNIT CHAR-5
10 11 12 13 14 15 16 17 18 19 20 21	100000 040000 020000 010000 004000 002000 001000 000400 000200 000100 000020 000004	DROP INITW RESEEK DIREC NEWSUB SEKINP FTIME REVEC RBNBN REDWRT DATERR RETRY		100000 40000 20000 10000 4000 2000 1000 400 200 100 200			DROP BIT (SET IF UNIT OR SUBUNIT DROPPED) INITIAL WRITE (SET IF INITIAL WRITE IN PROG) IF 1, INDICATES THAT A SEEK IS NECESSARY DIRECTION (SET IF SEQUENTIAL ACCESSES DECREASING) SET IF SEQUENTIAL SEEKS MOVED TO NEW SUBUNIT SEEK IN PROGRESS - SET IF TRUE FIRST TIME FLAG - SET FOR INI: CODE REVECTOR BIT (SET IF BLOCK REVECTORED) SEE IF WORKING ON RBN REDWRT (READ OR WRITE IN PROGRESS SET IF WRITE) DATA ERROR IF SET IF CLEAR, START RETRIES AT ZERO
22 23			SUBUNI	T PARAMETER	BITS (S.P.	ARM(R4))
18 19 20 21 22 23 24 25 26 27 28 29 30 31 33 33 34 35 37 38 39	020000 010000 004000 002000 001000 000200	DCYLS ECCCHK RONLY WONLY RTRIES ONLYCL	= = = = = = = = = = = = = = = = = = = =	20000 10000 4000 2000 1000 200			DIAGNOSTIC CYLINDER FLAG (SET IF DBNS) 1 IF ECC CORRECTION ALLOWED MASTER BITS READ ONLY (SET IF READ ONLY) WRITE ONLY (SET IF WRITE ONLY) 1 IF RETRIES ALLOWED SET IF ONLY CYLINDERS SPECIFIED USED DURING SETUP ONLY
32 33 34 35	000100 000040 000020 000010	SEQSEK BEUSED TRACKS WCHECK	= = =	100 40 20 10		CHECK	SEQUENTIAL SEEK (START UP TESTING ONLY) BEGIN/END SETS (USED IF SET) TRACKS OR GROUPS (TRACK IF SET) WRITE CHECK BIT (IF SET, WRITE CHECK WILL BE DONE) IS ALSO USED FOR THE UNIT PARAMETERS
37 38	000004 000002	WCHKAL DATCMP	= .	4 2		:	SET IF WRITE CHECK ALWAYS TO BE DONE DATA COMPARE (SET IF DATA COMPARE TO BE DONE)
39 40	000001	DCMPAL	=	1	. D/		IS ALSO USED FOR THE UNIT PARAMETERS SET IF DATA COMPARE ALWAYS TO BE DONE

SEQ 0092

SEQ 0093

E 8 UDATE DISK RESIDENT MACRO X04.00 9-JUL-81 11:39:12 PAGE 11 MACRO DEFINITIONS SEQ 0094 .MACRO BCS LAB .. BCC .+2 LAB.. .ENDM

F 8

MOV X,-(SP)

MOV (SP)+,X

1	•	PUSH REGISTER MACRO
3 4	•	.MACRO PUSH R9 .IRP X, <r9></r9>
67		.ENDR .ENDM
89		POP REGISTER MACRO
11 12	•	.MACRO POP R9 .IRP X, <r9></r9>
14		ENDR ENDM

```
: ERROR MACROS
                                      THESE MACROS ARE CALLED TO REPORT ERRORS TO THE HOST PROGRAM.
                                      THE MACRO NAMES ARE : ERRSF, ERRDF, ERRHRD, ERRSFT. EACH RESULTS IN THE HOST
                                      BEING REQUESTED TO REPORT THE ERROR
                                                        1 (MS$) MESSAGE POINTER
                                       : ARGUMENTS:
                                                          (P1$) PARAMETER #1
                                                          (P2$) PARAMETER #2
                                                          (P3$) PARAMETER #3
                                                          (P4$) PARAMETER #4
                                                          (P5$) PARAMETER #5
1112345678901233456789012334567890123345678901
                                                          (P6$) PARAMETER #6
                                                        8 (P7$) PARAMETER #7
                                                        9 (P8$) PARAMETER #8
                                      THE MESSAGE POINTER MUST POINT TO AN ADDRESS IN THE OVERLAY 'MS" IMMEDIATELY
                                       : FOLLOWING THE MAIN CODE. ANY ADDRESS MODE MAY BE USED (E.G. #MS1, @R2).
                                       THE ADDRESS MUST CONTAIN AN ASCII FORMAT STRING TO DETERMINE THE MESSAGE
                                      : TO PRINT.
                                      THE PARAMETER ARGUMENTS ARE OPTIONAL. THEY SHOULD BE SUPPLIED ONLY WHEN THERE IS DATA TO BE PASSED TO THE HOST THAT WILL BE USED IN PRINTING THE
                                      :MESSAGE. THESE PARAMETER ARGUMENTS ARE THE ADDRESS OF DATA TO BE PASSED
                                      :USING ANY ADDRESSING MODE DESIRED.
                                      :ALL REGISTERS ARE RETURNED UNCHANGED. IT SHOULD BE NOTED THAT ARGUMENTS
                                      CONTAINING SOMETHING OTHER THAN A REGISTER NAME (E.G. #100 OR MEMADR)
                                      :ASSEMBLE TO INSTRUCTIONS THAT SAVE AND RESTORE A REGISTER ON THE STACK.
                                               .MACRO ERRSF MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$
                                               .NARG ARGS$
                                                .RADIX 10
                                               ERROR$ 0,MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$,\ERRN
                                               . ENDM
                                               .MACRO ERROF MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$
                                               .NARG ARGS$
                                                RADIX 10
                                               ERROR$ 1.MS$.P1$.P2$.P3$.P4$.P5$.P6$.P7$.P8$.\ERRN
                                               . ENDM
                                               .MACRO ERRHRD MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$
                                               .NLIST
                                               .NARG ARGS$
                                                RADIX 10
                                               ERROR$ 2,MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$,\ERRN
                                               .LIST
                                                . ENDM
                                                .MACRO ERRSFT MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$
                                                .NARG ARGS$
                                                RADIX 10
                                               ERROR$ 3,MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$,\ERRN
                                                . ENDM
```

```
: THE FOLLOWING MACRO ACTUALLY PROCESSES THE ERROR CALL TO THE HOST PROGRAM
                                               .MACRO ERROR$ ET$.MS$.P1$.P2$.P3$.P4$.P5$.P6$.P7$.P8$.ERRN$
                                                 .RADIX 8
                                                 PRMS=ARGS$-1
                                                 . IF LT, <PRMS>
                                                   .ERROR: NOT ENOUGH ARGUMENTS IN ERROR CALL
                                                  ENDC
                                                 REGS$=-1
                                                 .IIF GE. <PRMS-8.>, PARGS. P8$
10
11
12
13
14
15
16
17
                                                 .IIF GE, <PRMS-7.>, PARGS. P7$
                                                 .IIF GE. <PRMS-6.>, PARGS. P6$
                                                 .IIF GE. <PRMS-5.>, PARGS. P5$
                                                 .IIF GE. <PRMS-4.>, PARGS. P4$
                                                 .IIF GE, <PRMS-3.>, PARGS. P3$
                                                 .IIF GE. < PRMS-2.>, PARGS. P2$
                                                 .IIF GE, <PRMS-1.>, PARGS. P1$
. IF GE REGS$
                                                   RSTR$ \REGS$
                                                 .ENDC
                                                 .RADIX 10
                                                 .LIST
                                                                                                      CALL RERROR
                                                                                                                      :ERROR # ERRNS".
                                                 .NLIST
                                                 .RADIX 8
                                                 .LIST
                                                                                                      .WORD <PRMS * 2000> + < ET$ * 400> + ERRN
                                                                                                      . WORD MS$
                                                  .NLIST
                                                 ERRN=ERRN+1
                                               . ENDM
                                               .MACRO PARGS .. ADDR$
                                                 .NIYPE PTYPES, ADDRS
                                                 . IF EQ. <PTYPE$870>
                                                   .IIF EQ, <PTYPE$&7>-REGS$, RSTR$ \REGS$
                                                   .LIST
                                                                                                      MOV ADDRS .- (SP)
                                                    .NLIST
                                                 . IFF
                                                   . IF EQ. <PTYPE$87>-1
                                                                                  PICK A REGISTER TO USE
                                                                                  SELECT R2 IF R1 IS USED IN PARAMETER FETCH
                                                     REGU$=2
                                                   . IFF
                                                     REGUS=1
                                                                                  :OTHERWISE USE R1
                                                    .ENDC
                                                   . IF NE . < REGUS-REGS$>
                                                                                  : IF REGISTER NOT ALREADY SAVED
                                                     . IF GE , REGS$
                                                       RSTR$ \REGS$
                                                                                  RESTORE CURRENT SAVED REGISTER
                                                      .ENDC
                                                     SAVR$ \REGU$
                                                                                  : THEN SAVE SELECTED REGISTER
                                                    .ENDC
                                                   GETP$ \REGS$, ADDR$
                                                  .ENDC
                                               . ENDM
```

UDATZ DISK RESIDENT MACRO X04.00 9 MACRO DEFINITIONS	-JUL-81 11:39:12 PAGE 15
1 2	.MACRO SAVR\$ REGN
5 6	.NL IST REGS\$=REGN .ENDM
8 9	.MACRO RSTR\$ REGN .LIST
10 11 12 13	.NLIST REGS\$=-1 .ENDM
14 15 16 17	.MACRO GETP\$ REGN.ADDR\$
18 19 20	.NLIST.

MOV R'REGN, SAVREG

MOV SAVREG, R'REGN

MOV ADDRS, R'REGN MOV R'REGN, - (SP)

	PRIMARY	ERROR REPORTING (TEST 4)		
	.MACRO ERROR	SOFTER NUM, ARGS #ERSOFT, NUM, <args></args>		
			MOV MOV	#ERRMES,R2 R2,OUT.RQ
	.ENDM			
	.MACRO	REPSFT SFTFLG, ECCFG NB, SFTFLG	MOV	#1,0UT.02
	.ENDC	NB,ECCFG	1107	#1,001.02
	.ENDC		MOV	#1,0UT.03
	·ENDC		PUSH MOV ADD ADD MOV MOV CALL POP	RO #U.SNUM,RO R5,RO U.SUBU(R5),RO (RO),OUT.O1 #T4SOFT,RO HOSTRQ RO
	.ENDM		, 0,	NO.
	.MACRO ERROR	HARDER NUM, ARGS #ERHARD, NUM, <args></args>	MOV	#ERRMC_R2
	.ENDM		MOV	R2,OUT.RQ
	.MACRO ERROR	DEVFTL NUM, ARGS #FTLDEV, NUM, <args></args>	MOV	#ERRMC_R2
	.ENDM		MOV	R2.OUT.RQ
	.MACRO	SYSFTL NUM, ARGS		
	ERROR	#FTLSYS, NUM, <args></args>	MOV MOV	#ERRMC .R2
	.ENDM		HUV	R2,OUT.RQ
	.MACRO .RADIX NUMPTR MOVMSG .IF .IRP MOVMSG NUMPTR .ENDR	ERROR TYPE, NUM, ARGS 10 = 5 #ER'NUM, 4 NB, <args> X, <args> X, \NUMPTR = NUMPTR + 1</args></args>		
	.ENDC		MOV	#NUM,OUT.02
			818	TYPE.OUT.02

UDAT2 DISK RESIDENT MACRO X04.00 9-JUL-81 11:39:12 PAGE 16-1

MACRO DEFINITIONS


```
.RADIX
                                                .ENDM
                                                .MACRO
                                                        CERROR STNUM, ARGS
                                                        10
                                                .RADIX
                                       NUMPTR
                                                        STNUM
                                               .IRP
                                                        X, <ARGS>
                                                MOVMSG
                                                        X.\NUMPTR
                                       NUMPTR
                                                        NUMPTR + 1
                                                =
                                                .ENDR
                                                .RADIX
                                                . ENDM
                                                .MACRO
                                                        ERRORC ARGS
                                                .RADIX
                                                        10
                                                . IRP
                                                        X, <ARGS>
                                                MOVMSG X, \NUMPTR
                                                        NUMPTR + 1
                                       NUMPTR
                                                .ENDR
                                                .RADIX
                                                . ENDM
                                                .MACRO
                                                        MOVMSG ARG, INDX
                                                . IF
                                                        LT, INDX-10
                                                                                           MOV
                                                                                                    ARG, OUT. 0'INDX
                                                . IFF
                                                                                           MOV
                                                                                                    ARG, OUT. 'INDX
                                                .ENDC
                                                . ENDM
                                                .MACRO
                                                        ENDERR
                                                                 POS
                                                . IF
                                                        NB, POS
                                                NDERR
                                                        POS
                                                . IFF
                                                NDERR
                                                        \NUMPTR
                                                .ENDC
                                                . ENDM
                                                .MACRO
                                                        NDERR
                                                                 POS
                                                . IF
                                                        NE , POS
                                                                                           BIS
                                                                                                    #POS, ERRPOS
                                                                                                                     : SET THE POSITION
                                                . IFF
                                                                                           CLR
                                                                                                    ERRPOS
                                                                                                                     : CLEAR THE POSITION
                                                .ENDC
                                                . ENDM
                                                MESSAGE REPORTING MACRO
                                                .MACRO MSSG
.RADIX 10
                                                                 NUM, ARGS
                                                NUMPTR
                                                        =
                                                        #MS'NUM, 2
                                                MOVMSG
                                                . IF
                                                        NB, <ARGS>
112
                                                . IRP
                                                        X. <ARGS>
                                                MOVMSG X, \NUMPTR
114
                                                NUMPTR =
                                                                 NUMPTR + 1
```

115 116 117				.ENDR		
118 119 120 121	-14.					
122 123 124 125				.RADIX		
126 127 128 129			;	.ENDM	MSSGE	NUM, ARGS
130 131 132 133				.RADIX NUMPTR MOVMSG .IF .IRP	10 = #'NUM,2 NB, <arg< td=""><td>S></td></arg<>	S>
115 116 117 118 119 120 121 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140				MOVMSG NUMPTR .ENDR .ENDC	X, <args X, \NUMP</args 	
141						
143				.RADIX .ENDM		

PUSH <RO.R1>
MOV #MESSAG.R0
CALL HOSTRQ
POP <R1.R0>

1			; RETURN	DRIVE	STATUS MACRO WITH ERROR	REPORTING
3				.MACRO		
5				.NLIST	MEB ME	
7				.LIST	RDSTAT	: GET DRIVE STATUS
10				BEQ	#10000,R1 2\$; SEE IF ANY ERRORS ; IF NO ERROR, BRANCH
11				BEQ	#4000,R1 1\$; SEE IF XMIT ERROR ; IF SO, BRANCH
13				ERRHRD BR	LAB\$	REPORT INVALID STATUS ERROR BRANCH TO DONE
15 16			1\$:	ERRHRD BR	E2 LAB\$; REPORT XMIT ERROR ; BRANCH TO DONE
17 18			2\$:	.NLIST		
12 13 14 15 16 17 18 19 20 21 22				.NLIST	ME MEB	
22				.LIST		

SEQ 0103

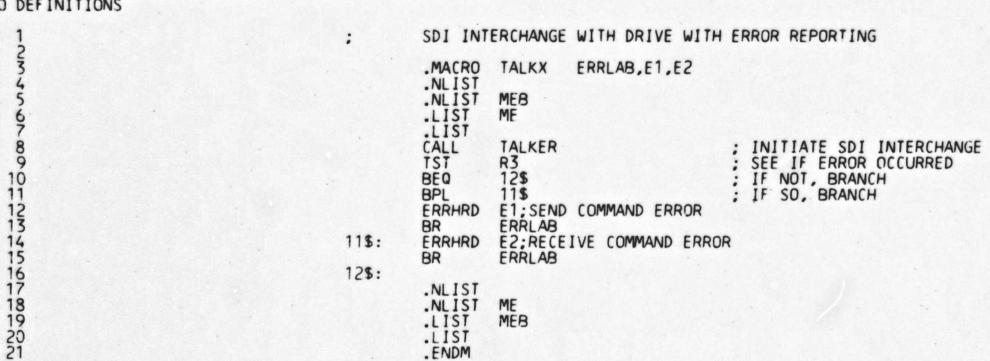

4 000714 114007

8 000715 104206 001357 9 000717 001360

.SBITL START OF TEST CODE : THE FOLLOWING IS FOR DEBUG PURPOSES ONLY. CAN BE NOP OR BREAKPOINT.

CLR RO

CHANGE TO BREAKPOINT FOR DEBUG

; INITIALIZE STACK

MOV #STACK, SP BR START : SET UP STACK POINTER ; BRANCH OVER SUPPORT CODE

2 000720			.SBTTL RDSTAT:	RDSTAT	- GET DRIVE'S REAL TIME	DRI	VE STATE
4				DRIVE S RETURNE	TATUS D IN DM REGISTER 1		
7 000720			•	PUSH	<r3,r0></r3,r0>	:	SAVE R3 AND RO
000720 000721	100463						MOV R3,-(SP) MOV R0,-(SP)
8 000722	104203	000003	CTATIO	MOV	#3,R3		ALLOW ONLY 3 ERRORS
9 000724	060007 103201	014000	STATLP:	BIC	STATUS #14000,R1	:	GET DRIVE'S STATUS CLEAR ERROR PASSING BITS
11 000727 12 000731	102201 010737	000400		BIT	#XMTERR,R1 STATOK	:	CHECK XMIT ERRORS IF NO ERRORS, BRANCH
13 000732	117403			DEC	R3	:	DECREMENT TRANSMIT ERROR COUNT
14 000733 15 000734	050724	010000		BNE MOV	STATLP #10000,R1	:	IF ERROR COUNT INCOMPLETE, BRANCH FLAG AS TRANSMIT ERROR
16 000736	000746			BR	STATEX	:	BRANCH
17 000737	102201	000004	STATOK:	BIT	#RCVERR,R1	:	RECIEVER ERRORS
18 000741	050746			BNE	STATEX	:	IF VALID, BRANCH
19 000742	117403			DEC	R3	:	DECREMENT ERROR COUNT
20 000743	050724			BNE	STATLP	:	IF ERROR COUNT NON-ZERO, BRANCH
21 000744	104201	014000		MOV	#14000,R1		FLAG AS INVALID STATUS ERROR
22 000746	10/2/7		STATEX:	POP	<r0,r3></r0,r3>	:	RESTORE RO, R3
000746	104267						MOV (SP)+,R0
000747	104263			RETURN			MOV (SP)+,R3
23 000/30	000000			KETURIN			RETURN TO CALLING MODULE

UDATZ DISK RESIDENT MACRO X04.00 9-JUL-81 11:39:12 PAGE 22
HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED,

```
.SBITL HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED, ETC.
   000751
                                         HOSTRQ:
                                         SEND REQUEST BUFFER TO HOST AND WAIT FOR RESPONSE.
                                         :CLEAR ARGUMENT AREA OF OUT BUFFER IN PREPARATION
                                         FOR NEXT HOSTRO CALL.
                                         : INPUTS:
                                                  RO - HOST REQUEST NUMBER
10
                                                  OUT BUFFER LOADED WITH DATA
11
12 000751 000751
                                                  PUSH < RO. R1, R2>
                                                                                                                   MOV RO, - (SP)
             100467
   000752
000753
                                                                                                                   MOV R1,-(SP)
MOV R2,-(SP)
             100461
             100462
13 000754
             104070
                                                  MOV RO, OUT. RQ
                                                                                        STORE REQUEST NUMBER IN BUFFER
                      001006
             104207
14 000756
                      001006
                                         SNDAGN: MOV #OUT.RQ.RO
                                                                                        SEND BUFFER TO HOST
15 000760
                      000036
                                                  MOV #BUFSIZ,R1
16 000762
            060016
                                                  XFC MRD
17 000763
             115001
                                                  TST R1
                                                                                       : CHECK FOR ERROR
18 000764
                                                  BNE SNDAGN
            050756
                                                                                       : IF ERROR, TRY AGAIN
19 000765
             104207
104201
                      001044
                                                  MOV #IN.RQ,RO
                                                                                       :WAIT FOR RESPONSE FROM HOST
20 000767
21 000771
22 000772
23 000774
24 000776
25 000777
26 001000
27 001001
28 001002
                      000036
                                                  MOV #BUFSIZ,R1
             060017
                                                  XFC MWR
            104207
                      001007
                                                  MOV #OUT.01.RO
                                                                                       :CLEAR ARGUMENT WORDS IN BUFFER
                                                  MOV #OUT.11-OUT.01,R1
                      000012
             114002
                                                  CLR R2
             100272
                                        (LRBUF: MOV R2, (RO)+
             117401
                                                  DEC R1
            030777
                                                  BPL CLRBUF
                                                  POP <R2,R1,R0>
   001002
001002
104262
001003
104267
                                                                                                                   MOV (SP)+, R2
                                                                                                                   MOV (SP)+,R1
                                                                                                                   MOV (SP)+, RO
29 001005
             000000
                                                  RETURN
```

```
:STORAGE AREA FOR MAINTENANCE WRITE AND READ BUFFERS
:OUT BUFFER - DATA TO SEND TO HOST
         ; IN BUFFER - DATA RECEIVED FROM HOST
```

```
UDATE DISK RESIDENT MACRO X04.00 9-JUL-81 11:39:12 PAGE 23-1 HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED,
```

58 001070 59 001071 60 001072 61 001073 62 001074 63 001075 64 001076 65 001077 66 001100 67 001101	00000C 000000 000000 000000 000000 000000	IN.20: IN.21: IN.22: IN.23: IN.24: IN.25: IN.26: IN.27: IN.28: IN.29:	.WORD 0	DATA DATA DATA DATA DATA DATA DATA	ARGUMENT ARG	21 22 23 24 25 26 27 28
68	000036	BUFSIZ	= IN.RQ		OF BUFFER	

.

```
. IF
                                                                NE. TEST4
                                                      .NLIST
                                                      . IFF
                                                      TALKER SENDS AND RECEIVES AN SDI INTERCHANGE
                                            : INPUTS:
                                                     R2 - SDI INTERCONNECT
R3 - POINTER TO COMMAND TABLE CONTAINING APPROPRIATE COMMAND
                                                      SDILTO/SDISTC SDI LONG AND SHORT TIMEOUTS, RESPECTIVELY
                                            :OUTPUTS:
12
                                                      RO - RETURN OP CODE FROM UNIT
                                                      R3 - ERROR CODE - 0 = NO ERROR, 1 = RECEIVE ERROR, 100001 = SEND ERROR
14
   001102
                                            TALKER: PUSH
                                                                <R1.R4>
                                                                                    ; SAVE REGISTERS
    001102
              100461
                                                                                                                            MOV R1 .- (SP)
             100464
104237
104231
    001103
                                                                                                                            MOV R4, - (SP)
                                                                                    ; SET ADR OF SD1 COMMAND BUFFER
16 001104
                                                      MOV
                                                                (R3) + RC
                                                                                    : SET BUFFER LENGTH
17 001105
                                                                (R3) + .R1
                                                      MOV
18 0C1106
              060004
                                                      XFC
                                                                SEND
                                                                                    ; SEND COMMAND
                                                                                    ; DID UNIT ACCEPT COMMAND
19 001107
20 001110
21 001111
22 001113
23 001114
24 001116
25 001117
26 001121
27 001122
28 001124
29 001125
30 001127
31 001130
32 001131
33 001132
34 001134
35 001135
36 001136
37 001137
38 001140
19 001107
              115001
                                                      TST
                                                                R1
                                                                                    : IF SO. BRANCH
: FLAG AS SEND ERROR
              011114
                                                                TALK1A
                                                      BEQ
              104203 001145
                                                                #100001,R3
                        100001
                                                      MOV
                                                                                    : BRANCH TO EXIT : SEE IF LONG TIMEOUT TO BE USED
                                                                TALK2B
                                                      BR
              106203
                                                                #LONG,R3
                        004205
                                            TALKIA: CMP
                                                                                    : IF SO, BRANCH
: SET UP SHORT TIMEOUT
              071122
                                                      BMI
                                                                1$
              104304
                        001150
                                                      MOV
                                                                SDISTO,R4
                                                                                    ; BRANCH
              001124
                                                      BR
                                                                TALK1B
                                                                                    : SET UP LONG TIMEOUT
              104304
                        001151
                                                      MOV
                                                                SDILTO,R4
                                            15:
                                                                                    : SET DATA BUFFER ADDRESS
              104137
                                            TALK1B: MOV
                                                                (R3).R0
              104631
                                                                                    : SET BUFFER LENGTH
                        000001
                                                      MOV
                                                                1(R3),R1
                                                                                    : SEND RECEIVE SDI COMMAND
: DID ERROR OCCUR
              060005
                                                                RCV
              115001
                                                      TST
                                                                R1
              011144
                                                                TALK2A
                                                                                    ; IF NOT, BRANCH
                                                                                    : SEE IF TIMEOUT
              106201
                        000001
                                                                #1.P1
              011137
                                                      BEQ
                                                                1$ _
                                                                                    : IF SO, BRANCH
              104013
                                                      MOV
                                                                R1.R3
                                                                                    ; MOVE ERROR TYPE TO R3 FOR REPORTING
              001145
                                                                                    : EXIT
                                                      BR
                                                                TALK2B
              117404
                                            15:
                                                      DEC
                                                                R4
                                                                                      DECREMENT TIMEOUT VALUE
38
39
                                                                                    : IF NOT TIMEOUT, BRANCH
; FLAG AS RECIEVE ERROR
    001140
                                                                TALK1B
              051124
                                                      BNE
              104203 001145
    001141
                                                                #1,R3
                        000001
                                                      MOV
40 001143
                                                                TALK2B
                                                                                      BRANCH TO EXIT
   001144
              114003
                                                                                    : FLAG AS NO ERRORS
: RESTORE R4, R1
                                            TALKZA: CLR
                                                                R3
                                                                <R4,R1>
                                            TALK2B: POP
    001145
              104264
                                                                                                                            MOV (SP)+ .R4
              104261
    001146
                                                                                                                            MOV (SP)+,R1
43 001147
              000000
                                                      RETURN
                                                                           SDI SHORT TIMEOUT
    001150
              000012
                                            SDISTO: . WORD
46 001151
                                            SDILTO: . WORD
                                                                                    : SDI LONG TIMEOUT
              000024
```

```
:MREAD
                                         : READ ONE WORD FROM UNIBUS MEMORY
                                         : INPUTS:
                                                  R5 - ADDRESS OF WORD TO READ (LOW 16 BITS)
R4 - (HIGH 2 BITS)
                                         :OUTPUTS:
                                                  RO - DATA READ
10 001152
001152
001153
                                        MREAD: PUSH <R2.R3>
                                                                                       :SAVE SOME REGISTERS
                                                                                                                   MOV R2,-(SP)
MOV R3,-(SP)
             100462
            100463
11 001154
                                                  MOV R5, RO
            104057
                                                                                        :PUT UNIBUS ADDRESS IN RO AND R1
            104041
104202
104203
060013
12 001155
                                                  MOV R4,R1
                      000001
                                                                                       :TRANSFER ONE WORD
                                                  MOV #1.R2
14 001160
                      001210
                                                  MOV #UDATA, R3
                                                                                        :LOCATION TO PUT DATA
15 001162
16 001163
                                                  XFC UREAD
                                                                                        : DO THE READ
            104307 001210
                                                  MOV UDATA, RO
                                                                                        GET DATA READ
17 001165
                                                  POP <R3,R2>
                                                                                        : RESTORE OTHER REGISTERS
   001165
                                                                                                                    MOV (SP)+, R3
            104263
            104262
   001166
                                                                                                                    MOV (SP)+, R2
18 001167
                                                  RETURN
```

```
:MWRITE
                                      WRITE ONE WORD TO UNIBUS MEMORY
                                      : INPUTS:
                                              R5 - ADDRESS OF WORD TO WRITE (LOW 16 BITS)
                                                             (HIGH 2 BITS)
                                              R4 -
                                              RO - DATA TO WRITE
                                      :OUTPUTS:
10
   001170
                                      MWRITE: PUSH <RO,R2,R3>
                                                                                 :SAVE SOME REGISTERS
                                                                                                           MOV RO, - (SP)
   001170
            100467
   001171
           100462
                                                                                                          MOV R2,-(SP)
001172
            100463
                                                                                                           MOV R3,-(SP)
                                                                                 PUT DATA TO BE WRITTEN INTO BUFFER
            104070
                    001210
                                              MOV RO, UDATA
12 001175
13 001176
           104057
                                              MOV R5, RO
                                                                                 :PUT UNIBUS ADDRESS IN RO AND R1
            104041
                                              MOV R4,R1
           104202
14 001177
                    000001
                                              MOV #1,R2
                                                                                 ; TRANSFER ONE WORD
15 001201
                    001210
                                              MOV #UDATA, R3
                                                                                 ; ADDRESS OF DATA WORD
16 001203
            060014
                                                                                 : DO THE WRITE
                                              XFC UWRITE
17 001204
                                              POP <R3,R2,R0>
                                                                                 RESTORE THE REGISTERS
           104263
104262
104267
   001204
                                                                                                           MOV (SP)+, R3
001205
001206
18 001207
                                                                                                           MOV (SP)+, R2
                                                                                                           MOV (SP)+,RO
            000000
                                              RETURN
   001210
           000000
                                                                                 ; DATA BUFFER FOR TRANSFERS TO AND FROM
                                     UDATA: . WORD 0
                                                                                 :UNIBUS MEMORY
```

1 23 4 5 6 7 8 0		XOR PERFORI INPUTS OUTPUT	R1. R2 - DATA TO BE XOR'ED	EGISTERS	
10 001211 001211 11 001212 12 001213 13 001214 14 001215	100463 104013 103023 103012 101032	XOR:	PUSH R3 MOV R1.R3 BIC R2.R3 BIC R1.R2 BIS R3.R2	;SAVE R3	MOV R3,-(SP)
15 001216 001216 16 001217 17 001220	104263 115002 000000		POP R3 TST R2 RETURN	RESTORE R3	MOV (SP)+,R3

1 001221			TO:	CALCULA 9 SEC)	TE THE TIMEOUT	IN	9SEC INTERVALS (SDI RECEIVE XFC TAKES	
6 001221 7 001223 8 001224 9 001226 10 001227 11 001230	104201 110201 103201 117407 051223 114007	000001	18:	MOV ROL BIC DEC BNE CLR	#1,R1 R1 #1,R1 R0 1\$ R0		: SET UP LOG2 SHIFTER : DOUBLE THE TIMEOUT VALUE : CLEAR THE LOW BIT : DECREMENT COUNT : IF COUNT INCOMPLETE, BRANCH : CLEAR 9SEC COUNT	
12 001231 13 001232 14 001234 15 001235	115407 115407 107201 031231 000000	000011	2\$:	INC SUB BPL RETURN	RO #9R1 2\$: INCREMENT 9 SEC COUNT : SUBTRACT 9 SEC FROM TIMEOUT : IF MORE TIME TO GO, BRANCH : RETURN TO CALLING PROGRAM	

```
: RERROR
                                       REPORT ERROR TO HOST PROGRAM
                                       :THIS ROUTINE IS CALLED BY THE ERROR MACROS:
                                       :ERRSF, ERRDF, ERRHRD AND ERRSFT
   001236
                                       RERROR: PUSH RO
                                                                                    :SAVE ONE REGISTER
   001236
            100467
                                                                                                               MOV RO, - (SP)
   001237
                                                MOV SP.RO
            104067
                                                                                    GET STACK POINTER
                                                PUSH <R1,R2,R3,R4>
 9 001240
                                                                                    SAVE MORE REGISTERS
                                                                                                               MOV R1,-(SP)
   001240
            100461
   001241
001242
001243
            100462
                                                                                                               MOV R2,-(SP)
            100463
                                                                                                               MOV R3,-(SP)
            100464
                                                                                                               MOV R4,-(SP)
   001244
            115407
                                                INC RO
                                                                                    CHANGE SAVED STACK POINTER TO POINT TO
                                                                                    ; ADDRESS OF LOCATION AFTER CALL
11
12 001245
13 001246
14 001250
                                                                                    GET RETURN PC
            104271
                                                MOV (R0)+,R1
                                                                                   GET ADDRESS OF WHERE TO PUT DATA
REDUCE TO PC OF ERROR CALL
PUT PC IN OUT BUFFER
            104202
                     001007
                                                MOV #OUT.01,R2
                                                DEC R1
  001251
001252
                                                MOV R1, (R2)+
15
            100221
            115401
                                                                                    GET BACK TO RETURN PC
                                                INC R1
16
17
   001253
            104113
                                                MOV (R1), R3
                                                                                    GET ERROR NUMBER AND TYPE
                                                BIC #^C001777,R3
18
   001254
            103203
                    176000
                                                                                    :CLEAR OTHER BITS
19
   001256
            100223
                                                MOV R3, (R2)+
                                                                                    :PUT IN BUFFER
                                                                                    :PUT UNIT NUMBER IN BUFFER
20
21
22
23
24
25
26
27
   001257
            104303
                    001315
                                                MOV LUNIT.R3
   001261
            100223
                                                MOV R3, (R2)+
            104214
   001262
                                                MOV (R1)+,R4
                                                                                    GET COUNT OF PARAMETERS
   001263
                                                MOV (R1)+,R3
                                                                                    GET MESSAGE POINTER
   001264
            100223
                                                MOV R3, (2)+
                                                                                    PUT IN OUT BUFFER
                                                                                    :R1 IS NOW POINTING TO INSTRUCTION AFTER ERROR CALL
   001265
            110704
                                                SWAB R4
   001266
            110604
                                                ROR R4
                                                                                    :EXTRACT NUMBER OF PARAMETERS FROM ERROR MACRO
   001267
            110604
                                                ROR R4
29
30
31
32
33
34
35
36
37
   001270
            103204
                                                BIC #177700,R4
                     177700
   001272
            104040
                                                MOV R4. SPADJU+1
                     001313
                                                                                    ; SAVE FOR LATER ADJUSTMENT OF STACK POINTER
   001274
001275
001276
            011301
104273
100223
                                                                                    :BRANCH IF NO PARAMETERS
                                                BEQ RERRCA
                                       RERRPA: MOV (RO)+,R3
                                                                                    GET PARAMETER
                                                MOV R3, (R2)+
                                                                                    STORE PARAMETER IN OUT BUFFER
   001277
            117404
                                                DEC R4
                                                                                    COUNT THE PARAMETERS
   001300
            051275
                                                BNE RERRPA
                                                                                    GET NEXT IF MORE
   001301
            100471
                                       RERRCA: MOV R1,-(R0)
                                                                                    :PUT RETURN ADDRESS ON STACK
   001302
            104207
                     000013
                                                MOV #ERRMES.RO
                                                                                    :SEND ERROR PACKET TO HOST PROGRAM
   001304
            020751
                                                CALL HOSTRO
                                                POP <R4,R3,R2,R1,R0>
   001305
                                                                                    :RESTORE REGISTERS
            104264
104263
104262
   001305
                                                                                                               MOV (SP)+,R4
   001306
                                                                                                               MOV (SP)+, R3
   001307
001310
                                                                                                               MOV (SP)+, R2
            104261
                                                                                                               MOV (SP)+,R1
   001311
            104267
                                                                                                               MOV (SP)+,R0
   001312
            105206
                     000000
                                                                                    : ADJUST STACK OVER PARAMETERS
                                       SPADJU: ADD #0, SP
                                                                                    : VALUE CHANGED ABOVE
   001314 000000
                                                RETURN
   001315 177777
                                       LUNIT: .WORD -1
                                                                                    :LOGICAL UNIT NUMBER (-1 FOR NOT AVAILABLE)
   001316 000000
                                       SAVREG: . WORD 0
                                                                                    STORAGE FOR REGISTER AT CALL TIME
                                                . IFT
```

SEQ 0116

48

.LIST

UDATE DISK RESIDENT MACRO X04.00 9-JUL-81 11:39:12 PAGE 30 HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED,

2 3 001317 123456 4 001320 5 001357 123456

:STACK AREA


.WORD 123456 .BLKW 31. STACK: .WORD 123456

;END MARKER FOR STACK ;STACK ;MARKER FOR STACK UNDERFLOW

```
.SBITL DISK DRIVE SEQUENCER
             000001
                                                   ERRN=1.
                                                                                         :START ERROR NUMBERS AT 1.
                                          GET WHICH UNITS TO TEST
   001360 023361
                                                            GETU
                                         START: CALL
                                                                                         : GET UNIT
 89
                                                   FIND OUT IF HOST HAD TO INIT UDA TO GET A PROGRAM FROM AN ATTACHED DRIVE. THE PROGRAM WAS REQUESTED BY THE DRIVE TO BE DOWNLINE LOADED INTO ITS MEMORY.
10
11
12
13
14
15
16
17
18
                                                   THE INDICATION COMES FROM THE UTOTST RESPONSE.
                                                   A WORD WITH MSB IS SET TO INDICATE THE LAST UNIT ENTRY. AFTER THAT WORD
                                                   ANOTHER WORD INDICATES WHEATHER OR NOT A FILE WAS SUPPOSE TO BE DOWN LINE LOADED.
                                                   A 'O' MEANS NORMAL PROCESSING, NO FILE WAS EXPECTED OR REQUESTED.
                                                   A '1' MEANS A FILE WAS EXPECTED AND IS AVAILABLE.
                                                   A '2' MEANS A FILE WAS EXPECTED AND IS NOT AVAILABLE.
                                                   RO COMES BACK FROM GETU AS A POINTER TO THE WORD BEYOND THE LAST TABLE ENTRY
20 22 23 25 26 28 29 33 33 35 36 7
   001361
             104671
                      000001
                                                            1(RO)_R1
                                                                                         :WAS A FILE EXPECTED?
                                                   MOV
   001363
             011445
                                                            PORTO
                                                                                         ; IF NOT, GO TO NORMAL PROCESSING
                                                   BEQ
   001364
                                                                                         :POINT TO INDICATOR IN IN.RQ BUFFER
             115407
                                                            RO
                                                   INC
   001365
             104075
                                                            RO.R5
                                                                                         :R5 -> INDICATOR
                                                   MOV
                                                                                         :1ST WORD CONTAINS INDICATOR TO SEE IF A FILE WAS EX
   001366
             104151
                                                             (R5),R1
                                                   MOV
   001367
001371
             106201
052553
                                                                                         ; WAS THE EXPECTED FILE AVAILABLE?
                                         ; *** FILE WAS THERE, NOW SEE WHERE IN THE TABLE IT WAS SO PORT INDICATOR IS THE SAME?

MOV #UNITS,RO ;RO -> UNIT TARLE
                      000001
                                                            #1.R1
   001372
             104207
                       003676
             104651
104202
114003
   001374
                      000001
                                                                                         ;R1 = UNIT NUMBER
                                                            1(R5),R1
                                                   MOV
   001376
                      000001
                                                            #UNITO,R2
                                                                                         :R2 = 1ST PORT
                                                   MOV
   001400
                                                            R3
                                                                                         :R3 = UNIT TABLE INDICATOR
                                                   CLR
   001401
             114004
                                                                                         :R4 KEEPS TRACK OF WHICH SUBUNITS
                                                   CLR
   001402
             104270
                      001316
                                         23:
                                                             (RO)+, SAVREG
                                                                                         STORE UNIT IN SAVE REG
                                                   MOV
   001404
             071431
                                                                                         ; IF NEGATIVE VALUE, DON'T COMPARE
                                                   BMI
   001405
             103300
                                                            HIBYTE, SAVREG
                      177400
                                001316
                                                                                         CLEAR EXTANEOUS BITS
                                                   BIC
             106301
   001410
                       001316
                                                            SAVREG,R1
                                                                                         ;DID WE FIND THE DRIVE?
38 001412
39 001413
                                                                                         ; IF IT IS, WE HAVE FOUND IT ; ELSE, INCREMENT SUBUNIT POINTER
             011435
                                                   BEQ
                                                            5$
             115404
                                                   INC
                                                            R4
40 001414
             106204
                      000004
                                                   CMP
                                                            #4.R4
                                                                                         :ENDED WITH THIS UNIT ENTRY?
                                                                                         ; IF NOT, CONTINUE
; ELSE, NEXT PORT SET IN R2
; INCREMENT UNIT TABLE INDICATOR
41 001416
             051402
                                                             2$
                                                   BNE
42 001417
43 001420
             105022
                                                            R2.R2
                                                   ADD
             115403
                                                            R3
                                                   INC
                                                            #4.R3
44 001421
45 001423
             106203
                      000004
                                                                                         : DONE?
                                                   CMP
                                                   BNF
                                                            15
                                                                                         ; IF THIS GETS TO 4, THEN ERROR (UNIT NOT FOUND)
46 001424
001424
001425
001426
                                                            MS57,R1
                                                   ERRHRD
             100461
021236
003001
                                                                                                              MOV R1,-(SP)
                                                                                                              CALL RERROR
                                                                                                                                 :ERROR # 1.
                                                                                                               .WORD <PRMS *2000>+<2*400>+ERRN
   001427
             002547
                                                                                                               WORD MS57
                                          BR. PORTO :START REGULAR TESTING : *** IF HERE, NEGATIVE ENTRY, GO TO NEXT UNIT ENTRY. ADJUST RO TO PROPER POINTER
             001445
48
49 001431
             105207
                      000003
                                                            #3,R0
                                                                                         ;RO -> INTO NEXT UNIT\INCREMENTED BY (RO)+
                                                   ADD
50
   001433
                                                                                         REALIGN TO POINT TO BEGINNING OF POINTER
                                                   SUB
                                                            R4.R0
   001434
             001417
                                                             3$
                                                                                         GO BACK INTO THE LOOP
                                                   BR
52
53 001435
                                           *** IF HERE, FOUND THE ENTRY, SAVE PERTINENT VALUES, GO DOWN LINE LOAD PROGRAM
                                         58:
           104650
                      000001
                                001315
                                                   MOV
                                                            1(R5), LUNIT
                                                                                         ; SAVE LOGICAL UNIT NUMBER
```

		104020 104030 002424	003717 003716		MOV MOV BR	R2,SDI R3,UNITNB D0.DI2	:SAVE PORT VALUE :SAVE UNIT NUMBER OFFSET IN TABLE :GO DOWN LINE LOAD PROGRAM							
58	1//5			PORTO:	ORMAL PR	OCESSING								
59 001 60 61 62 63	1445				MOV MOV MOV	#UNITS.R5 #IN.01,R4 #4,R3	GET POINTER TO UNITS STORAGE BLOCK GET POINTER TO DATA FROM HOST GET COUNT OF PORTS							
64 65 66 67					MOV BPL MOV MOV INC DEC BNE	(R4)+,R0 PORT2 (R4),R0 R0,(R5)+ R4 R3 PORT1	GET FIRST NUMBER FROM HOST IF NOT NEGATIVE, USE IT OTHERWISE GET SECOND NUMBER FROM HOST STORE NUMBER IN TABLE BUMP POINTER COUNT THE UNITS REPEAT FOR ALL UNITS							
68 69 70 71 72 73 74 75 76				: TEST C	ODE WILL	IAGNOSTICS TO ALL UNITS BE CALLED FOR EACH DISK ONTAIN LOGICAL UNIT NUMB TAIN SDI INTERCONNECT CO	DRIVE TO BE TESTED. ER OF DRIVE FOR ERROR REPORTS							
77 00	1445 1446	114001 104202	000001		CLR	R1 #UNITO,R2	START WITH UNIT O INDEX							
80 001 81 001 82 001 83 001	001450 104207 001452 105017 001453 104173 001454 071505 001455 114004 001456 104173 001457 102203 001461 011470 001462 115407 001463 115404 001464 106204 001466 011505 001467 001456 001470 107047 001471 100173 001472 104010 001474 104030 001476 104020	104173 071505	003676	PORT3:	MOV ADD MOV BMI CLR	#UNITS,RO R1,R0 (R0),R3 PORT5 R4	GET POINTER TO UNITS TABLE ADD INDEX GET CONTENTS OF TABLE BYPASS TESTING UNIT IF MINUS R4 = INDEX COUNTER							
85 00° 86 00° 87 00° 88 00°		104173 102203 040000 011470 115407 115404 106204 000004 011505 001456 107047 100173 104010 003716 104030 001315 104020 003717 001517 104301 003716 104302 003717	040000	1\$:	MOV BIT BEQ INC	(RO),R3 #40000,R3 2\$ RO R4	CHECK UNIT IS THE DRIVE TESTABLE? IF SO, CONTINE INCREMENT UNIT TABLE POINTER INCREMENT INDEX POINTER							
90 00° 91 00° 92 00° 93 00°			06204 000004 111505 01456 07047	2\$:	CMP BEQ BR SUB	#4,R4 PORT5 1\$ R4,R0	:IF = 4, POINTS TO NEXT ENTRY :IF IT DOES, TRY NEXT UNIT :ELSE TRY AGAIN :RO-> HEAD OF ENTRY							
95 00			100173 104010 104030 104020	100173 104010 104030 104020	100173 104010 104030 104020	100173 104010 104030 104020	100173 104010 104030 104020	100173 104010 104030 104020	104010 104030 104020	100173 104010 104030 104020	001315		MOV MOV MOV BR	R3,(R0) R1,UNITNB R3,LUNIT R2,SDI TEST
99 00	1501			TESTX: PORT5:	MOV MOV ADD	UNITNB,R1 SDI,R2 #4,R1	GET UNIT INDEX GET SDI INTERCONNECT CODE INCREMENT INDEX							
102 00	1507	105022 102202	000017		ADD BIT	R2,R2 #UNITO+UNIT1+UNIT2+UNIT	COMPUTE NEW INTERCONNECT CODE							
104 00	1512	051450		DONE CD -	BNE	PORT3	REPEAT FOR ALL DRIVES							
105 00	1515	104207	000016	DONECD:	CALL	#DONE,RO HOSTRO	; END OF PROGRAM							
107 00	1016	001513			BR	DONECD	REPEAT IF RETURNED							

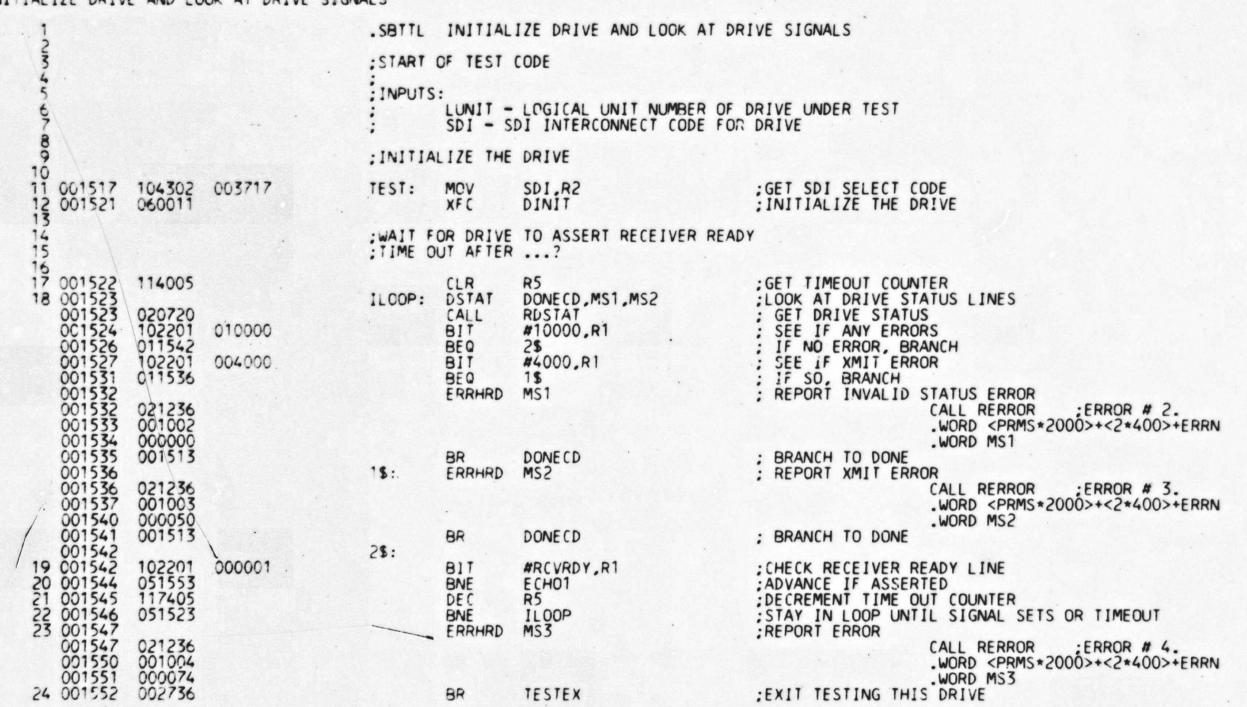



1			.SBTTL	ECHO DA	TA TO DRIVE		
234567890					WING DATA PATTERNS TO T HE PROPER DATA RECEIVED	HE DRIVE THEN CHECK THE	
10 11 001553 12 001555 13 001556 14 001560	104205 104157 103207 060010	177400	ECH01: ECH02:	MOV MOV BIC XFC	#ECHOD,R5 (R5),R0 #HIBYTE,RO ECHO	GET POINTER TO ECHO DATA GET ECHO DATA CLEAR COMMAND FROM WORD PERFORM THE ECHO COMMAND	
15 16 17			; CHECK	FOR TIME	OUT ERROR		
18 001561 19 001562 20 001563 21 001565 22 001566	115001 011600 102201 011573	000001		TST BEQ BIT BEQ ERRHRD	R1 ECH04 #1,R1 ECH03 MS4,R0	; CHECK FOR ERROR ; BRANCH IF NONE ; CHECK IF SEND ERROR ; BRANCH IF RECEIVE ERROR ; REPORT SEND ERROR	
001566 001567 001570 001571 23 001572	100467 021236 003005 000130 001614			BR	ECHO5	MOV RO, CALL RE	RROR : ERROR # 5. PRMS*2000>+<2*400>+ERRN
24 001573 001573 001574 001575 001576	100467 021236 003006 000170	021236 003006 000170	ECH03:			REPORT RECEIVE ERROR MOV RO. CALL RE .WORD < .WORD M	RROR : ERROR # 6. PRMS*2000>+<2*400>+ERRN
25 001577 26 27 28 29 001600	001614	*		BR	ECH05		
28			CHECK	DATA REC	EIVED		
30 001601 31 001602	106157 011614		ECH04:	CMP BEQ ERRHRD	(R5),R0 ECHO5 MS6,(R5),RO	COMPARE DATA RECEIVED WI DATA SENT REPORT DATA COMPARE ERRO	
001602 001603 001605	100467 104010 104151	001316				MOV RO, MOV R1, MOV (R5	-(SP) SAVREG
001606 001607 001611 001612 001613	100461 104301 021236 005007 000233	001316				MOV R1, MOV SAV CALL RE	-(SP) REG_R1 RROR ;ERROR # 7. PRMS*2000>+<2*400>+ERRN
32 33 34 35 001614			;MOVE T	O NEXT D	ATA PATTERN		
35 001614 36 001615 37 001616	115405 104157 071556		ECH05:	INC MOV BMI	R5 (R5),R0 E(H02	:BUMP TO NEXT DATA TO SEN :CHECK IF AT END OF TABLE :SEND THIS DATA IF NOT	D

```
.SBITL GET STATUS COMMAND
                                          :ISSUE GET STATUS COMMAND AND CHECK THAT IT PERFORMS PROPERLY
            104204
023522
115003
                                                                                           : COUNTER
 5
   001617
                                                              #2.R4
                       000002
                                                    MOV
                                                    CALL
   001621
                                                              GISTAT
                                                                                           GET STATUS
 7 001622
8 001623
9 001624
                                                    TST
                                                             R3
                                                                                           : WAS THERE AN ERROR?
                                                                                           ; IF NOT, CONTINUE
             011625
                                                    BEQ
                                                              DRCLR1
                                                    BR
                                                              TESTEX
                                                                                           ELSE, EXIT FROM TESTING ON THIS DRIVE
10
                                          :CLEAR DRIVE ERRORS
11
12
             023564
115003
011631
   001625
                                                              CLRDRV
                                                                                           : CLEAR DRIVE
                                          DRCLR1: CALL
14 001626
15 001627
                                                             R3
                                                    TST
                                                                                           : WAS THERE AN ERROR?
                                                              GSTS3
                                                    BEQ
                                                                                           : IF NOT, CONTINUE
16 001630 002736
                                                              TESTEX
                                                    BR
18
19
20
21 001631
22 001631
23 001632
24 001633
25 001634
26
27
28
29 001635
30 001641
32 001643
33 001644
34 001645
35 001646
                                          :ISSUE GET STATUS COMMAND AND CHECK THAT IT PERFORMS PROPERLY
                                          GSTS3:
             023522
115003
011635
                                                    CALL
                                                              GISTAT
                                                                                           : GET STATUS
                                                    TST
                                                              R3
                                                                                           ; WAS THERE AN ERROR?
                                                    BEQ
                                                              GSTS6
                                                                                           : IF NOT, CONTINUE
             002736
                                                                                           ELSE, STOP TESTING THIS DRIVE
                                                    BR
                                                              TESTEX
                                          :LOOK AT DATA IN RESPONSE PACKET
             104307
                       004216
                                          GSTS6:
                                                    MOV
                                                              ST+1.R0
                                                                                           GET TWO WORDS FROM PACKET
                                                              ST+2.R1
                                                    MOV
             102201
                                                    BIT
                       000250
                                                              #ST.WE+ST.PE+ST.FE,R1
                                                                                           : CHECK ERROR BITS
             001662
                                                    BR
                                                              GSTS7
                                                                                           :BRANCH IF ALL CLEAR
             117404
                                                    DEC
                                                              R4
                                                                                           : TRY ONCE MORE?
             051625
                                                    BNE
                                                              DRCLR1
                                                                                           : IF OK, TRY AGAIN
35 001646
                                                             MS16,RO,R1,ST+2
                                                    ERRHRD
    001646
                                                                                                                MOV R1, SAVREG
                       004217
    001650
             104301
                                                                                                                MOV ST+2,R1
    001652
             100461
                                                                                                                MOV R1.-(SP)
    001653
             104301
                                                                                                                MOV SAVREG.R1
                       001316
    001655
             100461
                                                                                                                MOV R1,-(SP)
   001656
001657
             100467
                                                                                                                MOV RO, - (SP)
             021236
                                                                                                                CALL RERROR
                                                                                                                                   :ERROR # 8.
   001660
                                                                                                                 .WORD <PRMS * 2000>+ < 2 * 400> + ERRN
    001661
             000655
                                                                                                                 . WORD MS16
36
37
38
                                          : CHECK IF DIAGNOSTIC REQUEST BIT IS SET
39 001662
                                          GSTS7:
             104070
                      003720
                                                    MOV
                                                              RO. SAVSTA
```

1 2			GET DE		GET DRIVE CHARACTERIST	ics
4 001664 5 001667 6 001671 001671 001672 001673 001674 001675	104200 104203 021102 115003 011705 031701	000012 0011 004177	50 T:	MOV MOV TALKX CALL TST BEQ BPL ERRHRD	#10.,SDISTO #CR.GCR,R3 TESTEX,MS50,MS51 TALKER R3 12\$ 11\$ MS50;SEND COMMAND ERROR	; SET UP TEMPORARY SHORT TIMEOUT VALUE ; POINT TO GET CHARS COMMAND ; SDI INTERCHANGE ; INITIATE SDI INTERCHANGE ; SEE IF ERROR OCCURRED ; IF NOT, BRANCH ; IF SO, BRANCH
001675 001676 001677 001700 001701	021236 001011 002165 002736		115:	BR ERRHRD	TESTEX MS51; RECEIVE COMMAND E	CALL RERROR ;ERROR # 9. .WORD <prms*2000>+<2*400>+ERRN .WORD MS50</prms*2000>
001701 001702 001703 001704 001705	021236 001012 002226 002736		12\$:	BR	TESTEX	CALL RERROR :ERROR # 10WORD <prms*2000>+<2*400>+ERRN .WORD MS51</prms*2000>
7 001705 8 001707 9 001710 001710 001711	106207 011724 100467 104010	000170		CMP BEQ ERRHRD	#CHRRES,RO TOO MS52,#CHRRES,RO	; CHECK FOR SUCCESSFUL RESPONSE ; GET CHARACTERISTICS COMMAND FAILED MOV RO, -(SP) MOV R1, SAVREG
001713 001715 001716 001720 001721 001722	104201 100461 104301 021236 005013 002271	000170				MOV #CHRRES,R1 MOV R1,-(SP) MOV SAVREG,R1 CALL RERROR ;ERROR # 11WORD <prms*2000>+<2*400>+ERRN .WORD MS52</prms*2000>
10 001723 11 12 001724 13 001726	002736 104307 103207	004215 177760	100:	MOV BIC	TESTEX ST+SHRTTO,RO #LBLONB,RO	; BRANCH TO END OF TEST ; GET SHORT TIMEOUT ; CLEAR UNUSED BITS
14 001730 15 001731 16 001733 17 001735 18 001737 19 001740	021221 104070 104307 103207 021221 -104070	001150 004216 177760 001151		MOV MOV BIC CALL MOV	TO RO, SDISTO ST+LONGTO, RO #LBLONB, RO TO RO, SDILTO	SET UP TIMEOUT SAVE IN SHORT TIMEOUT GET LONG TIMEOUT CLEAR UNUSED BITS SET UP TIMEOUT SAVE IN LONG TIMEOUT

	001742 001744 001746 001747 001751 001753	104307 102207 052340 114000 114000 114000	003720 000040 001007 001010 004416		ST.DIA:	BNE	CHECK WHICH COMMAND I SAVSTA,RO #ST.DR.RO DO.DIX AGNOSE REGION ZERO OUT.O: OUT.O: DIAG.1	HAS	GET STORED STATUS WORD WAS THE DR BIT SET? IF SO, GO HANDLE IT WITHIN DIAGNOSE CODE CLEAR OUT BUFFER TO INITIAL DIAGNOSE COMMANDS MAKE SURE DIAGNOSE COMMAND RETURNS OP-CODE = 0		
	001755	104200	000017	001046		MOV	#17.IN.02 IN.02	; (FOR 1ST TIME THROUGH ONLY) ;OFH IS DIAGNOSTIC ;****TEMP ;CLEAR REGION ID FOR 1ST DIAGNOSE COMMAND			
1	001760	002110			GSTST8:	BR	DIAGNS		DO DIAGNOSE COMMAND		
14	001761	104207	200000		337370.	MOV	#T2CMD,RO		SET REQUEST NUMBER		
	001764	020751	001045			MOV	HOSTRO IN.01,RO		ASK HOST FOR PORTS RO = RESPONSE CODE: IN. 02		
200	001766 001767 001770 001771 001772 001773 001774 001775 001775 001777 002001	012736 117407 012010 117407 012054 117407 012110 104301 100461	001316 001046			BEQ DEC BEQ DEC BEQ DEC BEQ ERRHRD	TESTEX RO WRITE RO READ RO DIAGNS MS20, IN. 02		<pre>0 = EXIT : 1 = WRITE 2 = READ : 3 = DIAGNOSE OP = 0 /EXIT R0 = 1? IF SO, WRITE R0 = 2? IF SO, READ R0 = 3? IF SO, DIAGNOSE ELSE, ERROR=INVALID INPUT MOV R1, SAVREG MOV IN.02, R1 MOV R1, -(SP)</pre>		
2	002002 002004 002005 002006 7 002007	104301 021236 003014 001125 001761	001316			BR	GSTST8		MOV SAVREG.R1 CALL RERROR ;ERROR # 12WORD <prms*2000>+<2*400>+ERRN .WORD MS20</prms*2000>		

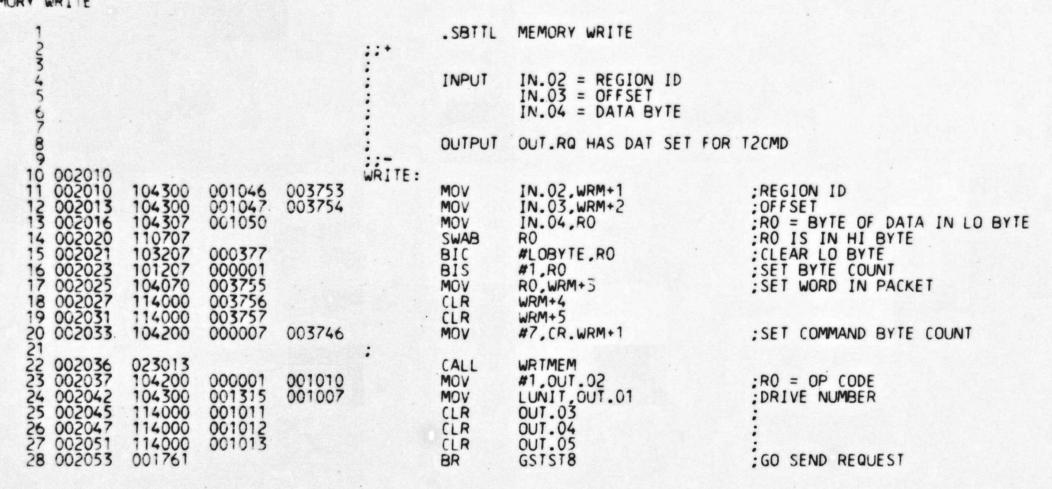

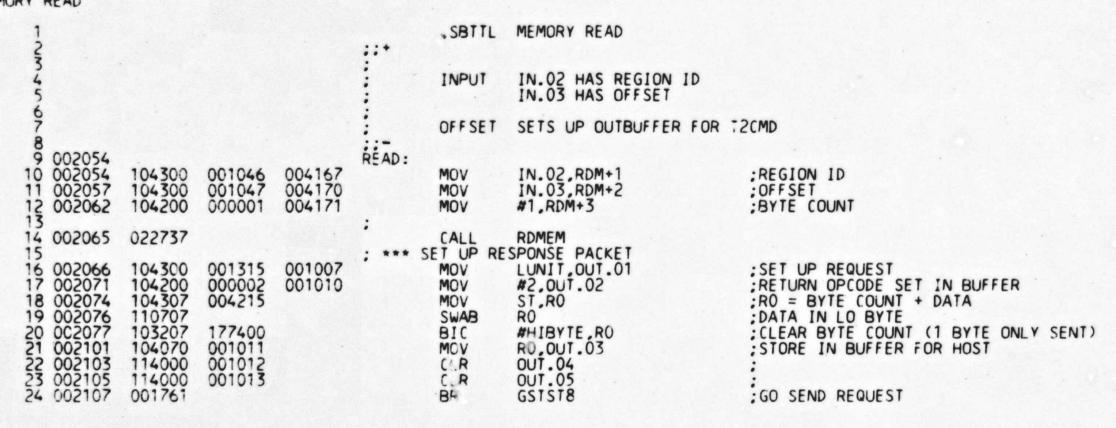

```
.SBTTL DIAGNOSE
                                                      INPUT
                                                                IN.02 HAS REGION ID
                                                      OUTPUT OUT.RQ IS SET UP FOR T2CMD
                                            DIAGNS:
                                                      MOV
                                                                IN.02.DIA+1
                                                                                               :SET UP MEMORY REGION ID
   002110 104300 001046 004213
10
                                                                                              : SEND MESSAGE
                                                                MS59, DIA+1
                                                      MSSGE
11
                                                                                               :R3->DIAGNOSE PACKET
             104203
12 002113
13 002115
                                                      MOV
                                                                #CR.DIA,R3
                                                                                              :R2 = PORT
                        003717
                                                                SDI.R2
                                                      MOV
14 002117 021102
15 002120 115003
16 002121 012135
17 002122 110203
18 002123 042130
                                                                                              ; SEND COMMAND AND RECEIVE RESPONSE FROM DRIVE
                                                      CALL
                                                                TALKER
                                                                                              :SEE IF ERROR OCCURRED
                                                      TST
                                                                R3
                                                                                              :IF NO ERRORS, BRANCH
;SHIFT HIGH BIT INTO CARRY BIT
                                                                3$
                                                      BEQ
                                                                R3
                                                      ROL
                                                                2$
                                                                                               : IF CARRY CLEAR (RECEIVE ERROR) BRANCH
                                                      BCC
                                            : *** REPORT TRANSMISSION ERROR
19
20 002124
002124
002125
002126
                                                      ERRHRD MS37
                                                                                                                                         :ERROR # 13.
             021236 001015
                                                                                                                     CALL RERROR
                                                                                                                     .WORD <PRMS * 2000>+<2 * 400>+ERRN
             001526
                                                                                                                     .WORD MS37
             002313
   002127
                                             * *** REPORT RECEPTION ERROR
   002130
                                                      ERRHRD MS38
                                            28:
                                                                                                                                         :ERROR # 14.
                                                                                                                     CALL RERROR
    002130
              021236
                                                                                                                     .WORD <PRMS *2000>+<2 *400>+ERRN
    002131
              001016
   002132
002133
002134
                                                                                                                     .WORD MS38
              001557
24 002133
25 002134
26
27 002135
28 002135
29 002137
30 002140
002140
002141
002143
             023237
                                                      CALL
                                                                TYPERR
                                                      BR
                                                                11$
                                              *** CHECK RESPONSE OP-CODE FROM DRIVE
                                            38:
                                                                                               : CHECK RESPONSE CODE
                                                      MP
              106207
                        000374
                                                                #DIA.EN,RO
                                                                                               : IF EQUAL, BRANCH
              012154
                                                      BEQ
                                                                43
                                                      ERRHRD MS36, #DIA.EN, RO
                                                                                                                     MOV RO, - (SP)
              100467
              104010
                                                                                                                     MOV R1, SAVREG
                        001316
                                                                                                                     MOV #DIA.EN,R1
                        000374
              100461
104301
                                                                                                                     MOV R1,-(SP)
    002145
                                                                                                                     MOV SAVREG, R1
    002146
                        001316
002150
002151
002152
31 002153
                                                                                                                                         :ERROR # 15.
                                                                                                                     CALL RERROR
              021236
                                                                                                                     .WORD <PRMS *2000>+<2 *400>+ERRN
              005017
              001440
                                                                                                                      . WORD MS36
              002313
                                                      BR
                                                                11$
```

```
.SBITL DIAGNOSE/READ MEMORY TO SEE IF ERROR OCCURRED
                                              : *** DO A READ MEMORY SDI COMMAND
                        004215
              104300
                                                         MOV
                                                                   ST.RDM+1
                                                                                                    : REGION ID SET
   002157
              114000
                                                                   RDM+2
                                                                                                    :CLEAR OFFSET
                                                         CLR
   002161
002164
              104200 022737
                                                                    #8. . RDM+3
                                                                                                    :BYTE COUNT = 8
                         000010
                                                         MOV
                                                                    RDMEM
                                                                                                    : READ THE MEMORY
                                                         CALL
   002165
              115002
                                                         TST
                                                                    R2
                                                                                                    :ALL OK?
                                                                                                    :IF NOT, EXIT/TRY NEXT DRIVE ;RESTORE PORT INDICATOR
                                                                    11$
 89
   002166
              052313
                                                         BNE
   002167
               104302
                                                                    SDI.R2
                         003717
                                                         MOV
                                                                   #0UT.05,R4
10 002171
              104204
                         001013
                                                                                                    :R4 -> OUT BUFFER
                                                         MOV
11 002173
              023054
                                                                    CONMEM
                                                                                                    : CONVERT MEMORY
                                                         CALL
                                              ; *** DATA NOW IN OUT.RQ
MOV OUT.07,R3
12
13 002174
14 002176
15 002177
              104303
052242
104303
                                                                                                    :R3 = ERROR NUMBER
                         001015
                                                                                                   :IF NOT O, REPORT ERROR
:R3 HAD ET & DA FLAGS
                                                         BNE
                                                                    10$
                                                                   OUT.06,R3
                         001014
                                                         MOV
              102203
                                                                    #ERRTYP,R3
                                                                                                    ; WAS ET SET? WITH NO ERROR NUMBER???
16 002201
                         100000
                                                         BIT
                                                                   5$
17 002203
                                                         BEQ
                                                                                                    : IF NOT, CONTINUE
                                                         ERRHRD
18 002204
                                                                   MS40
    002204
              021236
                                                                                                                            CALL RERROR
                                                                                                                                                :ERROR # 16.
    002205
              001020
                                                                                                                            .WORD <PRMS*2000>+<2*400>+ERRN
    002206
              001613
                                                                                                                            . WORD MS40
19 002207
                                                                                                    :GET EXTENDED STATUS
              002631
                                                                    DO. D19
19 002207
20 21 002210
22 002212
23 002213
24 002216
25 002217
26 002220
27 002221
28 002222
29 002224
30 002226
31 002227
002232
002233
002234
                                              : *** CHECK IF DATA IS AVAILABLE FOR INFORMATION
              102203
012313
                         040000
                                                         BIT
                                                                    #DATAVL,R3
                                                                                                   : IS DATA AVAILABLE?
                                                                   11$
                                                                                                    ; IF NOT, CONTINUE WITH THIS DRIVE
                                                         BEQ
              104200
023114
                                                                    #8..RDM+2
                                                                                                    :PREVIOUS BYTE COUNT
                         000010 004170
                                                         MOV
                                                         CALL
                                                                    GETBCN
                                                                                                    GET NEW BYTE COUNT
              022737
                                                                                                    :READ MEMORY XFC
                                                                    RDMEM
                                                         CALL
              115002
                                                                                                    ;ALL OK?
                                                         TST
                                                                                                   : IF NOT, EXIT/DROP DRIVE : RESTORE PORT INDICATOR
              052313
                                                         BNE
                                                                    11$
              104302
104204
023054
                                                                   SDI,R2
#OUT.09,R4
                         003717
                                                         MOV
                                                                                                    :R4 -> OUT BUFFER
                         001017
                                                         MOV
                                                         CALL
                                                                    CONMEM
                                                                                                    : CONVERT MEMORY
                                                         MSSGE
                                                                    MS41
              104200
                         001715 001010
                                                                                                              MOV
                                                                                                                         #MS41,0UT.02
               100467
                                                                                                                                    MOV RO, - (SP)
               100461
                                                                                                                                    MOV R1,-(SP)
    002234
              104207
                         000015
                                                                                                                         #MESSAG, RO
                                                                                                              MOV
    002236
              020751
                                                                                                                         HOSTRO
                                                                                                              CALL
    002237
              104261
                                                                                                                                    MOV (SP)+,R1
    002240
                                                                                                                                    MOV (SP)+, RO
32 002241

33 002242

35 002244

36 002246

37 002250

38 002251

39 002254

40 002256

41 002257

42 002262

43 002263

44 002264
              002631
                                                                                                    :GET EXTENDED STATUS
                                                                    DO. D19
                                              : *** REPORT AN ERROR
   002242
002244
002246
002250
                                              105:
               104303
                         001014
                                                         MOV
                                                                    OUT.06,R3
                                                                                                    :R3 HAS ET & DA FLAGS
                                                                                                    : HARD ERROR ASSUMED
               114000
                         004415
                                                         CLR
                                                                    S.ERR
                                                                                                   :WAS IT A HARD ERROR?
:NO. SKIP NEXT INSTRUCTION
:SOFT ERROR SET
              102203
                         100000
                                                                    #ERRTYP,R3
                                                         BIT
                                                         BNE
                                                                    6$
              104200
102203
012276
104200
023114
022737
115002
052313
                                                                   #177777, S.ERR
                                    004415
                         177777
                                                         MOV
                                                                                                   ;DATA AVAILABLE?
;IF NOT, CONTINE
;PREVIOUS BYTE COUNT
                                                                   MDATAVL . R3
                         040000
                                                         BIT
                                                                   7$
#8..RDM+2
                                                         BFQ
                         000010 004170
                                                         MOV
                                                                                                    GET NEW BYTE COUNT
                                                         CALL
                                                                    GETBCN
                                                                    RDMEM
                                                                                                    READ MEMORY XFC
                                                         CALL
44 002264
45 002265
                                                                    R2
                                                                                                    :ALL OK?
                                                         TST
                                                                                                   : IF NOT, EXIT/DROP DRIVE : RESTORE PORT INDICATOR
                                                                    115
                                                         BNE
46 002266
47 002270
                                                                    SDI.R2
               104302
                         003717
                                                         MOV
              104204
                         001017
                                                         MOV
                                                                    #OUT.09,R4
                                                                                                    :R4 -> OUT BUFFER
```

UDATE DISK RESIDENT MACRO X04.00 9-JUL-81 11:39:12 PAGE 41-1 DIAGNOSE/READ MEMORY TO SEE IF ERROR OCCURRED

48 002272 02305 49 002273 10220 50 002275 05230	03 040000	CALL CONMEM BIT #DATAVL,R3
51 002276 11400 52 002300 11500 53 002302 05230	00 001016	7\$: CLR OUT.08 8\$: (ST S.ERR BNE 9\$
54 55 002303 002303 02123 002304 00102 002305 00203 56 002306 00263	21	; *** PRINT HARD ERROR MESSAGE ERRHRD MS42 BR DO.DI9
58 002307 002307 02123 002310 00142 002311 00210 59 002312 00263	22	9\$: PRINT SOFT ERROR MESSAGE 9\$: ERRSFT MS43 BR DO.D19

```
CONVERT MEMORY

DATA AVAILABLE?

IF SO, SKIP NEXT INSTRUCTION

CLEAR BINARY COUNT AND ASCII COUNT

SOFT ERROR?

IF NOT O, SOFT ERROR
```

CALL RERROR :ERROR # 17.
.WORD <PRMS*2000>+<2*400>+ERRN
.WORD MS42

GET EXTENDED STATUS

CALL RERROR :ERROR # 18.
.WORD <PRMS*2000>+<3*400>+ERRN
.WORD MS43

GET EXTENDED STATUS

SBITL DIAGNOSE/DO A DRIVE CLEAR : *** DO DRIVE CLEAR, GET STATUS AND CHECK IF DR BIT IS SET	
11\$: 4 002313 104204 000004 D0.DC4: MOV #4,R4 ;R4 = # MAXIMUM DRIVE CLE. 5 002315 104302 003717 D0.DCL: MCV SDI,R2 ;RESTORE PORT INDICATOR 6 002317 023564	AR TRIES
5 002315 104302 003717 DO.DCL: MCV SDI,R2 ;RESTORE PORT INDICATOR	
6 002317 023564 CALL CLRDRV CALL DRIVE CLEAR	
7 002320 115003 IST R3 ;ERROR?	
8 002321 012325 BEQ 1\$; IF NOT, CONTINUE 9 002322 117404 DEC R4 ; REACHED MAXIMUM # OF DRV	CIP TRIES?
10 002323 052315 BNE DO.DCL ; IF NOT, TRY AGAIN	CLR TRIES:
11 002324 002736 BR TESTEX ;ELSE DROP DRIVE	
12 002325 023522 1\$: CALL GISTAT ; CALL GET STATUS	
7 002320 115003	
14 002327 012333 BEQ 2\$; IF NCT, CONTINUE	
15 002330 117404 DEC R4 ; REACHED MAXIMUM # OF DRV	CLR TRIES?
16 002331 052315 BNE DO.DCL ; IF NOT, TRY AGAIN 17 002332 002736 BR TESTEX ; ELSE DROP DRIVE	
17 002332 002736 BR TESTEX ;ELSE DROP DRIVE	
18 002333 104307 004216 2\$: MOV ST+1.RO ;GET STATUS WORD 19 002335 102207 000040 BIT #ST.DR.RO ;DR SET? 20 002337 012706 BEQ DO.DIO ;IF NOT, EXIT 21 ;*** IF DR BIT IS SET, READ 6 BYTES FROM REGION ID FFFD	
19 002335 102207 000040 BIT #ST.DR.RO ;DR SET?	
20 0C2337 012706 BEQ DO.DIO ; IF NOT, EXIT	
21 : *** IF DR BIT IS SET, READ 6 BYTES FROM REGION ID FFFD	IN DEAD MEM DACKET
22 002340 104200 177775 004167 DO.DIX: MOV #FFFD,RDM+1 ;FFFD (REGION ID) STORED 23 002343 114000 004170 CLR RDM+2 ;OFFSET = 0	IN READ MEM PACKET
22 002340 104200 177775 004167 DO.DIX: MOV #FFFD.RDM+1 ;FFFD (REGION ID) STORED 23 002343 114000 004170 CLR RDM+2 ;OFFSET = 0 24 002345 104200 000006 004171 MOV #6.RDM+3 ;BYTE COUNT = 6	
25 002350 022737 CALL RDMEM ;READ MEMORY	
26 002351 115002 TST R2 ;WAS THERE AN ERROR?	
27 002352 012354 BEQ 1\$; IF THERE WAS NOT, CONTIN	JE
28 : MSSGE MS53	
29 002353 002706 BR DO.DIO ;DO A DRIVE CLEAR	
30 002354 104302 003717 1\$: MOV SDI,R2 ;RESTORE PORT INDICATOR	
31 002356 104204 004215 MOV #ST.R4 ;R4 -> ST	
32 002360 023054 CALL CONMEM ; CONVERT MEMORY 33 : *** GET REGION ID AND PROGRAM NAME IF ANY	
34 002361 104300 004215 003721 MOV SI, SAVRID :SAVE REGION ID	
35 002364 115000 004216 TST ST+1 ;IS CHARACTER ENCODED? 36 002366 052372 BNE DO.DI1 ;IF SO, GO GET FILE FROM	TON
36 002366 052372 BNE DO.DI1 ;IF SO, GO GET FILE FROM (37 002367 115000 004217 TST ST+2 ;IF 1ST WORD 0, IS THE SE	COND 2
38 002371 012547 BEQ DO.DI3 :IF SO, GO DIAGNOSE REGIO	LOITE.

1 2 002772				.SBITL DIAGNOSE/GET PROGRAM NAME SPECIFIED BY DRIVE AND DOWNLINE LOAD : *** GET THE PROGRAM WHICH NAME WAS SPECIFIED BY THE DRIVE
3 002372 4 002372 5 002375 6 002377	104300 104203 104307	003721 001045 001315	003753	MOV SAVRID, WRM+1 ;STORE REGION ID IN THE WRITE PACKET MOV #IN.01,R3 ;R3 -> INPUT DATA MOV LUNIT,R0
7 002401	100237	001313		MOV RO, (R3)+ ; SET UNIT NUMBER
8 002402 9 002403	114007	00/315		MOV RO, (R3)+ ; CLEAR VALUE
10 002404 11 002406	104307	004215		MOV ST.RO MOV RO.(R3)+ ;SAVE REGION ID
12 002407 13 002411	104307	004216		MOV ST+1,RO MOV RO,(R3)+ ;1ST HALF NAME SAVED
14 002412 15 002414	104307	004217		MOV ST+2,RO MOV RO,(R3)+ ;2ND HALF NAME SAVED
16 002415 17 002417	104207 020751	000001		MOV #T2DLL,RO ;SET RO = TEST 2 DOWNLINE LOAD CALL HOSTRO
18 19 002420	104205	001045		: *** IF HERE, DIDN'T REINIT UDA TO GET DATA MOV #IN.01,R5 ;R5 -> INPUT BUFFER
20 002422	114000	003754		CLR WRM+2 ; CLEAR OFFSET ; *** DOWN LINE LOAD PROGRAM
22 002424 23 002425	104157			DO.DI2: MOV (R5),R0 ;IS THE PROGRAM THERE? DEC R0
24 002426	052556			BNE DO.DI8 ; IF NOT, REPORT ERROR ; *** GET THE PROGRAM FROM THE HOST
26 002427 27 002431	104657 104651	000005		1\$: MOV 5(R5),R0 ;UNIBUS ADDRESS PA MOV 6(R5),R1 ;UNIBUS ADDRESS EA
28 002433 29 002435	104652 104203	000007		MOV 7(R5),R2 ;BYTE COUNT MOV #ST,R3 ;POINTER TO INPUT BUFFER
30 002437 31 002441	106202	000200		CMP #STSIZE,R2 ;R2 > MAX BUFFER SIZE? BPL 2\$;IF NOT, CONTINUE
32 002442 33 002444	104202	000200		MOV #STSIZE,R2 ;SET MAX BUFFER SIZE IN R2 2\$: XFC UREAD ;DO A UNIBUS READ
34		0037/4		: *** SET UP SDI COMMAND PACKETS
36 002447	105200		003746	MOV R2.CR.WRM+1 ;SET BYTE COUNT IN WRM PACKET ADD #6.CR.WRM+1 ;ADD TO COUNT TO INCLUDE PACKET LENGTH
37 002452 38 002455	104650 104020	000004 003755	003753	MOV 4(R5), WRM+1 ; SET REGION ID MOV R2, WRM+3 ; SET BYTE COUNT IN BUFFER
40 002461	104303	004215		MOV ST.R3 :1ST DATA WORD IN R3 SWAB R3 :1ST DATA WORD IN UPPER BYTE
37 002452 38 002455 39 002457 40 002461 41 002462 42 002464 43 002466 44 002470 45 002471 46 002474 47 002476 48 002500	104020 104303 110703 103203 101030	000377 003755		MOV ST.R3 ;1ST DATA WORD IN R3 SWAB R3 ;1ST DATA WORD IN UPPER BYTE BIC #LOBYTE.R3 ;CLEAR LOW BYTE BIS R3.WRM+3 ;SET DATA IN 1ST BUFFER WORD OF WRT MEM PACKET MOV R2.SAVREG ;SAVE BYTE COUNT DEC R2 ;ADJUST BYTE COUNT BIC #LOBYTE.ST ;CLEAR LOW BYTE OF 1ST DATA WORD OF PROGRAM BIS R2.ST ;REPLACE IT BY THE BYTE COUNT OF THE REST
43 002466	117402	001316		MOV R2, SAVREG ; SAVE BYTE COUNT DEC R2 ; ADJUST BYTE COUNT
45 002471 46 002474	103200 101020	000377 004215	004215	BIC #LOBYTE,ST ; CLEAR LOW BYTE OF 1ST DATA WORD OF PROGRAM BIS R2,ST ; REPLACE IT BY THE BYTE COUNT OF THE REST
47 002476 48 002500	104204 023054	003756		MOV #WRM+4,R4 ;R4 -> OUT BUFFER CALL CONMEM ;CONVERT MEMORY
50 002501		003717		; *** SEND TO THE DRIVE MOV SDI,R2 ;RESTORE PORT INDICATOR
51 002503	104302 023013 115002 052313 104302	003		CALL WRTMEM ;SEND TO DRIVE TST R2 ;ALL OK?
53 002505	052313	001316		BNE DO.DC4 ; IF NOT, GO CLEAR DRIVE
51 002503 52 002504 53 002505 54 002506 55 002510 56 002512 57 002514	105020	003754		MOV SAVREG.R2 ;R2 = BYTE COUNT ADD R2.WRM+2 ;ADJUST OFFSET
57 002514	107027	000007		MOV 7(R5),R0 SUB R2,R0

UDAT2 DISK RESIDENT MACRO X04.00 9-JUL-81 11:39:12 PAGE 43-1 DIAGNOSE/GET PROGRAM NAME SPECIFIED BY DRIVE AND DOWNLINE LOAD

58 002515 59 002517 60 002520	.100657 00000 012536 072536	7	MOV RO,7(R5) BEQ 4\$ BMI 4\$:DECREMENT TOTAL BYTE COUNT/DONE? :IF O, EXIT :IF NEG, EXIT
61 002521 62 002523	104657 00000	5	MOV 5(R5),R0 ADD R2,R0	, IT NEG, EAZ!
63 002524 64 002526 65 002527	100657 00000 106027 072535	5	MOV RO.5(R5) CMP R2.R0 BMI 3\$; ELSE, ADJUST UNIBUS ADDRESS TO READ FROM ; IS PA ADDRESS LESS THAN BUFFER SIZE? ; IF IT IS NOT, CONTINUE
66 002530 67 002532	104657 00000 115407	6	MOV 6(R5),RO INC RO	; ELSE, INCREMENT EA ADDRESS (CROSSED O BOUNDARY)
68 002533 69 002535 70	100657 00000	6 3\$:	MOV RO,6(R5) BR 1\$	READ IN NEXT BUFFER
71 72 002536 73 002540 74 002543 75 002546 76	114000 00375 104200 00000 104650 00000 002110	4 4\$: 7 003746	CLR WRM+2 MOV #7,CR.WRM+1 MOV 4(R5),IN.02 BR DIAGNS	REINIT OFFSET REINIT BYTE COUNT OF INSTRUCTION SET UP REGION ID SEND DIAGNOSE COMMAND
77 78 002547 79 002552	104300 00372 002110			ID TO DIAGNOSE TO. GO DIAGNOSE IT. ;STORE REGION ID FOR DIAGNOSE COMMAND ;GO DIAGNOSE

```
.SBTTL DIAGNOSE/REPORT ERROR -- NO DOWNLINE LOAD PROGRAM : *** NO DOWN LINE LOAD PROGRAM AFTER REINITED UDA
          002553 104650 000001 003716 DO.DI7: MOV
                                                                                                                                                                    1(R5), UNITNB
                                                                                                                                                                                                                                                         :SET UP LOGICAL UNIT NUMBER
                                                                                                                     ; *** NO DOWN LINE LOAD PROGRAM, REPORT ERROR DO.DI8: MOV 10(R5), R4 : R4 =
    6 002556
                                  104654 000010
023630
                                                                                                                     DO.DI8: MOV
                                                                                                                                                                                                                                                           ;R4 = 1ST WORD OF PROGRAM NAME
                                                                                                                                                                        DIV50

RO, NAM. 2

DIV50

RO, NAM. 2

DIV50

RO, NAM. 1

R4, RO

FNDASC

RO, NAM. 1

11(R5), R4

DIV50

RO, NAM. 3

DIV50

RO, NAM. 3

DIV50

RO, NAM. 3

RO, NAM. 4

RO, NAM. 5

RO, NAM. 6

RO, NAM. 7

RO, NAM. 8

RO, NAM. 9

RO, NAM.
                                                                                                                                                                          DIV50
                                                                                                                                                                                                                                                           DIVIDE BY 50 AND GET 3RD CHARACTER
                                                                                                                                                 CALL
8 002561
9 002562
10 002564
11 002565
                                      110707
                                                                                                                                                 SWAB
                                    104070
023630
104070
104047
                                                                004420
                                                                                                                                                MOV
                                                                                                                                                 CALL
                                                                004417
                                                                                                                                                MOV
 12 002567
13 002570
                                                                                                                                                MOV
                                      023644
                                                                                                                                                 CALL
14 002571
15 002572
16 002574
                                      110707
                                                                                                                                                 SWAB
                                     101070
                                                                004417
                                                                                                                                                BIS
                                                                000011
                                     104654
                                                                                                                                                MOV
 17 002576
                                     023630
                                                                                                                                                CALL
 18 002577
                                     104070
                                                                004421
                                                                                                                                                MOV
18 002577 104070
19 002601 023630
20 002602 110707
21 002603 101070
22 002605 104047
23 002606 023644
24 002607 101070
25 002611
                                                                                                                                                 CALL
                                                                                                                                                 SWAB
                                                                004421
                                                                                                                                                 BIS
                                                                                                                                                MOV
                                                                                                                                                                           RO NAM 2
                                                                                                                                                CALL
                                                                                                                                                                         RO, NAM. 2 SET 4TH CHARACTER MS56, NAM. 1, NAM. 2, NAM. 3 REPORT ERROR
                                                                004420
                                                                                                                                                BIS
                                                                                                                                                ERRHRD
                                     104010
           002611
                                                                                                                                                                                                                                                                                                                       MOV R1, SAVREG
                                                                001316
          002613
002615
002616
                                                                004421
                                                                                                                                                                                                                                                                                                                       MOV NAM. 3.RI
                                                                                                                                                                                                                                                                                                                      MOV R1,-(SP)
                                     100461
104301
                                                                                                                                                                                                                                                                                                                       MOV NAM. 2.R1
                                                                004420
                                     100461
           002620
                                                                                                                                                                                                                                                                                                                       MOV R1, - (SP)
           002621
002623
                                      104301
                                                                004417
                                                                                                                                                                                                                                                                                                                       MOV NAM. 1, R1
                                      100461
                                                                                                                                                                                                                                                                                                                       MOV R1,-(SP)
           002624
                                      104301
                                                                                                                                                                                                                                                                                                                       MOV SAVREG, R1
                                                                001316
           002626
                                     021236
                                                                                                                                                                                                                                                                                                                       CALL RERROR
                                                                                                                                                                                                                                                                                                                                                                          :ERROR # 19.
                                                                                                                                                                                                                                                                                                                        .WORD <PRMS * 2000>+<2 * 400>+ERRN
            002627
                                     007023
           002630
                                     002511
                                                                                                                                                                                                                                                                                                                        . WORD MS56
```

	1 2 002631				DO.D19:	.SBTTL	DIAGNOSE/GET	EXTENDED	STATUS			
	3 4 002631	10/ 200	177776	00/167	: *** GE		DED STATUS		DECION ID SET			
	5 002634	104200	004170	004167		MOV CLR	#FFFE,RDM+1 RDM+2		REGION ID SET			
	6 002636 7 002641	104200 022737 115002	000020	004171		MOV	#16.,RDM+3 RDMEM		:BYTE COUNT = 8 :READ MEMORY			
	8 002642 9 002643	115002 052706				TST BNE	R2 D0.D10		:OK? :IF NOT, EXIT			
1	0 002644	104302	003717			MOV MOV	SDI.R2 #OUT.04,R4		RESET PORT INDICATO	OR		
1	2 002650	023054				CALL	CONMEM		:R4 -> OUT BUFFER :CONVERT MEMORY			
1	4 002653	104307 107207	001012 000016			MOV	OUT.04,R0 #14.,R0		:RO =BYTE COUNT DRIV :ANY EXTENED STATUS	?		
1	6 002655	012705				BEQ	00.016		; (BYTE COUNT DOESN'	T ACCOUN	T FOR STORAGE	OF ITSELF)
1	7 002656 8 002661 9 002663	105200 104070	000020 004171	004170		ADD MOV	#16.,RDM+2 RO,RDM+3		;ADJUST OFFSET ;RDM+3 = FINAL BYTE			
1 2	9 002663	022737 115002				TST	RUMEM R2		:READ MEMORY			
2	1 002665	052706 104302	003717			BNE	DO.DIO SDI.R2		:ALL OK? :IF NOT, EXIT :RESET PORT INDICATO	an an		
5	2 002666 3 002670 4 002672	104204 023054	001022			MOV	#OUT.12,R4		;R4 -> OUTPUT BUFFER	£^		
2	4 002672 5 002673		002/17	001010		MSSGE	MS58		: CONVERT MEMORY : REPORT EXTENDED STA			
	002673 002676 002677	104200 100467	002613	001010					MOV #MS5		RO,-(SP)	
	002700	100461 104207	000015						MOV #MES	SAG, RO	R1,-(SP)	
	002702 002703	020751 104261							CALL HOST	RQ	(SP)+,R1	
2	002704 6 002705	104267 002313			DO.D16:	BR ·	DO.DC4		;DO A DRIVE CLEAR		(SP)+,R0	
							00.00		, DO A DATE CEEAR			

456789	002706 002710 002713 002715 002716 002720 002721 002724	104302 104300 115000 052721 114000 002724 104200	003717 001315 004416 001010 000003	001007	12\$: 13\$:		DIAGNOSE/SET UP R SPONSE PACKET SDI,R2 LUNIT,OUT.01 DIAG.1 12\$ OUT.02 13\$ #3,0UT.02	RESTORE PORT INDICATOR SAVE UNIT NUMBER IF DIAG.1 = 0? IF NOT, SKIP SET UP PROPER OP-CODE VALUE CONTINUE SET UP REQUEST	
13	002724 002727 002731	104300 114000 104200	004215 001012 177777	001011 004416	135.	MOV CLR MOV	ST,0UT.03 OUT.04 #177777,DIAG.1	:REGION ID SET :MAKE SURE DIAG. 1 HAS NONE ZERO VALUE IN	11
16	0027 34 0027 3 5	115007 001761				TST BR	RO GSTST8	; FOR NEXT TIME THROUGH ; XFC BREAK ; GO SEND REQUEST	
18 19 20					;END OF	TESTING	THIS DRIVE		
21	002736	001501			TESTEX:	BR TEST		GO BACK TO DRIVE SEQUENCER	

UDATZ DISK RESIDENT MACRO X04.00 9-JUL-81 11:39:12 PAGE 46 DIAGNOSE/SET UP RESPONSE TO HOST AND EXIT

```
.SBTIL TEST 2 SPECIFIC ROUTINES
                                                  .SBITL READ MEMORY SUBROUTINE
                                                  ROUTINE NAME:
                                                                    RDMEM
                                                  DESCRIPTION:
                                                  THIS ROUTINE DOES THE XFC READ MEMORY (FROM A SPECIFIED REGION
                                                  AND OFFSET) OF DATA FROM THE DRIVE. THIS ROUTINE CALLS THE
                                                  SEND AND RCV (TALKER) ROUTINE AND JUDGES IF THE SDI COMMAND
10
                                                  WAS PROPERLY SENT.
12
13
14
15
16
17
18
19
20
21
22
                                                  INPUT: ALL PARAMETERS FOR THE READ MEMORY COMMAND
                                                           MUST BE SET. THAT MEANS REGION ID, THE OFFSET,
                                                           AND THE BYTE COUNT MUST BE GIVEN THE APPRORIATE VALUES
                                                           AND STORED IN THE RDM PACKET
                                                  OUTPUT: R2 = 0 MEANS ALL IS OK
                                                           R2 NOT = 0, READ FAILED (EITHER SEND OR RECIEVE OF THE COMMAND)
                                                           ST HAS THE READ DATA
                                         ROMEM:
   002737
   002737
                                                  PUSH
                                                           <R0.R1.R3>
                                                                                       : SAVE THESE REGISTERS
    002737
             100467
                                                                                                                   MOV RO, - (SP)
    002740
             100461
                                                                                                                   MOV R1,-(SP)
    002741
             100463
                                                                                                                   MOV R3.-(SP)
23 002742
24 002744
25 002746
26 002747
27 002750
28 002751
29 002752
30
             104203
                                                  MOV
                                                           #CR.RDM.R3
                                                                                       :R3 -> RDM PACKET
                      004161
             104302
                      003717
                                                  MOV
                                                           SDI.R2
                                                                                       :R2 = PORT
             021102
                                                           TALKER
                                                                                       :SEND COMMAND AND RECEIVE RESPONSE
                                                  CALL
             115003
                                                           R3
                                                                                       : ERRORS?
                                                  TST
             012764
                                                           3$
                                                  BEQ
                                                                                       : IF NONE SO FAR, CONTINUE
             110203
                                                           R3
                                                  ROL
                                                                                       ; ERROR ON SEND?
             042757
                                                           2$
                                                  BCC
                                                                                       : IF CARRY CLEAR (RECEIVE ERROR) BRANCH
                                         : *** REPORT TRANSMISSION ERROR
31 002753
                                                  ERRHRD MS27
    002753
             021236 001024
                                                                                                            CALL RERROR
                                                                                                                              :ERROR # 20.
   002754
                                                                                                            .WORD <PRMS * 2000> + < 2 * 400 > + ERRN
             001316
                                                                                                            . WORD MS27
   002756
           003005
                                                                                       : ERROR EXIT
                                          *** REPORT RECEPTION ERROR
   002757
                                         2$:
                                                  ERRHRD MS28
    002757
                                                                                                                              :ERROR # 21.
             021236
                                                                                                            CALL RERROR
             001025
    002760
                                                                                                            .WORD <PRMS *2000>+<2 *400>+ERRN
             001350
    002761
                                                                                                             WORD MS28
35 002762
36 002763
37
38 002764
39 002766
40 002767
002767
002770
             023237
                                                                                       :GO CHECK TYPE OF ERROR
                                                  CALL
             003005
                                                  BR
                                                           5$
                                                                                       :ERROR EXIT
                                           *** CHECK RESPONSE OP-CODE FROM DRIVE
                                         3$:
             106207
                      000162
                                                  CMP
                                                           #RDM.EN,RO
                                                                                       : CHECK RESPONSE
             013003
                                                  BEQ
                                                                                       : IF IT MATCHES, OK, EXIT
                                                  ERRHRD MS26, #RDM.EN, RO
             100467
                                                                                                            MOV RO, - (SP)
             104010
                                                                                                            MOV R1, SAVREG
                      001316
    002772
             104201
                                                                                                            MOV #RDM.EN.R1
                      000162
    002774
             100461
                                                                                                            MOV R1, -(SP)
             104301
021236
005026
    002775
002777
                      001316
                                                                                                            MOV SAVREG, R1
                                                                                                                              : FRROR # 22.
                                                                                                            CALL RERROR
    003000
                                                                                                            .WORD <PRMS * 2000>+<2 * 400>+ERRN
    003001
             001226
                                                                                                            . WORD MS26
```

UDAT2 DISK RESIDENT MACRO X04.00 9-JUL-81 11:39:12 PAGE 47-1 READ MEMORY SUBROUTINE

41 003002 42 003003 43 003004	003005 114002 003007		4\$:	BR (LR BR	5\$ R2 6\$
44 003005	104202	000001	5\$: 6\$:	MOV POP	#1,R2 <r3,r1,r0></r3,r1,r0>
003007 003010 003011	104263 104261 104267		55.	7 01	(13,11,10)
46 003012	000000			RETURN	V

:ERROR EXIT ;ALL OK, EXIT

ERROR OCCURED, SET R2

MOV (SP)+,R3 MOV (SP)+,R1 MOV (SP)+,R0

```
.SBTIL WRITE MEMORY SUBROUTINE
                                                 WRTMEM
                                                 DESCRIPTION:
                                                 THIS ROUTINE DOES THE XFC WRITE MEMORY TO A SPECIFIED
                                                 REGION ID AND OFFSET WITH A BYTE COUNT AND DATA.
                                                 THIS ROUTINE CALLS THE SEND AND RCV (TALKER) ROUTINE
                                                 AND JUDGES IF THE SDI COMMAND WAS PROPERLY SENT.
   10
                                                 INPUT: ALL PARAMETERS FOR THE WRITE MEMORY COMMAND MUST BE SET.
   12
                                                          REGION ID, OFFSET, BYTE COUNT AND THE DATA MUST BE STORED
                                                          IN THE PACKET
   14
   15
      003013
              104203
                       003745
                                         WRIMEM: MOV
                                                          #CR.WRM.R3
                                                                                   :R3->MEM WRITE PACKET
   16 003015
              104302
                       003717
                                                          SDI.R2
                                                 MOV
                                                                                   :R2 = PORT
   17 003017
              021102
                                                 CALL
                                                          TALKER
                                                                                   SEND COMMAND AND RECEIVE RESPONSE FROM DRIVE
   18 003020
              115003
                                                          R3
                                                 TST
                                                                                   :SEE IF ERROR OCCURRED
   19 003021
              013035
                                                          3$
                                                 BEQ
                                                                                   : IF NO ERRORS, BRANCH
  20 003023
21 003023
22 23 003024
              110203
                                                 ROL
                                                          R3
                                                                                    SHIFT HIGH BIT INTO CARRY BIT
     003023 043030
                                                 BCC
                                                          2$
                                                                                   : IF CARRY CLEAR (RECEIVE ERROR) BRANCH
                                         : *** REPORT TRANSMISSION ERROR
                                                 ERRHRD MS17
      003024
              021236
003025
003026
24 003027
25
26 002
                                                                                                       CALL RERROR
                                                                                                                       :ERROR # 23.
              001027
                                                                                                       .WORD <PRMS *2000>+<2 *400>+ERRN
              000744
                                                                                                       . WORD MS17
              003053
                                         *** REPORT RECEPTION ERROR
                                                 ERRHRD MS18
      003030
              021236
                                                                                                       CALL RERROR
                                                                                                                       :ERROR # 24.
      003031
              201030
                                                                                                       .WORD <PRMS *2000>+<2 *400>+ERRN
      003032
              000777
                                                                                                       .WORD MS18
   27
28
29
30
31
     003033
              023237
                                                 CALL
                                                          TYPERR
                                                                                   :FIND OUT WHAT TYPE OF ERROR OCCURED
     003034
              003053
                                                 BR
                                                          48
                                          *** SET UP RESPONSE PACKET
     003035
              106207
                       000176
                                        3$:
                                                 CMP
                                                         #COMPLT, RO
                                                                                   :DID IT COMPLETE
     003037
              013053
                                                 BEQ
                                                                                   : IF SO CONTINUE
   32 003040
                                                 ERRHRD MS19.#COMPLT.RO
      003040
              100467
                                                                                                       MOV RO, - (SP)
      003041
              104010
                       001316
                                                                                                       MOV R1, SAVREG
      003043
              104201
                       000176
                                                                                                       MOV #COMPLT,R1
      003045
              100461
                                                                                                       MOV R1, -(SP)
      003046
             104301
                       001316
                                                                                                       MOV SAVREG, R1
      003050
              021236
                                                                                                       CALL RERROR
                                                                                                                       :ERROR # 25.
      003051
              005031
                                                                                                       .WORD <PRMS *2000>+<2*400>+ERRN
      003052
              001035
                                                                                                       . WORD MS19
   33 003053
              000000
                                        45:
                                                 RETURN
```

```
.SBITL CONVERT MEMORY -- SKEWED BY BYTE
                                                       ROUTINE NAME:
                                                                           CONMEM
                                                      DESCRIPTION:
                                                      MEMORY IS SENT TO THE DM ROUTINE STARTING ON THE ODD BYTE BOUNDARY.
                                                       THIS ROUTINE SHIFTS THE DATA TO START ON THE EVEN BYTE BOUNDARY AND
                                                       STORES EACH WORD INTO A SPECIFIED BUFFER AREA. THE DATA IS STORED AS
                                                       FOLLOWS:
10
                                                                           DATA BYTE 0
DATA BYTE 2
                                                                 ST:
                                                                                               BYTE COUNT
                                                                                               DATA BYTE 1
123
14
15
16
17
18
19
20
21
22
22
22
22
27
                                                                           DATA BYTE 4
                                                                                               DATA BYTE 3
                                                                                               DATA BYTE 5
                                                      AFTER EXECUTION, THD DATA IS STORED LIKE THIS:
                                                                 OUT .XX: DATA BYTE 1
                                                                                               DATA BYTE O
                                                                                               DATA BYTE 2
                                                                           DATA BYTE 3
                                                                           DATA BYTE 5
                                                                                               DATA BYTE 4
                                                                                               DATA BYTE 6
                                                       INPUT: R4 -> BUFFER AREA'S FIRST LOCATION
                                                                 ST HAS INPUT DATA
                                                      OUTPUT: OUTPUT BUFFER HAS SHIFTED DATA
                                            CONMEM: PUSH
    003054
                                                                 <R0.R1.R2.R3.R4>
    003054
              100467
                                                                                                                              MOV RO, - (SP)
    003055
              100461
                                                                                                                              MOV R1,-(SP)
    003056
003057
                                                                                                                             MOV R2,-(SP)
MOV R3,-(SP)
              100462
              100463
003060
28 003061
29 003063
30 003064
31 003066
32 003067
33 003071
34 003072
35 003074
37 003076
38 003077
39 003100
40 003101
41 003102
42 003103
43 003104
44 003105
45 003106
    003060
              100464
                                                                                                                              MOV R4, - (SP)
              104203
                        004215
                                                      MOV
                                                                 #ST.R3
                                                                                               :R3 -> BYTE COUNT
                                                                 (R3),R0
              104137
                                                                                               :RO = BYTE COUNT
                                                       MOV
              103207
                        177400
                                                       BIC
                                                                 #HIBYTE . RO
                                                                                               :STRIP OFF EXTRANEOUS
             104231
103201
                                            15:
                                                       MOV
                                                                 (R3) + R1
                                                                                               :R1 = EVEN BYTE OF DATA
                        000377
                                                       BIC
                                                                 #LOBYTE,R1
                                                                                               STRIP OFF EXTRANEOUS
              117407
                                                       DEC
                                                                 RO
                                                                                               : DONE?
                                                                                               :IF YES, GO STORE LAST BYTE :R2 = ODD BYTE
              013104
                                                       BEQ
                                                                 2$
              104132
                                                       MOV
                                                                 (R3),R2
              103202
                                                                 #HIBYTE,R2
                        177400
                                                                                               STRIP OFF EXTRANEOUS
                                                      BIC
              101021
                                                                                               ;R1 HAS WHOLE WORD (BYTES REVERSED)
                                                      BIS
                                                                 R2.R1
                                                                                               : SWITCH BYTES
              110701
                                                       SWAB
                                                                 R1
              100241
117407
                                                                                               STORE DATA
                                                       MOV
                                                                 R1.(R4)+
                                                       DEC
                                                                 RO
                                                                                               : DONE?
              013106
                                                                 3$
                                                       BEQ
                                                                                               : IF SO, EXIT(EVEN # OF BYTES)
              003066
                                                                 1$
                                                                                               :ELSE, CONTINUE
:ODD # BYTES TO GET HERE
                                                       BR
              110701
                                                       SWAB
                                                                 R1
                                             2$:
              100141
                                                       MOV
                                                                 R1.(R4)
                                                                                               :STORE LAST BYTE
45 003106
                                            3$:
                                                       POP
                                                                 <R4,R3,R2,R1,R0>
              104264
104263
104262
104261
    003106
                                                                                                                              MOV (SP)+,R4
    003107
                                                                                                                              MOV (SP)+, R3
    003110
                                                                                                                              MOV (SP)+, R2
    003111
                                                                                                                             MOV (SP)+,R1
46 003113
              104267
                                                                                                                             MOV (SP)+, RO
              000000
                                                       RETURN
```

```
.SBTTL GET BYTE COUNT
                                          ::+
                                                    ROUTINE NAME:
                                                                       GETBCN
                                                    DESCRIPTION:
                                                    DATA IS READ BY THE DM PROGRAM AFTER THE DIAGNOSE COMMAND.
                                                    WITHIN THIS DATA, THE DRIVE SPECIFIES IF MORE DATA NEEDS TO BE READ. IF IT IS, THE BYTE COUNT MUST BE CONVERTED FROM
                                                    ITS PRESENT FORM WHICH FOLLOWS THIS FORMAT:
10
                                                                                                       BIT 0
                                                    BIT 15
::80.TUO:
                                                              ASCII COUNT
                                                                                      BINARY COUNT
                                                    THE TOTAL BYTE COUNT IS FOUND BY THIS FORMULA:
                                                                       TBC = AC + (4*BC)
                                                    OR THE TOTAL BYTE COUNT EQUALS THE ASCII COUNT PLUS FOUR
                                                    TIMES THE BINARY COUNT. THE BINARY COUNT IS THE NUMBER OF
                                                    32 BIT BINARY VALUES INCLUDED IN THE REPORT. THE ASCII
                                                    COUNT IS THE NUMBER OF ASCII CHARACTERS INCLUDED IN THE
                                                    REPORT.
                                                    INPUT: OUT.08 = ASCII COUNT AND BINARY COUNT IN THE FORM STATED ABOVE
                                                    OUTPUT: RDM+3 HAS UPDATED BYTE COUNT.
                                          GETBCN: PUSH
   003114
                                                              <RO,R1,R2,R3,R4,R5>
                                                                                                                        MOV RO, - (SP)
   003114
             100467
    003115
                                                                                                                        MOV R1,-(SP)
             100461
                                                                                                                        MOV R2,-(SP)
    003116
             100462
    003117
             100463
                                                                                                                        MOV R3,-(SP)
    003120
             100464
                                                                                                                        MOV R4,-(SP)
   003121
003122
003123
003124
003126
003130
             100465
                                                                                                                        MOV R5, -(SP)
30 003122
31 003123
32 003124
33 003126
34 003130
35 003131
36 003132
37 003134
38 003135
39 003137
40 003140
             114007
                                                    CLR
             110207
104307
103207
                                                              RO
                                                                                           :CLEAR CARRY
                                                    ROL
                                                              OUT.08,R0
                                                                                           GET BYTE COUNT
                       001016
                                                    MOV
                       177400
                                                                                           :RO = BINARY COUNT = # 32 BIT WORDS
                                                              #HIBYTE,RO
                                                    BIC
             110207
                                                    ROL
                                                              R0
             110207
                                                    ROL
                                                              KO
                                                                                           ;RO = BINARY COUNT IN BYTES
             104301
                       001016
                                                              OUT.08,R1
                                                                                           :R1 = BYTE COUNT
                                                    MOV
             110701
                                                                                           :ASCII COUNT IN LO BYTE
                                                    SWAB
                                                              R1
                                                              #HIBYTE,R1
                                                                                           :R1 = ASCII COUNT
             103201
                       177400
                                                    BIC
             104012
                                                                                           :SAVE IN R2 = ASCII COUNT
                                                              R1.R2
                                                    MOV
             105017
                                                                                           :RO = TOTAL BYTE COUNT
                                                              R1, R0
                                                    ADD
                                           : *** IS SIZE OF THE PACKET TOO BIG FOR BUFFER AVAILABLE?
                                                                                           :42. IS THE MAXIMUM # OF BYTES LEFT
   003141
             104201
                       000052
                                                    MOV
                                                              #42.,R1
   003143
             106017
                                                                                           : IS TOTAL BYTE COUNT > 42.?
                                                              R1, R0
   003144
             033226
                                                                                           : IF NOT, GO STORE TOTAL BYTE COUNT
                                                    BPL
                                                              1$
                                           ; *** SAVE OUT.RQ DATA
             104204
104205
104241
100251
106204
46 003145
47 003147
                       001007
                                                              #OUT.01,R4
                                                                                           :R4-> OUT.RQ DATA
                                                    MOV
                                                              #ST+140,R5
                                                                                           :R5->SAVE AREA
                       004355
                                                    MOV
48 003151
49 003152
50 003153
                                                              (R4)+R1
R1, (R5)+
                                                                                           : SAVE
                                          45:
                                                    MOV
                                                    MOV
                       001043
                                                    CMP
                                                              #OUT.29,R4
                                                                                           : DONE?
51 003155
             053151
                                                                                           : IF NOT, CONTINUE
                                                    BNE
```

52 53 003156				:	MSSGE	MS30	
003156	104200	001406	001010		MSSGE	P1330	MOV #MS30,OUT.02 MOV RO,-(SP)
003162 003163 003165	100461 104207 020751	000015					MOV R1,-(SP) MOV #MESSAG,RO
003166 003167	104261						MOV (SP)+,R1 MOV (SP)+,R0
54 55 003170 56 003172	104204 104205	001007 004355		; ***	RESTORE MOV MOV	OUT.RQ DATA #OUT.01,R4	;R4-> OUT.RQ DATA
57 003174 58 003175	104251 100241			5\$:	MOV	#ST+140,R5 (R5)+,R1 R1,(R4)+	;R5->SAVE AREA ;RESTORE
59 003176 60 003200 61	106204 053174	001043			BNE	#OUT.29,R4 5\$; DONE? ; IF NOT, CONTINUE
62 003201 63 003202	104073 104207	000052			MOV MOV	RO.R3 #42RO	; SAVE ASCII COUNT + 4*BINARY COUNT IN R3 ; ELSE, MAXIMUM BYTE COUNT IS STORED.
64 65 003204 66 003205	107023 106073			; ***	ADJUST / SUB CMP	ASCII COUNT IF TOO LARGE R2,R3 R0,R3	;R3 = BINARY COUNT ;IF BINARY COUNT ALONE > 42.?
66 003205 67 003206 68	073215			; ***	BMI	OUNT_IS > 42. TO GET HERE	: IF SO, TO CLEAR ASCII COUNT AND ADJUST BINARY COUNT
69 003207 70 003210 71 003211	105032 107072 110702				ADD SUB SWAB	R3,R2 R0,R2 R2	;R2 = TOTAL BYTE COUNT ;R2 = ASCII COUNT ADJUSTMENT
72 003212 73 003214	107020 003226	001016			SUB BR	R2.0UT.08	;PUT ASCII COUNT ADJUSTMENT IN UPPER BYTE ;SUBTRACT FROM OUT.08 FOR HOST ;EXIT
74 75 003215 76 003220	103200 107073	177400	001016	25:	BIC SUB	BINARY COUNT IF TOO LARGE #HIBYTE,OUT.08 RO,R3	CLEAR OUT ASCII COUNT ;CLEAR HI BYTE OF OUT.08 ;R3 = BINARY COUNT ALONE
77 003221 78 003223	117400 107203	001016 000004		3\$:	DEC	OUT.08 #4,R3	ADJUST BINARY COUNT
79 003225 80 81 003226	033221			; *** 1\$:	STORE IN	3\$ N READ MEMORY PACKET AND	EXIT
82 003226 83 003230	104070	004171		10.	MOV POP	RO,RDM+3 <r5,r4,r3,r2,r1,r0></r5,r4,r3,r2,r1,r0>	STORE IN READ MEMORY PACKET
003230 003231 003232	104265 104264 104263						MOV (SP)+,R5 MOV (SP)+,R4
003233 003234	104262 104261						MOV (SP)+,R3 MOV (SP)+,R2 MOV (SP)+,R1
84 003236	104267 000000				RETURN	N	MOV (SP)+,RO

1					.SBTTL	TYPE WHAT KIND OF RECE	IVE ERROR		142
3				***	TYPE ER	ROR			
5 6 7						TION: UTINE PRINTS A REPORT T XFC DID NOT SUCCESSFUL		OF ERROR OCCURED IF A	
8 10 11 12 13 14					INPUT:	IF = 4 FRAMING IF = 10 CHECKS	THE XFC SAVED IN RD WAS NOT A START GERROR ON SDI LEV SUM ERROR ON SDI L R SIZE WAS SMALLER	FRAME EL O READ EVEL O READ	LEFT ONCE
16 003237 17 003240	110603 114001			TYPERR:	ROR CLR	R3 R1	;READJUST R3		
18 003241 19 003242 20 003243 21 003244 22 003245	110201 104031 110601 043260				ROL MOV ROR BCC MSSGE	R1 R3,R1 R1 1\$ MS60	CLEAR CARRY STORE IN R1 ERROR? IF NOT, CONTIN	UE	
003245 003250	104200	002677	001010		MOSUE	MSOV	;TIMEOUT MOV	#MS60,0UT.02 MOV RO,-(SP)	
003251 003252 003254 003255	100461 104207 020751 104261	000015					MOV	MOV R1,-(SP) #MESSAG,R0 HOSTRQ MOV (SP)+,R1	
003256 23 003257 24 003260 25 003261 26 003262	104267 003360 110601 043275			15:	BR ROR BCC	6\$ R1 2\$:EXIT :ERROR? :IF NOT, CONTIN	MOV (SP)+,RO	
003262 003265	104200	002725	001010		MSSGE	MS61	; IST WORD WAS N	OT A START FRAME #MS61,OUT.02 MOV RO,-(SP)	
003266 003267 003271 003272	100461 104207 020751 104261	000015					MOV	#MESSAG,RO HOSTRO MOV (SP)+,R1	
003273 27 003274 28 003275 29 003276 30 003277 003302 003303 003304 003306 003307 003310	104267 003360 110601 043312			2\$:	BR ROR BCC MSSGE	6\$ R1 3\$ MS62	:EXIT :ERROR? :IF NOT, CONTIN	MOV (SP)+,RO UE ON SDI LEVEL O READ	
003277 003302	104200	002755	001010				MOV	MMS62,0UT.02 MOV RO,-(SP)	
003304 003306 003307 003310	100461 104207 020751 104261 104267	000015					MOV	MOV R1,-(SP) MMESSAG,R0 HOSTRQ MOV (SP)+,R1 MOV (SP)+,R0	
31 003311 32 003312 33 003313 34 003314	003360 110601 043327			38:	BR ROR BCC MSSGE	6\$ R1 4\$ MS63	;EXIT ;ERROR? ;IF NOT, CONTIN		
003314 003317	104200 100467	003016	001010		- Augus		MOV	MMS63, OUT. 02 MOV RO (SP)	

003320 003321 003323 003324	100461 104207 020751 104261	000015					
003325 35 003326 36 003327	104267 003360 110601			4\$:	BR ROR	6 \$ R1	;EXI ;ERR
37 003330	043344				BCC	5\$ MC(/	: IF
38 003331 003331 003334 003335	104200 100467 100461	003057	001010		MSSGE	MS64	;BUF
003336 003340 003341 003342 39 003343	104207 020751 104261 104267 003360	000015			BR	6\$;EXI
40 003344				5\$:	MSSGE	MS65,R3	:ERR
003344 003347	104200 104030	003114	001010				
003351	100467	001011					
003352 003353 003355	100461 104207 020751	000015					
003356	104261						
41 003360	104267			6\$:	RETURN		

MOV R1,-(SP) MOV #MESSAG, RO HOSTRO CALL MOV (SP)+,R1 MOV (SP)+,R0 ROR?
NOT, CONTINUE
FFER SIZE SMALLER THAN RESPONSE MOV #MS64,0UT.02 MOV RO,-(SP) MOV R1,-(SP) #MESSAG, RO MOV HOSTRO CALL MOV (SP)+,R1 MOV (SP)+,R0 RROR WASN'T PROPERLY SPECIFIED
MOV #MS65,OUT.02
MOV R3,OUT.03 MOV RO,-(SP) MOV R1,-(SP) #MESSAG,RO HOSTRO MOV CALL MOV (SP)+,R1 MOV (SP)+,R0

0000000000

000000000000

2 003361	GETU:	.SBTTL GET UNITS FROM	HOST
5		GETU WILL GET THE UNITS	TO TEST
. 7		POLL ALL PORTS AND FILL	IN A UDA PORT INFORMATION TABLE (UNITS)
9 003361 104205 10 003363 104204 11 003365 003365 100464 12 003366 104052 13 003367 020720	000001 003676 1\$:	MOV #1,R5 MOV #UNITS,R4 PUSH R4 MOV R5,R2	; MOVE INITIAL MASK TO R5 : R4 POINTS TO UNIT TABLE ; SAVE R4 : MOVE MASK TO R2
14 003370 102201 15 003372 053463	010000	CALL RDSTAT BIT #10000,R1 BNE 6\$	GET STATUS SEE IF ERROR OCCURRED (NO DRIVE ATTACHED) IF NO DRIVE, BRANCH
16 003373 060011 17 003374 104207 18 003376 020720 19 003377 102201	005000 010000	MOV #5000,RO CALL RDSTAT BIT #10000,R1	; IF NO DRIVE, BRANCH ; INITILIZE THE DRIVE ; MOVE TIMEOUT TO RO ; GET STATUS ; SEE IF STATUS IS VALID
20 003401 053405 21 003402 102201 22 003404 053410 23 003405 117407 24 003406 053376	000001	BNE 3\$ BIT #RCVRDY,R1 BNE 5\$ DEC RO BNE 14\$; IF NOT, BRANCH ; SEE IF RECEIVER READY ASSERTED ; IF SO, BRANCH ; DECREMENT COUNT ; IF INCOMPLETE, BRANCH
25 003407 003463 26 003410 104203 27 003412 104237 28 003413 104231 29 003414 060004 30 003415 115001 31 003416 053463 32 003417	003730 5\$:	BR 6\$ MOV #CR.GST,R3 MOV (R3)+,R0 MOV (R3)+,R1 XFC SEND TST R1 BNE 6\$ PUSH R4	RO VALID STATE RESTRICTION RES
003417 100464 33 003420 104204 34 003422 104137 35 003423 104631 36 003425 060005	000012 11\$:	MOV #10.,R4 MOV (R3),R0 MOV 1(R3),R1 XFC RCV TST R1 BEQ 13\$	MOV R4,-(SP) SET UP SHORT TIMEOUT SET DATA BUFFER ADDRESS SET BUFFER LENGTH SEND RECEIVE SDI COMMAND DID ERROR OCCUR IF NOT, BRANCH
38 003427 013437 39 003430 106201 40 003432 053435 41 003433 117404 42 003434 053422 43 003435 003463 44 003436 003463 45 003437	000001	CMP #1,R1 BNE 12\$ DEC R4 BNE 11\$ POP R4	SEE IF TIMEOUT IF NOT, BRANCH DECREMENT TIMEOUT VALUE IF NOT TIMEOUT, BRANCH RESTORE R4
003435 104264 44 003436 003463 45 003437	13\$:	BR 6\$ POP R4	BRANCH TO EXIT RESTORE R4
003437 104264 46 003440 104307 47 003442 104072 48 003443 103207 49 003445 101207 50 003447 110702 51 003450 110602 52 003451 110602 53 003452 110602	004215 170000 040000	MOV ST,RO MOV RO,R2 BIC #^CHBHINB,RO BIS #40000,RO SWAB R2 ROR R2 ROR R2 ROR R2 ROR R2	MOV (SP)+,R4 RO HAS UNIT NUMBER COPY RO TO R2 RO HAS UNIT NUMBER FLAG UNIT AS NOT TESTED SWAP R2'S BYTES MOVE SUBUNIT MASK TO LO NIBBLE MOVE SUBUNIT MASK TO LO NIBBLE MOVE SUBUNIT MASK TO LO NIBBLE

THURRER

-

GGGGG

THE

-

4

+++

444

.

54 003453 55 003454 56 003456 57 003457 58 003460 59 003461 60 003462 61 003463	110602 103202 110602 043463 100247 115407 003456	177760	4\$:	ROR BIC ROR BCC MOV INC BR POP	R2 #LBLONB,R2 R2 6\$ R0,(R4)+ R0 4\$ R4	; MOVE SUBUNIT MASK TO LO NIBBLE ; CLEAR ALL BUT SUBUNIT BITS ; MOVE SUBUNIT BIT TO CARRY ; IF NO MORE SUBUNITS, BRANCH ; MOVE SUBUNIT NUMBER TO TABLE ; INCREMENT SUBUNIT NUMBER ; BRANCH ; R4 POINTS TO START OF UNIT JUST HANDLED
003463 62 003464 63 003466 64 003467 65 003471	104264 105204 110205 106205 053365	000004		ADD ROL CMP BNE	#4.R4 R5 #20.R5 1\$; R4 WILL POINT TO NEXT UNIT (CLEAR (ARRY FOR ROL); R5 HAS NEXT UNIT PORT MASK; SEE IF ALL PORTS TESTED; IF NOT, BRANCH


1 2 3				NOW GET	THE PLUG NUMBERS	S	TO TEST AND FIND THEM IN THE TABLE
4 003472	104207	000012		MOV	#UTOTST,RO		GET WHAT SUBUNIT NUMBERS TO TEST REQUEST
5 003474	020751			CALL	HOSTRO		GET THE PLUG NUMBERS
6 003475	104207	001045		MOV	#IN.01,R0		RO POINTS TO UNIT NUMBERS TO TEST
7 003477	104201	003676	7\$:	MOV	#UNITS,R1		R1 POINTS TO UDA PORT INFORMATION
8 003501	104112		8\$:	MOV	(R1),R2	:	R2 HAS UNIT
9 003502	073511			BMI	9\$:	IF NONE, BRANCH
10 003503	103202	170000		BIC	#^CHBHINB,R2	:	CLEAR THE 'NOT TESTED BIT' FOR COMPARISON
11 003505	106172			CMP	(RO),R2	;	SEE IF IT IS A UNIT TO TEST
12 003506	053511			BNE	9\$:	NO MATCH
13 003507	100112			MOV	R2.(R1)	:	SAVE UNIT AS ONE TO TEST
14 003510	003516			BR	10\$		LOOK FOR THE NEXT ONE
15 003511	115401		9\$:	INC	R1		LOOK AT NEXT UNIT
16 003512	106201	003716		CMP	#UNITS+16.,R1	:	SEF IF ENTIRE TABLE SEARCHED
17 003514	053501			BNE	8\$:	IF NOT, BRANCH
18 003515	060000			XFC	BREAK	:	ERROR ******
19 003516	115407		10\$:	INC	RO	;	POINT TO NEXT UNIT TO TEST
20 003517	104172			MOV	(RO),R2		CHECK NEXT UNIT
21 003520	033477			BPL	7\$		FIND IN UDA PORT INFORMATION
22 003521	000000			RETURN		:	RETURN TO CALLING PROGRAM

THEFERENCE

THE PERSON AND THE PERSON

1 23 4 5				.SBTTL GET STA OUTPUT	R3 = 0 IF OK		
6 7 8 003522 9 003524 10 003525	104203 021102 115003	003730	GTSTAT:	CALL	R3 = 1 IF ERROR #CR.GST,R3 TALKER R3	:POINT TO GET STATUS COMMAND : SEND AND RECEIVE COMMAND : SEE IF ERROR OCCURED	
11 003526 12 003527 13 003530 14 003531 003531	013541 110203 043535 021236			BEQ ROL BCC ERRHRD	12\$ R3 11\$ MS7	: IF NOT, BRANCH : SEE IF RECEIVE ERROR : IF SO, BRANCH	:ERROR # 26.
003532 003533 15 003534 16 003535 003535	001032 000316 003557 021236		11\$:	BR ERRHPD	ER.END MS8	.WORD MS7	2000>+<2*400>+ERRN ;ERROR # 27.
003536 003537 17 003540 18 19 003541	001033 000350 003557 106207	000366	12\$:	BR OOK AT R CMP	ER.END ESPONSE OP-CODE FROM DRI #STSRES.RO	.WORD <prms *2<br="">.WORD MS8 VE SHOULD BE DATA RESPONSE ;CHECK OP-CODE</prms>	?000>+<2*400>+ERRN
20 003543 21 003544 003544 003545 003547	013562 100467 104010 104201	001316		BEQ ERRHRD	OK.END	; BRANCH IF A MATCH ; WRONG RESPONSE FROM DRIVE MOV RO,-(SP) MOV R1, SAVREG	
003551 003552 003554 003555	100461 104301 021236 005034	000366					
003556 22 003557 23 003561 24 003562 25 003563	000405 104203 003563 114003 000000	000001	ER.END: OK.END: EX.END:	BR CLR	#1.R3 EX.END R3	:R3 = NONE ZERO VALUE WHEN DONE :EXIT :R3 = 0 WHEN DONE (NO ERROR)	(ERROR)

```
.SBTTL CLEAR DRIVE SUBROUTINE
                                                           DRIVE CLEAR
                                                           OUTPUT R3 = 0 IF OK
R3 = 1 IF ERROR
                                                                                                   : POINT TO DRIVE CLEAR COMMAND
 8 003564 104203 003736
9 003566 104301 004216
                                                CLRDRV: MOV
                                                                      #CR.DRC.R3
                                                                                              ; POINT TO DRIVE CLEAR COMMAND
; GET ERROR BYTE
; CLEAR UNUSED BITS
; MOVE TO DRIVE CLEAR COMMAND
; SEND AND RECEIVE COMMAND
; SEE IF ERROR OCCURED
; IF NOT, BRANCH
; SEE IF RECEIVE ERROR
                         004216
                                                                      ST+1.R1
                                                           MOV
             103201
104010
021102
115003
10 003570
                                                                      #HIBYTE,R1
                                                           BIC
11 003572
12 003574
13 003575
                                                                      R1.DRCBYT
                         003744
                                                           MOV
                                                                      TALKER
                                                           CALL
                                                                     R3
12$
R3
                                                           TST
14 003576
15 003577
              013611
                                                           BEQ
                                                           ROL
              110203
16 003600 043605
                                                                      11$
                                                                                                        : IF SO, BRANCH
                                                           BCC
17 003601
                                                           ERRHRD MS10
    003601 021236
003602 001035
                                                                                                                                 CALL RERROR : ERROR # 29.
                                                                                                                                .WORD <PRMS *2000>+<2 *400>+ERRN
003603 000475
18 003604 003557
                                                                                                                                 . WORD MS10
                                                                      ER. END
                                                115:
                                                           ERRHRD MS11
19 003605
    003605 021236
003606 001036
                                                                                                                                 CALL RERROR : ERROR # 30.
                                                                                                                                .WORD <PRMS *2000>+<2 *400>+ERRN
    003607 000527
                                                                                                                                .WORD MS11
20 003610 003557
21
22 003611 106207
23 003613 013562
24 003614
                                                                      ER. END
                                                : *** CHECK RESPONSE CODE
                                                                      #COMPLT,RO
OK.END
                                                128:
                                                                                            : SEE IF CORRECT RESPONSE CODE RECEIVED
: IF SUCCESSFUL, BRANCH
: CLEAR ERROR FAILED
                          000176
                                                           CMP
                                                           BEQ
                                                           ERRHRD MS12,#COMPLT.RO
              100467
104010 001316
104201 000176
                                                                                                                                MOV RO,-(SP)
MOV R1, SAVREG
    003614
    003615
    003617
                                                                                                                                 MOV #COMPLT,R1
    003621 100461
                                                                                                                                 MOV R1,-(SP)
    003622 104301
                          001316
                                                                                                                                 MOV SAVREG.R1
    003624 021236
003625 005037
003626 000564
                                                                                                                                 CALL RERROR : ERROR # 31.
                                                                                                                                 .WORD <PRMS *2000>+<2 *400>+ERRN
               000564
                                                                                                                                 .WORD MS12
25 003627
                                                                      ER. END
```

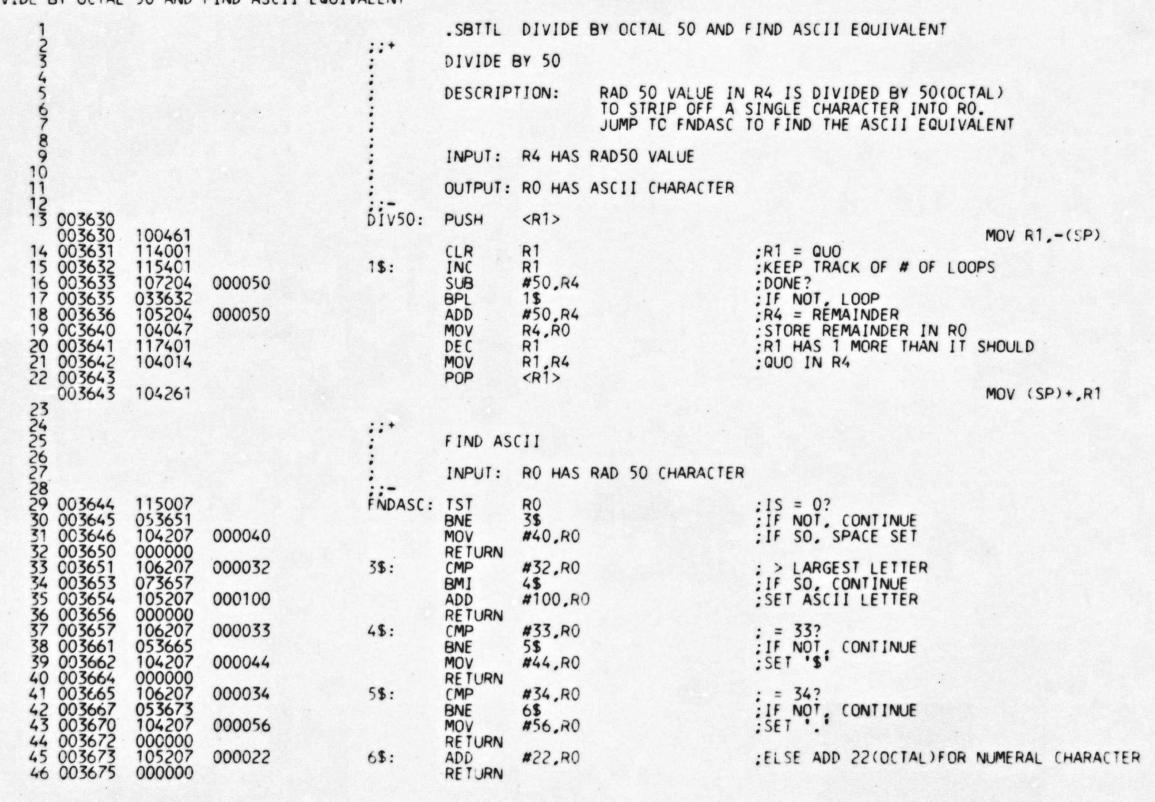

1					:PROGRA	M VARIA	BLES		
3					:UNIT N	JMBER S	TORAGE FOR DISK	DRIVES TO	TEST
5	003676	177777	000000	000000	UNITS:	.WORD	-1.0.0.0		; LOGICAL UNIT NUMBER IF POSITIVE
6	003702	177777	000000	000000		.WORD	-1.0.0.0		:DISK DRIVE NOT TO BE TESTED IF NEGATIVE
7	003706	000000	000000	000000		.WORD	-1.0.0.0		
8	003712	000000 177777 000000	000000	000000		.WORD	-1,0,0,0		
10 11 12	003716	000000			UNITNB:	.WORD	0		; NUMBER OF UNIT CURRENTLY UNDER TEST ; POINTER INTO TABLE ABOVE
13	003717	000000			SDI:	.WORD	0		SDI INTERCONNECT CODE FOR XFC CALLS
	003720	000000			SAVSTA: SAVRID:		0		:SAVE STATUS :SAVE REGION ID
19 20 21 22 23	003724 003725 003726 003727	377 000 252 360 017 000000	350 350 350 350 350		ECHOD:	.BYTE .BYTE .BYTE .BYTE .BYTE .WORD	377,ECHOC 000,ECHOC 252,ECHOC 360,ECHOC 017,ECHOC		:ECHO DATA TO SEND TO DRIVE :END MARKER
24 25 26					; COMMAND	BUFFE	RS FOR SEND XFC		
26 27 28	003730 003731 003732 003733 003734 003735	003735 000001 004215 000007 000000 000	011		CR.GST:	MSG .WORD .WORD .WORD .WORD .WORD .BYIE	1 ST	:SIZE OF	GET STATUS SDI INFORMATION ADDRESS OF COMMAND COMMAND IN BYTES ADDRESS OF REPLY REPLY IN WORDS SFUL COMPLETION CODE
29 30 31 32 33	003736 003736 003737 003740 003741 003742 003743	003743 000002 004215 000007 000000 000 177777	005		CR.DRC: DRC: DRCBYT:		DRC.2.ST.7 DRC 2 ST	SIZE OF	; DRIVE CLEAR SDI INFORMATION ; ADDRESS OF COMMAND COMMAND IN BYTES ; ADDRESS OF REPLY REPLY IN WORDS SSFUL COMPLETION CODE
34 35 36 37	003745 003745 003746 003747 003750 003751 003752 003753	003752 000007 004215 000007 000000 000 000000 000000	017 000000 000000	000000	CR.WRM: WRM: BUF1:	MSG .WORD .WORD .WORD .WORD .BYTE .WORD .WORD .BLKW	7 ST	:SIZE OF	: MEMORY WRITE COMMAND INFO :ADDRESS OF COMMAND COMMAND IN BYTES :ADDRESS OF REPLY E REPLY IN WORDS SSFUL COMPLETION CODE

C C

```
CR.RDM: MSG RDM,6,ST,STSIZE ; MEMORY READ COMMAND INFO ;ADDRESS OF COMMAND ;ADDRESS OF COMMAND IN BYTES ;ADDRESS OF REPLY ;ADDRESS OF REPLY ;SIZE OF REPLY IN WORDS ;SIZE OF REPLY IN WORDS ;SUCCESSFUL COMPLETION CODE RDM: BYTE O.RDM.OP
40 004161
    004161
               000006
004215
000200
    004162
    004164
    004165
               000000
41 004166
                    000
42 004167
                                                                        0.0.0.0
               000000
                           000000 000000
                                                             . WORD
    004172
               000000
43 004173
               000000
                           000000 000000
                                                             . WORD
                                                                        0.0.0.0
    004176 000000
                                                CR.GCR: MSG GCR.1,ST.12.

.WORD GCR

.WORD 1

.WORD 1

.WORD ST

.WORD 12.

.WORD 12.

.WORD

GCR: .BYTE 0,GETCHR

; GET CHARACTERISTICS

; ADDRESS OF COMMAND

; SIZE OF COMMAND IN BYTES
; ADDRESS OF REPLY
; SIZE OF REPLY IN WORD
; SUCCESSFUL COMPLETION CODE
; GET CHARACTERISTICS
   004177
    004177
              004204
    004200
               000001
    004201
               004215
    004202
              000014
                                                                                                          SIZE OF REPLY IN WORDS
    004203 000000
46 004204
                               207
                000
47
48 004205
                                                 LONG:
                                                                                                          : ALL LONG TIMEOUT COMMANDS FOLLOW
                                                                                              : DIAGNOSE COMMAND INFORMATION
:ADDRESS OF COMMAND
:SIZE OF COMMAND IN BYTES
50 004205
004205 004212
                                                 CR.DIA: MSG DIA,3,ST,7
                                                            .WORD DIA
.WORD 3
    004206
               000003
                                                                                              :SIZE OF REPLY IN WORDS
    004207
                                                             . WORD ST
               004215
    004210
                                                             .WORD 7
               000007
    004211
                                                                                               : SUCCESSFUL COMPLETION CODE
               000000
                                                             . WORD
51 004212
52 004213
                                                             .BYTE
                                                                        O.DIA.OP
                    000
                               003
                                                 DIA:
52 004213
53 004214
                                                                        O'
               000000
                                                             . WORD
                                                             . WORD
                                                                        0
               000000
55
55
56
57 004215
                                                  ; DRIVE RESPONSE BUFFERS
                                                                        200
               000200
                                                 STSIZE =
                                                             .BLKW
                                                 ST:
58
60
                                                            TEST 2 SPECIFIC MEMORY LOCATIONS
61
62
    004415 000000
                                                 S.ERR: .WORD
                                                                                                          ; = 0, HARD ERROR
                                                                                                          : NOT = 0. SOFT ERROR
: = 0. 1ST DIAGNOSE COMMAND
64
                                                 DIAG.1: . WORD
    004416 000000
                                                                                                          : NOT = 0. DRIVE TESTED BEFORE
66 004417
               000000
                                                 NAM. 1:
                                                             . WORD
                                                                        0
                                                                                                          :HOLD PROGRAM NAME
                                                 NAM.2:
NAM.3:
67 004420
               000000
                                                             . WORD
                                                                        0
67 004420
68 004421
69 004422
70
71
72
73
74
75
76
77
               000000
                                                            . WORD
                                                                        0
               000000
                                                             . WORD
                                                            TEST 2 SPECIFIC OP CODES AND END CODES
               000017
                                                  WRM. OP =
                                                                                                          ; WRITE MEMORY COMMAND
                                                                                                         : READ MEMORY COMMAND
                                                                        215
                                                 RDM.OP =
               000215
                                                                                                         : DIAGNOSE COMMAND
                                                 DIA.OP =
               000003
                                                                        207
162
374
                                                                                                          ; GET COMMON CHARACTERISTICS COMMAND ; READ MEMORY RESPONSE
               000207
                                                 GETCHR =
                000162
                                                 RDM.EN =
                000374
                                                                                                          : DIAGNOSE RESPONSE
                                                 DIA.FN =
```

79	000170	GCC.EN	=	170
81			DIAGN	NOSE ET AND DA
80 81 82 83 84 85 86 87 88 89	100000 040000	ERRTYP DATAVL	= .	100000
86			REGIO	ON ID'S
88	177774 177775	FFFC	=	FFFD - 1 177775
90	177776	FFFE	=	FFFD + 1

: GET COMMON CHARACTERISTICS

:ERROR TYPE ET :DATA AVAILABLE

1					:MESSAGE	STORAGE OVERLAY
34	004423 004423 004423	150426			FREE:	DMOVLY MS.O .WREDC .NLIST BEX :OUTPUT EDC FOR THIS OVERLAY
67 80	000000 000027 000047	042 042	103 103	101 110	MS1:	.ASCII\''CANNOT RECEIVE VALID DRIVE STATE FROM DRIVE'N\ .ASCII\''CHECK IF DRIVE IS POWERED ON.'N\ .BYTE 0
10	000050	000 042	104	122	MS2:	.ASCII\'DRIVE STATE RECEIVED HAS BAD PARITY'N\
12		000 042	104	122	MS3:	.ASCII' DRIVE IS NOT ASSERTING RECEIVER READY IN DRIVE STATE N
15	000130 000156	000 042 042	124 040	111 040	MS4:	.ASCII\" ECHO DATA "H8N\
16 17 18	000170	000 042 042	124 040	111 040	MS5:	.ASCII\"TIME-OUT ON RECEIVE OF ECHO RESPONSE FROM DRIVE'N\ .ASCII\" ECHO DATA "H8N\
19 20 21 22	000233 000261 000277	000 042 042 042	105 040 040	103 040 .040	MS6:	.ASCII\'ECHO COMMAND RESPONDED WITH DIFFERENT DATA'N\ .ASCII\' ECHO DATA SENT 'H16N\ .ASCII\' ECHO DATA RECEIVED 'H16N\
23	000315	000	124	111	MS7:	.ASCII\"TIME-OUT ON SEND OF GET STATUS COMMAND TO DRIVE'N\
	000347	000 042	124	111	MS8:	.ASCII\'TIME-OUT ON RECEIVE OF GET STATUS RESPONSE FROM DRIVE'N\
29 30	000405 000442 000457	000 042 042 042	107 040 040	105 040 040	MS9:	.ASCII\' GET STATUS COMMAND DID NOT RETURN EXPECTED RESPONSE CODE'N\ .ASCII\' EXPECTED RESPONSE 'H8N\ .ASCII\' ACTUAL RESPONSE 'H8N\
31 32		000 042	124	111	MS10:	.BYTE 0 .ASCII\"TIME-OUT ON SEND OF DRIVE CLEAR COMMAND TO DRIVE"N\
33 34	000527	000 042	124	111	MS11:	.ASCII\'TIME-OUT OF RECEIVE OF DRIVE CLEAR RESPONSE FROM DRIVE'N\
37 38	000564 000622 000637	000 042 042 042	104 040 040	122 040 040	MS12:	.ASCII\'DRIVE CLEAR COMMAND DID NOT RETURN EXPECTED RESPONSE CODE'N\ .ASCII\' EXPECTED RESPONSE 'H8N\ .ASCII\' ACTUAL RESPONE 'H8N\
40 41 42 43	000654 000655 000715 000734 000737	000 042 042 123 123	105 040 062 062	122 040 063 063	MS16:	.BYTE 0 .ASCII\'ERROR BIT SET IN GET STATUS RESPONSE AFTER DRIVE CLEAR COMMAND'N\ .ASCII\' GET STATUS RESPONSE 'H16N\ .ASCII\S23H16N\ .ASCII\S23H16N\ .BYTE 0
45	000743	000 042	124	111	MS17:	.ASCII\'TIME-OUT ON SEND OF MEMORY WRITE COMMAND TO DRIVE'N\
47	000776	000 042	105	122	MS18:	.BYTE 0 .ASCII\'ERROR DURING RECEIVE OF MEMORY WRITE RESPONSE FROM DRIVE'N\
50 51	001034 001035 001073 001110	000 042 042 042	127 040 040	122 040 040	MS19:	.ASCII\' EXPECTED RESPONSE 'HAN\ .ASCII\' ACTUAL RESPONSE 'HAN\
53 54 55	001124 001125 001163 001211 001225	000 042 042 042 000	111 040 040	116 040 040	MS20:	.ASCII\'INVALID INPUT. HOST PROGRAM DID NOT GIVE PROPER RESPONSE'N\ .ASCII\' EXPECTED VALUE SHOULD BE BETWEEN 0 AND 3'N\ .ASCII\' ACTUAL VALUE WAS '08N\ .BYTE 0

DIVIDE BY OCTAL 5					9:12 PAGE 39-1 SEU 0134
57 001226 58 001264 59 001300 60 001315	042 042 042 000	122 040 040	105 040 040	MS26:	.ASCII\'READ MEMORY COMMAND DID NOT RETURN EXPECTED RESPONSE CODE'N\ .ASCII\' EXPECTED RESPONSE 'H8N\ .ASCII\' ACTUAL RESPONSE 'H8N\ .BYTE 0
61 001316	042	124	111	MS27:	.ASCII\'TIME-OUT ON SEND OF MEMORY READ COMMAND TO DRIVE'N\
62 001347 63 001350	000 042	105	122	MS28:	.ASCII\ ERROR DURING RECEIVE OF MEMORY READ RESPONSE FROM DRIVE'N\
64 001405 65 001406	000 042	106	117	MS30:	.BYTE 0 .ASCII\"FOLLOWING REPORT HAS BEEN TRUNCATED DUE TO SIZE"N\
66 001437 67 001440 68 001474 69 001511	000 042 042 042	104 040 040	111 040 040	MS36:	.BYTE 0 .ASCII\'DIAGNOSE COMMAND DID NOT RETURN EXPECTED RESPONSE CODE'N\ .ASCII\' EXPECTED RESPONSE 'H8N\ .ASCII\' ACTUAL RESPONSE 'H8N\
70 001525 71 001526	000	124	111	MS37:	.BYTE 0 .ASCII\'TIME-OUT ON SEND OF DIAGNOSE COMMAND TO DRIVE'N\
72 001556 73 001557	000 042	105	122	MS38:	.BYTE 0 .ASCII\"ERROR DURING RECEIVE OF DIAGNOSE RESPONSE FROM DRIVE'N\
74 001612 75 001613 76 001654 77 001667 78 001701 79 001713 80 001714	000 042 042 042 042 122 000	125 040 040 040 062	116 040 040 040	MS40:	.BYTE 0 .ASCII\'UNDETERMINABLE RESPONSE FROM THE DRIVE GIVEN DIAGNOSTIC COMMAND 'N\ .ASCII\'' TEST NUMBER 'H16N\ .ASCII\'' DRIVE TYPE 'H8N\ .ASCII\'' ERROR NUMBER 'H16N\ .ASCII\R2\ .BYTE 0
81 001715 82 001752 83 001765 84 001777 85 002011	042 042 042 042 122	111 040 040 040 040 062	116 040 040 040	MS41:	.ASCII\''INFORMATION SENT BACK FROM THE DRIVE IS BEING PRESENTED.'N\ .ASCII\'' TEST NUMBER 'H16N\ .ASCII\'' DRIVE TYPE 'H8N\ .ASCII\'' ERROR NUMBER 'H16N\ .ASCII\R2\
86 002012 87 002013 88 002037 89 002051 90 002063 91 002076	000 042 042 042 042 122	104 040 040 040 062	122 040 040 040	MS42:	BYTE 0 .ASCII\'DRIVE DIAGNOSTIC REPORTS A HARD ERROR'N\ .ASCII\' TEST NUMBER 'H16N\ .ASCII\' DRIVE TYPE 'H8N\ .ASCII\' ERROR NUMBER 'H16N\ .ASCII\R2\
92 002077 93 002100 94 002124 95 002136 96 002150 97 002163	000 042 042 042 042 122	104 040 040 040 062	122 040 040 040	MS43:	.BYTE 0 .ASCII\'DRIVE DIAGNOSTIC REPORTS A SOFT ERROR'N\ .ASCII\' TEST NUMBER 'H16N\ .ASCII\' DRIVE TYPE 'H8N\ .ASCII\' ERROR NUMBER 'H16N\ .ASCII\R2\
98 002164 99 002165	000 042	124	111	MS50:	.BYTE 0 .ASCII\'TIME-OUT ON SEND OF GET UNIT CHARACTERISTICS COMMAND TO DRIVE'N\
100 002225 101 002226	000	124	111	MS51:	.BYTE 0 .ASCIIN'TIME-OUT ON RECEIVE OF GET UNIT CHARACTERISTICS COMMAND FROM DRIVE'N
102 002270 103 002271 104 002335 105 002352 106 002367	000 042 042 042 000	107 040 040	105 040 040	MS52:	.BYTE 0 .ASCII\'GET UNIT CHARACTERISTICS COMMAND DID NOT RETURN EXPECTED RESPONSE CODE'N\ .ASCII\' EXPECTED RESPONSE 'H8N\ .ASCII\' ACTUAL RESPONSE 'H8N\ .BYTE 0
107 002370 108 002370 109 002413 110 002430	116 042 042 000	122 101	105 124	MS53:	.BYTE 0 .ASCII\N\ .ASCII\'READ MEMORY FROM DRIVE UNSUCCESSFUL'N\ .ASCII\'ATTEMPTING DRIVE CLEAR'N\ .BYTE 0
111 002431 112 002431 113 002444	116 042 042	104 101	122 124	MS54:	ASCII \N\ .ASCII \'DRIVE CLEAR FAILED'N\ .ASCII \'ATTEMPTING ATTEMPTING, N\

SCCCC

3333

5

SXX

×

114 002460 115 002461 116 002461 117 002473	116 042 042	107	105 124	MS55:	.BYTE 0 .ASCII\N\ .ASCII\'GET STATUS FAILED'N\ .ASCII\'ATTEMPTING DRIVE CLEAR'N\
118 002510 119 002511 120 002546	042	106	111	MS56:	.BYTE 0 .ASCIIN'FILE 'A6". ??? REQUESTED BY THE DRIVE COULD NOT BE FOUND. 'NN
121 002547 122 002600 123 002612	042 042	110 124	117 105	MS57:	.BYTE 0 .ASCII\'HOST SPECIFIED UNIT #'D16" THAT CAN'T BE FOUND.'N\ .ASCII\'TEST2 BEGAN AGAIN'N\ .BYTE 0
124 002613 125 002613 126 002656	116 042 122	106 064	117	MS58:	.ASCII\N\ .ASCII\'FOLLOWING DATA IS THE STATUS AND EXTENDED STATUS FROM REGION FFFE 'N\ .ASCII\R4\
127 002657 128 002660	000 042	104	111	MS59:	.BYTE 0 .ASCII\'DIAGNOSE OF REGION ID 'H8N\
129 002676 130 002677 131 002724	042	124	111	MS60:	.BYTE 0 .ASCII\'TIMEOUT ERROR OCCURED DURING RECEIVE XFC'N\
132 002725 133 002754	042	061	123	MS61:	.BYTE 0 .ASCII\''IST WORD NOT START FRAME DURING RECEIVE XFC'N\ .BYTE 0
134 002755 135 002755 136 003015	116 042 000	106	122	MS62:	ASCIINN ASCIIN' FRAMING ERROR OCCURED ON SDI LEVEL O READ DURING RECEIVE XFC'NN BYTE 0
137 003016 138 003016 139 003056	116	103	110	MS63:	.ASCII\N\ .ASCII\'CHECKSUM ERROR OCCURED ON SDI LEVEL O READ DURING RECEIVE XFC'N\ .BYTE 0
140 003057 141 003057	116	102	125	MS64:	ASCIINN ASCIIN BUFFER SIZE SMALLER THEN RESPONSE DURING RECEIVE XFC'NN BYTE 0
142 003113 143 003114 144 003114 145 003154	042	103	117	MS65:	.ASCII\N\ .ASCII\'CODE FROM RECEIVE XFC WAS UNINTELLIGIBLE FROM SUBSYSTEM '016N\ .BYTE 0
146 147					
148 003154 003155 149	020415 000001				.WREDC :OUTPUT EDC FOR THIS OVERLAY .END

STRIBUL TABLE				
ARGS\$ = 000003 ATTN = 000002 AVAIL = 000100 BEUSED = 000040 BF.DAT = 000000 BF.ECC = 000401 BF.EDC = 000400 BREAK = 000000 BUFFIG = 040000 BUFFIG = 040000 BUFFIG = 000201 CHRECK = 000110 CHGMOD = 000201 CHRRES = 000170 CLRBUF 000777 CLRDRV 003564 COMPAR = 00006 COMPLT = 000176 CONMEM 003054 CR.DIA 0C4205 CR.DRC 003736 CR.GR 004177 CR.GST 003730 CR.RDM 004161 CR.WRM 003745 CVT = 000020 DATAVL = 040000 DATCMP = 000020 DATAVL = 040000 DATCMP = 000020 DATPRE = 000005 DBNCYL = 000022 DCMPAL = 000011 DCYLS = 020000 DIA 004212 DIAGNS 002110 DIAG.1 0044 16 DIA.EN = 000374 DIA.DP = 000003 DINIT = 000011 DIREC = 010000 DISCON = 000204 DIVSO	DRCLR1 001625 DROP = 100000 DRTYPE= 000007 DRVCLR= 000005 DRVID = 000004 DRVONL= 000213 DRVRUN= 000014 D.LIMT= 000001 D.SCHR= 000002 ECC = 000015 ECCCHK= 010000 ECCFLG= 010000 ECCFLG= 010000 ECCHOD = 000350 ECHOD = 003722 ECHO1 001553 ECHO2 001556 ECHO3 001573 ECHO4 001600 ECHO5 001614 EOC = 100000 ERECOV= 000006 ERHARD= 001000 ERLEV = 000001 ERLEV = 000001 ERLEV = 000001 ERLEV = 000001 ERLEV = 000000 ERLEV = 000000 ERLEV = 000000 ERLEV = 000000 FRIEND 003557 EXIT = 000400 ERRITYP= 1000000 ERSOFT = 001400 ERSOFT = 001400 ERSOFT = 001400 FRIEND 003563 FB.DAT = 000001 FFFC = 177775 FFFE = 177776 FIRSTU = 007723 FNDASC 003644 FORMAT = 000001 FTLDEV = 000400 FT.BUF = 000000 FT.HI = 001000 FT.LOW = 000002 GCC.EN = 000170 GCR 004204 GETBCN 003735 GETSTA = 000011	GETSUB= 000210 GETU 003361 GRPCYL= 000002 GRPOFF= 000011 GSTSTS 001631 GSTSS 001631 GSTSS 001635 GSTS7 001662 GTSTAT 003522 HBHINB= 007777 HBLONB= 170377 HDRPRE= 000005 HD.BAD= 110000 HD.BAD= 110000 HD.BAD= 140000 HD.BAD= 100000 HD.REV= 050000 HD.REV= 050000 HD.REV= 030000 HD.REV= 030000 HD.REV= 000002 HIBYTE= 177400 HICYL = 000001 HIDBN = 000002 HIBYTE= 177400 HILBN = 000002 HIRBN = 000003 HILBN = 000003 HI	IN. 24	MS59 002660 MS6 000233 MS60 002677 MS61 002725 MS62 002755 MS63 003016 MS64 003057 MS65 003114 MS7 000316 MS8 000350 MS9 000405 MWR = 000017 MWRITE 001170 NAM.1 004417 NAM.2 004420 NAM.3 004421 NEWSUB= 004000 NUMPTR= 000004 OK.END 003562 ONLYCL= 000200 OUT.RQ 001006 OUT.O1 001007 OUT.02 001011 OUT.04 001012 OUT.05 001013 OUT.06 001014 OUT.07 001015 OUT.08 001016 OUT.09 001017 OUT.10 001020 OUT.11 001021 OUT.12 001022 OUT.13 001023 OUT.14 001024 OUT.15 001025 OUT.16 001026 OUT.17 001027 OUT.18 001033 OUT.14 001024 OUT.15 001025 OUT.16 001026 OUT.17 001027 OUT.18 001033 OUT.19 001031 OUT.20 001033 OUT.19 001031 OUT.21 001033 OUT.22 001034 OUT.25 001037 OUT.26 001040 OUT.27 001041 OUT.28 001042 OUT.29 001043 OVERFL= 000000 OVL.MN= 003510 G OVL.MS= 0006666 OVSTRT= 007774

SYMBOL TABLE				
OVS.MN= 001040 G OVS.MS= 010260 G OV = 007306 PORTO 001445 PORT3 001505 PRMS = 000002 RBNBN = 000200 RBNBN = 000200 RBNTRK= 000001 RCTCPS= 000001 RCTCPS= 000001 RCTCSZ= 000014 RCV = 000005 RCVERR= 000004 RCVRDY= 000001 RDM 004166 RDMEM 002737 RDM.EN= 000162 RDM.OP= 000215 RDSTAT 000720 READ 002054 REDWRT= 000100 REGS\$ = 177777 REGU\$ = 000001 RERRCA 001301 RERRCA 001301 RERRCA 001275 RESEEK= 020000 RETRY = 000001 RERRCA 001275 RESEEK= 020000 RETRY = 000001 REVECT= 000004 REVECT= 000004 REVECT= 000004 REVECT= 000004 REVECT= 000000 REFAL = 013400 RSTOP = 100000 RWRDY = 100000 RWRDY = 100000	RW.ANG= 000006 RW.BUF= 000001 RW.CMD= 000004 RW.HI = 000003 RW.LOW= 000002 RW.SDI= 000005 RW.STA= 000000 SAVREG 001316 SAVRID 003721 SAVSTA 003720 SBCRES= 000167 SCIWRD= 000377 SDI 003717 SDILTO 001151 SDISTO 001150 SDIVER= 000000 SEKINP= 002000 SEKINP= 002000 SEKINP= 000000 SHRTTO= 000000 SHRTTO= 000000 SNDAGN 000756 SPADJU 001312 SS = 000001 ST 004215 STACK 001357 START 001360 STATEX 000746 STATLP 000724 STATUS= 000007 STSIZE= 000200 STSRES= 000366 ST.C = 000002 ST.DB = 001000 ST.DF = 000020 ST.DB = 001000 ST.DF = 000020 ST.DIA 001742 ST.ERR= 000002 ST.FE = 0000002	ST.FO = 002000 ST.MOD= 000001 ST.MSK= 000000 ST.OA = 000200 ST.PE = 000002 ST.PS = 000002 ST.RE = 000100 ST.RY= 000003 ST.RY= 000001 ST.STA= 000001 ST.STA= 000000 ST.WE = 000010 ST.WE = 000010 SUB = 000013 S.BADP= 000011 S.BESS= 000011 S.BESS= 000011 S.MEGR= 000006 S.MEGW= 000007 S.PAT = 000003 S.SCHR= 000005 S.SDCL= 000001 S.TGOF= 000013 S.TGSS= 000015 S.TRKL= 001102 TALKAN 001114 TALKAN 001145 TEST 001501 TESTA 0000001	TLEN.U= 000055 TO 001221 TOOBIG= 000001 TRACKS= 000020 TRKGRP= 000003 TYPERR 003237 TOO 001724 T1MSIZ= 000000 T2CMD = 000002 T2DLL = 000001 T4BB1 = 000005 T4MPRM= 000003 T4MXFR= 000011 T4SEEK= 000010 T4SOFT= 000007 T4UPRM= 001210 UNITNB 003716 UNITS 003676 UNITO = 000001 UNITS 003676 UNITO = 000001 UNITS 003676 UNITO = 000012 UNITS = 000012 UNITS = 000012 UNITS = 000012 UNCCYL= 000047 U.CCNT= 000012 U.CCYL= 000047 U.CCYL= 000051 U.CCYL= 000051 U.CCYL= 000027 U.CGRP= 000051 U.CGRP= 000052 U.CTRK= 000052 U.LGRP= 000054 U.LGRP= 000054 U.MASK= 000022 U.MASK= 000035	U.MLEV= 000026 U.MSEC= 000017 U.NEXT= 000000 U.NFUN= 000010 U.NSEC= 000016 U.PARM= 000033 U.PAT = 000011 U.PCTG= 000014 U.RTRY= 000025 U.RWTO= 000031 U.SDIL= 000031 U.SDIS= 000030 U.SEEK= 000007 U.SNUM= 000043 U.SUBP= 000001 U.SUBU= 000034 U.TIMO= 000034 U.TIMO= 000032 U.WRIT= 000032 U.WRIT= 000032 U.WRIT= 000032 U.WRIT= 000012 WBUFLN= 000010 WCHKAL= 000004 WCHKAL= 000004 WCHKAL= 000004 WCHKAL= 000004 WCHKAL= 000001 WCHKAL= 000010 WCHKAL= 000010 WCHKAL= 000010 WCHKAL= 000010 WCHKAL= 000001 WCHKAL= 000001 WCHKAL= 000010 WCHKAL= 000010 WCHKAL= 000010 WRITE 002010 WRITE 003013 WSTOP = 140000 XMTERR= 000002 XMTERR= 000003 XMTERR= 000003 XMTERR= 000003 XMTERR= 000003

. ABS. 016614 000 000000 001 ERRORS DETECTED: 0

VIRTUAL MEMORY USED: 4377 WORDS (18 PAGES)
DYNAMIC MEMORY AVAILABLE FOR 69 PAGES
UDAT2.BIN.A:UDAT2B/C=[1,33]DMACRG,UDAT2T,UDATP,UDATR,UDAT2M,UDAT2S

UDAT2 D	OISK RESID	DENT MACRO	0 X04.00 9	9-JUL-81 1	11:39:12	PAGE S-1	D	13						SEQ 0158
ARGS\$	32-46 35-35 40-30 47-40 55-17	32-46# 35-35# 40-30# 47-40# 55-17#	33-18 36-6 41-18 48-23 55-19	33-18 36-6 41-18# 48-23# 55-19#	33-18# 36-6# 41-55 48-26 55-24	33-18# 36-6# 41-55# 48-26# 55-24#	33-23 36-9 41-58 48-32	33-23# 36-9# 41-58# 48-32#	34-22 37-26 44-25 54-14	34-22# 37-26# 44-25# 54-14#	34-24 40-20 47-31 54-16	34-24# 40-20# 47-31# 54-16#	34-31 40-23 47-34 54-21	34-31# 40-23# 47-34# 54-21#
ATTN AVAIL BEUSED BF.DAT BF.ECC BF.EDC	6-22# 6-24# 8-33# 3-62# 3-64#	33-17#	33-19	. 33-17#	33 24	JJ 244								
BREAK BUF 1	3-63# 4-3# 57-38#	53-18												
BUFFLG BUFSIZ CHECK	3-47# 22-15 5-67#	22-20	23-68#											
CHGMOD CHRRES CLRBUF	6-32# 6-43# 22-25#	36-7 22-27	36-9	36-9										
CLRDRV	35-13 4-9#	42-6	55-8#											
COMPLT CONMEM CR.DIA CR.DRC CR.GCR	6-41# 41-11 40-12 55-8 36-5	48-30 41-30 57-50# 57-45#	48-32 41-48	48-32 42-32	55 - 22 43 - 48	55-24 45-12	55-24 45-24	49-27#						
CR.GST CR.RDM CR.WRM	52-26 47-23 38-20*	54-8 57-40# 43-35*	57 - 27#	43-73*	48-15	57-34#								
CVT D.LIMT	4-19#	43-33*	43-30*	43-73*	40-13	37-34#								
D.SCHR DATAVL DATCMP DATERR DATPRE	8-5# 41-21 8-38# 8-20# 5-33#	41-39	41-49	57-84#										
DBNCYL DCMPAL	5-42# 8-40#													
DCYLS DIA DIA.EN DIA.OP	8-25# 40-9* 40-28 57-51	57-50 40-30 57-75#	57-51# 40-30	57-78#										
DIAG.1 DIAGNS DINIT DIREC	37-8* 37-12 4-12# 8-13#	46-5* 37-25 33-12	46-13* 40-8# 52-16	57 - 64# 43 - 75	43-79									
DISCON DIV50 DO.DC4	6-30#	44-10 43-53	44-17 45-26	44-19	56-13#									
DO.DCL DO.DIO DO.DI1	42-4# 42-5# 42-20 42-36 32-56 42-38 45-16	42-10 42-29 43-3# 43-22#	42 - 16 45 - 9	45-21	46-3#									
DO.DIO DO.DI1 DO.DI2 DO.DI3 DO.DI6 DO.DI7	42-38 45-16 32-27	43-78# 45-26# 44-3#												

U

U

UDAT2 D	ISK RESID	ENT MACRO	X04.00 9	9-JUL-81	11:39:12	PAGE S-2	E	13					
DO.DI8 DO.DI9 DO.DIX	43-24 41-19 37-4	44-6# 41-32 42-22#	41-56	41-59	45-2#								
DONECD	32-105# 57-30	32-107 57-31#	33-18	33-18									
DRCLR1 DROP	35-8 8-10#	35-13#	35-34										
DRVCLR DRVID	6-35# 5-14#	57-31											
DRVRUN ECC	6-34# 4-16#												
ECCFLG ECCRSH	3-45# 5-11#	34-14											
ECHO1 ECHO2 ECHO3	33-20 34-13# 34-21	34-11# 34-37 34-24#											
ECHOS ECHOC	34-23 6-46#	34-25 57-8	34-30 57-19	34-35# 57-20	57-21	57-22							
EOC ER.END	3-46# 54-15 6-31#	54-17	54-22#	55-18	55-20	55-25							
ERHARD ERLEV ERRMC	6-52# 5-10# 6-15#												
ERRMES ERRN	32-3# 33-23	32-46 33-23	32-46 33-23#	32-46 34-22	32-46# 34-22	33-18 34-22	33-18 34-22#	33-18 34-24	33-18 34-24	33-18 34-24	33-18 34-24#	33-18# 34-31	33 34 36
	36-9 40-23#	36-9 40-30	36-9# 40-30	37-26 40-30	37-26 40-30#	37-26 41-18	37 - 26# 41 - 18	40-20 41-18	40-20 41-18#	40-20 41-55	40-20# 41-55	40-23 41-55	40 41 47
	47 - 34 # 48 - 32	47 - 40 48 - 32	47-40 48-32#	47-40 54-14	47-40# 54-14	48-23 54-14	48-23 54-14#	48-23 54-16	48-23# 54-16	48-26 54-16	48-26 54-16#	48-26 54-21	48 54 55
ERRTYP ERSOFT EX.END	41-16 6-53#	41-36	57-83#			33 17	,,,,,	33 17	33 17"	,,,,,,,	,, ,,	,, ,,	,,
FB.DAT FB.EDC	4-20# 3-22# 3-23#												
FFFC FFFD	57-88# 42-22	57-88	57-89#	57-90									
FIRSTU	7-11#	44-23	56-29#										
FRAME	5-66# 59-3#												
	CROSS F DO.DIS DO.DIS DO.DIS DO.DIS DO.DIS DONE CD DRCBYT DRCCCC DRCCCCC DRCCCCCC DRCCCCCC DRCCCCCC DRCCCCCCC DRCCCCCCC DRCCCCCCC DRCCCCCCC DRCCCCCCC DRCCCCCCC DRCCCCCCCC	CROSS REFERENCE DO.DI8 43-24 DO.DI9 41-19 DO.DIX 37-4 DONE 6-17# DONE 57-30 DRCBYT 55-11* DRCBYT 55-11* DRCLR1 35-8 DROP 8-10# DRVCLR 6-35# DRVVID 6-33# DRVVID 6-33# DRVVID 6-34# ECC CCHK 8-26# ECCCHK 8-26# ECCCHK 8-26# ECCCHK 8-26# ECCCHK 8-26# ECCHO1 33-20 ECHO2 34-13# ECHO3 34-21 ECHO3 34-21 ECHO4 34-19 ECHO5 6-46# ECHO6 34-11 ECHO6 34-11 ECHO7 34-11 ECHO7 34-11 ECHO7 34-23 ECHOR 6-31# ECHOR 34-21 ECHOR 34-21 ECHOR 34-21 ECHOR 34-23 ECHOR 34-21 ECHOR 34-23 ECHOR 34-23 ECHOR 34-21 ECHOR 34-23 ECHOR 34-23 ECHOR 34-23 ECHOR 34-21 ECHOR 34-23 ECHOR 34-23 ECHOR 34-23 ECHOR 34-23 ECHOR 34-21 ECHOR 34-23 ECHOR 34-23 ECHOR 34-23 ECHOR 34-23 ECHOR 34-23 ERRIP 41-16 ERROF 1 6-53# 41-58 47-34# 48-32 54-21# ERRIP 41-16 ERROF 1 6-53# ERROF 1 6-53# ERRIP 41-16 ERROF 1 6-53# ERROF 1 6-46# ERROF 1 6-46#	CROSS REFERENCE TABLE (CF DO. DIS 43-24	DO.DIS 43-24 44-6# DO.DI9 41-19 41-32 41-56 DO.DIX 37-4 42-22# DONE 6-17# 32-105 DONECD 32-105# 32-107 33-18 DRC 57-30 57-31# DRCBYT 55-11* 57-32# DRCBYT 55-11* 57-32# DRVCLR 6-35# 57-31 DRVCLR 6-35# 57-31 DRVONL 6-34# ECC 4-16# ECCCHK 8-26# ECCCHK 8-26# ECCCHG 34-31# ECHO 4-11# 34-14 ECHO 33-20 34-11# ECHO 4-11# 34-14 ECHO 33-20 34-11# ECHO 4-11# 34-29# ECHO3 34-21 34-27 ECHO3 34-21 34-29# ECHO4 34-19 34-29# ECHO5 34-23 34-5 34-75 ECHOD 34-11 57-18# ECHO 6-52# ERLEV 5-10# ERRMC 6-15# ERRN 32-34 32-46 32-46 33-23 33-23 33-23# 34-31# 35-35 35-35 36-9 36-9 36-9# 40-23# 40-30 40-30 41-58 41-58 41-58# 47-34# 47-40 47-40 48-32 48-32 48-32# EXIT 4-20# FB.DAT 3-22# FB.EDC 3-23# FFFC 57-88# FFFC 57-86# FFFC 57-86#	DO.DIS 43-24	DO.DIS 43-24	DO.DIS 43-24 44-6# DO.DIS 41-19 41-32 41-56 41-59 45-2# DO.DIS 7-4 42-22# 27-28	UDAT2 DISK RESIDENT MACRO X04,00 9-JUL-81 11:39:12 PAGE S-2 CROSS REFERENCE TABLE (CREF V01-05) DO.D18 43-24	CROSS REFERENCE TABLE (CREF VO1-05) DO.D18 43-24	UDAT2 DISK RESIDENT MACRO X04,00 9-JUL-81 11:39:12 PAGE S-2 CROSS REFERENCE TABLE (CREF V01-05) DO.D18 43-24 DO.D19 41-19 DO.D19 41-19 DO.D19 41-19 DONE 6-174 DONE 6-174 DONE 757-50 DORE 757-50 DO	UDAT2 DISK RESIDENT MACRO XO4,00 9-JUL-81 11:39:12 PAGE S-2 CROSS REFERENCE TABLE (CREF VOT-05) DO. DIB 43-24 14-52 14-56 14-59 14-59 14-59 14-59 14-59 14-59 15-20 DO. DIB 43-24 14-59 14-59 14-59 14-59 15-20 DO. DIS 43-24 14-59 14-59 14-59 15-20 DO. DIS 43-24 14-59 14-59 14-59 15-20 DO. DIS 43-24 14-59 14-59 15-20 DO. DIS 43-24 14-59 15-21 DO. DIS 43-24 14-59 15-21 DO. DIS 43-24 DO. DIS 43-24	UDAT2 DISK RESIDENT MARRO XOV, 00 9-JUL-81 11:39:12 PAGE S-2 ROSS REFERENCE TABLE (CREF VOT-05) DO. DIS 43-24 44-67 DO. DIS 43-24 44-67 DO. DIS 37-4 42-220 DO. DIS 37-74 42-220 DO. DIS 37-14 DO. DIS 37-105 DORE 6178 DORE 7178 DO. DIS 37-105 DORE 6178 DORE 7178 DORE	UDAT2 DISK RESIDENT MACRO XQ4_00 9-JUL-81 11:39:12 PAGE S-2 (MSS) REFERENCE TABLE (CRF Y01-05) DO.D18 43-24 41-50 DO.D19 41-19 CH-179 DO.D18 37-4 42-28 DO.D18 37-4 42-28 DO.D18 37-4 42-28 DO.D18 37-4 DO.D18 37-4 42-28 DO.D18 37-4 DO.D18 37-19 S2-107 S2-107 S2-107 S3-18 S3-18 S3-18 S3-18 S3-18 S3-18 S5-13# S5-13# S5-13# S5-13# S5-13# S5-13# S5-13# S5-13# S5-13# S5-14 SF-19# SF-29# S

CROSS	REFERENCE	TABLE (C	REF V01-0	5)										3E G 0100
FSTOP FT.BUF FT.HI FT.LOW FTIME FTLDEV FTLSYS GCC.EN GCR GETBCN GETCHR GETSTA GETSTA GETSUB	3-42# 3-15# 3-16# 3-17# 8-16# 6-51# 6-50# 57-79# 57-45 41-24 6-36# 57-27 6-38# 6-37#	57-46# 41-42 57-46 57-28# 57-28	50-29# 57-76#											
GETU GRPCYL GRPOFF GSTS3 GSTS6 GSTS7 GSTST8 GTSTAT HBHINB HBLONB	32-6 5-25# 5-38# 35-15 35-24 35-32 37-13# 35-6 5-56# 5-57#	52-2# 35-21# 35-29# 35-39# 37-27 35-22 52-48	38-28 42-12 53-10	39-24 54-8#	46-16									
HD.BAD HD.DBN HD.LBN HD.PRV HD.RBN HD.REV HD.XBN HDRPRE HEADER HIBYTE	3-55# 3-58# 3-52# 3-56# 3-53# 3-57# 5-34# 5-62# 5-54#	32-36	34-13	39– 20	49-30	49-36	50-33	50-38	50-75	55-10				
HICYL HIDBN HILBN HIMEM HIRBN HIXBN HOSTRQ	5-24# 5-30# 5-26# 3-9# 5-27# 22-2# 53-5	7-11 29-38	32-106	37-15	41-31	43-17	45-25	50-53	51-22	55 - 10	51-30	51-34	51-38	51-40
HRDREV ILOOP IN.01 IN.02 IN.03 IN.04 IN.05 IN.06 IN.07 IN.08 IN.09 IN.10 IN.11 IN.12 IN.13	5-13# 33-18# 23-39# 23-40# 23-42# 23-42# 23-43# 23-45# 23-46# 23-46# 23-48# 23-49# 23-50# 23-51#	33-22 37-16 37-10* 38-12 38-13	43-5 37-26 39-11	43-19 37-26	53-6 38-11	39-10	40-9	43-74*	43-78*					

59-73#

59-14#

MS4

SEQ 0161

U U

51-34*

51-38*

U

OUT.19

OUT .20 OUT .21 OUT .22

```
41-18
                        59-75#
M540
MS41
                        59-81#
           41-31
           41-55
                        59-87#
MS42
MS43
                        59-93#
           41-58
MS5
           34-24
                        59-17#
MS50
           36-6
                        59-99#
MS51
MS52
MS53
           36-6
                        59-101#
           36-9
                        59-103#
           59-107#
           59-111#
MS54
MS55
           59-115#
MS56
           44-25
                        59-119#
           32-46
45-25
59-128#
MS57
                        59-121#
MS58
                        59-124#
MS59
                        59-20#
59-130#
           34-31
MS6
           51-22
MS60
           51-26
51-30
                        59-132#
MS61
MS62
                        59-134#
MS63
           51-34
                        59-137#
MS64
           51-38
                        59-140#
MS65
           51-40
                        59-143#
MS7
           54-14
                        59-24#
                        59-26#
59-28#
           54-16
MS8
MS9
           54-21
                        22-21
MUR
            4-18#
MWRITE
           26-10#
                                                44-25
44-25
44-25
                                    44-25
44-25
44-25
                                                             57-66#
57-67#
NAM.1
           44-11+
                        44-15*
                        44-24*
           44-9*
NAM. 2
                                                              57-68#
NAM.3
           44-18*
NEWSUB
            8-14#
           41-31#
54-20
8-30#
22-22
23-7#
                        45-25#
                                    50-53#
55-23
NUMPTR
                                                 51-224
                                                                                                   51-38#
                                                                                                                                         51-40#
                                                                                                                                                     51-40#
                                                              51-26#
                                                                          51-30#
                                                                                       51-34#
                                                                                                                51-40
                                                                                                                             51-40
OK. END
ONLYCL
                        22-23
37-7*
                                                 29-13
39-17*
                                                              37-6*
                                                                          38-24*
                                                                                       39-16*
                                     23-6 #
38-23*
                                                                                                   46-4*
OUT.01
                                                                                                                50-46
                                                                                                                            50-55
                                                                                                   46-9*
                                                                                       46-7*
OUT.02
                                                                                                                50-53*
                                                                                                                            51-22*
                                                                                                                                         51-26*
                                                                                                                                                     51-30*
            51-40*
                                    39-21*
39-22*
39-23*
41-34
           23-8#
23-9#
23-10#
OUT.03
                        38-25*
                                                 46-11+
                                                              51-40*
                       38-26*
38-27*
41-15
                                                 45-11
                                                              45-13
OUT.04
                                                                          46-12*
                                                 41-10
OUT.05
           23-11#
OUT.06
           23-12#
OUT.07
                        41-13
                        41-51*
           23-13#
                                    50-32
80.TUO
                                                 50-36
                                                              50-72*
                                                                                       50-77*
                                                                          50-75*
           23-14#
                                    41-47
OUT.09
           23-15#
OUT.10
           22-23 23-17#
                        23-16#
OUT.11
OUT .12
OUT .13
OUT .14
OUT .15
OUT .16
OUT .17
OUT .18
           23-1/#
23-18#
23-20#
23-21#
23-22#
23-23#
23-25#
23-26#
23-27#
```

CROSS R	EFERENCE	TABLE (CI	REF V01-05	300 01	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	AUL 3 0								524 0105
OUT.23 OUT.24 OUT.25 OUT.26 OUT.27 OUT.28 OUT.29 OUT.RQ OV OVE.MN OVE.MS	23-28# 23-29# 23-30# 23-31# 23-32# 23-33# 23-34# 22-13* 2-39# 59-4#	50-50 22-14 2-39 59-4 59-148	50-59 23-5# 2-39#	59-4	59-4	59-4	59-4#	59-148	59-148#					
OVERFL OVL OVL.MN OVL.MS OVS.MN OVS.MS	5-75# 2-39 2-39 59-148 2-39# 59-4#	2-39# 2-39 59-148	59-4 59-4 59-148#	59-4# 59-4	59-148 59-4#	59-148#								
OVSTRT PORTO	3-10#	32-47	32-59#											
PORTS PORTS PRMS	32-80# 32-83 32-46 33-18 33-23 34-31 35-35 36-9 37-26 40-30 41-58 41-58 47-31 47-34 47-34 48-32 54-16 55-17 55-19 55-24	32-104 32-91 32-46 33-18 33-24 33-24 34-31 36-9 37-26 40-30 41-58 47-31 47-31 47-34 48-32 54-16 55-17 55-24	32-101# 32-46 33-18 33-18 34-22 34-24 34-31 35-35 36-6 36-9 37-26 40-30 41-18 41-53 44-25 47-31 47-34 47-40 48-32 54-14 55-17 55-19 55-24	32-46 33-18 33-18 34-22 34-24 34-31 35-35 36-9 37-26 40-30 41-55 47-31 47-31 47-40 48-32 54-21 55-19 55-24	32-46 33-18 33-18# 34-22 34-21 36-6 36-6 36-23 40-30 41-18 44-25 47-31 47-31 47-31 47-31 48-26 48-32 55-19 55-24#	32-46 33-18 33-23 34-22 34-21 36-6 36-9 37-26# 40-30 41-18 41-58 41-58 44-25 47-31 47-31 47-34 48-26 48-32 54-14# 55-17 55-19	32-46 33-18 33-23 34-24 34-31# 36-6 36-9 40-23 40-23 40-23 41-58 44-25 47-31 47-34# 48-32 54-21 55-17 55-19	32-46 33-18 33-23 34-22 35-35 36-6 36-9 40-23 40-23 40-30 41-18# 41-58 44-25 47-40 48-26 48-32 54-17 55-17 55-17	32-46 33-18 33-23 34-22 34-24 35-35 36-6 36-9# 40-20 40-23 40-20 41-55 41-58 44-25 47-40 48-26 48-32# 54-16 54-21 55-24	32-46 33-18 33-23 34-22# 35-35 36-6 37-26 40-23 40-23 41-58 44-25 47-40 48-26 54-14 54-16 54-21 55-24	32-46# 33-18 33-23 34-22 34-31 35-35 36-6# 37-26 40-23 40-23 40-30# 41-58 44-25 47-40 48-26 54-16 54-16 55-17# 55-24	33-18 33-18 33-23 34-21 35-35 36-6 37-26 40-23 41-18 41-55 41-58 44-25 47-40 48-23 48-26# 54-14 54-16 55-24	33-18 33-18 33-23 34-22# 34-31 35-35 36-6 36-9 37-26 40-23 41-18 41-55 41-58 44-25# 47-34 47-40 48-23 48-32 54-16 55-19 55-24	33-18 33-18 33-23 34-24 34-31 35-35 36-6 36-9 37-26 40-23# 41-18 41-55 41-58 47-31 47-34 47-40 48-23 48-32 54-14 55-19 55-24
PTYPE\$	32-46 34-31# 36-9# 44-25 48-32	32-46 35-35 36-9# 44-25 48-32	32-46# 35-35 37-26 44-25 48-32#	34-22 35-35 37-26 44-25# 48-32#	34-22 35-35 37-26# 44-25# 54-21	34-22# 35-35 40-30 44-25# 54-21	34-24 35-35 40-30 47-40 54-21	34-24 35-35# 40-30 47-40 54-21	34-24# 35-35# 40-30 47-40 54-21#	34-31 35-35# 40-30# 47-40 54-21#	34-31 36-9 40-30# 47-40# 55-24	34-31 36-9 44-25 47-40# 55-24	34-31 36-9 44-25 48-32 55-24	34-31# 36-9 44-25 48-32 55-24
RBNBN RBNTRK RBUFLN RCONT RCTCPS	55-24# 8-18# 5-31# 3-69# 3-41# 5-8#	55-24#												

UDAT2 D	ISK RESI	DENT MACR	0 x04.00 REF v01-0	9-JUL-81 5)	11:39:12	PAGE S-7	J	13						SEQ 0164
RCTCSZ RCV RCVERR	5-40# 4-8# 6-23#	24 -3 0 21 - 17	52-36											
RCVRDY RDM RDM.EN	6-21# 39-10* 45-17* 47-38	33-19 39-11* 45-18* 47-40 57-74#	52-21 30-12* 50-82* 47-40	41-3* 57-40 57-77#	41-4* 57-41#	41-5*	41-23*	41-41*	42-22*	42 - 23*	42-24*	45-4*	45-5*	45-6*
RDM.OP RDMEM RDSTAT READ	57-41 39-14 21-2# 37-23	41-6 33-18 39-9#	41-25 52-13	41 -43 52 - 18	42-25	45-7	45-19	47-21#						
REGU\$	8-19# 32-46 34-24# 35-35 36-9 40-20# 41-55 44-25# 47-40# 54-14 55-17# 34-31 40-30# 54-21	32-46 34-31 35-35 36-9 40-23 41-55# 44-25# 48-23 54-14# 55-19 34-31 44-25 54-21	32-46# 34-31 35-35 36-9# 40-23# 41-58 47-31 48-23# 54-16 55-19# 34-31# 44-25 54-21#	33-18 34-31 35-35# 36-9# 40-30 41-58# 47-31# 48-26 54-16# 55-24 35-35 44-25 55-24	33-18 34-31 35-35# 36-9# 40-30 44-25 47-34 48-26# 54-21 55-24 35-35 44-25 55-24	33-18# 34-31 35-35# 37-26 40-30 44-25 47-34# 48-32 54-21 55-24 35-35# 44-25# 55-24#	33-18# 34-31 36-6 37-26 40-30 44-25 47-40 48-32 54-21 55-24 36-9 44-25#	33-23 34-31# 36-6 37-26 40-30 44-25 47-40 48-32 54-21 55-24 36-9 44-25#	33-23# 34-31# 36-6# 37-26 40-30 44-25 47-40 48-32 54-21 55-24 36-9# 47-40	34-22 34-31# 36-6# 37-26 40-30# 44-25 47-40 48-32 54-21 55-24# 37-26 47-40	34-22 35-35 36-9 37-26# 40-30# 44-25 47-40 48-32 54-21# 55-24# 37-26 47-40#	34-22# 35-35 36-9 37-26# 40-30# 44-25 47-40 48-32# 54-21# 55-24# 37-26# 48-32	34-24 35-35 36-9 37-26# 41-18 44-25 47-40# 48-32# 54-21# 40-30 48-32	34-24 35-35 36-9 40-20 41-18# 44-25# 47-40# 48-32# 55-17
RERRCA RERROR RERROR RESEEK RESEEK RESEEK RESECT REVET REVECT REVECT REVECT REVECT REVECT REVECT REVECT REVECT REVECT REVECT REVECT REVECT REVECT REVECT REVECT REVET	29-31 29-7# 40-23 54-21 29-32# 8-12# 8-12# 8-17# 5-63# 5-16# 5-32# 8-27# 3-44# 3-44# 3-30# 3-31# 3-30#	29-36# 32-46 40-30 55-17 29-35	33-18 41-18 55-19	33-18 41-55 55-24	33-23 41-58	34-22 44-25	34-24 47-31	34-31 47-34	35-35 47-40	36-6 48-23	36-6 48-26	36-9 48-32	37-26 54-14	40-20 54-16
RW.SDI RW.STA RWRDY S.BADP S.BESS S.ERR S.MCNT S.MEGR S.MEGW S.PARM S.PAT	3-33# 3-28# 6-26# 7-58# 7-59# 41-35* 7-64# 7-56# 7-57# 7-51# 7-53#	7-59 7-64 41-38* 7-65 7-57 7-58 7-52 7-54	41-52*	57-62#										

					9-JUL-81	11:39:12	PAGE	5-8
CROSS	REFER	RENCE TABL	E (CRE	F V01-0	05)			

-	-	-		~ 4	6	-	
œ.		α	- 1	810	-	-	
٠.							

UDAT2 CROSS	DISK RESI	DENT MACR	0 X04.00 REF V01-0	9-JUL-81 5)	11:39:12	PAGE S-8	ì	,,						SEQ 0165
S.SCHR S.SDCL S.TGOF	7-55# 7-52# 7-65#	7-56 7-53 7-66												
S.TGSS S.TRKL SAVREG	7-66# 7-54# 29-46# 43-43*	7-55 32-34* 43-54	32-36* 44-25	32-37 44-25*	34-31 47-40	34-31* 47-40*	35 - 35 48 - 32	35-35* 48-32*	36 - 9 54 - 21	36-9* 54-21*	37 - 26 55 - 24	37-26* 55-24*	40-30	40-30*
SAVRID SAVSTA SBCRES SCTWRD	42-34* 35-40* 6-44# 7-8#	43-4 37 - 2	43-78 57-15#	57-16#										
SDILTO	32-54* 47-24 24-27	32-97* 48-16 24-46#	32-100 57-13# 36-19*	33-11	40-13	41-9	41-28	41-46	42-5	42-30	43-50	45-10	45-22	46-3
SDISTO SDIVER SEKINP	24-25 5-4# 8-15#	24-45#	36-4*	36-15*										
SEND SEQSEK SHRTTO SNDAGN	4-7# 8-32# 5-3# 22-14#	24-18 36-12 22-18	52-29											
SPADJU SS ST	29-30* 5-9# 35-29 43-12 57-34	29-40# 35-30 43-14 57-40	35-35 43-29 57-45	35-35 43-39 57-50	36-12 43-45* 57-57#	36-16 43-46*	39 - 18 46 - 11	41 - 3 49 - 28	42-18 50-47	42 - 31 50 - 56	42 - 34 52 - 46	42-35* 55-9	42 - 37* 57 - 27	43-10 57-30
ST.C ST.CON ST.DB ST.DF	4-30# 4-29# 4-47# 4-44#													
ST.DIA ST.DR ST.ERR	37-2# 4-37# 4-28#	37-3	42-19											
ST.FE	4-41# 4-46# 4-27# 4-25#	35-31												
ST.OA ST.PE ST.PS	4-35# 4-43# 4-39# 4-42#	35-31												
ST.FO ST.MOD ST.MSK ST.OA ST.PE ST.PS ST.RE ST.RTY ST.RU ST.ST ST.ST ST.ST ST.ST ST.STA ST.UNT STACK STACK STACK STATEX STATEX STATEX	4-36# 4-31# 4-40# 4-48# 4-38# 4-26# 4-24# 4-45# 20-8 20-9 21-16 21-9# 21-12	35-31 30-5# 32-6# 21-18 21-14 21-17#	21 - 22# 21 - 20											
STATUS STSIZE STSRES	4-10# 43-30 6-45#	21-9 43-32 54-19	57 - 40 54 - 21	57-56# 54-21										

CH033 H	LILITERCE	TABLE (C)	NET VOI-U	, ,							
SUB T TOO TIMSIZ T2CMD T2DLL	5-22# 36-4# 36-8 6-3# 6-5# 6-4#	36-12# 37-14 43-16									
T4BB1 T4BB2 T4MPRM T4MXFR T4SEEK T4SOFT	6-8# 6-9# 6-6# 6-12# 6-11# 6-10#										
TALK1A TALK1B	6-7# 24-20 24-26	24-23# 24-28#	24-38								
TALK2A TALK2B TALKER TEST TEST4	24-32 24-22 24-15# 32-98	24-41# 24-36 36-6 33-11#	24 - 40 40 - 14	24 - 42# 47 - 25	48-17	54-9	55-12				
TESTA TESTEX TESTX TIMEOU	2-37# 33-24 32-99# 5-61#	24-1 35-9 46-21	35-16	35-25	36-6	36-6	36-10	37-19	42-11	42-17	46-21#
TLEN.U TO TOOBIG TRACKS	7-10# 28-1# 5-69# 8-34#	7-11 36-14	36-18								
TRKGRP TYPERR U.CBN U.CCNT	5-28# 40-24 7-41# 7-22#	47-35 7-42 7-23	48-27	51-16#							
U.CCYL U.CGRP U.CSEC U.CTRK U.ECCT	7-44# 7-45# 7-28# 7-24# 7-34#	7-45 7-46 7-29 7-25									
U.ELEV U.LCYL U.LGRP U.MASK U.MBN U.MLEV	7-31# 7-46# 7-10 7-29# 7-40# 7-33# 7-26# 7-25# 7-25# 7-28# 7-23# 7-42# 7-18#	7-32 7-47 7-47# 7-30 7-41 7-34 7-27 7-16		8							
U.MSEC U.NEXT U.NFUN U.NSEC U.PARM	7-26# 7-15# 7-20# 7-25# 7-38#	7-16 7-21 7-26 7-39									
U.PAT U.PCTG U.RBN U.RTRY U.RWTO	7-23# 7-42# 7-32# 7-18#	7-24 7-43 7-33 7-19									
U.SDIL U.SDIS U.SEEK U.SNUM U.SUBP	7-36# 7-35# 7-19# 7-43# 7-16#	7-21 7-26 7-39 7-22 7-24 7-43 7-33 7-19 7-37 7-36 7-20 7-44 7-17									
0.300	7-10#	,,									

U

.SUBU	7-39#	7-40					
.TIMO	7-17#	7-18 7-28 7-38 7-31					
.WPRT	7-37#	7-38					
DATA	25-14 5-46#	25-16 32-31	26-11* 32-78	26-15 32-103	26-20#		
NIT1	5-47#	32-103	32 10	32 103			
NIT2 NIT3	5-48#	32-103 32-103					
NITNB	32-55*	32-95*	32-99	44-3*	57-10#	57.54	
NITS NSSUC	32-29 6-42#	32-80	52-10	53-7	53-16	57-5#	
READ	4-14#	25-15	43-33				
TOTST WRITE	6-13#	53-4 26-16					
AITSI	4-13#						
BUFLN	3-68# 8-35#	3-69					

38-10# 38-12* 38-17* 38-18* 38-19* 43-4* 43-20* 43-37* 43-38* 43-42* 43-47 43-55* 43-72* 57-34

57-73# 43-51 48-15#

WCONT 5-59#
WONLY 8-28#
WREAL 3-43#
WRITE 37-21
WRM 38-11*
57-35#
WRM.OP 57-35
WRONG 5-65#
WRTMEM 38-22
WSTOP 3-38#
XBNCYL 5-41#
XFERRT 5-5#
XMTERR 6-25#
XOR 27-10#
XREAD 4-5#
XWRITE 4-6# 21-11

XWRITE 4-6#

BCS CERROR DEVFTL	11-1# 16-61# 16-33#													
DIAGSS DMCODE DMEND DMOVLY DSTAT ENDERR	9-5# 1-3# 1-32# 1-18# 17-3# 16-89#	2-39 59-148 2-39 33-18	59-4											
ERRDF ERRHRD	13-33# 13-39# 40-23 55-17	32-46 40-30 55-19	33-18 41-18 55-24	33-18 41-55	33-23 44-25	34-22 47-31	34-24 47-34	34-31 47-40	35 - 35 48 - 23	36-6 48-26	36-6 48-32	36-9 54-14	37-26 54-16	40 - 20 54 - 21
ERROR ERROR\$	16-45# 14-3# 40-23 54-21	32-46 40-30 55-17	33-18 41-18 55-19	33-18 41-55 55-24	33-23 41-58	34-22 44-25	34-24 47-31	34-31 47-34	35-35 47-40	36-6 48-23	36-6 48-26	36-9 48-32	37-26 54-14	40 - 20 54 - 16
ERRORC ERRSF ERRSFT GETP\$	16-71# 13-27# 13-47# 15-15#	41-58 34-31	35-35	36-9	37-26	40-30	//-25	11-25	//-25	17-10	/9.72	E/. 21	EE 24	
HARDER MOVMSG MSG MSSG	16-27# 16-80# 10-3# 16-107#	41-31 57-27	4525 57 - 30	50-53 57-34	51-22 57-40	51-26 57-45	51-30 57-50	44 - 25 51 - ,34	44 - 25 51 - 38	47 - 40 51 - 40	48 - 32 51 - 40	54-21	55-24	
MSSGE NDERR	16-129# 16-97#	41-31	45-25	50-53	51-22	51-26	51-30	51-34	51-38	51-40				
OVTERM PARGS.	2-39 14-33# 44-25	2-39# 32-46 44-25	2-39# 34-22 44-25	59-4 34-24 47-40	59-4# 34-31 47-40	59-148 34-31 48-32	35 - 35 48 - 32	35-35 54-21	35-35 54-21	36-9 55-24	36-9 55-24	37-26	40-30	40-30
POP	12-11# 51-22 12-3#	21 - 22 51 - 26 21 - 7	22-28 51-30 22-12	24-42 51-34 24-15	25-17 51-38 25-10	26-17 51-40 26-10	27-15 52-43 27-10	29-39 52-45 29-7	41-31 52-61 29-9	45-25 56-22 41-31	47 - 45 45 - 25	49 - 45 47 - 22	50 - 53	50 - 83
REPSFT RSTR\$	50-53 16-10# 15-8#	51 - 22 34-31	51 - 26 35 - 35	51 - 30 36 - 9	51 - 34 37 - 26	51 - 38 40 - 30	51 - 40	52 - 11 47 - 40	52 -3 2 48 -3 2	56 - 13	55-24			
RXOR SAVR\$ SOFTER	18-4# 15-1# 16-4#	34-31	35-35	36-9	37-26	40-30	44-25	47-40	48-32	54-21	55-24			
SYSFTL	16-39# 19-3#	36-6												

UDAT3 DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 TABLE OF CONTENTS

UDA DM PROGRAM PARAMETERS TEST 4 SPECIFIC INFORMATION

MACRO DEFINITIONS START OF TEST CODE

RDSTAT - GET DRIVE'S REAL TIME DRIVE STATE HOSTRO - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED, ETC.

DISK DRIVE SEQUENCER INITIALIZE DRIVE AND LOOK AT DRIVE SIGNALS

000000

TITLE UDATS DISK FUNCTIONAL

COPYRIGHT (C) 1980 DIGITAL EQUIPMENT CORPORATION, MAYNARD, MASS.

THIS SOFTWARE IS FURNISHED UNDER A LICENSE FOR USE ONLY ON A SINGLE COMPUTER SYSTEM AND MAY BE COPIED ONLY WITH THE INCLUSION OF THE ABOVE COPYRIGHT NOTICE. THIS SOFTWARE, OR ANY OTHER COPIES THEREOF, MAY NOT BE PROVIDED OR OTHERWISE MADE AVAILABLE TO ANY OTHER PERSON EXCEPT FOR USE ON SUCH SYSTEM AND TO ONE WHO AGREES TO THESE LICENSE TERMS. TITLE TO AND OWNERSHIP OF THE SOFTWARE SHALL AT ALL TIMES REMAIN IN DIGITAL.

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION.

DIGITAL ASSUMES NO RESPONSIBILITY FOR THE USE OR RELIABILITY OF ITS SOFTWARE ON EQUIPMENT WHICH IS NOT SUPPLIED BY DIGITAL.

THIS PROGRAM SHALL BE ASSEMBLED WITH THE PROGRAM DMACRO :USING A COMMAND LINE SIMILAR TO:

: UDAT3.BIN,UDAT3/C=[1,2]DMACRO,UDAT3T,UDATP,UDAT3M,UDATR,UDAT3S

: THIS IS NOT TEST4

.ENABL ABS DMCODE UDAT3.0.714.3.0

1EST4

1		.SBTTL	UDA DM F	PROGRAM PARAMETERS	
3			LIST ME	£8	
5			EQUATES		
7			HIGHEST	USABLE LOCATION OF UDA	MEMORY + 1
8 10 11 12 13	010000 007774	HIMEM OVSTRT	:	10000 7774	: HIGH MEMORY+1 : OVERLAY ADDRESS LOCATION
12			OFFSETS	FOR FORMAT TRACK TABLE	
15 16 17	000000 000001 000002	FT.BUF FT.HI FT.LOW	Ī	0. 1. 2.	:BUFFER POINTER OFFSET :HI ORDER HEADER OFFSET :LOW ORDER HEADER OFFSET
19 20			OFFSETS	FOR FORMAT TRACK BUFFER	
21 22 23 24	000000	FB.EDC	=	256.	:FIRST DATA WORD OFFSET :EDC WORD OFFSET
25			OFFSETS	FOR READ/WRITE 1/0 CHAIR	N TABLES
18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36	000000 000001 000002 000003 000004 000005 000006	RW.STAT RW.BUF RW.LOW RW.HI RW.CMD RW.SDI RW.ANG	= = = = = = = = = = = = = = = = = = =	0. 1. 2. 3. 4. 5. 6.	STATUS AND NEXT BUFFER POINTER OFFSET POINTER TO DATA BUFFER HI ORDER EXPECTED HEADER LOW ORDER EXPECTED HEADER SDI COMMAND AND HEAD ADDRESS DUMMY SDI CONTROL BLOCK POINTER THETA FROM INDEX
36			CONSTANT	TS FOR READ AND WRITE XF	c's
38 39 40 41 42 43 44 45 46	140000 040000 100000 000000 100000 122400 013400 010000 100000 040000	WSTOP WCONT RSTOP RCONT FSTOP WREAL RREAL ECCFLG EOC BUFFLG		140000 40000 100000 0 100000 122400 13400 10000 100000 40000	: LAST ENTRY IN CHAIN FOR WRITE : WRITE CONTINUE : LAST ENTRY IN CHAIN FOR READ : READ CONTINUE : LAST ENTRY IN CHAIN FOR FORMAT : WRITE REAL TIME ECOMMAND : READ REAL TIME COMMAND : ECC ERROR IN BUFFER BIT : END OF CHAIN : BUFFER FULL OR EMPTY FLAG
50			HEADER (CODES	
48 49 50 51 52 53 54 55 56 57	000000 060000 030000 110000 050000 120000	HD.LBN HD.RBN HD.REV HD.BAD HD.PRV HD.XBN		000000 060000 030000 110000 050000 120000	GOOD LBN GOOD RBN, PERHAPS UNUSED REVECTORED LBN BAD BLOCK PRIMARY REVECTORED BLOCK XBN BLOCK

58 59	140000	HD.DBN	= // ///	140000	;DBN BLOCK
60		:	OFFSETS	FOR DATA BUFFERS	
60 61 62 63 64 65 66 67 68 69 70	000000 000400 000401	BF.ECC BF.ECC	=	0. 256. 257.	:DATA :ERROR DETECTION CODE :LAST 17 ECC RESIDUES
66			BUFFER	AND READ/WRITE CHA	IN LINK SIZES
68 69 70	000401 000415 000007	WAUFLN RBUFLN LINKLN	= = = = = = = = = = = = = = = = = = = =	257. WBUFLN+12. 7.	: WRITE BUFFER SIZE : READ BUFFER SIZE : LINK SIZE

	1		: .	XFC DEFINIT	ION EQUATES	
23 45 67 89 10 11 12 13 14 15 16 17 18 19 20	000000 000001 000002 000003 000004 000005 000006 000007 000010 000011 000012 000013 000014 000015 000016 000017 000020 000020	BREAK FORMAT XREAD XWRITE SEND RCV COMPARE STATUS ECHO DINIT WAITSI UREAD UWRITE ECC MRD MWR CVT EXIT	= 0. = 1. = 2. = 3. = 4. = 5. = 7. = 8. = 10. = 11. = 12. = 13. = 14. = 15. = 16. = 17.		BREAKPOINT XFC CODE FORMAT TRACK XFC CODE READ N SECTORS XFC CODE WRITE N SECTORS XFC CODE SEND SDI COMMAND XFC CODE RECEIVE SDI MESSAGE XFC CODE COMPARE DATA PATTERN TO BUFFER RETURN DRIVE STATUS XFC CODE ECHO DATA TO DRIVE XFC CODE DRIVE INITIALIZE XFC CODE WAIT FOR SECTOR OR INDEX PULSE READ UNIBUS MEMORY XFC CODE WRITE UNIBUS MEMORY XFC CODE SEND BUFFER TO MAINTENANCE READ COMMAND GET BUFFER FROM MAINTENANCE WRITE COMMAND CONVERT TO PHYSICAL ADDRESS XFC CODE TERMINATE DM PROGRAM XFC CODE	
2	2			GET STATUS	OFFSETS	
2222233	890:-2345678901234567	000000 000000 000001 000001 000002 000002 000002 000003	ST.UNT ST.MSK ST.STA ST.MOD ST.ERR ST.CON ST.C ST.RTY	= 0. = 1. = 1. = 2.		:UNIT NUMBER :SUBUNIT MASK :STATUS BYTE :MODE BYTE :ERROR BYTE :CONTROLLER BYTE :C BITS :RETRY COUNT/FAILURE CODE
3	3		:	STATUS BIT	DEFINITIONS	
334444444444444444444444444444444444444	88 9 0 1	000200 000100 000040 000020 000002 000001 000200 000100 000020 000010 002000 001000 001000 000400	ST.OA ST.RR ST.DR ST.SR ST.PS ST.RU ST.FE ST.PE ST.DF ST.WE ST.DF ST.DB ST.DB	= 200 = 100 = 40 = 20 = 2 = 1 = 200 = 100 = 200 = 100 = 400 = 400 = 400	0	ONLINE TO ANOTHER (SET IF DRIVE UNAVAILABLE) READJUSTMENT BIT (SET IF RECALIBRATION REQUIRED) DIAGNOSTIC REQUEST (SET IF DIAGNOSTIC REQUESTED) SPINDLE READY (SET IF SPINDLE READY) PORT SWITCH (SET IF PORT SWITCH IN) RUN/STOP SWITCH (SET IF RUN/STOP SWITCH IN) FATAL ERROR (SET IF FATAL ERROR OCCURRED) RETRIABLE ERROR (SET IF RETRIABLE ERROR OCCURRED) PROTOCOL ERROR (SET IF PROTOCOL ERROR OCCURRED) INITIALIZATION FAILURE (SET IF INIT FAILED) WRITE ENABLE (SET IF WRT ATTEMPTED ON PROT DISK) FORMATTING (SET IF FORMATTING ENABLED) DIAGNOSTIC CYLS (SET IF DIAG CYL ACCESS ENABLED) SECTOR SIZE (SET FOR 576 BYTE SECTORS)

```
GET COMMON CHARACTERISTICS OFFSETS
                                             SHRTTO
                                                                                               :SHORT TIMEOUT <3:0>
             000000
             000000
                                            SDIVER
                                                                                               :SDI VERSION <7:4>
             000000
                                                                                               :TRANSFER RATE <15:0>
                                            XFERRT
                                                                                               ;LONG TIMEOUT <3:0>
             000001
                                            LONGTO
                                                                                               :RETRIES <7:4>
:F/RCT COPIES <11:8>
:SECTOR SIZE <15:15>
:ERROR RETRY LEVELS <7:0>
             000001
000001
000001
                                            RETS
10
                                            RCTCPS
                                            SS
                                            ERLEV
             200000
                                                                                               ;ECC THRESHOLD <15:8>
;MICROCODE REVISION NUMBER <7:0>
;HARDWARE REVISION NUMBEP <15:8>
             200000
                                            ECCRSH
                                                     =
000003
                                            MICREV
                                                     =
             000003
                                            HRDREV
                                                      =
                                                                                               ;UNIQUE DRIVE ID <47:0>
             000004
                                            DRVID
                                                     =
                                                                                               ;DRIVE TYPE IDENTIFIER <7:0>
             000007
                                            DRTYPE
             000007
                                            REVS
                                                                                               :REVS/SECOND <15:8>
                                                      GET SUBUNIT CHARACTERISTICS OFFSETS
                                            :THESE OFFSETS ARE- CURRENTLY GIVEN AS FOLLOWING THE COMMON CHARACTERISTICS
             000013
                                            SUB
                                                                                               :OFFSET TO PUT SUBUNIT AFTER COMMON:
                                                                                               : NUMBER OF CYLINDERS IN LBN AREA <31:0>
             000000
                                            LBNCYL
                                                     =
             000001
000002
000002
000002
                                                                                               :HI ORDER CYLINDER BITS <15:12>
                                            HICYL
                                                                                               ; GROUPS PER CYLINDER BITS <15; GROUPS PER CYLINDER <7:0>
; HI STARTING LBN <11:8>
; HI STARTING XBN <15:12>
; TRACKS PER GROUP <7:0>
; HI STARTING RBN <11:8>
; HI STARTING DBN <15:12>
                                            GRPCYL
                                            HILBN
                                            HIXBN
              000003
                                            TRKGRP
              000003
                                            HIRBN
                                                     =
              000003
                                            HIDBN
                                                      =
              000004
                                            RBNTRK =
                                                                                               ; RBNS PER TRACK <6:0>
              000004
                                                                                               : REMOVABLE MEDIA <7:7> 1=REMOVEABLE
                                            RM
                                                                                               ; DATA PREAMBLE SIZE IN WORDS <7:0>
              000005
                                            DATPRE
                                                     =
                                                                                               ; HEADER PREAMBLE SIZE IN WORDS <15:8>
                                            HDRPRE
MEDTYP
              000005
                                                     =
                                                                6.89.
                                                                                               :MEDIA TYPE <31:0>
              000006
                                                                                               :FCT COPY SIZE <15:0>
:LBNS PER TRACK <7:0>
              000010
                                            FCTSIZ =
              000011
                                            LBNTRK =
                                                                                               :GROUP OFFSET (SECTORS) <15:8>
:LBNS IN HOST AREA <31:0>
              000011
                                            GRPOFF
                                                      =
              000012
                                            LBNHST
                                                                12.
                                                                                               ;RCT COPY SIZE <15:0>
              000014
                                            RCTCSZ =
                                                                                               :CYLS IN XBN AREA <15:0>
:CYLS IN DBN AREA <15:8>
              000021
                                            XBNCYL
                                                     =
              000022
                                            DBNCYL =
                                                                 18.
                                                      UNIT CODES
             000001
                                            UNITO
                                                                                               :UNIT ZERO CODE
                                                      =
              000002
                                            UNIT1
                                                                                               :UNIT ONE CODE
                                                      =
             000004
                                            UNIT2
                                                      =
                                                                                               :UNIT TWO CODE
              000010
                                            UNIT3
                                                                                               :UNIT THREE CODE
                                                      BIT MASK DEFINITIONS
             177400
                                                                 177400
                                            HIBYTE
                                                                                               :HIGH BYTE MASK
             000377
                                                                 000377
                                            LOBYTE
                                                                                               :LOW BYTE MASK
                                                     =
             007777
                                            HBHINB
                                                                                               ; HI BYTE, HI NIBBLE MASK
                                                     =
                                                                170377
             170377
                                                                                               HI BYTE, LO NIBBLE MASK
                                            HBLONB =
```

UDATS DISK FUNCTIONAL	MACRO	x04.00	9-JUL-81	01:13:55	PAGE	5-1
UDA DM PROGRAM PARAME	TERS					

58 59	177417 177760	LBHINB = 177417 LBLONB = 177760	
58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73	000001 000002 000004	TIMEOUT = 1. HEADER = 2. REVECT = 4.	
65 66 67	000002 000004 000010	WRONG = 2. FRAME = 4. CHECK = 8.	
69 70 71	000001 000002	TOOBIG = 1. LOW = 2.	
72 73 74 75	000001 000002	EARGE = 1. OVERFL = 2.	

:LO BYTE, H! NIBBLE MASK :LO BYTE, LO NIBBLE MASK

;DRIVE TIMEOUT CODE ;HEADER COMPARE FAILURE CODE ;REVECTOR NEEDED CODE

FIRST WORD NOT START FRAME CODE FRAMING ERROR CODE CHECKSUM ERROR CODE

: NUMBER OF WORDS EXCEEDS 7064 ; DM BUFFER ADDRESS IS LESS THAN 714

:BLOCK NUMBER TOO LARGE ;SECTOR NUMBER LARGER THAN 16 BITS

1		:MAINTANE	NCE READ/WRITE	REQUEST NUMBER	S
23456789101121314516718	000000 000001 000002 000003 000004 000005 000006 000007 000010 000011 000012 000013 000014 000015	11MSIZ = 12DLL = 12CMD = 14MPRM = 14BB1 = 14BB2 = 14SOFT = 14SEEK = 14MXFR = UTOIST = ERRMES = ERRMC = MESSAG = DONE = :	0. 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13.		GET FREE MEMORY PARAMETERS DOWNLINE LOAD DRIVE DIAGNOSTIC MANUAL INTERVENTION TEST 2 PROTOCOL GET MASTER PARAMETERS FROM SW QUESTIONS GET UNIT PARAMETERS FROM HW QUESTIONS GET BAD BLOCKS (1 THRU 14) GET REST OF BAD BLOCKS (15 AND 16) ADD TO SOFT ERROR AND ECC COUNT ADD TO SEEK COUNT ADD TO MEGABITS READ AND WRITTEN GET UNITS TO TEST PRINT ERROR MESSAGE TEST 4 ERROR REPORTING INFORMATION MESSAGE MARK DM PROGRAM AS NO LONGER RUNNING
19		0	THER BIT DEFIN	ITIIONS	
20 21 22 23 24 25 26	000001 000002 000004 000100 000400 100000	RCVRDY = ATIN = RCVERR = AVAIL = XMTERR = RWRDY =	100		RECIEVER READY 1 = READY ATTENTION BIT FOR RETURN DRIVE SIGNALS XFC RECIEVER ERROR AVAILABLE 1 = AVAILABLE TRANSMIT ERROR IF SET, UDA IS ABLE TO READ AND/OR WRITE TO DRIVE
28		: SI	DI COMMANDS AN	D RESPONSES	
18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 33 34 35 36 37 38 38 40 40 40 40 40 40 40 40 40 40 40 40 40	000204 000006 000201 000213 000014 000005 000207 000210 000216 000012 000176 000175 000170 000167 000366 000350	DISCON = ERECOV = CHGMOD = DRVONL = DRVCLR = GETCHR = GETSUB = IRECLB = INSEEK = COMPLT = UNSSUC = CHRRES = SBCRES = STSRES = ECHOC =	204 6 201 213 14 5 207 210 11 216 12 176 175 170 167 366 350		DISCONNECT DRIVE ERROR RECOVERY CHANGE MODE DRIVE ONLINE DRIVE RUN DRIVE CLEAR OPCODE GET CHARACTERISTICS GET SUBUNIT CHARACTERISTICS RECALIBRATE INITIATE SEEK SUCCESSFUL COMPLETION UNSUCCESSFUL COMPLETION GET CHARACTERISTICS RESPONSE GET SUBUNIT CHARACTERISTICS RESPONSE GET SUBUNIT CHARACTERISTICS RESPONSE GET SUBUNIT CHARACTERISTICS RESPONSE GET STATUS RESPONSE
48		: E!	RROR CODES		
50 51 52 53	000000 000400 001000 001400	FTLSYS = FTLDEV = ERHARD = ERSOFT =	0 400 1000 1400		: SYSTEM FATAL ERROR : DEVICE FATAL : HARD ERROR : SOFT ERROR

31 4 3/20	I IC IN ON MI TON			
1.		.SBTTL TEST	4 SPECIFIC INFORMATION	
3		TES	4 SPECIFIC INFORMATION	
5				
6		: CONS	STANTS	
10 11 12 13 14 15	000377 000105 000061 007717	SCTWRD = INTEDC = TLEN.U = FIRSTU =	255. 69. U.LGRP+1 HIMEM-TLEN.U	NUMBER OF WORDS IN SECTOR TO FILL INITIAL EDC VALUE UNIT PARAMETER LENGTH LOCATION OF FIRST UNIT PARAMETER BLOCK
13		: UNI	PARAMETER OFFSETS	
15 15 167 189 190 122 123 123 123 123 123 123 123 123 123	000000 000005 000006 000007 000010 000011 000012 000015 000016 000017 000020 000021 000022 000023 000024 000025 000026 000027 000031 000032 000031 000032 000031 000035 000035 000044 000045 000045 000046 000047 000046 000047 000055 000056 000060	U.NEXT = U.SUBP = U.NEWTO = U.SEEK = U.PCTG = U.PCTG = U.PCTG = U.MSEC = U.MSEC = U.MSEC = U.MASK = U.	O. U.NEXT+1 U.SUBP+4 U.TIMO+1 U.RWTO+1 U.SEEK+1 U.NFUN+1 U.PAT+1 U.CCNT+2 U.PCTG+1 U.CTRK+1 U.NSEC+1 U.MSEC+1 U.MSEC+1 U.MSEC+1 U.MASK+1 U.WRIT+1 U.ELEV+1 U.RTRY+1 U.RTRY+1 U.RTRY+1 U.BDIS+1 U.SDIS+1 U.SDIS+1 U.SDIS+1 U.SDIS+1 U.SDIS+1 U.SDIS+1 U.RDRT+1 U.CCOP+1	: POINTER TO NEXT UNIT (RING LINKED LIST) : 4 WORDS OF SUBUNIT PARAMETER POINTERS : AREA TO STORE VARIOUS TIMEOUT VALUES : READ/WRITE TIMEOUT AREA : NUMBER OF SEEKS ISSUED : NEXT FUNCTION ADDRESS (FOR DEFERRED (ALLS) : PATTERN NUMBER TO WRITE : CURRENT COUNT OF T/G LOOPS : POINTER TO CURRENT TRACK OR GROUP : TRACK COUNT FOR GROUP OPERATIONS : NUMBER OF SECTORS R/W THIS TRY : NUMBER OF SECTORS TO BE R/W : NUMBER OF SECTORS TO BE R/W : NUMBER OF SECTORS TO BE R/W : NUMBER OF SECTORS R/W SO FAR : UNIT MASK FOR XFC CALLS (0001 - 1000) : WRITE PROTECTION STATUS : CURRENT ERROR RECOVERY LEVEL : MAXIMUM NUMBER OF ERROR RECOVERY LEVELS : ECC THRESHOLD : SDI SHORT TIMEOUT : SDI LONG TIMEOUT : SDI LONG TIMEOUT : MASK TO WRITE PROTECT READ-ONLY DRIVES : UNIT PARAMETER WORD : SUBUNIT OFFSET (0 - 3) : MASTER L/DBN : CURRENT L/DBN FOR START OF CHAIN : RBN TO BE READ/WRITTEN IF LBN REVECTORED : NUMBER OF RCT COPIES ON EACH SUBUNIT : CURRENT RCT COPY THAT WE'RE WORKING ON : ERROR (IF ANY) ON THE LAST R/W : ERROR THAT OCCURRED BEFOR THE REVECTOR OPERATION : 4 WORDS THAT HOLD THE SUBUNIT LOGICAL NUMBERS : CURRENT CYLINDER : SUBUNIT PARAMETER WORD
56 57	000001 000003	S.SDCL = S.PAT =	S.PARM+1 S.SDCL+2	: STARTING DIAGNOSTIC CYLINDER : PATTERN TO USE FOR WRITES

58 59 60 61 62 63 64	000004 000005 000006 000007 000010 000011	S.SCHR S.MEGR S.MEGW S.BADP	= S.SCHR+1 = S.MEGR+1	: NUMBER OF SECTORS IN ONE TRACK : POINTER TO SUBUNIT CHARACTERISTICS : SECTORS READ (UP TO 245) : SECTORS WRITTEN (UP TO 245) : POINTER TO BAD BLOCK AREA : START OF BEGIN/END SETS
65 66 67			IF TRACK/GROUP LIMITS ARE OF FOLLOWING FIELDS ADDED TO	GIVEN, THE SUBUNIT PARAMETERS HAVE THE
68 69 70	000011 000013 000015	S.MCNT S.TGOF S.TGSS	= S.BESS = S.MCNT+2 = S.TGOF+2	: MAXIMUM TRACK/GROUP COUNT : ORIGINAL TRACK/GROUP OFFSET : START OF TRACK/GROUP SETS

						[18] [18] [18] [18] [18] [18] [18] [18]
2			DUMMY !	SDI CONTROL BLOCK	OFFSETS	
56	000001 000002	D.LIMT D.SCHR		1 2		: DUMMY SDI SEARCH LIMIT : DUMMY POINTER TO SUBUNIT CHAR-5
8			UNIT P	ARAMETER BITS (U.P.	ARM(R5))	
10 11 12 13 14 15 16 17 18 19 20 21 22 23	100000 040000 020000 010000 004000 002000 001000 000400 000200 000100 000040 000020 000004	DROP INITW RESEEK DIREC NEWSUB SEKINP FTIME REVEC RBNBN REDWRT REVINP DATERR RETRY RCLB		100000 40000 20000 10000 4000 2000 1000 400 200 100 40 200		DROP BIT (SET IF UNIT OR SUBUNIT DROPPED) INITIAL WRITE (SET IF INITIAL WRITE IN PROG) IF 1, INDICATES THAT A SEEK IS NECESSARY DIRECTION (SET IF SEQUENTIAL ACCESSES DECREASING) SET IF SEQUENTIAL SEEKS MOVED TO NEW SUBUNIT SEEK IN PROGRESS - SET IF TRUE FIRST TIME FLAG - SET FOR INIT CODE REVECTOR BIT (SET IF BLOCK REVECTORED) SEE IF WORKING ON RBN REDWRT (READ OR WRITE IN PROGRESS SET IF WRITE) REVECTORING OPERATION IN PROGRESS DATA ERROR IF SET IF CLEAR, START RETRIES AT ZERO RECALIBRATION BIT (SET IF RECALIBRATE JUST DONE)
25			SUBUNI	T PARAMETER BITS (S.PARM(R	4))
19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41	020000 010000 004000 002000 001000 000200	DCYLS ECCCHK RONLY WONLY RTRIES ONLYCL	= = = = = = = = = = = = = = = = = = = =	20000 10000 4000 2000 1000 200		; DIAGNOSTIC CYLINDER FLAG (SET IF DBNS) ; 1 IF ECC CORRECTION ALLOWED MASTER BITS ; READ ONLY (SET IF READ ONLY) ; WRITE ONLY (SET IF WRITE ONLY) ; 1 IF RETRIES ALLOWED ; SET IF ONLY CYLINDERS SPECIFIED ; USED DURING SETUP ONLY
34 35 36 37	000100 000040 000020 000010	SEQSEK BEUSED TRACKS WCHECK	=	100 40 20 10	UCHECK	; SEQUENTIAL SEEK (START UP TESTING ONLY) ; BEGIN/END SETS (USED IF SET) ; TRACKS OR GROUPS (TRACK IF SET) ; WRITE CHECK BIT (IF SET, WRITE CHECK WILL BE DONE)
39 40	000004 000002	WCHKAL DATCMP	=	4 2		IS ALSO USED FOR THE UNIT PARAMETERS SET IF WRITE CHECK ALWAYS TO BE DONE DATA COMPARE (SET IF DATA COMPARE TO BE DONE) IS ALSO USED FOR THE UNIT PARAMETERS
42	000001	DCMPAL	=	1		; SET IF DATA COMPARE ALWAYS TO BE DONE

```
SBITL MACRO DEFINITIONS

DIAGNOSTIC MACRO FOR TEST4 OVERLAYS

MACRO DIAG$$

TST $$DIAG$$

BEQ .+6

MOV #60000,R0

MOV RO,@$$DIAG$

BR .+1

SDIAG$ = $DIAG$ + 1

ENDM
```

1 2 3 4 5 6 7 8 9 10 11

MESSAGE CONTROL TABLE MACRO

.MACRO MSG CMDBUF, CMDSZ, RPLBUF, RPLSZ, SUCCOM
.WORD CMDBUF
.WORD CMDSZ ;SIZE OF COMMAND IN BYTES

.WORD RPLBUF :ADDRESS OF REPLY
.WORD RPLSZ :SIZE OF REPLY IN WORDS
.IF NB NUMBER

. WORD SUCCOM ; SUCCESSFUL COMPLETION CODE

.ENDC

1.,

n

N 14 UDAT3 DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE 11 MACRO DEFINITIONS SEQ 0181 .MACRO BCS LAB .. 1234 BCC .+2 LAB.. .ENDM

```
: ERROR MACROS
                                        THESE MACROS ARE CALLED TO REPORT ERRORS TO THE HOST PROGRAM.
                                        THE MACRO NAMES ARE : ERRSF, ERRDF, ERRHRD, ERRSFT. EACH RESULTS IN THE HOST BEING REQUESTED TO REPORT THE ERROR.
                                         : ARGUMENTS:
                                                             (MS$) MESSAGE POINTER
                                                             (P1$) PARAMETER #1
                                                             (P2$) PARAMETER #2
                                                             (P3$) PARAMETER #3
                                                             (P4$) PARAMETER #4
(P5$) PARAMETER #5
                                                             (P6$) PARAMETER #6
                                                          8 (P7$) PARAMETER #7
                                                           9 (P8$) PARAMETER #8
                                        THE MESSAGE POINTER MUST POINT TO AN ADDRESS IN THE OVERLAY 'MS' IMMEDIATELY
                                        : FOLLOWING THE MAIN CODE. ANY ADDRESS MODE MAY BE USED (E.G. #MS1, @R2).
                                        THE ADDRESS MUST CONTAIN AN ASCII FORMAT STRING TO DETERMINE THE MESSAGE
                                        : TO PRINT.
                                        THE PARAMETER ARGUMENTS ARE OPTIONAL. THEY SHOULD BE SUPPLIED ONLY WHEN THERE IS DATA TO BE PASSED TO THE HOST THAT WILL BE USED IN PRINTING THE MESSAGE. THESE PARAMETER ARGUMENTS ARE THE ADDRESS OF DATA TO BE PASSED
                                        :USING ANY ADDRESSING MODE DESIRED.
                                        :ALL REGISTERS ARE RETURNED UNCHANGED. IT SHOULD BE NOTED THAT ARGUMENTS
                                        CONTAINING SOMETHING OTHER THAN A REGISTER NAME (E.G. #100 OR MEMADR)
                                        :ASSEMBLE TO INSTRUCTIONS THAT SAVE AND RESTORE A REGISTER ON THE STACK.
                                                  .MACRO ERRSF MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$
                                                  .NARG ARGS$
                                                  RADIX 10
                                                 ERROR$ 0,MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$,\ERRN
                                                  . ENDM
                                                  .MACRO ERROF MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$
                                                  .NARG ARGS$
                                                  .RADIX 10
                                                 ERROR$ 1,MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$,\ERRN
                                                  . ENDM
                                                  .MACRO ERRHRD MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$
                                                  .NLIST
                                                  .NARG ARGS$
                                                  RADIX 10
                                                 ERROR$ 2,MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$,\ERRN
                                                 .LIST
                                                  . ENDM
                                                  .MACRO ERRSFT MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$
                                                  .NARG ARGS$
                                                  RADIX 10
                                                 ERROR$ 3,MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$,\ERRN
                                                  . ENDM
```

```
:THE FOLLOWING MACRO ACTUALLY PROCESSES THE ERROR CALL TO THE HOST PROGRAM
        .MACRO ERROR$ ET$,MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$,ERRN$
          .RADIX 8
          PRMS=ARGS$-1
          . IF LT, <PRMS>
             .ERROR; NOT ENOUGH ARGUMENTS IN ERROR CALL
           .ENDC
          REGS$=-1
          .IIF GE. <PRMS-8.>, PARGS. P8$
          .IIF GE, <PRMS-7.>, PARGS. P7$
          .IIF GE, <PRMS-6.>, PARGS. P6$
          .IIF GE, <PRMS-5.>, PARGS. P5$
          .IIF GE, <PRMS-4.>, PARGS. P4$
          .IIF GE, <PRMS-3.>, PARGS. P3$
          .IIF GE. <PRMS-2.>, PARGS. P2$
          .IIF GE. <PRMS-1.>, PARGS. P1$
          . IF GE REGS$
            RSTR$ \REGS$
          .ENDC
          .RADIX 10
          .LIST
                                                              CALL RERROR
                                                                              :ERROR # ERRNS'.
          .NLIST
          .RADIX 8
          .LIST
                                                              .WORD <PRMS*2000>+<ET$*400>+ERRN
                                                              . WORD MS$
          .NLIST
          ERRN=ERRN+1
        - ENDM
        .MACRO PARGS . . ADDR$
          .NTYPE PTYPE$, ADDR$
          .IF EQ. <PTYPE$870>
            .IIF EQ. <PTYPE$&7>-REGS$, RSTR$ \REGS$
            .LIST
                                                             MOV ADDRS, - (SP)
             .NLIST
            .IF EQ, <PTYPE$87>-1
                                          ; PICK A REGISTER TO USE
              REGU$=2
                                          :SELECT R2 IF R1 IS USED IN PARAMETER FETCH
            . IFF
              REGUS=1
                                          :OTHERWISE USE R1
            .ENDC
            . IF NE, < REGUS-REGS$>
                                          ; IF REGISTER NOT ALREADY SAVED
              . IF GE . REGS$
                RSTR$ \REGS$
                                          RESTORE CURRENT SAVED REGISTER
               .ENDC
              SAVR$ \REGU$
                                          : THEN SAVE SELECTED REGISTER
             .ENDC
            GETP$ \REGS$, ADDR$
           .ENDC
        . ENDM
```

UDAT3	DISK	FUNCTIONAL	MACRO	x04.00	9-JUL-81	01:13:55	PAGE	15
MACRO	DEFT	SMOITIN						

4567891011231451671890 .ENDM .ENDM

.MACRO SAVR\$ REGN

.NLIST REGS\$=REGN

.MACRO RSTR\$ REGN

.NLIST REGS\$=-1

.MACRO GETP\$ REGN, ADDR\$

.NLIST

MOV R'REGN, SAVREG

MOV SAVREG, R'REGN

MOV ADDR\$, R'REGN MOV R'REGN, - (SP)

. 2	1	PRIMARY	ERROR REPORTING (TEST 4)		
3	:	.MACRO	SOFTER NUM, ARGS		
6		ERROR	#ERSOFT, NUM, <args></args>	MOV	#ERRMES,R2
8		.ENDM		MOV	R2,OUT.RQ
10 11		.MACRO	REPSFT SFTFLG, ECCFG NB, SFTFLG		
12		.IFF		MOV	#1,0UT.02
14				CLR	OUT.02
16		.ENDC	NB,ECCFG		
17		.IFF		MOV	#1,0UT.03
19 20		.ENDC		CLR	OUT.03
21 22 23 24 25 26 27 28		· END		PUSH ADD ADD MOV MOV CALL POP	RO #U.SNUM,RO R5,RO U.SUBU(R5),RO (RO),OUT.O1 #T4SOFT,RO HOSTRQ RO
29		.ENDM			
31 32 33		.MACRO ERROR	HARDER NUM, ARGS #ERHARD, NUM, <args></args>	MOV	#ERRMC,R2
34 35		.ENDM		MOV	R2,OUT.RQ
36 37 38 39		.MACRO ERROR	DEVFTL NUM, ARGS #FTLDEV, NUM, <args></args>	MOV	#ERRMC,R2
40 41		.ENDM		MOV	R2.OUT.RQ
42 43		.MACRO	SYSETL NUM, ARGS		
45 46		ERROR	#FTLSYS, NUM, <args></args>	MOV MOV	#ERRMC,R2 R2,OUT.RQ
47		.ENDM		7101	KE,001.KG
8 90 111 121 131 145 161 171 188 190 221 223 224 225 227 229 331 335 337 339 441 423 445 447 449 551 552 553 554 555 557		.MACRO .RADIX NUMPTR MOVMSG .IF .IRP MOVMSG NUMPTR .ENDR	ERROR TYPE, NUM, ARGS 10 = 5 #ER'NUM, 4 NB, <args> X, <args> X, \NUMPTR = NUMPTR + 1</args></args>		

58		.ENDC		MOV	MAILIM OUT 02	
60 61				BIS	#NUM.OUT.02 TYPE.OUT.02 #.,OUT.01	
62 63		.RADIX				
65 66		.MACRO .RADIX	CERROR STNUM, ARGS			
67 68	NUMPTR	- IRP	STNUM			
10 11 12	NUMPTR	MOVMSG = .ENDR .RADIX	X. <args> X.\NUMPTR NUMPTR + 1</args>			
73 74 75		.ENDM .MACRO	ERRORC ARGS			
6 17 18	NUMPTR	.RADIX .IRP MOVMSG	10 X, <args> X,\NUMPTR NUMPTR + 1</args>			
58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91	NUMPIR	ENDR RADIX ENDM	NUMPIR + I			
83 84		.MACRO	MOVMSG ARG, INDX			
86 87		.IF	LT,INDX-10	MOV	ARG,OUT.0'INDX	
38 39		.IFF		MOV	ARG, OUT. INDX	
		.ENDC				
92 93 94 95 96 97 98 99 00 01 02 03 04 05 06 07 08 09 10		.MACRO .IF NDERR	ENDERR POS NB.POS POS			
96 97 98 99		.IFF NDERR .ENDC .ENDM	NUMPTR			
00 01 02		.MACRO	NDERR POS NE,POS			
03 04		.IFF	WE , 1 03	BIS	#POS,ERRPOS	: SET THE POSITION
05 06 07		.ENDC		CLR	ERRPOS	; CLEAR THE POSITION
08 09	÷		REPORTING MACRO			
10 11	1					
12		.RADIX	10			
12 13 14		.RADIX NUMPTR MOVMSG	MSSG NUM, ARGS 10 = 3 #MS'NUM, 2			

```
UDATS DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE 16-2 MACRO DEFINITIONS
```


ACRO DEFINITIONS		
115 116 117 118 119 120 121 122	.IF .IRP MOVMSG NUMPTR .ENDR .ENDC	NB, <args> X, <args> X, \NUMPIR = NUMPIR + 1</args></args>
116 117 118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135	.RADIX .ENDM	
136 137 138 139 140 141	.MACRO .RADIX NUMPIR MOVMSG .IF .IRP MOVMSG NUMPIR .ENDR .ENDC	MSSGE NUM, ARGS 10 = 3 #'NUM, 2 NB, <args> X, <args> X, \NUMPTR = NUMPTR + 1</args></args>
143 144 145 146 147 148	.RADIX	

PUSH <RO,R1>
MOV #MESSAG,R0
CALL HOSTRQ
POP <R1,R0>

<R0,R1>
#U.SNUM,R1
R5,R1
U.SUBU(R5),R1
(R1),OUT.01
#MESSAG,R0
HOSTRQ
<R1,R0>

PUSH MOV ADD ADD MOV MOV

CALL

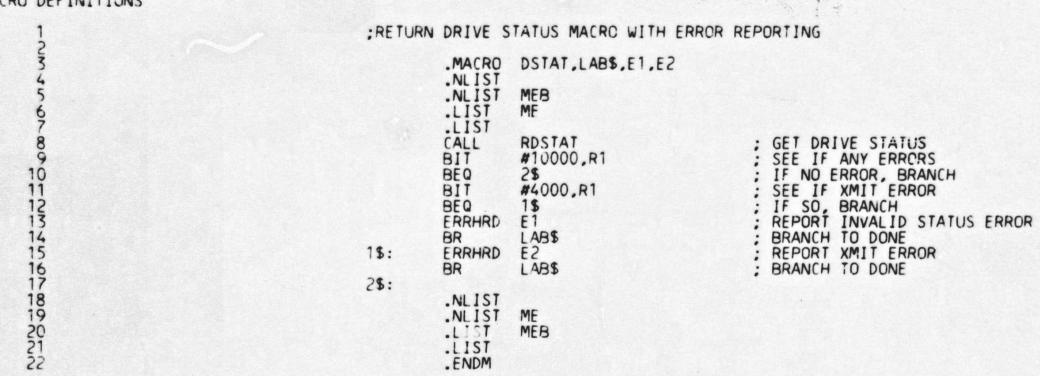


XOR THE CONTENTS OF TWO REGISTERS

.MACRO RXOR REG1,REG2
MOV REG2,-(SP) REG2,-(SP)
REG1,REG2
(SP)+,REG1
REG1,REG2 BIC BIC

: SAVE REGISTER REG2 : CLEAR COORESPONDING BITS IN REG2 : CLEAR COORESPONDING BITS IN REG1 : OR WHAT'S LEFT

BIS .ENDM

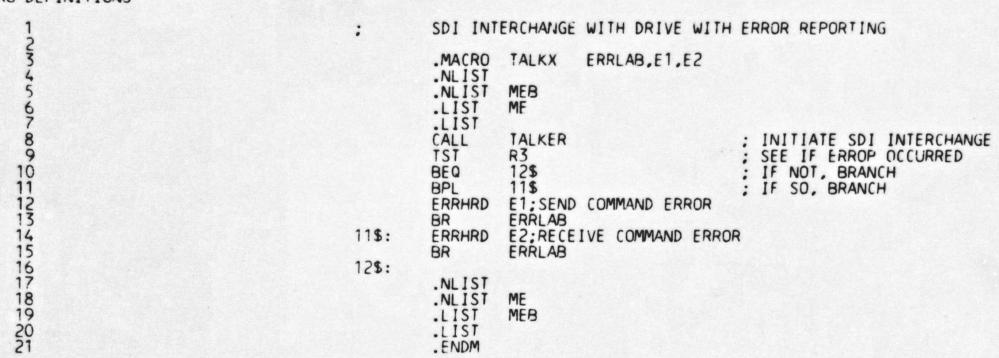

SBITL START OF TEST CODE
THE FOLLOWING IS FOR DEBUG PURPOSES ONLY. CAN BE NOP OR BREAKPOINT.

CLR RO

CR CHANGE TO BREAKPOINT FOR DEBUG

CR

2 000720			.SBTTL RDSTAT:	RDSTAT .	- GET DRIVE'S REAL TIME	DR	IVE STATE
4 5				DRIVE S	TATUS D IN DM REGISTER 1		
7 000720 000720 000721	100463			PUSH	<r3,r0></r3,r0>	:	SAVE R3 AND R0 MOV R3,-(SP) MOV R0,-(SP)
8 000722 9 000724	104203	000003	STATLP:	MOV XFC	#3,R3 STATUS	:	ALLOW ONLY 3 ERRORS GET DRIVE'S STATUS
10 000725 11 000727 12 000731	103201 102201 010737	014000 000400		BIC BIT BEQ	#14000,R1 #XMTERR,R1 STATOK		CLEAR ERROR PASSING BITS CHECK XMIT ERRORS IF NO ERRORS, BRANCH
13 000732 14 000733	117403	010000		DE C BNE	R3 STATLP		DECREMENT TRANSMIT ERROR COUNT IF ERROR COUNT INCOMPLETE, BRANCH
15 000734 16 000736	104201	010000		MOV BR	#10000,R1 STATEX	:	FLAG AS TRANSMIT ERROR BRANCH
17 000737 18 000741 19 000742	102201 050746 117403	000004	STATOK:	BIT BNE DEC	#RCVERR,R1 STATEX R3	-	RECIEVER ERRORS IF VALID, BRANCH DECREMENT ERROR COUNT
20 000743 21 000744 22 000746	050724 104201	014000	STATEX:	BNE MOV POP	STATLP #14000,R1 <r0,r3></r0,r3>		FLAG AS INVALID STATUS ERROR RESTORE RO, R3
000746 000747	104267 104263						MOV (SP)+,R0 MOV (SP)+,R3
23 000750	000000			RETURN		:	RETURN TO CALLING MODULE

```
.SBTTL HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED, ETC.
   000751
                                       HOSTRQ:
                                       : SEND REQUEST BUFFER TO HOST AND WAIT FOR RESPONSE.
                                       : CLEAR ARGUMENT AREA OF OUT BUFFER IN PREPARATION
                                       : FOR NEXT HOSTRO CALL.
                                       : INPUTS:
                                               RO - HOST REQUEST NUMBER
10
                                               OUT BUFFER LOADED WITH DATA
11
   000751
                                               PUSH < RO . R1 . R2>
   000751
                                                                                                             MOV RO,-(SP)
MOV R1,-(SP)
MOV R2,-(SP)
            100467
   000752
            100461
   000753
            100462
13 000754
            104070
                     001006
                                               MOV RO, OUT. RQ
                                                                                   STORE REQUEST NUMBER IN BUFFER
            104207
14 000756
                     001006
                                      SNDAGN: MOV #OUT.RQ.RO
                                                                                   : SEND BUFFER TO HOST
15 000760
                     000036
                                               MOV #BUFSIZ_R1
16 000762
            060016
                                               XFC MRD
            115001
   000763
17
                                               TST R1
                                                                                   : CHECK FOR ERROR
18 000764
            050756
                                               BNE SNDAGN
                                                                                   : IF ERROR, TRY AGAIN
   000765
            104207
104201
19
                     001044
                                               MOV #IN.RQ.RO
                                                                                   ; WAIT FOR RESPONSE FROM HOST
   000767
20
21
22
23
24
25
26
27
                    000036
                                               MOV #BUFSIZ,R1
   000771
            060017
                                               XFC MWR
   000772
            104207
                     001007
                                               MOV #OUT.01.RO
                                                                                   CLEAR ARGUMENT WORDS IN BUFFER
   000774
            104201
                                               MOV #OUT.29-OUT.01,R1
                     000034
   000776
            114002
                                               CLR R2
                                      CLRBUF: MOV R2, (R0)+
  000777
            100272
  001000
           117401
                                               DEC R1
   001001
           030777
                                               BPL CLRBUF
28 001002
                                               POP <R2.R1.R0>
           104262 104261
   001002
                                                                                                             MOV (SP)+, R2
   001003
                                                                                                             MOV (SP)+,R1
           104267
   001004
                                                                                                             MOV (SP)+, RO
29 001005
           000000
                                               RETURN
```

```
STORAGE AREA FOR MAINTENANCE WRITE AND READ BUFFERS
OUT BUFFER - DATA TO SEND TO HOST
                      ; IN BUFFER - DATA RECEIVED FROM HOST
   36
37
                                                                                                               ## HOST REQUEST CODE (ECHO)

## DATA ARGUMENT 1

## DATA ARGUMENT 2

## DATA ARGUMENT 3

## DATA ARGUMENT 5

## DATA ARGUMENT 5

## DATA ARGUMENT 7

## DATA ARGUMENT 7

## DATA ARGUMENT 8

## DATA ARGUMENT 9

## DATA ARGUMENT 10

## DATA ARGUMENT 11

## DATA ARGUMENT 12

## DATA ARGUMENT 12

## DATA ARGUMENT 13

## DATA ARGUMENT 15

## DATA ARGUMENT 16

## DATA ARGUMENT 17

## DATA ARGUMENT 18

## DATA ARGUMENT 19
37

38 001044

39 001045

40 001046

41 001047

42 001050

43 001051

44 001052

45 001053

46 001054

47 001055

48 001056

49 001057

50 001060

51 001061

52 001062

53 001063

54 001065

56 001066

57 001067
```

UDAT3 DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE 23-1 HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED,

58 001070 000000 59 001071 000000 60 001072 000000 61 001073 000000 62 001074 000000 63 001075 000000 64 001076 000000 65 001077 000000 66 001100 000000 67 001101 000000 68 000036	IN.20: .WORD 0 IN.21: .WORD 0 IN.22: .WORD 0 IN.23: .WORD 0 IN.24: .WORD 0 IN.25: .WORD 0 IN.26: .WORD 0 IN.26: .WORD 0 IN.27: .WORD 0 IN.28: .WORD 0 IN.29: .WORD 0 BUFSIZ = IN.RQ	;DATA ARGUMENT 20 ;DATA ARGUMENT 21 ;DATA ARGUMENT 22 ;DATA ARGUMENT 23 ;DATA ARGUMENT 24 ;DATA ARGUMENT 25 ;DATA ARGUMENT 26 ;DATA ARGUMENT 27 ;DATA ARGUMENT 28 ;DATA ARGUMENT 29 ;SIZE OF BUFFER
---	---	---

```
.IF
                                                                                         NE. TEST4
                                                                             .NLIST
                                                                             .IFF
                                                                             TALKER SENDS AND RECEIVES AN SDI INTERCHANGE
                                                                : INPUTS:
                                                                             R2 - SDI INTERCONNECT
R3 - POINTER TO COMMAND TABLE CONTAINING APPROPRIATE COMMAND
                                                                             SDILTO/SDISTO SDI LONG AND SHORT TIMEOUTS, RESPECTIVELY
                                                                :OUTPUTS:
                                                                            RO - RETURN OP CODE FROM UNIT
R3 - ERROR CODE - 0 = NO ERROR, 1 = RECEIVE ERROR, 100001 = SEND ERROR
   12
   14
   15 001102
                                                               TALKER: PUSH
                                                                                          <R1.R4>
                                                                                                                      : SAVE REGISTERS
        001102
                     100461
                                                                                                                                                                             MOV R1,-(SP)
        001103
                     100464
                                                                                                                                                                             MOV R4, - (SP)
                     104237
104231
060004
                                                                                                                      ; SET ADR OF SDI COMMAND BUFFER
   16 001104
17 001105
                                                                             MOV
                                                                                           (R3) + .R0
                                                                             MOV
                                                                                           (R3)+,R1
                                                                                                                      : SET BUFFER LENGTH
                                                                                                                     : SET BUFFER LENGTH
: SEND COMMAND
: DID UNIT ACCEPT COMMAND
: IF SO, BRANCH
: FLAG AS SEND ERROR
: BRANCH TO EXIT
: SEE IF LONG TIMEOUT TO BE USED
: IF SO, BRANCH
: SET UP SHORT TIMEOUT
: BRANCH
: SET UP LONG TIMEOUT
: SET DATA BUFFER ADDRESS
                                                                                          SEND
R1
   18 001106
                                                                             XFC
  19 001107
20 001110
21 001111
22 001113
23 001114
24 001116
25 001117
26 001121
27 001122
28 001124
29 001125
30 001127
31 001130
32 001131
33 001132
34 001134
35 001135
36 001136
37 001137
38 001140
39 001141
40 001143
   19 001107
                      115001
                                                                             TST
                      011114
                                                                             BEQ
                                                                                          TALK1A
                     104203
001145
106203
                                                                                          #100001,R3
                                   100001
                                                                             MOV
                                                                                          TALK2B
#LONG,R3
1$
SDISTO,R4
                                   004626
                                                               TALKIA: CMP
                      071122
                                                                             BMI
                      104304
                                   001150
                                                                             MOV
                                                                                         TALK1B
SDILTO,R4
(R3),R0
1(R3),R1
                      001124
                                                                             BR
                      104304
                                   001151
                                                                             MOV
                                                                                                                     : SET UP LONG TIMEOUT
: SET DATA BUFFER ADDRESS
: SET BUFFER LENGTH
: SEND RECEIVE SDI COMMAND
: DID ERROR OCCUR
: IF NOT, BRANCH
: SEE IF TIMEOUT
: IF SO, BRANCH
: MOVE ERROR TYPE TO R3 FOR REPORTING
                      104137
                                                               TALK1B: MOV
                      104631
                                   000001
                                                                             MOV
                                                                                          RCV
R1
                      060005
                                                                             XFC
                      115001
                                                                             TST
                                                                                          TALK2A
                      011144
                      106201
                                   000001
                                                                             CMP
                                                                                           #1,R1
                      011137
                                                                             BEQ
                                                                                           1$
                                                                                           R1.R3
                      104013
                                                                             MOV
                      001145
                                                                                           TALK2B
                                                                                                                      : EXIT
                                                                             BR
                                                                                                                DECREMENT TIMEOUT VALUE
IF NOT TIMEOUT, BRANCH
FLAG AS RECIEVE ERROR
BRANCH TO EXIT
FLAG AS NO ERRORS
RESTORE R4, R1
                      117404
                                                                             DEC
                                                                                           R4
                                                                                           TALK1B
                     051124
                                                                             BNE
                     104203 001145
                                                                                           #1,R3
                                   000001
                                                                             MOV
40 001145
41 001144 114005
42 001145
001145 104264
001146 104261
201147 000000
                                                                                           TALK2B
                                                                             BR
                                                               TALKZA: CLR
                                                                                           R3 . . .
                                                                                           <R4,R1>
                                                               TALK2B: POP
                                                                                                                                                                            MOV (SP)+,R4
                                                                                                                                                                            MOV (SP)+,R1
                                                                            RETURN
   44 45 001150 000012
                                                                                                                     : SDI SHORT TIMEOUT
                                                                                       10.
                                                               SDISTO: . WORD
   46 001151
                      000024
                                                                                          20.
                                                                                                                      : SDI LONG TIMEOUT
                                                               SDILTO: . WORD
```

UDAT3 DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE 25 HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED,

1	;MREAD	
3	READ ONE WORD FROM UNIBUS MEMO	DRY
5 6 7 8	R5 - ADDRESS OF WORD TO R4 - (HIGH 2 OUTPUTS: R0 - DATA READ	READ (LOW 16 BITS) PBITS)
10 001152 001152 100462 001153 100463	MREAD: PUSH <r2,r3></r2,r3>	;SAVE SOME REGISTERS MOV R2,-(SP) MOV R3,-(SP)
11 001154 104057 12 001155 104041	MOV R5.R0 MOV R4.R1	PUT UNIBUS ADDRESS IN RO AND R1
13 001156 104202 000001 14 001160 104203 001210	MOV #1,R2 MOV #UDATA,R3	: TRANSFER ONE WORD :LOCATION TO PUT DATA
15 001162 060013 16 001163 104307 001210 17 001165	XFC UREAD MOV UDATA,RO POP <r3,r2></r3,r2>	:DO THE READ :GET DATA READ :RESTORE OTHER REGISTERS
001165 104263 001166 104262	FUF \KJ,KZ>	MOV (SP)+,R3 MOV (SP)+,R2
18 001167 000000	RETURN	

1 23 45 67 80	:MWRITE :WRITE ONE WORD TO UNIBUS MEM :INPUTS: R5 - ADDRESS OF WORD R4 - (HIGH R0 - DATA TO WRITE :OUTPUTS:	TO WRITE (LOW 16 BITS)
10 001170 001170 100467 001171 100462 001172 100463 11 001173 104070 001210 12 001175 104057 13 001176 104041 14 001177 104202 000001 15 001201 104203 001210 16 001203 060014 17 001204 001204 104263 001205 104262 001206 104267 18 001207 000000	MWRITE: PUSH <ro,r2,r3> MOV RO,UDATA MOV R5,R0 MOV R4,R1 MOV #1,R2 MOV #UDATA,R3 XFC UWRITE POP <r3,r2,r0> RETURN</r3,r2,r0></ro,r2,r3>	:SAVE SOME REGISTERS MOV RO,-(SP) MOV R2,-(SP) MOV R3,-(SP) PUT DATA TO BE WRITTEN INTO BUFFER :PUT UNIBUS ADDRESS IN RO AND R1 :TRANSFER ONE WORD :ADDRESS OF DATA WORD :DO THE WRITE :RESTORE THE REGISTERS MOV (SP)+,R3 MOV (SP)+,R2 MOV (SP)+,R0
20 001210 000000 21	UDATA: .WORD 0	:DATA BUFFER FOR TRANSFERS TO AND FROM :UNIBUS MEMORY

```
UDATS DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE 27 HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED,
                                                                   :XOR
                                                                   :PERFORM XOR LOGIC FUNCTION ON TWO REGISTERS
                                                                               R1. R2 - DATA TO BE XOR'ED
                                                                    :OUTPUTS:
                                                                                R1 - UNCHANGED
R2 - XOR OF TWO INPUTS
        10 001211
001211
11 001212
12 001213
13 001214
14 001215
                                                                   XOR:
                                                                                PUSH R3
                                                                                                                                     :SAVE R3
                           100463
                                                                                                                                                                             MOV R3,-(SP)
                                                                               MOV R1.R3
BIC R2.R3
BIC R1.R2
BIS R3.R2
POP R3
                          104013
103023
103012
101032
                                                                                                                                     : RESTORE R3
         15 001216
        001216 104263
16 001217 115002
17 001220 000000
                                                                                                                                                                             MOV (SP)+, R3
                                                                                TST R2
                                                                                                                                     :SET CONDITION CODES
                                                                                RETURN
```

1 001221			TO:	CALCULA 9 SEC)	TE THE T	IMEOUT I	N 9SEC	INTERVALS	(SDI	RECEIVE	XFC	TAKES
6 001221 7 001223 8 001224 9 001226 10 001227 11 001230	104201 110201 103201 117407 051223 114007	000001	18:	MOV ROL BIC DEC BNE CLR	#1,R1 R1 #1,R1 R0 1\$ R0		: DOU : CLE : DEC : IF	UP LOG2 SI BLE THE TII AR THE LOW REMENT COUI COUNT INCOI AR 9SEC COU	MEOUT BIT NT MPLETE	VALUE	4	
12 001231 13 001232 14 001234 15 001235	115407 107201 031231 000000	000011	2\$:	INC SUB BPL RETURN	RO #9.,R1 2\$: INC : SUB : IF	REMENT 9 SE TRACT 9 SE MORE TIME URN TO CALL	C FROM	BRANCH	1	

```
: RERROR
                                         REPORT ERROR TO HOST PROGRAM
                                         :THIS ROUTINE IS CALLED BY THE ERROR MACROS:
                                         :ERRSF, ERRDF, ERRHRD AND ERRSFT
    001236
                                         RERROR: PUSH RO
                                                                                       : SAVE ONE REGISTER
    001236
             100467
                                                                                                                  MOV RO, - (SP)
   001237
             104067
                                                  MOV SP.RO
                                                                                       GET STACK POINTER
   001240
                                                  PUSH <R1.R2.R3.R4>
                                                                                       ; SAVE MORE REGISTERS
   001240
001241
001242
001243
             100461
                                                                                                                  MOV R1,-(SP)
             100462
                                                                                                                  MOV R2, - (SP)
             100463
                                                                                                                  MOV R3, -(SP)
             100464
                                                                                                                   MCV R4, -(SP)
 10 001244
             115407
                                                  INC RO
                                                                                       CHANGE SAVED STACK POINTER TO POINT TO
11
                                                                                       : ADDRESS OF LOCATION AFTER CALL
12 001245
13 001246
             104271
                                                  MOV (RO)+_R1
                                                                                       GET RETURN PC
             104202
                      001007
                                                  MOV #OUT.01.R2
                                                                                       GET ADDRESS OF WHERE TO PUT DATA
14 001250
                                                                                       REDUCE TO PC OF ERROR CALL PUT PC IN OUT BUFFER
             117401
                                                  DEC R1
15 001251
             100221
                                                  MOV R1. (R2)+
16 001252
17 001253
18 001254
             115401
                                                  INC R1
                                                                                       GET BACK TO RETURN PC
             104113
                                                  MOV (R1), R3
                                                                                       GET ERROR NUMBER AND TYPE
             103203
                      176000
                                                  BIC #^C001777,R3
                                                                                       : CLEAR OTHER BITS
19 001256
             100223
                                                  MOV R3, (R2)+
                                                                                       :PUT IN BUFFER
20 001257
21 001261
22 001262
23 001263
24 001264
25
26 001265
27 001266
             104303
                                                                                       : PUT UNIT NUMBER IN BUFFER
                      001315
                                                  MOV LUNIT, R3
             100223
                                                  MOV R3, (R2)+
             104214
                                                  MOV (R1)+,R4
                                                                                       GET COUNT OF PARAMETERS
             104213
                                                  MOV (R1)+,R3
                                                                                       GET MESSAGE POINTER
             100223
                                                  MOV R3, (2)+
                                                                                       :PUT IN OUT BUFFER
                                                                                       ;R1 IS NOW POINTING TO INSTRUCTION AFTER ERROR CALL
             110704
                                                  SWAB R4
             110604
                                                  ROR R4
                                                                                       EXTRACT NUMBER OF PARAMETERS FROM ERROR MACRO
28 001267
29 001270
30 001272
31 001274
32 001275
33 001276
34 001277
35 001300
             110604
                                                  ROR R4
             103204
                      177700
                                                  BIC #177700,R4
             104040
                      001313
                                                  MOV R4. SPADJU+1
                                                                                       ; SAVE FOR LATER ADJUSTMENT OF STACK POINTER
             011301
                                                  BEQ RERRCA
                                                                                       :BRANCH IF NO PARAMETERS
             104273
                                        RERRPA: MOV (RO)+,R3
                                                                                       GET PARAMETER
             100223
                                                  MOV R3, (R2)+
                                                                                       STORE PARAMETER IN OUT BUFFER
             117404
                                                  DEC R4
                                                                                       COUNT THE PARAMETERS
             051275
                                                  BNE RERRPA
                                                                                       GET NEXT IF MORE
36 001301
37 001302
38 001304
39 001305
             100471
                                        RERRCA: MOV R1,-(RO)
                                                                                       ; PUT RETURN ADDRESS ON STACK
             104207
                      000013
                                                  MOV #ERRMES, RO
                                                                                       SEND ERROR PACKET TO HOST PROGRAM
             020751
                                                  CALL HOSTRO
                                                  POP <R4,R3,R2,R1,R0>
                                                                                       :RESTORE REGISTERS
    001305
             104264
                                                                                                                  MOV (SP)+,R4
             104263
    001306
                                                                                                                  MOV (SP)+, R3
    001307
                                                                                                                  MOV (SP)+, R2
    001310
             104261
                                                                                                                  MOV (SP)+,R1
    001311
             104267
                                                                                                                  MOV (SP)+, RO
   001312
            105206
                      000000
                                         SPADJU: ADD #0.SP
                                                                                       : ADJUST STACK OVER PARAMETERS
                                                                                       : VALUE CHANGED ABOVE
42
   001314 000000
                                                  RETURN
   001315 177777
                                        LUNIT: .WORD -1
                                                                                       ;LOGICAL UNIT NUMBER (-1 FOR NOT AVAILABLE)
   001316 000000
                                         SAVREG: . WORD 0
                                                                                       STORAGE FOR REGISTER AT CALL TIME
                                                  .IFT
```

UDAT3 DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE 29-1 HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED,

SEQ 0203

48

.LIST

UDATS DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE 30 HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED,

2 3 001317 123456 4 001320 5 001357 123456

:STACK AREA

.WORD 123456 .BLKW 31. STACK: .WORD 123456

;END MARKER FOR STACK ;STACK ;MARKER FOR STACK UNDERFLOW

1				.SBTTL	DISK DRIVE SEQU	ENCER	
2 3 4 5 001360	004706 000001		SUB START:	ERRN=1.	SUB + CR	:MODIFY SUB TO POINT AT :START ERROR NUMBERS AT	SUBUNIT CHAR
6 7 8				GET THE	UNITS TO TEST		
8 9 10 11				POLL ALI	L PORTS AND FILL	IN A UDA PORT INFORMATION TABLE	(UNITS)
12 001360 13 001362 14 001364	104205 104204	000001 004527	1\$:	MOV MOV PUSH	#1,R5 #UNITS,R4 R4	: MOVE INITIAL MASK TO R5 : R4 POINTS TO UNIT TABLE : SAVE R4	
001364 15 001365 16 001366 17 001367 18 001371 19 001372 20 001374 21 001376 22 001400 23 001401 24 001403 25 001405 26 001407 27 001411 28 001412 29 001413 30 001414 31 001415 32 001417 33 001420	100464 104052 060011 104207 020720 104203 100643 102201 051412 102201 104203 100641 051415 117407 051371 001534 104203 104237 104231	040000 003732 000001 010000 000001 004005 000001 000002	14\$: 3\$: 5\$:	MOV XFC MOV CALL MOV MOV BIT BNE BIT MOV MOV MOV BNE DEC BNE BR MOV MOV MOV	R5,R2 DINIT #40000,R0 RDSTAT #SER10,R3 R3,1(R4) #10000,R1 3\$ #R(VRDY,R1 #SER11,R3 R3,1(R4) R1,2(R4) 5\$ R0 14\$ 6\$ #(R.GST,R3 (R3)+,R0 (R3)+,R1	; MOVE MASK TO R2 ; INITILIZE THE DRIVE ; MOVE TIMEOUT TO RO ; GET STATUS ; GET SECONDARY ERROR ; PUT ERROR IN TABLE ; SEE IF STATUS IS VALID ; IF NOT, BRANCH ; SEE IF RECEIVER READY ASSERTE ; GET SECONDARY ERROR ; PUT ERROR IN TABLE ; STORE STATE ; IF SO, BRANCH ; DECREMENT COUNT ; IF INCOMPLETE, BRANCH ; NO VALID STATE ; R3 POINTS TO GET STATUS COMMA ; SET ADR OF SDI COMMAND BUFFER ; SET BUFFER LENGTH	ND
34 001421 35 001422 001422	060004 100463			XF C PUSH	SEND R3	; SEND COMMAND ; SAVE COUNT	MOV R3,-(SP)
36 001423 37 001425 38 001427	104203	004055 000001		MOV MOV POP	#SER12,R3 R3,1(R4) R3	; GET ERROR NUMBER ; SAVE ; RESTORE R3	
001427 39 001430 40 001431 41 001432	104263 115001 051534			TST BNE PUSH	R1 6\$ R4	: DID UNIT ACCEPT COMMAND : IF NOT, BRANCH : SAVE R4	MOV (SP)+,R3
001432 42 001433 43 001435 44 001436 45 001440 46 001441 47 001442 48 001443 49 001445 50 001446 51 001447	100464 104204 104137 104631 060005 115001 011502 106201 051454 117404 051435	000012 000001 000001	115%	MOV MOV XFC TST BEQ CMP BNE DEC BNE	#10R4 (R3).R0 1(R3).R1 RCV R1 13\$ #1.R1 12\$ R4	SET UP SHORT TIMEOUT SET DATA BUFFER ADDRESS SET BUFFER LENGTH SEND RECEIVE SDI COMMAND DID ERROR OCCUR IF NOT, BRANCH SEE IF TIMEOUT IF NOT, BRANCH DECREMENT TIMEOUT VALUE IF NOT TIMEOUT, BRANCH	MOV R4,-(SP)
52 001450 001450	104264	7		POP	R4 -	; RESTORE R4	MOV (SP)+,R4

UDAT3 DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE 32-1 DISK DRIVE SEQUENCER

53 001451 10420 54 001453 00147 55 001454	77	12\$:	MOV BR POP	#SER13,R3 23\$ R4	; GET ERROR NUMBER ; BRANCH TO EXIT ; RESTORE R4
001454 10426 56 001455 11060 57 001456 11060 58 001457 04146 59 001460 10420)1)1 53		ROR ROR BCC MOV	R1 R1 20\$ #SER14,R3	; ROTATE INTO POSITION TO TEST ; SEE IF FIRST WORD NOT START FRAME ; IF NOT, BRANCH ; GET ERROR NUMBER
60 001462 00147 61 001463 11060 62 001464 04147 63 001465 10420	77)1 70	20\$:	BR ROR BCC MOV	23\$ R1 21\$ #SER15,R3	; BRANCH TO END OF LOOP ; SEE IF FRAMING ERROR ; IF NOT, BRANCH ; GET ERROR NUMBER
64 001467 00147 65 001470 11060 66 001471 04147 67 001472 10420	77)1 ?5	21\$:	BR ROR BCC MOV	23\$ R1 22\$ #SER16,R3	; BRANCH TO END OF LOOP ; SEE IF CHECKSUM ERROR ; IF NOT, BRANCH ; GET ERROR NUMBER
68 001474 00147 69 001475 10420 70 001477 10064 71 001501 00153	77 03 004304 63 000001	22 \$: 23 \$:	BR MOV MOV BR	23\$ #SER17,R3 R3,1(R4) 6\$; BRANCH TO END OF LOOP ; GET ERROR NUMBER ; SAVE ; BRANCH TO END OF LOOP

2		NOW FI	LL IN THE TABLE	WITH ALL THE SUBUNIT NUMBERS
4 001502		3\$: POP	R4	; RESTORE R4
001502 104264				MOV (SP)+,R4
5 001503 104207 6 001505 100647 7 001507 100647 8 001511 104307 9 001513 104072	000001 000002 004664	MOV MOV MOV MOV	#-1,R0 R0,1(R4) R0,2(R4) S1,R0 R0,R2	; GET 'NO UNITS' FLAG ; CLEAR ANY ERRORS THAT ARE FLAGGED ; CLEAR ANY ERRORS THAT ARE FLAGGED ; RO HAS UNIT NUMBER ; COPY RO TO R2
10 001514 103207	170000	BIC.	#^CHBHINB,RO	; RO HAS UNIT NUMBER
11 001516 101207 12 001520 110702		BIS	#40000,R0 R2	; FLAG UNIT AS NOT TESTED ; SWAP R2'S BYTES
13 001521 110602 14 001522 110602		ROR ROR	R2	; MOVE SUBUNIT MASK TO LO NIBBLE
15 001523 110602		ROR	R2 R2	; MOVE SUBUNIT MASK TO LO NIBBLE ; MOVE SUBUNIT MASK TO LO NIBBLE
16 001524 110602 17 001525 103202	177760	ROR BIC	R2 #LBLONB,R2	; MOVE SUBUNIT MASK TO LO NIBBLE ; CLEAR ALL BUT SUBUNIT BITS
18 001527 110602	4	4\$: ROR	R2	; MOVE SUBUNIT BIT TO CARRY
19 001530 041534 20 001531 100247		BCC MOV	6\$ RO _* (R4)+	; IF NO MORE SUBUNITS, BRANCH ; MOVE SUBUNIT NUMBER TO TABLE
21 001532 115407		INC	R0 4\$; INCREMENT SUBUNIT NUMBER
22 001533 001527 23 24 25		BR	43	; BRANCH
24				
26 001534 001534 104264		5\$: POP	R4	: R4 POINTS TO START OF UNIT JUST HANDLED MOV (SP)+,R4
27 001535 105204 28 001537 110205	000004	ADD	#4,R4	; R4 WILL POINT TO NEXT UNIT (CLEAR CARRY FOR ROL)
29 001540 106205	000020	ROL (MP	R5 #20,R5	; R5 HAS NEXT UNIT PORT MASK ; SEE IF ALL PORTS TESTED
30 001542 051364		BNE	1\$; IF NOT, BRANCH

2		NOW GET	THE PLUG NUMBERS	TO TEST AND FIND THEM IN THE TA	BLE
4 001543 104207 5 001545 020751 6 001546 104207 7 001550 104201 8 001552 104112 9 001553 071576		MOV CALL MOV 7\$: MOV 8\$: MOV BMI PUSH	#UTOTST,RO HOSTRQ #IN.01,RO #UNITS,R1 (R1),R2 9\$ R1	GET WHAT SUBUNIT NUMBERS TO TE GET THE PLUG NUMBERS RO POINTS TO UNIT NUMBERS TO T R1 POINTS TO UDA PORT INFORMAT R2 HAS UNIT IF NONE, BRANCH SAVE R1	EST
001554 100461 11 001555 103202 12 001557 106172 13 001560 051564 14 001561 100112 15 001562	170000	42\$: BIC CMP BNE MOV POP	#^CHBHINB,R2 (R0),R2 40\$ R2,(R1) R1	CLEAR THE 'NOT TESTED BIT' FOR SEE IF IT IS A UNIT TO TEST NO MATCH SAVE UNIT AS ONE TO TEST RESTORE STACK	
001562 104261 16 001563 001712 17 001564 115401 18 001565 104012 19 001566 107202 20 001570 102202 21 001572 011575 22 001573 104112 23 001574 031555 24 001575	004527 000003	40\$: BR MOV SUB BIT BEQ MOV BPL 41\$. POP	10\$ R1 R1,R2 #UNITS,R2 #3,R2 41\$ (R1),R2 42\$ R1	LOOK FOR THE NEXT ONE POINT TO NEXT SUBUNIT COPY TO R2 SUBTRACT STARTING ADDRESS SEE IF STILL ON SAME UNIT IF NOT, BRANCH SEE IF ANY MORE SUBUNITS IF SO, BRANCH RESTORE R1	MOV (SP)+,R1
001575 104261 25 001576 105201 26 001600 106201 27 001602 051552		9\$: .ADD CMP BNE		LOOK AT NEXT UNIT SEE IF ENTIRE TABLE SEARCHED IF NOT, BRANCH	MOV (SP)+,R1

1 2 3					DIDN'T UDA POR	FIND THE REQUEST	ED	UNITS DUMP ALL KNOWLEDGE OF THE
5 001603				•	PUSH	R0	:	SAVE POINTER TO UNIT
6 001604 7 001606 8 001610 9 001611 10 001612 11 001614 12 001615	100467 104204 104205 104157 031624 104657 100247 106207	001013 004527 000001 004005		30\$:	MOV MOV MOV BPL MOV MOV CMP	#OUT.05,R4 #UNITS,R5 (R5),R0 31\$ 1(R5),R0 R0,(R4)+ #SER11,R0		R4 POINTS TO OUTPUT BUFFER R5 POINTS TO UNIT TABLE GET FIRST WORD OF UNIT IF VALID UNIT WAS FOUND, BRANCH GET POINTER TO ERROR MESSAGE SAVE IN OUTPUT BUFFER SEE IF ITS THE RECIEVER RDY NEVER ASSERTED
14 001620 15 001622 16 001623 17 001624	051652 104657 100247 001652	000002		31\$:	BNE MOV MOV BR PUSH	36\$ 2(R5),R0 R0,(R4)+ 36\$ R5	:	IF NOT, BRANCH GET STATE THAT WAS FOUND SAVE EXIT SAVE POINTER TO UNIT TABLE
18 0C1625 19 001627 20 001630 21 001631 22 001632 23 001633	100465 104207 100247 114007 115405 104251 071640 115407	004374		32\$:	MOV MOV CLR INC MOV BMI INC	#SER18,R0 R0,(R4)+ R0 R5 (R5)+,R1 33\$ R0		GET POINTER TO ERROR MESSAGE SAVE CLEAR COUNT SKIP FIRST WORD (WE KNOW IT'S POSITIVE) GET UNIT NUMBER IF INVALID, BRANCH INCREMENT COUNT
25 001635 26 001637 27 001640 28 001642 29 001643	106207 051632 104671 100241	000003		33\$:	CMP BNE MOV MOV POP	#3,R0 32\$ ERTXT(R0),R1 R1,(R4)+ R5	:	SEE IF MAX IF NOT, LOOP GET POINTER TO CORRECT ERROR MESSAGE MOVE INTO OUTPUT BUFFER RESTORE R5 MOV (SP)+,R5
30 001644	100465				PUSH	R5	:	SAVE R5 MOV R5,-(SP)
31 001645 32 001646 33 001647	104251 100241 117407 031645			34\$:	MOV MOV DEC BPL POP	(R5)+,R1 R1,(R4)+ R0 34\$ R5		GET SUBUNIT NUMBER SAVE DECREMENT COUNT IF COUNT INCOMPLETE, BRANCH RESTORE R5
001651 36 001652 37 001654	104265 105205 106205 051610	000004 004547		36\$:	ADD CMP BNE DEVFTL	#4,R5 #UNITS+16.,R5 30\$ 80,		POINT TO NEXT UNIT TABLE SEE IF ENTIRE TABLE SEARCHED IF NOT, BRANCH REPORT FATAL ERROR
001657 001662 001665 001670 001673 001675	104200 104200 101200 104200 104202 104020	003577 000120 000400 001670 000014 001006	001012 001010 001010 001007					MOV #ER80,OUT.04 MOV #80,OUT.02 BIS #FTLDEV,OUT.02 MOV #.,OUT.01 MOV #ERRMC,R2 MOV R2,OUT.RQ
40 001677	104267				POP	R0		GET POINTER TO UNIT NUMBER MOV (SP)+,RO
41 001700 42 001701 43 001703 44 001705 45 001706	104172 104020 104207 020751 104207	001011 000014 000016			MOV MOV CALL MOV	(RO),R2 R2,OUT.O3 #ERRMC,RO HOSTRQ #DONE,RO	:	GET UNIT NUMBER SAVE IN OUTPUT SET UP FOR REPORT REPORT ERROR END TEST
45 001100	.04201	000010			1101	"DOIL , NO		

UDATS DISK FUNCTIONAL MACRO	x04.00 9-JUL-81 01:	13:55 P/	AGE 35-1	D 1	
46 001710 020751 47 001711 060021 48		CALL	HOSTRQ EXIT	;	SEND END-OF-TEST TO HOST TERMINATE DM
49 001712 115407 50 001713 104172 51 001714 031550 52 001715 001722	10\$:	INC MOV BPL BR	R0 (R0),R2 7\$ 13STRT	:	POINT TO NEXT UNIT TO TEST CHECK NEXT UNIT FIND IN UDA PORT INFORMATION START TEST
54 001716 004446 55 001717 004443 56 001720 004440 57 001721 004435	ERTXT:	.WORD .WORD .WORD	SER18D SER18C SER18B SER18A	:	POINTERS TO THE DIFFERENT SUBUNIT REPORTING MESSAGES.

1 2 3 4 5 6 7	: TEST CODE WIL : LUNIT WILL : SDI WILL CO	L BE CALLED FOR CONTAIN LOGIC ONTAIN SDI INTERPORTED ON TAIN AN E	O ALL UNITS SELECTED. OR EACH DISK SUBUNIT TO BE TESTED. AL UNIT NUMBER OF DRIVE FOR ERROR REPORTS ERCONNECT CODE FOR SELECTED DRIVE VEN NUMBER FOR TESTING FIRST SUBUNIT OF A DRIVE DD NUMBER FOR TESTING SECOND SUBUNIT OF A DRIVE
8 001722 114001	T3STRT: CLR	R1	START WITH UNIT O INDEX
9 10 001723 104207 004527 11 001725 105017 12 001726 104173 13 001727 031736 14 001730 102201 000003 15 001732 051770 16 001733 105201 000003 17 001735 001770 18 001736 102203 040000 19 001740 051770 20 001741 104010 004547 21 001743 104030 001315 22 001745 104202 000001 23 001747 110601 24 001750 110601 25 001751 103201 177760 26 001753 117401 27 001754 071761 28 001755 110202 29 001766 103202 000001 30 001760 001753 31 001761 104020 004550	PORT2: MOV ADD MOV BPL BIT BNE ADD BR 1\$: BIT BNE MOV MOV MOV MOV MOV BOR ROR ROR BIC BMI ROL BIC BR PORT4: MOV	#UNITS,RO R1,RO (RO),R3 1\$ #3,R1 PORT5 #40000,R3 PORT5 R1,UNITNB R3,LUNIT #UNITO,R2 R1 R1 #LBLONB,R1 R1 PORT4 R2 #1,R2 PORT3 R2,SDI	GET POINTER TO UNITS TABLE ADD INDEX GET CONTENTS OF TABLE IF THIS UNIT IS PRESENT, BRANCH SEE IF ON SUBUNIT O OF UNIT IF NOT, TEST NEXT SUBUNIT IF NO SUBUNIT O, THEN NO UNIT - SKIP OTHER SUBUNITS BYPASS IF NO UNIT SEE IF THIS UNIT IS TO BE TESTED IF NOT, BRANCH STORE UNIT INDEX STORE LOGICAL UNIT NUMBER FOR DRIVE GET UNIT O INTERCONNECT CODE DIVIDE UNITNB BY FOUR CLEAR UNUSED BITS FOR EACH DRIVE OVER O SHIFT R2 LEFT CLEAR CARRY ROTATED INTO REG (IF ANY) STORE SDI INTERCONNECT CODE
32 001763 002000 33	BR	TEST	: PERFORM TEST ON THIS DRIVE : TEST RETURNS TO TESTX
34 001764 104206 001357 35	TESTX: MOV	#STACK,SP	RESET STACK DO TO JUMPS OUT OF SUBROUTINES
36 001766 104301 004547 37 001770 115401 38 001771 106201 000020 39 001773 051723 40 001774 104207 000016 41 001776 020751 42 001777 001774	PORTS: INC CMP BNE DONECD: MOV CALL BR	UNITNB,R1 R1 #16.,R1 PORT2 #DONE,RO HOSTRQ DONECD	GET UNIT INDEX INCREMENT INDEX CHECK IF 16 DRIVES ALREADY SELECTED REPEAT FOR ALL DRIVES END OF PROGRAM REPEAT IF RETURNED

1	.SBTTL	INITIAL	IZE DRIVE AND LOOK AT DE	RIVE SIGNALS				
3	START OF TEST CODE							
4 5 6 7	INPUTS: LUNIT - LOGICAL UNIT NUMBER OF DRIVE UNDER TEST SDI - SDI INTERCONNECT CODE FOR DRIVE							
8	;INITIAL	IZE THE	DRIVE					
10 11 002000 104302 004550 12 002002 060011		MOV SDI XFC DIN		GET SDI SELECT CODE ;INITIALIZE THE DRIVE				
14 15		:WAIT FOR DRIVE TO ASSERT RECEIVER READY :TIME OUT AFTER?						
16 17 002003 114005		CLR	R5 TESTEX,MS1,MS2	GET TIMEOUT COUNTER LOOK AT DRIVE STATUS LINES				
18 002004 002004 020720 002005 102201 010000 002007 012023 002010 102201 004000 002012 012017 002013 002013 021236		CALL BIT BEQ BIT BEQ ERRHRD	RDSTAT #10000,R1 2\$ #4000,R1 1\$ MS1	GET DRIVE STATUS SEE IF ANY ERRORS IF NO ERROR, BRANCH SEE IF XMIT ERROR IF SO, BRANCH REPORT INVALID STATUS ERROR				
002014 001001		L. W. II.		CALL RERROR ;ERROR # 1. .WORD <prms*2000>+<2*400>+ERRN .WORD MS1</prms*2000>				
002016 003443 002017 002017 021236 002020 001002		BR ERRHRD	MS2	; BRANCH TO DONE ; REPORT XMIT ERROR CALL RERROR ; ERROR # 2. .WORD <prms*2000>+<2*400>+ERRN</prms*2000>				
002021 000045 002022 003443		BR	TESTEX	; BRANCH TO DONE				
002023 19 002023 102201 000001 20 002025 052034 21 002026 117405 22 002027 052004 23 002030 002030 021236 002031 001003 002032 000071	2\$:	BIT #RC BNE T DEC R5 BNE ILO ERRHRD	MS3 •	CHECK RECEIVER READY LINES ADVANCE IF ASSERTED DECREMENT TIME OUT COUNTER STAY IN LOOP UNTIL SIGNAL SETS OR TIMEOUT REPORT ERROR CALL RERROR ; ERROR # 3. .WORD < PRMS * 2000 > + < 2 * 400 > + ERRN .WORD MS3				
24 002033 003443		BR TEST	EX .	EXIT TESTING THIS DRIVE				

1				GET DA	IVE CHAR	ACTERISTICS		
3 002034 4 002037 5 002041 002041 002042 002043 002044 002045 002045 002046 002047 002050 002051 002051 002053 002054 002055	104200 104203 021102 115003 012055 032051 021236 001004 001344 003443 021236 001005 001405 003443	000012 004575	001150	11\$:	MOV #CR TALKX CALL TST BEQ BPL ERRHRD	#10.,SDISTO R.GCR,R3 TESTEX,MS26,MS27 TALKER R3 12\$ 11\$ MS26;SEND COMMAND ERROR TESTEX MS27;RECEIVE COMMAND ER	; POINT TO GET CHAP ; SDI INTERCHANGE ; INITIATE SDI IN ; SEE IF ERROR OCC ; IF NOT, BRANCH ; IF SO, BRANCH	
6 002055 7 002057 8 002060 002060	106207 012074 100467	000170		12\$:	CMP #CH	IRRES,RO	FAILED NOV RO(SP)	
002061 002063 002065 002066 002070 002071 002072 9 002073	104010 104201 100461 104301 021236 005006 001451 003443	001316 000170 001316			BR	TESTEX	; BRANCH TO END OF	MOV R1,SAVREG MOV #CHRRES,R1 MOV R1,-(SP) MOV SAVREG,R1 CALL RERROR ;ERROR # 6WORD <prms*2000>+<2*400>+ERRN .WORD MS28</prms*2000>
11 002074 12 002076 13 002100 14 002101 15 002103 16 002105 17 002107 18 002110	104307 103207 021221 104070 104307 103207 021221 104070	004673 177760 001150 004674 177760 001151		T00:	MOV BIC CALL MOV MOV BIC CALL MOV	CR+SHRTTO,RO #LBLONB,RO TO RO,SDISTO CR+LONGTO,RO #LBLONB,RO TO RO,SDILTO	GET SHORT TIMEOUT CLEAR UNUSED BIT SET UP TIMEOUT SAVE IN SHORT TO GET LONG TIMEOUT CLEAR UNUSED BIT SET UP TIMEOUT SAVE IN LONG TIMEOUT	TS IMEOUT T

1			:ISSUE	ONLINE C	COMMAND AND CHECK RESPONSE		
3 002112 1 4 002114	104203	004551		MOV TALKX	#CR.ONL,R3 TESTEX,MS4,MS5	: POINT TO ONL	
002114 (002115 1	021102			CALL	TALKER R3	: INITIATE SDI	INTERCHANGE
002116 0 002117 0	012130			BEQ BPL	12 \$ 11 \$: IF NOT, BRANCE : IF SO, BRANCE	ICH
002120 002120 002131	021236			ERRHRD	MS4; SEND COMMAND ERROR		CALL RERROR :ERROR # 7.
002122 (001007 000124 003443			BR	TESTEX	,	.WORD <prms*2000>+<2*400>+ERRN .WORD MS4</prms*2000>
002124	021236		115:	ERRHRD	MS5; RECEIVE COMMAND ERRO	R	CALL RERROR ;ERROR # 8.
002125 0 002126 0	001010						.WORD <prms *="" 2000="">+<2 * 400>+ERRN .WORD MS5</prms>
002127 (002130	003443		12\$:	BR	TESTEX		
5 002130 1	106207	000176		CMP BEQ	TO	: CHECK FOR EF	BRANCH
002133 1	100467			ERRHRD	MS6,#COMPLT,RO	; ONLINE COMM	MOV RO,-(SP)
002136 1	104C10 104201	001316 000176		•			MOV R1, SAVREG MOV #COMPLT, R1
002141 1	100461	001316					MOV R1,-(SP) MOV SAVREG,R1
002144 (021236 005011 000207						CALL RERROR : ERROR # 9WORD <prms*2000>+<2*400>+ERRN .WORD MS6</prms*2000>
	003443			BR	TESTEX	: EXIT TEST	. WORD PISO

1			;ISSUE	GET STAT	US COMMAND AND CHECK THA	T ATTENTION DROPS	
4 002151 002151 002152 002153	104203 021102 115003 012165 032161	004607	TO:	MOV #CR TALKX CALL TST BEQ BPL ERRHRD	GST,R3 TESTEX,MS7,MS8 TALKER R3 12\$ 11\$ MS7;SEND COMMAND ERROR	:POINT TO GET STA : SDI INTERCHANGE : INITIATE SDI IN : SEE IF ERROR OC : IF NOT, BRANCH : IF SO, BRANCH	
002155 002156 002157 002160	021236 001012 000275 003443			BR	TESTEX		CALL RERROR :ERROR # 10. .WORD <prms*2000>+<2*400>+ERRN .WORD MS7</prms*2000>
002163	021236 001013 000327 003443		11\$:	ERRHRD BR	MS8; RECEIVE COMMAND ERR	OR	CALL RERROR ; ERROR # 11WORD <prms*2000>+<2*400>+ERRN .WORD MS8</prms*2000>
002165	003443		12\$:				
5 002165	106207	000366		CMP #ST		: CHECK FOR ERROR	
7 002170 002170 002171 002173 002175 002176 002200 002201 002202	012204 100467 104010 104201 100461 104301 021236 005014 000364	001316 000366 001316			MS9,#STSRES,RO	GET STATUS COMMA	ND REJECTED MOV RO,-(SP) MOV R1,SAVREG MOV #STSRES.R1 MOV R1,-(SP) MOV SAVREG,R1 CALL RERROR ;ERROR # 12. .WCRD <prms*2000>+<2*400>+ERRN .WORD MS9</prms*2000>
9 002204 002205 002207 002210 002212 002213 002213	003443 020720 102201 012223 102201 012217 021236 001015	010000 004000	TOA:	BR DSTAT CALL BIT BEQ BIT BEQ ERRHRD	TESTEX TESTEX,MS10,MS2 RDSTAT #10000,R1 2\$ #4000,R1 1\$ MS10	; LOOK AT STATUS L ; GET DRIVE STATU ; SEE IF ANY ERRO ; IF NO ERROR, BR ; SEE IF XMIT ERR ; IF SO, BRANCH ; REPORT INVALID	S RS RS ANCH OR STATUS ERROR CALL RERROR :ERROR # 13WORD <prms*2000>+<2*400>+ERRN</prms*2000>
002216 002217 002217 002220	000454 003443 021236 001016 000045		1\$:	BR ERRHRD	TESTEX MS2	: BRANCH TO DONE : REPORT XMIT ERR	.WORD MS10 OR CALL RERROR :ERROR # 14. .WORD <prms*2000>+<2*400>+ERRN .WORD MS2</prms*2000>
002222	003443			BR	TESTEX	: BRANCH TO DONE	
IL VULLEU	102201 012232	000002	2\$:	BIT #AT BEQ TOB ERRHRD		: COMMAND SHOULD H	MMAND
002226	021236 001017						CALL RERROR : ERROR # 15WORD <prms*2000>+<2*400>+ERRN</prms*2000>
002230	000500		T0B:	BR	TESTEX		.WORD MS12

\$ 002232 104303 004666	1			:ISSUE	DRIVE CLEAR COMMAND	
002252 021236 002252 021236 002253 001021	4 002234 5 002236 6 002240 7 002242 002242	103203 104030 104203 021102	177400 004647	11:	MOV #CR.CLR.R3 TALKX TESTEX.MS13,MS14 CALL TALKER TST R3 BEQ 12\$ BPL 11\$; POINT TO DE ; INITIATE S ; INITIATE S ; IF NOT, BE ; IF SO, BRA	NON-ERROR BITS IVE CLEAR SDI AREA RIVE CLEAR CHANGE SDI INTERCHANGE ROR OCCURRED RANCH
9 002260 012275 10 002261	002246 002247 002250 002251 002252 002252 002253 002254	021236 001021 000567			BR TESTEX ERRHRD MS14; RECEIVE COMMAND ERROR	.WORD <prms*2000>+<2*400>+ERRN .WOPD MS13 CALL RERROR ;ERROR # 17WORD <prms*2000>+<2*400>+ERRN</prms*2000></prms*2000>
11 002274 003443 BR TESTEX	9 002260 10 002261 002261 002262 002264 002266 002267 002271	012275 100467 104010 104201 100461 104301 021236 005022 000624	001316 000176	12\$:	BEQ T2 ERRHRD MS15,#COMPLT,RO	MCV RO,-(SP) MOV R1,SAVREG MOV #COMPLT,R1 MOV R1,-(SP) MOV SAVREG,R1 CALL RERROR ;ERROR # 18.

UDAT3 DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE 42

INITIALIZE DRIVE AND LOOK AT DRIVE SIGNALS

002326

002327

8 002331 003443

021236

005025

001004

CALL RERROR

.WORD MS18

:ERROR # 21.

.WORD <PRMS *2000>+<2 *400>+ERRN

:ISSUE CHANGE MODE COMMAND TO ENABLE FORMATTING, DIAG CYL ACCESS AND 256 SECT. 2 3 002275 104203 004614 4 002277 021102 002300 115003 002301 012313 002302 032307 002303 021236 002304 001023 002305 000715 002306 003443 12: MOV #CR.MOD.R3 ; POINT TO CHANGE MODE COMMAND TALKX TESTEX, MS16, MS17 : SDI INTERCHANGE ; INITIATE SDI INTERCHANGE CALL TALKER : SEE IF ERROR OCCURRED : IF NOT, BRANCH : IF SO, BRANCH R3 TST BEQ 11\$ BPL MS16: SEND COMMAND ERROR ERRHRD CALL RERROR :ERROR # 19. .WORD <PRMS *2000>+<2 *400>+ERRN .WORD MS16 002306 003443 TESTEX 002307 ERRHRD MS17: RECEIVE COMMAND ERROR 115: 002307 021236 002307 021236 002310 001024 002311 000747 002312 003443 002313 5 002313 106207 6 002315 012332 7 002316 CALL RERROR :ERROR # 20. .WORD <PRMS *2000>+<2 *400>+ERRN .WORD MS17 TESTEX 12\$: 000176 CMP #COMPLT.RO CHECK FOR SUCCESSFUL RESPONSE BEQ TO3 002316 002316 002317 002321 002323 ERRHRD MS18, #COMPLT, RO 100467 MOV RO,-(SP) MOV R1, SAVREG 104010 104201 001316 000176 MOV #COMPLI,R1 100461 MOV R1,-(SP) 002324 104301 001316 MOV SAVREG, R1

BR

TESTEX

UDAT3 DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE 43 INITIALIZE DRIVE AND LOOK AT DRIVE SIGNALS

1 2 002332 3 002334 002334 002335 002336 002337	021102 115003 012350 032344	004633	;SPIN U	MOV TALKX CALL TST BEQ BPL ERRHRD	#CR.RUN,R3 TESTEX,MS57,MS58 TALKER R3 12\$ 11\$ MS57;SEND COMMAND ERROR	; POINT TO RUN CO ; SDI INTERCHANGE ; INITIATE SDI IN ; SEE IF ERROR OC ; IF NOT, BRANCH ; IF SO, BRANCH	TERCHANGE CURRED
002340 002341 002342 002343 002344	021236 001026 003436 003443		11\$:	BR ERRHRD	TESTEX MS58; RECEIVE COMMAND ER	DOD	CALL RERROR ;ERROR # 22. .WORD <prms*2000>+<2*400>+ERRN .WORD MS57</prms*2000>
002344 002345 002346 002347 002350	021236 001027 003464 003443			BR	TESTEX	NOX	CALL RERROR ; ERROR # 23. .WORD <prms*2000>+<2*400>+ERRN .WORD MS58</prms*2000>
4 002350 5 002352 6 002353	106207 012367	000176	12\$:	CMP BEQ ERRHRD	#COMPLT,RO T3 MS59,#COMPLT,RO	: SEE IF COMPLETE : IF SO, BRANCH : REPORT ERROR	*
002353 002354 002356 002360 002361 002363	100467 104010 104201 100461 104301 021236	001316 000176 001316					MOV RO,-(SP) MOV R1, SAVREG MOV #COMPLT,R1 MOV R1,-(SP) MOV SAVREG,R1 (ALL RERROR ;ERROR # 24.
002 364 002 365 7 002 366	005030 003515 003443			BR	TESTEX	; BRANCH	.WORD <prms*2000>+<2*400>+ERRN .WORD MS59</prms*2000>

1			;ISSUE	INITIATE RECALIBRATE COMMAND	
3 002367 4 002371 002371 002372 002373 002375 002375 002375 002376 002400 002401 002401 002401 002402 002403 002405 5 002405 6 002407 7 002410	104203 021102 115003 012405 032401	004626	13:	MOV #CR.INR,R3 TALKX TESTEX,MS19,MS20 CALL TALKER TST R3 BEQ 12\$ BPL 11\$ ERRHRD MS19;SEND COMMAND ERRO	; POINT TO RECALIBRATE COMMAND ; SDI INTERCHANGE ; INITIATE SDI INTERCHANGE ; SEE IF ERROR OCCURRED ; IF NOT, BRANCH ; IF SO, BRANCH
002375 002376 002377 002400	021236 001031 001075 003443		11\$:	BR TESTEX ERRHRD MS20; RECEIVE COMMAND E	CALL RERROR ; ERROR # 25. .WORD <prms*2000>+<2*400>+ERRN .WORD MS19</prms*2000>
002401 002402 002403 002404	021236 001032 001127 003443		12\$:	BR TESTEX	CALL RERROR :ERROR # 26. .WORD <prms*2000>+<2*400>+ERRN .WORD MS20</prms*2000>
5 002405 6 002407	106207 012424	000176	123:	CMP #COMPLT,RO BEQ T3A	CHECK FOR SUCCESSFUL RESPONSE
002410 002411 002413 002415 002416 002420	100467 104010 104201 100461 104301 021236	001316 000176 001316		ERRHRD MS21,#COMPLT,RO	RECALIBRATE COMMAND REJECTED MOV RO,-(SP) MOV R1, SAVREG MOV #COMPLT.R1 MOV R1,-(SP) MOV SAVREG,R1 CALL RERROR ;ERROR # 27WORD <prms*2000>+<2*400>+ERRN .WORD MS21</prms*2000>
002422 8 002423 9 002424 10 002426 11 002430 002431 002433 002434 002436 002437 002437	020720 102201 012447	177716 144062 010000 004000	T3A: T3B: T3C:	BR TESTEX MOV #-50.,R4 MOV #-14286.,R5 DSTAT TESTEX,MS10,MS2 CALL RDSTAT BIT #10000,R1 BEQ 2\$ BIT #4000,R1 BEQ 1\$ ERRHRD MS10	;SET UP 30 SEC CLOCK ;SET UP 0.5 SEC CLOCK ;GET DRIVE SIGNALS ; GET DRIVE STATUS ; SEE IF ANY ERRORS ; IF NO ERROR, BRANCH ; SEE IF XMIT ERROR ; IF SO, BRANCH ; REPORT INVALID STATUS ERROR CALL RERROR ;ERROR # 28. .WORD <prms*2000>+<2*400>+ERRN</prms*2000>
002434 002436 002437 002437 002440 002441 002442 002443 002443 002444 002446 002446 12 002447 13 002451 14 002452	001034 000454 003443 021236 001035 000045 003443		1\$:	BR TESTEX BR TESTEX	: BRANCH TO DONE : REPORT XMIT ERROR CALL RERROR : ERROR # 29WORD <prms*2000>+<2*400>+ERRN .WORD MS2 ; BRANCH TO DONE</prms*2000>
12 002447 13 002451 14 002452 002452 002453 002454 15 002455	001036 001255	000002	2\$:	BIT #ATTN,R1 BEQ T3D ERRHRD MS24;ATTENTION SET AFTE BR TESTEX	;DID ATTENTION SET? ; NO R RECALIBRATE COMMAND (ALL RERROR ;ERROR # 30WORD <prms*2000>+<2*400>+ERRN .WORD MS24</prms*2000>

UDAT3 DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE 44-1 INITIALIZE DRIVE AND LOOK AT DRIVE SIGNALS

16	002456	102201 052471	100000	•	T3D:	BIT #RWRDY,R1 BNE T4A	:DID R/W READY SET?
19	002461	115405 052430				INC R5 BNE T3C	
27	002463 002464 002465	115404 052426		ì		INC R4 BNE 13B FRRHRD MS25 R/W READY DID NOT	SET AFTER RECALIBRATE COMMAND
•	002465	021236 001037				ENNIND TISES, NY W READT BID NO.	CALL RERROR ;ERROR # 31. .WORD <prms*2000>+<2*400>+ERRN</prms*2000>
24	002467	001303				BR TESTEX	.WORD MS25

1	GET SU	UBUNIT CHARACTERISTICS
3 002471 104303 004547 14 4 002473 103203 177774	A: MOV BIC	UNITNB.R3 : GET UNIT OFFSET INTO UNITS TABLE #177774.R3 : R3 HAS SUBUNIT NUMBER (0 - 3) #10.R0 : SETUP SUBUNIT MASK
3 002471 104303 004547 14 4 002473 103203 177774 5 002475 104207 000010 6 002477 110207 1\$ 7 002500 117403 8 002501 032477 9 002502 103207 177417	MOV ROL DEC	RO ; SHIFT MASK R3 : DECREMENT SUBUNIT NUMBER
8 002501 032477	BPL BIC MOV	1\$; IF MASK NOT COMPUTED YET, BRANCH #LBHINB,RO ; CLEAR UNUSED BITS RO,SUBUNT
10 002504 104070 004652 11 002506 104203 004602 12 002510	MOV #C	CR.SCR.R3 : POINT TO GET SUBUNIT CHARACTERISTICS
002510 021102 002511 115003 002512 012524 002513 032520	CALL TST BEQ BPL	TESTEX,MS29,MS30 ; SDI INTERCHANGE TALKER ; INITIATE SDI INTERCHANGE R3 ; SEE IF ERROR OCCURRED 12\$; IF NOT, BRANCH 11\$; IF SO, BRANCH
002514 002514 021236 002515 001040 002516 001550	ERRHRD	D MS29; SEND COMMAND ERROR CALL RERROR ; ERROR # 32WORD <prms*2000>+<2*400>+ERRN .WORD MS29</prms*2000>
002517 003443 002520 11	\$: BR ERRHRD	
002522 001612		CALL RERROR : ERROR # 33WORD <prms*2000>+<2*400>+ERRN .WORD MS30</prms*2000>
002523 003443 002524 12	BR	TESTEX
13 002524 106207 000167 14 002526 012543 15 002527	CMP #S BEQ 13 FRRHRD	SBCRES,RO ; TEST AGAINST RETURN CODE 31 ; IF EQUAL, BRANCH D MS31,#SBCRES,RO; GET SUBUNIT CHARACTERISTICS FAILED
002527 100467 002530 104010 001316 002532 104201 000167 002534 100461		MOV RO,-(SP) MOV R1,SAVREG MOV #SBCRES,R1 MOV R1,-(SP)
002535 104301 001316 002537 021236 002540 005042 002541 001657		MOV SAVREG,R1 CALL RERROR :ERROR # 34WORD <prms*2000>+<2*400>+ERRN .WORD MS31</prms*2000>
16 002542 003443	BR	TESTEX

1			; SEEK	TO CYLINDER 0	
3 002543 4 002544 5 002546		004767 004771	131:	CLR RO MOV RO, EURCYL MOV RO, EURCYL+2	;LOAD CYLINDER O, GROUP O
6 002550 7 002552 8 002554	104307 103207	004707 007777 004770		MOV SUB+LBNCYL+1,RO BIC #HBHINB,RO MOV RO,CURCYL+1	: GET HI STARTING CYL NUMBER : CLEAR UNUSED BITS : SAVE
9 002556		004767		MOV #CURCYL,R1 CALL SEEK	POINT TO ZERO WORD

```
CALCULATE NUMBER OF SECTORS PER TRACK
                                              NO. OF SECTORS/TRACK = (NO. OF LBN'S/TRACK) + (NO. OF RBN'S/TRACK)
   002561
           104301
                    004712
                                      T4A1:
                                              MOV SUB+RBNTRK, R1
                                                                                 : GET RBN'S/TRACK
   002563
           103201
                    177600
                                              BIC #177600 R1
           104307
103207
105071
                                                                                 ; GET LBN'S/TRACK
   002565
                    004717
                                              MOV SUB+LBNTRK, RO
                                                                               : ZERO UPPER BITS
: ADD NUMBER OF LBN'S TO RBN'S
  002567
002571
                                              BIC #HIBYTE,RO
                    177400
                                              ADD RO,R1
                                                                               : SAVE
                                              MOV R1. SECTRK
                    004753
   002572
            104010
                                              ADD R1,R1
                                                                                : COMPUTE SECTORS TIMES TWO
: AS SECTORS READ BEFORE DECLARING
10 002574
           105011
11 002575
           104010 004733
                                              MOV R1, NSCSL
12
                                                                                 : NO HEADER FOUND
14
                                  : COMPUTE FIRST CYLINDER IN XBN AREA
15
                                                                                 : POINT TO NUMBER OF LBN CYLINDERS
16 002577
           104207 004706
                                              MOV #SUB+LBNCYL.RO
                                                                                 : GET LO ORDER LBN CYL
           104271
17 002601
                                              MOV (R0)+,R1
18 002602
                    004751
                                              MOV R1, FXBNCYL
                                                                                 ; FIRST XBN CYLINDER (LO)
           104010
                                                                                ; GET HI ORDER LBN CYL
19 002604
           104177
                                              MOV (RO) -RO
19 002604
20 002605
21
22
23
24 002607
25 002611
26 002612
27 002613
28 002615
29
30
31
32 002617
33 002621
34 002622
           104070 004752
                                              MOV RO, FXBNCYL+1
                                                                                 : FIRST XBN CYLINDER (HI)
                                    : COMPUTE FIRST CYLINDER IN DBN AREA
                                              ADD SUB+XBNCYL,R1
BCC T4B
                                                                                 ; ADD NUMBER OF XBN CYLINDERS
           105301
                    004727
           042613
                                                                                 : BRANCH IF NO CARRY
                                                                                 : INCREMENT HI ORDER CYL
            115407
                                               INC RO
                    004747
                                     T48:
                                              MOV R1, FDIACYL
                                                                              : STORE STARTING DBN CYLINDER
            104010
           104070
                    004750
                                              MOV RO, FDIACYL+1
                                    :COMPUTE LAST CYLINDER IN DBN AREA
           104303 004730
                                                                                GET NUMBER OF DBN CYLINDERS
                                               MOV SUB+DBNCYL, R3
           110703
                                               SWAB R3
34 002622
           103203
                    177400
                                               BIC #HIBYTE,R3
35 002624
            052631
                                              BNE
                                                     T4C
36 002625
002625
                                              ERRHRD MS32: CHARACTERISTICS SAY LESS THAN 1 DIAGNOSTIC CYLINDER
                                                                                                                     :ERROR # 35.
           021236
                                                                                                     CALL RERROR
                                                                                                     .WORD <PRMS * 2000>+<2 * 400>+ERRN
   002626
           001043
   002627
            001760
                                                                                                     .WORD MS32
37 002630
            003443
                                              BR
                                                       TESTEX
                                              DEC R3
38 002631
39 002632
                                                                                : REDUCE BY ONE AND ADD TO
            117403
                                     T4C:
                                                                                 : FIRST DBN CYLINDER TO
            105031
                                               ADD R3.R1
40 002633
                                               BCC T4D
                                                                                 : COMPUTE LAST CYLINDER
            042635
41 002634
                                               INC RO
            115407
42 002635
43 002637
            104010
                                               MOV R1, LDIACYL
                                                                                 :STORE LAST DBN CYLINDER
                    004744
                                     T4D:
            104070
                    004745
                                               MOV RO, LDIACYL+1
                    004710
                                                                                 ; GET GROUPS/CYLINDER
            104303
44 002641
                                              MOV
                                                       SUB+GRPCYL, R3
                                                                                 : CLEAR UNUSED BITS
45 002643
            103203
                    177400
                                              BIC
                                                       #HIBYTE,R3
46 002645
            104305
                    004730
                                                       SUB+DBNCYL, R5
                                                                                 : GET NUMBER OF RESERVED DBN GROUPS
                                              MOV
47 002647
            103205
                    177400
                                                       #HIBYTE,R5
                                                                                 ; CLEAR UNUSED BITS
                                              BIC
48 002651
            107053
                                                       R5.R3
                                                                                 ; R3 HAS FIRST RESERVED DBN CYL
                                              SUB
49 002652
                    004746
                                              MOV R3.LDIACYL+2
            104030
                                              MOV #LDIACYL,R1
CALL SEEK
            104201
50 002654
                    004744
51 002656
            024231
                                                                                 : SEEK TO LAST DBN CYLINDER
```

1 2 3	READ ALL FACTO	ORY FORMATTED TRACKS. IF ALL SECTORS ON A TRACK	READ WITH AN ERROR.	
4	COMPUTE DEN OF	FIRST BLOCK ON FACTORY	FORMATTED CYLINDER	
6 002657 114005 7 002660 104303 004711 8 002662 103203 177400 9 002664 104304 004753 10 002666 105035	T6: CLR MOV BIC MOV T6A: ADD	R5 SUB+TRKGRP,R3 #HIBYTE,R3 SECTRK,R4 R3,R5	: TRACKS/GROUP : X SECTORS/TRACK : TO COMPUTE NUMBER OF S	SECTORS PER GROUP
11 002667 117404 12 002670 052666 13 002671 104050 004765 14 002673 114001 15 002674	DEC BNE MOV CLR PUSH	R4 T6A R5,SECGRP R1 R2	: SAVE SECTORS/GROUP : BY : SAVE R2	MOV P2 -(SP)
002674 100462 16 002675 104302 004710 17 002677 103202 177400 18 002701 104301 004730 19 002703 110701 20 002704 103201 177400 21 002706 114005	MOV BIC MOV SWAB	SUB+GRPCYL,R2 #HIBYTE,R2 SUB+DBNCYL,R1 R1	GET GROUPS/CYL CLEAR UNUSED BITS GET CYLINDERS IN DBN A	MOV R2,-(SP) AREA
20 002704 103201 177400 21 002706 114005 22 002707 105025 23 002710 117401 24 002711 052707	BIC CLR 1\$: ADD DEC BNE POP	#HIBYTE,R1 R5 R2,R5 R1 1\$ R2	: TO COMPUTE BLOCK NUMBER: CLEAR PRODUCT	ER OF FIRST BLOCK
002674 100462 16 002675 104302 004710 17 002677 103202 177400 18 002701 104301 004730 19 002703 110701 20 002704 103201 177400 21 002706 114005 22 002707 105025 23 002710 117401 24 002711 052707 25 002712 002712 104262 26 002713 104307 004730 27 002715 103207 177400 28 002717 107075 29 002720 114007 30 002721 105301 004765 31 002723 042725 32 002724 115407 33 002725 117405	MOV BIC SUB CLR T6C: ADD BCC INC	SUB+DBNCYL,RO #HIBYTE,RO RO,R5 RO SECGRP,R1 T6D RO	: RESTORE R2 : GET RESERVED GROUPS : CLEAR UNUSED BITS : R5 IS NOW NUMBER OF WE	MOV (SP)+,R2
34 002726 052721	T6D: DEC BNE MOV ROR ROR ROR ROR	R5 T6C SUB+HIDBN,R3 R3 R3 R3 R3	GET HI DBN BITS SHIFT INTO POSITION	
36 002727 104303 004711 36 002731 110603 37 002732 110603 38 002733 110603 39 002734 110603 40 002735 103203 170377 41 002737 101037 42 002740 101207 140000 43 002742 104010 004763 44 002744 104070 004764 45 002746 104010 004742 46 002750 104070 004743 47 002752 104300 004743 47 002757 114004 50 002760 104303 004753	BIC BIS BIS MOV MOV MOV MOV MOV CLR	#HBLONB,R3 R3,R0 #HD.DBN,R0 R1,CURBLK R0,CURBLK+1 R1,LCDBN R0,LCDBN+1 LDIACYL+2,CURGRP #CURBLK,R5 R4 SECTRK,R3	CLEAR UNUSED BITS SET HI BITS SET IN DBN HEADER CODE	
50 002760 104303 004753 51 002762 024364 52 002763 115404 53 002764 104301 004711 54 002766 103201 177400 55 002770 106014	T6E: CALL INC MOV BIC CMP	READ1 R4 SUB+TRKGRP,R1 #HIBYTE,R1 R1,R4	:READ EACH SECTOR TILL C	ONE READS OK

56 002771 57 002772 58 002775 59 002776 60 003000 61 003001 62 003003 63 003005 64 003007 65 003010 66 003013 67 003015	013001 105300 043021 115400 003021 115400 104303 106030 013022 104300 104201 024231	004753 004764 004766 004710 004766 004744	004763	T6E1:	BEQ ADD BCC INC BR INC MOV CMP BEQ MOV MOV CALL	T6E1 SECTRK, CURBLK T6F CURBLK+1 T6F CURGRP SUB+GRPCYL, R3 R3, CURGRP T6X CURGRP, LDIACYL+2 #LDIACYL, R1 SEEK	
68 003016 69 003017 70 003021 71 003022 72 003024 73 003026 74 003030 75 003032 76 003033	114004 104303 002762 104304 103204 104301 103201 107041 104010	004753 004730 177400 004710 177400 004746		T6F: T6X:	CLR MOV BR MOV BIC MOV BIC SUB MOV	R4 SECTRK,R3 T6E SUB+DBNCYL,R4 #HIBYTE,R4 SUB+GRPCYL,R1 #HIBYTE,R1 R4,R1 R1,LDIACYL+2	

; GET NUMBER OF RESERVED GROUPS

: GET GROUPS/CYLINDER

: R1 HAS FIRST RESERVED GROUP : SAVE

1 2 3 4			ON THE	DISK, F AT GROUP	CYLINDER O, GROUP O AND PERFORM A SEEK TO THE SEL AND THEN A SEEK TO THE F TY HEADS POSITIONED CORRE	INCREMENTING THROUGH EVERY GROUP ECTED GROUP, READ A HEADER EACTORY FORMATTED DIAGNOSTIC ECTLY.
6			: COMPUT	E LENS F	PER GROUP	
8 003035 9 003036 10 003040	114001 104305 103205	004711 177400	17:	CLR MOV BIC	R1 SUB+TRKGRP,R5 #HIBYTE,R5	: LBN'S/TRK X TRK/GROUP
11 003042 12 003044	104303 103203 105031 117405	004717 177400	17A:	MOV BIC ADD DEC	SUB+LBNTRK,R3 #HIBYTE,R3 R3,R1 R5	GET LBN'S PER TRACK CLEAR UNUSED BITS
14 003047 15 003050 16 003051 17 003053 18 003055 19 003057 20 003061 21 003063 22 003065 23 003067	053046 104010 104050	004761 004756		MOV MOV	T7A R1,BLOCKG R5,TSTCYL	SAVE IN BLOCKG
19 003057	104307	004707 007777		MOV BIC	SUB+HICYL,RO #HBHINB,RO	CLEAR UNUSED BITS
21 003063	104070 104050 104050	004757 004760 004754		MOV MOV	RO, TSTCYL+1 R5, TSTCYL+2 R5, TSTBLK	; GROUP ZERO
24 003071 25 003073	104307 103207 104070	004710 170377 004755		MOV BIC MOV	SUB+HILBN,RO #HBLONB,RO RO,TSTBLK+1	CLEAR UNUSED BITS
26 003075 27 003077 28 003101	104307	004717 177400 004762		MOV BIC MOV	SUB+LBNTRK,RO #HIBYTE,RO RO,BLOCKT	GET LBN BLOCKS IN EACH TRACK CLEAR UNUSED BITS
29 003103 30 003104 31 003106 32 003110	114004 104205 104303 104201	004754 004762 004756	170:	CLR MOV MOV MOV	R4 #TSTBLK,R5 B! OCKT,R3 #TSTCYL,R1	READ TRACK 0 POINT TO LBN NUMBER GET MAXIMUM NUMBER OF SECTOPS TO READ SEEK TO CYLINDER
33 003112 34 003113 35 003114 36 003116 37 003120	024231 024364 104205 104303 104201	004742 004753 004744		CALL CALL MOV MOV MOV	SEEK READ1 #LCDBN.R5 SECTRK.R3 #LDIACYL.R1	READ UNTIL AT LEAST ONE RECORD READ WITHOUT ERROR POINT TO DBN NUMBER GET MAXIMUM NUMBER OF SECTORS TO READ SEEK TO DIAGNOSTIC CYLINDER
38 003122 39 003123 40 003124	024231 024364 104307	004760		CALL CALL MOV	SEEK READ1 TSTCYL+2,RO	READ UNTIL AT LEAST ONE RECORD READ WITHOUT ERROR
41 003126 42 003127 43 003131 44 003133	115407 104301 103201 106071	004710 177400		INC MOV BIC CMP	RO SUB+GRPCYL,R1 #HIBYTE,R1 RO,R1	
45 003134 46 003135	013140	004760		BEQ MOV	T7C1 RO,TSTCYL+2	
47 003137 48 003140	003222	004756	1701:	BR MOV	T7G TSTCYL,RO	GET CURRENT CYLINDER
49 003142 50 003143 51 003145 52 003147 53 003150	115407 104070 104301 043153	004756 004757		INC MOV MOV BCC	RO RO, ISTCYL ISTCYL+1,R1 I7D	:INCREMENT TO NEXT :SAVE NEW CYLINDER
53 003150 54 003151 55 003153	104010	004757		MOV	R1 R1.TSTCYL+1	
55 003153 56 003154 57 003156	114005 104050 106307	004760 004751	17D:	CLR MOV (MP	R5.TSTCYL+2 FXBNCYL,RO	CHECK IF INCREMENTED TO XBN AREA

58 003160 59 003161 60 003163 61 003164 62 003165 63 003167 64 003171 65 003172 66 003173 67 003174 68 003175 69 003177 70 003201 71 003203 72 003205 73 003207 74 003211 75 003213 76 003214 77 003216 78 003214 77 003216 78 003224 80 003222 81 003224 82 003226 83 003230 84 003231 85 003233 86 003234 87 003236	053214 106301 053214 114007 104070 104307 110607 110607 110607 110607 104070 104307 104070 104307 104070 104307 104307 104307 104307 104307 104307 104307 104307 104307 104307 104307 104307 104307 104070 003104	004752 004754 004710 170377 120000 004755 004765 004761 004747 004750 004754 004754 004755 004755	17E: 17G:	BNE CMP BLR MOV ROR ROR ROR ROV MOV MOV MOV MOV MOV MOV MOV MOV MOV M	T7E FXBNCYL+1,R1 T7E R0 R0,TSTBLK SUB+HIXBN,R0 R0 R0 R0 R0 R0 R0 R0 R0 R0 R0,TSTBLK+1 SECTRK,R0 R0,BLOCKT SECGRP,R0 R0,BLOCKG T7C FDIACYL,R0 T7G FDIACYL+1,R1 T7X TSTBLK,R0 BLOCKG,R0 R0,TSTBLK T7H TSTBLK+1,R0 R0 R0,TSTBLK+1	
88 003237	003104		17A:	BK	170	

- ; TO FIRST XBN
- ; ROTATE TO CORRECT BIT POSITION
- :STRIP OFF UNUSED BITS
- CHANGE BLOCK COUNT PER TRACK
- CHANGE BLOCK COUNT PER CYLINDER
- ; NOW GO SEEK TO THIS XBN
- CHECK IF INCREMENTED TO DBN AREA

GET BLOCK NUMBER ; ADD BLOCKS PER GROUP

SAVE NEW TEST BLOCK NUMBER

: NOW TEST NEXT CYLINDER

1 003237	T8:		
23456		CRMAT A TRACK, THEN DO SEVERA INTIL ONE SECTOR PASSES. DO T ON EACH CYLINDER IN THE DIAGNO (FACTORY FORMATTED) CYLINDER O	L WRITES, READS AND DATA COMPARES HIS FOR EACH TRACK IN EACH GROUP ISTIC AREA EXCEPT FOR THE LAST IN THE PACK
8 003237 104201 004756 9 003241 024231 10 003242 114004		MOV #TSTCYL,R1 CALL SEEK CLR R4	: POINT TO CYLINDER TO SEEK TO : SEEK TO FIRST DIAGNOSTIC CYLINDER : START WITH DBN 0
11 003243 104040 004754 12 003245 104307 004711 13 003247 110207 14 003250 110207 15 003251 110207 16 003252 110207	F F	MOV R4,TSTBLK MOV SUB+HIDBN,RO ROL RO ROL RO ROL RO ROL RO	GET HIGH ORDER BITS OF STARTING DBN : MOVE TO CORRECT POSITION
17 003252 110207 170377 18 003255 101207 140000 19 003257 104070 004755 20 003261 104040 004772	E	BIC #HBLONB.RO BIS #HD.DBN.RO MOV RO.TSTBLK+1 MOV R4.CURTRK	: CLEAR UNUSED BITS : SET HEADER CODE : MOVE TO HIGH ORDER STARTING DBN : SAVE TRACK NUMBER
21 003263 023444 22 003264 023563		CALL FORTRK CALL TRKTST MOV TSTBLK,RO ADD SECTRK,RO	: FORMAT THE TRACK : TEST THE TRACK : GET LO TRACK'S STARTING BLOCK NUMBER : ADD SECTORS/TRACK
25 003271 104070 004754 26 003273 043301 27 003274 104307 004755 28 003276 115407		MOV RO,TSTBLK BCC T8B MOV TSTBLK+1,RO INC RO	: SAVE : IF NO CARRY, BRANCH : GET HI ORDER : INCREMENT
30 003301 104304 004772 31 003303 115404 32 003304 104303 004711	188:	MOV RO,TSTBLK+1 MOV CURTRK,R4 INC R4 MOV SUB+TRKGRP,R3	: SAVE : GET TRACK NUMBER : INCREMENT TRACK NUMBER : GET NUMBER OF TRACKS/GROUP : CLEAR UNUSED BITS
33 003306 103203 177400 34 003310 106034 35 003311 053261 36 003312 114004 37 003313 115400 004760		BIC #HIBYTE,R3 CMP R3,R4 BNE T8A CLR R4 INC TSTCYL+2	: SEE IF ALL TRACKS READ : IF NOT, BRANCH : ZERO R4 : MCVE TO NEXT GROUP
38 003315 104301 004710 39 003317 103201 177400 40 003321 106010 004760 41 003323 053333		MOV SUB+GRPCYL,R1 BIC #HIBYTE,R1 CMP R1,TSTCYL+2 BNE T8D	GET GROUPS/CYLINDER CLEAR UNUSED BITS COMPARE IF ALL GROUPS NOT TESTED, BRANCH
42 003324 104040 004760 43 003326 115400 004756 44 003330 043333 45 003331 115400 004757		MOV R4.TSTCYL+2 INC TSTCYL BCC T8D INC TSTCYL+1	; START WITH GROUP O ON NEW CYLINDER ; INCREMENT CYLINDER ; IF NO CARRY, BRANCH ; INCREMENT HI CYLINDER
46 003333 106300 004756 (47 003336 053347	004744 T8D: 004745	CMP TSTCYL, LDIACYL BNE 1\$ CMP TSTCYL+1, LDIACYL+1 BNE 1\$: SEE IF ON LAST CYLINDER (LO ORDER) : IF NOT, BRANCH : SEE IF ON LAST CYLINDER (HI ORDER) : IF NOT, BRANCH
50 005343 106300 004760 (51 003346 013353 52 003347 104201 004756	004746 1\$:	CMP TSTCYL+2,LDIACYL+2 BEQ T8X MOV #TSTCYL,R1 CALL SEEK	: SEE IF ON RESERVED GROUPS : IF SO, END THIS PHASE OF TEST : POINT TO NEW CYLINDER OR GROUP : ISSUE SEEK
53 003351 024231 54 003352 003261 55 003353		BR T8A	: BRANCH

UDAT3 DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE 51 INITIALIZE DRIVE AND LOOK AT DRIVE SIGNALS

1 003353 2 003355 003355 003356 003360 003361	104203 (021102 115003 013371 033365	004570	19:	MOV TALKX CALL TST BEQ BPL	#CR.DIS,R3 TESTEX,MS52,MS53 TALKER R3 12\$ 11\$; POINT TO DISCOMM ; SDI INTERCHANGE ; INITIATE SDI INT ; SEE IF ERROR OCC ; IF NOT, BRANCH ; IF SO, BRANCH	TERCHANGE
003361 003361 003362 003363 003364 003365	021236 001044 003124 003443		11\$:	ERRHRD BR ERRHRD	MS52; SEND COMMAND ERROR TESTEX MS53; RECEIVE COMMAND ER		CALL RERROR ; ERROR # 36. .WORD <prms*2000>+<2*400>+ERRN .WORD MS52</prms*2000>
003365 003366 003367 003370 003371	021236 001045 003156 003443		12\$:	BR	TESTEX		CALL RERROR ; ERROR # 37WORD <prms*2000>+<2*400>+ERRN .WORD MS53</prms*2000>
3 003371 4 003373 5 003374 003374 003375 003377	013410 100467 104010 104201	000176 001316 000176		CMP BEQ ERRHRD	#COMPLT,RO T9X MS54,#COMPLT,RO	; CHECK FOR SUCESS ; IF SO, BRANCH ; IF NOT, REPORT E	ERROR MOV RO(SP) MOV R1,SAVREG MOV #COMPLI,R1
003401 003402 003404 003405 003406 6 003407 7 003410	100461 104301 021236 005046 003213 003443	001316	T9x:	BR	TESTEX	; BRANCH TO END OF	MOV R1,-(SP) MOV SAVREG,R1 CALL RERROR ;ERROR # 38WORD <prms*2000>+<2*400>+ERRN .WORD MS54 TEST</prms*2000>

UDAT3 DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE 52 INITIALIZE DRIVE AND LOOK AT DRIVE SIGNALS

2 007411	
003415 102201 004000 BIT #4000,R1 ; SEE IF XMIT ERROR 003417 013424 BEQ 1\$; IF NO ERROR, BRANCH 003420 003420 021236 003421 001047 003422 000000 003423 003443 BR TESTEX ; BRANCH TO DONE 003424 021236 003424 021236 003425 001050 003426 000045 003427 003427 003443 BR TESTEX ; BRANCH TO DONE 003428 003429 000000 003429 000000 003429 000000 003420 000000 003420 000000 003420 0000000 003420 000000 003420 000000 003420 0000000 003420 0000000 003420 0000000 003420 0000000 003420 0000000 003420 0000000 003420 0000000 003420 0000000 003420 0000000 003420 0000000 003420 00000000 003420 000000 003420 0000000 003420 00000	
003415 102201 004000 BIT #4000,R1 ; SEE IF XMIT ERROR 003420	
003420 021236	
03420 021236 003421 001047 003422 000000 003423 003443 003424 021236 003424 021236 003425 001050 003426 000045 003427 003443 003427 003443 003427 003443 003430 2\$: BR TESTEX BRANCH TO DONE CALL RERROR : ERROR # 40. WORD PRMS*2000>+<2*400>+ERROR WORD PRMS*2000>+<2*400>+ERROR WORD PRMS*2000>+<2*400>+ERROR WORD PRMS*2000>+<2*400>+ERROR UNIT PROR SEROR # 40. WORD PRMS*2000>+<2*400>+ERROR WORD MS2 SEROR # 40. WORD PRMS*2000>+<2*400>+ERROR SEROR # 40. SEROR #	
003424 021236	NS
003424 021236 003425 001050 003426 000045 003427 003443 BR TESTEX ; BRANCH TO DONE 003430 102201 000100 BIT #AVAIL,R1 ; SEE IF AVAILABLE IS ASSERTED 4 0C3432 053443 BNE T10LOP ; IF SO, BRANCH 5 003433 117405 BNE T10LOP ; DECREMENT TIMEOUT COUNT 6 003434 053411 BNE T10LOP ; IF UNEXPIRED, BRANCH 7 003435 103201 077674 BIC #077674,R1 ; CLEAR UNUSED BITS 8 003437 ERRHRD MS56,R1 ; REPORT ERROR	
003430	₹N
3 003430 102201 000100 BIT #AVAIL,R1 ; SEE IF AVAILABLE IS ASSERTED 4 0C3432 053443 BNE T10X ; IF SO, BRANCH 5 003433 117405 DEC R5 ; DECREMENT TIMEOUT COUNT 6 003434 053411 BNE T10LOP ; IF UNEXPIRED, BRANCH 7 003435 103201 077674 BIC #077674,R1 ; CLEAR UNUSED BITS 8 003437 ERRHRD MS56,R1 ; REPORT ERROR	
7 003435 103201 077674 BIC #077674,R1 ; CLEAR UNUSED BITS 8 003437 ERRHRD MS56,R1 ; REPORT ERROR	
003437 100461 ERRARD MS36,R1 ; REPURT ERROR MOV R1,-(SP)	
003440 021236	₹N
9 003443	

UDAT3 DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE 53 INITIALIZE DRIVE AND LOOK AT DRIVE SIGNALS

1 003443 001764

TESTEX: BR TESTX

003444			FORTRK:						
2 3 4			i i	FORMAT THE DAT	TRACK GIVEN BY CURTRK, S A WRITTEN IS UNPREDICTAL	STAR BLE	TING WIT	H DBN G	IVEN IN TSTBLK
7 003446 8 003450 9 003452 10 003454 11 003456 12 003457 13 003460 14 003461 15 003463	104307 104301 104203 104304 104205 100253 100257 100251 115407 043464 115401 117404 053456	004754 004755 005433 004753 006034	FLOOP:	MOV MOV MOV MOV MOV MOV INC BCC INC DEC BNE	TSTBLK,R0 TSTBLK+1,R1 #OBUFF,R3 SECTRK,R4 #FCHAIN,R5 R3,(R5)+ R0,(R5)+ R1,(R5)+ R0 FCARY R1 R4 FLOOP		R5 POINT MOVE POI MOVE LO MOVE HI INCREMEN IF NO CA INCREMEN DECREMEN	TARTING OUTPUT LINS NUM S TO FO NTER TO DBN TO DBN TO IT LO DB NRRY, BR IT HI DB IT SECTO	DBN BUFFER BER OF SECTORS TO FORMAT RMAT CHAIN BUFFER TO CHAIN CHAIN CHAIN N ANCH
19 003466 20 003470 21 003471	104207 100157	100000		MOV MOV DSTAT	#FSTOP.RO RO.(R5) TESTEX.MS10.MS2 RDSTAT	-	GET FORM MOVE INT GET DRIV GET DRIV	O CHAIN	OF-CHAIN FLAG
003472 003474 003475	020720 102201 013510 102201 013504	010000 004000		CALL BIT BEQ BIT BEQ ERRHRD	#10000,R1 2\$ #4000,R1 1\$ MS10		SEE IF A IF NO ER SEE IF X IF SO, B	NY ERRO ROR, BR MIT ERR BRANCH	ANCH
003501	021236 001052 000454 003443			BR	TESTEX		BRANCH T		CALL RERROR :ERROR # 42. .WORD <prms*2000>+<2*400>+ERRN .WORD MS10</prms*2000>
003504 003504 003505 003506	021236 001053 000045		1\$:	ERRHRD	MS2	:	REPORT X	MIT ERR	CALL RERROR :ERROR # 43. .WORD <prms*2000>+<2*400>+ERRN .WORD MS2</prms*2000>
003507 003510	003443		2\$:	BR	TESTEX	:	BRANCH T	O DONE	
22 003510 23 003512 24 003513	102201 053517 021236	100000		BIT BNE ERRHRD	#RWRDY,R1 FGO MS35;READ/WRITE READY I	DROP	TEST R/W IF ASSER PPED BEFO	READY RTED, BR ORE FORM	ANCH IAT CALL RERROR ;ERROR # 44.
003514 003515	001054								.WORD <prms*2000>+<2*400>+ERRN .WORD MS35</prms*2000>
25 003516 26 003517 27 003521 28 003523 29 003525 30 003527 31 003530 32 003532 33 003534 34 003535	002020 003443 104207 104304 103204 104303 110703 103203 104301 060001 115001 013562	006034 004713 177400 004713 177400 004772	FGO:	BR MOV BIC MOV SWAB BIC MOV XFC TST BEQ	TESTEX #FCHAIN,RO SUB+DATPRE,R4 #HIBYTE,R4 SUB+HDRPRE,R3 R3 #HIBYTE,R3 CURTRK,R1 FORMAT R1 FOREXT		GET DATA CLEAR UN GET HEAD SWAP BYT CLEAR UN TRACK NU FORMAT T	PREAMB PREAMB USED BI DER PREA ES USED BY IMBER THE TRAC	CHAIN (FOR XFC) SLE LENGTHS TS MBLE LENGTH
36 003537 003537 003541	104010 104301	001316 004772		ERRHRD		, CÚR	TRK;TIME	OUT OF	DRIVE OR READ/WRITE READY DROPPED D MOV R1,SAVREG MOV CURTRK,R1

```
003543 100461
003544 104301 004661
003546 100461
003547 104301 004660
003551 100461
003552 104301 004657
003554 100461
003555 104301 001316
003557 021236
003560 011055
003561 002052
37 003562 000000
```

FOREXT: RETURN

MOV R1,-(SP)
MOV INS+3,R1
MOV R1,-(SP)
MOV INS+2,R1
MOV R1,-(SP)
MOV INS+1,R1
MOV R1,-(SP)
MOV SAVREG,R1
CALL RERROR :ERROR # 45.
.WORD <PRMS*2000>+<2*400>+ERRN
.WORD MS36

1 003563			TRKTST:				
34					E ENTIRE TRACK		EAST ONE BLOCK IS SUCCESSFULLY TA PATTERNS
6 003563		004754		MOV	TSTBLK RO		; MOVE LO STARTING DBN TO CURRENT DBN
7 003565 8 003567 9 003571	104070 104307 104070	004763 004755 004764		MOV MOV	RO, CURBLK TSTBLK+1,RO RO, CURBLK+1	•	; MOVE HI STARTING DBN TO CURRENT DBN
10 003573	104301	004753		MOV DEC	SECTRK,R1		GET SECTORS/TRACK ADJUST FOR END LOOP WHEN NEGATIVE
11 003575 12 003576	104010	004774	TRKLOP:	MOV	R1, SECCNT		; SAVE SECTORS LEFT IN SECTOR COUNT
13 003600 14 003602	104201 023625	000001		MOV	#1,R1 WTRCMP		: MOVE 1 TO CURRENT PATTERN : WRITE THAN READ AND COMPARE THE SECTOR
15 003603 16 003604	115007 013624			TST BEQ	RO TRKEXT		: SEE IF WRITES, READS AND COMPARES WERE GOOD : IF SO, BRANCH
17 003605	104307	004763		MOV	CURBLK, RO		; GET LO CURRENT BLOCK NUMBER
18 003607 19 003610		004763		INC	RO, CURBLK		; INCREMENT DBN NUMBER ; SAVE
20 003612 21 003613	043620 104307	004764		BCC MOV	TRKBOT CURBLK+1,RO		; BRANCH IF NO CARRY ; GET HI DBN NUMBER
22 003615 23 003616	115407	004764		INC	RO CURBLK+1		: INCREMENT : SAVE
24 003620	104301	004774	TRKBOT:	MOV	SECCNT,R1		; GET SECTOR COUNT
25 003622 26 003623	117401 033576			DE C BPL	R1 TRKLOP		: DECREMENT COUNT : BRANCH IF COUNT POSITIVE
27 003624	000000		TRKEXT:				

1 003625		WTRCMP:		
345		COMPARE	DATA PATTERN TO A SECTOR ON THE DATA. DO THIS AS PATTERN NUMBER IN 'CURPA	R, READ IT BACK, THEN DO A DATA S MANY TIMES AS THERE IS PATTERNS. AT
6 7 003625 8 003627 9 003631 10 003632 11 003633 12 003634 13 003635 14 003636 15 003640 17 003641 18 003642 19 003643 20 003645 21 003650 23 003651	104010 004773 105201 006321 023652 023673 115007 053651 024027 115007 053651 024147 115007 053651 104301 004773 115401 106301 006321 033625 000000	MOV ADD CALL CALL TST BNE CALL TST BNE CALL TST BNE CALL TST BNE MOV INC CMP BPL WTREXT: RETURN	R1, CURPAT #PATPTR,R1 GENPAT WRITEB R0 WTREXT READB R0 WTREXT CMPDAT R0 WTREXT CURPAT,R1 R1 PATPTR,R1 WTRCMP	R1 IS CURRENT PATTERN NUMBER R1 NOW POINTS TO PATTERN TO GENERATE GENERATE THE PATTERN IN THE OUTPUT BUFFER WRITE THE PATTERN SEE IF ANY ERROR OCCURRED IF SO, BRANCH READ THE BLOCK BACK SEE IF ANY ERRORS OCCURRED IF SO, BRANCH COMPARE THE DATA SEE IF ANY ERRORS OCCURRED IF SO, BRANCH GET CURRENT PATTERN NEXT PATTERN COMARE AGAINST MAXIMUM PATTERN NUMBER IF LESS OR EQUAL, LOOP

1 003652	GEI	NPAT:			
3		GENERATE	THE DATA PAT	TERN IN THE OUTPUT BUFFER	
5				TO PATTERN BUFFER WHICH IS PATTERN LENGTH	
8 003652		PUSH	R2	; SAVE R2	(CD)
9 003652 100462 9 003653 104117 10 003654 104203 11 003656 104204 12 003660 104071 13 003661 104215 14 003662 104212		MOV MOV MOV NOUT: MOV MOV NIN: MOV	(R1),R0 #256.,R3 #0BUFF,R4 R0,R1 (R1)+,R5 (R1)+,R2	RO POINTS TO START OF PATTERN E REPORT REPO	BUFFER
15 003663 100242 16 003664 117403 17 003665 013671 18 003666 117405 19 003667 053662 20 003670 003660 21 003671	CE	MOV DEC BEQ DEC BNE BR	R2,(R4)+ R3 GENEXT R5 GENIN GENOUT	; MOVE TO BUFFER ; DECREMENT BUFFER COUNT ; IF BUFFER FULL, EXIT ; DECREMENT PATTERN COUNT ; IF NON-ZERO, BRANCH ; START PATTERN OVER AGAIN	
003671 104262 22 003672 000000	GE	NEXT: POP RETURN	R2	; RESTORE R2 MOV (SP)	,R2

3

```
003673
                                            WRITEB:
                                                      WILL WRITE ONE SECTOR OF DATA TO THE DISK
   003673
              104207
                        140000
                                                      MOV
                                                                #WSTOP_RO
   003675
              104070
                        005425
                                                                RO, RW. STAT+CHAIN; MOVE END-OF-CHAIN TO CHAIN
                                                      MOV
              104307
104070
104307
104070
                        004763
   003677
                                                                CURBLK . RO
                                                                                               : MOVE LO DBN TO CHAIN
                                                      MOV
8 003701
9 003703
10 003705
                        005427
                                                                RO, RW. LOW+CHAIN
                                                      MOV
                                                                CURBLK+1,RO
                        004764
                                                      MOV
                                                                                               : MOVE HI DBN TO CHAIN
                                                                RO, RW. HI+CHAIN
                        005430
                                                      MOV
11
   003707
              104307
                        004772
                                                                CURTRK . RO
                                                                                              : MOVE TRACK + RTC TO CHAIN
: SET REAL TIME COMMAND WRITTE
                                                      MOV
12 003711
13 003713
                                                                #WREAL . RO
RO . RW . CMD+CHAIN
              101207
                        122400
                                                      BIS
              104070
                        005431
                                                      MOV
                                                                                               : MOVE OUTPUT BUFFER TO CHAIN
14 003715
              104207
                        005433
                                                                #OBUFF . RO
                                                      MOV
15 003717
              104070
                                                                RO, RW. BUF + CHAIN
                        005426
                                                      MOV
                                                                TESTEX, MS10, MS2
16 003721
                                                      DSTAT
                                                                                               ; GET DRIVE STATE
             020720
102201
013740
    003721
                                                                                               : GET DRIVE STATUS
                                                      CALL
                                                                RDSTAT
   003722
                        010000
                                                                #10000,R1
                                                                                               : SEE IF ANY ERRORS
                                                      BIT
   003724
003725
003727
                                                                                               ; IF NO ERROR, BRANCH
                                                      BEQ
                                                                 2$
             102201 013734
                                                                #4000_R1
                        004000
                                                                                               : SEE IF XMIT ERROR
                                                      BIT
                                                                                               : IF SO, BRANCH
: REPORT INVALID STATUS ERROR
                                                      BEQ
                                                                1$
    003730
                                                      ERRHRD
                                                                MS10
              021236 001056
    003730
                                                                                                                      CALL RERROR
                                                                                                                                         :ERROR # 46.
                                                                                                                      .WORD <PRMS * 2000>+<2 * 400>+ERRN
    003731
   003731
003732
003733
003734
003734
              000454
                                                                                                                       . WORD MS10
                                                                TESTEX
MS2
                                                                                         : BRANCH TO DONE
: REPORT XMIT ERROR
              003443
                                                      ERRHRD
                                            15:
              021236
                                                                                                                      CALL REPROR
                                                                                                                                         :ERROR # 47.
    003735
              001057
                                                                                                                      .WORD <PRMS *2000>+<2 *400>+ERRN
    003736
              000045
                                                                                                                      .WORD MS2
    003737
              003443
                                                                 TESTEX
                                                                                               : BRANCH TO DONE
    003740
                                            2$:
17 003740
              102201
053754
                        100000
                                                      BIT
                                                                #RWRDY . R1
                                                                                               ; SEE IF READ/WRITE READY IS ASSERTED
18 003742
19 003743
                                                                WGO
                                                                                               : IF SO, BRANCH
                                                      BNF
              104307
                                                                 SECCNT, RO
                                                                                               : GET SECTOR COUNT
                        004774
                                                      MOV
20 003745
21 003746
              054026
                                                                WRTEXT
                                                                                               ; IF NONZERO, DO NOT REPORT ERROR
                                                      BNE
                                                                MS39; READ/WRITE DROPPED READY BEFORE WRITE
                                                      ERRHRD
    003746
                                                                                                                      CALL RERROR : ERROR # 48.
    003747
              001060
                                                                                                                      .WORD <PRMS *2000>+<2 *400>+ERRN
    003750
              002131
                                                                                                                      .WORD MS39
22 003751
23 003753
24 003754
25 003755
26 003757
27 003761
28 003763
29 003764
30 003765
31 003766
              104207
                        000001
                                                                                               : FLAG ERROR
                                                      MOV
                                                                #1.RO
                                                                                             : BRANCH
              004026
                                                                WRTEXT
                                                      BR
                                                                                             : WAIT FOR SECTOR OR INDEX PULSE
              060012
                                            WGO:
                                                                WAITSI
                                                                                             POINT TO WRITE CHAIN
MOVE DATA PREAMBLE LENGTH TO R4
              104207
104304
                        005425
                                                                #CHAIN, RO
                                                      MOV
                        004713
                                                                SUB+DATPRE, R4
                                                      MOV
                                                                                              : CLEAR UNUSED BITS
              103204
                        177400
                                                      BIC
                                                                #HIBYTE.R4
                                                                                               ; WRITE THE BLOCK
; FLAG AS NO ERRORS
; SEE IF AN ERROR OCCURRED
              060003
                                                                XWRITE
                                                      XFC
              114007
                                                                RO
                                                      CLR
              115001
                                                                 R1
                                                      TST
                                                                WRTEXT : IF NOT, BRANCH

SECONT, RO : SEE IF ERROR SHOULD BE REPORTED

WRTEXT : IF NOT, BRANCH

MS40,R1,CURBLK,CURBLK+1,INS+1,INS+2,INS+3,CURTRK;ERROR DURING WRITE
              014026
                                                      BEQ
32 003767
33 003771
              104307
                        004774
                                                      MOV
              054026
                                                      BNF
   003772
                                                      ERRHRD
    003772
                                                                                                                      MOV RI, SAVREG
              104010.
                        001316
              104301
    003774
                        004772
                                                                                                                      MOV CURTRK . R1
    003776
              100461
                                                                                                                      MOV R1, - (SP)
              104301
    003777
                        004661
                                                                                                                      MOV INS+3.R1
```

35	004001 004002 004004 004005 004007 004010 004012 004013 004015 004016 004020 004021 004022 004023	100461 104301 100461 100461 100461 100461 100461 100461 100461 002163 1002163 100207	004660 004657 004764 004763 001316
35 36	004024	104207	000001

MOV #1,RO WRTEXT: RETURN

```
MOV R1,-(SP)
MOV INS+2,R1
MOV R1,-(SP)
MOV INS+1,R1
MOV R1,-(SP)
MOV CURBLK+1,R1
MOV R1,-(SP)
MOV CURBLK,R1
MOV R1,-(SP)
MOV SAVREG,R1
MOV R1,-(SP)
CALL RERROR :ERROR # 49.
.WORD <PRMS*2000>+<2*400>+ERRN
.WORD MS40

; MAKE RO NONZERO TO REPORT ERROR
```

```
004027
                                            READB:
                                                      READ ONE SECTOR FROM DISK
             104207
104070
104307
101207
   004027
                        100000
                                                                                              : MOVE END-OF-CHAIN TO CHAIN
                                                      MOV
                                                                #RSTOP_RO
 6 004031
                                                                RC.RW.STAT+CHAIN
                        005425
                                                      MOV
   004033
                        004772
                                                                CURTRK, RO
                                                      MOV
                                                                                              ; MOVE TRACK NUMBER AND RTC TO CHAIN
 8 004035
9 004037
                                                                #RREAL , RO
                        013400
                                                      BIS
                                                                                              ; SET REAL TIME READ COMMMAND
              104070
                        005431
                                                                RO, RW. CMD+CHAIN
                                                      MOV
10 004041
              104207
                        005003
                                                      MOV
                                                                #RBUFD . RO
                                                                                              : MOVE POINTER TO INPUT BUFFER INTO CHAIN
11 004043
              104070
                        005426
                                                      MOV
                                                                RO.RW.BUF + CHAIN
                                                                                              GET DRIVE STATE
12 004045
                                                                TESTEX, MS10, MS2
                                                      DSTAT
    004045
              020720
                                                      CALL
                                                                RDSTAT
              102201
    004046
                                                                                              : SEE IF ANY ERRORS
                        010000
                                                      BIT
                                                                #10000,R1
   004050
              014064
                                                                2$
                                                                                              ; IF NO ERROR, BRANCH
                                                      BEQ
    004051
004053
              102201
                                                                #4000.R1
                       004000
                                                      BIT
                                                                                              : SEE IF XMIT ERROR
                                                                                              : IF SO, BRANCH
             014060
                                                                1$
                                                      BEQ
    004054
                                                      ERRHRD
                                                               MS10
                                                                                              : REPORT INVALID STATUS ERROR
    004054
              021236
                                                                                                                                        :ERROR # 50.
                                                                                                                     CALL RERROR
    004055
              001062
                                                                                                                     .WORD <PRMS *2000>+<2 *400>+ERRN
    004056
              000454
                                                                                                                     .WORD MS10
                                                                TESTEX
    004057
             003443
                                                                                              : BRANCH TO DONE
    004060
                                           18:
                                                      ERRHRD
                                                                                              : REPORT XMIT ERROR
    004060
              021236
                                                                                                                     CALL RERROR
                                                                                                                                        :ERROR # 51.
             001063
    004061
                                                                                                                     .WORD <PRMS *2000>+<2 *400>+ERRN
    004062
              000045
                                                                                                                     . WORD MS2
    004063
              003443
                                                                TESTEX
                                                      BR
                                                                                              : BRANCH TO DONE
    004064
                                            2$:
13 004064
              102201
                                                                                              : SEE IF READ/WRITE READY IS ASSERTED : IF SO, BRANCH
                        100000
                                                      BIT
                                                                #RWRDY,R1
14 004066
              054100
                                                      BNE
                                                                RGO
             104307 054146
15 004067
                                                                SECCNT, RO
                                                                                              GET SECTOR COUNT
IF NONZERO, DO NOT REPORT ERROR
                        004774
                                                      MOV
                                                                REDEXT
16 004071
                                                      BNE
17 004072
                                                                MS43; READ/WRITE DROPPED READY BEFORE READ
                                                      ERRHRD
   004072
004073
             021236 001064
                                                                                                                     CALL RERROR : ERROR # 52.
                                                                                                                     .WORD <PRMS * 2000>+<2 * 400>+ERRN
    004074
              002320
                                                                                                                     . WORD MS43
18 004075
              104207
                        000001
                                                      MOV
                                                                #1.R0
                                                                                              : FLAG ERROR
19 004077
             004146
                                                                REDEXT
                                                                                                BRANCH
19 004077
20 004100
21 004101
22 004103
23 004104
24 004105
25 004106
26 004107
27 004111
28 004112
             060012
                                            RGO:
                                                      XFC
                                                                WAITSI
                                                                                                WAIT FOR SECTOR OR INDEX PULSE
                                                               #CHAIN,RO : POINT TO READ CHAIN

XREAD : READ THE SECTOR

RO : FLAG AS NO ERRORS

R1 : SEE IF ERROR OCCURRED

REDEXT : IF NOT, BRANCH

SECCNT,RO : SEE IF ERROR SHOULD BE REPORTED

REDEXT : IF NOT, BRANCH

MS44,R1,CURBLK,CURBLK+1,INS+1,INS+2,INS+3,CURTRK;ERROR DURING READ
              104207
                        005425
                                                      MOV
              060002
                                                      XFC
              114007
              115001
                                                      TST
              014146
                                                      BEQ
              104307
                        004774
                                                      MOV
              054146
    004112
              104010
104301
                                                                                                                    MOV R1, SAVREG
    004114
                                                                                                                    MOV CURTRK . R1
    004116
              100461
                                                                                                                    MOV R1,-(SP)
    004117
              104301
                        004661
                                                                                                                     MOV INS+3,R1
   004121
004122
004124
              100461
                                                                                                                     MOV R1, - (SP)
              104301
                        004660
                                                                                                                     MOV INS+2,R1
              100461
                                                                                                                    MOV R1, - (SP)
    004125
              104301
                        004657
                                                                                                                    MOV INS+1,R1
    004127
              100461
                                                                                                                    MOV R1,-(SP)
    004130
             104301
                       004764
                                                                                                                    MOV CURBLK+1,R1
```

	004132	100461	004763
	004135	100461	001316
	004140	100461 021236	
	004142	017065	
29	004143	002351	000001
30	004146	000000	

#1.R0 MOV REDEXT: RETURN

MOV R1,-(SP) MOV R1,-(SP)
MOV CURBLK,R1
MOV R1,-(SP)
MOV SAVREG,R1
MOV R1,-(SP)
CALL RERROR :ERROR # 53.
.WORD <PRMS*2000>+<2*400>+ERRN
.WORD MS44

: FLAG ERROR

```
CMPDAT:
  1 004147
                                                              COMPARE THE DATA IN 'OBUFF' (OUTPUT BUFFER) WITH 'RBUFD'
                                                              (INPUT BUFFER)
6 004147
7 004151
8 004153
9 004154
10 004155
                104207
104201
114003
                                                                                                            ; RO POINTS AT OUTPUT BUFFER
                                                                          #OBUFF, RO
                                                              MGV
                                                                                                            : R1 POINTS AT INPUT BUFFER
                                                                         #RBUFD,R1
                           005003
                                                              MOV
                                                                                                            : COUNTER
                                                              CLR
                                                                          R3
                                                                                                            : GET OUTPUT BUFFER WORD
                                                                          (RO)+,R4
                                                  CMPLOP: MOV
                104274
                                                             CMP (R1)+,R4 ; COMPARE AGAINST INPUT BUFFER
BEQ NOERR ; IF NO ERROR, BRANCH
MOV SECCNI,R5 ; SEE IF ERROR IS TO BE REPORTED
BNE CMPEXT ; IF NOT, BRANCH
ERRHRD MS45,R3,-(R0),-(R1),INS+1,INS+2,INS+3,CURTRK;DATA COMPARE FAILURE
                106214
11 004156
12 004157
13 004161
                014223
                104305
                           004774
                054230
14 004162 004162
                104010
                                                                                                                                      MOV R1, SAVREG
                           001316
                                                                                                                                      MOV CURTRK, R1
    004164
                           004772
                                                                                                                                      MOV R1,-(SP)
    004166
                100461
    004167
                                                                                                                                      MOV INS+3,R1
                104301
                           004661
                                                                                                                                      MOV R1, - (SP)
    004171
                100461
    004172
004174
                104301
                           004660
                                                                                                                                      MOV INS+2,R1
                100461
                                                                                                                                      MOV R1, - (SP)
     004175
                104301
                                                                                                                                      MOV INS+1,R1
                           004657
     004177
                                                                                                                                      MOV R1, -(SP)
                100461
    004200
004202
004204
004205
004206
                                                                                                                                      MOV SAVREG,R1
                104301
                                                                                                                                      MOV R2, SAVREG
MOV -(R1), R2
                104020
                           001316
                104412
                                                                                                                                      MOV R2,-(SP)
MOV SAVREG,R2
                100462
                104302
                           001316
                                                                                                                                      MOV R1, SAVREG
MOV -(RO), R1
     004210
                104010
                           001316
    004212
004213
                104471
                                                                                                                                      MOV R1,-(SP)
MOV R3,-(SP)
                100461
004213
004214
004215
004217
004220
004221
15 004222
16 004223
17 004224
                100463
                104301
                           001316
                                                                                                                                      MOV SAVREG, R1
                                                                                                                                      CALL RERROR
                021236
                                                                                                                                                            :ERROR # 54.
                                                                                                                                      .WORD <PRMS+2000>+<2+400>+ERRN
                017066
                002505
                                                                                                                                      .WORD MS45
                004230
                                                                          CMPEXT
                                                                                                            : EXIT
                                                                                                            : INCREMENT COUNT
                115403
                                                  NOERR:
                                                              INC
                                                                          R3
                                                                          #256.,R3
                106203
                            000400
                                                              CMP
                                                                                                            : SEE IF COMPARE COMPLETE
18 004226
19 004227
20 004230
                                                                                                            : IF NOT, BRANCH
: FLAG AS NO ERRORS
                                                                          CMPLOP
                054154
                                                              BNE
                114007
                                                              CLR
                                                  CMPEXT: RETURN
                000000
```

```
: SEEK
                                              SEEK TO CYLINDER POINTED TO BY CONTENTS OF R1
                                             : INPUTS:
                                                       R1 - POINTER TO CYLINDER NUMBER
                                                       R2 - SDI INTERCONNECT
9 004231
004231
004232
004233
10 004234
11 004235
                                             SEEK:
                                                       PUSH <R0.R1.R3>
                                                                                                                               MOV RO . - (SP)
              100467
                                                                                                                               MOV R1,-(SP)
              100461
                                                                                                                                MOV R3,-(SP)
              100463
                                                                                             :PUT CYLINDER INTO COMMAND
                                                       MOV (R1)+,R0
              104217
                                                       MOV RO, INS+1
              104070
                        004657
11 004235
12 004237
13 004240
14 004242
15 004243
16 004245
17 004247
004250
              104217
                                                       MOV (R1)+,R0
                                                       MOV RO, INS+2
              104070
                        004660
                                                       MOV (R1), R0
                                                                                                : PUT GROUP INTO COMMAND
              104117
              104070 104203
                                                       MOV RO. INS+3
                        004661
                                                       MOV #CR.SEK, R3
                                                                                                ; POINT TO COMMAND
                                             SEEKA:
                        004621
                                                       TALKX
                                                                 TESTEX, MS46, MS47
                                                                                                ; SDI INTERCHANGE
                                                                                                 : INITIATE SDI INTERCHANGE
              021102
                                                        CALL
                                                                  TALKER
                                                                                                 : SEE IF ERROR OCCURRED
: IF NOT, BRANCH
                                                        TST
                                                                  R3
    004251
004252
004253
004253
004254
004255
004256
004257
004260
              014263
                                                       BEQ
                                                                                                 : IF SO, BRANCH
              034257
                                                                  11$
                                                       BPL
                                                                 MS46: SEND COMMAND ERROR
                                                       ERRHRD
                                                                                                                                           :ERROR # 55.
                                                                                                                        CALL RERROR
              021236
                                                                                                                        .WORD <PRMS * 2000>+<2 * 400>+ERRN
                                                                                                                        . WORD MS46
              002645
                                                                  TESTEX
              003443
                                             115:
                                                        ERRHRD
                                                                 MS47: RECEIVE COMMAND ERROR
                                                                                                                        CALL RERROR
                                                                                                                                            :ERROR # 56.
                                                                                                                        .WORD <PRMS *2000>+<2 *400>+ERRN
              001070
004261
004262
004263
18 004263
19 004265
20 004266
                                                                                                                        . WORD MS47
              002674
               003443
                                                        BR
                                                                  TESTEX
                                             12$:
              106207 014313
                         000176
                                                        CMP #COMPLT.RO
                                                                                                 : CHECK RESPONSE
                                                        BEQ SEEK1
                                                        ERRHRD MS48, #COMPLT, RO, INS+1, INS+2, INS+3; SEEK COMMAND REJECTED
    004266
004270
004272
004273
004275
004276
004300
                                                                                                                        MOV R1, SAVREG
               104010
104301
                         001316
                                                                                                                        MOV INS+3,R1
                         004661
                                                                                                                        MOV R1,-(SP)
               100461
104301
                                                                                                                        MOV INS+2,R1
                         004660
                                                                                                                        MOV R1,-(SP)
               100461
                                                                                                                        MOV INS+1,R1
               104301
                         004657
                                                                                                                        MOV R1,-(SP)
               100461
                                                                                                                        MOV RO, -(SP)
     004301
               100467
                                                                                                                        MOV #COMPLT, R1
     004302
               104201
                         000176
    004304
004305
004307
004310
                                                                                                                        MOV R1 .- (SP)
               100461
                                                                                                                        MOV SAVREG, R1
               104301
021236
                         001316
                                                                                                                                            :ERROR # 57.
                                                                                                                        CALL RERROR
                                                                                                                        .WORD <PRMS *2000>+<2 *400>+ERRN
               013071
                                                                                                                        .WORD MS48
     004311
               002726
    004312
               004360
                                                        BR SEEK3
                                                                                                 SET UP WORST CASE SEEK TIME
               114003
                                             SEEK1:
                                                        CLR R3
                                                                                                GET DRIVE SIGNALS
GET DRIVE STATUS
SEE IF ANY ERRORS
                                                                  TESTEX, MS10, MS2
    004314
                                             SEEK2: DSTAT
                                                        CALL
                                                                  RDSTAT
     004314
                                                        BIT
                                                                  #10000,R1
     004315
               102201
                         010000
```

UDAT3 DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE 61-1 INITIALIZE DRIVE AND LOOK AT DRIVE SIGNALS

004317 004320 004322 004323 004323 004324	014333 102201 014327 021236 001072 000454	004000		BEQ BIT BEQ ERRHRD	2\$ #4000,R1 1\$ MS10	; IF NO ERROR, BRANCH ; SEE IF XMIT ERROR ; IF SO, BRANCH ; REPORT INVALID STATUS ERROR CALL RERROR ; ERROR # 58. .WORD <prms*2000>+<2*400>+ERROR .WORD MS10</prms*2000>
004320 004323 004323 004324 004325 004327 004327 004330 004331 004332 004333	003443 021236 001073 000045 003443		1\$:	BR ERRHRD BR	TESTEX MS2	; BRANCH TO DONE ; REPORT XMIT ERROR CALL RERROR ; ERROR # 59. .WORD <prms*2000>+<2*400>+ERROR .WORD MS2 ; BRANCH TO DONE</prms*2000>
004333 24 004333 25 004335 26 004336 27 004337 28 004340	102201 054360 115403 054314	100000	2\$:	BIT #RW BNE SEE INC R3 BNE SEE	RDY,R1 K3	:IS R/W READY SET? : YES :BUMP COUNT :KEEP WAITING :SEEK COMPLETE TIME OUT
004340 004342 004344 004345 004347 004350 004352 004353 004355 004356	104010 104301 100461 100461 100461 100461 104301 021236	001316 004661 004660 004657 001316		EMANA	M3)(,1N3*1,1N3*2,1N3*3	MOV R1, SAVREG MOV INS+3,R1 MOV R1,-(SP) MOV INS+2,R1 MOV R1,-(SP) MOV INS+1,R1 MOV R1,-(SP) MOV SAVREG,R1 CALL RERROR ;ERROR # 60. WORD <prms*2000>+<2*400>+ERROR</prms*2000>
004357 29 004360 004360 004361 004362 30 004363	003041		SEEK3:	POP <r3< td=""><td>,R1,R0></td><td>.WORD MS51 MOV (SP)+,R3 MOV (SP)+,R1 MOV (SP)+,R0</td></r3<>	,R1,R0>	.WORD MS51 MOV (SP)+,R3 MOV (SP)+,R1 MOV (SP)+,R0

```
:READ1
                                         READ SECTORS ON THE SELECTED TRACK UNTIL ONE IS READ CORRECTLY
                                         OR THE MAXIMUM NUMBER OF SECTORS IS READ
                                         : INPUTS:
                                                  R2 - SDI INTERCONNECT
R3 - MAXIMUM NUMBER OF SECTORS TO READ
8
9
10
11
                                                  R4 - TRACK NUMBER
                                                  R5 - POINTER TO BLOCK NUMBER OF FIRST SECTOR
                                         :OUTPUTS:
                                                  NONE
   004364
                                        READ1: PUSH <RO,R1,R3,R4,R5>
   004364
                                                                                                                   MOV RO, - (SP)
             100467
   004365
                                                                                                                   MOV R1,-(SP)
             100461
   004366
             100463
                                                                                                                   MOV R3,-(SP)
004367
004370
15 004371
                                                                                                                   MOV R4,-(SP)
             100464
             100465
                                                                                                                   MOV R5, -(SP)
                                                  MOV #RBUFO+RW.LOW, RO
             104207
                      004777
                                                                                       : PUT BLOCK NUMBER IN
16 004373
             104251
                                                  MOV (R5)+,R1
                                                                                       : READ BUFFER
17 004374
             100271
                                                  MOV R1, (R0)+
18 004375
                                                 MOV (R5), R1
             104151
19 004376
             100271
                                                  MOV R1, (R0)+
20 004377
21 004400
22 004402
23 004403
                                                                                       :PUT IN TRACK NUMBER
                                                  MOV (RO), R1
             104171
             103201
                      000377
                                                  BIC #377.R1
                                                                                       : (MERGE WITH REAL-TIME COMMAND)
                                                  BIS R4,R1
             101041
             100171
                                                  MOV R1, (R0)
24 004404
25 004406
                                                                                       :POINT TO READ BUFFER
                     004775
             104207
                                        READIA: MOV #RBUFO,RO
                                                                                       : SAVE SDI INTERCONNECT
                                                  PUSH R2
                                                                                                                   MOV R2, - (SP)
   004406
             100462
26 004407
                                                  DSTAT TESTEX, MS10, MS2
                                                                                       ; GET DRIVE REAL TIME STATE
   004407
             020720
                                                           RDSTAT
                                                                                       : GET DRIVE STATUS
                                                  CALL
                                                                                       : SEE IF ANY ERRORS
: IF NO ERROR, BRANCH
   004410
             102201
                                                           #10000,R1
                      010000
                                                  BIT
   004412
            014426
                                                  BEQ
                                                           2$
                                                                                       : SEE IF XMIT ERROR
: IF SO, BRANCH
: REPORT INVALID STATUS ERROR
             102201
                                                           #4000,R1
                      004000
                                                  BIT
   004415
             014422
                                                  BFQ
                                                           13
   004416
                                                  ERRHRD MS10
   004416
                                                                                                                              :ERROR # 61.
                                                                                                            CALL RERROR
                                                                                                            .WORD <PRMS * 2000>+<2 * 400>+ERRN
    004417
             001075
   004420
             000454
                                                                                                             .WORD MS10
                                                                                       ; BRANCH TO DONE
             003443
    004421
                                                           TESTEX
004421
004422
004423
004424
004425
004426
27 004426
                                                  ERRHRD
                                        1$:
                                                                                       : REPORT XMIT ERROR
                                                                                                            CALL RERROR
             021236
                                                                                                                              :ERROR # 62.
                                                                                                             .WORD <PRMS *2000>+<2 *400>+ERRN
             001076
                                                                                                            .WORD MS2
             000045
             003443
                                                                                       : BRANCH TO DONE
                                                           TESTEX
                                         2$:
                                                                                       : SEE IF READ WRITE READY IS STILL HIGH : IF SO, BRANCH
             102201
                                                  BIT #RWRDY, R1
                      100000
28 004430
             054435
                                                  BNE READ1C
29 004431
                                                  ERRHRD MS43: READ/WRITE READY DROPPED BEFORE READ
   004431
                                                                                                            CALL RERROR
                                                                                                                              :ERROR # 63.
    004432
             001077
                                                                                                             .WORD <PRMS *2000>+<2 *400>+ERRN
    004433
             002320
                                                                                                             .WORD MS43
                                                                                       : BRANCH
             003443
30 004434
31 004435
                                                  BR TESTEX
                                                                                       ; WAIT FOR SECTOR OR INDEX PULSE B4 READ
             060012
                                        READIC: XFC WAITSI
32 004436
             060002
                                                  XFC XREAD
                                                                                       : READ THE SECTOR
```

UDAT3 DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE 62-1 INITIALIZE DRIVE AND LOOK AT DRIVE SIGNALS

33 004437				POP R2		
34 004440 35 004441 36 004442 37 004443	104262 115001 014521 117403 014456	00/777		TST R1 BEQ READ1X DEC R3 BEQ READ1E MOV #RBUF 0+RW.LOW.R0	CHECK FOR ERROR ; END ROUTINE IF READ OK ; COUNT MAX SECTORS TO READ ; REPORT ERROR IF ALL READ	
38 004444 39 004446 40 004447 41 004450 42 004451 43 004452 44 004453 45 004454	104207 104171 115401 100271 044455 104171 115401 100171	004777		MOV (RO),R1 INC R1 MOV R1,(RO)+ BCC READ1B MOV (RO),R1 INC R1 MOV R1,(RO)	; INCREMENT BLOCK NUMBER	
46 004455 47 004456 48 004460 49 004462 50 004464	004404 104201 104307 102207 014467	000114 005000 170000		BR READIA MOV #'L,RI MOV RBUFO+RW.HI,RO BIT #170000,RO BEQ 1\$	GO READ NEXT SECTOR PREPARE TO PRINT LBN GET BLOCK NUMBER CHECK FOR ZERO HEADER BITS	
51 004465	104201	000130		MOV #'X,R1	; IF NOT ZERO, CHANGE TO XBN	
52 53 004467			15:	NO SECTOR ON TRACK CAN BE READ ERRHRD MS55,R1,RBUFO+RW.LOW,RBU	JFO+RW.HI, INS+1, INS+2, INS+3, RBUFO+RW.CMD	
004467 004471 004473	104010 104301 100461	001316 005001			MOV R1,5, VREG MOV RBUFC+RW.CMD,R1 MOV R1,-(SP)	
004474	104301	004661			MOV INS+3,R1	
004476 004477	100461 104301	004660			MOV R1,-(SP) MOV INS+2,R1	
004501 004502	100461 104301	004657			MOV R1,-(SP) MOV INS+1,R1	
004504 004505	100461 104301	005000			MOV R1,-(SP) MOV RBUF0+RW.HI,R1	
004507	100461				MOV R1,-(SP)	
004510 004512	104301 100461	004777			MOV RBUFO+RW.LOW,R1 MOV R1,-(SP)	
004513 004515	104301 100461	001316			MOV SAVREG,R1 MOV R1,-(SP)	
004516	021236				CALL RERROR :ERROF .WORD <prms*2000>+<2</prms*2000>	R # 64.
004517 004520	017100 003301		054014	000 (05 0/ 07 01 00)	. WORD MS55	4002 (27/1/16
54 004521 004521 004522	104265		READIX:	POP <r5,r4,r3,r1,r0></r5,r4,r3,r1,r0>	MOV (SP)+,R5	
004522 004523	104264 104263				MOV (SP)+,R4 MOV (SP)+,R3	
004524 004525	104261 104267				MOV (SP)+,R1 MOV (SP)+,R0	
55 004526	000000			RETURN	MUV (3F)+,RU	

```
: PROGRAM VARIABLES
                                         :UNIT NUMBER STORAGE FOR DISK DRIVES TO TEST
                                                                                         16 SUBUNITS (8 MAX) 4 ON EACH UNIT
                                        UNITS: . REPT
   004527 000020
                                                                                        ; MARK ALL UNITS AS NON-EXISTANT TO START WITH
                                                  . WORD
                                                  .ENDR
   004527
004530
004531
004532
004533
004534
                                                                                          MARK ALL UNITS AS NON-EXISTANT TO START WITH
                                                  . WORD
                                                            177777
            177777
                                                                                          MARK ALL UNITS AS NON-EXISTANT TO START WITH
                                                            177777
            177777
                                                  . WORD
                                                                                          MARK ALL UNITS AS NON-EXISTANT TO START WITH
                                                            177777
                                                  . WORD
            177777
                                                                                         MARK ALL UNITS AS NON-EXISTANT TO START WITH MARK ALL UNITS AS NON-EXISTANT TO START WITH MARK ALL UNITS AS NON-EXISTANT TO START WITH
                                                            177777
                                                  WORD
            177777
                                                            177777
                                                  -WORD
            177777
                                                  . WORD
                                                            177777
            177777
                                                                                          MARK ALL UNITS AS NON-EXISTANT TO START WITH
                                                  . WORD
                                                            177777
   004535
            177777
                                                                                          MARK ALL UNITS AS NON-EXISTANT TO START WITH
   004536
                                                  . WORD
                                                            177777
            177777
                                                                                                    UNITS AS NON-EXISTANT TO START WITH
                                                                                          MARK AL'
                                                  . WORD
                                                            177777
   004537
            177777
                                                                                          MARK ALL UNITS AS NON-EXISTANT TO START WITH
                                                            177777
   004540
            177777
                                                   . WORD
                                                                                          MARK ALL UNITS AS NON-EXISTANT TO START WITH MARK ALL UNITS AS NON-EXISTANT TO START WITH
   004541
004542
004543
                                                   . WORD
                                                            177777
             177777
                                                            177777
                                                   . WORD
             177777
                                                                                          MARK ALL UNITS AS NON-EXISTANT TO START WITH
                                                   . WORD
                                                            177777
             177777
                                                                                          MARK ALL UNITS AS NON-EXISTANT TO START WITH
                                                            177777
   004544
                                                   . WORD
             177777
                                                                                          MARK ALL UNITS AS NON-EXISTANT TO START WITH
                                                            177777
   004545
                                                   . WORD
            177777
                                                                                          MARK ALL UNITS AS NON-EXISTANT TO START WITH
                                                            177777
   004546
                                                   . WORD
            177777
                                                                                        :NUMBER OF UNIT CURRENTLY UNDER TEST
                                        UNITNB: . WORD 0
   004547 000000
                                                                                        :POINTER TO TABLE ABOVE
10
                                                                                        :SDI INTERCONNECT CODE FOR XFC CALLS
12
                                                   .WORD 0
   004550 000000
                                         SDI:
                                                  MESSAGE TABLES
14
15
                                         CR.ONL: MSG ONL, 2, ST, 7
                                                                                        ; DRIVE ONLINE
16
   004551
                                                                                        :ADDRESS OF COMMAND
   004551
                                                   . WORD ONL
             004640
                                                                              SIZE OF COMMAND IN BYTES
                                                   .WORD 2
   004552
             000002
                                                                                        :ADDRESS OF REPLY
   004553
             004664
                                                   .WORD ST
                                                                              SIZE OF REPLY IN WORDS
   004554
                                                   .WORD 7
             000007
                                                                              ; SUCCESSFUL COMPLETION CODE
                                                   . WORD
             000000
                                                                                        : DRIVE CLEAR
                                         CR.CLR: MSG DRC.2.ST.7
17 004556
                                                                               :SIZE OF COMMAND IN BYTES
                                                   . WORD DRC
   004556
             004646
   004557
                                                   .WORD 2
             000002
004560
004561
004562
18 004563
004563
                                                                                        :ADDRESS OF REPLY
                                                   . WORD ST
             004664
                                                                              SIZE OF REPLY IN WORDS
                                                   .WORD 7
             000007
                                                                               ; SUCCESSFUL COMPLETION CODE
                                                   . WORD
             000000
                                                                                        : DIAGNOSE
                                      CR.DIA: MSG DIA.3,ST.7
                                                                               SIZE OF COMMAND IN BYTES
             004642
                                                   .WORD DIA
   004564 004565
                                                   .WORD 3
                                                                              ; ADDRESS OF REPLY
; SIZE OF REPLY IN WORDS
; SUCCESSFUL COMPLETION CODE
; DISCONNECT
             000003
                                                   .WORD ST
.WORD 7
             004664
    004566
             000007
    004567
             000000
                                                   . WORD
19 004570
                                         CR.DIS: MSG DIS,2,ST.7
                                                   .WORD DIS
                                                                                        ; ADDRESS OF COMMAND
    004570
             004644
                                                                              SIZE OF COMMAND IN BYTES
                                                   .WORD 2
             000002
    004571
                                                                                        :ADDRESS OF REPLY
                                                   . WORD ST
    004572
             004664
                                                                               SIZE OF REPLY IN WORDS
                                                   .WORD 7
    004573
             000007
                                                                              : SUCCESSFUL COMPLETION CODE
                                                   . WORD
    004574
             000000
                                                                                        : GET CHARACTERISTICS
                                         CR.GCR: MSG GCR.1, CR.12.
   004575
                                                                                        : ADDFESS OF COMMAND
    004575
             004650
                                                   . WORD GCR
```

```
ACRO XO4.00 9-JUL-81 01:13:55 PAGE 63-1

DIX AT DRIVE SIGNALS

...WORD 1
...WORD CR
...WORD 12
...WORD 12
...WORD 12
...WORD 13
...WORD SCR
...WORD SCR
...WORD 2
...WORD 21
...WORD 21
...WORD SUB
...WORD 21
...WORD 1
...WORD 7
...WORD 7
...WORD 8
...WORD 7
...WORD 8
...WORD 7
...WORD 1
...WORD 1
...WORD 7
...WORD 1
...WORD 1
...WORD 7
...WORD 1
          004577
                                     004673
                                     000014
          004600
          004601
                                     000000
21 004602
          004602
                                     004651
          004603
                                     000002
          004604
                                     004706
                                     000025
          004605
          004606
                                     000000
22 004607
          004607
                                     004653
          004610
                                     000001
          004611
                                     004664
                                     000007
          004612
          004613
                                     000000
23 004614
          004614
                                     004662
          004615
                                     000003
          004616
                                     004664
          004617
                                     000007
          004620
                                     000000
24 004621
          004621
                                     004656
          004622
                                     000006
          004623
                                     004664
          004624
                                     000007
          004625
                                     000000
25 004626
26 004626
          004626
                                     004655
          004627
                                     000001
          004630
                                     004664
          004631
                                     000007
          004632
                                     000000
27 004633
          004633
                                     004654
                                     000001
          004634
          004635
                                     004664
                                     000007
          004636
          004637
                                     000000
 29
30
31
32
33
34
35
                                                                                                                                                  LEVEL 2 COMMAND MESSAGE DATA STRUCTURES
                                                                                                                                                   .BYTE 0.213 : BRING DRIVE ONLINE
.WORD 77
.BYTE 0.3 : DIAGNOSE
         004640
                                                                                                                       ONL:
                                     000077
          004641
         004642
                                               000
                                                                                                                       DIA:
                                                                                                                                                    .WORD 0
          004643
                                     000000
                                                                                          WORD 0
DIS: BYTE 0.204 ; DISCONNECT
WORD 0

DRC: BYTE 0.DRVCLR ; DRIVE CLEAR
ERRORS: WORD 0 ; ERROR FLAGS
GCR: BYTE 0.GETCHR ; GET CHARACTERISTICS
SCR: BYTE 0.GETSUB ; GET SUBUNIT CHARACTERISTICS
SUBUNT: WORD 0 ; SUBUNIT SELECTION IN LOW ORDER BYTE
GST: BYTE 0.GETSTA ; GET STATUS
RUN: BYTE 0.14 ; SPIN UP DRIVE
         004644
                                               000
 36
37
                                      000000
          004645
         004646
                                               000
 38 004647
39 004650
                                      000000
 40 004651
                                      000000
 41 004652
42 004653 43 004654
                                               000
```

S

004655	000 000 000000 000000	216 012	INR: INS:	BYTE O, IRECLB BYTE O, INSEEK WORD O WORD O	: INITIATE RECALIBRATE : INITIATE SEEK : INS CYLINDER/HEAD ARGUMENTS
7 004660 3 004661 9 004662 0 004663	000000 000 006	201 037	MOD:	.WORD 0 .BYTE 0.201 .BYTE 6.37	; CHANGE MODE
				RESPONSE MESSAGE DATA BUT	FFERS
004664			ST: CR:	.BLKW 7 .BLKW 31.	:STATUS MESSAGE BUFFER :CHARACTERISTICS MESSAGE BUFF
9 004734 0 004735	000000 000000 004701		DMSDI: NSCSL:	.WORD 0 .WORD 0 .WORD SUB-5 .BLKW 5	DUMMY SDI CONTROL BLK OF SECTORS IN HEADER SEARCH POINTER TO SUBUNIT CHAR. WORD DMSDI+7 IS CLOBBERED BY U SO SET ASIDE SPACE
3			:	DISK LOCATION POINTERS	
6 004742 6 004744 7 004747 8 004751 9 004753			LDIACYL FDIACYL FXBNCYL	.BLKW 2 :.BLKW 3 :.BLKW 2 :.BLKW 2 .BLKW 1	FIRST FACTORY FORMATTED DBN FACTORY FORMATTED CYLINDER FIRST DIAGNOSTIC CYLINDER FIRST XBN CYLINDER SECTORS PER TRACK
0 1 004754 2 004756 3 004761 4 004762 5 004763 6 004765 7 004766 8 004767 9 004772 0 004773 1 004774	000000 000000 000000		TSTCYL: BLOCKG: BLOCKT: CURBLK: SECGRP: CURGRP: CURCYL: CURPAT:	.BLKW 2 .BLKW 3 .BLKW 1 .BLKW 1 .BLKW 2 .BLKW 1 .BLKW 1 .BLKW 3 .WORD 0 .WORD 0	; TEST BLOCK NUMBER ; TEST CYLINDER NUMBER ; BLOCKS ON CURRENT GROUP ; BLOCKS ON CURRENT TRACK ; CURRENT BLOCK NUMBER ; NUMBER OF SECTORS PER GROUP ; CURRENT GROUP NUMBER ; CURRENT CYLINDER AND GROUP ; CURRENT TRACK ; CURRENT PATTERN ; SECTOR COUNT
23				READ DATA BUFFERS	
7 004775 8 004775 9 004776	100000 005003		RBUF0:	.WORD RSTOP .WORD RBUFD .BLKW 2	; FIRST BUFFER ; STATUS AND LINK POINTER ; POINTER TO DATA
0 004777 1 005001 2 005002 3	013400 004732			.WORD RREAL .WORD DMSDI	: LEVEL 1 SDI COMMAND : POINTER TO DUMMY SDI CONTROL
5 005003			RBUFD:	.BLKW 274. WRITE DATA BUFFERS	READ DATA BUFFER
7 8 005425 9 005425	000000		CHAIN:	.WORD 0	: READ AND WRITE CHAIN AREA : STATUS AREA

ITALI	TE DEINE	AND LOOK	AT DRIVE	21 GIV	ALS		
102	005427 005430 005431 005432	000000 000000 000000 004732				.WORD (3
106 107 108	005433				OBUFF:	.BLKW 2	257.
109					:	FORMAT	CHAIN
112 113 114 115	006034 006034 006035 006036 006036 006037 006040 006041 006042 006043 006044 006045 006050 006051 006052 006053 006054 006057 006056 006057 006060 006067 006060 006067 006070 006071 006072 006073 006074 006075 006076 006077 006077 006077 006077 006077 006077 006077 006077 006077 006077 006077 006077 006077 006077	000074 000000 000000 000000 000000 000000 0000			FCHAIN:	REPRORD WOORD WOOR	.000 0000000000000000000000000000000000

: LO ORDER HEADER : HI ORDER HEADER REAL TIME COMMAND AND TRACK NUMBER POINTER TO DUMMY SDI CONTROL BLOCK :WRITE DATA BUFFER : UP TO 60 DBNS/TRK MAXIMUM : BUFFER POINTER : LO ORDER DBN : HI ORDER DBN : BUFFER POINTER LO ORDER DBN : HI ORDER DBN : BUFFER POINTER ; LO ORDER DBN : HI ORDER DBN : BUFFER POINTER : LO ORDER DBN : HI ORDER DBN : BUFFER POINTER : LO ORDER DBN : HI ORDER DBN : BUFFER POINTER : LO ORDER DBN : HI ORDER DBN BUFFER POINTER ; LO ORDER DBN HI ORDER DBN BUFFER POINTER LO ORDER DBN HI ORDER DBN BUFFER POINTER LO ORDER DBN HI ORDER DBN BUFFER POINTER : LO ORDER DBN ; HI ORDER DBN : BUFFER POINTER : LO ORDER DBN : HI ORDER DBN : BUFFER POINTER : LO ORDER DBN : HI ORDER DBN BUFFER POINTER ; LO ORDER DBN ; HI ORDER DBN BUFFER POINTER LO ORDER DBN : HI ORDER DBN : BUFFER POINTER

: LO ORDER DBN : HI ORDER DBN

			Tues .	
006106 006107 006110 006111 006112 006113 006114 006115 006116 006120 006121 006122 006123 006124 006125 006126 006127 006130 006131 006131 006131 006135 006136 006137 006140 006141 006142	000000 000000 000000 000000 000000 00000			
006145 006146 006147 006150 006151 006153 006154 006155 006156 006157 006160 006161 006163 006164 006165 006167 006170 006171 006172 006173	000000 000000 000000 000000 000000 00000			
006174 006175 006176	000000 000000			

. WORD 0000000 . WORD 0000 . WORD . WORD . WORD . WORD 00000000 . WORD 0 . WORD 000 . WORD 0 . WORD . WORD 0 . WORD 0 . WORD 0 Õ . WORD ŏ . WORD 0 . WORD . WORD

BUFFER POINTER LO ORDER DBN HI ORDER DBN BUFFER POINTER LO ORDER DBN HI ORDER DBN

U

ABBBBBBBBBCCCCC

ILL DATE	- 1110	 		
00/177	000000		.WORD	-
006177	00000C			
006200	000000		. WORD	
006201	000000		. WORD	
006202	000000		. WORD	
006203	000000		. WORD	-
006204	000000		.WORD	
006205	000000		. WORD	
006206	000000		. WORD	
006207	000000		. WORD	
006210	000000		. WORD	
			.WORD	
006211	000000			
006212	000000		. WORD	
006213	000000		. WORD	
006214	000000		. WORD	
006214 006215 006216 006217 006220	000000		. WORD	
000213			.WORD	
000210	000000			
006217	000000		. WORD	
006220	000000		. WORD	
006221	000000		. WORD	
006222	000000		. WORD	
006223	000000		.WORD	
000223				
006224	000000		. WORD	
006225	000000		. WORD	
006226	000000		. WORD	
006227	000000		. WORD	
006230	000000		.WORD	
000230				
006231	000000		. WORD	
006232	000000		. WORD	
006233	000000		. WORD	
006234	000000		. WORD	
006235	000000		. WORD	
006236	000000		.WORD	
006237	000000		. WORD	
006240	000000		. WORD	
006241	000000		. WORD	
006242	000000		. WORD	
006243	000000		.WORD	
006244	000000		.WORD	
006245	000000		. WORD	
006246	000000		. WORD	
006247	000000		. WORD	
006250	000000		. WORD	
006251	000000		. WORD	
006253	000000		.WORD	
006251 006252 006253 006254 006255 006256				
000255	000000		. WORD	
006254	000000		. WORD	
006255	000000		. WORD	
006256	000000		. WORD	
006257	000000		.WORD	
000237				
000200	000000		. WORD	
006261	000000		. WORD	
006262	000000		. WORD	
006263	000000		. WORD	
006264	000000		.WORD	
006265	000000		WORD	
006266	000000		. WORD	
006267	000000		. WORD	

BUFFER POINTER LO ORDER DBN HI ORDER DBN BUFFER POINTER LO ORDER DBN : HI ORDER DBN

006270 006271 006272 006273 006274 006275 006276 006277 006300 006301 006302 006303 006304 006305 006306 006307	00000C 000000 000000 000000 000000 000000	
006307	000000	

```
. WORD
. WORD
.WORD
. WORD
. WORD
. WORD
. WORD
. WORD
. WORD
.WORD
. WORD
         0000
. WORD
. WORD
. WORD
. WORD
```

BUFFER POINTER LO ORDER DBN HI ORDER DBN BUFFER POINTER : LO ORDER DBN ; HI ORDER DBN BUFFER POINTER : LO ORDER DBN ; HI ORDER DBN BUFFER POINTER LO ORDER DBN HI ORDER DBN BUFFER POINTER LO ORDER DBN HI ORDER DBN BUFFER POINTER LO ORDER DBN HI ORDER DBN BUFFER POINTER : LO ORDER DBN HI ORDER DBN : BUFFER POINTER : LO ORDER DBN

; HI ORDER DBN

: EXTRA WORD FOR END-OF-CHAIN FLAG

U

1 006321 2 006322 3 006323 4 006324 5 006325	000004 006334 006355 006376 006421	PATPTR:	.WORD .WORD .WORD .WORD	4 PAT4 PAT5 PAT6 PAT8	; FOUR PATTERNS WILL BE TESTED	
6		:			(LENGTH OF PATTERN IN WORDS, FOLLOWED BY PATTERN)	
8 004 734	000001	PAT1:	.WORD	1		
9 006326	000001 105613		. WORD	105613		
11 006330	000001 031463	PAT2:	.WORD	031463		
12 006331 13 006332	000001	PAT3:	. WORD	1		
14 006333	030221 000016	PAT4:	.WORD	030221	; SHIFTING ONES	
14 006333 15 006334 16 006335 17 006336	000001	FAI4.	. WORD	000001	, 3/1/ /1/10 0/12	
17 006336	000003		.WORD	000003 000007		
18 006337 19 006340	000007 000017		. WORD	000017		
20 006341 21 006342	000037 000077		. WORD	000037		
22 006343	000177		.WORD	000177		
23 006344 24 006345	000377 000777		. WORD	000377		
25 006346	001777		.WORD	001777		
26 006347 27 006350	003777		.WORD	003777		
28 006351	001777 003777 007777 017777 037777		.WORD .WORD .WORD .WORD .WORD .WORD .WORD	000037 000077 000177 000377 001777 003777 017777 017777		
29 006352 30 006353	037777 077777		.WORD	03////		
31 006354	177777	9 A 15 E 15	. WORD	1/////	CHIETING ZEROS	
32 006355 33 006356	000016 177776	PAT5:	.WORD	16 177776	: SHIFTING ZEROS	
34 006357	177774		.WORD	177774		
35 006360 36 006361	177770 177760		.WORD	177770 177760		
37 006362	177740		. WORD	177740		
38 006363 39 006364	177700 177600		.WORD	177700 177600		
40 006365	177400		. WORD	177400		
41 006366 42 006367	177000 176000		.WORD	177000 176000		
43 006370	174000		. WORD	174000		
44 006371 45 006372	170000 160000		.WORD	170000 160000		`
46 006373	140000		. WORD	140000		
47 006374 48 006375	100000		. WORD	000000		
49 006376 50 006377	000016 000000	PAT6:	. WORD	16 000000	: ALTERNATING ZERO WORD AND ONE WORD II : 3-2-1-1-1 SEQUENCE	N
51 006400	000000		. WORD	000000	· 5 E · · · · · SEGOL·ICE	
52 006401 53 006402	000000 177777		. WORD	000000 177777 177777 177777		
54 006403	177777 177777		. WORD	177777		
55 006404 56 006405	177777 000000		.WORD	177777		
57 006406	000000		.WORD	000000		

IT IT THE LATE AND	D LOOK AT DRIVE SIGNALS			
58 006407 177 59 006410 177 60 006411 0000 61 006412 177 62 006413 0000 63 006414 177 64 006415 0000 65 006416 177 66 006417 0000 67 006420 133 68 006421 0000 69 006422 052 70 006423 052 71 006424 052 72 006425 125 73 006426 125 74 006427 125	777 000 777 000 777 000 777 001 PAT7	. WORD	177777 177777 000000 177777 000000 177777 1 133331 16 052525 052525 052525 125252 125252	: B'1011011011011001' : B'010101010101010101' AND : B'1010101010101010' : IN 3-2-1-1-1 SEQUENCE
68 006421 0000 69 006422 0525 70 006423 0525 71 006424 0525 72 006425 1255 73 006426 1255 74 006427 1255 75 006430 0525 76 006431 0525 78 006432 1255 78 006433 1255 80 006435 1255 81 006436 0525 82 006437 1255 83 006440 0525 84 006441 1255 85 006442 0000 86 006443 1555 87 006444 0000 88 006445 0266 90 006451 1515 92 006451 1515 93 006452 1515 94 006453 0266	001 PATS 554 016 PAT1 455 455 455 322 322 322	. WORD . WORD	052525 052525 125252 125252 052525 052525 125252 052525 125252 052525 125252 052525 125252 052525 125252 155554 16 026455 026455 026455	; B'1101101101101100' ; B'0010110100101101' AND ; B'1101001011010010' ; IN 3-2-1-1-1 SEQUENCE
95 006454 0266 96 006455 151 97 006456 151 98 006457 0266 99 006460 151 100 006461 0266 101 006462 151 102 006463 0266 103 006464 151 104 006465 0006 105 006466 0666 106 006467 0006 107 006470 0006 108 006471 0006 109 006472 0006 110 006473 0006 111 006474 0006 112 006475 0006 113 006476 0006	001 PAT1 666 016 PAT1 001 002 004 010 020 040	. WORD	026455 151322 026455 151322 026455 151322 026455 151322 1 066666 16 000001 000002 000004 000010 000020 000040 000100 0000200	: B'0110110110110110' : RIPLE ONE

; RIPLE ZERO

: B'11110101101101101'

: THIS DATA PATTERN MAY BE DEFINED BY THE : USER OR LEFT IN ITS DEFAULT STATE

Charact

1 2 3				;MESSAG	E STORAGE OVERLAY
4 006555 006555	050630				DMOVLY MS.O .WREDC ;OUTPUT EDC FOR THIS OVERLAY .NLIST BEX
6 7 000000 8 000024	042 042	103 103	101 110	MS1:	.ASCII\''CANNOT RECEIVE DRIVE STATE FROM DRIVE'N\ .ASCII\''CHECK IF DRIVE IS POWERED ON.'N\
9 000044	000 042	104	122	MS2:	.ASCII\ DRIVE STATE RECEIVED HAS BAD PARITY N\
11 000070 12 000071	000 042	104	122	MS3:	.ASCIIN DRIVE NOT ASSERTING RECEIVER READY IN DRIVE STATE N
13 000123 14 000124	000 042	124	111	MS4:	.BYTE O
15 000153 16 000154	000 042	124	111	MS5:	.BYTE 0 .ASCII\'TIME-OUT ON RECEIVE OF ONLINE RESPONSE FROM DRIVE'N\
17 000206 18 000207 19 000242 20 000257	000 042 042 042	117 040 040	116 040 040	MS6:	.ASCII\'ONLINE COMMAND DID NOT RETURN EXPECTED RESPONSE CODE'N\ .ASCII\' EXPECTED RESPONSE 'O8N\ .ASCII\' ACTUAL RESPONSE 'O8N\
21 000274 22 000275	000 042	124	111	MS7:	.BYTE 0 .ASCII\'TIME-OUT ON SEND OF GET STATUS COMMAND TO DRIVE'N\
23 000326 24 000327	000 042	124	111	MS8:	.BYTE 0 .ASCII\'TIME-OUT ON RECEIVE OF GET STATUS RESPONSE FROM DRIVE'N\
25 000363 26 000364 27 000421 28 000436	000 042 042 042 000	107 040 040	105 040 040	MS9:	.ASCII\' EXPECTED RESPONSE '08N\ .ASCII\' ACTUAL RESPONSE '08N\
29 000453 30 000454	042	106	101	MS10:	.ASCII\ FAILED TO RECEIVE VALID DRIVE STATE N
31 000477 32 000500	000 042	101	124	MS12:	.ASCII\ 'ATTENTION DID NOT DROP STATE AFTER GET STATUS COMMAND' N\
33 000534 34 000535	000 042	124	111	MS13:	.BYTE 0 .ASCII\'TIME-OUT ON SEND OF DRIVE CLEAR COMMAND TO DRIVE'N\
35 000566 36 000567	000 042	124	111	MS14:	.BYTE 0 .ASCII\'TIME-OUT ON RECEIVE OF DRIVE CLEAR RESPONSE FROM DRIVE'N\
37 000623 38 000624 39 000662 40 000677	000 042 042 042	104 040 040	122 040 040	MS15:	.ASCII\' DRIVE CLEAR COMMAND DID NOT RETURN EXPECTED RESPONSE CODE'N\ .ASCII\' EXPECTED RESPONSE '08N\ .ASCII\' ACTUAL RESPONSE '08N\
41 000714 42 000715	000 042	124	111	MS16:	.BYTE 0 ASCII''TIME-OUT ON SEND OF CHANGE MODE COMMAND TO DRIVE'N
43 000746 44 000747	000 042	124	111	MS17:	.BYTE 0 ASCII'TIME-OUT ON RECEIVE OF CHANGE MODE RESPONSE FROM DRIVE'N
45 001003 46 001004 47 001042 48 001057	000 042 042 042	103 040 040	110 040 040	MS18:	.ASCII\' CHANGE MODE COMMAND DID NOT RETURN EXPECTED RESPONSE CODE'N\ .ASCII\' EXPECTED RESPONSE '08N\ .ASCII\' ACTUAL RESPONSE '08N\
49 001074 50 001075	000 042	124	111	MS19:	.ASCII\'TIME-OUT ON SEND OF RECALIBRATE COMMAND TO DRIVE'N\
51 001126 52 001127	000 042	124	111	MS20:	.BYTE 0 ASCII' TIME-OUT ON RECEIVE OF RECALIBRATE RESPONSE FROM DRIVE'N
53 001163 54 001164 55 001222 56 001237	000 042 042 042	122 040 040	105 040 040	MS21:	.ASCII\' RECALIBRATE COMMAND DID NOT RETURN EXPECTED RESPONSE CODE'N\ .ASCII\' EXPECTED RESPONSE '08N\ .ASCII\' ACTUAL RESPONSE '08N\

NITIALIZE DRIVE	AND LUCK	AT DRIVE	21 GN	ALS	
57 001254 58 001255	00C 042	101	124	MS24:	.BYTE 0 .ASCII\'ATTENTION SET AFTER RECALIBRATE COMMAND'N\
59 001302 60 001303	000 042	116	105	MS25:	.BYTE 0 .ASCII'NEITHER R/W READY NOR ATTENTION SET AFTER RECALIBRATE COMMAND'N
61 001343 62 001344 63 001404	000 042	124	111	MS26:	.BYTE 0 .ASCII\'TIME-OUT ON SEND OF GET UNIT CHARACTERISTICS COMMAND TO DRIVE'N\
64 001405 65 001450	000 042 000	124	111	MS27:	.BYTE 0 .ASCII\'TIME-OUT ON RECEIVE OF GET UNIT CHARACTERISTICS RESPONSE FROM DRIVE'N\
66 001451 67 001515 68 001532 69 001547	042 042 042 042	107 040 040	105 040 040	MS28:	.BYTE 0 .ASCII\'GET UNIT CHARACTERISTICS COMMAND DID NOT RETURN EXPECTED RESPONSE CODE'N\ .ASCII\' EXPECTED RESPONSE '08N\ .ASCII\' ACTUAL RESPONSE '08N\
70 001550 71 001611	042	124	111	MS29:	.BYTE 0 .ASCII\'TIME-OUT ON SEND OF GET SUBUNIT CHARACTERISTICS COMMAND TO DRIVE'N\ .BYTE 0
72 001612 73 001656	042	124	111	MS30:	.ASCII\'TIME-OUT ON RECEIVE OF GET SUBUNIT CHARACTERISTICS RESPONSE FROM DRIVE'N\ .BYTE 0
74 001657 75 001725 76 001742 77 001757	042 042 042 042	107 040 040	105 040 040	MS31:	.ASCII\'GET SUBUNIT CHARACTERISTICS COMMAND DID NOT RETURN EXPECTED RESPONSE CODE'N\ .ASCII\' EXPECTED RESPONSE 'OBN\ .ASCII\' ACTUAL RESPONSE 'OBN\ .BYTE 0
78 001760 79 002017	042	123	125	MS32:	ASCII''SUBUNIT CHARACTERISTICS SAY LESS THAN 1 DIAGNOSTIC CYLINDER'N
80 002020 81 002051	042 000	122	105	MS35:	ASCII\ READ/WRITE READY DROPPED BEFORE FORMAT OPERATION'N\ BYTE 0
82 002052 83 002100 84 002130	042 042 000	106 040	117 040	MS36:	.ASCII\'FORMAT OPERATION REPORTED TIME-OUT FAILURE'N\ .ASCII\' CYLINDER 'D32''. GROUP 'D8''. TRACK 'D8''.'N\ .BYTE 0
85 002131 86 002162	042	122	105	MS39:	.ASCII\'READ/WRITE READY DROPPED BEFORE WRITE OPERATION'N\ .BYTE 0
87 002163 88 002224 89 002263 90 002317	042 042 042 040	103 127 104	117 122 102	MS40:	.ASCII\''COULD NOT WRITE AND READ ANY BLOCK ON THIS TRACK. ON LAST BLOCK: 'N\ .ASCII\'WRITE OPERATION REPORTED FAILURE ERROR CODE '08' OCTAL.'N\ .ASCII\'DBN 'D28'. CYLINDER 'D32''. GROUP 'D8''. TRACK 'D8'.'N\
91 002320 92 002350	042	122	105	MS43:	.BYTE 0 .ASCII\'READ/WRITE READY DROPPED BEFORE READ OPERATION'N\ .BYTE 0
93 002351 94 002412 95 002450 96 002504	042 042 042 042	103 122 104	117 105 102	MS44:	.ASCII\''COULD NOT WRITE AND READ ANY BLOCK ON THIS TRACK. ON LAST BLOCK: 'N\ .ASCII\''READ OPERATION REPORTED FAILURE ERROR CODE ''O8'' OCTAL.'N\ .ASCII\''DBN 'D28''. CYLINDER 'D32''. GROUP 'D8''. TRACK 'D8''.'N\
97 002505 98 002546 99 002571 100 002604 101 002616 102 002644	042 042 042 042 042 042	103 104 105 101 103	117 101 130 103 131	MS45:	.BYTE 0 .ASCII\'COULD NOT WRITE AND READ ANY BLOCK ON THIS TRACK. ON LAST BLOCK:'N\ .ASCII\'DATA COMPARE FAILURE ON WORD 'D16''.'N\ .ASCII\'EXPECTED DATA 'D16N\ .ASCII\'ACTUAL DATA 'D16N\ .ASCII\'CYLINDER 'D32''. GROUP 'D8''. TRACK 'D8''.'N\
103 002645	042	124	111	MS46:	.BYTE 0 .ASCII\'TIME-OUT ON SEND OF SEEK COMMAND TO DRIVE'N\
104 002673 105 002674 106 002725	042	124	111	MS47:	.BYTE 0 .ASCII\'TIME-OUT ON RECEIVE OF SEEK RESPONSE FROM DRIVE'N\
107 002726 108 002760 109 002775 110 003012	042 042 042 042	123 040 040 123	105 040 040 105	MS48:	.BYTE 0 .ASCII\'SEEK COMMAND DID NOT RETURN EXPECTED RESPONSE CODE'N\ .ASCII\' EXPECTED RESPONSE 'OBN\ .ASCII\' ACTUAL RESPONSE 'OBN\ .ASCII\'SEEK WAS TO CYLINDER 'D32'. GROUP 'D8'.'N\
111 003040 112 003041 113 003076	000 042 042	123 123	105	MS51:	.ASCII\'SEEK WAS TO CYLINDER DS2. GROUP D8. N\ .ASCII\'SEEK COMPLETE TIME-OUT READ/WRITE READY DID NOT SET.'N\ .ASCII\'SEEK WAS TO CYLINDER 'D32'. GROUP 'D8'.'N\

	SEQ
*	
1	
1	

ITTIMETEL DAT	AL MAD LOOP	AI DILLY	L 310/4	ALS		
114 003123 115 003124	00C 042	124	111	MS52:	.BYTE 0 .ASCII \'TIME-OUT ON SEND OF DISCONNECT COMMAND TO DRIVE'N	
116 003155 117 003156	000 042	124	111	MS53:	.BYTE 0 .ASCII \"TIME-OUT ON RECEIVE OF DISCONNECT RESPONSE FROM DRIVE"N\	
118 003212 119 003213 120 003246 121 003263	000 042 042 042	104 040 040	111 040 040	MS54:	.BYTE 0ASCII \'DISCONNECT COMMAND DID NOT RETURN EXPECTED RESPONSE'N\ .ASCII \' EXPECTED RESPONSE 'D8N\ .ASCII \' ACTUAL RESPONSE 'D8N\	
122 003300 123 003301 124 003335	000 042 101	116 042	117 102	MS55:	.BYTE 0 .ASCII\'NO BLOCK ON THIS TRACK CAN BE READ. LAST BLOCK TRIED:'N\ .ASCII\A'BN 'D28''. CYLINDER 'D32''. GROUP 'D8''. TRACK 'D8''.'N\	
125 003371 126 003372 127 003421	000 042 042	101 040	126 040	MS56:	.ASCII \'AVAILABLE WAS NOT ASSERTED AFTER DISCONNECT'N\ .ASCII \' STATE RECEIVED '016N\	
128 003435 129 003436	000 042	124	111	MS57:	.ASCII \"TIME-OUT ON SEND OF RUN COMMAND TO DRIVE"N\	
130 003463 131 003464	042	124	111	MS58:	.ASCII \'TIME-OUT ON RECEIVE OF RUN RESPONSE FROM DRIVE'N\	
132 003514 133 003515 134 003544 135 003561	000 042 042 042	122 040 040	125 040 040	MS59:	.BYTE 0 .ASCII \'RUN COMMAND DID NOT RETURN EXPECTED RESPONSE'N\ .ASCII \' EXPECTED RESPONSE 'O8N\ .ASCII \' ACTUAL RESPONSE 'O8N\	
136 003576 137 003577 138 003627 139 003656	000 042 042 116	125 124 116	116 110 116	ER80:	.ASCII \'UNABLE TO FIND ALL UNITS REQUESTED FOR TESTING'N\ .ASCII \'THE FOLLOWING IS VISIBLE ON THE 4 UDA PORTS'N\ .ASCII \NNN'UDA PORT 0 NN\	
140 003670 141 003671 142 003703	116	061 116 061	042		.ASCII \R1\ .ASCII \NN'UDA PORT 1'NN\ .ASCII \R1\	
143 003704 144 003715	116 122	116 061	042		.ASCII \NN'UDA PORT 2 'NN\	
145 003716 146 003730 147 003731	116	116 061	042		.ASCII \NN'UDA PORT 3'NN\ .ASCII \R1\	
147 003731 148 003732 149 003761 150 004004	000 042 042 000	116 103	117 110	SER10:	.ASCII \'NO VALID STATUS CAN BE RECEIVED ON THIS PORT'N\ .ASCII \'CHECK SDI CABLE AND POWER TO DRIVE'N\ .BYTE 0	
151 004005 152 004034	042 042	122 122	105 105	SER11:	.ASCII \'RECEIVER READY WAS NEVER ASSERTED AFTER INIT'N\ .ASCII \'REAL TIME DRIVE STATE IS: 'H16N\	
153 004054 154 004055	000 042	125	104	SER12:		
155 004105 156 004106	000 042	125	104	SER13:		
157 004140 158 004141	000 042	125	104	SER14:		
159 004175 160 004176 161 004231	000 042 042	125 106	104 122	SER15:	.ASCII \'FROM DRIVE'N\	
162 004240 163 004241 164 004275	000 042 042	125 106	104 122	SER16:	.ASCII \'FROM DRIVE'N\	
165 004303 166 004304 167 004340	000 042 042	124 107	110 105	SER17:	.ASCII \'GET STATUS COMMAND IS :NSUFFICIENT FOR THE RESPONSE'N\	
168 004373 169 004374 170 004433	000 042 122	101 061	040	SER18:	.BYTE 0 .ASCII \'A UNIT WITH THE FOLLOWING SUBUNITS ARE VISIBLE ON THIS PORT: 'N .ASCII \R1\	Λ

U

SEQ 0259

UDAT3 DISK FUNCTIONAL SYMBOL TABLE	MACRO X04.00 9-JUL-81	01:13:55 PAGE 65-4	B 5	
ARGS\$ = 000010 ATTN = 000002 AVAIL = 000100 BEUSED = 000040 BF.BEC = 000401 BF.ECC = 000401 BF.ECC = 000401 BF.ECC = 004761 BLOCK	DRVCLR= 000005 DRVID = 000004 DRVONL= 000213 DRVRUN= 000014 D.LIMT= 000001 D.SCHR= 000002 ECC = 000015 ECCCHK= 010000 ECCFLG= 010000 ECCRSH= 000002 ECHOC = 000350 EOC = 100000 ERECOV= 000006 ERHARD= 001000 ERLEV = 000002 ERRMC = 000013 ERRN = 000101 ERRORS 004647 ERRORS 004647 ERRORS 004647 ERRORS 004647 ERRORS 004647 ERRORS 004647 ERSOFT= 001400 ERTXT 001716 ER80 003577 EXIT = 000021 FB.DAT= 000000 FB.EDC= 000400 FCARY 003464 FCTSIZ= 000010 FD.ACY 004747 FGO 003517 FIRSTU= 077717 FLOOP 003456 FOREXT 003562 FORMAT= 000001 FORTRK 003444 FRAME = 000000 FT.BUF= 0000000 FT.BUF= 0000000 FT.BUF= 0000000 FT.BUF= 0000000 FT.BUF= 0000000 FT.BUF= 00000000 FT.BUF= 00000000 FT.BUF= 000000000 FT.BUF= 00000000 FT.BUF= 000000000 FT.BUF= 0000000000 FT.BUF= 0000000000 FT.BUF= 00000000000 FT.BUF= 000000000000000000000000000000000000	HBLONB = 170377 HDRPRE = 000005 HD.BAD = 110000 HD.DBN = 140000 HD.LBN = 050000 HD.PRV = 050000 HD.REV = 030000 HD.XBN = 120000 HD.XBN = 120000 HEADER = 000002 HIBYTE = 177400 HICYL = 000001 HIDBN = 000003 HILBN = 000003 HILBN = 000003 HILBN = 000003 HIXBN = 000003 HIXBN = 000003 HIXBN = 000001 INTEDC = 000003 ILOOP 002004 INITW = 040000 INR 004656 INSEEK = 000012 INTEDC = 000105 IN.RQ 001046 IN.03 001047 IN.04 001050 IN.05 001051 IN.06 001052 IN.07 001053 IN.08 001054 IN.09 001055 IN.10 001055 IN.10 001055 IN.10 001055 IN.11 001056 IN.11 001057 IN.12 001060 IN.13 001061 IN.14 001062 IN.15 001063 IN.16 001064 IN.17 001065 IN.18 001066 IN.19 001067 IN.20 001070 IN.21 001071 IN.22 001072 IN.23 001073 IN.24 001074 IN.25 001075 IN.26 001076 IN.27 001077 IN.28 001100 IN.27 001077 IN.28 001100 IN.29 001101 IRECLB = 000001	LBHINB= 177417 LBLONB= 177760 LBNCYL= 000000 LBNHST= 000012 LBNTRK= 000011 LCDBN 004742 LDIACY 004744 LINKLN= 000007 LOBYTE= 000377 LONG 004626 LONGTO= 000001 LOW = 000002 LUNIT 001315 MEDTYP= 000006 MESSAG= 000015 MICREV= 000003 MOD 004662 MRD = 000016 MREAD 001152 MS1 000000 MS10 000454 MS12 000500 MS13 000535 MS14 000567 MS15 000624 MS16 000715 MS17 000747 MS18 001004 MS19 001075 MS2 000045 MS19 001075 MS2 000127 MS21 001164 MS24 001255 MS20 001127 MS21 001164 MS29 001075 MS2 000045 MS20 001127 MS21 001164 MS21 001164 MS24 001255 MS20 001127 MS21 001164 MS27 001405 MS28 001303 MS26 001344 MS27 001405 MS28 001451 MS29 001550 MS30 001612 MS31 001657 MS28 001760 MS31 001657 MS28 001760 MS31 001657 MS29 001550 MS36 002020 MS36 002020 MS36 002021 MS37 002020 MS37 002020 MS38 002020 MS38 002020 MS38 002020 MS39 002131 MS4 002163 MS49 002163 MS49 002163 MS49 002164 MS59 002164	MS54 003213 MS55 003301 MS56 003372 MS57 003436 MS58 003464 MS59 003515 MS6 000207 MS7 000275 MS8 000327 MS9 000364 MWR = 000017 MWRITE 001170 NEWSUB= 004000 NOERR 004223 NSCSL 004733 NUMPTR= 000005 OBUFF 005433 ONL 004640 ONL YCL= 000200 OUT.RQ 001006 OUT.01 001007 OUT.02 001010 OUT.03 001011 OUT.04 001012 OUT.05 001013 OUT.06 001014 OUT.07 001015 OUT.08 001016 OUT.09 001017 OUT.10 001020 OUT.11 001021 OUT.12 001022 OUT.13 001023 OUT.14 001024 OUT.15 001025 OUT.16 001026 OUT.17 001027 OUT.18 001031 OUT.19 001031 OUT.19 001031 OUT.20 001032 OUT.11 001033 OUT.12 001033 OUT.14 001024 OUT.15 001035 OUT.16 001036 OUT.17 001037 OUT.18 001030 OUT.19 001031 OUT.20 001032 OUT.19 001031 OUT.21 001033 OUT.22 001034 OUT.23 001035 OUT.24 001036 OUT.25 001037 OUT.26 001040 OUT.27 001041 OUT.28 001042 OUT.29 001043 OVERFL= 000002 OVE.MN= 004453 G OVL.MS= 004453 G OVL.MS= 004453 G OVL.MS= 004453 G OVL.MS= 001040 G

STABOL TABLE				
OVS.MS = 014544 G OV = 012735 PATPTR	REVS = 000007 RGO	STATOK 000737 STATUS= 000007 STSRES= 000366 ST.C = 000002 ST.CON= 000002 ST.DB = 001000 ST.DF = 000020 ST.DR = 000040 ST.FR = 000200 ST.FE = 000200 ST.MOD= 000001 ST.MSK= 000000 ST.MSK= 000000 ST.PE = 000040 ST.PE = 000040 ST.PE = 000000 ST.RTY= 000003 ST.RE = 000100 ST.RTY= 000001 ST.ST.RU = 000001 ST.ST.RU = 000001 ST.ST.RU = 000001 ST.ST.ST.ST.ST.ST.ST.ST.ST.ST.ST.ST.ST.S	TRKLOP 003576 TRKTST 003563 TSTBLK 004754 TSTCYL 004756 TO 002147 TOA 002204 TOB 002232 TOO 002332 T1 002332 T1 002332 T1 002332 T1 003410 T10 003410 T10LOP 003411 T10X 003443 T2 002275 T2CMD = 000001 T3 002367 T3A 002424 T3B 002426 T3C 002430 T3D 002456 T3STRT 001722 T31 002543 T4A 002471 T4A1 002561 T4B 002613 T4BB1 = 000005 T4BB2 = 000006 T4C 002631 T4D 002635 T4MPRM= 00003 T4MPRM= 00003 T4MPRM= 00001 T4SEEK = 000011 T4SEEK = 000010 T4SOFT = 000007 T4UPRM= 002666 T6C 002721 T6D 002725 T6E 002762 T6E1 003001 T6F 003021 T6F 003021 T6F 003022 T7 003035 T7A 003046 T7C 003104 T7C 003237 T8A 003261 T8B 003301 T8B 003301 T8B 003301 T8B 003301	T8X T9

UDAT3 DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE 65-6 SYMBOL TABLE

WONLY = 002000 WREAL = 122400 WRITEB 003673

WRONG = 000002 WRTEXT 004026 WSTOP = 140000

WTRCMP 003625 WTREXT 003651 XBNCYL = 000021

XFERRT = 1,00000 XMTERR= J00400 001211 XOR

XREAD = 000002XWRITE = 000003

. ABS. 025672 000 000000 001

ERRORS DETECTED: 0

VIRTUAL MEMORY USED: 4924 WORDS (20 PAGES)
DYNAMIC MEMORY AVAILABLE FOR 69 PAGES
A:UDAT3.BIN,SY:UDAT3/C=[1,33]DMACRO,UDAT3T,UDATP,UDATR,UDAT3M,UDAT3S

UDAT3 D CROSS R	ISK FUNCT	TIONAL MAC	CRO X04.00 REF V01-05	9-JUL-81	01:13:55	PAGE S-	1 E	5						SEQ 0263
ARGS\$	37-18 39-4# 40-12 43-3 44-11# 51-2 54-21# 59-12 61-20 62-53 6-22# 6-24# 8-35#	37-18 39-4# 40-12# 43-3 44-11#- 51-2 54-21# 59-12 61-20# 62-53# 40-10 52-3	37-18# 39-7 41-7 43-3# 44-14 51-2# 54-24 59-12# 61-23	37-18# 39-7# 41-7 43-3# 44-14# 51-2# 54-24# 59-12# 61-23	37-23 40-4 41-7# 43-6 44-23 51-5 54-36 59-17 61-23#	37-23# 40-4 41-7# 43-6# 44-23# 51-5# 54-36# 59-17# 61-23#	38-5 40-4# 41-10 44-4 45-12 52-2 58-16 59-28 61-28	38-5 40-4# 41-10# 44-4 45-12 52-2 58-16 59-28# 61-28#	38-5# 40-7 42-4 44-4# 45-12# 52-2# 58-16# 60-14 62-26	38-5# 40-7# 42-4 44-4# 45-12# 52-2# 58-16# 60-14# 62-26	38-8 40-9 42-4# 44-7 45-15 52-8 58-21 61-17 62-26#	38-8# 40-9 42-4# 44-7# 45-15# 52-8# 58-21# 61-17 62-26#	39-4 40-9# 42-7 44-11 47-36 54-21 58-34 61-17# 62-29	39-4 40-9# 42-7# 44-11 47-36# 54-21 58-34# 61-17# 62-29#
BF.ECC BF.ECC BF.EDC BLOCKG BLOCKT BREAK	3-62# 3-64# 3-63# 49-16* 49-28* 4-3#	49-74* 49-31	49-81 49-72*	63-73# 63-74#										
BUFFLG BUFSIZ CHAIN CHECK	3-47# 22-15 58-6* 5-67#	22 - 20 58 - 8*	23-68# 58-10*	58-13*	58-15*	58-25	59-6*	59-9*	59-11*	59-21	63-98#			
CHGMOD CHRRES CLRBUF CMPDAT CMPEXT CMPLOP	6-32# 6-43# 22-25# 56-16 60-13 60-9#	38-6 22-27 60-1# 60-15 60-18	38-8 60-20#	38-8										
COMPAR COMPLT CR CR.CLR	4-9# 6-41# 44-7 32-3 41-6	39-5 44-7 38-11 63-17#	39-7 51-3 38-15	39-7 51-5 63-20	41-8 51-5 63-55#	41-10 61-18	41-10 61-20	42 - 5 61 - 20	42-7	42-7	43-4	43-6	43-6	44-5
CR.DIA CR.DIS CR.GCR CR.GST CR.INR CR.MOD CR.ONL CR.RUN CR.SCR	63-18# 51-1 38-4 32-31 44-3 42-3 39-3 43-2 45-11	63-19# 63-20# 40-3 63-26# 63-23# 63-16# 63-27# 63-21#	63-22#											
CR.SEK CURBLK CURCYL CURGRP	61-16 48-43* 58-34 46-4* 48-47*	63-24# 48-44* 58-34 46-5* 48-61*	48-48 58-34 46-8* 48-63*	48-57* 59-28 46-9 48-65	48-59* 59-28 63-78# 63-77#	55-7* 59-28	55-9* 59-28	55-17 63-75#	55-19*	55-21	55-23*	58-7	58-9	58-34
CURPAT CURTRK CVT D.LIMT D.SCHR	56-7* 50-20* 4-19# 8-4# 8-5# 8-40#	56-19 50-30	63-80# 54-32	54-36	54-36	58-11	58-34	58-34	59-7	59-28	59-28	60-14	60-14	63-79#
DATEMP DATERR DATPRE	8-21# 5-33#	54-27	58-26											

				-	
-	-	0	~	2	11
•	-		• 1	-	~
-3		w	v	-	U -

CYLS								48-71	48-26	48-18	47-46	47-32	5-42#	CMPAL
REC 8-13# S 63-19 63-57# 63-92 63-104 NE 6-17# 35-45 36-40 NE 6-37# VCLR 6-35# VCLR 6-35# VCLR 6-35# VCLR 6-35# NORLD 6-											37-12	63-33#	8-27# 63-18	YLS
03-57# 63-92 63-104 E6-17# 35-45 36-40 ECD 36-40# 36-42 63-17 63-37# P8-10# YPE 5-15# CCR 6-35# 63-37 ID 5-14# CONL 6-33# RUN 6-34# 4-16# CHK 8-28# FLG 3-45# RSH 5-11# OC 6-46# 3-46# SO 35-39 EV 5-10# EV 5-10# WIC 6-15# SO 35-39 EV 5-10# SO 35-39											31-12		8-13# 63-19	EC
YPE 5-15# 6-35# 63-37												35-45 36-42	63-57# 6-17# 36-40# 63-17	DI E ECD
ONL 6-34# 4-16# CHK 8-28# FELG 3-45# OC 6-46# OC 6-46# OC 6-46# OC 6-52# EV 5-10# OC 6-52# EV 5-10# OC 6-52# EV 5-10# OC 6-15# 35-39 35-43 OC 6-15# 32-48 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-23 37-23 37-23 37-23 38-5 38-5 38-5 38-5 38-5 38-5 38-5 38-												63-37	5-15# 6-35#	YPE
CHK 8-28# FLG 3-45# RSH 5-11# OC 4-11# OC 4-11# OC 6-46# A2-46# A2-48 A2-44 A2-14 A4-11 A4-15 A5-15 A5													6-33#	ONL
0 4-11# OC 6-46# 3-46# 0 35-39 65-137# COV 6-31# ARD 6-52# EV 5-10# MC 6-15# 35-39 35-43 MES 6-14# 29-37 M 52-4# 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-23 37-23 37-23 38-5 38-5 38-5 38-5 38-5 38-5 38-5 38-													8-28# 3-45#	CHK
0 35-39 65-137# COV 6-31# ARD 6-52# EV 5-10# MC 6-15# 35-39 35-43 MES 6-14# 29-37 N 32-4# 37-18 37-18 37-18 37-18 37-18 37-18 37-18# 37-18# 37-18# 37-23 37-23 38-5 38-5 38-5 38-5 38-5 38-5 38-5 38-5													4-11# 6-46#	0
EV 5-10# 29-37 29-39-39-39-39-39-39-39-39-39-39-39-39-39												65-137#	35-39 6-31#	COV
MES 6-14# 29-37 32-4# 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18# 37-18# 37-23 37-23 37-23 38-5 38-5 38-5 38-5 38-5 38-5 38-5 38-5											35-43	35-39	5-10#	EV
38-5 38-5 38-5 38-5 38-5 38-5 38-5 38-5	37-23# 38-			37-23		37-18#					37-18	29 - 37 37 - 18	6-14#	MES
40-9# 40-12 40-12 40-12 40-12# 41-7 41-7 41-7 41-7 41-7 41-7 41-7# 41-10 41-10 41-10# 42-4 42-4 42-4 42-4 42-4 42-4 42-4 42-	39-4 39-4 40-4 40-4 40-9 40-4	40-4	40-4	40-4	39-7#	39-7	39-7	39-7	39-4#	39-4#	39-4	39-4	39-4	
44-4 44-4 44-4 44-4 44-4 44-4# 44-4# 44-7 44-7	40-9 41-7# 42-7 42-7	41-7#	41-7	41-7	41-7	41-7	41-7	41-7	40-12#	40-12	40-12	40-12	40-9#	
44-11 44-11 44-11 44-11# 44-11# 44-14 44-14 44-14 44-14# 44-23 44-23 44-23 45-12 45-12 45-12 45-12 45-12# 45-12# 45-15 45-15 45-15 45-15# 47-36	43-6# 44-	43-6	43-6	43-6	43-3#	43-3#	43-3	43-3	43-3	43-3	43-3	43-3	42-7#	
	44-23# 45-47-36 47-	44-23	44-23	44-23	44-14#	44-14	44-14	44-14	44-11#	44-11#	44-11	44-11	44-11	
52-2 52-2 52-2 52-2 52-2 52-2 52-2 52-2	51-5# 52-	51-5 54-21	51-5	51-5	51-2#	51-2#	51-2	51-2	51-2 52-2 54-21#	51-2	51-2	51-2	47-36#	
47-36# 51-2 51-2 51-2 51-2 51-2 51-2 51-2 51-2	54-36# 58-	54-36 58-34	54-36	54-36 58-21	54-24#	54-24 58-21	54-24	54-24	54-21#	54-21#	54-21	54-21	54-21	
58-34# 59-12 59-12 59-12 59-12 59-12 59-12 59-12 59-12# 59-12# 59-17 59-17 59-17 59-28 59-28# 60-14 60-14 60-14 60-14# 61-17 61-17 61-17 61-17	58-34 58- 59-17# 59- 61-17 61-	59-17	59-17	59-17	59-12#	59-12#	59-12	59-12	59-12	59-12	59-12	59-12	58-34#	

59-28 61-17# 61-28 62-29# 41-5* 6-53# 35-27 4-20# 3-23# 54-15 59-28 61-20 61-28 62-53 63-38# ERRORS ERSOFT ERTXT EXIT FB.DAT FB.EDC FCARY 35-54# 35-47

54-17#

UDAT3	DISK FUNCTIONA	L MACRO	x04.00	9-JUL-81	01:13:55	PAGE	5-3
CROSS	REFERENCE TABL	E (CREF	V01-05)			

FCHAIN	54-10	54-26	63-111#											
FCTSIZ	5-36#	47-28*	49-76	49-78	63-67#									
FGO	54-23	54-26#												
FIRSTU	7-11#	54-18												
FOREXT	54-35	54-37#												
FORMAT	50-21	54-33 54-1#												
FRAME	5-66#													
FSTOP	3-42#	54-19												
FT.BUF	3-15# 3-16#													
FT.LOW	3-17#													
FTLDEV	8-16# 6-51#	35-39												
FTLSYS	6-50#													
FXBNCY	47-18*	47-20*	49-57	49-59	63-68#									
GCR GENEXT	63-20 57-17	63-39# 57-21#												
GENIN	57-14#	57-19												
GENOUT GENPAT	57-12# 56-9	57-20 57-1#												
GETCHR	6-36#	63-39												
GETSTA	6-38#	63-42												
GETSUB GRPCYL	6-37# 5-25#	63 - 40 47 - 44	48-16	48-62	48-73	49-42	50-38							
GRPOFF	5-38#													
GST HBHINB	63-22 5-56#	63-42# 33-10	34-11	46-7	49-19									
HBLONB	5-57#	48-40	49-24	49-68	50-17									
HD.BAD HD.DBN	3-55# 3-58#	48-42	50-18											
HD.LBN HD.PRV	3-52#	40 42	70 10											
HD.PRV	3-56#													
HD.RBN HD.REV	3-53# 3-54#													
HD. XBN	3-57#	49-69												
HDRPRE HEADER	5-34# 5-62#	54-29												
HIBYTE	5-54#	41-4	47-7	47-34	47-45	47-47	48-8	48-17	48-20	48-27	48-54	48-72	48-74	49-10
HICYL	49-12 5-24#	49-27 49-18	49-43	50-33	50-39	54-28	54-31	58-27						
HIDBN	5-30#	48-35	50-12											
HILBN	5-26# 3-9#	49 - 23 7 - 11												
HIMEM	5-29#	7-11												
HIXBN	5-27#	49-63	74.5	75 //	75 11	7/ /1								
HOSTRQ HRDREV	22-2# 5-13#	29-38	34-5	35-44	35-46	36-41								
ILOOP	37-18#	37-22												
ILOOP IN.01 IN.02 IN.03 IN.04 IN.05	23-39#	34-6												
IN.03	23-41#													
IN.04	23-42#													
IN.06	23-44#													

CROSS R	ISK FUNCT EFERENCE	TABLE (CF	REF V01-05	5) 5)	01:15:55	PAGE 5-4							3	0200
IN.07 IN.08 IN.09 IN.10 IN.11 IN.12 IN.13 IN.14 IN.15 IN.16 IN.17 IN.18 IN.19 IN.20 IN.21 IN.22 IN.23 IN.24 IN.25 IN.25 IN.27 IN.29	23-45# 23-46# 23-46# 23-46# 23-50# 23-51# 23-53# 23-55# 23-56# 23-60# 23-60# 23-66# 23-66# 23-66# 23-66# 23-66# 23-66# 23-66# 23-66# 23-66# 23-66#													
IN.RQ INITW	22-19 8-11#	23-38#	23-68											
INS	63-26 54-36 59-28 61-20 62-53 6-40#	63-44# 54-36 59-28 61-20 62-53 63-45	54-36 59-28 61-20 62-53	54-36 59-28 61-20 63-24	54-36 60-14 61-20 63-45#	54-36 60-14 61-28	58-34 60-14 61-28	58-34 60-14 61-28	58-34 60-14 61-28	58-34 60-14 61-28	58-34 61-11* 61-28	58-34 61-13* 62-53	59-28 61-15* 62-53	59-28 61-20 62-53
INTEDC	7-9# 6-39# 5-74#	63-44												
LARGE LBHINB LBLONB LBNCYL	5-58# 5-59# 5-23#	45-9 33-17 46-6	36-25 47-16	38-12	38-16									
LBNHST LBNTRK LCDBN LDIACY LINKLN	5-39# 5-37# 48-45* 47-42* 3-70#	47-6 48-46* 47-43*	49-11 49-35 47-49*	49-26 63-65# 47-50	48-47	48-65*	48-66	48-76*	49-37	50-46*	50-48*	50-50*	63-66#	
LOBYTE LONG LONGTO	5-55# 24-23 5-6# 5-70#	63 - 25# 38 - 15												
LOW LUNIT MEDTYP	29-20 5-35#	29-44#	36-21*											
MESSAG MICREV MOD MRD MREAD	6-16# 5-12# 63-23 4-17# 25-10#	63-49# 22-16												
MS1 MS10 MS12 MS13	37-18 40-9 40-12 41-7	52-2 44-11 65-32# 65-34#	65 -7# 54 - 21	58-16	59-12	61-23	62-26	65-30#						

```
1 5
UDATS DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE S-5 CROSS REFERENCE TABLE (CREF V01-05)
                         65-36#
65-38#
65-42#
65-44#
MS14
MS15
            41-10
            42-4
42-4
42-7
MS16
MS17
                          65-46#
MS18
            44-4
37-18
MS19
MS29
MS20
MS21
MS24
MS25
MS26
MS27
MS28
                                                                                                                                         65-10#
                          40-9
                                                      52-2
                                                                    54-21
                                                                                  58-16
                                                                                                59-12
                                                                                                             61-23
                                                                                                                           62-26
                                        44-11
            44-4
                          65-52#
            44-7
                          65-54#
            44-14
44-23
38-5
38-5
                          65-58#
                         65-60#
                          65-62#
                          65-64#
            38-8
45-12
37-23
45-12
45-15
47-36
54-24
54-36
                          65-66#
MS29
MS3
MS30
MS31
MS32
MS35
                          65-70#
                          65-12#
                          65-72#
                          65-74#
                         65-78#
65-80#
65-82#
MS36
MS39
            58-21
                          65-85#
MS4
             39-4
                          65-14#
            58-34
MS40
                          65-87#
                          62-29 65-93#
                                        65-91#
MS43
            59-17
MS44
            59-28
MS45
            60-14
                          65-97#
MS46
            61-17
                          65-103#
MS47
                          65-105#
            61-17
MS48
            61-20
                          65-107#
                          65-16#
MS5
             39-4
            61-28
51-2
51-2
51-5
                          65-112#
MS51
MS52
MS53
                          65-115#
                          65-117#
MS54
                          65-119#
            62-53
52-8
43-3
43-3
MS55
                          65-123#
                          65-126#
65-129#
65-131#
65-133#
65-18#
MS56
MS57
MS58
            43-6
MS59
MS6
                          65-22#
65-24#
65-26#
22-21
            40-4
MS7
MS8
MS9
            40-7
MWR
             4-18#
            26-10#
MWRITE
NEWSUB
             8-14#
            60-11
NOERR
                          60-16#
                          63-58#
             47-11*
NSCSL
            35-39#
NUMPTR
OBUFF
             54-8
                           57-11
                                        58-14
                                                      60-6
                                                                    63-106#
ONL
            63-16
                          63-31#
            8-32#
22-22
23-7#
23-8#
23-9#
ONLYCL
                          22-23
35-39*
35-42*
35-39*
OUT.01
OUT.02
OUT.03
                                        23-6# 35-39*
                                                      29-13
                                                                    35-39*
OUT.04
```

37-18

37-18

U

U

```
UDAT3 DISK FUNCTIONAL MACRO X04.00 9-JUL-81 01:13:55 PAGE S-6 CROSS REFERENCE TABLE (CREF V01-05 )
           23-10#
23-11#
23-12#
23-13#
23-14#
OUT.05
                           35-6
OUT.06
OUT.07
OUT.08
OUT.09
            23-15#
OUT.10
            23-16#
OUT.11
             23-17#
OUT.12
OUT.13
             23-18#
             23-19#
OUT.14
OUT .15
OUT .16
OUT .17
OUT .18
OUT .19
OUT .20
OUT .21
OUT .22
OUT .23
OUT .24
OUT .25
OUT .26
OUT .27
OUT .28
OUT .29
             23-20#
            23-20#
23-22#
23-23#
23-25#
23-25#
23-26#
23-27#
23-28#
23-30#
             23-31#
             23-32#
             23-33#
                           23-34#
22-14
2-39
65-4
             22-23
OUT . RO
             22-13*
2-39
2-39#
                                          23-5#
                                                        35-39*
                                           2-39#
                                                                                                                  65-178
                                                                                                                                65-178#
                                                        65-4
                                                                       65-4
                                                                                     65-4
                                                                                                   65-4#
OV...
OVE.MN
             65-4#
                            65-178
OVE .MS
               5-75#
OVERFL
                                          65-4
65-4
65-178#
                           2-39#
2-39
65-178
               2-39
                                                                       65-178
                                                                                     65-178#
OVL...
                                                        65-4#
                                                        65-4
                                                                       65-4#
OVL .MS
             65-178
             2-39#
OVS.MN
OVS.MS
OVSTRT
               3-10#
             64-9#
PAT1
             64-87#
PAT10
             64-104#
PAT11
PAT12
PAT13
             64-106#
             64-123#
             64-140#
PAT14
PAT15
             64-143#
PAT2
             64-11#
PAT3
             64-13#
             64-2
                            64-15#
PAT4
PAT5
                            64-32#
             64-4
                            64-49#
 PAT6
             64-66#
 PAT7
                            64-68#
             64-5
PAT8
             64-85#
PAT9
                            56-21
36-39
36-30
36-31#
36-17
37-18
              56-8
 PATPTR
                                          64-1#
 PORT2
              36-10#
             36-26#
36-27
36-15
 PORT3
 PORT4
                                           36-19
37-18
                                                         36-37#
37-18
 PORT5
                                                                                                                                                                            37-18
              37-18
                                                                       37-18
                                                                                                    37-18
                                                                                                                  37-18
                                                                                                                                37-18
                                                                                                                                               37-18
                                                                                                                                                             37-18
                                                                                     37-18
 PRMS
```

CROSS R	EFERENCE	TABLE (CF	EF V01-0	5)	01113133	7,102 3 1									
PTYPE\$	37-18 37-23 38-8 39-44 40-17 40-17 41-7 4	37-18 37-25 37-25 38-8 39-4 40-7 40-7 41-7 41-7 42-7 41-7 42-7 41-14 44-7 44-7 44-7 44-7 44-7 44-7 44-7 44-15-156 51-2-8 51-2-8 51-2-8 51-2-8 51-2-8 51-2-8 51-2-8 51-2-8 51-2-8 51-2-8 51-2-8 51-2-8 51-2-8 51-2-8 51-2-8 61-8 61-	37-18 37-25 37	37-18 37-23 38-8 39-4 40-7 40-7 40-7 40-7 40-7 40-7 40-7 41-7 42-7 42-1 44-1 44-1 44-1 44-1 55-2 55-2 55-3 55-3 61-2	37-28 37-25 37-25 37-25 38-8 37-25 38-8 39-7 40-7 40-7 40-7 40-7 40-7 41-7 42-7 41-4 42-7 44-11 44-15 51-2	37-18 37-18 37-18 38-8-47 440-74 440-71	37-18# 38-5 38-8 38-8 39-4 40-9 40-9 41-4 42-7 44-11 42-7 44-11 44-12 44-11 44-12 44-11 44-12 44-11 44-12 45-13 55-12 55-	37-18# 38-5 38-8 38-8 38-9-4 40-9-17 40-9-17 40-17 41-4 41-12	37-5 38-5 38-6 37-7 38-8 38-9-7 40-9-17 40-9-17 40-9-17 40-9-17 40-17 41-4 41-12	37-23 38-5 38-6 38-7 40-9 40-9 40-17 40-17 40-17 40-17 41-14 43-3 44-11 44-12 44-11 44-12 45-12 51-2 5	37-23 38-5 38-6 37-7 38-7 40-9 40-7 40-9 41-10 42-7 41-10 42-7 43-3-4 44-11 44-12 43-3-6 44-11 44-12 45-13 551-2 55	37-23 38-5# 39-4 39-4 39-4 39-4 39-4 40-7 41-7 41-7 41-7 42-7 43-3 44-1 44-1 44-1 45-1 51-2	37-23 38-5# 39-4 39-4 39-4 39-4 39-4 40-9# 41-7 41-7 41-7 42-7 43-3 44-1 44-1 44-1 45-1 51-2 51-	37-23 38-8 39-4 39-4 39-4 40-7 40-9 41-7 41-7 41-7 41-7 42-7 43-3 44-4 44-1 44-1 44-1 45-15 51-2	
FIIFES	50-0 40-7 42-7# 45-15 52-8# 58-34 58-34#	40-7 42-7# 45-15 54-36 58-34 58-34#	40-7# 43-6 45-15 54-36 58-34 58-34#	40-7# 43-6 45-15 54-36 58-34 58-34#	41-10 43-6 45-15# 54-36 58-34 58-34#	41-10 43-6 45-15# 54-36 58-34 58-34#	41-10 43-6# 51-5 54-36 58-34 59-28	41-10 43-6# 51-5 54-36 58-34 59-28	41-10# 44-7 51-5 54-36 58-34 59-28	41-10# 44-7 51-5 54-36# 58-34 59-28	42-7 44-7 51-5# 54-36# 58-34 59-28	42-7 44-7 51-5# 54-36# 58-34 59-28	42-7 44-7# 52-8 54-36# 58-34 59-28	42-7 44-7# 52-8 58-34 58-34# 59-28	
	PTYPE\$	TROSS REFERENCE 37-18 37-23 38-5 38-8 39-4 39-7# 40-7 40-9 40-12 41-7 41-10 42-7 43-3 43-3# 44-4 44-7 44-11 44-14 44-23 45-15 52-2 52-8 54-21 58-34 59-12 59-12# 5	TROSS REFERENCE TABLE (CR 37-18 37-23 37-23 38-5 38-8 38-8 38-8 38-8 38-8 38-8 39-4 39-4 40-4 40-4 40-4 40-7 40-7 40-9 40-12 40-12 41-7 41-7 41-10 41-10# 42-4 42-7 42-7 43-3 43-3 43-3 43-3 43-3 43-3 43-3 43	TROSS REFERENCE TABLE (CREF V01-01) 37-18	TROSS REFERENCE TABLE (CREF V01-05) 37-18	TROSS REFERENCE TABLE (CREF V01-05) 37-18	TROSS REFERENCE TABLE (CREF V01-05) 37-18 37-18 37-18 37-18 37-18 37-23 37-23 37-23 38-5 38-5 38-5 38-5 38-5 38-5 38-5 38-	TABLE (CREF V01-05) 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-23 37-23 38-5 38-5 38-5 38-5 38-5 38-5 38-5 38-	37-18 38-18 38-5	TROSS REFERENCE TABLE (CREF V01-05) 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-23 37-23 37-23 37-23 37-23 37-23 37-23 37-23 37-23 38-5 38-5 38-5 38-5 38-5 38-5 38-5 38-	SPECIAL CREF VOI-05 3 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-23 38-5 38-5 38-5 38-5 38-5 38-5 38-5 38-	CROSS REFERENCE TABLE (CREF VOI-05) 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-23 37-33	September 1 Able (CREF VOI-05) 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-23 37-2	CROSS REFERNCE TABLE (CREF VOI-05) 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-23	September Table (CREF VOI-05) 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-18 37-23

UDAT3 D	ISK FUNCT	TABLE (CF	RO X04.00	9-JUL-81	01:13:55	PAGE S-8	, L	5						SEQ 0270
	59-28 60-14 60-14# 61-20 61-28# 62-53	59-28 60-14 60-14# 61-20 61-28# 62-53	59-28 60-14 60-14# 61-20# 62-53 62-53#	59-28 60-14 60-14# 61-20# 62-53 62-53#	59-28 60-14 60-14# 61-20# 62-53 62-53#	59-28 60-14 60-14# 61-20# 62-53 62-53#	59-28# 60-14 61-20 61-20# 62-53 62-53#	59-28# 60-14 61-20 61-28 62-53 62-53#	59-28# 60-14 61-20 61-28 62-53 62-53#	59-28# 60-14 61-20 61-28 62-53	59-28# 60-14 61-20 61-28 62-53	59-28# 60-14 61-20 61-28 62-53	59-28# 60-14 61-20 61-28 62-53	60-14 60-144 61-20 61-284 62-53
RBNBN RBNTRK RBUFO RBUFD RBUFLN RCLB RCONT RCTCPS	8-18# 5-31# 62-15 59-10 3-69# 8-23# 3-41# 5-8#	47-4 62-24 60-7	62 - 38 63 - 89	62-48 63-95#	62-53	62-53	62-53	62-53	62-53	62-53	63-87#			
CTCSZ	5-40# 4-8# 6-23#	24 - 30 21 - 17	32-45											
RCVRDY RDSTAT READ1 READ1A	6-21# 21-2# 48-51 62-24#	32-23 32-18 49-34 62-46 62-46#	37-19 37-18 49-39	40-9 62-14#	44-11	52 - 2	54-21	58-16	59-12	61-23	62-26			
READ1C READ1C READ1E READ1X READB REDEXT	62-42 62-28 62-37 62-35 56-13 59-16	62-31# 62-47# 62-54# 59-1#	59-25	59-27	59-30#									
REDWRT REGS\$	8-19# 37-18 38-8 39-7 40-7# 41-10 42-7 43-6 44-7 45-12 51-2 52-2 54-36 58-16# 58-34 59-17#	37-18 38-8 39-7# 40-7# 41-10 42-7 43-6 44-7 45-12# 51-2 52-2# 54-36 58-16# 58-34 59-28	37-18# 38-8# 39-7# 40-7# 41-10 42-7 43-6 44-7# 45-12# 51-2# 52-2# 54-36 58-21 58-34 59-28	37-18# 38-8# 39-7# 40-9 41-10 42-7 43-6# 44-7# 45-15 51-2# 52-8 54-36 58-21# 59-28#	37-23 38-8# 40-4 40-9 41-10 42-7# 43-6# 44-7# 45-15 51-5 52-8 54-36 58-34 59-28	37-23# 39-4 40-4 40-9# 41-10# 42-7# 43-6# 44-11 45-15 51-5 52-8# 54-36 58-34 59-28# 59-28#	38-5 39-4 40-4# 40-9# 41-10# 42-7# 44-4 44-11 45-15 51-5 54-21 54-36 58-34 59-28	38-5 39-4# 40-4# 40-12 41-10# 43-3 44-4 44-11# 45-15 51-5 54-21 54-36 58-34 59-28	38-5# 39-4# 40-7 40-12# 42-4 43-3 44-4# 44-11# 45-15 51-5 54-21# 54-36 58-34 59-28	38-5# 39-7 40-7 41-7 42-4 43-3# 44-4# 44-14 45-15# 51-5 54-21# 54-36# 58-34 59-12 59-28	38-8 39-7 40-7 41-7 42-4# 43-3# 44-7 44-14# 45-15# 51-5# 54-24 54-36# 58-34 59-12 59-28	38-8 39-7 40-7 41-7# 42-4# 43-6 44-7 44-23 45-15# 51-5# 54-24# 54-36# 58-34 59-12# 59-28	38-8 39-7 40-7 41-7# 42-7 43-6 44-7 44-23# 47-36 51-5# 54-36 58-16 58-34 59-12# 59-28	38-8 39-7 40-7 41-10 42-7 43-6 44-7 45-12 47-36 52-2 54-36 58-16 58-34 59-17 59-28
	59-28 60-14 60-14# 61-20 61-28 62-26# 62-53	59-28 60-14 60-14# 61-20 61-28 62-26# 62-53	59-28 60-14 60-14# 61-20 61-28 62-29	59-28# 60-14 60-14# 61-20 61-28 62-29# 62-53	59-28# 60-14 60-14# 61-20 61-28 62-53 62-53	59-28# 60-14 61-17 61-20 61-28 62-53 62-53 39-7#	60-14 60-14 61-17 61-20 61-28 62-53	60-14 60-14 61-17# 61-20# 61-28 62-53 62-53#	60-14 60-14 61-17# 61-20# 61-28 62-53 62-53#	60-14 60-14 61-20 61-20# 61-28# 62-53	60-14 60-14 61-20 61-23 61-28# 62-53	60-14 60-14 61-20 61-23 61-28# 62-53	60-14 60-14# 61-20 61-23# 62-26 62-53	60-14 60-14 61-20 61-23 62-26 62-53
REGU\$	52-53 38-8 42-7# 54-36 58-34 59-28# 60-14 61-20#	52-53 38-8 43-6 54-36 58-34# 59-28# 60-14# 61-20#	62-53 38-8# 43-6 54-36 58-34# 59-28# 60-14# 61-28	52-53 39-7 43-6# 54-36 58-34# 59-28# 60-14# 61-28	52-53 39-7 44-7 54-36# 58-34# 59-28# 60-14# 61-28	52-53 39-7# 44-7 54-36# 58-34# 59-28# 60-14# 61-28	62-53# 40-7 44-7# 54-36# 58-34# 60-14 60-14# 61-28#	62-53# 40-7 45-15 54-36# 59-28 60-14 61-20 61-28#	62-53# 40-7# 45-15 58-34 59-28 60-14 61-20 61-28#	41-10 45-15# 58-34 59-28 60-14 61-20 62-53	41-10 51-5 58-34 59-28 60-14 61-20 62-53	41-10# 51-5 58-34 59-28 60-14 61-20 62-53	42-7 51-5# 58-34 59-28 60-14 61-20# 62-53	42-7 54-36 58-34 59-28 60-14 61-20 62-53

U

IDAT3 D	ISK FUNCT	IONAL MAC	CRO X04.00 REF V01-05	9-JUL-81	01:13:55	PAGE S-9	, M	5	7					SEQ 0271
	62 - 53 29 - 31	62-53 29-36#	62-53#	62-53#	62-53#	62-53#	62-53#	62-53#					•	
ERRCA ERROR ERRPA ESEEK ETRY ETS EVEC	29-7# 40-9 44-11 54-21 61-17 29-32# 8-12# 8-22# 5-7# 8-17#	29-36# 37-18 40-12 44-11 54-21 61-20 29-35	37-18 41-7 44-14 54-24 61-23	37-23 41-7 44-23 54-36 61-23	38-5 41-10 45-12 58-16 61-28	38-5 42-4 45-12 58-16 62-26	38-8 42-4 45-15 58-21 62-26	39-4 42-7 47-36 58-34 62-29	39-4 43-3 51-2 59-12 62-53	39-7 43-3 51-2 59-12	40-4 43-6 51-5 59-17	40-4 44-4 52-2 59-28	40-7 44-4 52-2 60-14	40-9 44-7 52-8 61-17
EVECT EVINP EVS GO M	5-63# 8-20# 5-16# 59-14 5-32#	59-20#												
ONLY REAL STOP TRIES	8-29# 3-44# 3-40# 8-31#	59-8 59-5	63 - 91 63 - 88											
W.ANG W.BUF W.CMD W.HI W.LOW	63-27 3-34# 3-29# 3-32# 3-31# 3-30# 3-33#	58-15* 58-13* 58-10* 58-8*	59-11* 59-9* 62-48 62-15	62-53 62-53 62-38	62-53 62-53 62-53	62-53								
W.LOW W.SDI W.STA WRDY .BADP .BESS .MCNT .MEGR .MEGW .PARM .PAT .SCHR .SDCL .TGOF	7-63# 7-63# 7-63# 7-68# 7-60# 7-61# 7-55# 7-59# 7-56# 7-69#	58-6* 44-17 7-63 7-68 7-69 7-61 7-62 7-56 7-58 7-60 7-57 7-70	59-6* 54-22	58-17	59-13	61-24	62-27							
TGSS TRKL AVREG BCRES CR	7-70# 7-58# 29-46# 44-7* 60-14* 6-44# 63-21	7-59 38-8 45-15 60-14* 45-13 63-40#	38-8* 45-15* 60-14* 45-15	39-7 51-5 61-20 45-15	39-7* 51-5* 61-20*	40-7 54-36 61-28	40-7* 54-36* 61-28*	41-10 58-34 62-53	41-10* 58-34* 62-53*	42 - 7 59 - 28	42-7* 59-28*	43-6 60-14	43-6* 60-14	44-7 60-14
CTWRD DI DIL TO DISTO	7-8# 36-31* 24-27 24-25	37-11 24-46# 24-45#	63-12# 38-18* 38-3*	38-14*										
DIVER ECCNT ECGRP ECTRK GFEK SEEK1	5-4# 55-12* 48-13* 47-9* 46-10 61-19	55-24 48-30 48-9 47-51 61-22#	58-19 49-73 48-50 48-67	58-32 63-76# 48-57 49-33	59-15 48-69 49-38	59 - 26 49 - 36 50 - 9	60-12 49-71 50-53	63-81# 50-24 61-9#	54-9	55-10	63-69#			

	DISK FUNCTIONAL				01:13:55	PAGE	s-10	
--	-----------------	--	--	--	----------	------	------	--

UDATS D	ISK FUNCT	TABLE (CA	RO X04.00	9-JUL-81	01:13:5	5 PAGE S-	10							SEQ 0272
SEEK2	61-23# 61-21 61-16#	61-27 61-25	61-29#		٠ ۶,	*							*	
SEKINP	8-15# 4-7#	24-18	32-34											
SEEK3 SEEKA SEKINP SEND SEQSEK SER10 SER11 SER12 SER13 SER14 SER15 SER16 SER17 SER18 SER18A SER18B SER18B SER18D	8-34# 32-19 32-24 32-36 32-53 32-63 32-67 32-69 35-18 35-57 35-56 35-55	65-148# 35-12 65-154# 65-156# 65-160#	65-151#											
SER17 SER18 SER18A SER18B SER18C SER18D SHRTTO SNDAGN	32-69 35-18 35-57 35-56 35-55 35-54 5-3# 22-14#	65-163# 65-166# 65-169# 65-172# 65-173# 65-175# 38-11 22-18												
SPADJU	29-30*	29-40#					47.00	47.07	63-24	63-26	63-27	63-54#		
ST.C ST.CON ST.DB ST.DF ST.ERR ST.ERR ST.FE ST.FO ST.MOD ST.MSK	33-8 4-30# 4-29# 4-47# 4-44# 4-37# 4-28# 4-41# 4-46#	41-3	63-16	63-17	63-18	63-19	63-22	63-23	05 24					
ST.MOD ST.MSK	4-27#													
ST.PE ST.PS ST.RE ST.RTY ST.RTY ST.RU ST.ST.ST.ST.ST.ST.ST.ST.ST.	4-35# 4-43# 4-39# 4-42# 4-36# 4-40# 4-48# 4-26#													
ST.UNT ST.WE STACK START STATEX STATLP STATOK	4-24# 4-45# 20-8 20-9 21-16 21-9# 21-12	30-5# 32-5# 21-18 21-14 21-17#	36-34 21-22# 21-20											
STATUS STSRES SUB SUBUNT	4-10# 6-45# 5-22# 48-26 50-32 45-10*	21-9 40-5 32-3 48-35 50-38 63-41#	40-7 32-3# 48-53 54-27	40-7 46-6 48-62 54-29	47-4 48-71 58-26	47-6 48-73 63-21	47-16 49-9 63-59	47-24 49-11	47 - 32 49 - 18	47 - 44 49 - 23	47-46 49-26	48-7 49-42	48-16 49-63	48-18 50-12

```
37-20
39-6
38-7
42-6
40-6
40-11
41-3#
                         38-3#
40-3#
38-11#
43-2#
40-9#
40-14#
TO
T00
TOA
TOB
11
           52-1#
52-2#
52-4
T10
                         52-6
52-9#
T10LOP
T10x
            6-3#
TIMSIZ
           41-9
                         42-3#
TECMD
           6-4#
TZDLL
                         44-3#
46-3#
44-9#
T31
            45-14
T3A
            44-6
                         44-22
44-20
44-17#
T38
            44-10#
T30
            44-11#
T3D
            44-13
           35-52
44-18
                         36-8#
45-3#
T3STRT
T4A
            47-4#
T4A1
            47-25
6-8#
T4B
                         47-27#
T4881
            6-9#
T4BB2
                         47-38#
T4C
            47-40
                         47-42#
T4D
T4MPRM
             6-6#
             6-12#
T4MXFR
             6-11#
T4SEEK
             6-10#
T4SOFT
             6-7#
T4UPRM
            48-6#
16
                         48-12
48-34
48-33#
48-70
            48-10#
T6A
            48-30#
48-31
48-51#
48-56
48-58
48-64
T60
T6D
T6E
T6E1
                          48-61#
                         48-60
48-71#
                                       48-70#
T6F
T6X
            49-13#
49-30#
49-45
49-52
49-58
                         49-15
49-75
49-48#
17A
T7C
T7C1
                                       49-87
                         49-55#
T7D
                         49-60
49-77
49-87#
49-88#
                                       49-76#
T7E
            49-47
17G
            49-83
T7H
T7X
18
            50-1#
            50-20#
50-26
50-41
                         50-35
50-30#
T8A
                                       50-54
T8B
T8D
                          50-44
                                       50-46#
            50-51
                          50-55#
T8X
19
            51-1#
                          51-7#
T9X
            51-4
```

	UDAT3 D CROSS R	ISK FUNCT EFERENCE	IONAL MACI	RO X04.00 EF V01-05	9-JUL-81	01:13:55	PAGE S-1	?	0					S	EQ 0274
	TALK1A TALK1B TALK2A	24-20 24-26 24-32	24-23# 24-28# 24-41#	24-38	2/-/2#										
i	TALK2B TALKER TEST	24-22 24-15# 36-32	24-36 38-5 37-11#	24-40 39-4	24-42#	41-7	42-4	43-3	44-4	45-12	51-2	61-17			
	TEST4 TESTEX	2-37# 37-18 40-13 44-11 54-21	24-1 37-18 41-7 44-15 54-25	37-24 41-7 44-24 58-16	38-5 41-11 45-12 58-16	38-5 42-4 45-12 59-12	38-9 42-4 45-16 59-12	39-4 42-8 47-37 61-17	39-4 43-3 51-2 61-17	39-8 43-3 51-2 61-23	40-4 43-7 51-6 61-23	40-4 44-4 52-2 62-26	40-8 44-4 52-2 62-26	40-9 44-8 53-1# 62-30	40-9 44-11 54-21
	TESTX TIMEOU TLEN.U TO TOOBIG	36-34# 5-61# 7-10# 28-1# 5-69#	7-11 38-13	38-17											
	TRACKS TRKBOT TRKEXT TRKGRP TRKLOP TRKTST	8-36# 55-20 55-16 5-28# 55-12# 50-22	55-24# 55-27# 48-7 55-26 55-1#	48-53	49-9	50-32									
	TSTBLK TSTCYL	49-22* 50-29* 49-17*	49-25* 54-6 49-20*	49-30 54-7 49-21*	49-62* 55-6 49-32	49-70* 55-8 49-40	49-80 63-71# 49-46*	49-82* 49-48	49-84 49-50*	49-86* 49-51	50-11* 49-54*	50-19* 49-56*	50 - 23	50-25* 50-37*	50 - 27 50 - 40*
	U.CBN U.CCNT U.CCOP U.CCYL U.CGRP U.COPY U.CSEC U.CTRK	50-42* 7-41# 7-22# 7-44# 7-48# 7-49# 7-43# 7-28#	50-43* 7-42 7-23 7-45 7-49 7-50 7-44	50-45*	50-46	50-48	50-50	50-52	63-72#						
	U.ECCT U.ELEV U.LCYL U.LGRP U.MASK U.MBN U.MLEV U.MSEC U.NEXT	7-24# 7-34# 7-31# 7-50# 7-10 7-29# 7-40# 7-33# 7-26# 7-15#	7-29 7-25 7-35 7-32 7-51 7-51# 7-30 7-41 7-34 7-27 7-16				•								
	U.NFUN U.NSEC U.PARM U.PAT U.PCTG U.RBN U.RTRY U.RVER U.RWER U.RWTO U.SDIL U.SDIS U.SEEK	7-20# 7-25# 7-38# 7-21# 7-23# 7-42# 7-32# 7-46# 7-45# 7-36#	7-30 7-41 7-34 7-27 7-16 7-21 7-26 7-22 7-24 7-43 7-43 7-43 7-47 7-47 7-47 7-47												
	U. SEEK U. SNUM	7-35# 7-19# 7-47#	7-36 7-20 7-48												

			RO X04.00 EF V01-05		01:13:55	PAGE S	-13	0
U.SUBP U.SUBU U.TIMO U.TSEC U.WPRT U.WRIT	7-16# 7-39# 7-17# 7-27# 7-37# 7-30#	7-17 7-10 7-18 7-28 7-38 7-31						
UDATA UNITO UNIT1 UNIT2 UNIT3	25-14 5-46# 5-47# 5-48# 5-49#	25-16 36-22	26-11*	26-15	26-20#			
UNITAB	36-20* 32-13	36-36 34-7	45-3 34-19	63 - 9# 34 - 26	35-7	35-37	36-10	63-5#
UNSSUC UREAD UTOTST UWRITE WAITSI WBUFLN WCHECK WCHKAL	6-42# 4-14# 6-13# 4-15# 4-13# 3-68# 8-37#	25-15 34-4 26-16 58-24 3-69	59-20	62-31				
WCONT WGO WONLY	3-39# 58-18 8-30#	58-24#						
WREAL WRITEB	3-43# 56-10	58-12 58-1#						
WRONG WRTEXT WSTOP	5-65# 58-20 3-38#	58-23 58-5	58-31	58-33	58-36#			
WTRCMP WTREXT XBNCYL XFERRT	55-14 56-12 5-41# 5-5#	56-1# 56-15 47-24	56-22 56-18	56-23#				
XMTERR	6-25# 27-10#	21-11						
XREAD XWRITE	4-5#	59 - 22 58 - 28	62-32					

													ė	
BCS CERROR DEVFTL	11-1# 16-65# 16-37#	35-39												
DIAG\$\$ DMCODE DMEND DMOVLY DSTAT ENDERR	9-5# 1-3# 1-32# 1-18# 17-3# 16-93#	2-39 65-178 2-39 37-18	65-4 40-9	44-11	52-2	54-21	58-16	59-12	61-23	62-26				
ERRDF ERRHRD	13-33# 13-39# 40-9 44-11 54-21 61-17	37-18 40-12 44-11 54-21 61-20 35-39	37-18 41-7 44-14 54-24 61-23	37-23 41-7 44-23 54-36 61-23	38-5 41-10 45-12 58-16 61-28	38-5 42-4 45-12 58-16 62-26	38-8 42-4 45-15 58-21 62-26	39-4 42-7 47-36 58-34 62-29	39-4 43-3 51-2 59-12 62-53	39-7 43-3 51-2 59-12	40-4 43-6 51-5 59-17	40-4 44-4 52-2 59-28	40-7 44-4 52-2 60-14	40-9 44-7 52-8 61-17
ERROR ERROR\$	16-49# 14-3# 40-9 44-11 54-21 61-17	35-39 37-18 40-12 44-11 54-21 61-20	37-18 41-7 44-14 54-24 61-23	37-23 41-7 44-23 54-36 61-23	38-5 41-10 45-12 58-16 61-28	38-5 42-4 45-12 58-16 62-26	38-8 42-4 45-15 58-21 62-26	39-4 42-7 47-36 58-34 62-29	39-4 43-3 51-2 59-12 62-53	39-7 43-3 51-2 59-12	40-4 43-6 51-5 59-17	40-4 44-4 52-2 59-28	40-7 44-4 52-2 60-14	40-9 44-7 52-8 61-17
ERRORC ERRSF ERRSFT GETP\$	16-75# 13-27# 13-47# 15-15# 58-34 60-14 62-53	38-8 58-34 60-14 62-53	39-7 58-34 60-14 62-53	40-7 58-34 60-14	41-10 58-34 61-20	42-7 58-34 61-20	43-6 59-28 61-20	44-7 59-28 61-20	45-15 59-28 61-28	51-5 59-28 61-28	54-36 59-28 61-28	54-36 59-28 62-53	54-36 60-14 62-53	54-36 60-14 62-53
HARDER MOVMSG MSG MSSG MSSGE	16-31# 16-84# 10-3# 16-111# 16-133#	35-39 63-16	63-17	63-18	63-19	63-20	63-21	63-22	63-23	63-24	63-26	63-27		
NDERR OVTERM PARGS.	16-101# 2-39 14-33# 44-7 58-34 60-14	2-39# 38-8 45-15 58-34 60-14	2-3)# 38-8 45-15 58-34 60-14	65-4 39-7 51-5 59-28 61-20 62-53	65-4# 39-7 51-5 59-28 61-20	65-178 40-7 52-8 59-28 61-20	40-7 54-36 59-28 61-20	41-10 54-36 59-28 61-20	41-10 54-36 59-28 61-28	42-7 54-36 59-28 61-28	42-7 58-34 60-14 61-28	43-6 58-34 60-14 62-53	43-6 58-34 60-14 62-53	44-7 58-34 60-14 62-53
POP PUSH	62-53 12-11# 34-24 12-3# 35-17	62-53 21-22 35-29 21-7 35-30	62-53 22-28 35-35 22-12 48-15	62-53 24-42 35-40 24-15 57-8	25-17 48-25 25-10 61-9	26-17 57-21 26-10 62-14	27-15 61-29 27-10 62-25	29-39 62-33 29-7	32-38 62-54 29-9	32 - 52 32 - 14	32 - 55 32 - 35	33-4 32-41	33 - 26 34 - 10	34 - 15 35 - 5
REPSFT RSTR\$	16-10# 15-8# 60-14	38-8 60-14	39-7 61-20	40-7 61-28	41-10 62-53	42-7	43-6	44-7	45-15	51-5	54-36	58-34	59-28	60-14
RXOR SAVR\$	18-4# 15-1# 60-14	38-8 60-14	39-7 61-20	40-7 61-28	41-10 62-53	42-7	43-6	44-7	45-15	51-5	54-36	58-34	59-28	60-14
SOFTER SYSFTL TALKX	16-4# 16-43# 19-3#	38-5	39-4	40-4	41-7	42-4	43-3	44-4	45-12	51-2	61-17			

UDAT4 DISK EXERCISER MACRO X04.00 9-JUL-81 01:12:03 TABLE OF CONTENTS

^{3- 1} UDA DM PROGRAM PARAMETERS
7- 1 TEST 4 SPECIFIC INFORMATION
9- 1 MACRO DEFINITIONS

```
START OF TEST CODE
RDSTAT - GET DRIVE'S REAL TIME DRIVE STATE
               HOSTRG - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED, ETC.
               CMPEDC - EDC CALCULATION ROUTINE
              RTDS - REAL TIME DRIVE STATE ROUTINE
TALK - SDI LEVEL 2 INTERCHANGE ROUTINE
SDI PROTOCOL MESSAGE TABLES
              BLKCHK - SEE IF A BLOCK WITH ERROR IS KNOWN TO BE BAD CMP2 - 24 BIT COMPARE
               BUILDP - BUILD THE READ OR WRITE CHAIN LINKS
               LINK - BUILD A LINK (NODE) IN THE READ/WRITE CHAIN
               FILLIN - FILL THE READ/WRITE CHAIN LINK (NODE) WITH REQUIRED INFORMATION
               ALLOCM - ALLOCATE MEMORY FOR THE READ/WRITE BUFFERS AND CHAIN
              BULDUM - BUILD THE DUMMY SDI CONTROL BLOCK FOR READS AND WRITES

CALC - CALCULATE THE CYL, GRP AND TRACK FOR THE GIVEN L/RBN

STORAGE AREA PATTERNS, DUMMY SDI AREA, OVERLAY INFORMATION AND MORE

ROOT - MAIN DRIVING MODULE OF TEST 4
               SEGNCR - MODULE SEQUENCER FOR TEST 4
               OVRLAY - OVERLAY PROCESS FOR BRINGING IN OVERLAYS IF NEEDED
               ****** NON-OVERLAY MODULE AFINIT - USED AFTER DRIVE IS INITILIZED
               DRPTST - SEE THAT AT LEAST ONE SUBUNIT IS ACTIVE ON A UNIT
               CORECT - CORRECT THE ERRORS
               REPERR - REPORT THE ERROR TO THE HOST
               RECOVR - RECOVER FROM THE ERROR
               CHKSTA - CHECK STATUS FOR ANY ERRORS THAT NEED RECOVERY
               ****** NON-OVERLAY MODULE REDSET - READ/WRITE SETUP MODULE
               ****** NON-OVERLAY MODULE START - TEST 4 INITIALIZATION
               BLDUNT - BUILD THE UNIT PARAMETER BLOCK
               BLDSUS - BUILD ALL SUBUNIT PARAMETER BLOCKS ON THIS UNIT
               BLDSUB - BUILD A SUBUNIT PARAMETER BLOCK
               BLDBES - FIND HOW MANY WORDS NEEDED FOR THE BEGIN/END OR TRACK/GROUP SETS
               BLDBB - FIND HOW MANY WORDS NEEDED FOR THE BAD BLOCKS
               GETMEM - ALLOCATES MEMORY FOR UNIT AND SUBUNIT BLOCK AND SUBUNIT PARAMETERS
               COPYSU - COPY ALL SUBUNIT PARAMETERS TO SUBUNIT BLOCK
               SORTBE - SORT THE BEGIN/END SETS IN ASCENDING ORDER SWAPBE - IF BEGIN/END SETS OUT OF ORDER, SWAP
               SORTBB - SORT THE BAD BLOCKS IN ASCENDING ORDER SWAPBB - IF BAD BLOCKS OUT OF ORDER, SWAP SORTIG - SORT THE TRACK/GROUPS IN ASCENDING ORDER
               TROOT - TEMPORARY ROOT FOR SEQUER DURING TEST 4 SETUP
               INSET - SET UP UNIT PARAMETERS FOR SEGNCR ROUTINES
               COMCHR - GET COMMON CHARACTERISTICS AND STORE NECESSARY INFO IN UNIT PARAMETERS
               INSCHR - GET ALL SUBUNITS' PARAMETERS (CHARACTERISTICS), ERROR CHECK AND STORE
               CHKCYL - CHECK VALIDITY OF STARTING AND ENDING CYLS, CONVERT TO BEGIN/END SET
               CYLBN - GIVEN A CYLINDER, CALCULATE STARTING BN ON THAT CYLINDER
               CHKBES - CHECK THE BEGIN/END SETS FOR ERRORS
               CHKBB - CHECK THE BAD BLOCKS FOR ERRORS
               COMPSC - COMPUTE SECTORS/GROUP AND SECTORS/CYLINDER
               CLCMAX - CALCULATE THE MAXIMUM WRITEABLE DBN
               CHKTG - CHECK THE TRACK/GROUPS FOR ERRORS, AND CONVERT TO BN'S
85-
               COMPDP - CALCULATE SECTORS/TRACKS OR SECTORS/GROUPS
86-
               SMASK - CALCULATE THE SUBUNIT MASK
87-
               INITD - LAST ERROR CHECKING AND SETUP MODULE BEFORE TESTING STARTS
               GMPARM - GET MASTER PARAMETERS (PATTERN 16) AND SET UP OVERLAY ADDRESSES
```

```
89-
92-
93-
              GETU - POLL ALL PORTS, THEN GET UNITS TO TEST
              ****** NON-LOADED OVERLAY, ERROR MESSAGES
              INFORMATIONAL MESSGES
94-
95-
96-
98-
              ******* OVERLAY 1 - SETUP OPERATION TO BE DONE THIS PASS
              NXTSEC - FIND THE NEXT STARTING SECTOR TO READ/WRITE
              RNDBE - FIND A RANDOM STARTING SECTOR USING BEGIN/END SETS
              MASK - FIND MASK FOR RANDOM NUMBER
99-
              SEQBE - FIND NEXT SEQUENTIAL STARTING SECTOR USING BEGIN/END SETS
100-
              FNDBES - FIND THE BEGIN/END SET CURRENT BN RESIDES IN
101-
              PREVBE - MOVE TO PREVIOUS BEGIN/END SET
102-
              NEXTBE - MOVE TO NEXT BEGIN/END SET
              UPLBN - IF GOING UP, UPDATE CURRENT BN TO LAST BN READ/WRITTEN
              INC2
104-
                       24 BIT INCREMENT
105-
                     - 24 BIT DECREMENT
106-
              MOV2
                     - 24 BIT MOVE
107-
              RNDIG - FIND A RANDOM STARTING SECTOR USING TRACK/GROUP LIMITS
108-
              SEQTG - FIND NEXT SEQUENTIAL STARTING SECTOR USING TRACK/GROUP LIMITS
109-
              UPT
                     - MOVE UP ONE TRACK
110-
              DOWNT - MOVE DOWN ONE TRACK
111-
              UPG
                     - MOVE UP ONE GROUP
112-
              DOWNG - MOVE DOWN ONE GROUP
113-
              NEWUPT - INITILIZE PARAMETERS FOR SEQUENTIALLY UP BY TRACKS
              NEWDNT - INITILIZE PARAMETERS FOR SEQUENTIALLY DOWN BY TRACKS
114-
115-
              SETSEC - SETUP TRACK/GROUP COUNT FOR SELECTED GROUPS
116-
              LSTTRK - SET MASTER BN TO POINT TO LAST TRACK IN THE GROUP
117-
              CLRUP - CLEAR ALL PARAMETER BITS
118-
              RORW - DETERMINE IF A READ OR A WRITE IS TO BE DONE
119-
              PATTRN - IF WRITE, DETERMINE WHAT PATTERN IS TO BE WRITTEN
              WCHK - IF WRITE, SEE IF A WRITE CHECK IS TO BE DONE DOMP - IF READ, SEE IF DATA COMPARE IS TO BE DONE RANDOM - RANDOM NUMBER ROUTINE
120-
121-
122-
123-
124-
125-
              MAXMUM - FOR SEQUENTIAL B/E SETS, DETERMINE HOW MANY SECTORS TO READ/WRITE
              ****** OVERLAY 2 - IF NECESSARY, ISSUE SEEK
              TSTNEC - TEST TO SEE IF SEEK IS NECESSARY
126-
              ISUSFK - ISSUE SEEK COMMAND
              ****** OVERLAY 3 - SEE IF THE SEEK IS COMPLETE
128-
              ****** OVERLAY 4 - SET UP FOR READ OR WRITE OPERATION
129-
              ****** OVERLAY 5 - WRITE
130-
              BULDSC - BUILD THE SECTOR TO WRITE (FILL WITH PATTERN AND CALC EDC)
131-
              COPPAT - COPY THE DATA PATTERN TO BUFFER
132-
              WBLOCK - WRITE THE SECTOR(S) AND THEN CHECK FOR ERRORS
133-
              FNDWER - IF ERROR, FIND IT'S POSITION IN THE CHAIN
134-
              ****** OVERLAY 6 - READ
135-
              RBLOCK - READ THE SECTORS
136-
137-
              FNDRER - FILL IN THE READ CHAIN WITH THE CORRECT HEADERS
              ****** OVERLAY 7 - EDC + ECC CHECKING, DATA COMPARISON, RETRIES
138-
              ERCOV - RETRIES DUE TO DATA ERRORS
139-
              NEWLEY - SET ERROR RECOVERY LEVEL TO NEW VALUE, THEN RETRY AGAIN
140-
              SNDLEY - SEND THE NEW LEVEL OF ERROR RECOVERY TO THE DRIVE
141-
              CMPDAT - DATA COMPARISON ON READ BUFFER(S)
142-
              ****** OVERLAY 8 - REVECTORED SECTOR HANDLING
              REVSUP - SETUP THE REVECTOR OPERATION (TO READ RCT)
144-
              REVSOK - SEE IF THE REVECTOR INFO SECTOR JUST READ IS OK
145-
              SEARCH - TRY TO FIND THE LBN IN THE RCT SECTOR JUST READ
146-
              RVFAIL - CLEAR ALL REVECTOR BITS, AND CALL SETUP NEXT
147-
              NXTRCT - GET THE NEXT RCT SECTOR TO SEARCH
148-
              ****** OVERLAY 9 - RECALIBRATION MODULE
```

.TITLE UDAT4 DISK EXERCISER

COPYRIGHT (C) 1980 DIGITAL EQUIPMENT CORPORATION, MAYNARD, MASS.

THIS SOFTWARE IS FURNISHED UNDER A LICENSE FOR USE ONLY ON A SINGLE COMPUTER SYSTEM AND MAY BE COPIED ONLY WITH THE INCLUSION OF THE ABOVE COPYRIGHT NOTICE. THIS SOFTWARE, OR ANY OTHER COPIES THEREOF, MAY NOT BE PROVIDED OR OTHERWISE MADE AVAILABLE TO ANY OTHER PERSON EXCEPT FOR USE ON SUCH SYSTEM AND TO ONE WHO AGREES TO THESE LICENSE TERMS. TITLE TO AND OWNERSHIP OF THE SOFTWARE SHALL AT ALL TIMES REMAIN IN DIGITAL.

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION.

DIGITAL ASSUMES NO RESPONSIBILITY FOR THE USE OR RELIABILITY OF ITS SOFTWARE ON EQUIPMENT WHICH IS NOT SUPPLIED BY DIGITAL.

:THIS PROGRAM SHALL BE ASSEMBLED WITH THE PROGRAM DMACRO :USING A COMMAND LINE SIMILAR TO:

UDAT4.BIN, UDAT4=UDAT4T, UDATP, UDAT4M, UDATR

TEST4 : THIS IS TEST4

.ENABL ABS DMCODE UDAT4.0.714.3.0

1 2			UDA DM P	ROGRAM PARAMETER	RS	
4		:	EQUATES	•		
67			HIGHEST	USABLE LOCATION	OF UDA M	EMORY + 1
9 10 11	010000 007774		=	10000 7774		: HIGH MEMORY+1 : OVERLAY ADDRESS LOCATION
12			OFFSETS	FOR FORMAT TRACK	TABLE	
15 16 17 18	000000 000001 000002	FT.HI	= = =	0. 1. 2.		BUFFER POINTER OFFSET; HI ORDER HEADER OFFSET; LOW ORDER HEADER OFFSET
19 20			OFFSETS	FOR FORMAT TRACK	BUFFER	
22 23 24	000000 000400		=	0. 256.		:FIRST DATA WORD OFFSET :EDC WORD OFFSET
26			OFFSETS	FOR READ/WRITE I	1/0 CHAIN	TABLES
10 11 12 13 14 15 16 17 18 19 21 22 22 23 24 25 26 27 28 29 31 33 33 33 35 35 36 37 37 37 37 37 37 37 37 37 37 37 37 37	000000 000001 000002 000003 000004 000005 000006	RW.BUF RW.LOW RW.HI RW.CMD RW.SDI	= = = = = = = = = = = = = = = = = = = =	0. 1. 2. 3. 4. 5.		STATUS AND NEXT BUFFER POINTER OFFSET POINTER TO DATA BUFFER HI ORDER EXPECTED HEADER LOW ORDER EXPECTED HEADER SDI COMMAND AND HEAD ADDRESS DUMMY SDI CONTROL BLOCK POINTER THETA FROM INDEX
36			CONSTANT	S FOR READ AND W	WRITE XFC	' S
38 39 41 42 43 445 445 447 449 551 554 556 57	140000 040000 100000 000000 100000 122400 013400 010000 100000	RSTOP RCONT FSTOP WREAL RREAL ECCFLG EOC	= = = = = = = = = = = = = = = = = = = =	140000 40000 100000 0 100000 122400 13400 10000 100000 40000		: LAST ENTRY IN CHAIN FOR WRITE : WRITE CONTINUE : LAST ENTRY IN CHAIN FOR READ : READ CONTINUE : LAST ENTRY IN CHAIN FOR FORMAT : WRITE REAL TIME ECOMMAND : READ REAL TIME COMMAND : ECC ERROR IN BUFFER BIT : END OF CHAIN : BUFFER FULL OR EMPTY FLAG
49 50			HEADER (CODES		
51 52 53 54 55 56 57	000000 060000 030000 110000 050000 120000	HD.LBN HD.RBN HD.REV HD.BAD HD.PRV HD.XBN	= = = = = = = = = = = = = = = = = = = =	000000 060000 030000 110000 050000 120000		GOOD LBN GOOD RBN, PERHAPS UNUSED REVECTORED LBN BAD BLOCK PRIMARY REVECTORED BLOCK XBN BLOCK

UDAT	DISK	EXERCISE	R MACRO	X04.00	9-JUL-81	01:12:03	PAGE	3-1	
UDA I	OM PRO	GRAM PARA	METERS						

58	140000	HD.DBN	= 140000	;DBN BLOCK
		:	OFFSETS FOR DATA BUFF	ERS
60 61 62 63 64 65 66 67 68 69 70	000000 000400 000401	BF.DAT BF.EDC BF.ECC	= 0. = 256. = 257.	DATA FERROR DETECTION CODE LAST 17 ECC RESIDUES
66		:	BUFFER AND READ/WRITE	CHAIN LINK SIZES
68 69 70	000401 000415 000007	WBUFLN RBUFLN LINKLN	= 257. = WBUFLN+12. = 7.	; WRITE BUFFER SIZE ; READ BUFFER SIZE ; LINK SIZE

1		: XFC DEFINITION EQUATES	
23 45 67 89 10 11 12 13 14 15 16 17 18 19 20 21	000000 000001 000002 000003 000004 000005 000006 000007 000010 000011 000012 000013 000014 000015 000016 000017 000020 000021	BREAK = 0. FORMAT = 1. XREAD = 2. XWRITE = 3. SEND = 4. RCV = 5. COMPARE = 6. STATUS = 7. ECHO = 8. DINIT = 9. WAITSI = 10. UREAD = 11. UWRITE = 12. ECC = 13. MRD = 14. MWR = 15. CVI = 16. EXIT = 17.	;BREAKPOINT XFC CODE ;FORMAT TRACK XFC CODE ;READ N SECTORS XFC CODE ;WRITE N SECTORS XFC CODE ;SEND SDI COMMAND XFC CODE ;RECEIVE SDI MESSAGE XFC CODE ;COMPARE DATA PATTERN TO BUFFER ;RETURN DRIVE STATUS XFC CODE ;ECHO DATA TO DRIVE XFC CODE ;DRIVE INITIALIZE XFC CODE ;WAIT FOR SECTOR OR INDEX PULSE ;READ UNIBUS MEMORY XFC CODE ;WRITE UNIBUS MEMORY XFC CODE ;DO ECC ON BUFFER XFC CODE ;SEND BUFFER TO MAINTENANCE READ COMMAND ;GET BUFFER FROM MAINTENANCE WRITE COMMAND ;CONVERT TO PHYSICAL ADDRESS XFC CODE ;TERMINATE DM PROGRAM XFC CODE
22		GET STATUS OFFSETS	
18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36	000000 000000 000001 000002 000002 000002 000003	ST.UNT = 0. ST.MSK = 0. ST.STA = 1. ST.MOD = 1. ST.ERR = 2. ST.CON = 2. ST.C = 2. ST.RTY = 3.	;UNIT NUMBER ;SUBUNIT MASK ;STATUS BYTE ;MODE BYTE ;ERROR BYTE ;CONTROLLER BYTE ;C BITS ;RETRY COUNT/FAILURE CODE
33		STATUS BIT DEFINITIONS	
35 36 37 38 39 40 41 42 43 44 45 46 47 48	000200 000100 000040 000020 000001 000200 000100 000040 000020 000010 002000 001000 000400	ST.OA = 200 ST.RR = 100 ST.DR = 40 ST.SR = 20 ST.PS = 2 ST.RU = 1 ST.FE = 100 ST.PE = 40 ST.PE = 40 ST.DF = 20 ST.WE = 10 ST.BE = 100 ST.DB = 1000 ST.DB = 1000 ST.DB = 400	ONLINE TO ANOTHER (SET IF DRIVE UNAVAILABLE) READJUSTMENT BIT (SET IF RECALIBRATION REQUIRED) DIAGNOSTIC REQUEST (SET IF DIAGNOSTIC REQUESTED) SPINDLE READY (SET IF SPINDLE READY) PORT SWITCH (SET IF PORT SWITCH IN) RUN/STOP SWITCH (SET IF RUN/STOP SWITCH IN) FATAL ERROR (SET IF FATAL ERROR OCCURRED) RETRIABLE ERROR (SET IF RETRIABLE ERROR OCCURRED) PROTOCOL ERROR (SET IF PROTOCOL ERROR OCCURRED) INITIALIZATION FAILURE (SET IF INIT FAILED) WRITE ENABLE (SET IF WRT ATTEMPTED ON PROT DISK) FORMATTING (SET IF FORMATTING ENABLED) DIAGNOSTIC CYLS (SET IF DIAG CYL ACCESS ENABLED) SECTOR SIZE (SET FOR 576 BYTE SECTORS)

```
GET COMMON CHARACTERISTICS OFFSETS
                                                                                         ;SHORT TIMEOUT <3:0>
                                         SHRTTO =
             000000
                                         SDIVER
                                                            0.
                                                                                         :SDI VERSION <7:4>
             000000
                                                                                         :TRANSFER RATE <15:0>
                                         XFERRT
             000000
                                         LONGTO
                                                                                         :LONG TIMEOUT <3:0>
000001
             000001
                                                                                         :RETRIES <7:4>
                                         RETS
                                                                                         :F/RCT COPIES <11:8>
             000001
                                         RCTCPS
             000001
                                         SS
                                                                                         ;SECTOR SIZE <15:15>
                                                  =
             200000
                                         ERLEV
                                                                                         :ERROR RETRY LEVELS <7:0>
                                                  =
                                                                                         :ECC THRESHOLD <15:8>
:MICROCODE REVISION NUMBER <7:0>
:HARDWARE REVISION NUMBER <15:8>
             000002
                                         ECCRSH
                                                  =
            000003
000003
000004
                                         MICREV
                                                  =
                                         HRDREV
                                                  =
                                                            4.7.7.
                                                                                         :UNIQUE DRIVE ID <47:0>
                                         DRVID
                                                  =
                                                                                         :DRIVE TYPE IDENTIFIER <7:0> :REVS/SECOND <15:8>
             000007
                                         DRTYPE
                                                  =
             000007
                                         REVS
                                                   GET SUBUNIT CHARACTERISTICS OFFSETS
                                         THESE OFFSETS ARE CURRENTLY GIVEN AS FOLLOWING THE COMMON CHARACTERISTICS
             000013
                                                                                         :OFFSET TO PUT SUBUNIT AFTER COMMON;
                                         SUB
                                                            11.
             C00000
                                                            0.
                                                                                         :NUMBER OF CYLINDERS IN LBN AREA <31:0>
                                         LBNCYL
             000001
                                                                                         :HI ORDER CYLINDER BITS <15:12>
                                         HICYL
                                                            1.222333445568991027.
                                                                                         GROUPS PER CYLINDER <7:0>
             000002
                                         GRPCYL
                                                                                         ;HI STARTING LBN <11:8>
             000002
                                         HILBN
                                                  =
                                                                                         ;HI STARTING XBN <15:12>
             000002
                                         HIXBN
                                                  =
             000003
                                                                                         ;TRACKS PER GROUP <7:0>
                                         TRKGRP
                                                  =
                                                                                         ;HI STARTING RBN <11:8>
             000003
                                         HIRBN
                                                  =
                                                                                         :HI STARTING DBN <15:12>
             000003
                                         HIDBN
                                                   =
             000004
                                                                                         :RBNS PER TRACK <6:0>
                                         RBNTRK
                                                  =
                                                                                         ; REMOVABLE MEDIA <7:7> 1=REMOVEABLE
; DATA PREAMBLE SIZE IN WORDS <7:0>
; HEADER PREAMBLE SIZE IN WORDS <15:8>
; MEDIA TYPE <31:0>
; FCT COPY SIZE <15:0>
             000004
                                         RM
             000005
                                         DATPRE
                                                   =
             000005
                                         HDRPRE
                                                  =
             000006
                                         MEDTYP
                                                  =
             000010
                                         FCTSIZ
                                                  =
                                                                                         ; LBNS PER TRACK <7:0>
                                         LBNTRK
             000011
                                                  =
             000011
                                         GRPOFF
                                                  =
                                                                                         GROUP OFFSET (SECTORS) <15:8>
             000012
                                         LBNHST
                                                  =
                                                                                         :LBNS IN HOST AREA <31:0>
             000014
                                         RCTCSZ
                                                                                         :RCT COPY SIZE <15:0>
                                                                                         :CYLS IN XBN AREA <15:0>
             000021
                                         XBNCYL
                                                  =
             000022
                                                            18.
                                                                                         :CYLS IN DBN AREA <15:8>
                                         DBNCYL
                                                  =
                                                   UNIT CODES
                                                                                         ;UNIT ZERO CODE
             000001
                                         UNITO
                                                   =
             000002
                                                            2.
                                                                                         :UNIT ONE CODE
                                         UNIT1
                                                   =
                                         UNIT2
UNIT3
             000004
                                                                                         :UNIT TWO CODE
                                                   =
                                                                                         :UNIT THREE CODE
             000010
                                                   =
                                                   BIT MASK DEFINITIONS
             177400
                                         HIBYTE
                                                            177400
                                                                                         ; HIGH BYTE MASK
                                                  =
                                                            000377
                                                                                         : LOW BYTE MASK
             000377
                                         LOBYTE
                                                  =
             007777
                                         HBHINB
                                                  =
                                                                                         ;HI BYTE, HI NIBBLE MASK
                                         HBLONB
                                                            170377
             170377
                                                                                         ; HI BYTE, LO NIBBLE MASK
```

UDAT4	DISK	EXER	RCISER	MACRO	X04.00	9-JUL-81	01:12:03	PAGE	5-1
UDA DI	9 PRO	GRAM	PARAME	TERS					

58 59	177417 177760	LBHINB LBLONB	=	177417 177760	;L0
58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73	000001 000002 000004	TIMEOUT HEADER REVECT		1. 2. 4.	:DRI :HEA :REV
65 66 67	000002 000004 000010	WRONG FRAME CHECK	= = = = = = = = = = = = = = = = = = = =	2. 4. 8.	;FIR ;FRA ;CHE
68 69 70 71	000001 000002	TOOB16	=	1:	; NUM ; DM
72			BIT MAS	K	
75 74 75	000001 000002	LARGE OVERFL	= -	1.	:SEC

LO BYTE, HI NIBBLE MASK LO BYTE, LO NIBBLE MASK

DRIVE TIMEOUT CODE HEADER COMPARE FAILURE CODE REVECTOR NEEDED CODE

FIRST WORD NOT START FRAME CODE FRAMING ERROR CODE CHECKSUM ERROR CODE

NUMBER OF WORDS EXCEEDS 7064 DM BUFFER ADDRESS IS LESS THAN 714


BLOCK NUMBER TOO LARGE SECTOR NUMBER LARGER THAN 16 BITS

1	:MAINTANENCE	READ/WRITE REQUEST NUMBERS	
2 000000 4 000001 5 000002 6 000003 7 000004 8 000005 9 000006 10 000007 11 000010 12 000011 13 000012 14 000013 15 000014 16 000015 17 000016	T1MSIZ = T2DLL = T2CMD = T4MPRM = T4UPRM = T4BB1 = T4BB2 = T4SOFT = T4SEEK = T4MXFR = UTOTST = ERRMES = ERRMC = MESSAG = DONE =	0. 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13.	GET FREE MEMORY PARAMETERS DOWNLINE LOAD DRIVE DIAGNOSTIC MANUAL INTERVENTION TEST 2 PROTOCOL GET MASTER PARAMETERS FROM SW QUESTIONS GET UNIT PARAMETERS FROM HW QUESTIONS GET BAD BLOCKS (1 THRU 14) GET REST OF BAD BLOCKS (15 AND 16) ADD TO SOFT ERROR AND ECC COUNT ADD 1 TO SEEK COUNT ADD TO MEGABITS READ AND WRITTEN GET UNITS TO TEST PRINT ERROR MESSAGE TEST 4 ERROR REPORTING INFORMATION MESSAGE MARK DM PROGRAM AS NO LONGER RUNNING
19	OTHER	BIT DEFINITIIONS	
20 21 000001 22 000002 23 000004 24 000100 25 000400 26 100000	RCVRDY = ATIN = RCVERR = AVAIL = XMTERR = RWRDY = ;	1 2 4 100 400 100000	RECIEVER READY 1 = READY ATTENTION BIT FOR RETURN DRIVE SIGNALS XFC RECIEVER ERROR AVAILABLE 1 = AVAILABLE TRANSMIT ERROR IF SET, UDA IS ABLE TO READ AND/OR WRITE TO DRIVE
28	SDI C	OMMANDS AND RESPONSES	
18 19 20 21	DISCON = ERECOV = CHGMOD = DRVONL = DRVCLR = GETCHR = GETSUB = IRECLB = INSEEK = COMPLT = UNSSUC = CHRRES = SBCRES = ECHOC =	204 6 201 213 14 5 207 210 11 216 12 176 175 170 167 366 350	DISCONNECT DRIVE ERROR RECOVERY CHANGE MODE DRIVE ONLINE DRIVE RUN DRIVE CLEAR OPCODE GET CHARACTERISTICS GET SUBUNIT CHARACTERISTICS RECALIBRATE INITIATE SEEK SUCCESSFUL COMPLETION UNSUCCESSFUL COMPLETION GET CHARACTERISTICS RESPONSE GET SUBUNIT CHARACTERISTICS RESPONSE GET SUBUNIT CHARACTERISTICS RESPONSE GET STATUS RESPONSE DIAGNOSTIC ECHO COMMAND AND RESPONSE
48	ERROR	CODES	
48 49 50 000000 51 000400 52 001000 53 001400	FTLSYS = FTLDEV = ERHARD = ERSOFT =	0 400 1000 1400	: SYSTEM FATAL ERROR : DEVICE FATAL : HARD ERROR : SOFT ERROR

1 .SBTTL	TEST 4	SPECIFIC INFORMATION	
2	TEST 4	SPECIFIC INFORMATION	
4			
6	CONSTAN	TS	
8 000377 SCTWRD 9 000105 INTEDC 10 000061 TLEN.U 11 007717 FIRSTU	=	255. 69. U.LGRP+1 HIMEM-TLEN.U	; NUMBER OF WORDS IN SECTOR TO FILL ; INITIAL EDC VALUE ; UNIT PARAMETER LENGTH ; LOCATION OF FIRST UNIT PARAMETER BLOCK
12 13		RAMETER OFFSETS	, LOCATION OF FIRST ONLY PARAMETER BEOCK
14			
15 000000		0. U.NEXT+1 U.SUBP+4 U.TIMO+1 U.RWTO+1 U.SEEK+1 U.NFUN+1 U.PAT+1 U.CCNT+2 U.PCTG+1 U.NSEC+1 U.MSEC+1 U.MBN+1 U.BOIS+1 U.BDIS+1 U.WPRT+1 U.WPRT+1 U.WPRT+1 U.WBN+2 U.COPY+1 U.CCOP+1 U.RWER+1 U.RVER+1 U.RVER+1 U.SNUM+4 U.CCYL+2 U.CGRP+1 U.CCYL+2 U.CGRP+1 U.CCYL+2	POINTER TO NEXT UNIT (RING LINKED LIST) 4 WORDS OF SUBUNIT PARAMETER POINTERS AREA TO STORE VARIOUS TIMEOUT VALUES READ/WRITE TIMEOUT AREA NUMBER OF SEEKS ISSUED NEXT FUNCTION ADDRESS (FOR DEFERRED CALLS) PATTERN NUMBER TO WRITE CURRENT COUNT OF T/G LOOPS POINTER TO CURRENT TRACK OR GROUP TRACK COUNT FOR GROUP OPERATIONS NUMBER OF SECTORS R/W THIS TRY NUMBER OF SECTORS TO BE R/W NUMBER OF SECTORS TO BE R/W NUMBER OF SECTORS TO BE R/W THIS OP COUNT OF SECTORS R/W SO FAR UNIT MASK FOR XFC CALLS (0001 - 1000) WRITE PROTECTION STATUS CURRENT ERROR RECOVERY LEVEL MAXIMUM NUMBER OF READ RETRIES MAXIMUM NUMBER OF READ RETRIES MAXIMUM NUMBER OF ERROR RECOVERY LEVELS ECC THRESHOLD SDI SHORT TIMEOUT SDI LONG TIMEOUT MASK TO WRITE PROTECT READ-ONLY DRIVES UNIT PARAMETER WORD SUBUNIT OFFSET (0 - 3) MASTER L/DBN CURRENT L/DBN FOR START OF CHAIN RBN TO BE READ/WRITTEN IF LBN REVECTORED NUMBER OF RCT COPIES ON EACH SUBUNIT CURRENT RCT COPY THAT WE'RE WORKING ON ERROR (IF ANY) ON THE LAST R/W ERROR THAT OCCURRED BEFOR THE REVECTOR OPERATION 4 WORDS THAT HOLD THE SUBUNIT LOGICAL NUMBERS CURRENT CYLINDER LAST CYLINDER SEEKED TO LAST GROUP SEEKED TO
53	SUBUNIT	PARAMETER OFFSET	
55 000000 S.PARM 56 000001 S.SDCL 57 000003 S.PAT		0. S.PARM+1 S.SDCL+2	: SUBUNIT PARAMETER WORD : STARTING DIAGNOSTIC CYLINDER : PATTERN TO USE FOR WRITES

58 59 60 61 62 63 64 65 66	000004 000005 000006 000007 000010 000011	S.MEGW S.BADP	= S.PAT+1 = S.TRKL+1 = S.SCHR+1 = S.MEGR+1 = S.MEGW+1 = S.BADP+1	: NUMBER OF SECTORS IN ONE TRACK : POINTER TO SUBUNIT CHARACTERISTICS : SECTORS READ (UP TO 245) : SECTORS WRITTEN (UP TO 245) : POINTER TO BAD BLOCK AREA : START OF BEGIN/END SETS
65			IF TRACK/GROUP LIMITS ARE FOLLOWING FIELDS ADDED TO	GIVEN, THE SUBUNIT PARAMETERS HAVE THE
68 69 70	000011 000013 000015	S.MCNT S.TGOF S.TGSS	= S.BESS = S.MCNT+2 = S.TGOF+2	: MAXIMUM TRACK/GROUP COUNT : ORIGINAL TRACK/GROUP OFFSET : START OF TRACK/GROUP SETS

1 23 4 5 6 7 8 0	000001 000002	Ď.LIMT D.SCHR	DUMMY SDI CONTROL BLOCK OFFSETS = 1 = 2 UNIT PARAMETER BITS (U.PARM(R5)	; DUMMY SDI SEARCH LIMIT ; DUMMY POINTER TO SUBUNIT CHAR-5
10 11 12 13 14 15 16 17 18 19 20 21 22 23	100000 040000 020000 010000 004000 002000 001000 000400 000200 000100 000040 000020 000004	DROP INITW RESEEK DIREC NEWSUB SEKINP FTIME REVEC RBNBN REDWRT REVINP DATERR RETRY RCLB	= 100000 = 40000 = 20000 = 10000 = 4000 = 1000 = 400 = 2000 = 1000 = 400 = 200 = 1000 = 1000 = 1000 = 1000 = 1000	; DROP BIT (SET IF UNIT OR SUBUNIT DROPPED) ; INITIAL WRITE (SET IF INITIAL WRITE IN PROG) ; IF 1, INDICATES THAT A SEEK IS NECESSARY ; DIRECTION (SET IF SEQUENTIAL ACCESSES DECREASING) ; SET IF SEQUENTIAL SEEKS MOVED TO NEW SUBUNIT ; SEEK IN PROGRESS - SET IF TRUE ; FIRST TIME FLAG - SET FOR INIT CODE ; REVECTOR BIT (SET IF BLOCK REVECTORED) ; SEE IF WORKING ON RBN ; REDWRT (READ OR WRITE IN PROGRESS SET IF WRITE) ; REVECTORING OPERATION IN PROGRESS ; DATA ERROR IF SET ; IF CLEAR, START RETRIES AT ZERO ; RECALIBRATION BIT (SET IF RECALIBRATE JUST DONE)
25			SUBUNIT PARAMETER BITS (S.PARM)	(R4))
18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39	020000 010000 004000 002000 001000 000200		= 20000 = 10000 = 4000 = 2000 = 1000 = 200	; DIAGNOSTIC CYLINDER FLAG (SET IF DBNS) ; 1 IF ECC CORRECTION ALLOWED MASTER BITS ; READ ONLY (SET IF READ ONLY) ; WRITE ONLY (SET IF WRITE ONLY) ; 1 IF RETRIES ALLOWED ; SET IF ONLY CYLINDERS SPECIFIED ; USED DURING SETUP ONLY
34 35 36 37	000100 000040 000020 000010	BEUSED	= 20 = 10	; SEQUENTIAL SEEK (START UP TESTING ONLY) ; BEGIN/END SETS (USED IF SET) ; TRACKS OR GROUPS (TRACK IF SET) ; WRITE CHECK BIT (IF SET, WRITE CHECK WILL BE DONE) CK IS ALSO USED FOR THE UNIT PARAMETERS
39 40	000004 000002	WCHKAL DATCMP	= 4	: SET IF WRITE CHECK ALWAYS TO BE DONE : DATA COMPARE (SET IF DATA COMPARE TO BE DONE)
41	000001	DCMPAL		P IS ALSO USED FOR THE UNIT PARAMETERS ; SET IF DATA COMPARE ALWAYS TO BE DONE

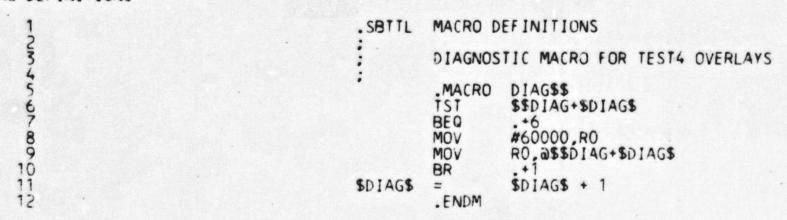

MESSAGE CONTROL TABLE MACRO

.MACRO MSG CMDBUF, CMDSZ, RPLBUF, RPLSZ, SUCCOM .WORD (MDBUF .WORD (MDSZ .WORD RPLBUF ADDRESS OF COMMAND SIZE OF COMMAND IN BYTES :ADDRESS OF REPLY :SIZE OF REPLY IN WORDS . WORD RPLSZ

. IF NB NUMBER . WORD SUCCOM

: SUCCESSFUL COMPLETION CODE

.ENDC .ENDM

G 7 UDAT4 DISK EXERCISER MACRO X04.00 9-JUL-81 01:12:03 PAGE 11 MACRO DEFINITIONS SEQ 0290 .MACRO BCS LAB.. 1234 BCC .+2 LAB.. .ENDM

SEQ 0291

```
: ERROR MACROS
                                    THESE MACROS ARE CALLED TO REPORT ERRORS TO THE HOST PROGRAM.
                                     THE MACRO NAMES ARE : ERRSF, ERRDF, ERRHRD, ERRSFT. EACH RESULTS IN THE HOST
                                     BEING REQUESTED TO REPORT THE ERROR.
                                                     1 (MS$) MESSAGE POINTER
                                     : ARGUMENTS:
                                                     2 (P1$) PARAMETER #1
3 (P2$) PARAMETER #2
                                                       (P3$) PARAMETER #3
                                                       (P4$) PARAMETER #4
                                                       (P5$) PARAMETER #5
10
11
12
13
14
15
                                                       (P6$) PARAMETER #6
                                                       (P7$) PARAMETER #7
                                                       (P8$) PARAMETER #8
                                    THE MESSAGE POINTER MUST POINT TO AN ADDRESS IN THE OVERLAY "MS" IMMEDIATELY
16
                                     : FOLLOWING THE MAIN CODE. ANY ADDRESS MODE MAY BE USED (E.G. #MS1, @R2).
                                     THE ADDRESS MUST CONTAIN AN ASCII FORMAT STRING TO DETERMINE THE MESSAGE
: TO PRINT.
                                     THE PARAMETER ARGUMENTS ARE OPTIONAL. THEY SHOULD BE SUPPLIED ONLY WHEN
                                     THERE IS DATA TO BE PASSED TO THE HOST THAT WILL BE USED IN PRINTING THE
                                     MESSAGE. THESE PARAMETER ARGUMENTS ARE THE ADDRESS OF DATA TO BE PASSED
                                     :USING ANY ADDRESSING MODE DESIRED.
                                     :ALL REGISTERS ARE RETURNED UNCHANGED. IT SHOULD BE NOTED THAT ARGUMENTS
                                    CONTAINING SOMETHING OTHER THAN A REGISTER NAME (E.G. #100 OR MEMADR)
                                    :ASSEMBLE TO INSTRUCTIONS THAT SAVE AND RESTORE A REGISTER ON THE STACK.
                                             .MACRO ERRSF MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$
                                             .NARG ARGS$
                                             .RADIX 10
                                             ERROR$ 0,MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$,\ERRN
                                             . ENDM
                                             .MACRO ERROF MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$
                                             .NARG ARGS$
                                             RADIX 10
                                             ERROR$ 1,MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$,\ERRN
                                             .MACRO ERRHRD MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$
                                             .NLIST
                                             . NARG ARGS$
                                             RADIX 10
                                             ERROR$ 2,MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$,\ERRN
                                             .LIST
                                             .MACRO ERRSFT MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$
                                             .NARG ARGS$
                                             .RADIX 10
                                             ERROR$ 3,MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$,\ERRN
                                             . ENDM
```

```
:THE FOLLOWING MACRO ACTUALLY PROCESSES THE ERROR CALL TO THE HOST PROGRAM
                                                 .MACRO ERROR$ ET$,MS$,P1$,P2$,P3$,P4$,P5$,P6$,P7$,P8$,ERRN$
                                                   .RADIX 8
                                                   PRMS=ARGS$-1
                                                   . IF LT, <PRMS>
                                                      .ERROR: NOT ENOUGH ARGUMENTS IN ERROR CALL
89101123145167189012232456789013333333333334444444444444444444555555
                                                   REGS$=-1
                                                   .IIF GE, <PRMS-8.>, PARGS. P8$
                                                   .IIF GE. <PRMS-7.>, PARGS. P7$
                                                   .IIF GE, <PRMS-6.>, PARGS. P6$
                                                   .IIF GE, <PRMS-5.>, PARGS. P5$
                                                   .IIF GE, <PRMS-4.>, PARGS. P4$
                                                   .IIF GE, <PRMS-3.>, PARGS. P3$
                                                   .IIF GE, <PRMS-2.>, PARGS. P2$
                                                   .IIF GE. <PRMS-1.>, PARGS. P1$
                                                   . IF GE REGS$
                                                     RSTR$ \REGS$
                                                   .ENDC
                                                   .RADIX 10
                                                   .LIST
                                                                                                         CALL RERROR
                                                                                                                           :ERROR # ERRNS".
                                                   .NLIST
                                                   .RADIX 8
                                                   .LIST
                                                                                                          .WORD <PRMS * 2000>+<ET$ * 400>+ERRN
                                                                                                          . WORD MS$
                                                   .NLIST
                                                   ERRN=ERRN+1
                                                 . ENDM
                                                 .MACRO PARGS. . ADDR$
                                                   .NTYPE PTYPE$, ADDR$
                                                   .IF EQ. <PTYPE$$70>
                                                     .IIF EQ. <PTYPE$&7>-REGS$, RSTR$ \REGS$
                                                     .LIST
                                                                                                         MOV ADDR$, -(SP)
                                                      .NLIST
                                                     .IF EQ. <PTYPE$87>-1
                                                                                     ; PICK A REGISTER TO USE
                                                                                     SELECT R2 IF R1 IS USED IN PARAMETER FETCH
                                                       REGU$=2
                                                     . IFF
                                                       REGU$=1
                                                                                     :OTHERWISE USE R1
                                                     .ENDC
                                                     . IF NE, < REGU$-REGS$>
                                                                                     : IF REGISTER NOT ALREADY SAVED
                                                       . IF GE , REGS$
                                                         RSTR$ \REGS$
                                                                                     RESTORE CURRENT SAVED REGISTER
                                                        .ENDC
                                                       SAVR$ \REGU$
                                                                                     : THEN SAVE SELECTED REGISTER
                                                      .ENDC
                                                     GETP$ \REGS$, ADDR$
                                                   .ENDC
                                                 . ENDM
```

.NLIST

.ENDM

SEQ 0294


1 2		PRIMARY	ERROR REPORTING (TEST 4)		
3		.MACRO	SOFTER NUM, ARGS		
6		ERROR	#ERSOFT, NUM, <args></args>	MOV	#ERRMES,R2 R2,OUT.RQ
8		.ENDM		1101	NE,001.NG
10 11		.MACRO	REPSFT SFTFLG, ECCFG NB, SFTFLG		
12		.IFF		MOV	#1,0UT.02
14		.ENDC	ND ECCEC	CLR	OUT.02
17		.IF	NB,ECCFG	MOV	#1,0UT.03
18		.IFF		CLR	OUT.03
20		.ENDC			
21 22 23 24 25 26 27 28				PUSH MOV ADD ADD MOV MOV CALL POP	RO #U.SNUM,RO R5,RO U.SUBU(R5),RO (RO),OUT.O1 #T4SOFT,RO HOSTRQ RO
30		.ENDM			
31 32 33		.MACRO ERROR	HARDER NUM, ARGS #ERHARD, NUM, <args></args>	MOV MOV	#ERRMC,R2 R2,OUT.RQ
35		.ENDM		1101	NE,OOT.NG
36 37 38 39		.MACRO ERROR	DEVFTL NUM, ARGS #FTLDEV, NUM, <args></args>	MOV	#ERRMC ,R2
41		.ENDM		MOV	R2.OUT.RQ
42		.MACRO ERROR	SYSFTL NUM, ARGS #FTLSYS, NUM, <args></args>		
45		.ENDM		MOV	#ERRMC,R2 R2,OUT.RQ
10 11 11 11 11 11 11 11 11 11 11 11 11 1		.MACRO .RADIX NUMPTR MOVMSG .IF .IRP MOVMSG NUMPTR .ENDR	ERROR TYPE, NUM, ARGS 10 = 5 #ER'NUM, 4 NB, <args> X, <args> X, \NUMPTR = NUMPTR + 1</args></args>		

MACRO DEFINITIONS				
58 59 60 61 62 63	.R	NDC ADIX NDM	MOV BIS MOV	#NUM,OUT.02 TYPE,OUT.02 #.,OUT.01
58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93	NUMPTR = .II MO NUMPTR = .EI .R	ACRO CERROR STNUM, ARGS ADIX 10 STNUM RP X, <args> VMSG X, \NUMPTR NUMPTR + 1 NDR ADIX NDM</args>		
74 75 76 77 78 79 80 81	.M. .R. .I. MO NUMPIR = .E.	ACRO ERRORC ARGS ADIX 10 RP X. <args> VMSG X.\NUMPTR NUMPTR + 1 NDR ADIX NDM</args>		
85 86 87 88 89 90	.I. I. B.		MOV	ARG,OUT.0'INDX ARG,OUT.'INDX
	.M ND .I ND	ACRO ENDERR POS		
94 95 96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114	. I . E . E	FF NDC NDM SSAGE REPORTING MACRO	BIS CLR	#POS,ERRPOS : SET THE POSITION ERRPOS : CLEAR THE POSITION
111 112 113 114	.M .R NU MO	ACRO MSSG NUM, ARGS ADIX 10 MPTR = 3 VMSG #MS'NUM, 2		

115 116 117 118 119 120 121 122 123		.IF .IRP MOVMSG NUMPTR .ENDR .ENDC	NB, <args X, <args> X, \NUMPT</args></args 	
116 117 118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141 142 143 144 145 146		.RADIX .ENDM .MACRO .RADIX NUMPTR MOVMSG .IF .IRP MOVMSG NUMPTR .ENDR .ENDC	10 = #'NUM,2 NB, <args X,<args> X,\NUMPT</args></args 	
147 148		.RADIX		

<R0,R1>
#U.SNUM,R1
R5,R1
U.SUBU(R5),R1
(R1),OUT.01
#MESSAG,R0
HOSTRQ
<R1,R0> PUSH MOV ADD ADD MOV MOV CALL POP

<RO,R1> MMESSAG,RO HOSTRQ <R1,RO> PUSH MOV CALL

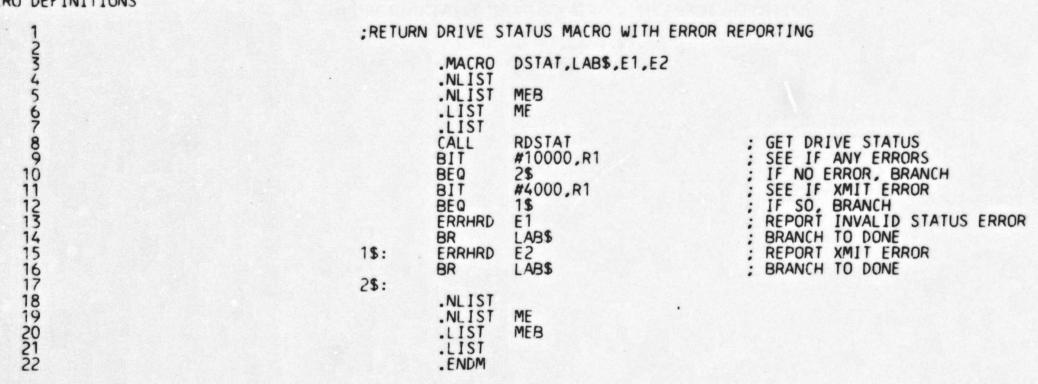


XOR THE CONTENTS OF TWO REGISTERS

RXOR REG1,REG2 REG2,-(SP) REG1,REG2 (SP)+,REG1 REG1,REG2 .MACRO BIC BIC BIS

.ENDM

: SAVE REGISTER REG2 : CLEAR COORESPONDING BITS IN REG2 : CLEAR COORESPONDING BITS IN REG1

: OR WHAT'S LEFT

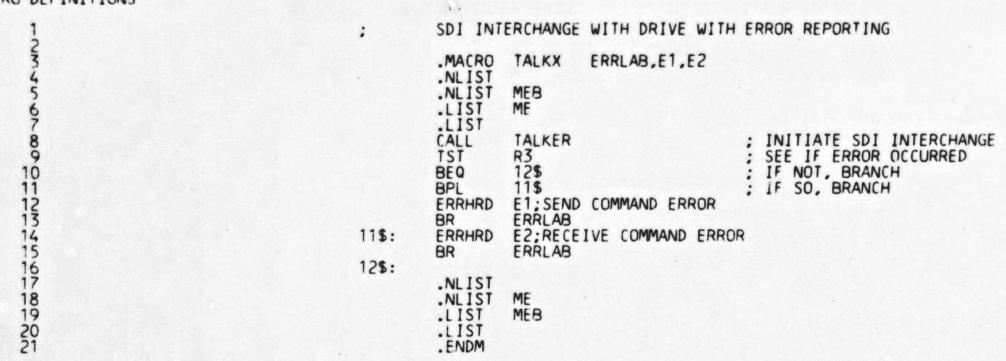

SBITL START OF TEST CODE
THE FOLLOWING IS FOR DEBUG PURPOSES ONLY. CAN BE NOP OR BREAKPOINT.

CLR RO

SET UP STACK POINTER
PO00717 004555

SET UP STACK POINTER
BR START

BRANCH OVER SUPPORT CODE

1	000720			.SBTTL RDSTAT:	RDSTAT	- GET DRIVE'S REAL	TIME DR.	IVE STATE
345	•			RETURN STATUS	DRIVE S	TATUS D IN DM REGISTER 1		
7	000720 000720	100463			PUSH	<r3,r0></r3,r0>		SAVE R3 AND R0 MOV R3,-(SP) MOV R0,-(SP)
8 9 10 11	000721 000722 000724 000725 000727	104203 060007 103201 102201	000003 014000 000400	STATLP:	BIC	#3,R3 STATUS #14000,R1 #XMTERR,R1		ALLOW ONLY 3 ERRORS GET DRIVE'S STATUS CLEAR ERROR PASSING BITS CHECK XMIT ERRORS
12 13 14 15		010737 117403 050724 104201 000746	010000		BEQ DEC BNE MOV BR	STATOK R3 STATLP #10000,R1 STATEX		IF NO ERRORS, BRANCH DECREMENT TRANSMIT ERROR COUNT IF ERROR COUNT INCOMPLETE, BRANCH FLAG AS TRANSMIT ERROR BRANCH
17 18 19 20	000737 000741 000742 000743	102201 050746 117403 050724	000004	STATOK:	BIT BNE DEC BNE	#RCVERR,R1 STATEX R3 STATLP		RECIEVER ERRORS IF VALID, BRANCH DECREMENT ERROR COUNT IF ERROR COUNT NON-ZERO, BRANCH
	000744 000746 000747	104201 104267 104263	014000	STATEX:		#14000,R1 <r0,r3></r0,r3>		RESTORE RO, R3 MOV (SP)+,R0 MOV (SP)+,R3
25	000750	000000			RETURN			RETURN TO CALLING MODULE

1 000751 3 4 5	SBITL HOSTRO - HOST REQUEST HOSTRO: SEND REQUEST BUFFER TO HOST A CLEAR ARGUMENT AREA OF OUT BUFFOR NEXT HOSTRO CALL.	- REPORT ERRORS, MEGABYTES TRANSFERRED, ETC. ND WAIT FOR RESPONSE. FFER IN PREPARATION
7 8 9 10	INPUTS: RO - HOST REQUEST NUMB OUT BUFFER LOADED WITH	ER DATA
12 000751 000751 100467 000752 100461 000753 100462	PUSH <ro,r1,r2></ro,r1,r2>	MOV RO,-(SP) MOV R1,-(SP) MOV R2,-(SP)
13 000754 104070 001006 14 000756 104207 001006 15 000760 104201 000036	MOV RO,OUT.RQ SNDAGN: MOV #OUT.RQ,RO MOV #BUFSIZ,R1 XFC MRD	STORE REQUEST NUMBER IN BUFFER SEND BUFFER TO HOST
17 000763 115001 18 000764 050756 19 000765 104207 001044 20 000767 104201 000036	TST R1 BNE SNDAGN MOV #IN.RQ,RO MOV #BUFSIZ,R1	CHECK FOR ERROR :IF ERROR, TRY AGAIN :WAIT FOR RESPONSE FROM HOST
21 000771 060017 22 000772 104207 001007 23 000774 104201 000034 24 000776 114002 25 000777 100272	XFC MWR MOV #OUT.01,R0 MOV #OUT.29-OUT.01,R1 CLR R2 CLRBUF: MOV R2,(R0)+	CLEAR ARGUMENT WORDS IN BUFFER
26 001000 117401 27 001001 030777 28 001002 001002 104262	DEC R1 BPL CLRBUF POP <r2,r1,r0></r2,r1,r0>	MOV (SP)+,R2
001002 104262 001003 104261 001004 104267 29 001005 000000	RETURN	MOV (SP)+,R1 MOV (SP)+,R0

```
:STORAGE AREA FOR MAINTENANCE WRITE AND READ BUFFERS
                                                                                                                                                                                                              :OUT BUFFER - DATA TO SEND TO HOST
                                                                                                                                                                                                                                                                                                      OUT BUFFER - DA

OUT.RQ: .WORD 0

OUT.O1: .WORD 0

OUT.O2: .WORD 0

OUT.O3: .WORD 0

OUT.O4: .WORD 0

OUT.O5: .WORD 0

OUT.O6: .WORD 0

OUT.O7: .WORD 0

OUT.O7: .WORD 0

OUT.O9: .WORD 0

OUT.O9: .WORD 0

OUT.10: .WORD 0

OUT.11: .WORD 0

OUT.12: .WORD 0

OUT.13: .WORD 0

OUT.14: .WORD 0

OUT.15: .WORD 0

OUT.16: .WORD 0

OUT.16: .WORD 0

OUT.17: .WORD 0

OUT.18: .WORD 0

OUT.19: .WORD 0

OUT.19: .WORD 0

OUT.20: .WORD 0

OUT.21: .WORD 0

OUT.22: .WORD 0

OUT.23: .WORD 0

OUT.24: .WORD 0

OUT.25: .WORD 0

OUT.25: .WORD 0

OUT.26: .WORD 0

OUT.27: .WORD 0

OUT.27: .WORD 0

OUT.28: .WORD 0

OUT.29: .WORD 0

OUT.29: .WORD 0
          5 001006
6 001007
7 001010
8 001011
9 001012
10 001013
11 001014
12 001015
13 001016
14 001017
15 001020
16 001021
17 001022
18 001023
19 001024
20 0C1025
21 001026
22 001027
23 001030
24 001031
25 001032
26 001033
27 001034
28 001035
29 001036
30 001037
31 001040
32 001041
33 001042
34 001043
35
                                                                 36
37
                                                                                                                                   : IN BUFFER - DATA RECEIVED FROM HOST
                                                                                                                  IN.RQ: WORD 0
IN.01: WORD 0
IN.02: WORD 0
IN.03: WORD 0
IN.04: WORD 0
IN.05: WORD 0
IN.06: WORD 0
IN.07: WORD 0
IN.08: WORD 0
IN.09: WORD 0
IN.10: WORD 0
IN.10: WORD 0
IN.11: WORD 0
IN.12: WORD 0
IN.13: WORD 0
IN.14: WORD 0
IN.14: WORD 0
IN.15: WORD 0
IN.15: WORD 0
IN.16: WORD 0
IN.16: WORD 0
IN.17: WORD 0
IN.17: WORD 0
IN.18: WORD 0
                                                                                                                                                                                                                                                                                                          ; HOST REQUEST CODE (ECHO)
; DATA ARGUMENT 1
; DATA ARGUMENT 2
; DATA ARGUMENT 3
; DATA ARGUMENT 4
; DATA ARGUMENT 5
; DATA ARGUMENT 6
; DATA ARGUMENT 7
; DATA ARGUMENT 8
; DATA ARGUMENT 9
; DATA ARGUMENT 10
; DATA ARGUMENT 11
; DATA ARGUMENT 12
; DATA ARGUMENT 13
; DATA ARGUMENT 14
; DATA ARGUMENT 15
; DATA ARGUMENT 15
; DATA ARGUMENT 16
; DATA ARGUMENT 17
; DATA ARGUMENT 17
; DATA ARGUMENT 18
; DATA ARGUMENT 19
  37

38 001044

39 001045

40 001046

41 001047

42 001050

43 001051

44 001052

45 001053

46 001054

47 001055

48 001056

49 001057

50 001060

51 001061

52 001062

53 001063

54 001064

55 001065

56 001066

57 001067
                                                                   000000
```

```
UDAT4 DISK EXERCISER MACRO X04.00 9-JUL-81 01:12:03 PAGE 23-1 HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED,
```

58 001070 000000 59 001071 000000 60 001072 000000 61 001073 000000 62 001074 000000 63 001075 000000 64 001076 000000 65 001077 000000 66 001100 000000 67 001101 000000 68 000036	IN.20: .WORD 0 IN.21: .WORD 0 IN.22: .WORD 0 IN.23: .WORD 0 IN.24: .WORD 0 IN.25: .WORD 0 IN.26: .WORD 0 IN.26: .WORD 0 IN.27: .WORD 0 IN.28: .WORD 0 IN.29: .WORD 0 BUFSIZ = IN.RG	;DATA ARGUMENT 20 ;DATA ARGUMENT 21 ;DATA ARGUMENT 22 ;DATA ARGUMENT 23 ;DATA ARGUMENT 24 ;DATA ARGUMENT 25 ;DATA ARGUMENT 26 ;DATA ARGUMENT 27 ;DATA ARGUMENT 28 ;DATA ARGUMENT 28 ;DATA ARGUMENT 29 ;SIZE OF BUFFER
---	---	--

UDATA DISK EXERCISER MACRO X04.00 9-JUL-81 01:12:03 PAGE 24 HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED,

. IF

NE.TEST4

UDATA DISK EXERCISER MACRO X04.00 9-JUL-81 01:12:03 PAGE 29 HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED,

49

.ENDC

UDAT4 DISK EXERCISER MACRO X04.00 9-JUL-81 01:12:03 PAGE 30 HOSTRQ - HOST REQUEST - REPORT ERRORS, MEGABYTES TRANSFERRED.

2 3 001102 123456 4 001103 5 001142 123456

STACK AREA

.WORD 123456 .BLKW 31. STACK: .WORD 123456

:END MARKER FOR STACK :STACK :MARKER FOR STACK UNDERFLOW

UDAT4 DISK EXERCISER MACRO X04.00 9-JUL-81 01: 2:03 PAGE 33

CMPEDC - EDC CALCULATION ROUTINE

```
SBITL CMPEDC - EDC CALCULATION ROUTINE
   001143
                                      CMPEDC:
                                               THIS WILL COMPUTE THE EDC OF A SECTOR POINTED TO BY RO, RETURNING
                                               THE VALUE IN R2
   001143
                                               PUSH
                                                        <R4.R1.R0>
                                                                          : SAVE R1 AND RO AND R4
   001143
                                                                                                             MOV R4,-(SP)
            100464
                                                                                                             MOV R1,-(SP)
            100461
   001144
                                                                                                             MOV RO, - (SP)
   001145
            100467
8 001146
9 001150
                                                        #256.,R1
            104201
                                               MOV
                                                                          : COMPUTE OVER 256 WORDS
                     000400
   001150
            104202
                                                        #INTEDC.R2
                                                                            MOVE INITIAL EDC VALUE TO R2
                     000105
                                               MOV
10 001152
            021157
                                               CALL
                                                        EDC
                                                                            COMPUTE EDC
11 001153
                                               POP
                                                        <RO,R1,R4>
                                                                            RESTORE R1 AND RO AND R4
   001153
                                                                                                             MOV (SP)+,RO
            104267
            104261
                                                                                                             MOV (SP)+,R1
   001154
   001155
            104264
                                                                                                             MOV (SP)+,R4
12 001156
13 001157
   001156
                                               RETURN
            000000
                                      EDC:
14
                                               THIS WILL COMPUTE THE EDC VALUE FOR ANY NUMBER OF WORDS
16
                                               RO POINTS TO BUFFER, R1 HAS THE COUNT, AND R2 HAS THE INITIAL
18
                                               EDC VALUE
19
20 001157
21 001160
   001157 104274
                                                        (R0) + .R4
                                      EDCLOP: MOV
                                                                          ; GET A WORD
                                                        R4, R2
                                               RXOR
                                                                          : EXCLUSIVE OR THE WORD WITH THE CURRENT EDC VALUE
                                                        R2,-(SP)
   001160
            100462
                                                                                    SAVE REGISTER R2
                                               MOV
            103042
                                                        R4.R2
                                                                          : CLEAR COORESPONDING BITS IN R2
   001161
                                               BIC
   001162
            103264
                                                        (SP)+,R4
                                                                                    CLEAR COORESPONDING BITS IN R4
                                               BIC
                                                                            OR WHAT'S LEFT
                                                        R4.R2
   001163
            101042
                                               BIS
22 001164
23 001165
24 001166
25 001170
26 001171
27 001172
                                                        R2,R2
                                                                            SHIFT R2 LEFT BY 1
            105022
                                               ADD
            041170
                                                                            IF THE HIGH BIT WAS CLEAR, BRANCH
                                               BCC
                                                        ZEREDC
                                                                            SET LO BIT TO = OLD HI BIT
            101202
                     000001
                                               BIS
                                                        #1.R2
            117401
                                                        R1
                                                                            DECREMENT COUNT
                                      ZEREDC: DEC
            051157
                                               BNE
                                                        EDCLOP
                                                                          : IF COUNT UNEXPIRED, BRANCH
                                               RETURN
            000000
```

UDAT4 DISK EXERCISER MACRO X04.00 9-JUL-81 01:12:03 PAGE 34 RTDS - REAL TIME DRIVE STATE ROUTINE

1 2 001173 104652 000022 RIDS: 3 001175 020720	CALL		STATE ROUTINE : MOVE MASK TO R2 : GET DRIVE STATUS : FLAG AS NO ERRORS
4 001176 114002 5 001177 102201 010000 6 001201 011203 7 001202 115402	CLR BIT BEQ INC	#10000_R1	: TEST STATUS FOR ERROR : IF NO ERROR, BRANCH : MARK AS ERROR
7 001202 115402			


TALK SENDS THE COMMAND TO THE DRIVE. IF AN ERROR OCCURRS, R2 IS RETURNED NONZERO PUSH R4 : SAVE POINTER TO SUBUNIT PARAMETERS MOV R4,-(SP) MOV U.MASK(R5),R2 : GET UNIT SDI SELECT MASK MOV (R3)+,R0 : POINTS TO SDI COMMAND BUFFER MOV (R3)+,R1 : LOAD BYTE COUNT NOT SEND STI COMMAND 12 001212 115001	
001204 100464 8 001205 104652 000022 MOV U.MASK(R5),R2 ; GET UNIT SDI SELECT MASK 9 001207 104237 MOV (R3)+ R0 ; ROINTS TO SDI COMMAND RUFFER	
8 001205 104652 000022 MOV U.MASK(R5), R2 ; GET UNIT SDI SELECT MASK	
13 001213 011240 BEQ 10\$: IF SO, BRANCH 14 001214 HARDER 70, : REPORT	
001214 104200 007230 001012 001217 104200 000106 001010 001222 101200 001000 001010 001225 104200 001225 001007 001230 104202 000014 001232 104020 001006 ENDERR 6	
001234 1012C0 000006 002357 BD SNDEYT BDANCH BIS #6,ERRPOS ; SET TH	HE POSITION
16 001237 001453 17 001240 106203 001532 BR SNDEXT : BRANCH 17 001240 106203 001532 10\$: CMP #LONG.R3 : SEE IF LONG TIMEOUT TO BE USED	
17 001240 106203 001532 10\$: CMP #LONG.R3 ; SEE IF LONG TIMEOUT TO BE USED 18 001242 071246 BMI 11\$; IF SO, BRANCH 19 001243 104654 000030 MOV U.SDIS(R5).R4 ; R4 HAS SHORT TIMEOUT 20 001245 001250 BR 1\$; BRANCH	
21 001246 104654 000031	
001263 104200 007311 001012	
33 UULSUD UGLSSU	
001307 104200 007373 001012 MOV #ER72,0UT.04 001312 104200 000110 001010 MOV #72,0UT.02 001315 101200 001000 001010 BIS #ERHARD,OUT.02 001320 104200 001320 001007 MOV #.,OUT.01 001323 104202 000014 MOV #ERRMC,R2	
001325 104020 001006 37 001327 001416 BR 7\$: BRANCH	

-	- SUI LL	ALL C TIA	LICHANO	L ROUTTA										
	38 001330 39 001331 40 001332	110601 041353			4\$:	ROR BCC HARDER	R1 5\$ 73,	:	SEE IF IF NCT, REPORT	BRANC	H			
	001332 001335 001340 001343 001346 001350 41 001352 42 001353 43 001354 44 001355	104200 104200 101200 104200 104202 104020	007472 000111 001000 001343 000014 001006	001012 001010 001010 001007		HANDEN			KET ON		MOV MOV BIS MOV MOV MOV	#ER73,0UT.04 #73,0UT.02 #ERHARD,0UT.02 #.,0UT.01 #ERRMC,R2 R2,0UT.RQ		
	41 001352 42 001353 43 001354 44 001355	001416 110601 041376			5\$:	BR ROR BCC HARDER	7\$ R1 6\$ 74,	:	IF NOT	(BUFFE	UM ERROR R TOO SM UM ERROR	ALL), BRANCH		
	001355 001360 001363 001366 001371 001373 45 001375	104200 104200 101200 104200 104202 104020	007562 000112 001000 001366 000014 001006	001012 001010 001010 001007							MOV MOV BIS MOV MOV MOV	#ER74,0UT.04 #74,0UT.02 #ERHARD,0UT.02 #.,0UT.01 #ERRMC,R2 R2,0UT.RQ		
	45 001375 46 001376	001416			6\$:	BR HARDER	7 \$ 75.	:	BRANCH	RUFFER	TO SMAL			
	001376 001401 001404 001407 001412 001414	104200 104200 101200 104200 104202 104020	007652 000113 001000 001407 000014 001006	001012 001010 001010 001007							MOV MOV BIS MOV MOV MOV	#ER75,0UT.04 #75,0UT.02 #ERHARD,0UT.02 #.,0UT.01 #ERRMC,R2 R2,0UT.RQ		
	47 001416 001416	101200 001453	000006	002357	7\$:	ENDERR		•	FLAG EN	U UF K	EPORTING BIS	#6,ERRPOS	: SET THE POSIT	ION
	48 001421 49 001422 50 001423 51 001425 52 001426	001453 114002 106637 011453	000002		2\$:	BR CLR CMP BEQ HARDER	SNDEXT R2 2(R3),R0 SNDEXT 76,	:	FLAG AS SEE IF IF SO, REPORT	NO ER COMMAN BRANCH	ROR OCCU D ACCEPT	RED ED		
	001426 001431 001434 001437 001442 001444	104200 104200 101200 104200 104202 104020	007746 000114 001000 001437 000014 001006	001012 001010 001010 001007							MOV MOV BIS MOV MOV MOV	#ER76,0UT.04 #76,0UT.02 #ERHARD.OUT.02 #.,OUT.01 #ERRMC.R2 R2,OUT.RQ		
	53 001446 001446	104070	001014			CERROR	6.R0	:	REPORT	FURTHE	R ERRORS MOV	R0,0UT.06		
	54 001450 55 001453	104200	100007	002357	SNDEXT:	MOV POP	#100007,ERRPOS	:	FLAG AS RESTORE	STATU R4				
	001453 56 001454	104264				RETURN						MOV (SF	P)+,R4	

```
.SBITL SDI PROTOCOL MESSAGE TABLES
                 MESSAGE TABLES
 5 001455
   001455 001550
  001456
          200000
   001457
          001570
   001460
          000007
   001461
          000176
 6 001462
  001462
001463
          001546
  001464
          001570
          000007
   001466 000176
 7 001467
   001467
          001552
   001470
          000001
   OC1471
          001570
  001472
          000013
  001473
          000170
 8 001474
   001474
          001553
   001475
          200000
   001476
          001570
   001477
          000023
   001500
 9 001501
  001501
001502
001503
001504
          001555
          000001
          001570
          000007
   001505
          000366
10 001506
   001506
         001560
   001507 000006
   001510 001570
   001511
          000007
   001512
          000176
11 001513
   001513
          001566
   001514
          000002
   001515
          001570
   001516
          000007
   001517
          000176
12 001520
001520
001521
          001564
  001522
          001570
          000007
          000176
   001524
13 001525
   001525
          001544
   001526 000002
001527 001570
   001530 000007
```

1/	001531	000176		LONG	.WORD COMPLT	SUCCESSFUL COMPLETION CODE L COMMANDS BEYOND THIS POINT ARE LONG TIMEOUT
15	001532			LONG:	MSG INR. 1. ST. 7, COMPL	T ; INITIATE RECALIBRATE
',	001532	001557		Cris Irent.	.WORD INR	ADDRESS OF COMMAND
	001532 001533	000001			.WORD 1	SIZE OF COMMAND IN BYTES
	001534	001570			.WORD ST	ADDRESS OF REPLY
	001535 001536	000007			WORD 7	SIZE OF REPLY IN WORDS
16	001537	000176		CO DIN.	.WORD COMPLT MSG RUN, 1, ST, 7, COMPL	; SUCCESSFUL COMPLETION CODE T ; INITIATE LOAD
10	001537	001556		CA. NOW.	WORD RUN	ADDRESS OF COMMAND
	001540	000001			.WORD 1	; SIZE OF COMMAND IN BYTES
	001541	001570			.WORD ST	;ADDRESS OF REPLY
	001542	000007			.WORD 7	SIZE OF REPLY IN WORDS
17	001543	000176			.WORD COMPLT	; SUCCESSFUL COMPLETION CODE
. 18				:	LEVEL 2 COMMAND MESS	AGE DATA STRUCTURES
19					LEVEL E CONTROL MESO	NOE DATA STRUCTURES
20	001544	000	204	DIS:	.BYTE O.DISCON	; DISCONNECT DRIVE
21	001545	000000			.WORD 0	; DO NOT SPIN DOWN DRIVE ****
22	001546	000	201	MOD:	.BYTE O.CHGMOD .WORD 0	: CHANGE MODE
23	001547	000000	OOF	WRITBT:	.WORD 0	; MODE
55	001550	000000	005	DRC: DCLR:	.BYTE O.DRVCLR .WORD 0	; DRIVE CLEAR
26	001552	000	207	GCR:	BYTE O. GETCHR	; GET CHARACTERISTICS WITH A
27	001553	000	210	SCR:	BYTE O.GETSUB	GET SUBUNIT CHARACTERISTICS
28	001554	000000		SUBUNT:	.WORD 0	; SUBUNIT SELECTION IN LOW ORDER BYTE
29	001555	000	011	GST:	BYTE O,GETSTA	; GET STATUS
30	001556	000	014	RUN:	BYTE O.DRVRUN	; DRIVE RUN
31 32	001557	000	216 012	INR: INS:	BYTE O, IRECLB	: INITIATE RECALIBRATE : INITIATE SEEK
33	001560	000000	012	LOCYL:	.BYTE O,INSEEK	: INS CYLINDER/HEAD ARGUMENTS
34		000000		LUCIL.	.WORD 0	: HI CYLINDER
	001563	000000			.WORD 0	: GROUP
36	001564	000	006	ERR:	.BYTE O, ERECOV	: ERROR RECOVERY
37	001565	000000		ERRLEV:	.WORD 0	
38	001566	000	213	ONL:	BYTE O.DRVONL	ONLINE COMMAND
59	001567	000040		CT.	.WORD 40	: MAXIMUM TIMEOUT VALUE
40	001570			ST:	.BLKW 19.	

2 001613		.SBTTL BLKCHK:		- SEE IF A BLOCK	WITH ERROR IS KNOWN TO BE BAD
3			BLKCHK BLOCK.	CHECKS THE BLOCK	IN U.LBN TO ASSURE THAT IT IS NOT A BAD TURNED NONZERO
7 001613 001613 001614 001615	100462 100461 100467		PUSH	<r2,r1,r0></r2,r1,r0>	SAVE ALL REG'S MOV R2,-(SP) MOV R1,-(SP) MOV R0,-(SP)
8 001616 9 001620 10 001621 11 001623 12 001624 13 001625	104641 000010 011634 104202 000002 105072 021645 011637	3\$:	MOV BEQ MOV ADD CALL BEQ	S.BADP(R4),R1 1\$ #RW.LOW,R2 RO,R2 CMP2 2\$	GET BAD BLOCK POINTER IF NO BAD BLOCKS, BRANCH POINT TO LBN TO BE TESTED POINT TO LBN TO BE TESTED COMPARE BAD BLOCK TO LBN IF EQUAL, BRANCH
14 001626 15 001627 16 001631 17 001633 18 001634	071634 105201 000002 104617 177777 031624 104207 000001	18:	BMI ADD MOV BPL MOV	2\$ 1\$ #2,R1 -1(R1),R0 3\$ #1,R0	; IF LIST GREATER THAN BLOCK, IT'S OK ; POINT TO NEXT BAD BLOCK ; SEE IF EOL ; IF NOT, BRANCH ; SET UP FOR CARRY TO BE SET (UNKNOWN BAD BLOCK)
19 001636 20 001637 21 001640 22 001641 001641	001640 114007 110607	2\$: 4\$:	BR CLR ROR POP	4\$ R0 R0 <r0,r1,r2></r0,r1,r2>	: SET UP FOR THE CARRY TO BE CLEAR (BAD BLOCK KNOWN) : SET CARRY TO REFLECT KNOWLEDGE OF BAD BLOCK : RESTORE MOV (SP)+,R0 MOV (SP)+,R1
001642 001643 23 001644	104261 104262 000000		RETURN		RETURN TO CALLING PROGRAM

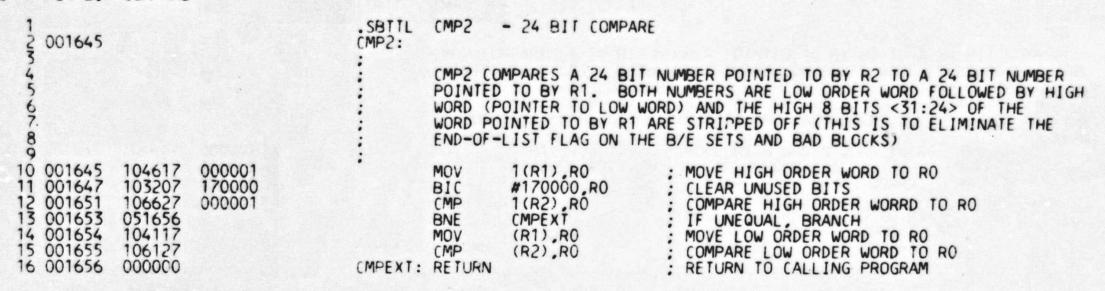

2 0	01657				.SBTTL BUILDP:	BUILDP	- BUILD	THE R	EAD O	R WRITE CH	AIN LINKS		
4 5						BUILD	THE WHOLE	READ	/WRIT	E CHAIN			
7 0	01657 01661 01664	104657 104650 102207 011676	000033 000017 000200	002355		MOV MOV BIT	W.MSEC((R5),M	AXSEC :	SEE IF RB	IT PARAMETERS ET NUMBER OF SECT N TO BE READ/WRIT	ORS TO READ/	WRITE
10 00 11 00 12 0	01666 01667 01672 01675	104650 104650 001704	000042			BEQ MOV MOV BR	U.RBN(R U.RBN+1 4\$	(R5), CU	CURBN ;	+1 ; M BRANCH	RDER TO CURRENT E OVE HI ORDER TO (URRENT BN	
14 0	01676	104650 104650	000037 000040	002341		MOV MOV	U. CBN (R U. CBN+1	(R5).	IRBN CURBN	+1 : M	OVE LO ORDER TO (CURRENT BN	
15 0 16 0	01704	104300 114007	002473	002474	4\$:	MOV	MEMPOI	TMFMP		START OF	BUILD (INITILIZE	MEM POOL)	ED
17 00 18 00 19 00	01707 01710 01712 01713 01714	104070 022141 115002 051746	002352		5\$:	MOV CALL TST BNE	RO,CHAI CALC R2 8\$	NS		MARK CHAI CALCULATE SEE IF AN	CALCULATION TABL N AS EMPTY CYL, TRK AND GRE ERROR OCCURRED		
21 0	01715	106650 051745	000053	002344		CMP			YL :	SEE IF LO	CYL MATCHES		
23 0	01720	106650	000054	002345		BNE CMP	U.CCYL+	1 (R5)	.CYL+	IF NOT, B	EE IF HI CYL MATO	CHES	
25 0 26 0	01724 01725 01730 01731	051745 106650 051745 021747	000055	002346		BNE CMP BNE	7\$ U.CGRP(7\$	DE1 0		IF NOT. B		ES .	
28 0	01732	107200	000001	002355		SUB	#1,MAXS	SEC		DECREMENT	SECTOR COUNT	CHAIN	
30 0	01736	105200	000001	002340		ADD ADD	#1.CURB	BN	:	ADD ONE F	ROM LO CURRENT SE	CTOR	
32 0	01741	041712	002341			INC	CURBN+1		:	PROPOGATE	CARRY		
34 0	01744 01745 01746	001712 114002 000000			7\$: 8\$:	BR CLR RETURN	R2			NO ERRORS RETURN TO	RANCH SECTOR INTO THE SECTOR COUNT COMPLETE, BRANCH ROM LO CURRENT SE RY, BRANCH CARRY CALLING PROGRAM		

2 001747	.SBTTL LINK:	LINK	- BUILD A LINK (N	IODE) IN THE READ/WRITE CHAIN
4		LINK WI	LL CREATE THE LIN	KS FOR THE CHAIN
6 001747 104653 000033 7 001751 104307 002352 8 001753 051772		MOV MOV BNE	U.PARM(R5),R3 (HAINS,R0 2\$: R3 HAS UNIT PARAMETERS : R0 POINTS TO START OF CHAIN : IF THE CHAIN IS ALLREADY STARTED, BRANCH
9 001754 102203 000100 10 001756 011764		BIT	#REDWRT,R3	: SEE IF READ IN PROGRESS : IF SO, BRANCH
11 001757 104207 000401 12 001761 022112		MOV	#WBUFLN,RO ALLOCM	: RO HAS NUMBER OF WORDS IN WRITE BUFFER : ALLOCATE THE MEMORY
13 001762 104070 002356 14 001764 104207 000007 15 001766 022112	1\$:	MOV MOV	RO, SECPTR #LINKLN, RO	: SECPTR POINTS TO WRITE BUFFER : RO HAS LENGTH OF CHAIN LINK
16 001767 104070 002352 17 001771 002012		CALL MOV BR	ALLOCM RO, CHAINS 4\$: ALLOCATE THE MEMORY : CHAINS POINTS TO FIRST LINK : BRANCH
18 001772 104171 19 001773 102201 100000 20 001775 052002	2\$:	MOV BIT	(R0),R1 #EOC,R1 3\$: R1 HAS NEXT LINK POINTER : SEE IF THIS LINK IS THE LAST
21 001776 103201 170000 22 002000 104017		BNE BIC MOV	#^CHBHINB,R1 R1,R0	: IF SO, BRANCH : CLEAR UNUSED BITS : RO POINTS TO NEXT LINK
23 002001 001772 24 002002 104072 25 002003 104207 000007	3\$:	BR MOV MOV	2\$ RO,R2 #LINKLN,RO	: LOOP : SAVE RO : RO HAS LENGTH OF LINK
26 002005 022112 27 002006 103201 100000 28 002010 101071		CALL BIC BIS	ALLOCM #EOC_R1 RO_R1	: ALLOCATE MEMORY FOR LINK : CLEAR THE END-OF-CHAIN FLAG
29 002010 101071 30 002012 022014 31 002013 000000	4\$:	MOV CALL RETURN	R1.(R2) FILLIN	; PUT IN POINTER TO NEXT LINK ; PUT POINTER BACK IN LAST LINK ; PUT ALL VALUES IN NEW LINK ; RETURN TO CALLING PROGRAM

2 002014	.SBTTL FILLIN:	FILLIN - FILL THE READ/WRITE CHAIN LINK (NODE) WITH REQUIRED INFORMA	TION
4		FILLIN BUILDS THE PARAMETERS THE UDA REQUIRES TO WRITE OR READ A BLO	CK
6 002014 104302 002347 7 002016 102203 000100 8 002020 012032		MOV TRACK,R2 ; GET TRACK (HEAD) NUMBER BIT #REDWRT,R3 ; SEE ; F READ IN PROGRESS BEQ 1\$; IF SO, BRANCH	
9 002021 101202 122400 10 002023 100672 000004 11 002025 104202 140000		BIS #WREAL,R2 ; BUILD WRITE REAL TIME COMMAND MOV R2,RW.(MD(R0) ; MOVE TO SDI REAL TIME COMMAND AREA MOV #WSTOP R2 : MOVE LAST BLOCK FLAG TO R2	
12 002027 104301 002356 13 002031 002046 14 002032 101202 013400 15 002034 100672 000004 16 002036 104202 100000 17 002040	1\$:	MOV SECPTR,R1 ; R1 POINTS TO WRITE BUFFER BR 2\$; BRANCH BIS #RREAL,R2 ; BUILD READ REAL TIME COMMAND MOV R2,RW.(MD(R0) ; MOVE TO SDI REAL TIME COMMAND AREA MOV #RSTOP,R2 ; MOVE LAST BLOCK FLAG TO R2 PUSH R0 ; SAVE R0	
002040 100467 18 002041 104207 000415 19 002043 022112 20 002044 104071 21 002045		MOV #RBUFLN.RO ; SIZE OF READ BUFFER CALL ALLOCM ; ALLOCATE BUFFER MOV: RO.R1 ; R1 POINTS TO BUFFER POP RO ; RESTORE RO	
002045 104267 22 002046 100672 000000 23 002050 100671 000001 24 002052 104202 002447 25 002054 100672 000005 26 002056 104302 002350 27 002060 100672 000006 28 002062 104302 002340 29 002064 100672 000002 30 002066 104302 002341 31 002070 102203 000200 32 002072 052103 33 002073 104643 000000 34 002075 102203 020000 35 002077 012105 36 002100 101202 140000 37 002102 002105	?\$:	MOV R2.RW.STAT(R0) : MOVE LAST BLOCK FLAG TO NEXT BLOCK POINTER MOV R1.RW.BUF(R0) : MOVE POINTER TO SECTOR TO POINTER AREA MOV #DUMSDI.R2 : R2 POINTS TO DUMMY SDI AREA MOV R2.RW.SDI(R0) : MOVE R2 TO POINTER TO DUMMY SDI AREA MOV SECTOR.R2 : R2 CONTAINS SECTOR TO BE WRITTEN MOV R2.RW.ANG(R0) : MOVE TO ANGLE FROM INDEX MOV CURBN.R2 : MOVE LOW ORDER BN TO R2 MOV R2.RW.LOW(R0) : MOVE LOW ORDER BN TO LOW EXPECTED HEADER MOV CURBN+1.R2 : MOVE HIGH ORDER BN TO R2 BIT #RBNBN.R3 : SEE IF BN IS AN RBN BNE 5\$: IF SO, BRANCH MOV S.PARM(R4).R3 : GET SUBUNIT PARAMETERS BIT #DCYLS.R3 : SEE IF USING DIAGNOSTIC CYLINDERS BEQ 6\$: IF NOT, BRANCH BIS #HD.DBN.R2 : DIAGNOSTIC HEADER BRANCH	
38 002103 101202 060000 39 002105 101302 002335 40 002107 100672 000003 41 002111 000000	5\$: 6\$:	BIS #HD.RBN.R2 : REVECTORED HEADER BIS HIBN.R2 : ADD HI BN BITS MOV R2.RW.HI(RO) : MOVE R2 TO HI WORD EXPECTED HEADER RETURN : RETURN TO CALLING PROGRAM	

SBTTL ALLOCM - ALLOCATE MEMORY FOR THE READ/WRITE BUFFERS AND CHAIN ALLOCM:

ALLOCATE MEMORY FOR READ/WRITE BUFFERS

ALLOCATE MEMORY FOR READ/WRITE BUFFERS

SUB RO, TMEMPL : SUBTRACT LENGTH FROM MEMORY POOL MOV TMEMPL, RO : RO POINTS TO MEMORY ALLOCATED RETURN : RETURN TO CALLING MODULE

2 002117			.SBTTL BULDUM:	BULDUM	M - BUILD THE DUMMY SDI CONTROL BLOCK FOR READS AND WRITES
5				BULDUM I	WILL BUILD THE DUMMY SDI CONTROL BLOCK
6 002117 7 002121 8 002123 9 002125 10 002127 11 002130 12 002132	104643 104632 103202 105632 105022 103202 104020	000005 000004 177600 000011 177001 002450		MOV BIC ADD ADD BIC MOV	S.SCHR(R4),R3; R3 POINTS TO SUBUNIT CHARACTERISTICS RBNTRK(R3),R2; GET RBNS/TRACK #177600,R2; CLEAR UNUSED BITS LBNTRK(R3),R2; ADD LBNS/TRACK GIVING SECTORS/TRACK R2,R2; DOUBLE SECTORS/TRACK FOR HEADER COMPARE LIMIT #177001,R2; CLEAR UNUSED BITS R2,DUMSDI+D.LIMT; MOVE TO DUMMY SEARCH LIMIT
13 002134 14 002136 15 002140	107203 104030 000000	000005 002451		SUB MOV RETURN	#5,R3 ; R3 POINTS TO SUB CHAR - 5 R3,DUMSDI+D.SCHR ; MOVE TO DUMMY SUB CHAR POINTER

	1 2 002141	.SBTTL CALC:	CALC	- CALCULATE THE CY	L. GRP AND TRACK FOR THE GIVEN L/RBN
	4		CALC CA	LCULATES THE CYLIN	NDER, GROUP, TRACK AND SECTOR OF THE BLOCK
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	6 002141 115007 7 002142 052261 8 002143 104070 002343 9 002145 104643 000005 0 002147 104647 000000 1 002151 102207 020000 2 002153 052224 3 002154 104637 000011 4 002156 103207 177400 5 002160 104651 000033 6 002162 102201 000200 7 002164 012202 8 002165 104070 002343		TST BNE MOV MOV BIT BNE MOV BIC MOV BIT BEQ MOV	MOVOUT RO,RBNFLG S.SCHR(R4),R3 S.PARM(R4),R0 #DCYLS,R0 MOVDBN LBNTRK(R3),R0 #HIBYTE,R0 U.PARM(R5),R1 #RBNBN,R1 LNCYL RO,RBNFLG	SEE IF CALCULATION AREA MUST BE SET UP IF NOT, BRANCH SET RBN FLAG AS ZERO R3 POINTS TO SUBUNIT'S CHARACTERISTICS GET SUBUNIT PARAMETERS SEE IF USING THE DIAGNOSTIC CYLINDERS IF SO, BRANCH MOVE LBN'S PER TRACK TO RO CLEAR UNUSED BITS MOVE UNIT PARAMETERS TO RO SEE IF BLOCK REVECTORED IF NOT, BRANCH STORE LBN'S PER TRACK IN RBN FLAG AREA
555	2 002175 104637 000003 3 002177 103207 170377		MOV BIC MOV MOV BIC BR	RBNTRK(R3),R0; #177600,R0; R0,LRDTRK; HIRBN(R3),R0; #HBLONB,R0; LNCONT;	MOVE RBN'S PER TRACK TO RO CLEAR THE HIGHER BITS, LEAVING RBN'S/TRACK MOVE RBN'S PER TRACK TO CALCULATION AREA GET HI RBN CLEAR UNUSED BITS BRANCH
-		LNCYL:	MOV MOV BIC	RO, LRDTRK HILBN(R3), RO ;	MOVE LBN'S PER TRACK TO CALCULATION AREA GET HI LBN CLEAR UNUSED BITS
222555	6 002204 104637 000002 7 002206 103207 170377 8 002210 104070 002335 9 002212 114007 0 002213 104070 002336 1 002215 104637 000001 2 002217 103207 007777 3 002221 104070 002337 4 002223 002261 5 002224 104637 000004 6 002226 103207 177600	LNCONT:		RO, HIBN RO RO, STACYL HICYL (R3), RO	SAVE LOW ORDER CYLINDER IS ZERO SAVE LO ORDER STARTING CYLINDER RO CONTAINS HI CYLINDER BITS CLEAR UNUSED BITS MOVE HI STARTING CYLINDER TO UNIT PARAMETERS
33444	4 002223 002261 5 002224 104637 000004 6 002226 103207 177600 7 002230 104631 000011 8 002232 103201 177400 9 002234 105017 0 002235 104070 002342 1 002237 104647 000001 2 002241 104070 002336 3 002243 104647 000002	MOVDBN:	BR	MOVOUT RBNTRK(R3),R0 #177600,R0 LBNTRK(R3),R1 #HIBYTE,R1 R1,R0 R0,LRDTRK S.SDCL(R4),R0	BRANCH MOVE NUMBER OF RBN'S PER TRACK TO RO CLEAR THE HIGHER BITS, LEAVING RBN'S/TRACK ADD LBN'S/TRK, GIVING DBN'S/TRK CLEAR UNUSED BITS ADD LBNS/TRK TO RBNS/TRK TO GIVE DBNS/TRK SAVE DBNS/TRK IN COMPUTATIONAL AREA GET LO ORDER STARTING DIAGNOSTIC CYLINDER SAVE LO ORDER CYL
444444555555555	4 002245 104070 002337 5 002247 104637 000003 6 002251 110607 7 002252 110607 8 002253 110607 9 002254 110607 1 002257 104070 002335 2 002261 104207 002336 3 002263 104641 000005 4 002265 060020 5 002266 104012 6 002270	MOVOUT:	MOV MOV ROR ROR ROR BIC MOV MOV MOV MOV SOFTER	RO,STACYL+1 ;	SAVE HI ORDER CYL GET HI DBN ROTATE TO CORRECT POSITION ROTATE TO CORRECT POSITION ROTATE TO CORRECT POSITION ROTATE TO CORRECT POSITION CLEAR UNUSED BITS SAVE POINT TO CALCULATION AREA POINT TO SUBUNIT CHAR TABLE CALCULATE SEE IF CORRECTLY CALCULATED IF CORRECT, BRANCH

14	- CALCUL	ATE THE	CYL, GRP	AND TRA	CK FOR TH	HE GIVEN	L/RBN						SEC USE.	
	002270 002273 002276 002301 002304 002307 002312 002315 002320	104200 104300 104300 104300 104300 104200 101200 104200 104202	000225 002340 002341 002342 002343 000002 001400 002315 000013	001012 001013 001014 001015 001016 001010 001010 001007						MOV MOV MOV MOV MOV BIS MOV MOV	#ER2,0UT.04 CURBN,OUT.05 CURBN+1,OUT.06 LRDTRK,OUT.07 RBNFLG,OUT.08 #2,OUT.02 #ERSOFT,OUT.02 #.,OUT.01 #ERRMES,R2			
	58 002324	104020	001006	001017		ERRORC	<stacyl, stacyl+1<="" td=""><td>></td><td>: REPORT</td><td>MOV ERROR MOV</td><td>R2,OUT.RQ STACYL,OUT.09</td><td></td><td></td><td></td></stacyl,>	>	: REPORT	MOV ERROR MOV	R2,OUT.RQ STACYL,OUT.09			
	002324 002327 59 002332	104300 104300	002336 002337	001017		ENDERR	0			MOV	STACYL+1,OUT.10			
	002332	114000	002357		CLXEXT:			; RETURN		CLR . ING PRO	ERRPOS GRAM	: CLEAR	THE POSITIO	NC

1

1 2	002335		.SBITL HIBN:	STORAGE .BLKW	AREA PATTERNS,	DUMMY SDI AREA, OVERLAY INFORMATION AND MORE; HI BN BITS <27:24>	
5 7 8 9 10 11 12	002336 002336 002340 002342 002343 002344 002346 002347 002350 002351		LRDTRK: RBNFLG: CYL: GROUP: TRACK: SECTOR:	.BLKW .BLKW .BLKW .BLKW .BLKW	2 1 1 2 1 1 1 1 1	CALCULATION AREA FOR CYL, GRP, TRK STARTING CYLINDER NUMBER L/R/DBN SECTORS PER TRACK RBN FLAG CYLINDER GROUP TRACK SECTOR INDEX	
15 16 17 18 19	002352 002353 002354 002355 002356		CHAINS: SECMAX: CHNMAX: MAXSEC: SECPTR:	.BLKW .BLKW		; READ/WRITE CHAIN HEADER ; MAXIMUM NUMBER OF BUFFERS THAT ACN BE READ ; MAXIMUM NUMBER OF BUFFERS THAT CAN BE WRITTEN ; MAXIMUM NUMBER OF SECTORS THIS PASS ; SECTOR POINTER FOR WRITE	
20 21	002357	000000	ERRPOS:	. WORD	0	; RTDS AND STATUS POSITION	
24 25	002360 002361 002362	000000 000000 000000	ÓTABLE:	.WORD	0	; OVERLAY TABLE	
26 27 28 29 30	002363	043220	:	.WORD .WORD .WORD	OVL.MS*4 3 0 0	; SETUP MODULE OVERLAY INFORMATION	
31 32 33	002364 002365 002366	000000 000000 000000	•	.WORD .WORD .WORD	OVL.ST*4 0 0	; OPERATION MODULE OVERLAY INFORMATION	
36 37 38	002367 002370 002371 002372 002373	010214 000001 000000 000000 001224	•	.WORD .WORD .WORD .WORD .WORD	OVL.ST*4 1 0 0 0 OVL.SK*4	; SEEK MODULE OVERLAY INFORMATION	
40	002374 002375 002376 002377	000002 000000 000000 001254		.WORD .WORD	2 0 0	; SEEK COMPLETE MODULE OVERLAY INFORMATION	
44	002400 002401 002402 002403	000000 000000 000000		.WORD .WORD .WORD	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	; READ/WRITE SETUP OVERLAY INFORMATION	
48 49 50	002404 002405 002406	000270 000000 000003 000000		.WORD .WORD .WORD	OVL.RW*4 0 MAXDST 0	; WRITE OVERLAY INFORMATION	
52 53	002407 002410 002411 002412	004254 000000 000003 000000		.WORD .WORD .WORD	OVL.W*4 0 MAXDST 0	; READ OVERLAY INFORMATION	
55 56 57	002412 002413 002414 002415	003224 000000 000003		.WORD .WORD .WORD	OVL.R*4 0 MAXDST	; DATA CHECK MODULE OVERLAY INFORMATION	

```
58 002416
59 002417
                                                        . WORD
               000000
               005460
                                                       . WORD
                                                                 OVL.CK*4
    002420
 60
               000000
                                                        . WORD
                                                                 0
                                                                                                ; REVECTOR MODULE OVERLAY INFORMATION
 61
               000003
                                                        . WORD
                                                                 MAXDST
    002421
002423
002424
002425
002426
62
63
64
65
66
67
               000000
                                                        . WORD
               003110
                                                        . WORD
                                                                 OVL.RV*4
               000000
                                                        . WORD
               000003
                                                        . WORD
                                                                 MAXDST
                                                                                                : RECALIBRATION MODULE INFORMATION
                                                        . WORD
               000000
               000260
    002427
                                                        . WORD
                                                                 OVL.RB*4
67 002427
68
69 002430
70 002431
71 002432
72 002433
73 002434
74 002435
75 002436
76 002437
77
               000012
                                             NUMOVL
                                                                 <. - OTABLE> / 4
                                                       =
               177777
                                             PTABLE: . WORD
                                                                                                : PAGE TABLE
                                                        . WORD
               004515
                                                                 AREAO
               177777
                                                        . WORD
                                                                 -1
                                                       . WORD
               006560
                                                                 AREA1
               177777
                                                        . WORD
                                                                 -1
               007025
                                                        . WORD
                                                                 AREA2
               177777
                                                        . WORD
                                                                 -1
               007300
                                                        . WORD
                                                                 AREA3
               000003
                                             MAXDST
                                                                  <. - PTABLE> / 2 - 1
                                                       =
 78
79
    002440
               000000
                                             PNUM:
                                                       . WORD
                                                                                                  PATTERN NUMBER STORAGE AREA FOR ERRORS
78 002440

79 002441

80 002442

81 002443

82 002444

83 002445

84 002446

85 002447

86 002471

87

88
               000000
                                             LBNHLD:
                                                       . WORD
                                                                                                  TEMPORARY STORAGE FOR LBN
               000000
                                                        . WORD
               000000
                                             ERRCNT: . WORD
                                                                                                  ERROR COUNT LOCATION
                                                                 000
               000000
                                             M. PARM: . WORD
                                                                                                  MASTER PARAMETERS
               000000
                                             LOSEED: . WORD
                                                                                                  LO ORDER RANDOM NUMBER
               000000
                                             HISEED: . WORD
                                                                                                  HI ORDER RANDOM NUMBER
                                             DUMSDI: .BLKW
                                                                 18.
                                                                                                  DUMMY SDI AREA
               002443
                                                                                                  POINTER FOR LBN REVECTOR INFORMATION
                                                                 DUMSDI-4
                                                        . WORD
                                                                 BELEIVE IT OR NOT, THIS WILL WRITE THE REVECTORED LBN
                                                                  IN LOCATIONS DUMSDI+8 AND DUMSDI+9
 89
                                                                 EG. DUMSDI+18. POINTS TO 12 SHORT OF WHERE TO PUT THE
 90
91
92
93
94
95
96
97
                                                                           REVECTOR INFORMATION
     002472
               000000
                                             DROPSU: . WORD
                                                                                                : DROP SUBUNIT FLAG
     002473
               010000
                                             MEMPOL: . WORD
                                                                 HIMEM
                                                                                                  MEMORY POOL FOR UNIT DATASTRUCTURES
     002474
                                                                                                  TEMPORARY MEMORY POOL FOR READ/WRITE
                                             TMEMPL: .BLKW
     002475
                                             PATPTR: . WORD
                                                                 PATO
                                                                                                : POINTERS TO DATA PATTERNS
               002536
     002476
                                                                 PAT1
                                                        . WORD
    002477
002500
002501
002502
               002540
                                                                 PAT2
PAT3
                                                       . WORD
98
99
100
101
102
                                                        . WORD
               002544
                                                        . WORD
                                                                 PAT4
               002565
                                                        . WORD
                                                                 PAT5
    002503
               002606
                                                        . WORD
                                                                 PAT6
    002504
               002627
                                                        . WORD
                                                                 PAT7
103
    002505
               002631
                                                        . WORD
                                                                 PAT8
104
    002506
               002652
                                                                 PAT9
                                                        . WORD
105
    002507
               002654
                                                        . WORD
                                                                 PAT10
106
    002510
               002675
                                                        . WORD
                                                                 PAT11
    002511
107
               002677
                                                        . WORD
                                                                 PAT12
108 002512
               002720
                                                        . WORD
                                                                 PAT13
109 002513
               002741
                                                        . WORD
                                                                 PAT14
110 002514
               002745
                                                                 PAT15
                                                        . WORD
111
112
                                                       THE DATA PATTERNS (LENGTH OF PATTERN IN WORDS, FOLLOWED BY PATTERN)
114 002515 000001
                                             PATO:
                                                        . WORD
                                                                                     : USER DEFINEABLE PATTERN
```

JRAGE	AREA PA	HERNS.	DUMMA	201	AREA,	UVERLAY	INFURMAT	IUN AND	
173 174 175 176 177 178	002607 002610 002611 002612 002613 002614 002615	000000 000000 000000 177777 177777 177777 000000					.WORD .WORD .WORD .WORD .WORD .WORD	000000 000000 000000 177777 177777 177777 000000	; 3-2-1-1-1 SEQUENCE
180 181 182 183 184 185 186	002616 002617 002620 002621 002622 002623 002624 002625 002626	000000 177777 177777 000000 177777 000000 177777					.WORD .WORD .WORD .WORD .WORD .WORD .WORD .WORD	000000 177777 177777 000000 177777 000000 177777	
188	002627 002630	000001				PAT7:	. WORD	1	: B'1011011011011001'
190 191 192 193	002631 002632 002633 002634	133331 000020 052525 052525 052525				PAT8:	.WORD .WORD .WORD .WORD	133331 16. 052525 052525 052525	: B'0101010101010101' AND : B'1010101010101010' : IN 3-2-1-1-1 SEQUENCE
194 195 196 197 198 199	002635 002636 002637 002640 002641 002642 002643	052525 052525 052525 125252 125252 125252 052525 125252 125252 125252 125252					.WORD .WORD .WORD .WORD .WORD .WORD	052525 052525 052525 125252 125252 052525 052525 125252 052525 125252 052525 125252 052525 125252 125252	
201 202 203 204 205 206 207	002644 002645 002646 002647 002650 002651 002652	052525 125252 052525 125252 000001				PAT9:	.WORD .WORD .WORD .WORD .WORD .WORD	1	; B'1101101101101100'
209 210 211 212 213	002653 002654 002655 002656 002657 002660 002661	155554 000020 026455 026455 026455 151322 151322				PA110:	.WORD .WORD .WORD .WORD .WORD .WORD	155554 16. 026455 026455 026455 151322 151322	B'0010110100101101' AND B'1101001011010010' IN 3-2-1-1-1 SEQUENCE
215 216 217 218 219	002662 002663 002664 002665 002666 002667 002670 002671 002672 002673	151322 026455 026455 151322 151322 026455 151322 026455 151322 026455					.WORD .WORD .WORD .WORD .WORD .WORD .WORD .WORD .WORD	026455 151322 151322 151322 026455 026455 151322 026455 151322 026455 151322 026455	
225	002674 002675	151322 000001				PAT11:	. WORD	151322	: B'0110110110110110'
227	002676 002677	066666				PAT12:	. WORD	066666	
220	002077	000020				FAITE:	. WORD	16.	; RIPLE ONE

1 2 3 002766 4 002767 5 002770 6 002771 7 002772 8 002773 9 002774 10 002775 11 002776 12	000000 000000 000000 000000 000000 00000			.SBTTL \$DIAG\$ \$\$DIAG:	ROOT = .WORD .WORD .WORD .WORD .WORD .WORD .WORD .WORD .WORD	- MAIN DRIVING MODULE OF O	MODULE BREAKPOINT ETUP
15 14 002777 15 003001 16 003002 17 003004 18 003006 19 003007 20 0C3011 21 003012 22 003014 23 003015 24 003016 25 003017 26 003020 27 003021 28 003023 29 003024 30 003026 31 003027 32 003032	104205 114007 104655 104651 073020 115000 033015 102201 013020 023062 114007 003061 115407 106207 053061 115000 033055 103200	007717 000000 000033 002444 040000 000004 002444 100000 010611	002444 001010	ROOTLP: 1\$: NOUNIT:	MOV CLR MOV BMI TST BPL BIT BEQ CALL CLR INC CMP BNE TST BPL BIC MSSG	#FIRSTU,R5 R0 U.NEXT(R5),R5 U.PARM(R5),R1 NOUNIT M.PARM 1\$ #INITW,R1 NOUNIT SEQNCR R0 ROTEXT R0 #4,R0 ROTEXT M.PARM 1\$ #100000,M.PARM 2	R5 POINTS TO FIRST UNIT TO BE TESTED COUNT OF DROPPED UNITS IS SET TO ZERO R5 POINTS TO NEXT UNIT IN CHAIN GET UNIT PARAMETERS IF UNIT DROPPED, BRANCH SEE IF IN PROCESS OF INITIAL WRITE IF NOT, BRANCH SEE IF THIS UNIT IS BEING INITALLY WRITTEN IF NOT, BRANCH CALL SEQUENCER COUNT OF DROPPED UNITS IS SET TO ZERO BRANCH TO BOTTOM OF ROOT INCREMENT COUNT OF DROPPED UNITS SEE IF FOUR (ALL) UNITS HAVE BEEN DROPPED IF NOT, BRANCH SEE IF INITIAL WRITE WAS IN PROGRESS IF NOT, BRANCH CLEAR INITIAL WRITE BIT REPORT ALL INITIAL WRITES COMPLETE MOV #MS2,OUT.02
003035 003035 003036 003037 003041 003042 003044 003050 003051 003052 33 003053 34 003053 34 003055 36 003057 37 003060 38 003061	100467 100461 104201 105051 105651 104110 104207 020751 104267 114007 003061 104207 020751 060021 003002	000047 000034 001007 000015		1\$: ROTEXT:	CLR BR MOV CALL XFC BR	RO ROTEXT #DONE,RO HOSTRO EXIT ROOTLP	MOV RO(SP) MOV R1(SP) MOV (R1).01 MOV (R1).01 MOV (R1).01 MOV (SP)+.R1 MOV (SP)+.R1 MOV (SP)+.R0 START UNIT COUNT AT ZERO NOW START TESTING MOVE DONE OP CODE TO HOST COMMUNICATION AREA SENT DONE MESSAGE TO HOST EXIT DIAGNOSTIC MACHINE MODE BRANCH TO TOP OF ROOT

003062				.SBTTL SEGNCR:	SEQNCR	- MODULE SEQUENCE	ER	FOR TEST 4	
					IN ROB TO. IF IF R2 I	Y THE PREVIOUS MO R1 IS ZERO, AN IM S NONZERO, AN ERF	ODI MM ROI	ULE. RO HOLDS THE NEXT ADDRESS TO VECTOR IDATE CALL IS MADE TO THE NEXT ROUTINE. R WAS ENCOUNTERED, AND THE ERROR COUNT IS	
003062 003064 003065 003066 003067 003071 003072 003073	104657 023362 115003 053151 106207 073125 104071 105077 105077	000010		SEQLP:	MOV CALL TST BNE CMP BMI MOV ADD ADD	RO RO RO RO	***************************************	MAKE SURE AT LEAST ONE ACTIVE SUBUNIT EXIST SEE IF ACTIVE SUBUNIT EXISTS IF NOT, BRANCH SEE IF THE ROUTINE IS ON AN OVERLAY IF NOT, BRANCH SAVE THE OVERLAY NUMBER MULTIPLY THE OVERLAY NUMBER BY 4	S
003077 003100 003102 003103 003104 003106 003110 003112	105022 106621 013123 023152 100621 104677 104201	002360 002430 002430 002361 177777			MOV ADD CMP BEQ CALL MOV MOV MOV PUSH	R2,R2 PTABLE(R2),R1 LOADED OVRLAY R1,PTABLE(R2)		MULTIPLY THE AREA NUMBER BY 2 SEE IF THE OVERLAY REQUESTED IS IN MEMORY IF SO, BRANCH IF NOT, GET THE OVERLAY MARK THE OVERLAY AS IN MEMORY GET THE NUMBER OF OVERLAY AREAS DESTROYED R1 CONTAINS THE 'EMPTY AREA' FLAG SAVE R2	
003113 003114 003115 003117 003121 003122	117407 073122 105202 100621 003113	000002 002430		GONE: PLOAD:	DEC BMI ADD MOV BR POP	#2,R2 R1,PTABLE(R2)		DECREMENT THE DESTROYED COUNT IF ALL NECESSARY AREAS MARKED DESTROYED, BR. POINT TO NEXT OVERLAY AREA MARK AREA AS DESTROYED GO TO TOP OF LOOP RESTORE R2	ANCH [*]
003123 003125	104627	002431	. 1			PTABLE+1(R2),R0 R0	::	GET OVERLAY ADDRESS PUSH THE BRANCH ADDRESS ONTO THE STACK	
003126 003127 003131 003132 003134 003135 003137 003141 003143 003145 003146 003147	000000 114000 023724 104303 013145 104641 101201 100641 104207 115001 013064 100657 000000	002472 002472 000000 100000 000000 000001		JMPRET: NOERR: NOSUB:	RETURN CLR CALL MOV BEQ MOV BIS MOV MOV TST BEQ MOV RETURN	DROPSU CORECT DROPSU,R3 NOERR S.PARM(R4),R1 #DROP,R1 R1,S.PARM(R4) #SETUP,R0 R1 SEQLP R0,U.NFUN(R5)		VECTOR TO MODULE FLAG SUBUNIT AS NOT TO BE DROPPED CORRECT THE ERROR SEE IF SUBUNIT TO BE DROPPED IF NOT, BRANCH GET SUBUNIT PARAMETERS SET DROP BIT SAVE SUBUNIT PARAMETERS SETUP WILL BE NEXT MODULE CALLED SEE IF IMMIDATE OR DELAYED CALL IF ZERO (IMMIDATE) LOOP SAVE ROUTINE ADDRESS RETURN TO DRIVER	
	003062 003064 003065 003066 003071 003072 003073 003075 003102 003102 003103 003112 003112 003112 003112 003112 003112 003123 003125 003125 003125 003125 003126 003137 003146 003146 003147	003062 104657 003064 023362 003065 115003 003066 053151 003071 073125 003072 104071 003073 105077 003075 104672 003102 013123 003102 013123 003103 023152 003104 100621 003106 104677 003110 104201 003112 100462 003112 100462 003113 117407 003114 073122 003115 105202 003117 100621 003121 003113 003122 104262 003123 104627 003125 104627 003126 000000 003127 114000 003127 104627 003128 104262 003129 104262 003129 104262 003129 104262 003121 003113 003121 003113 003122 104262 003123 104627 003131 023724 003131 023724 003131 100641 003141 100641 003145 115001 003145 115001 003146 013064 003147 100657	003062 104657 000010 003064 023362 003065 115003 003067 106207 000100 003071 073125 003072 104071 003073 105077 003074 105077 003075 104672 002360 003102 013123 003102 013123 003103 023152 003104 100621 002430 003106 104677 002361 003112 100462 003112 100462 003113 117407 003114 073122 003115 105202 000002 003117 100621 002430 003121 003113 003122 104262 003123 104627 002431 003125 100467 003126 000000 003127 114000 002472 003131 023724 003125 100467 003126 000000 003127 114000 002472 003131 023724 003132 104641 000000 003141 10641 000000 003143 104207 000001 003145 115001 003145 115001 003146 013064 003147 100657 000010	003062 104657 000010 003064 023362 003065 115003 003066 053151 003071 073125 003072 104071 003073 105077 003075 104672 002360 003102 013123 003102 013123 003104 100621 002430 003104 100621 002430 003105 104677 002361 003110 104201 177777 003112 003113 17407 003114 073122 003113 17407 003115 105202 000002 003121 003113 17407 003115 105202 000002 003122 104262 003123 104627 002431 003125 100467 003126 000000 003127 114000 002472 003131 023724 002472 003132 104303 002472 003135 104641 000000 003127 114000 002472 003137 101201 100000 003137 101201 100000 003137 101201 100000 003143 104207 000001 003143 104207 000001	003062	SEQUENC IN RO B TO. IF IF R2 I INCREME INCRE	SEQUENCER CALLS THE VAR IN RO BY THE PREVIOUS M IN RO IN RO IN RETURN IN RO BY THE PREVIOUS M IN RO BY THE PREVI	SEQUENCER CALLS THE VARIOUS IN RO BY THE PREVIOUS MOUSED TO IF RI IS ZERO, AN IMM IF R2 IS NONZERO, AN ERROI INCREMENTED. THE ERROR IS NONZERO, AND ERROI INCREMENTED. THE ERROR INCR	SEQUENCER CALLS THE VARIOUS MODULES, USING THE ADDRESS RETURNED

1 2 003152	.SBTTL OVRLAY:	OVRLAY	- OVERLAY PROCESS	FOR BRINGING IN OVERLAYS IF NEEDED
3		BRING I	N THE OVERLAY	
6 003152 003152 100465 003153 100467 003154 100461 003155 100462 003156 100463		PUSH	<r5,r0,r1,r2,r3< td=""><td>MOV R5,-(SP) MOV R0,-(SP) MOV R1,-(SP) MOV R2,-(SP) MOV R3,-(SP)</td></r5,r0,r1,r2,r3<>	MOV R5,-(SP) MOV R0,-(SP) MOV R1,-(SP) MOV R2,-(SP) MOV R3,-(SP)
7 003157 104205 000003 8 003161 104671 002363 9 003163 103201 177774 10 003165 104623 002431 11 003167 104672 002363 12 003171 110602 13 003172 110602	1\$:	MOV BIC MOV MOV ROR ROR	OTABLE+3(RO),R2 R2 R2	: TRY TO READ 3 TIMES : GET THE HI ORDER BITS OF UNIBUS ADDRESS : CLEAR UNUSED BITS : POINT TO WHERE TO LOAD OVERLAY : GET NUMBER OF WORDS TO TRANSFER : ROTATE BITS TO CORRECT POSITION
14 003173 103202 140000 15 003175 104677 002362 16 003177 060013 17 003200 101071 18 003201 013246 19 003202		MOV XFC BIS BEQ POP	#140000,R2 OTABLE+2(R0),R0 UREAD R0,R1 2\$ <r3,r2,r1,r0></r3,r2,r1,r0>	CLEAR UNUSED BITS GET LO ORDER UNIBUS ADDRESS READ THE OVERLAY INTO UDA MEMORY ADD THE ERROR REGISTERS TOGETHER IF NO ERRORS, BRANCH RESTORE THE REGISTERS
003202 104263 003203 104262 003204 104261 003205 104267 20 003206		PUSH	<r0.r1,r2,r3></r0.r1,r2,r3>	MOV (SP)+,R3 MOV (SP)+,R2 MOV (SP)+,R1 MOV (SP)+,R0 ; SAVE THE REGISTERS
003206 100467 003207 100461 003210 100462 003211 100463 21 003212 117405			R5	MOV RO,-(SP) MOV R1,-(SP) MOV R2,-(SP) MOV R3,-(SP)
22 003213 053161 23 003214 003214 104200 004546 001012 003217 104200 000041 001010 003222 101200 000400 001010 003225 104200 003225 001007 003230 104202 000014 003232 104020 001006		DE C BNE DE VFTL	1 \$ 33	DECREMENT COUNT IF INCOMPLETE, BRANCH UNABLE TO READ FROM HOST MEMORY MOV #ER33,OUT.04 MOV #33,OUT.02 BIS #FILDEV,OUT.02 MOV #.,OUT.01 MCV #ERRMC,R2 MOV R2,OUT.RQ
24 003234 104200 177777 001011 25 003237 104207 000013 26 003241 020751 27 003242 104207 000016 28 003244 020751 29 003245 060021		MOV MOV CALL MOV CALL XFC	#177777,OUT.03 #ERRMES,RO HOSTRQ #DONE,RO HOSTRQ EXIT	: FLAG AS NOT ASSOCIATED WITH ANY UNIT : SET UP TO REPORT ERROR : REPORT : REPORT THAT PROGRAM IS FINISHED : REPORT : EXIT DM
30 003246 003246 104263 003247 104262 003250 104261 003251 104267 003252 104265	2\$:	POP	<r3,r2,r1,r0,r5< td=""><td></td></r3,r2,r1,r0,r5<>	
31 003253 000000		RETURN		: RETURN TO PAGE

2 003254	.SBTTL AFINIT:	***** NON-OVERLAY MO	DULE AFINIT - USED AFTER DRIVE IS INITILIZED
3		TER THE DRIVE IS INITIA BE ASSERTED. IF IT IS	LIZED, WAIT FOR RECEIVER READY (HOPEFULLY) NOT ASSERTED, DROP THE ENTIRE UNIT
7 8 9			STRUCTURED PIECE OF CODE IT HAS SEVERAL TO SEQUER AT SEVERAL DIFFERENT PLACES.
11 003254 021173 12 003255 115002 13 003256 053267 14 003257 102201 000001		T R2; IE NORTDS; T #RCVRDY,R1;	GET REAL TIME DRIVE STATE SEE IF ERROR DURING STATE INTERROGATION IF ERROR, BRANCH SEE IF RECIEVER READY IS ASSERTED
15 003261 013267 16 003262 104207 000001 17 003264 114001 18 003265 114002		V #SETUP.RO ;	IF SO, BRANCH SETUP IS NEXT MODULE CALLED IMMIDATE CALL TO SETUP NO ERRORS
19 003266 003361 20 003267 104207 003254 21 003271 104013	NORTDS:	ATNEXT ; W #AFINIT,RO ; R1,R3 ;	BRANCH TO EXIT AFINIT IS NEXT ROUTINE CALLED SAVE REAL TIME DRIVE STATE
22 003272 104651 000005 23 003274 117401 24 003275 100651 000005 25 003277 053361		C R1 ;	GET TIMEOUT VALUE DECREMENT TIMEOUT VALUE SAVE TIMEOUT VALUE BRANCH TO SEQUENCER LOOP
26 003300 115002 27 003301 053327 28 003302 103203 077674		T R2 ; IE NRTDS ; C #077674,R3 ;	SEE IF NO REAL TIME STATE IF SO, BRANCH CLEAR UNUSED BITS
29 003304 003304 104200 003746 001012 003307 104030 001013 003311 104200 000034 001010 003314 101200 000400 001010 003317 104200 003317 001007 003322 104202 000014 003324 104020 001006		VFTL 28,R3 ;	RECIEVER READY WAS NEVER ASSERTED MOV #ER28,OUT.04 MOV R3,OUT.05 MOV #28,OUT.02 BIS #FTLDEV,OUT.02 MOV #.,OUT.01 MOV #ERRMC,R2 MOV R2,OUT.RQ
30 003326 003347 31 003327 003327 104200 004012 001012	NRTDS:	IERR :	BRANCH REPORT UNABLE TO GET REAL TIME DRIVE STATUS MOV #ER29,OUT.04
003332 104200 000035 001010 003335 101200 000400 001010 003340 104200 003340 001007 003343 104202 000014 003345 104020 001006			MOV #29,0UT.02 BIS #FTLDEV,OUT.02 MOV #.,OUT.01 MOV #ERRMC,R2 MOV R2,OUT.RQ
32 003347 003347 114000 002357	IERR:	IDERR 0 :	DON'T REPORT STATUS OR STATE CLR ERRPOS ; CLEAR THE POSITION
33 003351 104651 000033 34 003353 101201 100000 35 003355 100651 000033 36 003357 024030		U.PARM(R5),R1; S #DROP,R1; V R1,U.PARM(R5); RLL REPERR;	GET DRIVE PARAMETERS FLAG DRIVE AS DROPPED SAVE DRIVE STATE REPORT ERROR
37 003360 114007 38 003361 003151	ATNEXT:	R RO :	RO IS NOT 'AFINIT'S ADDRESS FOR 'TROOT' BRANCH TO SEQUENCER LOOP

1 2 003362	.SBTTL DRP	TST -	SEE THAT AT L	EAST	T ONE SUBUNIT IS ACTIVE ON A UNIT
5 6 7	: IF	SO, R4 SUBUN	POINTS TO SU	IBUNI ID R3	EAST ONE ACTIVE SUBUNIT IS ACTIVE ON THE UNIT IT PARAMETER BLOCK, U.SUBU IS UPDATED TO 3 IS RETURNED POSITIVE. IF NOT, R3 IS ENTIRE UNIT IS DROPPED
9 003362 003362 100467	PUS	H R	0	:	SAVE NEXT MODULE ADDRESS MOV RO,-(SP)
10 003363 104657 000033 11 003365 102207 001000	MOV	A	PARM(R5),R0	:	GET UNIT PARAMETERS SEE IF FIRST TIME THROUGH
12 003367 013442	BIS BEG	1	\$		IF NOT, BRANCH ; IF FIRST TIME, FORCE A SEEK, NEW SUBUNIT
14 003372 103207 011010	BIC	A	NEWSUB!RESEEK FTIME!DIREC!W	ICHEC	CK,RO; NO LONGER FIRST TIME, SET DIRECTION UP
15 003374 100657 000033 16 003376 104207 000001	MOV MOV		0.U.PARM(R5)	:	SAVE RO WILL POINT AT SUBUNIT POINTERS
17 003400 105057	ADD	R	5,R0	:	RO POINTS AT SUBUNIT POINTERS
18 003401 114002 19 003402 100652 000021	CLR MOV	R	2.U.CSEC(R5)		UP TO 4 SUBUNITS ON THIS UNIT ZERO ALL TRACK COUNTS SO THE TEST AT THE
20 003404 100652 000016	MOV	R	2.U.NSEC(R5)		ZERO ALL TRACK COUNTS SO THE TEST AT THE BEGINNING OF SETUP IS SATISIFIED SO CONTROL DROPS THROUGH TO SETUP THE NEXT OPERATION
21 003406 100652 000020 22 003410 104273	11\$: MOV	(RO)+,R5	;	GET SUBUNIT POINTER
23 003411 073423 24 003412 104633 000000	BM1 MOV		2\$.PARM(R3),R3	:	IF NO SUBUNIT, BRANCH GET UNIT PARAMETERS
25 003414 073423	BMI	1	2\$:	IF DROPPED, BRANCH
26 003415 115000 002444 27 003417 033430	TST BPL		I.PARM 3\$		SEE IF INTIIAL WRITE IN PROGRESS IF NOT, BRANCH
28 003420 102203 040000	BIT	A	INITW,R3 3\$:	SEE IF THIS SUBUNIT IS TO BE INITIALLY WRITTEN
30 003423 115402	12\$: BNE	R	2	:	IF SO, BRANCH INCREMENT COUNT
31 003424 106202 000003 32 003426 033410	(MP BPL		13,R2 1\$		SEE IF COUNT EXHAUSTED IF NOT, BRANCH
33 003427 003553	BR	4	\$:	IF SO, DROP ENTIRE UNIT
34 003430 100652 000034 35 003432 104024	13\$: MOV MOV		2.U.SUBU(R5) 2.R4	•	SAVE SUBUNIT OFFSET MOVE TO SUBUNIT POINTER REGISTER
36 003433 105054	ADD	R	15.R4	:	ADD UNIT POINTER
37 003434 105204 000001 38 003436 104144	ADD MOV	(W. SUBP, R4 R4), R4	:	ADD SUBUNIT POINTER OFFSET R4 NOW POINTS TO SUBUNIT
39 003437 024161 40 003440 114003	CAL		RECOVR 3		PROCESS THIS UNIT
41 003441 003561	BR	5	\$:	EXIT
42 003442 104204 000001 43 003444 105054	1\$: MOV		U.SUBP,R4		R4 WILL POINT AT SUBUNIT POINTERS R4 POINTS TO SUBUNIT POINTERS
44 003445 105654 000034 45 003447 104144	ADD MOV	L	1. SUBU(R5), R4	:	R4 POINTS AT SPECIFIC SUBUNIT POINTER
46 003450 104641 000000	MOV	S	R4),R4 .PARM(R4),R1	:	R4 POINTS AT SUBUNIT PARAMETERS GET UNIT PARAMETERS
47 003452 102207 004000 48 003454 013520	BIT		NEWSUB,RO		SEE IF SUPPOSED TO GO TO NEXT SUBUNIT IF NOT, BRANCH
49 003455 114002	CLA	R	12	:	FOR CEARING FOLLOWING WORDS
50 003456 100652 000021 51 003460 100652 000016	MOV MOV		12.U.CSEC(R5) 12.U.NSEC(R5)		ZERO ALL TRACK COUNTS SO THE TEST AT THE BEGINNING OF SETUP IS SATISIFIED SO CONTROL
52 003462 100652 000020 53 003464 115000 002444	MOV TST	R	2.U.TSEC(R5)	:	DROPS THROUGH TO SETUP THE NEXT OPERATION SEE IF INITIAL WRITE IS IN PROGRESS
54 003466 033524	BPL	. 2	\$:	IF NOT, BRANCH
55 003467 103201 040000 56 003471 100641 000000	BI C		INITW.R1		CLEAR INITIAL WRITE BIT

57 003473 003473	104200	010573	001010		MSSG	1	:	REPORT INITIAL WRITE COMPLETE MOV #MS1,OUT.02
003476	100467	0.03.3	001010					MOV RO,-(SP) MOV R1,-(SP)
003500	104201	000047						MOV #U.SNUM,R1
003502	105051 105651	000034						ADD R5,R1 ADD U.SUBU(R5),R1
003500 003502 003503 003505 003507 003511 003512 003513	104110 104207	001007						MOV (R1),OUT.01 MOV #MESSAG,R0
003511	020751 104261							CALL HOSTRQ MOV (SP)+,R1
003513	104267	000034			MOV	U.SUBU(R5),R2		MOV (SP)+,RO
58 003514 59 003516 60 003517	104652 023614 003561	000034			CALL	CHKUP 5\$:	; GET ACTIVE SUBUNIT POINTER ; SEE IF ANY MORE UNITS TO INITIAL WRITE ; BRANCH
61 003520	114003	100000		6\$:	CLR	R3	:	; IF ACTIVE, FLAG TO PROCESS
62 003521 63 003523	102201 013561	100000			BIT	#DROP,R1	:	; SEE IF UNIT ACTIVE ; IF ACTIVE, BRANCH
64 003524 65 003526	102201 053531	040100		2\$:	BIT	#SEQSEK!INITW,R	21.	; IF ACTIVE, BRANCH ; SEE IF SEQUENTIAL SEEKS ; IF SO, BRANCH
66 003527	023664				CALL	RNDSUB	:	; GET RANDOM SUBUNIT
67 003530 68 003531	003561 104652	000034		10\$:	BR MOV	5\$ U.SUBU(R5),R2		: EXIT : R2 IS SUBUNIT NUMBER (0-3)
69 003533	104652 102207 053545	010000			BIT	#DIREC,RO	:	R2 IS SUBUNIT NUMBER (0-3) SEE IF GOING UP OR DOWN IF DOWN, BRANCH
71 003536	023614				CALL	CHKUP	:	; FIND NEXT UPPER SUBUNIT
68 003531 69 003533 70 003535 71 003536 72 003537 73 003540 74 003541 75 003542 76 003543 77 003544	115007 013561				TST BEQ	R0 5\$:	; FIND ONE? ; IF SO, BRANCH
74 003541	023563 115007				CALL	CHKDN RO	:	: SEARCH DOWN FOR ONE : FIND ONE?
76 003543	013561				BEQ	5\$:	; IF SO, BRANCH
10 003343	003553			3\$:	BR CALL	4\$ CHKDN	:	: DROP UNIT : LOOK DOWN FOR SUBUNIT
79 003546 80 003547	115007 013561				TST BEQ	R0 5\$:	; FIND ONE? ; IF SO, BRANCH
81 003550	023614				CALL	CHKUP	:	; LOOK UP FOR ONE
82 003551 83 003552	115007 013561				TST BEQ	R0 5\$:	; FIND ONE? ; IF SO, BRANCH
84 003553	104653	000033		4\$:	MOV	U.PARM(R5),R3	:	; GET UNIT PARAMETERS
85 003555 86 003557	101203 100653	100000			BIS	#DROP,R3 R3,U.PARM(R5)	:	: DROP UNIT : SAVE
87 003561 003561	104267			5\$:	POP	R0	:	RESTORE RO MOV (SP)+,RO
88 003562	000000				RETURN		:	; RETURN

1 003563			CHKDN:			
3				SEARCH	THE SUBUNIT LIST	DOWN AND TRY TO FIND AN ACTIVE SUBUNIT
6 003565 7 003566 8 003567 9 003570 10 003571 11 003572 12 003573 13 003574 14 003576 15 003577 16 003601 17 003602 18 003603 19 003604	104203 105053 117402 073604 104034 105024 104144 073566 104647 073566 104647 114003 003613 104657 103207	000001 000000 000034 000033 010000	; 1\$: 2\$:	MOV ADD DEC BMI MOV ADD MOV BMI MOV CLR CLR BR MOV BIC	#U.SUBP,R3 R5,R3 R2 2\$ R3,R4 R2,R4 (R4),R4 1\$ S.PARM(R4),R0 1\$ R2,U.SUBU(R5) R0 R3 3\$ U.PARM(R5),R0 #DIREC,R0	R3 WILLPOINT TO SUBUNIT POINTERS R3 POINTS TO SUBUNIT POINTERS DECREMENT OLD SUBUNIT IF ALL SUBUNITS CHECKED, BRANCH MOVE SUBUNIT LIST POINTER TO R4 POINT TO SUBUNIT R4 POINTS TO SUBUNIT IF NO UNIT, BRANCH R0 HAS SUBUNIT PARAMETERS IF THIS SUBUNIT DROPPED, BRANCH SAVE SUBUNIT NUMBER FOUND A SUBUNIT PROCESS THIS SUBUNIT EXIT GET UNIT PARAMETERS SET DIRECTION UP
21 003610 22 003612	100657 104057 000000	000033	3\$:	MOV MOV RETURN	RO.U.PARM(R5) R5.R0	: SAVE : DIDN'T FIND A SUBUNIT : RETURN TO CALLING PROGRAM

1	003614			CHKUP:				
3					SEARCH	THE SUBUNIT LIS	ST U	P AND TRY TO FINE AN ACTIVE SUBUNIT
5	003614	104203	000001		MOV	#U.SUBP,R3 R5,R3	:	R3 WILLPOINT TO SUBUNIT POINTERS R3 POINTS TO SUBUNIT POINTERS
7	003617	115402	000003	1\$:	INC	R2 #3,R2	•	INCREMENT OLD SÜBUNIT SEE IF ALL SUBUNITS CHECKED
9	003620 003622	073645	000003		BMI	3\$:	IF ALL SUBUNITS CHECKED, BRANCH
10	003623 003624	104034 105024			MOV ADD	R3.R4 R2.R4	:	MOVE SUBUNIT LIST POINTER TO R4 POINT TO SUBUNIT
12	003625	104144			MOV	(R4),R4	:	R4 POINTS TO SUBUNIT
13		073617	000000		MOV MOV	1\$ S.PARM(R4),R0	:	IF NO UNIT, BRANCH RO HAS SUBUNIT PARAMETERS
15	003627 003631	104647 073617	000000		BMI	1\$:	IF THIS SUBUNIT DROPPED, BRANC
16	003632	115000	002444		TST	M. PARM	:	SFF IF INITIAL WRITE IN PROGRESS
18	003634 003635	033640 102207	040000		BPL	2\$ #INITW,RO	:	IF NOT, BRANCH SEE IF INITIAL WRITE TO BE DONE ON SUBUNIT
19	003637	013617			BEQ	1\$:	IF NOT, BRANCH
20	003640 003642	100652 114007	000034	2\$:	MOV	R2.U.SUBU(R5)	:	SAVE SUBUNIT NUMBER FOUND ONE
22	003643	114003			CLR	R3	:	PROCESS THIS ONE
23	003644	003663	000077	74	BR	5\$:	EXIT
25	003645	104651 115000	000033	3\$:	MOV TST	U.PARM(R5),R1 M.PARM	:	GET UNIT PARAMETERS SEE IF DOING AN INITIAL WRITE
26		033657	002444		BPL	4\$:	IF NOT, BRANCH
27	003652	103201	040000		BIC	#INITW.R1		FLAG INITIAL WRITE AS COMPLETE ON THIS UNIT
28		101201 003661	001000		BIS BR	#FTIME,R1	:	EXIT
30	003657	101201	010000	4\$:	BIS	#DIREC,R1	:	SET DIRECTON DOWN
31	003661	100651	000033	9\$: 5\$:	MOV RETURN	R1.U.PARM(R5)	:	SAVE RETURN TO CALLING PROGRAM
25	(0000)	000000		,	WE TOM			

...

	003664			RNDSUB:				
-					GET NEX	T SUBUNIT TO CHE	CK	RANDOMLY
	003664	104207	000004 000001		MOV MOV	#4.R0 #U.SUBP,R3		SUBUNIT COUNT R3 WILL POINT TO SUBUNIT POINTERS
	7 003670 3 003671 9 003673	105053 104652 115402	000034	1\$:	MOV INC	R5,R3 U.SUBU(R5),R2 R2	:	R3 POINTS TO SUBUNIT POINTERS R2 IS SUBUNIT NUMBER G0 TO NEXT UNIT
10	003674	106202 033700	000003		CMP BPL	#3,R2 2\$:	SEE IF GREATER THAN 3 IF NOT, BRANCH
	2 003677 3 003700 4 003701	114002 104034 105024		2\$:	CLR MOV ADD	R2 R3,R4 R2,R4		NOW ON SUBUNIT O R4 POINTS TO SUBUNIT POINTERS R4 NOW POINTS TO A SPECIFIC SUBUNIT POINTER
1:	5 003702 5 003703	104144	000000		MOV BMI	(R4),R4 3\$:	R4 NOW POINTS TO SUBUNIT PARAMETERS IF NO SUBUNIT, BRANCH GET SUBUNIT PARAMETERS
18	7 003704 8 003706 9 003707	104641 033720 117407	000000	3\$:	MOV BPL DEC	S.PARM(R4),R1 4\$ R0	::	IF ACTIVE, BRANCH DECREMENT COUNT
5.	003710	053673 104653 101203	000033 100000		MOV BIS	1\$ U.PARM(R5),R3 #DROP,R3	:	GET UNIT PARAMETERS SET DROP BIT
2		100653	000033		MOV BR	R3.U.PARM(R5)		SAVE
2	003720	100652 114003	000034	4\$:	MOV CLR	R2.U.SUBU(R5)	:	SAVE SUBUNIT NUMBER TEST THIS SUBUNIT IMMIDATELY
	7 003723	000000		5\$:	RETURN		:	RETURN TO CALLING PROGRAM

2 0037	724			.SBTTL CORECT:	CORECT	- CORRECT THE ER	RRORS	
4					CORRECT	THE ERRORS AND	RECOVER	
6 0037 0037 0037	724 100467				PUSH	<r0,r1></r0,r1>	; SAVE RO AND R1 MOV RO(SP) MOV R1,-(SP)	
7 0037 8 0037 9 0037 10 0037 11 0037 12 0037	726 104200 731 115002 732 053771 733 021173 734 115002	000005	002443		MOV TST BNE CALL	#5,ERRCNT R2 REPORT RIDS	; ALLOW ONLY 5 TRIES AT ERROR RECOVERY ; SEE IF REPORTING AN ERROR ; IF SO, BRANCH ; GET REAL TIME DRIVE STATE	
11 0037 12 0037 13 0037 14 0037 15 0037	734 115002 735 053747 736 102201 740 014025	000002			TST BNE BIT BEQ	R2 NSTATE #ATTN,R1 COREXT	; SEE IF AN ERROR OCCURRED ; IF SO, BRANCH ; SEE IF ATTENTION IS ASSERTED ; IF NOT, BRANCH	
15 0037 16 0037 17 0037 18 0037 19 0037	743 102203 745 054025	000033			MOV BIT BNE BR	U.PARM(R5),R3 #SEKINP,R3 COREXT RECOVE	; GET UNIT PARAMETERS ; SEE IF SEEK IN PROGRESS ; IF SO, LET THE SEEK ROUTINE REPORT ATTENTION ; OTHERWISE, BRANCH	
0037 0037 0037 0037 0037 0037	747 104200 752 104200 755 101200 760 104200 763 104202 765 104020	002442 000021 001000 003760 000014 001006	001012 001010 001010 001007	NSTATE:		17	MOV #ER17.OUT.04 MOV #17.OUT.02 BIS #ERHARD.OUT.02 MOV #OUT.01 MOV #ERRMC.R2 MOV R2.OUT.RQ	
20 0037 0037 21 0037 22 0037 23 0037 24 0037 25 0037 26 0040 27 0040 28 0040 30 0040 31 0040	767 114000 771 024030 772 114000 774 104303 776 074025 777 117400 001 054021 002 104652 004 060011 005 104202 007 100652 011	002357 002357 002472 002443 000022 000020 000005		REPORT:	CALL CLR MOV BMI DEC BNE MOV XFC MOV MOV POP	REPERR ERRPOS DROPSU,R3 COREXT ERRCNT RECOVE U.MASK(R5),R2 DINIT #20,R2 R2,U.TIMO(R5) <r1,r0></r1,r0>	; DON'T TRY TO REPORT REAL TIME DRIVE STATE CLR ERRPOS ; CLEAR THE POS ; REPORT THE ERROR TO THE HOST ; CLEAR ERROR POSITION FLAG ; SEE IF MEGABIT REPORT OR UNIT IS TO BE DROPPED ; UNIT DROPPED - SKIP ERROR RECOVERY ; DECREMENT THE ERROR COUNT ; BRANCH IF ERROR COUNT NON-ZERO ; GET UNIT MASK FOR INIT ; INITILIZE THE DRIVE ; TIMEOUT VALUE FOR INIT ; SAVE TIMEOUT ; DISCARD THE TOP 2 VALUES ON THE STACK MOV (SP)+,R1	SITION
32 0040 33 0040 34 0040 35 0040 37 0040 38 0040 39 0040 40 0040 0040 41 0040	012 104267 013 104021 014 104207 016 114000 020 004027 021 024161 022 115003 023 014025 024 033771 025 025 104261 026 104267	003254 002472		RECOVE: COREXT: HNDEX:	TST BEQ BPL POP	R2,R1 #AFINIT,R0 DROPSU HNDEX RECOVR R3 COREXT REPORT <r1,r0></r1,r0>	MOV (SP)+,RO ; MAKE R1 NON-ZERO (DEFERRED CALL) ; NEXT MODULE CALLED IS AFINIT ; SUBUNIT IS NOT TO BE DROPPED ; BRANCH TO EXIT ; RECOVER FROM ERRORS ; SEE IF ERROR RECOVERY COMPLETED CORRECTLY ; IF NO ERRORS, BRANCH ; IF NOT, BRANCH ; RESTORE R1, RO MOV (SP)+,R1 MOV (SP)+,R0 ; RETURN TO CALLING PROGRAM	

1 2	004030				.SBTTL REPERR:	REPERR	- REPORT THE	ERROR	R TO THE HOST
3						REPORT	THE ERROR OR	MEGAB	BIT TRANSFER REPORT
67	004030 004032	104201 105651	000047 000034		•	MOV ADD	#U.SNUM,R1 U.SUBU(R5),R1	1:	POINT TO SUBUNIT NUMBERS ADD OFFSET TO SUBUNIT POINTERS
10	004034 004035 004040	105051 106200 014150	000011	001043		ADD CMP BEQ	R5,R1 #T4MXFR,OUT.2 MBXFER	29 ;	POINT TO ACTUAL SUBUNIT IN USE SEE IF MEGABIT TRANSFER REPORT IF SO, BRANCH
11	004041 004043 004045	104110 104307 014145	001011 002357			MOV MOV BEQ	(R1),0UT.03	•	SAVE IN OUTPUT AREA
14 15	004046 004050 004052	103207 105207 021173 115002	100000 001006			BIC ADD CALL TST	#100000.R0 #0UT.RQ,RO RTDS R2		IF NO REPORTING, BRANCH CLEAR 'ALLREADY VALID' BIT POINT TO OUTPUT BUFFER GET REAL TIME DRIVE STATE SEE IF ERROR OCCURRED
18 19	004054 004055 004057	054060 103201 004062	077674			BNE BIC BR	1\$ #077674,R1 2\$:	IF SO, BRANCH CLEAR UNUSED BITS BRANCH
21 22 23 24	004060 004062 004063 004065	104201 100271 115000 074135	177777 002357		1\$: 2\$:	MOV TST BMI	#-1,R1 R1,(R0)+ ERRPOS 4\$		FLAG AS ERROR MOVE TO OUTPUT BUFFER SEE IF STATUS VALID IF SO, BRANCH
25	004066 004066 004067	100467				PUSH	<r0,r4></r0,r4>	;	MOV RO(SP)
27 28	004070 004072 004074 004075	104203 104652 104237 104231	001501 000022			MOV MOV MOV	#CR.GST,R3 U.MASK(R5),R2 (R3)+,R0 (R3)+,R1	2 :	POINT TO GET STATUS COMMAND GET UNIT SDI SELECT MASK POINTS TO SDI COMMAND BUFFER LOAD BYTE COUNT
30 31 32	004076	050004 115001 054121				XFC TST BNE	SEND P1	:	SEND SDI COMMAND
33 34	004101	106203 074107	001532			CMP BMI	#LONG,R3 21\$		IF NOT, BRANCH SEE IF LONG TIMEOUT TO BE USED IF SO, BRANCH R4 HAS SHORT TIMEOUT
36	004104 004106	104654	000030			MOV BR	223	:	BRANCH
37 38 39		104654 104137 104631	000031		21\$: 22\$:	MOV MOV	U.SDIL (R5),R4 (R3),R0 1(R3),R1	4	R4 HAS LONG TIMEOUT POINT TO RECEIVE BUFFER
40 41 42	004114 004115 004116	060005 115001 014133	000001			XFC TST BEQ	RCV R1 3\$		NUMBER OF WORDS IN RESPONSE RECEIVE SDI RESPONSE SEE IF SDI RESPONSE RECEIVED SUCESSFULLY IF SO, BRANCH
43	004117 004120 004121	117404			8\$:	DE C BNE POP	R4 22\$ <r4,r0></r4,r0>		DECREMENT TIMEOUT VALUE IF TIMEOUT UNEXPIRED, BRANCH RESTORE R4
	004121	104264 104267							MOV (SP)+,R4 MOV (SP)+,R0
46 47 48 49	004127	104203 104202 100273 117402	177777		6\$:	MOV MOV DEC	#-1,R3 #7,R2 R3,(R0)+ R2		R3 CONTAINS 'UNABLE TO GET STATUS' R2 CONTAINS COUNT MOVE TO OUTPUT BUFFER DECREMENT COUNT
50	004131	054127 004145				BNE BR	6 \$ 7 \$: IF COUNT INCOMPLETE, BRANCH : BRANCH
52	004133	104264			3\$:	POP	<r4,r0></r4,r0>	:	RESTORE R4 MOV (SP)+,R4

5	004134	104267 104201	001577		4\$:	MOV	#ST+7,R1	;	R1 POINTS TO AFTER STATUS BUFFER)
5	4 004137 5 004141	104202	000007		5\$:	MOV MOV	#7,R2 -(R1),R3		MOVE STATUS WORD TO R3	
5	6 004142 7 004143 8 004144	100273 117402 054141				MOV DE C BNE	R3,(R0)+ R2 5\$:	MOVE TO OUTPUT BUFFER DECREMENT COUNT BRANCH IF COUNT INCOMPLETE	
50		104307	001006		7\$:	MOV BR	OUT.RQ.RO		MOVE REQUEST TO RO	
6	004150	104207	000011		MBXFER: BHRQ:	MOV MOV	#T4MXFR,R0 (R1),OUT.01	:	MOVE MEGABIT REQUEST NUMBER TO RO MOVE SUBUNIT NUMBER TO OUTPUT BUFFER	
6	3 004154 4 004155 5 004160	020751 104300 000000	001045	002472	HRQ:	CALL MOV RETURN	IN.01, DROPSU	:	SEE IF SUBUNIT TO BE DROPPED	

```
SBITL RECOVE - RECOVER FROM THE ERROR
                                                  RECOVR:
    004161
                                                             SET UP DRIVE AS IT SHOULD BE
                                                             PUSH
                                                                                                : SAVE RO
 6 004161
                                                                                                                                             MOV RO. - (SP)
                100467
    004161
                                                                                               : GET REAL TIME DRIVE STATE
  7 004162
                021173
                                                             CALL
                                                                        : SEE IF ERROR OCCURRED
  8 004163
                115002
                                                             TST
                                                                         R2
 9 004164
                                                             BNE
                054265
               102201
10 004165
                           000001
                                                             BIT
11 004167
                                                             BNE
12
13 004170
14 004172
15 004174
                104652
104207
104201
114003
                           000022
                                                             MOV
                                                             MOV
                                                             MOV
                           000007
15 004174
16 004176
17 004177
18 004200
19 004201
20 004202
21 004204
22 004206
23 004207
24 004210
25 004211
004211
004214
                                                             CLR
                100273
                                                             MOV
                117401
                                                              DEC
                054177
                                                              BNE
                104207
104201
060005
115001
054265
                                                             MOV
                           001570
                           000023
                                                              MOV
                                                              XFC
                                                             TST
                                                             BNE
                                                             HARDER
                104200
104070
104300
104300
104300
                           000062
                                                                                                                       MOV
                                                                                                                                   #ER1,0UT.04
                                       001012
                                                                                                                                   RO. OUT. 05
                                                                                                                       MOV
                                                                                                                                   ST.OUT.06
                                                                                                                       MOV
     004216
                           001570
                                       001014
    004216
004221
004224
004227
004232
004235
004240
004243
004246
004251
004256
004260
                           001571
001572
001573
                                                                                                                                   ST+1,0UT.07
                                                                                                                       MOV
                                       001015
                                                                                                                                   ST+2.0UT.08
ST+3.0UT.09
                                       001016
                                                                                                                       MOV
                104300
                                                                                                                       MOV
                                       001017
                                                                                                                                   ST+4,0UT.10
                104300
                           001574
                                                                                                                       MOV
                                       001020
                                                                                                                                   ST+5,0UT.11
                                                                                                                       MOV
                104300
                            001575
                                       001021
                                                                                                                                   ST+6,0UT.12
                                                                                                                       MOV
                104300
                            001576
                                       001022
                104200
101200
104200
104202
                                                                                                                                   #1,0UT.02
                                                                                                                       MOV
                            000001
                                       001010
                            001000
                                                                                                                       BIS
                                                                                                                                   #ERHARD.OUT.02
                                       001010
                                                                                                                       MOV
                                                                                                                                   #.,OUT.01
                            004251
                                       001007
                                                                                                                                   #ERRMC . R2
                                                                                                                       MOV
                            000014
                                                                                                                       MOV
                                                                                                                                  R2.OUT.RQ
                104020
                            001006
                                                             ENDERR
    004260
004263
004264
004265
004267
004270
004271
004272
004272
                                                                                                                      BIS #15, ERRPOS
                                                                                                                                                   : SET THE POSITION
                101200
104053
                            000015 002357
                                                                                                : MAKE SURE ERROR IS FLAGGED
                                                                         R5, R3
                                                              MOV
 27
28
29
30
31
32
33
                                                                                               : EXIT
                004365
104203
021204
115002
                                                              BR
                                                                         MODOKO
                                                                                               : POINT TO ONLINE COMMAND
                                                                         #CR.ONL.R3
                            001513
                                                  BONL:
                                                              MOV
                                                                                              : INITIATE SDI INTERCHANGE
: SEE IF ERROR OCCURRED
: IF NOT, BRANCH
: REPORT SECONDARY ERROR
                                                                         TALK
                                                              CALL
                                                                         R2
                                                              TST
                014276
                                                                         ONLOK
                                                              BEQ
                                                                         5.#SER2
                                                              CERROR
                104200
004365
104203
021204
                                                                                                       MOV #SER2,OUT.05
                            010124 001013
                                                                                              BRANCH TO ERROR LOOP

POINT TO GET STATUS

SEND SDI INTERCHANGE

SEE IF AN ERROR OCCURRED


BRANCH IF NO ERROR

REPORT SECONDARY ERROR
                                                              BR
                                                                         MODOKO
                                                                         #CR.GST.R3
     004276
                                                  ONLOK:
                                                              MOV
                            001501
                                                                         TALK
     004300
                                                              CALL
     004301
                 115002
                                                              TST
                                                                         R2
 38 004302
39 004303
                                                                         GSTOK
                014307
                                                              BEQ
                                                                         5.#SERO
                                                              CERROR
                                                                                                                       MOV #SERO,OUT.05
                104200
     004303
                           010054 001013
```

40 004306 41 004307 42 004310 43 004311 44 004312 45 004314 46 004316 47 004320 48 004322 49 004323 50 004324 51 004325	004365 024370 115002 054365 104301 103201 104010 104203 021204 115002 014331	001572 177400 001551 001455		GSTOK:	BR CALL TST BNE MOV BIC MOV CALL TST BEQ CERROR	MODOKO CHKSTA R2 MODOKO ST+ST.ERR,R1 #HIBYTE,R1 R1,DCLR #CR.CLR,R3 TALK R2 CLROK 5,#SER1	***************************************	INITIATE SDI INTERCHANGE SEE IF ANY ERRORS OCCURRED IF NOT, BRANCH REPORT SECONDARY ERROR
004325	104200	010100	001013					MOV #SER1,OUT.05
52 004330 53 004331 54 004333 55 004335 56 004337 57 004341	004365 104653 101203 104030 104203 021204	000023 177406 001547 001462		CLROK:	BR MOV BIS MOV MOV CALL	MODOKO U.WRIT(R5),R3 #177406,R3 R3,WRITBT #CR.MOD,R3 TALK		BRANCH TO ERROR LOOP GET WRITE PROTECTION BUTTON STATUS SET OTHER CHANGE MODE BITS MOVE TO CHANGE MODE COMMAND POINT TO MODE COMMAND INITIATE SDI INTERCHANGE
58 004342 59 004343	115002 014350			4	TST BEQ	R2 TSTRCB		SEE IF ANY ERRORS OCCURRED IF NOT, BRANCH
60 004344		0101/4	001017		CERROR	5,#SER3	:	REPORT SECONDARY ERROR
004344	104200 004365	010146	001013		BR	MODOKO	:	BRANCH TO ERROR LOOP #SER3,OUT.05
62 004350	104303	004367		TSTRCB:	MOV	RCBREQ,R3	:	SEE IF RECALIBRATE REQUESTED
63 004352 64 004353	014364 104203	001532			BEQ MOV	MODOK #CR.INR,R3	•	IF NOT, BRANCH POINT TO INITIATE RECALIBRATE COMMAND
65 004355	021204				CALL	TALK	:	SEND INITIATE RECALIBRATE COMMAND
66 004356 67 004357	115002 014364				TST BEQ	R2 MODOK	:	SEE IF ERROR OCCURRED IF NOT BRANCH
68 004360					CERROR	5.#SER7	:	SEE IF ERROR OCCURRED IF NOT, BRANCH NOTE SECONDARY ERROR
004360	104200	010275	001013		BR	CHKEXT		BRANCH #SER7,OUT.05
70 004364	114003			MODOK:	CLR	R3	:	FLAG AS RECOVERED
71 004365 004365	104267			MODOKO:	POP	R0	:	RESTORE R1
72 004366	000000				RETURN		:	RETURN TO CALLING PROGRAM MOV (SP)+,R0
73 74 004367	000000			RCBREQ:	.WORD	0	:	RECALIBRATE REQUESTED FLAG

1 2	004370				.SBTTL CHKSTA:	CHKSTA	- CHECK STATUS F	FOR ANY ERRORS THAT NEED RECOVERY	
5456789						OROP THE	PORT OR RUN SWI E DRIVE AND DISC HE WRITE PROTECT	E DRIVE AND TAKE THE NECESSARY ACTION ITCH IS OUT, OR THE SPINDLE IS NOT READY, CONNECT) IF RR IS SET, RECALIBRATE THE DRIVE, T SWITCH SETTINGS IN U.WRIT(R5) SO CHANGE MODE SUBUNIT(S) IF REQUESTED	
10	004370 004372 004374	104207 103307 102207	177777 001571 000023			MOV BIC BIT	#-1,RO SI+SI.STA,RO #SI PSISI SPISI	: SET UP FOR COMPLEMENT OF STATUS : RO HAS STATUS T.RU.RO : SEE IF ANY FATAL STATES EXIST	
13	004376	014446				BEQ	EVRYOK	; IF NOT, BRANCH ; MOVE HOST REQUEST NUMBER TO RO	
15	004377	104207	000014			MOV DEVFTL	#ERRMC,RO	REPORT SWITCH OUT OR SPINDLE NOT READY	
	004401 004404 004407 004412 004415 004417	104200 104200 101200 104200 104202 104020	010455 000144 000400 004412 000014 001006	001012 001010 001010 001007				MOV #ER100.0UT.04 MOV #100.0UT.02 BIS #FTLDEV.OUT.02 MOV #.,OUT.01 MOV #ERRMC,R2 MOV R2,OUT.RQ	
16	004421	104200	100006	002357		MOV	#100006,ERRPOS	; STATUS VALID, START AT OUT.06	
18 19 20 21	004427	024030 104203 021204 115002 014436	001525			CALL MOV CALL TST BEQ CERROR	#CR.DIS,R3 TALK R2	REPORT ERROR POINT TO DISCONNECT COMMAND SEND DISCONNECT COMMAND SEE IF ANY ERRORS OCCURRED IF NOT, BRANCH NOTE SECONDARY ERROR	
	004432	104200	010254	001013				MOV #SER6,OUT.05	
24 25 26 27	004435 004436 004440 004442 004444 004445	004500 104653 101203 100653 104032 004500	000033 100000 000033		OK2DRP:	BR MOV BIS MOV MOV BR	R3,U.PARM(R5) R3,R2	; BRANCH ; GET NEXT UNIT POINTER ; FLAG ENTIRE UNIT AS DROPPED ; SAVE DROP FLAG ; FLAG AS ERROR (NOT REALLY) ; BRANCH	
29 30	004446 004447 004451	114003 102207 054454	000100		EVRYOK:		R3	; FLAG RECALIBRATE AS NOT REQUIRED ; SEE IF DRIVE IS TO BE RECALIBRATED ; IF NOT, BRANCH	
32 33 34	004452 004454 004456	104203 104030 104307	177777 004367 001571		NORCLB:	MOV MOV	#-1,R3 R3,RCBREQ SI+SI.MOD,RO	; FLAG RECALIBRATE AS REQUESTED ; SAVE RECALIBRATE FLAG ; GET MODE BITS	
	004460 004461 004463 004465	110707 103207 104642 102202	177417 000000 020000			SWAB BIC MOV BIT	RO #LBHINB,RO S.PARM(R4),R2 #DCYLS,R2	; MOVE WRITE PROTECT BUTTON STATUS TO LO BYTE : CLEAR UNUSED BITS : GET SUBUNIT PARAMETER BITS : SEE IF IN DIAGNOSTIC AREA	
	004467 004470 004472	014473 115000 074475	002444			BEQ TST BMI	1\$ M.PARM 2\$; IF NOT, BRANCH ; SEE IF INITIAL WRITE IN PROGRESS ; IF SO, BRANCH	
42 43 44	004473 004475 004477	101657 100657 114002	000032		1\$: 2\$:	MOV CLR	U.WPRT(R5),R0 R0,U.WRIT(R5) R2	; SET WRITE PROT BITS FOR READ ONLY DRIVES ; SAVE WRITE PROTECT STATUS FOR CHANGE MODE ; FLAG AS NO ERRORS	
45	004500	000000			CHKEXT:	RETURN		; RETURN TO CALLING PROGRAM	

2 004501			.SBTTL REDSET:	*****	**** NON-OVERLAY N	MODULE REDSET - READ/WRITE SETUP MODULE
345				SETUP	FOR THE READ ERROF	R RECOVERY LEVELS
6 004501 7 004503 8 004505 9 004507 10 004510 11 004512 12 004513	104652 100652 104207 114001 100651 114002 003127 004515	000026 000024 000004 000016	• AREAO	MOV MOV CLR MOV CLR - BR =	U.MLEV(R5),R2 R2,U.ELEV(R5) #RDWRT,R0 R1 R1,U.NSEC(R5) R2 JMPRET .+1	GET MAXIMUM ERROR REVCOVERY LEVEL STORE IN CURRENT LEVEL RDWRT NEXT MODULE CALLED CALL IMIDIATELY NO SECTORES SUCCESSFULLY READ/WRITTEN NO ERRORS RETURN TO SEQUENCER

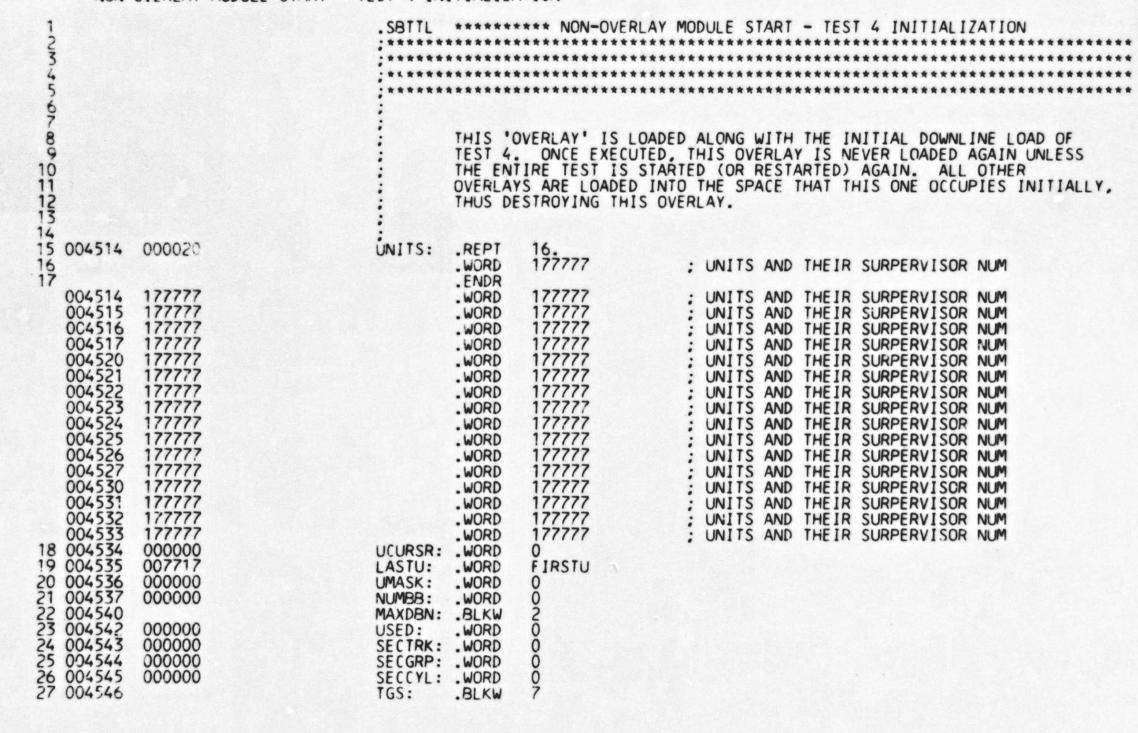

2 (004555	027467 027543			START:	CALL	GMPARM : GETU :	GET MASTER PARAMETERS GET ALL UNITS TO TEST	i.
3 (004557	024644				CALL	BLDUNT ;	BUILD UNIT AND SUBUNIT PARAMETERS	
4	004560	025527	002/77			CALL	TROOT :	FILL OUT UNIT AND SUBUNIT PARM'S, GET SU	UBUNIT CHAR
2	004561 004563	104307 107207	002473			MOV SUB	MEMPOL.RO : #BUFARA,RO :	RO HAS POINTER TO FREE MEMORY SUBTRACT END OF CODE FROM FREE MEMORY	
7	004565	104073	000031			MOV	RO, R3 ;	SAVE AMOUNT OF FREE MEMORY	
8	004566	114001				CLR	R1 :	CLEAR COUNT	
91	004567	107207	000424		1\$:	SUB	#RBUFLN+LINKLN,RO	; SUBTRACT NEEDED MEM FOR READ	
10 (004571	074574				BMI	2 \$ R1 :	IF NO MORE MEMORY, BRANCH	
11 (004572 004573	115401				INC	R1 :	INCREMENT COUNT	
12	004575	004567	000757		20.	BR	1\$	LOOP	
13	004574 004576	104010	002353		2\$:	MOV BNE	R1.SECMAX :	SAVE IN SECTOR MAXIMUM IF NO ERROR, BRANCH	
15	004577	054631				DEVFTL	32	INSUFFICENT MEMORY FOR READ/WRITE	
	004577	104200	004444	001012		DE 11. 12	•	MOV #ER32,OUT.04	
(004602	104200	000040	001010				MOV #32,0UT.02	
(004605	101200	000400	001010				BIS #FTLDEV_OUT.02	
(004610	101200 104200 104202	004610	001007				MOV #.,OUT.01	
	004613	104202	000014					MOV #ERRMC,R2	
	004615 004617	104020 104200	001006 177777	001011		MCV	#177777,0UT.03 ;	NOT ASSOCIATED WITH ANY UNIT	
17	004622	104207	000014	001011		MOV	#ERRMC,RO :	SET UP FOR REPORT	
	004624	020751	000014			CALL		REPORT ERROR	
19	004625	104207	000016			MOV	#DONE,RO :	END TEST	
20 (004627	020751				CALL	HOSTRQ :	SEND END-OF-TEST TO HOST	
21 (004630	060021				XFC	EXIT :	TERMINATE DM	
22	004631	114001	000/10		3\$:	CLR	R1	CLEAR COUNT	
23	004632	107203	000410		10.	SUB	#WBUFLN+LINKLN,R3	SUBTRACT NEEDED MEM FOR READ	
55	004634 004635	115401 107203	000007		4\$:	INC SUB	R1 #LINKLN,R3	INCREMENT COUNT SUBTRACT LINK LENGTH FROM MEMORY	
	004637	074641	000007			BMI	5\$;	IF MEMORY EXHAUSTED, BRANCH	
27	004640	004634				BR	48	LOOP	
	004641	104010	002354		5\$:	MOV	R1. CHNMAX :	SAVE IN SECTOR MAXIMUM	
	004643	002777				BR	ROOT :	START EXERCISE	

1 2	004644			.SBTTL BLDUNT:	BLDUNT	- BUILD THE UN	IT PARAMETER BLOCK	
4					BLDUNT	WILL BUILD THE	UNIT AND SUBUNIT PARAMETERS	
10	004653	104202 104020 104204 104147 074730 102207	000001 004536 004514 040000	ULOP:	MOV MOV MOV BMI BIT	#1,R2 R2,UMASK #UNITS,R4 (R4),R0 NOU #40000,R0	; PORT 1 MASK ; SAVE MASK ; POINT TO UNITS TO BE TESTED TABLE ; GET UNIT TO BE TESTED ; IF FIRST UNIT NOT TO BE TESTED, BRANCH ; SEE IF FIRST SUBUNIT TO BE TESTED	
12 13 14 15	004656 004657 004661 004663	014676 104647 102207 014676	000001 040000		BEQ MOV BIT BEQ	3\$ 1(R4),R0 #40000,R0 3\$; IF SO, BRANCH ; GET SECOND SUBUNIT INFORMATION ; SEE IF THIS SUBUNIT IS USED ; IF SO, BRANCH	
17	004664 004666 004670 004671 004673	104647 102207 014676 104647 102207 054730	000002 040000 000003 04000C		MOV BIT BEQ MOV BIT	2(R4),R0 #40000,R0 3\$ 3(R4),R0 #40000,R0	; SEE IF THIRD SUBUNIT TO BE TESTED ; CHECK TESTING BIT ; IF IT IS TO BE TESTED, BRANCH ; SEE IF FOURTH SUBUNIT TO BE TESTED ; TEST TESTING BIT	
22 23 24	004675 004676 004700 004701	104207 025072 100707	000061 177632	3\$:	BNE MOV CALL MOV	NOU #TLEN.U.RO GETMEM RO.aLASTU	; IF UNIT (THE WHOLE THING) NOT TO BE TESTED, BRANCH ; RO HAS UNIT DATA STRUCTURE LENGTH ; GET MEMORY ; LINK LAST POINTER TO THIS ONE	
26	004703 004705 004707 004711 004711	104070 100672 104203 100467	004535 000022 000004		MOV MOV MOV PUSH	RO,LASTU R2,U.MASK(RO) #4,R3 RO	; SAVE POINTER TO THIS ONE ; SAVE PORT SELECT MASK ; MAXIMUM OF FOUR SUBUNITS ; SAVE POINTER TO UNIT INFORMATION MOV RO,-(SP)	
30 31 32	004712 004714 004715 004717	105207 104245 102205 014722	000047	1\$:	ADD MOV BIT BEQ	#U.SNUM,RO (R4)+,R5 #40000,R5 2\$; RO WILL POINT TO SUBUNIT NUMBERS ; MOVE SUBUNIT NUMBER TO UNIT PARAMETERS ; SEE IF SUBUNIT TO BE TESTED ; IF SO, BRANCH	
34 35 36	004720 004722 004723 004724 004725	104205 100275 117403 054714	177777	2\$:	MOV MOV DEC BNE POP	#-1,R5 R5,(R0)+ R3 1\$ R0	; FLAG SUBUNIT AS NOT TESTED ; MOVE TO SUBUNIT NUMBERS ; DECREMENT COUNT ; IF ALL SUBUNITS ARE FILLED IN, BRANCH ; RESTORE RO	
38 39 40	004725 004726 004730 004732	104267 107204 104302 110202 104020	000004 004536 004536	NOU:	SUB MOV ROL MOV	#4,R4 UMASK,R2 R2 R2,UMASK	RESTORE NO MOV (SP)+,RO R4 NOW POINTS TO BEGINNING OF UNIT HANDLED GET UNIT PORT MASK ROTATE TO NEXT PORT SAVE MASK	
42 43 44 45	004735 004737 004741 004742 004744	105204 106204 054652 104203 100703	000004 004534 007717 177567		ADD CMP BNE MOV MOV	#4,R4 #UNITS+16.,R4 ULOP #FIRSTU,R3 R3,aLASTU	; R4 POINTS TO NEXT UNIT INFORMATION ; SEE IF ALL UNITS SET UP ; IF ALL UNITS NOT SETUP, BRANCH ; COMPLETE RING ; LAST UNIT NOW POINTS TO FIRST	
47 48 49	004746 004750 004750 004751	104207 100467 024763	007717	SUSETL:	MOV PUSH CALL	#FIRSTU,RO RO BLDSUS	; RO POINTS TO FIRST UNIT PARAMETERS ; SAVE POINTER TO UNIT PARAMETERS MOV RO,-(SP) ; BUILD SUBUNIT PARAMETERS	
	004752 004752 004753	104267	000000		POP	RO U.NEXT(RO),RO	; RESTORE UNIT POINTER MOV (SF)+,RO	
52	004755	103207	170000 007717		BIC	#*CHBHINB.RO #FIRSTU.RO	CLEAR UNUSED BITS SEE IF THE ENTIRE RING IS SET UP	

UDAT4 DISK EXERCISER MACRO X04.00 9-JUL-81 01:12:03 PAGE 61-1 BLDUNT - BUILD THE UNIT PARAMETER BLOCK

54 004761 054750 55 004762 000000 BNE SUSETL RETURN

: IF NOT, BRANCH

2 004763	.SBTTL BLDSUS - BUILD ALL SUBUNIT PARAMETER BLDSUS:	BLOCKS ON THIS UNIT
4	BUILD ALL SUBUNIT PARAMETERS	
6 004763 104204 000001 7 004765 105074	MOV #U.SUBP.R4 : R4 WILL POI ADD RO.R4 : R4 POINTS T	NT TO SUBUNIT POINTERS O SUBUNIT POINTERS
8 004766 104203 000047 9 004770 105073	MOV #U.SNUM.R3 : R3 WILL POI	NT TO SUBUNIT NUMBERS O SUBUNIT NUMBERS
10 004771 104205 000004 11 004773 104237		BER OF SUBUNITS
12 004774 075007 13 004775 104070 004534 14 004777	BMI NOSUN ; IF SUBUNIT	INACTIVE, BRANCH SUBUNIT NUMBER
004777 100463 005000 100464 005001 100465		MOV R3,-(SP) MOV R4,-(SP) MOV R5,-(SP)
15 005002 025015 16 005003	CALL BLDSUB ; BUILD THE S POP <r5,r4,r3> ; RESTORE R3</r5,r4,r3>	UBUNIT PARAMETERS - R5
005003 104265 005004 104264 005005 104263		MOV (SP)+,R5 MOV (SP)+,R4 MOV (SP)+,R3
17 005006 005011 18 005007 104207 177777 19 005011 100247 20 005012 117405 21 005013 054773	BSUSEX: MOV RO.(R4)+ : MOVE POINTE DEC R5 : DECREMENT C BNE SLOP : IF UNEXPIRE	D, BRANCH
22 005014 000000	RETURN : RETURN TO C	ALLING PROGRAM

```
SBTTL BLDSUB - BUILD A SUBUNIT PARAMETER BLOCK
BLDSUB:

BLDSUB WILL BUILD THE SUBUNIT PARAMETER BLOCK

BLDSUB WILL BUILD THE SUBUNIT PARAMETER BLOCK

CALL BLDBES : SET UP BEGIN/END SETS
CALL BLDBB : SET UP BAD BLOCKS
CALL BLDBB : SET UP BAD BLOCKS
CALL GETMEM : GET MEMORY FOR SUBUNIT PARAMETERS
O05020 025077
CALL COPYSU : COPY ALL SUBUNIT PARAMETERS
RETURN
```

UDAT4 DISK EXERCISER MACRO X04.00 9-JUL-81 01:12:03 PAGE 63 BLDSUB - BUILD A SUBUNIT PARAMETER BLOCK

1 2 005022				.SBTTL BLDBES:	BLDBES	- FIND HOW MANY	v wol	RDS NEEDED FOR THE BEGIN/END OR TRACK/GROUP SETS
345					COMPUTE	THE BEGIN/END	SET	AREA NEEDED
6 005022	104300	004534	001007		MOV MOV	UCURSR, OUT. 01 #14UPRM, RO	:	MOVE SUBUNIT NUMBER TO COMMUNICATION AREA MOVE REQUEST NUMBER TO RO
8 005027 9 005030 10 005033	020751 102200 055041	000040	001045		CALL BIT BNE	#BEUSED, IN. 01		REQUEST INFORMATION FROM HOST SEE IF BEGIN/END SETS ARE USED IF SO, BRANCH
11 005034 12 005036	104207 105307	000016 001053			MQV ADD	#S.TGSS+1,R0 IN.07,R0		MONIMUM CONFIGURATION LENGTH ADD NUMBER OF T/G SETS
13 005040 14 005041 15 005043	005052 104207 104301	000011		2\$:	BR MOV MOV	NOBES #S.BESS.RO IN.03.R1		BRANCH MINIMUM CONFIGURATION WORD COUNT GET NUMBER OF BEGIN/END SETS
16 005045 17 005046	055047				BNE	1\$ R1		IF NON-ZERO, BRANCH MAKE R1 1
18 005047 19 005050 20 005051	105011 105011 105017			1\$:	ADD ADD	R1,R1 R1,R1 R1,R0		MAKE B/E SETS * 2 MAKE B/E SETS * 4 ADD TO LENGTH OF SUBUNIT PARAMETERS
21 005052	000000			NOBES:	RETURN	NI,NV	:	RETURN TO CALLING PROGRAM

2 005053				.SBTTL BLDBB:	BLDBB	- FIND HOW MANY	Y WORDS NEEDED FOR THE BAD BLOCKS	
4					COUNT T	HE BAD BLOCK PAR	ARAMETERS	
6 005053	100/67				PUSH	RO	; SAVE SUBUNIT LENGTH MOV RO(SI	D)
005053 7 005054 8 005057 9 005061 10 005062	100467 104300 104207 020751	004534 000005	001007		MOV MOV CALL POP	UCURSR,OUT.01 #T4BB1,R0 HOSTRQ R0	; MOVE SUBUNIT NUMBER TO COMMUNICATION ARE; ; MOVE REQUEST NUMBER TO RO ; REQUEST INFORMATION FROM HOST ; RESTORE SUBUNIT LENGTH	
005062 11 005063 12 005065 13 005067	104267 104301 104010 105011	001045 004537			MOV MOV ADD	IN.01,R1 R1,NUMBB R1,R1	GET NUMBER OF BAD BLOCKS ; SAVE NUMBER OF BAD BLOCKS ; MAKE BAD BLOCKS * 2	RO
14 005070 15 005071	105017			NOBBS:	RETURN	R1,R0	: ADD TO SUBUNIT DATA STRUCTURE LENGTH : RETURN TO CALLING PROGRAM	

SBTTL GETMEM:

SBTTL GETMEM - ALLOCATES MEMORY FOR UNIT AND SUBUNIT BLOCK AND SUBUNIT PARAMETERS

RETURN A BLOCK OF MEMORY

SUB RO, MEMPOL ; SUBTRACT REQUESTED LENGTH FROM MEMOY POOL

MOV MEMPOL, RO ; RETURN TO CALLING PROGRAM

RETURN RETURN TO CALLING PROGRAM

56 005211 57 005212 58 005213 59 005215	100114 104224 100614 105201	000001			MOV MOV ADD	R4,(R1) (R2)+,R4 R4,1(R1) #4,R1	: SAVE : GET HI ORDER ENDING CYL : SAVE : R1 POINTS AFTER BEGIN/END CYLINDERS
60 005217 61 005220 62 005222 63 005223	005241 100675 104224 105044	000000		25:	BR MOV MOV ADD	(OPBB R5.S.PARM(RO) (R2)+,R4 R4,R4	CONTINUE SAVE IN SUBUNIT AREA GET BEGIN/END SET COUNT MULTIPLY BEGIN/END SETS BY 4 WORDS
64 005224 65 005225 66 005226 67 005230 68 005231 69 005232 70 005233	105044 055230 104204 104225 100215 117404	000004		1\$:	ADD BNE MOV MOV MOV	R4,R4 1\$ #4,R4 (R2)+,R5 R5,(R1)+	: IF BEGIN/END SET COUNT NON-ZERO, BRANCH : MAKE ONE BEGIN END SET : MOVE BEGIN/END SET TO PARAMETERS : MOVE BEGIN/END SET TO PARAMETERS
71 005234 72 005235 73 005237 74 005240	055230 104415 101205 100215 025322	100000			DEC BNE MOV BIS MOV CALL	R4 1\$ -(R1),R5 #100000,R5 R5,(R1)+ SORTBE	DECREMENT COUNT IF UNEXPIRED, BRANCH MOVE EOL TO BEGIN/END LIST SET HI BIT TO FLAG EOL SAVE SORT THE BEGIN/END SETS IN ASCENDING ORDER
75 0C5241 005241 76 005242 77 005245 78 005247 79 005250	100467 104300 104207 020751	004534 000005	001007	(OPBB:	MOV MOV CALL POP	UCURSR, OUT. 01 #T4BB1, RO HOSTRO RO	; SAVE RO MOV RO,-(SP) MOVE TO COMMUNICATION AREA MOVE REQUEST NUMBER TO RO REQUEST INFORMATION FROM HOST RESTORE RO
005250 80 005251 81 005253 82 005255 83 005256	104267 104202 104304 015314 100671	001046 004537 000010			MOV MOV BEQ MOV	#IN.02,R2 NUMBB,R4 NOBB R1,S.BADP(R0)	; RESTORE RO ### MOV (SP)+,RO ; R2 POINTS AT BAD BLOCKS ; R4 IS NUMBER OF BAD BLOCKS ; IF NO BAD BLOCKS, BRANCH ; MOVE POINTER TO BAD BLOCKS TO SUB PARAM
84 005260 85 005261 86 005263 87 005264	114004 106204 055276	000016		BBLOP:	CLR CMP BNE PUSH	R4 #14.,R4 NOEXTR R0	; START LOOP AT ZERO ; SEE IF SECOND BLOCK NEEDED ; IF NOT, BRANCH ; SAVE RO
005264 88 005265 89 005270 90 005272 91 005273	100467 104300 104207 020751	004534 000006	001007		MOV MOV CALL POP	UCURSR,OUT.01 #T4BB2;R0 HOSTRQ R0	; SAVE IN COMMUNICATION AREA ; LOAD REQUEST NUMBER ; REQUEST FURTHER BLOCKS FROM HOST ; RESTORE RO
92 005274 93 005276 94 005277 95 005300 96 005301	104267 104202 104225 100215 104225 100215 115404	001045		NOEXTR:	MOV MOV MOV	#IN.01,R2 (R2)+,R5 R5,(R1)+ (R2)+,R5 R5,(R1)+	POINT R2 TO BAD BLOCKS GET BAD BLOCK SAVE BAD BLOCK GET BAD BLOCK SAVE BAD BLOCK INCREMENT R4
97 005302 98 005303 99 005305 100 005306 101 005307 102 005311	106304 055261 104415 101205 100215	100000			INC CMP BNE MOV BIS MOV	R4 NUMBB,R4 BBLOP -(R1),R5 #100000,R5 R5,(R1)+	; SEE IF ALL BLOCKS COPIED ; IF NOT, BRANCH ; GET LAST BAD BLOCK ; FLAG AS EOL ; SAVE EOL
103 005312 104 005313 105 005314 106 005316 107 005317 108 005321	025414 005316 100674 114004 100674 000000	000010 000005		NOBB: (PYBEX:	CALL BR MOV CLR MOV RETURN	SORTBB CPYBEX R4.S.BADP(R0) R4 R4.S.SCHR(R0)	; SORT THE BAD BLOCKS IN ASCENDING ORDER ; BRANCH ; FLAG AS NO BAD BLOCKS ; CLEAR R4 ; FLAG CHARACTERISTICS AS NOT YET DEFINED ; RETURN TO CALLING PROGARM

1 2	005322			.SBTTL SORTBE:	SORTBE -	- SORT THE BEGINA	/EN	D SETS IN ASCENDING ORDER
4					SORT THE	BEGIN/END SETS	IN	ASCENDING ORDER
678	005322 005324 005325	104672 075346 104202	000014		MOV BMI MOV	4\$ #S.BESS,R2	:	SEE IF ONLY ONE BEGIN END SET IF SO, EXIT (ALLREADY SORTED) R2 WILL POINT TO START OF BEGIN/END SETS
10 11 12 13	005327 005330 005331 005333 005334	105072 104023 105203 025347 045336	000004	1\$: 2\$:	ADD MOV ADD CALL BCC	RO,R2 R2,R3 #4,R3 CBES2 3\$:	R2 POINTS TO BEGIN/END SETS R3 WILL POINT TO NEXT BEGIN/END SET R3 POINTS TO BEGIN/END SETS COMPARE THE TWO BEGIN/END SETS IF R2->B/E <= R3->B/E THEN ALLREADY IN ORDER
	005335 005336 005340	025364 104635 035331	000003	3\$:	CALL MOV BPL	SWAPBE 3(R3),R5 2\$		SWAP TE BEGIN/END SETS SEE IF R3->END-OF-LIST IF NOT, BRANCH
19		105202 104625 035330 000000	000004	4\$:	ADD MOV BPL RETURN	#4,R2 3(R2),R5 1\$:	R2->NEXT BEGIN/END SET SEE IF R2->END-OF-LIST IF NOT, BRANCH RETURN TO COPYSU
21 22 23 24 25 26	005347			CBES2:	24 BII (COMPARE FOR BEGIN	W/F	ND SET SORTING
26	0053/7	10/63/	000007	:				
28	005355	104634 103204 104625 106045	000003 177400 000003		MOV BIC MOV CMP	3(R3),R4 #HIBYTE,R4 3(R2),R5 R4,R5	:	GET WORD THAT R3 POINTS TO STRIP OFF UNUSED BITS GET OTHER WORD TO COMPARE COMPARE
31 32 33 34	005356 005357 005361 005363	055363 104625 106635 000000	000002 000002	1\$:	BNE MOV CMP RETURN	1\$ 2(R2),R5 2(R3),R5	:	IF DIFFERENCE IS FOUND, BRANCH GET OTHER WORD TO COMPARE COMPARE RETURN TO SORTBE

2 005364			.SBTTL SWAPBE:	SWAPBE	- IF BEGIN/END	SETS	S OUT OF ORDER, SWAP	
5				SWAP TH	E BEGIN/END SE TO BY R3, KEE	T PO	INTED TO BY R2 WITH THE BEGINTACT	N/END SET
005365	100461			PUSH	<r1,r2,r3></r1,r2,r3>	;	SAVE POINTERS	MOV R1,-(SP) MOV R2,-(SP)
8 005367 9 005371 10 005372 11 005373 12 005374 13 005375 14 005376 15 005377 16 005400 17 005401 18 005402 19 005404 20 005405 21 005406 22 005407 23 005410 005410	100463 104201 104124 104135 100234 100225 117401 055371 104124 104135 104051 103205 107051 101014 100134 100125	177400	18:	MOV MOV MOV DEC BNE MOV MOV BIC SUB BIS MOV POP	#3,R1 (R2),R4 (R3),R5 R4,(R3)+ R5,(R2)+ R1 1\$ (R2),R4 (R3),R5 R5,R1 #HIBYTE,R5 R5,R1 R1,R4 R4,(R3) R5,(R2) <r3,r2,r1></r3,r2,r1>		SET UP LOOP COUNT GET WORD FROM SET GET WORD FROM OTHER SET SWAP WORD SWAP WORD DECREMENT COUNT LOOP IF INCOMPLETE GET WORD FROM SET GET WORD FROM OTHER SET MOVE TO TEMP STORAGE STRIP OFF END-OF-LIST FLAG, R1 CONTAINS END-OF-LIST FLAG R4 NOW HAS END-OF-LIST FLAG SWAP WORD (AND EOL FLAG, IF SWAP WORD RESTORE THE REGISTERS	G. IF ANY
005412	104261			RETURN			RETURN TO SORTBE	MOV (SP)+,R1

	2 005414			.SBTTL SORTBB:		- SORT THE BAD E	BLOCKS IN ASCENDING ORDER
	4				SORT TH	E BAD BLOCKS IN	ASCENDING ORDER
	6 005414	104672 015440	000010	•	MOV BEQ	S.BADP(RO),R2	GET THE BAD BLOCK POINTER ; IF NO BAD BLOCKS, BRANCH
	8 005417 9 005421	104625	000001		MOV BMI	1(R2),R5	; SEE IF ONLY ONE BAD BLOCK
	10 005422	104023	000002	1\$: 2\$:	MOV ADD	R2,R3 #2,R3	; IF SO BRANCH (ALLREADY SORTED) ; R3 WILL POINT AT NEXT BAD BLOCK ; R3 POINTS TO NEXT BAD BLOCK
1	12 005425	025441	000002	20.	CALL	CBB2 3\$	COMPARE THE TWO BLOCKS IF IN ASCENDING ORDER, BRANCH
	14 005427 15 005430	025456	000001	3\$:	CALL	SWAPBB 1(R3),R5	; SWAP THE BAD BLOCKS ; SEE IF END-OF-LIST
	16 005432	035423		J	BPL	2\$: IF NOT, BRANCH
1	17 005433 18 005435	105202	000002 000001		MOV	#2,R2 1(R2),R5	RE POINTS TO NEXT BAD BLOCK
2	20 005440	000000		4\$:	RETURN	15	RETURN TO COPYSU
2	2 005//1			CDD2.			
2	24			:	2/ 511	5040405 500 040	anae 1
-	6				24 BII	COMPARE FOR BAD	BLUCKS
		104634	000001 177400		MOV	1(R3),R4 #HIRYTE R4	; GET WORD THAT R3 POINTS TO
1	29 005445	104625	000001		MOV	1(R2),R5	; GET OTHER WORD TO COMPARE
	31 005451	106045	177400		CMP	R4.R5	: COMPARE
	33 005453	104125			MOV	(R2),R5	; GET OTHER WORD TO COMPARE
	34 005454 35 005455	106135		15:	CMP RETURN	(R3),R5	: COMPARE : RETURN TO SORTBE
	18 005435 19 005437 20 005440 21 22 23 005441 24 25 26 27 005441 28 005443 29 005445 30 005451 32 005452 33 005453 34 005454	104625 035422 000000 104634 103204 104625 103205 106045 055455 104125 106135	000001 000001 177400	CBB2:	MOV BPL RETURN 24 BIT MOV BIC MOV BIC CMP BNE MOV CMP	1(R2),R5 1\$ COMPARE FOR BAD 1(R3),R4 #HIBYTE,R4 1(R2),R5 #HIBYTE,R5	; SEE IF END-OF-LIST ; IF NOT, BRANCH ; RETURN TO COPYSU BLOCKS ; GET WORD THAT R3 POINTS TO ; STRIP OFF UNUSED BITS ; GET OTHER WORD TO COMPARE ; STRIP OFF THE UNUSED BITS ; COMPARE ; IF DIFFERENCE IS FOUND, BRANC ; GET OTHER WORD TO COMPARE ; COMPARE ; COMPARE

2 005456			.SBTTL SWAPBB:	SWAPBB	- IF BAD BLOCK	CS OUT OF ORDER, SWAP
4				SWAP TH	E BAD BLOCKS,	RETAINING THE END-OF-LIST POINTER AT THE END
6 005456 005456	100461		•	PUSH	R1	; SAVE R1 MOV R1,-(SP)
7 005457 8 005460 9 005461 10 005462	104124 104135 100134 100125			MOV MOV MOV	(R2),R4 (R3),R5 R4,(R3) R5,(R2)	GET LO ORDER BAD BLOCK OF 1ST SET GET LO ORDER BAD BLOCK OF 2ND SET SWAP
11 005463 12 005465 13 005467	104624 104635 104051	000001 000001		MOV MOV MOV	1 (R2),R4 1 (R3),R5 R5,R1	GET HI ORDER BAD BLOCK OF 1ST SET GET HI ORDER BAD BLOCK OF 2ND SET MOVE TO R1
14 005470 15 005472 16 005473	103205 107051 101014	177400		BIC SUB BIS	#HİBYTE,R5 R5,R1 R1,R4	RI CONTAINS END-OF-LIST FLAG, IF ANY PUT END-OF-LIST FLAG IN R4, IF ANY
17 005474 18 005476 19 005500 005500	100634 100625 104261	000001		MOV MOV POP	R4,1(R3) R5,1(R2) R1	: SWAP : SWAP : RESTORE R1 MOV (SP)+,R1
20 005501	000000			RETURN		: RETURN TO SORTBB

2 005502			.SBTTL SORTIG:	SORTIG	- SORT THE TRA	ACK/G	GROUPS IN ASCENDING ORDER
4				SORTIG	WILL SORT THE	TRAC	CKS OR GROUPS IN ASCENDING ORDER
6 005502	100461			PUSH	R1	:	: SAVE R1 MOV R1,-(SP)
7 005503 8 005504	104115		1\$:	MOV BMI	(R1),R5	•	: GET START OF LIST : IF NEGATIVE, WHOLE LIST IS SORTED, EXIT
9 005505	104012		2\$:	MOV	R1,R2		REPOINTS TO NEXT LIST MEMBER
11 005507 12 005510	104125			MOV MOV	(R2),R5 R5,R4		GET NEXT MEMBER
13 005511 14 005513	103205	177400		SUB	#HIBYTE,R5 R5,R4	:	: CLEAR END-OF-LIST FLAG (IF ANY) : SAVE END-OF-LIST FLAG (IF ANY)
15 005514 16 005515	106115 075521			CMP	(R1),R5 3\$:	: SEE IF THE MEMBERS ARE IN ORDER : IF SO, BRANCH
17 005516 18 005517	101114			MOV	(R1),R4 R5,(R1)	:	COPY START OF LIST TO R4, RETAINING EOL FLAG
19 005520 20 005521	100124		3\$:	MOV	R4, (R2) (R2), R5	:	: SWAP : GET MEMBER THAT SORT POINTER POINTS TO
21 005522 22 005523	035506			BPL INC	2 \$ R1		: IF NOT END-OF-LIST, BRANCH : POINT TO NEXT START OF LIST
23 005524 24 005525 005525	005503		4\$:	BR POP	1 \$ R1	:	: LOOP : RESTORE R1 MOV (SP)+,R1
25 005526	000000			RETURN		:	: RETURN TO CALLING PROGRAM

UDAT4	DISK EXERCISE	R MACRO	X04.00	9-JUL-81	01:12:03 PAGE	73
TROOT	- TEMPORARY	ROOT FOR	SEQUER	DURING	TEST 4 SETUP	

1 2 005527	.SBITL TROUTEROUTE	T - TEMPORARY ROOT	FOR SEQUEN DURING TEST 4 SETUP
3	TROO	T WILL FILL OUT THE SUBUNIT PARAMETERS.	AS YET UNDEFINED FIELDS IN BOTH UNIT AS WELL AS GETTING THE SUBUNIT CAHRACTERISTICS
7 005527 104205 007717	MOV	#FIRSTU,R5	: R5 POINTS TO FIRST SUBUNIT
8 005531 114001	MKLOOP: CLR	R1	: START WITH SUBUNIT ZERO (WEITHER USED OR NOT)
9 005532 104207 001000	MOV	#FTIME,RO	: MARK AS FIRST TIME
10 005534 100657 000033		RO,U.PARM(R5)	: SAVE
11 005536 104201 005562	MOV	#INSET_R1	: FIRST MODULE IS INSET
12 005540 100651 000010	MOV	R1_U.NFUN(R5)	: SAVE IN UNIT PARAMETERS
13 005542 023062 14 005543 106207 003254	1\$: CALL		: RUN SEQUENCER : SEE IF THE DRIVE HAS BEEN INITILIZED
15 005545 015542	BEQ	1\$; IF SO, BRANCH
16 005546 104657 000033	MOV	U.PARM(R5),R0	; GET UNIT PARAMETERS
17 005550 101207 001000	BIS	#FTIME,RO	: SET FIRST TIME
18 005552 100657 000033	MOV	RO,U.PARM(R5)	: SAVE
19 005554 104655 000000	MOV	U.NEXT(R5),R5	: TRAVERSE TO NEXT UNIT
20 005556 106205 007717	CMP	#FIRSTU,R5	: SEE IF TRAVERSED ENTIRE RING
21 005560 055531	BNE	MKLOOP	; IF NOT, BRANCH
22 005561 000000	RETU	IRN	; RETURN TO CALLING PROGRAM

CH

1 2 005615	.SBTTL COMCHR:	COMCHR	- GET COMMON C	CHARACTERISTICS AND STORE NECESSARY INFO IN UNIT PARAMETER	RS				
4		GET COM RETRIES	GET COMMON CHARACTERISTICS AND SET UP THE ERROR RECOVERY LEVEL, RETRIES, LONG TIMEOUT, AND SHORT TIMEOUT						
7 005615 104203 001467 8 005617 021204 9 005620 115002 10 005621 015630 11 005622		MOV CALL TST BEQ CERROR	#CR.GCR,R3 TALK R2 SETRLT 5,#SER8	: POINT TO GET CHARACTERISTICS DATA BLOCK : GET CHARACTERISTICS : SEE IF ANY ERRORS OCCURRED : IF NOT, BRANCH : REPORT SECONDARY ERROR					
005622 104200 010317 001013 12 005625 104207 005615 13 005627 005710 14 005630 104307 001571 15 005632 110607 16 005633 110607 17 005634 110607	SETRLT:	ROR ROR	#COMCHR,RO COMEXT ST+RETS,RO RO RO	#SER8,OUT.05 GET COMMON CHARACTERISTICS IS NEXT MODULE BRANCH TO EXIT GET NUMBER OF RETRIES ALLOWED ROTATE TO CORRECT POSITION					
18 005635 110607 19 005636 103207 177760 20 005640 100657 000025 21 005642 104307 001572 22 005644 103207 177400 23 005646 100657 000026 24 005650 104307 001572		ROR BIC MOV MOV BIC MOV MOV	RO #LBLONB,RO RO,U.RTRY(R5) ST+ERLEV,RO #HIBYTE,RO RO,U.MLEV(R5) ST+ECCRSH,RO	: GET ERROR RECOVERY LEVELS : CLEAR UNUSED BITS) : SAVE IN UNIT PARAMETERS : GET ECC THRESHOLD					
24 005650 104307 001572 25 005652 110707 26 005653 103207 177400 27 005655 100657 000027 28 005657 104307 001570 29 005661 103207 177760 30 005663 025712 31 005664 100657 000030		SWAB BIC MOV MOV BIC CALL MOV	RO #HIBYTE,RO RO,U.ECCT(R5) ST+SHRTTO,RO #LBLONB,RO TO RO,U.SDIS(R5)	GET SHORT TIMEOUT CLEAR UNUSED BITS CALCULATE TIMEOUT SAVE SHORT TIMEOUT IN UNIT PARAMETERS					
32 005666 104307 001571 33 005670 103207 177760 34 005672 025712 35 005673 100657 000031 36 005675 104307 001571 37 005677 110707 38 005700 103207 177760 39 005702 117407		MOV BIC CALL MOV MOV SWAB BIC	ST+LONGTO,RO #LBLONB,RO TO RO,U.SDIL(R5) ST+RCTCPS,RO RO #LBLONB,RO	CLEAR UNUSED BITS CALCULATE TIMEOUT SAVE IN UNIT PARAMETERS GET NUMBER OF RCT COPIES MOVE TO LOW WORD CLEAR UNUSED BITS					
39 005702 117407 40 005703 100657 000043 41 005705 104207 005724 42 005707 114002 43 005710 114001 44 005711 003127	COMEXT:	MOV MOV CLR CLR BR	RO RO,U.COPY(R5) #INSCHR,RO R2 R1 JMPRET	: ADJUST FOR TEST 4 INTERNALS : SAVE : INSERT SUBUNIT CHARACTERISTICS NEXT MODULE : NO ERRORS : IMMIDATE CALL TO NEXT MODULE : RETURN TO SEQUNCER					
46 005712 47 48 49 50	TO:	CALCULA 9 SEC)	TE THE TIMEOUT	T IN 9SEC INTERVALS (UDA SDI RECEIVE XFC TAKES					
51 005712 104201 000001 52 005714 105011 53 005715 117407 54 005716 055714	1\$:	MOV ADD DE C BNE	#1.R1 R1.R1 R0 1\$: SET UP LOG2 SHIFTER : DOUBLE THE TIMEOUT VALUE : DECREMENT COUNT : IF COUNT INCOMPLETE, BRANCH					
55 005717 115407 56 005720 107201 000011	2\$:	INC	R0 #9.,R1	: INCREMENT 9 SEC COUNT : SUBTRACT 9 SEC FROM TIMEOUT					

SEQ 0364

UDAT4 DISK EXERCISER MACRO X04.00 9-JUL-81 01:12:03 PAGE 75-1 COMCHR - GET COMMON CHARACTERISTICS AND STORE NECESSARY INFO I

57 005722 035717 58 005723 000000 BPL 2\$ RETURN : IF MORE TIME TO GO, BRANCH : RETURN TO CALLING PROGRAM

2 005724				.SBTTL INSCHR:	INSCHR	- GET ALL SUBUNI	TS' PARAMETERS (CHARACTERISTICS), ERROR CHECK AND STORE
4 5					INSCHR SUBUNIT	WILL GET THE SUB PARAMETERS	UNIT CHARACTERISTICS AND INITILIZE THE
7 005724	100///				PUSH	R4	; SAVE R4 (SUBUNIT) POINTER
005724 8 005725 9 005727 10 005730	100464 104204 105054	000001			MOV ADD CLR	#U.SUBP.R4 R5.R4 R0	MOV R4,-(SP) : R4 POINTS TO SUBUNIT POINTERS : R4 POINTS TO SUBUNIT POINTERS : R2 CONTAINS SUBUNIT POINTER INDEX
11 005731 12 005733 13 005734	114007 114000 104241 076076	004542		7\$:	CLR MOV BMI	USED (R4)+,R1 11\$	FLAG AS ALL SUBUNITS UNUSED
15 005740	104200 104612 056076	177777 000005	004542		MOV MOV BNE	#-1.USED S.SCHR(R1),R2 11\$: IF SUBUNIT NOT TO BE TESTED, BRANCH : FLAG AS SUBUNIT USED : GET CHARACTERISTICS POINTER : IF ALLREADY DEFINED, BRANCH
16 005742 17 005743 18 005744 19 005746 20 005750	114002 100612 100612	000007			CLR MOV MOV PUSH	R2 R2,S.MEGW(R1) R2,S.MEGR(R1) R0	: ZERO RO : ZERO MEGABIT COUNT : ZERO MEGABIT COUNT : SAVE RO
005750 21 005751 22 005752 23 005754 24 005756	100467 027321 104070 104203	001554 001474			CALL MOV MOV PUSH	SMASK RO, SUBUNT #CR. SCR, R3 R1	MOV RO,-(SP) COMPUTE MASK FOR SUBUNIT CHAR REQ MOVE TO SDI SEND BUFFER POINT TO SDI PARAMETER BUFFER SAVE R1
005756 25 005757 26 005760	100461 021204				CALL	TALK R1	MOV R1,-(SP) : SEND AND RECEIVE SDI INTERCHANGE : RESTORE R1
005760 27 005761 28 005762 29 005763 30 005765 31 005766 32 005770 33 005771 34 005773 35 005775 36 005777 37 006001 38 006003 39 006005 40 006006 41 006007 42 006011 43 006013 44 006014 45 006016 46 006017 47 006020 48 006021 49 006022 50 006023 51 006024 52 006025 53 006026	104261 115002 056120 104617 114003 102207 015775 104303 105303 105303 105303 104030 100613 026733 026766 104617 102207 016017 102207 016022 026131 115002 056123 026311 115002 056123	000000 020000 001574 177600 001601 177400 004543 000004 000000 000040 0000200		5\$: 21\$: 8\$:	TST BNE MOV CLR BIT BEQ MOV CALL MOV CALL MOV CALL MOV BIT BEQ CALL TST BNE CALL TST BNE CALL TST	R2 12\$ S.PARM(R1),R0 R3 #DCYLS,R0 5\$ ST+RBNTRK,R3 #HIBYTE!200,R3 ST+LBNTRK,R3 #HIBYTE,R3 R3,SECTRK R3,S.TRKL(R1) COMPSC CLCMAX S.PARM(R1),R0 #BEUSED,R0 21\$ #ONLYCL,R0 8\$ CHKCYL R2 3\$ CHKBES R2 3\$ CHKBB R2	SEE IF AN ERROR OCCURRED ; IF SO, BRANCH ; GET SUBUNIT PARAMETERS ; NO RBN'S PER TRACK (FOR LBN AREA) ; SEE IF DIAGNOSTIC CYLINDERS ARE USED ; IF NOT, BRANCH ; GET RBN'S PER TRACK ; CLEAR UNUSED BITS ; ADD LBNS PER TRACK (TO ZERO IF LBN AREA) ; CLEAR UNUSED BITS ; SAVE IN SECTORS PER TRACK ; SAVE IN TRACK LENGTH ; COMPUTE SECTORS/GROUP AND SECTORS/CYL ; CALCULATE MAXIMUM DBN NUMBER (IN CASE NEEDED) ; GET SUBUNIT PARAMETERS ; SEE IF BEGIN/END SETS ARE USED ; IF NOT, BRANCH ; SEE IF WE ALLREADY HAVE BEGIN/END SETS ; IF SO, BRANCH ; CONVERT THE CYLS TO BN'S ; SEE IF AN ERROR OCCURRED ; IF SO, BRANCH ; CHECK THE BEGIN/END SETS FOR ERRORS ; SEE IF AN ERROR OCCURRED ; IF SO, BRANCH ; CHECK THE BAD BLOCKS FOR ERRORS ; SEE IF AN ERROR WAS DETECTED

54 006027 55 006030 56 006032 57 006034 58 006035 59 006036 60 006037 61 006040 62 006042 63 006044 64 006045 65 006047	056123 104617 102207 056040 027034 115002 056123 104203 104207 025072 100617	000000 000040 001570 000023 000005		22\$:	BNE MOV BIT BNE CALL TST BNE MOV MOV CALL MOV PUSH	3\$ S.PARM(R1),R0 #BEUSED,R0 22\$ CHKTG R2 3\$ #ST.R3 #19.,R0 GETMEM R0,S.SCHR(R1) R1		SAVE R1
006047 66 006050 67 006052 68 006053 69 006054 70 006055 71 006056	100461 104201 104232 100272 117401 056052	000023		9\$:	MOV MOV DEC BNE POP	R2,(R0)+ R1		RESTORE R1
006056 72 006057 73 006061 74 006063 75 006065 76 006067 77 006071 78 006072 79 006073	104261 104617 104672 105672 100612 104672 046073 115402 100612	000005 000000 000021 000001 000001		10\$:	MOV MOV ADD MOV MOV BCC INC MOV	XBNCYL(R0),R2 R2,S.SDCL(R1) LBNCYL+1(R0),R2 10\$ R2 R2,S.SDCL+1(R1)		RO POINTS TO SUBUNIT (HAR R2 CONTAINS LO LBN CYLS ADD LO XBN CYLS TO R2 MOVE TO LO STARTING DIAG CYL GET HI ORDER LBN CYLS IF NO CARRY, BRANCH PROPOGATE CARRY STORE HI STARTING DIAG CYL
80 006075 006075 81 006076 82 006077 83 006101 84 006102 85 006104 86 006105 87 006106 88 006110 89 006111 90 006113 91 006115 92 006117 93 006120	104267 115407 106207 035733 104207 114001 114002 115000 056127 104651 101201 100651 006127	000003 007334 004542 000033 100000 000033		11\$:	POP INC CMP BPL MOV CLR CLR TST BNE MOV BIS MOV BR CERROR	R0 #3,R0 7\$ #INITD,R0 R1 R2 USED 6\$ U.PARM(R5),R1 #DROP,R1 R1,U.PARM(R5) 6\$ 5,#SER5	:	RESTORE RO INCREMENT SUBUNIT COUNT SEE IF ALL SUBUNITS HANDLED IF NOT, BRANCH INITILIZE ALL DRIVE PARAMETERS NEXT MAKE R1 ZERO (IMMIDATE CALL) FLAG AS NO ERRORS SEE IF ANY SUBUNITS USED IF SO, BRANCH GET UNIT PARAMETERS FLAG ENTIRE UNIT AS DROPPED SAVE PARAMETERS BRANCH FLAG SECONDARY ERROR
94 006123	104200	010220	001013	3\$:	POP	RO RO	:	ADJUST STACK MOV #SER5, OUT. 05
95 006124 96 006126 97 006127	104267 104207 114001	005724		4\$: 6\$:	MOV CLR POP	#INSCHR,RO R1 R4		INSCHR NEXT ROUTINE CALLED IMMIDATE CALL RESTORE R4
98 006130	104264 003127				BR	JMPRET	:	RETURN TO SEQUENCER MOV (SP)+,R4

1 2 006131			.SBTTL CHKCYL:	CHKCYL	- CHECK VALIDITY	OF	STARTING AND ENDING CYLS, CO	NVERT	TO BEGIN/END SET
3 4 5					TE THE STARTING	AND	ENDING BN'S FROM THE GIVEN S	TARTI	NG
7 006131 006131	100464			PUSH	<r4,r5></r4,r5>	:	SAVE R4, R5		R4,-(SP) R5,-(SP)
006132 8 006133 9 006135 10 006137 11 006141 12 006142 13 006143	100465 104614 104615 103205 026237 115002 056234	000013 000014 100000		MOV MOV BIC CALL TST BNE	S.BESS+2(R1),R4 S.BESS+3(R1),R5 #100000,R5 CYLBN R2 10\$		R4 HAS LO STARTING CYL R5 HAS HI STARTING CYL CLEAR EOL FLAG (IF ANY) CALCULATE STARTING BN ON THAT SEE IF ANY ERROR OCCURRED IF SO, BRANCH		
14 006144 15 006146 16 006150 17 006152 18 006154 19 006156	100617 101203 100613 104615 106205 016201	000013 100000 000014 000012 177777		~~			CLEAR EOL FLAG (IF ANY) CALCULATE STARTING BN ON THAT SEE IF ANY ERROR OCCURRED IF SO, BRANCH SAVE LO ORDER STARTING BN SET END-OF-LIST FLAG SAVE HI ORDER STARTING BN GET HI ORDER ENDING CYL SEE IF SHOULD DEFAULT TO HIGH IF SO, BRANCH	EST LI	BN ·
20 006157 21 006161 22 006163 23 006164 24 006165 25 006166	104614 105204 046165 115405 026237 115002	000011	2\$:	MOV ADD BCC INC CALL TST	S.BESS(R1),R4 #1,R4 2\$ R5 CYLBN R2		GET LO ORDER ENDING CYL FIND STARTING BN OF NEXT CYL IF NO CARRY, BRANCH PROPOGATE CARRY CACULATE STARTING BN OF NEXT SEE IF ANY ERRORS	CYL	
26 006167 27 006170 28 006172 29 006173 30 006174	056234 107207 046174 117403 100617	000001	3\$:	BNE SUB BCC DEC MOV	10\$ #1.R0 3\$ R3 R0.S.BESS(R1)	:	IF SO, BRANCH GET LAST BN OF PREVIOUS CYL IF NO CARRY, BRANCH PROPOGATE CARRY SAVE LO ORDER ENDING BN SAVE HI ORDER ENDING BN		
31 006176 32 006200 33 006201 34 006203 35 006205	100613 006233 104617 102207 056223	000012 000000 020000	4\$:	MOV BR MOV BIT BNE	R3,S.BESS+1(R1) 9\$ S.PARM(R1),R0 #DCYLS,R0 6\$		GET SUBUNIT PARAMETERS SEE IF DIAGNOSTIC CYLINDERS U IF SO, BRANCH	SED	
36 006206 37 006210 38 006212 39 006214 40 006216 41 006217 42 006220 43 006222	104307 107207 100617 104307 046220 117407	001602 000001 000011 001603		MOV SUB MOV MOV BCC DEC	ST+LBNHST,RO #1,RO RO,S.BESS(R1) ST+LBNHST+1,RO 5\$ RO		GET LO ORDER ENDING LBN LAST LBN IN LBN AREA SAVE LO ORDER GET HI ORDER IF NO CARRY, BRANCH PROPOGATE CARRY		
42 006220	100617	000012	5\$:	MOV	RO.S.BESS+1(R1)	:	SAVE HI ORDER		
45 006225 46 006227 47 006231 48 006233	006233 104307 100617 104307 100617 114002	004540 000011 004541 000012	6\$: 9\$:	BR MOV MOV MOV CLR	9\$ MAXDBN,RO RO,S.BESS(R1) MAXDBN+1,RO RO,S.BESS+1(R1) R2		EXIT GET LO ORDER MAX DBN SAVE GET HI ORDER SAVE NO ERRORS		
49 006234 006234	104265		10\$:	POP	<r5,r4></r5,r4>	:	RESTORE		(SP)+,R5
006235 50 006236	104264			RETURN				MOV	(SP)+,R4

2 006237				SBITL CYLBN:	CYLBN	- GIVEN A CY	LINDER	. CALCULATE STARTING BN ON THAT CYLI	NDER
24567					TAKING CYL AND ERROR	THE CYL GIVE RETURN IN R	N IN R	4.R5 CALCULATE THE FIRST BN ON THAT IF BN EXCEEDS 28 BITS, REPORT	
8 006237 9 006240 10 006241 11 006242 12 006243 13 006244	114007 114003 115004 056245 115005 016307				CLR CLR TST BNE TST BEQ	R0 R3 R4 1\$ R5 5\$		CLEAR THE PRODUCT AREA CLEAR THE PRODUCT AREA SEE IF LO ORDER IS ZERO IF NOT, BRANCH SEE IF HI ORDER IS ZERO IF SO, BRANCH AND EXIT	
14 006245 15 006247 16 006250 17 006251	107204 046251 117405 105307	000001		1\$:	SUB BCC DEC ADD	#1,R4 2\$ R5 SECCYL,R0		ADJUST COUNT IF NO BORROW, BRANCH PROPOGATE BORROW ADD LO SECTORS/CYL TO LO ORDER PROD	
18 006253 19 006254 20 006255	046255 115403 106203	000377		3\$:	BCC INC CMP	3\$ R3 #377,R3		IF NO CARRY, BRANCH PROPOGATE CARRY SEE IF HI ORDER TOO BIG	
22 006260 006263 006266 006271 006274 006276	036301 104200 104200 101200 104200 104202 104020	006330 000071 000400 006271 000014 001006	001012 001010 001010 001007		BPL DEVFTL	4\$ 57	:	IF NOT, BRANCH REPORT LBN OVERFLOW MOV #ER57,OUT.04 MOV #57,OUT.02 BIS #FTLDEV.OUT.03 MOV #.,OUT.01 MOV #ERRMC,R2 NOV R2,OUT.RQ	2
23 006300 24 006301 25 006303 26 006304	006310 107204 046251 107205	000001		4\$:	BR SUB BCC SUB	6\$ #1,R4 2\$ #1,R5	:	EXIT DECREMENT LO ORDER COUNT IF INCOMPLETE, BRANCH DECREMENT HI ORDER COUNT	
27 006306 28 006307 29 006310	046251 114002 000000	000001		5\$: 6\$:	BCC CLR RETURN	2 \$ R2		IF INCOMPLETE, BRANCH NO ERRORS RETURN TO CALLING PROGRAM	

1 2	006311				.SBTTL CHKBES:	CHKBES	- CHECK THE BEG	IN/E	END SETS FOR E	RRORS		
4567						THAT TH	E END BLOCK < T	HE B	BEGIN BLOCK OF	THE NEX	BEGIN/END SET, T BEGIN/END SET, BN FOR THAT DRIVE	Ε.
8	006311 006311 006312	100464				PUSH	<r4,r5></r4,r5>				MOV R4,	
10 11 12 13 14	006313 006315 006316 006320 006321 006322	100465 104203 105013 104202 105012 025441 046344	000011 000013		1\$:	MOV ADD MOV ADD CALL BCC	#S.BESS,R3 R1,R3 #S.BESS+2,R2 R1,R2 (BB2 2\$		R3 POINTS TO E R2 WILL POINT R2 POINTS TO S COMPARE IF NO ERROR, E	ENDING B TO STAR STARTING BRANCH	TING BN BN	-(3P)
	006323 006323 006326 006331 006334 006337 006341	104200 104200 101200 104200 104202 104020	005443 000062 000400 006334 000014 001006	001012 001010 001010 001007		DEVFTL	50		REPORT BEGIN	MOV MOV BIS MOV MOV MOV	#ER50,0UT.04 #50,0UT.02 #FTLDEV,0UT.02 #.,OUT.01 #ERRMC,R2 R2,0UT.RQ	
17 18 19 20	006343 006344 006346 006347 006351 006352	006566 104625 076400 105202 025441	000001 000004		2\$:	BR MOV BMI ADD CALL BCS	7\$ 1(R2),R5 4\$ #4,R2 CBB2 3\$		BRANCH TO ERRO SEE IF THE ENI IF SO, BRANCH POINT TO NEXT COMPARE BRANCH	D-OF-LIS		
22	006352 006353 006354	046354				DEVFTL	51		STARTING BN <	= PREVIO	BCC BR OUS ENDING BN	3 \$
	006354 006357 006362 006365 006370 006372	104200 104200 101200 104200 104202 104020	005510 000063 000400 006365 000014 001006	001012 001010 001010 001007						MOV MOV BIS MOV MOV MOV	#ER51.0UT.04 #51.0UT.02 #FTLDEV.OUT.02 #.,OUT.01 #ERRMC.R2 R2,OUT.RQ	
	006374 006375 006377	006566 105203 006321	000004		3\$:	BR ADD BR	7\$ #4,R3 1\$		ERROR EXIT R3 NOW POINTS LOOP	TO NEXT	END SET	
26 27 28 29 30	006400 006402 006404 006405	104612 102202 056500 104202 025441	000000 020000 001602		4\$:	MOV BIT BNE MOV CALL BCS	S.PARM(R1),R2 #DCYLS,R2 5\$ #ST+LBNHST,R2 (BB2 6\$:	GET SUBUNIT CH	STIC CYL	INDERS ARE IN USE	I
	006410	046412	000000								BCC BR	6\$
33 34 35 36	006412 006414 006416 006417 006421	104612 102202 016422 102202 016443	000000		100	MOV BIT BEQ BIT BEQ	S.PARM(R1),R2 #BEUSED,R2 10\$ #ONLYCL,R2 11\$	***************************************	IF NOT, BRANCH	GROUPS T COMPUT		
37	006422 006422 006425	104200 104200	006540 000075	001012 001010	10\$:	DEVFTL	61		REPORT ERROR	MOV MOV	#ER61,0UT.04 #61,0UT.02	

006430 006433 006436 006440	101200 104200 104202 104020	000400 006433 000014 001006	001010 001007		20	76		BIS MOV MOV	#FTLDEV,OUT.02 #.,OUT.01 #ERRMC,R2 R2,OUT.RQ
38 006442 39 006443	006566	000001	001602	11\$:	BR SUB	7\$ #1,ST+LBNHST	: EXIT	LBN COUN	T BY 1
40 006446	046451	001603		9\$:	DEC	9\$ ST+LBNHST+1	: IF NO BORROW, : PROPOGATE BOR	ROW	FAID TAIC DAL > MAY
42 006451 006451 006454 006457 006462 006465 006470 006473	104200 104300 104300 104200 101200 104200 104202 104020	005575 001602 001603 000064 000400 006470 000014 001006	001012 001013 001014 001010 001010 001007	78:	DEVFTL	52, <st+lbnhst, s<="" td=""><td></td><td>MOV MOV MOV MOV BIS MOV MOV MOV</td><td>FNDING BN > MAX #ER52,OUT.04 ST+LBNHST,OUT.05 ST+LBNHST+1,OUT.06 #52,OUT.02 #FTLDEV,OUT.02 #.OUT.01 #ERRMC,R2 R2,OUT.RQ</td></st+lbnhst,>		MOV MOV MOV MOV BIS MOV MOV MOV	FNDING BN > MAX #ER52,OUT.04 ST+LBNHST,OUT.05 ST+LBNHST+1,OUT.06 #52,OUT.02 #FTLDEV,OUT.02 #.OUT.01 #ERRMC,R2 R2,OUT.RQ
43 006477 44 006500 45 006501 46 006503 47 006504	006566 104032 104203 025441 046565	004540		5\$:	BR MOV MOV CALL BCC	7\$ R3,R2 #MAXDBN,R3 CBB2 6\$: ERROR EXIT : R2 POINTS TO : R3 POINTS TO : COMPARE : EXIT	LAST END MAXIMUM I	SET DBN
48 006505 49 006507	104612 102202	000000			MOV	S.PARM(R1),R2 #BEUSED,R2	GET SUBUNIT C	HARACTER /GROUPS	ISTICS IN USE
50 006511 51 006512 52 006514 53 006515	016515 102202 016536	000200		12\$:	BEQ BIT BEQ DEVFTL	12\$ #ONLYCL,R2 13\$ 62	; IF SO, BRANCH	T COMPUTI	ED BY CYLINDERS
006515 006520 006523 006526 006531 006533 54 006535	104200 104200 101200 104200 104202 104020 006566	006766 000076 000400 006526 000014 001006	001012 001010 001010 001007		BR	7\$: EXIT	MOV MOV BIS MOV MOV MOV	#ER62.0UT.04 #62.0UT.02 #FTLDEV.OUT.02 #OUT.01 #ERRMC.R2 R2.OUT.RQ
55 006536 006536 006541 006544 006547 006552 006555	104200	005575 004540 004541 000064 000400 006555	001012 001013 001014 001010 001010 001007	13\$:	DEVFTL	52. <maxdbn, maxd<="" td=""><td>BN+1>" ; LAST</td><td>ENDING BI MOV MOV MOV BIS MOV</td><td>#ER52,0UT.04 MAXDBN,OUT.05 MAXDBN+1,OUT.06 #52,OUT.02 #FTLDEV,OUT.02 #.,OUT.01</td></maxdbn,>	BN+1>" ; LAST	ENDING BI MOV MOV MOV BIS MOV	#ER52,0UT.04 MAXDBN,OUT.05 MAXDBN+1,OUT.06 #52,OUT.02 #FTLDEV,OUT.02 #.,OUT.01
006560 006562 56 006564	104202 104020 006566	000014			DD.	76	. EDDOD EVIT	MOV MOV	#ERRMC,R2 R2,OUT.RQ
57 006565 58 006566	114002	Te v		6\$: 7\$:	BR CLR POP	7\$ R2 <r5,r4></r5,r4>	: ERROR EXIT : FLAG AS NO ER : RESTORE REGIS	ROR TERS	
006566 006567	104265								MOV (SP)+,R5 MOV (SP)+,R4
59 006570	000000				RETURN		: RETURN TO INS	CHR	

1 2 006571	.SBTTL CHKBB:		
5		CHECK THE BAD BLOCKS TO ASSURE THEY DON'T EXCEED THE MAXIMUM BLOCK NUMBER	
7 006571		PUSH <r4,r5> ; SAVE THE REGISTERS</r4,r5>	
006571 100464 006572 100465		MOV R4,-(SP MOV R5,-(SP	
8 006573 104613 000010 9 006575 016727		MOV S.BADP(R1), R3; GET POINTER TO BAD BLOCKS BEQ 5\$; IF NO BAD BLOCKS, BRANCH	
10 006576 104632 000001 11 006600 076632	1\$:	MOV 1(R3),R2 ; IS THIS THE LAST BAD BLOCK? BMI 2\$; IF SO, BRANCH	
12 006601 104032 13 006602 105202 000002		MOV R3.R2 : R2 WILL POINT TO NEXT BAD BLOCK ADD #2.R2 : R2 POINTS TO NEXT BAD BLOCK	
14 006604 025441 15 006605 046611		CALL CBB2 : COMPARE BCC 7\$: IF ERROR, BRANCH	
16 006606 105203 000002 17 006610 006576		ADD #2.R3 : POINT TO NEXT BAD BLOCK BR 1\$: LOOP	
18 006611 006611 104200 005660 001012	7\$:	DEVFTL 53 ; DUPLICATE BAD BLOCKS	
006614 104200 000065 001010		MOV #ER53,0UT.04 MOV #53,0UT.02	
006617 101200 000400 001010 006622 104200 006622 001007		BIS #FTLDEV.OUT.02 MOV #.,OUT.01	
006625 104202 000014 006627 104020 001006		MOV #ERRMC.R2 MOV R2.OUT.RQ	
19 006631 006730 20 006632 104617 000000	2\$:	BR 6\$; BRANCH MOV S.PARM(R1),R0 ; GET SUBUNIT PARAMETERS	
21 006634 102207 020000 22 006636 056673		BIT #DCYLS.RO ; SEE IF DIAGNOSTIC CYLINDERS IN USE BNE 3\$; IF SO, BRANCH	
23 006637 104202 001602 24 006641 025441		MOV #ST+LBNHST,R2 : R2 POINTS TO NUMBER OF LBNS IN HOST AREA CALL CBB2 : COMPARE	
25 006642 046644 26 006643 006727		BCC 8\$: IF ERROR, BRANCH BR 5\$: EXIT WITH NO ERROR	
27 006644	8\$:	DEVFTL 54, <st+lbnhst, st+lbnhst+1=""> ; BAD BLOCK > MAXIMUM</st+lbnhst,>	
006647 104300 001602 001013		MOV #ER54,OUT.04 MOV ST+LBNHST,OUT.05	
006652 104300 001603 001014 006655 104200 000066 001010		MOV ST+LBNHST+1,OUT.06 MOV #54,OUT.02	
006660 101200 000400 001010 006663 104200 006663 001007		BIS #FTLDEV,OUT.02 MOV #.,OUT.01	
006666 104202 000014 006670 104020 001006		MOV #ERRMC,R2 MOV R2,OUT.RQ	
28 006672 006730 29 006673 104032	3\$:	BR 6\$: ERROR EXIT MOV R3,R2 : R2 POINTS TO LAS BAD BLOCK	
30 006674 104203 004540 31 006676 025441		MOV #MAXDBN,R3 : R3 POINTS TO MAXIMUM DBN CALL CBB2 : COMPARE	
32 006677 046727 33 006700	4\$:	BCC 5\$; IF NO ERROR, BRANCH DEVFTL 54, <maxdbn, maxdbn+1="">; BAD BLOCK > MAXIMUM</maxdbn,>	
006700 104200 005674 001012 006703 104300 004540 001013		MOV #ER54.OUT.04 MOV MAXDBN.OUT.05	
006706 104300 004541 001014		MOV MAXDBN+1, OUT. 06	
006711 104200 000066 001010 006714 101200 000400 001010		MOV #54,0UT.02 BIS #FTLDEV.OUT.02	
006717 104200 006717 001007 006722 104202 000014		MOV #.,OUT.01 MOV #ERRMC,R2	
006724 104020 001006		MOV R2,OUT.RQ	

SEQ 0372

UDAT4 DISK EXERCISER MACRO X04.00 9-JUL-81 01:12:03 PAGE 80-1 CHKBB - CHECK THE BAD BLOCKS FOR ERRORS

34 006726 006730 35 006727 114002 36 006730 104265 006731 104264 37 006732 000000

5\$: CLR R2 6\$: POP <R5,R4> : BRANCH TO EXIT : FLAG AS NO ERRORS : RESTORE THE REGISTERES

MOV (SP)+,R5 MOV (SP)+,R4

RETURN

: RETURN TO INSCHR

2 006733			.SBTTL COMPSC:	COMPSC	- COMPUTE SECTO	RS/	GROUP AND SECTORS/CYLINDER
5					HOW MANY SECTORS		GROUP AND SECTORS/CYLINDER
7 006733 006733 006734	100467			PUSH	<r0,r2></r0,r2>	:	SAVE REGISTERS MOV RO,-(SP) MOV R2,-(SP)
8 006735 9 006736 10 006740	114007 104302 103202	001573 177400		CLR MOV BIC	RO ST+TRKGRP,R2 #HIBYTE,R2	:	CLEAR RUNNING TOTAL GET NUMBER OF TRACKS PER GROUP CLEAR UNUSED BITS
11 006742 12 006744 13 006745	105307 117402 056742	004543	1\$:	ADD DE C BNE	SECTRK, RO R2 1\$:	ADD NUMBER OF SECTORS/TRACK TO RUNNING TOTAL DECREMENT COUNT IF COUNT INCOMPLETE, BRANCH
14 006746 15 006750 16 006751	104070 114007 104302	004544		MOV CLR MOV	RO, SECGRP RO ST+GRPCYL, R2	:	SAVE SECTORS/GROUP CLEAR RUNNING TOTAL GET GROUPS/CYLINDER
17 006753 18 006755 19 006757	103202 105307 117402	177400 004544	2\$:	ADD DEC	#HIBYTE,R2 SECGRP,RO R2	:	CLEAR UNUSED BITS ADD SECTORS/GROUP TO RUNNING TOTAL DECREMENT COUNT
20 006760 21 006761 22 006763	056755	004545		BNE MOV POP	RO, SECCYL <r2,r0></r2,r0>		IF COUNT INCOMPLETE, BRANCH STORE SECTORS/CYLINDER RESTORE REGISTERS
006763 006764 23 006765	104262 104267 000000			RETURN		;	MOV (SP)+,R2 MOV (SP)+,R0 RETURN TO CALLING PROGRAM

1 2	006766			.SBTTL CLCMAX:	CL CMAX	- CALCULATE THE	E MA	XIMUM WRITEABLE DBN
5				70	CALCULA FOR BEG	TE THE MAXIMUM IN/END SET GENE	DBN	NUMBER ALLOWED, AND PLACE IT IN MAXDBN ION AND TESTING (BAD BLOCKS TOO)
	006766 006766 006767 006770	100467 100461 100462			PUSH	<r0,r1,r2></r0,r1,r2>	;	SAVE REGISTERS MOV RO,-(SP) MOV R1,-(SP) MOV R2,-(SP)
8 9	006771 006772 006773 006775	114007 114001 104302 110702	001612		CLR CLR MOV SWAB	RO R1 ST+DBNCYL,R2 R2		CLEAR PRODUCT AREA CLEAR PRODUCT AREA GET DIAG CYL COUNT MOVE TO LO ORDER BYTE
12 13 14	006776 007000 007002 007003	103202 105307 047004 115401	177400 004545	1\$:	BIC ADD BCC INC	#HIBYTE,R2 SECCYL,RO 2\$ R1		CLEAR UNUSED BITS ADD SECTORS/CYL TO TOTAL IF NO CARRY, BRANCH INCREMENT HI WORD
16 17 18	007004 007005 007006 007010	117402 057000 104302 103202	001612 177400	2\$:	DEC BNE MOV BIC	R2 1\$ ST+DBNCYL,R2 #HIBYTE,R2		DECREMENT COUNT IF NO CARRY, BRANCH GET NUMBER OF READ ONLY GROUPS CLEAR UNUSED BITS
20 21 22	007012 007014 007015 007016	107307 047016 117401 117402	004544	3\$: 4\$:	SUB BCC DEC DEC	SECGRP, RO 4\$ R1 R2		SUBTRACT NUMBER OF SECTORS/GROUP IF NO BORROW, BRANCH PROPOGATE BORROW DECREMENT COUNT
24 25 26	007017 007020 007022 007023	057012 107207 047024 117401	000001		BNE SUB BCC DEC	3\$ #1,R0 5\$ R1		IF INCOMPLETE, BRANCH ADJUST FOR DBNS STARTING AT ZERO IF NO BORROW, BRANCH PROPOGATE BORROW
28 29 30	007024 007026 007030	104070 104010	004540 004541	5\$:	MOV MOV POP	RO, MAXDBN R1, MAXDBN+1 <r2, r1,="" ro=""></r2,>		SAVE LO ORDER WORD SAVE HI ORDER WORD RESTORE REGISTERS
	007030 007031 007032 007033	104262 104261 104267 000000			RETURN			MOV (SP)+,R2 MOV (SP)+,R1 MOV (SP)+,R0 RETURN TO INSCHR

1 2 007034	.SBTTL CHKTG:	CHKTG - CHECK THE TRACK/GROUPS FOR	ERRORS, AND CONVERT TO BN'S
3 5 6 7		CONVERT THE TRACKS/GROUPS TO SECTOR NUMBER OF 'LOOPS' THAT SETUP CAN RUTRACKS ON THE TESTED CYLINDERS ONLY	COUNTS, AND FIND THE MAXIMUM N THROUGH TO TEST ALL
8 9		FIRST COPY THE TRACKS/GROUPS TO A I	EMP LOCATION
10 11 007034 007034 100464	•	PUSH <r4,r5> ; S.</r4,r5>	AVE REGISTERS MOV R4,-(SP)
007035 100465 12 007036 104207 004546 13 007040 104202 000015 14 007042 105012 15 007043 104225 16 007044 100275 17 007045 037043	1\$:	MOV #S.TGSS,R2 ; R ADD R1,R2 ; R MOV (R2)+,R5 ; G MOV R5,(R0)+ ; S	MOV R5,-(SP) OINT TO TEMPORARY STORAGE LOCATION 2 WILL POINT TO T/G LIST 2 POINTS TO T/G LIST ET WORD AVE IN TEMP LOCATION OPY ENTIRE LIST
18 19 20		NOW MOVE THE STARTING CYLINDER TO T	HE INITIAL OFFSET AREA
21 007046 104612 000014 22 007050 103202 170000 23 007052 100612 000014		BIC #^CHBHINB,R2 ; C	ET HI ORDER STARTING CYL LEAR UNUSED BITS AVE
24 25 26		CHECK THAT THE MAXIMUM TRACK/GROUP	IS VALID
27 007054 104617 000000 28 007056 102207 000020 29 007060 057064		BIT #TRACKS,RO : S BNE 2\$: I	ET SUBUNIT PARAMETERS EE IF PROCESSING GROUPS OR TRACKS F TRACKS, BRANCH
30 007061 104307 001572 31 007063 007066		BR 3\$; B	ET GROUPS PER CYLINDER RANCH
32 007064 104307 001573 33 007066 103207 177400 34 007070 104202 004546 35 007072 104223	2\$: 3\$: 4\$:	BIC #HIBYTE,RO ; C MOV #TGS,R2 ; P	ET TRACKS PER GROUP LEAR UNUSED BITS OINT TO TRACK/GROUP LIST EE IF THIS WORD IS END-OF-LIST
36 007073 037072 37 007074 103203 177400 38 007076 106037		BPL 4\$; I BIC #HIBYTE,R3 ; C CMP R3,R0 ; S	F NOT, BRANCH LEAR EOL FLAG EE IF WITHIN LIMITS F SO, BRANCH
39 007077 077126 40 007100 117407 41 007101		DEC RO : A	DJUST T/G MAX FOR 0-N EPORT ERROR
007101 104200 006423 007104 104030 001013 007106 104070 001014 007110 104200 000072 007113 101200 000400 007116 104200 007116 007121 104202 000014 007123 104020 001006	001012 001010 001010 001007		MOV #ER58,OUT.04 MOV R3,OUT.05 MCV R0,OUT.06 MOV #58,OUT.02 BIS #FTLDEV,OUT.02 MOV #.OUT.01 MOV #ERRMC,R2 MOV R2,OUT.RQ
42 007125 007277		BR 17\$: E	XIT

2 3					NOW COM	PUTE THE NUMBER OF SECTOR FIRST TRACK/GROUP TO TEST	S FROM	THE START OF THE CYLINDER/GROUP
5 007126 6 007130 7 007132	104207 104203 105013	004546 000013		5\$:	MOV MOV ADD	#TGS.RO #S.TGOF.R3 R1.R3 (RO).R2	: R3 W	POINTS TO TRACK/GROUP LIST WILL POINT TO T/G INITIAL OFFSET POINTS TO T/G INITIAL OFFSET
8 007133 9 007134 10 007136	104172 103202 027302 105135	177400			MOV BIC CALL	(RO),R2 #HIBYTE,R2 COMPDP (R3),R5	: CLEA	FIRST T/G AR UNUSED BITS PUTE SECTORS FROM CYL TO INIT T/G TO INITIAL OFFSET
11 007137 12 007140 13 007141 14 007142	100235 047145 104135				ADD MOV BCC MOV	R5, (R3) + 6\$ (R3),R5	: MOVE	BACK NO CARRY, BRANCH HI ORDER WORD
15 007143 16 007144 17 007145	115405 100135 115403			6\$:	INC MOV INC	R5 R5, (R3) R3	: PROF	POGATE CARRY
18 19 20 21						PUE HOW MANY SECTORS FROM ACK/GROUP TO TEST	THE L	AST TRACK/GROUP TO TEST TO THE
22 007146	104174			78:	MOV	(RO),R4		TRACK/GROUP
23 007147 24 007150	077203 104672	000001			MOV MOV	8\$ 1(R0),R2	; IF E	OL, BRANCH NEXT TRACK
25 007152	103202	177400			BIC	#HIBYTE,R2	: CLEA	AR EOL FLAG, IF ANY
26 007154 27 007155	107272 017157				SUB BEQ	(R0)+,R2 20 \$: GE 1	HOW MANY T/G'S BETWEEN LAST/NEXT
28 007156	037200			20\$:	BPL DEVFTL	18\$ 59	: SHOL	JLD BE AT LEAST 1 T/G BETWEEN DRT ERROR
29 007157 007157 007162 007165	104200 104200 101200	006515 000073 000400	001012 001010 001010 001007	203:	DEVELL)	, KEPU	MOV #ER59,0UT.04 MOV #59,0UT.02 BIS #FTLDEV,0UT.02
007170 007173 007175	104200 104202 104020	007170 000014 001006	001007					MOV #.,OUT.01 MOV #ERRMC.R2 MOV R2,OUT.RQ
30 007177	007277	001006			BR	17\$: EXIT	
31 007200 32 007201 33 007202	027302 100235 007146			18\$:	CALL MOV BR	COMPDP R5,(R3)+ 7\$		PUTE HOW MANY SECTORS TO NEXT T/G
33 007202 34 35 36 37 007203					NOW COM	PUTE HOW MANY SECTORS FRO	M THE	LAST T/G TO TEST TO THE FIRST
37 007203	104615	000000		8\$:	MOV	S.PARM(R1),R5	: GET	SUBUNIT PARAMETERS
38 007205 39 007207 40 007210 41 007212	102205 057213 104302	000020			BIT	#TRACKS,R5 9\$; IF 1	IF USING GROUPS OR TRACKS
40 007210	104302	001572			MOV BR	ST+GRPCYL,R2	; GET	GROUPS/CYL
42 007213	104302	001573		9\$:	MOV	ST+TRKGRP,R2	; GET	TRACKS/GROUP
44 007217	007215 104302 105302 103202 103204	004546 177400		10\$:	ADD BIC	TGS,R2 #HIBYTE,R2	: CLEA	STARTING T/G AR UNUSED BITS
42 007213 43 007215 44 007217 45 007221 46 007223	103204	177400			BIC	#HIBYTE,R4 R4,R2	: CLEA	AR UNUSED BITS HOW MANY T/G'S TO SKIP
41 001224	107042 027302				CALL	COMPDP	: COMP	PUTE HOW MANY SECTORS
48 007225 49 007226	100235 114005				MOV CLR	R5,(R3)+ R5	: STOP	RE IN LIST UP FOR MARKING EOL
50 007227	100235				MOV	R5,(R3)+	: STOR	RE EOL
) i								

52 53 54				NOW SEE	HOW MANY TIMES THE SETUP EXCEEDING THE MAXIMUM SE	ROUTINE CAN GO THROUGH CTOR NUMBER	THE LIST
55 007230	104207	000011		MOV	#S.BESS,RO	; RO WILL POINT TO THE M	MAX SEC NUMBER
55 007230 56 007232 57 007233 58 007235 59 007237	104674	000002 000003		ADD MOV MOV PUSH	R1,R0 S.TGOF-S.BESS(R0),R4 S.TGOF-S.BESS+1(R0),R5 R1	; R5 HAS HI ORDER INITIA ; SAVE R1	AL OFFSET
007237 60 007240 61 007241 62 007242 63 007244 64 007245 65 007246	100461 114002 114003 104201 105071 100464 104214 057254	000004	13\$:	CLR CLR MOV ADD MOV MOV BNE	R2 R3 #S.TGSS-S.BESS,R1 R0,R1 R4,-(SP) (R1)+,R4 14\$	CLEAR LO ORDER MAX COU CLEAR HI ORDER MAX COU R1 WILL POINT TO SECTO R1 POINTS TO SECTOR OF SAVE LO ORDER TOTAL ON GET LO ORDER SECTOR OF	INT OR OFFSET AREA FSET AREA I STACK FSET
66 007247 67 007250 68 007251 69 007253 70 007254 71 007255 72 007256 73 007257	104071 105201 104214 105264 047257 115405	000004	14\$:	MOV ADD MOV ADD BCC INC	RO,R1 #S.TGSS-S.BESS,R1 (R1)+,R4 (SP)+,R4 15\$ R5	: IF NOT EOL, BRANCH : R1 WILL POINT TO START : R1 POINTS TO START OF : GET NEW OFFSET : ADD TO LOW ORDER SECTO : IF NO CARRY, BRANCH : PROPOGATE CARRY	OFFSET LIST
75 007262 76 007263 77 007264	106675 077272 057265 106174 077272	000001	15\$:	CMP BMI BNE CMP BMI	1(R0),R5 16\$ 11\$ (R0),R4 16\$: SEE IF MAX EXCEEDED : IF SO, BRANCH : IF YOUR SURE IT'S OK, : SEE IF MAX EXCEEDED : IF NOT, BRANCH	BRANCH
78 007265 79 007267 80 007270 81 007271 82 007272	105202 047245 115403 007245	000001	11\$:	ADD BCC INC BR	#1,R2 13\$ R3 13\$: ADD 1 TO COUNT : IF NO CARRY, BRANCH : PROPOGATE CARRY : BRANCH	
007272 83 007273 84 007274 85 007276	104261 100172 100673 114002	000001	16\$:	MOV MOV CLR	R1 R2.(R0) R3.1(R0) R2	: STORE LOW ORDER MAXIMU : STORE HI MAXIMUM COUNT : CLEAR R2	
86 007277 007277 007300 87 007301	104265 104264 000000	,	17\$:	POP	<r5,r4></r5,r4>		MOV (SP)+,R5 MOV (SP)+,R4

[HERS PRESS : 1915] : 1. 1915 : 1. 1915 : 1. 1915 : 1. 1915 : 1. 1915 : 1. 1915 : 1. 1915 : 1. 1915 : 1. 1915 : 1. 1915 : 1. 1915 : 1. 1915 : 1. 1915 : 1. 1915 : 1. 1915 : 1. 1915 : 1.	BITTL COMPDP - CALCULATE SECTORS/TO	RACKS OR SECTORS/GROUPS
5	COMPUTE HOW MANY SECTORS ARE PASSED IN R2	IN THE NUMBER OF TRACKS OR GROUPS
7 007302 114005 8 007303 104614 000000 9 007305 007316	CLR R5 MOV S.PARM(R1),R4 BR 3\$	CLEAR RUNNING TOTAL GET SUBUNIT PARAMETERS SEE IF IMMIDATE EXIT
10 007306 102204 000020 1\$: 11 007310 057314 12 007311 105305 004544		; SEE IF USING GROUPS OR TRACKS ; IF TRACKS, BRANCH ; ADD SECTORS/GROUP TO RUNNING TOTAL
13 007313 007316 14 007314 105305 004543 2\$: 15 007316 117402 3\$: 16 007317 037306 17 007320 000000	BR 3\$ ADD SECTRK,R5	; ADD SECTORS/GROUP TO RUNNING TOTAL ; BRANCH ; ADD SECTORS/TRACK TO RUNNING TOTAL ; DECREMENT COUNT ; IF INCOMPLETE, BRANCH ; RETURN TO CALLING PROGRAM

2 007321			.SBTTL SMASK:	SMASK	- CALCULATE THE	SUBUNI	T MASK	
5					AKES THE UNIT O		0 - 3) IN RO AND CHANGE	S IT TO THE
7 007321				PUSH	R1	: SAV	E R1	
007321	100461							MOV R1,-(SP)
8 007322	104071			MOV	RO,R1	: MOV	E RO TO R1	
9 007323	104207	000020		MOV	#20,R0		BUNIT O MASK	
10 007325	115001			TST	R1		IF SUBUNIT MASK SHIFTE	D TO CORRECT POSITION
11 007326	017332		SMASKL:		SMASKX		SO, BRANCH	
12 007327	110207		or priority.	ROL	RO		FT MASK	
13 007330	117401			DEC	R1		REMENT COUNT	
14 007331	007326			BR	SMASKL		NCH	
15 007332			SMASKX:		R1		TORE R1	
007332	104261		J. FISIKA.			,		MOV (SP)+,R1
16 007333	000000			RETURN		: RET	URN TO CALLING PROGRAM	100 (00) 100

2 007334				SBTTL INITD:	INITD	- LAST ERROR CHECK	KING AND SETUP MODULE BEFORE TESTING STARTS
5					BRING D MODE TO	RIVE ONLINE, CLEA THE REQUIRED VAL	R ALL ERRORS (IF ANY) AND CHANGE THE UES
7 007334 8 007336 9 007337	104651 077466 104207	000033			MOV BMI MOV	U.PARM(R5),R1 DRVEXT #4,R0	GET UNIT PARAMETERS IF DRIVE DROPPED, BRANCH MAXIMUM OF 4 SUBUNITS
10 007341 11 007343 12 007344	104201 105051 104212 077353	000001		1\$:	MOV ADD MOV	#U.SUBP,R1 R5,R1 (R1)+ R2	R1 WILL POINT TO SUBUNIT POINTERS R1 POINTS TO SUBUNIT POINTERS GET POINTER TO SUBUNIT INFO
13 007345 14 007346 15 007350	104623	000000 040000			MOV BIT	2\$ S.PARM(R2),R3 #INITW,R3	: IF UNIT NOT TESTED, BRANCH : GET SUBUNIT PARAMETERS : SEE IF SUBUNIT WILL BE INITALLY WRITTEN
16 007352 17 007353 18 007354 19 007355	057356 117407 057344 007367			2\$:	BNE DEC BNE BR	3\$ R0 1\$ 4\$; IF SO, BRANCH ; DECREMENT COUNT ; IF NOT ALL SUBUNITS CHECKED, BRANCH ; BRANCH
20 007356 21 007360 22 007362	104657 101207 100657	000033 040000 000033		3\$:	MOV BIS MOV	U.PARM(R5),R0 #INITW,R0 RO,U.PARM(R5)	; GET UNIT PARAMETERS ; FLAG UNIT AS SUBUNITS GET INITIALLY WRITTEN ; SAVE
23 007364	101200 104207 104201	100000 000004 000005	002444	4\$:	MOV MOV	#100000,M.PARM #4,R0 #U.SUBP+4,R1	; FLAG MASTER PARAMETERS AS INITIAL WRITE TO BE DONE ; MAXIMUM OF FOUR SUBUNITS ; R1 WILL POINT TO AFTERS SUBUNIT POINTERS ; R1 POINTS TO AFTERS SUBUNIT POINTERS
24 007367 25 007371 26 007373 27 007374 28 007375 29 007376 30 007400	105051 114003 110203 103203	000001		5\$:	ADD CLR ROL BIC	R5,R1 R3 R3 #1,R3	; INITILIZE SUBUNIT PROTECTION FLAGS ; ROTATE R3 ; CLEAR LO BIT
32 007402	104412 077411 104622	000000			MOV BMI MOV	-(R1),R2 6\$ S.PARM(R2),R2	GET SUBUNIT POINTER IF NO SUBUNIT, BRANCH GET SUBUNIT STATUS
33 007404 34 007406 35 007407 36 007411	102202 017411 101203 117407	004000		6\$:	BIT BEQ BIS DEC	#RONLY,R2 6\$ #1,R3 R0	; SEE IF READ ONLY DRIVE ; IF NOT READ ONLY, BRANCH ; SET READ ONLY BIT ; DECREMENT COUNT
37 007412 38 007413 39 007414	057375 110203 110203			0	BNE ROL ROL	5\$ R3 R3	: IF COUNT UNEXPIRED, BRANCH : ROTATE MASK TO CORRECT POSITION : ROTATE MASK TO CORRECT POSITION
40 007415 41 007416 42 007417	110203 110203 103203	177417			ROL BIC	R3 R3 #LBHINB,R3	ROTATE MASK TO CORRECT POSITION ROTATE MASK TO CORRECT POSITION CLEAR UNUSED BITS
43 007421 44 007423 45 007424 46 007425	100653 024161 115003 057440	000032			MOV CALL TST BNE	R3,U.WPRT(R5) RECOVR R3 ONLERR	: SAVE : 'RECOVER' FROM ALL ERRORS : SEE IF IT EXECUTED CORRECTLY : IF NOT, BRANCH
47 007426 48 007430 49 007432	104657 103207 100657	000033 002000 000033			MOV BIC MOV	U.PARM(R5),R0 #SEKINP,R0 RO,U.PARM(R5)	; GET UNIT PARAMETERS ; CLEAR SEEK IN PROGRESS BIT ; SAVE UNIT PARAMETERS
50 007434 51 007436 52 007437 53 007440	104207 104051 007466	000001		ONI FRR.	MOV MOV BR SOFTER	#SETUP,RO R5,R1 DRVEXT 21	: SETUP NEXT ROUTINE CALLED : MAKE R1 NON-ZERO (DEFERRED CALL) : BRANCH : REPORT ERROR
007440 007443 007446 007451	104200 104200 101200 104200	003170 000025 001400 007451	001012 001010 001010 001007				MOV #ER21.0UT.04 MOV #21.0UT.02 BIS #ERSOFT.OUT.02 MOV #OUT.01

UDAT4 DISK EXERCISER MACRO X04.00 9-JUL-81 01:12:03 PAGE 87-1 INITD - LAST ERROR CHECKING AND SETUP MODULE BEFORE TESTING S

007454 007456 54 007460	104202 104020	000013 001006			ENDERR		MOV MOV	#ERRMES,R2 R2,OUT.RQ			
007460 55 007463 56 007465 57 007466	101200 104207 114001 003127	000005 007334	002357	DRVEXT:	MOV CLR	#INITD,RO R1 JMPRET	: RE-EXECUTE DRIVE : IMMIDATE CALL TO : RETURN TO SEQUENCE	DRIVE ONLINE	; SE	1 THE	POSITION

2 007467			.SBTTL GMPARM:	GMPARM	- GET MASTER PAR	RAMETE	RS (PATTERN	16) AND SET U	P OVERLAY ADDRESSES
4				GET MAS	TER PARAMETERS				
6 007467 7 007471 8 007473 9 007475 10 007477 11 007501 12 007503 13 007504 14 007506 15 007507 16 007510 17 007511 18 007513 19 007515 20 007516 21 007520 22 007522 23 007523 24 007524 25 007526 26 007527 27 007531 28 007533 30 007535 31 007536 32 007537	104302 104303 104020 104207 104205 104651 110601 103201 105012 047511 115403 100652 104651 101031 100651 104207 057501 104207 104207 104207 104272 017542 104273 100213	007774 007775 002362 000011 002360 000003 100001 000006 000007 000004 000003 001045	MORE:	MOV MOV MOV MOV MOV MOV BIC ADD INC MOV BIOV MOV BOV MOV MOV MOV MOV MOV MOV MOV M	OVSTRT,R2 OVSTRT+1,R3 R2,OTABLE+2 #NUMOVL-1,R0 #OTABLE,R5 3(R5),R1 R1 #100001,R1 R1,R2 1\$ R3 R2,6(R5) 7(R5),R1 R3,R1 R1,7(R5) #4,R5 R0 MORE #14MPRM,R0 HOSTRQ #IN.01,R0 (R0)+,R2 3\$ #PATO,R1 R2,(R1)+ (R0)+,R3 R3,(R1)+	GEORGE SERVICE	T STARTING EVE STARTING TO HAS NUMBER TO HAS OVERLA HIFT TO MAKE LEAR UNUSED IND ADDRESS NO CARRY, ROPOGATE CAR TORE STARTIN TOVERLAY L TOVERLA	BYTES BITS OF NEXT OVERLAY BRANCH RY IG ADDRESS OF NI ENGTH (<<2) OVERLAY ADDRESS OVERLAY ADDRESS OVERLAY AREA INT INT SET UP, IOST REQUEST PATTERN INFORM I OF PATTERN I OF PATTERN I BRANCH PATTERN 16 AREA PATTERN RN 16 AREA	RLAY (HI) DVERLAY TABLE EXT OVERLAY BRANCH ATION
33 007540 34 007541 35 007542	117402 057536 000000		3\$:	DEC BNE RETURN	R2 2\$: IF	CREMENT COU COUNT UNEX TURN TO CAL	HAUSTED, BRANCI LING PROGRAM	•

1 2 007543	.SBTTL GETU:	GETU - PO	LL ALL PORTS,	THEN GET UNITS TO TEST	
34		POLL ALL PO	RTS AND FILL	IN A UDA PORT INFORMATION TABLE	(UNITS)
6 007543 104205 000001 7 007545 104204 004514 8 007547	1\$:	MOV #1,1 MOV #UN PUSH R4		: MOVE INITIAL MASK TO R5 : R4 POINTS TO UNIT TABLE : SAVE R4	MOV B/ -/SB)
007547 100464 9 007550 104052 10 007551 060011 11 007552 104207 040000 12 007554 020720 13 007555 102201 010000 14 007557 057563 15 007560 102201 000001 16 007562 057566 17 007563 117407 18 007564 057554 19 007565 007641 20 007566 104203 001501 21 007570 104237 22 007571 104231 23 007572 060004 24 007573 115001	14\$: 3\$: 5\$:	CALL RDS BIT #100 BNE 3\$ BIT #RC BNE 5\$ DEC RO BNE 14\$ BR 6\$ MOV #CR MOV (R3 MOV (R3 XFC SENI TST R1	IT 000,R0 TAT 000,R1 VRDY,R1 .GST,R3)+,R0)+,R0	MOVE MASK TO R2 INITILIZE THE DRIVE MOVE TIMEOUT TO RO GET STATUS SEE IF STATUS IS VALID IF NOT, BRANCH SEE IF RECEIVER READY ASSERTED IF SO, BRANCH DECREMENT COUNT IF INCOMPLETE, BRANCH NO VALID STATE R3 POINTS TO GET STATUS COMMANI SET ADR OF SDI COMMAND BUFFER SET BUFFER LENGTH SEND COMMAND DID UNIT ACCEPT COMMAND	
25 007574 057641 26 007575 100464 27 007576 104204 000012 28 007600 104137 29 007601 104631 000001 30 007603 060005 31 007604 115001 32 007605 017615 33 007606 106201 000001 34 007610 057613 35 007611 117404 36 007612 057600 37 007613 007613	11 \$:	BNE PUSH R4 MOV #10 MOV (R3 MOV 1(R) XFC RCV TST R1 BEQ 13\$ CMP #1.0 BNE 12\$ DEC R4 BNE 11\$ POP R4	3),R1	: IF SO, BRANCH : SAVE R4 : SET UP SHORT TIMEOUT : SET DATA BUFFER ADDRESS : SET BUFFER LENGTH : SEND RECEIVE SDI COMMAND : DID ERROR OCCUR : IF NOT, BRANCH : SEE IF TIMEOUT : IF NOT, BRANCH : DECREMENT TIMEOUT VALUE : IF NOT TIMEOUT, BRANCH : RESTORE R4	MOV R4,-(SP) MOV (SP)+,R4
38 007614 007641		BR 6\$: BRANCH TO EXIT	

1	VALID	UNIT FOUND, FILL	IN TABLE
4 007615	POP	R4	; RESTORE R4
007615 104264 5 007616 104307 001570	MOV	ST.RO	; RO HAS UNIT NUMBER
6 007620 104072	MOV	R0,R2	; COPY RO TO R2
7 007621 103207 170000	BIC	#^CHBHINB,RO	; RO HAS UNIT NUMBER
8 007623 101207 040000	BIS	#40000,R0	; FLAG UNIT AS NOT TESTED
9 007625 110702	SWAB	R2	; SWAP R2'S BYTES
10 007626 110602	ROR	R2	; MOVE SUBUNIT MASK TO LO NIBBLE
11 007627 110602	ROR	R2	; MOVE SUBUNIT MASK TO LO NIBBLE
12 007630 110602	ROR	R2	; MOVE SUBUNIT MASK TO LO NIBBLE
13 007631 110602	ROR	R2	; MOVE SUBUNIT MASK TO LO NIBBLE
14 007632 103202 177760	BIC	#LBLONB,R2	; CLEAR ALL BUT SUBUNIT BITS
15 007634 110602 4\$:	ROR	R2	: MOVE SUBUNIT BIT TO CARRY
16 007635 047641	BCC	6\$; IF NO MORE SUBUNITS, BRANCH
17 007636 100247	MOV	RO,(R4)+	; MOVE SUBUNIT NUMBER TO TABLE
18 007637 115407	INC	RO	; INCREMENT SUBUNIT NUMBER
19 007640 007634	BR	4\$ R4	BRANCH
20 007641 6\$: 007641 104264	POP	N4	; R4 POINTS TO START OF UNIT JUST HANDLED MOV (SP)+,R4
21 007642 105204 000004	ADD	#4.R4	; R4 WILL POINT TO NEXT UNIT (CLEAR CARRY FOR ROL)
22 007644 110205	ROL	R5	REST HAS NEXT UNIT PORT MASK
23 007645 106205 000020	CMP	#20,R5	: SEE IF ALL PORTS TESTED
24 007647 057547	BNE	1\$: IF NOT, BRANCH

2		NOW GET TI	HE PLUG NUMBERS	TO TEST AND FIND THEM IN THE TABLE
4 007650 104207 000 5 007652 020751	012		UTOTST,RO :	GET WHAT SUBUNIT NUMBERS TO TEST REQUEST GET THE PLUG NUMBERS
6 007653 104207 001 7 007655 104201 004 8 007657 104112	.514 7\$: 8\$:	MOV #1	IN.01,R0 ; UNITS,R1 ; R1),R2 ;	RO POINTS TO UNIT NUMBERS TO TEST R1 POINTS TO UDA PORT INFORMATION R2 HAS UNIT
11 007663 106172 12 007664 057667	0000	BIC #1 CMP (I BNE 9:	*CHBHINB,R2 RO),R2	IF NONE, BRANCH CLEAR THE 'NOT TESTED BIT' FOR COMPARISON SEE IF IT IS A UNIT TO TEST NO MATCH
13 007665 100112 14 007666 007726 15 007667 115401		MOV RI BR 10 INC R	2,(R1) 0\$	SAVE UNIT AS ONE TO TEST LOOK FOR THE NEXT ONE LOOK AT NEXT UNIT
16 007670 106201 004 17 007672 057657 18 007673	.534	CMP #1	UNITS+16.,R1 :	SEE IF ENTIRE TABLE SEARCHED IF NOT, BRANCH REPORT FATAL ERROR
007673 104200 010 007676 104200 000 007701 101200 000 007704 104200 007 007707 104202 000	0365 001012 0120 001010 0400 001010 0704 001007	DEVITE SI		MOV #ER80,OUT.04 MOV #80,OUT.02 BIS #FTLDEV,OUT.02 MOV #.,OUT.01 MOV #ERRMC,R2 MOV R2,OUT.RQ
19 007713 104172 20 007714 104020 001 21 007716 104207 000 22 007720 020751	011 0014	MOV R	RO),R2 2,OUT.03 ERRMC,RO OSTRO	GET UNIT NUMBER SAVE IN OUTPUT SET UP FOR REPORT REPORT ERROR
23 007721 104207 000 24 007723 020751 25 007724 060021 26 007725 060000 27 007726 115407	10\$:	CALL HE	DONE,RO OSTRO XIT REAK	SEND END-OF-TEST TO HOST TERMINATE DM ERROR ******* POINT TO NEXT !' TO TEST
28 007727 104172 29 007730 037655 30 007731 000000	104.		RO).R2 :	CHECK NEXT UNI. FIND IN UDA PORT INFORMATION RETURN TO CALLING PROGRAM

1 23 4 5				SBITL	L ****** NON-LOADED OVERLAY, ERROR MESSAGES
67					ERROR MESSAGE FORMAT BUFFERS (NEVER LOADED INTO UDA)
10 11 000000 12 000033	025207 042 042	124 104	110 111		DMOVLY MS,0 ; ERROR MESSAGE OVERLAY .WREDC ;OUTPUT EDC FOR THIS OVERLAY .NLIST BEX .ASCII \'THIS ERROR SHOULD NEVER APPEAR, IF IT DOES, CONTACT'N\ .ASCII \'DIAGNOSTIC ENGINERRING < <save printout="">>'N\</save>
13 000061 14 000062 15 000102 16 000115 17 000135 18 000160 19 000176 20 000224	000 042 042 042 042 042	117 122 106 040 122 123	125 105 111 042 105 124	ER1:	.BYTE 0 .ASCII \'DUTSTANDING RESPONSE FROM DRIVE'\ .ASCII \'RESPONSE FOUND: 'D8N\ .ASCII \'FIRST SEVEN WORDS OF RESPONSE:'N\ .ASCII \''D16S2016S2016S2016S2016S2016S2016N\ .ASCII \'REAL TIME DRIVE STATE 'H16N\ .ASCII \'STATUS: 'H16S2H16S2H16S2H16S2H16S2H16S2H16N\ .BYTE 0
21 000225 22 000253 23 000275 24 000317 25 000340 26 000362	000 042 042 042 042 042 000	105 040 040 040 040	122 040 040 040 040	ER2:	BYTE 0 ASCII \'ERROR IN DBN/RBN/LBN TO CYLINDER CONVRSION'N\ ASCII \'' L/R/DBN BEGIN COMPUTED 'D24N\ ASCII \'' L/R/DBN PER TRACK 'D8N\ ASCII \'' LBNS PER TRACK IF RBN 'D8N\ ASCII \'' STARTING CYLINDER 'D32N\ BYTE 0
27 000363 28 000412 29 000441 30 000462 31 000502 32 000520	042 042 042 042 042 042	123 122 123 040 122 123	105 105 105 040 105 124	ER3:	ASCII \'SEEK DID NOT COMPLETE, NEITHER ATTENTION OR'N\ ASCII \'READ/WRITE READY WAS ASSERTED BEFORE TIMEOUT'N\ ASCII \'SEEK FROM CYL 'D28'' GROUP 'D8N\ ASCII \' TO CYL 'D28'' GROUP 'D8N\ ASCII \'REAL TIME DRIVE STATE 'H16N\ ASCII \'STATUS: 'H16S2H16S2H16S2H16S2H16S2H16S2H16N\
33 000546 34 000547 35 000574 36 000614 37 000635 38 000653 39 000671	000 042 042 042 042 042	101 123 040 111 122 123	124 105 040 115 105 124	ER4:	BYTE 0 ASCII \'ATTENTION ASSERTED AFTER SEEK INITIATED'N\ ASCII \'SEEK FROM CYL'D28'' GROUP 'D8N\ ASCII \'INTO CYL'D28'' GROUP 'D8N\ ASCII \'IMMIDATE DRIVE STATE 'D16N\ ASCII \'REAL TIME DRIVE STATE 'H16N\ ASCII \'STATUS: 'H16S2H16S2H16S2H16S2H16S2H16S2H16S2H16N\
40 000717 41 000720 42 000743 43 000761 44 000774 45 001007 46 001027 47 001056 48 001074	000 042 042 042 042 042 042 042	110 127 114 101 124 117 122 123	105 122 057 103 122 122 105 124	ER5:	BYTE 0 ASCII \'HEADER COMPARE FAILURE DURING WRITE'N\ ASCII \'WRITE ATTEMPT RETRIES: 'D3N\ ASCII \'L/DBN NUMBER 'D24N\ ASCII \'ACTUAL L/R/DBN 'D24N\ ASCII \'TRK 'D8'' GRP 'D8'' CYL 'D28N\ ASCII \'DRIGIN OF LAST SEEK WAS CYL 'D28'' GROUP 'D8N\ ASCII \'REAL TIME DRIVE STATE 'H16N\ ASCII \'STATUS: 'H16S2H16S2H16S2H16S2H16S2H16S2H16S1
49 001122 50 001123 51 001147 52 001165 53 001200 54 001213 55 001233 56 001262	000 042 042 042 042 042 042 042	124 127 114 101 124 117 122	111 122 057 103 122 122 105	ER6:	BYTE O ASCII \'TIMEOUT OF DRIVE DURING WRITE ATTEMPT'N\ ASCII \'WRITE ATTEMPT RETRIES: 'D3N\ ASCII \'L/DBN NUMBER 'D24N\ ASCII \'ACTUAL L/R/DBN 'D24N\ ASCII \'TRK 'D8' GRP 'D8' CYL 'D28N\ ASCII \'DRIGIN OF LAST SEEK WAS CYL 'D28' GROUP 'D8N\ ASCII \'REAL TIME DRIVE STATE 'H16N\

****** NOI	N-LOADED OVER	RLAY, ERROR N	ESSAGES		
57 001300 58 001330	0 042	123 124		.ASCII	\"STATUS: "H16S2H16S2H16S2H16S2H16S2H16S2H16N\
58 001326 59 001326 60 00134 61 00134 62 001366 63 00137 64 00141 65 001436 66 00144 67 00144 68 00147 69 00150	7 042 1 042 7 042 2 042 5 042 5 042	105 103 122 105 114 057 101 103 124 122 105 104		ASCII	\'ECC DETECTED ERROR'N\ \'RETRY 'D4N\ \'L/DBN NUMBER 'D24N\ \'ACTUAL L/R/DBN 'D24N\ \'TRK 'D8'' GRP 'D8'' CYL 'D28N\ \'EDC COMPUTED 'D16N\ \'EDC READ 'D16N\
71 00152	6 042	105 103 122 105 114 057 101 103 124 122		.ASCII .ASCII .ASCII .ASCII	O \'ECC DETECTED ERROR, BUT CORRECTION FAILED'N\ \'RETRY 'D4N\ \'L/DBN NUMBER 'D24N\ \'ACTUAL L/R/DBN 'D24N\ \'TRK 'D8'' GRP 'D8'' CYL 'D28N\ O
72 00154 73 00154 74 00160 75 00161 76 00162 77 00164 78 00166	5 042 3 042 6 042 1 042	105 103 122 105 114 057 101 103 124 122		.ASCII .ASCII .ASCII .ASCII	\"ECC DETECTED ERROR, BUT CORRECTIONS EXCEED UNIT THRESHOLD'N\ \"RETRY "D4N\ \"L/DBN NUMBER "D24N\ \"ACTUAL L/R/DBN "D24N\ \"TRK "D8" GRP "D8" CYL "D28N\ 0
79 00166 80 00172 81 00173 82 00174 83 00175 84 00177 85 00201	2 042 0 042 0 042 3 042 6 042 6 042 1 042	105 103 122 105 114 057 101 103 124 122 105 104		ASCII ASCII ASCII ASCII ASCII ASCII ASCII ASCII	\"ECC DETECTED ERROR, CORRECTED IT, BU! EDC STILL DETECTS ERROR'N\ \"RETRY 'D4N\ \"L/DBN NUMBER 'D24N\ \"ACTUAL L/R/DBN 'D24N\ \"TRK 'D8'' GRP 'D8'' CYL 'D28N\ \"EDC COMPUTED 'D16N\ \"EDC READ 'D16N\
86 00202 87 00202 88 00205	5 042	105 122	P ER11:	.ASCII	"ERROR RECOVERY TRIED ALL LEVELS WITHOUT SUCCESS'N
89 00205 90 00210 91 00212 92 00213 93 00215 94 00216 95 00221 96 00223	7 042 6 042 1 042 4 042 7 042 7 042 0 042 6 123	104 101 114 057 101 103 124 122 120 101 117 106 117 106 064 117		.ASCII .ASCII .ASCII .ASCII .ASCII .ASCII .ASCII .ASCII .ASCII	\'DATA COMPARISON AGAINST KNOWN PATTERN FAILED'N\ \'L/DBN NUMBER 'D24N\ \'ACTUAL L/R/DBN 'D24N\ \'TRK 'D8'' GRP 'D8'' CYL 'D28N\ \'PATTERN NUMBER 'D4N\ \'DFFSET OF ERROR WITHIN BUFFER 'D8N\ \'DFFSET OF ERROR WITHIN DISPLAYED LIST 'D8N\ \S4016S4016S4016S4016S4016S4016S4016\ \S4016S4016S4016S4016S4016S4016S4016\
98 00230 99 00230 100 00233 101 00235 102 00237 103 00241 104 00244 105 00244 106 00246 107 00247	042 4 042 5 042 5 042 3 042	125 116 123 105 040 040 122 105 123 124		ASCII ASCII ASCII ASCII ASCII BYTE ASCII	\'UNABLE TO RECEIVE REAL TIME DRIVE STATE AFTER SEEK'N\ \'SEEK FROM CYL 'D28'' GROUP 'D8N\ \' TO CYL 'D28'' GROUP 'D8N\ \'REAL TIME DRIVE STATE 'H16N\ \'STATUS: 'H16S2H16S2H16S2H16S2H16S2H16S2H16N\ 0
105 00244	1 000 2 042 7 000	125 116	ER17:	ASCII	"UNABLE TO RECEIVE REAL TIME DRIVE STATE"N
107 00247 108 00251 109 00253 110 00256	4 042	101 124 122 105 123 124	5	.BYTE .ASCII .ASCII .BYTE .ASCII	\'ATTEMPT TO WRITE ON WRITE PROTECTED DRIVE'N\ \'REAL TIME DRIVE STATE 'H16N\ \'STATUS: 'H16S2H16S2H16S2H16S2H16S2H16S2H16N\ 0
111 00256 112 00260 113 00262	3 042 5 042	110 105 122 105 114 057		ASCII ASCII	\'HEADER COMPARE FAILURE DURING READ'N\ \'READ ATTEMPT RETRIES: 'D3N\ \'L/DBN NUMBER 'D24N\

**** NON-L	DADED OV	ERLAY.	ERROR MES	SSAGES		
	042 042 042 042 042	101 124 117 122 123	103 122 122 105 124		.ASCII \'ACTUAL L/R/DBN 'D24N\ .ASCII \'TRK 'D8'' GRP 'D8'' CYL 'D28N\ .ASCII \'DRIGIN OF LAST SEEK WAS CYL 'D28'' GROUP 'D8N\ .ASCII \'REAL TIME DRIVE STATE 'H16N\ .ASCII \'STATUS: 'H16S2H16S2H16S2H16S2H16S2H16S2H16N\	
0 002765 1 003010 2 003026 3 003041 4 003054 5 003074 6 003123 7 003141	042 042 042 042 042 042 042	124 122 114 101 124 117 122 123	111 105 057 103 122 122 105 124	ER20:	ASCII \'TIMEOUT OF DRIVE DURING READ ATTEMPT'N\ ASCII \'READ ATTEMPT RETRIES: 'D3N\ ASCII \'L/DBN NUMBER 'D24N\ ASCII \'ACTUAL L/R/DBN 'D24N\ ASCII \'TRK 'D8' GRP 'D8' CYL 'D28N\ ASCII \'TRK 'D8' GRP 'D8' CYL 'D28' GROUP 'D8N\ ASCII \'TREAL TIME DRIVE STATE 'H16N\ ASCII \'STATUS: 'H16S2H16S2H16S2H16S2H16S2H16S2H16N	
9 003170	042	125	116	ER21:	.ASCII \'UNABLE TO BRING DRIVE ONLINE/CHANGE MODE/CLEAR ERRORS FOR TEST'N'	١
1 003231 2 003261 3 003267 4 003302 5 003315	042 042 042 042 042	105 122 114 101 124	103 105 057 103 122	ER23:	ASCII V'ECC DETECTED ERROR IN BUFFER AND CORRECTED IT'NI	
8 003365 9 003373 0 003406 1 003421 2 003441 3 003454	042 042 042 042 042 042	105 122 114 101 124 105 105	104 105 057 103 122 104 104	ER24:	.ASCII \ 'L/DBN NUMBER 'D24N\ .ASCII \ 'ACTUAL L/R/DBN 'D24N\ .ASCII \ 'TRK 'D8'' GRP 'D8'' CYL 'D28N\ .ASCII \ 'EDC COMPUTED 'D16N\ .ASCII \ 'EDC READ 'D16N\	
5 003470 6 003515 7 003530	042 042 042	101 114 101	124 057 103	ER25:	.ASCII \'ATTEMPTED WRITE MAXIMUM NUMBER OF TIMES'N\ .ASCII \'L/DBN NUMBER 'D24N\ .ASCII \'ACTUAL L/R/DBN 'D24N\	
9 003544 0 003570 1 003603	042 042 042	101 114 101	124 057 103	ER26:	.ASCII \'ATTEMPTED READ MAXIMUM NUMBER OF TIMES'N\ .ASCII \'L/DBN NUMBER 'D24N\ .ASCII \'ACTUAL L/R/DBN 'D24N\	
3 003617 4 003646 5 003661 6 003701 7 003717	042 042 042 042 042	123 101 124 122 123	105 103 122 105 124	ER27:	.ASCII \'SEEK COMMAND RECIEVED UNSUCCESSFUL RESPONSE'N\ .ASCII \'ACTUAL L/R/DBN 'D24N\ .ASCII \'TRK 'D8'' GRP 'D8'' CYL 'D28N\ .ASCII \'REAL TIME DRIVE STATE 'H16N\ .ASCII \'STATUS: 'H16S2H16S2H16S2H16S2H16S2H16S2H16N\	
0 003746	042 042	122 122	105 105	ER28:	.ASCII \'RECEIVER READY NEVER ASSERTED AFTER INIT'N\ .ASCII \'REAL TIME DRIVE STATE 'O16N\	
2 004012	042	125	116	ER29:	.ASCII \'UNABLE TO GET REAL TIME DRIVE STATE AFTER DRIVE INITIALIZE'N\	
6 004051 5 004075 6 004113 7 004126 8 004141 9 004170	042 042 042 042 042 042 042	122 127 114 107 117 111 122	105 122 057 122 122 115 105	ER30:	ASCII \'READ/WRITE READY DROPPED BEFORE WHITE'N\ ASCII \'WRITE ATTEMPT RETRIES: 'D3N\ ASCII \'L/DBN NUMBER 'D24N\ ASCII \'GRP'D8'' CYL'D28N\ ASCII \'DRIGIN OF LAST SEEK WAS CYL'D28'' GROUP 'D8N\ ASCII \'IMMIDATE STATE 'D16N\ ASCII \'REAL TIME DRIVE STATE 'H16N\	
	**** NON-LI 4 002636 5 002651 6 002671 7 002720 8 002765 1 003010 2 003026 3 003041 4 003054 5 003123 7 003141 8 003167 9 003230 1 003231 2 003261 3 003267 4 003335 7 003336 8 003365 9 003441 3 003467 5 003515 7 003530 8 003543 9 003544 1 003467 5 003661 7 003717 8 003745 9 003746 0 003773 1 004012 3 004050 1 004051 5 004075 8 003773 1 004012 3 004050 1 004075 9 003773 1 004012 3 004050 1 004075 9 003773 1 004012 3 004050 1 004075 9 003773 1 004012 3 004050 1 004075 9 003773 1 004012 3 004050 1 004075 9 004075 9 004075 9 004075	4 002636	4 002636	4 002636	5 002651	1. 002636

******* NON-LO	ADED OVER	LAY,	ERROR ME	SAGES	L.OS TAGE	
171 004220	042	123	124			"STATUS: "H1652H1652H1652H1652H1652H16N\
172 004246 173 004247 174 004272 175 004310 176 004323 177 004336 178 004365 179 004377 180 004415	000 042 042 042 042 042 042 042	122 122 114 107 117 111 122 123	105 105 057 122 122 115 105 124	ER31:	ASCII NASCII NAS	('READ/WRITE READY DROPPED BEFORE READ'N\ \('READ ATTEMPT RETRIES: 'D3N\\\'L/DBN NUMBER 'D24N\\\'GRP 'D8'' CYL 'D28N\\\'ORIGIN OF LAST SEEK WAS CYL 'D28'' GROUP 'D8N\\\'IMMIDATE STATE 'D16N\\\'REAL TIME DRIVE STATE 'H16N\\\'STATUS: 'H16S2H16S2H16S2H16S2H16S2H16N\\
181 004443 182 004444 183 004475 184 004527	000 042 042 042	111 124 123	116 110 125	ER32:	.ASCII	(''INSUFFICIENT BUFFER MEMORY FOR READ/WRITE BUFFERS''\ \''THIS ERROR SHOULD NEVER APPEAR, CONTACT DIAGNOSTIC''\ \''SUPPORT < <save printout="">>''\</save>
185 004545 186 004546 187 004602	000 042 042 000	103 122	110 125	ER33:	.ASCII V	('CHECKSUM ERRORS WHEN READING OVERLAYS FROM HOST MEMORY'N\ \'RUN TEST 1 TO INVESTIGATE PROBLEM'N\
188 004624 189 004625 190 004663 191 004677 192 004716	042 042 042 042	101 122 114 123	114 105 101 105	ER40:	.ASCII \\ .ASCII \\ .ASCII \\	\''ALL COPIES OF RCT READ WITH ERROR, UNABLE TO FIND RBN TO'N\ \''REPLACE REVECTORED LBN'N\ \''LAST RCT LBN SEARCHED: 'D24N\ \''SEARCING FOR LBN: 'D24N\ O
193 004734 194 004735 195 004773 196 005017 197 005035	000 042 042 042 042	101 122 114 123	114 105 101 105	ER41:	.ASCII \	\''ALL COPIES OF RCT READ WITH ERROR, UNABLE TO FIND RBN TO'N\ \''REPLACE LBN WITH HEADER COMPARE ERROR'N\ \''LAST RCT LBN SEARCHED: 'D24N\ \''SEARCING FOR LBN: 'D24N\
198 005054 199 005055 200 005113 201 005133 202 005152	000 042 042 042 042	101 122 114 123	114 105 101 105	ER42:	.ASCII .ASCII .ASCII .ASCII .	\''ALL COPIES OF RCT READ WITH ERROR. UNABLE TO FIND RBN TO'N\ \''REPLACE LBN WITH TIMEOUT ERROR'N\ \''LAST RCT LBN SEARCHED: 'D24N\ \''SEARCING FOR LBN: 'D24N\ O
203 005170 204 005171 205 005226 206 005236 207 005255	000 042 042 042 000	105 122 123	116 105 105	ER43:	.ASCII	\'ENTIRE RCT AREA SEARCHED, COULD NOT FIND RBN TO REPLACE'N\ \'REVECTORED LBN'N\ \'SEARCING FOR LBN: 'D24N\
208 005256 209 005313 210 005333 211 005351	042 042 042	105 114 123	116 102 105	ER44:	.ASCII	\'ENTIRE RCT AREA SEARCHED, COULD NOT FIND RBN TO REPLACE'N\ \'LBN WITH HEADER COMPARE ERROR'N\ \'SEARCING FOR LBN: 'D24N\
212 005352 213 005407 214 005423	000 042 042 042	105 114 123	116 102 105	ER45:	.ASCII .ASCII	\'ENTIRE RCT AREA SEARCHED, COULD NOT FIND RBN TO REPLACE'N\ \'LBN WITH TIMEOUT ERROR'N\ \'SEARCING FOR LBN: '24N\
215 005442 216 005443 217 005474 218 005507	000 042 042 000	102 105	105 116	ER50:	.ASCII .BYTE	\'BEGIN/END SET STATING BLOCK NUMBER GREATER THAN'N\ \'ENDING BLOCK NUMBER N\
219 005510 220 005541 221 005574	042 042 000	102 105	105 121	ER51:	-ASCII	"BEGIN/END SET STARTING BLOCK NUMBER LESS THAN OR'N' "EQUAL TO THE PREVIOUS ENDING BLOCK NUMBER (GVERLAP)" N'
222 005575 223 005630 224 005635	042 042 042	114 115 115	101 101 101	ER52:	.ASCII	\'LAST BEGIN/END SET ENDING BLOCK NUMBER GREATER THAN'N\ \'MAXIMUM'N\ \'MAXIMUM POSSIBLE BLOCK NUMBER: 'D24N\
225 005657 226 005660 227 005673	000 042 000	104		ER53:	.ASCII	O DUPLICATE BAD BLOCKS'NY

****** NON-LO	ADED OVERLA	Y, ERROR M	ESSAGES	
228 005674 229 005720	042 1	14 101 15 101	ER54:	.ASCII \'LAST BAD BLOCK NUMBER EXCEEDS MAXIMUM'N\ .ASCII \'MAXIMUM POSSIBLE BLOCK NUMBER: 'D24N\ .BYIE 0
230 005742 231 005743 232 005776 233 006015 234 006030 235 006042 236 006071 237 006107 238 006135	042 1 042 1 042 1 042 1 042 1	25 116 27 122 14 057 07 122 17 122 22 105 23 124		BYTE 0 ASCII \'UNABLE TO RECEIVE REAL TIME DRIVE STATE BEFORE WRITE'N\ ASCII \'UNABLE ATTEMPT RETRIES: 'D3N\ ASCII \'L/DBN NUMBER 'D24N\ ASCII \'GRP 'D8'' CYL 'D28N'\ ASCII \'ORIGIN OF LAST SEEK WAS CYL 'D28'' GROUP 'D8N\ ASCII \'REAL TIME DRIVE STATE 'H16N\ ASCII \'STATUS: 'H16S2H16S2H16S2H16S2H16S2H16S2H16N\ BYTE 0
239 006136 240 006171 241 006207 242 006222 243 006234 244 006263 245 006301 246 006327	042 1 042 1 042 1 042 1 042 1 042 1	25 116 22 105 14 057 07 122 17 122 22 105 23 124		ASCII \'UNABLE TO RECEIVE REAL TIME DRIVE STATE BEFORE READ'N\ ASCII \'READ ATTEMPT RETRIES: 'D3N\ ASCII \'L/DBN NUMBER 'D24N\ ASCII \'GRP 'D8'' CYL 'D28N\ ASCII \'ORIGIN OF LAST SEEK WAS CYL 'D28'' GROUP 'D8N\ ASCII \'REAL TIME DRIVE STATE 'H16N\ ASCII \'STATUS: 'H16S2H16S2H16S2H16S2H16S2H16S2H16S2H16N\ BYTE 0
246 006327 247 006330 248 006363 249 006410 250 006422	042 1	17 126 06 122 03 131	ER57:	.ASCII \'OVERFLOW WHEN CALCULATING THE STARTING/ENDING L/DBN'N\ .ASCII \'FROM THE GIVEN STARTING/ENDING CYLINDER'N\ .ASCII \'CYLINDER TOO LARGE'N\ .BYTE 0
251 006423 252 006456 253 006472 254 006514	042 1 042 1	15 101 24 122 15 101	ER58:	.ASCII \'MAXIMUM TRACK/GROUP GIVEN EXCEEDS MAXIMUM FOR DEVICE'N\ .ASCII \'TRACK/GROUP GIVEN: 'D8N\ .ASCII \'MAXIMUM TRACK/GROUP ON DEVICE: 'D8N\ .BYTE 0
255 006515 256 006537		24 127	ER59:	ASCII \'TWO IDENTICAL TRACKS/GROUPS GIVEN'N\ BYTE 0
257 006540 258 006574 259 006632 260 006667 261 006727	042 1 042 1 042 1 042 1	05 116 15 101 03 131 24 110 24 105		.ASCII \'ENDING LBN COMPUTED FROM ENDING CYLINDER GIVEN EXCEEDS'N\ .ASCII \'MAXIMUM LBN NUMBER ON DEVICE. IF YOU SPECIFIED THE LAST'N\ .ASCII \'CYLINDER ON THE DEVICE, THE REVECTOR TABLE STARTS WITHIN'N\ .ASCII \'THE CYLINDER SPECIFIED. IF SO, THE MAXIMUM CYLINDER YOU CAN'N\ .ASCII \'TEST IS ONE LESS THAN THE MAXIMUM, OR TEST THE ENTIRE AREA'N\
262 006765 263 006766 264 007022 265 007060 266 007117 267 007156 268 007212	042 1 042 1 042 1 042 1 042 1	05 116 15 101 03 131 27 111 31 117 05 116	ER62:	.BYTE 0 .ASCII \'ENDING DBN COMPUTED FROM ENDING CYLINDER GIVEN EXCEEDS'N\ .ASCII \'MAXIMUM DBN NUMBER ON DEVICE. IF YOU SPECIFIED THE LAST'N\ .ASCII \'CYLINDER IN THE DIAGNOSTIC AREA, THE READ ONLY GROUPS START'N\ .ASCII \'WITHIN THE CYLINDER SPECIFIED. IF SO, THE MAXIMUM CYLINDER'N\ .ASCII \'YOU CAN TEST IS ONE LESS THAN THE MAXIMUM, OR TEST THE'N\ .ASCII \'ENTIRE DIAGNOSTIC AREA'N\ .BYTE 0
268 007212 269 007227 270 007230 271 007243 272 007244 273 007262 274 007310	042 1 122 0 042 1 042 1	24 111 61 22 105 23 124		.ASCII \'TIMEOUT OF UDA SEND'N\ .ASCII \R1\ .ASCII \'REAL TIME DRIVE STATE 'H16N\ .ASCII \'STATUS: 'H16S2H16S2H16S2H16S2H16S2H16S2H16N\
275 007311 276 007325 277 007326 278 007344	122 0 042 1 042 1	24 111 61 22 105 23 124		.BYTE 0 .ASCII \'TIMEOUT OF UDA RECEIVE'N\ .ASCII \R1\ .ASCII \'REAL TIME DRIVE STATE 'H16N\ .ASCII \'STATUS: 'H16S2H16S2H16S2H16S2H16S2H16S2H16N\
279 007372 280 007373 281 007424 282 007425 283 007443 284 007471	122 0	06 111 61 22 105 23 124		.BYTE 0 .ASCII \'FIRST WORD RECEIVED BY UDA WAS NOT A START FRAME'N\ .ASCII \R1\ .ASCII \'REAL TIME DRIVE STATE 'H16N\ .ASCII \'STATUS: 'H16S2H16S2H16S2H16S2H16S2H16S2H16S2H16N\ .BYTE 0

THOIR	LONDED C	SALUENT,	EMMON TIE	SUMUES		
285 007472 286 007514	042 122	106 061	122	ER73:	.ASCII	\"FRAMING ERROR ON SDI LEVEL O READ'N\ \R1\
287 007515 288 007533	042	122	105 124		ASCII	\"REAL TIME DRIVE STATE "H16N\ \"STATUS: "H16S2H16S2H16S2H16S2H16S2H16S2H16N\
289 007561	000	123	124		BYTE	0
290 007562 291 007604	042 122	103 061	110	ER74:	.ASCII	\'CHECKSUM ERROR ON SDI LEVEL O READ'N\ \R1\
292 007605	042	122	105		.ASCII	\'REAL TIME DRIVE STATE 'H16N\
293 007623 294 007651	042	123	124		.ASCII	\''STATUS: 'H16S2H16S2H16S2H16S2H16S2H16S2H16N\
295 007652	042	122	105	ER75:	.ASCII	"RECEIVE BUFFER SIZE SMALLER THAN RESPONSE"N
296 007700 297 007701	122 042	061 122	105		.ASCII	\RI\ \'REAL TIME DRIVE STATE 'HIGN\
298 007717 299 007745	042	123	124		.ASCII	\"STATUS: "H1652H1652H1652H1652H1652H1652H16N\
300 007746	042	122	105	ER76:	.ASCII	"RESPONSE OF SDI COMMAND NOT AS EXPECTED" N
301 007773 302 007774	122 042	061 122	105		.ASCII	\R1\ \'RESPONSE RECEIVED ''08N\
303 010007	042	122	105		.ASCII	\'REAL TIME DRIVE STATE 'H16N\
304 010025	042	123	124		.ASCII	\"STATUS: "H16S2H16S2H16S2H16S2H16S2H16S2H16N\
305 010053 306 010054	000 042	101	124	SERO:	.BYTE	\'ATTEMPTING TO DO GET STATUS COMMAND' N\
307 010077	000				.BYTE	0
308 010100 309 010123	042	101	124	SER1:	.ASCII	\'ATTEMPTING TO DO DRIVE CLEAR COMMAND'N\
310 010124	042	101	124	SER2:	.ASCII	"ATTEMPTING TO DO ONLINE COMMAND'N
311 010145 312 010146	000 042	101	124	SER3:	.BYTE	\'ATTEMPTING TO DO CHANGE MODE COMMAND'N\
313 010171	000	101	101	650/	.BYTE	0
314 010172 315 010217	042	101	124	SER4:	.ASCII	\'ATTEMPTING TO DO ERROR RECOVERY COMMAND'N\
316 010220	042	101	124	SER5:	.ASCII	"'ATTEMPTING TO DO GET SUBUNIT CHARACTERISTICS COMMAND' N
317 010253 318 010254	000 042	101	124	SER6:	.BYTE	\'ATTEMPTING TO DISCONNECT DRIVE'N\
319 010274	000				.BYTE	0
320 010275 321 010316	042	101	124	SER7:	.ASCII	\'ATTEMPTING TO RECALIBRATE DRIVE'N\
322 010317	042	101	124	SER8:	.ASCII	"ATTEMPTING TO GET COMMON CHARACTERISTICS"N
323 010344 324 010345	000 042	101	124	SER9:	.BYTE	\'ATTEMPTING TO INITIATE SEEK'N\
325 010364	000	125	114	ED90.	.BYTE	O STANDARD F TO FIND ALL LINETE DECUESTED FOR TESTING DURING
326 010365 327 010420	042 042	125 124		ER80:	.ASCII	\'UNABLE TO FIND ALL UNITS REQUESTED FOR TESTING. RUN'N\ \'TEST 3 TO FIND WHAT IS VISIBLE ON THE FOUR UDA PORTS'N\
328 010454	000	127		F0100	.BYTE	0
329 010455 330 010474	042 042	123 122	125 125	ER100:	.ASCII	\'SUBUNIT DROPPED FROM TESTING'N\ \'BUN OR PORT SWITCH OUT. OR SPINDLE DROPPED READY'N\
331 010526	042	122	105		.ASCII	\'RUN OR PORT SWITCH OUT, OR SPINDLE DROPPED READY'N\ \'REAL TIME DRIVE STATE '016N\
332 010544 333 010572	042	122 123	124		.ASCII	\"STATUS: "016S2016S2016S2016S2016S2016S2016N\
333 010372	000				.BYTE	0

1				.SBTTL	INFORMATIONAL MESSGES
3					MESSAGES
5 010573 6 010610	116	042	111	MS1:	.ASCII \N''INITIAL WRITE COMPLETE'N\ .BYTE 0
7 010611 8 010642	116	042	101	MS2:	ASCII N'ALL INITIAL WRITES COMPLETE. TESTING HAS BEGUN'N

```
DMOVLY ST. AREAO
 1 010643
                                                                     COUTPUT EDC FOR THIS OVERLAY
                                                   . WHEDC
   010643 130743
                                         .SBITL ****** OVERLAY 1 - SETUP OPERATION TO BE DONE THIS PASS
                                                                               : SETUP OVERLAY
            000001
                                         SETUP
                                                  =
                                                            1.
                                                  SETUP CLEARS ALL ERROR BITS, THE ERROR COUNT, FINDS THE NEXT
12
                                                  LBN TO BE READ OR WRITTEN, DESIDES TO READ OR WRITE, CALCULATES
                                                   THE CYLINDER, TRACK AND GROUP THE LBN RESIDES ON: THEN CALLS
14
15
                                                  DIAG$$
   004515
                                                   TST
                                                            $$DIAG+$DIAG$
   004515
             115000
                      002766
   004517
             014525
                                                  BEQ
                                                            .+6
             104207
                                                            #60000,R0
   004520
                                                  MOV
                      060000
    004522
             100707
                                                            RO. a$$DIAG+$DIAG$
                      176242
                                                  MOV
    004524
             004525
                                                  BR
18 004525
                                                                                 GET TOTAL NUMBER OF SECTORS ALLREADY R/W
             104657
                                                  MOV
                                                            U.CSEC(R5),R0
                      000021
                                                                                 ADD HOW MANY R/W THIS PASS
19 004527
             105657
                                                   ADD
                                                            U.NSEC(R5),RO
                      000016
20 004531
21 004533
22 004534
23 004536
24 004540
25 004542
26 004544
27 004545
28 004547
29 004550
30 004552
31 004553
32 004555
33 004557
34 004560
35 004564
37 004565
38 004567
39 004571
                                                                                 SEE IF ALL DONE
                                                   CMP
                                                            U.TSEC(R5),RO
             106657
                      000020
                                                                                 IF SO, BRANCH (NEW OPERATION)
             014565
                                                  BEQ
                                                                                 SAVE CURRENT COUNT
             100657
                                                  MOV
                                                            RO.U.CSEC(R5)
                      000021
                                                                                 GET LBN
                      000037
                                                   MOV
                                                            U. (BN(R5), RO
             104657
                                                                                 ADD NUMBER OF SECTORS R/W THIS PASS
             105657
                                                            U.NSEC(R5),RO
                      000016
                                                   ADD
             100657
                      000037
                                                   MOV
                                                            RO, U. CBN(R5)
                                                                                 SAVE
                                                                                 IF NO CARRY, BRANCH
             044552
                                                   BCC
                                                            1$
             104657
                                                            U. (BN+1(R5), R0
                                                                                 GET HI LBN
                      000040
                                                   MOV
                                                                                 PROPOGATE CARRY
             115407
                                                            RO
                                                   INC
   004550
004552
004553
             100657
                                                            RO.U. (BN+1(R5)
                                                                                 SAVE
                      000040
                                                   MOV
                                                                                 NO ERRORS
                                         1$:
                                                            R2
             114002
                                                   CLR
                                                                                 GET UNIT PARAMETERS
                                                            U.PARM(R5),R1
             104651
                      000033
                                                   MOV
                                                            #RBNBN!DATERR!RETRY,R1 ; SEE IF REVECTORED BLOCK OR DATA ERROR 15$ ; IF NOT, BRANCH
             102201
                      000224
                                                   BIT
             014650
                                                   BEQ
                                                                                 ONLY READ/WRITE ONE SECTOR
             104207
                                                            #1.R0
                      000001
                                                   MOV
             100657
                      000017
                                                            RO, U.MSEC(R5)
                                                                                 SAVE
                                                   MOV
                                                                                 EXIT -- SEEK
             004702
                                                   BR
                                                            3$
                                                                                 GET UNIT PARAMETERS
                                                            U.PARM(R5),RO
             104657
                                         2$:
                      000033
                                                   MOV
             102207
                                                            #WCHECK, RO
                                                                                 SEE IF WRITE CHECK IS TO BE DONE
                      000010
                                                   BIT
                                                            5$
                                                                                 IF NOT, BRANCH
             014577
                                                   BEQ
                                                            #WCHECK! REDWRT! RETRY, RO; CLEAR WRITE CHECK, MAKE OPERATION READ
40 004572
             103207
                      000114
                                                   BIC
                                                            RO, U. PARM(R5)
                                                                                 SAVE
             100657
                      000033
41 004574
                                                   MOV
                                                                                 BRANCH
   004576
             004635
                                                   BR
                                                                                 GET SUBUNIT PARAMETERS
                                         5$:
                                                            S.PARM(R4),R1
   004577
             104641
                      000000
                                                   MOV
                                                                                        ; SEE IF SEQUENTIAL SEEKS
                                                            #SEQSEK! INITW, R1
   004601
             102201
                      040100
                                                   BIT
                                                                                 IF SO, BRANCH
             054615
   004603
                                                   BNE
                                                                                 SEE IF NEW SUBUNIT
   004604
             102207
                      004000
                                                   BIT
                                                            #NEWSUB, RO
                                                                                 IF SO, BRANCH
    004606
             054615
                                                   BNE
                                                                                 FLAG AS NEW SUBUNIT
             101207
                       004000
                                                            #NEWSUB, RO
   004607
                                                   BIS
             100657
                                                            RO.U.PARM(R5)
   004611
                       000033
                                                   MOV
                                                                                 SAVE
                                                                                 NO ERRORS
50 004613
             114002
                                                            115
51 004614
             004625
                                                                                 EXIT
```

52 004615 024706 53 004616 115002 54 004617 054625 55 004620 104651	000033	7\$:	CALL TST BNE MOV	NXTSEC R2 11\$ U.PARM(R5),R1	:	GET NEXT LBN SEE IF AN ERROR OCCURRED IF SO, BRANCH GET UNIT PARAMETERS
56 004622 102201 57 004624 014630	004000		BIT	#NEWSUB,R1	:	SEE IF NEW SUBUNIT IF NOT, BRANCH
58 004625 104207 59 004627 004704	000001	11\$:	MOV BR	#SETUP,RO	:	SETUP IS NEXT MODULE CALLED EXIT
60 004630 026343 61 004631 026352 62 004632 026374 63 004633 026416		10\$:	CALL CALL CALL	CLRUP RORW PATTRN	:	CLEAR ERROR COUNT AND VARIOUS PARM BITS SEE IF READ OR WRITE FIND PATTERN TO WRITE
63 004633 026416 64 004634 026446			CALL	WCHK	:	SEE IF WRITE CHECK WILL BE DONE SEE IF DATA COMPARE WILL BE DONE
65 004635 104657 66 004637 100657	000035 000037	6\$:	MOV MOV	U.MBN(R5),R0 R0,U.CBN(R5)	:	GET_LO_LBN
67 004641 104657 68 004643 100657	000036 000040		MOV MOV	U.MBN+1(R5),R0 R0,U.CBN+1(R5)	:	GET HI LBN SAVE
69 004645 114002 70 004646 100652	000021		CLR	R2,U.CSEC(R5)	:	NO ERRORS SECTORS R/W IS ZERO
71 004650 100652 72 004652 100652	000041 000042	15\$:	MOV MOV	R2.U.RBN(R5) R2.U.RBN+1(R5)	:	ZERO RBN NUMBER ******* TAKE OUT AFTER ROUTINE 3 IS IMP.
73 004654 104657 74 004656 107657	000020 000021		MOV	U.TSEC(R5),R0 U.CSEC(R5),R0	:	GET TOTAL NUMBER OF SECTORS TO R/W SUBTRACT HOW MANY DONE
75 004660 104651 76 004662 102201	000033 000100		MOV BIT	U.PARM(R5),R1 #REDWRT,R1		GET UNIT PARAMETERS SEE IF WRITE IS IN PROGRESS
77 004664 054673 78 004665 106307	002353		BNE CMP	13\$ SECMAX,RO	:	IF SO, BRANCH SEE IF TRYING TO READ MORE THAN POSSIBLE
79 004667 034700 80 004670 104307	002353		BPL MOV	14\$ SECMAX,RO	:	IF NOT, BRANCH SET RO TO MAXIMUM POSSIBLE SECTORS TO READ
81 004672 004700		170	BR	14\$:	BRANCH
82 004673 106307 83 004675 034700	002354	13\$:	CMP BPL	CHNMAX,RO		SEE IF TRYING TO WRITE MORE THAN POSSIBLE IF NOT, BRANCH
84 004676 104307 85 004700 100657	002354 000017	145:	MOV MOV	RO,U.MSEC(R5)	:	SET RO TO MAXIMUM POSSIBLE SECTORS TO WRITE SAVE IN NUMBER OF SECTORS TO R/W THIS PASS
86 004702 104207 87 004704 114001	000002	3\$: 4\$:	MOV CLR	#SEEK,RO	:	POINT TO SEEK AS NEXT OPERATION IMMIDATE CALL
88 004705 003127		12\$:	BR	JMPRET	:	RETURN TO SEQUENCER

2 004706			.SBTTL NXTSEC:		- FIND THE NEXT S	TARTING SECTOR TO READ/WRITE
5 6 7				NXTSEC SETS OR NEXT SE	TRACK/GROUP SETS	ECTORS ARE COMPUTED LIMITED BY BEGIN/END, AND CALL THE CORRECT MODULE TO COMPUTE THE
7 8 004706 9 004710 10 004712 11 004713 12 004715 13 004717 14 004721 15 004723 16 004724 17 004725 18 004726 19 004727 20 004730 21 004732 22 004733 23 004734 24 004735 25 004736 26 004737 27 004740	104647 102207 054730 104651 103201 100651 102207 014726 024741 004737 025475 004737 102207 014736 025117 114002 004740 025641 114002 000000	000000 040100 000033 004000 000033 000040	1\$: 2\$: 3\$: 5\$: 4\$:	MOV BIT BNE MOV BIC MOV BEQ CALL BR CALL BRIT BCALL CLR CALL CLR CALL CLR	#SEQSEK!INITW,RO 2\$ U.PARM(R5),R1 #NEWSUB,R1 R1,U.PARM(R5) #BEUSED,RO 1\$ RNDBE 5\$ RNDTG 5\$ #BEUSED,RO 3\$ SEQBE R2 4\$ SEQTG R2	GET SUBUNIT PARAMETERS ; SEE IF BN'S ACCESSED SREQUENTIALLY IF SO, BRANCH GET UNIT PARAMETERS ; CLEAR NEW SUBUNIT FLAG ; SAVE ; SEE IF BEGIN/END SETS USED IF NOT, BRANCH GET A RANDOM BLOCK NUMBER (BEGIN/END SETS) ; EXIT GET A RANDOM BLOCK NUMBER (TRACKS/GROUPS) ; BRANCH ; SEE IF BEGIN/END SETS USED ; IF NOT, BRANCH ; GET A SEQUENTIAL BLOCK NUMBER (BEGIN/END SETS) ; NO ERRORS ******* ; EXIT (SHOULD BRANCH TO 7\$) ****** ; GET A SEQUENTIAL BLOCK NUMBER (TRACKS/GROUPS) ; NO ERRORS ; RETURN TO CALLING PROGRAM
21 004140	000000		45.	HE I CHIN		, RETURN TO CHEETING PROGRAM

2 004741			.SBTTL RNDBE:	RNDBE	- FIND A RANDOM	STARTING SECTOR USING BEGIN/END SETS
4				RNDBE	GETS A RANDOM LBM	N NUMBER
6				GET A	RANDOM BEGIN/END	SET FROM THE SUBUNIT'S B/E SETS
8 004741 9 004742 10 004744 11 004745 12 004746	114007 104203 105043 104132 074753	000014	CNTLOP:	CLR MOV ADD MOV BMI	RO #S.BESS+3,R3 R4,R3 (R3),R2 COUNTD	; INITILIZE COUNTER ; R3 POINTS TO FIRST B/F SET ; R3 POINTS TO FIRST B/E SET ; MOVE EOL FLAG WORD TO R2 ; IF END-OF-LIST, BRANCH
13 004747 14 004751 15 004752 16 004753	105203 115407 004745 115007	000004	COUNTD:	ADD INC BR TST	#4,R3 RO CNTLOP RO	; POINT TO NEXT EOL WORD ; INCREMENT COUNT ; IF NOT, TRY AGAIN ; SEE IF COUNT = 0
17 004754 18 004755 19 004756 20 004760 21 004762 22 004763	014775 026475 103201 106207 074772 014767	177774 000002	TRYAGN:	BEQ CALL BIC CMP BMI BEQ	GOTOFS RANDOM #177774,R1 #2,R0 GOTOBE THREBE	; IF SO, BRANCH ; GET A RANDOM NUMBER ; MASK OUT ALL BUT 2 LOWEST BITS ; TEST HOW COUNT RELATES TO 2 ; IF COUNT IS 3, BRANCH ; IF COUNT IS 2, BRANCH
23 004764 24 004766	103201	177776		BIC	#177776,R1 GOTOBE	; MASK OUT ALL BUT LOWEST BIT ; BRANCH
25 004767 26 004771	106201 074755	000002	THREBE:	CMP BMI	#2,R1 TRYAGN	; SEE IF RANDOM NUMBER OVER 2 ; IF SO, GET ANOTHER NUMBER
27 004772 28 004773 29 004774	104017 105077 105077		GOTOBE:	ADD ADD	R1,R0 R0,R0 R0,R0	; MOVE RANDOM NUMBER TO RO ; RO X 2 ; RO X 2
30 004775 31 004777	105207 105047	000011	GOTOFS:	ADD ADD	#S.BESS,RO R4,R0	: POINT TO RANDOM BEGIN/END SET : POINT TO RANDOM BEGIN/END SET

1 2		ONCE A RANDOM B/E SE WITHIN THAT B/E SET	T HAS BEEN FOUND, FIND A RANDOM LBN	
4				
5 005000 005000 100464 005001 100465		PUSH <r4,r5></r4,r5>	; SAVE R4 AND R5	MOV R4,-(SP) MOV R5,-(SP)
6 005002 104274 7 005003 104275 8 005004 107274 9 005005 045007 10 005006 117405 11 005007 104171 12 005010 103201 13 005012 107015 14 005013 117407 15 005014	170000 NOBORO:	MOV (R0)+,R4 MOV (R0)+,R5 SUB (R0)+,R4 BCC NOBORO DEC R5 MOV (R0),R1 BIC #170000,R1 SUB R1,R5 DEC R0 PUSH R0	R4 GETS LO ORDER ENDING LBN R5 GETS HI ORDER ENDING LBN SUBTRACT LO ORDER STARTING LB IF NO BORROW, BRANCH ADJUST FOR BORROW GET HI WORD STRIP OFF EOL FLAG (IF ANY) SUBTRACT HI ORDER STARTING LB POINT TO LO ORDER STARTING LB SAVE RO	N N N
005014 100467 16 005015 115005 17 005016 015032 18 005017 104057 19 005020 025102 20 005021 026475 21 005022 104013 22 005023 103073	RNDLP0:	TST R5 BEQ ONEREG MOV R5.R0 CALL MASK CALL RANDOM MOV R1.R3 BIC R0.R3	; SEE IF R5 IS ZERO ; IF SO, BRANCH ; MOVE R5 TO RO TO COMPUTE MASK ; COMPUTE RANDOM NUMBER MASK ; GET RANDOM NUMBER ; MOVE RANDOM NUMBER TO R3 ; MASK OUT HIGH BITS	MOV RO,-(SP)
23 005024 106053 24 005025 005025 045027		BCS RNDLPO	: COMPARE MAXIMUM RANDOM NUM TO : IF MAX RND NUM < RANDOM NUMBE	R, BRANCH BCC .+2
005026 005021 25 005027 015033 26 005030 026475 27 005031 005042 28 005032 114003 29 005033 104047 30 005034 025102 31 005035 026475 32 005036 103071 33 005037 106041	ONEREG: MASKLO: RNDLP1:	MOV R4.R0 CALL MASK	: IF =, BRANCH : GET ANOTHER RANDOM NUMBER : BRANCH : ZERO R3 : MOVE R4 TO RO TO COMPUTE MASK : COMPUTE MASK : GET A RANDOM NUMBER : MASK OUT HIGH BITS : SEE IF MAX RND NUM < RANDOM NUMBE	UMBER
005040 045042 005041 005035 35 005042 104012	CLCLBN:	MOV R1.R2	: MOVE RANDOM NUMBER TO R2	BCC .+2 BR RNDLP1
36 005043 005043 104267 37 005044 105272 38 005045 045047 39 005046 115403 40 005047 104171	NOCARY:	POP RO ADD (RO)+,R2 BCC NOCARY INC R3 MOV (RO),R1	RESTORE RO ADD LO ORDER STARTING BLOCK TO THE START THE	MOV (SP)+,RO O RANDOM NUM
41 005050 103201 42 005052 105013 43 005053 005053 104265	170000	BIC #170000,R1 ADD R1,R3 POP <r5,r4></r5,r4>	: STRIP OFF EOL FLAG IF ANY : ADD HI ORDER LBN : RESTORE R5, R4	MOV (SP)+,R5
005054 104264 44 005055 107207 45 005057 104271 46 005060 104177 47 005061 107021	000003	SUB #3,R0 MOV (R0)+,R1 MOV (R0),R0 SUB R2,R1	: RO POINTS TO ENDING LBN : R1 HAS LO ORDER ENDING LBN : R0 HAS HI ORDER ENDING LBN : SUBTRACT LO LBN FROM LO ENDIN	MOV (SP)+,R4

48 005062 49 005063 50 005064 51 005065 52 005066	075067 045065 117407 107037 015071		1\$:	BMI BCC DEC SUB BEQ	4\$ 1\$ RO R3,RO 2\$; IF RESULT IS NEGATIVE, BRANCH ; IF NO CARRY, BRANCH ; DECREMENT HI ENDING LBN ; SUBTRACT HI LBN FROM HI ENDING LBN ; IF HI WORD IS ZERO, BRANCH
52 005066 53 005067 54 005071 55 005072 56 005073 57 005074 58 005076 59 005077	104201 115401 104017 026534 104207 105057 100272	077776	4\$: 2\$:	MOV INC MOV CALL MOV ADD MOV	#77776,R1 R1 R1,R0 MAXMUM #U.MBN,R0 R5,R0 R2,(R0)+	: MOVE MAXIMUM COUNT TO R1 : INCREMENT MAXIMUM SECTOR COUNT : COPY TO RO FOR MAXMUM : SET MAXIMUM COUNT (U.TSEC AND U.MSEC) : RO POINTS TO LBN AREA : RO POINTS TO LBN AREA : MOVE LO ORDER TO LBN AREA
60 005100 61 005101	100173			MOV RETURN	R3,(R0)	: MOVE HI ORDER TO LBN AREA : RETURN TO RNOBLK

2 005102			.SBTTL MASK:	MASK	- FIND MASK FOR	RAI	NDOM NUMBER		
4				MASK MA RANDOM	SKS OUT HIGHER I	BIT	S OF A RANDOM NUMBER, SO THE ME MAXIMUM DESIRED IS LESSENE	PROB. (OF THE
7 005102 005102	100461			PUSH	R1	:	SAVE R1	MOV	R1,-(SP)
8 005103 9 005104 10 005105 11 005107 12 005110	114001 105011 101201 106017	000001	MASKLP:	CLR ADD BIS CMP BCS	R1 R1.R1 #1.R1 R1.R0 MASKLP		ZERO R1 ROTATE R1 ONE BIT LEFT TURN ON BIT 0 SEE IF R1 IS GREATER THAN RO IF NOT, BRANCH		(1,-(3F)
005110 005111	045112 005104							BCC BR	.+2 MASKLP
13 005112 14 005114 15 005115	104207	177777		MOV BIC POP	#-1,R0 R1,R0 R1	:	SET UP FOR COMPLEMENT COMPLEMENT R1 RESTORE R1		
005115 16 005116	104261			RETURN		:	RETURN TO RNDLBN	MOV	(SP)+,R1

2 005117			.SBTTL SEQBE:	SEQBE	- FIND NEXT SEQUE	ENTIAL STARTING SECTOR USING BEGIN/END SETS
4				SEQBE	FINDS THE NEXT SEC	DUENTIAL LBN
6 005117 7 005121 8 005123	104657 102207 015223	000033 010000		MOV BIT BEQ	U.PARM(R5),R0 #DIREC,R0 UP	: MOVE UNIT PARAMETERS TO RO : TEST DIRECTION
9 005124	102207 015155 103207	004000		BEQ	#NEWSUB, RO	: IF SEQUENTIAL UP, BRANCH : SEE IF FIRST TIME ON THIS SUBUNIT : IF NOT, BRANCH
11 005127 12 005131 13 005133	103207 100657 104201	004000 000033 000011		MOV MOV	#NEWSUB,RO RO,U.PARM(R5) #S.BESS,R1	: FLAG AS NEW SUBUNIT UNNEDED : SAVE : RO WILL POINT TO BEGIN/END SETS
12 005131 13 005133 14 005135 15 005136 16 005140	105041 104617 075144	000003	6\$:	ADD MOV BMI	R4,R1 3(R1),R0 8\$	RO POINTS TO BEGIN/END SETS SEE IF END-OF-LIST IF SO, BRANCH
17 005141	105201 005136	000004	,	ADD	#4,R1	: POINT TO NEXT BEGIN/END SET
18 005143 19 005144 20 005146 21 005147 22 005150	104202 105052 104217 100127	000035	8\$:	MOV ADD MOV MOV	65 #U.MBN,R2 R5,R2 (R1)+,R0 R0,(R2)	R2 WILL POINT TO MASTER BN R2 POINTS TO MASTER BN GET LO ORDER ENDING SET SAVE
23 005151 24 005152 25 005154	104217 100627 005163	000001		MOV MOV BR	(R1)+,R0 R0,1(R2) 7\$: GET HI ORDER ENDING SET : SAVE : BRANCH
26 005155 27 005156 28 005160 29 005161	025275 105201 021645 015203	000002	5\$:	CALL ADD CALL BEQ	FNDBES #2,R1 CMP2 BESDWN	; FIND BEGIN/END SET THAT LBN IS IN ; POINT TO BEGIN SET ; SEE IF LBN = BEGINNING LBN ; IF SO, BRANCH
30 005162 31 005163 32 005164 33 005165	025445 104227 104223 107217		7\$:	CALL MOV MOV SUB	DEC2 (R2)+,R0 (R2)+,R3 (R1)+,R0	POINT TO NEXT LBN TO BE READ/WRITTEN MOVE LO ORDER BN TO RO MOVE HI ORDER BN TO R3 SUBTRACT BEGIN BN FROM BN
34 005166 35 005167 36 005170	075176 045171 117403		10.	BMI BCC DEC	4\$ 1\$ R3	: IF RESULT IS NEGATIVE, BRANCH : IF NO BORROW, BRANCH : PROPOGATE BORROW
37 005171 38 005172 39 005174	107013	170000	1\$:	MOV BIC SUB	(R1),R1 #^CHBHINB,R1 R1,R3	GET BEGINNING BN CLEAR EOL FLAG, IF ANY SUBTRACT HI ORDER BN FROM HI BN
40 005175 41 005176 42 005200 43 005201 44 005202	015200 104207 115407 026534 005204	077776	4\$: 2\$: 3\$:	BEQ MOV INC CALL BR	2\$ #77776,R0 R0 MAXMUM NLBEXT	: IF EQUAL, BRANCH : MOVE MAXIMUM COUNT TO RO : MAKE SUBTRACTION INCLUSIVE : SET MAXIMUM COUNT (U.TSEC AND U.MSEC) : BRANCH
45 005203 46 005204	025314 104651	000020	BESDWN: NLBEXT:	MOV	PREVBE U.TSEC(R5),R1	: FIND PREVIOUS B/E SET OR UNIT : GET TOTAL NUMBER OF SECTORES TO READ/WRITE
47 005206 48 005207 49 005211	117401 104653 107013	000035		MOV	R1 U.MBN(R5),R3	: DECREMENT SECTOR COUNT : GET LO ORDER MASTER BN
50 005212	100653	000035		MOV	R1,R3 R3,U.MBN(R5)	: SUBTRACT SECTORS TO READ/WRITE : SAVE
52 005215	100653 045222 104653	000036		MOV	1\$ U_MBN+1(R5),R3	: IF NO CARRY, BRANCH : GET HI ORDER MASTER BN
54 005220	11/405	000036		DEC	R3 R3,U.MBN+1(R5)	: PROPOGATE CARRY : SAVE
50 005212 51 005214 52 005215 53 005217 54 005220 55 005222 56 005223 57 005225	100653 005274 102207 015252	004000	1\$: UP:	BR BIT BEQ	BEEXT #NEWSUB, RO 5\$: BRANCH : SEE IF FIRST TIME ON THIS SUBUNIT : IF NOT, BRANCH

61 005234 105041 62 005235 104202 000035	GIN/END SET THAT LBN IS IN E ENDING LBN, BRANCH D NEXT LBN TO BE READ/WRITTEN LO ENDING LBN HI ENDING LBN T LO LBN FROM LO ENDING LBN LT IS NEGATIVE, BRANCH ARRY, BRANCH TE CARRY T HI LBN FROM ENDING LBN
--	--

2 00	05275			.SBTTL FNDBES:	FNDBES	- FIND THE B	BEGIN/EN	D SET CUR	RENT	BN RESID	ES II	V	
4					FNDBES	FINDS THE BE	GIN/END	SET THAT	THE	CURRENT	LBN F	RESIDES	IN
7 00 8 00 9 00 10 00 11 00 12 00	05275 05277 05301 05302 05304 05305 05307 05310	104203 104201 105041 104202 105052 105201 115403 021645	177777 000005 000035 000004	; FNDLOP:	MOV MOV ADD MOV ADD ADD INC CALL	#-1,R3 #S.BESS-4,R R4,R1 #U.MBN,R2 R5,R2 #4,R1 R3 CMP2	11	START COUPOINT TO POINT TO POINT TO INCREMENT INCREMENT COMPARE L	B/E S B/E S LBN LBN B/E COUN	SETS SET POIN	ITER	u	
14 00	05311 05312 05313	015313 045305 000000		OUTO:	BEQ BCC RETURN	OUTO FNDLOP		IF = TO, IF LBN > RETURN TO	BRANC	H IG LBN, B	RANCI		


2 005314			.SBTTL PREVBE:		- MOVE TO PREVIOU	US BEGIN/END SET
5 6 7 8 9				WAS THE B/E SET SET OF	FIRST LBN WITHIN , OR, IF IT IS THE THE PREVIOUS UNIT HE DIRECTION OF T	LBN'S ARE DECREASING, AND THE LAST LBN N A B/E SET. PREVBE FINDS THE PREVIOUS HE LAST ON THE SUBUNIT, FINDS THE LAST B/E T. IF IT IS THE FIRST BE SET OF THE FIRST THE LBN'S ARE REVERSED (THEY BEGIN GOING UP
11 005314 12 005315 13 005316	115003 055325 104657 101207 100657 005347 107201 025462 104217 104212	000033 004000 000033 000006	5\$:	TST BNE MOV BIS MOV BR SUB CALL MOV MOV	R3 5\$ U.PARM(R5),R0 #NEWSUB,R0 R0,U.PARM(R5) 6\$ #6,R1 MOV2 (R1)+,R0 (R1)+,R2	; SEE IF ALLREADY ON 1ST B/E SET ; IF NOT, BRANCH ; GET UNIT PARAMETERS ; MARK AS GOING ON TO THE NEXT UNIT ; SAVE ; EXIT ; POINT TO PREVIOUS ENDING SET ; MOVE ENDING SET TO LBN ; RO HAS LO ENDING LBN ; R2 HAS HI ENDING LBN
21 005332 22 005333 23 005334 24 005335 25 005336 26 005337 27 005341 28 005342	107217 075343 045336 117402 104111 103201 107012 015345	170000	1\$:	BMI BCC DEC MOV BIC. SUB BEQ	(R1)+,R0 4\$ 1\$ R2 (R1),R1 #^CHBHINB,R1 R1,R2 2\$; SUBTRACT LO BEGINNING LBN FROM LO ENDING ; IF RESULT IS NEGATIVE, BRANCH ; IF NO CARRY, BRANCH ; PROPOGATE CARRY ; GET BEGINNING BN ; CLEAR EOL FLAG, IF ANY ; SUBTRACT HI ORDER BN FROM HI BN ; IF ZERO, BRANCH
29 005343 30 005345 31 005346 32 005347	104207 115407 026534 000000	077776	4\$: 2\$: 3\$: 6\$:	MOV INC CALL RETURN	#77776,R0 R0 MAXMUM	; MOVE MAXIMUM COUNT TO RO ; TO MAKE IT AN INCLUSIVE SUBTRACT ; SET MAXIMUM COUNT (U.TSEC AND U.MSEC) ; RETURN TO CALLING PROGRAM

UDAT4 DISK EXERCISER MACRO X04.00 9-JUL-81 01:12:03 PAGE 101 PREVBE - MOVE TO PREVIOUS BEGIN/END SET

## THE LAST ON THE SUBUNIT, IT GOES TO THE FIRST B/E SET OF THE NEW UNIT. IF IT IS THE LAST B/E SET ON THE LAST UNIT, THE DIRECTION THE UNIT. IF IT IS THE LAST B/E SET ON THE LAST UNIT, THE DIRECTION THAN THE DIRECTION THA	2 005350			.SBTTL NEXTBE:	NEXTBE	- MOVE TO NEXT B	EG	IN/END SET	
11 005350 104617 000003	567890				NEXTBE THE LAS UNIT. CHANGED	GOES TO THE NEXT T ON THE SUBUNIT IF IT IS THE LAS (DOWN), AND THE	f	I/E SET FOR THE NEXT LBN. IF THE LBN IS IT GOES TO THE FIRST B/E SET OF THE NEXT B/E SET ON THE LAST UNIT, THE DIRECTION NITIAL WRITE BIT IS CLEARED IN CASE AN	
33 005406 000000 7\$: RETURN TO CALLING PROGRAM	1 005350 2 005352 3 005353 4 005355 5 005357 6 005361 7 005362 8 005364 9 005367 2 005371 2 005371 3 005372 4 005373 6 005373 6 005374 6 005375 7 005376 8 005401 8 005402 8 005405	035362 104657 101207 100657 005406 105201 025462 107201 104217 104213 107217 075402 045375 117403 104111 103201 107013 015404 104207 115407 026534	000033 004000 000033 000006 000002	2\$: 5\$: 3\$: 4\$:	BPL MOV BIS MOV BR ADD CALL SUB MOV SUB BMI BCC MOV SUB BCC MOV SUB BCC MOV SUB BCC MOV SUB CC MOV	1\$ U.PARM(R5),R0 #NEWSUB,R0 R0,U.PARM(R5) 7\$ #6,R1 MOV2 #2,R1 (R1)+,R0 (R1)+,R3 (R1)+,R0 5\$ 2\$ R3 (R1),R1 #^CHBHINB,R1 R1,R3 3\$ #77776,R0		GET SUBUNIT PARAMETERS MARK AS GOING ON TO A NEW SUBUNIT SAVE EXIT POINT TO NEXT BEGINNING LBN MOVE BEGINNING LBN TO LBN R1 POINTS TO END SET R0 HAS LO ENDING LBN R3 HAS HI ENDING SET SUBTRACT BEGINNING LBN IF RESULT IS NEGATIVE, BRANCH IF NO CARRY, BRANCH PROPOGATE CARRY GET BEGINNING BN CLEAR EOL FLAG, IF ANY SUBTRACT HI ORDER BN FROM HI BN IF ZERO, BRANCH MOVE MAXIMUM COUNT TO RO INCREMENT RO (INCLUSIVE SUBTRACT) SET MAXIMUM COUNT (U.TSEC AND U.MSEC)	1

UDAT4 DISK EXERCISER MACRO X04.00 9-JUL-81 01:12:03 PAGE 103 UPLBN - IF GOING UP, UPDATE CURRENT BN TO LAST BN READ/WRITTE

2 005407		.SBTTL UPLBN:	UPLBN	- IF GOING UP, U	JPD.	ATE CURRENT BN TO LAST BN READ	/WRITTEN
5				PDATES U.MBN TO SING LBN)	PO	INT TO THE LAST LBN READ/WRITT	EN
	1467 1462		PUSH	<r0,r2></r0,r2>	:	SAVE RO,R2	MOV RO,-(SP)
8 005411 104	202 000035		MOV	#U.MBN.R2		R2 POINTS TO LAST LBN	MOV R2,-(SP)
10 005414 104 11 005416 117	052 657 000020 407		MOV DEC	R5,R2 U.TSEC(R5),R0 R0		R2 POINTS TO LAST LBN GET NUMBER OF SECTORS WRITTEN SUBTRACT ONE	
13 005420 100 14 005421 045			ADD MOV BCC	(R2),R0 R0,(R2)+ UPEXT	:	ADD LOW ORDER LBN TO RO SAVE LOW ORDER WORD, POINT TO IF NO CARRY, BRANCH	HIGH ORDER
16 005423 115	127 407		INC	(R2),R0 R0	:	GET HIGH ORDER WORD INCREMENT	
18 005425	127		MOV POP	RO.(R2) <r2.ro></r2.ro>		SAVE HIGH ORDER WORD RESTORE RO,R2	
	262 267						MOV (SP)+,R2 MOV (SP)+,R0
19 005427 000	0000		RETURN		:	RETURN TO CALLING PROGRAM	

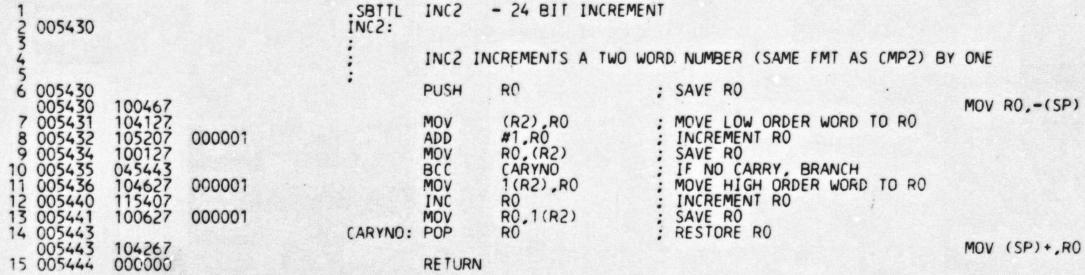

,6

INC2 - 24 BIT INCREMENT

2 005445			SBTTL DEC2:	DEC5	- 24 BIT D	DECREMENT	
4				DECS DE	CREMENTS A	A TWO WORD NUMBER (SAME FMT AS CMP2) BY OF	VE
6 005445	100467			PUSH	R0	; SAVE RO	DV RO,-(SP)
7 005446 8 005447	104127	000001		MOV SUB	(R2),R0 #1,R0	; MOVE LOW ORDER WORD TO RO ; DECREMENT RO	, KU, -(3F)
9 005451	100127	000001		MOV	RO,(R2) BORONO	; SAVE RO ; IF NO BORROW, BRANCH	
11 005453 12 005455	104627	000001		MOV DEC	1(R2),R0 R0	: MOVE HIGH ORDER WORD TO RO : DECREMENT RO	
13 005456 14 005460	100627	000001	BORONO:	MOV	RO.1(R2)	: SAVE RO : RESTORE RO	
005460 15 005461	104267			RETURN			OV (SP)+,R0

2 005462	.SBITL MOV.	2 - 24 BIT MOVE		
5			SUMBER POINTED TO BY R1 TO TWO WORK	S POINTED
7 005462 005462 100467	PUS	H RO	: SAVE RO	MOV RO,-(SP)
8 005463 104117 9 005464 100127	MOV MOV		: MOVE SOURCE LOW ORDER WORD TO : MOVE RO TO DESTINATION LOW OR	RO
10 005465 104617 0000 11 005467 103207 1774	001 MOV	1(R1),R0	: MOVE SOURCE HIGH ORDER WORD TO : STRIP OFF UNUSED BITS	
12 005471 100627 0000 13 005473		RO,1(R2)	: MOVE RO TO DESTINATION HIGH OF	RDER WORD
005473 104267 14 005474 000000	RET		: RETURN TO CALLING PROGRAM	MOV (SP)+,RO

1 2 005475	.SBTTL RNDTG:	RNDTG	- FIND A RANDOM S	STARTING SECTOR USING TRACK/GRO	UP LIMITS
4		COME UP	WITH A RANDOM BE	N TO TEST USING THE TRACK/GROUP	SETS
6		FIRST C	OME UP WITH A RAM	NDOM COUNT <= MAXIMUM COUNT	
8 005475 104647 000012 9 005477 015513 10 005500 025102 11 005501 026475 12 005502 103071 13 005503 104012 14 005504 106641 000012 15 005506 045510	1\$:	MOV BEQ CALL CALL BIC MOV CMP BCS	2\$ MASK RANDOM RO.R1 R1.R2	GET HI ORDER MAX COUNT IF HI ORDER ZERO, BRANCH CREATE MASK FOR RANDOM NUMBE GET RANDOM NUMBER STRIP OFF UNUSED BITS SAVE IN R2 IF NEEDED SEE IF THE MAX IS EXCEEDED IF SO, BRANCH	R BCC .+2
005507 005501 16 005510 015514 17 005511 026475 18 005512 005525 19 005513 114002 20 005514 104647 000011 21 005516 025102 22 005517 026475 23 005520 103071 24 005521 106641 000011 25 005523 045525 005524 005517	2\$: 3\$: 4\$:	BEQ CALIL BR CLR MOV CALL CALL BIC CMP BCS	3\$ RANDOM 5\$ R2 S.MCNT(R4),R0 MASK RANDOM R0,R1 S.MCNT(R4),R1 4\$: IF EQUAL, WE HAVE TO FIND TH : IF NOT EQUAL, ANY LO ORDER W : BRANCH : HI ORDER WORD IS ZERO : GET LO ORDER MAXIMUM : CREATE MASK : GET RANDOM NUMBER : STRIP OFF UNUSED BITS : SEE IF THE MAX EXCEEDED : IF SO, BRANCH	BR 1\$ E LO ORDER WORD
26 27	: 4	NOW FIN	D THE BN ASSOCIAT	TED WITH THAT COUNT	
26 27 28 29 005525 005525 100465 005526 100464	5\$:	PUSH	<r5,r4></r5,r4>	; PUSH THE UNIT AND SUBUNIT PO	MOV R5,-(SP)
30 005527 104205 000013 31 005531 105045 32 005532 104257 33 005533 104253 34 005534 107201 000001 35 005536 045543 36 005537 107202 000001 37 005541	6\$:	MOV ADD MOV MOV SUB BCC SUB BCS	#S.TGOF,R5 R4,R5 (R5)+,R0 (R5)+,R3 #1,R1 7\$ #1,R2	R5 WILL POINT TO THE TRACK/G R5 POINTS TO THE TRACK/GROUP GET LO ORDER OFFSET, MOVE TO GET HI ORDER OFFSET, MOVE TO DECREMENT LO COUNT BY ONE IF NO BORROW, BRANCH DECREMENT HI COUNT BY ONE IF COUNT EXHAUSTED, BRANCH	ORIGINAL OFFSET RUNNING TOTAL RUNNING TOTAL
005541 045543 005542 005555	76.	MOV	(DE) + D/	- CET T/C OFFCET	BCC .+2 BR 9\$
38 005543 104254 39 005544 055551 40 005545 104205 000015 41 005547 105165 42 005550 104254 43 005551 105047	7\$: 8\$:	MOV BNE MOV ADD MOV ADD	(R5)+,R4 8\$ #S.TGSS,R5 (SP),R5 (R5)+,R4 R4,R0	: GET T/G OFFSET : IF NOT END OF LIST, BRANCH : R5 WILL POINT TO START OF T/ : R5 POINTS TO START OF T/G LI : GET T/G OFFSET : ADD TO RUNNING TOTAL	
44 005552 045534 45 005553 115403 46 005554 005534		BCC INC BR	6\$ R3 6\$: IF NO CARRY, BRANCH : PROPOGATE CARRY : BRANCH	
47 005555 005555 104264 005556 104265	9\$:	POP	<r4,r5></r4,r5>	: RESTORE	MOV (SP)+,R4 MOV (SP)+,R5

48		:	NOW FIN	D A RANDOM OFFSE	TI	INTO THE RANDOM TRACK OR GROUP	,	
50 51 005557		•	PUSH	RO	:	STORE LO ORDER TOTAL ON STACK		
005557 100467 52 005560 104642 53 005562 104647 54 005564 102207 55 005566 055602 56 005567 104641 57 005571 104611 58 005573 103201 59 005575 114007 60 005576 105027 61 005577 117401 62 005600 055576 63 005601 104072 64 005602	000004 000000 000020 000005 000003 177400	10 \$:	MOV BIT BNE MOV BIC CLR ADD DEC BNE MOV PUSH	S.TRKL(R4),R2 S.PARM(R4),R0 #TRACKS,R0 11\$ S.SCHR(R4),R1 TRKGRP(R1),R1 #HIBYTE,R1 R0 R2,R0 R1 10\$ R0,R2 R2		R2 HAS TRACK LENGTH GET SUBUNIT PARAMETERS SEE IF USING TRACKS IF SO, BRANCH R1 POINTS TO SUBUNIT PARAMETE R1 HAS NUMBER OF TRACKS/GROUP CLEAR UNUSED BITS CLEAR RUNNING TOTAL FIND SECTORS/GROUP DECREMENT COUNT IF UNEXHAUSTED, BRANCH MOVE COUNT TO R2 (MATCH WITH SAVE ON STACK	MOV R	
005602 100462 65 005603 117402 66 005604 104027 67 005605 025102 68 005606 026475 69 005607 103071 70 005610 106021 71 005611		12\$:	DEC MOV CALL CALL BIC CMP BCS	R2 R2.R0 MASK RANDOM R0.R1 R2.R1 12\$		ADJUST COUNT MOVE TO MASKING REGISTER FIND MASK GET RANDOM NUMBER STRIP OFF UNUSED BITS SEE IF RANDOM NUMBER SMALL EN IF NOT, BRANCH		2,-(SP)
005611 045613 005612 005606 72 005613 005613 104262 73 005614 107012 74 005615 105261			POP SUB	R2 R1,R2	:	GET NUMBER OF SECTORS R2 IS NOW SECTORS REMAINING I	BCC BR MOV (N T/G ADD	12\$ 12\$ SP)+,R2 (SP)+,R1
75 005616 100651 76 005620 045622 77 005621 115403 78 005622 100653 79	000035	13\$:	MOV BCC INC MOV	R1,U.MBN(R5) 13\$ R3 R3,U.MBN+1(R5)	:	SAVE IF NO CARRY, BRANCH PROPOGATE CARRY SAVE HI ORDER STARTING BN		
80 81 82				TRACK/GROUP THA		NUMBER OF SECTORS TO R/W WITH VE'RE ON	OUT GO	ING
83 005624 104027 84 005625 025102 85 005626 101207 86 005630 026475 87 005631 103071 88 005632 015630 89 005633 106021 90 005634	177400	14\$:	MOV CALL BIS CALL BIC BEQ CMP BCS	R2,R0 MASK #HIBYTE,R0 RANDOM R0,R1 14\$ R2,R1		RO IS SECTORS LEFT ON THIS T/ GET MASK ALLOW MAXIMUM OF 255 SECTORS GET RANDOM NUMBER STRIP OFF UNUSED BITS MUST BE GREATER THAN ZERO SEE IF SMALL ENOUGH IF NOT, BRANCH		RITTEN
005634 045636 005635 005630 91 005636 100651 92 005640 000000	000020		MOV RETURN	R1,U.TSEC(R5)	:	SAVE SECTORS TO WRITE RETURN TO CALLING PROGRAM	BCC BR	14\$

2 005641	.SBTTL SEQTG:	SEQTG -	- FIND NEXT SE	QUEN'	TIAL STARTING SECTOR USING TRACK/GROUP LIMITS
4		FIND THE	NEXT TRACK/G	ROUP	TO TEST SEQUENTIALLY
6 005641 104657 0000 7 005643 104641 0000 8 005645 102207 0100	000	MOV MOV BIT	U.PARM(R5),R0 S.PARM(R4),R1 #DIREC,R0 3\$		GET UNIT PARAMETERS GET GUBUNIT PARAMETERS SEE IF GOING UP (INITIAL WRITE) OR DOWN IF GOING UP OR INITIAL WRITE, BRANCH
9 005647 015657 10 005650 102201 0000 11 005652 015655 12 005653 025774	020	BEQ BIT BEQ CALL	#TRACKS,R1 2\$ DOWNT	:	SEE IF TRACKS OR GROUPS IF GROUPS, BRANCH GO DOWN A TRACK
13 005654 005665 14 005655 026136	2\$:	BR CALL	5\$ DOWNG 5\$		GO DOWN A GROUP
15 005656 005665 16 005657 102201 0000 17 005661 015664 18 005662 025715	020 3\$:	BR BIT BEQ CALL	#TRACKS,R1 4\$ UPT		CALCULATE NUMBER OF SECTORS TO READ/WRITE SEE IF TRACKS OR GROUPS IF GROUPS, BRANCH GO UP A TRACK
19 005663 005665 20 005664 026056	4\$:	BR CALL	5\$ UPG	:	CALCULATE NUMBER OF SECTORS TO READ/WRITE GO UP A GROUP
21 005665 104642 0000 22 005667 104641 0000 23 005671 115000 0024 24 005673 035712	000	MOV TST BPL	S.TRKL(R4),R2 S.PARM(R4),R1 M.PARM 7\$		GET SECTORS/TRACK GET SUBUNIT PARAMETERS SEE IF INITIAL WRITE IN PROGRESS IF NOT, BRANCH
25 005674 102201 0000 26 005676 055712 27 005677 104027	020	BIT BNE MOV	#TRACKS,R1 7\$ R2.R0	:	SEE IF TRACKS IN USE IF SO, BRANCH COPY SECTORS/TRACK TO RO
28 005700 104641 0000 29 005702 104611 0000 30 005704 103201 1774	003	MOV MOV	S.SCHR(R4),R1 TRKGRP(R1),R1 #HIBYTE,R1	:	GET POINTER TO SUBUNIT CHARACTERISTICS GET TRACKS/GROUP CLEAR UNUSED BITS
31 005706 114002 32 005707 105072 33 005710 117401 34 005711 055707	6\$:	CLR ADD DEC BNE	R2 R0_R2 R1 6\$		CLEAR RUNNING TOTAL ADD TO RUNNING TOTAL DECREMENT COUNT IF INCOMPLETE, BRANCH
35 005712 100652 0000 36 005714 000000	020 7 \$: 8 \$:	MOV RETURN	RŽ,U.TSEC(R5)	:	

1 2 005715	.SBTTL UPT:	UPT - MOVE UP ONE TRACK
4 5 6		POINT U.MBN TO THE NEXT TRACK TO TEST (IT DOESN'T HAVE TO BE A TRACK, BUT IF GROUPS, U.MBN MUST BE ADJUSTED BACK TO THE FIRST BN IN THE GROUP
8 005715 102207 004000 9 005717 015722 10 005720 026172 11 005721 005773		BIT #NEWSUB,RO ; SEE IF THIS IS A NEW SUBUNIT BEQ 10\$: IF NOT, BRANCH CALL NEWUPT : SETUP NEW SUBUNIT BR 4\$: EXIT
12 005722 104657 000012 13 005724 107207 000001 14 005726 100657 000012 15 005730 045747	10\$:	MOV U.CCNT(R5),RO ; GET LO ORDER COUNT SUB #1,RO ; DECREMENT MOV RO,U.CCNT(R5) ; SAVE BCC 2\$; IF NO BORROW, BRANCH
16 005731 104657 000013 17 005733 107207 000001 18 005735 045745		MOV U.CCNT+1(R5),R0; GET HI ORDER COUNT SUB #1,R0; PROPOGATE BORROW BCC 1\$; IF NO BORROW, BRANCH
19 005736 104657 000033 20 005740 101207 004000 21 005742 100657 000033		MOV U.PARM(R5),R0; GET UNIT PARAMETERS BIS #NEWSUB,R0; FLAG AS TO GO ONTO NEXT SUBUNIT MOV RO,U.PARM(R5); SAVE
22 005744 005773 23 005745 100657 000013 24 005747 104657 000014 25 005751 104271 26 005752 055757	1\$: 2\$:	MOV RO.U.CCNT+1(R5); SAVE MOV U.PCTG(R5), RO : GET POINTER TO CURRENT TRACK/GROUP MOV (RO)+,R1 : GET OFFSET TO NEXT TRACK
27 005753 104207 000015 28 005755 105047 29 005756 104271		MOV #S.TGSS.RO ; RO WILL POINT TO START OF OFFSETS ADD R4.RO ; RO POINTS TO OFFSETS MOV (RO)+,R1 ; R1 HAS OFFSET
30 005757 100657 000014 31 005761 105651 000035 32 005763 100651 000035 33 005765 045773	3\$:	MOV RO,U.PCTG(R5); SAVE POINTER TO CURRENT TRACK/GROUP ADD U.MBN(R5),R1; ADD OFFSET TO CURRENT BN MOV R1,U.MBN(R5); SAVE BCC 4\$; IF NO CARRY, EXIT
34 005766 104651 000036 35 005770 115401 36 005771 100651 000036		MOV U.MBN+1(R5),R1 : GET HI ORDER BN INC R1 : PROPOGATE CARRY MOV R1,U.MBN+1(R5) : SAVE
37 005773 000000	4\$:	RETURN TO CALLING PROGRAM

2 005774		.SBTTL DOWNT:	DOWNT	- MOVE DOWN ONE T	RACK
4			MOVE TH	E MASTER BN DOWN	TO TEST THE PROCEEDING TRACK/GROUP
6 005774 102207 7 005776 016007 8 005777 026226 9 006000 006055			BIT BEQ CALL BR	#NEWSUB,RO 10\$ NEWDNT 5\$: SEE IF THIS IS A NEW SUBUNIT : IF NOT, BRANCH : INITIALIZE THIS SUBUNIT : EXIT
10 006001 104657 11 006003 107207 12 006005 100657 13 006007 046026	000012 000001 000012	10\$:	MOV SUB MOV BCC	U.CCNT(R5),R0	GET LO ORDER COUNT DECREMENT COUNT SAVE IF NO BORROW, BRANCH
14 006010 104657 15 006012 107207 16 006014 046024	2 000013 2 000001		MOV SUB BCC	U.CCNT+1(R5),R0 #1,R0	; GET HI ORDER COUNT ; PROPOGATE BORROW
17 006015 104657 18 006017 101207 19 006021 100657 20 006023 006055	2 004000 2 000033		MOV BIS MOV BR	U.PARM(R5),R0 #NEWSUB,R0 R0,U.PARM(R5) 5\$: GET UNIT PARAMETERS : FLAG AS TO GO ONTO NEXT SUBUNIT : SAVE : EXIT
21 006024 100657 22 006026 104207 23 006030 105047 24 006031 104657	000013	1\$: 2\$:	MOV MOV ADD MOV	RO.U.CCNT+1(R5) #S.TGSS,R1	: SAVE : RO WILL POINT TO START OF T/G OFFSETS : RO POINTS TO START OF T/G OFFSETS : GET POINTER INTO LIST
25 006033 10607 26 006034 056040 27 006035 11540 28 006036 10417		3\$:	CMP BNE INC	RO_R1 4\$ RO	; SEE IF AT START OF LIST : IF NOT, BRANCH ; RO POINTS TO NEXT WORD ; SEE IF END OF LIST
29 006037 056035 30 006040 104655 31 006042 10747	000035	4\$:	MOV BNE MOV SUB	3\$ U.MBN(R5),R1 -(R0),R1	; IF NOT, BRANCH ; GET LO ORDER MASTER BN ; SUBTRACT OFFSET
32 006043 10065 33 006045 10065 34 006047 04605 35 006050 10465	000014		MOV MOV BCC MOV	R1,U.MBN(R5) R0,U.PCTG(R5) 5\$ U.MBN+1(R5),R0	; SAVE ; SAVE POINTER ; IF NO BORROW, EXIT ; GET HI ORDER WORD
36 006052 117407 37 006053 100657 38 006055 000000	000036	5\$:	DEC MOV RETURN	RO RO, U. MBN+1 (R5)	: PROPOGATE BORROW : SAVE : RETURN TO CALLING PROGRAM

	2 006056			.SBTTL UPG:	UPG	- MOVE UP ONE GR	IOUI	P	٠
	4				MOVE MA	STER BN UP TO TH	E I	NEXT GROUP	
	6 006056 7 006060 8 006061 9 006062 0 006063	102207 016064 026172 026310 006135	004000		BIT BEQ CALL CALL BR	#NEWSUB,RO 10\$ NEWUPT SETSEC 5\$		SEE IF THIS IS A NEW SUBUNIT IF NOT, BRANCH INITILIZE THE SUBUNIT FOR TRACKS INITILIZE THE SUBUNIT FOR GROUPS EXIT	
	1 006064 2 006066	102201	040000	10\$:	BIT	#INITW,R1	:	SEE IF AN INITIAL WRITE IS BEING DONE IF SO, BRANCH	
	3 006067 4 006071 5 006073	104641 104657 117407	000004 000015		MOV MOV DEC BEQ	S.TRKL(R4),R1 U.CTRK(R5),R0 R0 1\$:	R1 HAS TRACK LENGTH GET TRACK COUNT DECREMENT COUNT IF COUNT EXHAUSTED, BRANCH	
	6 006074 7 006075 8 006077 9 006101 0 006103	104641 104657 117407 016112 100657 105651 10651 046135	000015 000035 000035		MOV ADD MOV BCC	RO, U. CTRK (R5) U.MBN(R5),R1 R1,U.MBN(R5) 5\$		SAVE MOVE BN TO NEXT TRACK SAVE EXIT	
	1 006104 2 006106 3 006107	104657	000036		MOV	U.MBN+1(R5),R0	:	GET HI ORDER BN PROPOGATE CARRY	
-	3 006107	100657	000036		MOV BR	RO.U.MBN+1(R5)	:	SAVE EXIT	
9	94 006111 95 006112	006135		1\$:	CALL	SETSEC	:	SETUP NEXT TRACK/GROUP COUNT	
	26 006113 27 006114 28 006115 29 006116 30 006117	114002 117407 016120 105012 006114		2\$:	CLR DEC BEQ ADD BR	R2 R0 3\$ R1,R2 2\$:	CLEAR RUNNING TOTAL DECREMENT COUNT IF COUNT EXPIRED, BRANCH ADD SECTORS/TRACK TO RUNNING TOTAL LOOP	
	1 006120	104657 107027	000035	3\$:	MOV SUB	U.MBN(R5),R0 R2,R0	:	GET LO ORDER MASTER BN ADJUST BACK TO START OF GROUP	
	32 006122 33 006123 34 006125 35 006126	100657	000035		MOV BCC	RO,U.MBN(R5)	:	SAVE IF NO BORROW, BRANCH	
	6 006130	104657	000036		MOV DEC	U.MBN+1(R5),R0 R0		GET HI ORDER MASTER BN PROPOGATE BORROW	
	7 006131 8 006133	100657	000036	4\$:	CLR	RO,U.MBN+1(R5)	:	CLEAR RO SO UPT DOESN'T DETECT A NEW SUBUN	TIV
	39 006134 30 006135	025715		5\$:	CALL	UPT	:	GO TO NEXT GROUP RETURN TO CALLING PROGRAM	

2 006136	.SBTTL DOWNG:	DOWNG	- MOVE DOWN ONE G	ROUP
· ·		MOVE MA	STER BN TO THE NE	XT LOWER GROUP
6 006136 102207 004000 7 006140 016144 8 006141 026226 9 006142 026321 10 006143 006171		BIT BEQ CALL CALL BR	#NEWSUB,RO 10\$ NEWDNT LSTTRK 4\$: SEE IF THIS IS A NEW SUBIUNIT : IF NOT, BRANCH : SETUP THIS SUBUNIT FOR TRACKS : SETUP THIS SUBUNIT FOR GROUPS : EXIT
11 006144 104657 000015 12 006146 117407 13 006147 016167	10\$:	MOV DEC BEQ	U.CTRK(R5),R0 R0 1\$	GET TRACK COUNT DECREMENT COUNT IF EXPIRED, BRANCH
14 006150 100657 000015 15 006152 104657 000035 16 006154 107647 000004		MOV MOV SUB	RO,U.CTRK(R5) U.MBN(R5),R0	: SAVE : GET LO ORDER MASTER BN : SUBTRACT TRACK LENGTH
17 006156 100657 000035 18 006160 046171		MOV BCC	RO.U.MBN(R5)	: SAVE : EXIT
19 006161 104657 000036 20 006163 117407		MOV DE C	U.MBN+1(R5),R0 R0	: GET HI MASTER BN : PROPOGATE BORROW
21 006164 100657 000036 22 006166 006171		MOV BR	RO,U.MBN+1(R5)	: SAVE : EXIT
23 006167 025774 24 006170 026321	1\$:	CALL	DOWNT LSTTRK	: GO DOWN A GROUP : SET MASTER BN ON LAST TRACK OF GROUP
25 006171 000000	48:	RETURN		: RETURN TO CALLING PROGRM

1 2 006172 3 4			.SBTTL NEWUPT:	INITIAL		FOR SEQUENTIALLY UP BY TRACKS
7 006172 8 006174 9 006176 10 006200 11 006202 12 006204 13 006206 14 006210 15 006212 16 006214 17 006215 18 006217 19 006221 20 006223 21 006225	104647 100657 104647 100657 104647 100657 104647 100657 104207 105047 100657 104657 103207 100657 000000	000011 000012 000012 000013 000013 000035 000014 000036 000015		MOV MOV MOV MOV MOV MOV MOV ADD MOV MOV BIC MOV RETURN	RO, U. CCNT (R5) S.MCNT+1 (R4), RO RO, U. CCNT+1 (R5) S.TGOF (R4), RO RO, U. MBN (R5)	GET HI ORDER MAXIMUM COUNT SAVE IN HI ORDER CURRENT COUNT GET STARTING OFFSET SAVE IN MASTER BN GET HI ORDER STARTING OFFSET

2 006226	.SBT1		AMETERS FOR SEQUENTIALLY DOWN BY TRACKS
5		INITIALIZE THIS SUBUNIT	T FOR SEQUENTIALLY ACCESSING TRACKS IN
7 006226 006226 100465 006227 100464		PUSH <r5,r4></r5,r4>	; SAVE UNIT AND SUBUNIT POINTERS MOV R5,-(SP) MOV R4,-(SP)
8 006230 104642 9 006232 104643 10 006234 104647 11 006236 100657 12 006240 104641 13 006242 100651 14 006244 105204	000013 000014 000011 000012 000012 000013	MOV S.MCNT(R4),R0 MOV R0,U.CCNT(R5) MOV S.MCNT+1(R4),R1 MOV R1,U.CCNT+1(R5) ADD #S.TGSS,R4	; R2 HAS LO ORDER STARTING OFFSET 3; R3 HAS HI ORDER STARTING OFFSET ; R0 HAS LO ORDER MAXIMUM COUNT ; SAVE LO ORDER MAXIMUM COUNT 1; R1 HAS HI ORDER MAXIMUM COUNT); SAVE HI ORDER MAXIMUM COUNT ; R4 POINTS TO START OF OFFSETS
15 006246 107207 16 006250 046255 17 006251 107201 18 006253	000001 1\$: 000001	SUB #1,R0 BCC 2\$ SUB #1,R1 BCS 4\$; DECREMENT COUNT ; IF NO CARRY, BRANCH ; PROPOGATE BORROW ; IF COUNT EXHAUSTED, BRANCH
006253 046255 006254 006267 19 006255 104245	2\$:	MOV (R4)+,R5	BCC .+2 BR 4\$
20 006256 056263 21 006257 104204 22 006261 105164 23 006262 104245	000015	BNE 3\$ MOV #S.TGSS.R4 ADD (SP).R4 MOV (R4)+.R5	: IF NOT END-OF-LIST, BRANCH : R4 WILL POINT TO START OF OFFSETS : R4 POINTS TO START OF OFFSETS : GET OFFSET
24 006263 105052 25 006264 046246 26 006265 115403 27 006266 006246	3\$:	ADD R5.R2 BCC 1\$ INC R3 BR 1\$; ADD OFFSET TO BN ; IF NO CARRY, LOOP ; PROPOGATE CARRY ; LOOP
28 006267 104665 29 006271 100654 30 006273 006273 104264	000001 48:	MOV 1(SP),R5 MOV R4,U.PCTG(R5) OP <r4,r5></r4,r5>	GET UNIT POINTER SAVE POINTER TO CURRENT TRACK/GROUP RESTORE MOV (SP)+,R4
006274 104265 31 006275 100652 32 006277 100653 33 006301 104653 34 006303 103203 35 006305 100653 36 006307 000000	000035 000036 000033 004000 000033	MOV R2,U.MBN(R5) MOV R3,U.MBN+1(R5) MOV U.PARM(R5),R3 BIC #NEWSUB,R3 MOV R3,U.PARM(R5) RETURN	; SAVE LO ORDER STARTING BN MOV (SP)+,R5

2 006310	.SBTTL SETSEC - SETUP TRACK/GROUP COUNT FOR SELECTED GROUPS SETSEC:
4	MOVE TRACKS/GROUP TO U.CTRK
6 006310 104647 000005 7 006312 104677 000003 8 006314 103207 177400 9 006316 100657 000015 10 006320 000000	MOV S.SCHR(R4),R0 : RO POINTS TO SUBUNIT CHARACTERISTICS MOV TRKGRP(R0),R0 : RO HAS TRACKS/GROUPS BIC #HIBYTE,RO : CLEAR UNUSED BITS MOV RO,U.CTRK(R5) : SAVE AS TRACK COUNT RETURN : RETURN TO CALLING MODULE

1 2	006321			.SBTTL LSTTRK:	LSTTRK	- SET MASTER BN	TO POINT TO LAST TRACK IN THE GROUP
345					SET MBN	TO LAST TRACK O	F GROUP
6	006321	026310			CALL	SETSEC R2	; SETUP TRACK/GROUP COUNT ; CLEAR RUNNING TOTAL
8	006322	114002 117407		2\$:	DEC	RO	; DECREMENT COUNT
10	006324 006325	016330 105642	000004		BEQ ADD	3\$ S.TRKL(R4),R2	: IF COUNT EXPIRED, BRANCH : ADD SECTORS/TRACK TO RUNNING LENGTH
11	006327	006323			BR	2\$; LOOP
12	006330	105652	000035	3\$:	ADD	U.MBN(R5),R2	; MBN WILL POINT TO LAST TRACK IN GROUP
13	006332	100652	000035		MOV	R2.U.MBN(R5)	; SAVE
14	006334	046340			BCC	4\$: IF NO CARRY, EXIT
15	006335	104657	000036		MOV	U.MBN+1(R5),R0	; GET HI ORDER BN
16	006337	115407			INC	RO	; PROPOGATE CARRY
17	006340	100657	000036	48:	MOV	RO.U.MBN+1(R5)	; SAVE
18	006342	000000			RETURN		: RETURN TO CALLING MODULE

.SBTTL CLRUP - CLEAR ALL PARAMETER BITS CLRUP: 006343 CLRUP CLEARS ALL NECESSARY FLAG BITS MOV U.PARM(R5), RO ; MOVE UNIT PARAMETERS TO RO CLEAR ALL FLAGS BEFORE THE NEXT OPERATION 6 006343 104657 000033 8 006345 103207 004776 9 006347 100657 000033 10 006351 000000 #DATERR!RBNBN!REVEC!REVINP!WCHECK!DATCMP!REDWRT!RETRY!NEWSUB,RO BIC RO, U. PARM(R5) ; SAVE UNIT PARAMETERS RETURN

2 006352			.SBTTL RORW:	RORW	- DETERMINE IF A	A REA	D OR A WR	ITE IS	TO BE DONE	
3				RORW	DETERMINES IF THE	BLOC	K SELECTE	D WILL	BE READ OR	WRITTEN
6 006352		000000		MOV	S.PARM(R4),R2		ET SUBUNI			
7 006354		000033		MOV	U.PARM(R5),R0					
8 006356		042000		BII	#INITW!WONLY,R2				ITE OR WRIT	EONLY
9 006360				BNE	1\$		F SO, BRA			
10 006361	102202	004000		BIT	#RONLY,R2		SEE IF REA			
11 006363	056373			BNE	2\$; I	F SO, BRA	NCH		
12 006364				CALL	RANDOM	: G	SET RANDOM	NUMBER		
13 006365				ROR	R1	: R	ROTATE LOW	BIT IN	TO CARRY	
14 006366				BCC	2\$		F LOW BIT			
15 006367		000100	1\$:	BIS	#REDWRT,RO				BIT (WRITE)
16 006371	100657	000033		MOV	RO.U.PARM(R5)		AVE UNIT			
17 006373		00000	28:	RETUR			ETURN TO			

2 006374			.SBTTL PATTRN:	PATTRN	- IF WRITE, DETER	MINE WHAT PATTERN IS TO BE WRITTEN
4				FIND PA	TTERN TO USE (ONL	Y IF WRITE TO BE DONE)
6 006374	104653	000033	•	MOV	U.PARM(R5),R3	: GET UNIT PARAMETERS
7 006376	102203	000100		BIT		: SEE IF WRITE TO BE DONE
8 006400	016415			BEQ		; IF NOT, BRANCH
9 006401	104641	000003		MOV		; GET PATTERN NUMBER
10 006403	016407			BEQ		; IF PATTERN NOT SELECTED, BRANCH
11 006404	103201	177760		BIC		; SEE IF SPECIAL PATTERN USED
12 006406	006413			BR	FIXPAT	: IF PATTERN SELECTED, USE IT
13 006407	026475		RNDO:	CALL	RANDOM	; GET RANDOM PATTERN NUMBER
14 006410	103201	177760		BIC		; CLEAR UNUSED BITS
15 006412	016407			BEQ	RNDO	; NO SUCH THING AS PATTERN O, TRY AGAIN
16 006413	100651	000011	FIXPAT:		R1,U.PAT(R5)	; SAVE THE PATTERN NUMBER
17 006415	000000		PATEXT:	RETURN		: RETURN TO CALLING PROGRAM

2 006416			.SBTTL WCHK:	WCHK	- IF WRITE, SEE	IF	A WRITE CHECK IS TO BE DONE
3			:	HULHN CE	TO THE HOLTE CHE	cr	BIT IF A WRITE CHECK IS TO BE DONE
5			:	WUTH SE	13 THE WRITE CHE		BIT IF A WATTE CHECK IS TO BE DONE
6 006416	104653	000033		MOV	U.PARM(R5),R3	:	GET UNIT PARAMETERS
7 006420	104642	000000		MOV	S.PARM(R4),R2		GET SUBUNIT PARAMETERS
8 006422	102203	000100		BIT	#REDWRT,R3	:	SEE IF WRITE IS TO BE DONE
9 006424	016445			BEQ	2\$:	IF NOT, BRANCH
10 006425	102202	000010		BIT	#WCHECK,R2		SEE IF WRITE CHECK IS TO BE DONE
11 006427 12 006430	016445	040000		BEQ	2\$ #INITW_R2		IF NOT, BRANCH SEE IF INITIAL WRITE IS IN PROGRESS
13 006432	056445	040000		BNE	2\$		IF SO, NO WRITE CHECK, SO BRANCH
14 006433	102202	000004		BIT	#WCHKAL .R2	:	SEE IF WRITE CHECK IS ALWAYS TO BE DONE
15 006435	056441			BNE	1\$		IF SO, BRANCH
16 006436	026475			CALL	RANDOM	:	GET RANDOM NUMBER
17 006437	110601			ROR	R1	:	1/2 OF THE TIME WRITE CHECK
18 006440	046445	000010		BCC	2\$:	BRANCH (NO WRITE CHECK) IF LOWEST BIT CLEAR
19 006441	101203	000010	1\$:	BIS	#WCHECK,R3	:	SET WRITE CHECK BIT
20 006443	100653	000033	2\$:	MOV RETURN	R3,U.PARM(R5)		SAVE UNIT PARAMETERS RETURN TO CALLING PROGRAM

2 006446			SBTT. DCOMP:	DCOMP	- IF READ, SEE	IF DATA COMPARE IS TO BE DONE
4				DCOMP S	SETS THE DATCMP	BIT IF A DATA COMPARE IS TO BE DONE
6 006446 7 006450 8 006452	104642 102202 016474	000000 000002		MOV BIT BEQ	S.PARM(R4),R2 #DATCMP,R2 DCEXT	; GET SUBUNIT PARAMETRS ; SEE IF DATA COMPARE REQUESTED ; IF NOT, BRANCH
9 006453 10 006455 11 006457	104653 102203 016463	000033 000100		MOV BIT BEQ	U.PARM(R5),R3 #REDWRT,R3 DCREAD	GET UNIIT PARAMETERS SEE IF READ IS TO BE DONE IF SO, BRANCH
12 006460 13 006462	102203	000010		BIT	#WCHECK,R3 DCEXT	; SEE IF WRITE CHECK IS TO BE DONE ; IF NOT, BRANCH
14 006463 15 006465 16 006466	102202 056471 026475	000001	DCREAD:	BIT BNE CALL	#DCMPAL,R2 DCMPYS RANDOM	; SEE IF DATA COMPARE ALWAYS DONE ; IF SO, BRANCH ; GET RANDOM NUMBER
17 006467 18 006471	103201	177775	DCMPYS:	BIC	#^CDATCMP,R1 R1,R3	CLEAR ALL BUT THE (POSSIBLY) DATA COMPARE FLAG
19 006472 20 006474	100653	000033	DCOUT: DCEXT:	MOV RETURN	R3,U.PARM(R5)	: SAVE UNIT PARAMETERS : RETURN TO CALLING PROGRAM

1 2	006475			.SBTTL RANDOM:	RANDOM	- RANDOM NUM	BER ROL	UTINE	
5						CALCULATES A	RANDON	M NUMBER AND RETURNS IT IN R	1
7	006475 006475 006476	100467			PUSH	<r0,r2></r0,r2>	;	SAVE RO AND R2	MOV RO,-(SP) MOV R2,-(SP)
8 9 10	006477 006501 006503	104307 104301 104202	002445 002446 000007		MOV MOV MOV	LOSEED.RO HISEED.R1 #7,R2	:	MOVE LO ORDER SEED TO RO MOVE HI SEED TO R1 MOVE LOOP COUNT TO R2	HOV KE, YSF7
14	006505 006506 006507 006511	110207 110201 103207 117402	000001	1\$:	ROL ROL BIC DEC	R0 R1 #1,R0 R2		ROTATE LO ORDER NUMBER BY 1 ROTATE HI OREDR NUMBER BY 1 CLEAR LOWER BIT DECREMENT COUNT	
15 16 17 18	006512 006513	056505 105307 046517 115401	002445		BNE ADD BCC INC	1\$ LOSEED,RO 2\$ R1		IF COUNT INCOMPLETE, BRANCH ADD ORIGINAL SEED (X129) IF NO CARRY, BRANCH PROPOGATE CARRY	
19 20 21	006517	105207 046523 115401	001057	2\$:	ADD BCC INC	#1057,R0 3\$ R1		ADD LO CONSTANT IF NO CARRY, BRANCH PROPOGATE CARRY	
22 23 24	006523	105201 104070 104010	047401 002445 002446	3\$:	ADD MOV MOV POP	#47401.R1 RO.LOSEED R1.HISEED <r2.r0></r2.r0>		ADD HI CONSTANT SAVE LO ORDER SEED SAVE HI ORDER SEED RESTORE R2 AND RO	
	006531 006532 006533	104262 104267 000000			RETURN	SIL , NO		NESTONE NE POP NO	MOV (SP)+,R2 MOV (SP)+,R0

2 006534			.SBTTL MAXMUM	MAXMUM :	- FOR SEQUENTIAL	L B/E SETS, DETERMINE HOW MANY SECTORS TO READ/WRITE
5 6 7				AND INI	TILIZE BOTH U.TSI S IN PROGRESS, AS	TH A MAXIMUM NUMBER OF SECTORS TO READ/WRITE SEC AND U.MSEC TO THIS VALUE. IF AN INITIAL AS MANY SECTORS WILL BE READ/WRITTEN AS UM POSSIBLE SECTORS BY LIMITATION OF B/E SETS
9 006534 006534 006535	100461			PUSH	<r1,r3></r1,r3>	; SAVE R1, R3 MOV R1,-(SP) MOV R3,-(SP)
10 006536 11 006540 12 006542	104643 102203 056552	000000 040100		MOV BIT BNE	S.PARM(R4),R3 #INITW!SEQSEK,R: 2\$; GET SUBUNIT PARAMETERS
13 006543 14 006544 15 006546	026475 103201 016543	177400	1\$:	CALL BIC BEQ	RANDOM #HIBYTE,R1 1\$; GET A RANDOM NUMBER OF SECTORS TO READ/WRITE ; READ/WRITE A MAXIMUM OF 255 SECTORS ; IF ZERO, GET ANOTHER RANDOM NUMBER
16 006547 17 006550 18 006551 19 006552	106071 076552 104017 100657	000030	ne.	MOV MOV	RO,R1 2\$ R1,R0	; SEE IF RANDOM NUMBER EXCEEDS POSSIBLE ; IF SO, BRANCH ; ONLY READ/WRITE THE RANDOM NUMBER OF SECTORS
20 006554 006554 006555	104263	000020	2\$:	MOV	R0,U.TSEC(R5) <r3,r1></r3,r1>	; SAVE IN TSEC ; RESTORE R3, R1 MOV (SP)+,R3 MOV (SP)+,R1
21 006556	000000		AREA1	RETURN =	.+1	; RETURN TO CALLING PROGRAM

isty on

```
.SBTTL ******* OVERLAY 2 - IF NECESSARY, ISSUE SEEK
   006557
                                             DMOVLY SK, AREA1
   006557
          034666
                                              WREDC
                                                              COUTPUT EDC FOR THIS OVERLAY
                                                          ************
                                                    ********************
                                                     2.
           000002
                                     SEEK
                                                                      : SEEK OVERLAY
12
13
14
15
                                             SEEK ISSUES A SEEK TO THE CYLINDER SPECIFIED IN U.CCYL(R5) (2 WORDS)
                                             AND GROUP GIVEN IN U. CGRP (R5) (1 WORD).
                                             IT THEN RETURNS WITH A DEFERED CALL TO SEKTST (TEST SEEK) TO SEE IF THE SEEK COMPLETED SUCCESSFULLY. IF SO, THE READ WRITE MODULE IS
16
                                             THEN CALLED
17
18 006560
                                             DIAG$$
           115000
                   002767
   006560
                                             TST
                                                     $$DIAG+$DIAG$
   006562
           016570
                                             BEQ
                                                      .+6
           104207
                                                     #60000,R0
   006563
                    060000
                                             MOV
   006565
                   174200
                                             MOV
                                                     RO, a$$DIAG+$DIAG$
   006567
           006570
                                             BR
                                                      .+1
   006570
           026625
                                             CALL
                                                     TSTNEC
                                                                      : SEE IF SEEK IS NECESSARY
IT SEEMS TO ME THAT IF THE PROGRAM IS CORRECT, I'LL NEVER GET
                                             THIS ERROR. TO REDUCE CONFUSION FOR THE TIME BEING, I'LL ASSUME
                                             THAT THIS ERROR DOESN'T OCCUR
                                                     #SETUP, RO
                                                                        IF ERROR, SETUP IS NEXT MODULE ******
                                             MOV
                                             MOV
                                                                        MAKE R1 NON-ZERO FOR DEFERRED CALL IF ERROR
                                                     RO, R1
                                             TST
                                                     R2
                                                                        SEE IF ERROR OCCURRED
                                                     SEKEXT
                                                                      : IF SO, BRANCH
                                             BNE
                                                     R2
R3
   006571
           114002
                                                                        TAKE AS NO ERROR (I THINK IT'S REDUNDANT)
   006572
                                                                        SEE IF SEEK IS NECESSARY
           115003
                                             TST
   006573
           016616
                                                     NOSEEK
                                             BFQ
                                                                        IF ZERO (NO SEEK NECESSARY), BRANCH
   006574
           026677
                                             CALL
                                                     ISUSEK
                                                                        ISSUE SEEK
   006575
                                                                        SEE !F ERROR OCCURRED
           115002
                                             TST
                                                                        IF ERROR, BRANCH
GET UNIT PARAMETERS
   006576
           056621
                                             BNE
                                                     AF TERR
   006577
           104657
                    000033
                                             MOV
                                                     U.PARM(R5),RO
   006601
           101207
                    002000
                                             BIS
                                                     #SEKINP.RO
                                                                        FLAG AS SEEK IN PROGRESS
   006603
                    000033
           100657
                                             MOV
                                                     RO, U. PARM(R5)
                                                                        SAVE
   006605
                    003720
           104207
                                             MOV
                                                     #2000..RO
                                                                        MOVE TIMEOUT TO PARAMETERS
                                                                        INITILIZE TIMEOUT VALUE
40 006607
           100657
                    000005
                                                     RO, U. TIMO(R5)
                                             MOV
41
   006611
           104201
                    000001
                                             MOV
                                                     #1.R1
                                                                        DEFERRED CALL TO SEKTST
42
   006613
           104207
                    000003
                                             MOV
                                                     #SEKTST, RO
                                                                        SEKTST NEXT TO CALL
           006624
104207
   006615
                                             BR
                                                     SEKEXT
                                                                        BRANCH
44 006616
45 006620
                    004501
                                    NOSEEK: MOV
                                                     #REDSET, RO
                                                                        READ/WRITE ROUTINE NEXT
           006623
                                             BR
                                                     SEKOUT
                                                                        BRANCH
46 006621
            104207
                    200000
                                     AFTERR: MOV
                                                     #SEEK,RO
                                                                        SEEK IS NEXT MODULE CALLED *****
   006623
           114001
                                                                        IMMIDATE CALL
                                     SEKOUT: CLR
                                                     R1
   006624
           003127
                                     SEKEXT: BR
                                                     JMPRET
                                                                        RETURN TO CALLING PROGRAM
```

1 2	006625				.SBTTL TSTNEC:	TSTNEC	- TEST TO SEE IF	SEEK IS NECESSARY
454						TSTNEC AS ZERO	TESTS TO SEE IF A NONZERO OTHERWI	SEEK IS NECESSARY. IF NOT, R3 IS RETURNED SE.
8	006625	104657	000033 000200			MOV BIT	#RBNBN,RO	GET UNIT PARAMETERS SEE IF BLOCK REVECTORED
10	006631 006632 006635	016641 104650 104650	000041 000042	002340 002341		MOV MOV	U.RBN+1(R5), CURBI	; IF NOT, BRANCH ; MOVE RBN TO CALCULATION AREA N+1 ; MOVE RBN TO CALCULATION AREA
13	006640 006641 006644	006647 104650 104650	000037 000040	002340 002341	2\$:	BR MOV MOV	3\$ U.CBN(R5),CURBN U.CBN+1(R5),CURBN	; BRANCH ; MOVE LBN TO CALCULATION AREA N+1 ; MOVE LBN TO CALCULATION AREA
16	006647 006650 006651	114007 022141 115002			3\$:	CLR CALL TST	RO CALC R2	; TELL CALC ROUTINE TO SET UP PARAMETERS ; CALCULATE CYL AND GROUP ; SEE IF AN ERROR OCCURRED
18 19	006652 006653 006655	056676 104203 104657	002344 000033			BNE MOV MOV	10\$ #CYL,R3	: IF SO, BRANCH : R3 POINTS TO CALCULATED CYLINDER : GET UNIT PARAMETERS
21	006657 006661	102207 056675	020000			BIT	#RESEEK,RO	: SEE IF SEEK MANDATORY : IF SO, BRANCH
24	006662 006664 006665	104202 105052 104201 104237	000053			MOV ADD MOV	#U.CCYL,R2 R5,R2 #3,R1	; R2 WILL POINT TO CURRENT CYL ; R2 POINTS TO CURRENT CYLINDER ; GET COUNT
27	006667 006670 006671	106227 056675			4\$:	MOV CMP BNE	(R3)+,R0 (R2)+,R0 9\$; GET WORD ; SEE IF CYL AND GROUP THE SAME ; IF NOT, BRANCH
30	006672 006673 006674	117401 056667 114003				DEC BNE CLR	R1 4\$ R3	DECREMENT COUNT IF COUNT INCOMPLETE, BRANCH FLAG AS SEEK NOT NECESSARY
32	006675	114002			9\$: 10\$:	CLR	R2	; FLAG AS NO ERRORS ; RETURN TO SEEK

JUJEN	13300	SEEK COM	CANAD					
1 2	006677				.SBTTL ISUSEK:	ISUSEK	- ISSUE SEEK COM	MAND
345						ISUSEK	ISSUES THE SEEK	TO THE DRIVE
10 11 12 13	006712 006713 006714 006715	104300	002344 002345 002346 001506 000053 000003	001561 001562 001563		MOV MOV MOV CALL TST BNE MOV ADD MOV PUSH	CYL, INS+1 CYL+1, INS+2 GROUP, INS+3 #CR.SEK,R3 TALK R2 10\$ #U.CCYL,R0 R5,R0 #3,R1 <r0,r1></r0,r1>	; MOVE LOW CYL TO SEEK COMMAND ; SET LOWER BITS ; MOVE GROUP TO SEEK COMMAND ; SET UP FOR TALK ; SEND SEEK ; SEE IF ERROR OCCURRED ; IF SO, BRANCH ; RO WILL POINT TO CURRENT CYLINDER ; RO POINTS TO CURRENT CYLINDER ; MOVE THREE WORDS ; SAVE POINTER AND COUNT
17 18 19 20 21 22 23	006720 006722 006722 006723 006724 006726 006727 006730 006731 006732 006733	100467 100461 104202 105052 104273 100223 117401 056727	000056		1\$:	MOV ADD MOV MOV DE C BNE POP	#U.LCYL.R2 R5.R2 (R0)+,R3 R3.(R2)+ R1 1\$ <r2.r0></r2.r0>	MOV RO,-(SP) MOV R1,-(SP) R2 WILL POINT TO LAST CYLINDER R2 POINTS TO LAST CYLINDER GET WORD SAVE DECREMENT COUNT IF COUNT INCOMPLETE, BRANCH RESTORE
24 25 26 27 28 29 30 31	006735 006737 006740 006741 006742 006743 006744	104262 104267 104201 104213 100273 117402 056737 007023 106207 057020	002344		4\$: 2\$:	MOV MOV DEC BNE BR CMP BNE	#CYL,R1 (R1)+,R3 R3,(R0)+ R2 2\$ ISUEXT #175,R0 IMPERR	MOV (SP)+,R2 MOV (SP)+,R0 ; R2 POINTS TO NEW CYL ; GET WORD ; SAVE ; DECREMENT COUNT ; IF COUNT INCOMPLETE, BRANCH ; BRANCH (NOTE THAT R2 IS ZERO - NO ERRORS) ; SEE IF UNSUCCESSFUL RESPONSE WAS RECIEVED ; IF NOT, BRANCH
	006747 006747 006752 006755 006760 006763 006766 006771 006774 006777 007002 007005 007007 007011 007014 007014	104200 104300 104300 104300 104300 104300 104200 104200 104202 104020 103200	003617 002340 002341 002347 002346 002344 002345 000033 001400 007002 000013 001006 077777	001012 001013 001014 001015 001016 001017 001020 001010 001010 001007		BIC	#77777,ERRPOS	#1,TRACK,GROUP,CYL,CYL+1> MOV
35	007014 007014 007017	101200 007023	000013	002357	TMDEDD.	ENDERR BR	ISUEXT 5 MSERO	BIS #13, ERRPOS ; SET THE POSITION ; BRANCH ; BERORT SECONDARY ERROR
37 38	007020 007020 007023	104200 000000 007025	010345	001013	ISUEXT: AREA2		5.#SER9	REPORT SECONDARY ERROR MOV #SER9.OUT.05 RETURN TO CALLING PROGRAM

```
.SBITL ******* OVERLAY 3 - SEE IF THE SEEK IS COMPLETE
 2
   007024
                                                  DMOVLY TS. AREA2
   007024 123711
                                                                     COUTPUT EDC FOR THIS OVERLAY
                                                  .WREDC
            000003
                                         SEKTST =
                                                                              : SEEK COMPLETE TEST OVERLAY
                                                  SEKTST TESTS TO SEE IF READ/WRITE READY OR ATTENTION IS HIGH
                                                  R2 RETURNED AS ZERO IF SEEK WAS SUCESSFUL, -1 IF SEEK INCOMPLETE
14
                                                  POSITIVE NON-ZERO IF AN ERROR WAS DETECTED
15
  007025
16
                                                  DIAG$$
            115000
                     002770
                                                            $$DIAG+$DIAG$
                                                  TST
   007027
007030
007032
            017035
                                                  BEQ
                                                            .+6
            104207
                                                            #60000.RO
                      060000
                                                  MOV
                      173734
                                                  MOV
                                                            RO. @$$DIAG+$DIAG$
   007034
            007035
                                                  BR
                                                                              GET REAL TIME DRIVE STATE
SEE IF ERROR OCCURRED
IF SO, BRANCH
SEE IF ATTENTION IS HIGH
   007035
            021173
                                                  CALL
                                                            RTDS
18 007036
             115002
                                                            R2
                                                  TST
19
   007037
            057160
                                                  BNE
                                                            RTDSE
  007040
007042
007043
            102201
057226
102201
20
21
22
23
24
25
26
27
28
23
31
                      000002
                                                            #ATTN,R1
                                                  BIT
                                                                              ; IF ATTENTION HIGH, BRANCH
                                                  BNE
                                                            ATNHI
                                                                              ; SEE IF READ/WRITE READY
; IF NOT, BRANCH
                      100000
                                                  BIT
                                                            #RWRDY,R1
   007045
            017102
                                                  BEQ
                                                            STSERR
                      000033
   007046
             104657
                                                  MOV
                                                            U.PARM(R5),RO
                                                                                 GET UNIT PARAMETERS
   007050
             103207
                                                            #RESEEK! SEKINP, RO
                                                                                        : CLEAR RESEEK BIT
                                                  BIC
   007052
                                                                                 SAVE PARAMETERS
             100657
                      000033
                                                            RO, U. PARM(R5)
                                                  MOV
                                                                                 GET NUMBER OF SEEKS ISSUED
   007054
             104657
                      000007
                                                  MOV
                                                            U.SEEK(R5),RO
   007056
             117407
                                                            RO
                                                                                 DECREMENT SEEK COUNT
                                                  DEC
   007057
            057074
                                                                                 IF NO REPORT NEEDED, BRANCH
                                                  BNE
                                                            SEKCNT
             104201
   007060
                      000047
                                                                                 R1 WILL POINT TO SUBUNIT NUMBERS
                                                  MOV
                                                            #U. SNUM, R1
   007062
                                                                                R1 POINTS TO SUBUNIT NUMBERS
R1 POINTS TO SUBUNIT IN USE NUMBER
             105051
                                                  ADD
                                                            R5.R1
32
33
34
35
36
37
             105651
   007063
                      000034
                                                            U.SUBU(R5),R1
                                                  ADD
   007065
             104110
                      001007
                                                            (R1), OUT. 01
                                                                               ; MOVE TO OUTPUT
                                                  MOV
            104207
020751
   007067
                      000010
                                                                                 MOVE SEEK REPORT NUMBER TO RO
                                                  MOV
                                                            #T4SEEK, RO
                                                            HOSTRO
   007071
                                                                                 REPORT TO HOST
                                                  CALL
   007072
             104207
                                                            #1000.,R0
R0,U.SEEK(R5)
                                                                                 SET UP FOR NEW COUNT
                      001750
                                                  MOV
   007074
             100657
                      000007
                                                                                 SAVE COUNT
                                         SEKCNT: MOV
                                                                                READ/WRITE SETUP IS NEXT MODULE IMMIDATE CALL TO NEXT MODULE
38
   007076
             104207
                      004501
                                                            #REDSET_RO
                                                  MOV
   007100
             114001
                                                  CLR
   007101
            007276
                                                            STSEXT
                                                                                 BRANCH
                                                  BR
   007102
             104651
                      000005
                                                            U.TIMO(R5),R1
41
                                         STSERR: MOV
                                                                                 GET TIMEOUT VALUE
   007104
             117401
                                                  DEC
                                                            R1
                                                                                 DECREMENT TIMEOUT VALUE
   007105
             104207
                      000003
                                                  MOV
                                                            #SEKTST, RO
                                                                                SEEK TEST IS NEXT MODULE
44 007107
             100651
                      000005
                                                            R1, U. TIMO(R5)
                                                                                SAVE TIMEOUT VALUE
                                                  MOV
45
   007111
             057276
                                                  BNE
                                                                                 IF NON-ZERO BRANCH
                                                            STSEXT
   007112
                                                            3, <U.LCYL(R5), U.LCYL+1(R5), U.LGRP(R5)>
                                                  HARDER
   007112
007115
             104200
                      000363
                               001012
                                                                                                           #ER3.0UT.04
                                                                                                 MOV
             104650
                      000056
                               001013
                                                                                                 MOV
                                                                                                           U.LCYL(R5),OUT.05
                      000057
                               001014
   007120
             104650
                                                                                                           U.LCYL+1(R5), OUT. 06
                                                                                                 MOV
   007123
             104650
                      000060
                               001015
                                                                                                 MOV
                                                                                                           U.LGRP(R5), OUT. 07
   007126
             104200
                      000003
                               001010
                                                                                                           #3,0UT.02
                                                                                                 MOV
```

007131 007134 007137 007141 47 007143	101200 104200 104202 104020	001000 007134 000014 001006	001010 001007			BIS #ERHARD.OUT.02 MOV #OUT.01 MOV #ERRMC.R2 MOV R2.OUT.RQ
47 007143 007143 007146 007151 48 007154	104650 104650 104650	000053 000054 000055	001016 001017 001020		ERRORC	<pre>C <u.ccyl(r5),u.ccyl+1(r5),u.cgrp(r5)></u.ccyl(r5),u.ccyl+1(r5),u.cgrp(r5)></pre>
49 007157	101200 007273	000013	002357		BR	STSERX ; BRANCH BIS #13, ERRPOS ; SET THE POSITION
50 007160 007163 007166 007171 007174 007177 007202 007205 007207	104200 104650 104650 104650 104200 101200 104200 104202 104020	002302 000056 000057 000060 000020 001000 007202 000014 001006	001012 001013 001014 001015 001010 001010 001007	RTDSE:	HARDER	MOV #ER16,0UT.04 MOV U.LCYL(R5),0UT.05 MOV U.LCYL+1(R5),0UT.06 MOV U.LGRP(R5),0UT.07 MOV #16,0UT.02 BIS #ERHARD,0UT.02 MOV #.,0UT.01 MOV #ERRMC,R2 MOV R2,0UT.RQ
51 007211 007211 007214	104650 104650	000053	001016		ERRORC	<pre>C <u.ccyl(r5),u.ccyl+1(r5),u.cgrp(r5)></u.ccyl(r5),u.ccyl+1(r5),u.cgrp(r5)></pre>
007217 52 007222	104650	000055	001020		ENDERR	MOV U.CGRP(R5),OUT.10
007222 53 007225 54 007226	101200 007273	000013	002357	ATNHI:	BR SOFTER	STSERX; BRANCH TO EXIT R 4, <u.lcyl(r5),u.lcyl+1(r5),u.lgrp(r5)></u.lcyl(r5),u.lcyl+1(r5),u.lgrp(r5)>
007226 007231 007234 007237 007242 007245 007250 007253	104200 104650 104650 104650 104200 101200 104200 104202 104020	000547 000056 000057 000060 000004 001400 007250 000013 001006	001012 001013 001014 001015 001010 001010 001007	AINHI.		MOV #ER4,OUT.04 MOV U.L(YL(R5),OUT.05 MOV U.L(YL+1(R5),OUT.06 MOV U.LGRP(R5),OUT.07 MOV #4,OUT.02 BIS #ERSOFT,OUT.02 MOV #.,OUT.01 MOV #ERRMES,R2 MOV R2,OUT.RQ
55 007257 007257 007262 007265	104650 104650 104650	000053 000054 000055	001016 001017 001020			C <u.ccyl(r5),u.ccyl+1(r5),u.cgrp(r5)> MOV U.CCYL(R5),OUT.08 MOV U.CCYL+1(R5),OUT.09 MOV U.CGRP(R5),OUT.10</u.ccyl(r5),u.ccyl+1(r5),u.cgrp(r5)>
56 007270 007270 57 007273 58 007275 59 007276 60	101200 104207 114001 003127 007300	000013 000002	002357	STSERX: STSEXT: AREA3	CLR	BIS #13,ERRPOS ; SET THE POSITION #SEEK,RO ; SEEK IS NEXT MODULE CALLED R1 ; IMMIDIATE CALL TO SEEK JMPRET ; RETURN TO SEQUENCER .+1

1 2 007277 007277 3 4 5 6 7 8	127343		.SBTTL	DMOVLY .WREDC	RW, AREAO : OUTPU	UT ED	C FOR TH	READ OR W	(Y	ION
10 11	000004		RDWRT	=	4.	:	READ/WR	TE OVERLA	IY	
11 12 13 14 15				BY THE	PESIDES WEITHER PARAMETERS IN U SETUP MODULE	TO R	READ OR W	WRITE THE THESE PAR	LBN SET UP, RAMETERS WERE	DETERMINED E SET UP
16 004515 004515	115000	002771	•	DIAG\$\$	\$\$DIAG+\$DIAG\$		******	****		
004517 004520	014525	060000		BEQ MOV	.+6 #60000_R0					
004522 004524	100707	176245		MOV BR	RO. a\$\$DIAG+\$D	IAG\$				
17 004525 18 004527	104653	000033		MOV	U.PARM(R5),R3 #RCLB,R3	:	GET UNIT	PARAMETE	RS E JUST DONE	
19 004531 20 004532	054543	000004		BNE BIT	3\$ #RETRY,R3	:	IF SO, E	BRANCH (LE	AVE RETRIES	AS THEY ARE)
21 004534 22 004535	014537	000004		BEQ CLR	1\$ R1	:	IF NOT.	BRANCH ETRIES AT		MICS AT T
23 004536 24 004537	004541	177777	1\$:	BR MOV	2\$:	BRANCH			
25 004541 26 004543	100651	000006	2\$:	MOV	#-1,R1 R1,U.RWTO(R5)	:	SAVE IN	UNIT PARA	METER AREA	
27 004544	114002	000100	3\$:	CLR	R1 R2	;	NO ERROF	RS	NEXT MODULE	
28 004545 29 004547	102203	000100		BEQ	#REDWRT,R3 RDMOD	:	IF SO, E	READ IS TO BRANCH		
30 004550 31 004552	102203 054556	000040		BIT	#REVINP,R3 RDMOD	:	IF SO, E	BRANCH	N PROGRESS	
32 004553 33 004555	104207 004565	000005		MOV BR	#WRITE,RO RWEXT	:	WRITE ROBRANCH	DUTINE IS	NEXT	
34 004556 35 004560	104207 102203	000006 000020	RDMOD:	MOV	#READ,RO #DATERR,R3			JTINE IS NO ATA ERROR		
36 004562 37 004563	054565 100652	000005		BNE	RWEXT R2,U.TIMO(R5)	:	IF SO, E			
38 004565 39 004567	103203 100653	000025 000033	RWEXT:	BIC	#RETRY!DATERR!	!RCLB		CLEAR BIT		
40 004571	003127			BR	JMPRET			TO SEQUENC	ER	

```
.SBTTL ******* OVERLAY 5 - WRITE
   004572
                                                  DMOVLY W. AREAO
   004572 013276
                                                   .WREDC :OUTPUT EDC FOR THIS OVERLAY
                                         WRITE
                                                            5.
            000005
                                                 =
11
12
                                                   WRITE GENERATES THE PATTERNS AND WRITES THEM TO THE DRIVE
                                                   . ENABL
                                                                                * *********
15
                                                   DIAG$$
   004515
   004515
            115000 002772
                                                            $$DIAG+$DIAG$
                                                   TST
   004517
            014525
                                                   BEQ
                                                            .+6
                                                            #60000.RO
   004520
             104207
                      060000
                                                   MOV
             100707
   004522
                      176246
                                                   MOV
                                                            RO. a$$DIAG+$DIAG$
   004524
             004525
                                                             .+1
   004525
             104657
                      000006
                                                   MOV
                                                            U.RWTO(R5),R0
                                                                               ; MOVE READ/WRITE TIMEOUT VALUE TO RO
                                                                               : DECREMENT COUNT
   004527
17
             115407
                                                   INC
                                                            RO
             104072
103202
                                                                               ; COPY COUNT TO R2
   004530
                                                            RO.R2
18
                                                   MOV
                                                                               : CLEAR HIBYTE IF NECESSARY
  004531
004533
                                                            #HIBYTE,R2
                                                   BIC
19
                      177400
                                                            R2.U.RWTO(R5)
                                                                               : SAVE READ/WRITE TIMEOUT
             100652
20
21
22
23
24
25
26
27
28
29
30
                      000006
                                                   VCM
                                                                               ; IF ZERO, WE KNOW THAT THE TIMEOUT IS UNEX ; GET SUBUNIT PARAMETERS
   004535
                                                   BEQ
             014645
   004536
             104641
                                                   MOV
                                                            S.PARM(R4),R1
                      000000
                                                                                ; SEE IF RETRIES ARE ENABLED
   004540
             102201
                      001000
                                                   BIT
                                                            #RTRIES,R1
                                                                               : IF NOT, BRANCH
: SEE IF RECALIBRATION REQUIRED
   004542
             014556
                                                   BEQ
                                                            9$
   004543
             106207
                      200000
                                                   CMP
                                                            #2.R0
                                                                               ; IF NOT, BRANCH
   004545
             054553
                                                   BNE
                                                            10$
                                                                               ; RECALIBRATION IS NEXT MODULE
             104207
   004546
                      000011
                                                   MOV
                                                            #RECALB, RO
                                                                               : IMMIDATE CALL
   004550
                                                            R1
             114001
                                                   CLR
                                                            R2
                                                                               : NO ERRORS
   004551
             114002
                                                   CLR
   004552
                                                            WRTEXT
                                                                                 EXIT
             004773
                                                   BR
31
   004553
             106202
                      000003
                                         10$:
                                                   CMP
                                                            #3,R2
                                                                               ; SEE IF TIMEOUT EXPIRED
32 004555
33 004556
34 004560
35 004561
             054645
                                                                               ; IF TIMEOUT UNEXPIRED, BRANCH
                                                   BNE
                      020000
                                         9$:
                                                   BIT
                                                            #DCYLS,R1
                                                                               ; SEE IF IN THE DIAGNOSTIC AREA
                                                                              : IF SO, NO REVECTORS, BRANCH
: GET UNIT PARAMETERS
             054571
                                                            11$
                                                   BNE
             104657
                                                            U.PARM(R5),R0
                      000033
                                                   MOV
                                                            #RBNBN,RO ; SEE IF HANDLING A REVECTORED BLOCK

11$ ; IF SO, BRANCH

U.RWER(R5),R3 ; GET LAST WRITE ERROR

7$ ; IF IT IS A WRITE SPECIFIC ERRO, TRY REVECTORING

25,<U.(BN(R5),U.(BN+1(R5)),U.(BN+1(R5)),U.(BN+1(R5))
36
37
38
39
  004563
004565
004566
004570
             102207
                      000200
                                                   BIT
                                                   BNE
             104653 054663
                      000045
                                                   MOV
                                                   BNF
   004571
                                         115:
   004571
                                001012
                      003470
             104200
                                                                                                  MOV
                                                                                                            #ER25,0UT.04
                                                                                                            U.CBN(R5), OUT. 05
    004574
             104650
                      000037
                                                                                                  MOV
                      000040
                                                                                                            U. (BN+1(R5), OUT. 06
    004577
             104650
                                001014
                                                                                                  MOV
                      000041
                                                                                                            U.RBN(R5), OUT. 07
    004602
             104650
                                001015
                                                                                                  MOV
    004605
             104650
                      000042
                                001016
                                                                                                  MOV
                                                                                                            U.RBN+1(R5),0UT.08
    004610
             104200
                      000031
                                001010
                                                                                                            #25.0UT.02
                                                                                                  MOV
   004613
             101200
                                                                                                            #ERHARD, OUT. 02
                      001000
                                001010
                                                                                                  BIS
   004616
             104200
                      004616
                                001007
                                                                                                  MOV
                                                                                                            #.,OUT.01
             104202
    004621
                      000014
                                                                                                            #ERRMC,R2
                                                                                                  MOV
    004623
             104020
                      001006
                                                                                                  MOV
                                                                                                            R2.OUT.RQ
41 004625
                                                   ENDERR O
```

TARREST UVER	LAY 5 -	MKILE					이는 보이면 보면 보면 내용하면 되었다. 그렇게 되었다면 되었다면 되었다면 하는데 되었다.	
004625 42 004627 43 004631 44 004633 45 004635 46 004637 47 004641 48 004643	114000 104653 103203 100653 104207 104207 104207 104051	002357 000033 000200 000033 000001 000016 000001			MOV BIC MOV MOV MOV MOV	U.PARM(R5),R3 #RBNBN,R3 R3,U.PARM(R5) #1,R0 R0,U.NSEC(R5) #SETUP,R0 R5,R1	CLR ERRPOS ; CLEAR THE POSITION ; GET UNIT PARAMETERS ; IF HANDLING AN RBN, CLEAR IT ; SAVE ; ONLY 1 SECTOR HANDLED ; STORE ; SETUP IS NEXT MODULE CALLED ; DELAYED CALL TO SETUP	
49 004644 50 004645 51 004646 52 004650 53 004651 54 004652 55 004653	004773 114002 100652 021657 115002 054674 022117 024774	000045		8\$:	BR CLR MOV CALL TST BNE CALL CALL	WRTEXT R2 R2.U.RWER(R5) BUILDP R2 1\$ BULDUM BULDSC	BRANCH TO CLEAR READ ERRORS FLAG AS NO ERRORS BUILD THE PARAMETERS SEE IF AN ERROR OCCURRED IF SO, BRANCH BUILD DUMMY SDI CONTROL BLOCK BUILD THE SECTOR	
57 004655 58 004656 59 004660 60 004661 61 004662	025057 104657 115002 014714 034674	000033			CALL MOV TST BEQ BPL	WBLOCK U.PARM(R5),R0 R2 2\$ 1\$; WRITE THE SECTOR ; GET UNIT PARAMETERS ; SEE IF ERROR OCCURRED ; IF NOT, BRANCH ; IF NOT REVECTORED, BRANCH	
62 004663 63 004665 64 004667 65 004671 66 004672 67 004673	101207 100657 104207 114002 114001 004773	000400 000033 000010		7\$:	BIS MOV MOV CLR CLR BR	#REVEC,RO RO,U.PARM(R5) #REVCT,RO R2 R1 WRTEXT	: FLAG BLOCK AS REVECTORED : SAVE : REVECTOR NEXT MODULE CALLED : NO ERRORS (REVECTORED SECTOR) : IMMIDATE CALL TO REVECTOR ROUTINE : BRANCH	
68 004674 69 004676 70 004677 71 004700 72 004702	104651 054705 115401 100651 104207	000016 000017 000005		1\$:	MOV BNE INC MOV MOV	U.NSEC(R5),R1 3\$ R1 R1,U.MSEC(R5) #WRITE,R0	GET NUMBER OF SECTORS WRITTEN IF ANY WERE WRITTEN, BRANCH RO IS NOW 1 JUST TRY TO WRITE ONE SECTOR WRITE IS NEXT MODULE CALLED	
73 004704 74 004705 75 004707 76 004711 77 004713	004772 101207 100657 104207 004772	000004 000033 000001		3\$:	BR BIS MOV MOV BR	#RETRY,RO RO,U.PARM(R5) #SETUP,RO 6\$: BRANCH : FLAG THAT ATTEMPTING RETRIES : SAVE : SETUP IS NEXT MODULE CALLED : BRANCH	
78 004714 79 004716 80 004720 81 004722 82 004724 83 004725	104653 103203 100653 104657 014746	000033 000200 000033 000006		2\$:	MOV BIC MOV MOV BEQ REPSFT	U.PARM(R5),R3 #RBNBN,R3 R3,U.PARM(R5) U.RWTO(R5),R0 5\$ SOFT	GET UNIT PARAMETERS : IF HANDLING AN RBN, CLEAR IT : SAVE : GET READ/WRITE TIMEOUT : IF SUCCEDED ON FIRST TRY, BRANCH : REPORT ONE SOFT ERROR (NO ECC CORRECTION)	
004725 004730 004732 004733 004735 004736	104200	000001	001010				MOV #1,0UT.02 CLR OUT.03 MOV R0,-(SP)	
004733 004735	100467 104207 105057	000047					MOV #U.SNUM,RO ADD R5,RO	
004736 004740 004742 004744 004745	105657 104170 104207 020751	000034 001007 000007					ADD U.SUBU(R5),R0 MOV (R0),OUT.01 MOV #T4SOFT,R0 CALL HOSTRQ	
84 004746 85 004750 86 004752 87 004754	104267 104207 104643 106203 034772	000001 000007 003642		5\$:	MOV MOV (MP BPL	#SETUP,RO S.MEGW(R4),R3 #1954.,R3 6\$: SETUP NEXT MODULE CALLED : GET MEGABYTE COUNT : SEE IF ONE MEGABYTE TRANSFERED : BRANCH IF NOT	

88 004755 89 004757 90 004761 91 004763 92 004766 93 004770 94 004772 95 004773	107203 100643 114000 104200 104202 104020 104051 003127	003642 000007 001010 000001 000011 001043	001011	6\$: WRTEXT:	SUB MOV CLR MOV MOV MOV MOV BR .DSABL	#1954.,R3- R3,S.MEGW(R4) OUT.02 #1,OUT.03 #T4MXFR,R2 R2,OUT.29 R5,R1 JMPRET LSB	:	CLEAR MEGABYTE COUNT SAVE NEW COUNT NOT REPORTING READS REPORT 1 MEGABIT WRITTEN SET UP FOR MEGABIT REPORT FLAG AS NON-ERROR DELA; ED CALL TO NEXT ROUTINE RETURN TO RDWRT
--	--	--	--------	-----------------	---	---	---	--

2 004774	.SBTT BULDS	
4 5		BULDSC BUILDS THE INFORMATION AND DATA PATTERN TO BE WRITTEN ON THE SECTOR
7 004774 104651 8 004776 104013 9 004777 11070 10 005000 101013 11 005001 10403 12 005002 11020 13 005003 11020 14 005004 11020 15 005005 11020		MOV U.PAT(R5),R1 : GET PATTERN NUMBER TO WRITE MOV R1,R3 : COPY PATTERN NUMBER TO R3 SWAB R1 : SWAP THE BYTES BIS R1,R3 : REPLICATE THE PATTERN NUMBER MOV R3,R1 : COPY TO R1 ROL R1 : ROTATE TO NEXT POSITION ROL R1 ROL R1 ROL R1 ROL R1 ROL R1
16 005006 103201 17 005010 101013 18 005011 104303 19 005013 100273 20 005014 025023 21 005015 117403 22 005016 021143 23 005017 100673 24 005021 000000	002356	BIC #7417,R1 ; CLEAR UNUSED BITS BIS R1,R3 ; REPLICATE THE PATTERN MOV SECPTR,RO ; RO POINTS TO BUFFER AREA MOV R3,(R0)+ ; MOVE PATTERN NUMBERS TO SECTOR CALL COPPAT ; GENERATE PATTERN IN SECTOR DEC RO ; POINT TO BEGINNING OF SECTOR CALL CMPEDC ; COMPUTE THE EDC OVER THE SECTOR MOV R2,BF.EDC(R0) ; STORE EDC RETURN ; RETURN TO CALLING PROGRAM

2 005022	.SBTTL COPPAT:	COPPAT - COPY THE DATA	A PATTERN TO BUFFER
5		COPPAT COPIES THE PATT	TERN TO THE SECTOR TO BE WRITTEN
6 005022 005022 100467 005023 100464 005024 100465		PUSH <ro,r4,r5></ro,r4,r5>	; SAVE RO,R4,R5 MOV RO,-(SP) MOV R4,-(SP) MOV R5,-(SP)
7 005025 104652 8 005027 104622 9 005031 104201	000011 002475 000377	MOV U.PAT(R5),R2 MOV PATPTR(R2),R2 MOV #SCTWRD,R1	; R2 HAS PATTERN NUMBER ; POINT TO PATTERN ; R1 HAS NUMBER OF WORDS TO FILL WITH PATTERN
10 005033 104024 11 005034 104243 12 005035 106203 13 005037 015047	000001	MOV R2,R4 MOV (R4)+,R3 CMP #1,R3 BEQ ONEPAT	; R4 POINTS TO LENGTH OF PATTERN ; R3 CONTAINS LENGTH OF PATTERN ; SEE IF PATTERN IS 1 WORD LONG ; IF SO, BRANCH
14 005040 104245 15 005041 100275 16 005042 117401 17 005043 015053 18 005044 117403 19 005045 055040	COPLP1:	MOV (R4)+,R5 MOV R5,(R0)+ DEC R1 BEQ COPFIN DEC R3 BNE COPLP1	; R5 GETS 1 WORD OF THE DATA PATTERN ; MOVE PATTERN WORD TO SECTOR AREA ; DECREMENT NUMBER OF WORDS TO WRITE IN SECTOR ; IF ALL WORDS WRITTEN, BRANCH ; DECREMENT COUNT OF WORDS IN PATTERN ; IF DATA PATTERN UNFINISHED, BRANCH
20 005046 005033 21 005047 104145 22 005050 100275 23 005051 117401 24 005052 055050 25 005053	ONEPAT: COPLP2:	MOV R5,(R0)+ DEC R1 BNE COPLP2	; BRANCH ; GET 1 WORD OF DATA PATTERN ; MOVE PATTERN TO SECTOR AREA ; DECREMENT NUMBER OF WORDS TO MOVE TO SECTOR ; IF INCOMPLETE, BRANCH ; RESTORE R5, R4, R0
005053 104265 005054 104264 005055 104267 26 005056 000000	COTT IN.	RETURN	MOV (SP)+,R5 MOV (SP)+,R4 MOV (SP)+,R0 ; RETURN TO CALLING PROGRAM

UDAT4 DISK EXERCISER MACRO X04.00 9-JUL-81 01:12:03 PAGE 131 COPPAT - COPY THE DATA PATTERN TO BUFFER

U

```
.SBTTL WBLOCK - WRITE THE SECTOR(S) AND THEN CHECK FOR ERRORS
   005057
                                       WBLOCK:
                                               WBLOCK WRITES THE SECTOR(S) ONTO THE DRIVE
   005057
            021173
                                                        RTDS
                                                                            GET REAL TIME STATE
   005060
            115002
                                                TST
                                                        R2
                                                                            SEE IF ANY ERRORS
           055150
102201
055227
                                                        15
                                                                            IF SO, BRANCH
SEE IF READ/WRITE ASSERTED
   005061
                                               BNE
                                                        #RWRDY,R1
   005062
                    100000
                                               BIT
                                               BNE
                                                                           IF SO, BRANCH
10 005064
            103201
                                                        #77674,R1
                    077674
11
   005065
                                               BIC
                                                                            CLEAR UNUSED BITS
   005067
                                                        30, <U.RWTO(R5), U.CBN(R5), U.CBN+1(R5)>
12
                                               SOFTER
   005067
            104200
                    004051
                             001012
                                                                                                    #ER30,0UT.04
            104650
                             001013
                                                                                                    U.RWTO(R5), OUT. 05
   005072
                     000006
                                                                                            MOV
   005075
            104650
                     000037
                             001014
                                                                                            MOV
                                                                                                    U.CBN(R5),OUT.06
   005100
            104650
                     000040
                             001015
                                                                                                    U_CBN+1(R5)_OUT_07
                                                                                            MOV
            104200
                    000036
   005103
                             001010
                                                                                            MOV
                                                                                                    #30.0UT.02
            101200
   005106
                    001400
                             001010
                                                                                            BIS
                                                                                                    #ERSOFT_OUT_02
            104200
104202
                                                                                                    #.,OUT.01
   005111
                    005111
                             001007
                                                                                            MOV
   005114
                     000013
                                                                                            MOV
                                                                                                    #ERRMES_R2
                                                                                                    R2, OUT. RQ
   005116
            104020
                     001006
                                                                                            MOV
13 005120
                                               ERRORC <U.CGRP(R5), U.CCYL(R5), U.CCYL+1(R5)>
   005120
            104650
                     000055
                             001016
                                                                                                    U.CGRP(R5),OUT.08
                                                                                            MOV
   005123
            104650
                     000053
                              001017
                                                                                                    U.CCYL (R5), OUT. 09
                                                                                            MOV
   005126
            104650
                     000054
                             001020
                                                                                                    U.CCYL+1(R5),OUT.10
                                                                                            MOV
14 005131
                                               ERRORC <U.LCYL(R5), U.LCYL+1(R5), U.LGRP(R5), R1>
                                                                                                    U.LCYL(R5), OUT.11
   005131
            104650
                     000056
                             001021
                                                                                            MOV
                    000057
            104650
                              001022
   005134
                                                                                                    U.LCYL+1(R5),0UT.12
                                                                                            MOV
   005137
                             001023
            104650
                     000060
                                                                                                    U.LGRP(R5), OUT. 13
                                                                                            MOV
            104010
                                                                                                    R1,0UT.14
   005142
                    001024
                                                                                            MOV
15 005144
                                               ENDERR
                    000017 002357
   005144
            101200
                                                                                           BIS
                                                                                                    #17, ERRPOS
                                                                                                                      : SET THE POSITION
   005147
            005525
                                                        WOUT
                                                                          : BRANCH
   005150
                                               SOFTER
                                                        55, <U.RWTO(R5), U.CBN(R5), U.CBN+1(R5)>
                                      1$:
   005150
            104200
                    005743
                             001012
                                                                                                     #ER55.0UT.04
                                                                                           MOV
   005153
            104650
                     000006
                             001013
                                                                                                    U.RWTO(R5), OUT. 05
                                                                                            MOV
                     000037
   005156
            104650
                              001014
                                                                                            MOV
                                                                                                    U.CBN(R5),OUT.06
            104650
                     000040
   005161
                              001015
                                                                                            MOV
                                                                                                    U.CBN+1(R5),OUT.07
   005164
            104200
                     000067
                              001010
                                                                                            MOV
                                                                                                    #55,0UT.02
   005167
            101200
                     001400
                              001010
                                                                                           BIS
                                                                                                    #ERSOFT_OUT.02
                    005172
   005172
            104200
                             001007
                                                                                                    #.,OUT.01
                                                                                            MOV
   005175
            104202
                                                                                                    #ERRMES.R2
                                                                                            MOV
            104020
   005177
                     001006
                                                                                                    R2.OUT.RQ
   005201
                                               ERRORC <U.CGRP(R5),U.CCYL(R5),U.CCYL+1(R5)>
   005201
                     000055
                                                                                                    U.CGRP(R5),OUT.08
            104650
                              001016
                                                                                            MOV
                                                                                                    U.CCYL (R5), OUT. 09
   005204
            104650
                     000053
                              001017
                                                                                            MOV
  005207
005212
005212
005215
            104650
                     000054
                              001020
                                                                                                    U.CCYL+1(R5), OUT.10
                                                                                            MOV
                                               ERRORC <U.LCYL(R5),U.LCYL+1(R5),U.LGRP(R5)>
                     000056
000057
            104650
                              001021
                                                                                            MOV
                                                                                                    U.LCYL(R5),OUT.11
            104650
                              001022
                                                                                                    U.LCYL+1(R5),OUT.12
                                                                                            MOV
   005220
            104650
                     000060
                             001023
                                                                                            MOV
                                                                                                    U.LGRP(R5), OUT. 13
   005223
005223
20
                                               ENDERR
            101200
005525
                     000016
                            002357
                                                                                           BIS
                                                                                                    #16, ERRPOS
                                                                                                                      : SET THE POSITION
21
                                                        WOUT
                                                                          : BRANCH
   005227
                                               PUSH
                                       2$:
                                                                          : SAVE R4
                                                        R4
            100464
                                                                                                             MOV R4, - (SP)
            104307
                     002352
   005230
                                                        CHAINS, RO
                                               MOV
                                                                          : POINT TO START OF CHAIN
```

UD

BLOCK - WRITE	THE SECT	OR(S) AN	D THEN C	HECK FOR	ERRORS			
24 005232 25 005234 26 005236 27 005240 28 005242 29 005243 30 005244	104652 104644 104644 103204 060012 060003	000022 000005 000005 177400			MOV MOV BIC XFC XFC POP	U.MASK(R5),R2 ; F S.SCHR(R4),R4 ; F DATPRE(R4),R4 ; F #HIBYTE,R4 ; S WAITSI XWRITE ; F	R2 HAS SDI INTERCONNECT R4 POINTS TO SUBUNIT CHARACTERISTICS R4 CONTAINS DATA PREAMBLE LENGTH STRIP OFF UNUSED BITS WAIT FOR SECTOR OR INDEX PULSE WRITE THE SECTOR(S) RESTORE R4	
31 005245 32 005246 33 005250 34 005252 35 005254 36 005255 37 005256 38 005260	104264 025526 100652 105642 100642 115001 015524 100651 021613	000016 000007 000007			CALL MOV ADD MOV TST BEQ MOV CALL BCS	FNDWER R2.U.NSEC(R5); S.MEGW(R4),R2; R2.S.MEGW(R4); R1 WEXT R1.U.RWER(R5); BLKCHK;	FIND BUFFER THAT CAUSED ERROR SAVE SECTORS WRITTEN ADD TO MEGABYTES WRITTEN SAVE SEE IF ERROR OCCURRED IF NO ERROR, BRANCH SAVE WRITE ERROR SEE IF THIS IS A KNOWN BAD BLOCK IF NOT, BRANCH	
005261 005262 40 005263 41 005265 42 005266 43 005270 44 005271 45 005273 46 005274 47 005276 48 005277 005377 005302 005310 005310 005316 005321 005324	005271 104652	000016 000016 000003 000006	001013	3\$:	MOV INC MOV BR CMP BEQ BIT BEQ	U.NSEC(R5),R2 ; C R2 R2,U.NSEC(R5) ; S WEXT ; E #3,R1 ; S NOHCFL ; I #6,R1 ; S NOTOUT ; I	GET NUMBER OF SECTORS HANDLED INCREMENT COUNT SAVE EXIT AS NO ERRORS SEE IF THIS BLOCK IS REVECTORED IF SO, BRANCH SEE IF HEADER COMPARE FAILURE IF NOT, BRANCH LOW(RO), RW.HI(RO), U.RBN(R5)> MOV #ER5, OUT. 04 MOV U.RWTO(R5), OUT. 05	
005310 005313 005316 005321 005324 005327 005331 49 005333 005333	104020	000013 001006 000042	001007		ERRORC	<u.rbn+1(r5),rw.cmi< td=""><td>MOV RW.LOW(RO),OUT.06 MOV RW.HI(RO),OUT.07 MOV U.RBN(R5),OUT.08 MOV #5,OUT.02 BIS #ERSOFT,OUT.02 MOV #.,OUT.01 MOV #ERRMES,R2 MOV R2,OUT.RQ MD(RO),U.CGRP(R5),U.CCYL(R5),U.CCYL+1(R5)> MOV U.RBN+1(R5),OUT.09 MOV RW.CMD(RO),OUT.10 MOV U.CGRP(R5),OUT.11</td><td></td></u.rbn+1(r5),rw.cmi<>	MOV RW.LOW(RO),OUT.06 MOV RW.HI(RO),OUT.07 MOV U.RBN(R5),OUT.08 MOV #5,OUT.02 BIS #ERSOFT,OUT.02 MOV #.,OUT.01 MOV #ERRMES,R2 MOV R2,OUT.RQ MD(RO),U.CGRP(R5),U.CCYL(R5),U.CCYL+1(R5)> MOV U.RBN+1(R5),OUT.09 MOV RW.CMD(RO),OUT.10 MOV U.CGRP(R5),OUT.11	
005341 005344 005347 50 005352 005352 005355 005360 51 005363	104670 104650 104650 104650 104650 104650	000004 000055 000053 000054 000056 000057 000060	001020 001021 001022 001023 001024 001025 001026		ERRORC		MOV U.CGRP(R5),OUT.10 MOV U.CGRP(R5),OUT.11 MOV U.CCYL(R5),OUT.12 U.CCYL+1(R5),OUT.13 L+1(R5),U.LGRP(R5)> MOV U.LCYL(R5),OUT.14 MOV U.LCYL+1(R5),OUT.15 MOV U.LGRP(R5),OUT.16	
51 005363 005363 52 005366 53 005367 54 005371 55 005373 56 005375 57 005376 58 005377	101200 005525 104651 104652 105202 110601 117402 035375	000021 000023 000034 000003	002357	NOTOUT:	BR MOV MOV ADD ROR DEC BPL	U. WRIT(R5), R1 : (U. SUBU(R5), R2 : (#3, R2 : R1 : F R2 : E	BIS #21,ERRPOS ; SET BRANCH GET WRITE PROTECTION STATUS GET SUBUNIT IN USE ADD 3 TO SHIFT WRITE PROT STAT TO LO NIBBLE ROTATE PROTECTION STATUS (LO BIT TO CARRY) DECREMENT SUBUNIT IN USE IF >= 0, BRANCH	THE POSITION

UD NE

	005400 005401 005402	110601 045426				ROR BCC DEVFTL	R1 WTIMOT 18	: MOVE THE BIT : IF CARRY CLEA : REPORT ERROR	TO TEST	TO CARRY WRITE PROTECTED)	BRA	NCH		
	005402 005405 005410 005413 005416 005420	104200 104200 101200 104200 104202 104020	002470 000022 000400 005413 000014 001006	001012 001010 001010 001007				, REPORT ERROR	MOV MOV BIS MOV MOV MOV	#ER18,0UT.04 #18,0UT.02 #FTLDEV,0UT.02 #.,OUT.01 #ERRMC,R2 R2,OUT.RQ				
02	005422 005422	101200	000005	002357		ENDERR			BIS	#5,ERRPOS	:	SET	THE	POSITION
63	005425	005525				BR	WOUT	: BRANCH						
64	005426 005426	104200	001123	001012	WIIMOI:	SUFTER	6, <u.rwto(r5),r< td=""><td>W.LOW(RO), RW.HI(</td><td>MOV .U.RE</td><td>#ER6,OUT.04</td><td></td><td></td><td></td><td></td></u.rwto(r5),r<>	W.LOW(RO), RW.HI(MOV .U.RE	#ER6,OUT.04				
	005431	104650	000006	001013					MOV	U.RWTO(R5),OUT	.05			
	005434	104670	000002	001014					MOV	RW.LOW(RO),OUT	.06			
	005437	104670	000003	001015					MOV	RW.HI(RO),OUT.()7			
	005442	104650 104200	000041	001016					MOV MOV	U.RBN(R5),OUT.	8			
	005450	101200	001400	001010					BIS	#6,0UT.02 #ERSOFT,OUT.02				
	005453	104200	001400 005453	001007					MOV	#OUT.01				
	005456	104202	000013						MOV	#.,OUT.01 #ERRMES,R2				
	005460	104020	001006						MOV	R2, OUT. RQ CYL (R5), U. CCYL+1				
65	005462 005462	104650	000042	001017		ERRORC	<u.rbn+1(r5),rw< td=""><td>.CMD(RO),U.CGRP(</td><td>R5),U.C(</td><td>YL (R5) ,U. (CYL+1</td><td>(R5)</td><td>></td><td></td><td></td></u.rbn+1(r5),rw<>	.CMD(RO),U.CGRP(R5),U.C(YL (R5) ,U. (CYL+1	(R5)	>		
	005465	104670	0000042	001020					MOV MOV	U.RBN+1(R5),OU RW.CMD(R0),OUT	10			
	005470	104650	000055	001021					MOV	U. (GRP(R5), OUT	11			
	005473	104650	000053	001022					MOV	U.CCYL(R5),OUT	.12			
	005476	104650	000054	001023					MOV	U.CCYL+1(R5),0	JT.1	3		
66	005501	10/450	000054	00102/		ERRORC	<u.lcyl(r5),u.l< td=""><td>CYL+1(R5),U.LGRP</td><td></td><td>ILLCYL (DE) OUT</td><td>11</td><td></td><td></td><td></td></u.lcyl(r5),u.l<>	CYL+1(R5),U.LGRP		ILLCYL (DE) OUT	11			
	005501 005504	104650 104650	000056 000057	001024 001025					MOV	U.LCYL(R5),OUT U.LCYL+1(R5),OU	IT 1	5		
	005507	104650	000060	001026					MOV	U.LGRP(R5),OUT		,		
67	005512		00000			ENDERR				0.2011 (1137,001)				
	005512	101200	000021	002357					BIS	#21,ERRPOS	:	SET	THE	POSITION
68	005515	005525	00001/		NOUSE	BR	WOUT	; BRANCH	007 000	ED 1140 DEEN 1-01				
70	005516 005520	104652 055524	000016		NOHCFL:	BNE	U.NSEC(R5),R2 WEXT	: SEE IF THE FI	K21 BOLL	ER HAS BEEN WRI	IEN			
71	005521	104202	177777			MOV	#-1,R2	: IF SO, BRANCH : FLAG BLOCK AS	REVECTO	RED NOW				
72	005521 005523	005525				BR	WOUT	: BRANCH						
73	005524	114002			WEXT:	CLR	R2	; NO ERRORS						
74	005525	000000			WOUT:	RETURN		; RETURN TO CAL	LING PRO	GRAM;				

```
SBITL FNOWER - IF ERROR, FIND IT'S POSITION IN THE CHAIN
    005526
                                          FNDWER:
                                                   FIND THE FIRST BUFFER THAT IS NOT WRITTEN
   005526
005526
005527
005530
 6
                                                   PUSH
                                                             <R1.R4.R5>
                                                                               ; SAVE REGISTERS
             100461
                                                                                                                      MOV R1,-(SP)
             100464
                                                                                                                      MOV R4,-(SP)
             100465
                                                                                                                      MOV R5, -(SP)
   005531
             104654
                       000037
                                                   MOV
                                                             U. CBN(R5), R4
                                                                                ; GET LO ORDER BN
   005533
             104655
                       000040
                                                   MOV
                                                             U. CBN+1(R5), R5
                                                                                 GET HI BN
             114002
                                                             R2
                                                   CLR
                                                                                  CLEAR SECTOR COUNT
                                                            CHAINS, RO
10 005536
             104307
                       002352
                                                                                  RO POINTS TO FIRST BUFFER
                                                   MOV
11 005540
             100674
                      000002
                                          1$:
                                                             R4.RW.LOW(RO)
                                                   MOV
                                                                                  MOVE TO CHAIN
   005542
12 005542
13 005544
             100675
                                                             R5, RW. HI (RO)
                      000003
                                                   MOV
                                                                                  MOVE TO CHAIN
             104171
                                                   MOV
                                                             (RO),R1
                                                                                  GET STATUS BITS
             102201
055563
14 005545
                      040000
                                                   BIT
                                                             #BUFFLG,R1
                                                                                  SEE IF THIS BUFFER HAS BEEN WRITTEN
15 005547
                                                                                  IF NOT, BRANCH
                                                            2$
R2
                                                   BNE
16 005550
17 005551
             115402
                                                                                  INCREMENT SECTOR COUNT
                                                   INC
             115001
                                                                                  SEE IF END-OF-LIST
IF LAST BUFFER, EXIT
                                                   TST
                                                             R1
18 005552
19 005553
             075563
                                                   BMI
                                                             2$
             103201
                       170000
                                                                                  CLEAR UNUSED BITS
                                                   BIC
                                                             #^CHBHINB,R1
20 005555
21 005556
22 005560
23 005561
24 005562
25 005563
                                                                                  MOVE TO RO
             104017
105204
                                                   MOV
                                                             R1.R0
                                                                                 ADD ONE TO LOW ORDER BN
                      000001
                                                   ADD
                                                             #1,R4
             045540
                                                                                  IF NO CARRY, BRANCH
                                                   BCC
                                                             1$
             115405
                                                            R5
                                                   INC
                                                                                  PRPOGATE CARRY
             005540
                                                   BR
                                                             1$
                                                                                 LOOP
   005563
                                                             <R5,R4,R1>
                                                   POP
                                          2$:
                                                                                : RESTORE REGISTERS
             104265
104264
                                                                                                                      MOV (SP)+, R5
    005564
                                                                                                                     MOV (SP)+, R4
    005565
             104261
                                                                                                                      MOV (SP)+,R1
   005566
             000000
                                                   RETURN
                                                                               ; RETURN TO CALLING PROGRAM
             005570
                                         BUFA1
                                                                                : SETUP FOR SCRATCH AREA BUFFER
```

```
.SBTTL ******* OVERLAY 6 - READ
    005567
                                                      DMOVLY R. AREAO
    005567 145737
                                                                           COUTPUT EDC FOR THIS OVERLAY
              000006
                                            READ
                                                      =
                                                                6.
                                                      READ READS A BLOCK FROM THE DEVICE
                                                       - ENABL
                                                                LSB
15
   004515
                                                                                     * ********
                                                      DIAG$$
             115000
014525
104207
    004515
                        002773
                                                      TST
                                                                $$DIAG+$DIAG$
   004517
                                                      BEQ
                                                                 .+6
   004520
004522
004524
                        060000
                                                      MOV
                                                                #60000,RO
                        176247
              100707
                                                      MOV
                                                                RO. @$$DIAG+$DIAG$
              004525
                                                      BR
   004525
              104657
                        000006
                                                      MOV
                                                                U.RWTO(R5),RO
                                                                                      MOVE READ/WRITE TIMEOUT VALUE TO RO
17
   004527
              115407
                                                      INC
                                                                RO
                                                                                       INCREMENT COUNT
18 004530
                                                                                     ; COPY COUNT TO R2
              104072
                                                      MOV
                                                                RO.R2
19 004531
              103202
                                                                #HIBYTE.R2
                        177400
                                                      BIC
                                                                                     ; CLEAR UNUSED BITS
20 004533
21 004535
22 004536
23 004540
24 004542
25 004543
26 004545
27 004546
28 004550
29 004551
30 004553
31 004553
32 004555
33 004560
35 004561
36 004563
37 004565
38 004566
39 004570
              100652
                        000006
                                                                R2.U.RWTO(R5)
                                                      MOV
                                                                                       SAVE READ/WRITE TIMEOUT
              014645
                                                      BEQ
                                                                                     : IF ZERO, FIRST TIME -- BRANCH
              104641
                                                                S.PARM(R4),R1
                                                                                      GET SUBUNIT PARAMETERS
                        000000
                                                      MOV
                                                                                    : SEE IF RETRIES ENABLED
: IF NOT, BRANCH
: SEE IF RECALIBRATION REQUIRED
: IF NOT, BRANCH
              102201
                        001000
                                                      BIT
                                                                #RTRIES,R1
              014556
                                                      BEQ
                                                                 9$
                                                                #2.R0
              106207
                        000002
                                                      CMP
              054553
                                                      BNE
                                                                10$
              104207
                        000011
                                                      MOV
                                                                #RECALB, RO
                                                                                       RECALIBRATION IS NEXT MODULE
              114001
                                                                                       IMMIDATE CALL
                                                      CLR
                                                                R1
                                                                R2
8$
              114002
                                                                                       NO ERRORS
                                                      CLR
              004736
                                                      BR
                                                                                       EXIT
              106202
                        000003
                                            10$:
                                                      CMP
                                                                #3,R2
                                                                                      SEE IF TIMEOUT EXPIRED
              054645
                                                      BNE
                                                                5$
                                                                                      IF TIMEOUT UNEXPIRED, BRANCH
             102201
054571
                        020000
                                                                                     : SEE IF ON DIAGNOSTIC CYLINDERS : IF SO, NO REVECTORS, BRANCH
                                                      BIT
                                                                #DCYLS,R1
                                                      BNE
                                                                11$
              104657
                        000033
                                                      MOV
                                                                U.PARM(R5),R0
                                                                                      GET UNIT PARAMETERS
              102207
054571
                        000600
                                                      BIT
                                                                #RBNBN!REVEC,RO
                                                                                      SEE IF HANDLING A REVECTORED BLOCK
                                                                                      IF SO, BRANCH
                                                      BNE
                                                                115
              104657
                        000045
                                                      MOV
                                                                U.RWER(R5),RO
                                                                                       GET LAST READ ERROR
                                                                7$ : IF IT IS A READ SPECIFIC ERROR, TRY REVECTORING 26, <U.CBN(R5), U.CBN+1(R5), U.RBN(R5), U.RBN+1(R5)>
              054660
                                                      BNE
   004571
                                            115:
                                                      HARDER
    004571
              104200
                        003544
                                  001012
                                                                                                         MOV
                                                                                                                   #ER26,0UT.04
    004574
              104650
                        000037
                                  001013
                                                                                                                   U.CBN(R5), OUT. 05
                                                                                                         MOV
    004577
              104650
                        000040
                                  001014
                                                                                                                   U. CBN+1(R5), OUT. 06
                                                                                                         MOV
    004602
              104650
                        000041
                                  001015
                                                                                                         MOV
                                                                                                                   U.RBN(R5), OUT. 07
    004605
              104650
                        000042
                                  001016
                                                                                                         MOV
                                                                                                                   U.RBN+1(R5),OUT.08
              104200
    004610
                        000032
                                  001010
                                                                                                                   #26,0UT.02
                                                                                                         MOV
    004613
              101200
                        001000
                                  001010
                                                                                                                   #ERHARD, OUT. 02
                                                                                                         BIS
              104200
104202
    004616
                        004616
                                  001007
                                                                                                                   #.,OUT.01
                                                                                                         MOV
                        000014
    004621
                                                                                                         MOV
                                                                                                                   #ERRMC,R2
    004623
              104020
                        001006
                                                                                                                   R2.OUT.RQ
41 004625
                                                      ENDERR O
```

OVERENT O I	i E rio			
42 004627 104653 43 004631 103203 44 004633 100653 45 004635 104207 46 004637 100657 47 004641 104207 48 004643 104051 49 004644 004727	002357 000033 000200 000033 000001 000016 000001	MOV BIC MOV MOV MOV MOV MOV BR	#RBNBN,R3 R3,U.PARM(R5) #1,R0 R0,U.NSEC(R5) #SETUP,R0 R5,R1 REDEXT	CLR ERRPOS ; CLEAR THE POSITION ; GET UNIT PARAMETERS ; IF HANDLING AN RBN, CLEAR IT ; SAVE ; ONE SECTOR HANDLED ; SAVE ; SETUP IS NEXT MODULE CALLED ; DELAYED CALL TO SETUP ; BRANCH
52 004650 021657 53 004651 115002 54 004652 054670 55 004653 022117 56 004654 024737 57 004655 115002 58 004656 014700 59 004657 034670	000045	5\$: CLR MOV CALL TST BNE CALL CALL TST BEQ BPL	R2,U.RWER(R5) L BUILDP R2 1 1\$; TO CLEAR READ ERRORS ; FLAG AS NO ERRORS ; BUILD THE PARAMETERS ; SEE IF AN ERROR OCCURRED ; IF SO, BRANCH ; BUILD THE DUMMY SDI CONTROL BLOCK ; READ THE SECTOR ; SEE IF AN ERROR OCCURRED ; IF NOT, BRANCH ; IF NOT REVECTORED, BRANCH ; GET UNIT PARAMETERS
63 004666 114002	000033 000400 000033	7\$: MOV BIS MOV CLR BR	RO,U.PARM(R5)	; GET UNIT PARAMETERS ; MARK BLOCK AS REVECTORED ; SAVE ; NO ERRORS (REVECTORED SECTOR) ; BRANCH
65 004670 104207 66 004672 100657 67 004674 104207 68 004676 104051	000001 000017 000006	1\$: MOV MOV MOV MOV BR	#1,R0 R0,U.MSEC(R5) #READ,R0	; ONLY TRY TO READ ONE BUFFER ; SAVE ; NEXT MODULE IS READ (TRY AGAIN) ; DELAYED CALL TO NEXT ROUTINE ; BRANCH
70 004700 104657 71 004702 014724 72 004703	000006	2\$: MOV BEQ REPS	U.RWTO(R5),R0	; SEE IF ANY SOFT ERRORS OCCURED ; IF NOT, BRANCH ; REPORT SOFT ERROR
004703 104200 004706 114000 004710 100467	000001 001010			MOV #1,0UT.02 CLR OUT.03 MOV R0,-(SP)
004711 104207 004713 105057 004714 105657 004716 104170 004720 104207 004722 020751 004723 104267	000047 000034 001007 000007			MOV #U.SNUM,RO ADD R5,RO ADD U.SUBU(R5),RO MOV (R0),OUT.01 MOV #T4SOFT,RO CALL HOSTRQ MOV (SP)+,RO
	000007 000033 000400	3\$: MOV 4\$: CLR REDEXT: MOV BIT BEQ	R1 U.PARM(R5),R3 #REVEC,R3	CHRECC NEXT MODULE CALLED IMMIDATE CALL TO NEXT MODULE GET UNIT PARAMETERS SEE IF HANDLING A REVECTORING OPERATION IF NOT, BRANCH
78 004734 104207 79 004736 003127 80	000010	8\$: BR .DSA	#REVCT,RO JMPRET	; IF SO, REVCT IS NEXT MODULE ; RETURN TO ROWRT MODULE

```
.SBTTL RBLOCK - READ THE SECTORS
   004737
                                      RBLOCK:
                                               READ A SECTOR FROM THE DEVICE
   004737
                                                        RTDS
                                                                            GET REAL TIME STATE
                                                        R2
1$
                                                                            SEE IF ANY ERRORS
                                               TST
   004740
            115002
   004741
            055030
                                               BNE
                                                                            IF SO, BRANCH
            102201
                                                        #RWRDY . R1
   004742
                    100000
                                               BIT
                                                                            SEE IF READ/WRITE ASSERTED
  004744
                                                                            IF SO, BRANCH
10
                                               BNE
                                                        2$
            103201
                                                        #77674,R1
                                                                           CLEAR UNUSED BITS
   004745
                    077674
                                               BIC
   004747
                                                        31, <u. RWTO(R5), U. CBN(R5), U. CBN+1(R5)>
                                               SOFTER
                    004247
000006
000037
   004747
            104200
                                                                                                    #ER31,0UT.04
                              001012
                                                                                            MOV
   004752
            104650
                              001013
                                                                                                    U.RWTO(R5), OUT. 05
                                                                                            MOV
   004755
                                                                                                    U.(BN(R5),OUT.06
U.(BN+1(R5),OUT.07
            104650
                              001014
                                                                                            MOV
            104650
   004760
                     000040
                              001015
                                                                                            MOV
                     000037
   004763
            104200
                              001010
                                                                                            MOV
                                                                                                    #31,0UT.02
   004766
            101200
                     001400
                                                                                            BIS
                                                                                                    #ERSOFT,OUT.02
                              001010
            104200
                     004771
                                                                                                    #.,OUT.01
   004771
                              001007
                                                                                            MOV
            104202
                                                                                                    #ERRMES,R2
   004774
                     000013
                                                                                            MOV
            104020
                     001006
                                                                                                    R2.OUT.RQ
   004776
                                               ERRORC <U.CGRP(R5), U.CCYL(R5), U.CCYL+1(R5)>
13 005000
                                                                                                    U.CGRP(R5),OUT.08
   005000
            104650
                     000055
                             001016
                                                                                            MOV
                     000053
                              001017
                                                                                                    U.CCYL (R5), OUT. 09
            104650
   005003
                                                                                            MOV
            104650
                                                                                                    U.CCYL+1(R5),OUT.10
   005006
                     000054
                              001020
                                               ERRORC <U.LCYL(R5),U.LCYL+1(R5),U.LGRP(R5),R1>
14 005011
                             001021
                                                                                                    U.L CYL (R5), OUT. 11
   005011
            104650
                     000056
                                                                                            MOV
            104650
                     000057
                              001022
                                                                                                    U.LCYL+1(R5), OUT. 12
   005014
                                                                                            MOV
                     000060
                                                                                                    U.LGRP(R5), OUT. 13
   005017
                              001023
                                                                                            MOV
            104010
   005022
                     001024
                                                                                            MOV
                                                                                                    R1,0UT.14
15 005024
                                               ENDERR
005024
16 005027
17 005030
            101200
005322
                     000017 002357
                                                                                                    #17,ERRPOS
                                                                                                                      : SET THE POSITION
                                                                                            BIS
                                                                          : BRANCH
                                                        56, <U.RWTO(R5), U.CBN(R5), U.CBN+1(R5)>
                                               SOFTER
                                                                                                    #ER56,0UT.04
   005030
            104200
                     006136
                              001012
                                                                                            MOV
                     000006
                              001013
                                                                                                    U.RWTO(R5),OUT.05
   005033
            104650
                                                                                            MOV
   005036
            104650
                     000037
                              001014
                                                                                                    U.CBN(R5), OUT.06
                                                                                            MOV
   005041
                     000040
                              001015
                                                                                                    U. CBN+1(R5), OUT. 07
            104650
                                                                                            MOV
   005044
                     000070
            104200
                              001010
                                                                                            MOV
                                                                                                    #56,0UT.02
   005047
                                                                                                    #ERSOFT,OUT.02
            101200
                     001400
                              001010
                                                                                            BIS
            104200
104202
104020
   005052
                              001007
                                                                                                    #.,OUT.01
                     005052
                                                                                            MOV
   005055
                     000013
                                                                                                    #ERRMES_R2
                                                                                            MOV
   005057
                     001006
                                                                                                    R2.OUT.RQ
   005061
                                               ERRORC <U.CGRP(R5), U.CCYL(R5), U.CCYL+1(R5)>
   005061
            104650
                     000055
                              001016
                                                                                            MOV
                                                                                                    U.CGRP(R5),OUT.08
   005064
            104650
                     000053
                              001017
                                                                                            MOV
                                                                                                    U.CCYL (R5), OUT. 09
            104650
   005067
                     000054
                              001020
                                                                                            MOV
                                                                                                    U.CCYL+1(R5),OUT.10
   005072
                                               ERRORC <U.LCYL(R5), U.LCYL+1(R5), U.LGRP(R5)>
                                                                                                    U.LCYL(R5), OUT.11
   005072
            104650
                     000056
                              001021
                                                                                            MOV
   005075
            104650
                     000057
                              001022
                                                                                                    U.LCYL+1(R5), OUT.12
                                                                                            MOV
            104650
                              001023
                                                                                                    U.LGRP(R5), OUT. 13
                     000060
   005100
                                                                                            MOV
   005103
                                               ENDERR
            101200
005322
   005103
                     000016
                              002357
                                                                                                    #16, ERRPOS : SET THE POSITION
                                                                                            BIS
                                                                          : BRANCH
   005106
                                                        ROUT
            104307
                                                                          : POINT TO START OF CHAIN
   005107
                     002352
                                       28:
                                               MOV
                                                        CHAINS, RO
   005111
            104652
                     000022
                                                        U.MASK (R5), R2
                                                                          : R2 HAS SDI INTERCONNECT
                                                MOV
   005113
            060012
                                                XFC
                                                        WAITSI
                                                                          : WAIT FOR SECTOR OR INDEX PULSE
```

```
25 005114
26 005115
27 005116
28 005117
29 005121
30 005123
31 005125
                                                                                        : WRITE THE SECTOR(S)
: SEE IF ERROR OCCURRED
              060002
                                                                   XREAD
                                                        TST
                                                                   R1
                                                                                        ; IF NO ERROR, BRANCH
; SAVE ERROR TYPE
              015321
                                                        BEQ
                                                                   REXT
              100651
104707
102207
055321
                                                                   R1.U.RWER(R5)
                                                        MOV
                         000045
                                                                                        : GET FIRST STATUS
                         175227
                                                        MOV
                                                                   aCHAINS, RO
                                                                   #BUFFLG,RO
                                                                                         ; SEE IF FIRST BUFFER FULL
                         040000
   005125
                                                                                        : IF SO, BRANCH (NO ERROR)
: SEE IF THIS IS A KNOWN BAD BLOCK
                                                         BNE
                                                                   REXT
   005126
005127
                                                         CALL
                                                                   BLKCHK
              021613
                                                                                         ; IF SO, BRANCH
              045321
                                                         BCC
                                                                   REXT
                                                                                        ; SEE IF BLOCK IS REVECTORED
34
35
   005130
                                                         CMP
                                                                   #3,R1
              106201
                         000003
              015316
102201
015226
   005132
005133
                                                                                         ; IF SO, BRANCH
                                                         BEQ
                                                                   NHCFL
                                                        BIT #6.R1 : SEE IF HEADER COMPARE FAILURE
BEQ NTOUT : IF NOT, BRANCH
SOFTER 19, < U.RWTO(R5), RW.LOW(RO), RW.HI(RO), U.RBN(R5)>
36
37
                         000006
    005135
   005136
              104200
104650
104670
                         002563
                                   001012
    005136
                                                                                                                        #ER19.0UT.04
                                                                                                              MOV
                                                                                                                        U.RWTO(R5), OUT. 05
    005141
                                                                                                              MOV
                                                                                                                        RW.LOW(RO), OUT.06
    005144
                         000002
                                    001014
                                                                                                              MOV
                                                                                                                        RW.HI(RO), OUT.07
U.RBN(R5), OUT.08
    005147
               104670
                         000003
                                    001015
                                                                                                              MOV
    005152
0C5155
              104650
                         000041
                                                                                                              MOV
                                    001016
                         000023
                                                                                                                        #19,0UT.02
                                                                                                              MOV
              104200
                                    001010
                                                                                                              BIS
                                                                                                                        #ERSOFT,OUT.02
    005160
              101200
                         001400
                                    001010
              104200
104202
104020
                                                                                                                        #.,OUT.01
    005163
                                    001007
                                                                                                              MOV
                         005163
    005166
                                                                                                              MOV
                                                                                                                        #ERRMES,R2
                         000013
    005170
                         001006
                                                                                                              MOV
                                                                                                                        R2.OUT.RQ
                                                        ERRORC <U.RBN+1(R5), RW. CMD(R0), U. CGRP(R5), U. CCYL(R5), U. CCYL+1(R5)>
   005172
    005172
005175
                                   001017
                                                                                                                        U.RBN+1(R5),OUT.09
                         000042
              104650
                                                                                                              MOV
              104670
                                                                                                                        RW.CMD(RO),OUT.10
                         000004
                                    001020
                                                                                                              MOV
    005200
              104650
                         000055
                                    001021
                                                                                                              MOV
                                                                                                                        U. (GRP(R5), OUT.11
    005203
                         000053
                                    001022
                                                                                                                        U.CCYL(R5), OUT. 12
              104650
                                                                                                              MOV
    005206
              104650
                         000054
                                                                                                                        U.CCYL+1(R5), OUT.13
                                    001023
                                                                                                              MOV
40 005211
                                                        ERRORC <U.LCYL(R5), U.LCYL+1(R5), U.LGRP(R5)>
   005211
005214
005217
005222
005222
                         000056 000057
                                                                                                                        U.LCYL(R5),OUT.14
U.LCYL+1(R5),OUT.15
                                    001024
               104650
                                                                                                              MOV
              104650
104650
                                    001025
                                                                                                              MOV
                         000060
                                                                                                                        U.LGRP(R5), OUT. 16
                                    001026
                                                                                                              MOV
                                                         ENDERR
              101200
005322
                                   002357
                                                                                                                        #21, ERRPOS ; SET THE POSITION
                         000021
                                                                                                              BIS
                                                                                         : BRANCH
                                                                    ROUT
                                                                   20, <U.RWTO(R5), RW.LOW(R0), RW.HI(R0), U.RBN(R5)>
    005226
                                              NTOUT: SOFTER
    005226
                                                                                                                        #ER20,0UT.04
               104200
                         002765
                                    001012
                                                                                                             MOV
    005231
                         000006
                                    001013
              104650
                                                                                                                        U.RWTO(R5), OUT. 05
                                                                                                              MOV
    005234
                         000002
               104670
                                    001014
                                                                                                              MOV
                                                                                                                        RW.LOW(RO), OUT.06
    005237
005242
005245
005250
                                                                                                                        RW.HI(RO),OUT.07
U.RBN(R5),OUT.08
                         000003
               104670
                                                                                                              MOV
                                    001015
              104650
104200
101200
                         000041
000024
                                    001016
                                                                                                              MOV
                                                                                                                        #20,0UT.02
#ERSOFT,OUT.02
                                    001010
                                                                                                              MOV
                                                                                                              BIS
                         001400
                                    001010
              104200
104202
104020
                         005253
                                                                                                                        #.,OUT.01
    005253
                                    001007
                                                                                                              MOV
    005256
                                                                                                                        #ERRMES,R2
                                                                                                              MOV
    005260
                         001006
                                                                                                                        R2, OUT.RQ
                                                                                                              MOV
    005262
                                                         ERRORC <U.RBN+1(R5), RW.CMD(R0), U.CGRP(R5), U.CCYL(R5), U.CCYL+1(R5)>
   005262
005265
005270
005273
005276
005301
                                                                                                                        U.RBN+1(R5),0UT.09
               104650
                         000042
                                    001017
                                                                                                              MOV
              104670
104650
104650
104650
                         000004
                                    001020
                                                                                                                        RW.CMD(RO),OUT.10
                                                                                                              MOV
                                                                                                                        U.CGRP(R5).OUT.11
U.CCYL(R5).OUT.12
                                    001021
001022
001023
                         000055
                                                                                                              MOV
                         000053
                                                                                                              MOV
                                                                                                                        U.CCYL+1(R5), OUT.13
                         000054
                                                         ERRORC <U.LCYL(R5), U.LCYL+1(R5), U.LGRP(R5)>
45
    005301
                                    001024
                         000056
                                                                                                              MOV
                                                                                                                        U.LCYL(R5), OUT. 14
               104650
    005304
               104650
                         000057
                                                                                                                        U.LCYL+1(R5), OUT. 15
                                                                                                              MOV
```

	00060 001026	ENDEDD	MOV U.LGRP()	R5),OUT.16
47 005315 005322	00021 002357 77777 NHC REX ROU	BR RCUT	BIS #21,ERRI BRANCH FLAG AS REVECTOR FOUND BRANCH NO ERRORS RETURN TO CALLING PROGRAM;	POS ; SET THE POSITION

1		.SBTTL	FNDRER .	- FILL IN THE REA	AD	CHAIN WITH THE CORRECT HEADER	S	
34			IN CASE HEADERS		CTC	DRING, FILL IN THE CHAIN WITH	THE CORRECT	
6 005323 005323 100461 005324 100464 005325 100465			PUSH	<r1,r4,r5></r1,r4,r5>	:	SAVE REGS	MOV R1,-(SP) MOV R4,-(SP) MOV R5,-(SP)	
7 005326 104654 8 005330 104655 9 005332 104307 10 005334 100674 11 005336 100675 12 005340 104171 13 005341 075355 14 005342 102201	000037 000040 002352 000002 000003	1\$:	MOV MOV MOV MOV MOV BMI BIT	U.CBN(R5),R4 U.CBN+1(R5),R5 CHAINS,R0 R4,RW.LOW(R0) R5,RW.HI(R0) (R0),R1 2\$ #BUFFLG,R1		RO POINTS TO START OF LIST MOVE TO CHAIN MOVE TO CHAIN GET STATUS OF BUFFER IF END OF LIST, BRANCH SEE IF BUFFER FULL		
15 005344 015355 16 005345 103201 17 005347 104017 18 005350 105204 19 005352 045334 20 005353 115405 21 005354 005334 22 005355	170000 000001	2\$:	BEQ BIC MOV ADD BCC INC BR POP	2\$ #*CHBHINB,R1 R1,R0 #1,R4 1\$ R5 1\$ <r5,r4,r1></r5,r4,r1>		IF NOT, BRANCH CLEAR UNUSED BITS MOVE TO NEW POINTER INCREMENT BN IF NO CARRY, BRANCH PROPOGATE CARRY LOOP RESTORE R1		
005355 104265 005356 104264 005357 104261 23 005360 000000			RETURN			RETURN TO CALLING MODULE	MOV (SP)+,R5 MOV (SP)+,R4 MOV (SP)+,R1	

```
.SBTTL ******* OVERLAY 7 - EDC + ECC CHECKING, DATA COMPARISON, RETRIES
 2
   005361
                                              DMOVLY CK, AREAO
                                                               COUTPUT EDC FOR THIS OVERLAY
   005361 022162
                                              . WREDC
                                                           **********
10
           000007
                                     CHKECC = 7. : DATA CHECK OVERLAY
11
12
                                              SEE IF ECC ERROR WAS DECTECTED
14 004515
                                                                        * ********
                                              DIAG$$
   004515
           115000
                                                      $$DIAG+$DIAG$
                    002774
                                              TST
   004517
           014525
                                              BEQ
                                                       .+6
   004520
           104207
                                                       #60000.RO
                                              MOV
                    060000
   004522
           100707
                                              MOV
                    176250
                                                      RO. @$$DIAG+$DIAG$
   004524
           004525
                                              BR
  004525
            104307
                                                      CHAINS, RO : RO POINTS TO CHAIN RW. STAT(RO), R1 : R1 CONTAINS STATUS
                    002352
                                              MOV
                    000000
16
           104671
                                              MOV
   004531
           102201
                    040000
                                              BIT
                                                      #BUFFLG,R1
                                                                        ; SEE IF BUFFER FULL
  004533
           015262
                                                      EDCDET
                                                                        ; IF NOT, BRANCH
18
                                              BEQ
19
   004534
            102201
                    010000
                                              BIT
                                                      #ECCFLG,R1
                                                                        ; SEE IF ECC ERROR DETECTED
20
21
22
23
24
25
   004536
           015161
                                                                        ; IF NOT, BRANCH
                                              BEQ
                                                      ECCEDT
   004537
                                                                        ; SEE IF THIS IS A KNOWN BED BLOCK
           021613
                                              CALL
                                                      BLKCHK
                                                                        : IF SO, BRANCH
   004540
           045262
                                              BCC
                                                      EDCDET
   004541
           104643
                    000000
                                              MOV
                                                      S.PARM(R4),R3
                                                                        : GET SUBUNIT PARAMETERS
   004543
           102203
                                                                        ; SEE IF ECC CORRECTION REQUESTED
                    010000
                                              BIT
                                                      #ECCCHK, R3
                                             BNE CORECC : IF SO, BRANCH SOFTER 7, <U.TIMO(R5), RW.LOW(R0), RW.HI(R0), U.RBN(R5)>
   004545
           054641
   004546
   004546
           104200
                    001327
                             001012
                                                                                         MOV
                                                                                                 #ER7,0UT.04
   004551
           104650
                    000005
                             001013
                                                                                                 U.TIMO(R5), OUT. 05
                                                                                         MOV
   004554
           104670
                    200000
                             001014
                                                                                                 RW.LOW(RO), OUT.06
                                                                                         MOV
   004557
           104670
                    000003
                             001015
                                                                                         MOV
                                                                                                 RW.HI(RO), OUT. 07
   004562
004565
004570
                    000041
            104650
                             001016
                                                                                                 U.RBN(R5), OUT. 08
                                                                                         MOV
                    000007
           104200
                             001010
                                                                                         MOV
                                                                                                 #7,0UT.02
                                                                                                 #ERSOFT.OUT.02
#..OUT.01
#ERRMES.R2
            101200
                    001400
                             001010
                                                                                         BIS
           104200
   004573
                    004573
                             001007
                                                                                         MOV
   004576
                    000013
                                                                                         MOV
           104020
   004600
                    001006
                                                                                                 R2,OUT.RQ
                                                                                         MOV
                                              ERRORC <U.RBN+1(R5), RW.CMD(R0), U.CGRP(R5), U.CCYL(R5), U.CCYL+1(R5)>
   004602
                    000042
            104650
   004602
                             001017
                                                                                                 U.RBN+1(R5),OUT.09
                                                                                         MOV
                    000004
            104670
   004605
                             001020
                                                                                         MOV
                                                                                                 RW.CMD(RO),OUT.10
                    000055
   004610
            104650
                             001021
                                                                                                 U. CGRP(R5), OUT.11
                                                                                         MOV
                             001022
   004613
            104650
                                                                                                 U.CCYL (R5), OUT. 12
                                                                                         MOV
                    000054
   004616
           104650
                             001023
                                                                                                 U.CCYL+1(R5),OUT.13
                                                                                         MOV
   004621
                                              ENDERR 0
                    002357
   004621
           114000
                                                                                                 ERRPOS
                                                                                         CLR
                                                                                                                   : CLEAR THE POSITION
           102203
                                                                        ; SEE IF RETRIES ARE ENABLED
                    001000
   004623
                                              BIT
                                                      #RTRIES,R3
   004625
                                              BNE
                                                      ECCERR
                                                                         IF SO, BRANCH
            103200
   004626
                    000400
                             001010
                                              BIC
                                                       #400.0UT.02
                                                                         MAKE SOFT ERROR A HARD ERROR
           104200
104207
                    000014
   004631
                             001006
                                              MOV
                                                      #ERRMC, OUT.RQ
                                                                          COUNT ERROR
   004634
                                              MOV
                                                      #-1.RO
                                                                          FLAG THAT HARD ERROR OCCURRED
   004636
            100657
                    000024
                                                       O.U.ELEV(R5)
                                              MOV
                                                                          SAVE
   004640
           005263
                                                                         BRANCH
                                              BR
                                                      CMPNXT
```

```
36 004641
                                         CORECC: PUSH
                                                                              : SAVE POINTER TO LINK
   004641
             100467
                                                                                                                   MOV RO. - (SP)
   004642
            060015
115001
                                                           ECC
                                                                              : APPLY ECC CORRECTION
38 004643
39 004644
                                                  TST
                                                           R1
                                                                                SEE IF CORRECTION WORKED
                                                           ECCCOK
             014741
                                                  BEQ
                                                                                IF SO, BRANCH
   004645
                                                  POP
                                                           RC
                                                                              ; RESTORE POINTER TO LINK
   004645
                                                                                                                   MOV (SP)+,RO
             104267
   004646
                                                  SOFTER 8, <U.TIMO(R5), RW.LOW(RO), RW.HI(RO), U.RBN(R5)>
   004646
             104200
                      001444
                               001012
                                                                                                          #ER8,0UT.04
                                                                                                 MOV
   004651
             104650
                      000005
                               001013
                                                                                                          U.TIMO(R5), OUT. 05
                                                                                                 MOV
             104670
                      200000
                               001014
   004654
                                                                                                          RW.LOW(RO), OUT.06
                                                                                                 MOV
   004657
             104670
                      000003
                               001015
                                                                                                          RW.HI(RO), OUT.07
                                                                                                 MOV
   004662
004665
                      000041
             104650
                               001016
                                                                                                          U.RBN(R5), OUT. 08
                                                                                                 MOV
             104200
                      000010
                               001010
                                                                                                 MOV
                                                                                                          #8,0UT.02
                                                                                                          #ERSOFT,OUT.02
   004670
             101200
                      001400
                               001010
                                                                                                 BIS
             104200
104202
   004673
                      004673
                               001007
                                                                                                          #.,OUT.01
                                                                                                 MOV
   004676
                      000013
                                                                                                          #ERRMES.R2
                                                                                                 MOV
   004700
             104020
                      001006
                                                                                                          R2.OUT.RQ
                                                                                                 MOV
                                                  ERRORC <U.RBN+1(R5), RW.(MD(R0), U.CGRP(R5), U.CCYL(R5), U.CCYL+1(R5)>
MOV U.RBN+1(R5), OUT.09
   004702
   004702
             104650
                      000042
                               001017
   004705
             104670
                      000004
                                                                                                          RW. CMD (RO), OUT. 10
                               001020
                                                                                                 MOV
                                                                                                          U.CGRP(R5).OUT.11
U.CCYL(R5).OUT.12
   004710
                      000055
                               001021
             104650
                                                                                                 MOV
             104650
                                                                                                 MOV
                               001023
   004716
             104650
                                                                                                          U.CCYL+1(R5), OUT.13
                      000054
                                                                                                 MOV
43 004721
                                                  ENDERR 0
            114000
102203
055257
   004721
                      002357
                                                                                                 CLR
                                                                                                          ERRPOS
                                                                                                                             : CLEAR THE POSITION
   004723
                      001000
                                                                              ; SEE IF RETRIES ARE ENABLED
                                                  BIT
                                                           #RTRIES,R3
                                                                              ; IF SO, BRANCH
45
   004725
                                                  BNE
                                                           ECCERR
46 004726
             103200
                      000400
                               001010
                                                  BIC
                                                            #400.0UT.02
                                                                              : MAKE SOFT ERROR A HARD ERROR
47 004731
                      000014
                                                            #ERRMC, OUT.RQ
             104200
                               001006
                                                                              : COUNT ERROR
                                                  MOV
48 004734
             104207
                      177777
                                                  MOV
                                                            #-1_RO
                                                                                FLAG THAT HARD ERROR OCCURRED
49 004736
             100657
                      000024
                                                  MOV
                                                            RO, U. ELEV(R5)
                                                                                SAVE
50 004740
             005263
                                                  BR
                                                            CMPNXT
                                                                                BRANCH
51 004741
                                                           U.ECCT(R5),R0
             106657
                      000027
                                        ECCCOK: CMP
                                                                                SEE IF CORRECTIONS EXCEED THRESHOLD
                                                                                IF NOT, BRANCH
RESTORE POINTER TO LINK
52 004743
             035040
                                                  BPL
                                                           ECCTOK
53 004744
                                                  POP
                                                            R0
    004744
             104267
                                                                                                                   MOV (SP)+,R0
   004745
54
                                                  SOFTER 9, <U.TIMO(R5), RW.LOW(R0), RW.HI(R0), U.RBN(R5)>
   004745
             104200
                      001547
                               001012
                                                                                                          #ER9,0UT.04
                                                                                                 MOV
                                                                                                          U.TIMO(R5).OUT.05
RW.LOW(R0).OUT.06
                               001013
   004750
             104650
                      000005
                                                                                                 MOV
                      000002
000003
000041
   004753
             104670
                               001014
                                                                                                 MOV
   004756
             104670
                               001015
                                                                                                          RW.HI(RO), OUT.07
U.RBN(R5), OUT.08
                                                                                                 MOV
            104670
104650
104200
101200
104200
104202
104020
   004761
004764
004767
                               001016
                                                                                                 MOV
                                                                                                          #9,0UT.02
#ERSOFT,0UT.02
                      000011
                               001010
                                                                                                 MOV
                      001400
                               001010
                                                                                                 BIS
                      004772
   004772
                               001007
                                                                                                 MOV
                                                                                                          #.,OUT.01
   004775
                                                                                                 MOV
                                                                                                          #ERRMES,R2
    004777
                      001006
                                                                                                          R2.OUT.RQ
                                                                                                 MOV
                                                  ERRORC <U.RBN+1(R5), RW.CMD(R0), U.CGRP(R5), U.CCYL(R5), U.CCYL+1(R5)> MOV U.RBN+1(R5), OUT.09
   005001
    005001
                      000042
                               001017
             104650
             104670
                      000004
                               001020
   005004
                                                                                                          RW.CMD(RO),OUT.10
                                                                                                 MOV
                      000055
                                                                                                          U. CGRP(R5), OUT.11
   005007
             104650
                               001021
                                                                                                 MOV
    005012
             104650
                      000053
                               001022
                                                                                                 MOV
                                                                                                          U.CCYL (R5), OUT. 12
             104650
    005015
                      000054
                               001023
                                                                                                          U.CCYL+1(R5), OUT.13
                                                                                                 MOV
   005020
                                                  ENDERR
    005020
                      002357
             114000
                                                                                                          ERRPOS
                                                                                                 CLR
                                                                                                                             : CLEAR THE POSITION
57
             102203
                      001000
   005022
                                                                              : SEE IF RETRIES ARE ENABLED
                                                  BIT
                                                           #RTRIES,R3
```

```
055257
103200
104200
104207
100657
58
   005024
                                                                           : IF SO, BRANCH
                                                         ECCERR
                                                         #400.0UT.02
                     000400
                              001010
                                                BIC
                                                                             MAKE SOFT ERROR A HARD ERROR
                     000014
   005030
                              001006
                                                MOV
                                                         #ERRMC, OUT.RQ
                                                                              COUNT ERROR
60
61
   005033
                                                MOV
                                                         #-1.RO
                                                                             FLAG THAT HARD ERROR OCCURRED
  005035
                                                MOV
                                                         RO, U. ELEV(R5)
62
                     000024
                                                                              SAVE
63
  005037
            005263
                                                BR
                                                         CMPNXT
                                                                              BRANCH
   005040
                                       ECCTOK: POP
                                                                              RESTORE POINTER TO BUFFER
                                                         R3
            104263
104637
021143
                                                                                                               MOV (SP)+,R3
   005040
   005041
                     000001
                                                MOV
                                                         RW. BUF (R3) . RO
                                                                             RO POINTS TO BUFFER
66 005043
                                                         CMPEDC
                                                                             COMPUTE EDC VALUE
                                                CALL
                                                         BF.EDC(RO).R2
            106672
                                                CMP
67
   005044
                     000400
                                                                             SEE IF EDC VALUE MATCHES
68
   005046
            055071
                                                BNE
                                                         1$
                                                                             IF NOT, BRANCH
   005047
                                                REPSFT
                                                         .ECC
                                                                             REPORT ECC CORRECTION
   005047
            114000
                     001010
                                                                                             CLR
                                                                                                      OUT.02
   005051
            104200
                     000001
                              001011
                                                                                                      #1,0UT.03
                                                                                              MOV
   005054
            100467
                                                                                                               MOV RO, - (SP)
   005055
            104207
                     000047
                                                                                                      #U.SNUM,RO
                                                                                             MOV
   005057
            105057
                                                                                             ADD
                                                                                                      R5.R0
   005060
                                                                                                      U.SUBU(R5),R0
            105657
                     000034
                                                                                              ADD
   005062
005064
                     001007
            104170
                                                                                             MOV
                                                                                                      (RO), OUT, 01
            104207
020751
                     000007
                                                                                              MOV
                                                                                                      #T4SOFT,RO
   005066
                                                                                                      HOSTRO
                                                                                              CALL
            104267 005262
   005067
                                                                                                               MOV (SP)+,R0
   005070
                                                         EDCDET
                                                                             EXIT
   005071
            104027
                                       1$:
                                                MOV
                                                         R2.R0
                                                                             SAVE THE COMPUTED EDC
72
   005072
                                                         10, <U.TIMO(R5), RW.LOW(R3), RW.HI(R3), U.RBN(R5)>
                                                HARDER
   005072
005075
                              001012
            104200
                     001662
                                                                                                      #ER10.0UT.04
                                                                                              MOV
            104650
                     000005
                              001013
                                                                                                      U.TIMO(R5), OUT. 05
                                                                                              MOV
   005100
            104630
                     000002
                              001014
                                                                                             MOV
                                                                                                      RW.LOW(R3), OUT.06
                     000003
   005103
            104630
                              001015
                                                                                             MOV
                                                                                                      RW.HI (R3), OUT. 07
                                                                                                      U.RBN(R5),0UT.08
                     000041
   005106
            104650
                              001016
                                                                                             MOV
   005111
            104200
                     000012
                              001010
                                                                                             MOV
                                                                                                      #10,0UT.02
            101200
104200
104202
                                                                                                      #ERHARD, OUT. 02
   005114
                     001000
                              001010
                                                                                             BIS
   005117
                     005117
                              001007
                                                                                             MOV
                                                                                                      #.,OUT.01
   005122
                     000014
                                                                                             MOV
                                                                                                      #ERRMC.R2
   005124
            104020
                     001006
                                                                                                      R2, OUT. RQ
                                                                                              MOV
                                                ERRORC <U.RBN+1(R5), RW. CMD(R3), U. CGRP(R5), U. CCYL(R5), U. CCYL+1(R5)>
   005126
   005126
            104650
                     000042
                              001017
                                                                                                      U.RBN+1(R5),OUT.09
                                                                                             MOV
   005131
            104630
                     000004
                              001020
                                                                                             MOV
                                                                                                      RW.CMD(R3),OUT.10
   005134
005137
                              001021
            104650
                     000055
                                                                                             MOV
                                                                                                      U.CGRP(R5),OUT.11
            104650
                     000053
                              001022
                                                                                             MOV
                                                                                                      U.CCYL(R5), OUT. 12
            104650
                     000054
   005142
                              001023
                                                                                                      U.CCYL+1(R5),OUT.13
                                                                                             MOV
   005145
                                                ERRORC <RO.BF.EDC(RO)> : REPORT ERROR
   005145
            104070
                     001024
                                                                                             MOV
                                                                                                      RO, OUT. 14
   005147
            104670
                     000400
                              001025
                                                                                                      BF.EDC(RO),OUT.15
                                                                                             MOV
   005152
                                                ENDERR 0
            114000
104207
                     002357
   005152
                                                                                                      ERRPOS
                                                                                                                        : CLEAR THE POSITION
   005154
                                                                             FLAG THAT HARD ERROR OCCURRED
                                                MOV
                                                         #-1.RO
   005156
            100657
                                                         RO, U. ELEV(R5)
                     000024
                                                MOV
                                                                             SAVE
            005263
   005160
78
                                                BR
                                                         CMPNXT
                                                                              BRANCH
79
   005161
            104073
                                       ECCEDT: MOV
                                                                              R3 POINTS TO LINK
                                                         RO, R3
80
81
82
83
   005162
                                                         RW. BUF (RO), RO
            104677
                     000001
                                                                             RO POINTS TO SECTOR
                                                MOV
                                                                             COMPUTE EDC
   005164
            021143
                                                CALL
                                                         CMPEDC
   005165
            106672
                     000400
                                                CMP
                                                                              SEE IF EDC VALUES ARE EQUAL
                                                         BF.EDC(RO),R2
   005167
            015262
                                                BEQ
                                                                             IF SO, BRANCH
                                                         EDCDET
                                                         24, <U. TIMO(R5), RW.LOW(R3), RW.HI(R3), U.RBN(R5)>
   005170
                                                HARDER
            104200
   005170
                     003336
                              001012
                                                                                             MOV
                                                                                                      #ER24,0UT.04
```

U

	005173 005176 005201 005204 005207 005212 005215 005220 005222 005224	104650 104630 104630 104650 104200 101200 104200 104202 104020	000005 000002 000003 000041 000030 001000 005215 000014 001006	001013 001014 001015 001016 001010 001010 001007		ERRORC	CII DDNA1(D5) DU		MOV MOV BIS MOV MOV MOV	U.TIMO(R5),OUT.0 RW.LOW(R3),OUT.0 RW.HI(R3),OUT.07 U.RBN(R5),OUT.08 #24,OUT.02 #ERHARD,OUT.02 #.,OUT.01 #ERRMC,R2 R2,OUT.RQ YL(R5),U.CCYL+1(R	06		
	005224 005227 005232 005235 005240	104650 104630 104650 104650 104650	000042 000004 000055 000053 000054	001017 001020 001021 001022 001023					MOV	U.RBN+1(R5),OUT. RW.CMD(R3),OUT.1 U.CGRP(R5),OUT.1 U.CCYL(R5),OUT.1 U.CCYL+1(R5),OUT	09 0 1 2		
	005243 005243 005245 005250	104020 104670	001024 000400	001025		ERRORC			MOV MOV	R2,0UT.14 BF.EDC(R0),0UT.1			
89 90	005250 005252 005254 005256	114000 104207 100657 005263	002357 177777 000024		F.C.F.D.D.	MOV MOV BR	#-1,R0 RO,U.ELEV(R5) CMPNXT	; FLAG THAT HARD ; SAVE			; CLEAR	THE PO	DSITION
92 93 94 95	005257 005261 005262 005263 005265 005266	104207 005265 114002 104207 114001 003127	005267		ECCERR: EDCDET: CMPNXT: EXTCHK:	BR CLR MOV	#ERCOV,RO EXTCHK R2 #CMPDAT,RO R1 JMPRET	; ERROR RECOVERY ; BRANCH ; NO ERRORS ; DATA COMPARE I ; IMMIDATE CALL ; RETURN	S NEXT M	MODULE			

.

" Mandahara

January Comment

1 2 005267	SETTL ERCOV:	ERCOV - RETRIES DUE TO DATA ERRORS
4		ERROR RECOVERY AND RETRIES
6 005267 104207 005440 7 005271 104641 000000 8 005273 102201 001000 9 005275 015340 10 005276 104657 000005 11 005300 106657 000025 12 005302 015336 13 005303 115407 14 005304 100657 000005 15 005306 104657 000016 16 005310 015322 17 005311 104651 000033 18 005313 101201 000020 19 005315 100651 000033 20 005317 104207 000001 21 005321 005341 22 005322 104207 000001 23 005324 100657 000017 24 005326 104207 177777 25 005330 100657 000006 26 005332 104207 000006 27 005334 104051 28 005335 005341 29 005336 104207 005343 30 005340 114001 31 005341 114002	NLEV: EROUT: EREXT:	MOV #CMPDAT,RO ; DATA COMPARE IS NEXT MODULE IF NO RETRIES MOV S.PARM(R4),R1 ; GET JUBUNIT PARAMETERS BIT #RTRIES,R1 ; SEE IF RETRIES ARE ENABLED BEQ EROUT ; IF NOT, BRANCH MOV U.TIMO(R5),RO ; GET NUMBER OF RETRIES ALLREADY ATTEMPTED CMP U.RTRY(R5),RO ; COMPARE MAXIMUM COUNT WITH RETRIES ATTEMPTED BEQ NLEV ; IF RETRIES EXHAUSTED, BRANCH INC RO ; INCREMENT RETRY COUNT MOV U.NSEC(R5),RO ; SEE IF THIS ERROR IS IN THE 1ST SECTOR BEQ 1\$; IF SO, BRANCH MOV U.PARM(R5),R1 ; GET UNIT PARAMETERS BIS #DATERR,R1 ; FLAG AS DATA ERROR MOV #SETUP,RO ; SETUP IS NEXT MODULE CALLED BR EREXT ; BRANCH MOV #1,RO ; ONLY ALLOW 1 SECTOR TO BE WORKED ON MOV RO,U.MSEC(R5) ; SAVE MOV #-1,RO ; START READ RETRIES AT ZERO MOV #0,U.MSEC(R5) ; SAVE MOV #-1,RO ; START READ RETRIES AT ZERO MOV RO,U.RWITO(R5) ; SAVE MOV #EAD,RO ; READ IS NEXT MODULE MOV #S,R1 ; DELAYED CALL TO READ BR EREXT ; BRANCH MOV #NEWLEV,RO ; NEW LEVEL OF ERROR RECOVERY WILL BE TRIED CLR R1 ; IMMIDATE CALL TO NEXT MODULE CLR R2 ; NO ERRORS
32 005342 003127		BR JMPRET ; RETURN TO SEQNCR

1

UD

2 0	05343				.SBTTL NEWLEV:	NEWLEV	- SET ERROR RECO	VERY LEVEL TO	NEW VALUE	, THEN RETRY AGAI	N	
4					:	INITIAT	E A NEW LEVEL OF	ERROR RECOVE	RY			
7 0	05343 05345 05346	104657 055377	000024			MOV BNE HARDER	U.ELEV(R5),R0 LEVNZR 11	GET CURRENT IF NON-ZER	O, BRANCH			
00	05346 05351 05354 05357 05362 05364	104200 104200 101200 104200 104202 104020	002025 000013 001000 005357 000014 001006	001012 001010 001010 001007		TINDEN		, ALL LLYLLS	MOV MOV BIS MOV MOV MOV	#ER11,0UT.04 #11,0UT.02 #ERHARD,0UT.02 #.,0UT.01 #ERRMC,R2 R2,0UT.RQ		
9 0	05366	114000	002357			ENDERR	0		CLR	ERRPOS	· CLEAR	THE POSITION
10 0	05370	104207	177777			MOV MOV	#-1,R0 R0,U.ELEV(R5)	: FL.3 THAT				
12 0	05374 05376	104207 005415	005440			MOV BR	#CMPDAT,RO NEWEXT			DULE CALLED		
14 0	05377	104070	001565		LEVNZR:		RO, ERRLEV		LEVEL TO	SDI COMMAND		
16 00 17 00 18 00 19 00 20 00 21 00	005402 005404 005406 005410 005412	100657 104657 101207 100657 104207 114002	00C024 000033 020000 000033 005417			MOV MOV BIS MOV MOV CLR	RO,U.ELEV(R5) U.PARM(R5),R0 #RESEEK,RO RO,U.PARM(R5) #SNDLEV,RO R2	; SAVE ERROR ; GET UNIT P ; FORCE A RE ; SAVE UNIT ; SNDLEV IS ; NO ERRORS	LEVEL ARAMETERS SEEK ON THI PARAMETERS NEXT MODULI	E NEXT PASS		
	05415	114001 003127			NEWEXT:	CLR BR	R1 JMPRET	: RETURN TO		MODULE		

SNOLEY - SEND THE NEW LEVEL OF ERROR RECOVERY TO THE DRIVE

12	005417				.SBTTL SNDLEV:	SNDLEV	- SEND THE N	EW LEV	EL OF ERROR RECOVERY TO THE DRIVE
45						SNDLEV	WILL SEND TH	E ERRO	R RECOVERY LEVEL TO THE DRIVE
6789	005417 005421 005422 005423 005424	104203 021204 115002 015433	001520			MOV CALL TST BEQ CERROR	#CR.ERR,R3 TALK R2 TALKOK 5,#SER4		POINT TO ERROR RECOVERY COMMAND SEND SDI INTERCHANGE SEE IF AN ERROR OCCURRED IF NOT, BRANCH REPORT ERROR
11	005424	104200	010172	001013		MOV	#SNDLEV.RO		MOV #SER4,OUT.05 SNDLEV WILL BE NEXT MODULE CALLED ******
12	005431	114001 005437				CLR BR	R1 SNDEX		CALL IMIDATELY BRANCH
14 15 16	005435	104207 104051 114002	000004		TALKOK:	MOV MOV CLR	#RDWRT,RO R5,R1 R2		RDWRT IS NEXT MODULE CALLED DELAYED CALL TO NEXT ROUTINE NO ERRORS
17	005437	003127			SNDEX:	BR	JMPRET		RETURN


2 0	05440			.SBTTL CMPDAT:	CMPDAT	- DATA COMPARISO	ON (ON F	REA	D BU	IFFE	R(S)						
4					CMPDAT	COMPARES THE PAT	TTER	RN I	TIW	н тн	IAT	READ	FROM	THE	SECTOR	1		
0	05440 05440 05441	100464 100465			PUSH	<r4,r5></r4,r5>	:	SA	VE	R4,R	15						4,-(S	
70	05442	104657	000033 000002	2\$:	MOV	U.PARM(R5),R0 #DATCMP,R0	:	SEL	EI	F DA	TA	AME TE	ARE R	EQUES				
10 0	05446	102207 015536 104307	002352		BEQ MOV	CSCEXT CHAINS, RO	:	IF RO	NO PO	T, B	RAN	LIN	<					
11 0 12 0 13 0	05451 05452 05454	104172 102202 015536	040000		MOV	(RO),R2 #BUFFLG,R2	:	SEL	EI	F BU	IFFE	TATUS R FUL	L					
14 0	05455	104677	000001		MOV MOV	CSCEXT RW.BUF(RO),RO (RO),R2	:	RO	PO	INTS	TO	CH BUFF PN NI	ER	(IN	EACH N	ITRRI	F)	
16 0	05460	103202	177760 002440		BIC	#LBLONB,R2 R2,PNUM	:	CLI	EAR	UNL	ISED	BITS	S	1114	LACH			
18 0	005464	104021	002440		MOV SWAB	R2,R1	:	BU.	ILD	PAT	TER	N NU	MBER	WORD O HI	IN R1 BYTE			
20 0	005466	101021			BIS ROL	R2,R1 R2	:	SE	TH	I BI	TS	NIBE						
23 0	005470	110202 110202			ROL	R2 R2												
25 0	05472	110202 103202 101021	007777		ROL BIC BIS	R2 #HBHINB,R2				UNU	ISED	BIT	S					
27 0	005475 005476 005477	110702			SWAB BIS	R2,R1 R2 R2,R1	:	MO	VE	TO L	0 B	YTE						
29 0	005500	106271 055542			CMP BNE	(RÓ)+,R1 FWRD	•	SEI	EI	F RE	DUN	DANT	PATT	ERN O	K			
31 0 32 0	005502 005504	104302 104622	002440 002475		MOV	PNUM,R2 PATPTR(R2),R2	:	RE:	STO INT	RE R	PAT	TERN						
34 0	005506 005510	104201 104024	000001	XOPLPO:		#1,R1 R2,R4	:	R1 R4	HA PO	S OF	FSE	LEN	TO BU	FFER F PAT PATT	TERN.			
36 0	005511	104243	000001		MOV CMP	(R4)+,R3 #1,R3	:	SE	ΕI	F PA	TTE	RN I	5 1 W	ORD L	ONG			
38 0	005514 005515 005516	015527 104245 106275		XOPLP1:	MOV CMP	ONEPAX (R4)+,R5 (R0)+,R5	:	R5	GE	TS 1	WO	RD OF	THE	DATA	PATTE CTOR A	RN		
40 0	005517	055543			BNE	CMPERR R1	:	IF	NO	MATO	H,	BRANG F SE T	CH	52				
42 0	005521 005523	106201 015536	000400		CMP BEQ	#SCTWRD+1,R1 CSCEXT	:	SEI	E I	F EN	ITIR	E BUI	PARED	COMPA , BRA	NCH			
45 0	005524	117403			DE C BNE	R3 XOPLP1	:	IF	DA	TA P					N PATT			
46 0	005526 005527 005530	005510 104145		ONEPAX:		XOPLPO (R4),R5 (R0)+ R5	:	GE	ANC T 1	WOR	D O	F DA	TA PA	TTERN	DEAD			
49 0	005531 005532 005533	106275 055543 115401		XOPLP2:	CMP BNE INC	(RO)+,R5 CMPERR R1	:	IF	CO	MPAR	RE E	RROR	, BRA	NCH	TO COM	1PARI	E	
52 (005555	106201 055530	000400		CMP BNE	#SCTWRD+1,R1 XOPLP2	:	SE	EI	F AL	LW	ORDS	COMP	ARED				
53 0	005536	114002		CSCEXT:		R2 <r5,r4></r5,r4>	:	NO	ER	RORS RE R								
(005537	104265													MC) (SP)+.	R5

```
55 005541
                        104264 005712
                                                                                                                                                                                                                      MOV (SP)+ . R4
                                                                                                                                                 : BRANCH
                                                                                                               CMXEXT
56 005542
57 005543
                                                                                                                                                 : ZERO OFFSET
                        114001
                                                                            FWRD:
                                                                                             CLR
                                                                                                               R1
                                                                                                               <R5.R4>
                                                                            CMPERR: POP
                                                                                                                                                  : RESTORE R5.R4
       005543
                        104265
                                                                                                                                                                                                                      MOV (SP)+, R5
       005544
                                                                                                                                                                                                                      MOV (SP)+, R4
58 005545
005545
                                                                                             PUSH
                                                                                                               RO
                                                                                                                                                 : SAVE POINTER TO BUFFER
                        100467
                                                                                                                                                                                                                       MOV RO, - (SP)
59 005546
                        104037
                                                                                             MOV
                                                                                                               R3.R0
                                                                                                                                                 ; MOVE POINTER TO READ CHAIN TO RO
60 005547
                        021613
                                                                                             CALL
                                                                                                               BLKCHK
                                                                                                                                                    SEE IF THIS IS A KNOWN BAD BLOCK
61 005550
                                                                                             POP
                                                                                                               RO
                                                                                                                                                  ; RESTORE RO
       005550
                        104267
                                                                                                                                                                                                                      MOV (SP)+,R0
      005551
                                                                                             BCS
                                                                                                               1$
                                                                                                                                                 : IF NOT, BRANCH
       005551
                        045553
                                                                                                                                                                                                                      BCC
                                                                                                                                                                                                                                         .+2
       005552
                        005554
                                                                                                                                                                                                                                        1$
                                                                                                                                                : EXIT
63 005553
                        005712
                                                                                             BR
                                                                                                               CMXEXT
64 005554
                                                                                                               CHAINS, R3
                        104303
                                         002352
                                                                            15:
                                                                                             MOV
                                                                                                                                                 : R3 POINTS TO LINK
     005556
005556
                                                                                             HARDER 12, < RW.LOW(R3), RW.HI(R3), U.RBN(R5), U.RBN+1(R5)>
                        104200
104630
                                         002057
                                                           001012
                                                                                                                                                                                    MOV
                                                                                                                                                                                                     #ER12.0UT.04
       005561
                                         000002
                                                                                                                                                                                                     RW.LOW(R3), OUT. 05
                                                          001013
                                                                                                                                                                                    MOV
                                                                                                                                                                                                     RW.HI(R3), OUT.06
U.RBN(R5), OUT.07
U.RBN+1(R5), OUT.08
       005564
                        104630
                                         000003
                                                           001014
                                                                                                                                                                                    MOV
      005567
005572
005575
                        104650
                                          000041
                                                           001015
                                                                                                                                                                                    MOV
                        104650
                                         000042
                                                           001016
                                                                                                                                                                                    MOV
                        104200
                                         000014
                                                           001010
                                                                                                                                                                                                     #12,0UT.02
                                                                                                                                                                                    MOV
                        101200
104200
104202
104020
       005600
                                         001000
                                                                                                                                                                                                     #ERHARD, OUT.02
                                                           001010
                                                                                                                                                                                    BIS
       005603
                                         005603
                                                           001007
                                                                                                                                                                                    MOV
                                                                                                                                                                                                     #.,OUT.01
       005606
                                         000014
                                                                                                                                                                                    MOV
                                                                                                                                                                                                     #ERRMC,R2
       005610
                                         001006
                                                                                                                                                                                    MOV
                                                                                                                                                                                                     R2, OUT.RQ
66 005612
                                                                                        ERRORC <RW.CMD(R3), U.CGRP(R5), U.CCYL(R5), U.CCYL+1(R5)>
      005612
005615
                        104630
104650
                                          000004
                                                           001017
                                                                                                                                                                                                     RW. CMD (R3), OUT. 09
                                         000055
                                                           001020
                                                                                                                                                                                                     U.CGRP(R5), OUT. 10
       005620
                        104650
                                         000053
                                                          001021
                                                                                                                                                                                                     U.CCYL (R5), OUT.11
       005623
                        104650
                                         000054
                                                          001022
                                                                                                                                                                                                     U.CCYL+1(R5), OUT. 12
                                                                                                                                                 ; SEE IF IN FIRST 4 WORDS
67 005626
                        106201
                                         000004
                                                                                                              #4,R1
68 005630
                                                                                                               SML SUB
                        045636
                                                                                                                                                 ; IF SO, BRANCH
                                                                                             BCC
69 005631
70 005633
71 005635
72 005636
73 005637
                        107207
                                         000004
                                                                                             SUB
                                                                                                              #4.RO
                                                                                                                                                 : LOOK BACK FOUR WORDS
                                                                                                              #3,R3
                        104203
                                         000003
                                                                                             MOV
                                                                                                                                                 ; OFFSET OF ERROR IN PRINTPOUT IS 3
                        005641
                                                                                                              RCMPER
                                                                                                                                                 ; BRANCH
                        107017
                                                                                                              R1.R0
                                                                           SMLSUB: SUB
                                                                                                                                                     BACK UP POINTER
                        104013
                                                                                                              R1.R3
                                                                                             MOV
                                                                                                                                                     R3 IS OFFSET OF ERROR IN PRINTOUT
74 005640
                        117407
                                                                                             DEC
                                                                                                              RO
                                                                                                                                                     TO POINT TO START OF BUFFER
75 005641
                                                                           RCMPER: ERRORC <PNUM,R1,R3,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0
                                         002440 001023
       005641
                        104300
                        104010
       005644
                                         001024
                                                                                                                                                                                                     R1,0UT.14
                                                                                                                                                                                    MOV
                        104030
                                         001025
       005646
                                                                                                                                                                                                     R3,0UT.15
                                                                                                                                                                                    MOV
                                                                                                                                                                                                     (RÓ)+,OUT.16
(RO)+,OUT.17
(RO)+,OUT.18
(RO)+,OUT.19
(RO)+,OUT.20
(RO)+,OUT.21
                        104270
104270
       005650
                                         001026
       005652
                                         001027
                                                                                                                                                                                    MOV
                        104270
       005654
                                         001030
                                                                                                                                                                                    MOV
                        104270
       005656
                                         001031
                                                                                                                                                                                    MOV
                        104270
104270
104270
104270
104270
       005660
                                         001032
                                                                                                                                                                                    MOV
       005662
                                         001033
                                                                                                                                                                                   MOV
       005664
                                                                                                                                                                                                     (RO)+,OUT.22
(RO)+,OUT.23
                                         001034
                                                                                                                                                                                    MOV
       005666
                                         001035
      005670
                                                                                             ERRORC <(R0)+,(R0)+,(R0)+,(R0)+,(R0)+,(R0)+>
                        104270
104270
       005670
                                                                                                                                                                                                     (RO)+,OUT.24
                                                                                                                                                                                    MOV
                                         001037
       005672
                                                                                                                                                                                                     (RO)+,OUT.25
                                                                                                                                                                                    MOV
                        104270
                                         001040
                                                                                                                                                                                    MOV
                                                                                                                                                                                                     (RO)+, OUT. 26
```

MPDA	- DATA C	UMPARI SU	N UN REA	D BUFFER	(2)					
	005676 005700 005702	104270 104270 104270	001041 001042 001043			ENDERR	0		MOV (R0)+,OUT.27 MOV (R0)+,OUT.28 MOV (R0)+,OUT.29	
	7 005704 005704 78 005706 79 005710 80 005712 81 005714 82 005715 83 005717 84 005720 85 005723 005723 005723 005730 005731 005734 005736	114000 104207 100657 104657 075744 106652 055723 104652 015744 104200 114000 100467 104207 105057 105657	002357 177777 000024 000024 000026 000005 000001 001011 000047 000034	001010	CMXEXT:	MOV MOV MOV BMI CMP BNE MOV BEQ REPSFT	0 #-1,R0 R0,U.ELEV(R5) U.ELEV(R5),R0 5\$ U.MLEV(R5),R2 6\$ U.TIMO(R5),R2 5\$ SOFT		CLR ERRPOS ; CLEAR THE POSITION FLAG THAT HARD ERROR OCCURRED SAVE GET ERROR RECOVERY LEVEL IF HAR ERROR OCCURRED, BRANCH SEE IF ANY LEVELS USED IF SO, BRANCH GET RETRIES IF NO RETRIES, BRANCH (NO ERRORS) REPORT SOFT ERROR MOV #1,OUT.02 CLR OUT.03 MOV RO,-(SP) MOV #U.SNUM,RO ADD R5,RO ADD U.SUBU(R5),RO	
	005742 005743 37 005744 38 005746 39 005747 90 005751 91 005753 92 005755 93 005756 94 005760 95 005762 96 005763 97 005765	104170 104207 020751 104267 104657 115407 100657 104701 102201 055772 103201 104010 104111 102201 015772	001007 000007 000016 000016 174377 100000 170000 002352 040000		5\$: ;	MOV INC MOV MOV BIT BNE BIC MOV MOV BIT BEQ IF THE	U.NSEC(R5),R0 R0 R0,U.NSEC(R5) a)CHAINS,R1 #EOC,R1 1\$ #^CHBHINB,R1 R1,CHAINS (R1),R1 #BUFFLG,R1 1\$ ABOVE BRANCH IS	TAI	MOV #T4SOFT,RO CALL HOSTRO MOV (SP)+,RO GET NUMBER OF SECTORS HANDLED SO FAR INCREMENT COUNT SAVE R1 IS STATUS OF LINK JUST CHECKED SEE IF END OF CHAIN IF SO, BRANCH CLEAR UNUSED BITS CHAINS NOW POINTS TO NEXT LINK GET STATUS OF NEXT BUFFER SEE IF EMPTY BUFFER IF SO, BRANCH ***** KEN, ONE OF 3 CONDITIONS EXIST:	
10	99 00 01 02 03 005766 04 005770 05 07 005774 08 005776 09 006000 10 006002 11 006003 12 006004 13 006006 14 006007 15 006011 16 006016 18 006020 19 006022	104207 114001 006027 104653 103203 100653 105647 115002 056022 106207 036022 107207 104200 114000 104202 104020 104020	000007 000033 000200 000033 000006 003642 003642 000001 001011 000011 001043 000006	001010	1\$:	MOV CLR BR MOV BIC MOV ADD TST BNE CMP BPL SUB MOV CLR MOV MOV MOV	1) HEADER COMPA 2) TIMEOUT DURY 3) REVECTORED E BOTH 1 #CHKECC,RO R1 4\$ U.PARM(R5),R3 #RBNBN,R3 R3,U.PARM(R5) S.MEGR(R4),RO R2 3\$ #1954.R0 #1,OUT.O2 OUT.O3 #T4MXFR,R2 R2,OUT.29 R0,S.MEGR(R4)	ING BLO ANI	G READ	

UDAT4 DISK EXERCISER MACRO X04.00 9-JUL-81 01:12:03 PAGE 141-3 CMPDAT - DATA COMPARISON ON READ BUFFER(S)

120 006024 121 006026 122 006027 123 124 125 126 127 128	104207 104051 003127 006031	000001	4\$: BUFA2 BUFARA	MOV MOV BR = . IF	#SETUP,RO R5,R1 JMPRET .+1 GE,BUFA1-BUFA2 BUFA1	; SETUP IS NEXT MODULE CALLED ; DEFERRED CALL TO NEXT MODULE ; RETURN TO SEQUENCER ; SET UP FOR SCRATCH AREA ; SEE WHICH MODULE IS LARGER ; IF IT IS READ/WRITE, SCRACH STARTS AFTER THE	AT
127 128	006031		BUF ARA	.IFF = .ENDC	BUFA2	; IF IT IS CHKECC, SCRATCH STARTS AFTERS THAT	

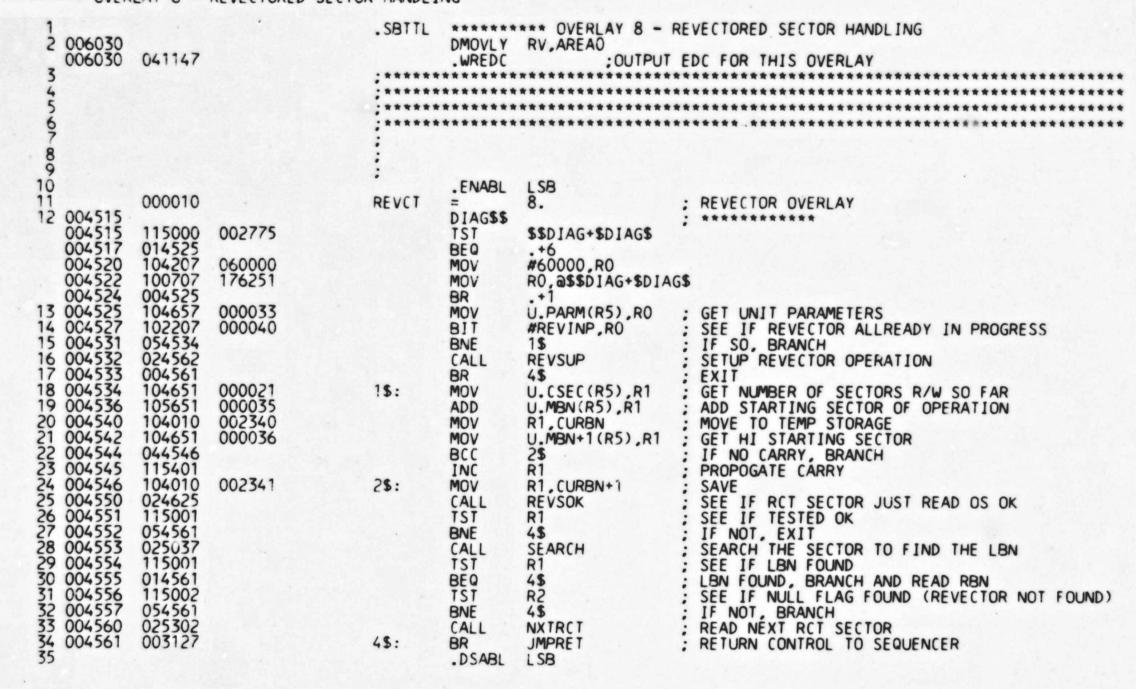

00000

2 004625				.SBTTL REVSOK:	REVSOK	- SEE IF THE REVECTOR INFO SECTOR JUST READ IS OK
456					FOUND.	THE SECTOR WAS READ. IF SO, SEE IF ANY ECC ERRORS WERE IF SO, TRY TO CORRECT. IF SUCCESSFUL, RETURN R1 AS ZERO. GO TO THE NEXT RCT COPY
8 004625 9 004627	104303	002352			MOV MOV	CHAINS, R3 : R3 POINTS TO SECTOR LINK (R3), R1 : GET STATUS
10 004630	102201	040000			BIT	#BUFFLG,R1 ; SEE IF SECTOR FULL
11 004632 12 004633 13 004635	014646 102201 014644	010000			BEQ BIT BEQ	2\$; IF NOT, GO TO NEXT COPY #ECCFLG,R1 ; SEE IF ECC ERROR 1\$; IF NOT, SECTOR OK
14 004636 15 004637	060015 115001				XFC TST	ECC : CORRECT THE SECTOR R1 : SEE IF ANY ERRORS OCCURRED
16 004640 17 004641	054646	000027			BNE	2\$; IF SO, BRANCH U.ECCT(R5),RO ; SEE IF CORRECTIONS EXCEED THRESHOLD
18 004643 19 004644	074646			15:	BMI CLR	2\$; IF SO, BRANCH R1 ; THIS SECTOR IS OK
20 004645 21 004646	005036 104651	000044		2\$:	BR MOV	7\$: EXIT U.CCOP(R5),R1 : GET NUMBER OF COPIES TRIED SO FAR
22 004650 23 004651	115401 106651	000043			INC	R1 : TRY ANOTHER COPY U.COPY(R5),R1 : CHECK AGAINST MAX
24 004653 25 004654	035014 104651	000046			BPL MOV	5\$: IF ALL COPIES UNTRIED, BRANCH U_RVER(R5),R1 : GET ORIGINAL ERROR TYPE
26 004656 27 004660	106201 054716	000003			CMP BNE	#3,R1 ; SEE IF RBN HEADER WAS ORIGINALLY FOUND 4\$
28 004661 004661	104200	004625	001012		HARDER	MOV #ER40,0UT.04
004664	104650	000037	001013			MOV U.CBN(R5), OUT.05 MOV U.CBN+1(R5), OUT.06
004672 004675 004700	104300 104300 104200	002340 002341 000050	001015 001016 001010			MOV CURBN,OUT.07 MOV CURBN+1,OUT.08
004703 004706	101200	001000 004706	001010			MOV #40,0UT.02 BIS #ERHARD.OUT.02 MOV #.,OUT.01
004711 004713	104202	000014 001006	001007			MOV #ERRMC,R2 MOV R2,OUT.RQ
29 004715 30 004716	005011	001000		4\$:	BR ROR	8\$; SKIP NEXT ERRORS R1 ; SEE IF TIMEOUT
31 004717 32 004720	044755				BCC HARDER	3\$; IF NOT, BRANCH
004720 004723	104200 104650	005055	001012			MOV #ER42.OUT.04 MOV U.CBN(R5),OUT.05
004726 004731 004734	104650	000040 002340	001014			MOV U.CBN+1(R5),OUT.06 MOV CURBN,OUT.07
004734 004737 004742	104300 104200	002341 000052	001016 001010			MOV CURBN+1.OUT.08 MOV #42.OUT.02
004745	101200 104200	001000 004745	001010			BIS #ERHARD.OUT.02 MOV #.,OUT.01
004750 004752	104202	000014				MOV #ERRMC,R2 MOV R2,OUT.RQ
33 004754 34 004755	005011	001775		3\$:	BR HARDER	SKIP NEXT ERROR 41, <u.(bn(r5),u.(bn+1(r5),curbn,curbn+1></u.(bn(r5),u.(bn+1(r5),curbn,curbn+1>
004755	104200	004735	001012			MOV #ER41,0UT.04 MOV U.CBN(R5),0UT.05
004763	104650	000040	001014			MOV U.(BN+1(R5), OUT.06

004766 004771 004774 004777 005002 005005 005007	104300 104300 104200 101200 104200 104202 104020	002340 002341 000051 001000 005002 000014 001006	001015 001016 001010 001010 001007					MOV CURBN,OUT.07 MOV CURBN+1,OUT.08 MOV #41,OUT.02 BIS #ERHARD,OUT.02 MOV #.,OUT.01 MOV #ERRMC,R2 MOV R2,OUT.RQ
35 005011 36 005012 37 005013	025251 104051 005036			8\$:	CALL MOV BR	RVFAIL R5,R1 7\$:	CLEAR ALL BITS AND DO A FAIL EXIT FLAG AS ERROR EXIT
38 005014 39 005016 40 005020	100651 104647 104677	000044 000005 000014		5\$:	MOV MOV MOV	R1,U.CCOP(R5) S.SCHR(R4),R0 RCTCSZ(R0),R0		SAVE COPY COUNT RO POINTS TO SUBUNIT PARAMETERS RO IS RCT COPY SIZE
41 005022 42 005024 43 005026	105657 100657 045034	000037 000037			MOV BCC	U.CBN(R5),R0 R0,U.CBN(R5) 6\$:	ADD CURRENT SECTOR SAVE IF NO CARRY, BRANCH
44 005027 45 005031 46 005032	104657 115407 100657	000040			MOV INC MOV	U.CBN+1(R5),R0 R0 R0,U.CBN+1(R5)		GET HI CURRENT BLOCK NUMBER INCREMENT COUNT SAVE
47 0C5034 48 005036	104207	000002		6\$: 7\$:	MOV RETURN	#SEEK,RO	::	SEEK IS NEXT MODULE RETURN TO CALLING PROGRAM

444

++++

FFOO

000000

1 2	005037				.SBTTL SEARCH:	SEARCH	- TRY TO FIND THE	LBN IN THE RCT SECTOR JUST READ
4						SEARCH	THE RCT SECTOR JU	JST READ TO FIND THE LBN OR THE NULL ENTRY
6	005037 005041	104307	002352			MOV	CHAINS,RO RW.BUF(RO),RO	; RO POINTS TO LINK (NODE) IN READ CHAIN ; RO NOW POINTS TO BUFFER
8	005043	114001	000001		1\$:	CLR	R1 1(R0),R2	: R1 IS RBN NUMBER OFFSET WITHIN THE SECTOR : GET RCT CODE
10		104672 075133 102202	020000		1.	BMI BIT	6\$ #020000,R2	; IF NULL POINTER, ENTIRE TABLE EXHAUSTED, BRANCH ; SEE IF IT IS A USED RBN ; IF NOT, BRANCH ; CLEAR CODE
12	005051 005052	102202 015111 103202	170000			BEQ BIC	5\$ #^CHBHINB,R2	; IF NOT, BRANCH : CLEAR CODE
14	005054 005056	103202 106302 055111	002341			CMP BNE	CURBN+1,R2	: SEE IF HI URDER MAICHES
16	005057	106170 055111	002340			CMP BNE	(RO), CURBN	: IF NOT, BRANCH : SEE IF LO ORDER MATCHES : IF NOT, BRANCH
	005062	105651 100651	000041			ADD MOV	U.RBN(R5),R1 R1,U.RBN(R5)	; ADD RUNNING RBN TO OFFSET ; SAVE
	005066	045074 104651	000042			BCC MOV	2\$ U.RBN+1(R5),R1	; IF NO CARRY, BRANCH ; GET HI ORDER RBN
23	005071 005072	115401 100651	000042			INC	R1 R1,U.RBN+1(R5)	; PROPOGATE CARRY ; SAVE
25		104657 101207	000033		2\$:	MOV	U.PARM(R5),R0 #RBNBN,R0	; GET UNIT PARAMETERS ; FLAG ALL ROUTINES THAT THIS IS AN RBN
27	005100 005102	100657 025251	000033			CALL	RO,U.PARM(R5) RVFAIL	; SAVE ; FAIL EXIT DOES WHAT WE WANT, JUST CLEAR R1 AND R2
29		114001	000016			MOV	R1 R1.U.NSEC(R5)	; NO SECTORS R/W SO FAR ; SAVE
30 31	005107	114002				CLR	R2 R1 7\$; NO ERRORS ; FOUND IT
32 33 34	005111	005250 105207 115401	000002		5\$:	BR ADD INC	#2.R0 R1	; EXIT ; POINT TO NEXT RBN RECORD ; INCREMENT RBN OFFSET
35 36	005114	106201	000200			CMP BNE	#128.,R1	; SEE IF ALL RECORDS TRIED ; IF NOT, BRANCH
37 38	005117	114002 105651	000041			CLR	R2 U.RBN(R5),R1	: TO SIGNAL CALLING ROUTINE TO READ NEXT SECTOR : ADD OLD RBN TO 128
39	005122	100651 045250	000041			MOV BCC	R1.U.RBN(R5)	: SAVE : IF NO CARRY, EXIT
41	005125	104651 115401	000042			MOV	U.RBN+1(R5),R1 R1	; GET HI ORDER RBN ; PROPOGATE CARRY
43	005130	100651 005250	000042			MOV BR	R1,U.RBN+1(R5) 7\$: SAVE : EXIT
45	005133	104651 106201	000046 000003		6\$:	MOV	U.RVER(R5),R1 #3,R1	; GET ORIGINAL ERROR ; SEE IF REVECTORED BLOCK ORIGINALLY FOUND
48	005135 005137 005140 005140	055167	005171	001013		BNE HARDER	8\$ 43, <curbn,curbn+< td=""><td>: IF NOT, BRANCH : REPORT ERROR</td></curbn,curbn+<>	: IF NOT, BRANCH : REPORT ERROR
	000145	104200 104300 104300	005171 002340 002341	001012 001013 001014				MOV #ER43,OUT.04 MOV CURBN,OUT.05 MOV CURBN+1,OUT.06
	005146 005151 005154 005157	104200	000053	001010				MOV #43,0UT.02 BIS #ERHARD,OUT.02
	005157 005162	104200 101200 104200 104202	005157	001007				MOV #.,OUT.01 MOV #ERRMC,R2
49	005164	104020 005246	001006			BR	9\$: SKIP NEXT ERRORS

50 005167 51 005170 110601 045220 8\$: BCC 3\$: IF NCT, BRANCH HARDER 45, < CURBN, CURBN+1> : REPORT 52 005171 104200 104300 104300 104200 101200 104200 104202 005352 002340 002341 000055 005171 005174 005177 001013 001014 005177 005202 005205 005210 005213 005217 54 005220 005220 005223 005226 005231 001010 001000 001010 005210 001007 104020 001006 : SKIP NEXT ERROR HARDER 44, < CURBN, CURBN+1> 005256 002340 002341 104200 104300 104300 001012 201013 001014 104200 000054 001010 005234 001000 001010 005237 0C5242 104200 005237 001007 104202 000014 005244 104020 R2, OUT. RQ 001006 MOV 55 005246 56 005247 57 005250 025251 RVFAIL ; CLEAR ALL BITS, FAIL EXIT CALL ; FLAG AS ERROR 104051 MOV R5,R1 000000 75: RETURN : RETURN TO CALLING PROGRAM

L 4

2 005251			.SBTTL RVFAIL:	RVFAIL	- CLEAR ALL REVE	CTOR BITS, AND CALL SETUP NEXT
4				CLEAR A	ALL REVECTOR BITS	, AND RESTORE U.CBN TO WHAT IT WAS
6 005251 7 005253	104651 103201	000033		MOV	#REVEC!REVINP,R	
8 005255 9 005257 10 005261	100651 104201 100651	000033 000001 000016		MOV MOV	R1,U.PARM(R5) #1,R1 R1,U.NSEC(R5)	: SAVE : FLAG THAT A SECTOR HAS BEEN READ (SKIPPED) : SAVE
11 005263 12 005265	104651 105651	000021		MOV	U.CSEC(R5),R1 U.MBN(R5),R1	: GET NUMBER OF SECTORS : ADD STARTING SECTOR NUMBER
13 005267 14 005271 15 005273	100651 104651 045275	000037 000036		MOV	R1,U.CBN(R5) U.MBN+1(R5),R1	; RESTORE CBN ; GET HI MBN
16 005274 17 005275	115401	000040	1\$:	BCC INC MOV	1\$ R1 R1,U.CBN+1(R5)	: IF NO CARRY, BRANCH : PROPOGATE CARRY : SAVE HI IN CBN
18 005277 19 005301	104207	000001		MOV RETURN	#SETUP, RO	: SETUP NEXT ROUTINE : RETURN TO CALLING PROGRAM

1 2 005302	.SBTTL NXTRCT		RCT SECTOR TO SEARCH
3 5		INCREMENT CON BY 1 AFTE	ER SUBTACTING THE NUMBER OF COPIES*RCT SIZE UGH ON THE LAST PASS
7 005302 104652 000037 8 005304 104653 000040 9 005306 104657 000044		MOV U.CBN(R5),R2 MOV U.CBN+1(R5),R3 MOV U.CCOP(R5),R0	; GET NUMBER OF COPIES THAT HAVE BEEN READ
10 005310 015322 11 005311 104641 000005 12 005313 104611 000014 13 005315 107012	1\$:	MOV S.SCHR(R4),R1 MOV RCTCSZ(R1),R1 SUB R1,R2	; R1 HAS RCT SIZE ; SUBTRACT FROM LO ORDER BN
14 005316 045320 15 005317 117403 16 005320 117407 17 005321 055315	2\$:	BCC 2\$ DEC R3 DEC R0 BNE 1\$; IF NO BORROW, BRANCH ; PROPOGATE BORROW ; DECREMENT COUNT ; IF NO CARRY, BRANCH
18 005322 105202 000001 19 005324 045326 20 005325 115403	3\$:	ADD #1,R2 BCC 4\$ INC R3	; INCREMENT CBN BY 1 ; IF NO CARRY, BRANCH ; PROPOGATE CARRY
21 005326 100652 000037 22 005330 100653 000040 23 005332 114002	4\$:	MOV R2,U.(BN(R5) MOV R3,U.(BN+1(R5) CLR R2	; SAVE LO ORDER ; SAVE HI ORDER ; NO ERRORS
24 005333 104207 000002 25 005335 000000		MOV #SEEK,RO RETURN	; NEXT MODULE IS RDWRT

```
.SBTTL
                                                    ****** OVERLAY 9 - RECALIBRATION MODULE
                                                    DMOVLY RB, AREAO
    005336
    005336
            025600
                                                                        COUTPUT EDC FOR THIS OVERLAY
                                                     . WREDC
 67
10
                                                    .ENABL
                                                              LSB
             000011
                                           RECALB
                                                                                   RECALIBRATION MODULE
                                                    =
    004515
                                                    DIAG$$
                                                                                   ******
    004515
             115000
                       002776
                                                    TST
                                                              $$DIAG+$DIAG$
             014525
104207
100707
                                                    BEQ
                                                              .+6
   004520
                       060000
                                                              #60000 RO
                                                    MOV
                       176252
                                                    MOV
                                                              RO. a$$DIAG+$DIAG$
   004524
004525
             004525
104203
115002
                                                    BR
                       001532
                                                    MOV
                                                              #CR. INR, R3
                                                                                    POINT TO THE INITIATE RECALIBRATION ROUTINE
14 004527
                                                    TST
                                                              R2
                                                                                    SEE IF ANY ERRORS OCCURRED
15 004530
             014540
                                                    BEQ
                                                              1$
                                                                                    IF NOT, BRANCH
16 004531
                                                    CERROR
                                                              5, #SER7
                                                                                    REPORT SECONDARY ERROR
    004531
             104200
                       010275 001013
                                                                                                              #SER7,0UT.05
                                                                                                     MOV
   004534
             104051
                                                    MOV
                                                              R5.R1
                                                                                    DEFERRED CALL
             104207 004567
18 004535
                       000011
                                                              #RECALB, RO
                                                    MOV
                                                                                    TRY RECALB AGAIN
19 004537
20 004540
21 004542
22 004544
23 004546
24 004550
25 004551
26 004553
27 004555
28 004560
30 004562
31 004564
32 004565
33 004567
34 004570
19 004537
                                                    BR
                                                                                    EXIT
              104657
                       000033
                                          15:
                                                              U.PARM(R5).RO
                                                    MOV
                                                                                    GET UNIT PARAMETERS
             101207
                       020001
                                                    BIS
                                                              #RESEEK!RCLB.RO
                                                                                    FORCE A SEEK, MARK RECALIBRATION JUST DONE
                       000033
             100657
                                                    MOV
                                                              RO, U. PARM(R5)
              104657
                       000006
                                                    MOV
                                                              U.RWTO(R5),RO
                                                                                    GET READ/WRITE TIMEOUT VALUE
             117407
                                                    DEC
                                                                                    ADJUST BECAUSE IT DIDN'T R/W LAST TIME
             101207
                       100000
                                                              #100000,R0
                                                    BIS
                                                                                    MAKE THE RECALIBRATION COMPARE FAIL
              100657
                       000006
                                                              RO, U. RWTO(R5)
                                                                                   SAVE
                                                    MOV
              114002
                                                    CLR
                                                                                    NO ERRORS
             100652
                       000053
                                                              R2, U. CCYL (R5)
                                                    MOV
                                                                                    ZERO CYLINDER
                       000054
              100652
                                                              R2, U. CCYL+1 (R5)
                                                    MOV
             100652
                       000055
                                                    MOV
                                                              R2,U.CGRP(R5)
             114001
                                                    CLR
                                                                                   IMMIDATE CALL
             104207
                       000002
                                                    MOV
                                                              #SEEK, RO
                                                                                   SEEK IS NEXT MODULE
             003127
                                          2$:
                                                    BR
                                                              JMPRET
                                                                                   RETURN TO SEQNCR
                                                    .DSABL
                                                              LSB
                                                    DMEND
    004570
             140241
                                                    . WREDC
                                                                        COUTPUT EDC FOR THIS OVERLAY
36
             000001
                                                    .END
```

SYMBOL TABLE				
AFINIT 003254 AFTERR 006621 ALLOCM 002112 AREA0 = 004515 AREA1 = 006560 AREA2 = 007025 AREA3 = 007300 ATNEXT 003361 ATNHI 007226 ATTN = 000002 AVAIL = 000100 BBLOP 005261 BEEXT 005274 BESDWN 005203 BESUP 005273 BEUSED= 000040 BF.ECC= 000401 BF.EDC= 000400 BF.ECC= 000401 BF.EDC= 000400 BHRQ 004152 BLDBB 005053 BLDBBS 005022 BLDBB 005053 BLDBUNT 004644 BLKCHK 001613 BONL 004265 BORONO 005460 BREAK = 000000 BSUSEX 005011 BUFARA= 006031 BUFA1 = 005570 BUFA2 = 006031 BUFFLG= 040000 BUFSIZ= 000036 BUILDP 001657 BULDSC 004774 BULDUM 002117 CALC 002141 CALCSC 002336 CARYNO 005443 CBB2 005441 CBES2 005347 CHAINS 002352 CHECK = 000010 CHGMOD= 000201 CHKBB 006571 CHKBES 006311 CHKCYL 006131	CLCLBN 005042 CLCMAX 006766 CLRBUF 000777 CLROK 004331 CLRUP 006343 CLXEXT 002334 CMPDAT 005440 CMPEDC 001143 CMPERR 005543 CMPEXT 001656 CMPNXT 005263 CMP2 001645 CMXEXT 005712 CNTLOP 004745 COMCHR 005615 COMEXT 005710 COMPAR= 000006 COMPDP 007302 COMPLT= 000176 COMPSC 006733 COPLP0 005033 COPLP1 005040 COPLP2 005050 COPPAT 005040 COPLP2 005050 COPPAT 005022 COPYSU 005077 CORECC 004641 CORECT 003724 COREXT 004025 COUNTD 004753 CPYBEX 005316 CR.CLR 001455 CR.DIS 001525 CR.ERR 001520 CR.GR 001467 CR.GRT 001501 CR.INR 001532 CR.MOD 001462 CR.ONL 001513 CR.RUN 001537 CR.SCR 001474 CR.SEK 001506 CSCEXT 005536 CURBN 002340 CVT = 000020 CYL 002344 CYLBN 001537 CR.SCR 001474 CR.SEK 001506 CSCEXT 005536 CURBN 002340 CVT = 000022 DATERR= 000002 DATERR= 000002 DATPRE= 0000022	DCOUT 006472 DCREAD 006463 DCYLS = 020000 DEC2 005445 DINIT = 000011 DIREC = 010000 DIS 001544 DISCON= 000204 DONE = 000016 DOWNG 006136 DOWNT 005774 DRC 001550 DROP = 100000 DROPSU 002472 DRPTST 003362 DRTYPE= 000007 DRVEXT 007466 DRVID = 000005 DRVEXT 007466 DRVID = 0000014 DRVONL= 000213 DRVRUN= 000014 DLIMT = 000001 D.SCHR= 000002 ECC = 000015 ECCCHK= 010000 ECCCOK 004741 ECCEDT 005161 ECCERR 005257 ECCFLG= 010000 ECCCOK 004741 ECCEDT 005161 ECCERR 005267 ECCFLG= 010000 ECCOV 005267 ERCOV 005267 ERCOV 005340 ERR 001564 ERRNT 002443 ERRLEV 001565 ERRMC = 000014 ERRPOS 002357 ERSOFT = 001400 ER1 001662 ER10 01662 ER10 01662 ER10 01662 ER10 010455 ER11 002025 ER11 002025 ER12 002057 ER10 002302	ER17 002442 ER18 002470 ER19 002563 ER2 0002765 ER21 003170 ER23 003231 ER24 003336 ER25 003544 ER27 003617 ER28 003746 ER29 004012 ER3 000363 ER30 004051 ER31 004247 ER32 004444 ER33 004547 ER40 004625 ER41 004735 ER42 005055 ER43 005171 ER44 005256 ER41 004735 ER42 005055 ER43 005171 ER44 005256 ER50 00547 ER40 ER50 005575 ER51 005510 ER52 ER50 00560 ER54 005674 ER55 005743 ER50 006136 ER57 006330 ER58 006423 ER59 006515 ER60 001123 ER61 006540 ER59 006515 ER60 001123 ER70 007230 ER71 007311 ER72 007731 ER72 007746 ER80 010365 ER70 007472 ER71 007311 ER72 007746 ER80 010365 ER70 007472 ER71 007311 ER72 007746 ER80 010365 ER9 001547 EVRYOK 004446 ER80 010365	FIRSTU= 007717 FIXPAT 006413 FNDBES 005275 FNDUBE 005305 FNDWER 005526 FNDWRT 005375 FORMAT 000001 FRAME = 000001 FRAME = 001000 FTIME = 001000 FTLDEV= 000400 FTLSYS= 000000 FTLSYS= 000000 FT.BUF = 000001 FT.LOW= 005542 GCR 001552 GETCHR= 005542 GCR 001552 GETCHR= 000207 GETMEM 005072 GETSUB= 000210 GETU 007543 GMPARM 007467 GONE 003113 GOTOBE 004772 GOTOFS 004775 GO4IT 003125 GROUP 002346 GRPCYL= 000002 GRPOFF= 000011 GST 001555 GSTOK 004307 HBHINB= 007777 HBLONB= 170377 HDRPRE= 000002 GRPOFF= 000011 GST 001555 GSTOK 004307 HBHINB= 170377 HDRPRE= 000002 HD.BN= 140000 HD.BN= 140000 HD.BN= 140000 HD.BN= 140000 HD.BN= 140000 HD.BN= 170377 HDRPRE= 000005 HD.BN= 140000 HD.BN= 1000000 HD.BN= 140000 HD.BN= 140000 HD.BN= 140000 HD.BN= 140000 HD.BN= 1000000 HD.BN= 0000000 HD.BN= 0000000 HD.BN= 0000000

INC2 INDEX INDEX INDEX O02351 INITD O07334 INITW = 040000 INR O01557 INS O01560 INSCHR O05724 INSEEK= 000012 INSET O05562 INTEDC= 000105 IN.RQ O1044 IN.01 O01045 IN.02 IN.02 O01046 IN.03 O01047 IN.04 O01050 IN.05 O01051 IN.06 O01052 IN.07 O01053 IN.08 O01054 IN.09 O01055 IN.10 O01056 IN.11 O01057 IN.10 O01057 IN.12 O01060 IN.13 O01061 IN.14 O01062 IN.15 O01063 IN.16 O01064 IN.17 O01065 IN.18 O01066 IN.19 O01067 IN.20 O01070 IN.21 O01071 IN.22 O01072 IN.23 O01073 IN.24 O01074 IN.25 O01075 IN.26 O01076 IN.27 O01077 IN.28 O01100 IN.27 O01077 IN.28 O01100 IN.27 O01077 IN.28 O01100 IN.27 O01076 IN.27 O01077 IN.28 O01100 IN.29 O01101 IRECLB= O00016 ISUEXT O07023 ISUSEK O06677 JMPRET LARGE = 000001 LASTU O04535 LBHINB= 177760 LBNCYL= O00000 LBNHLD O02441 LBNHST= O00012	LOADED LOBYTE = 000377 LOCYL 001561 LONG 001532 LONGTO = 000001 LOSEED 002445 LOW = 000002 LRDTRK 006321 MASK 005102 MASKLO 005033 MASKLP 005104 MAXDBN 004540 MAXDBN 004540 MAXDST = 000003 MAXMUM 006534 MAXSEC 002355 MBXFER 004150 MEDTYP = 000006 MEMPOL 002473 MESSAG = 000015 MI CREV = 000003 MKLOOP 005531 MOD 001546 MODOK 004364 MODOK 004364 MODOK 004365 MORE 007501 MOVDBN 002224 MOVOUT 002261 MOV2 005462 MRD = 000016 MS1 010573 MS2 010611 MWR = 000017 M.PARM 002444 NEWDNT 006226 NEWEXT 005343 NEWBUPT 006172 NEWEXT 005316 NEWEXT 005316 NEWSUB = 004000 NEWUPT 006172 NEXTBE 005336 NOBBS 005071 NOBBS 005071 NOBBS 005077 NOCARY 005047 NOERR 003145 NOEXTR 005276 NOHCFL 005516	NOU NOUNIT 003020 NRTDS 003327 NSTATE 003747 NTOUT 005226 NUMBB 004537 NUMOVL= 000012 NUMPTR= 000006 NXTRCT 005302 NXTSEC 004706 OK2DRP 004436 ONEPAT 005047 ONEPAX 005527 ONEREG 005032 ONL 001566 ONL ERR 007440 ONLOK 004276 ONLYCL= 000200 OTABLE 002360 OUT.RQ 001006 OUT.01 001007 OUT.02 001010 OUT.03 001011 OUT.04 001012 OUT.05 001013 OUT.06 001014 OUT.07 001015 OUT.08 001016 OUT.09 001017 OUT.10 001020 OUT.11 001021 OUT.12 001022 OUT.13 001023 OUT.14 001024 OUT.15 001025 OUT.16 001026 OUT.17 001027 OUT.18 001030 OUT.19 001031 OUT.20 001032 OUT.11 001033 OUT.21 001033 OUT.22 001034 OUT.23 001035 OUT.24 001036 OUT.27 001041 OUT.28 001042 OUT.29 001043	OVE.RW= 004515 OVE.SK= 006560 OVE.ST= 004515 OVE.W = 004515 OVL.CK= 001314 G OVL.MN= 007017 G OVL.MS= 010644 G OVL.R = 000645 G OVL.RB= 000054 G OVL.RW= 000622 G OVL.RW= 000056 G OVL.SK= 000243 G OVL.SK= 000243 G OVL.SK= 000243 G OVL.SK= 000263 G OVL.SK= 000263 G OVL.SK= 001053 G OVL.SK= 001053 G OVL.SK= 001053 G OVS.RS= 017076 G OVS.MN= 011040 G OVS.MS= 017076 G OVS.RS= 050436 G OVS.RS= 050436 G OVS.RS= 050436 G OVS.RS= 050436 G OVS.RS= 044714 G OVS.RS= 050436 G OVS.RS= 046154 G OVS.RS= 046310 G OVS.SK= 044714 G OVS.SK= 044714 G OVS.SK= 046310 G OVS.SK= 046310 G OVS.SK= 046310 G OVS.SK= 046310 G OVS.ST= 006415 PATEXT 006415 PATEXT 006415 PATEXT 006415 PATEXT 006415 PATEXT 002677 PATI3 0027276 PATI1 002654 PATI1 002654 PATI1 002654 PATI1 002654 PATI1 002655 PATI 002667 PATI3 002542 PATI 002667 PATI3 002544 PATI 002667 PATI 0	RBNFLG 002343 RBNTRK= 000004 RBUFLN= 000415 RCBREQ 004367 RCLB = 000001 RCMPER 005641 RCONT = 000000 RCTCPS= 000001 RCTCSZ= 000014 RCV = 000005 RCVERR= 000004 RCVRDY= 000001 RDMOD 004556 RDSTAT 000720 RDWRT = 000004 READ = 000006 RECALB= 000011 RECOVE 004021 RECOVE 004021 RECOVE 004021 REDEXT 004727 REDEXT 004727 REDSET 004501 REPERR 004030 REPERR 004030 REPERR 004030 REPERR 004030 REPERR 004030 REPERR 004030 REVECT = 000001 REVCT = 000010 REVECT = 000004 REVECT = 0000004 REVECT = 00000000000000000000000000000000000
LBHINB= 177417	NOBORO 005007	OUT.27 001041	PAT6 002606	ROTEXT 003061
LBLONB= 177760	NOCARY 005047	OUT.28 001042	PAT7 002627	ROUT 005322
LBNCYL= 000000	NOERR 003145	OUT.29 001043	PAT8 002631	RREAL = 013400
LBNHLD 002441	NOEXTR 005276	OUT0 005313	PAT9 002652	RSTOP = 100000

ERRORS DETECTED: 0

VIRTUAL MEMORY USED: 6249 WORDS (25 PAGES)
DYNAMIC MEMORY AVAILABLE FOR 70 PAGES
A:UDAT4.BIN,SY:UDAT4/C=[1,33]DMACRO,UDAT4T,UDATP,UDATR,UDAT4M

UDAT4 D	ISK EXER	CISER MAC	RO X04.00 REF V01-0	9-JUL-81	01:12:03	PAGE S-1	F	5						SEQ 0471
\$\$DIAG	46-3#	94-17*	94-17*	124-18*		127-16*	127-16*	128-16*	128-16*	129-15*	129-15*	134-15*	134-15*	137-14*
SDIAGS AFINIT	137-14* 46-2# 128-16# 137-14* 49-2#	142-12* 94-17 128-16* 142-12 49-20	142-12* 94-17# 128-16* 142-12# 54-33	148-12* 94-17* 129-15 142-12* 73-14	148-12* 94-17* 129-15# 142-12*	124-18 129-15* 148-12	124-18# 129-15* 148-12#	124-18* 134-15 148-12*	124-18* 134-15# 148-12*	127-16 134-15*	127-16# 134-15*	127-16* 137-14	127-16* 137-14#	128-16 137-14*
AFTERR ALLOCM AREAO	124-35 40-12 45-70	124-46# 40-15 58-13#	40-26 94-1	41-19 94-1	42-2# 128-2	128-2	129-2	129-2	134-2	134-2	137-2	137-2	142-2	142-2
AREA2 AREA3	148-2 45-72 45-74 45-76	148-2 123-22# 126-38# 127-60#	124-2 127-2	124-2 127-2										
ATNEXT	49-19	49-25	49-38#											
TTN	127-21 6-22#	127-54# 54-13	127-20											
AVAIL BBLOP BEEXT BESDWN	6-24# 67-85# 99-55 99-29	67-99 99-85 99-45#	99-87#											
BESUP BEUSED BF.DAT	99-72 8-35# 3-62#	99 - 86# 64 - 9	67-14	76-42	76-56	79-33	79-49	95-14	95-20					
BF.ECC BF.EDC BHRQ	3-64# 3-63# 55-62#	130-23*	137-67	137-74	137-82	137-86								
LDBB LDBES LDSUB LDSUS LDUNT	63-7 63-6 62-15 61-49 60-3	65-2# 64-2# 63-2# 62-2# 61-2#												
BLKCHK	37-2# 56-9 105-10 4-3# 62-17 133-27#	132-38 56-11 105-14# 91-26 62-19# 141-124	135-32 56-24	137-21 56-29#	141-60									
BUF AZ BUF ARA	141-123#	141-124	141-127											
BUFSIZ BUILDP	3-47# 22-15 39-2#	133-14 22-20 129-52	135-30 23-68# 134-52	136-14	137-17	141-12	141-96	144-10						
BULDUM CALC CALCSC	129-56 43-2# 39-18 44-52	130-2# 129-55 44-2# 45-4#	134-55 125-16		·									
ARYNO BB2	104-10 70-12	104-14# 70-23#	79-13	79-20	79-30	79-46	80-14	80-24	80-31					
BES2 HAINS	68-12 39-17*	68-23# 40-7	40-16*	45-15#	132-23	133-10	135-22	135-29	136-9	137-15	141-10	141-64	141-90	141-94*
CHECK CHGMOD CHKBB CHKBES CHKCYL	144-8 5-67# 6-32# 76-52 76-49 76-46	145-6 36-22 80-2# 79-2# 77-2#												

UDAT4	DISK	EXER	CISER	MACRO	x04.00	9-JUL-81	01:12:03	PAGE	5-2
CROSS	REFE	RENCE	TABLE	(CREF	V01-0	5)			

	CROSS REFERENC	E TABLE (C	REF V01-0	(5)										
	CHKDN 50-74 CHKECC 134-73 CHKEXT 56-69 CHKSTA 56-41	50-78 137-10# 57-23 57-2# 83-2# 50-71	51-1# 141-103 57-28	57-45#										
	CHKTG 76-58 CHKUP 50-59 CHNMAX 45-17# CHRRES 6-43# CLCLBN 97-27 CLCMAX 76-40 CLRBUF 22-25# CLROK 56-50 CLRUP 94-60 CLXEXT 44-56	60-28* 36-7 97-35# 82-2#	50-81 94-82	52-1# 94-84										
	CMP2 37-12 CMPDAT 137-94 CMPEDC 33-2#	38-2# 138-6 130-22 141-49	99-28 139-12 137-66 141-57#	100-13 141-2# 137-81										
1	CMPERR 141-40 CMPEXT 38-13 CMPNXT 137-35 CMXEXT 141-55	38-16# 137-50 141-63	137-63 141-80#	137-78	137-90	137-94#								
	CNTLOP 96-11# COMCHR 74-14 COMEXT 75-13 COMPAR 4-9#	96-15 75-2# 75-43#	75-12											
	COMPDP 84-10 COMPLT 6-41# COMPSC 76-39	84-31 36-5 81-2#	84-47 36-6	85-2# 36-10	36-11	36-12	36-13	36-15	36-16					
	COPBB 67-42 COPFIN 131-17 COPLPO 131-10# COPLP1 131-14# COPLP2 131-22# COPPAT 130-20 COPYSU 63-9 CORECC 137-25	67-60 131-25# 131-20 131-19 131-24 131-2# 67-2# 137-36#	67-75#											
	CORECT 47-38 COREXT 54-14 COUNTD 96-12 CPYBEX 67-104 CR.CLR 36-5# CR.DIS 36-13# CR.ERR 36-12#	54-2# 54-17 96-16# 67-106# 56-47 57-18 140-6	54-24	54-38	54-40#									
	CR.ERR 36-12# CR.GCR 36-7# CR.GST 36-9# CR.INR 36-15# CR.MOD 36-6# CR.ONL 36-11# CR.RUN 36-16#	56-56 56-29	56-35 148-13	89-20									,	
	CR.SCR 36-8# CR.SEK 36-10# CSCEXT 141-9 CURBN 39-10* 125-14* 145-48	76-23 126-9 141-13 39-11* 126-32 145-52	141-43 39-13* 126-32 145-52	141-53# 39-14* 142-20* 145-54	39-30* 142-24* 145-54	39-32* 144-28	41-28 144-28	41-30 144-32	44-57 144-32	44-57 144-34	45-6# 144-34	125-10* 145-14	125-11* 145-16*	125-13* 145-48
	CVT 4-19# CYL 39-21*		45-9#	125-19	126-6	126-7	126-24	126-32	126-32					

	UDAT4	DISK	EXERC	ISER	MACRO	x04.00	9-JUL-81	01:12:03	PAGE	5-3
1	CROSS	REFE	RENCE	TABLE	(CREF	V01-0	5)			

1	CK022 I	REFERENCE	TABLE (C)	REP VUI-U))						
	CYLBN D.LIMT D.SCHR DATCMP DATERR DATPRE DBNCYL DCEXT DCLR DCMPAL DCMPYS DCOMP DCOUT	77-11 8-4# 8-5# 8-40# 8-21# 5-33# 5-42# 121-8 36-25# 8-42# 121-15 94-64 121-19#	77-24 43-12* 43-14* 117-8 94-32 132-26 82-10 121-13 56-46* 121-14 121-18# 121-2#	78-2# 121-7 117-8 82-18 121-20#	121-17 128-35	141-8 128-38	138-18				
	DCREAD DCYLS DEC2	121-11 8-27# 99-30	121-14# 41-34 105-2#	44-11	57-38	76-31	77-34	79-27	80-21	129-33	134-33
	DINIT DIREC DIS	4-12# 8-13# 36-13	54-28 50-14 36-20#	89-10 50-69	51-20	52-30	99-7	108-8			
	DISCON DONE DOWNG	6-30# 6-17# 108-14	36-20 46-35 112-2#	48-27	60-19	91-23					
	DOWNT	108-12 36-5 8-10#	110-2# 36-24# 47-42	112-23	50-42	50-85	53-22	57-25	76-90		
	DROP DROPSU DRPTST	45-91# 47-11 5-15#	47-37*	47-39	50-62 54-23	54-34*	55-64*	51-25	76-90		
	DRTYPE DRVCLR DRVEXT DRVID	6-35# 87-8 5-14#	36-24 87-52	87-57#							
	DRVONL DRVRUN DUMSDI	6-33# 6-34# 41-24	36-38 36-30 43-12* 137-37	43-14*	45-85#	45-86					
	ECCCOK ECCCOK ECCEDT	4-16# 8-28# 137-39 137-20	137-24 137-51# 137-79#	144-1.							
	ECCERR ECCFLG ECCRSH ECCTOK ECHO	137-30 3-45# 5-11#	137-45 137-19 75-24 137-64#	137-58 144-12	137-91#						
1	ECHOC EDC EDCDET EDCLOP	6-46# 33-10 137-18 33-20#	33-13# 137-22 33-26	137-70	137-83	137-93#					
	EOC ER1 ER10 ER100 ER11	3-46# 56-25 92-79# 57-15 92-87#	40-19 92-14# 137-72 92-329# 139-8	40-27	141-91						
-	ER12 ER16 ER17 ER18 ER19	92-89# 92-99# 54-19 92-107# 92-111#	141-65 127-50 92-105# 132-61								

```
44-57 92-21#
92-120# 135-43
87-53 92-129#
92-131#
92-137# 137-84
ER20
ER21
ER23
ER24
ER25
ER26
ER27
               92-145# 129-40 92-149# 134-40
               92-153# 126-32
ER28
ER29
ER3
                                92-159#
               49-29
               92-27# 127-46
92-164# 132-12
92-173# 135-12
ER30
ER31
ER32
ER33
              60-15 92-186
48-23 92-186
92-34# 127-54
92-189# 144-28
                              92-182#
92-186#
127-54
ER4
ER40
ER41
                92-194# 144-34
ER42
ER43
                92-199# 144-32
               92-204# 145-48
92-208# 145-54
92-212# 145-52
92-41# 132-48
79-15 92-216
ER44
ER45
ER5
                                92-216#
92-219#
79-55
ER50
                79-22
ER51
ER52
                                                  92-222#
               80-18
80-27
92-231#
92-239#
78-22
                                 92-226#
80-33
ER53
ER54
                                                  92-228#
                               132-17
135-17
ER55
ER56
                             135-17
92-247#
92-251#
92-255#
132-64
92-257#
92-263#
137-26
92-275#
92-275#
92-285#
92-285#
92-290#
92-290#
92-300#
137-41
ER57
               83-41
84-29
92-50#
79-37
ER58
ER59
ER6
ER61
                79-53
ER62
                92-59#
35-14
ER7
ER70
                35-31
ER71
                35-36
35-40
35-44
ER72
ER73
ER74
               35-46
35-52
92-67#
ER75
ER76
ER8
             91-18
92-73#
137-91
                               92-326#
137-54
ER80
ER9
ERCOV
                               138-2#
             6-31#
138-21
6-52#
137-72
ERECOV
                                 36-36
                               138-28
35-14
                                                138-31#
35-31
EREXT
                                                                                                                                     35-52
145-48
                                                                                                                                                                        56-25
145-54
                                                                                                                                                                                                                           129-40
ERHARD
                                                                   35-36
                                                                                    35-40
                                                                                                     35-44
                                                                                                                      35-46
                                                                                                                                                                                         127-46
                                                                                                                                                                                                         127-50
                                                                                                                                                                                                                                            134-40
                               137-84
                                                139-8
                                                                 141-65
                                                                                                   144-32
                                                                                                                    144-34
                                                                                  144-28
                               75-21
138-30#
36-36#
54-7*
ERLEV
                  5-10#
              138-9
EROUT
               36-12
45-81#
ERR
                                                  54-25*
ERRCNT
ERRLEV 36-37#
                               139-14*
```

15# 2-15# 2-29 1-65 1-15* 1-26* 1-34* 1-20# 1-20# 1-30	35-14 60-15 91-18 144-28 44-57 137-41 35-47* 127-48* 137-28* 44-57 137-54 57-29# 46-37 137-95#	35-31 60-17 91-21 144-32 48-25 137-54 35-54* 127-52* 137-43* 87-53	35-36 78-22 127-46 144-34 87-53 44-59* 127-56* 137-56* 126-32	35-40 79-15 127-50 145-48 126-32 45-21# 129-41* 137-75* 127-54	35-44 79-22 129-40 145-52 127-54 49-32* 132-15* 137-87* 132-12	35-46 79-37 132-61 145-54 132-12 54-20* 132-20* 139-9* 132-17	35-52 79-42 134-40 132-17 54-22* 132-51* 141-77* 132-48	48-23 79-53 137-32 132-48 55-12 132-62* 132-64	49-29 79-55 137-47 132-64 55-23* 132-67* 135-12	49-31 80-18 137-60 135-12 56-26* 134-41* 135-17	54-19 80-27 137-72 135-17 57-16* 135-15* 135-38	56-25 80-33 137-84 135-38 87-54* 135-20*	57-14 83-41 139-8 135-43 126-33 135-41
-14# -26 -15* -34* -46* -53# -13 -20# -23# -36# -12 -12 -12 -14	44-57 137-41 35-47* 127-48* 137-28* 44-57 137-54 57-29# 46-37 137-95#	48-25 137-54 35-54* 127-52* 137-43* 87-53	87-53 44-59* 127-56* 137-56* 126-32	126-32 45-21# 129-41* 137-75* 127-54	127-54 49-32* 132-15* 137-87*	54-20* 132-20* 139-9*	54-22* 132-51* 141-77*	55-12 132-62*	55-23* 132-67*	56-26* 134-41*	57-16* 135-15*	87-54* 135-20*	126-33 135-41
15* 1-34* 1-34* 1-53# 1-13 1-20# 1-20# 1-36# 1-36# 1-30 1-12 1-26 1-14	35-47* 127-48* 137-28* 44-57 137-54 57-29# 46-37 137-95# 41-2# 46-14 119-16#	35-54* 127-52* 137-43* 87-53	127-56* 137-56* 126-32	129-41* 137-75* 127-54	132-15* 137-87*	132-20* 139-9*	132-51* 141-77*	132-62*	132-67*	134-41*	135-15*	135-20*	135-41
2-53# 2-41 2-13 2-20# 2-22# 3-23# 3-36# 3-30 2-11# 3-12 3-26 3-11#	44-57 137-54 57-29# 46-37 137-95# 41-2# 46-14 119-16#	87 - 53 48 - 29	126-32	127-54	132-12			132-64	135-12	135-17	135-38	135-43	137-26
-20# -92 -22# -23# -36# -30 -11# -12 -26	46-37 137-95# 41-2# 46-14 119-16#		60-21	91-25									
3-23# 3-36# 3-30 3-11# 3-12 3-26 3-11#	46-14	59-19											
7-11# 3-12 3-26 3-11#	46-14	59-19											
)-26)-11#		,, ,,	61-45	61-47	61-53	73-7	73-20						
2-31 2-56#	99-71 100-15 133-2# 132-58	100-2#											
-4# -66# -42# -15#	132-36												
3-16# 5-51# 0-27	50-11 48-23 80-33	50-14 49-29 83-41	52-28 49-31 84-29	73-9 57-15 91-18	73-17 60-15 132-61	78-22	79-15	79-22	79-37	79-42	79-53	79-55	80-18
-30 5-7 5-36# 1-23 5-38# 5-37# 1)-2	141-56# 36-26# 36-26 63-8 36-29 36-27 89-2# 88-2#	66-2#	76-63										
7-28#	47-32 96-24	96-27#											
7-25*	45-10# 81-16	126 - 8 83 - 30	126 - 32 84 - 40										
5-9 5-38 5-56#	36-29# 56-41# 40-21	44-32	61-52	83-22	90-7	91-10	99-38	99-67	101-26	102-27	133-19	136-16	141-25
3-55#	44-23	44-27	44-50										
	-56# -46## -16## -17# -16## -17# -17# -18-16# -17-20# -27-21 -28# -	2-56# 132-58 1-4# 1-66# 1-42# 1-15# 1-16# 1-17# 1-51# 48-23 1-27 80-33 1-27 80-33 1-30 141-56# 1-30 141-56# 1-30 141-56# 1-30 141-56# 1-36 43-8 1-36 43-8 1-36 47-32 1-15 47-35# 1-28# 47-32 1-15 47-35# 1-28# 47-32 1-25* 45-10# 1-25* 45-10# 1-36 40-21 1-93 145-13 1-93 145-13 1-93 145-13 1-93 145-13 1-57# 44-23	2-56# 132-58 -4# -66# 3-15# 3-16# 50-11 50-14 3-16# 48-23 49-29 3-27 80-33 83-41 3-50# -30 141-56# 3-36# 36-26 -23 63-8 66-2# 3-38# 36-29 3-38# 36-29 3-37# 36-27 3-28# 47-32 3-15 47-35# 3-28# 47-32 3-15 47-35# 3-28# 47-32 3-28# 47-32 3-38# 36-29# 3-38# 36-29# 3-58# 41-36	2-56# 132-58 3-4# 3-66# 3-15# 3-16# 3-17# 3-16# 50-11 50-14 52-28 3-51# 48-23 49-29 49-31 3-27 80-33 83-41 84-29 3-50# 3-30 141-56# 3-7 36-26# 3-36# 36-26# 3-36# 36-26 3-38# 36-29 3-1 88-2# 3-1 88-2# 3-1 96-24 96-27# 3-25* 45-10# 126-8 126-32 3-25# 81-16 83-30 84-40 3-38# 36-29# 3-38 56-41# 3-56# 40-21 44-32 61-52 1-93 145-13 3-57# 44-23 44-27 44-50 3-58# 41-36	2-56# 132-58 -4# -66# -42# -15# -16# 50-11 50-14 52-28 73-9 -51# 48-23 49-29 49-31 57-15 -527 80-33 83-41 84-29 91-18 -50# -30 141-56# -7 36-26# -36-36# 36-26 -23 63-8 66-2# 76-63 -38# 36-29 -37# 36-27 -2 89-2# -15 47-35# -28# 47-32 -21 96-24 96-27# -15 47-35# -28# 47-32 -21 96-24 96-27# -15 47-35# -25* 45-10# 126-8 126-32 -25* 81-16 83-30 84-40 -36-38# -9 36-29# -38 56-41# -56# 40-21 44-32 61-52 83-22 -57# 44-23 44-27 44-50 -55# -55# 41-36	2-56# 132-584#66#42#15#16# 50-11 50-14 52-28 73-9 73-1751# 48-23 49-29 49-31 57-15 60-1550#30 141-56#33	2-56# 132-584#66#42#15#16#17#16# 50-11 50-14 52-28 73-9 73-1751# 48-23 49-29 49-31 57-15 60-15 78-2227 80-33 83-41 84-29 91-18 132-6150#30 141-56#7 36-26#3 36-26#3 63-8 66-2# 76-6338# 36-2937# 36-272 89-2#1 88-2#1 88-2#1 96-30#17 96-30#17 96-30#17 96-30#17 96-30#17 96-30#18 36-29#18 36-29#19 36-25# 81-16 83-30 84-4038# 36-29#38# 36-29#38# 36-29#56# 40-21 44-32 61-52 83-22 90-7 91-1057# 44-23 44-27 44-5058# 41-36	2-56# 132-58 -4# -66# -42# -15# -16# 50-11 50-14 52-28 73-9 73-17 -16# 48-23 49-29 49-31 57-15 60-15 78-22 79-15 -27 80-33 83-41 84-29 91-18 132-61 -30 141-56# -7 36-26# -36-36# 36-26 -23 63-8 66-2# 76-63 -38# 36-27 -2-2 89-2# -15 47-35# -28# 47-35 -28# 47-35 -25# 45-10# 126-8 126-32 -38# 36-29# -38 56-41# -99 36-29# -38 56-41# -99 36-29# -38 56-41# -99 145-13 -56# 40-21 44-32 61-52 83-22 90-7 91-10 99-38 -55# 44-23 44-27 44-50 -55# 41-36	-56# 132-58 -4# -66# -42# -15# -16# -17# -16# 50-11 50-14 52-28 73-9 73-17 -51# 48-23 49-29 49-31 57-15 60-15 78-22 79-15 79-22 -27 80-33 83-41 84-29 91-18 132-61 -50# -30 141-56# -7 36-26# -36 36-26 -23 63-8 66-2# 76-63 -38# 36-29 -37# 36-27 -1 88-2# -11 88-2# -12 96-24 96-27# -17 96-30 -17 96-30 -25 45-10# 126-8 126-32 -21 96-24 96-27# -25 45-10# 126-8 126-32 -25 # 81-16 83-30 84-40 -38# 36-29# -38# 56-41# -56# 40-21 44-32 61-52 83-22 90-7 91-10 99-38 99-67 -93 145-13 -57# 44-23 44-27 44-50 -558# 41-36	-56# 132-58 -68# -68# -68# -68# -68# -68# -68# -15# -16# -17# -16# -17# -16# -51# -51# -51# -52# -52# -52# -54# -65# -65# -65# -65# -65# -65# -65# -65	-56# 132-58 -4# -66# -42# -15# -16# -17# -16# 50-11 50-14 52-28 73-9 73-17 -51# 48-23 49-29 49-31 57-15 60-15 78-22 79-15 79-22 79-37 79-42 -50# -30 141-56# -30 141-56# -30 141-56# -36 36-26 -37# 36-26# -38# 36-29 -37# 36-27 -2 89-2# -1 88-2# -28 47-32 -21 96-24 96-27# -28 47-35 -28 81-16 83-30 84-40 -38# -9 36-29#	-56# 132-58 -4# -66# -62# -15# -16# -16# -16# -16# -16# -16# -16# -16	-56# 132-58 -6# -6# -6# -6# -6# -6# -6# -6# -17# -15# -16# -16# -16# -16# -16# -16# -16# -16

.PRV	REFERENCE	TABLE (REF VOI-C)))	01:12:03									
RBN REV XBN RPRE	3-56# 3-53# 3-54# 3-57# 5-34#	41-38												
ADER BN BYTE	5-62# 41-39 5-54# 81-10 115-8 5-24# 5-30#	44-28* 44-14 81-17 123-14 44-31	44-51* 44-38 82-12 129-19	45-2# 56-45 82-19 132-27	68-28 83-33 134-19	69-18 83-37	70-28 84-9	70 -3 0 84 - 25	71-14 84-44	72 - 13 84 - 45	75-22 106-11	75-26 107-58	76-34 107-85	76-36 108-30
BN BN MEM	5-26# 3-9#	44-45 44-26 7-11	45-93											
RBN SEED KBN	5-29# 45-84# 5-27#	122-9	122-24*											
STRO	54-35 22-2# 88-25 5-13#	54-41# 46-32 91-5	46-36 91-22	48-26 91-24	48-28 127-35	50-57 129-83	55-63 134-72	60-18 137-69	60-20 141-86	64-8	65-9	67-9	67-78	67-90
REV RR	55-60 49-30	55-63# 49-32#												
01	23-39#	55-64 67-11	64-9* 67-80	65-11	67-13	67-92	88-26	91-6						
03 04 05	23-41# 23-42# 23-43#	64-15	67-19	67-45	67-46*									
06	23-44# 23-45# 23-46#	64-12	67-40											
08 09 10	23-47#													
1234	23-48# 23-49# 23-50# 23-51# 23-52# 23-53# 23-55# 23-56# 23-58# 23-58# 23-60# 23-61#													
15	23-52# 23-53# 23-54#													
7	23-55#													
20	23-57# 23-58# 23-59#													
22	23-60#													
25 26	23-62# 23-63# 23-64#													
15 16 17 18 19 20 21 22 23 24 25 26 27 28 28 28 21 21 21 22 23 24 25 26 27 28 28 28 28 28 28 28 28 28 28 28 28 28	23-65#													
RQ 2	23-63# 23-64# 23-65# 23-66# 23-67# 22-19	23-38#	23-68											
TD	45-13# 76-84 8-11#	87-2# 46-21	87 - 55 50 - 28	50-55	50-64	52-18	52-27	87-15	87-21	94-44	95-9	111-11	118-8	120-12

	CROSS F	REFERENCE	TABLE (C	REF V01-0	15)											
	INR INS INSCHR INSEEK INSET INTEDC IRECLB	123-11 36-15 36-10 75-41 6-40# 73-11 7-9# 6-39#	36-31# 36-32# 76-2# 36-32 74-2# 33-9 36-31	126-6* 76-95	126-7*	126-8*										
1	ISUEXT	126-29 124-33	126-35 126-2#	126-37#												
	JMPRET	47-37# 139-23 5-74#	58-12 140-17	74-20 141-122	75-44 142-34	76-98 148-33	87-57	94-88	124-48	127-59	128-40	129-95	134-79	137-96	138-32	
	LASTU	59-19#	61-24*	61-25*	61-46*											
	LBNCYL LBNCYL	5-58# 5-59# 5-23# 45-79#	57-36 75-19 76-73	87-42 75-29 76-76	75-33	75-38	90-14	119-11	119-14	141-16						*
	LBNHLD LBNHST LBNTRK LEVNZR	5-39# 5-37# 139-7	77-36 43-9 139-14#	77-39 44-13	79-29 44-37	79-39* 76-35	79-41*	79-42	79-42	80-23	80-27	80-27	143-19	143-21		
	LINK LINKLN LNCONT LNCYL LOADED	39-27 3-70# 44-24 44-17 47-22	40-2# 40-14 44-28# 44-25# 47-34#	40-25	60-9	60-23	60-25									
	LOBYTE	5-55#	4. 54													
	LOCYL	36-33# 35-17	36-14#	55-33												
	LONGTO	5-6# 45-83#	75-32 122-8	122-16	122-23*											
İ	LOW	5-70# 44-21*		44-40*		45-7#										
-		112-9	112-24	116-2#	44-57											
	M.PARM MASK MASKLO	45-82# 97-19 97-25	46-19* 97-30 97-29#	46-2)* 98-2#	46-31* 107-10	50-26* 107-21	50-53* 107-67	52-16* 107-84	52-25*	57-40*	87-25*	108-23*				
	MASKLP MAXDBN MAXDST MAXMUM MAXSEC MBXFER	98-9# 59-22# 45-49 97-56 39-7* 55-10	98-12 77-44 45-53 99-43 39-28* 55-61#	77-46 45-57 99-84 45-18#	79-45 45-61 101-31	79-55 45-65 102 - 32	79-55 45-77# 123-2#	80-30	80-33	80-33	82-28*	82-29*				
- 1	MEDTYP MEMPOL MESSAG MICREV	5-35# 39-15 6-16#	45-93# 46-32	60-5 50-57	66-6*	66-7										
	MKLOOP MODOK MODOKO MORE MOV2	5-12# 73-8# 36-6 56-63 56-28 88-11# 101-18	73-21 36-22# 56-67 56-34 88-23 102-18 44-35# 44-34 22-16 93-5#	56-70# 56-40 106-2#	56-43	56-52	56-61	56-71#								
	MOVDBN MOVOUT MRD MS1	44-12 44-7 4-17# 50-57	44-35# 44-34 22-16 93-5#	44-52#												
-																

			REF V01-0	5)	01:12:03	PAGE 3-0								SEW 0470
MS2 MWR NEWDNT NEWEXT NEWLEV NEWSUB	46-32 4-18# 110-8 139-13 138-29 8-14#	93-7# 22-21 112-8 139-22# 139-2# 50-13	114-2#	74-7	94-46	94-48	94-56	95-12	99-9	99-11	99-56	99-58	101-14	102-14
	109-8 109-10	109-20 111-8 102-2#	110-6 113-2#	110-18	111-6	112-6	113-19	114-34	117-8	77-11	77-30		101-14	102-14
NHCFL NLBEXT NLEV NOBB NOBBS	135-35 99-44 138-12 67-82 65-15#	135-48# 99-46# 138-29# 67-105#												
NOBES NOBORO NOCARY	64-13 97-9 97-38	64-21# 97-11# 97-40#												
NOERR NOEXTR NOHCFL NORCLB	132-45	47-45# 67-93# 132-69# 57-33#												
NORTDS NOSEEK	49-13 124-32	49-15	49-20#											
NOSUB NOSUN NOTOUT	47-13 62-12 132-47	47-48# 62-18# 132-53#	49-38											
NOU NOUNIT NRTDS NSTATE	61-10 46-18 49-27 54-12	61-21 46-22 49-31# 54-19#	61-39# 46-26#											
NTOUT NUMBB NUMOVL	135-37 59-21# 45-68#	135-43# 65-12* 88-9	67-81	67-98										
NUMPTR		35-31# 44-57 44-58#	35-36# 44-5? 46-32#	35-40# 44-57 48-23#	35-44# 44-57 49-29 56-25	35-46# 44-57# 49-29 56-25	35-52# 44-57# 49-29# 56-25	35-53 44-57# 49-29# 56-25	35-53 44-57# 49-31#	35-53# 44-57# 50-57#	35-53# 44-58 54-19#	44-57 44-58 56-25	44-57 44-58 56-25	44-57 44-58 56-25 56-25#
108	56-25 56-25# 56-39	56-25 56-25# 56-39#	56-25 56-25# 56-39#	56-25 56-25# 56-51	56-25 56-25# 56-51	56-25 56-25# 56-51#	56-25 56-25# 56-51#	56-25 56-25# 56-60	56-25 56-26 56-60	56-25 56-33 56-60#	56-25 56-33 56-60#	56-25 56-33# 56-68	56-25 56-33# 56-68	56-59
	56-68# 76-93#	57-15# 78-22#	57-22 79-15#	57-22 79-22#	57-22# 79-37#	57-22# 79-42	60-15# 79-42	75-11 79-42	75-11 79-42	75-11# 79-42#	75-11# 79-42#	76-93 79-42#	76-93 79-53#	56-68# 76-93# 79-55
	79-55 80-33 84-29#	79-55 80-33 87-53#	79-55 80-33 87-54	79-55# 80-33 91-18#	79-55# 80-33# 126-32	79-55# 80-33# 126-32	80-18# 80-33# 126-32	80-27 83-41 126-32	80-27 83-41 126-32	80-27 83-41 126-32	80-27 83-41 126-32	80-27# 83-41# 126-32	80-27# 83-41# 126-32	80-27# 83-41# 126-32
	126-32 127-46 127-47	126-32 127-46 127-47	126-32# 127-46 127-47#	126-32# 127-46 127-47#	126-32# 127-46 127-47#	126-32# 127-46 127-48	126-32# 127-46# 127-50	126-32 126-32# 127-46# 127-50	126-32# 127-46# 127-50	126-34 127-46#	126-36 127-47 127-50	126-36 127-47	126-36# 127-47 127-50#	126-32 126-36# 127-47 127-50#
	127-50# 127-54 127-55#	127-50# 127-54	127-51 127-54	127-51 127-54	127-51 127-54#	127-51 127-54#	127-51 127-54#	127-51 127-54#	127-51# 127-55	127-50 127-51# 127-55	127-51# 127-55	127-50 127-52 127-55	127-54 127-55	127-54 127-55
	127-55# 129-40# 132-13	127-55# 129-40# 132-13	127-55# 129-40# 132-13	127-56 132-12 132-13	129-40 132-12 132-13	129-40 132-12 132-13#	129-40 132-12 132-13#	129-40 132-12 132-13#	129-40 132-12 132-14	129-40 132-12#	129-40 132-12# 132-14	129-40 132-12# 132-14	129-40# 132-12# 132-14	129 - 40# 132 - -13
	132-14 132-17#	132-14 132-17#	132-14# 132-17#	132-14# 132-18	132-14# 132-18	132-14# 132-18	132-15	132-17 132-18	132-17	132-14 132-17 132-18#	132-17 132-18#	132-17 132-18#	132-17 132-19	132-14 132-17# 132-19
	132-19 132-48 132-49	132-19 132-48 132-49	132-19 132-48# 132-49	132-19 132-48# 132-49#	132-19# 132-48# 132-49#	132-19# 132-48# 132-49#	132-19# 132-48# 132-49#	132-20 132-49 132-49#	132-48 132-49 132-50	132-48 132-49 132-50	132-48 132-49 132-50	132-48 132-49 132-50	132-48 132-49 132-50	132-48 132-49 132-50
							132 17"		.52 50	.52 50		132 30	.52 50	132 30

		TABLE (C		5)	01:12:03	PAGE 3-9								3EG 0477
	132-50# 132-64# 132-65 132-66# 134-40# 135-13 135-14# 135-17# 135-38# 135-39 135-40# 135-43# 135-44# 137-26 137-27 137-41 137-26 137-55 137-72 137-73 137-72 137-73 137-74 137-84# 141-66 141-75 141-75 141-75 141-75 141-75 141-76 144-32# 144-32# 145-52 148-16#	132-50# 132-64# 132-67 135-12 135-13 135-14# 135-18 135-19 135-39# 135-39# 135-41 135-44 137-26 137-27 137-41 137-42 137-55 137-72 137-73 137-74 137-85# 141-65 141-75	132-50# 132-64# 132-65# 134-40 135-12 135-13 135-14# 135-39# 135-39# 135-39# 135-44 135-45 137-27 137-27 137-41 137-42 137-55 137-72 137-73 137-74# 137-85# 141-65 141-75# 141-75# 141-75# 141-75# 141-75# 141-75# 141-75# 141-75# 144-32# 144-32# 145-52#	132-51 132-64# 132-65# 134-40 135-12 135-13# 135-13# 135-13# 135-39# 135-39# 135-45 137-27 137-27 137-41 137-42 137-55 137-72 137-73 137-74 137-85# 141-65 141-76	132-61# 132-64# 132-65# 134-40 135-12 135-13# 135-13 135-18 135-39# 135-39# 135-44 135-45 137-27 137-41 137-42 137-41 137-55 137-72 137-73 137-84 137-85 137-86 141-66 141-75 141-76	132-62 132-65# 134-40 135-12 135-13# 135-17 135-18 135-20 135-39# 135-39# 135-43 135-44 137-27 137-27 137-27 137-27 137-54 137-55 137-72 137-73 137-86 141-65 141-65 141-75 141-75 141-76# 144-28# 145-48 145-48	132-64 132-65 132-66 134-40 135-12 135-14 135-17 135-18 135-39 135-40 135-43 135-45 137-27 137-27 137-27 137-54 137-55 137-72 137-86 141-65 141-75 141-76	132-64 132-65 134-40 135-12# 135-13 135-13 135-13 135-39 135-40 135-43 135-44 137-27# 137-26# 137-27# 137-34# 137-34# 137-384 137-72# 137-85 137-86 141-65 141-65 141-75 141-76 141-76 141-76 141-76 141-76 141-76 141-76 141-76 141-76 141-76 141-76 141-76 141-76	132-64 132-65 134-40 135-12# 135-14 135-17 135-18# 135-39 135-40 135-43 135-44 137-26# 137-27# 137-27# 137-38# 137-55# 137-72# 137-73# 137-73# 137-85 137-86# 141-65 141-75 141-75 141-76 144-28 144-32 144-34 145-48# 145-54#	132-64 132-65 134-40 135-12# 135-13 135-14 135-18# 135-39 135-40 135-43 135-44 137-26# 137-26# 137-27# 137-54# 137-55# 137-72# 137-73# 137-84 137-85 137-86# 141-66# 141-75 141-75 141-76 144-28 144-32 144-34 145-48# 145-54#	132-64 132-65 132-66 134-40# 135-12# 135-14 135-17 135-19 135-39 135-39 135-43# 137-26# 137-26# 137-27# 137-24# 137-55# 137-72# 137-73# 137-73# 137-73# 137-73# 137-73# 141-65# 141-75 141-75 141-75 141-76 144-32 144-34 145-48# 145-54#	132-64 132-65 132-66 134-40# 135-13 135-14 135-19 135-39 135-39 135-40 135-44# 135-46 137-27 137-27# 137-27# 137-27# 137-38 137-38 137-38 137-38 137-38 137-38 137-38 137-38 137-38 137-38 137-138 137	132-64 132-65 132-66# 134-40# 135-13 135-14 135-17# 135-39 135-39 135-40# 135-43# 137-26 137-27 137-41 137-26 137-27 137-73 137-74 137-84 137-85 141-75 141-75 141-75 141-75 141-75 141-76 144-28 144-32 144-34 145-52 148-16	132-64 132-65 132-66# 134-40# 135-13 135-14 135-17# 135-39 135-39 135-39 135-44# 137-26 137-27 137-41 137-26 137-27 137-41 137-55 137-72 137-72 137-73 137-74 137-84# 137-85# 140-10# 141-75 141-75 141-75 141-75 141-76 144-28 144-32 144-34# 145-52 148-16#
NXTRCT NXTSEC OK2DRP ONEPAT ONEPAX ONEREG ONL ONLERR ONLOK ONLYCL OTABLE OUT.01	142-33 94-52 57-21 131-13 141-37 97-17 36-11 87-46 56-32 8-32# 45-23# 22-22 49-31* 79-22* 127-46* 135-38* 145-48* 23-7# 35-52* 56-25* 79-42*	147-2# 95-2# 57-24# 131-21# 141-47# 97-28# 36-38# 87-53# 56-35# 67-49 45-68 22-23 50-57* 79-37* 127-50* 135-43* 145-52* 35-14* 44-57* 57-15* 79-53*	76-44 47-19 23-6# 54-19* 79-42* 127-54* 137-26* 145-54* 35-14* 44-57* 57-15* 79-53*	79-35 47-25 35-14* 55-62* 79-53* 129-40* 137-41* 35-31* 46-32* 60-15* 79-55*	79-51 43-8 35-31* 56-25* 79-55* 129-83* 137-54* 35-31* 48-23* 60-15* 79-55*	48-11 35-36* 57-15* 80-18* 132-12* 137-69* 35-36* 48-23* 78-22* 80-18*	48-15 35-40* 60-15* 80-27* 132-17* 137-72* 35-36* 49-29* 78-22* 80-18*	88-8* 35-44* 64-6* 80-33* 132-48* 137-84* 35-40* 49-29* 79-15* 80-27*	88-10 35-46* 65-7* 83-41* 132-61* 139-8* 35-40* 49-31* 79-15* 80-27*	35-52* 67-7* 84-29* 132-64* 141-65* 35-44* 49-31* 79-22* 80-33*	44-57* 67-76* 87-53* 134-40* 141-86* 35-44* 50-57* 79-22* 80-33*	46-32* 67-88* 91-18* 134-72* 144-28* 35-46* 54-19* 79-37* 83-41*	48-23* 78-22* 126-32* 135-12* 144-32* 35-46* 54-19* 79-37* 83-41*	49-29* 79-15* 127-33* 135-17* 144-34* 35-52* 56-25* 79-42* 84-29*

45-95#

PATPTR

131-8

141-32

```
UDAT4 DISK EXERCISER MACRO X04.00 9-JUL-81 01:12:03 PAGE S-11 CROSS REFERENCE TABLE (CREF V01-05)
   148-2#
OVE.CK 137-2#
OVE.MN 2-39#
OVE.MS 92-9#
                                        148-35
142-2
92-9
                                                             148-35#
  OVE.MN 2-39#

OVE.MS 92-9#

OVE.R 134-2#

OVE.RB 148-2#

OVE.RV 142-2#

OVE.RW 128-2#

OVE.SK 124-2#

OVE.ST 94-1#

OVE.TS 127-2#

OVE.W 129-2#

OVE.W 129-2#

OVE.W 2-39

134-2

OVI. CK 45-59
                                           94-1
                                        137-2
148-35
148-2
129-2
127-2
124-2
124-2
134-2
                                      2-39#
134-2#
142-2
2-39
94-1
137-2
148-35
148-2
129-2
127-2
124-2
124-2
134-2
48-2#
                                                                                  92-9#
137-2#
142-2#
92-9
94-1#
                                                             92-9
137-2
142-2
92-9
94-1
137-2
148-35
148-2
129-2
127-2
124-2
128-2
134-2
                                                                                                                                                                      124-2#
                                                                                                                                                                                           127-2
148-35
                                                                                                                                                                                                               127-2#
148-35#
                                                                                                                                                                                                                                                          128-2#
                                                                                                                                                                                                                                                                               129-2
                                                                                                                                                                                                                                                                                                   129-2#
                                                                                                                                                                                                                                    128-2
                                                                                                        142-2
                      45-59
45-26
45-55
45-67
45-63
45-47
45-39
    OVL.CK
                                                                                                          92-9#
    OVL.MN
    OVL.MS
                                                                                  137-2#
148-35#
148-2#
129-2#
127-2#
124-2#
128-2#
134-2#
    OVL.R
    OVL.RB
    OVL.RV
    OVL.RW
   OVL.SK
OVL.ST
OVL.TS
OVELW 45-51
OVRLAY 47-23
OVS.CK 137-2#
OVS.MN 2-30
                      45-43
   OVS.MN 2-39#
OVS.MS 92-9#
OVS.R 134-2#
    OVS.RB 148-2#
    OVS.RV 142-2#
   OVS.RW 128-2#
OVS.SK 124-2#
OVS.ST 94-1#
OVS.TS 127-2#
    OVS.W 129-2#
                                           88-6
    OVSTRT
                        3-10#
                                                                88-7
                                           45-114#
    PATO
                       45-95
    PAT1
                       45-96
                                           45-131#
                                          45-209#
45-226#
45-228#
45-245#
45-266#
45-133#
                     45-105
45-106
45-107
45-108
45-109
    PAT10
    PAT11
    PAT12
PAT13
    PAT14
                      45-110
    PAT15
                      45-97
    PAT2
PAT3
                       45-98
                                            45-135#
                       45-99
                                            45-137#
    PAT4
                                           45-154# 45-171#
                      45-100
    PAT5
    PAT6
                      45-101
                       45-102
                                            45-188#
    PAT7
                                           45-190#
                       45-103
    PAT8
                                         45-207#
    PAT9
                       45-104
    PATEXT 119-8
```

			1000		-	
-	-	~	_		0	
•	•		0	L	ж	ù
_	_	w	·	_	u	E

122-2#

145-25

UDAT4 D	ISK EXER	CISER MAC	RO X04.00	9-JUL-81	01:12:0	3 PAGE S-1	2 D	6					
PATTRN PLOAD PNUM	94-62 47-29 45-78#	119-2# 47-33# 141-17*	141-31	141-75									
PREVBE PTABLE RANDOM	99-45 45-69# 96-18 123-13	101-2# 45-77 97-20	47-21 97-26	47-24* 97-31	47-31* 107-11	47-34 107-17	48-10 107-22	107-68	107-86	118-12	119-13	120-16	121-16
RBLOCK RBNBN RBNFLG RBNTRK RBUFLN RCBREQ	134-56 8-18# 44-8* 5-31# 3-69# 56-62	135-2# 39-8 44-18* 43-7 41-18 56-74#	41-31 44-57 44-19 60-9 57-33*	44-16 45-8# 44-35	94 - 32 76 - 33	117-8	125-8	129-36	129-43	129-79	134-36	134-43	141-107
RCLB RCMPER RCONT	8-23#	128-18 141-75#	128-38	148-21									
RCTCPS RCTCSZ RCV	5-8# 5-40# 4-8#	75-36 144-40 35-24	147-12 55-40	56-22	89-30								
RCVERR RCVRDY RDMOD RDSTAT	6-23# 6-21# 128-29 21-2#	21-17 49-14 128-31 34-3	56-10 128-34# 89-12	89-15									
RDWRT READ RECALB RECOVE	58-8 128-34 129-27 54-18	128-10# 134-10# 134-27 54-26	140-14 134-67 148-11# 54-36#	138-26 148-18									
RECOVR REDEXT	50-39 134-49	54-36 134-75#	56-2#	87-44									
REDSET REDWRT REPERR	58-2# 8-19# 49-36	124-44 40-9 54-21	127-38 41-7 55-2#	94-40 57-17	94-76	117-8	118-15	119-7	120-8	121-10	128-28		
REPORT RESEEK RETRY RETS	54-9 8-12# 8-22# 5-7#	54-21# 50-13 94-32 75-14	54-39 125-21 94-4)	127 - 25 117 - 8	139 - 18 128 - 20	148-21 128-38	129-74						
REVET REVECT	129-64 8-17# 5-63#	134-78 117-8	142-11# 129-62	134-36	134-61	134-76	146-7						
REVIND	8-20# 5-16#	117-8	128-30	142-14	143-7	146-7							
REVSUP	142-25 142-16 135-27 5-32#	144-2# 143-2# 135-31	135-33	135-50#									
RNDO RNDBE RNDLPO RNDLP1 RNDSUB	119-10 95-16 97-20# 97-31# 50-66	119-13# 96-2# 97-24 97-34 53-1#	119-15										
RNDTG RONLY ROOT ROOTLP	95-18 8-29# 46-14# 46-16#	107-2# 87-33 60-29 46-38	118-10										
RORW ROTEXT ROUT	94-61 46-25 135-16	118-2# 46-28 135-21	46-34 135-42	46-38# 135-47	135-49	135-51#							

UDAT4 CROSS	DISK EXER REFERENCE	CISER MAC	RO X04.00	9-JUL-81	01:12:03	PAGE S-1		6						SEQ 0483
RREAL RSTOP RTDS RTDSE	3-44# 3-40# 34-2# 127-19	41-14 41-16 49-11 127-50#	54-10	55-16	56-7	127-17	132-6	135-6						
RTDSEX RTRIES RUN	34-6 8-31# 36-16	34-8# 129-23 36-30#	134-23	137-29	137-44	137-57	138-8							
RVFAIL	144-35	145-27	145-55	146-2#										
RW.ANG RW.BUF RW.CMD RW.HI RW.LOW	3-29# 3-32# 3-31# 3-30#	41-27* 41-23* 41-10* 41-40* 37-10	137-65 41-15* 132-48 41-29*	137-80 132-49 132-64 132-48	141-14 132-65 133-12* 132-64	145-7 135-39 135-38 133-11*	135-44 135-43 135-38	137-27 136-11* 135-43	137-42 137-26 136-10*	137-55 137-41 137-26	137-73 137-54 137-41	137-85 137-72 137-54	141-66 137-84 137-72	141-65 137-84
RW.SDI RW.STA RWEXT RWRDY S.BADP S.BESS	141-65 3-33# 3-28# 128-33 6-26# 7-62# 7-63# 77-31* 99-13	41-25* 41-22* 128-36 127-22 7-63 7-68 77-38* 99-60	137-16 128-38# 132-9 37-8 64-14 77-42* 100-7	135-9 67-83* 67-17 77-45*	67-105* 67-43 77-47*	70-6 68-6 79-9	80-8 68-8 79-11	77-8 84-55	77 - 9 84 - 57	77-14* 84-58	77-16* 84-62	77-17 84-68	77-20 96-9	77-30* 96-30
S.MCNT S.MEGR	7-68# 7-60#	7-69 7-61	107-8 76-19*	107-14	107-20 141-119*	107-24	113-7	113-9	114-10	114-12				
S.MEGW S.PARM	7-61# 7-55# 67-50* 87-32	7-62 7-56 67-61* 94-43	76-18* 41-33 76-29 95-8	129-85 44-10 76-41 107-53	129-89* 47-41 76-55 108-7	132-33 47-43* 77-33 108-22	132-34* 50-24 79-26 118-6	50-46 79-32 120-7	50-56* 79-48 121-6	51-13 80-20 123-10	52-14 83-27 129-22	53-17 84-37 134-22	57-37 85-8 137-23	67-16* 87-14 138-7
S.PAT S.SCHR	7-57# 7-59# 144-39	7-58 7-60 147-11	67-12* 43-6	119-9	44-53	67-107*	76-15	76-64*	76-72	107-56	108-28	115-6	132-25	143-11
S.SDCL S.TGOF S.TGSS S.TRKL SBCRES	7-56# 7-69#	7-57 7-70 64-11 7-59 36-8	44-41 83-21 67-37 76-33*	44-43 83-23* 83-13 107-52	76-75* 84-6 84-62 108-21	76-79* 84-57 84-68 111-13	84-58 107-40 112-16	107-30 109-27 116-10	113-11 110-22	113-13 113-15	114-8 114-14	114-9 114-21		
SCR SCTWRD SDIVER	36-8 7-8#	36-27# 131-9	141-42	141-51										
SEARCH SECCYL SECGRP SECMAX SECPTR	142-28 59-26# 59-25# 45-16# 40-13*	145-2# 78-17 81-14* 60-13* 41-12	81-21* 81-18 94-78 45-19#	82-13 82-20 94-80 130-18	85-12					•				
SECTOR SECTRK SEEK SEKCNT	59-24# 94-86 127-29	45-12# 76-37* 124-10# 127-37#	81-11 124-46	85-14 127-57	143-26	144-47	147-24	148-32						
SEKEXT SEKINP SEKOUT	124-43	124-48#	87-48	124-37	127-25									
SEKOUT SEKTST SEND SEQBE SEQLP	124-45 124-42 4-7# 95-22 47-11#	124-47# 127-10# 35-11 99-2# 47-46	127 - 43 55 - 30	89-23										
SEQNCR SEQSEK	46-23	47-2# 50-64	73-13	95-9	123-11									

UDAT4 CROSS	DISK EXER	CISER MACE	RO X04.00	9-JUL-81	01:12:03	3 PAGE S-1		0						SEQ 0484
SEQTG SERO SER1 SER2 SER3 SER4 SER5 SER6 SER7 SER8 SER9	95-25 56-39 56-51 56-33 56-60 92-314# 76-93 57-22 56-68 75-11 92-324#	92-316# 92-318# 92-320# 92-322#	148-16											
SETRL SETSE SETUP SHRTT SLOP SMASK SMASK	75-10 111-9 47-44 0 5-3# 62-11# 76-21 L 86-11#	75-14# 111-25 49-16 75-28 62-21 86-2# 86-14	115-2# 87-50	116-6 94-10#	94-58	129-47	129-76	129-84	134-47	138-20	141-120	146-18		
SMASK SMLSU SNDAG SNDEX SNDEX SNDLE SORTB SORTB	X 86-11 B 141-68 N 22-14# 140-13 T 35-16 V 139-20 B 67-103 E 67-74	86-15# 141-72# 22-18 140-17# 35-48 140-2# 70-2# 68-2# 72-2#	35-51 140-11	35-55#										
SS	5-9# 36-5 56-20 75-28 80-27	36-6 56-25 75-32 80-27	36-7 56-25 75-36 81-9	36-8 56-25 76-33 81-16	36-9 56-25 76-35 82-10	36-10 56-25 76-61 82-18	36-11 56-25 77-36 83-30	36-12 56-25 77-39 83-32	36-13 56-44 79-29 84-40	36-15 57-11 79-39* 84-42	36-16 57-34 79-41* 90-5	36-40# 75-14 79-42	55-53 75-21 79-42	56-14 75-24 80-23
ST.C ST.CO ST.DB ST.DF ST.ER ST.FE ST.FO ST.MO	4-47# 4-44# 4-37# 4-28# 4-41# 4-46# D 4-27# K 4-25#	56-44 57-34												
ST. OA ST. PE ST. PS ST. RE ST. RT ST. RU ST. ST ST. SR ST. ST	4-43# 4-39# 4-42# 4-36#	57-12 57-30 57-12 57-12												
ST.ST ST.UN ST.WE STACK STACY START	20-8 L 44-30*	57-11 30-5# 44-33* 60-1#	44-42*	44-44*	44-58	44-58	45-5#							

CROSS F	ISK EXER	CISER MAC	RO X04.00	9-JUL-81	01:12:03	PAGE S-1	5							SEQ 0485
STSERX STSEXT STSRES	127-40	21-18 21-14 21-17# 21-9 127-41# 127-53 127-45 36-9	21-22# 21-20 127-57# 127-59#											
SUB SUBUNT SUSETL SWAPBB SWAPBE T1MSIZ T2CMD	5-22# 36-28# 61-48# 70-14 68-14 6-3# 6-5#	76-22* 61-54 71-2# 69-2#												
T2DLL T4BB1 T4BB2	6-4# 6-8# 6-9#	65 - 8 67 - 89	67-77											
T4MPRM T4MXFR T4SEEK	6-6# 6-12# 6-11#	88-24 55-9 127-34	55-61	129-92	141-117									
T4SOFT T4UPRM	6-10#	129-83	134-72 67-8	137-69	141-86									
TALKOK	35-2# 140-9	56-30 140-14#	56-36	56-48	56-57	56-65	57-19	75-8	76-25	126-10	140-7			
TEST4 TGS THREBE TIMEOU	2-37# 59-27# 96-22 5-61#	24-1 83-12 96-25#	83-34	84-5	84-43									
TLEN.U TMEMPL TMPERR	7-10# 39-15* 126-31	7-11 42-6* 126-36#	61-22 42-7	45-94#										
TO TOOBIG	75-30 5-69#	75-34	75-46#											
TRACK TRACKS TRKGRP TROOT TRYAGN TSTNEC	41-6 8-36# 5-28# 60-4 96-18# 124-19	45-11# 83-28 81-9 73-2# 96-26 125-2#	126-32 84-38 83-32	85-10 84-42	107-54 107-57	108-10 108-29	108-16 115-7	108-25						
U.CBN	56-59 7-41# 132-12 143-20* 147-7	56-62# 7-42 132-12 143-24* 147-8	39-13 132-17 144-28 147-21*	39-14 132-17 144-28 147-22*	94-23 133-7 144-32	94-25* 133-8 144-32	94-27 134-40 144-34	94-29* 134-40 144-34	94-66* 135-12 144-41	94-68* 135-12 144-42*	125-13 135-17 144-44	125-14 135-17 144-46*	129-40 136-7 146-13*	129-40 136-8 146-17*
U.CCNT	7-22#	7-23 7-45	109-12 143-15*	109-14*	109-16 144-38*	109-23* 147-9	110-10	110-12*	110-14	110-21*	113-8*	113-10*	114-11*	114-13*
U.CCYL	7-48# 132-13 135-44	7-49 132-13 135-44	39-21 132-18 137-27	39-23 132-18 137-27	74-16* 132-49 137-42	74-17* 132-49 137-42	125-23 132-65 137-55	126-13 132-65 137-55	127-47 135-13 137-73	127-47 135-13 137-73	127-51 135-18 137-85	127-51 135-18 137-85	127-55 135-39 141-66	127-55 135-39 141-66
U.CGRP	148-28* 7-49# 135-44	148-29* 7-50 137-27	39-25 137-42	74-18* 137-55	127-47 137-73	127-51 137-85	127-55 141-66	132-13 148-30*	132-18	132-49	132-65	135-13	135-18	135-39
U.COPY U.CSEC U.CTRK U.ECCT	7-43# 7-28# 7-24# 7-34#	7-44 7-29 7-25 7-35	75-40* 50-19* 111-14 75-27*	144-23 50-50* 111-17* 137-51	94-18 112-11 144-17	94-22* 112-14*	94-70* 115-9*	94-74	142-18	146-11				

UDAT4 I	DISK EXER REFERENCE	TABLE (C	RO X04.00	9-JUL-81	01:12:03	PAGE S-1	6							SEQ 0486
U.ELEV U.LCYL U.LGRP U.MASK	7-31# 7-50# 132-50 7-10 7-29#	7-32 7-51 132-66 7-51# 7-30	58-7* 126-17 132-66 127-46 34-2	137-34* 127-46 135-14 127-50 35-8	137-49* 127-46 135-14 127-54 54-27	137-62* 127-50 135-19 132-14 55-27	137-77* 127-50 135-19 132-19 56-13	137-89* 127-54 135-40 132-50 61-26*	139-6 127-54 135-40 132-66 132-24	139-11* 132-14 135-45 135-14 135-23	139-16* 132-14 135-45 135-19	141-79* 132-19 135-40	141-80 132-19 135-45	132-50
U.MBN	7-40# 107-78* 111-33* 116-17*	7-41 109-31 111-35 142-19	94-65 109-32* 111-37* 142-21	94-67 109-34 112-15 146-12	97-57 109-36* 112-17* 146-14	99-19 110-30 112-19	99-48 110-32* 112-21*	99-50* 110-35 113-12*	99-52 110-37* 113-14*	99-54* 111-18 114-31*	99-62 111-19* 114-32*	100-9 111-21 116-12	103-8 111-23* 116-13*	107-75* 111-31 116-15
U.MLEV U.MSEC U.NEXT	7-33# 7-26# 7-15#	7-34 7-27 7-16	58-6 39-7 46-16	75-23* 94-35* 61-51	141-82 94-85* 73-19	129-71*	134-66*	138-23*	143-17*					
U.NFUN U.NSEC	7-20# 7-25# 138-15	7-21 7-26 141-87	47-10 50-20* 141-89*	47-47* 50-51* 145-29*	73-12* 58-10* 146-10*	94-19	94-24	129-46*	129-68	132-32*	132-40	132-42*	132-69	134-46*
U.PARM	7-38# 52-24 87-7 99-12* 114-35* 127-24 134-44* 145-26*	7-39 52-31* 87-20 99-59* 117-6 127-26* 134-60 146-6	39-6 53-21 87-22* 101-13 117-9* 128-17 134-62* 146-8*	40-6 53-23* 87-47 101-15* 118-7 128-39* 134-75 148-20	44-15 54-15 87-49* 102-13 118-16* 129-35 138-17 148-22*	46-17 57-24 94-31 102-15* 119-6 129-42 138-19*	49-33 57-26* 94-37 108-6 120-6 129-44* 139-17	49-35* 73-10* 94-41* 109-19 120-20* 129-58 139-19*	50-10 73-16 94-49* 109-21* 121-9 129-63* 141-7	50-15* 73-18* 94-55 110-17 121-19* 129-75* 141-106	50-84 74-6 94-75 110-19* 124-36 129-78 141-108*	50-86* 74-8* 95-11 113-18 124-38* 129-80* 142-13	51-19 76-89 95-13* 113-20* 125-7 134-35 143-8*	51-21* 76-91* 99-6 114-33 125-20 134-42 145-24
U.PAT U.PCTG U.RBN	7-21# 7-23# 7-42# 134-40 137-84 7-32#	7-22 7-24 7-43 134-40 137-85 7-33	119-16* 109-24 39-10 135-38 141-65 75-20*	130-7 109-30* 39-11 135-39 141-65 138-11	131-7 110-24 94-71* 135-43 143-13*	110-33* 94-72* 135-44 143-14*	113-17* 125-10 137-26 145-18	114-29* 125-11 137-27 145-19*	129-40 137-41 145-21	129-40 137-42 145-23*	132-48 137-54 145-38	132-49 137-55 145-39*	132-64 137-72 145-41	137-65 137-73 145-43*
U.RVER U.RWER U.RWTO U.SDIL U.SDIS U.SEEK	7-46# 7-45# 7-18# 135-17 7-36# 7-35# 7-19#	7-47 7-46 7-19 135-38 7-37 7-36 7-20	143-10* 129-38 128-25* 135-43 35-21 35-17 74-10*	144-25 129-51* 129-16 138-25* 55-37 55-35 127-27	145-45 132-37* 129-20* 148-23 74-13* 74-12* 127-37*	134-38 129-81 148-26* 75-35* 75-31*	134-51* 132-12	135-28* 132-17	143-9 132-48	132-64	134-16	134-20*	134-70	135-12
U. SUBP U. SUBU	7-47# 7-16# 7-39# 129-83	7-48 7-17 7-40 132-54	46-32 50-16 46-32 134-72	50-57 50-37 50-34* 137-69	55-6 50-42 50-44 141-86	61-29 51-5 50-57	62 - 8 52 - 5 50 - 58	127 - 30 53 - 6 50 - 68	129-83 62-6 51-15*	134-72 76-8 52-20*	137-69 87-10 53-8	141-86 87-25 53-25*	55-7	127-32
U.TIMO	7-17# 138-10	7-18 138-14*	49-22 141-84	49-24*	54-30*	124-40*	127-41	127-44*	128-37*	137-26	137-41	137-54	137-72	137-84
U.TSEC U.WPRT	7-27#	7-28	50-21* 57-42	50-52* 87-43*	94-20	94-73	99-46	103-10	107-91*	108-35*	123-19*			
U.WRIT UCURSR	7-30# 59-18#	7-38 7-31 62-13*	56-53 64-6	57-43* 65-7	132 - 53 67 - 7	67-76	67-88							
ULOP UMASK UNITO UNIT1	61-9# 59-20# 5-46# 5-47#	61-44	61-39	61-41*										
UNITZ UNIT3 UNITS UNSSUC UP UPEXT UPG	5-48# 5-49# 59-15# 6-42# 99-8 103-14 108-20	61-8 99-56# 103-18# 111-2#	61-43	89-7	91-7	91-16								

1	UDAT4 DISK EXER CROSS REFERENCE	TABLE (C	RO X04.00 REF V01-0	9-JUL-81 05)	01:12:0	3 PAGE S-	17	
1	UPLBN 99-70 UPT 108-18 UREAD 4-14#	103-2# 109-2# 48-16	111-39					
	USED 59-23# UTOTST 6-13# UWRITE 4-15#	76-11* 91-4	76-14*	76-87*				
1	WAITSI 4-13# WBLOCK 129-57	132-28 132-2#	135-24					
	WBLFLN 3-68# WCHECK 8-37# WCHK 94-63 WCHKAL 8-39#	3-69 50-14 120-2# 120-14	40-11 94-38	60-23 94-40	117-8	120-10	120-19	121-12
	WEXT 132-36	132-43 118-8	132-70	132-73#				
	WONLY 8-30# WOUT 132-16 WREAL 3-43# WRITBT 36-23#	132-21 41-9 56-55*	132-52	132-63	132-68	132-72	132-74#	
	WRITE 128-32 WRONG 5-65#	129-10#	129-72					
	WRTEXT 129-30 WSTOP 3-38# WTIMOT 132-60 XBNCYL 5-41# XFERRT 5-5#	129-49 41-11 132-64# 76-74	129-67	129-95#				
	XMTERR 6-25# XOPLP0 141-34# XOPLP1 141-38# XOPLP2 141-48#	21-11 141-46 141-45 141-52						
1	XREAD 4-5# XWRITE 4-6# ZEREDC 33-23	135-25 132-29 33-25#						

UDAT4 D	ISK EXER	CISER MAC	RO X04.00	9-JUL-81	01:12:03	PAGE M-1	J	6						SEQ 0488
BCS CERROR DEVFTL	11-1# 16-65# 16-37#	79-21 35-53 48-23	79-31 56-33 49-29	97-24 56-39 49-31	97-34 56-51 57-15	98-12 56-60 60-15	107 - 15 56 - 68 78 - 22	107 - 25 57 - 22 79 - 15	107-37 75-11 79-22	107-71 76-93 79-37	107-90 126-36 79-42	114-18 140-10 79-53	132-39 148-16 79-55	141 - 62 80 - 18
DIAG\$\$ DMCODE DMEND	80-27 9-5# 1-3# 1-32#	80-33 94-17 2-39 148-35	83-41 124-18	84-29 127-16	91-18 128-16	132 - 61 129 - 15	134-15	137-14	142-12	148-12				
DMOVLY DSTAT	1-18#	2-39	92-9	94-1	124-2	127-2	128-2	129-2	134-2	137-2	142-2	148-2		
ENDERR	16-93# 132-20 139-9	35-15 132-51 141-77	35-47 132-62	44-59 132-67	49 - 32 134 - 41	54-20 135-15	56-26 135-20	87-54 135-41	126 - 34 135 - 46	127 - 48 137 - 28	127 - 52 137 - 43	127-56 137-56	129 - 41 137 - 75	132 - 15 137 - 87
ERRDF ERRHRD	13-33# 13-39#													
ERROR	16-49# 57-15 87-53 135-17 145-52	35-14 60-15 91-18 135-38 145-54	35-31 78-22 126-32 135-43	35-36 79-15 127-46 137-26	35-40 79-22 127-50 137-41	35-44 79-37 127-54 137-54	35-46 79-42 129-40 137-72	35-52 79-53 132-12 137-84	44-57 79-55 132-17 139-8	48-23 80-18 132-48 141-65	49-29 80-27 132-61 144-28	49-31 80-33 132-64 144-32	54-19 83-41 134-40 144-34	56-25 84-29 135-12 145-48
ERRORS ERRORC	14-3# 16-75# 135-14 141-66	44-58 135-18 141-75	127-47 135-19 141-76	127-51 135-39	127 - 55 135 - 40	132-13 135-44	132-14 135-45	132-18 137-27	132-19 137-42	132-49 137-55	132-50 137-73	132-65 137-74	132-66 137-85	135-13 137-86
ERRSF T	13-27# 13-47#													
GETP\$ HARDER	15-15#	35-14	35-31	35-36	35-40	35-44	35-46	35-52	54-19	56-25	127-46	127-50	129-40	134-40
MOVMSG	137-72 16-84# 44-58	137-84 35-14 44-58	139-8 35-31 46-32	141-65 35-36 48-23	144-28 35-40 49-29	144-32 35-44 49-29	144-34 35-46 49-31	145-48 35-52 50-57	145-52 35-53 54-19	145-54 44-57 56-25	44-57 56-25	44-57 56-25	44-57 56-25	44-57 56-25
	56-25 78-22 80-27	56-25 79-15 80-33	56-25 79-22 80-33	56-25 79-37 80-33	56-33 79-42 83-41	56-39 79-42 83-41	56-51 79-42 83-41	56-60 79-53 84-29	56-68 79-55 87-53	57-15 79-55 91-18	57-22 79-55 126-32	60-15 80-18 126-32	75-11 80-27 126-32	76-93 80-27 126-32
	126-32	126-32 127-51	126 - 32 127 - 51	126-36 127-51	127-46 127-54	127-46 127-54	127-46	127-46 127-54	127-47 127-55	127 - 47 127 - 55	127-47	127-50 129-40	127-50	127-50
	129-40 132-17	129-40 132-17	132-12 132-17	132-12 132-18	132-12 132-18	132-12 132-18	132-13 132-19	132-13 132-19	132-13 132-19	132-14 132-48 132-64	132-14 132-48	132-14 132-48	132-14 132-48	132-17 132-48
	132-49 132-65 135-12	132-49 132-65	132-49 132-65	132-49 132-65	132-49 132-65	132-50 132-66 135-13	132-50 132-66	132-50 132-66	132-61 134-40	134-40	132-64 134-40	132-64 134-40	132-64 134-40 135-17	132-64 135-12
	135-18 135-39	135-12 135-18 135-39	135-12 135-18 135-40	135-13 135-19 135-40	135-13 135-19 135-40	135-19 135-43	135-14 135-38 135-43	135-14 135-38 135-43	135-14 135-38 135-43	135-14 135-38 135-43	135-17 135-38 135-44	135-17 135-39 135-44	135-39 135-44	135-17 135-39 135-44
	135-44	135-45 137-41	135-45	135-45 137-41	137-26 137-41	137-26 137-42	137-26 137-42	137-26 137-42	137-26 137-42	137-27 137-42	137-27	137-27 137-54	137-27 137-54	137-27 137-54
	137-54 137-73	137-55 137-73	137-55 137-74	137-55 137-74	137-55 137-84	137-55 137-84	137-72 137-84	137-72 137-84	137-72 137-84	137-72 137-85	137-54 137-72 137-85	137-73 137-85	137-73 137-85	137-73 137-85
	137-86	137-86	139-8 141-75	140-10 141-75	141-65	141-65 141-75	141-65 141-75	141-65	141-65 141-75	141-66	141-66	141-66	141-66	141-75 141-76
MSG MSSG	141-76 144-34 10-3# 16-111#	141-76 144-34 36-5 46-32	144-28 144-34 36-6 50-57	144-28 145-48 36-7	144-28 145-48 36-8	144-28 145-48 36-9	144-28 145-52 36-10	144-32 145-52 36-11	144-32 145-52 36-12	144-32 145-54 36-13	144-32 145-54 36-15	144-32 145-54 36-16	144-34 148-16	144-34
MSSGE NDERR	16-133# 16-101# 132-20 139-9	35-15 132-51 141-77	35-47 132-62	44-59 132-67	49 - 32 134 - 41	54-20 135-15	56-26 135-20	87-54 135-41	126-34 135-46	127-48 137-28	127-52 137-43	127-56 137-56	129-41 137-75	132-15 137-87

			RO X04.00	9-JUL-81	01:12:0	PAGE M-	2	6						SEQ 0489
OVTERM	2-39	2-39# 134-2	2-39# 134-2#	92 - 9 137 - 2	92 - 9# 137 - 2#	94-1 142-2	94-1# 142-2#	124-2 148-2	124-2# 148-2#	127 - 2 148 - 35	127-2#	128-2	128-2#	129-2
PARGS.	14-33# 12-11# 54-40 76-26 90-4 126-23	21-22 55-45 76-71 90-20 129-83	22-28 55-52 76-80 97-36 131-25	33-11 56-71 76-94 97-43 132-30	35-55 61-37 76-97 98-15 133-25	37-22 61-50 77-49 103-18 134-72	41-21 62-16 79-58 104-14 136-22	46-32 65-10 80-36 105-14 137-40	47-33 67-10 81-22 106-13 137-53	48-19 67-79 82-30 107-47 137-64	48-30 67-91 84-82 107-72 137-69	50-57 69-23 84-86 114-30 141-54	50-87 71-19 86-15 122-25 141-57	54-31 72-24 89-37 123-20 141-61
PUSH REPSFT	141-86 12-3# 54-6 76-20 97-15 131-6 16-10#	21-7 55-25 76-24 98-7 132-22 129-83	22-12 56-6 76-65 103-7 133-6 134-72	33-7 61-28 77-7 104-6 134-72 137-69	35-7 61-48 79-8 105-6 136-6 141-86	37-7 62-14 80-7 106-7 137-36	41-17 65-6 81-7 107-29 137-69	46-32 67-6 82-7 107-51 141-6	47-27 67-75 83-11 107-64 141-58	47-35 67-87 84-59 114-7 141-86	48-6 69-7 86-7 122-7	48-20 71-6 89-8 123-9	50-9 72-6 89-26 126-16	50-57 76-7 97-5 129-83
RSTR\$ RXOR SAVR\$ SOFTER SYSFTL TALKX	15-8# 18-4# 15-1# 16-4# 137-41 16-43# 19-3#	33-21 44-57 137-54	87-53	126-32	127-54	132-12	132-17	132-48	132-64	135-12	135-17	135-38	135-43	137-26