



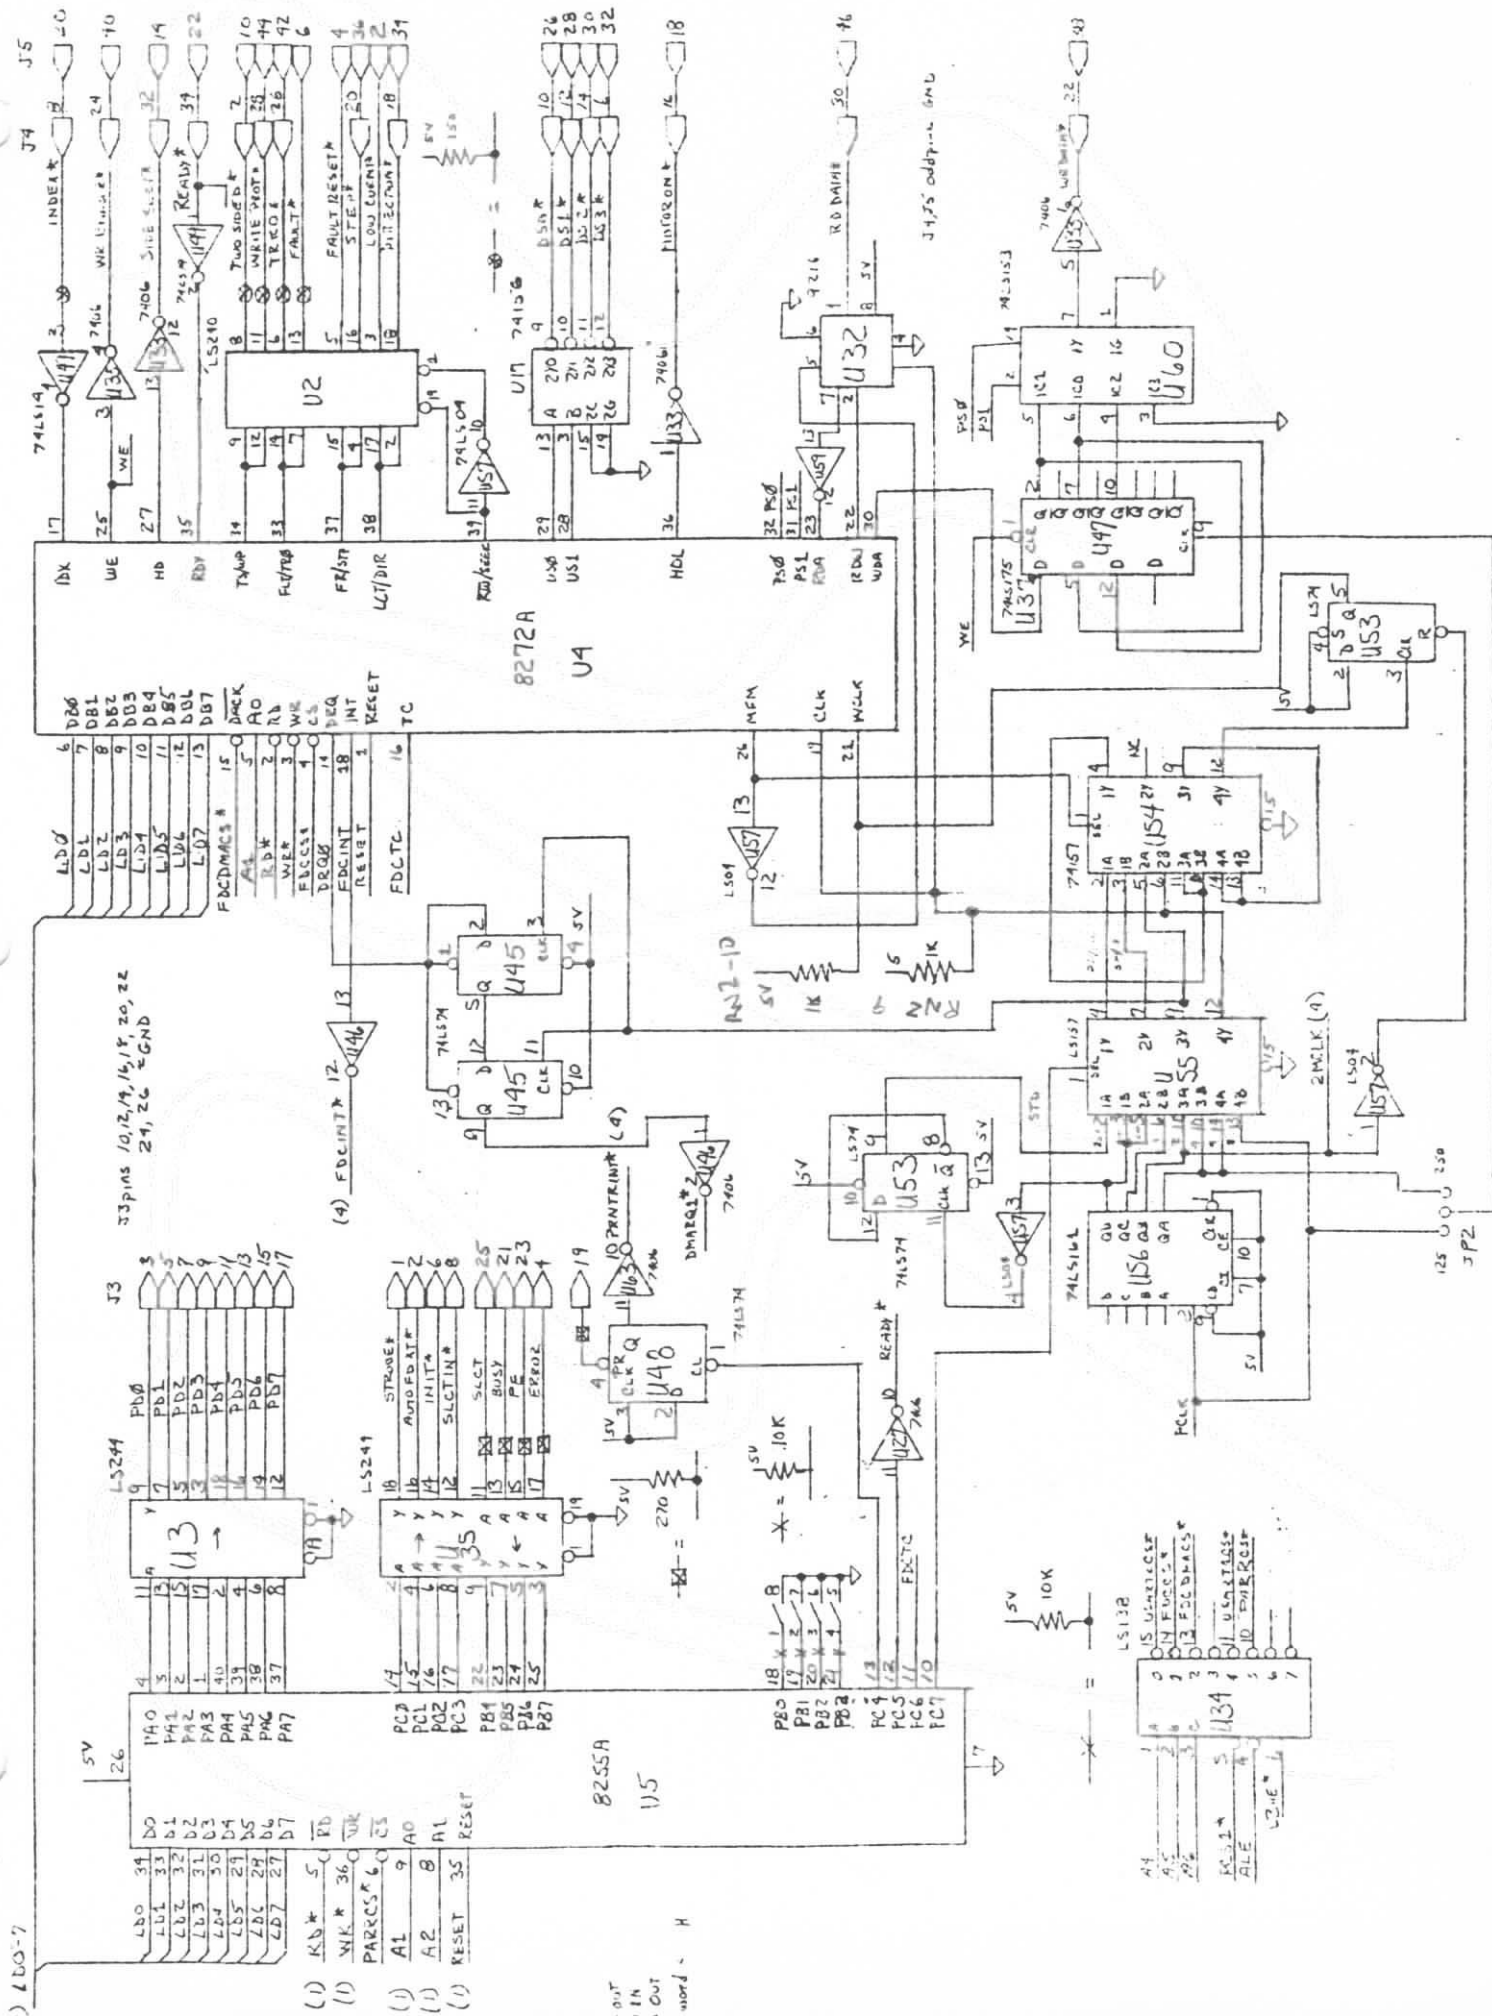



4164 or 4256

4169 or 4256

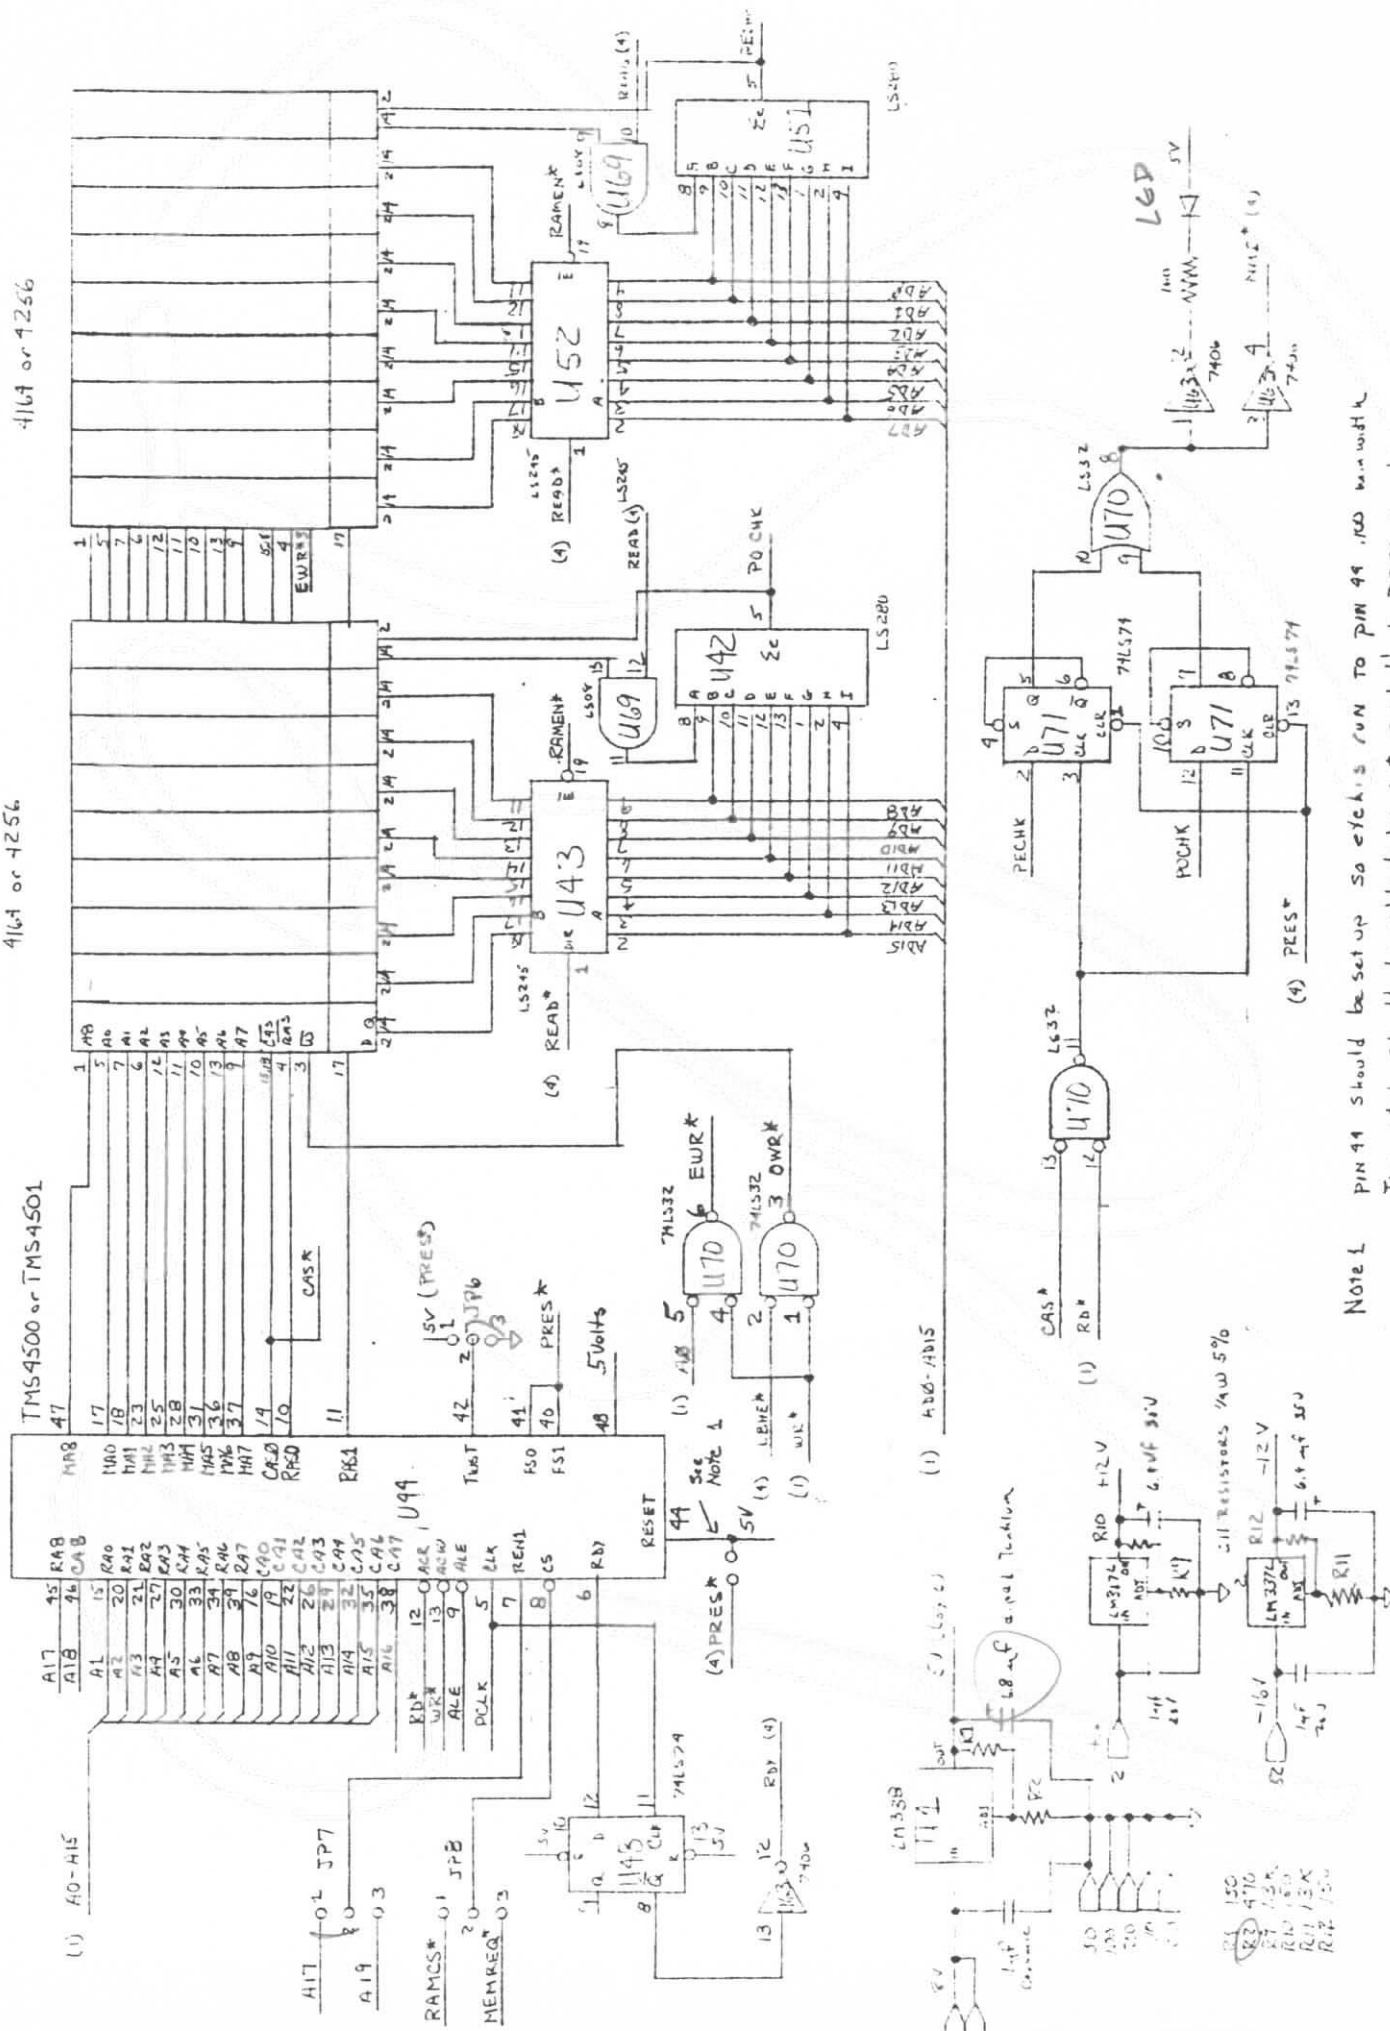

Note: PIN 44 should be set up so each is run to PIN 44, no burn with

The etch should be able to be cut such that PRES can be connected to pin 19 when a jumper is installed. and the 5V etch is cut.

