


Before

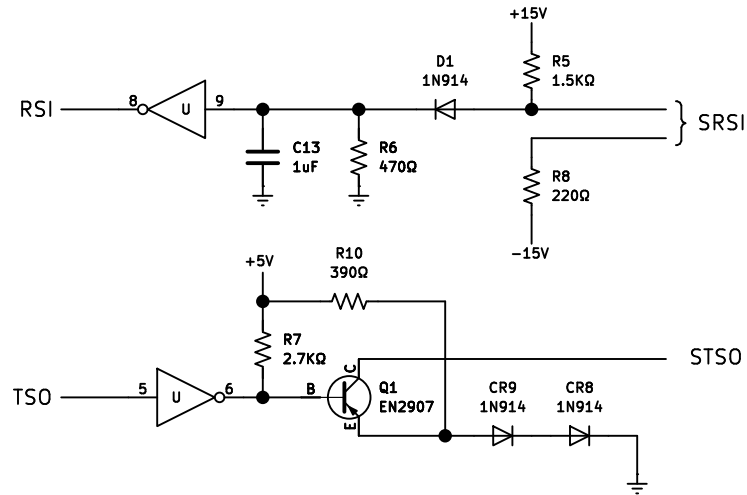

Receive Circuit

Remove C13, R6, D1 and R5.

Install a 2.2KΩ resistor in place of D1.

Install a Schottky diode in the R6 location with the cathode (line) to the right (signal).

Install a Schottky diode between the right pad of C13 and +5V with the cathode (line) to +5V (Molex pin 3 pad).

Transmit Circuit

Remove Q1.

Jumper between the base and collector of Q1 with a wire.

After

