

# HEWLETT-PACKARD



---

## LaserJet IID Printer Technical Reference Manual

---

---

# LaserJet IID Printer Technical Reference Manual

---



Edition 1  
E1088

33447 - 90905  
Printed in U.S.A. 10/88

---

## Notice

The information contained in this document is subject to change without notice.

HEWLETT-PACKARD MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Hewlett-Packard shall not be liable for errors contained herein or for incidental consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated without the prior written consent of Hewlett-Packard Company.

Copyright © 1988 by HEWLETT-PACKARD COMPANY.

*Centronics* is a registered trademark of Centronics Corporation.

*IBM* is a registered trademark of International Business Machines Corporation.

*HP Vectra Personal Computer* is a product of Hewlett-Packard Corporation.

*Bauer Bondoni* is a registered trademark of Fundicion Typografica Nevville SA.

*Century Schoolbook and Cooper Black* are registered trademarks of Kingsley-AFT Type Corporation.

*ITC Garamond* is a registered trademark of International Typeface Corporation.

*Zapf Humanist 601* is a product of Bitstream Inc.

*University Roman* is a product of Latraset, Ltd.

*PCL* is a trademark of Hewlett-Packard Corporation.

## Printing History

---

First Edition - October 1988

---

This manual was created on an HP Vectra Personal Computer. The camera ready text was generated on an HP **LaserJet series II** printer and then reproduced using standard offset printing.

# Table of Contents

---

About This Manual . . . . .	xiii
Related Documentation . . . . .	xv

---

## Chapter 1

### Introduction to the HP PCL Language

History of the PCL Language . . . . .	1-1
PCL Architecture . . . . .	1-2
What are Printer Commands? . . . . .	1-4
Syntax of Escape Sequences . . . . .	1-5
Two Character Escape Sequences . . . . .	1-5
Parameterized Escape Sequences . . . . .	1-5

---

## Chapter 2

### The Page

Introduction . . . . .	2-1
Logical Page . . . . .	2-2
PCL Coordinate System . . . . .	2-3
Units of the PCL Coordinate System . . . . .	2-4
Printable Area . . . . .	2-4

---

## Chapter 3

## The Print Environment

Introduction . . . . .	3-1
Factory Default Environment . . . . .	3-2
User Default Environment . . . . .	3-3
Modified Print Environment . . . . .	3-4
Resetting the Print Environment . . . . .	3-5
LaserJet Family Compatibility . . . . .	3-6

---

## Chapter 4

## Job Control Commands

Introduction . . . . .	4-1
Printer Reset . . . . .	4-2
Number of Copies . . . . .	4-3
Simplex/Duplex Print . . . . .	4-4
Left Offset Registration. . . . .	4-7
Top Offset Registration. . . . .	4-9
Duplex Page Side Selection. . . . .	4-10

Introduction .....	5-1
Page Size .....	5-2
Paper Source .....	5-3
Page Length .....	5-5
Orientation .....	5-7
Text Area .....	5-8
Left Margin .....	5-10
Right Margin .....	5-11
Clear Horizontal Margins .....	5-12
Top Margin .....	5-13
Text Length .....	5-15
Perforation Region .....	5-16
Horizontal Motion Index .....	5-17
Vertical Motion Index .....	5-18
Line Spacing .....	5-19

---

## Chapter 6

## Cursor Positioning

Introduction . . . . .	6-1
Absolute/Relative Cursor Positioning . . . . .	6-2
Cursor Positioning Units . . . . .	6-3
Horizontal Cursor Positioning (Columns) . . . . .	6-4
Horizontal Cursor Positioning (Decipoints) . . . . .	6-5
Horizontal Cursor Positioning (Dots) . . . . .	6-6
Horizontal Cursor Positioning Control Codes . . . . .	6-7
Vertical Cursor Positioning (Rows) . . . . .	6-8
Vertical Cursor Positioning (Decipoints) . . . . .	6-9
Vertical Cursor Positioning (Dots) . . . . .	6-10
Half-Line Feed . . . . .	6-11
Vertical Cursor Positioning Control Codes . . . . .	6-12
Line Termination . . . . .	6-13
Push/Pop Cursor Positioning . . . . .	6-14

---

## Chapter 7

## Fonts

Introduction . . . . .	7-1
Symbol Set . . . . .	7-2
Spacing . . . . .	7-3
Pitch . . . . .	7-4
Height . . . . .	7-4
Style . . . . .	7-5
Stroke Weight . . . . .	7-5
Typeface . . . . .	7-6
Orientation . . . . .	7-7

Introduction . . . . .	8-1
Font Selection by Characteristic . . . . .	8-2
Primary and Secondary Fonts . . . . .	8-5
Symbol Set . . . . .	8-6
ISO Symbol Sets . . . . .	8-9
Spacing . . . . .	8-11
Pitch . . . . .	8-12
Height . . . . .	8-13
Style . . . . .	8-14
Stroke Weight . . . . .	8-15
Typeface . . . . .	8-17
Orientation . . . . .	8-19
Internal Fonts . . . . .	8-20
Font Selection Example . . . . .	8-21
Summary of Font Selection by Characteristic . . . . .	8-22
Selection of the Default Font . . . . .	8-24
Transparent Print Data . . . . .	8-25
Underline Command . . . . .	8-26



---

## Chapter 9

## Font Management

Introduction . . . . .	9-1
Downloading Soft Fonts . . . . .	9-2
Temporary/Permanent Fonts . . . . .	9-3
Deleting Fonts . . . . .	9-3
Font ID. . . . .	9-4
Font Control . . . . .	9-5
Font Selection by ID . . . . .	9-7
Font Management Example . . . . .	9-8

---

## Chapter 10

## Soft Font Creation

Introduction . . . . .	10-1
Coordinate System . . . . .	10-2
Font Descriptor Format . . . . .	10-3
Font Descriptor Command . . . . .	10-17
Character Descriptor and Data Format . . . . .	10-19
Character Code Command . . . . .	10-25
Character Descriptor and Data Command . . . . .	10-26

---

## Chapter 11

## Graphics

Introduction . . . . .	11-1
Raster Graphics . . . . .	11-2
Raster Graphics Resolution . . . . .	11-4
Raster Graphics Presentation Mode . . . . .	11-5
Start Raster Graphics . . . . .	11-7
Transfer Raster Data . . . . .	11-8
End Raster Graphics . . . . .	11-9
Raster Graphics Example . . . . .	11-10
Rectangular Area Fill Graphics . . . . .	11-13
Horizontal Rectangle Size (Decipoints) . . . . .	11-14
Horizontal Rectangle Size (Dots) . . . . .	11-14
Vertical Rectangle Size (Decipoints) . . . . .	11-15
Vertical Rectangle Size (Dots) . . . . .	11-15
Area Fill ID . . . . .	11-16
Fill Rectangular Area . . . . .	11-19
Rectangular Area Fill Examples . . . . .	11-20

---

## Chapter 12

## Macros

Introduction . . . . .	12-1
Macro Creation . . . . .	12-2
Macro Invocation . . . . .	12-3
Temporary/Permanent Macros . . . . .	12-4
Deleting Macros . . . . .	12-4
Macro ID . . . . .	12-5
Macro Control . . . . .	12-6
Macro Control Example . . . . .	12-8

Introduction .....	13-1
PCL Command Parsing .....	13-2
Job Control .....	13-2
Printer Reset .....	13-2
Duplex Offset Registration .....	13-2
Page Control .....	13-3
Paper Source .....	13-3
Page Length .....	13-3
Text Area/Margins .....	13-3
HMI .....	13-4
Cursor Positioning .....	13-4
Fonts .....	13-5
Raster Graphics .....	13-6
Macros .....	13-7
Performance .....	13-8
PCL Commands .....	13-8
Print Data .....	13-8
Print Overrun .....	13-9
I/O .....	13-9
Troubleshooting Commands .....	13-10
End-of-Line Wrap .....	13-10
Display Functions Mode .....	13-11
Auto Continue Mode .....	13-12
Common Errors .....	13-13
20 Error .....	13-13
21 Error .....	13-13
22 Error .....	13-13
40 Error .....	13-13

---

## Appendix A

## Reference Tables

ASCII Character Codes (Roman-8) . . . . .	A-1
Roman-8 Symbol Set . . . . .	A-2
ECMA-94 Latin Symbol Set . . . . .	A-3
PC-8 Symbol Set. . . . .	A-4
PC-850 Symbol Set. . . . .	A-5
PC-8 Danish/Norwegian Symbol Set . . . . .	A-6
Legal Symbol Set . . . . .	A-7
ISO Substitution Table. . . . .	A-8
Control Codes . . . . .	A-9
Roman-8 Character Conversion Table . . . . .	A-10
LaserJet IID Printer Commands. . . . .	A-17

---

## Appendix B

## Reference Interfaces

Introduction . . . . .	B-1
Parallel Interface . . . . .	B-2
Input. . . . .	B-3
Output . . . . .	B-3
Handshake Timing . . . . .	B-6
Hardware . . . . .	B-7
Serial Interface . . . . .	B-8
RS-232C/RS-422 Operation. . . . .	B-8
Serial Data Format . . . . .	B-10
Throughput . . . . .	B-10
Handshake Protocol . . . . .	B-10
Hardware . . . . .	B-12

---

## Appendix C

## Customer Support

Support.....	C-1
Your Dealer.....	C-1
LaserJet Assist Line .....	C-1

---

Glossary

Index

    Subject Index

    Printer Commands Index

Sales and Service Offices

---

## About This Manual

Hewlett-Packard has developed a standard set of printer features (and corresponding commands) for use in its printers. The set of features designed by Hewlett-Packard for all of its printers is the PCL language. This manual describes the PCL language feature/commands available for the **LaserJet IID** printer. In addition to the commands, this manual also describes basic requirements of PCL language programming.

This manual is written for people who have some programming experience. Many of the concepts discussed assume some programming knowledge.

When writing a PCL language program for the **LaserJet IID** printer the user should be knowledgeable of the PCL language concepts presented in this manual.

This manual is divided into 13 chapters. A brief description of each chapter is provided below.

- |  |  |
|--|--|
| <b>Chapter 1</b><br><b>Introduction to the HP PCL Language</b> | This chapter gives a brief history of the development of the PCL language, describes the PCL language levels (architecture), and describes PCL commands (control codes and escape sequences).  |
| <b>Chapter 2</b><br><b>The Page</b>                            | This chapter introduces the idea of the logical page and identifies the area in which printing can occur. It also describes the PCL language coordinate system.  |
| <b>Chapter 3</b><br><b>The Print Environment</b>               | This chapter introduces the printer's feature settings, collectively, as the print environment and how it is affected by printer reset functions. Included are descriptions of the factory default environment, user default environment, and the modified print environment.                  |
| <b>Chapter 4</b><br><b>Job Control Commands</b>                | This chapter describes the commands providing job control. Job commands are usually grouped together and sent at the beginning of a job. Job control includes restoration of the user default environment, selection of the number of copies of each page to be printed, and duplex operation. |

<b>Chapter 5</b> <b>Page Control Commands</b>	This chapter describes the commands providing page format control. Page format control provides for selection of the page source, size, orientation, margins, and text spacing.
<b>Chapter 6</b> <b>Cursor Positioning</b>	This chapter describes how to position the cursor within the logical page.
<b>Chapter 7</b> <b>Fonts</b>	This chapter describes the characteristics of a font.
<b>Chapter 8</b> <b>Font Selection</b>	This chapter describes how to select a font for printing using the font characteristics commands. The underline feature is described at the end of this chapter.
<b>Chapter 9</b> <b>Font Management</b>	This chapter describes the fonts supplied with the printer; these fonts are referred to as internal fonts. Additional fonts can be added to the printer by inserting font cartridges or downloading soft fonts. Font management provides mechanisms for downloading and manipulating soft fonts.
<b>Chapter 10</b> <b>Soft Font Creation</b>	This chapter describes how to design characters for downloading to the printer.
<b>Chapter 11</b> <b>Graphics</b>	This chapter describes how to download raster graphics to the printer and how to use rules, predefined patterns, and shading.
<b>Chapter 12</b> <b>Macros</b>	A typical printer task requires the use of several commands. Applications may perform the same task numerous times. For tasks performed repeatedly, PCL provides a macro function to reduce the number of commands that must be sent to the printer. A macro is a collection of escape sequences, control codes, and data downloaded to the printer, whose execution can be initiated using a single command.
<b>Chapter 13</b> <b>Programming Hints</b>	This chapter provides information for use during the development of PCL software.

---

## Related Documentation

The following is a list of other **LaserJet IID** printer manuals.

*LaserJet IID Printer  
User's Manual*  
(part number 33447-90901)

This manual is written for operators of the **LaserJet IID** printer. Following an introduction to the printer and its parts, this manual describes the control panel operation, use of the printer with software, use of fonts and finally maintenance and troubleshooting hints.

*Your Road Map to  
Getting Started with  
Your LaserJet IID Printer*  
(part number 33447-90908)

*Getting Started* contains initial printer set-up and configuration information.

*LaserJet IID Service Manual*  
(part number 33447-90904)

This is a reference document for qualified technicians to use when servicing the printer. It includes all routine preventive maintenance as well as troubleshooting guides and, removal and replacement procedures. This document can be ordered from Hewlett-Packard.

*HP LaserJet IID Printer  
Paper Specifications Guide*  
(part number 33440-90914)

This guide provides information on paper (envelopes, transparencies, and labels) selection to ensure the best print quality production by the printer.

*HP LaserJet IID  
Envelope Feeder User's Guide*  
(part number 33447-90912)

If an optional HP 33457 Envelope Feeder is purchased, this guide provides information on how to print up to 50 envelopes at a time.

*HP LaserJet IID  
Software Application Notes*  
(part number 33447-90920)

Contains information on using your **LaserJet IID** printer with some of the most popular software packages. Copies are available by calling the **LaserJet Assist Line** at (208) 323-2551.





---

## Contents

History of the PCL Language .....	1-1
PCL Architecture.....	1-2
What are Printer Commands?.....	1-4
Syntax of Escape Sequences .....	1-5
Two Character Escape Sequences.....	1-5
Parameterized Escape Sequences .....	1-5



## History of the PCL Language

In the past, printers were developed without a computer industry standard for feature access. Printers manufactured during this period were designed with features that differed from device to device. As a result, application programs written for one printer often had to be rewritten or modified to work correctly with another printer, requiring months or even years of software development.

For the user, reluctance to upgrade to new printer technologies stemmed from this need to modify the software applications for each printer. When printers were introduced, current applications required modifications to support them. Rather than providing a smooth upgrade path, the industry was creating chaos as the output capabilities of printers changed.

To minimize this chaotic situation, Hewlett-Packard developed a standard language for printer control called the PCL language. Hewlett-Packard's PCL language defines a standard for printer features and feature access by software applications. It provides the highest level of communication between the system and the printer. The PCL language is designed to be independent of the host system, device drivers, I/O interface, and network communications. Its purpose is to bring together all HP printers under a common and consistent control structure that provides feature compatibility from printer to printer. This protects the investment in application and driver software.

The key to designing the PCL language was determining the printing features for the various printer markets. Due to the diversity of printing needs from the low-end personal computer market to the high-end computer market, developing a common feature set would have either restricted the advanced printing capabilities of the high-end system printers or added to the cost of the low-end printers. The solution was simple: design the PCL language by partitioning printer features so they align with the major printer markets.

Print and space, electronic data processing (EDP)/transaction, office word processing, and page formatting emerged as the four level hierarchy of the PCL language. With this structure, the ability to address the diversity of printing needs while protecting the investment in applications and driver software for the printers has become a reality.

---

## PCL Architecture

Hewlett-Packard's PCL language provides four levels of printer features: *Print and Space*, *EDP/Transaction*, *Office Word Processing*, and *Page Formatting*. Each level has a specific market for which its feature set has been targeted.

- Level I** *Print and Space* is the base level printer feature set. Printers implementing this feature set are usually inexpensive and provide a convenient means for the user to obtain hard-copy output. This level is typically associated with a single user workstation.
- Level II** The *EDP/Transaction* feature set is a superset of the Print and Space level. Printers implementing this feature set are generally multi-user hard-copy devices which have a wide range of performance. This level is used in the *EDP* environment or for *Transaction* processing.
- Level III** The *Office Word Processing* feature set is a superset of the *EDP/Transaction* level. This level is tailored toward the needs of the office: high quality output with additional data formatting capabilities.
- Level IV** The *Page Formatting* feature set is a superset of the Office Word Processing Level. This level gives the user the most flexibility in the formation of hard-copy output. **LaserJet IID** is a PCL Level IV device.

Each level is a proper superset of the previous level, providing upward compatibility. This allows leverage of applications across printers at or above the level for which the application was written. For example, any application written for Level I (*Print and Space*) will run properly on any Hewlett-Packard printer fitting into the PCL level structure. Likewise, a Level IV (*Page Formatting*) printer can run any PCL language application written for a PCL level I, II, III, or IV device.

Each level of the PCL language provides a well-defined set of features which address the needs of a major printer market. Optional features have been defined which are extensions to the PCL level hierarchy; these features provide the flexibility to address special applications, such as paper handling and bar codes.

The PCL model succeeds because the following points are observed:

- All printers implement features identically.
- Each level is a proper superset of the previous level.
- A printer supporting a specific PCL language level implements, as a minimum, the defined feature set of that level.
- Each printer is specific as to its application and any exceptions in features that it may have (for example, no raster graphics on daisy wheel printers).
- All PCL language printers have the ability to ignore unsupported commands.

---

## What are Printer Commands?

PCL language commands (also referred to as escape sequences) provide access to printer features. Once a PCL command sets a parameter, that parameter will remain set until that PCL command is repeated with a new value or the printer is reset to its user default environment. For example, if you send the printer a command to set landscape page orientation, each page will print in landscape orientation until you send the portrait orientation command or reset the printer.

There are three types of PCL language commands:

- control codes,
- two-character escape sequences, and
- parameterized escape sequences.

A control code is a character that initiates a printer function, for example Carriage Return (CR), Line Feed (LF), Form Feed (FF), etc.

These commands consist of two or more characters. The first character is always the ASCII escape character, identified by the  $\text{^}c$  symbol. This character is a control code used specifically by the printer to identify a string of characters as a printer command. As the printer monitors incoming data from a computer, it is "looking" for this character. When this character appears, the printer reads it and its associated characters as a command to be performed and not as data to be printed.

### Note



- 
1. Printer commands are also referred to as escape sequences. The terms "escape sequence" and "printer command" are used interchangeably throughout this manual.
  2. Some escape sequences shown in this manual contain spaces between characters for clarity. Do not include these spaces when using escape sequences.
-

## Syntax of Escape Sequences

There are two forms of PCL escape sequences: two character escape sequences and parameterized escape sequences.

### Two Character Escape Sequences

Two-character escape sequences have the following form:

$$^E_C X$$

where "X" is a character which defines the operation to be performed. (Note, "X" may be any character from the ASCII table [see Appendix A] within the range 48-126 decimal ["0" through "~"]). For a list of the two character escape sequences supported by the printer refer to Appendix A.

#### Example

1.  $^E_C E$  - is a two character escape sequence used for resetting the printer.
2.  $^E_C 9$  - is a two-character escape sequence used for resetting the left and right margins.

### Parameterized Escape Sequences

Parameterized escape sequences have the following form:

$$^E_C X y \# z1 \# z2 \# z3 \dots \# Zn[\text{data}]$$

where y, #, zi and [data] may be optional, depending on the command.

**X** **Parameterized Character** - A character from the ASCII table within the range 33-47 decimal ("!" through "/" ) indicating that the escape sequence is parameterized.




- y**      **Group Character** - A character from the ASCII table within the range 96-126 decimal ("@" through "~") which specifies the group type of control being performed.
- #**      **Value Field** - A group of characters specifying a numeric value. The numeric value is represented as an ASCII string of characters within the range 48-57 decimal ("0" through "9") which may be preceded by a "+" or "-" sign and may contain a fractional portion indicated by the digits after a decimal point("."). If an escape sequence requires a value field and a value is not specified, a value of 0 is assumed.
- zi**      **Parameter Character** - Any character from the ASCII table within the range 96-126 decimal ("@" through "~"). This character specifies the parameter to which the previous value field applies. This character is used when combining escape sequences.
- Zn**      **Termination Character** - Any character from the ASCII table within the range 64-94 decimal ("@" through "^"). This character specifies the parameter to which the previous value field applies. This character terminates the escape sequence.
- [Data]** **Binary Data** is eight-bit data (for example, graphics data, downloaded fonts, etc.). The number of bytes of binary data is specified by the value field of the escape sequence. Binary data immediately follows the terminating character of the escape sequence.

The following is an example of an escape sequence with a termination character and no parameter character. This escape sequence performs a single function.



The following is an example of an escape sequence with a parameter character and a termination character. This escape sequence performs two functions.

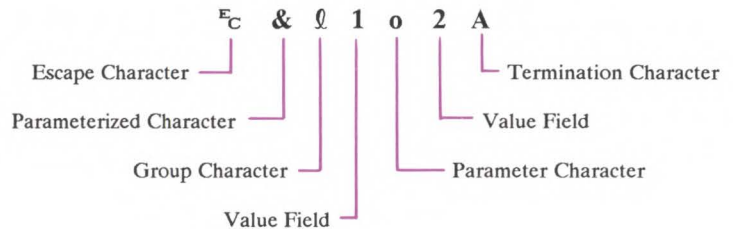

This command is a combination of the following escape sequences:

$\text{E}_C \ \& \ l \ 1 \ O$  and  $\text{E}_C \ \& \ l \ 2 \ A$

Notice that the " $\text{E}_C$ " and the " $\&l$ " are dropped from the second printer command when they are combined. Also, the upper-case " $O$ " that terminated the first command becomes a lower-case " $o$ " parameter character when these commands are combined.

Use these three rules to combine and shorten printer commands:

1. The first two characters after "E<sub>c</sub>" (the parameterized and group character) must be the same in all of the commands that will be combined. In the example above, these are "&" and "Q".
2. All alphabetic characters within the combined printer command will be lower-case, except the final letter which is always upper-case. In the combined example above, "O" becomes "o". The final character in the printer command must always be upper-case to let the printer know that the command is complete.
3. The printer commands will be performed in the order that they are combined (from left to right). Be sure to combine commands in the order that they are to be performed.

---

## Contents

Introduction .....	2-1
Logical Page .....	2-2
PCL Coordinate System .....	2-3
Units of the PCL Coordinate System .....	2-4
Printable Area .....	2-4



---

## Introduction

This chapter describes the PCL coordinate system. It defines the logical page and the printable area, and identifies the boundaries of each.

---

## Logical Page

The PCL logical page (also referred to as the addressable area) defines the area in which the cursor can be positioned. Although the printer does not actually have a cursor (like the blinking underline character used on most computer terminals), the cursor position refers to the currently active printing position. In other words, the location of the “cursor” is the position on the logical page where the next character will be positioned. The cursor can be moved to different points on the logical page using the cursor positioning commands. The cursor cannot be moved outside of the logical page bounds.

The size of the logical page for the media (that is, paper, transparencies, labels, etc.) is defined in Figures 2-2 and 2-3.

## PCL Coordinate System

The PCL coordinate system is defined as shown in the following figure:

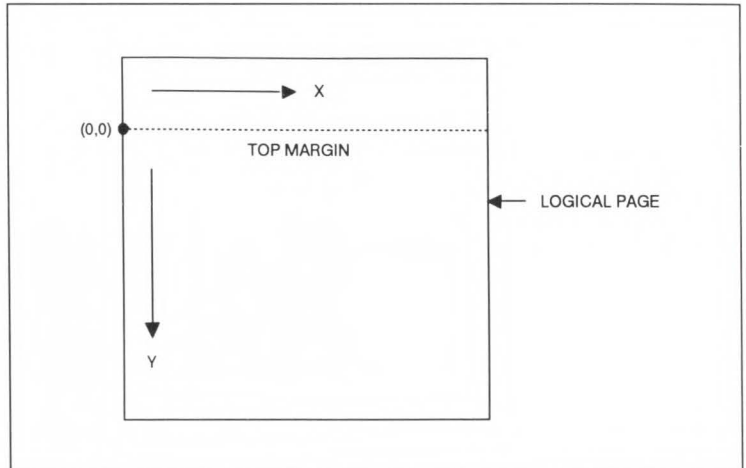


Figure 2-1. X,Y PCL Coordinates

The point (0,0) is at the left edge of the logical page at the current top margin position. Since the top margin may be changed using a printer command, the physical location of the point (0,0) may change.



---

## Units of the PCL Coordinate System

The units of the X-axis of the PCL coordinate system may be dots, decipoints, or columns. The units of the Y-axis may be dots, decipoints, or rows.

The dot is the smallest printable unit. On **LaserJet** family printers, one dot equals  $1/300^{\text{th}}$  inch. The number of dots printed per inch is referred to as the printer's resolution.

A decipoint is  $1/720^{\text{th}}$  inch or one-tenth of a PCL typographic point.

The width of a column is defined by the current horizontal motion index (HMI). The distance between rows is defined by the current vertical motion index (VMI), or lines-per-inch (lpi). HMI, VMI and lpi are described in Chapter 5, Page Control Commands.

Internally, the printer uses a different unit of measure. It maps dots, decipoints, and columns and rows to this unit of measure. This internal unit is  $1/7200^{\text{th}}$  inch. All positioning is kept in internal units and rounded to physical dot positions when data is printed.


---

## Printable Area

The printable area is the area of the physical page in which the printer is able to place a dot. The physical page refers to the size of the media (that is, paper, transparencies, labels, etc.) installed in the printer.

The relationship between physical page, logical page, and printable area is defined in Figures 2-2 and 2-3.

### PORTRAIT ORIENTATION

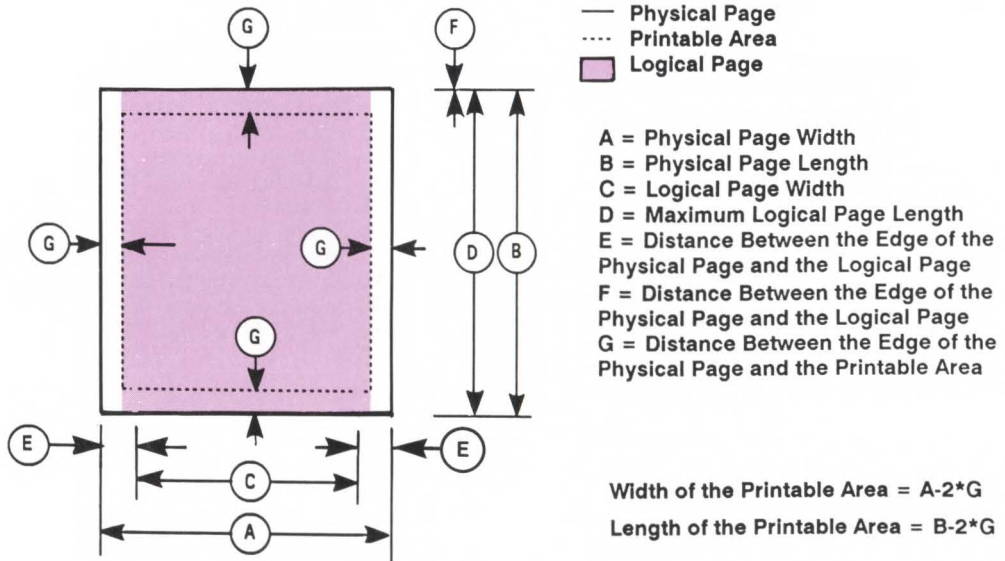


All dimensions are in dots.

PAPER SIZE	A	B	C	D	E	F	G
LETTER	2550	3300	2400	3300	75	0	50
LEGAL	2550	4200	2400	4200	75	0	50
EXECUTIVE	2175	3150	2025	3150	75	0	50
A4	2480	3507	2338	3507	71	0	50
COM-10	1237	2850	1087	2850	75	0	50
MONARCH	1162	2250	1012	2250	75	0	50
C5	1913	2704	1771	2704	71	0	50
DL	1299	2598	1157	2598	71	0	50

Figure 2-2. Portrait Logical Page and Printable Area Boundaries

## LANDSCAPE ORIENTATION

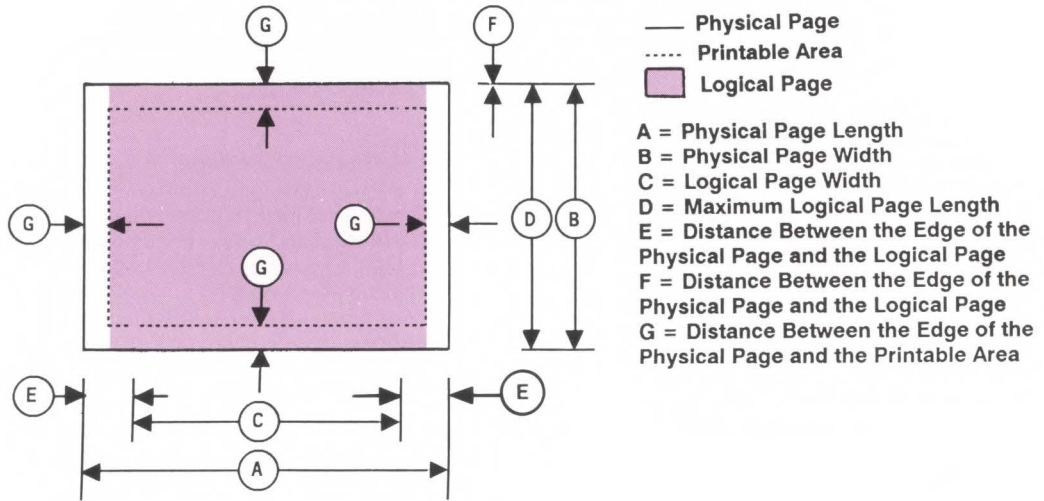

**Width of the Printable Area =  $A - 2 * G$**

**Length of the Printable Area =  $B - 2 * G$**

All dimensions are in dots.

PAPER SIZE	A	B	C	D	E	F	G
LETTER	3300	2550	3180	2550	60	0	50
LEGAL	4200	2550	4080	2550	60	0	50
EXECUTIVE	3150	2175	3030	2175	60	0	50
A4	3507	2480	3389	2480	59	0	50
COM-10	2850	1237	2730	1237	60	0	50
MONARCH	2250	1162	2130	1162	60	0	50
C5	2704	1913	2586	1913	59	0	50
DL	2598	1299	2480	1299	59	0	50

Figure 2-3. Landscape Logical Page and Printable Area Boundaries

The **LaserJet IID** printer performs pixel level clipping. This means that when printing characters or graphics, if any portion of the character cell or graphic is outside the printable area, then only that portion outside the printable area will be clipped (see Figure 2-4).

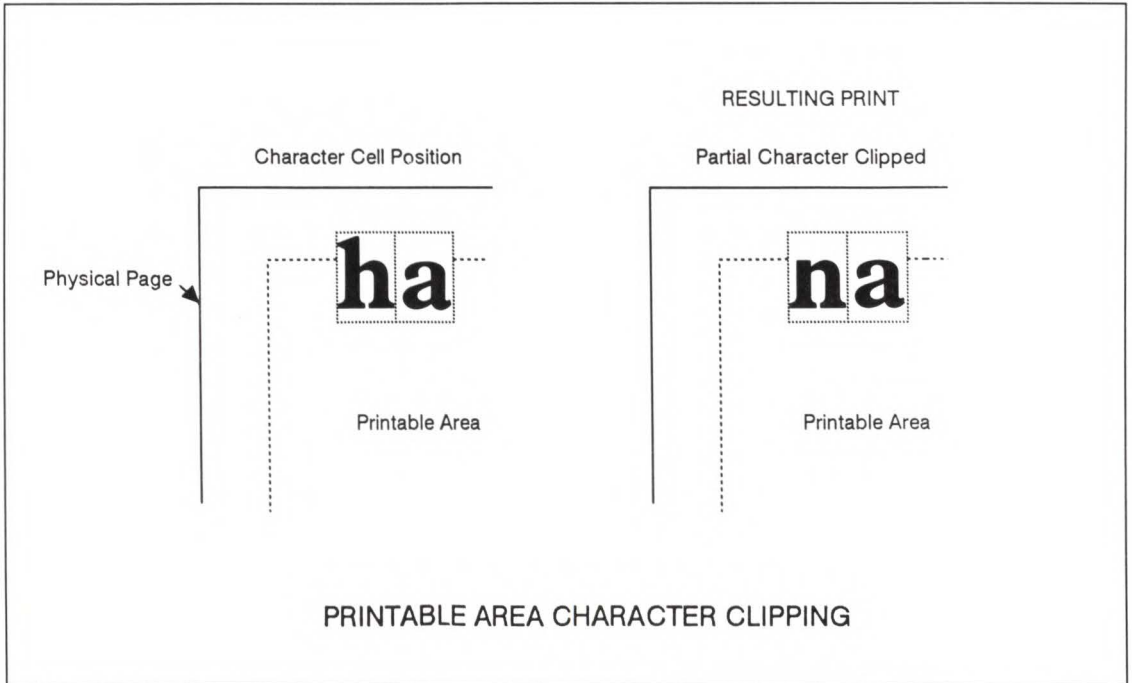


Figure 2-4. Printable Area Character Cell Positioning



---

## Contents

Introduction .....	3-1
Factory Default Environment .....	3-2
User Default Environment .....	3-3
Modified Print Environment .....	3-4
Resetting the Print Environment .....	3-5
LaserJet Family Compatibility .....	3-6



---

## Introduction

The group of all of the printer's current feature settings, collectively, is referred to as the print environment. The printer maintains four print environments: the factory default environment, the user default environment, the modified print environment and the overlay environment. This chapter describes the factory default environment, the user default environment, and the modified print environment (the overlay environment is described in Chapter 12, "Macros").

Default settings refer to the settings programmed into the printer at the factory or settings selected using the control panel. The term default simply refers to the settings the printer uses unless printer commands select other settings.

Each time a job is printed, some of the printer's feature settings may be changed from their default values to produce the desired printed output for that job. After the job has printed, the job specific feature settings will no longer be required, since the next job will likely have different output requirements. The next job should clear all previous job settings by performing a reset. This allows a job to start with the default settings as a base and vary only those settings that are needed. Returning to the default environment at the beginning of each print job eliminates the need for setting every feature each time a job is run.



## Factory Default Environment

A factory default is a setting programmed into the printer at the factory. The group of all of the printer's factory settings is referred to as the factory default environment. The factory default symbol set is selectable from the control panel printing menu (refer to the *LaserJet IID Printer User's Manual*). (Each of these features is described later in this manual.) Table 3-1 lists the printer's factory defaults.

Table 3-1. Print Environment Features with Factory Default Settings

---

### JOB CONTROL

- NUMBER OF COPIES\* = 1
- DUPLEX\* = Off
- BINDING\* = Long Edge
- TRAY\* = Both
- MANUAL FEED\* = Off
- REGISTRATION: X=0, Y=0

### PAGE CONTROL

- ORIENTATION\* = Portrait
- PAGE SIZE\* = Letter
- VERTICAL MOTION INDEX \* = 8 (6 lpi)
- HORIZ. MOTION INDEX = 12 (10 cpi)
- TOP MARGIN = 1/2" (150 dots)
- TEXT LENGTH = Letter page size - (1/2" top margin + 1/2" bottom margin)
- LEFT MARGIN = Left logical page boundary
- RIGHT MARGIN = Right logical page boundary
- PERFORATION SKIP = ON
- LINE TERMINATION = CR→CR, LF→LF, FF→FF

### FONTS\*\*

- SYMBOL SET = ROMAN-8
- SPACING = Fixed
- PITCH = 10 cpi
- HEIGHT = 12 point
- STYLE = Upright
- STROKE WEIGHT = Medium
- TYPEFACE = Courier
- UNDERLINING MODE = OFF

### FONT MANAGEMENT

- FONT ID = 0
- CHARACTER CODE = 0

### RASTER GRAPHICS

- RASTER GRAPHICS RESOLUTION = 75 dpi
- RASTER GRAPHICS PRESENTATION = 3

### RECTANGULAR AREA FILL

- HORIZONTAL RECTANGLE SIZE = 0
- VERTICAL RECTANGLE SIZE = 0
- AREA FILL ID = 0

### MACRO

- MACRO ID = 0

### TROUBLESHOOTING COMMANDS

- END-OF-LINE WRAP = OFF
- DISPLAY FUNCTIONS = OFF

---

\* - User default values may be selected by the user from the printer's Operator Control Panel for these items.

\*\* - The font characteristics are determined by the default font. The default font can be the factory default font or the user selected default font from the Operator Control Panel or from a font cartridge with a default font.

## User Default Environment

A user default is a setting selected from the printer's control panel.

There are eight PCL features on the **LaserJet IID** printer for which user defaults may be selected through the eleven printer menu selections. These features are as follows:

- Number of Copies
- Font Selection (Font Source and Font Printout ID Number)
- Duplex and Duplex Binding
- Paper Source (Manual Feed and Tray - upper, lower or both trays)
- Page Size (Paper and Envelopes)
- Orientation
- Form Length (VMI)
- Symbol Set

### Note



---

Refer to discussion on VMI for the implications of setting the user default Form Length.

---

For instructions on how to select these user defaults from the control panel refer to the *LaserJet IID Printer User's Manual*.

User default settings are stored in the User Default Environment and are retained even if the printer is turned OFF.

The User Default Environment consists of the user default settings (any user default settings selected from the control panel) with the remainder of the environment features set to their factory default values.

---

## Modified Print Environment

The current printer feature settings constitute the modified print environment. Whenever a feature setting is altered using escape sequences, the new setting is recorded in the modified print environment.

The modified print environment consists of the current settings for the following features:

Number of Copies	Primary Font
Simplex/Duplex Print	Secondary Font
Left Offset Registration	Underline Mode
Top Offset Registration	Font ID
Paper Source	Character Code
Page Size	Raster Graphics Resolution
Page Length	Raster Graphics Presentation Mode
Orientation	Raster Graphics Left Margin
Left Margin	Area Fill ID
Right Margin	Horizontal Rectangle Size
Top Margin	Vertical Rectangle Size
Text Length	Macro ID
Perforation Skip Mode	Line Termination
HMI	End-Of-Line Wrap
VMI/Line Spacing	
Primary Font Characteristics	
Secondary Font Characteristics	

The following items are not part of the modified print environment:

- Current cursor position
- Cursor position stack

## Resetting the Print Environment

Resets are used to return the printer to a known environment. Depending on the type of reset performed, the printer returns to either the user default environment or the factory default environment.

A Printer Reset restores the user default environment and deletes temporary fonts and macros. A Printer Reset is performed by sending the  $\text{E}_C$  E command or by holding the RESET key on the control panel for approximately five seconds, until a "07 RESET" appears.

The  $\text{E}_C$  E command prints any partial pages of data which may have been received. The control panel RESET discards any formatted pages which have not yet been printed.

### Note



---

Hewlett-Packard strongly recommends the use of the  $\text{E}_C$  E command at the beginning and end of each job.

---

A RESET MENU restores the factory default environment but retains the printer configuration (that is, the AUTO CONTINUE and I/O type settings), deletes temporary fonts and macros, and discards any formatted pages which have not yet been printed.

A RESET MENU is performed by holding the RESET MENU key on the control panel for approximately five seconds (refer to the *Chapter 2 of the LaserJet IID Printer User's Manual* for additional information).

A COLD RESET restores the factory default environment and the factory printer configuration settings.

A COLD RESET is performed by power cycling the printer while pressing the ON LINE key.

## LaserJet Family Compatibility

Control panel functionality has been added to the **LaserJet IID** printer to permit selecting user defaults for certain features. This permits users to tailor their printer's default environment to their printing requirements. For example, European users may choose to select a font other than the factory default font as their default and EDP users may choose to select 66 lines per letter page rather than 60 lines as their default. To insure compatibility with applications written for **LaserJet** family printers, the user defaults must be set equal to their factory default values. The following table shows the factory default setting for each feature for which a user default setting may be selected.

**Table 3-2. LaserJet Family Compatibility**

LaserJet IID Control Panel Functionality	Compatibility Mode
Copies	01
Font Source	I unless cartridge has a default mark
Font Number	00
Duplex	Off
Tray	Both
Paper	Letter
Orientation	Portrait
Form	60
Manual Feed	Off
Symbol Set	Roman-8

---

## Contents

Introduction . . . . .	4-1
Printer Reset . . . . .	4-2
Number of Copies . . . . .	4-3
Simplex/Duplex Print . . . . .	4-4
Left Offset Registration . . . . .	4-7
Top Offset Registration . . . . .	4-9
Duplex Page Side Selection . . . . .	4-10



## Introduction

A job typically consists of three parts:

- commands providing job control,
- commands providing page control, and
- document data.

This chapter describes the commands providing job control. Job control commands are usually grouped together and sent at the beginning of a job. Page control commands and data are associated with each printed page of a job. Job control functionality includes the following:

- restoration of the user default environment,
- selection of the number of copies of each page,
- selection of single or double-sided printing.

<b>Preamble</b>	Job Control Commands
<b>Page 1</b>	Page Control Commands Data
<b>Page 2</b>	Page Control Commands Data
• • •	• • •
<b>Page n</b>	Page Control Commands Data

Figure 4-1. Structure of a Job

Note



If a number of consecutive pages within a job have the same format, the associated page control commands only need to be sent once for that group of pages.



---

## Printer Reset

Receipt of the Printer Reset command restores the user default environment, deletes temporary fonts and macros, and prints any partial pages of data which may have been received.

`^C E`

Hewlett-Packard strongly recommends the use of the printer reset command at the beginning and end of each job.

## Number of Copies

The Number of Copies command designates the number of printed copies of each page.

`^c &l # X`

# = Number of copies (1 to 99 maximum)

This command can be received anywhere within a page and affect the current page as well as subsequent pages.

The factory default number of copies is 1.

**Example** To print 3 copies of a page, send:

`^c&l3X`

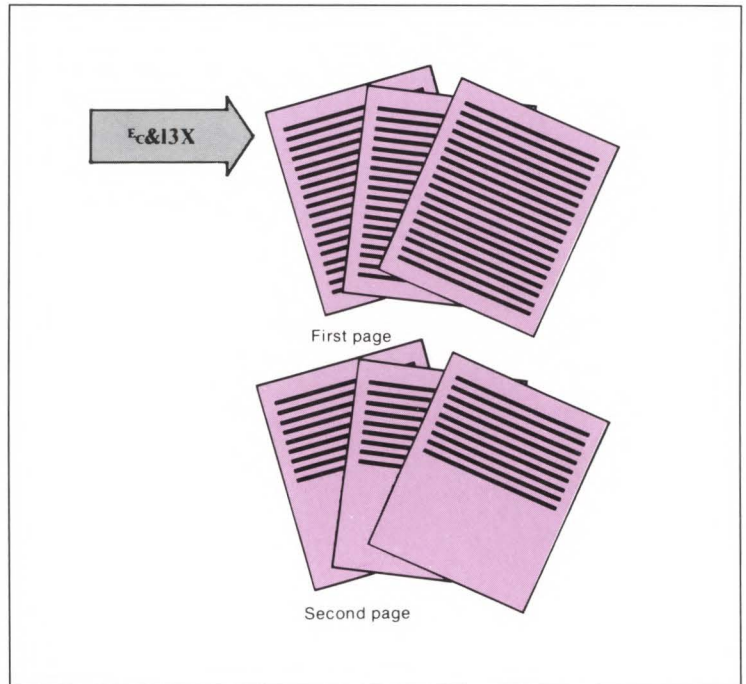


Figure 4-2. Number of Copies

---

## Simplex/Duplex Print

Simplex is a mode of printing in which an image is placed on only one side of each sheet of paper. Duplex is a mode of printing in which images are placed on both sides of a sheet of paper. The simplex/duplex print command designates the print mode.

`ESC & l # S`

- `# = 0 - Simplex`
- `= 1 - Duplex, Long-Edge Binding`
- `= 2 - Duplex, Short-Edge Binding`

Long-edge bound duplexed pages are bound along the length of the physical page (see Figure 4-3). Short-edge bound duplexed pages are bound along the width of the physical page (see Figure 4-4).

Portrait long-edge and landscape short-edge bound pages are not rotated. Portrait short-edge and landscape long-edge pages are rotated 180 degrees. This 180 degree rotation causes font rotation which requires user memory.

The factory default mode is simplex.

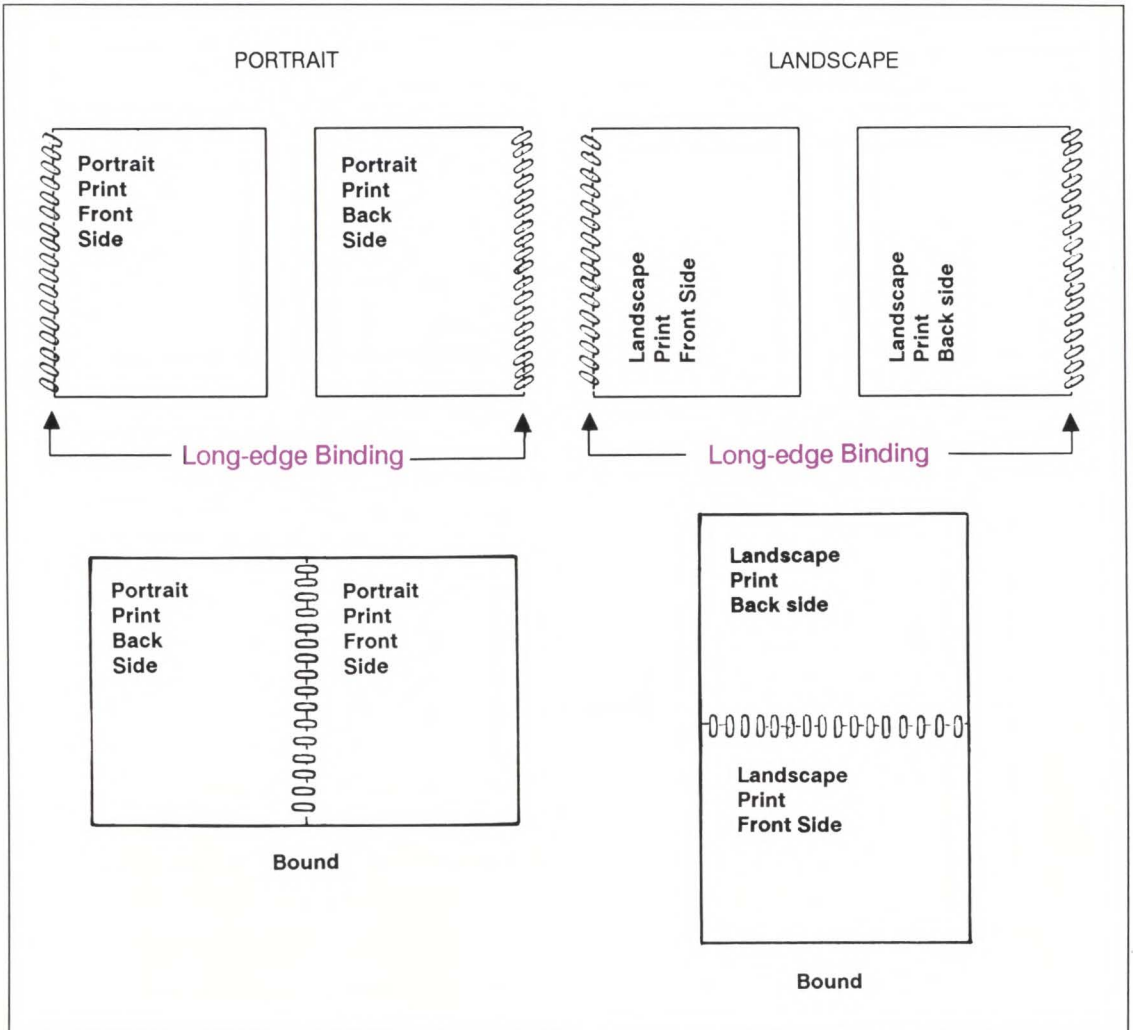


Figure 4-3. Long-Edge Binding Mode

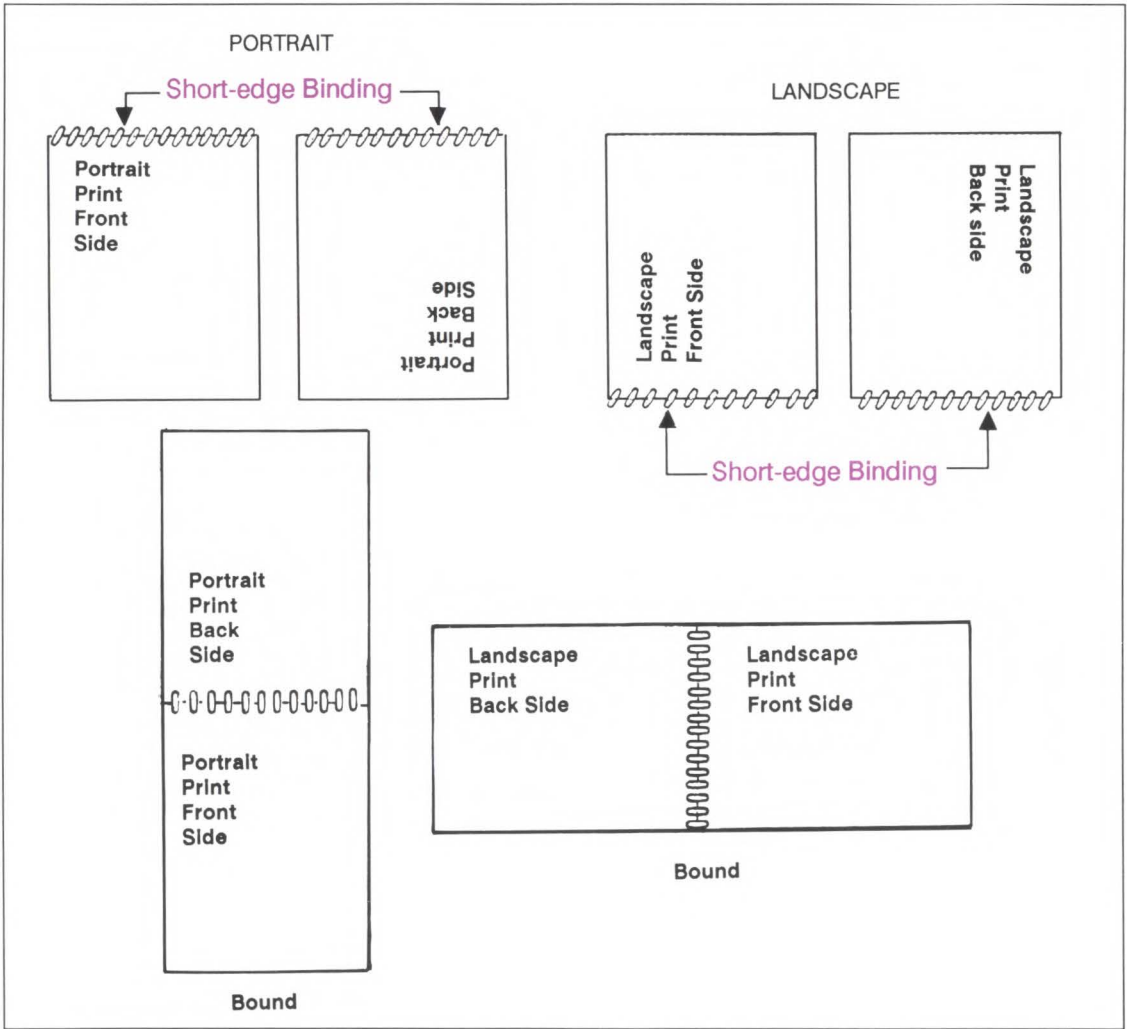


Figure 4-4. Short-Edge Binding Mode

## Left Offset Registration

The left offset registration command designates the position of the logical page across the width (short side) of the physical page. This command can be used to adjust the text position on the page to allow additional room for the page binding

$\text{^E}_C \& l \# U$

# = The number of decipoints (1/720<sup>th</sup> inch)

The value (#) is a signed number, valid to 4 decimal places. The units are decipoints. Positive values cause the logical page, regardless of orientation, to move right along the width of the physical page, except, on the back side of sheets printed in long-edge binding duplex mode where they cause it to move left (refer to Figures 4-5 and 4-6).

Negative values cause the logical page, regardless of orientation, to move left along the width of the physical page, except on the back side of sheets printed in long-edge binding duplex mode where they cause it to move right (refer to Figures 4-5 and 4-6).

### Note



1. The +/- value is absolute with respect to the default position of the logical page, along the width of the physical page. It is not relative to the present location.
2. The registration commands may cause data loss by moving the logical page outside the printable area.
3. This command has the same effect regardless of orientation.
4. This command can be used in both simplex and duplex modes.

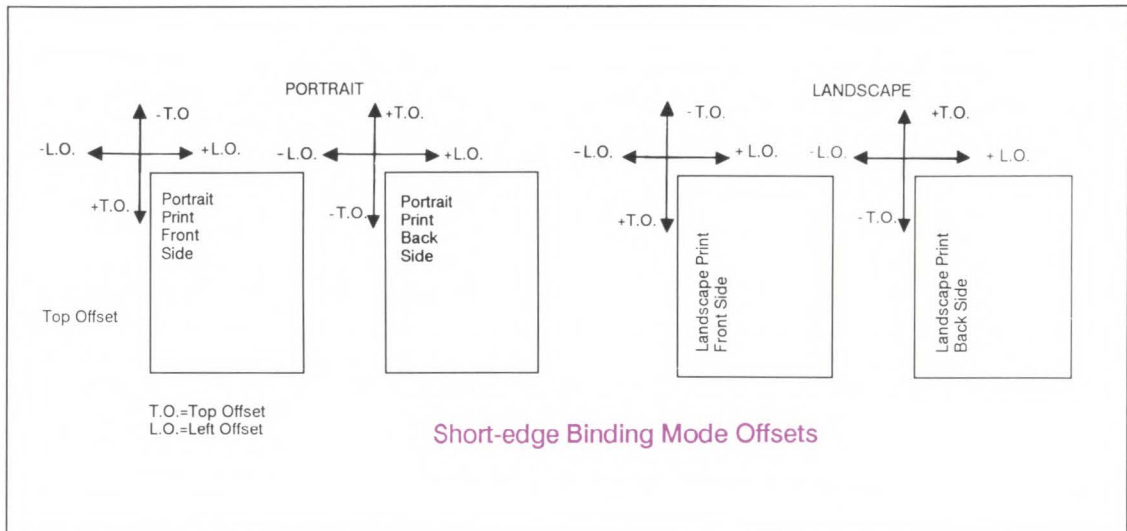


Figure 4-5. Short-Edge Binding Mode Offset

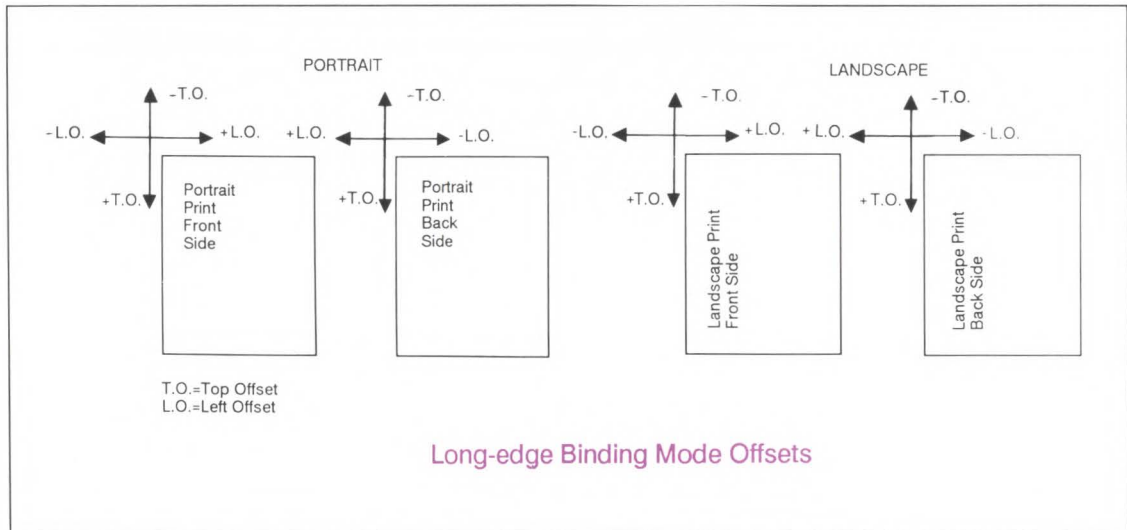


Figure 4-6. Long-Edge Binding Mode Offset

---

## Top Offset Registration

The top offset registration command designates the position of the logical page along the length (long side) of the physical page.

$\text{E}_c \ \& \ l \ \# \ Z$

$\#$  = The number of decipoints ( $1/720^{\text{th}}$  inch)

The value ( $\#$ ) is a signed number, valid to 4 decimal places. The units are decipoints. Positive values cause the logical page, regardless of orientation, to move down along the length of the physical page except, on the backside of sheets printed in short-edge binding duplex mode, where they cause it to move up (refer to Figures 4-5 and 4-6).

Negative values cause the logical page, regardless of orientation, to move up, along the length of the physical page except, on the backside of sheets printed in short-edge binding duplex mode, where they cause it to move down (refer to Figures 4-5 and 4-6).

### Note



1. The  $+/-$  value is absolute with respect to the default position of the logical page, along the length of the physical page. It is not relative to the current location of the logical page.
2. The registration command may cause data loss by moving the logical page outside the printable area.
3. This command has the same effect regardless of orientation.
4. This command can be used in both simplex and duplex modes.



## Duplex Page Side Selection

The ability to skip a page while duplexing may be required at certain locations in a document. For example, a chapter typically begins on the front side of a page.

Receipt of the Duplex Page Side command causes a form feed and designates which side to print on next.

$\text{E}_c \ \& \ a \ \# \ G$

- # = 0 - Select next side
- = 1 - Select front side
- = 2 - Select back side

If duplexing is not enabled, these commands just eject the current page, positioning the cursor at the default position on the next page.

### Example

To print on the front side of a page, regardless of the current side, send the following:

$\text{E}_c \ \& \ a \ 1 \ G$

If, in the above example, the printer is currently formatting a front side, the printer will stop formatting and eject that page, and begin printing on the next front page (skipping the back page).

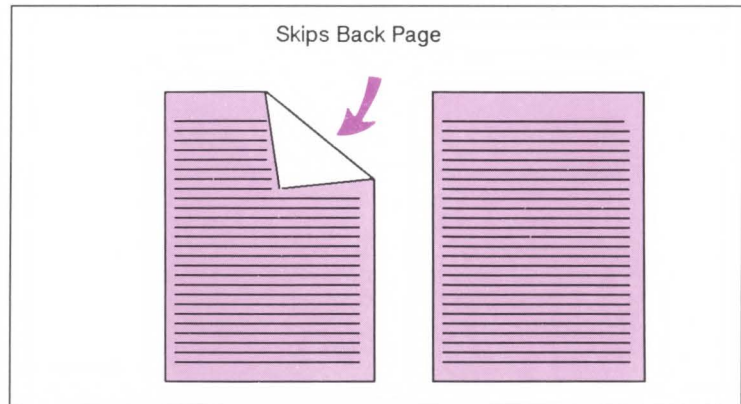


Figure 4-7. Page Side Selection

---

## Contents

Introduction .....	5-1
Page Size .....	5-2
Paper Source .....	5-3
Page Length .....	5-5
Orientation .....	5-7
Text Area .....	5-8
Left Margin .....	5-10
Right Margin .....	5-11
Clear Horizontal Margins .....	5-12
Top Margin .....	5-13
Text Length .....	5-15
Perforation Region .....	5-16
Horizontal Motion Index .....	5-17
Vertical Motion Index .....	5-18
Line Spacing .....	5-19



---

## Introduction

A job typically consists of three parts:

- commands providing job control,
- commands selecting page format, and
- document data.

Job control commands are usually grouped together and sent at the beginning of a job. Page Control commands and data are associated with each printed page of a job. This chapter describes the commands providing page format control. Page format control functionality provides for selection of the page source, size, orientation, margins, and text spacing.

---

## Page Size

The Page Size command designates the physical page size which in turn defines the size of the logical page.

`ESC & Q # A`

- # = 1 - Executive (7.25" x 10.5")
- 2 - Letter (8.5" x 11")
- 3 - Legal (8.5" x 14")
- 26 - A4 (210mm x 297mm)

ENVELOPES:

- 80 - Monarch (Letter - 3 $\frac{7}{8}$ " x 7 $\frac{1}{2}$ " )
- 81 - Commercial 10 (Business - 4 $\frac{1}{8}$ " x 9 $\frac{1}{2}$ " )
- 90 - International DL (110mm x 220mm)
- 91 - International C5 (162mm x 229mm)

Upon receipt of this command any unprinted pages will be printed, the top margin, text length, and left and right margins will be set to their user defaults, and the automatic macro overlay will be disabled. The cursor is moved to the left edge of the logical page at the top margin on the following page.

If a page size different from that of the installed paper is specified, a message is displayed on the control panel requesting installation of paper of the specified size.

### Note



---

The Page Size command is not supported on the **LaserJet**, **LaserJet Plus**, or the **LaserJet 500** printers.

---

The factory default page size is letter; however, a user default page size may be selected from the control panel.

### Example

To select a legal size page, send:

`ESC & Q 3 A`

---

## Paper Source

The Paper Source command designates any one of four possible paper locations as the paper source for printing or prints the current page.

$\text{E}_c \ \& \ \text{Q} \ \# \ \text{H}$

- # = 0 - Print the current page (paper source remains unchanged)
- 1 - Feed paper from upper tray
- 2 - Feed paper from manual input
- 3 - Feed envelope from manual input
- 4 - Feed paper from lower tray
- 6 - Feed envelope from envelope feeder

If the printer is printing a job and the selected source runs out of paper, the printer has the ability to select an alternate paper source, allowing printing to continue. This ability is referred to as auto-selection. The control panel "TRAY =" menu selection specifies the paper source and also identifies which tray(s) are available for auto-selection. If "TRAY=BOTH" is specified then both trays will be available for auto selection. In this case, if the printer runs out of paper in the current source, it will automatically select an alternate source, provided that source contains the currently specified paper size. When determining the paper source, selection of paper size has priority over source. That is, suppose the printer is printing letter paper from the upper tray and contains legal paper in the lower tray. If the printer receives a Paper Size command for legal paper, the printer will auto-select the alternate (legal paper) source.

It is possible to "lock out" (or secure) a source from auto-selection by setting the "TRAY=" menu to either "UPPER" or "LOWER". If "TRAY=UPPER" is specified then only the upper tray will be available for auto-selection, the lower tray is "locked out" from the auto-selection process. However, the lower tray can still be selected programmatically, using the Paper Source command.

Since there are only two trays in this printer, specifying only one, in effect, disables auto-selection except, if the HP 33457 Envelope Feeder is installed (see note below). The specified tray (either upper or lower) becomes the source from which the printer will normally select paper, unless a Paper Source command designates

the other tray. If "TRAY=BOTH" is selected, the printer selects paper from the top tray first then from the bottom tray.

## Note



---

If the HP 33457 Envelope Feeder is installed, it is available for auto-selection for all settings of the "TRAY=" menu selection. For example, if "TRAY=UPPER" then the upper tray and envelope feeder are available for auto-selection. Assume that envelopes are available in both the envelope feeder and the upper tray. If the printer runs out of envelopes in the feeder, it will continue feeding envelopes from the upper tray.

---

Specifying only one source for printing can be useful for print jobs which require two different papers: for example, one letter-head cover page and several plain pages. For this type of job, "TRAY=" should be set to "UPPER, the letter head paper should be installed into the lower ("locked out") tray and the regular paper installed into the upper tray. When the job runs, it should select the first page (the letter-head) from the lower tray using the Paper Source command. Next, the job should select the regular paper from the upper tray using the Paper Source command. With this setup, when the paper in a tray runs out, the printer will not auto-select another source but will display a request that paper be loaded. Thus, using this feature ensures that the pages are printed on the correct sheet.

The default paper source is determined by the user default page size as configured from the control panel.

When more than one source contains the same paper size, the printer will select the sources in the following order:

- Envelope Feeder (if installed)
- Upper Tray
- Lower Tray

## Example

To feed paper from the manual feed slot, send:

```
ESC&l2H
```

---

## Page Length

The Page Length command designates the length of the logical page which in turn defines the physical page size.

$\text{F}_C \ \& \ \text{Q} \ \# \ \text{P}$

# - Number of Lines

The value field (#) identifies the length of the logical page in lines. If a request is received for a page length greater than the maximum supported page size or if the Vertical Motion Index (VMI) is 0, the Page Length command is ignored.

If a Page Length command is received that designates a page size different from that of the installed paper, a message is displayed on the control panel requesting installation of the appropriate paper size.

Upon receipt of this command any unprinted pages will be printed, the top margin, text length, left and right margins will be set to their user defaults, and the automatic macro overlay will be disabled. The cursor will be moved to the left edge of the logical page at the top margin on the following page.

The Page Length command must be used with the **LaserJet**, **LaserJet Plus**, and **LaserJet 500** to set the page size. Either command can be used with the **LaserJet series II**, **LaserJet IID**, and **LaserJet 2000** printers, however, the Page Size command is preferred over the Page Length command. The command most recently received will be in effect.

The factory default logical page length is defined by the factory default page size, which is letter; however, a user default page size may be selected from the control panel.

Note



---

A change in the control panel FORM setting results in a modification of the VMI. If the Page Length command follows a VMI change, the physical size of the page is recalculated. The page length command may result in selecting a different paper size.

---



The following tables list page length values associated with the standard paper sizes.

**Table 5-1. Portrait Orientation Page Length Settings.**

Page Size	Lines-per-inch Setting:	
	6	8
Letter	66	88
Legal	84	112
A4	70	93
Executive	63	84

**Table 5-2. Landscape Orientation Page Length Settings**

Page Size	Lines-per-inch Setting:	
	6	8
Letter	51	68
Legal*	---	----
A4	49	66
Executive	43	58

\* To print a legal size page in landscape orientation, start out in portrait orientation, set the page length using the `FC&l84P` command, and then set the orientation using the `FC&l10` command.

To determine the number of lines per page, simply multiply the line spacing setting (lines per inch) times the length of the page in inches.

## Orientation

Orientation defines the position of the logical page and the direction of print with respect to the physical page as shown in Figure 5-1.

$E_C$  &  $l$  #  $O$

# = 0 - Portrait

1 - Landscape

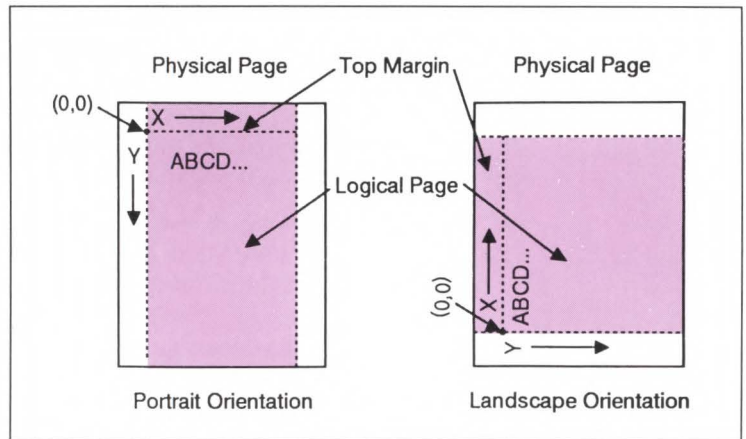


Figure 5-1. Page Orientation

The Orientation command causes the page length, top margin, text length, left and right margins, Horizontal Motion Index (HMI) and VMI to be set to their user default values, and disables the automatic macro overlay. Also, all data received prior to this command will be printed and a form feed and carriage return executed (the cursor is moved to the left edge of the logical page at the top margin on the following page).

The factory default orientation is portrait. Landscape orientation may be selected as the user default orientation using the control panel.

Note



Only one orientation is allowed per page.

---

## Text Area

Text printing may be restricted to a specific area within the logical page using the left margin, right margin, top margin, text length and perforation skip mode commands. This area is known as the text area.

The left margin defines the distance between the left edge of the logical page and the left edge of the text area. The right margin defines the distance between the left edge of the logical page and the right edge of the text area. The width of the text area is the distance between the left and right margins. The top margin defines the distance between the top of the logical page and the top of the text area. The text length defines the length of the text area. The perforation skip region is the distance from the bottom of the text area to the top of the text area on the next page. The text area is shown in Figure 5-2.

In general, characters will be printed when they fall within the text area. Characters will be printed between the bottom of the text area and the top of the text area on the next page only when perforation skip is disabled. Characters will be printed outside the text area if a cursor move escape sequence positions the cursor there.

Note



---

Attempting to print characters outside the printable area will result in data loss.

---

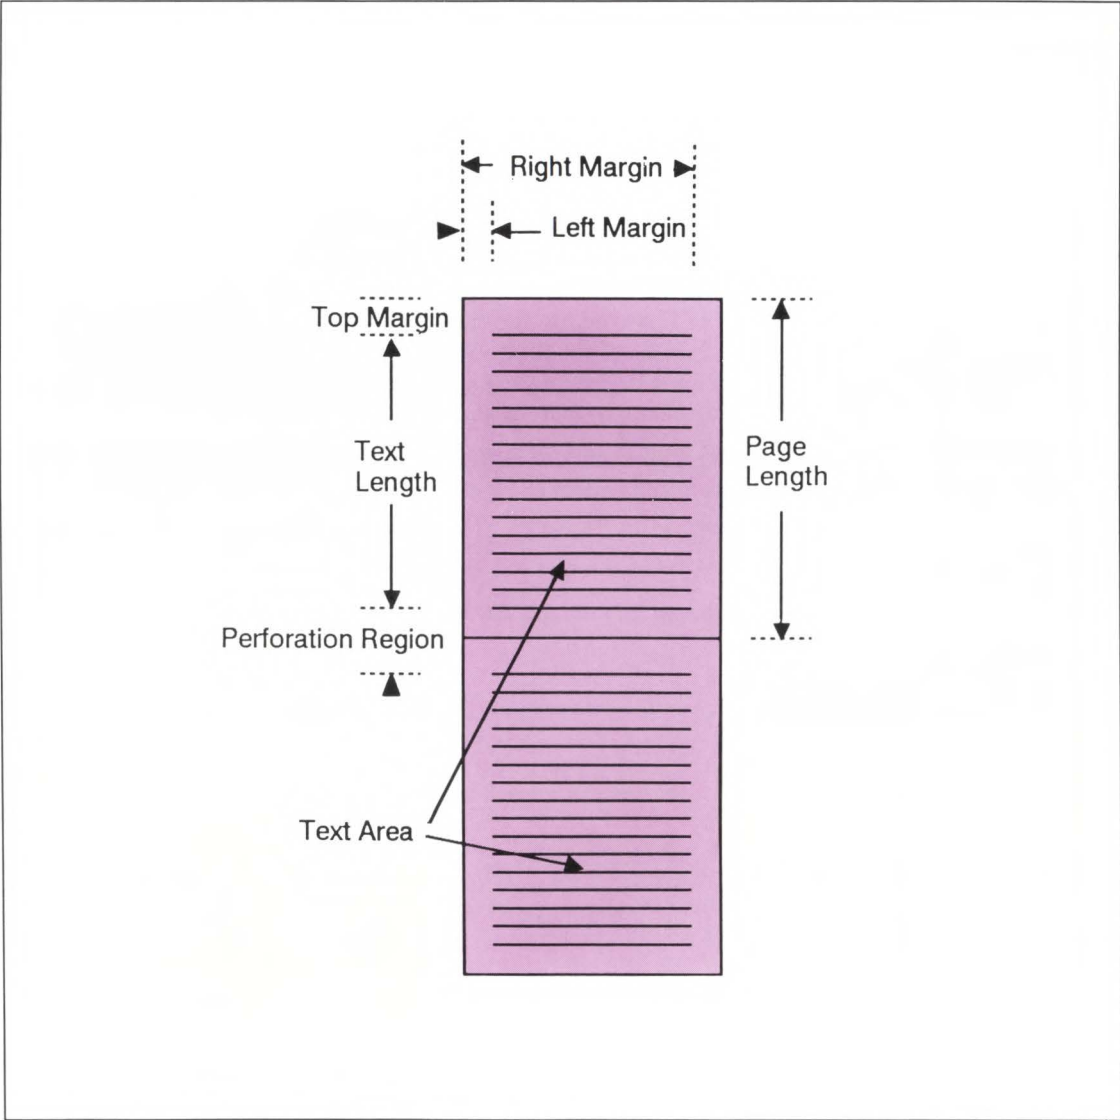


Figure 5-2. Text Area within the Page

---

## Left Margin

The Left Margin command sets the left margin to the left edge of the specified column.

`ESC & a # L`

# = Column number

The first column within a line is column 0, which is located at the left edge of the logical page (HMI defines the distance between columns). If the value field specifies a column greater than the current right margin, the command is ignored.

Margins represent a physical position and once set do not change with subsequent changes in HMI.

If the cursor is to the left of the new left margin, the cursor will be moved to the new left margin.

The factory default left margin is column 0.

**Example** To set the left margin to column 5, send:

`ESC&a5L`

---

## Right Margin

The Right Margin command sets the right margin to the right edge of the specified column.

$\text{E}_c \& a \# M$

$\#$  = Column number

The maximum right column is located at the right edge of the logical page (HMI defines the distance between columns). If the value field specifies a column which is greater than the right edge of the logical page, the right margin is set to the right edge of the logical page. If the value field specifies a column less than the left margin, the command is ignored.

Margins represent a physical position and once set do not change with subsequent changes in HMI.

If the cursor position is to the right of the new right margin, the cursor will be moved to the new right margin.

The factory default right margin is the right edge of the logical page.

**Example** To set the right margin to column 45, send:

$\text{E}_c \& a 45 M$

---

## Clear Horizontal Margins

The Clear Horizontal Margins command resets the left and right margins. The left margin is set to the left edge of the logical page (column 0) and the right margin is set to the right edge of the logical page.

Ⓔ 9 - Reset Left and Right Margins

---

## Top Margin

The Top Margin command designates the number of lines between the top of the logical page and the top of the text area.

$$^E_C \& l \# E$$

# = Number of lines

The Top Margin command is ignored if the value field (#) is greater than the current logical page length or if the current VMI is 0 (VMI defines the distance between lines of text). Receipt of a Top Margin command resets the text length to (logical page length in inches - top margin in inches - 1/2 inch).

The top margin represents a physical position and once set does not change with subsequent changes in VMI or line spacing.

The vertical cursor position of the first line of print on the logical page is determined by the current values of top margin and VMI, using the following equation:

$$\text{first line in inches} = \text{top margin in inches} + (3/4 * \text{VMI})$$

Note that the cursor is positioned down 75% of the the VMI distance ( $75/100 * \text{VMI}$ ). This positions the cursor at the base line position of a character for correct character positioning in a character cell.

**Example** To set the top margin to line 4, send:

$$^E_C \& l 4 E$$

**Note**



---

The first line of the logical page is line 0.

---



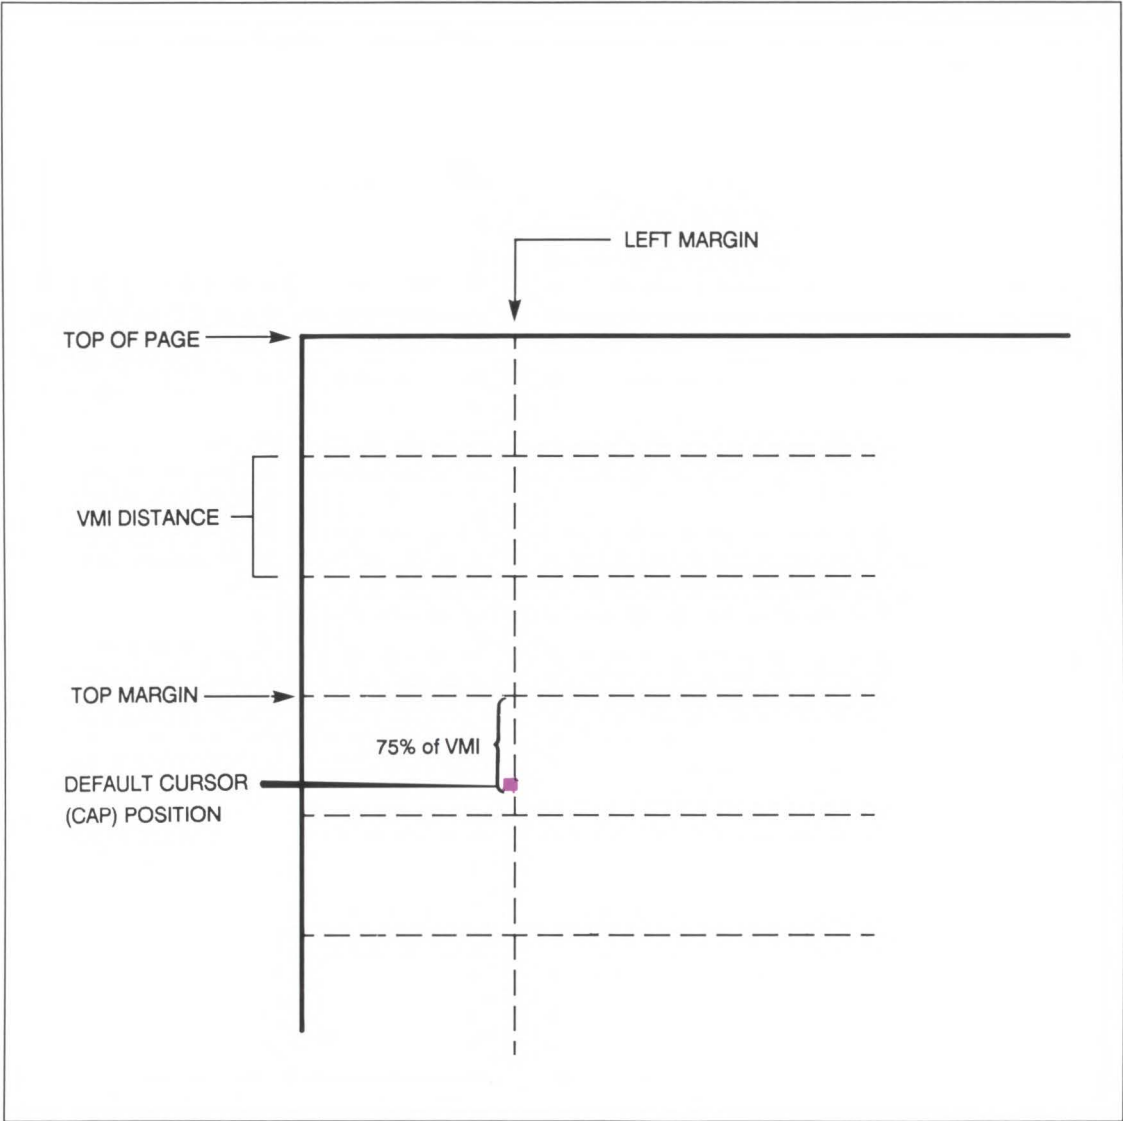


Figure 5-3. Top Margin Cursor Positioning

## Text Length

The Text Length command designates the number of lines within the logical page available for printing text.

$\text{E}_C \ \& \ \text{Q} \ \# \ \text{F}$

# = Number of lines

The value field (#) sets the text length in lines referenced from the top margin. If a value greater than the logical page length minus the top margin is specified or if the current VMI is 0, the command is ignored. The user default text length is invoked whenever the orientation, page length, page size or top margin is changed. The user default text length is computed as follows:

TEXT LENGTH IN LINES =

integer portion of  $((\text{logical page length in inches} - \text{top margin in inches} - 1/2 \text{ inch}) \times 48/\text{VMI})$

The factory default text length in lines is:

$((\text{logical page length in inches} - 1") \times 6)$ .

Note



The user default VMI is selectable using the control panel; that is, the VMI is calculated from the FORM menu setting.

Example

To select a text length of 60 lines, send:

$\text{E}_C \ \& \ \text{Q} \ 60 \ \text{F}$

---

## Perforation Region

The perforation region is the distance from the bottom of the text area of one page to the top of the text area of the next page. When perforation skip is enabled a line feed or half line feed that would move the cursor beyond the bottom of the text area, causes the cursor to move to the top of the text area on the next page. When perforation skip is disabled, a line feed or half-line feed will allow the cursor to move to the next line or half-line into the perforation region allowing printing to continue there.

$\text{E}_c \ \& \ \ell \ \# \ L$

# = 0 - Disable

1 - Enable

The factory default is perforation skip enabled.

Note



---

When perforation skip is disabled, some print lines could fall outside the printable area, therefore, these lines will be lost.

---

---

## Horizontal Motion Index

The Horizontal Motion Index (HMI) command designates the distance between columns.

$\text{E}_C \& k \# H$

# = Number of 1/120<sup>th</sup> inch increments.

The value may range from 0 to 32767.

The value field is valid to 4 decimal places. A value of zero (0) indicates no horizontal motion.

When fixed pitch fonts are selected, all printable characters including the space and backspace characters are affected by HMI. When proportional fonts are selected, the HMI affects only the control code space character.

HMI is defaulted when any of the font characteristics are changed and when switching between primary and secondary fonts with shift in and shift out.

The default HMI is equal to the pitch value in the font header. The factory default font's HMI is 12 (which is  $12/120^{\text{th}} = 1/10^{\text{th}}$  inch per character or 10 characters per inch).

**Example** To select an HMI for 12 characters per inch, send:

$\text{E}_C \& k 1 0 H$

---

## Vertical Motion Index

The Vertical Motion Index (VMI) command designates the distance between rows.

$\text{E}_C \& \ell \# C$

# = number of 1/48<sup>th</sup> inch increments between rows.

The range of the value field (#) is from 0 to 32767. If specified VMI is greater than the current logical page length, the command is ignored.

The value field is valid to 4 decimal places. A 0 in the value field indicates no vertical movement.

This command affects the line feed and half line feed spacing.

The factory default VMI is 8 which corresponds to 6 lines per inch. A user default VMI can be selected from the control panel using the FORM menu item (refer to the *LaserJet IID Printer User's Manual* for additional information).

**Example** To designate a VMI of 6 (8 lines per inch) send:

$\text{E}_C \& \ell 6 C$

(that is,  $6/48^{\text{th}} = 1/8^{\text{th}}$  inch/line)

**Note**



- 
1. The following converts lines-per-inch spacing to VMI:

$$\text{VMI} = 48 \times \left( \frac{1}{\# \text{ of desired lines per inch}} \right)$$

2. A change in the control panel FORM setting results in a modification of VMI. If the Page Length command ( $\text{E}_C \& \ell \# P$ ) follows a VMI change, the physical size of the page is recalculated. Therefore, depending on the VMI modification made, the printer may request a different paper size.
-

---

## Line Spacing

The Line Spacing command sets the number of lines printed per inch.

$\text{E}_C \ \& \ \text{Q} \ \# \ \text{D}$

# = 1 - 1 lpi  
2 - 2 lpi  
3 - 3 lpi  
4 - 4 lpi  
6 - 6 lpi  
8 - 8 lpi  
12 - 12 lpi  
16 - 16 lpi  
24 - 24 lpi  
48 - 48 lpi

This command performs the same function as the Vertical Motion Index (VMI) command except that it identifies the VMI in lines per inch (lpi).

The factory default lines per inch setting is 6. A user default line spacing can be selected from the control panel using the FORM menu item.

**Example** To select 12 lpi, send:

$\text{E}_C \ \& \ \text{Q} \ 12 \ \text{D}$



## Contents

Introduction .....	6-1
Absolute/Relative Cursor Positioning .....	6-2
Cursor Positioning Units .....	6-3
Horizontal Cursor Positioning (Columns) .....	6-4
Horizontal Cursor Positioning (Decipoints) .....	6-5
Horizontal Cursor Positioning (Dots) .....	6-6
Horizontal Cursor Positioning Control Codes .....	6-7
Vertical Cursor Positioning (Rows) .....	6-8
Vertical Cursor Positioning (Decipoints) .....	6-9
Vertical Cursor Positioning (Dots) .....	6-10
Half-Line Feed .....	6-11
Vertical Cursor Positioning Control Codes .....	6-12
Line Termination .....	6-13
Push/Pop Cursor Positioning .....	6-14





---

## Introduction

This section describes the cursor positioning commands. Although the printer does not actually have a cursor, the cursor position refers to the currently active printing position (like the blinking underline character [cursor] used on most computer terminals). The cursor can be moved anywhere within the logical page using a combination of horizontal and vertical cursor positioning commands and control codes.

## Absolute/Relative Cursor Positioning

Either relative or absolute motion can be specified. **Relative motion** specifies the distance to move from the current active position; **absolute motion** specifies a physical position from the top margin at the left bound of the logical page, which is the horizontal and vertical 0 position.

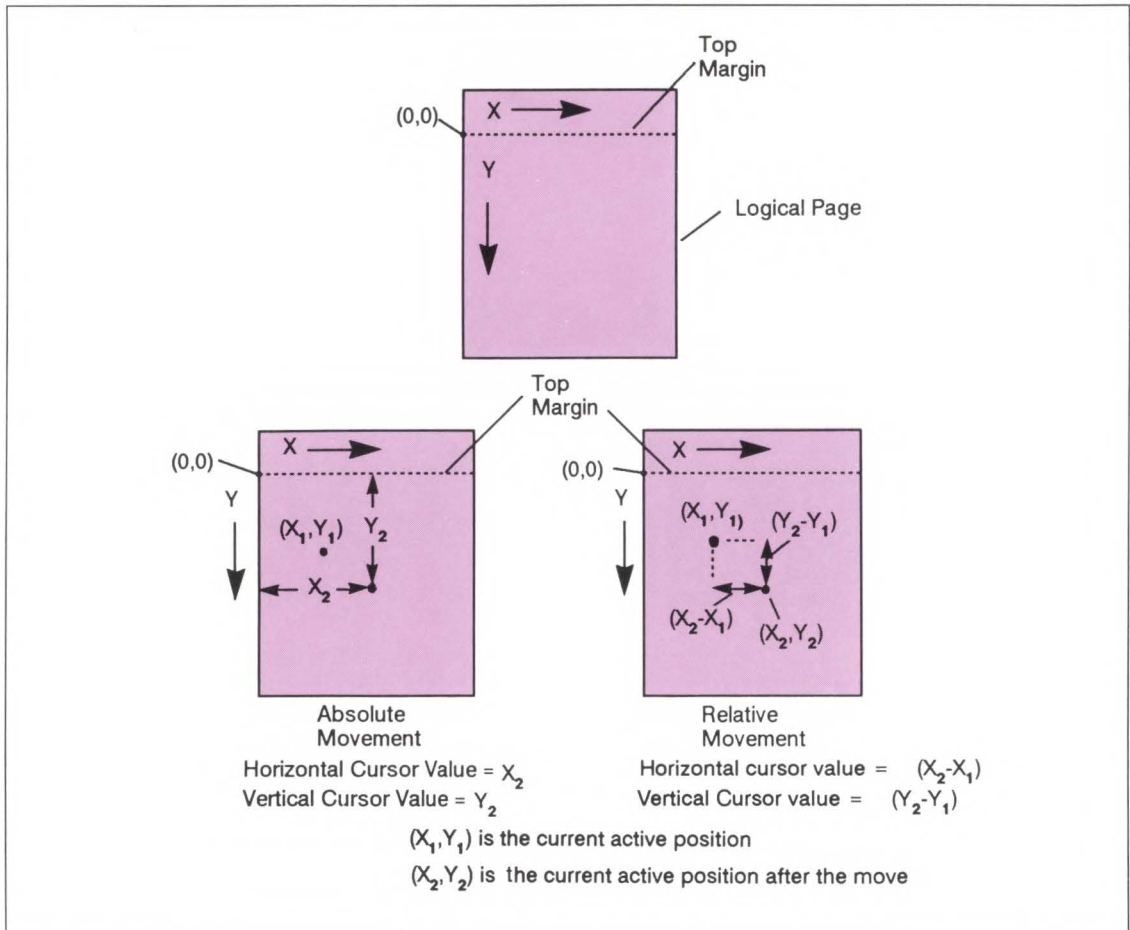


Figure 6-1. Absolute and Relative Cursor Positioning

---

## Cursor Positioning Units

Cursor positioning is done in PCL coordinate system units.

The units of the X-axis of the PCL coordinate system may be dots, decipoints or columns. The units of the Y-axis of the PCL coordinate system may be dots, decipoints or rows.

A dot is the smallest printable unit. In the **LaserJet IID** printer one dot equals  $1/300^{\text{th}}$  inch. The number of dots printed per inch is referred to as the printer's resolution.

A decipoint is  $1/720^{\text{th}}$  inch or  $1/10^{\text{th}}$  of a PCL typographic point.

The width of a column is defined by the current horizontal motion index (HMI). The distance between rows is defined by the current vertical motion index (VMI). HMI is the distance between consecutive characters. VMI is the distance between consecutive lines of text. HMI and VMI are described in more detail in Chapter 5.

---

## Horizontal Cursor Positioning (Columns)

This Horizontal Cursor Positioning command moves the current active horizontal position to a new column position on the current line.

$E_c \& a \# C$

$\#$  = Number of Columns

The width of a column is defined by the current HMI. A value field ( $\#$ ) with a plus sign (+) indicates the new position is to the right of and relative to the current cursor position; a minus sign (-) indicates the new position is to the left of and relative to the current cursor position. No sign indicates an absolute distance which is referenced from the left edge of the logical page. The first column within a line is column 0. This sequence ignores margins and can therefore be used to set the current active position to any location along the current line. If a request is made for a location outside the printer's logical page, the current active position is moved to the appropriate logical page limit.

The value field is valid to 4 decimal places.

## Horizontal Cursor Positioning (Decipoints)

This Horizontal Cursor Positioning command moves the current active horizontal position to a new position along the horizontal axis.

$\text{E}_c$  & a # H

# = Number of Decipoints (1/720<sup>th</sup> inch)

A value field (#) with a plus sign (+) indicates the new position is to the right of and relative to the current cursor position; a minus sign (-) indicates the new position is to the left of and relative to the current cursor position. No sign indicates an absolute distance which is referenced from the left edge of the logical page. The left most position is 0 and the right most position is the right bound of the logical page. If a request is made for a location outside the printer's logical page, the current active position is moved to the appropriate logical page limit.

The value field is valid to 2 decimal places.

---

## Horizontal Cursor Positioning (Dots)

This Horizontal Cursor Positioning command moves the current active horizontal position to a new position along the horizontal axis.

$$^E_C * p \# X$$

# = Number of dots

A value field (#) with a plus sign (+) indicates the new position is to the right of and relative to the current cursor position; a minus sign (-) indicates the new position is to the left of and relative to the current cursor position. No sign indicates an absolute distance which is referenced from the left edge of the logical page. The left most position is 0 and the right most position is the right bound of the logical page. If a request is made for a location outside the printer's logical page, the current active position is moved to the appropriate logical page limit.

## Horizontal Cursor Positioning Control Codes

There are four control codes which can be used to position the cursor horizontally on the current line. These control codes are explained below.

**CR - Carriage Return** Moves the current active position to the left margin on the current line. (Refer to the Line Termination command described later in this chapter.)

**SP - Space** Moves the current active position to the right by one column position. Space may be a printable character or a control code. If a character is defined for the space code, space is printable; otherwise, it is a control code. For proportionally spaced fonts a space control code updates the cursor by the current HMI value; however, a printable space updates the cursor the width of the character. For fixed pitch fonts, a space, whether it be a control code or printable, updates the cursor according to the HMI value.

**BS - Backspace** Moves the current active position left a distance equal to the width of the last printed symbol or space. If the active position is already at the left margin, no action is taken.

When using fixed pitch fonts, the backspace distance is defined by the current print pitch (that is HMI setting).

When using proportionally-spaced fonts, a single backspace moves back in such a way as to center the overstriking character with the character being overstruck. After printing the overstrike character the cursor position is at the same position as before the backspace. Multiple backspaces each move back the distance of the last printed symbol or space. For example, if "world" was printed with a proportional font and then 5 backspaces were performed, the distance moved back would be five times the width of the "d." If the active position is already at the left margin, no action is taken.

**HT - Horizontal Tab** Moves the current active position to the next tab stop on the current line. The tab stops are at the left margin and every 8<sup>th</sup> column between the left margin and the right bound of the logical page. If the new horizontal position crosses the right margin, the new horizontal position is set to the right margin. If the current HMI value is 0, the command is ignored.



---

## Vertical Cursor Positioning (Rows)

This Vertical Cursor Positioning command moves the current active vertical position to the same column position on a new line.

$\text{E}_c \ \& \ a \ \# \ R$

$\#$  = Number of Rows

A value field ( $\#$ ) with a plus sign (+) indicates the new position is downward from and relative to the current cursor position and a minus sign (-) indicates the new position is upward from and relative to the current cursor position. No sign indicates the new position is absolute from the top margin. The top position, defined by the top margin, is 0 and the bottom position is determined by the bottom of the logical page.

Absolute or negative relative requests which exceed the logical page limits move the cursor to the appropriate logical page limit. Positive relative positioning allows the user to move off the current page the number of lines specified. Vertical cursor positioning ignores perforation skip mode, allowing the user to move into the perforation region.

The printer limits the positive relative movement to the top of form of the page after the next page (that is, ejecting one blank page).

The value field is valid to 4 decimal places.

## Vertical Cursor Positioning (Decipoints)

This Vertical Cursor Positioning command moves the current active vertical position to a new position along the vertical axis.

$E_C$  & a # V

# = Number of Decipoints (1/720<sup>th</sup> inch)

A value field (#) with a plus sign (+) indicates the new position is downward from and relative to the current cursor position and a minus sign (-) indicates the new position is upward from and relative to the current cursor position. No sign indicates an absolute distance from the top margin. The top position, defined by the top margin, is 0 and the bottom position is determined by the bottom of the logical page. If a request is made for a location outside the printer's logical page, the current active position is moved to the appropriate logical page limit.

The value field is valid to 2 decimal places.

---

## Vertical Cursor Positioning (Dots)

This Vertical Cursor Positioning command moves the current active vertical position to a new position along the vertical axis.

$$\text{E}_c * p \# Y$$

# = Number of Dots

A value field (#) with a plus sign (+) indicates the new position is downward from and relative to the current cursor position and a minus sign (-) indicates the new position is upward from and relative to the current cursor position. No sign indicates an absolute distance from the top margin. The top position, defined by the top margin, is 0 and the bottom position is determined by the bottom of the logical page. If a request is made for a location outside the printer's logical page, the current active position is moved to the appropriate logical page limit.

---

## Half-Line Feed

The Half-Line Feed command moves the cursor to the same character position one-half line down. The distance moved for a half-line feed is one-half of the current line spacing (defined by the last VMI or line spacing setting).

$E_C =$  Half-line Feed

---

## Vertical Cursor Positioning Control Codes

There are 2 control codes which can be used to position the cursor vertically. These control codes are explained below.

**LF - Line Feed** Advances the current active position to the same horizontal position on the next line. The distance to the next line is defined by the current line spacing (defined by the last VMI or line spacing setting). (Refer to the Line Termination command described later in this chapter.)

**FF - Form Feed** Advances the current active position to the same horizontal position at the top of the text area on the next page. (Refer to the Line Termination command described later in this chapter.)

---

## Line Termination

The Line Termination command controls the way the printer interprets CR, LF, and FF control characters.

$\text{E}_c$  & k # G

- # = 0 - CR→CR; LF→LF; FF→FF
- 1 - CR→CR-LF; LF→LF; FF→FF
- 2 - CR→CR; LF→CR-LF; FF→CR-FF
- 3 - CR→CR-LF; LF→CR-LF; FF→CR-FF

The factory default line termination value is 0.

---

## Push/Pop Cursor Position

The Push/Pop Cursor Position command allows the current cursor position to be stored and recalled.

$\text{F}_c \text{ \& f \# S}$

# = 0 - Push (Store cursor position)  
1 - Pop (Recall a cursor position)

A value field of 0 **pushes** the cursor position onto the stack (leaving the current position unaffected). A value field of 1 **pops** the position from the stack, restoring it as the current cursor position.

### Note



---

The last item **pushed** is the first item **popped**.

---

Twenty positions may be pushed. If the user tries to save more than 20 positions, the command is ignored. If the user tries to restore more positions than were pushed, the command is ignored. A printer reset restores the current active position stack to the top (all saved positions are discarded).

If the position popped is outside the current logical page, the position is moved to the appropriate limit.

---

## Contents

Introduction .....	7-1
Symbol Set .....	7-2
Spacing .....	7-3
Pitch .....	7-4
Height .....	7-4
Style .....	7-5
Stroke Weight .....	7-5
Typeface .....	7-6
Orientation .....	7-7





## Introduction

A font is a set of characters that have similar characteristics. A font has an assigned name, **typeface**, and is further described by its **spacing**, **height**, **pitch**, **style**, **stroke weight**, and **symbol set**.

For example, the name of the font used for this text is TmsRmn; its **height** is 10 point, its **style** is upright, and its **stroke weight** is medium.

The following are some examples of different fonts:

Courier Regular 12 pitch 10 point  
abcdefABCDEF12345&%!?

TmsRmn Regular 12 point  
abcdefABCDEF12345&%!?

Helv Regular 12 point  
abcdefABCDEF12345&%!?

**Helv Bold 18 point**  
**abcdefABCDEF12345&%!?**

**Cooper Black 24 point**  
**abcdefABCDEF12345&%!?**

Figure 7-1. Font Samples

Some printers require fonts in the orientation which matches the orientation of the page. This is not the case with the **LaserJet IID** printer. This printer automatically rotates fonts to the current orientation; thus, all fonts are available in either orientation.



## Spacing

Another characteristic that differentiates fonts is spacing. Fonts have either fixed or proportional spacing. Fixed-spaced fonts are those for which the inter-character spacing is constant. Proportionally-spaced fonts are those for which the inter-character spacing varies with the natural shape of a character.

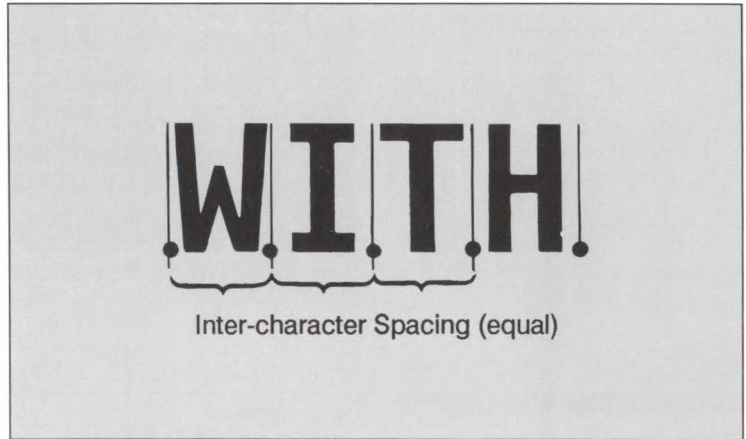


Figure 7-3. Fixed Spacing

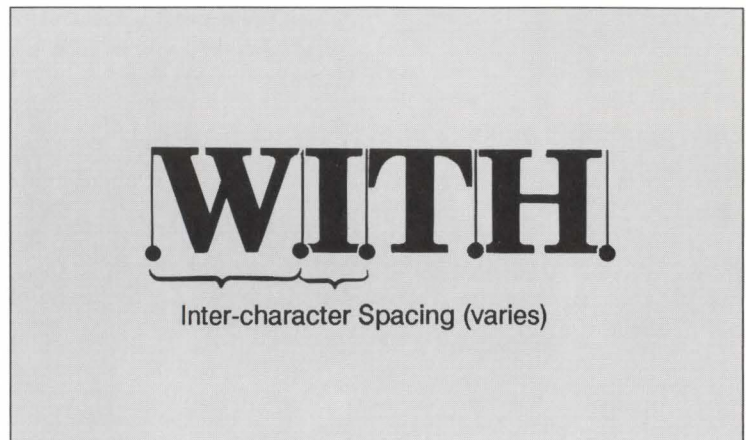


Figure 7-4. Proportional Spacing

## Pitch

Pitch describes the number of characters printed in a horizontal inch. Pitch only applies to fixed spaced fonts since the number of characters per inch varies for proportional fonts.

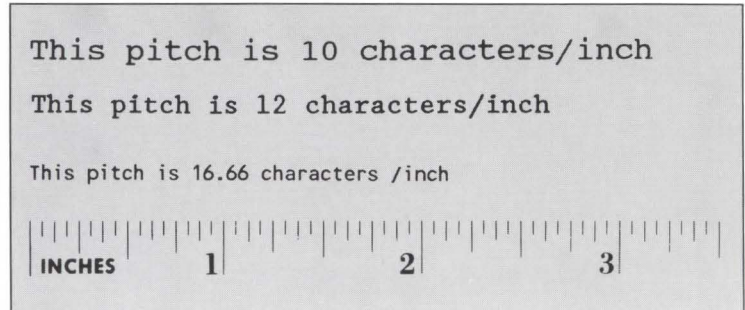


Figure 7-5. Pitch

## Height

The height of a font is the measurement of the body of the type in points. A PCL point is  $1/72^{\text{nd}}$  inch. The body of the type is slightly greater than the distance from the bottom of a descender to the top of an unaccented capital letter.

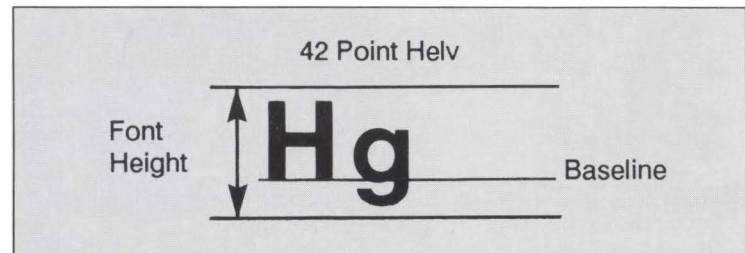


Figure 7-6. Height

---

## Style

Font style is defined by the angularity of the strokes of the characters with respect to the X-axis. Examples of upright and italic styles are shown.



Figure 7-7. Style

---

## Stroke Weight

Stroke weight describes the thickness of the strokes that compose characters. Examples of medium and bold stroke weights are shown.


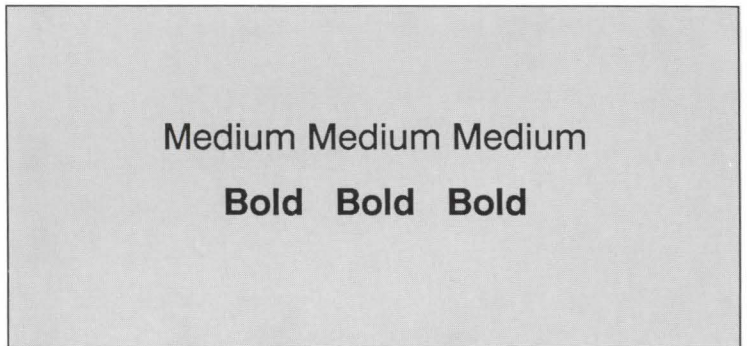


Figure 7-8. Stroke Weight

---

## Typeface

Typeface identifies the design of the characters and/or symbols of the font. Each typeface has unique and distinguishing design characteristics. The following example shows three typefaces.

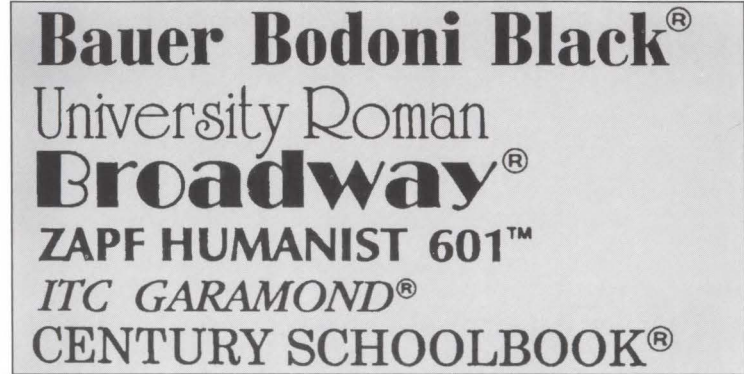

## Orientation

Orientation defines the position of the logical page and direction of print with respect to the physical page as shown in the following diagram.

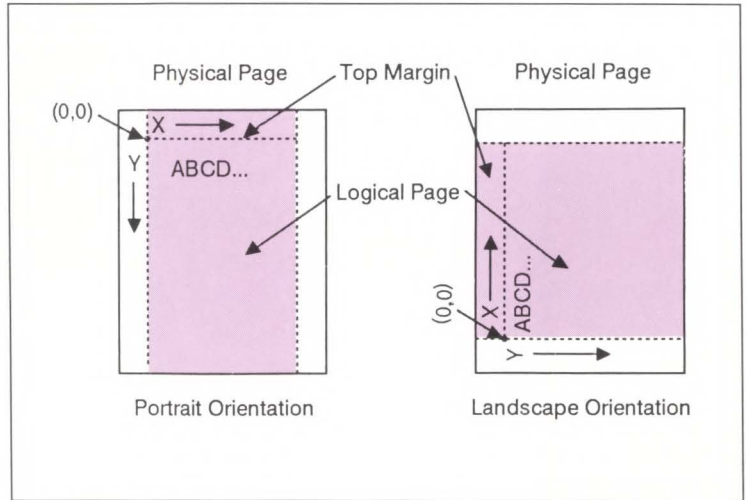


Figure 7-10. Orientation

The **LaserJet IID** printer automatically rotates fonts to the current orientation if they are not available in that orientation; therefore, all fonts are available in either orientation.





---

## Contents

Introduction . . . . .	8-1
Font Selection by Characteristic . . . . .	8-2
Primary and Secondary Fonts . . . . .	8-5
Symbol Set . . . . .	8-6
ISO Symbol Sets . . . . .	8-9
Spacing . . . . .	8-11
Pitch . . . . .	8-12
Height . . . . .	8-13
Style . . . . .	8-14
Stroke Weight . . . . .	8-15
Typeface . . . . .	8-17
Orientation . . . . .	8-19
Internal Fonts . . . . .	8-20
Font Selection Example . . . . .	8-21
Summary of Font Selection by Characteristic . . . . .	8-22
Selection of the Default Font . . . . .	8-24
Transparent Print Data . . . . .	8-25
Underline Command . . . . .	8-26



---

## Introduction

A typical document is printed using a variety of fonts. For example, a large font may be used for the title and chapter headings of a document, a standard size font may be used for the body of the document, and key words or phrases may be highlighted, using a **bold** or *italic* font.

A number of fonts are supplied with the printer; these fonts are referred to as internal fonts. Additional fonts are available for the printer by inserting font cartridges or downloading soft fonts. (The HP S2 font cartridge is supplied with the **LaserJet IID** printer.)

Cartridge fonts plug into font cartridge slots on the printer. The fonts contained in the cartridge become available once the cartridge is plugged into the printer. A large number of font cartridges may be purchased from Hewlett-Packard or an authorized dealer. Refer to your *Hewlett-Packard Accessories and Supplies Brochure* for a list of available cartridges. Contact your HP Sales Representative or authorized dealer for purchasing information.

Soft fonts are supplied on flexible discs. These discs are inserted into the personal computer disc drive, and the font files from the disc are transferred (downloaded) into the printer's RAM memory. Once the font has been downloaded into the printer, it may be selected for printing. A large number of soft fonts may be purchased from Hewlett-Packard or an authorized dealer. Refer to your *Hewlett-Packard Accessories and Supplies Brochure* for a list of available soft fonts. Contact your HP Sales Representative or authorized dealer for purchasing information.

Any internal, cartridge, or soft font may be selected for printing. Fonts are selected using font selection commands. This chapter describes how to select fonts.

---

## Font Selection by Characteristic

There are several characteristics used to identify a font; these characteristics are described in Chapter 7 - "Fonts". A font is selected by specifying these characteristics. The font characteristics that must be specified are as follows: symbol set, spacing, pitch, height, style, stroke weight, and typeface.

The printer maintains a font selection table that contains the values of the currently specified characteristics. Whenever the printer receives an escape sequence specifying a font characteristic, the printer records that characteristic in the table.

The printer selects a font based on its characteristics, its physical location in the printer, and finally its orientation.

The printer first selects a font based on a prioritization of the characteristics. The priority of the characteristics is shown in the following list:

### Priority of Characteristics



When selecting a font, the printer compares the highest priority characteristic in its font selection table to the corresponding characteristic of the available fonts. If only one font is available that matches, that font is selected. However, when several fonts match, the printer compares the next highest priority characteristic to the corresponding characteristic of the available fonts and so on down the list. When only one font remains, that font is selected. However, if after comparison of all the font characteristics, more than one font still remains, then the location of the fonts is considered.

There are three locations a font may be stored: printer ROM (internal font), cartridge ROM (cartridge font), and printer RAM (soft font). These three font locations are shown below, listed from the highest to lowest priority. The font that matches the font characteristics will be selected from the highest priority location.

Soft font (Lowest ID)  
Cartridge Font (left cartridge then right cartridge)  
Internal Font

Finally, the orientation of a font is considered. If two fonts still remain that are similar in all the above characteristics and at the same location, the font with the orientation that matches the orientation of the page is selected. If only one font remains and its orientation is different than the current page the printer will automatically rotate that font to the orientation of the page. (Page 8-22 summarizes font selection by characteristic.)

The initial font specification in a job should be made using all of the font characteristics.

To select a HP Roman-8, fixed-spaced, 10 pitch, 12 point, upright, bold, Courier font, for the current page orientation, specify each of the characteristics using font selection escape sequences. Once the characteristics have been specified, the font select table will appear as follows:

Symbol Set	HP Roman-8
Spacing	Fixed
Pitch	10
Height	12 point
Style	Upright
Stroke Weight	Bold
Typeface	Courier

To subsequently select a font with the same characteristics differing only in stroke weight, medium rather than bold, only the stroke weight characteristic must be specified. Note the following change to the printer's font select table:

Symbol Set	HP Roman-8
Spacing	Fixed
Pitch	10
Height	12 point
Style	Upright
Stroke Weight	Medium
Typeface	Courier

In general, when specifying a font, only the characteristics of the new font that differ from those of the previously designated font must be sent; however, it is recommended that all of the characteristics be sent to ensure that the correct font gets selected.

## Note



---

The **HP LaserJet IID** printer can print any number of distinct fonts per page, limited only by available memory.

---

---

## Primary and Secondary Fonts

The printer maintains two independent font characteristic tables for use in selecting a primary font and a secondary font. All of the characteristics previously described apply to both tables. This provides access to two distinct fonts, only one of which is selected at a given time. To alternate between the primary and the secondary font, the control codes “SI” and “SO” are used. The font described by the primary table is designated by the “SI” control code; the font described by the secondary table is designated by the “SO” control code.

The factory default state is primary font designated.



---

## Symbol Set

Symbol set identifies the specific symbols and/or characters in a font. Characters refer to the specific alphabetic, numeric, punctuation symbols, and/or any other symbols that may be included.

$\text{E}_c (ID$	Primary Symbol Set $ID =$ Symbol Set ID number (see Table 8-1)
$\text{E}_c )ID$	Secondary Symbol Set $ID =$ Symbol Set ID number (see Table 8-1)

If the specified symbol set does not exist, the default symbol set will be used.

The factory default primary and secondary symbol set is Roman-8. However, the user may select a user default symbol set from the printer control panel, printing menu.

The primary and secondary user default symbol sets are implicitly set when the user default font is selected using the control panel printing menu (refer to the *LaserJet IID Printer User's Manual*).

Table 8-1 lists HP defined symbol sets.

**Example** To select ASCII as the symbol set for the primary font, send:

$\text{E}_c(0U$

To select HP Roman-8 as the symbol set for the secondary font, send:

$\text{E}_c)8U$

Table 8-1. HP Defined Symbol Sets

Symbol Set Name	Symbol Set ID
Windows	9U
APL (Bit Paired)	1P
APL (Typewriter)	0P
DownLoad Font n	nX
ECMA-94 Latin 1	0N
HP Arabic (McKay's version)	0V
HP Arabic	8V
HP Block Characters	1L
HP Cyrillic	1R
HP Cyrillic ASCII	0R
*HP German	0G
HP Greek-8	8G
HP Hebrew	0H
HP Hebrew8	8G
HP HPL Language Set	5U
HP Kana8	8K
HP Katakana	1K
HP Korean8	9K
HP Legal	1U
HP Line Draw	0B
HP Line Draw (same as 0B)	0L
HP Math-7	0A
HP Math-8	8M
HP Math7 (same as 0A)	0M
HP Pi Font	15U
HP Roman Extension	0E
HP Roman-8	8U
*HP Spanish	1S
HP Thai8	0T
HP Turkish8	8T
*ISO 2: International Reference Version	2U
ISO 4: United Kingdom	1E

\* Not recommended for future use.

CONTINUED ON NEXT PAGE

**Table 8-1. HP Defined Symbol Sets, Continued**

Symbol Set Name	Symbol Set ID
ISO 6: ASCII	0U
*ISO 10: Swedish	3S
ISO 11: Swedish	0S
*ISO 14: JIS ASCII	0K
ISO 15: Italian	0I
*ISO 16: Portuguese	4S
ISO 17: Spanish	2S
ISO 21: German	1G
*ISO 25: French	0F
*ISO 57: Chinese	2K
ISO 60: Norwegian version 1	0D
*ISO 61: Norwegian version 2	1D
ISO 69: French	1F
*ISO 84: Portuguese	5S
*ISO 85: Spanish	6S
OCR A	0O
OCR B	1O
OCR M	2O
OEM-1	7U
PC-8	10U
PC-8 (Danish/Norwegian)	11U
PC-850	12U
Special	xQ
Reserved	xY
Technical-7	1M

\* Not recommended for future use.

## ISO Symbol Sets

The printer provides several ISO (International Standards Organization) symbol sets to support European languages. Each ISO symbol set is a unique ordering of symbols contained in the HP Roman-8 symbol set (see Table 8-2). The printer automatically generates the requested ISO symbol set from an HP Roman-8 symbol set.

**Example** To select the ISO 69 French symbol set for the primary font, send:

ESC(1F

Table 8-2. ISO Substitution Characters

ISO	Name	ID	DECIMAL CHARACTER EQUIVALENTS											
			35	36	64	91	92	93	94	96	123	124	125	126
6	ASCII	0U	#	\$	@	[	\	]	^	'	{		}	~
2	ISO IRV *	2U	#	¤	@	[	\	]	^	'	{		}	~
4	ISO United Kingdom	1E	£	\$	@	[	\	]	^	'	{		}	~
25	ISO French *	0F	£	\$	à	°	ç	§	^	'	é	ù	è	~
69	ISO French German *	1F 0G	£ £	\$ \$	à §	° Ä	ç ö	§ ü	^ ^	' '	é ä	ù ö	è ü	~ ß
21	ISO German	1G	#	\$	§	Ä	ö	ü	^	'	ä	ö	ü	ß
15	ISO Italian	0I	£	\$	§	°	ç	é	^	'	ù	à	ò	è
14	JIS ASCII *	0K	#	\$	@	[	¥	]	^	'	{		}	~
57	ISO Chinese *	2K	#	¥	@	[	\	]	^	'	{		}	~
10	ISO Swedish *	3S	#	¤	@	Ä	ö	Å	^	'	ä	ö	å	~
11	ISO Swedish: Spanish *	0S 1S	# #	¤ \$	É @	Ä ı	ö Ñ	Å ¿	^ ^	' '	ä {	ö ñ	å }	~ ~
17	ISO Spanish	2S	£	\$	§	ı	Ñ	¿	^	'	°	ñ	ç	~
85	ISO Spanish: *	6S	#	\$	·	ı	Ñ	Ç	¿	'	'	ñ	ç	~
16	ISO Portuguese *	4S	#	\$	§	Ä	Ç	ó	^	'	ä	ç	õ	°
84	ISO Portuguese: *	5S	#	\$	·	Ä	Ç	ó	^	'	ä	ç	õ	~
60	ISO Norwegian v1	0D	#	\$	@	Æ	Ø	Å	^	'	æ	ø	å	~
61	ISO Norwegian v2 *	1D	§	\$	@	Æ	Ø	Å	^	'	æ	ø	å	

\* Not recommended for future use.

## Note



---

HP font cartridge products A through H, J through N, P through R, T through Y and HP soft font products AD, AF, and DA support a subset of the new HP Roman-8 symbol set. Characters with decimal character codes 177, 178, and 242 to 245 have since been added. These characters are  $\acute{Y}$   $\acute{y}$   $\cdot$   $\mu$  ¶  $\frac{3}{4}$ , respectively.

---

## Spacing

Inter-character spacing can be specified as either proportional or fixed.

$\text{E}_C (s \# P$  - Primary spacing

$\text{E}_C )s \# P$  - Secondary spacing

# = 0 - Fixed spacing

1 - Proportional spacing

When proportional spacing is specified and a proportionally-spaced font is not available, a fixed pitch font with the current pitch specification will be selected.

The factory default primary and secondary spacings are fixed.

The user default primary and secondary spacings are implicitly set by selection of a user default font from the control panel printing menu (refer to the *LaserJet IID Printer User's Manual*).

### Example

To specify proportional spacing for the primary font, send:

$\text{E}_C(s1P$

To specify fixed spacing for the secondary font, send:

$\text{E}_C)s0P$

---

## Pitch

The Pitch command designates the horizontal spacing of a fixed-spaced font in terms of the number of characters per inch.

$\text{E}_c (\text{s} \# \text{H}$  - Primary pitch

$\text{E}_c ) \text{s} \# \text{H}$  - Secondary pitch

$\# =$  Pitch in characters/inch

The value field ( $\#$ ) is valid to two decimal places.

If a pitch is specified that is not available, the next greater available pitch will be selected. If no greater value is available, the closest available lesser value will be selected.

The factory default primary and secondary pitches are ten characters per inch.

The user default primary and secondary pitches are implicitly set by selection of a user default font from the control panel printing menu (refer to the *LaserJet IID Printer User's Manual*).

**Example** To specify 10 pitch for the primary font, send:

$\text{E}_c(\text{s}10\text{H}$

To specify 16.66 pitch for the secondary font, send:

$\text{E}_c)\text{s}16.66\text{H}$

## Height

The Height command specifies the height of the font in points.

$\text{E}_C$  ( s # V - Primary Height

$\text{E}_C$  ) s # V - Secondary Height

# = Height in points

The value field (#) is valid to two decimal places. If the requested height is unavailable, the closest height will be selected. All fonts whose heights are within a quarter point of the specified height are considered to have the specified height.

The factory default primary and secondary heights are 12 point. A PCL typographic point is  $1/72^{\text{nd}}$  (0.01389) inch.

The user default primary and secondary heights are implicitly set by selection of a user default font from the control panel printing menu (refer to the *LaserJet IID Printer User's Manual*).

**Example** To specify a height of 12 points for the primary font, send:

$\text{E}_C$ (s12V

To specify a height of 14.4 points for the secondary font, send:

$\text{E}_C$ )s14.4V



---

## Style

The Style command designates either upright or italic font style.

$\text{E}_c (s \# S$  - Primary Style

$\text{E}_c )s \# S$  - Secondary Style

# = 0 - Upright

1 - Italic

If the requested style is not present, this characteristic is ignored during font selection. The factory default primary and secondary styles are upright.

The user default primary and secondary styles are implicitly set by selection of a user default font from the control panel printing menu (refer to the *LaserJet IID Printer User's Manual*).

### Example

To specify an upright style for the primary font, send:

$\text{E}_c(s0S$

To specify an italic style for the secondary font, send:

$\text{E}_c)s1S$

## Stroke Weight

The Stroke Weight command designates the thickness of the strokes that compose the characters of a font.

⌘ ( s # B - Primary stroke weight

⌘ ) s # B - Secondary stroke weight

The value field (#) specifies the thickness of the strokes used in the design of the font. The supported stroke weight values are -7 through 7. The thinnest font available is -7; the thickest font available is +7. The standard stroke weight for a medium font is 0; the standard stroke weight for a bold font is 3; the standard stroke weight for a light font is -3.

Table 8-3. Stroke Weights

Value (#)	Typeface
-7	Ultra Thin
-5	Thin
-3	Light
0	Medium, or Book
+3	Bold
+5	Black
+7	Ultra Black

If the specified stroke weight is greater than or equal to 0 and is not available, the next thicker available stroke weight will be selected. If no thicker stroke weight is available, the closest available thinner stroke weight will be selected.

If the specified stroke weight is less than zero and is not available, the next thinner available stroke weight will be selected. If no thinner stroke weight is available, the closest available thicker stroke weight will be selected.

The factory default primary and secondary stroke weights are zero.

The user default primary and secondary stroke weights are implicitly set by selection of a user default font from the control panel printing menu (refer to the *LaserJet IID Printer User's Manual*).

**Example** To specify a bold stroke weight for the primary font, send:

`^C(s3B`

To specify a medium stroke weight for the secondary font, send:

`^C)s0B`

---

## Typeface

The Typeface command designates the design of the font.

$\text{E}_C$  ( s # T - Primary typeface

$\text{E}_C$  ) s # T - Secondary typeface

# = Typeface value (see Table 8-4 on the following page for values)

If the value field (#) specifies a typeface that is unavailable this characteristic is ignored during font selection.

The factory default primary and secondary typefaces are Courier.

The user default primary and secondary typefaces are implicitly set by selection of a user default font from the control panel printing menu (refer to the *LaserJet IID Printer User's Manual*).

### Example

To specify Helv for the typeface of the primary font, send:

$\text{E}_C$ (s4T

To specify Letter Gothic for the typeface of the secondary font, send:

$\text{E}_C$ )s6T

**Table 8-4. Typeface Values\***

Value	Typeface	Value	Typeface
0	Line Printer	1	Pica
2	Elite	3	Courier
4	Helv	5	TmsRmn
6	Letter Gothic	7	Script
8	Prestige	9	Caslon**
10	Orator**	11	Presentations
12	Helv Condensed	13	Serifa**
14	Futura**	15	Palatino**
16	ITC Souvenir**	17	Optima**
18	ITC Garamond**	19	Cooper Black**
20	Ribbon (Coronet)**	21	Broadway**
22	Bauer Bodoni Black Condensed**	23	Century Schoolbook**
24	University Roman**	25	Helv Outline
26	Futura Condensed**	27	ITC Korinna**
28	Naskh (generic Arabic typeface)**	29	Cloister Black**
30	ITC Galliard**	31	ITC Avant Garde Gothic**
32	Brush**	33	Blippo**
34	Hobo**	35	Windsor**
36	Helv Compressed	37	Helv Extra Compressed
38	Peignot**	39	Baskerville**
40	ITC Garamond Condensed**	41	Trade Gothic**
42	Goudy Old Style**	43	ITC Zapf Chancery**
44	Clarendon**	45	ITC Zapf Dingbats**
46	Cooper**	47	ITC Bookman**
48	Stick	49	HP-GL Drafting
50	HP-GL Spline	51	Gill Sans**
52	Univers**	53	Bodoni**
54	Rockwell**	55	Melior**
56	ITC Tiffany**	57	ITC Clearface**
58	Amelia**	59	Park Avenue**
60	Handel Gothic**	61	Dom Casual**
62	ITC Benguiat**	63	ITC Cheltenham**
64	Century Expanded**	65	Franklin Gothic**
66	Franklin Gothic Expressed**	67	Franklin Gothic Extra Condensed**
68	Plantin**	69	Trump Mediaeval**
70	Futura Black**		

\* Additional typefaces will be available in the future.

\*\* These typeface names may be registered trademarks of a third party. Use of these fonts may be conditioned upon a license grant from the owners of the fonts. Hewlett-Packard makes no representation as to the quality or performance of the fonts, and any reference to the fonts does not grant any license or right to use the fonts.

---

## Orientation

The Orientation command designates the position of the logical page and direction of print with respect to the physical page.

$\text{E}_c \ \& \ \text{O} \ \# \ \text{O}$

# = 0 - Portrait  
1 - Landscape

Note that this command applies to both the primary and secondary fonts.

The **LaserJet IID** printer automatically rotates fonts to the current orientation: therefore, all fonts are available in either orientation.

The Orientation command sets the page length, top margin, text length, left and right margins, HMI and VMI to their user default values, and disables the auto overlay macro.

All data received prior to this command will be printed and a form feed and carriage return executed.

The factory default orientation is portrait.

The user default orientation can be selected from the control panel (refer to the *LaserJet IID Printer User's Manual*).

## Internal Fonts

The printer's internal fonts are listed in Table 8-5. These fonts are available in Roman-8, ECMA-94, PC-8, PC-8 Danish/Norwegian, PC-850, and Legal symbol sets. Also, these additional symbol sets can be used with internal fonts: ISO 2, 4, 6, 10, 11, 14, 15, 16, 17, 21, 25, 57, 60, 61, 69, 84, 85, HP Spanish, and HP German. (ISO denotes International Standards Organization symbol sets that are primarily for use in Europe or for printing foreign characters. For a list of the available ISO symbol sets see Appendix A.)

Table 8-5. LaserJet IID Printer Internal Fonts

Typeface	Pitch	Point	Treatment	Orientation**
Courier	12	10	regular	portrait & landscape
Courier	12	10	bold	portrait & landscape
Courier	12	10	italic	portrait & landscape
Courier*	10	12	regular	portrait & landscape
Courier	10	12	bold	portrait & landscape
Courier	10	12	italic	portrait & landscape
Lineprinter	16.66	8.5	regular	portrait & landscape

\* The portrait, HP Roman-8, fixed-spaced, 10 pitch, 12 point, upright, medium Courier font is the printer's primary and secondary factory default font. This font is used unless a font cartridge with a default font is installed, unless a user default font is selected using the control panel, or unless font selection escape sequences are used to request a font to be used in place of the default.

\*\* The orientation of a font becomes important when the amount of user memory available becomes a concern. Internal fonts and cartridge fonts are contained in ROM memory and do not consume user memory; downloaded and rotated fonts are stored in user memory (RAM). If a font is available but not provided in the correct orientation, the printer will rotate that font creating it in RAM (user memory). If a print job will not run as a result of insufficient user memory (a memory overflow error occurs) additional user memory must be made available. Additional user memory can be obtained by providing the desired fonts in the correct orientation in a cartridge. This eliminates the need for the printer to rotate the fonts and, thus, avoid consumption of user memory. In this way, all available user memory can be used for processing the print job.

## Font Selection Example

This example illustrates how to select a primary font with the following characteristics (note that all of the font characteristics are specified):

CHARACTERISTIC	VALUE	ESCAPE SEQUENCE
Symbol set	ASCII	$\text{E}_c(\text{0U}$
Spacing	Fixed	$\text{E}_c(\text{s0P}$
Pitch	10 cpi	$\text{E}_c(\text{s10H}$
Height	12 point	$\text{E}_c(\text{s12V}$
Style	Upright	$\text{E}_c(\text{s0S}$
Stroke weight	Bold	$\text{E}_c(\text{s3B}$
Typeface	Courier	$\text{E}_c(\text{s3T}$

The following escape sequences could be sent to the printer to select a primary font with the above characteristics:

```
 $\text{E}_c(\text{0U} \text{E}_c(\text{s0P} \text{E}_c(\text{s10H} \text{E}_c(\text{s12V} \text{E}_c(\text{s0S} \text{E}_c(\text{s3B} \text{E}_c(\text{s3T}$ 
```

The previous sequence can be shortened by combining sequences that have the same two characters following the  $\text{E}_c$  character.

```
 $\text{E}_c(\text{0U} \text{E}_c(\text{s0p10h12v0s3b3T}$ 
```

Once the font has been selected as explained above, selecting another font with similar characteristics only requires changing the characteristics that are different. For example, to specify a font differing only in style (italic) and stroke weight (medium), only style and stroke weight need to be specified, as shown below:

```
 $\text{E}_c(\text{s1S} \text{E}_c(\text{s0B}$ 
```

or shortened:

```
 $\text{E}_c(\text{s1s0B}$ 
```

### Note



If an escape sequence does not contain a value field, the printer assumes a value of zero; therefore, the sequence  $\text{E}_c(\text{sB}$  could be sent to the printer instead of  $\text{E}_c(\text{s0B}$ .



---

## Summary of Font Selection by Characteristic

The following summarizes the procedure the printer uses to select a font. The seven steps are performed in the following order.

1. If the specified symbol set exists, that symbol set is selected; otherwise, the default symbol set is selected.
2. If proportional spacing is specified and available, proportional spacing is selected. If proportional spacing is specified but is not available, fixed spacing is selected in the current pitch. If fixed spacing is specified and available, fixed spacing in the specified pitch is selected. If the specified pitch is not available, the next greater available pitch is selected. If no greater pitch is available, the closest available lesser pitch is selected. If fixed spacing is specified but is not available, proportional spacing is selected and the pitch characteristic is ignored.

---

### Note



The pitch of a 16.66 cpi font is larger than the pitch of a 12 cpi font, and the pitch of a 10 cpi font is smaller than the pitch of a 12 cpi font.

---

3. The closest height available from the remaining fonts is selected. The closest height is in terms of absolute difference. All fonts whose heights are within a quarter point of the specified height are considered to have the specified height. For example, if the printer has 6, 8, and 12 point fonts and the specified height is 10, both 8 and 12 point fonts are picked for the next selection criterion. Similarly, if 9.8, 10.2, and 10.00 point fonts were available, all three would be picked.
4. If the specified style is available in the remaining fonts, that style is selected; otherwise, this characteristic is ignored.

5. If the specified stroke weight is available in the remaining fonts, that stroke weight is selected. If the specified stroke weight is greater than or equal to 0 and is not available, the next thicker available stroke weight will be selected. If no thicker stroke weight is available, the closest available thinner stroke weight will be selected.

If the specified stroke weight is less than 0 and is not available, the next thinner available stroke weight will be selected. If no thinner stroke weight is available, the closest available thicker stroke weight will be selected.

6. If the requested typeface is available in the remaining fonts, that typeface is selected; otherwise, this characteristic is ignored.
7. If after performing all the preceding steps, more than one font remains, the available font from the highest priority font location is selected. The priority of the font locations are as follows:

Soft Font (Lowest ID)	<i>highest</i>
Cartridge Font*	
Internal Font	<i>lowest</i>

\* The left cartridge has priority over the right cartridge.

8. The last criteria considered for the selection of a font is its orientation. If two fonts still remain and match in all the above characteristics except orientation, that font which matches the current page orientation will be selected.

It should be noted that if there is a soft font (highest priority location) available that matches all selection characteristics but is not in the correct orientation and there is an identical font available in a cartridge or internal font (lower priority location) that is in the current orientation, the soft font will be selected and rotated.

---

## Selection of the Default Font

The Default Font command sets all of the font characteristics to those of the user default font.

$\text{^E}_c ( 3 @$  - Default primary font characteristics

$\text{^E}_c ) 3 @$  - Default secondary font characteristics

Note



---

If the user default font is a proportionally-spaced font, the pitch characteristic will not be affected by the default font command.

---

---

## Transparent Print Data

The Transparent Print Data command provides printing access to all characters in a font including those defined as unprintable.

$\text{E}_c \ \& \ n \ \# \ X$  [Transparent Print Data]

# = Number of bytes of transparent print data.

Each transparent print data byte is interpreted as a single character code. The appropriate character is printed if one exists; otherwise, a space is processed. For example, control codes such as LF, CR, FF are treated as print data while in Transparent Print Data mode.

### Example

Assuming the currently selected symbol set is PC-8, send the following to print a left arrow (decimal code 27):

$\text{E}_c \ \& \ p1X[27]$

### Note



---

The  $\text{E}_c$  character is decimal code 27 in the ASCII symbol set. Decimal code 27 is the left arrow in the PC-8 symbol set.

---

---

## Underline Command

The Underline commands control automatic text underlining.

`^c & d # D` - Enable underline

`# = 0` - Fixed position

`3` - Floating position

`^c & d @` - Disable underline

Once underlining is enabled, any positive horizontal movement causes an underline to be drawn. Positive horizontal movement includes the printing of text and positive horizontal cursor motion.

When fixed position underlining is enabled, the underline is drawn five dots below the baseline and is three dots thick. (The baseline is an imaginary dot row on which all of the characters in a given line stand, see Chapter 10.) When floating position underline is enabled, the underline position is determined by the greatest underline distance below the baseline of all of the fonts printed on the current line. (The underline distance is defined in a font's descriptor, see Chapter 10.)

The factory default is underline disabled.

---

## Contents

Introduction.....	9-1
Downloading Soft Fonts .....	9-2
Temporary/Permanent Fonts.....	9-3
Deleting Fonts.....	9-3
Font ID.....	9-4
Font Control .....	9-5
Font Selection by ID .....	9-7
Font Management Example .....	9-8



---

## Introduction

A number of fonts are supplied with the printer; these fonts are referred to as internal fonts. Additional fonts can be added to the printer by inserting font cartridges or downloading soft fonts. Font management provides mechanisms for downloading and manipulating soft fonts.



---

## Downloading Soft Fonts

The process of transferring soft fonts from a host computer to the printer's user memory (RAM) is called downloading. A unique identification (ID) number should be designated prior to the download of a font. This number is then associated with the soft font. If a font is already associated with this ID number, the existing font will be deleted during the download. Subsequent manipulation of the soft font is accomplished using the font's ID number.

Several escape sequences are required to download fonts to the printer. These escape sequences are described in detail in Chapter 10. Hewlett-Packard font files include the necessary escape sequences, thus assigning a font ID number and then copying the file to the printer, downloads the font.

Once downloaded, a font occupies a portion of user memory. The number of soft fonts that can be stored simultaneously in user memory is limited only by the amount of available user memory.

---

## Temporary / Permanent Fonts

Once downloaded, a font is automatically designated as temporary. A temporary soft font is one that is deleted from user memory during a printer reset. A soft font can be designated as permanent to prevent the printer from deleting it during a printer reset. A soft font is designated as temporary or permanent by reference to its ID number (refer to the Font Control command described on page 9-5).

Note



---

Temporary and permanent fonts are removed from user memory whenever the printer's power is turned off.

---

---

## Deleting Fonts

There are several mechanisms provided by PCL font management for explicit deletion of soft fonts from user memory. These include commands to delete all soft fonts, all temporary soft fonts, or an individual soft font by reference to its font ID number (refer to the Font Control command described on page 9-5).

---

## Font ID

The Font ID command is used to specify an ID number for use in subsequent font management commands.

$\text{E}_c^*c\#D$

# = ID number - (0 through 32767)

The font ID number will be used during subsequent soft font downloads, selections or deletions.

The factory default font ID is 0.

**Example** To specify a font ID number of 1, send:

$\text{E}_c^*c1D$

## Font Control

The Font Control command provides mechanisms for manipulating soft fonts.

$\text{E}_c * c \# F$

- # = 0 - Delete all soft fonts
- 1 - Delete all temporary soft fonts
- 2 - Delete soft font (last ID specified)
- 3 - Delete Character Code (last ID and Character Code specified)
- 4 - Make soft font temporary (last ID specified)
- 5 - Make soft font permanent (last ID specified)
- 6 - Copy/Assign current invoked font as temporary (last ID specified)

### Note



If the primary or secondary font is deleted, a new primary or secondary font is automatically selected from the remaining fonts.

### Examples

To remove all soft fonts from user memory, send:

$\text{E}_c * c 0 F$

To remove only those soft fonts that are temporary, send:

$\text{E}_c * c 1 F$

To delete the soft font with an ID of 1, send:

$\text{E}_c * c 1 d 2 F$

To delete the character "g" (103 decimal) in the soft font with an ID of 1, send:

$\text{E}_c * c 1 d 1 0 3 e 3 F$

A space character is printed for the deleted character.

To make the soft font with an ID of 2 temporary, send:

**^c\*c2d4F**

To make the soft font with an ID of 2 permanent, send:

**^c\*c2d5F**

To make a copy of the currently invoked (selected) font, with an ID of 9, send:

**^c\*c9d6F**

The Copy/Assign font control feature can be used to copy either ROM or RAM fonts into RAM assigning them ID numbers.

## Font Selection by ID

Soft fonts can be selected using their associated ID numbers.

$\text{E}_C$  (# X - Designates soft font # as primary

$\text{E}_C$ ) # X - Designates soft font # as secondary

# = font ID number

If the designated font is present, the font is selected as the primary/secondary font and all primary/secondary font characteristics are set to those of the selected font. However, if the selected font is proportionally spaced, the pitch characteristic is not changed.

If the designated font is not present, the current font is retained.

### Note



For shared or multi-user environments, Hewlett-Packard recommends that soft fonts be selected by characteristics rather than ID number.

### Examples

To select the font associated with ID number 7 as the primary font, send:

$\text{E}_C(7X$

To select the font associated with ID number 5 as the secondary font, send:

$\text{E}_C)5X$

---

## Font Management Example

This example illustrates several typical font management operations. It assumes a soft font is stored and available on a MS-DOS based hard disc.

1. Set the font ID number to 2:

```
^c*c2D
```

2. Download a soft font file using the MS-DOS COPY command with the /B option:

```
>COPY /B filename PRN
```

(Refer to your DOS manual for information on using the DOS Copy command.)

Note that the soft font is associated with font ID 2.

3. Make the soft font permanent in order to prevent its deletion during a printer reset:

```
^c*c5F
```

4. Designate the permanent soft font as primary:

```
^c(2X
```

---

## Contents

Introduction . . . . .	10-1
Coordinate System . . . . .	10-2
Font Descriptor Format . . . . .	10-3
Font Descriptor Command . . . . .	10-17
Character Descriptor and Data Format . . . . .	10-19
Character Code Command . . . . .	10-25
Character Descriptor and Data Command . . . . .	10-26





---

## Introduction

A font descriptor and one or more character descriptors define a soft font. A font descriptor is a block of data used to communicate font design characteristics to the printer.

A character descriptor is a block of data describing for the printer the position and shape of an individual character and the implied movement after printing the character. Following each character descriptor is a block of raster data containing the dot-per-bit image of the character.

## Coordinate System

Characters of a font are designed within a rectangular area referred to as a cell. The dimensions of the cell are in PCL Coordinate system dots and are therefore page orientation-independent (refer to Chapter 2, The Page, for a complete description of the PCL coordinate system).

Character design dimensions within the cell are in physical coordinate system dots (rather than PCL Coordinate System dots). The physical coordinate system is defined in terms of the directions of raster scan (X) and paper motion (Y) as illustrated in the following figure:

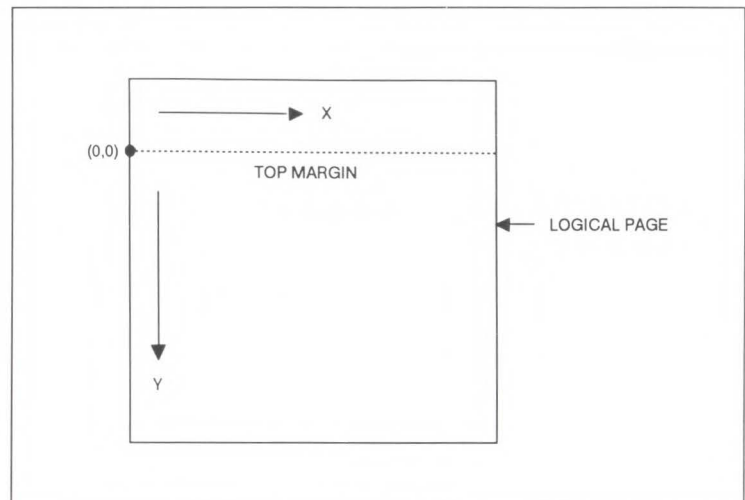


Figure 10-1. Physical Coordinate System

Since the raster scan and paper motion directions of a device are fixed, the physical coordinate system is page-orientation dependent. Character design dimensions within the cell are in physical coordinate system dots and therefore depend on the print orientation.

Note



---

Hewlett-Packard recommends that soft fonts be designed using the paper motion and raster scan direction of the **HP LaserJet Plus** and **HP LaserJet series II** printers. The **HP LaserJet IID** and **HP LaserJet 2000** printers will rotate the fonts to match the paper's physical coordinate system for the various paper sizes.

---

---

## Font Descriptor Format

A unique ID number should be designated prior to the download of a font descriptor. If an existing font is already associated with this ID, the existing font will be deleted during the download of the font descriptor. Unless otherwise specified, inappropriate values in a font descriptor field will invalidate the font download process; a font will not be created and the associated font data will be discarded.

Although some devices do not use all of the data in the font descriptor, a font creator should use valid values in all of the font descriptor fields to insure font compatibility across the LaserJet family.

Those font descriptor fields identified as “reserved” should be set to 0.

The following illustrates the format of the font descriptor:

Byte	15 - MSB	8	7	LSB - 0
0	Font descriptor Size			
2	Descriptor Format		Font Type	
4	Reserved			
6	Baseline Distance			
8	Cell Width			
10	Cell Height			
12	Orientation		Spacing	
14	Symbol Set			
16	Pitch (Default HMI)			
18	Height			
20	x Height			
22	Width Type		Style	
24	Stroke Weight		Typeface LSB	
26	Typeface MSB		Serif Style	
28	Reserved			
30	Underline Distance		Underline Height	
32	Text Height			
34	Text Width			
36	Reserved			
38	Reserved			
40	Pitch Extended		Height Extended	
42	Cap Height			
44	Reserved			
46	Reserved			
48-63	Font Name			

Figure 10-2. Font Descriptor Format

**Note** 

The following notation is used to define the data type of each field in the font descriptor

---

(B)	: Boolean	(0, 1)
(UB)	: Unsigned Byte	(0 . . 255)
(SB)	: Signed Byte	(-128 . . 127)
(UI)	: Unsigned Integer	(0 . . 65535)
(SI)	: Signed Integer	(-32768 . . 32767)
(ASCxx)	: ASCII string	array (0 . . xx-1) of characters

---

**Font Descriptor Size (UI)** Specifies the number of bytes in the font descriptor. This value is ignored by the **HP LaserJet IID** printer. The standard Hewlett-Packard font descriptor size is 64 bytes.

**Font Type (UB)** Specifies one of the following defined font types. The font type should be set appropriately for the font's symbol set.

**Table 10-1. Font Type Values**

Value	Font Type
0	7-bit (96 characters) - character codes 32 to 127 [decimal] are printable.
1	8-bit (192 characters) - character codes 32 to 127 [decimal] and 160 to 255 [decimal] are printable.
2	8-bit (256 characters) - All character codes are printable, however 0, 7 to 15, and 27 [decimal] must be in Transparency mode to print.

**Note** 

Access to those codes that are unprintable, that have a character defined, requires the use of the transparent print data command.

---

<b>Descriptor Format</b>	The Descriptor Format byte should be set to zero. This field is ignored by the <b>HP LaserJet IID</b> printer.
<b>Baseline Distance (UI)</b>	Specifies the distance from the top of the cell to the baseline. The baseline is an imaginary dot row on which all of the characters in a line stand. The measurement of this distance is in PCL coordinate system dots. The legal range for the baseline distance is 0 to cell height minus 1. This field is ignored by the <b>HP LaserJet IID</b> printer.
<b>Cell Width (UI)</b>	Specifies the width of the cell in PCL coordinate system dots. This field is ignored by the <b>HP LaserJet IID</b> printer.
<b>Cell Height (UI)</b>	Specifies the height of the cell in PCL coordinate system dots. This field is ignored by the <b>HP LaserJet IID</b> printer.

**Orientation (UB)** Specifies the orientation of the font. All characters within the font must have the same orientation; otherwise they will be discarded as they are downloaded. Zero specifies portrait and one specifies landscape.

**Spacing (B)** Specifies the spacing of the font. Zero specifies fixed spacing and one specifies proportional spacing.

**Symbol Set (UI)** Specifies the symbol set for the font. This value is computed by taking the value of the value field for the symbol set, multiplying it by 32, adding the ordinal value (ASCII decimal value) of the termination character of the escape sequence, and subtracting 64.

**Font Descriptor Symbol Set Value =**

**(Escape Sequence Value Field Value \* 32) +  
(Decimal Value of Escape Sequence Termination Character - 64).**

The legal range of symbol set escape sequence value field values is 0 to 2047. Refer to Table 10-2 for the HP defined font descriptor symbol set values. HP reserves the right to use the font descriptor symbol set values of 0 to 1023. Symbol set escape sequence value field values 1024 to 2047 are available for use by independent font vendors. Symbol set escape sequence termination characters can be any upper case ASCII character "A" through "V".



**Table 10-2. Symbol Set Values**

Symbol Set Name	Value Field	Termination Character	Symbol Set Value
HP Math-7	0	A	1
HP Line Draw	0	B	2
ISO 60: Norwegian version 1	0	D	4
*ISO 61: Norwegian version 2	1	D	36
HP Roman Extensions	0	E	5
ISO 4: United Kingdom	1	E	37
*ISO 25: French	0	F	6
ISO 69: French	1	F	38
*HP German	0	G	7
ISO 21: German	1	G	39
HP Hebrew	0	H	8
HP Hebrew8	8	H	264
HP Greek-8	8	G	263
ISO 15: Italian	0	I	9
*ISO 14: JIS ASCII	0	K	11
HP Katakana	1	K	43
*ISO 57: Chinese	2	K	75
HP Kana8	8	K	276
HP Korean8	9	K	299
HP Line Draw (Same as 0B)	0	L	12
HP Block Characters	1	L	44
HP Math7 (Same as 0A)	0	M	13
Technical-7	1	M	45
HP Math-8	8	M	269
ECMA-94 Latin 1	0	N	14
OCR A	0	O	15
OCR B	1	O	47
OCR M	2	O	79
APL (Typewriter)	0	P	16
APL (Bit Paired)	1	P	48
Special	x	Q	-
HP Cyrillic ASCII	0	R	18
HP Cyrillic	1	R	50

Continued on next page

\* Not recommended for future use.

**Table 10-2. Symbol Set Values, Continued**

Symbol Set Name	PCL	PCL	Symbol Set Value
	Value Field	Termination Character	
ISO 11: Swedish Names	0	S	19
*HP Spanish	1	S	51
ISO 17: Spanish	2	S	83
*ISO 10: Swedish	3	S	115
*ISO 16: Portuguese	4	S	147
*ISO 84: Portuguese	5	S	179
*ISO 85: Spanish	6	S	211
HP Thai8	0	T	20
HP Turkish8	8	T	276
ISO 6: ASCII	0	U	21
HP Legal	1	U	53
*ISO 2: Intl Reference Version	2	U	85
HP HPL Language Set	5	U	181
OEM-1	7	U	245
HP Roman-8	8	U	277
Windows	9	U	292
PC-8	10	U	341
PC-8 (Danish/Norwegian)	11	U	373
PC-850	12	U	405
HP PI Font	15	U	501
HP Arabic (McKay's version)	0	V	22
HP Arabic8	8	V	278
Download font n	n	X	-
Reserved	x	Y	-

\* - Not recommended for future use.

- pitch (UI)** Specifies the pitch of the font in quarter-dot units (four quarter dot units equal one dot). This defines the default HMI for the font.
- Height (UI)** Specifies the design height of the font in quarter-dot units. This value, converted to points, is used as the height characteristic value of the font. A PCL point is 1/72<sup>nd</sup> (0.01389) inch.
- xHeight (UI)** Specifies the height of the lower case “x” in quarter-dot units. This field is ignored by the **HP LaserJet IID** printer.
- Width Type (SB)** Specifies the proportionate width of characters in the font. This field is ignored by the **HP LaserJet IID** printer.

**Table 10-3. Width Type Values**

Value	Width Type
-5	Extra Compressed
-3	Extra Condensed
-2	Condensed
-1	Semi-Condensed
0	Normal
1	Semi-Expanded
2	Expanded
3	Extra Expanded

Additional width types may be added by HP.

**Style (UB)** Specifies the style of the font. Upright is specified by 0 and italics by 1. Additional styles may be added.

**Stroke Weight (SB)** Specifies the thickness of the strokes used in designing the font. The supported stroke weight values are -7 through 7. The thinnest stroke available is -7; and 7 is the thickest stroke weight available. The standard stroke weight for a medium font is 0; the standard stroke weight for a bold font is 3; and the standard stroke weight for a light font is -3.

**Table 10-4. Stroke Weights**

Value (#)	Typeface
-7	Ultra Thin
-5	Thin
-3	Light
0	Medium, or Book
+3	Bold
+5	Black
+7	Ultra Black

**Typeface LSB (UB)** Specifies the least significant byte of the typeface of the font (see Table 10-5, Typeface Values).

**Typeface MSB (UB)** Specifies the most significant byte of the typeface of the font (see Table 10-5, Typeface Values).

**Table 10-5. Typeface Values\***

Value	Typeface
0	Line Printer
2	Elite
4	Helv
6	Letter Gothic
8	Prestige
10	Orator**
12	Helv Condensed
14	Futura**
16	ITC Souvenir**
18	ITC Garamond**
20	Ribbon (Coronet)**
22	Bauer Bodoni Black Condensed**
24	University Roman**
26	Futura Condensed**
28	Naskh (generic Arabic typeface)**
30	ITC Galliard**
32	Brush**
34	Hobo**
36	Helv Compressed
38	Peignot**
40	ITC Garamond Condensed**
42	Goudy Old Style**
44	Clarendon**
46	Cooper**
48	Stick
50	HP-GL Drafting
52	Univers**
54	Rockwell**
56	ITC Tiffany**
58	Amelia**
60	Handel Gothic**
62	ITC Benguiat**
64	Century Expanded**
66	Franklin Gothic Expressed**
68	Plantin**
70	Futura Black**
1	Pica
3	Courier
5	TmsRmn
7	Script
9	Caslon**
11	Presentations
13	Serifa**
15	Palatino**
17	Optima**
19	Cooper Black**
21	Broadway**
23	Century Schoolbook**
25	Helv Outline
27	ITC Korinna**
29	Cloister Black**
31	ITC Avant Garde Gothic**
33	Blippo**
35	Windsor**
37	Helv Extra Compressed
39	Baskerville**
41	Trade Gothic**
43	ITC Zapf Chancery**
45	ITC Zapf Dingbats**
47	ITC Bookman**
49	HP-GL Spline
51	Gill Sans**
53	Bodoni**
55	Melior**
57	ITC Clearface**
59	Park Avenue**
61	Dom Casual**
63	ITC Cheltenham**
65	Franklin Gothic**
67	Franklin Gothic Extra Condensed**
69	Trump Mediaeval**

\* Additional typefaces will be available in the future.

\*\* These typeface names may be registered trade marks of a third party. Use of these fonts may be conditioned upon a license grant from the owners of the fonts. Hewlett-Packard makes no representation as to the quality or performance of the fonts, and any reference to the fonts does not grant any license or right to use the fonts.

Independent font vendors should contact their Hewlett-Packard representative for assignment of typeface values.

**Serif Style (UB)** Specifies one of the following defined serif styles.  
This field is ignored by the **HP LaserJet IID** printer.

**Table 10-6. Serif Style Values**

Value	Serif Style
0	Sans Serif Square
1	Sans Serif Round
2	Serif Line
3	Serif Triangle
4	Serif Swath
5	Serif Block
6	Serif Bracket
7	Rounded Bracket
8	Flair Stroke

Additional serif styles may be added.

**Underline Distance (SB)** Specifies the distance from the baseline to the top dot row of the underline in dots. Zero specifies an underline position at the baseline. A positive value specifies an underline position above the baseline. A negative value specifies an underline position below the baseline.

**Underline Height (UB)** Specifies the thickness of the underline in dots.  
This field is ignored by the **HP LaserJet IID** printer. It always prints three dot thick underlines.

<b>Text Height (UI)</b>	<p>Specifies the font's optimum inter-line spacing in quarter-dot units.</p> <p>This field is ignored by the <b>HP LaserJet IID</b> printer.</p>
<b>Text Width (UI)</b>	<p>Specifies the font's average lowercase character width in quarter-dot units. HP recommends setting this value to the average width of the lower case letters "a" through "z".</p> <p>This field is ignored by the <b>HP LaserJet IID</b> printer.</p>
<b>Pitch Extended</b>	<p>This is an addition to the Pitch field which extends the pitch an extra eight bits. The value of this field is in 1024<sup>ths</sup> of one dot. For example, a 17 pitch font would have a Pitch field of 70 (17.5 dots, or 17.1429 cpi) and a Pitch Extended field of 150 (0.1465 dots additional, which adds to 17.6465 dots, or 17.0005 pitch).</p>
<b>Height Extended</b>	<p>This is an addition to the Height field which extends the height an extra eight bits. The value of this field is in 1024<sup>ths</sup> of one dot. For example, a 10 point font would have a Height field of 166 (41.5 dots, or 9.96 points) and a Height Extended field of 170 (0.1660 dots additional, which adds to 9.9998 points).</p>

**Cap Height Data**

Cap Height is a percentage of the *em* of the font used to calculate the distance from the capline (top of an unaccented, upper-case letter, such as an "H") to the baseline. Fonts containing a 0 in this field are assumed to have a cap height percentage of 70.87%.

Em is a measure, in decipoints, of the height of a font. For example, the em size of a 12-point font is 120 decipoints.

The default capline to baseline of a 10-point font would be:

$$0.7087 \times 120 = 85.04 \text{ decipoints} = 8.504 \text{ points}$$

The cap height data is represented as the product of the cap height percentage and the maximum unsigned integer:

$$0.7087 \times 65535 = 46,445$$

For non-zero values, the Cap Height % is calculated as follows:

$$\% = \frac{\text{Cap Height Data}}{65535}$$

This field is ignored by the **LaserJet IID** printer.

**Font Name (ASC16)**

This is a 16 character ASCII field to which the user may assign a font name. It is currently used only for soft fonts in the **LaserJet IID** printer.



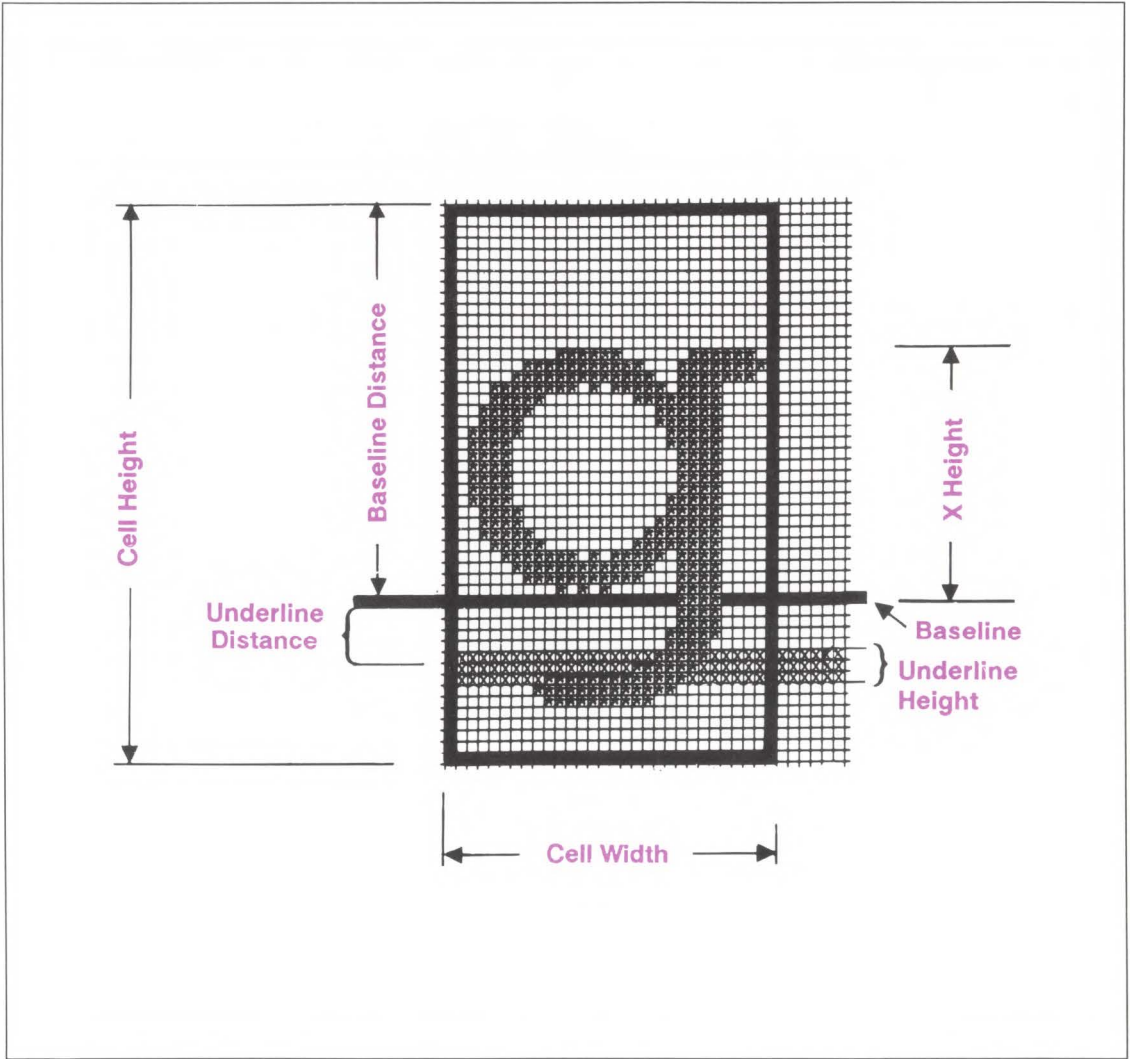


Figure 10-3. Character Cell

---

## Font Descriptor Command

The Font Descriptor command is used to download a font descriptor to the printer.

$\text{E}_C$  ) s # W [font descriptor]

The value field (#) identifies the number of bytes in the font descriptor (see example on following page).

**Example** To download a font descriptor for a portrait HP Roman-8, 10 pitch, 12 point, upright, medium, Courier font, with an ID number of one, send:

$E_c$  \* **c 1 D** (set Font ID to 1)  
 $E_c$  ) **s 64 W** [64 bytes of font descriptor data]

FIELD NAME	VALUE	DESCRIPTION
Font Descriptor Size	64	Bytes
Reserved	0	
Font Type	1	Eight bit
Reserved	0	
Baseline Distance	35	
Cell Width	30	
Cell Height	50	
Orientation	0	Portrait
Spacing	0	Fixed pitch
Symbol Set (8U)	277	(8x32 + (85-64))
Pitch	120	30 dots
Height	200	50 dots
x Height	92	23 dots
Width Type	0	Medium
Style	0	Upright
Stroke Weight	0	Normal
Typeface (LSB)	3	Courier
Typeface (MSB)	0	
Serif Style	2	Serif Line
Reserved	0	
Underline Distance	-5	
Underline Height	3	
Text Height	200	(50 dots)
Text Width	120	(30 dots)
Reserved	0	
Reserved	0	
Pitch Extended	0	
Height Extended	0	
Cap Height	0	
Reserved	0	
Reserved	0	
Font Name	Courier10	

## Character Descriptor and Data Format

A unique character code must be designated prior to the download of a character descriptor and data. If the font being downloaded already contains a character with this code, the existing character will be deleted during the download of the character descriptor and data. Unless otherwise specified, inappropriate values in a character descriptor field will invalidate the character download process; a character will not be created, and the associated descriptor and data will be discarded.

Those character descriptor fields identified as "reserved" should be set to 0.

The following illustrates the format of the character descriptor and data:

Byte	15 - MSB	8	7	LSB - 0
0	Format (4)		Continuation (0)	
2	Descriptor Size (14)		Class (1)	
4	Orientation		Reserved (0)	
6	Left Offset			
8	Top Offset			
10	Character Width			
12	Character Height			
14	Delta X			
16	Character Data:			
	(in bytes)			
	-			
	-			
	-			

Figure 10-4. Character Descriptor and Data Format

**Note** 

The following notation is used to define the data type of each field in the character descriptor.

---

(B)	: Boolean	(0,1)
(UB)	: Unsigned Byte	(0 . . 255)
(SB)	: Signed Byte	(-128 . . 127)
(UI)	: Unsigned Integer	(0 . . 65535)
(SI)	: Signed Integer	(-32768 . . 32767)

---

**Format (UB)** Specifies the format of the character descriptor and data. The format number used by the **HP LaserJet IID** printer is 4.

**Continuation (B)** Specifies whether the following data is a character descriptor block (0) or a continuation of the data (1) associated with the previous character descriptor.

Because the escape sequence value field is limited to 32767, characters whose number of descriptor and data block bytes would exceed this limit must be downloaded in two or more blocks. The following illustrates the format of a character data continuation block.

Byte	15 - MSB	8	7	LSB - 0
0	Format (4)		Continuation (1)	
2	Character Data:			
	(in bytes)			
	-			
	-			
	-			

**Figure 10-5. Character Descriptors/Data Continuation Block**

- Descriptor Size (UB)** Specifies the size of the character descriptor in bytes. The descriptor size used by the **HP LaserJet IID** printer is 14.
- Class (UB)** Specifies the format of the character data. The character data format number used by the **HP LaserJet IID** printer is 1.
- Orientation (UB)** Specifies the orientation of the character. Zero specifies portrait and one specifies landscape. The orientation of the character must match the orientation of the font.
- Left Offset (SI)** Specifies the distance in dots from the reference point to the left side of the character pattern on the physical page coordinate system (i.e., this value is orientation dependent). The left and top offsets locate the character reference point about the current active position (see Figures 10-6 and 10-7).
- The legal range for the left offset is -16384 to 16384.
- Top Offset (SI)** Specifies the distance in dots from the reference point to the top of the character pattern on the physical coordinate system (i.e., this value is orientation dependent.) The left and top offsets locate the character reference point about the current active position (see figures 10-6 and 10-7).
- The legal range for the top offset is -16384 to 16384.

- Character Width (UI)** Specifies the width of the character in dots on the physical coordinate system.  
The legal range for character width is 1 to 16384.
- Character Height (UI)** Specifies the height of the character in dots on the physical coordinate system.  
The legal range for character height is 1 to 16384.
- Delta X (SI)** Specifies the number of quarter-dot units by which the horizontal position within the logical page coordinate system will be incremented after printing the character. This value is only used by the printer when the font is proportionally spaced.  
The legal range for delta X is 0 to 32767.
- Character Data** Character data is a string of bytes containing the dot-per-bit image of the character. If a bit is set to one, the corresponding dot will be printed. The data is grouped in dot rows; a row describes a one-dot high strip of the character from left to right, parallel to the printer's raster scan direction (see Figure 10-6). Zeroed bits must be added to the end of each row to make it contain an integral number of bytes. The dot rows are organized from top to bottom of the character, i.e., the first dot row of data corresponds to the top dot row of the character.


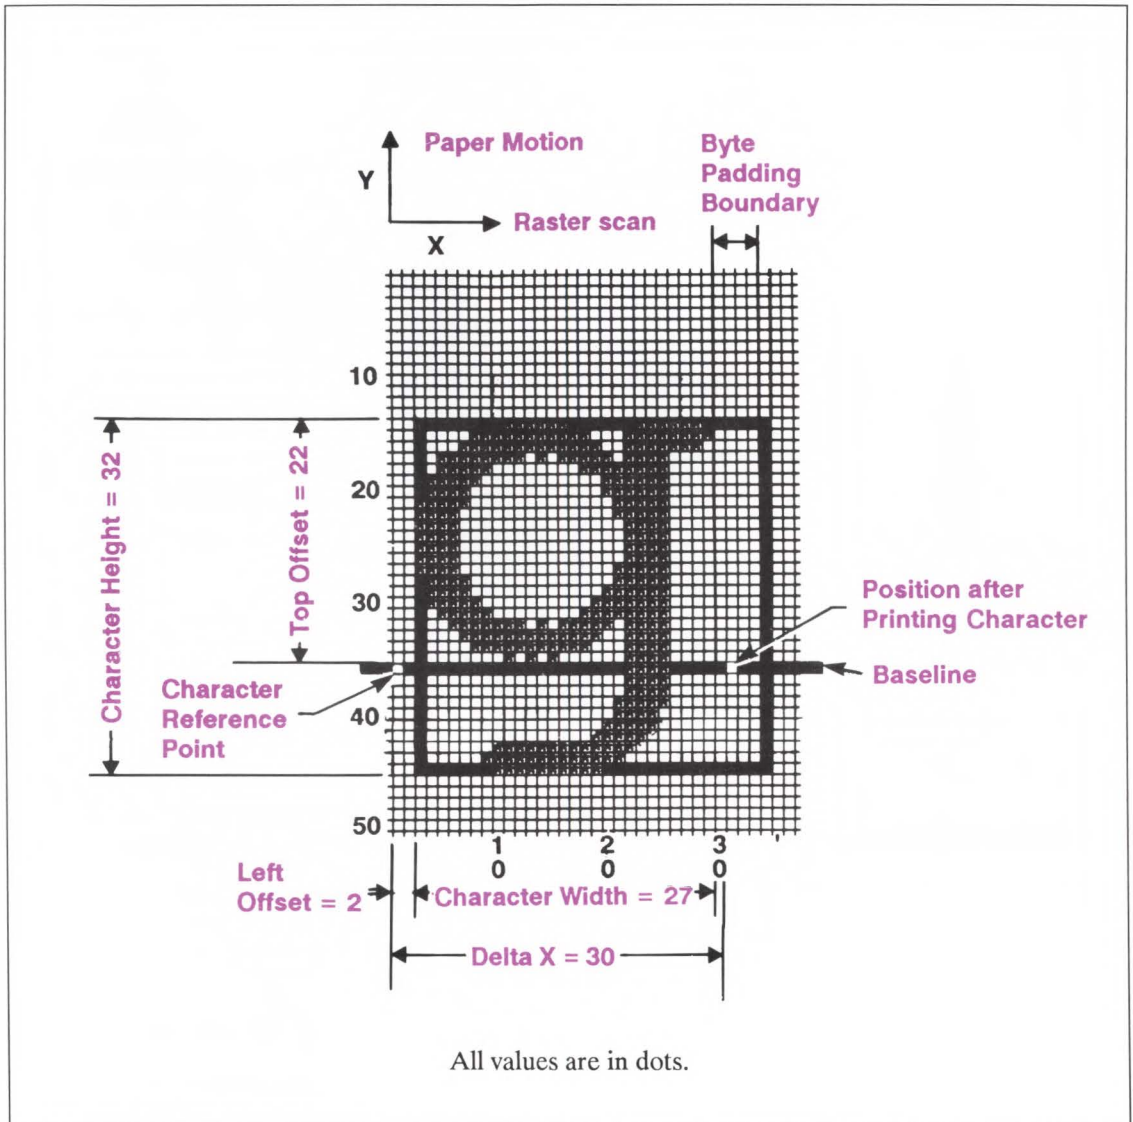


Figure 10-6. Portrait Character Example



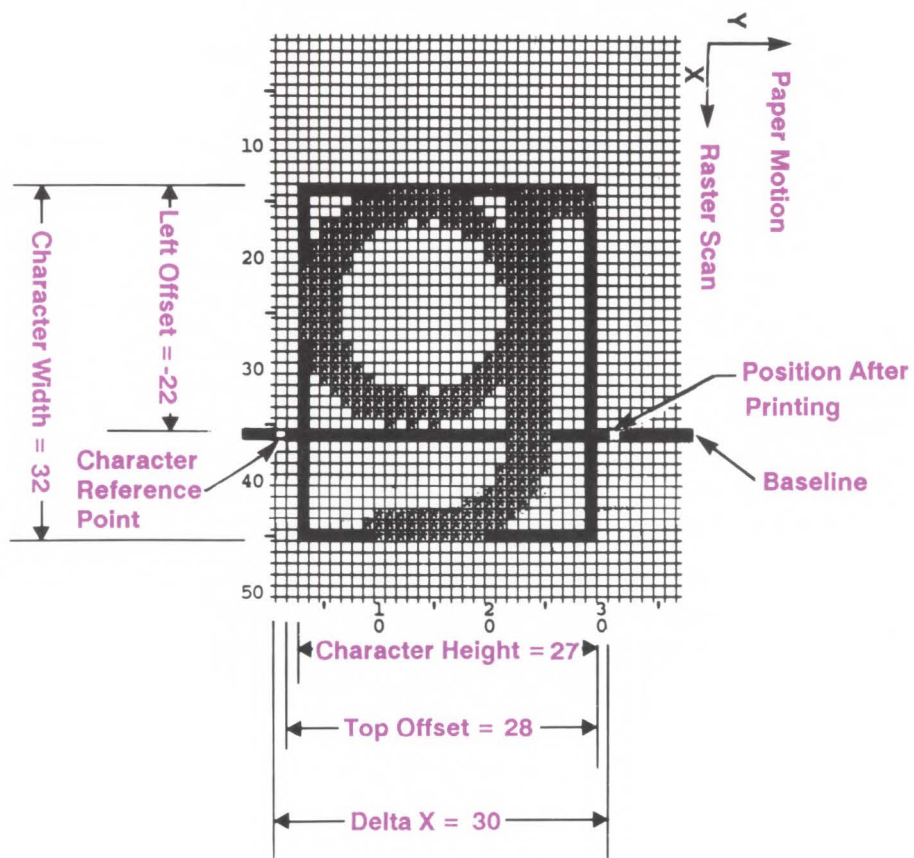

All values are in dots.

Figure 10-7. Landscape Character Example

---

## Character Code Command

The Character Code command establishes the decimal code that will be associated with the next character downloaded. This single byte value is used to reference the character for printing.

$$^E_c * c \# E$$

# = character code

**Example** To designate the character code for an ASCII lower-case "g", send:

$$^E_c * c 103 E$$

## Character Descriptor and Data Command

The Character Descriptor and Data command is used to download a character descriptor and associated character data to the printer.

$E_C$  (s # W [character descriptor and data])

The value field (#) identifies the number of bytes in the character descriptor and data. The maximum number is 32767.

### Example

To download the character descriptor and data for a portrait, 10 Pitch, 12 point, upright medium, Courier lower-case "g", send:

$E_C *c103E$  (103 is the decimal character code for an ASCII lower-case "g")

$E_C(s144W$  [character descriptor and data])

Character format, continuation, and descriptor:

FIELD NAME	VALUE	DESCRIPTION
Format	4	
Continuation	0	
Descriptor Size	14	
Class	1	
Orientation	0	Portrait
Reserved	0	
Left Offset	2	
Top Offset	22	
Character Width	27	
Character Height	32	
Delta X	-	(Not Used)

**Character data:**

Dot Row	Bit Map	Decimal Equivalent			
01	00000000 11111100 00001111 1100000	0	252	15	192
02	00000111 11111111 00011111 1110000	7	255	31	224
03	00001111 11111111 10011111 1100000	15	225	159	192
04	00111111 11010111 11011110 0000000	63	219	224	0
05	00111110 00000001 11111110 0000000	62	1	254	0
06	01111100 00000000 01111110 0000000	124	0	126	0
07	01111000 00000000 01111110 0000000	120	0	126	0
08	11110000 00000000 00111110 0000000	240	0	62	0
09	11110000 00000000 00111110 0000000	240	0	62	0
10	11110000 00000000 00011110 0000000	240	0	30	0
11	11110000 00000000 00011110 0000000	240	0	30	0
12	11110000 00000000 00011110 0000000	240	0	30	0
13	11110000 00000000 00011110 0000000	240	0	30	0
14	11110000 00000000 00111110 0000000	240	0	62	0
15	01111000 00000000 00111110 0000000	120	0	62	0
16	01111000 00000000 01111110 0000000	120	0	126	0
17	01111100 00000000 11111110 0000000	124	0	254	0
18	00111110 00000001 11111110 0000000	62	1	254	0
19	00011111 11010111 11011110 0000000	31	219	222	0
20	00001111 11111111 10011110 0000000	15	255	158	0
21	00000111 11111111 00011110 0000000	7	255	30	0
22	00000000 10101000 00011110 0000000	0	172	30	0
23	00000000 00000000 00011110 0000000	0	0	30	0
24	00000000 00000000 00011110 0000000	0	0	30	0
25	00000000 00000000 00011110 0000000	0	0	30	0
26	00000000 00000000 00111110 0000000	0	0	62	0
27	00000000 00000000 00111100 0000000	0	0	60	0
28	00000000 00000000 01111100 0000000	0	0	124	0
29	00000000 00000001 11111000 0000000	0	1	248	0
30	00000001 11111111 11110000 0000000	1	255	240	0
31	00000011 11111111 11100000 0000000	3	255	224	0
32	00000001 11111111 10000000 0000000	1	255	128	0

Figure 10-8. Portrait Character Data Example

**Example** To download the character descriptor and data for a landscape, 10 pitch, 12 point, upright, medium, Courier lower-case “g”, send:

`Ⓔ*c103E` (103 is the decimal character code for an ASCII lower-case “g”)

`Ⓔ(s124W` [character descriptor and data]

Character format, continuation, and descriptor:

FIELD NAME	VALUE	DESCRIPTION
Format	4	
Continuation	0	
Descriptor Size	14	
Class	1	
Orientation	1	
Reserved	0	
Left Offset	-22	
Top Offset	28	
Character Width	32	
Character Height	27	
Delta X	120	(30 dot)

Character data:

Dot Row	Bit Map	Decimal Equivalent			
01	01000000 00000000 00000000 00000000	64	0	0	0
02	11100000 00000000 00000000 00000000	224	0	0	0
03	11100000 00000000 00000000 00000000	224	0	0	0
04	11100000 00000000 00000000 00000000	224	0	0	0
05	11111111 11111111 11111111 11000000	255	255	255	192
06	11111111 11111111 11111111 11110000	255	255	255	240
07	11111111 11111111 11111111 11111000	255	255	255	248
08	01111111 11111111 11111111 11111100	127	255	255	252
09	00001111 10000111 11000000 01111110	15	135	192	126
10	00011110 00000001 11100000 00011110	30	1	224	30
11	00111000 00000000 11110000 00001111	56	0	240	15
12	01111000 00000000 01111000 00001111	120	0	120	15
13	01110000 00000000 00111000 00000111	112	0	56	7
14	11110000 00000000 00111000 00000111	240	0	56	7
15	11100000 00000000 00011100 00000111	224	0	28	7
16	11110000 00000000 00111000 00000111	240	0	56	7
17	11100000 00000000 00011100 00000111	224	0	28	7
18	11110000 00000000 00111000 00000111	240	0	56	7
19	11110000 00000000 00111100 00000111	240	0	60	7
20	01110000 00000000 00111000 00000111	112	0	56	7
21	01111000 00000000 01111000 00000010	120	0	120	2
22	01111100 00000000 11111000 00000000	124	0	248	0
23	00111111 00000011 11110000 00000000	63	3	240	0
24	00011111 11111111 11100000 00000000	31	255	224	0
25	00011111 11111111 11000000 00000000	31	255	192	0
26	00000111 11111111 10000000 00000000	7	255	128	0
27	00000001 11111100 00000000 00000000	1	252	0	0

Figure 10-9. Landscape Character Data Example



## Contents

Introduction . . . . .	11-1
Raster Graphics . . . . .	11-2
Raster Graphics Resolution . . . . .	11-4
Raster Graphics Presentation Mode . . . . .	11-5
Start Raster Graphics . . . . .	11-7
Transfer Raster Data . . . . .	11-8
End Raster Graphics . . . . .	11-9
Raster Graphics Example . . . . .	11-10
Rectangular Area Fill Graphics . . . . .	11-13
Horizontal Rectangle Size (Decipoints) . . . . .	11-14
Horizontal Rectangle Size (Dots) . . . . .	11-14
Vertical Rectangle Size (Decipoints) . . . . .	11-15
Vertical Rectangle Size (Dots) . . . . .	11-15
Area Fill ID . . . . .	11-16
Fill Rectangular Area . . . . .	11-19
Rectangular Area Fill Examples . . . . .	11-20





---

## Introduction

The PCL language provides several forms of graphics functionality. Included is the ability to build dot-per-bit raster images and to fill or shade rectangular areas with pre-defined patterns.

---

## Raster Graphics

Images composed of groups of dots are raster images. Pictures in newspapers or on televisions are examples of raster images. The PCL language includes commands for printing raster images. The image is divided into dot rows; a row describes a one dot high strip of the image. A dot row of raster image data is transferred to the printer as a string of bytes containing a dot-per-bit representation of the row. If a bit in a row is set to one, the corresponding dot will be printed. Zeroed bits must be added to the end of each row to make it contain an integral number of bytes. The dot rows are organized from top to bottom of the image, i.e., the first dot row of data transferred to the printer corresponds to the top dot row of the image.

The following is an example of a raster image in the shape of an arrow:

Dot Row	Binary Representation			
	Byte 1	Byte 2	Byte 3	Byte 4
1	00000000	00000000	10000000	00000000
2	00000000	00000000	11000000	00000000
3	00000000	00000000	11100000	00000000
4	00000000	00000000	11110000	00000000
5	00000000	00000000	11111000	00000000
6	00000000	00000000	11111100	00000000
7	00000000	00000000	11111110	00000000
8	00000000	00000000	11111111	00000000
9	00000000	00000000	11111111	10000000
10	11111111	11111111	11111111	11000000
11	11111111	11111111	11111111	11100000
12	11111111	11111111	11111111	11110000
13	11111111	11111111	11111111	11111000
14	11111111	11111111	11111111	11111100
15	11111111	11111111	11111111	11111110
16	11111111	11111111	11111111	11111111
17	11111111	11111111	11111111	11111111
18	11111111	11111111	11111111	11111110
19	11111111	11111111	11111111	11111100
20	11111111	11111111	11111111	11111000
21	11111111	11111111	11111111	11110000
22	11111111	11111111	11111111	11100000
23	11111111	11111111	11111111	11000000
24	00000000	00000000	11111111	10000000
25	00000000	00000000	11111111	00000000
26	00000000	00000000	11111110	00000000
27	00000000	00000000	11111100	00000000
28	00000000	00000000	11111000	00000000
29	00000000	00000000	11110000	00000000
30	00000000	00000000	11100000	00000000
31	00000000	00000000	11000000	00000000
32	00000000	00000000	10000000	00000000

Figure 11-1. Arrow-Shaped Raster Image

## Raster Graphics Resolution

Raster graphics can be printed at 300, 150, 100 or 75 dots-per-inch. This command designates the resolution of subsequent raster data transfers.


$\text{E}_C * t \# R$

# = 75 - 75 dots-per-inch  
100 - 100 dots-per-inch  
150 - 150 dots-per-inch  
300 - 300 dots-per-inch

This command must be sent prior to the start graphics command. The factory default resolution is 75 dots-per-inch.

The **LaserJet IID** print resolution is 300 dots-per-inch. This printer automatically expands raster graphics transferred at resolutions less than 300 dots-per-inch to 300 dots-per-inch during printing.

The following illustrates a single bit translated into the corresponding printed dots in each of the four resolutions:

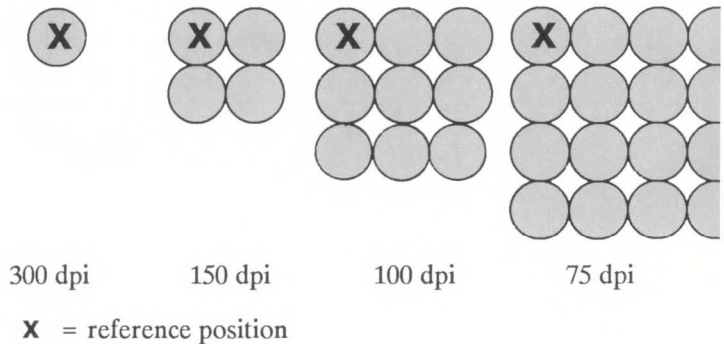

Lower resolution graphics occupy less user memory. For example, the number of bits required to represent a two-inch by three-inch image at 75 dots-per-inch is 33,750. The same image at 300 dots-per-inch requires 540,000 bits.

## Raster Graphics Presentation Mode

This command specifies the presentation of the raster image on the logical page.


$$^E_C * r \# F$$

# = 0 or 3


A value of 0 indicates that the raster graphics will be printed in the orientation of the logical page.

A value of 3 indicates that the raster graphics will be printed along the width of the physical page, regardless of logical page orientation. In portrait orientation, a raster row will be printed in the positive X-direction of the PCL coordinate system and a subsequent raster row will be printed beginning at the next dot row position in the positive Y-direction. In landscape orientation, a raster row will be printed in the positive Y-direction of the PCL coordinate system and a subsequent raster row will be printed beginning at the next dot row position in the negative X-direction. Figure 11-2 illustrates presentation mode 0 and 3.

The factory default is 3.

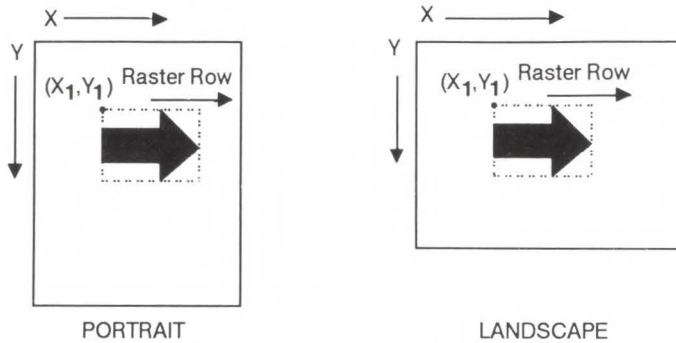

PRESENTATION MODE 0

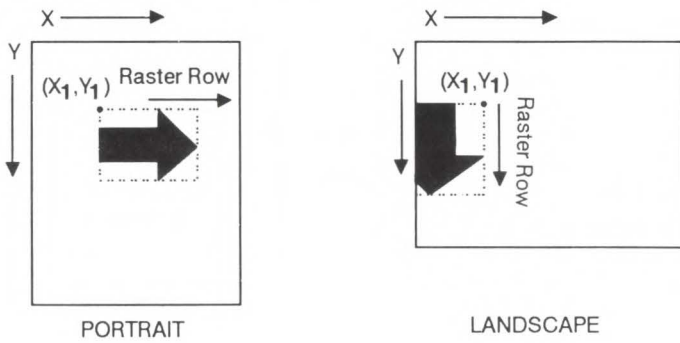

PRESENTATION MODE 3

$(X_1, Y_1)$  = current active position prior to the raster data transfer.

Figure 11-2. Raster Graphics Presentation Mode

## Start Raster Graphics

The start raster graphics command specifies the left raster graphics margin.

$E_C * r \# A$

- # = 0 - left graphics margin location is x-position 0.
- 1 - left graphics margin at the current x-position.

A value of 0 specifies that the left graphics margin is at X position 0. A value of 1 specifies that the left graphics margin is at the current X position.

Once a start raster graphics command is received by the printer, raster graphics resolution, raster graphics presentation mode, and left raster graphics margin are fixed until an end raster graphics command is received.



## Transfer Raster Data

The transfer raster data command is used to transfer a row of raster data to the printer.

$E_C * b \# W$  [raster data]

The value field (#) identifies the number of bytes in the raster row. These bytes are interpreted as one row of raster graphics data that will be printed at the current Y position at the left raster graphics margin. Upon completion of this command, the current active position is at the beginning of the next raster row at the left raster graphics margin. Within the raster data, each bit describes a single dot. The most significant bit (bit 7 is the most significant, bit 0 is the least significant) of the first byte of data corresponds to the first dot within that row. If a bit is set to 1, the corresponding dot will be printed. Each dot of the raster data is expanded according to the specified raster resolution.

Raster graphics is independent of the text area and perforation skip mode, i.e., these boundaries are ignored.

Raster graphic images are limited to the printable area; images that extend beyond the printable area are clipped.

## End Raster Graphics

The end raster graphics command signifies the end of the transfer of a raster graphic image.

$E_C * r B$

## Raster Graphics Example

To transfer a raster graphic image (see Figure 11-3) in the shape of an arrow perform the following steps:

1. Position the cursor:

`^C*p300x400Y` This moves the cursor to dot position (300, 400) within the PCL coordinate system.

2. Specify the raster graphics resolution:

`^C*t75R` This sets the raster graphics resolution to 75 dots-per-inch.

3. Specify the raster graphics presentation mode:

`^C*r0F` This specifies that the raster graphics will be printed in the orientation of the logical page.

4. Specify the left raster graphics margin:

`^C*r1A` This sets the left graphics margin to the current X position (300).

5. Transfer the raster data to the printer:

Divide the image into dot rows and transfer each dot row to the printer as a string of bytes as illustrated in Figure 11-3.

6. Signify the end of the raster graphic image transfer:

`^C*rB`

This example prints the arrow as shown in Figure 11-4.

Dot Row	byte 1	byte 2	byte 3	byte 4	Decimal Equivalent
1	00000000	00000000	10000000	00000000	E <sub>C</sub> *b4 W[ 0, 0, 128, 0]
2	00000000	00000000	11000000	00000000	E <sub>C</sub> *b4 W[ 0, 0, 192, 0]
3	00000000	00000000	11100000	00000000	E <sub>C</sub> *b4 W[ 0, 0, 224, 0]
4	00000000	00000000	11110000	00000000	E <sub>C</sub> *b4 W[ 0, 0, 240, 0]
5	00000000	00000000	11111000	00000000	E <sub>C</sub> *b4 W[ 0, 0, 248, 0]
6	00000000	00000000	11111100	00000000	E <sub>C</sub> *b4 W[ 0, 0, 252, 0]
7	00000000	00000000	11111110	00000000	E <sub>C</sub> *b4 W[ 0, 0, 254, 0]
8	00000000	00000000	11111111	00000000	E <sub>C</sub> *b4 W[ 0, 0, 255, 0]
9	00000000	00000000	11111111	10000000	E <sub>C</sub> *b4 W[ 0, 0, 255, 128]
10	11111111	11111111	11111111	11000000	E <sub>C</sub> *b4 W[ 255, 255, 255, 192]
11	11111111	11111111	11111111	11100000	E <sub>C</sub> *b4 W[ 255, 255, 255, 224]
12	11111111	11111111	11111111	11110000	E <sub>C</sub> *b4 W[ 255, 255, 255, 240]
13	11111111	11111111	11111111	11111000	E <sub>C</sub> *b4 W[ 255, 255, 255, 248]
14	11111111	11111111	11111111	11111100	E <sub>C</sub> *b4 W[ 255, 255, 255, 252]
15	11111111	11111111	11111111	11111110	E <sub>C</sub> *b4 W[ 255, 255, 255, 254]
16	11111111	11111111	11111111	11111111	E <sub>C</sub> *b4 W[ 255, 255, 255, 255]
17	11111111	11111111	11111111	11111111	E <sub>C</sub> *b4 W[ 255, 255, 255, 255]
18	11111111	11111111	11111111	11111110	E <sub>C</sub> *b4 W[ 255, 255, 255, 254]
19	11111111	11111111	11111111	11111100	E <sub>C</sub> *b4 W[ 255, 255, 255, 252]
20	11111111	11111111	11111111	11111000	E <sub>C</sub> *b4 W[ 255, 255, 255, 248]
21	11111111	11111111	11111111	11110000	E <sub>C</sub> *b4 W[ 255, 255, 255, 240]
22	11111111	11111111	11111111	11100000	E <sub>C</sub> *b4 W[ 255, 255, 255, 224]
23	11111111	11111111	11111111	11000000	E <sub>C</sub> *b4 W[ 255, 255, 255, 192]
24	00000000	00000000	11111111	10000000	E <sub>C</sub> *b4 W[ 0, 0, 255, 128]
25	00000000	00000000	11111111	00000000	E <sub>C</sub> *b4 W[ 0, 0, 255, 0]
26	00000000	00000000	11111110	00000000	E <sub>C</sub> *b4 W[ 0, 0, 254, 0]
27	00000000	00000000	11111100	00000000	E <sub>C</sub> *b4 W[ 0, 0, 252, 0]
28	00000000	00000000	11111000	00000000	E <sub>C</sub> *b4 W[ 0, 0, 248, 0]
29	00000000	00000000	11110000	00000000	E <sub>C</sub> *b4 W[ 0, 0, 240, 0]
30	00000000	00000000	11100000	00000000	E <sub>C</sub> *b4 W[ 0, 0, 224, 0]
31	00000000	00000000	11000000	00000000	E <sub>C</sub> *b4 W[ 0, 0, 192, 0]
32	00000000	00000000	10000000	00000000	E <sub>C</sub> *b4 W[ 0, 0, 128, 0]

Raster Image

Raster Data Commands

The brackets and commas are not part of the raster data command; they are used only to delineate the data.

Figure 11-3. Example of Raster Graphic Image Data

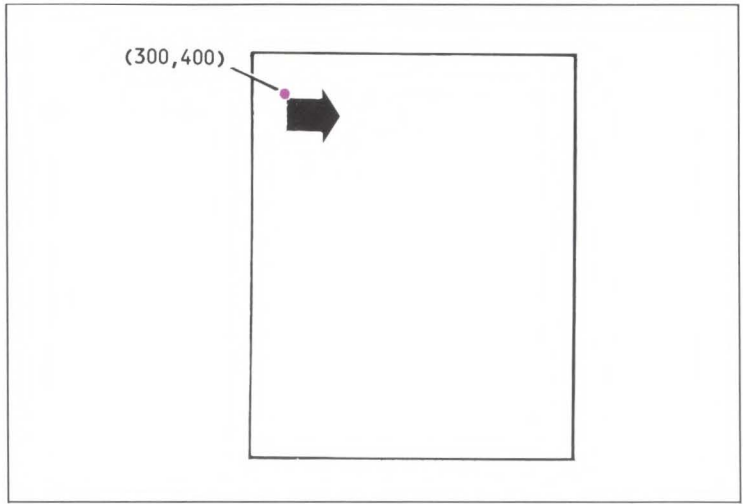


Figure 11-4. Example of Raster Graphic Image Transfer

---

## Rectangular Area Fill Graphics

The PCL language includes commands for filling or shading rectangular areas with pre-defined patterns. Rectangular areas are printed in the orientation of the logical page. An area's width extends in the positive X-direction of the PCL coordinate system; an area's height extends in the positive Y-direction.

Note



---

Rectangular areas are not affected by the raster graphics resolution command.

---

## Horizontal Rectangle Size (Decipoints)

This Horizontal Rectangle Size command specifies the rectangle width in decipoints.

$E_C * c \# H$

$\#$  = Number of decipoints (1/720<sup>th</sup> inch)

The value field ( $\#$ ) is valid to 4 decimal places.

The printer converts the specified width to dots by rounding up to an integral number of dots. For example, 5 decipoints, which corresponds to 2.08 dots on the **LaserJet IID** printer, is converted to 3 dots.

The factory default horizontal rectangle size is 0.

## Horizontal Rectangle Size (Dots)

This Horizontal Rectangle Size command specifies the rectangle width in dots.

$E_C * c \# A$

$\#$  = Number of dots.

The factory default horizontal rectangle size is 0.

### Vertical Rectangle Size (Decipoints)

This Vertical Rectangle Size command specifies the rectangle height in decipoints.

$$^E_c * c \# V$$

# = Number of decipoints (1/720<sup>th</sup> inch)

The value field (#) is valid to 4 decimal places.

The printer converts the specified width to dots by rounding up to an integral number of dots. For example, 5 decipoints, which corresponds to 2.08 dots on the **LaserJet IID** printer, is converted to 3 dots.

The factory default vertical rectangle size is 0.

### Vertical Rectangle Size (Dots)

This Vertical Rectangle Size command specifies the rectangle height in dots.

$$^E_c * c \# B$$

# = Number of dots

The factory default vertical rectangle size is 0.



**Area Fill ID** This command specifies the level of shading or type of pattern fill to be used when filling a rectangular area.

`Ec * c # G`

The value field (#) identifies the level of shading or type of HP Defined pattern. There are eight shading levels defined within the PCL language. To specify a shading level use any value between 1 and 100. Use a value within the range indicated in Figure 11-5 for the desired shading level.

There are six HP defined fill patterns defined within PCL language. To specify a fill pattern type use any value between 1 and 6. Use a value indicated in Figure 11-6 for the desired fill pattern. Note that the patterns are not rotated when the orientation changes.

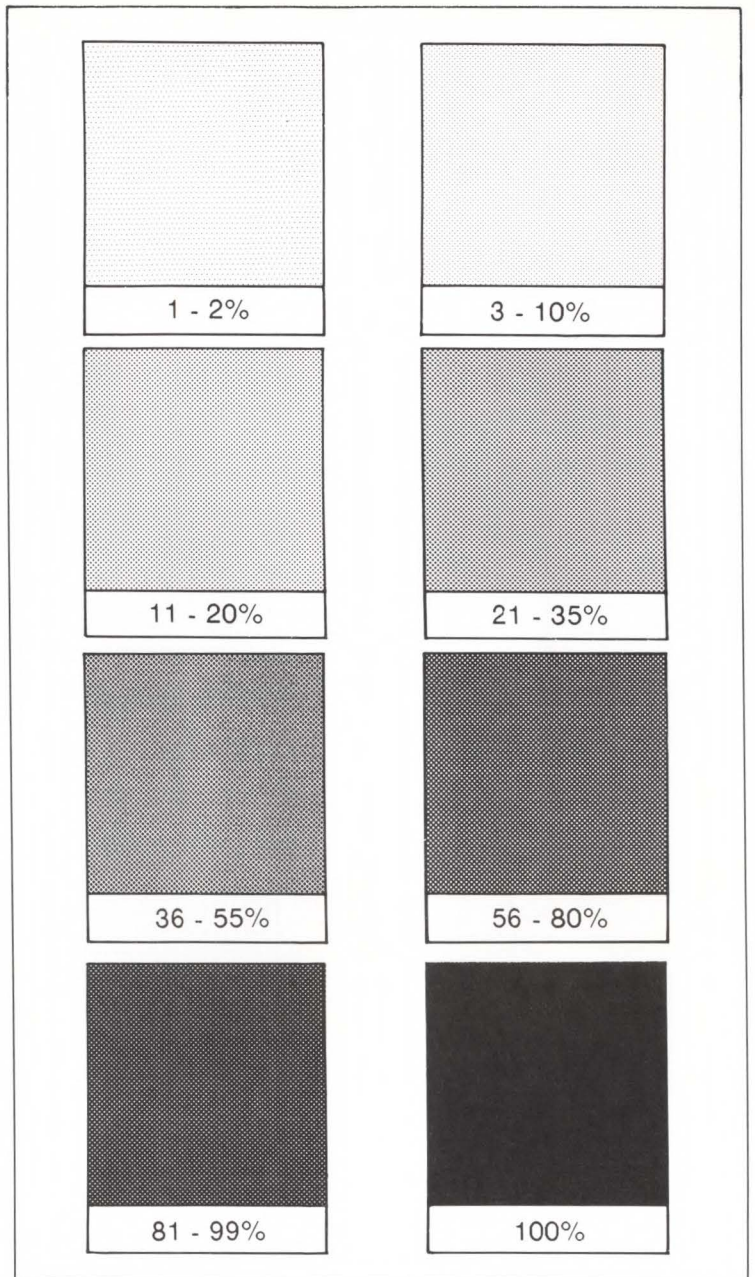


Figure 11-5. Shading Levels

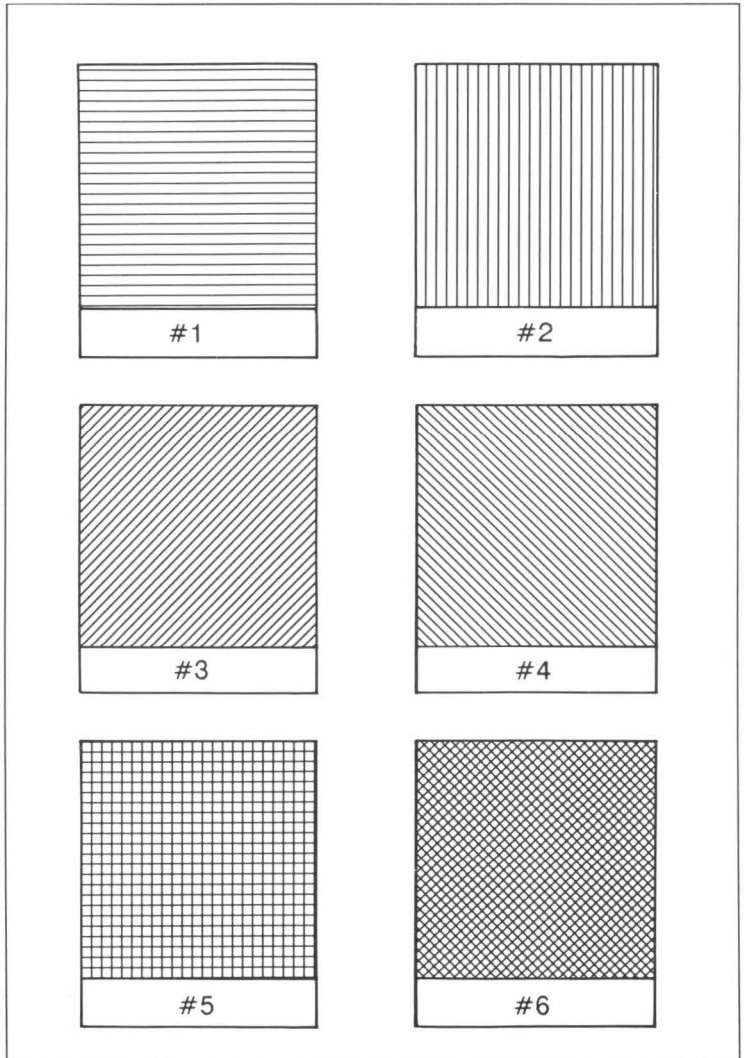


Figure 11-6. Fill Patterns

## Fill Rectangular Area

This command is used to fill a rectangular area of the specified width and height.

$F_C * c \# P$

# = 0 - Solid fill

= 2 - Shaded fill

= 3 - HP defined pattern fill

The level of shading or type of patterned fill used when filling a rectangle is specified by the current area fill ID. A solid-filled rectangular area is also known as a black rule and does not require specification of an area fill ID.

The upper left corner of the rectangular area is located at the current active position. The current active position is not changed during the printing of a rectangular area.

Rectangular areas are independent of the text area and perforation skip mode, i.e., these boundaries are ignored.

Rectangular areas are limited to the logical page; rectangular areas that extend outside the logical page are clipped.

## Rectangular Area Fill Examples

To print a 3 inch by 5 inch black rule, perform the following steps.

1. Position the cursor:

`^C*p300x400Y`

This moves the cursor to dot position (300, 400) within the PCL coordinate system.

2. Specify the width of the rule:

`^C*c900A`

This sets the rule width to 900 dots (3 inches).

3. Specify the height of the rule:

`^C*c1500B`

This sets the rule height to 1500 dots (5 inches).

4. Print the rule:

`^C*c0P`

This example prints the following:

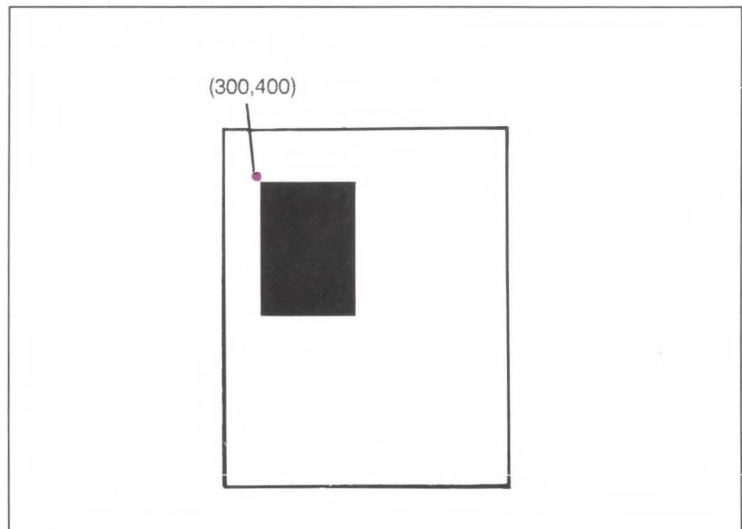


Figure 11-7. Solid Fill Example

To print a 3 inch by 5 inch 25% shaded rectangle, perform the following steps.

1. Position the cursor:

`^C*p300x400Y` This moves the cursor to dot position (300, 400) within the PCL coordinate system.

2. Specify the width of the rectangle:

`^C*c900A` This sets the rectangle width to 900 dots (3 Inches).

3. Specify the height of the rectangle:

`^C*c1500B` This sets the rectangle to 1500 dots (5 inches).

4. Specify the area fill ID:

`^C*c25G` This sets the area fill ID to 25.

5. Print the rectangular shaded area:

`^C*c2P`

This example prints the following:

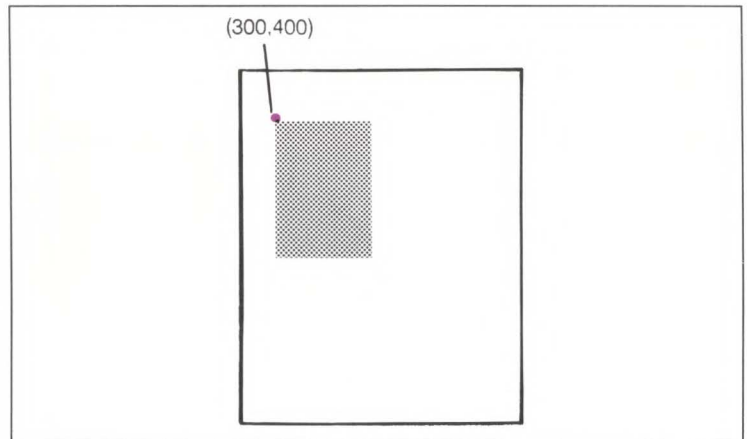


Figure 11-8. Shaded Fill Example

To print a 3 inch by 5 inch rectangular area filled with a horizontal line pattern, perform the following steps:

1. Position the cursor:

`^c*p300x400Y` Moves the cursor to dot position (300,400) within the PCL coordinate systems.

2. Specify the width of the rectangle:

`^c*c900A` Sets the rectangle width to 900 dots (3 inches).

3. Specify the height of the rectangle:

`^c*c1500B` Sets the rectangle height to 1500 dots (5 inches).

4. Specify the area fill ID:

`^c*c1G` Sets the area fill ID to 1.

5. Print the rectangular pattern-filled area:

`^c*c3P`

This example prints the following:

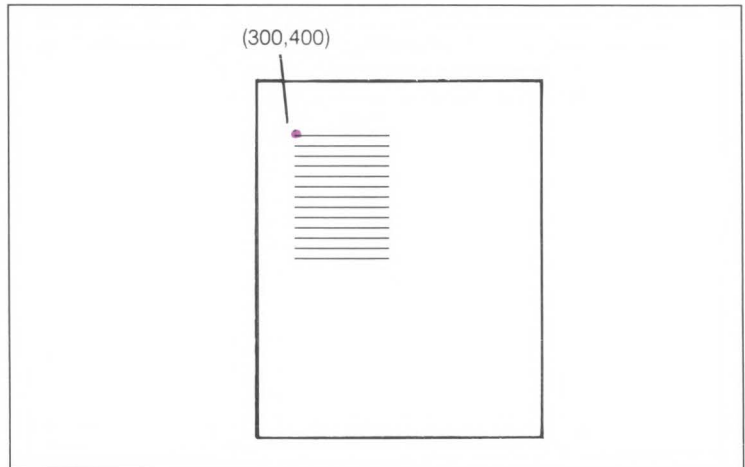


Figure 11-9. Patterned Fill Example

---

## Contents

Introduction . . . . .	12-1
Macro Creation . . . . .	12-2
Macro Invocation . . . . .	12-3
Temporary/Permanent Macros . . . . .	12-4
Deleting Macros . . . . .	12-4
Macro ID . . . . .	12-5
Macro Control . . . . .	12-6
Macro Control Example . . . . .	12-8





---

## Introduction

A typical printer task requires the use of several commands. Applications may perform the same task numerous times. For tasks performed repeatedly, PCL provides macro functionality to reduce the number of commands that must be sent to the printer. A macro is a collection of escape sequences, control codes, and data downloaded to the printer, whose execution can be initiated using a single command.

---

## Macro Creation

A unique identification (ID) number should be designated prior to the definition of a macro; this number is then associated with the macro. If a macro is already associated with this ID number, the existing macro will be deleted from user memory during the definition of the new macro. Subsequent macro operations are accomplished using the macro ID number.

A macro is created in several steps. First, a command is sent to the printer that indicates the start of a macro definition. Next, the escape sequences, control codes, and data that constitute the macro are sent to the printer in the intended order of their execution. Finally, a command is sent to the printer that indicates the end of the macro definition.

Macros occupy a portion of user memory. The number of macros that can be stored simultaneously in user memory is limited only by the amount of available user memory.

## Macro Invocation

There are three ways to invoke a macro: **execute**, **call** and **overlay**.

When a macro is **executed**, it begins performing its commands using the current modified print environment. Changes made to feature settings during macro **execution** are recorded in the modified print environment; these changes are retained upon completion of the macro **execution**.

When a macro is **called**, it begins performing its commands using the current modified print environment. Changes made to feature settings during a macro **call** are recorded in the modified print environment; however, these changes are not retained upon completion of the macro **call**. The modified print environment that existed prior to the macro **call** is restored.

When a macro is enabled for automatic **overlay**, its execution will be the final operation each time a page is printed. Before the macro is executed, the current modified print environment is saved and replaced with the overlay environment. The overlay environment is a combination of the user default and the current modified print environments. Changes made to feature settings during macro **overlay** are recorded in the modified print environment; however, these changes are not retained upon completion of the macro **overlay**. The modified print environment that existed prior to the macro overlay is restored.

The overlay environment consists of the current settings for the following features with the remainder of the environmental features set to their user default values:

<b>Page length</b>	<b>Paper source</b>
<b>Page size</b>	<b>Number of copies</b>
<b>Orientation</b>	<b>Cursor position stack</b>
<b>Duplex mode</b>	
<b>Registration</b>	

Refer to Chapter 3 for descriptions of environments.

### Note



The current active position is not part of the modified print environment; therefore, the cursor position is not saved when a macro is **called**, nor is it restored upon completion. The push/pop cursor position command can be used to save and recall a cursor position.

---

## Temporary / Permanent Macros

During its definition, a macro is automatically designated as temporary. A temporary macro is one that is deleted from user memory during a printer reset. A macro can be designated as permanent to prevent the printer from deleting it during a printer reset. A macro is designated as temporary or permanent by reference to its ID number.

Note



---

Temporary and permanent macros are removed from user memory whenever the printer's power is turned off.

---

---

## Deleting macros

There are several mechanisms provided by PCL macro control for explicit deletion of macros from user memory. These include commands to delete all macros, all temporary macros, or an individual macro by reference to its macro ID number.

## Macro ID

The Macro ID command specifies an ID number for use in subsequent macro commands.

$$^E_C \& f \# Y$$

# = Macro ID number (0 to 32767)

This number will be used in subsequent macro operations.

The factory default macro ID is 0.

**Example** To establish a macro ID number of 5, send:

$$^E_C \& f 5 Y$$

---

## Macro Control

The macro control command provides mechanisms for definition, invocation, and deletion of macros.

$\text{E}_c \ \& \ f \ \# \ X$

- # = 0 Start macro definition (last ID specified)
- = 1 Stop macro definition
- = 2 Execute macro (last ID specified)
- = 3 Call macro (last ID specified)
- = 4 Enable macro for automatic overlay (last ID specified)
- = 5 Disable automatic overlay
- = 6 Delete all macros
- = 7 Delete all temporary macros
- = 8 Delete macro (last ID specified)
- = 9 Make macro temporary (last ID specified)
- = 10 Make macro permanent (last ID specified)

---

### Note



1. A macro may **call** or **execute** another macro which in turn may **call** or **execute** another macro; two levels of "nesting" are allowed.
  2. Other than **call** and **execute**, no macro control operations may occur within a macro.
  3. A printer reset command is not allowed in a macro.
-

**Example** To define a macro with an ID of 7, send:

`^C&f7y0X`

•

•

•

*escape sequences, control codes, and data*

•

•

•

`^C&f1X`

To make the macro with an ID of 7 permanent, send:

`^C&f7y10X`

To enable the macro with an ID of 7 for automatic overlay, send:

`^C&f7y4X`

To delete the macro with an ID of 7, send:

`^C&f7y8X`



## Macro Control Example

The following illustrates the definition of a letterhead macro.

<code>^C&amp;f1Y</code>	Specify the Macro ID as one
<code>^C&amp;f0X</code>	Start Macro Definition
<code>^C&amp;a540h360V</code>	Position logo at (540, 360) decipoints in the PCL coordinate system.
<code>^C*t150R</code>	Set graphics resolution to 150 dots-per-inch
<code>^C*r1A</code>	Start raster image of logo
<code>^C*b60W [Raster data]</code>	Send the first raster line
•	•
•	•
•	•
<code>^C*b60W [Raster data]</code>	Send the last raster line
<code>^C*rB</code>	Stop raster graphics
<code>^C&amp;a540h780V</code>	Position for lettering at (540, 780) decipoints
<code>^C(1X</code>	Select font with ID of 1
ABC Corp.	Text
Post Office Box 15	Text
Fred, Texas 83707	Text
<code>^C&amp;a540h960V</code>	Position first rule at (540, 960) decipoints
<code>^C*c10v4680H</code>	Set rule height and width
<code>^C*c0P</code>	Print the first rule
<code>^C&amp;a540h980V</code>	Position second rule at (540, 980) decipoints
<code>^C*c0P</code>	Print second rule
<code>^C&amp;a540h1200V</code>	Position for first line of text at (540, 1200) decipoints
<code>^C&amp;f1X</code>	Stop Macro Definition

This macro can now be **executed**, **called** or enabled for automatic overlay.

## Contents

Introduction . . . . .	13-1
PCL Command Parsing . . . . .	13-2
Job Control . . . . .	13-2
Printer Reset . . . . .	13-2
Duplex Offset Registration . . . . .	13-2
Page Control . . . . .	13-3
Paper Source . . . . .	13-3
Page Length . . . . .	13-3
Text Area/Margins . . . . .	13-3
HMI . . . . .	13-4
Cursor Positioning . . . . .	13-4
Fonts . . . . .	13-5
Raster Graphics . . . . .	13-6
Macros . . . . .	13-7
Performance . . . . .	13-8
PCL Commands . . . . .	13-8
Print Data . . . . .	13-8
Print Overrun . . . . .	13-9
I/O . . . . .	13-9
Troubleshooting Commands . . . . .	13-10
End-of-Line Wrap . . . . .	13-10
Display Functions Mode . . . . .	13-11
Auto Continue Mode . . . . .	13-12
Common Errors . . . . .	13-13
20 Error . . . . .	13-13
21 Error . . . . .	13-13
22 Error . . . . .	13-13
40 Error . . . . .	13-13



---

## Introduction

This chapter provides information for use during the development of PCL software.

---

## PCL Command Parsing

A job stream may contain commands that are **device** specific. If these commands are not supported by the **PCL device**, they are ignored. For example, a job separation command will have no effect on the LaserJet, LaserJet Plus, LaserJet series II and LaserJet IID printers; however, the LaserJet 500 Plus, and LaserJet 2000 printers will perform job separation.

---

## Job Control

### Printer Reset

- A printer reset ( $\text{FcE}$ ) should be included as the first and last command of every job. A printer reset should not be used within a job.

### Duplex/Offset Registration

- To avoid data loss, text should be centered on a page, either horizontally or vertically, depending on the type of offset selected. The borders used for centering determine the maximum value of the offset, where the maximum offset value is always at least 1/4 inch less than the size of the border. For example, to prevent data loss on the back side of a page in portrait orientation with long-edge binding and a left offset, text should be centered along the width of the page. Note, that in this example only one left offset command is required since the direction of offset is automatically reversed for the back page. For more information see pages 4-7 to 4-9.

---

## Page Control

### Paper Source

- The primary use for the paper source command is to allow you access to "locked out" (secured) paper trays.

### Page Size

- Specifies the exact size of the page (media) to be used

### Text Area/Margins

- Avoid setting the top margin or text length to values outside of the printable area. This may cause data loss.
- Top margin and text length commands use the current line spacing (i.e., the last VMI or lpi commands).
- Specifying the text length establishes the bottom margin.
- When using both the top margin and text length commands, the top margin command should be sent before the text length command.
- To address the entire logical page set the top margin to 0, set perforation skip mode OFF, and position the cursor to the desired location.
- The user default VMI is selectable from the control panel printing menu, using the FORM menu item (see the *LaserJet IID Printer User's Manual*). If the Page Length command ( $\text{^c}\&\text{q}\#\text{P}$ ) follows a VMI change (produced by a control panel selection or a PCL command), the length of a page will be recalculated; therefore, the printer may request a different page size.

## HMI

- When a font is selected, HMI is automatically set to correspond to the pitch of the selected font. Therefore, when using a non-standard HMI value, the value must be re-specified following each font selection.

---

## Cursor Positioning

- Horizontal (decipoint, dot and column) positioning ignores margins and can therefore be used to move the cursor anywhere along the present line.
- When performing cursor positioning with decipoints, dots, or rows and columns, do not use margins. Margins are intended for print and space (i.e., CR, LF, FF) applications.
- Vertical (decipoint, dot and row) positioning allows the cursor to be moved into the perforation region.
- The top margin is the reference point for absolute vertical positioning.
- The left edge of the logical page is the reference point for absolute horizontal positioning.

---

## Fonts

- Character spacing information for proportionally spaced fonts is available from Hewlett-Packard. Character spacing information can also be obtained from listings generated through the operation of the spacing feature available from Hewlett-Packard's Font Load Utility.
- Since line spacing is independent of font height, line spacing may require adjustment following font selection to insure proper vertical alignment of text.
- To insure compatibility with future products, select fonts by specifying all of the font characteristics. If all of the characteristics are not designated, the primary and secondary font tables may not contain the correct information to select the requested font from those available in the printer.
- The transparent print data command is required to access characters with character codes in the decimal range of 7 to 15 and 27 in the PC symbol sets.
- All information about the design of a font, as well as the design of its characters, can be found in the font and character descriptors.
- A control code space is printed when an attempt is made to print a non-existent character.
- When a soft font is specified using an ID number with which no soft font has been associated, no font change occurs.
- The shortcut method of font selection (as documented in some previous font product literature) may not result in the desired font change. This is due to the increased number of available fonts in the printer.



---

## Raster Graphics

- To minimize I/O transmission time and conserve memory, avoid sending unnecessary raster data to the printer that represents white space.
- Resolution should be set prior to the start raster graphics command. Once the start raster command is received, the resolution cannot be set until after a subsequent end raster graphics command.
- Presentation mode should be set prior to the Start Raster Graphics command. Once the start raster command is received, the presentation mode cannot be set until after a subsequent End Raster Graphics Command.
- Some applications and I/O drivers insert carriage returns or line feeds into the data stream sent to the printer. This modification of the data stream must be suppressed for correct printer operation.
- The most efficient way to draw lines (horizontal and vertical) is using graphics rules (solid-filled rectangular areas).

---

## Macros

- When a macro ID is specified for which no macro has been defined, the macro invocation, macro deletion, and make macro permanent or temporary commands are ignored.
- The macro enabled for auto macro overlay is executed on each page, until the macro is disabled or deleted, a reset occurs ("E<sub>C</sub>E" or control panel), or the page length, page size or orientation is changed.
- When the modified print environment is restored, if the page length, page size, or the orientation has changed, or the primary or secondary font has been deleted, the following will occur:
  1. If the original page length or page size is different than the current page length and page size, the current page is closed and printed, the page length and page size are changed to their original value, and the cursor is positioned at the left edge of the logical page at the top margin on the following page
  2. If the primary or secondary font is deleted, a new primary or secondary font is automatically selected from the remaining fonts using the current font characteristics.

---

## Performance

### PCL Commands

- Since PCL printers are command driven devices and each command takes a finite amount of time to process, pages that are composed of a large number of commands may not print at maximum speed. Most commands can be used frequently on a page without adversely affecting the printer's performance; however, certain commands take more time to process and therefore, if used frequently on a page, may decrease printer performance. An excessive number of font selections per page (selection using font characteristic commands or selection by ID number) may decrease printer performance.

### Print Data

- There is a limit on the amount of data, as well as the number of commands, that the printer can process per page at maximum speed. In general, the LaserJet family of printers can print at least 2500 uniformly distributed 12-point characters per page at maximum speed. This assumes the data does not contain any PCL commands and there are no I/O or host CPU constraints.

## Print Overrun

- As data is received by the printer, it is processed and stored in an intermediate format. The intermediate data is later processed and printed. During the physical printing of a page, the page moves through the printer at a constant speed. Thus, there are pages that cannot be printed because the page's intermediate data cannot be processed and printed fast enough to keep up with the physical speed of the page as it moves through the printer. When this condition occurs, "21 ERROR" is displayed on the printer's control panel. A page causing this error can never be printed by this device; however, it may be possible to remove or redistribute the page's data and subsequently print the page.

## I/O

- The Parallel (Centronics) I/O has higher throughput than the RS-232C serial I/O. While text processing may not benefit from a faster I/O, raster graphics processing and soft font downloads benefit from increased I/O throughput.

---

## Troubleshooting Commands

### End-of-Line Wrap

The End-of-Line Wrap command defines the action that occurs when a line of text reaches the right margin.

`ESC & s # C`

# = 0 - Enables End-of-Line Wrap

1 - Disables End-of-Line Wrap

When end-of-line wrap is enabled, a character or space that would move the cursor to the right of the right margin causes a CR-LF to be executed (prior to the printing of the character or space).

When end-of-line wrap is disabled, a character or space that would move the cursor to the right of the right margin may be clipped (refer to Chapter 2). When a character is clipped, the cursor is set to the right margin.

The primary use of this command is with display functions mode.

The factory default is end-of-line wrap disabled.

### Example

To enable end-of-line wrap mode, send:

`ESC & s 0 C`

## Display Functions Mode

The Display Functions Mode command allows all escape sequences and control codes to be printed instead of being executed.

- $\text{E}_C Y$  - Enables Display Functions Mode
- $\text{E}_C Z$  - Disables Display Functions Mode

When the printer is in display functions mode, all control codes and escape sequences are printed and not executed with the following exceptions.

- CR is printed and executed as CR-LF.
- $\text{E}_C Z$  is printed and executed.

Display functions mode instructs the printer to display rather than execute the data it receives. The data is printed using the current text area and selected font.

### Example

To enable display functions mode, send:

$\text{E}_C \&s0C$  Enables end-of-line wrap to prevent data truncation.

$\text{E}_C Y$  Enable Display Functions Mode.

•  
•  
•

*Data sent to the printer.*

•  
•  
•

$\text{E}_C Z$  Disable Display Functions Mode.

### Note



Most symbol sets do not have printable characters defined in the control code decimal range 0 to 31 and 128 to 159. If a printable character is not defined, a control code space is printed while in display functions mode. The PC-8 symbol sets do have printable characters defined in this range.

## Auto Continue Mode

- Automatic error clearing (refer to the *LaserJet IID Printer User's Manual* for a list of clearable errors) can be achieved by setting Auto-Continue Mode to ON using the Operator Control Panel configuration menu. When "Auto-Cont" is set to ON, the device will display a message for 10 seconds and then attempt to continue printing the job. When "Auto-Cont" mode is set to OFF, all errors cause the device to stop printing.

---

## Common Errors

- 20 ERROR** This error occurs when the printer runs out of memory during a font download, macro creation, raster graphic download, or page composition. To alleviate this error, the quantity of data sent to the printer must be reduced. This can be accomplished by eliminating unnecessary fonts or macros, reducing the raster graphics white space sent to the printer, or selecting a lower resolution for the raster graphics. An alternative solution is to install additional memory. Additional memory is available from your Hewlett-Packard Sales Representative or authorized dealer.
- 21 ERROR** This error results when a page is too complex to print. The error can be corrected by reducing the complexity of the page. (Refer to the "Print Overrun" section described earlier in this chapter for additional information.)
- 22 ERROR** This error indicates an I/O protocol problem between the printer and the host system. Make sure the printer and the host system protocol (i.e., hardware handshake or Xon/Xoff handshake) correspond. (Refer to Appendix B for interface information.)
- 40 ERROR** An error occurred while transferring data from the computer to the printer. This error occurs if the computer is turned ON and OFF while the printer is on-line or if the printer's baud rate is not the same as the computer's. To clear the error message press the CONTINUE/RESET key (refer to the *LaserJet series IID Printer User's Manual*). Make sure the printer is set to the same baud rate as the computer. If the error continues, call your HP Service Representative.
- For additional printer errors refer to the *LaserJet IID Printer User's Manual*.





---

## Contents

ASCII Character Codes (Roman-8) . . . . .	A-1
Roman-8 Symbol Set . . . . .	A-2
ECMA-94 Latin Symbol Set . . . . .	A-3
PC-8 Symbol Set. . . . .	A-4
PC-850 Symbol Set. . . . .	A-5
PC-8 Danish/Norwegian Symbol Set . . . . .	A-6
Legal Symbol Set . . . . .	A-7
ISO Substitution Table. . . . .	A-8
Control Codes . . . . .	A-9
Roman-8 Character Conversion Table . . . . .	A-10
LaserJet IID Printer Commands. . . . .	A-17



Table A-1. ASCII Character Codes (Roman-8 characters shown).

8-bit character = [b<sub>8</sub> b<sub>7</sub> b<sub>6</sub> b<sub>5</sub> b<sub>4</sub> b<sub>3</sub> b<sub>2</sub> b<sub>1</sub>]

				b <sub>8</sub>	b <sub>7</sub>	b <sub>6</sub>	b <sub>5</sub>																								
				0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
				0	0	0	1	1	1	1	1	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
				0	0	1	1	0	0	1	1	0	0	1	1	0	0	1	1	0	0	1	1	0	0	1	1	0	0	1	1
				0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1
b <sub>4</sub>	b <sub>3</sub>	b <sub>2</sub>	b <sub>1</sub>		0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F											
0	0	0	0	0	NUL	DLE	SP	0	@	P	'	p					—	â	Ä	Á	Þ										
0	0	0	1	1	SOH	DC1	!	1	A	Q	a	q					À	Ý	ê	î	Ã	þ									
0	0	1	0	2	STX	DC2	"	2	B	R	b	r					Â	ý	ô	ø	ã	·									
0	0	1	1	3	ETX	DC3	#	3	C	S	c	s					È	°	û	Æ	Ð	μ									
0	1	0	0	4	EOT	DC4	\$	4	D	T	d	t					Ê	Ç	á	ä	ö	¶									
0	1	0	1	5	ENQ	NAK	%	5	E	U	e	u					Ë	ç	é	í	Í	¾									
0	1	1	0	6	ACK	SYN	&	6	F	V	f	v					Ï	Ñ	ó	ø	Ì	—									
0	1	1	1	7	BEL	ETB	'	7	G	W	g	w					Ë	ñ	ú	æ	Ó	¼									
1	0	0	0	8	BS	CAN	(	8	H	X	h	x					'	i	à	Ä	Ò	½									
1	0	0	1	9	HT	EM	)	9	I	Y	i	y					'	ı	è	ı	Õ	a									
1	0	1	0	A	LF	SUB	*	:	J	Z	j	z					^	Ɔ	ò	Ö	õ	°									
1	0	1	1	B	VT	ESC	+	;	K	[	k	{					"	£	ü	Ü	Š	«									
1	1	0	0	C	FF	FS	,	<	L	\	l						~	*	ä	É	š	■									
1	1	0	1	D	CR	GS	-	=	M	]	m	}					ù	§	ë	ï	Ú	»									
1	1	1	0	E	SO	RS	.	>	N	^	n	~					Û	f	ö	ß	ÿ	±									
1	1	1	1	F	SI	US	/	?	O	_	o	DEL					£	c	ü	Ô	ÿ										

Table A-2. Roman-8 Symbol Set

NUL 0	DLE 16	SP 32	0 48	@ 64	P 80	` 96	p 112				— 160	â 176	Å 192	Á 208	Ḇ 224	240
SOH 1	DC1 17	!	1 49	A 65	Q 81	a 97	q 113				À 161	Ý 177	ê 193	î 209	Ã 225	ḇ 241
STX 2	DC2 18	"	2 50	B 66	R 82	b 98	r 114				Â 162	ÿ 178	ô 194	ø 210	ã 226	· 242
ETX 3	DC3 19	#	3 51	C 67	S 83	c 99	s 115				È 163	° 179	û 195	Æ 211	Ð 227	μ 243
EOT 4	DC4 20	\$	4 52	D 68	T 84	d 100	t 116				Ê 164	Ç 180	á 196	å 212	ö 228	¶ 244
ENQ 5	NAK 21	%	5 53	E 69	U 85	e 101	u 117				Ë 165	ç 181	é 197	í 213	Í 229	¾ 245
ACK 6	SYN 22	&	6 54	F 70	V 86	f 102	v 118				Î 166	Ñ 182	ó 198	ø 214	Ì 230	— 246
BEL 7	ETB 23	'	7 55	G 71	W 87	g 103	w 119				Ï 167	ñ 183	ú 199	æ 215	Ó 231	¼ 247
BS 8	CAN 24	(	8 56	H 72	X 88	h 104	x 120				˘ 168	ı 184	à 200	Ä 216	Ò 232	½ 248
HT 9	EM 25	)	9 57	I 73	Y 89	i 105	y 121				˙ 169	¿ 185	è 201	ì 217	Õ 233	à 249
LF 10	SUB 26	*	: 58	J 74	Z 90	j 106	z 122				ˆ 170	¤ 186	ò 202	Ö 218	õ 234	º 250
VT 11	ECS 27	+	; 59	K 75	[ 91	k 107	{ 123				¨ 171	£ 187	ù 203	Û 219	Š 235	« 251
FF 12	FS 28	,	< 60	L 76	\ 92	l 108	 124				˜ 172	¥ 188	ä 204	É 220	š 236	■ 252
CR 13	GS 29	-	= 61	M 77	] 93	m 109	} 125				Ù 173	§ 189	ë 205	ï 221	Ú 237	» 253
SO 14	RS 30	.	> 62	N 78	^ 94	n 110	~ 126				Û 174	f 190	ö 206	ß 222	ÿ 238	± 254
SI 15	US 31	/	? 63	O 79	_ 95	o 111	⊞ 127				£ 175	ç 191	ü 207	Ô 223	ÿ 239	255

Table A-3. ECMA-94 Latin Symbol Set

NUL 0	DLE 16	SP 32	0 48	€ 64	P 80	˘ 96	p 112				° 160	À 176	Đ 192	à 208	ð 224	240
SOH 1	DC1 17	!	1 49	A 65	Q 81	a 97	q 113				ı 161	± 177	Á 193	Ñ 209	á 225	ñ 241
STX 2	DC2 18	"	2 50	B 66	R 82	b 98	r 114				ç 162	² 178	Â 194	Ò 210	â 226	ò 242
ETX 3	DC3 19	#	3 51	C 67	S 83	c 99	s 115				£ 163	³ 179	Ã 195	Ó 211	ã 227	ó 243
EOT 4	DC4 20	\$	4 52	D 68	T 84	d 100	t 116				¤ 164	´ 180	Ä 196	Ô 212	ä 228	ô 244
ENQ 5	NAK 21	%	5 53	E 69	U 85	e 101	u 117				¥ 165	µ 181	Å 187	Õ 213	å 229	õ 245
ACK 6	SYN 22	&	6 54	F 70	V 86	f 102	v 118				 166	¶ 182	Æ 198	Ö 214	æ 230	ö 246
BEL 7	ETB 23	'	7 55	G 71	W 87	g 103	w 119				§ 167	· 183	Ç 199	× 215	ç 231	÷ 247
BS 8	CAN 24	(	8 56	H 72	X 88	h 104	x 120				¨ 168	¸ 184	È 200	Ø 216	è 232	ø 248
HT 9	EM 25	)	9 57	I 73	Y 89	i 105	y 121				© 169	¹ 185	É 201	Û 217	é 233	ù 249
LF 10	SUB 26	*	10 58	J 74	Z 90	j 106	z 122				ª 170	º 186	Ê 202	Ú 218	ê 234	ú 250
VT 11	ECS 27	+	11 59	K 75	[ 91	k 107	{ 123				<< 171	>> 187	Ë 203	Û 219	ë 235	û 251
FF 12	FS 28	,	12 60	L 76	\ 92	l 108	 124				¬ 172	¼ 188	Ï 204	Ü 220	ï 236	ü 252
CR 13	GS 29	-	13 61	M 77	] 93	m 109	} 125				– 173	½ 189	Í 205	Ý 221	í 237	ý 253
SO 14	RS 30	.	14 62	N 78	^ 94	n 110	~ 126				® 174	¾ 190	Î 206	Þ 222	î 238	þ 254
SI 15	US 31	/	15 63	O 79	_ 95	o 111	◻ 127				– 175	¿ 191	Ï 207	ß 223	ï 239	ÿ 255

Table A-4. PC-8 Symbol Set

NUL 0	▶ 16	SP 32	0 48	@ 64	P 80	˘ 96	p 112	Ç 128	É 144	á 160	⋮ 176	L 192	⌌ 208	α 224	≡ 240
☺ 1	◀ 17	! 33	1 49	A 65	Q 81	a 97	q 113	ü 129	æ 145	í 161	⋈ 177	⊥ 193	⌋ 209	β 225	± 241
● 2	↑ 18	" 34	2 50	B 66	R 82	b 98	r 114	é 130	Æ 146	ó 162	⋈ 178	⊥ 194	⌋ 210	Γ 226	≥ 242
♥ 3	!! 19	# 35	3 51	C 67	S 83	c 99	s 115	â 131	ô 147	ú 163	 179	⊥ 195	⌋ 211	π 227	≤ 243
♦ 4	¶ 20	\$ 36	4 52	D 68	T 84	d 100	t 116	ä 132	ö 148	ñ 164	⊥ 180	— 196	⌋ 212	Σ 228	∫ 244
♣ 5	§ 21	% 37	5 53	E 69	U 85	e 101	u 117	à 133	ò 149	Ñ 165	⊥ 181	⊥ 197	F 213	σ 229	J 245
♠ 6	— 22	& 38	6 54	F 70	V 86	f 102	v 118	å 134	û 150	ä 166	⊥ 182	⊥ 198	⌋ 214	μ 230	÷ 246
● 7	↑ 23	' 39	7 55	G 71	W 87	g 103	w 119	ç 135	ù 151	ø 167	⌋ 183	⊥ 199	⊥ 215	τ 231	≈ 247
◻ 8	↑ 24	( 40	8 56	H 72	X 88	h 104	x 120	ê 136	ÿ 152	¿ 168	⊥ 184	⌋ 200	⊥ 216	Φ 232	° 248
○ 9	↓ 25	) 41	9 57	I 73	Y 89	i 105	y 121	ë 137	ö 153	¬ 169	⊥ 185	⌋ 201	⊥ 217	Θ 233	• 249
◼ 10	→ 26	* 42	: 58	J 74	Z 90	j 106	z 122	è 138	ü 154	¬ 170	⊥ 186	⌋ 202	⊥ 218	Ω 234	• 250
♂ 11	← 27	+ 43	; 59	K 75	[ 91	k 107	{ 123	ï 139	ç 155	½ 171	⊥ 187	⌋ 203	■ 219	δ 235	√ 251
♀ 12	↵ 28	, 44	< 60	L 76	\ 92	l 108	 124	î 140	£ 156	¼ 172	⊥ 188	⌋ 204	■ 220	∞ 236	n 252
♪ 13	↔ 29	— 45	= 61	M 77	] 93	m 109	} 125	î 141	¥ 157	¡ 173	⊥ 189	= 205	■ 221	φ 237	² 253
♪ 14	▲ 30	• 46	> 62	N 78	^ 94	n 110	~ 126	Ä 142	Ŕ 158	« 174	⊥ 190	⌋ 206	■ 222	€ 238	■ 254
* 15	▼ 31	/ 47	? 63	O 79	_ 95	o 111	△ 127	Å 143	f 159	» 175	⊥ 191	⌋ 207	■ 223	∩ 239	SP 255

Table A-5. PC-850 Symbol Set

NUL 0	▶ 16	SP 32	0 48	@ 64	P 80	˘ 96	p 112	Ç 128	É 144	á 160	☐ 176	L 192	ø 208	Ó 224	— 240
☺ 1	◀ 17	! 33	1 49	À 65	Q 81	a 97	q 113	ü 129	æ 145	í 161	☒ 177	⊥ 193	Ð 209	β 225	± 241
● 2	‡ 18	" 34	2 50	B 66	R 82	b 98	r 114	é 130	Æ 146	ó 162	☒ 178	⊥ 194	Ê 210	Ô 226	= 242
♥ 3	!! 19	# 35	3 51	C 67	S 83	c 99	s 115	â 131	ô 147	ú 163	 179	⊥ 195	Ë 211	Ò 227	¾ 243
♦ 4	¶ 20	\$ 36	4 52	D 68	T 84	d 100	t 116	ä 132	ö 148	ñ 164	⊥ 180	— 196	È 212	õ 228	¶ 244
♣ 5	§ 21	% 37	5 53	E 69	U 85	e 101	u 117	à 133	ò 149	Ñ 165	Á 181	⊥ 197	ı 213	Ö 229	§ 245
♠ 6	— 22	& 38	6 54	F 70	V 86	f 102	v 118	å 134	û 150	ä 166	Â 182	ã 198	í 214	μ 230	÷ 246
● 7	‡ 23	' 39	7 55	G 71	W 87	g 103	w 119	ç 135	ù 151	ø 167	À 183	Ã 199	î 215	þ 231	˘ 247
◻ 8	↑ 24	( 40	8 56	H 72	X 88	h 104	x 120	ê 136	ÿ 152	¿ 168	© 184	ℒ 200	ÿ 216	þ 232	◦ 248
○ 9	↓ 25	) 41	9 57	I 73	Y 89	i 105	y 121	ë 137	ö 153	® 169	¶ 185	¶ 201	⌋ 217	Ú 233	¨ 249
◼ 10	→ 26	* 42	: 58	J 74	Z 90	j 106	z 122	è 138	ÿ 154	— 170	 186	≡ 202	⌋ 218	Û 234	· 250
♂ 11	← 27	+ 43	; 59	K 75	[ 91	k 107	{ 123	ï 139	ø 155	½ 171	¶ 187	≡ 203	■ 219	Ü 235	1 251
♀ 12	└ 28	, 44	< 60	L 76	\ 92	l 108	 124	î 140	£ 156	¼ 172	¶ 188	≡ 204	■ 220	Ý 236	3 252
♪ 13	↔ 29	— 45	= 61	M 77	] 93	m 109	} 125	ï 141	∅ 157	ı 173	Ç 189	≡ 205	 221	Ý 237	2 253
♪ 14	▲ 30	. 46	> 62	N 78	^ 94	n 110	~ 126	Ä 142	× 158	« 174	≠ 190	≡ 206	ÿ 222	— 238	■ 254
* 15	▼ 31	/ 47	? 63	O 79	— 95	o 111	◊ 127	Å 143	f 159	» 175	⌋ 191	≡ 207	■ 223	˘ 239	SP 255



Table A-6. PC-8 Danish/Norwegian Symbol Set

NUL 0	▶	SP 32	0 48	@ 64	P 80	˘ 96	p 112	ç 128	É 144	á 160	⋮ 176	ℓ 192	ℓ 208	α 224	≡ 240
☺ 1	◀	!	1 49	A 65	Q 81	a 97	q 113	ü 129	æ 145	í 161	⋮ 177	⊥ 193	⊥ 209	β 225	± 241
● 2	↕	"	2 50	B 66	R 82	b 98	r 114	é 130	Æ 146	ó 162	⋮ 178	⊥ 194	π 210	Γ 226	≥ 242
♥ 3	!!	#	3 51	C 67	S 83	c 99	s 115	â 131	ô 147	ú 163	 179	⊥ 195	π 211	π 227	≤ 243
♦ 4	¶	\$	4 52	D 68	T 84	d 100	t 116	ä 132	ö 148	ñ 164	⊥ 180	— 196	ℓ 212	Σ 228	∫ 244
♣ 5	§	%	5 53	E 69	U 85	e 101	u 117	à 133	ò 149	Ñ 165	⊥ 181	⊥ 197	ƒ 213	σ 229	J 245
♠ 6	—	&	6 54	F 70	V 86	f 102	v 118	å 134	û 150	õ 166	⊥ 182	⊥ 198	π 214	μ 230	÷ 246
● 7	±	'	7 55	G 71	W 87	g 103	w 119	ç 135	ù 151	Õ 167	π 183	⊥ 199	⊥ 215	τ 231	≈ 247
◻ 8	↑	(	8 56	H 72	X 88	h 104	x 120	ê 136	ÿ 152	¿ 168	⊥ 184	ℓ 200	≠ 216	Φ 232	° 248
○ 9	↓	)	9 57	I 73	Y 89	i 105	y 121	ë 137	ö 153	ã 169	⊥ 185	⊥ 201	⊥ 217	Θ 233	· 249
◼ 10	→	*	: 58	J 74	Z 90	j 106	z 122	è 138	ü 154	Ã 170	⊥ 186	ℓ 202	⊥ 218	Ω 234	· 250
♂ 11	←	+	; 59	K 75	[ 91	k 107	{ 123	ï 139	ø 155	ℓ 171	⊥ 187	⊥ 203	■ 219	δ 235	√ 251
♀ 12	↵	,	< 60	L 76	\ 92	l 108	 124	î 140	£ 156	ñ 172	⊥ 188	⊥ 204	■ 220	∞ 236	n 252
♪ 13	↔	—	= 61	M 77	] 93	m 109	} 125	î 141	Ø 157	ï 173	⊥ 189	= 205	■ 221	φ 237	² 253
♪ 14	▲	.	> 62	N 78	^ 94	n 110	~ 126	Ä 142	Ł 158	³ 174	⊥ 190	⊥ 206	■ 222	€ 238	■ 254
✳ 15	▼	/	? 63	O 79	_ 95	o 111	△ 127	Å 143	ł 159	¤ 175	⊥ 191	⊥ 207	■ 223	∩ 239	SP 255

Table A-7. Legal Symbol Set

NUL 0	DLE 16	SP 32	0 48	@ 64	P 80	° 96	p 112			160	176	192	208	224	240
SOH 1	DC1 17	!	1 49	A 65	Q 81	a 97	q 113			161	177	193	209	225	241
STX 2	DC2 18	"	2 50	B 66	R 82	b 98	r 114			162	178	194	210	226	242
ETX 3	DC3 19	#	3 51	C 67	S 83	c 99	s 115			163	179	195	211	227	243
EOT 4	DC4 20	\$	4 52	D 68	T 84	d 100	t 116			164	180	196	212	228	244
ENQ 5	NAK 21	%	5 53	E 69	U 85	e 101	u 117			165	181	197	213	229	245
ACK 6	SYN 22	&	6 54	F 70	V 86	f 102	v 118			166	182	198	214	230	246
BEL 7	ETB 23	'	7 55	G 71	W 87	g 103	w 119			167	183	199	215	231	247
BS 8	CAN 24	(	8 56	H 72	X 88	h 104	x 120			168	184	200	216	232	248
HT 9	EM 25	)	9 57	I 73	Y 89	i 105	y 121			169	185	201	217	233	249
LF 10	SUB 26	*	: 58	J 74	Z 90	j 106	z 122			170	186	202	218	234	250
VT 11	ECS 27	+	; 59	K 75	[ 91	k 107	§ 123			171	187	203	219	235	251
FF 12	FS 28	,	= 60	L 76	® 92	l 108	¶ 124			172	188	204	220	236	252
CR 13	GS 29	-	= 61	M 77	] 93	m 109	† 125			173	189	205	221	237	253
SO 14	RS 30	.	ç 62	N 78	© 94	n 110	™ 126			174	190	206	222	238	254
SI 15	US 31	/	? 63	O 79	— 95	o 111	☒ 127			175	191	207	223	239	255

Table A-8. ISO Substitution Table

ISO	Name	ID	DECIMAL CHARACTER EQUIVALENTS											
			35	36	64	91	92	93	94	96	123	124	125	126
6	ASCII	0U	#	\$	@	[	\	]	^	'	{		}	~
2	ISO IRV *	2U	#	¤	@	[	\	]	^	'	{		}	~
4	ISO United Kingdom	1E	£	\$	@	[	\	]	^	'	{		}	~
25	ISO French *	0F	£	\$	à	°	ç	§	^	'	é	ù	è	~
69	ISO French	1F	£	\$	à	°	ç	§	^	µ	é	ù	è	~
	German *	0G	£	\$	§	Ä	ö	Ü	^	'	ä	ö	ü	ß
21	ISO German	1G	#	\$	§	Ä	ö	Ü	^	'	ä	ö	ü	ß
15	ISO Italian	0I	£	\$	§	°	ç	é	^	ù	à	ò	è	ì
14	JIS ASCII *	0K	#	\$	@	[	¥	]	^	'	{		}	~
57	ISO Chinese *	2K	#	¥	@	[	\	]	^	'	{		}	~
10	ISO Swedish *	3S	#	¤	@	Ä	ö	Å	^	'	ä	ö	å	~
11	ISO Swedish:	0S	#	¤	É	Ä	ö	Å	Ü	é	ä	ö	å	ü
	Spanish *	1S	#	\$	@	í	ñ	¿	^	'	{	ñ	}	~
17	ISO Spanish	2S	£	\$	§	í	ñ	¿	^	'	°	ñ	ç	~
85	ISO Spanish: *	6S	#	\$	·	í	ñ	Ç	¿	'	'	ñ	ç	~
16	ISO Portuguese *	4S	#	\$	§	Ä	Ç	ö	^	'	ä	ç	ö	°
84	ISO Portuguese: *	5S	#	\$	'	Ä	Ç	ö	^	'	ä	ç	ö	-
60	ISO Norwegian v1	0D	#	\$	@	Æ	Ø	Å	^	'	æ	ø	å	~
61	ISO Norwegian v2 *	1D	§	\$	@	Æ	Ø	Å	^	'	æ	ø	å	

\* Not recommended for future use.

Table A-9. Control Codes

Backspace	B S	Move one column left unless at left margin in which case no action is taken.
Line Feed	L F	Move to next print line while maintaining current column position.
Form Feed	F F	Move to first line at top of the next page while maintaining current column position.
Carriage Return	C R	Move to the left margin on current print line.
Shift Out	S O	Select characters that follow from the current secondary font until receipt of a Shift In.
Shift In	S I	Select characters that follow from the current primary font until receipt of a Shift Out.
Escape	E C	Indicates the beginning of a special control sequence (escape sequence).
Horizontal Tab	H T	Move to next horizontal tab stop. The tab stops are at the left margin and at every eight columns to the right of the left margin.
Space	S P	Move one column to the right unless at right margin in which case no action is taken.

Table A-10. Roman-8 Character Conversion Table

Graphic	Binary	Hex	Dec	Oct	Description
	0000 0000	00	0	000	NUL (null)
	0000 0001	01	1	001	SOH (start of heading)
	0000 0010	02	2	002	STX (start of text)
	0000 0011	03	3	003	ETX (end of text)
	0000 0100	04	4	004	EOT (end of transmission)
	0000 0101	05	5	005	ENQ (enquiry)
	0000 0110	06	6	006	ACK (acknowledge)
	0000 0111	07	7	007	BEL (bell)
	0000 1000	08	8	010	BS (backspace)
	0000 1001	09	9	011	HT (horizontal tabulation)
	0000 1010	0A	10	012	LF (line feed)
	0000 1011	0B	11	013	VT (vertical tabulation)
	0000 1100	0C	12	014	FF (form feed)
	0000 1101	0D	13	015	CR (carriage return)
	0000 1110	0E	14	016	SO (shift out)
	0000 1111	0F	15	017	SI (shift in)
	0001 0000	10	16	020	DLE (data link escape)
	0001 0001	11	17	021	DC1 (device control 1 or X-ON)
	0001 0010	12	18	022	DC2 (device control 2)
	0001 0011	13	19	023	DC3 (device control 3 or X-OFF)
	0001 0100	14	20	024	DC4 (device control 4)
	0001 0101	15	21	025	NAK (negative acknowledge)
	0001 0110	16	22	026	SYN (synchronous idle)
	0001 0111	17	23	027	ETB (end of transmission block)
	0001 1000	18	24	030	CAN (cancel)
	0001 1001	19	25	031	EM (end of medium)
	0001 1010	1A	26	032	SUB (substitute)
	0001 1011	1B	27	033	ESC (escape)
	0001 1100	1C	28	034	FS (file separator)
	0001 1101	1D	29	035	GS (group separator)
	0001 1110	1E	30	036	RS (record separator)
	0001 1111	1F	31	037	US (unit separator)
	0010 0000	20	32	040	Space
!	0010 0001	21	33	041	Exclamation point
"	0010 0010	22	34	042	Quotation mark
#	0010 0011	23	35	043	Number sign (hash mark)
\$	0010 0100	24	36	044	Dollar sign
%	0010 0101	25	37	045	Percent sign
&	0010 0110	26	38	046	Ampersand
'	0010 0111	27	39	047	Apostrophe (closing single quote)

Table A-10. Roman-8 Character Conversion Table (continued)

Graphic	Binary	Hex	Dec	Oct	Description
(	0010 1000	28	40	050	Opening parenthesis
)	0010 1001	29	41	051	Closing parenthesis
*	0010 1010	2A	42	052	Asterisk
+	0010 1011	2B	43	053	Plus
,	0010 1100	2C	44	054	Comma
-	0010 1101	2D	45	055	Hyphen (minus)
.	0010 1110	2E	46	056	Period (point)
/	0010 1111	2F	47	057	Slant (solidus)
0	0011 0000	30	48	060	Zero
1	0011 0001	31	49	061	One
2	0011 0010	32	50	062	Two
3	0011 0011	33	51	063	Three
4	0011 0100	34	52	064	Four
5	0011 0101	35	53	065	Five
6	0011 0110	36	54	066	Six
7	0011 0111	37	55	067	Seven
8	0011 1000	38	56	070	Eight
9	0011 1001	39	57	071	Nine
:	0011 1010	3A	58	072	Colon
;	0011 1011	3B	59	073	Semicolon
<	0011 1100	3C	60	074	Less than sign
=	0011 1101	3D	61	075	Equal sign
>	0011 1110	3E	62	076	Greater than sign
?	0011 1111	3F	63	077	Question mark
@	0100 0000	40	64	100	Commercial at
A	0100 0001	41	65	101	Uppercase A
B	0100 0010	42	66	102	Uppercase B
C	0100 0011	43	67	103	Uppercase C
D	0100 0100	44	68	104	Uppercase D
E	0100 0101	45	69	105	Uppercase E
F	0100 0110	46	70	106	Uppercase F
G	0100 0111	47	71	107	Uppercase G
H	0100 1000	48	72	110	Uppercase H
I	0100 1001	49	73	111	Uppercase I
J	0100 1010	4A	74	112	Uppercase J
K	0100 1011	4B	75	113	Uppercase K
L	0100 1100	4C	76	114	Uppercase L
M	0100 1101	4D	77	115	Uppercase M
N	0100 1110	4E	78	116	Uppercase N
O	0100 1111	4F	79	117	Uppercase O

Table A-10. Roman-8 Character Conversion Table (continued)

Graphic	Binary	Hex	Dec	Oct	Description
P	0101 0000	50	80	120	Uppercase P
Q	0101 0001	51	81	121	Uppercase Q
R	0101 0010	52	82	122	Uppercase R
S	0101 0011	53	83	123	Uppercase S
T	0101 0100	54	84	124	Uppercase T
U	0101 0101	55	85	125	Uppercase U
V	0101 0110	56	86	126	Uppercase V
W	0101 0111	57	87	127	Uppercase W
X	0101 1000	58	88	130	Uppercase X
Y	0101 1001	59	89	131	Uppercase Y
Z	0101 1010	5A	90	132	Uppercase Z
[	0101 1011	5B	91	133	Opening square bracket
]	0101 1100	5C	92	134	Reverse slant
^	0101 1101	5D	93	135	Closing square bracket
~	0101 1110	5E	94	136	Caret (circumflex)
_	0101 1111	5F	95	137	Underscore (low line)
'	0110 0000	60	96	140	Opening single quote
a	0110 0001	61	97	141	Lowercase a
b	0110 0010	62	98	142	Lowercase b
c	0110 0011	63	99	143	Lowercase c
d	0110 0100	64	100	144	Lowercase d
e	0110 0101	65	101	145	Lowercase e
f	0110 0110	66	102	146	Lowercase f
g	0110 0111	67	103	147	Lowercase g
h	0110 1000	68	104	150	Lowercase h
i	0110 1001	69	105	151	Lowercase i
j	0110 1010	6A	106	152	Lowercase j
k	0110 1011	6B	107	153	Lowercase k
l	0110 1100	6C	108	154	Lowercase l
m	0110 1101	6D	109	155	Lowercase m
n	0110 1110	6E	110	156	Lowercase n
o	0110 1111	6F	111	157	Lowercase o
p	0111 0000	70	112	160	Lowercase p
q	0111 0001	71	113	161	Lowercase q
r	0111 0010	72	114	162	Lowercase r
s	0111 0011	73	115	163	Lowercase s
t	0111 0100	74	116	164	Lowercase t
u	0111 0101	75	117	165	Lowercase u
v	0111 0110	76	118	166	Lowercase v
w	0111 0111	77	119	167	Lowercase w

Table A-10. Roman-8 Character Conversion Table (continued)

Graphic	Binary	Hex	Dec	Oct	Description
x	0111 1000	78	120	170	Lowercase x
y	0111 1001	79	121	171	Lowercase y
z	0111 1010	7A	122	172	Lowercase z
	0111 1011	7B	123	173	Opening brace (curly bracket)
	0111 1100	7C	124	174	Vertical line
-	0111 1101	7D	125	175	Closing brace (curly bracket)
	0111 1110	7E	126	176	Tilde
	0111 1111	7F	127	177	Delete (rubout)
	1000 0000	80	128	200	--undefined control code--
	1000 0001	81	129	201	--undefined control code--
	1000 0010	82	130	202	--undefined control code--
	1000 0011	83	131	203	--undefined control code--
	1000 0100	84	132	204	--undefined control code--
	1000 0101	85	133	205	--undefined control code--
	1000 0110	86	134	206	--undefined control code--
	1000 0111	87	135	207	--undefined control code--
	1000 1000	88	136	210	--undefined control code--
	1000 1001	89	137	211	--undefined control code--
	1000 1010	8A	138	212	--undefined control code--
	1000 1011	8B	139	213	--undefined control code--
	1000 1100	8C	140	214	--undefined control code--
	1000 1101	8D	141	215	--undefined control code--
	1000 1110	8E	142	216	--undefined control code--
	1000 1111	8F	143	217	--undefined control code--
	1001 0000	90	144	220	--undefined control code--
	1001 0001	91	145	221	--undefined control code--
	1001 0010	92	146	222	--undefined control code--
	1001 0011	93	147	223	--undefined control code--
	1001 0100	94	148	224	--undefined control code--
	1001 0101	95	149	225	--undefined control code--
	1001 0110	96	150	226	--undefined control code--
	1001 0111	97	151	227	--undefined control code--
	1001 1000	98	152	230	--undefined control code--
	1001 1001	99	153	231	--undefined control code--
	1001 1010	9A	154	232	--undefined control code--
	1001 1011	9B	155	233	--undefined control code--
	1001 1100	9C	156	234	--undefined control code--
	1001 1101	9D	157	235	--undefined control code--
	1001 1110	9E	158	236	--undefined control code--
	1001 1111	9F	159	237	--undefined control code--



Table A-10. Roman-8 Character Conversion Table (continued)

Graphic	Binary	Hex	Dec	Oct	Description
À	1010 0000	A0	160	240	--undefined--
Á	1010 0001	A1	161	241	Uppercase A grave accent
Â	1010 0010	A2	162	242	Uppercase A circumflex
Ã	1010 0011	A3	163	243	Uppercase E grave accent
Ä	1010 0100	A4	164	244	Uppercase E circumflex
Å	1010 0101	A5	165	245	Uppercase E umlaut or diaeresis
Ë	1010 0110	A6	166	246	Uppercase I circumflex
Ï	1010 0111	A7	167	247	Uppercase I umlaut or diaeresis
´	1010 1000	A8	168	250	Acute accent
˘	1010 1001	A9	169	251	Grave accent
ˆ	1010 1010	AA	170	252	Circumflex accent
¨	1010 1011	AB	171	253	Umlaut (diaeresis) accent
˜	1010 1100	AC	172	254	Tilde accent
Ù	1010 1101	AD	173	255	Uppercase U grave accent
Ú	1010 1110	AE	174	256	Uppercase U circumflex
₣	1010 1111	AF	175	257	Italian Lira symbol
—	1011 0000	B0	176	260	Over line (high line)
Ý	1011 0001	B1	177	261	Uppercase Y acute accent
ý	1011 0010	B2	178	262	Lowercase y acute accent
°	1011 0011	B3	179	263	Degree (ring)
Ç	1011 0100	B4	180	264	Uppercase C cedilla
ç	1011 0101	B5	181	265	Lowercase c cedilla
Ñ	1011 0110	B6	182	266	Uppercase N tilde
ñ	1011 0111	B7	183	267	Lowercase n tilde
¡	1011 1000	B8	184	270	Inverse exclamation mark
¿	1011 1001	B9	185	271	Inverse question mark
₯	1011 1010	BA	186	272	General currency symbol
£	1011 1011	BB	187	273	British pound sign
¥	1011 1100	BC	188	274	Japanese yen symbol
§	1011 1101	BD	189	275	Section sign
ƒ	1011 1110	BE	190	276	Dutch guilder symbol
¢	1011 1111	BF	191	277	U.S. cent symbol
â	1100 0000	C0	192	300	Lowercase a circumflex
ê	1100 0001	C1	193	301	Lowercase e circumflex
ô	1100 0010	C2	194	302	Lowercase o circumflex
û	1100 0011	C3	195	303	Lowercase u circumflex
á	1100 0100	C4	196	304	Lowercase a acute accent
é	1100 0101	C5	197	305	Lowercase e acute accent
ó	1100 0110	C6	198	306	Lowercase o acute accent
ú	1100 0111	C7	199	307	Lowercase u acute accent

Table A-10. Roman-8 Character Conversion Table (continued)

Graphic	Binary	Hex	Dec	Oct	Description
à	1100 1000	C8	200	310	Lowercase a grave accent
è	1100 1001	C9	201	311	Lowercase e grave accent
ò	1100 1010	CA	202	312	Lowercase o grave accent
ù	1100 1011	CB	203	313	Lowercase u grave accent
ä	1100 1100	CC	204	314	Lowercase a umlaut or diaeresis
ë	1100 1101	CD	205	315	Lowercase e umlaut or diaeresis
ö	1100 1110	CE	206	316	Lowercase o umlaut or diaeresis
ü	1100 1111	CF	207	317	Lowercase u umlaut or diaeresis
Å	1101 0000	D0	208	320	Uppercase A degree
ï	1101 0001	D1	209	321	Lowercase i circumflex
Ø	1101 0010	D2	210	322	Uppercase O crossbar
Æ	1101 0011	D3	211	323	Uppercase AE ligature
å	1101 0100	D4	212	324	Lowercase a degree
í	1101 0101	D5	213	325	Lowercase i acute accent
ø	1101 0110	D6	214	326	Lowercase o crossbar
æ	1101 0111	D7	215	327	Lowercase ae ligature
Ä	1101 1000	D8	216	330	Uppercase A umlaut or diaeresis
Ï	1101 1001	D9	217	331	Lowercase i grave accent
Ö	1101 1010	DA	218	332	Uppercase O umlaut or diaeresis
Ü	1101 1011	DB	219	333	Uppercase U umlaut or diaeresis
É	1101 1100	DC	220	334	Uppercase E acute accent
Ï	1101 1101	DD	221	335	Lowercase i umlaut or diaeresis
ß	1101 1110	DE	222	336	Sharp s
Ö	1101 1111	DF	223	337	Uppercase O circumflex
Á	1110 0000	E0	224	340	Uppercase A acute accent
Ã	1110 0001	E1	225	341	Uppercase A tilde
ã	1110 0010	E2	226	342	Lowercase a tilde
Ð	1110 0011	E3	227	343	Uppercase Eth Icelandic
ð	1110 0100	E4	228	344	Lowercase Eth Icelandic
Í	1110 0101	E5	229	345	Uppercase I acute accent
Ì	1110 0110	E6	230	346	Uppercase I grave accent
Ó	1110 0111	E7	231	347	Uppercase O acute accent
Ò	1110 1000	E8	232	350	Uppercase O grave accent
Õ	1110 1001	E9	233	351	Uppercase O tilde
õ	1110 1010	EA	234	352	Lowercase o tilde
Š	1110 1011	EB	235	353	Uppercase S with caron
š	1110 1100	EC	236	354	Lowercase s with caron
Û	1110 1101	ED	237	355	Uppercase U acute accent
Û	1110 1110	EE	238	356	Uppercase Y umlaut or diaeresis
ÿ	1110 1111	EF	239	357	Lowercase y umlaut or diaeresis

Table A-10. Roman-8 Character Conversion Table (continued)

Graphic	Binary	Hex	Dec	Oct	Description
Þ	1111 0000	F0	240	360	Uppercase Thorn
þ	1111 0001	F1	241	361	Lowercase Thorn
•	1111 0010	F2	242	362	Middle dot
μ	1111 0011	F3	243	363	Lowercase mu (micro sign)
¶	1111 0100	F4	244	364	Pilcrow (paragraph sign)
¾	1111 0101	F5	245	365	Vulgar fraction ¾
—	1111 0110	F6	246	366	Long dash (horizontal bar)
¼	1111 0111	F7	247	367	One fourth (one quarter)
½	1111 1000	F8	248	370	One half
ª	1111 1001	F9	249	371	Feminine ordinal indicator
º	1111 1010	FA	250	372	Masculine ordinal indicator
»	1111 1011	FB	251	373	Opening guillemets (angle quotes)
■	1111 1100	FC	252	374	Solid
«	1111 1101	FD	253	375	Closing guillemets (angle quotes)
±	1111 1110	FE	254	376	Plus / minus sign
	1111 1111	FF	255	377	--undefined--

Table A-11. LaserJet IID Printer Commands

FUNCTION	PARAMETER	COMMAND	DECIMAL VALUE	HEXADECIMAL VALUE
<b>JOB CONTROL COMMANDS</b>				
<b>RESET</b>				
RESET NUMBER OF COPIES	--- # of Copies (1-99)	E <sub>c</sub> E E <sub>c</sub> &L#X	027 069 027 038 108 #...# 088	1B 45 1B 26 6C #...# 58
<b>SIMPLEX/DUPLEX OPERATION</b>				
SIMPLEX/DUPLEX PRINT	Simplex	E <sub>c</sub> &LØS	027 038 108 048 083	1B 26 6C 30 53
	Duplex			
	Long-Edge Binding	E <sub>c</sub> &L1S	027 038 108 049 083	1B 26 6C 31 53
	Short-Edge Binding	E <sub>c</sub> &L2S	027 038 108 050 083	1B 26 6C 32 53
LEFT OFFSET REGISTRATION	# of Decipoints (1/720")	E <sub>c</sub> &L#U	027 038 108 #...# 085	1B 26 6C #...# 55
TOP OFFSET REGISTRATION	# of Decipoints (1/720")	E <sub>c</sub> &L#Z	027 038 108 #...# 090	1B 26 6C #...# 5A
PAGE SIDE SELECTION	Next Side	E <sub>c</sub> &aØG	027 038 097 048 071	1B 26 61 30 47
	Front Side	E <sub>c</sub> &a1G	027 038 097 049 071	1B 26 61 31 47
	Back Side	E <sub>c</sub> &a2G	027 038 097 050 071	1B 26 61 32 47
<b>PAGE CONTROL COMMANDS</b>				
<b>PAGE LENGTH and SIZE</b>				
PAPER SOURCE	Eject Page	E <sub>c</sub> &LØH	027 038 108 048 072	1B 26 6C 30 48
	Upper Tray	E <sub>c</sub> &L1H	027 038 108 049 072	1B 26 6C 31 48
	Manual Input	E <sub>c</sub> &L2H	027 038 108 050 072	1B 26 6C 32 48
	Manual Envelope Input	E <sub>c</sub> &L3H	027 038 108 051 072	1B 26 6C 33 48
	Lower Tray	E <sub>c</sub> &L4H	027 038 108 052 072	1B 26 6C 34 48
	Envelope Feeder	E <sub>c</sub> &L6H	027 038 108 054 072	1B 26 6C 36 48
PAGE SIZE	Executive	E <sub>c</sub> &L1A	027 038 108 049 065	1B 26 6C 31 41
	Letter	E <sub>c</sub> &L2A	027 038 108 050 065	1B 26 6C 32 41
	Legal	E <sub>c</sub> &L3A	027 038 108 051 065	1B 26 6C 33 41
	A4	E <sub>c</sub> &L26A	027 038 108 050 054 065	1B 26 6C 32 36 41
	Monarch	E <sub>c</sub> &L8ØA	027 038 108 056 048 065	1B 26 6C 38 30 41
	Commercial 10	E <sub>c</sub> &L81A	027 038 108 056 049 065	1B 26 6C 38 31 41
	International DL	E <sub>c</sub> &L9ØA	027 038 108 057 048 065	1B 26 6C 39 30 41
	International C5	E <sub>c</sub> &L91A	027 038 108 057 049 065	1B 26 6C 39 31 41
PAGE LENGTH	# of Lines	E <sub>c</sub> &L#P	027 038 108 #...# 080	1B 26 6C #...# 50
<b>ORIENTATION</b>				
ORIENTATION	Portrait	E <sub>c</sub> &LØO	027 038 108 048 079	1B 26 6C 30 4F
	Landscape	E <sub>c</sub> &L1O	027 038 108 049 079	1B 26 6C 31 4F

**Table A-11. LaserJet IID Printer Commands Cont.**

FUNCTION	PARAMETER	COMMAND	DECIMAL VALUE	HEXADECIMAL VALUE
<b>MARGINS and TEXT LENGTH</b>				
TOP MARGIN	# of Lines	Ec&l#E	027 038 108 #...# 069	1B 26 6C #...# 45
TEXT LENGTH	# of Lines	Ec&l#F	027 038 108 #...# 070	1B 26 6C #...# 46
LEFT MARGIN	# of Columns	Ec&a#L	027 038 097 #...# 076	1B 26 61 #...# 4C
RIGHT MARGIN	# of Columns	Ec&a#M	027 038 097 #...# 077	1B 26 61 #...# 4D
CLEAR HORIZONTAL MARGINS	---	Ec9	027 057	1B 39
<b>PERFORATION SKIP MODE</b>				
PERFORATION SKIP	Disable	Ec&l#L	027 038 108 048 076	1B 26 6C 30 4C
	Enable	Ec&l1L	027 038 108 049 076	1B 26 6C 31 4C
<b>HORIZONTAL COLUMN SPACING</b>				
HORIZONTAL MOTION INDEX	# of 1/120" Increments	Ec&k#H	027 038 107 #...#0 48 072	1B 26 6B #...# 4B
<b>VERTICAL LINE SPACING</b>				
VERTICAL MOTION INDEX	# of 1/48" Increments	Ec&l#C	027 038 108 #...# 048 076	1B 26 6C #...# 43
LINES/INCH	1 line/inch	Ec&l1D	027 038 108 049 068	1B 26 6C 31 44
	2 lines/inch	Ec&l2D	027 038 108 050 068	1B 26 6C 32 44
	3 lines/inch	Ec&l3D	027 038 108 051 068	1B 26 6C 33 44
	4 lines/inch	Ec&l4D	027 038 108 052 068	1B 26 6C 34 44
	6 lines/inch	Ec&l6D	027 038 108 054 068	1B 26 6C 36 44
	8 lines/inch	Ec&l8D	027 038 108 056 068	1B 26 6C 38 44
	12 lines/inch	Ec&l12D	027 038 108 049 050 068	1B 26 6C 31 32 44
	16 lines/inch	Ec&l16D	027 038 108 049 054 068	1B 26 6C 31 36 44
	24 lines/inch	Ec&l24D	027 038 108 050 052 068	1B 26 6C 32 34 44
48 lines/inch	Ec&l48D	027 038 108 052 056 068	1B 26 6C 34 38 44	
<b>CURSOR POSITIONING</b>				
<b>VERTICAL and HORIZONTAL</b>				
VERTICAL POSITION	Row #	Ec&a#R	027 038 097 #...# 082	1B 26 61 #...# 52
	# of Dots	Ec*p#Y	027 042 112 #...# 089	1B 2A 70 #...# 59
	# of Decipoints	Ec&a#V	027 038 097 #...# 086	1B 26 61 #...# 56
HORIZONTAL POSITION	Column #	Ec&a#C	027 038 097 #...# 067	1B 26 61 #...# 43
	# of Dots	Ec*p#X	027 042 112 #...# 088	1B 2A 70 #...# 58
	# of Decipoints	Ec&a#H	027 038 097 #...# 072	1B 26 61 #...# 48
HALF LINE FEED		Ec=	027 061	1B 3D

Table A-11. LaserJet IID Printer Commands Cont.

FUNCTION	PARAMETER	COMMAND	DECIMAL VALUE	HEXADECIMAL VALUE
<b>END-OF-LINE TERMINATION</b>				
LINE TERMINATION	CR=CR; LF=LF; FF=FF	E <sub>c</sub> &kØG	027 038 107 048 071	1B 26 6B 30 47
	CR=CR+LF; LF=LF; FF=FF	E <sub>c</sub> &k1G	027 038 107 049 071	1B 26 6B 31 47
	CR=CR; LF=CR+LF; FF=CR+FF	E <sub>c</sub> &k2G	027 038 107 050 071	1B 26 6B 32 47
	CR=CR+LF; LF=CR+LF; FF=CR+FF	E <sub>c</sub> &k3G	027 038 107 051 071	1B 26 6B 33 47
<b>PUSH/POP POSITION</b>				
PUSH/POP POSITION	Push	E <sub>c</sub> &fØS	027 038 102 048 083	1B 26 66 30 53
	Pop	E <sub>c</sub> &f1S	027 038 102 049 083	1B 26 66 31 53
<b>FONT SELECTION</b>				
<b>SYMBOL SET SELECTION</b>				
PRIMARY SYMBOL SET	ISO 60: Norwegian 1	E <sub>c</sub> (ØD	027 040 048 068	1B 28 30 44
	*ISO 61: Norwegian 2	E <sub>c</sub> (1D	027 040 049 068	1B 28 31 44
	ISO 4: United Kingdom	E <sub>c</sub> (1E	027 040 049 069	1B 28 31 45
	*ISO 25: French	E <sub>c</sub> (ØF	027 040 048 070	1B 28 30 46
	ISO 69: French	E <sub>c</sub> (1F	027 040 049 070	1B 28 31 46
	*HP German	E <sub>c</sub> (ØG	027 040 048 071	1B 28 30 47
	ISO 21: German	E <sub>c</sub> (1G	027 040 049 071	1B 28 31 47
	ISO 15: Italian	E <sub>c</sub> (ØI	027 040 048 073	1B 28 30 49
	*ISO 14: JIS ASCII	E <sub>c</sub> (ØK	027 040 048 075	1B 28 30 4B
	*ISO 57: Chinese	E <sub>c</sub> (2K	027 040 050 075	1B 28 32 4B
	ECMA-94 Latin 1	E <sub>c</sub> (ØN	027 040 048 78	1B 28 30 4E
	ISO 11: Swedish	E <sub>c</sub> (ØS	027 040 048 083	1B 28 30 53
	*HP Spanish	E <sub>c</sub> (1S	027 040 049 083	1B 28 31 53
	ISO 17: Spanish	E <sub>c</sub> (2S	027 040 050 083	1B 28 32 53
	*ISO 10: Swedish	E <sub>c</sub> (3S	027 040 051 083	1B 28 33 53
	*ISO 16: Portuguese	E <sub>c</sub> (4S	027 040 052 083	1B 28 34 53
	*ISO 84: Portuguese	E <sub>c</sub> (5S	027 040 053 083	1B 28 35 53
	*ISO 85: Spanish	E <sub>c</sub> (6S	027 040 054 083	1B 28 36 53
	ISO 6: ASCII	E <sub>c</sub> (ØU	027 040 048 085	1B 28 30 55
	HP Legal	E <sub>c</sub> (1U	027 040 049 085	1B 28 31 55
*ISO 2: IRV	E <sub>c</sub> (2U	027 040 050 085	1B 28 32 55	
HP Roman8	E <sub>c</sub> (8U	027 040 056 85	1B 28 38 55	
PC-8	E <sub>c</sub> (1ØU	027 040 049 048 085	1B 28 31 30 55	
PC-8 (D/N)	E <sub>c</sub> (11U	027 040 049 049 085	1B 28 31 31 55	
PC 850	E <sub>c</sub> (12U	027 040 049 050 085	1B 28 31 32 55	
<p>* - These symbol sets are becoming low usage sets and are not recommended for future use.                      For additional symbol set codes, refer to Table 8-1, on page 8-7.</p> <p>The primary font printer commands in this table can be specified as secondary by replacing the left parenthesis "(" in the command with a right parenthesis ")."</p>				

**Table A-11. LaserJet IID Printer Commands Cont.**

<b>FUNCTION</b>	<b>PARAMETER</b>	<b>COMMAND</b>	<b>DECIMAL VALUE</b>	<b>HEXADECIMAL VALUE</b>
<b>SPACING</b>				
PRIMARY SPACING	Proportional	Esc(s1P	027 040 115 049 080	1B 28 73 31 50
	Fixed	Esc(sØP	027 040 115 048 080	1B 28 73 30 50
<b>PITCH</b>				
PRIMARY PITCH	# Characters/inch	Esc(s#H	027 040 115 #...# 072	1B 28 73 #...# 48
<b>POINT SIZE</b>				
PRIMARY POINT SIZE	# Points	Esc(s#V	027 040 115 #...# 086	1B 28 73 #...# 56
<b>STYLE</b>				
PRIMARY STYLE	Upright	Esc(sØS	027 040 115 048 083	1B 28 73 30 53
	Italic	Esc(s1S	027 040 115 049 083	1B 28 73 31 53
<b>STROKE WEIGHT</b>				
PRIMARY STROKE WEIGHT	Medium (0)	Esc(sØB	027 040 115 048 066	1B 28 73 30 42
	Bold (3)	Esc(s3B	027 040 115 051 066	1B 28 73 33 42
	Light (-3)	Esc(s-3B	027 040 115 045 051 066	1B 28 73 2D 33 42
<b>PRIMARY TYPEFACE</b>				
TYPEFACE	Courier	Esc(s3T	027 040 115 051 084	1B 28 73 33 54
	Helv	Esc(s4T	027 040 115 052 084	1B 28 73 34 54
	Line Printer	Esc(sØT	027 040 115 048 084	1B 28 73 30 54
	TmsRmn	Esc(s5T	027 040 115 053 084	1B 28 73 35 54
For additional typeface codes, refer to Table 8-4, on page 8-18.				
<b>FONT DEFAULT</b>				
FONT DEFAULT	Primary Font	Esc(3@	027 040 051 064	1B 28 33 40
	Secondary Font	Esc)3@	027 041 051 064	1B 29 33 40
<b>UNDERLINE</b>				
UNDERLINE	Enable Fixed	Esc&dØD	027 038 100 048 068	1B 26 64 30 44
	Enable Floating	Esc&d3D	027 038 100 051 068	1B 26 64 33 44
	Disable	Esc&d@	027 038 100 064	1B 26 64 40
<b>TRANSPARENT PRINT</b>				
TRANSPARENT PRINT DATA	# of Bytes	Esc&p#X[Data]	027 038 112 #...# 088	1B 26 70 #...# 58
The primary font printer commands in this table can be specified as secondary by replacing the left parenthesis "(" in the command with a right parenthesis ")"				

Table A-11. LaserJet IID Printer Commands Cont.

FUNCTION	PARAMETER	COMMAND	DECIMAL VALUE	HEXADECIMAL VALUE
<b>FONT MANAGEMENT</b>				
ASSIGN FONT ID	Font ID #	Ec*c#D	027 042 099 #...# 068	1B 2A 63 #...# 44
FONT AND CHARACTER CONTROL	Delete all Fonts	Ec*cØF	027 042 099 048 070	1B 2A 63 30 46
	Delete all Temporary Fonts	Ec*c1F	027 042 099 049 070	1B 2A 63 31 46
	Delete Last Font ID Specified	Ec*c2F	027 042 099 050 070	1B 2A 63 32 46
	Make Font Temporary	Ec*c4F	027 042 099 052 070	1B 2A 63 34 46
	Make Font Permanent	Ec*c5F	027 042 099 053 070	1B 2A 63 35 46
<b>FONT SELECTION BY ID NUMBER</b>				
SELECT FONT WITH ID #	ID # Primary Font ID # Secondary Font	Ec(#X Ec)#X	027 040 #...# 088 027 041 #...# 088	1B 28 #...# 58 1B 29 #...# 58
<b>SOFT FONT CREATION</b>				
FONT DESCRIPTOR (FONT HEADER)	# of Bytes	Ec)s#W[Data]	027 041 115 #...# 087	1B 29 73 #...# 57
DOWNLOAD CHARACTER	# of Bytes	Ec(s#W[Data]	027 040 115 #...# 087	1B 28 73 #...# 57
CHARACTER CODE	ASCII Code # (decimal)	Ec*c#E	027 042 099 #...# 069	1B 2A 63 #...# 45
<b>GRAPHICS</b>				
<b>RASTER GRAPHICS</b>				
RESOLUTION	75 Dots/inch 100 Dots/inch 150 Dots/inch 300 Dots/inch	Ec*t75R Ec*t1ØØR Ec*t115ØR Ec*t13ØØR	027 042 116 055 053 082 027 042 116 049 048 048 082 027 042 116 049 053 048 082 027 042 116 051 048 048 082	1B 2A 74 37 35 52 1B 2A 74 31 30 30 52 1B 2A 74 31 35 30 52 1B 2A 74 33 30 30 52
<b>GRAPHICS PRESENTATION</b>				
GRAPHICS PRESENTATION	Rotate Image	Ec*rØF	027 042 114 048 070	1B 2A 72 30 46
	LaserJet Landscape Compatible	Ec*r3F	027 042 114 051 070	1B 2A 72 33 46
START GRAPHICS	Left Graphics Margin	Ec*rØA	027 042 114 048 065	1B 2A 72 30 41
	Current Cursor	Ec*r1A	027 042 114 049 065	1B 2A 72 31 41
TRANSFER	# of Bytes	Ec*b#W[Data]	027 042 098 #...# 087	1B 2A 62 #...# 57
END GRAPHICS	-	Ec*rB	027 042 114 066	1B 2A 72 42



Table A-11. LaserJet IID Printer Commands Cont.

FUNCTION	PARAMETER	COMMAND	DECIMAL VALUE	HEXADECIMAL VALUE
<b>RECTANGLE DIMENSIONS</b>				
RECTANGLE WIDTH (Horizontal Size)	# of Dots	Ec*c#A	027 042 099 #...# 065	1B 2A 63 #...# 41
	# of Decipoints	Ec*c#H	027 042 099 #...# 072	1B 2A 63 #...# 48
RECTANGLE HEIGHT (Vertical Size)	# of Dots	Ec*c#B	027 042 099 #...# 066	1B 2A 63 #...# 42
	# of Decipoints	Ec*c#V	027 042 099 #...# 086	1B 2A 63 #...# 56
<b>RECTANGULAR AREA FILL</b>				
FILL RECTANGLE AREA	Solid Fill	Ec*c#P	027 042 099 048 080	1B 2A 63 30 50
	Gray Scale	Ec*c2P	027 042 099 050 080	1B 2A 63 32 50
	HP Pattern	Ec*c3P	027 042 099 051 080	1B 2A 63 33 50
SHADING	2% Gray	Ec*c2G	027 042 099 050 071	1B 2A 63 32 47
	10% Gray	Ec*c1#G	027 042 099 049 048 071	1B 2A 63 31 30 47
	15% Gray	Ec*c15G	027 042 099 049 053 071	1B 2A 63 31 35 47
	30% Gray	Ec*c3#G	027 042 099 051 048 071	1B 2A 63 33 30 47
	45% Gray	Ec*c45G	027 042 099 052 053 071	1B 2A 63 34 35 47
	70% Gray	Ec*c7#G	027 042 099 055 048 071	1B 2A 63 37 30 47
	90% Gray	Ec*c9#G	027 042 099 057 048 071	1B 2A 63 39 30 47
	100% Gray	Ec*c1#G	027 042 099 049 048 048 071	1B 2A 63 31 30 30 47
	PATTERN	1 Horiz. Line	Ec*c1G	027 042 099 049 071
2 Vert. Lines		Ec*c2G	027 042 099 050 071	1B 2A 63 32 47
3 Diagonal Lines		Ec*c3G	027 042 099 051 071	1B 2A 63 33 47
4 Diagonal Lines		Ec*c4G	027 042 099 052 071	1B 2A 63 34 47
5 Square Grid		Ec*c5G	027 042 099 053 071	1B 2A 63 35 47
6 Diagonal Grid		Ec*c6G	027 042 099 054 071	1B 2A 63 36 47
<b>MACROS</b>				
MACRO ID	Macro ID #	Ec&f#Y	027 038 102 #...# 089	1B 26 66 #...# 59
MACRO CONTROL	Start Macro Def.	Ec&f#X	027 038 102 048 088	1B 26 66 30 58
	Stop Macro Def.	Ec&f1X	027 038 102 049 088	1B 26 66 31 58
	Execute Macro	Ec&f2X	027 038 102 050 088	1B 26 66 32 58
	Call Macro	Ec&f3X	027 038 102 051 088	1B 26 66 33 58
	Enable Overlay	Ec&f4X	027 038 102 052 088	1B 26 66 34 58
	Disable Overlay	Ec&f5X	027 038 102 053 088	1B 26 66 35 58
	Delete Macros	Ec&f6X	027 038 102 054 088	1B 26 66 36 58
	Delete All Temp. Macros	Ec&f7X	027 038 102 055 088	1B 26 66 37 58
	Delete Macro ID	Ec&f8X	027 038 102 056 088	1B 26 66 38 58
	Make Temporary	Ec&f9X	027 038 102 057 088	1B 26 66 39 58
Make Permanent	Ec&f1#X	027 038 102 049 048 088	1B 26 66 31 30 58	
<b>PROGRAMING HINTS</b>				
DISPLAY FUNCTIONS	ON	EcY	027 089	1B 59
	OFF	EcZ	027 090	1B 5A
END-OF-LINE WRAP	Enabled	Ec&s#C	027 038 115 048 067	1B 26 73 30 43
	Disabled	Ec&s1C	027 038 115 049 067	1B 26 73 31 43

## Contents

Introduction .....	B-1
Parallel Interface .....	B-2
Input .....	B-3
Output .....	B-3
Handshake Timing .....	B-6
Hardware .....	B-7
Serial Interface .....	B-8
RS-232C/RS-422 Operation .....	B-8
Serial Data Format .....	B-10
Throughput .....	B-10
Handshake Protocol .....	B-10
Hardware .....	B-12



---

## Introduction

The **LaserJet IID** printer supports an RS-232C serial interface, an RS-422 differential serial interface, and a parallel (Centronics) interface. Two connectors, a parallel and serial connector, are provided at the rear of the printer to connect to one of the three interfaces.

The interface is configured using the Operator Control Panel's configuration menu (refer to the *HP LaserJet IID Printer User's Manual* for configuration information).

The printer stores the I/O configuration information in non-volatile RAM, thus the configuration is saved even if the printer is powered off.

## Parallel Interface

Parallel I/O operation is enabled from the printer's Operator Control Panel configuration menu (refer to the *LaserJet IID Printer User's Manual*). Once parallel operation is enabled, the user can transfer data to the printer using parallel (Centronics) communication protocol. The signals used for parallel communication are listed in Table B-1.

**Table B-1 Parallel Interface Connector Pin Assignments**

Signal	Pin	Pin	Signal
-Strobe (Input)	1	19	GND
Data 1 (Input)	2	20	GND
Data 2 (Input)	3	21	GND
Data 3 (Input)	4	22	GND
Data 4 (Input)	5	23	GND
Data 5 (Input)	6	24	GND
Data 6 (Input)	7	25	GND
Data 7 (Input)	8	26	GND
Data 8 (Input)	9	27	GND
-Ack (Output)	10	28	GND
Busy (Output)	11	29	GND
Paper error (Output)	12	30	GND
Select (Output)	13	31	NC
NC	14	32	-fault (Output)
NC	15	33	Auxout1 (Output)
0 VDC	16	34	NC
Chassis GND	17	35	Auxout2 (Output)
+5 VDC (Output)	18	36	NC

The "-" in front of the signals indicates that the signal is negative true (active LOW). GND means the connection is a ground. NC indicates that there is no connection for the pin.

## Input signals **Data Strobe (Pin 1)**

This line defines when the information on the data lines is to be accepted by the printer. This line is normally HIGH, and is set LOW when data to be written to the printer is valid. BUSY is set HIGH at the falling edge of this signal. Refer to Figure B-1.

## **Data Lines (Pins 2-9)**

Eight lines are used for character transfer from the host CPU to the printer. Data line 1 is the least significant bit; data line 8 is the most significant bit.

## Output signals **Select line (Pin 13)**

This signal indicates that the printer has been placed ON-LINE and that no printer errors or malfunctions exist. The select line is HIGH when the printer is ON-LINE, LOW when the printer is OFF-LINE.

When the printer is changed from OFF-LINE to ON-LINE, this signal changes from the **de-select** state to the **select** state, an -Ack pulse is sent to the host CPU and the BUSY signal is set LOW.

When the printer is changed from ON-LINE to OFF-LINE, this signal changes from the **select** state to the **de-select** state. If the BUSY signal is HIGH when **select** changes, BUSY remains HIGH. If the BUSY signal is LOW when **select** changes, BUSY will change to HIGH to indicate that the printer is no longer ready for data. If no -Ack pulse is generated before **select** changes, no -Ack pulse will be generated until the printer is put back ON-LINE. The host CPU can catch either the momentary not-BUSY signal or an extraneous -Ack pulse and strobe another character into the printer while it is going OFF-LINE. The printer interface can detect and accept this late-coming character without data loss.

If a malfunction occurs in the printer while in the ON-LINE state, the printer goes OFF-LINE and this signal changes just as it would for a normal ON-LINE to OFF-LINE transition.

The printer is set to a **select** state at power-on.

**Fault line (Pin 32)**

-Fault goes LOW when the printer is OFF-LINE or if any malfunction out of paper or any malfunction or error occurs in the printer.

**Busy line (Pin 11)**

When Busy is LOW, the printer can accept another character from the host. Busy goes HIGH after every HIGH-to-LOW transition of the -Strobe signal. This allows a host CPU to handshake data with the printer using the BUSY signal instead of the -Ack signal. Busy will stay HIGH (not ready for data) whenever -Fault is LOW and whenever the I/O buffer is full.

**Acknowledge line (Pin 10)**

-Ack is also used to synchronize the transfer of data from the host CPU to the printer. The -Ack pulse is a "request for data" signal generated by the printer and expects one character in response from the host CPU. During normal data transfer, the -Ack signal is generated before the BUSY signal changes from HIGH to LOW (not-BUSY). A -Ack pulse is generated each time the printer changes from OFF-LINE to ON-LINE.

**Paper error line (Pin 12)**

Normally LOW, this signal changes to HIGH when the printer runs out of paper. In addition to paper errors, this signal responds to any fault that occurs in the printer which requires the attention of the operator. When the signal is HIGH, the -Fault signal is always LOW.

**O VDC (Pin 16)**

Same as logic ground.

**Chassis Grounds (Pin 17)**

Same as frame ground.

**+5 Volts (Pin 18)**

This is not +5 VDC directly, but rather it is +5 VDC with a 310 ohm in-line resistor. This signal is not intended to provide power to any external devices; it is provided only to be compatible with host CPUs that may test this pin for a logic HIGH before attempting data transfers.

**Auxout1 (Pin 33)**

This signal is always HIGH while the printer is powered on.


**Auxout2 (Pin 35)**

This signal is always HIGH while the printer is powered on.



## Handshake Timing

The timing specifications for parallel plug-compatible interfaces are described in the following figure.

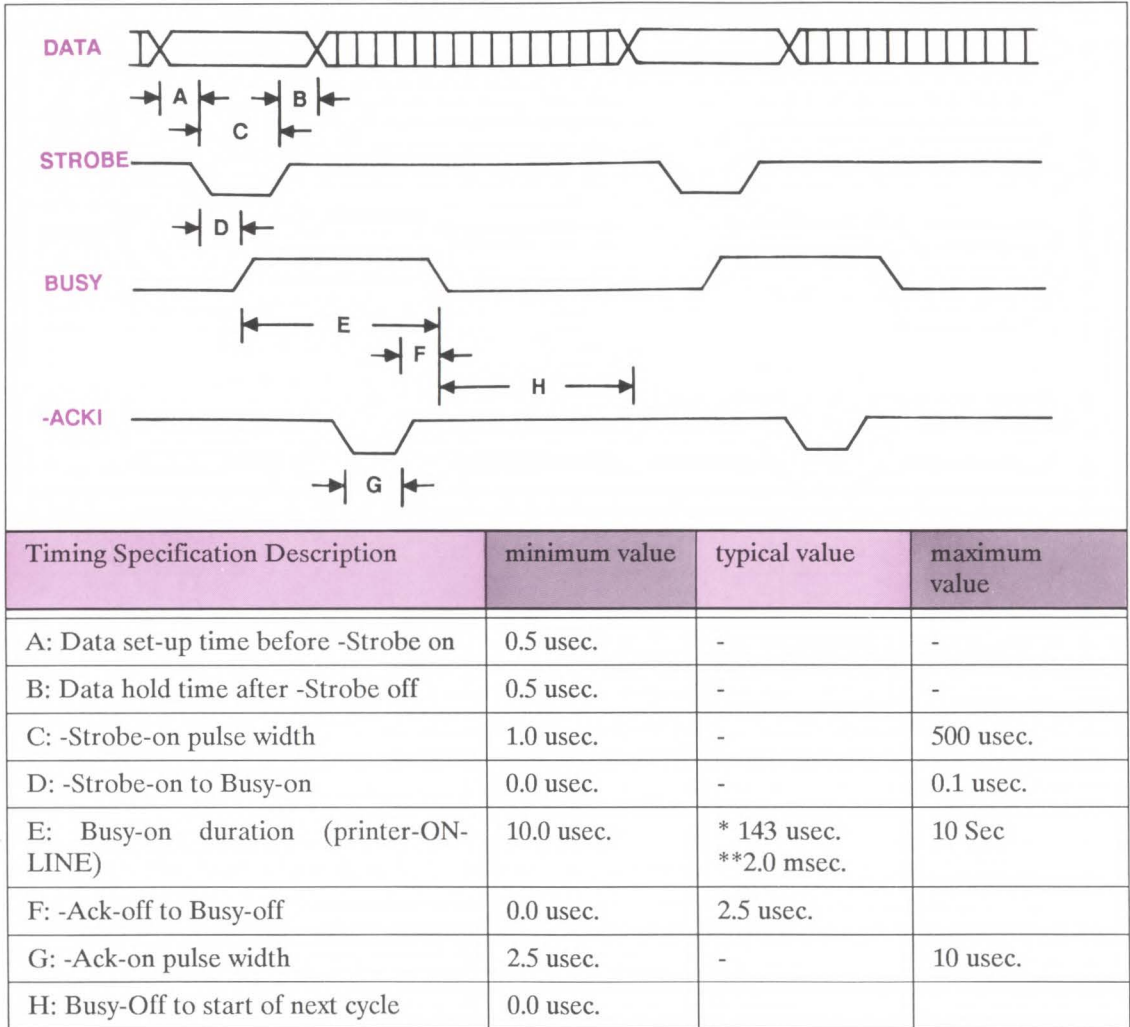

\* Image and font download data

\*\* Text data

Figure B-1. Parallel Handshake Timing

## **Hardware Connector**

The receptacle installed in the printer is the Amphenol 850-57FE-403600-20 36-pin connector, or equivalent.

### **Cable**

The external cable connecting the host CPU to the printer is supplied by the user. The plug required for the user's cable must be compatible with the Amphenol 57-30360 36-pin connector. The parallel interface is designed to work with cables shorter than ten feet.

### **Line Driver Circuitry**

Each output signal from the printer (-Ack, Busy, Paper Error, Select, Auxout1, Auxout2, and -Fault) is driven onto the interface cable line with an SN7407 (or equivalent) open-collector buffer with an output pull-up resistor of 1K ohms to +5 VDC. The -Ack and Busy signals have a "return" line associated with them; this is simply logic ground.

### **Line Receiver Circuitry**

Each Data input signal to the printer is received off the interface cable with an SN74LS374 with an input pull-up 1K ohm resistor to +5 VDC. The "return" signal associated with each data line is simply logic ground.

The Strobe input signal to the printer is received off the interface cable with an SN74LS14 buffer with hysteresis with an input pull-up 680 ohm resistor to +5 VDC, a series 82.5 ohm resistor, and a 150pF capacitor to ground. The "return" signal associated with the Strobe line is simply logic ground. The "return" signal associated with the Strobe line is simply logic ground.

---

## Serial Interface

Serial I/O operation is enabled from the printer's Operator Control Panel Menu (refer to the *LaserJet IID Printer User's Manual*). When serial operation is enabled, the user can transfer data to the printer using serial protocol. Either RS-232C or RS-422 operation may be used. RS-232C and RS-422 operation are also configured from the printer's control panel.

The signals used by the printer for serial communication are listed in Table B-2.

The following table lists RS-232C and RS-422 pin assignments and signal descriptions.

**Table B-2 RS-232C/422 Signals; Connector Pin Assignments**

Pin Number	Description	RS232	RS422	I/O
1	Protective ground	*	*	-
2	Transmitted data (data from printer)	*		Output
3	Received data (received from printer)	*		Input
	Received data inverted (RDA) (received by printer)		*	Input
4	Request to send. This signal is HIGH when unit is powered on	*		Output
7	Signal ground	*	*	
9	Send data inverted (SDA)		*	Output
10	Send data noninverted (SDB)		*	Output
18	Receive data noninverted (RDB)		*	Input
20	Data terminal ready	*		Output

The asterisks identify signals used.

## Serial Data Format

Transmission is asynchronous, with one start bit, eight data bits and one stop bit. Parity is not used.

## Serial Data Communication Throughput

Unlike the parallel interface, the selected baud rate of the serial interface limits the rate at which data passes through the machine. The **LaserJet IID** printer supports the following baud rates:

300	600
1200	2400
4800	9600
19,200	

The baud rate is configured via the configuration menu on the operator control panel (refer to the *LaserJet IID Printer User's Manual* for configuration information).

## Serial Interface Protocol

Two handshake methods are always available for controlling data transfer between the host and the printer. For RS-232C operation, Xon/Xoff and a hardware handshake protocol are available. (The Data Terminal Ready signal, pin 20, is available for hardware handshake.) Only Xon/Xoff operation is available for RS-422 operation.

### Xon/Xoff

Xon/Xoff is a data stream handshake protocol which sends Xon (DC1; 11 Hex) to the computer when the printer is able to accept data and sends Xoff (DC3; 13 Hex) when the printer is not ready for data.

The printer transmits an Xon when it is ready to accept more data from the host. The printer requests data when the following three conditions exist:

1. when the 1 kbyte I/O buffer has less than 128 bytes of data (has at least 896 bytes empty),
2. when it is ON-LINE,
3. when it is NOT BUSY.

If no data is received within approximately one second of the transmission of an Xon, the printer may be configured so that it sends additional Xon's at one second intervals until data is received. The **ROBUST-XON** Operator Control Panel configuration menu item is used to select whether additional Xon's should be transmitted. If **ROBUST-XON** is set to ON, additional Xon's will be transmit-

ted at one second intervals until data is received. If **ROBUST-XON** is set to **OFF**, additional Xon's are not transmitted. The factory setting is **ROBUST-XON** set to **ON**.

Xoff's are transmitted by the printer to the computer to indicate that the printer is not ready to accept data. An Xoff is transmitted when any one of the following conditions exist:

- The I/O buffer has 64 or fewer bytes empty,
- the printer is **OFF-LINE**, or
- the printer is **BUSY**.

If additional data bytes are received from the host after the Xoff is transmitted, additional Xoff characters are transmitted when the buffer has 32, 16, 8, 4, 2, 1, and 0 bytes empty. Also, an Xoff is transmitted as soon as state "05 SELF TEST," changes to "02 WARMING UP" when the printer is powered ON.

#### **Data Terminal Ready (RS-232C - pin 20)**

A Hardware handshake is also available with the printer. The Data Terminal Ready (DTR) signal line is available for hardware handshake at pin 20 of the serial connector. This signal line is always operating; it does not require enabling.

The DTR signal line indicates whether the printer is "ready" or "not ready" for data. When the printer is ready for data, the DTR signal switches to a **HIGH** (or a **LOW**, if the DTR line is set for inverted operation). The printer will request data when the following three conditions exist:

1. when its 1 kbyte I/O buffer has less than 128 bytes of data (has at least 896 bytes empty),
2. when it is **ON-LINE**, and
3. when it is not **BUSY**.

The DTR signal goes **LOW** (**HIGH**, if the DTR line is set for inverted operation) when the printer is not ready to accept data. Data will not be accepted by the printer when any one of the following conditions exist:

- the I/O buffer has 64 or fewer bytes empty,
- it is **OFF-LINE**, or
- it is in a **BUSY** state (such as performing Self-Test).

Transitions on the line correspond to the transmissions of Xon (asserted) and Xoff (not-asserted).

The signal logic or "sense" of the DTR signal line can be switched to either active high or active low from the printer's Operator Control Panel. To select the DTR line for active high signal polarity select **DTR POLARITY=HI\*** using the printer's Operator Control Panel, configuration menu; to select active low signal polarity set the configuration menu ITEM to **DTR POLARITY=LO**.

## **Hardware Connector**

The common RS-232C/RS-422 connector is a 25-pin, D-sub-miniature female connector.

### **Cable**

The external cable connecting the host CPU to the printer must be supplied by the user. The plug required for the user's cable must be a male, 25-pin, D-subminiature connector.

The RS-232C interface is designed to work with cables shorter than 15 metres (50 feet). RS-422 is designed for operation with cables up to 1200 metres (4000 feet) in length.

---

## Contents

Support.....	C-1
Your Dealer.....	C-1
LaserJet Assist Line .....	C-1





## Support

### Your Dealer

Hewlett-Packard has support services available to help you in case you have a question about your **LaserJet IID** printer. The following are places to turn for this support.

If you encounter a difficulty, begin by contacting the person who sold you your **LaserJet IID** printer. Your salesman is familiar with your needs, equipment and software and should be able to provide you with the information you need.

### LaserJet Assist Line



Hewlett-Packard has a **LaserJet Assist Line** available to you. It is available from 7 AM to 6 AM (MST), Monday, Tuesday, Thursday, and Friday, and 7 AM to 4 AM (MST) Wednesday. The **LaserJet Assist Line** staff can provide you with help.

(208) 323-2551

Before you call the **LaserJet Assist Line**, do the following:

1. Check the “Troubleshooting Checklist” section of the *User’s Manual*.
2. Check with your software vendor for help.

When you call the **LaserJet Assist Line**, please have the following information available to help us answer your questions:

- Identify which computer you are using.
- Identify any special equipment or software you are using (for example, spoolers, networks, switch boxes, modems or special software drivers).
- Identify the cable you are using and who sold it to you.
- Identify any special interface, I/O, or RAM boards installed in your printer.
- Identify the software name and version you are currently using.
- Have a control panel test print available.



# Glossary

---

<b>Auto-Continue</b>	Auto-Continue mode can be configured using the <b>LaserJet IID printer control panel (refer to the LaserJet IID Printer User's Manual)</b> .
<b>Baud Rate</b>	Baud rate is the rate at which information is transferred between the computer and the printer. To communicate properly, the computer and the printer must both be configured to the same baud rate.
<b>Centronics I/O</b>	An industry standard parallel input/output (I/O) interface.
<b>Column</b>	The width of a column is defined by the current horizontal motion index (HMI).
<b>Configuration</b>	Configuration is the process of changing certain printer settings to allow a computer to communicate properly with the printer. For example, interface selection is part of printer configuration. The printer is configured using the control panel configuration menu.
<b>Control Code</b>	A control code is a type of PCL language command. A control code is a character that initiates a printer function, for example CR, LF and FF.
<b>Control Panel</b>	The combination of keys, LEDs, and a display that allow an operator to communicate with a device and allow the device to communicate with an operator.
<b>Current Active Position</b>	See Cursor.
<b>Cursor</b>	Although the printer does not actually have a cursor, the cursor position refers to the currently active printing position (like the blinking underline character used on most computer terminals). The cursor can be moved anywhere within the logical page using a combination of horizontal and vertical cursor positioning commands and control codes.

<b>Decipoint</b>	A decipoint is a unit of measurement that equals 1/720 <sup>th</sup> of an inch.
<b>Default</b>	A value used in lieu of a programmatically selected value. A factory default is a value programmed into the device at the factory; this value is stored in read-only memory (ROM) and cannot be changed by a user or operator. A user default is a default that is selectable via the control panel.
<b>Dot</b>	The dot is the smallest printable unit. On the <b>LaserJet IID</b> printer, one dot equals 1/300 <sup>th</sup> inch. The number of dots printed per inch is referred to as the printer's resolution.
<b>Download</b>	The process of transferring soft fonts, macros, or raster data from a host computer to the printer's user memory is called downloading.
<b>DTR Polarity</b>	The configuration of DTR polarity determines whether pin 20, on the serial interface connector, is high or low when the printer is ready. If DTR polarity is HI, pin 20 is high when the printer is ready. If DTR polarity is LO, pin 20 is low when the printer is ready.
<b>Escape Character</b>	The first character of a PCL escape sequence is identified by the "E <sub>c</sub> " symbol, (ASCII decimal code 27). This character is a control code used specifically by the printer to identify a string of characters as a printer command. As the printer monitors incoming data from a computer, it is "looking" for this character. When this character appears, the printer reads it and its associated characters as a command to be performed, and not as data to be printed.
<b>Escape Sequence</b>	PCL escape sequences consist of two or more characters. The first character is always the escape character, which is identified by the "E <sub>c</sub> " symbol. This character is a control code used specifically by the printer to identify a string of characters as a printer command. As the printer monitors incoming data from a computer, it is "looking" for this character. When this character appears, the printer reads it and its associated characters as a command to be performed, and not as data to be printed.

**Factory Default** Factory default's refer to the settings that are programmed into the printer at the factory. These settings are in use unless you override them using either the control panel or by sending printer commands.

**Factory Default Environment** A factory default is a setting programmed into the printer at the factory. The group of all the printer's factory settings is referred to as the factory default environment. The factory default symbol set is selectable from the control panel configuration menu (refer to the *LaserJet IID Printer User's Manual*).

**Font** A font is a set of characters that have similar characteristics. A font has an assigned name, typeface, and is further described by its spacing, height, pitch, style, stroke weight, symbol set, and orientation. For example, the name of the font used for this text is Tm-sRmn; its height is 10 point, its style is upright, and its stroke weight is medium.

**Font Cartridge** A removable media containing multiple fonts. When a cartridge is plugged into the slot in the printer provided for this purpose, the printer has access to the fonts contained in the cartridge.

**Height** The height of a font is the measurement of the body of the type in points. A PCL point is  $1/72^{\text{nd}}$  inch. The body of the type is slightly greater than the distance from the bottom of a descender to the top of an unaccented capital letter.

**Horizontal Motion Index (HMI)** HMI defines the distance between columns in  $1/120^{\text{th}}$  inch increments. When fixed pitch fonts are selected all printable characters including the space and backspace characters are affected by HMI. When proportional fonts are selected, the HMI affects only the control code space character.

HMI is defaulted when font orientation, symbol set, pitch, spacing or height is specified and when switching between primary and secondary fonts with shift in and shift out.

The default HMI is equal to the pitch value in the font header. The factory default font's HMI is 12 (which is  $12/120 = 1/10$  inch per character or 10 characters per inch.)

<b>I/O</b>	I/O is an acronym for input/output (I/O) and is used in this document when referring to hardware used to interface printers with computers.
<b>I/O Buffer</b>	The area within the device's internal random access memory where PCL commands and data are stored.
<b>Interface Connector</b>	The <b>LaserJet IID</b> printer comes with two interface connectors, serial and parallel, located on the lower part of the back panel. The cable that attaches the computer to the printer is connected here.
<b>Internal Fonts</b>	Internal fonts are the fonts resident in the printer when shipped.
<b>ISO Symbol Set</b>	128 symbol sets containing European versions of the Roman alphabet (e.g., ISO-German contains umlaut vowels, ISO-French contains e accent grave, etc.) based on the standards produced by the International Standards Organization (ISO).
<b>Landscape</b>	See Orientation.
<b>Logical Page</b>	The PCL logical page (also referred to as the addressable area) defines the area in which the cursor can be positioned. Although the printer does not actually have a cursor (like the blinking underline character used on most computer terminals), the cursor position refers to the currently active printing position. In other words, the location of the "cursor" is the position on the logical page where the next character will be positioned. You can move the cursor to different points on the logical page using the cursor positioning commands; however, the cursor cannot be moved outside of the logical page bounds.
<b>Macro</b>	A macro is a collection of escape sequences, control codes, and data downloaded to the printer, whose execution can be initiated using a single command.
<b>Menu</b>	A list of configurable items. In the nomenclature of this document, an "item" is one particular configurable entity (that is, Copies); a "value" is an "item's" particular configuration (that is, Copies = 10).
<b>Modified Print Environment</b>	The current printer feature settings constitute the modified print environment. Whenever a feature setting is altered using escape sequences, the new setting is recorded in the modified print environment.

- Non-volatile RAM** Random Access Memory whose contents are preserved following a power failure (volatile RAM is memory whose contents are not preserved when the device is powered off). Non-volatile RAM is generally used to preserve configured (vs. programmed) device state information.
- Off-line/On-line** On-line is a condition when the printer will accept data from the host computer. When the **LaserJet IID** is on-line, the ON LINE lamp is lit. When off-line, the printer will not accept data from the host.
- Orientation** The orientation of characters on a page; if the print is across the width of the page, it is "portrait-oriented"; if the print is across the length of the page, it is "landscape-oriented". Orientation is a PCL language font attribute; portrait-oriented fonts are not printable in landscape orientation and vice versa.
- Overlay Environment** The overlay environment consists of the current settings for the following features with the remainder of the environmental features set to their user default values: Page length Paper source Page size Number of copies Orientation Cursor position stack
- Parallel I/O** An input/output interface that transmits more than one bit of information simultaneously. Centronics is an industry-wide standard form of a parallel interface.
- PCL Commands** PCL commands provide access to printer features. Once a PCL command sets a parameter, that parameter remains set until the same PCL command is repeated with a new value or the printer is reset. There are three types of PCL commands: control codes, two-character escape sequences, and parameterized escape sequences.
- A control code is a character that initiates a printer function, for example CR, LF, and FF.
- PCL escape sequences consist of two or more characters. The first character is always the escape character, identified by the "Esc" symbol. This character is a control code used specifically by the printer to identify a string of characters as a printer command. As the printer monitors incoming data from a computer, it is "looking" for this character. When this character appears, the printer reads it and its associated characters as a command to be performed and not as data to be printed. (Note, PCL printer commands are also referred to as escape sequences.)



<b>PCL Coordinate System Units</b>	The units of the X-axis of the PCL coordinate system may be dots, decipoints, or columns. The units of the Y-axis may be dots, decipoints, or rows.
<b>Perforation Region</b>	The perforation region is the distance from the bottom of the text area to the top of the text area of the next page. When perforation skip is enabled, a line feed or half-line feed, which would move the cursor beyond the bottom of the text area, moves the cursor to the top of the text area on the next page. When perforation skip is disabled, a line feed or half-line feed moves to the next line or half-line within the perforation region.
<b>Permanent Image</b>	An image (font, macro, etc.) can be designated "permanent" via a PCL escape sequence. A "permanent" image is not cleared from internal memory as a result of either an $\text{E}_{\text{c}}\text{E}$ or an operator control reset; whereas, a "temporary" one is cleared by either of the aforementioned operations. Both "permanent" and "temporary" images are cleared from internal memory by a power failure.
<b>Pitch</b>	Pitch describes the number of characters printed in a horizontal inch. Pitch only applies to fixed-spaced fonts since the number of characters per inch varies for proportionally-spaced fonts.
<b>Point</b>	A PCL point is a unit of measurement that equals $1/72^{\text{nd}}$ inch. Font height is measured in points.
<b>Primary (Secondary) Font</b>	A PCL convention whereby two fonts can be defined internally simultaneously. The primary font is accessed via the control code "SI" and the secondary font is accessed via the control code "SO." The factory default state is primary font designated.
<b>Printable Area</b>	The printable area is the area of the physical page in which the printer is able to place a dot. The physical page refers to the size of the media installed in the printer.  The relationship between physical page, logical page, and printable area is defined in Figures 2-2 and 2-3.
<b>Portrait</b>	See Orientation.

- Print Environment** The group of all the printer's current feature settings, collectively, is referred to as the print environment. The printer maintains four print environments: the factory default environment, the user default environment, the modified print environment and the overlay environment.
- Printer Commands** See PCL Commands.
- Raster Graphics** Images composed of groups of dots are raster images. Pictures in newspapers or on televisions are examples of raster images. PCL includes commands for printing raster images.
- Robust-Xon** The configuration of ROBUST-XON determines the method by which Xon's are generated. If ROBUST-XON is ON an Xon is transmitted by the controller to the host system when the controller's 1 Kbyte I/O buffer has less than 128 data bytes remaining (896 bytes empty), the printer is in the on-line state, and the printer is not busy. If no data is received within approximately one second, then additional Xon's are to be transmitted at one second intervals until data is received. If ROBUST-XON is OFF, the printer sends one Xon when the printer can accept more data, the printer is in the online state, and the printer is not busy. The printer does not send Xon's every second while the printer is online and ready for more data.
- Row** The distance between rows is defined by the current vertical motion index (VMI).
- Rule** A solid-filled rectangular area.
- Serial I/O** An input/output (I/O) interface that transmits information bit-by-bit. RS-232 is an industry-wide standard form of a serial interface.
- Soft Font** Soft fonts are fonts stored on floppy discs. These fonts can be transferred to the printer's memory and used the same way as cartridge or resident fonts.
- Spacing** Fonts have either fixed or proportional spacing. Fixed-spaced fonts are those for which the inter-character spacing is constant. Proportionally-spaced fonts are those for which the inter-character spacing varies with the natural shape of a character.

**Stroke Weight** Stroke weight describes the thickness of the strokes that compose characters. Medium and bold are examples of stroke weights.

**Style** Font style is defined by the angularity of the strokes of the characters with respect to the X-axis. Upright and italics are examples of font styles.

**Symbol Set** A symbol set is a unique ordering of the characters in a font. Each symbol set is defined with a unique set of applications in mind. Symbol sets are created for many purposes, for example the PC-8 symbol set was designed to support US IBM-PC applications.

**Typeface** Typeface is a generic name for graphics symbols having common design features. Each typeface has unique and distinguishing characteristics.

**User Default** A user default is a default that is selectable via the operator control panel. User defaults may be selected for the following items via the LaserJet IID control panel: (1) number of copies, (2) manual feed mode, (3) font, and (4) vertical form length (i.e., VMI).

**User Default Environment** The user default environment consists of the user default settings (any user default settings selected from the control panel) with the remainder of the environment features set to their factory default values.

**Vertical Motion Index (VMI)** VMI defines the distance between rows in 1/48<sup>th</sup> inch increments. This command affects the line feed and half-line feed spacing.

The factory default VMI is eight, which corresponds to six lines per inch. A user default VMI can be selected from the control panel using the FORM menu item.

# Index

## A

- absolute cursor position 13-4
- absolute distance 6-4
- absolute motion 6-2
- absolute/relative cursor positioning 6-2
- active position, current G-1
- addressable area 2-2
- angularity 7-5
- architecture, PCL 1-2
- area fill ID 11-16
- area fill graphics 11-13
- area fill, horizontal size 11-14
- area fill, vertical size 11-15
- area fill patterns 11-18
- area fill shading levels 11-17
- area, printable 2-4, G-6
- area, text 5-8
- area/margins, text 13-3
- ASCxx 10-5
- assist line C-1
- auto continue mode 13-12
- auto macro overlay 13-7
- auto-continue G-1
- auto-select 13-3
- automatic overlay 12-3

## B

- backspace 6-7
- baseline distance character (UI) 10-6
  - font descriptor 10-6
- baud rate G-1
- binary data 1-6
- binding 4-4
- boolean 10-5
- bottom margin 13-3
- boundaries, landscape page 2-5
  - portrait page 2-4
  - portrait page 2-6

- printable area 2-4, 2-5
- BS - backspace 6-7
- buffer I/O G-4
- buffer overflow 13-13
- buffer overflow error 22 13-13

## C

- cable, parallel I/O B-7
  - serial I/O B-12
- cap height data 10-15
- carriage return 13-6, 6-12, 6-7
- cartridge fonts 8-1, G-3
- cell height, font descriptor 10-6
- cell width, font descriptor 10-6
- centronics interface B-1, G-1
- character baseline, design 10-6
  - cell descriptor features 10-15
  - clipping 2-6
  - code command 10-24/25
  - codes, ASCII A-1
  - data 10-22
  - data command 10-26
  - data example, landscape 10-29
    - portrait 10-27
  - descriptor 10-1, 10-18, 10-25
  - descriptor and data command 10-26
  - descriptor and data format 10-19
  - descriptor class 10-21
  - descriptor continuation 10-20
  - descriptor format 10-19
  - descriptor left offset 10-21
  - descriptor orientation 10-21
  - descriptor size 10-21
  - descriptor top offset 10-21
  - descriptor width 10-20
  - design 10-1
  - design dimension 10-2
  - height 10-22, 8-11

- character
  - pitch 8-11
  - spacing 13-4, 13-5, 8-11
  - stroke weight 8-15
  - style 8-14
  - symbol set values 10-8
  - width (UI) 10-22
  - typeface 8-17
- character, escape G-2
- characteristics 8-2
- characteristics font 13-5, 7-1, 8-2
- characteristics, priority 8-2
- characters, printable 13-11
- class (UB) 10-21
- class, character descriptor 10-21
- clear horizontal margin command 5-12
- clipping, character cell 2-6
- code, control G-1
- column 5-10, G-1, 2-4, 5-17, 6-3
- command area fill ID 11-16
  - graphics horizontal rectangle size 11-14
  - graphics vertical rectangle size 11-15
  - parsing 13-1
  - parsing, PCL 13-2
  - processing time 13-8
  - area fill ID 11-16
  - character code 10-24
  - clear horizontal margin 5-12
  - default font 8-24
  - display functions 13-11
  - duplex page side selection 4-10
  - end raster graphics 11-9
  - end-of-line wrap 13-10
  - fill rectangular area 11-19
  - font control 9-5
  - font descriptor 10-17
  - font ID 9-4
  - height 8-13
  - horizontal cursor positioning 6-5
  - left offset registration 4-6
  - line spacing 5-18
  - macro control 12-6
  - macro ID 12-5
  - number of copies 4-3
  - orientation 8-19
  - page length 5-5
  - page size 5-2
  - paper source 5-3
  - pitch 8-11
  - raster graphics presentation 11-5
  - raster graphics resolution 11-4
  - reset 4-2
  - simplex/duplex print 4-4
  - spacing 8-11
  - start raster graphics 11-7
  - stroke weight 8-15
  - style 8-14
  - symbol set 8-6
  - text length 5-15
  - top margin 5-13
  - top offset registration 4-9
  - transfer raster data 11-8
  - transparent print data 8-26
  - typeface 8-17
  - underline 8-26
  - vertical cursor positioning 6-10
  - display functions 13-11
- commands, page control 5-1
- commands, page format 5-1
- commands, PCL 13-8, G-5
- commands, printer 1-3, G-7
- commands, troubleshooting 13-10
- compatibility 1-1
- compatibility with laserjet software 3-6
- compatibility, laserjet IID 3-6
- configuration G-1
- configuration menu 8-6
- configuration, interface B-1
- connector parallel I/O B-7
- connector signals, serial I/O B-9
- connector, interface G-4
- connector, parallel interface B-2
- connector, serial I/O B-12
- continuation, character descriptor 10-20
- continue mode, auto 13-12
- control code G-1
- control code printing 13-11, 8-26
- control codes 6-11/12

- control codes, printing 13-11
- control codes, table A-9
- control panel G-1
- coordinate system 10-1/2
- coordinate system units 6-2, G-6
- coordinate system, PCL 2-1, 2-3, 2-4
- copies, number of 4-1
- CR - carriage return 6-7
- creating macros 12-2
- current active position G-1
- cursor 6-1, G-1
- cursor moves 13-4
- cursor position, absolute 13-4
- cursor position, push/pop 6-14
- cursor positioning 13-4, 6-1, 6-2
- cursor positioning (columns), horizontal 6-4
  - positioning (decipoints), horizontal 6-5
  - positioning (decipoints), vertical 6-9
  - positioning (dots), horizontal 6-6
  - positioning (dots), vertical 6-10
  - positioning (rows), vertical 6-8
  - positioning command, vertical 6-10
  - positioning control codes, horizontal 6-7
    - vertical 6-12
  - positioning units 6-3
  - positioning, absolute/relative 6-2
  - positioning, horizontal 6-3
  - positioning, push/pop 6-14
  - positioning, vertical 6-8
  - positioning, vertical 6-9
  - positions, saving 6-14
- customer assist, laserjet C-1
- customer support C-1

## D

- data format 10-18
- data format, serial B-10
- data terminal ready (RS-232C) B-11
- data terminal ready protocol B-11
- data type 10-5
- decipoint 2-4, 6-2, G-2, 6-9
- default 3-1, G-2

- default environment, factory 3-2, G-3
- default environment, user 3-3, G-8
- default font command 8-24
- default font, selection 8-24
- default page orientation 5-7
- default setting 3-1
- default settings, factory 3-2
- default, HMI 5-17
  - left margin 5-10
  - page length 5-5
  - perforation skip 5-16
  - right margin 5-11
  - text length 5-15
  - user G-8
  - VMI 5-18
- deleting fonts 9-3
- deleting macros 12-4
- deleting macros 12-4
- delta x (SI) 10-22
- descriptor and data command, character 10-26
- descriptor and data format, character 10-19
- descriptor format 10-6
- descriptor format, font 10-3
- descriptor size (UB) 10-21
- descriptor size (UI), font 10-5
- design dimension, character 10-2
- display functions command 13-11
- display functions mode 13-11
- document control 4-1
- documentation, related to laserjet IID xv
- dot 6-2, G-2, 2-4
- dots 6-10, 6-6
- double sided printing 4-4, 4-1
- download G-2
- downloading fonts 9-2
- downloading soft fonts 9-2
- DTR handshake B-11
- DTR polarity G-2
- duplex page side selection command 4-10
- duplex printing 4-4
- duplex/offset registration 13-2

## E

- end raster graphics command 11-9
- end-of-line wrap command 13-10
- environment, factory default 3-1, 3-2
- environment, modified print 3-1, G-5
- environment, overlay 12-3, 3-1, G-5
- environment, print G-7
- environment, user default 3-1, 3-3, G-8
- error 20 - memory overflow 13-9, 13-13
- error 21 - print overrun 13-13
- error 22 - buffer overflow 13-13
- error 40 13-13
- errors, programming 13-13
- escape character G-2
- escape sequence 1-3, 8-21, G-2
  - syntax 1-5
  - combining 1-6
  - parameterized 1-5
- example, font management 9-8
  - font selection 8-21
  - landscape character 10-24
  - portrait character 10-23
- extended, height 10-14
- extended, pitch 10-14

## F

- factory default G-3
- factory default environment 3-1, 3-2, G-3
- factory default settings 3-2
- family compatibility, laserjet 3-6
- features printer 3-2
- feeding paper 5-3
- FF - form feed 6-12
- fill, rectangular area 11-19
- first line of a page 5-13
- fixed fonts 7-3
- fixed spacing 7-3, 8-11
- fixed spacing vs proportional 8-11
- font G-3
- font cartridge 8-1, G-3
  - characteristic, spacing 8-11
  - characteristics 7-1, 8-2, 13-5

- control command 9-5
- creation, soft 10-1
- data type 10-5
- deletion 13-7
- descriptor 10-1
- descriptor baseline distance 10-6
- descriptor cell height 10-6
- descriptor cell width 10-6
- descriptor command 10-17
- descriptor name 10-14
- descriptor format 10-3
- descriptor height 10-10
- descriptor orientation 10-7
- descriptor pitch 10-10
- descriptor serif style 10-13
- descriptor size (UI) 10-5
- descriptor spacing 10-7
- descriptor stroke weight 10-11
- descriptor style 10-11
- descriptor symbol set 10-7
- descriptor text height 10-14
- descriptor text width 10-14
- descriptor typeface 10-11
- descriptor underline distance 10-13
- descriptor underline height 10-13
- descriptor width type 10-10
- descriptor xheight 10-10
- height 7-4
- ID command 9-4
- management 9-1
- management example 9-8
- name, font descriptor 10-14
- selection 8-1, 9-7, 13-5
- selection by characteristic 8-2, 13-5
- selection by characteristic, summary 8-22
- selection by ID 13-5, 9-7
- selection example 8-21
- selection summary 8-22
- spacing 7-2
- style 7-5
- style, italic 8-14
- style, upright 8-14
- symbol set 7-2
- type 10-5

- type (UB) 10-5
  - primary 8-5, G-6
  - secondary 8-5, G-6
  - soft G-7
- fonts 7-1, 13-5
- fonts, deleting 9-3
  - fixed 7-3
  - internal 8-1
  - internal 8-20
  - internal G-4
  - internal G-4
  - permanent 9-3
  - proportional 7-3
  - soft 8-1
- foreign character substitution A-8
- form feed 6-11, 6-12
- format, character descriptor 10-20
- format, descriptor 10-6
- format, font descriptor 10-3
- format, font descriptor 10-3
- formatting 2-1, 5-1
- front panel functionality 3-6
- functions mode, display 13-11

## G

- getting started xv
- graphics 11-1, 11-8, -9
- graphics area fill examples 11-20
  - errors 13-13
  - example, raster 11-10
  - fill command 11-16
  - patterns 11-13
  - presentation mode, raster 11-5
  - resolution, raster 11-4
  - area fill pattern 11-19
  - raster 11-2
- graphics, raster 11-7, 13-6, G-7
  - rule G-7
- group character 1-5

## H

- half-line feed 6-11
- handshake timing B-6
- handshake, DTR B-11
- hardware, serial I/O B-12
- height (UB), underline 10-13
  - (UI), character cell 10-6
  - (UI), character 10-22
  - (UI), text 10-14
- command 8-13
- data, cap 10-15
- extended 10-14
- font 7-4
- font descriptor 10-10
  - secondary 8-13
- help 13-1, C-1, 1-1/13-14
- hints, programming 13-1
- history of the PCL language 1-1
- HMI 5-17, 6-2, 13-4, G-3
- HMI default 5-17
- horizontal cursor positioning 6-3
  - cursor positioning (columns) 6-4
  - cursor positioning (decipoints) 6-5
  - cursor positioning (dots) 6-6
  - cursor positioning control codes 6-7
  - margins, clear 5-12
  - motion index 5-17, 13-4, G-3
  - rectangle size (decipoints) command 11-14
  - rectangle size (dots) command 11-14
  - spacing 8-11
  - tab 6-7
- HP guidelines C-1
- HP PCL language, introduction 1-1
- HT - horizontal tab 6-7

## I

- I/O 13-9, G-4
- I/O buffer G-4
  - connector signals, serial B-9
  - hardware B-7
  - centronics G-1
  - parallel G-5



- serial G-7
- ID number 9-2,-7
- ID, font 9-4
- ID, macro 12-5
- image, permanent g-6
- input signals B-3
- interface cable B-7
  - centronics B-1
  - configuration B-1
  - connector G-4
  - connector G-4
  - parallel B-2, G-5
  - serial B-1, B-8, G-7
  - throughput 13-9
- internal fonts 8-1, 8-20, G-4
- internal unit 2-4
- invocation, macro 12-4
- ISO symbol sets 8-9, 8-20, G-4
- italic font style 8-14

## J

- job control 13-2
- job control commands 4-1, 5-1

## L

- landscape G-4
- landscape character data example 10-29
  - character example 10-24
  - print boundaries 2-5
  - printing 4-4
- laserjet customer assist C-1
- laserjet assist line C-1
- laserjet family compatibility 3-6
- laserjet IID compatibility 3-6
- left margin 5-10
- left offset (SI) 10-21
- left offset registration command 4-6
- left offset, character descriptor 10-21
- legal page length selection 13-3
- legal symbol set table A-7
- levels, PCL 1-2

- LF - line feed 6-11, 6-12
- line driver circuitry, parallel I/O B-7
- line receiver circuitry, parallel I/O B-7
- line spacing 5-19
- line spacing command 5-18
- line termination 6-12, 6-13
- logical page 2-2, G-4
- logical page boundaries 2-4,-5,-6
- long-edge binding 4-4

## M

- macro 13-7, G-4
- macro call 12-3
  - control command 12-6
  - control example 12-8
  - creation 12-1
  - deletion 12-6
  - design 12-6
  - execution 12-3
  - ID command 12-5
  - invocation 12-3, 12-6
  - number identification 12-5
  - overlay 12-3, 13-7
- macro, temporary 12-4
- macros 12-2, 13-7
- macros, deleting 12-4
- macros, number of 12-2
- making characters 10-1
- management example, font 9-8
- management, font 9-1
- manual service xv
- manual user's xv
- manuals, related xv
- marco, permanent 12-4
- margin, left 5-10
- margin, right 5-11
- margin, top 5-13
- margins 5-10
- memory overflow 13-13
- menu G-4
- modified print environment 3-1,-4, G-5
- motion index (HMI), horizontal 5-17, G-3

motion index (VMI), vertical 5-18, G-8  
MSB (UB), typeface 10-11  
multiple copies 4-3

## N

non-volatile RAM G-5  
number of copies 4-1, 4-3

## O

off-line/on-line G-5  
offset, left 10-21  
offset, top 10-21  
orientation 5-5, 5-7, 7-7, 8-19, G-5  
orientation, character descriptor 10-21  
orientation, font descriptor 10-7  
orientation, portrait G-6  
output signals B-3  
overlay 12-3  
overlay environment 3-1, 12-3, G-5  
overlay, automatic 12-3  
overlay, macro 12-3  
overrun, print 13-9

## P

page control 13-3  
page format commands 5-1  
page length 5-5, 13-3  
page length command 5-5  
page length default 5-5  
    length settings 5-5  
    orientation, default 5-7  
    printing boundaries 2-4, 2-6, 2-7  
page size 5-2 13-3  
page size command 5-2  
page, formatting 2-1  
page, logical 2-2, G-4  
paper feeding 5-3  
paper selection 13-3  
paper sizes (in dots) 2-4, 2-5, 2-6

paper source 5-3, 13-3  
paper source command 5-3  
parallel connector pin assignments B-2  
    I/O G-5  
    I/O cable B-7  
    I/O handshake timing B-6  
    I/O hardware B-7  
    I/O line driver circuitry B-7  
    I/O line receiver circuitry B-7  
    I/O signals B-3  
    interface B-2  
    interface B-2  
    interface connector B-2  
parameter character 1-6  
parameterized escape sequences 1-5  
parsing 13-1  
patterns, predesigned graphics 11-13  
patterns, graphics area fill 11-19  
PC-8 danish/norwegian symbol set table A-4  
PC-8 symbol set table A-4  
PC-850 symbol set table A-5  
PCL architecture 1-2  
PCL command parsing 13-2  
PCL command processing time 13-8  
PCL commands 13-8, G-5  
PCL coordinate system 2-3, 2-4  
PCL coordinate system, units 2-4, G-6  
PCL coordinates G-6  
PCL escape sequences 1-3  
PCL language, history 1-1  
PCL levels 1-2  
perforation region 5-8, 5-16, G-6  
perforation skip default 5-16  
performance 13-8  
permanent fonts 9-3  
permanent image G-6  
permanent macros 12-4  
physical coordinate system 10-2  
physical page size (in dots) 2-4, 2-5, 2-6  
pitch 7-3, 8-12, G-6  
pitch command 8-11  
pitch extended 10-14  
pitch, character 8-11  
pitch, font descriptor 10-10

- points 7-4, G-6
- polarity, DTR G-2
- pop 6-14
- portrait G-6
- portrait character data example 10-27
  - character example 10-23
  - orientation G-6
  - print boundaries 2-4, 2-6
  - printing 4-4
- positioning text/graphics 6-1
- positioning, cursor 6-1, 13-4
- primary and secondary fonts 8-5, G-6
- primary table 8-5
- print boundaries 2-4, 2-5, 2-6
  - data 13-8
  - data processing time 13-8
  - data, transparent 8-25
  - environment 3-1, G-7
  - environment factory default settings 3-2
  - environment, modified 3-4, G-5
  - overrun 13-9
  - position 6-1
- printable area 2-4, G-6
- printable area boundaries 2-4, 2-5, 2-6
- printable characters 13-11
- printable control codes 13-11
- printer command table A-17
  - commands 1-3, 1-4, G-7
  - default settings 3-2
  - features 3-2
  - programming language 1-1
  - reset 13-2
  - reset command 4-2
- printing control codes 8-26, 13-11
  - multiple copies 4-3
  - , double sided 4-1, 4-4
- priority characteristics 8-2
- programming errors 13-13
- programming hints 13-1
- proportional fonts 7-3
- proportional vs fixed spacing 8-11
- protocol, data terminal ready B-11
- protocol, xon/xoff B-10
- push/pop cursor positioning 6-14

## R

- RAM, non-volatile G-5
- raster 11-2
- raster data, transfer 11-8
- raster graphics 11-2, 11-7, 13-6, G-7
  - example 11-10
  - presentation command 11-5
  - presentation mode 11-5
  - resolution 11-4, 13-6
  - resolution command 11-4
  - throughput 13-6
  - end command 11-9
  - start command 11-7
- rectangular area G-7
- rectangular area fill graphics 11-13
- region, perforation 5-16, G-6
- registration, duplex/offset 13-2
- related documentation xv
- relative motion 6-2
- reset 3-5, 13-2
  - key 3-5
  - menu 3-5
  - printer 13-2
- resetting the print environment 3-5
- resetting the printer 4-2
- resolution, raster graphics 11-4, 13-6
- right column 5-11
- right margin 5-11
  - default 5-11
- robust xon/xoff B-10
- robust xon G-7
- roman-8 character conversion table A-10
- roman-8 symbol set table A-2
- row 2-4, 6-8, G-7
- RS-232-C operation B-8
- RS-422 operation B-8
- rule, graphics G-7

## S

- secondary font 8-5, G-6
- secondary height 8-13
- secondary font table 8-5

- secured paper source 13-3
- selecting paper trays 5-3
- selection by characteristic, font 8-2
- selection by ID, font 9-7
- selection default font 8-24
- selection, font 8-1
- sequence, escape G-2
- serial data format B-10
- serial I/O G-7
  - cable B-12
  - connector B-12
  - connector signals B-9
  - data format B-10
  - data throughput B-10
  - hardware B-12
- serial interface B-1, B-8, G-7
- serial protocol B-10, B-11
- serif style (UB) 10-13
- serif style, font descriptor 10-13
- service manual xv
- settings, factory default 3-2
- shading, graphics area fill 11-19
- shift in 8-5
- shift out 8-5
- short-edge binding 4-4
- SI 8-5
- signals, input B-3
- signals, output B-3
- signed byte 10-5
- signed integer 10-5
- signed long integer 10-5
- simplex printing 4-4
- simplex/duplex command 4-4
- size (UB), descriptor 10-21
- SO 8-5
- soft font G-7
  - creation 10-1
- soft fonts 8-1, 9-2
  - downloading 9-2
  - temporary 9-3
- solid-filled rectangular area G-7
- SP - space 6-7
- space 6-7
- spacing, 7-3, 8-11, 8-22, G-7
  - command 8-11
  - font characteristic 8-11
  - character 8-11, 13-4, 13-5
  - fixed 7-3
  - font descriptor 10-7
  - line 5-19
  - specifications, page boundaries 2-4, 2-5, 2-6
  - start raster graphics command 11-7
  - storing cursor positions 6-14
  - stroke weight 7-5, 8-15, 8-22
  - stroke weight (SB) 10-11
  - stroke weight command 8-15
  - stroke weight, character 8-15
  - stroke weight, font descriptor 10-11
  - style 7-5, -14, 8-22, G-8
  - style (UB), serif 10-13
  - style command 8-14
  - style, font 7-5
  - style, font descriptor 10-11
  - summary of font selection by characteristic 8-22
  - support, customer C-1
  - symbol set 7-1, 8-6, 8-22, 10-7, G-4, G-8
    - ID numbers 8-7
    - command 8-6
    - table, ECMA-94 A-3
    - table, legal A-7
    - table, pc-8 A-4
    - table, pc-8 danish/norwegian A-4
    - table, pc-850 A-5
    - table, roman-8 A-2
    - values, font design 10-8
    - font descriptor 10-7
    - ISO 8-9, G-4
    - user default 8-6
  - syntax of escape sequences 1-5

## T

- temporary / permanent fonts 9-3, 12-4
- temporary macros 12-4
- temporary soft fonts 9-3
- terminal ready (RS-232C) B-11
- termination character 1-6

- text
  - area 5-8, 13-3
  - height (UI) 10-14
  - height, font descriptor 10-14
  - length 5-15, 13-3
  - length command 5-15
  - length default 5-15
  - positioning 6-1
  - printing 5-8
  - width (UI) 10-14
  - width, font descriptor 10-14
  - , line wrap 13-10
- the print environment 3-1, 3-5
- throughput, interface 13-9
  - raster graphics 13-6
  - serial B-10
- timing diagram, parallel I/O B-6
- timing, I/O handshake B-6
- top margin 5-13, 13-3
  - command 5-13
- top offset registration command 4-9
- top offset, character descriptor 10-21
- transfer raster data command 11-8
- transparent print data 8-25, 13-5
  - command 8-26
- troubleshooting 13-12
  - command 13-10
- two-character escape sequences 1-5
- typeface 7-6, 8-17, 8-22, G-8
  - character 8-17
  - command 8-17
  - values 8-18, 10-12
- typeface, font descriptor 10-11

## U

- underline
  - command 8-26
  - fixed 8-26
  - floating 8-26
  - font descriptor height 10-13
  - font descriptor distance 10-13
- units, cursor positioning 6-2

- units, PCL coordinate system 2-4
- unsigned byte 10-5
- unsigned integer 10-5
- unsigned long integer 10-5
- upright font style 8-14
- user default G-8
  - environment 3-1, 3-3, 8-6, G-8
  - symbol set 8-6
- user's manual xv

## V

- value field 1-6
- vertical character spacing 8-13
- vertical cursor positioning 6-8, 6-9
  - command (decipoints) 6-9
  - command (dots) 6-10
  - command (rows) 6-8
  - control codes 6-12
- vertical motion index (VMI) 5-18, G-8
  - command (decipoints) 11-15
  - command (dots) 11-15
- VMI 5-18, 6-2, G-8
  - default 5-18

## W

- weight, stroke 7-5, 8-15, G-8
- width (UI), character 10-22
- width (UI), text 10-14
- width type, font descriptor 10-10
- width, character descriptor 10-20
- wrap, end-of-line 13-10
- xheight, font descriptor 10-10
- xon/xoff protocol B-10
  - robust protocol B-10

## Printer Commands

- $E_C$  E - reset 3-5
- $E_C$  9 - clear horizontal margins 5-12
- $E_C$  = - half-line feed 6-11
- $E_C$  Y - display functions, enable 13-11
- $E_C$  Z - display functions, disable 13-11
- $E_C$  &a#C - horizontal cursor positioning (columns) 6-3
- $E_C$  &a#H - horizontal cursor positioning (decipoints) 6-3
- $E_C$  &a#L - left margin 5-10
- $E_C$  &a#M - right margin 5-11
- $E_C$  &a#R - vertical cursor positioning (rows) 6-8
- $E_C$  &a#V - vertical cursor positioning (decipoints) 6-9
- $E_C$  &d#D - underline enable 8-26
- $E_C$  &d@ - underline disable 8-26
- $E_C$  &f#S - push/pop cursor position 6-14
- $E_C$  &f#X - macro control 12-6
- $E_C$  &f#Y - macro ID (assign) 12-5
- $E_C$  &k#G - line termination 6-13
- $E_C$  &k#H - horizontal motion index 5-17
- $E_C$  &l#A - page size 5-2
- $E_C$  &l#C - vertical motion index 5-18
- $E_C$  &l#D - line spacing 5-18
- $E_C$  &l#E - top margin 5-13
- $E_C$  &l#F - text length 5-15
- $E_C$  &l#H - paper source 5-3
- $E_C$  &l#L - perforation skip 5-16
- $E_C$  &l#O - orientation 5-7 8-19
- $E_C$  &l#P - page length 5-5
- $E_C$  &l#S - simplex/duplex command
- $E_C$  &l#U - left offset registration command 4-6
- $E_C$  &l#U - top offset registration command 4-9
- $E_C$  &l#X - number of copies 4-3
- $E_C$  &p#X - transparent mode 8-26
- $E_C$  &s#C - end-of-line wrap 13-10
- $E_C$  (#B - stroke weight 8-15

$E_C(\#X$  - primary font selection by ID # 9-7  
 $E_C(3@$  - font default 8-24  
 $E_C(ID$  - primary symbol set 8-6  
 $E_C(s\#H$  - primary pitch 8-11  
 $E_C(s\#P$  - primary spacing 8-11  
 $E_C(s\#S$  - primary style 8-14  
 $E_C(s\#T$  - typeface 8-17  
 $E_C(s\#V$  - primary height 8-13  
 $E_C(s\#W$  - character descriptor/data 10-26  
 $E_C)\#X$  - secondary font selection by ID # 9-7  
 $E_C)3@$  - font default 8-24  
 $E_C)ID$  - secondary symbol set 8-6  
 $E_C)s\#B$  - secondary stroke weight 8-15  
 $E_C)s\#H$  - secondary pitch 8-11  
 $E_C)s\#S$  - secondary style 8-14  
 $E_C)s\#V$  - secondary height 8-12  
 $E_C)s\#W$  - font descriptor 10-17  
 $E_C)s1P$  - secondary spacing 8-11  
 $E_C*b\#W$  - transfer raster data 11-8  
 $E_C*c\#P$  - fill rectangular area 11-19  
 $E_C*c\#A$  - horizontal rectangle size (dots) 11-14  
 $E_C*c\#B$  - vertical rectangle size (dots) 11-15  
 $E_C*c\#D$  - font ID (specify) 9-4  
 $E_C*c\#E$  - character code 10-24  
 $E_C*c\#F$  - font control 9-5  
 $E_C*c\#G$  - area fill ID 11-16  
 $E_C*c\#H$  - horizontal rectangle size (decipoints) 11-14  
 $E_C*c\#V$  - vertical rectangle size (decipoints) 11-15  
 $E_C*p\#X$  - horizontal cursor positioning (dots) 6-6  
 $E_C*p\#Y$  - vertical cursor positioning (dots) 6-10  
 $E_C*r\#A$  - start raster graphics 11-7  
 $E_C*r\#F$  - raster graphics presentation 11-5  
 $E_C*r\#B$  - end raster graphics 11-9  
 $E_C*t\#R$  - raster graphics resolution 11-4

# Sales and Service Offices

---

## Calling for Help



To find an Authorized HP Dealer call: (800) 367-4772

To find an Authorized HP Service Dealer call: (800) 835-4747

Or contact one of the regional offices below:

### **United States:**

Hewlett-Packard Company  
4 Choke Cherry Road  
Rockville, MD 20850  
(301) 670-4300

Hewlett-Packard Company  
5201 Tollview Drive  
Rolling Meadows, IL 60008  
(312) 255-9800

Hewlett-Packard Company  
5161 Lankershim Blvd.  
North Hollywood, CA 91601  
(818)505-5600

Hewlett-Packard Company  
2015 South Park Place  
Atlanta, GA 30339  
(404) 955-1500

### **Canada:**

Hewlett-Packard Ltd.  
6877 Goreway Drive  
Mississauga, Ontario  
Canada, L4V 1M8  
(416) 678-9430

### **Europe/Africa/Middle East:**

Hewlett-Packard S.A.  
Central Mailing Department  
P.O. Box 529  
1180 AM Amstelveen  
The Netherlands  
(31) 20/547 9999



**Australia/New Zealand:**

Hewlett-Packard Australia Ltd.  
31-41 Joseph Street  
Blackburn, Victoria 3130,  
Melborne, Australia  
(03) 895-2895

**Japan:**

Yokogawa-Hewlett-Packard Ltd.  
29-21, Takaido-Higashi 3-chome  
Suginami-ku, Tokyo 168  
(03) 331-6111

**Far East Area:**

Hewlett-Packard Asia Ltd.  
22-30/F., West Tower  
Bond Centre  
89 Queensway  
Central, Hong Kong  
(5) 848-7777

**Latin America:**

Hewlett-Packard Company  
Latin American Region Headquarters  
Monte Pelvoux Nbr. 111  
Lomas de Chapultepec  
11000 Mexico, D.F. Mexico  
(905) 596-79-33



HEWLETT  
PACKARD

**Chapter 1** Introduction to HP PCL.....1-1

**Chapter 2** The Page.....2-1

**Chapter 3** The Print Environment.....3-1

**Chapter 4** Job Control Commands.....4-1

**Chapter 5** Page Control Commands.....5-1

**Chapter 6** Cursor Positioning.....6-1

**Chapter 7** Fonts.....7-1

**Chapter 8** Font Selection.....8-1

**Chapter 9** Font Management..... 9-1

**Chapter 10** Soft Font Creation.....10-1

**Chapter 11** Graphics.....11-1

**Chapter 12** Macros.....12-1

**Chapter 13** Programming Hints.....13-1

**Appendix A** Reference Tables.....A-1

**Appendix B** Reference Interfaces.....B-1

**Appendix C** Support.....C-1

**Glossary**

**Index**

**Sales and Service  
Offices**

**LaserJet IID Printer Technical Reference Manual**



HEWLETT  
PACKARD



HEWL  
PACKA

33447-90905  
Edition E1088  
Printed in U.S.A.

# Reader Comment Card

## HP LaserJet IID Technical Reference Manual

We welcome your evaluation of this manual. Your comments and suggestions help us improve our publications.

Please circle one number for each.	Strongly Agree	Agree	Neutral	Disagree	Strongly Disagree
• The manual is well organized.	1	2	3	4	5
• I can find the information I want.	1	2	3	4	5
• The index is thorough.	1	2	3	4	5
• The information is easy to understand.	1	2	3	4	5
• The information is complete.	1	2	3	4	5
• The manual is clearly written.	1	2	3	4	5
• Concepts and vocabulary are easy to understand.	1	2	3	4	5
• Examples are clear and useful.	1	2	3	4	5
• The manual contains enough examples.	1	2	3	4	5
• Illustrations are clear and helpful.	1	2	3	4	5
• The manual contains enough illustrations.	1	2	3	4	5
• Layout and format enhance the manual's usefulness.	1	2	3	4	5
• I like the use of color in the manual.	1	2	3	4	5
• The quality of this manual would influence any repeat purchase decisions.	1	2	3	4	5
• The scope of the information in the manual meets my needs.	1	2	3	4	5

Please write additional comments, particularly if you disagree with a statement above. Use additional pages if you wish. The more specific your comments, the more useful they are to us.

Comments: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

*Thanks*

Name: \_\_\_\_\_

Title: \_\_\_\_\_

Company: \_\_\_\_\_

Address: \_\_\_\_\_

City/State/Zip: \_\_\_\_\_

Phone: \_\_\_\_\_





**HEWLETT  
PACKARD**

33447-90905  
Edition E1088  
Printed in U.S.A.