

RX02

SS PERF EXER  
CNRXDAO

AH-T474A-MC  
FICHE 1 OF 1

MAY 1983  
COPYRIGHT © 82-83  
MADE IN USA



IDENTIFICATION

PRODUCT CODE: AC-T473A-MC  
PRODUCT NAME: CNRXDAO RX02 SS PERF EXER  
PRODUCT DATE: DEC 1982  
MAINTAINER: DIAGNOSTICS SERVICES/ISS  
AUTHOR: L. S. PRUCHA

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION. DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR ANY ERRORS THAT MAY APPEAR IN THIS DOCUMENT.

NO RESPONSIBILITY IS ASSUMED FOR THE USE OR RELIABILITY OF SOFTWARE ON EQUIPMENT THAT IS NOT SUPPLIED BY DIGITAL OR ITS AFFILIATED COMPANIES.

COPYRIGHT (C) 1982,1983 BY DIGITAL EQUIPMENT CORPORATION

THE FOLLOWING ARE TRADE MARKS OF DIGITAL EQUIPMENT CORPORATION:

DIGITAL  
DEC

PDP  
DECUS

UNIBUS  
DECTAPE

MASSBUS

PROGRAM HEADER AND TABLES  
TABLE OF CONTENTS

MACRO M1200 15-DEC-82 13:50

16-	772	PROGRAM HEADER
16-	841	DISPATCH TABLE
18-	858	DEFAULT HARDWARE P-TABLE
18-	884	SOFTWARE P-TABLE
19-	928	GLOBAL EQUATES SECTION
21-	1080	GLOBAL DATA SECTION
25-	1198	GLOBAL TEXT SECTION
27-	1237	GLOBAL ERROR REPORT SECTION
27-	1245	- MOD U.SFT.ERR - ERROR REPORT
27-	1255	- MOD U.PRT.ERR - PRINT ERRORS
29-	1278	- MOD U.PRT.EC - PRINT UNIT ERROR CODE
31-	1346	- ERROR PRINT CALLS/MSG CALLS
33-	1379	GLOBAL SUBROUTINES SECTION
33-	1458	- MOD U.1.0 - RANDOM GENERATOR
35-	1484	- MOD U.A.1 - CONVERSION UUT CODE --> SUTPTR
35-	1508	- MOD U.A.2 - CONVERSION SUTPTR --> UUT CODE
37-	1529	- MOD U.DEV.REC - DEVICE READ ERROR CODE
38-	1568	REPORT CODING SECTION
40-	1657	- PRINT REPORT HEADER
40-	1678	- PRINT REPORT DATA
42-	1711	- PRINT READ/WRITE SECTOR COUNTERS
44-	1742	- PRINT REPORT TYPE 1
44-	1754	- PRINT REPORT TYPE 2
44-	1764	- PRINT REPORT TYPE 3
48-	1831	- STATISTICAL TABLES
48-	1874	LOAD DEVICE PROTECTION
50-	1885	INITIALIZE SECTION
52-	1963	- MOD 1.1 - UNPACK HARDWARE P-TABLES
54-	2052	CLEANUP CODING SECTION
56-	2089	AUTO DROP SECTION
58-	2136	- TEST 0: ADDRESSING TEST
60-	2179	- MOD U.SFT.TRP - BUS TRAP HANDLER
62-	2199	DROP UNIT SECTION
64-	2256	ADD UNIT SECTION
66-	2290	TEST 1: RX02 SS PERF EXERCISER
66-	2294	MOD 0.0 - EXERCISE A SYSTEM
69-	2390	MOD 1.0 - GET SYSTEM EXERCISE
69-	2409	MOD 1.1 - GET EXERCISE CONDITIONS
71-	2438	MOD 1.2 - GET SYSTEM TO EXERCISE
71-	2505	- MOD 1.2.U.1 - GET PRINTABLE SYSTEM 0 UNIT #
71-	2522	- MOD 1.2.U.2 - GET PRINTABLE SYSTEM 1 UNIT #
73-	2536	MOD 1.2.1 - CK DRIVE AVAILABLE
77-	2608	MOD 1.2.1.1 - REFORMAT DRIVE DENSITY
79-	2690	- MOD 1.2.U.3 - INITIALIZE ERROR
79-	2703	- MOD 1.2.U.4 - INITIALIZE DROF
79-	2710	- MOD 1.2.U.5 - INITIALIZE PRINT
81-	2745	MOD 1.3 - GET EXERCISE
83-	2765	MOD 1.3.1 - SET DATA PATTERN
85-	2871	MOD 1.3.2 - SET TRACK SEQUENCE
85-	3020	MOD 1.3.3 - CLEAR STATISTICAL TABLES
87-	3034	MOD 2.0 - SCHEDULE SYSTEM EXERCISE
89-	3138	MOD 2.1 - GET A TEST
91-	3245	- EXERCISE/TEST TABLE
93-	3303	MOD 2.2 - GET A DRIVE
95-	3342	MOD 2.3 - EXECUTE DRIVE TEST
99-	3466	MOD 2.3.1 - GET A SECTOR
99-	3555	MOD 2.3.1.A - SET SECTOR DONE

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50  
TABLE OF CONTENTS

101-	3567	MOD 2.3.2 - GET A TRACK
105-	3639	MOD 2.3.3 - GET A DRIVE FUNCTION
107-	3673	MOD 2.3.4 - OUTPUT DRIVE FUNCTION
107-	3748	MOD 2.3.4.1 - OUTPUT SINGLE WORD
109-	3762	MOD U.2.3.4 - WATCH DOG TIMER
109-	3792	MOD U.2.3/4 DELAY
111-	3820	MOD 2.4 - EVALUATE TEST RESULTS
113-	3838	MOD 2.4.1 - EVALUATE DATA
115-	3920	MOD 2.4.2 - EVALUATE DRIVE STATE
117-	4037	MOD 2.4.2.1 - EVALUATE DRIVE RESPONSE
119-	4070	MOD 2.4.3 - UPDATE DRIVE STATISTICS
121-	4183	MOD 2.4.3.1 - UPDATE HARD ERROR STATISTICS
121-	4198	MOD 2.4.3.2 - UPDATE CRC STATISTICS
123-	4227	MOD 2.4.3.3 - UPDATE SOFT ERROR STATISTICS
125-	4256	MOD 2.4.3.4 - UPDATE SECTOR WRITTEN/READ COUNTERS
127-	4289	- MOD 2.4.U.1 - SOFT ERROR LOGGER
129-	4322	MOD 2.4.4 - EVALUATE UNIT ERROR CODE
131-	4380	MOD 2.5 - OUTPUT ERROR TYPE
133-	4495	MOD 2.5.1 - PRINT RETRY
135-	4549	MOD 2.6 - SET DRIVES DONE
137-	4574	MOD 3.0 - OUTPUT EXERCISE COMPLETE
139-	4584	MOD 4.0 - OUTPUT SYSTEM ERROR
143-	4585	- MOD INTR.1 - INTERRUPT HANDLER #0
143-	4692	- MOD INTR.2 - INTERRUPT HANDLER #1
143-	4699	MOD U.INTR.U - SAVE UNIT REG
143-	4710	- READ ERROR CODE BUFFER
143-	4722	- TRACK TABLE
143-	4729	- DATA BUFFERS
145-	4753	HARDWARE PARAMETER CODING SECTION
147-	4829	SOFTWARE PARAMETER CODING SECTION
151-	4935	- PATCH AREA

## TABLE OF CONTENTS

1.0	GENERAL INFORMATION
1.1	PROGRAM ABSTRACT
1.2	SYSTEM REQUIREMENTS
1.2.1	HARDWARE REQUIREMENTS
1.2.2	SOFTWARE REQUIREMENTS
1.3	RELATED DOCUMENTS AND STANDARDS
1.4	DIAGNOSTIC HIERARCHY PREREQUISITES
1.5	ASSUMPTIONS
1.6	MEMORY MAP
2.0	OPERATING INSTRUCTIONS
2.1	HARDWARE QUESTIONS
2.2	SOFTWARE QUESTIONS
3.0	ERROR INFORMATION
3.1	WRITE ERROR
3.2	CRC ERROR
3.3	NO CRC ERROR BUT DATA ERROR
3.4	CRC ERROR BUT NO DATA ERROR
3.5	SEEK ERROR
3.6	CHECKSUM ERROR
3.7	ERROR NUMBERS
4.0	PERFORMANCE AND PROGRESS REPORTS
5.0	DEVICE INFORMATION TABLES
5.1	DEVICE PROTOCOL
6.0	TEST SUMMARIES
6.1	UNIT/DRIVE SELECTION
6.2	DATA PATTERNS
6.3	FUNCTIONAL TESTS
6.4	TRACK SEQUENCING
6.5	SECTOR/TRACK ADDRESSING
6.6	DISKETTE DENSITY
6.7	PROGRAM CONTROL
7.0	LISTING INDEX
8.0	LISTING

## 1.0 GENERAL INFORMATION

### 1.1 PROGRAM ABSTRACT

THIS PROGRAM EXERCISES TWO RX02 SUBSYSTEMS (FOUR DRIVES), IN SBC-11/21 PROCESSOR, MAINTAINS DRIVE STATISTICS AND PROVIDES RUN SUMMARIES SO THAT SEEK AND DATA ERROR RATES MAY BE DETERMINED. THE PERFORMANCE EXERCISER WILL GIVE THE USER CONFIDENCE, AFTER RUNNING SUCCESSFULLY, THAT THE SYSTEM IS PERFORMING WITHIN SPECIFICATION.

### 1.2 SYSTEM REQUIREMENTS

#### 1.2.1 HARDWARE REQUIREMENTS

SBC-11/21 PROCESSOR WITH 16K OR MORE OF MEMORY  
CONSOLE DEVICE (LA30, LA36, VT50, ETC.)

#### 1.2.2 SOFTWARE REQUIREMENTS

THIS DIAGNOSTIC IS DESIGNED TO RUN WITH THE DIAGNOSTIC SUPERVISOR AS DESCRIBED IN PARAGRAPH 2.0.

### 1.3 RELATED DOCUMENTS AND STANDARDS

XXDP+ SUPERVISOR/USERS MANUAL CHQUS

### 1.4 DIAGNOSTIC HIERARCY PREREQUISITES


NONE

### 1.5 ASSUMPTIONS

THE HARDWARE OTHER THAN THE SUBSYSTEM BEING TESTED IS ASSUMED TO WORK PROPERLY. FALSE ERRORS MAY BE REPORTED IF THE PROCESSOR, MEMORY, ETC., DO NOT FUNCTION PROPERLY.

1.6 MEMORY MAP

-----  
MEMORY LAYOUT ON 16K MACHINE - XXDP ENVIRONMENT  
-----

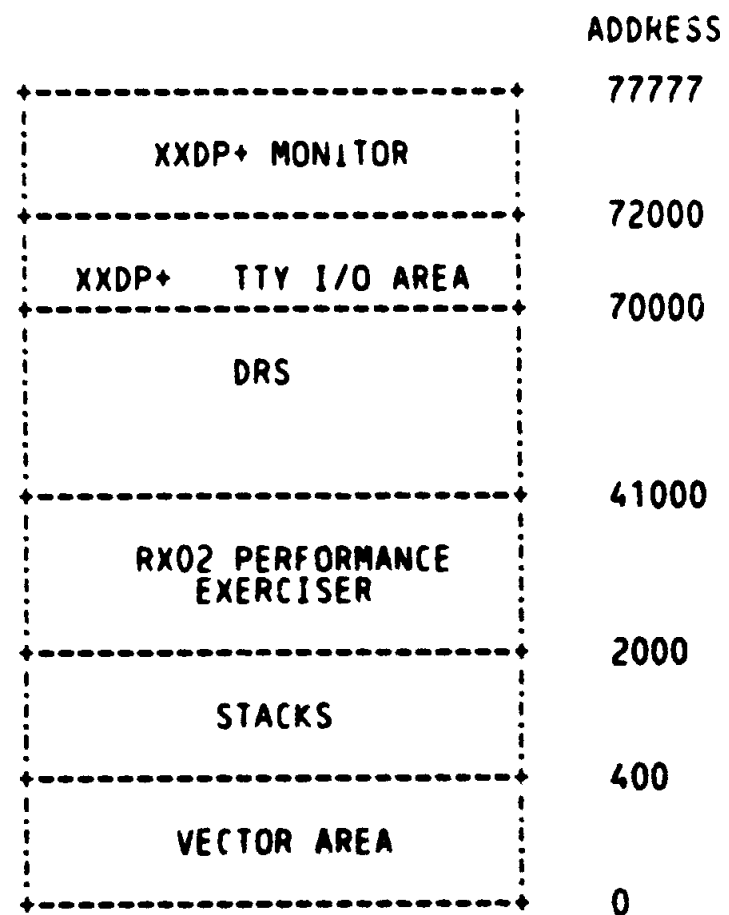

IN A MACHINE WITH MORE MEMORY FREE SPACE WILL OCCUR BETWEEN THE DIAGNOSTIC AND THE DRS.

## 2.0 OPERATING INSTRUCTIONS

THIS IS A REV A SUPERVISOR DIAGNOSTIC SPECIFIC TO SBC-11/21 PROCESSOR: FOR OPERATING INSTRUCTIONS, PLEASE SEE CHAPTER 5 OF XXDP+ OPERATOR'S MANUAL. THEY ARE NO LONGER INCLUDED IN THE DIAGNOSTIC LISTING BECAUSE IT IS DESIRED THAT A CHANGE IN THOSE INSTRUCTIONS NOT REQUIRE A RE-ASSEMBLY OF ALL SUPERVISOR DIAGNOSTICS.

## 2.1 HARDWARE QUESTIONS

THE FOLLOWING SERIES OF QUESTIONS COMPRISE THE PARAMETERS NECESSARY TO IDENTIFY EACH FLOPPY DISK SUBSYSTEM.

RX BUS ADR -  
THIS PARAMETER DEFINES THE BASE BUS ADDRESS FOR THE FLOPPY DISK SUBSYSTEM.

VECTOR ADR -  
THIS PARAMETER DEFINES THE INTERRUPT VECTOR ADDRESS FOR THE FLOPPY DISK SUBSYSTEM INTERFACE.

DRIVE # -  
THIS PARAMETER DEFINES THE FLOPPY DISK SUBSYSTEM DRIVE NUMBER (0 - 1).

EXP WRD-TYPE -  
THIS PARAMETER IS TO BE USED FOR FUTURE EXPANSION. TYPE A CARRIAGE RETURN.



2.2 SOFTWARE QUESTIONS  
-----

## EXERCISE # -

ENTER # FROM TABLE SHOWN IN PARAGRAPH 6.3.

## DATA PATTERN # -

ENTER # FROM TABLE SHOWN IN PARAGRAPH 6.2.

## TRACK SEQUENCE # -

ENTER # FROM TABLE SHOWN IN PARAGRAPH 6.4.

## DEVICE FATAL THRESHOLD LEVEL -

THE DEVICE FATAL THRESHOLD LEVEL (DFTL) IS INITIALLY SET=1.  
THIS THRESHOLD LEVEL EQUALS THE # OF HARD ERRORS THAT  
WILL CAUSE A DEVICE FATAL ERROR WHEN THE DRS 'EVL' FLAG  
IS SET. THE 'EVL' FLAG WILL ALSO CAUSE 10 SOFT ERRORS  
TO BE RECLASSIFIED A HARD ERROR, WHICH IF DFTL = 1 WILL  
BECOME A DEVICE FATAL ERROR.

## RUN TEST IN DOUBLE DENSITY -

IF TEST IS IN WRONG DENSITY - OPERATOR WILL BE ASKED IF  
THE DISKETTE IS TO BE REFORMATTED.

## RUN TEST IN DELETED DATA MODE -

IF ANSWERED YES, DELETED DATA MODE WILL BE DONE FIRST.

## ANY PROGRAM CONTROL FLAGS -

IF ANSWERS YES THE FOLLOWING QUESTIONS WILL BE ASKED.

RETRY ON ERROR, LOG SOFT + HARD ERRORS?  
IF RETRY IS NOT SET, THEN SOFT ERRORS  
WILL ALSO LOG AS HARD ERRORS.  
RECALIBRATE ON SEEK ERRORS?  
PRINT ONLY 10 DATA ERRORS + CONTINUE?  
CLEAR STATISTICAL TABLES BEFORE NEXT PASS?

## MODIFY TRACK ADDRESS LIMITS -

IF ANSWERING YES, THEN THE FOLLOWING WILL BE ASKED:

OUTER DIAMETER ADR #?  
INNER DIAMETER ADR #?

## MODIFY SECTOR ADDRESS LIMITS -

IF ANSWERING YES, THEN THE FOLLOWING WILL BE ASKED:

MIN. SECTOR ADR #?  
MAX. SECTOR ADR #?

## RXXX EXPANSION &lt;CR&gt;

THIS WORD IS FOR FUTURE EXPANSION, ANSWER WITH A  
CARRIAGE RETURN.

### 3.0 ERROR INFORMATION

-----

THIS PROGRAM HAS FOUR TYPES OF ERROR CLASSIFICATIONS; SYSTEM FATAL, DEVICE FATAL, HARD AND SOFT.

#### SYSTEM FATAL ERRORS

-----

SYSTEM FATAL ERRORS ARE USED TO INDICATE THAT AN ERROR WAS DETECTED BY THE DIAGNOSTIC SUPERVISOR IN RELATION TO LOADING/CONTROLLING THE DIAGNOSTIC PROCESS.

THE CONTENT OF EACH ERROR IS SUCH THAT IT SHOULD BE SELF - EXPLANATORY. HOWEVER, THE MESSAGES UTILIZE SOME TERMS THAT ARE SPECIFIC TO THE FLOPPY DISK SUBSYSTEM, AND MAY REQUIRE SOME GETTING USE TO.

#### DEVICE FATAL ERRORS

-----

DEVICE FATAL ERRORS ARE A RESULT OF:

1. REACHING A DEVICE FATAL THRESHOLD LEVEL ('DFTL'). AN "DFTL" =1 WILL CAUSE 1 HARD ERROR TO BE CLASSIFIED A DEVICE FATAL ERROR. THIS LEVEL IS INITIALLY SET=1, BUT MAY BE MODIFIED BY THE OPERATOR.
2. AN ERROR THAT IS CONSIDERED FATAL TO THE DEVICE, BUT TESTING WILL CONTINUE.

#### HARD ERRORS

-----

HARD ERRORS ARE A RESULT OF:

1. TEN RETRIES OF A SOFT ERROR OR
2. A NON-RECOVERABLE ERROR

#### SOFT ERRORS

-----

SOFT ERRORS ARE MEDIA RELATED ERRORS AND IF RETRY ON ERROR IS SET WILL BE TRIED UP TO TEN TIMES THEN CLASSIFIED AS HARD ERRORS.

IF RETRY ON ERROR IS NOT SET THE ERROR WILL BE LOGGED AS BOTH SOFT AND HARD ERRORS.

### 3.1 WRITE ERROR

-----

A WRITE ERROR IS AN ERROR WHICH OCCURRED DURING EXECUTION OF A WRITE FUNCTION.

### READ ERROR

-----

A READ ERROR IS AN ERROR WHICH OCCURRED DURING EXECUTION OF A READ FUNCTION.

### 3.2 CRC ERROR

-----

THIS ERROR IS DETECTED BY THE DRIVE DURING A READ OPERATION AND ALSO BY THE PROGRAM IF A DATA CHECK IS PERFORMED.

### 3.3 NO CRC ERROR BUT DATA ERROR - BAD CRC

-----

### 3.4 CRC ERROR BUT NO DATA ERROR - BAD CRC

-----

THE ABOVE TWO ERRORS ARE DETECTED WHEN THE PROGRAM IS VERIFYING THE DATA READ OFF THE DISKETTE AGAINST THE DATA THAT SHOULD HAVE BEEN READ.

THE DATA PATTERNS WILL BE FORMATTED FOR DOUBLE DENSITY (SINGLE DENSITY) AS SHOWN.

#### BYTE #

0 <TRACK ADDRESS BITS 6 - 0>  
1 <SECTOR ADDRESS BITS 4 - 0>  
2 - 253 (125) CONTAIN SELECTED PATTERN.

254(126) <THE SUM OF ALL BYTES 0 - 253(125)>  
255(127) <THE NEGATIVE OF 2 TIMES BYTE 254(126)>

### 3.5 SEEK ERROR

-----

A SEEK ERROR CAN BE DETECTED VIA BYTE #0 IF A CRC, DATA, CHECKSUM ERROR HAS NOT OCCURRED. ALSO THE DRIVE MAY DETECT A SEEK ERROR IF THE DISKETTE HEADER IS NOT RECOGNIZED OR COULD NOT BE FOUND. A PROGRAMMED RECALIBRATE IS ISSUED TO TRY TO CORRECT EACH SEEK ERROR, IF SELECTED DURING PROGRAM DIALOG.

3.6 CHECKSUM ERROR

-----  
 THE PROGRAM WILL DETECT A CHECKSUM ERROR BY SUMMING ALL THE DATA READ FROM THE DISKETTE AND COMPARING THAT SUM WITH THE CHECKSUM BYTES. A CHECKSUM ERROR RESULTS FROM AN INCORRECT TRANSFER OF DATA INTERNAL TO THE RXV211 RX21/RX02 SUBSYSTEM.

3.7 ERROR NUMBERS

-----

ERROR	- TYPE	- ERR #
SEEK	- SOFT	- 0 -32
CRC	- SOFT	- 1 -33
CKSUM	- HARD	- -34
DATA	- SOFT	- 3 -35
DEL. DATA UNEX	- HARD	- -37
DEL. DATA MISSING	- HARD	- -38
UNK ERR	- HARD	- -40
FILL/EMPTY BUFFER	- HARD	- -41
READ	- SOFT	- 10-42
WRITE	- SOFT	- 11-43
INTER-BUT NO DONE	- HARD	- -44
DONE-BUT NO INTER	- HARD	- -45
ERR-BUT NO ERR BIT	- HARD	- -46
ERR BIT SET	- HARD	- -47

NO DONE ON INIT	- SYS FATAL	- 128
NO DONE ON FUNCTION	- DEV FATAL	- 65
NO DRIVE RDY	- DEV FATAL	- 66
NO SIDE RDY	- DEV FATAL	- 67
NO DONE AFTER RD STA	- DEV FATAL	- 68
WRG DRV RESPOND	- SYS FATAL	- 133
WRG SIDE RESPOND	- SYS FATAL	- 134
DISKETT WRG DEN	- DEV FATAL	- 73
DENSITY ERR	- DEV FATAL	- 74
T.O. ON "TR" OR "DONE"	- SYS FATAL	- 139
SYS ERR	- SYS FATAL	- 140
INITIALIZE ERROR	- DEV FATAL	- 200
ADDRESSING ERROR	- SYS FATAL	- 400

- NOTES: 1. SOFT ERRORS HAVE TWO ERROR NUMBERS:  
 LOW # = SOFT ERROR  
 HIGH # = HARD ERROR (RECLASSIFIED SOFT ERROR)
2. IF "EVL" FLAG IS SET HARD ERRORS WILL BE RECLASSIFIED DEVICE FATAL ERRORS, BUT THE ERROR NUMBER WILL REFLECT THE ORIGINAL HARD ERROR.

4.0 PERFORMANCE AND PROGRESS REPORTS

AT THE END OF EACH PASS A STATISTICAL REPORT WILL BE PRINTED OUT OF ALL ACCUMULATED ERRORS.

5.0 DEVICE INFORMATION TABLES

RX02 REGISTER BITS

	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
RXCS:	ERR	INT	XM	XM	RX2		SID	DEN	TR	IE	DON	DRV	FUN	FUN	FUN	GO
RXWC:	X	X	X	X	X	X	X	X								WORD COUNT
RXBA:	BUS ADDRESS															
RXES:	X	X	X	X	NXM	WC	SID	DRV	DRV	DEL	DSK	DEN	AC	INT	SID	CRC
						OVF	#1	#1	RDY	DAT	DEN	ERR	LOW	DON	RDY	
RXTA:	X	X	X	X	X	X	X	X	0							TRACK ADDRESS
RXSA:	X	X	X	X	X	X	X	X	0	0	0					SECTOR ADDRESS
RXDB:	DATA BUFFER															

READ ERROR CODE REGISTERS - (SEE LABEL "XERUUT")

WORD	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
#1	WORD COUNT								ERROR CODE							
#2	CURRENT TRACK DRV #1								CURRENT TRACK DRIVE #0							
#3	TARGET SECTOR								TARGET TRACK							
#4	BAD TRACK-ONLY VALID IF ERRCODE=150								UNT	DV1	HD	DVO	X	X	X	LCD
									SEL	DEN	LD	DEN				DEN

5.2 DEVICE PROTOCOL

RX02 FUNCTIONAL PROCESS

FUNCTION CODE BIT # 3 2 1	FUNCTION	PROCEDURE (PROTOCOL)
0 0 0	FILL BUFFER	FUNCTION WORD --->TR--->WC--->TR--->BA--->DONE
0 0 1	EMPTY BUFFER	FUNCTION WORD --->TR--->WC--->TR--->BA--->DONE
0 1 0	WRITE SECTOR	FUNCTION WORD --->TR--->SA--->TR--->TA--->DONE
0 1 1	READ SECTOR	FUNCTION WORD --->TR--->SA--->TR--->TA--->DONE
1 0 0	SET DENSITY	FUNCTION WORD --->TR--->VW--->DONE
1 0 1	READ MAINT. STATUS	FUNCTION WORD --->DONE
1 1 0	WRITE SECTOR WITH DELETED DATA	FUNCTION WORD --->TR--->SA--->TR--->TA--->DONE
1 1 1	READ ERROR CODE	FUNCTION WORD --->TR--->BA--->DONE

TR = WAIT FOR TR BIT  
 DONE = WAIT FOR DONE BIT  
 BA = BUS ADDRESS (OUTPUT TO RX)  
 VW = VERIFICATION WORD (OUTPUT TO RX)  
 WC = WORD COUNT (OUTPUT TO RX)  
 SA = SECTOR ADDRESS (OUTPUT TO RX)  
 TA = TRACK ADDRESS (OUTPUT TO RX)

6.0 TEST SUMMARIES

6.1 UNIT/DRIVE SELECTION

UNIT AND DRIVE SELECTION WILL BE ACCOMPLISHED BY MODIFYING HARDWARE P-TABLES DURING A START DIALOG.

## 6.2 DATA PATTERNS

-----

AVAILABLE DATA PATTERNS ARE SELECTED BY MODIFYING THE SOFTWARE P-TABLE DURING START OR RESTART DIALOG. DATA PATTERNS AVAILABLE ARE:

0 = DEFAULT TO 7  
1 = ZEROS  
2 = ONES  
3 = FLOATING ZERO  
4 = FLOATING ONE  
5 = 125  
6 = 333  
7 = RANDCM

## 6.3 EXERCISE OPTIONS

-----

AVAILABLE EXERCISES ARE SELECTED BY MODIFYING THE SOFTWARE P-TABLE DURING A START OR RESTART DIALOG. EXERCISES AVAILABLE ARE:

0 = DEFAULT TO 7  
1 = WRITE ONLY  
2 = WRITE/READ  
3 = WRITE/READ/DATA CHECK  
4 = READ/DATA CHECK ONLY  
5 = READ ONLY (CRC CHECK)  
6 = WRITE/READ/DATA CHECK ON ALTERNATING DRIVES (\*)  
7 = WRITE/READ/DATA CHECK +/-READ/DATA CHECK (\*\*)

(\*) TEST 6 WRITES THEN READ CHECKS ANY SELECTED DATA PATTERN USING ANY TRACK SEQUENCE, BUT ONE TRACK AT A TIME. FIRST ON DRIVE 0 THEN DRIVE WHEN BOTH UNIES HAVE ACCESSED THAT TRACK, IT GOES BACK TO UNIT 0 FOR THE NEXT TRACK, ETC.

(\*\*) THE FIRST HALF OF TEST 7 FORCES THE TRACK SEQUENCE TO INCREMENT UP THROUGH ALL TRACKS DOING WRITE/READ/DATA CHECK FUNCTIONS. THIS VERIFIES THAT ALL TRACKS ARE ACCESSABLE. THE SECOND HALF OF THE PASS WILL USE THE SEQUENCE SELECTED BY THE OPERATOR AS INDICATED BELOW, AND ONLY READ AND CHECK THE DATA JUST WRITTEN. THIS VERIFIES THAT THE DATA CAN BE READ FROM A TRACK AFTER THE HEAD HAS BEEN MOVED AWAY FROM AND BACK TO THAT TRACK. AT THE COMPLETION OF THE PASS THE DELETED DATA BIT IN TEST CONDITIONS IS COMPLEMENTED AND THE NEXT PASS WILL BE RUN UNDER THIS NEW CONDITION.

#### 6.4 TRACK SEQUENCING

-----

TRACK SEQUENCE OR TYPE OF HEAD MOVEMENT MAY BE SELECTED BY MODIFYING THE SOFTWARE P-TABLE OF THE DIAGNOSTIC SUPERVISOR. TRACK SEQUENCES AVAILABLE FOR SELECTION ARE:

- 0 = DEFAULT TO 7
- 1 = INCREMENT O.D. UP TO I.D.
- 2 = DECREMENT I.D. DOWN TO O.D.
- 3 = INCREMENT O.D., THEN DECREMENT I.D.
- 4 = BOUNCE BETWEEN O.D. AND I.D.
- 5 = BOUNCE BETWEEN DECREASING I.D. AND INCREASING O.D.
- 6 = BOUNCE BETWEEN O.D. AND DECREASING I.D.
- 7 = RANDOM

O.D. = OUTSIDE DIAMETER (TRACK)  
I.D. = INSIDE DIAMETER (TRACK)

#### 6.5 SECTOR/TRACK ADDRESSING

-----

IT WILL BE POSSIBLE TO TEST THE DISKETTES BETWEEN TRACK AND SECTOR ADDRESS LIMITS OTHER THAN BETWEEN THE NORMAL OUTER DIAMETER (OD) AND INNER DIAMETER (ID) TRACK ADDRESSES, AND/OR MINIMUM (FIRST) AND MAXIMUM (LAST) SECTOR ADDRESS, BY MODIFYING THE SOFTWARE P-TABLE DURING A START OR RESTART DIALOG.

#### 6.6 DISKETTE DENSITY

-----

ALL TESTS WILL RUN AT DOUBLE DENSITY UNLESS SELECTED AS SINGLE DENSITY DURING A START OR RESTART DIALOG.

#### 6.7 PROGRAM CONTROL

-----

BEHAVIOR OF THE PERFORMANCE EXERCISOR MAYBE MODIFIED BY USE OF THE FOLLOWING PROGRAM CONTROLS:

- |   |                        |
|---|------------------------|
| 1. HALT ON ERROR                        | PROVIDED BY SUPERVISOR |
| 2. HALT AT END OF PASS                  | PROVIDED BY SUPERVISOR |
| 3. DON'T PRINT ERROR MESSAGE            | PROVIDED BY SUPERVISOR |
| 4. RETRY ON ERROR. LOG HARD/SOFT ERRORS | SOFTWARE P-TABLE       |
| 5. RECALIBRATE ON SEEK ERRORS           | SOFTWARE P-TABLE       |

<FF>

#### 7.0 HISTORY FILE

THIS DIAGNOSTIC HAS BEEN MODIFIED TO RUN IN SBC-11/21 PROCESSOR FROM CZF.XDBO SS PERF EXER.

#### 8.0 LISTING INDEX

-----



17-	768	PROGRAM HEADER
17-	837	DISPATCH TABLE
19-	854	DEFAULT HARDWARE P-TABLE
19-	880	SOFTWARE P-TABLE
20-	924	GLOBAL EQUATES SECTION
22-	1076	GLOBAL DATA SECTION
26-	1194	GLOBAL TEXT SECTION
28-	1233	GLOBAL ERROR REPORT SECTION
28-	1241	- MOD U.SFT.ERR - ERROR REPORT
28-	1251	- MOD U.PRT.ERR - PRINT ERRORS
30-	1274	- MOD U.PRT.EC - PRINT UNIT ERROR CODE
32-	1342	- ERROR PRINT CALLS/MSG CALLS
34-	1375	GLOBAL SUBROUTINES SECTION
34-	1454	- MOD U.1.0 - RANDOM GENERATOR
36-	1480	- MOD U.A.1 - CONVERSION UUT CODE --> SUTPTR
36-	1504	- MOD U.A.2 - CONVERSION SUTPTR --> UUT CODE
38-	1525	- MOD U.DEV.REC - DEVICE READ ERROR CODE
39-	1564	REPORT CODING SECTION
41-	1653	- PRINT REPORT HEADER
41-	1674	- PRINT REPORT DATA
43-	1707	- PRINT READ/WRITE SECTOR COUNTERS
45-	1738	- PRINT REPORT TYPE 1
45-	1750	- PRINT REPORT TYPE 2
45-	1760	- PRINT REPORT TYPE 3
49-	1827	- STATISTICAL TABLES
49-	1870	LOAD DEVICE PROTECTION
51-	1881	INITIALIZE SECTION
53-	1958	- MOD I.1 - UNPACK HARDWARE P-TABLES
55-	2047	CLEANUP CODING SECTION
57-	2084	AUTO DROP SECTION
59-	2131	- TEST 0: ADDRESSING TEST
61-	2174	- MOD U.SFT.TRP - BUS TRAP HANDLER
63-	2194	DROP UNIT SECTION
65-	2251	ADD UNIT SECTION
67-	2285	TEST 1: RX02 SS PERF EXERCISER
67-	2289	MOD 0.0 - EXERCISE A SYSTEM
70-	2385	MOD 1.0 - GET SYSTEM EXERCISE
70-	2404	MOD 1.1 - GET EXERCISE CONDITIONS
72-	2433	MOD 1.2 - GET SYSTEM TO EXERCISE
72-	2500	- MOD 1.2.U.1 - GET PRINTABLE SYSTEM 0 UNIT #
72-	2517	- MOD 1.2.U.2 - GET PRINTABLE SYSTEM 1 UNIT #
74-	2531	MOD 1.2.1 - CK DRIVE AVAILABLE
78-	2603	MOD 1.2.1.1 - REFORMAT DRIVE DENSITY
80-	2685	- MOD 1.2.U.3 - INITIALIZE ERROR
80-	2698	- MOD 1.2.U.4 - INITIALIZE DROP
80-	2705	- MOD 1.2.U.5 - INITIALIZE PRINT
82-	2740	MOD 1.3 - GET EXERCISE

84-	2760	MOD 1.3.1 - SET DATA PATTERN
86-	2866	MOD 1.3.2 - SET TRACK SEQUENCE
86-	3015	MOD 1.3.3 - CLEAR STATISTICAL TABLES
88-	3029	MOD 2.0 - SCHEDULE SYSTEM EXERCISE
90-	3133	MOD 2.1 - GET A TEST
92-	3240	- EXERCISE/TEST TABLE
94-	3298	MOD 2.2 - GET A DRIVE
96-	3337	MOD 2.3 - EXECUTE DRIVE TEST
100-	3461	MOD 2.3.1 - GET A SECTOR
100-	3550	MOD 2.3.1.A - SET SECTOR DONE
102-	3562	MOD 2.3.2 - GET A TRACK
106-	3634	MOD 2.3.3 - GET A DRIVE FUNCTION
108-	3668	MOD 2.3.4 - OUTPUT DRIVE FUNCTION
108-	3743	MOD 2.3.4.1 - OUTPUT SINGLE WORD
110-	3757	MOD U.2.3.4 - WATCH DOG TIMER
110-	3787	MOD U.2.3/4 DELAY
112-	3815	MOD 2.4 - EVALUATE TEST RESULTS
114-	3833	MOD 2.4.1 - EVALUATE DATA
116-	3915	MOD 2.4.2 - EVALUATE DRIVE STATE
118-	4032	MOD 2.4.2.1 - EVALUATE DPIPE RESPONSE
120-	4065	MOD 2.4.3 - UPDATE DRIVE STATISTICS
122-	4178	MOD 2.4.3.1 - UPDATE HARD ERROR STATISTICS
122-	4193	MOD 2.4.3.2 - UPDATE CRC STATISTICS
124-	4222	MOD 2.4.3.3 - UPDATE SOFT ERROR STATISTICS
126-	4251	MOD 2.4.3.4 - UPDATE SECTOR WRITTEN/READ COUNTERS
128-	4284	- MOD 2.4.U.1 - SOFT ERROR LOGGER
130-	4317	MOD 2.4.4 - EVALUATE UNIT ERROR CODE
132-	4375	MOD 2.5 - OUTPUT ERROR TYPE
134-	4490	MOD 2.5.1 - PRINT RETRY
136-	4544	MOD 2.6 - SET DRIVES DONE
138-	4569	MOD 3.0 - OUTPUT EXERCISE COMPLETE
140-	4579	MOD 4.0 - OUTPUT SYSTEM ERROR
144-	4680	- MOD INTR.1 - INTERRUPT HANDLER #0
144-	4687	- MOD INTR.2 - INTERRUPT HANDLER #1
144-	4694	MOD U.INTR.U - SAVE UNIT REG
144-	4705	- READ ERROR CODE BUFFER
144-	4717	- TRACK TABLE
144-	4724	- DATA BUFFERS
146-	4748	HARDWARE PARAMETER CODING SECTION
148-	4824	SOFTWARE PARAMETER CODING SECTION
152-	4930	- PATCH AREA

## 7.1 LISTING

PROGRAM HEADER AND TABLES

MACRO M1200 15-DEC-82 13:50 PAGE 16

771  
772  
806  
808  
809  
811  
812 002000  
813  
814  
815  
816  
817  
818  
819 002000  
820  
828  
829 002000  
830  
836  
837 002122  
838  
839  
840  
841  
842  
843  
844  
845  
846  
847  
848 002152  
849

.TITLE PROGRAM HEADER AND TABLES  
.SBTTL PROGRAM HEADER

.ENABL ABS,AMA  
= 2000

002000

BGNMOD

::++  
: THE PROGRAM HEADER IS THE INTERFACE BETWEEN  
: THE DIAGNOSTIC PROGRAM AND THE SUPERVISOR.  
:--

POINTER BGNRPT,BGNSW,BGNSFT,BGNAU,BGNDU,ERRTBL,BGNSETUP

HEADER CNRXDA0,0,0,2100,1

-----  
DESCRPT ^SRX02 SS PERF EXER \$  
.EVEN  
-----

.SBTTL DISPATCH TABLE

::++  
: THE DISPATCH TABLE CONTAINS THE STARTING ADDRESS OF EACH TEST.  
: IT IS USED BY THE SUPERVISOR TO DISPATCH TO EACH TEST.  
:--

DISPATCH 1

PROGRAM HEADER AND TABLES  
DEFAULT HARDWARE P-TABLE

MACRO M1200 15-DEC-82 13:50 PAGE 18

```

858          .SBTTL  DEFAULT HARDWARE P-TABLE
859
860          :++
861          : THE DEFAULT HARDWARE P-TABLE CONTAINS DEFAULT VALUES OF
862          : THE TEST-DEVICE PARAMETERS.  THE STRUCTURE OF THIS TABLE
863          : IS IDENTICAL TO THE STRUCTURE OF THE RUN-TIME P-TABLE.
864          :--
865
866 002156          BGNHW  DFPTBL
867
868 002160 177170    .WORD  177170    ;UNIBUS ADDRESS
869 002162 000264    .WORD  264      ;VECTOR ADDRESS
870 002164 000000    .WORD  0        ;DRIVE #
871 002166 000000    .WORD  0        ;FUTURE EXPANSION
872
873
874
875
876
877
878
879 002170          ENDDHW
880
881
882
883
884          .SBTTL  SOFTWARE P-TABLE
885
886          :++
887          : THE SOFTWARE P-TABLE CONTAINS THE VALUES OF THE PROGRAM
888          : PARAMETERS THAT CAN BE CHANGED BY THE OPERATOR.
889          :--
890
891          BGNBW  SFPTBL
892
893 002172 000000    RXXX:  .WORD  0        ;FUTURE EXPANSION-R.
894 002174 000000    .WORD  0        ;P-TABLE CONTROL WORD
895 002176 000000    TSTN:  .WORD  0        ;TEST #
896 002200 000000    TSTPAT: .WORD  0        ;TEST PATTERN #
897 002202 000000    TRKSEQ: .WORD  0        ;TRACK SEQUENCE #
898 002204 000021    SWREG:  .WORD  21       ;SOFTWARE SWITCH REG
899 002206 000000    OTDITK: .WORD  0        ;OUTSIDE DIA. TRACK LIMIT
900 002210 000114    INDITK: .WORD  114      ;INSIDE DIA. TRACK LIMIT.
901 002212 000001    MINSEC: .WORD  1        ;MINIMUM SECTOR LIMIT
902 002214 000032    MAXSEC: .WORD  32       ;MAXIMUM SECTOR LIMIT
903 002216 000001    DFTL:  .WORD  1        ;DEVICE FATAL THRESHOLD LVL
904
905
906
907
908
909
910
911
912 002220          ENDSW
913
914 002220          ENDMOD

```

GLOBAL AREAS MACRO M1200 15-DEC-82 13:50 PAGE 19  
SOFTWARE P-TABLE

927  
928  
965  
975  
976 002220  
977  
978  
979  
980  
981  
982  
983 002220

.TITLE GLOBAL AREAS  
.SBTTL GLOBAL EQUATES SECTION

BGNMOD

::+  
: THE GLOBAL EQUATES SECTION CONTAINS PROGRAM EQUATES THAT  
: ARE USED IN MORE THAN ONE TEST.  
:--

EQUALS

: BIT DEFINITIONS

100000	BIT15== 100000
040000	BIT14== 40000
020000	BIT13== 20000
010000	BIT12== 10000
004000	BIT11== 4000
002000	BIT10== 2000
001000	BIT09== 1000
000400	BIT08== 400
000200	BIT07== 200
000100	BIT06== 100
000040	BIT05== 40
000020	BIT04== 20
000010	BIT03== 10
000004	BIT02== 4
000002	BIT01== 2
000001	BIT00== 1

001000	BIT9== BIT09
000400	BIT8== BIT08
000200	BIT7== BIT07
000100	BIT6== BIT06
000040	BIT5== BIT05
000020	BIT4== BIT04
000010	BIT3== BIT03
000004	BIT2== BIT02
000002	BIT1== BIT01
000001	BIT0== BIT00

: EVENT FLAG DEFINITIONS

EF32:EF17 RESERVED FOR SUPERVISOR TO PROGRAM COMMUNICATION

000040	EF.START== 32.	: BIT POSITION IN SECOND STATUS WORD
000037	EF.RESTART== 31.	: (100000) START COMMAND WAS ISSUED
000036	EF.CONTINUE== 30.	: (040000) RESTART COMMAND WAS ISSUED
000035	EF.NEW== 29.	: (020000) CONTINUE COMMAND WAS ISSUED
000034	EF.PWR== 28.	: (010000) A NEW PASS HAS BEEN STARTED
		: (004000) A POWER-FAIL/POWER-UP OCCURRED

: PRIORITY LEVEL DEFINITIONS

000340 PRI07== 340

GLOBAL AREAS MACRO M1200 15-DEC-82 13:50 PAGE 19-1  
GLOBAL EQUATES SECTION

000300	PRI06==	300
000240	PRI05==	240
000200	PRI04==	200
000140	PRI03==	140
000100	PRI02==	100
000040	PRI01==	40
000000	PRI00==	0

.; OPERATOR FLAG BITS

000004	EVL==	4
000010	LOT==	10
000020	ADR==	20
000040	IDU==	40
000100	ISR==	100
000200	UAM==	200
000400	BOE==	400
001000	PNT==	1000
002000	PRI==	2000
004000	IXE==	4000
010000	IBE==	10000
020000	IER==	20000
040000	LOE==	40000
100000	HOE==	100000

984  
985  
986  
987  
988  
989  
990  
991  
992  
993  
994  
995  
996  
997  
998  
999  
1000  
1001  
1002  
1003  
1004  
1005  
1006  
1007  
1008  
1009  
1010  
1011  
1012  
1013  
1014  
1015  
1016

.; BIT DEFINITIONS

100000	BIT15==	100000
040000	BIT14==	40000
020000	BIT13==	20000
010000	BIT12==	10000
004000	BIT11==	4000
002000	BIT10==	2000
001000	BIT09==	1000
000400	BIT08==	400
000200	BIT07==	200
000100	BIT06==	100
000040	BIT15==	40
000020	BIT04==	20
000010	BIT03==	10
000004	BIT02==	4
000002	BIT01==	2
000001	BIT00==	1

BIT9==	BIT09
BIT8==	BIT08
BIT7==	BIT07
BIT6==	BIT06
BIT5==	BIT05
BIT4==	BIT04
BIT3==	BIT03
BIT2==	BIT02
BIT1==	BIT01
BIT0==	BIT00

.; EVENT FLAG DEFINITIONS

GLOBAL AREAS MACRO M1200 15-DEC-82 13:50 PAGE 19-2  
GLOBAL EQUATES SECTION

```

1017      :           EF32:EF17
1018      :           EF16:EF01
1019      000040      EF.START==      32.
1020      000037      EF.RESTART==     31.
1021      000036      EF.CONTINUE==    30.
1022      000035      EF.NEW==         29.
1023      000034      EF.PWR==         28.
1024      :
1025      000020      EF16==      16.
1026      000017      EF15==      15.
1027      000016      EF14==      14.
1028      000015      EF13==      13.
1029      000014      EF12==      12.
1030      000013      EF11==      11.
1031      000012      EF10==      10.
1032      000011      EF09==       9.
1033      000010      EF08==       8.
1034      000007      EF07==       7.
1035      000006      EF06==       6.
1036      000005      EF05==       5.
1037      000004      EF04==       4.
1038      000003      EF03==       3.
1039      000002      EF02==       2.
1040      000001      EF01==       1.
1041      :
1042      :PRIORITY LEVEL DEFINITIONS
1043      :
1044      000340      PRI07==  340
1045      000300      PRI06==  300
1046      000240      PRI05==  240
1047      000200      PRI04==  200
1048      000140      PRI03==  140
1049      000100      PRI02==  100
1050      000040      PRI01==   40
1051      000000      PRI00==   0
1052      :
1053      :PROGRAM DEFINITIONS
1054      :
1055      000200      TRBIT==200
1056      000040      DNBIT==40
1057      004000      RX2BIT==BIT11
1058      000003      SOFT==3
1059      000002      HARD==2
1060      000001      DVFT==1
1061      000000      SYFT==0
1062      000004      BTRP4==4
1063      000006      BTRP6==6
1064      000002      RESTAR==BIT1
1065      000001      POWERF==BIT0
1066      004000      SYSERR==BIT11

```

```

RESERVED FOR SUPERVISOR TO PROGRAM COMMUNICATION
AVAILABLE FOR PROGRAM USE
:START COMMAND WAS ISSUED.
:RESTART COMMAND WAS ISSUED.
:CONTINUE COMMAND WAS ISSUED.
:A NEW PASS HAS BEEN STARTED.
:A POWER FAIL/POWER-UP OCCURRED

```

GLOBAL AREAS MACRO M1200 15-DEC-82 13:50 PAGE 21  
 GLOBAL DATA SECTION

```

1080      .SBTTL GLOBAL DATA SECTION
1081
1082      :++
1083      : THE GLOBAL DATA SECTION CONTAINS DATA THAT ARE USED
1084      : IN MORE THAN ONE TEST.
1085      :--
1086
1087      :
1088      : STORAGE FOR DEVICE REGISTERS
1089      :
1090
1091      :-----
1092 002220 000000 UOADR: .WORD 0 ;UNIT 0 ADR
1093 002222 000000 U1ADR: .WORD 0 ;UNIT 1 ADR
1094 002224 000000 UOVECT: .WORD 0 ;UNIT 0 VECTOR
1095 002226 000000 U1VECT: .WORD 0 ;UNIT 1 VECTOR
1096      :-----
1097 002230 000000 SDD: .WORD 0 ;SYSTEM DRIVES DONE (SEE REG. DEF. BELOW)
1098 002232 000000 SUT: .WORD 0 ;SYSTEM UNDER TEST (SEE REG. DEF. BELOW)
1099 002234 000000 UUT: .WORD 0 ;UNIT UNDER TEST (SEE REG. DEF. BELOW)
1100 002236 000000 UUTADR: .WORD 0 ;UUT UNIBUS ADR
1101 002240 000000 UUTOFF: .WORD 0 ;UUT TABLE ADDRESSING OFFSET
1102 002242 000000 DEN: .WORD 0 ;DENSITY FLAG
1103 002244 000000 DELDAT: .WORD 0 ;DELETED DATA FLAG
1104 002246 000000 CSRUIT: .WORD 0 ;CONT/STATUS REG UUT
1105 002250 000000 ESRUIT: .WORD 0 ;ERROR/STATUS REG UUT
1106      :-----
1107 002252 000000 WDCNT: .WORD 0 ;WORD COUNT
1108 002254 000000 TRACK: .WORD 0 ;TRACK ADR
1109 002256 000000 SECTOR: .WORD 0 ;SECTOR ADR
1110 002260 000000 TRKDN: .WORD 0 ;TRACK DONE (UUT) FLAG
1111 002262 000000 SECDN: .WORD 0 ;SECTOR DONE (UUT) FLAG
1112      :-----
1113 002264 000000 FLGDRS: .WORD 0 ;"DRS" FLAGS
1114 002266 000000 FLAGS: .WORD 0 ;DIAGNOSTIC FLAGS
1115 002270 000000 ABORT: .WORD 0 ;ABORT FLAG
1116 002272 000000 PRTECD: .WORD 0 ;PRINT ERR CODE FLAG
1117      :-----
1118 002274 000000 ERRSY: .WORD 0 ;ERROR SYSTEM
1119 002276 000000 ERRTY: .WORD 0 ;ERROR TYPE
1120 002300 000000 HARDER: .WORD 0 ;HARD ERROR
1121 002302 000000 HDERCT: .WORD 0 ;HARD ERROR COUNTER (USED FOR "DFTL")
1122      :-----
1123 002304 000000 RETRY: .WORD 0 ;//(10)DATART/(4)RDRT/(2)WTRT/(1)SEEN/ SEE BELOW
1124 002306 000000 SEEKRT: .WORD 0 ;SEEK RETRY COUNT
1125 002310 000000 CKSMRT: .WORD 0 ;CHECK SUM RETRY COUNT
1126 002312 000000 CRCBRT: .WORD 0 ;CRC BAD RETRY COUNT
1127 002314 000000 CRCERT: .WORD 0 ;CRC ERR RETRY COUNT
1128 002316 000000 DATART: .WORD 0 ;DATA RETRY COUNT
1129 002320 000000 DARDRT: .WORD 0 ;DATA READ RETRY COUNT
1130 002322 000000 DAWTRT: .WORD 0 ;DATA WRITE RETRY COUNT
1131 002324 000000 READRT: .WORD 0 ;READ RETRY COUNT
1132 002326 000000 WRTRT: .WORD 0 ;WRITE RETRY COUNT
1133 002330 000000 DDERCT: .WORD 0 ;D.D. ERR RETRY COUNT
1134      :-----

```



1137  
1138 002332 000000  
1139 002334 177777  
1140 002336 177777  
1141 002340 177777  
1142 002342 177777  
1143 002344 177777

```
-----
CMD: 0 ;COMMAND FOR PRINT
UNIT: -1 ;UNIT # FOR PRINT
UT00: -1 ;**** UUT CODE# TABLE ****
UT01: -1 ;>STORAGE OF USER UNIT #
UT10: -1 ;FOR PRINT OUT, LOOKUP
UT11: -1 ;& STATISTICAL TABLE PRINT
-----
```

1144  
1145  
1146  
1147  
1148  
1149  
1150  
1151  
1152  
1153

```
-----
***** SOFTWARE REGISTER DEFINITIONS *****
-----
| BIT#
| 03! 02! 01! 00
+-----+
SDD: | 11! 10! 01! 00! <- UUT CODES-EQUIV TO A BIT SET IN THIS REG
& | | | | -THAT IS UUT=00 IS SDD BIT#0 SET
SUT: | 11! 10! 01! 00! <- UUT CODES-
+-----+
-----
```

1154  
1155  
1156  
1157  
1158  
1159  
1160  
1161  
1162  
1163

```
-----
| RX02 | RXXX-FUTURE EXPANSION
+-----+
UUT: | 00 = UNIT#0/DRV#0 | SIDE#0/DRV#0
| 01 = UNIT#0/DRV#1 | SIDE#0/DRV#1
| 10 = UNIT#1/DRV#0 | SIDE#1/DRV#0
| 11 = UNIT#1/DRV#1 | SIDE#1/DRV#1
+-----+
-----
```

1164  
1165  
1166  
1167

```
-----
| <DRIVE #
| <UNIT # (RX02) OR SIDE # (RXXX)
+-----+
-----
```

1168  
1169  
1170  
1171  
1172  
1173  
1174  
1175  
1176  
1177  
1178  
1179  
1180

```
-----
| 15! 14! 13! 12! 11! 10! 09! 08! 07! 06! 05! 04! 03! 02! 01! 00
+-----+
ERRTY: | ERR!ERR!DON!ITR!WRT!RD!FIL!UNK! - DD DD - DAT CK
| BIT!NOT!NO!NO!ERR!ERR!EMP!ERR! - MIS UNX - DAT SUM CRC SEK
| SET!ITR!DON! | ERR! | | | |
+-----+
ERRSY: | UNR! TO!DEN!DEN!SYS!DAG! - WRONG!DON!SID!DRV!NO!DONE! FUNCTION
| ERR!ERR!ERR!ERR!ERR!ERR!SID!DRV! #2!ERR!ERR!FUN!INT! CAUSING
+-----+
RETRY: | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | |
+-----+
-----
```

1181  
1182

```
-----
;NOTE: RXXX IS REFERENCE FOR FURTHER EXPANSION
-----
```

GLOBAL AREAS MACRO M1200 15-DEC-82 13:50 PAGE 25  
GLOBAL TEXT SECTION

```
1198 .SBTTL GLOBAL TEXT SECTION
1199
1200 :++
1201 : THE GLOBAL TEXT SECTION CONTAINS FORMAT STATEMENTS,
1202 : MESSAGES, AND ASCII INFORMATION THAT ARE USED IN
1203 : MORE THAN ONE TEST.
1204 :--
1205
1206 :
1207 : NAMES OF DEVICES SUPPORTED BY PROGRAM
1208 :
1209 002346 DEVTYP <RX02>
1215
1216 :
1217 : FORMAT STATEMENTS USED IN PRINT CALLS
1218 :
1219
1226
1227
```

GLOBAL AREAS MACRO M1200 15-DEC-82 13:50 PAGE 27  
 GLOBAL ERROR REPORT SECTION

```

1237 .SBTTL GLOBAL ERROR REPORT SECTION
1238
1239 :++
1240 : THE GLOBAL ERROR REPORT SECTION CONTAINS THE PRINTB AND PRINTX CALLS
1241 : THAT ARE USED IN MORE THAN ONE TEST. IT ALSO INCLUDES THE ASCII MESSAGES
1242 : THAT ARE USED BY THE PRINTB AND PRINTX CALLS..
1243 :--
1244
1245 .SBTTL - MOD U.SFT.ERR - ERROR REPORT
1246 -----
1247 002354 012737 004506 002402 ERROR: MOV #NONE,ERRBLK ;SETUP ERROR BLOCK CODE
1248 002362 013737 002334 002074 MOV UNIT,L$LUN ;SETUP LUN FOR PRINT
1249 002370 ERROR ;
1250 002372 000207 RETURN ;
1251 :-----
1252 002374 ERRTBL
1253 002374 000000 ERRTP:: .WORD 0
1254 002376 000000 ERRNBR:: .WORD 0
1255 002400 000000 ERRMSG:: .WORD 0
1256 002402 000000 ERRBLK:: .WORD 0
1257 :-----
1258 .SBTTL - MOD U.PRT.ERR - PRINT ERRORS
1259 :-----
1260 PRERR: PRINTB #IDENT1,UNIT,CSRUT,ESRUT,CMD
1261 IFAUP: TST PRTECD ;IF ERR CODE FLAG
1262 BEQ ENDUP ;SET, THEN
1263 PRINTX #XER1,<B,XERUT>,<B,WC>,<B,CTK0>,<B,CTK1>
1264 PRINTX #XER2,<B,TTRK>,<B,TSEC>,<B,SFTSTS>,<B,BTRK>
1265 CLR PRTECD ;CLEAR ERR CODE FLAG
1266 ENDUP: CLR ERRREG ;CLEAR ERR REGISTER
1267 RTS PC ;RETURN
1268 :-----
1269 ERRREG: 0 ;
1270 :-----
1271 IDENT1: .ASCIZ /% UNIT#%01% RXCSR=%0% RXESR=%0% CMD=%0%N/
1272 XER1: .ASCIZ /% ERCD=%03% WC=%03% CTRK0=%D2%. CTRK1=%D2%. /
1273 XER2: .ASCIZ /% TTRK=%D2%. TSEC=%D2%. SFTSTAT=%03% BTRK=%D2%.%N/
1274 .EVEN
;MOD U.PRT.ERR ----- END MODULE -----
    
```

GLOBAL AREAS MACRO M1200 15-DEC-82 13:50 PAGE 29  
 - MOD U.PRT.ERR - PRINT ERRORS

```

1277
1278
1279
1280
1281 003034 105737 033544
1282 003040 001424
1283 003042 013701 033544
1284 003046 042701 177400
1285 003052 006201
1286 003054 006201
1287 003056 062701 003114
1288 003062 011137 003114
1289 003066
1290 003106 105037 033544
1291 003112 000207
1292
1293
1294 003114 000000
1295
1296
1297 003116 003170
1298 003120 003236
1299 003122 003304
1300 003124 003332
1301 003126 003400
1302 003130 003451
1303 003132 003477
1304 003134 003555
1305 003136 003603
1306 003140 003660
1307 003142 003714
1308 003144 003773
1309 003146 004021
1310 003150 004107
1311 003152 004153
1312 003154 004207
1313 003156 004254
1314 003160 004311
1315 003162 004360
1316 003164 004413
1317 003166 004442
1318

.SBTTL - MOD U.PRT.EC - PRINT UNIT ERROR CODE
-----
XERPR: TSTB XERUUT ;IF ERROR
        BEQ  ENDXER ;NOT=0, THEN
        MOV  XERUUT,R1 ;SAVE EXTENDED ERR CODE IN TEMP #1
        BIC  #177400,R1 ;CLR TOP BYTE
        ASR  R1 ;FORMAT E.C.
        ASR  R1 ;FORMAT E.C. FOR ADR
        ADD  #ECTAB-2,R1 ;FIND ADR OF ERROR MSG
        MOV  (R1),EXMSG ;SET ADR OF ERROR MSG FOR PRINT
        PRINTX EXMSG ;PRINT UNIT CODE ERROR MSG
        CLRB XERUUT ;CLEAR ERROR CODE
ENDXER: RTS PC ;RETURN
-----
EXMSG: 0 ;MSG ADR FOR PRINT
-----
ECTAB: .WORD EC1
        .WORD EC2
        .WORD EC3
        .WORD EC4
        .WORD EC5
        .WORD EC6
        .WORD EC7
        .WORD EC10
        .WORD EC11
        .WORD EC12
        .WORD EC13
        .WORD EC14
        .WORD EC15
        .WORD EC16
        .WORD EC17
        .WORD EC20
        .WORD EC21
        .WORD EC22
        .WORD EC23
        .WORD EC24
        .WORD EC25
-----

```

```

1321
1322 003170      045      101      040  EC1:  .ASCIZ  /%A  >NO HOME ON INITIALIZE-DRV #0.%N/
1323 003236      045      101      040  EC2:  .ASCIZ  /%A  >NO HOME ON INITIALIZE-DRV #1.%N/
1324 003304      045      101      040  EC3:  .ASCIZ  /%A  >ILL ERR CODE.%N/
1325 003332      045      101      040  EC4:  .ASCIZ  /%A  >TRIED TO ACCESS A TRACK > 76.%N/
1326 003400      045      101      040  EC5:  .ASCIZ  /%A  >HOME FOUND BEFORE DESIRED TRACK.%N/
1327 003451      045      101      040  EC6:  .ASCIZ  /%A  >ILL ERR CODE.%N/
1328 003477      045      101      040  EC7:  .ASCIZ  /%A  >52 HEADERS PASSED & SECTOR NOT FOUND.%N/
1329 003555      045      101      040  EC10: .ASCIZ  /%A  >ILL ERR CODE.%N/
1330 003603      045      101      040  EC11: .ASCIZ  /%A  >NO SEPCLOCK SEEN IN 40 MICROSECONDS.%N/
1331 003660      045      101      040  EC12: .ASCIZ  /%A  >PREAMBLE NOT FOUND.%N/
1332 003714      045      101      040  EC13: .ASCIZ  /%A  >PREAMBLE FOUND BUT NO ID MARK IN TIME.%N/
1333 003773      045      101      040  EC14: .ASCIZ  /%A  >ILL ERR CODE.%N/
1334 004021      045      101      040  EC15: .ASCIZ  /%A  >GOOD TRACK ADDRESS HEADER NOT=SELECTED TRACK.%N/
1335 004107      045      101      040  EC16: .ASCIZ  /%A  >TOO MANY TRIES FOR AN IDAM.%N/
1336 004153      045      101      040  EC17: .ASCIZ  /%A  >NO DATA AM IN TIME.%N/
1337 004207      045      101      040  EC20: .ASCIZ  /%A  >CRC ERROR ON READING SECTOR.%N/
1338 004254      045      101      040  EC21: .ASCIZ  /%A  >UNASSIGNED ERR CODE.%N/
1339 004311      045      101      040  EC22: .ASCIZ  /%A  >R-W ELECT. FAILED MAINT. TEST.%N/
1340 004360      045      101      040  EC23: .ASCIZ  /%A  >WORD CNT OVERFLOW.%N/
1341 004413      045      101      040  EC24: .ASCIZ  /%A  >DENSITY ERROR.%N/
1342 004442      045      101      040  EC25: .ASCIZ  /%A  >SET DENSITY WRONG KEY WORD.%N/
1343
1344
1345
1346 .SBTTL - ERROR PRINT CALLS/MSG CALLS
1347
1348 004506      BGNMSG  NONE
1349 004506      ENDMSG
1350
1351
1352
1353
1354
1355
1356
1357
1358
1359
1360
1361
1362
1363
1364
1365
1366
1367 004510      BGNMSG  PRTB1
1368 004510      004737  004536  CALL    PRTB1S
1369 004514      ENDMSG
1370
1371
1372
1373
1374
1375
1376
1377
1378
1379
1380
1381
1382
1383
1384
1385
1386
1387
1388
1389
1390
1391
1392
1393
1394
1395
1396
1397
1398
1399
1400
1401
1402
1403
1404
1405
1406
1407
1408
1409
1410
1411
1412
1413
1414
1415
1416
1417
1418
1419
1420
1421
1422
1423
1424
1425
1426
1427
1428
1429
1430
1431
1432
1433
1434
1435
1436
1437
1438
1439
1440
1441
1442
1443
1444
1445
1446
1447
1448
1449
1450
1451
1452
1453
1454
1455
1456
1457
1458
1459
1460
1461
1462
1463
1464
1465
1466
1467
1468
1469
1470
1471
1472
1473
1474
1475
1476
1477
1478
1479
1480
1481
1482
1483
1484
1485
1486
1487
1488
1489
1490
1491
1492
1493
1494
1495
1496
1497
1498
1499
1500
1501
1502
1503
1504
1505
1506
1507
1508
1509
1510
1511
1512
1513
1514
1515
1516
1517
1518
1519
1520
1521
1522
1523
1524
1525
1526
1527
1528
1529
1530
1531
1532
1533
1534
1535
1536
1537
1538
1539
1540
1541
1542
1543
1544
1545
1546
1547
1548
1549
1550
1551
1552
1553
1554
1555
1556
1557
1558
1559
1560
1561
1562
1563
1564
1565
1566
1567
1568
1569
1570
1571
1572
1573
1574
1575
1576
1577
1578
1579
1580
1581
1582
1583
1584
1585
1586
1587
1588
1589
1590
1591
1592
1593
1594
1595
1596
1597
1598
1599
1600
1601
1602
1603
1604
1605
1606
1607
1608
1609
1610
1611
1612
1613
1614
1615
1616
1617
1618
1619
1620
1621
1622
1623
1624
1625
1626
1627
1628
1629
1630
1631
1632
1633
1634
1635
1636
1637
1638
1639
1640
1641
1642
1643
1644
1645
1646
1647
1648
1649
1650
1651
1652
1653
1654
1655
1656
1657
1658
1659
1660
1661
1662
1663
1664
1665
1666
1667
1668
1669
1670
1671
1672
1673
1674
1675
1676
1677
1678
1679
1680
1681
1682
1683
1684
1685
1686
1687
1688
1689
1690
1691
1692
1693
1694
1695
1696
1697
1698
1699
1700
1701
1702
1703
1704
1705
1706
1707
1708
1709
1710
1711
1712
1713
1714
1715
1716
1717
1718
1719
1720
1721
1722
1723
1724
1725
1726
1727
1728
1729
1730
1731
1732
1733
1734
1735
1736
1737
1738
1739
1740
1741
1742
1743
1744
1745
1746
1747
1748
1749
1750
1751
1752
1753
1754
1755
1756
1757
1758
1759
1760
1761
1762
1763
1764
1765
1766
1767
1768
1769
1770
1771
1772
1773
1774
1775
1776
1777
1778
1779
1780
1781
1782
1783
1784
1785
1786
1787
1788
1789
1790
1791
1792
1793
1794
1795
1796
1797
1798
1799
1800
1801
1802
1803
1804
1805
1806
1807
1808
1809
1810
1811
1812
1813
1814
1815
1816
1817
1818
1819
1820
1821
1822
1823
1824
1825
1826
1827
1828
1829
1830
1831
1832
1833
1834
1835
1836
1837
1838
1839
1840
1841
1842
1843
1844
1845
1846
1847
1848
1849
1850
1851
1852
1853
1854
1855
1856
1857
1858
1859
1860
1861
1862
1863
1864
1865
1866
1867
1868
1869
1870
1871
1872
1873
1874
1875
1876
1877
1878
1879
1880
1881
1882
1883
1884
1885
1886
1887
1888
1889
1890
1891
1892
1893
1894
1895
1896
1897
1898
1899
1900
1901
1902
1903
1904
1905
1906
1907
1908
1909
1910
1911
1912
1913
1914
1915
1916
1917
1918
1919
1920
1921
1922
1923
1924
1925
1926
1927
1928
1929
1930
1931
1932
1933
1934
1935
1936
1937
1938
1939
1940
1941
1942
1943
1944
1945
1946
1947
1948
1949
1950
1951
1952
1953
1954
1955
1956
1957
1958
1959
1960
1961
1962
1963
1964
1965
1966
1967
1968
1969
1970
1971
1972
1973
1974
1975
1976
1977
1978
1979
1980
1981
1982
1983
1984
1985
1986
1987
1988
1989
1990
1991
1992
1993
1994
1995
1996
1997
1998
1999
2000

```

GLOBAL AREAS MACRO M1200 15-DEC-82 13:50 PAGE 33  
 GLOBAL SUBROUTINES SECTION

1379  
 1380  
 1381  
 1382  
 1383  
 1384  
 1385  
 1386  
 1387  
 1388  
 1395  
 1401  
 1408  
 1414  
 1421  
 1430  
 1438  
 1444  
 1445  
 1452  
 1458  
 1459  
 1460  
 1461  
 1462  
 1463  
 1464  
 1465  
 1466  
 1467  
 1468  
 1469  
 1470  
 1471  
 1472  
 1473  
 1474  
 1475  
 1476  
 1477  
 1478  
 1479  
 1480  
 1481

.SBTTL GLOBAL SUBROUTINES SECTION

```

:++
: THE GLOBAL SUBROUTINES SECTION CONTAINS THE SUBROUTINES
: THAT ARE USED IN MORE THAN ONE TEST.
:--
    
```

```

:++
: FUNCTIONAL DESCRIPTION:
: SUBROUTINE TO....
: INPUTS: NONE
: IMPLICIT INPUTS: NONE
: OUTPUTS: RANUM
: IMPLICIT OUTPUTS: NONE
: SUBORDINATE ROUTINES USED: NONE
: FUNCTIONAL SIDE EFFECTS: NONE
: CALLING SEQUENCE: SUB
:--
    
```

.SBTTL - MOD U.1.0 - RANDOM GENERATOR

```

:-----
: RANDOM GENERATOR -----
RANGEN: MOV #1,R0
        ADD RAN1,R0
        ADD RAN2,R0
        BIC #170000,R0
        CLC
        ROL R0
        ROL R0
        MOV R0,RAN1
        CLR R0
        MOV RAN2,R0
        ROR R0
        ROR R0
        ADD RAN1,R0
        BIC #170000,R0
        MOV R0,RAN2
        MOV R0,RANUM
        RTS PC
:-----
RAN1: 0
RAN2: 0
RANUM: 0
:-----
:--
    
```

GLOBAL AREAS MACRO M1200 15-DEC-82 13:50 PAGE 35  
 - MOD U.A.1 - CONVERSION UUT CODE --> SUTPTR

```

1484      .SBTTL - MOD U.A.1 - CONVERSION UUT CODE --> SUTPTR
1485      :-----
1486
1487 004654 000240      CVUTST: NOP      ;
1488 004656 005037 004754      CLR      SUTCV      ;CLEAR SYS UNDER TEST CONVERTED
1489 004662 032737 000001 004752      BIT      #1,CVUNIT ;IF DRIVE #0.
1490 004670 001014      BNE      2$      ;SELECTED, THEN
1491 004672 032737 000002 004752      BIT      #2,CVUNIT ;IF UNIT #0 OR RXXX SIDE #0,
1492 004700 001004      BNE      1$      ;THEN
1493 004702 052737 000001 004754      BIS      #1,SUTCV  ;SET FOR UNIT CODE=00 IN SUT WORD
1494 004710 000417      BR      ENDCVT   ;BR TO END
1495 004712 052737 000004 004754 1$:  BIS      #4,SUTCV  ;ELSE, SET FOR UNIT CODE=10 IN SUT WORD
1496 004720 000413      BR      ENDCVT   ;BR TO END
1497 004722 032737 000002 004752 2$:  BIT      #2,CVUNIT ;IF UNIT #0 OR RXXX SIDE #0,
1498 004730 001004      BNE      3$      ;THEN
1499 004732 052737 000002 004754      BIS      #2,SUTCV  ;SET FOR UNIT CODE=01 IN SUT WORD
1500 004740 000403      BR      ENDCVT   ;BR TO END
1501 004742 052737 000010 004754 3$:  BIS      #10,SUTCV ;ELSE, SET FOR UNIT CODE=11 IN SUT WORD
1502 004750 000207      ENDCVT: RTS      PC      ;RETURN
1503      :-----
1504 004752 000000      CVUNIT: 0      ;UNIT CODE TO BE CONVERTED
1505 004754 000000      SUTCV: 0      ;SYS UNDER TEST AS CONVERTED
1506      :MOD U.A.1 ----- END MODULE -----
1507
1508      .SBTTL - MOD U.A.2 - CONVERSION SUTPTR --> UUT CODE
1509      :-----
1510
1511 004756 013705 021426      CVSTUT: MOV      SUTPTR,R5 ;SAVE SUT POINTER IN R5
1512 004762 005004      CLR      R4      ;CLEAR R4 (RESET UNIT CODE)
1513 004764 032705 000001 1$:  BIT      #1,R5    ;IF LSB R5
1514 004770 001003      BNE      2$      ;EQUALS 1, THEN BR TO 2$
1515 004772 006205      ASR      R5      ;SHIFT RIGHT R5
1516 004774 005204      INC      R4      ;INCREMENT R4
1517 004776 000772      BR      1$      ;BR TO 1$
1518 005000 010437 005024 2$:  MOV      R4,UNITST ;THEN R4 CONTAINS UUT CODE
1519 005004 006304      ASL      R4      ;DOUBLE UNIT CODE FOR ADR
1520 005006 010437 002240      MOV      R4,UUTOFF ;SET UUT OFFSET
1521 005012 062704 002336      ADD      #U100,R4 ;GET UUT UNIT# FOR PRINT
1522 005016 C11437 002334      MOV      (R4),UNIT ;SET UNIT=PRINT UNIT#
1523 005022 000207      RTS      PC      ;RETURN
1524      :-----
1525 005024 000000      UNITST: 0      ;
1526      :MOD 2.0A ----- END MODULE -----

```

GLOBAL AREAS MACRO M1200 15-DEC-82 13:50 PAGE 37  
 - MOD U.DEV.REC - DEVICE READ ERROR CODE

```

1529          .SBTTL - MOD U.DEV.REC - DEVICE READ ERROR CODE
1530          :-----:
1531
1532 005026 000240          RDERCD: NOP          ;
1533 005030 013705 002236          MOV          UUTADR,R5          ;SET R5 = UUT ADDRESS
1534 005034 012737 000001 002272          MOV          #1,PRTCD          ;SET PRINT ERROR CODE FLAG
1535 005042 012737 000017 005136          MOV          #17,RECCMD          ;SET UUT EXTENDED ERROR CODE
1536 005050 053737 002242 005136          BIS          DEN,RECCMD          ;SET DEN FOR CMD
1537 005056 013715 005136          MOV          RECCMD,(R5)          ;SEND CMD TO UUT
1538 005062 013701 002236          MOV          UUTADR,R1          ;GET UUT ADDR
1539 005066 062701 000002          ADD          #2,R1          ;CAL DATA ADR
1540 005072 013737 002236 025332          MOV          UUTADR,CSRADR          ;SET CSR ADR
1541 005100 012737 000200 025330          MOV          #TRBIT,RDYWD          ;SET 'TR' BIT TEST
1542 005106 004737 025230          CALL          DELAY          ;CALL DELAY MODULE-WAIT FOR TR
1543 005112 032715 000200          IAREC: BIT          #200,(R5)          ;IF TR
1544 005116 001004          BNE          LAREC          ;NOT SET
1545 005120 052737 040007 002274          BIS          #40007,ERRSY          ;THEN SET 'TR' ERR ON FUNCTION
1546 005126 000402          BR          XREC          ;BR TO END MOD
1547 005130 012711 033544          LAREC: MOV          #XERUUT,(R1)          ;SEND BASE ADDR FOR EXTEND ERR CODE
1548 005134 000207          XREC: RETURN          ;RETURN
1549          :-----:
1550 005136 000000          RECCMD: 0          ;COMMAND WORD USED IN THIS MODULE
1551          :-----:
1552
1553 005140          ENDMOD
1554
  
```



MISCELLANEOUS SECTIONS MACRO M1200 15-DEC-82 13:50 PAGE 38  
- MOD U.DEV.REC - DEVICE READ ERROR CODE

```

1567          .TITLE MISCELLANEOUS SECTIONS
1568          .SBTTL  REPORT CODING SECTION
1605
1606 005140          BGNMOD
1607
1608          :++
1609          : THE REPORT CODING SECTION CONTAINS THE
1610          : 'PRINTS' CALLS THAT GENERATE STATISTICAL REPORTS.
1611          :--
1612
1613          ;-----
1614 005140          BGNRPT
1615 005140 000240  REPORT: NOP
1616 005142 012737 006074 005504  MOV #PT2OSP,PRT1 ;SETUP CTR HDR
1617 005150 012737 006274 005506  MOV #PTUNT2,PRT2 ;
1618 005156 004737 005414          CALL PRTHDR ;PRINT HEADER
1619 005162 004737 005646          CALL PRTCTR ;PRINT SEQ CTR
1620 005166 012737 006105 005504  MOV #PT19SP,PRT1 ;SETUP REPORT HEADER PART 1
1621 005174 012737 006253 005506  MOV #PTUNT1,PRT2 ;
1622 005202 004737 005414          CALL PRTHDR ;PRINT HEADER
1623 005206 000240          NOP ;SETUP DATA PART 1
1624 005210 005037 005636          CLR LINECT ;ZERO LINE COUNTER
1625 005214 005037 005644          CLR PRNUM ;CLEAR PRINT MODE
1626 005220 012702 007354          MOV #CKSML,R2 ;SET BEGIN ADR OF DATA-PART 1
1627 005224 012701 006360          MOV #PRIDXX,R1 ;SET BEGIN ADR OF TABLE LABELS-PART 1
1628 005230 012737 000023 005640  MOV #19.,LINES ;SET # OF LINES TO PRINT
1629 005236 004737 005510          CALL PRIDAT ;PRINT DATA
1630 005242 012737 006200 005504  MOV #PTEC,PRT1 ;SETUP HEADER PART 2
1631 005250 012737 006253 005506  MOV #PTUNT1,PRT2 ;
1632 005256 004737 005414          CALL PRTHDR ;PRINT HEADER
1633 005262 000240          NOP ;SETUP DATA PART 2
1634 005264 012737 000001 005636  MOV #1,LINECT ;SET LINE COUNTER=1
1635 005272 012737 000001 005644  MOV #1,PRNUM ;SET PRINT MODE=1
1636 005300 012702 007604          MOV #ECLOG,R2 ;SET BEGIN ADR ERROR CODE DATA-PART 2
1637 005304 012701 006327          MOV #PTECN,R1 ;SET ERROR CODE PRINT-FORMATED MSG-PART 2
1638 005310 012737 000027 005640  MOV #23.,LINES ;SET # OF LINES TO PRINT
1639 005316 012737 006327 005642  MOV #PTECN,LINTYP ;
1640 005324 004737 005510          CALL PRIDAT ;PRINT DATA
1641 005330 012737 006225 005504  MOV #PTTK,PRT1 ;SETUP HEADER PART 3
1642 005336 012737 006253 005506  MOV #PTUNT1,PRT2 ;
1643 005344 004737 005414          CALL PRTHDR ;PRINT HEADER
1644 005350 005037 005636          CLR LINECT ;
1645 005354 012737 000001 005644  MOV #1,PRNUM ;SETUP DATA PART 3
1646 005362 012702 010070          MOV #TKXX,R2 ;
1647 005366 012737 000115 005640  MOV #77.,LINES ;
1648 005374 012737 006343 005642  MOV #PTTKN,LINTYP ;
1649 005402 004737 005510          CALL PRIDAT ;PRINT DATA PART 3
1650 005406          ENDRPT: ENDRPT
1651          ;-----
1652 005410 000000          UTTST: 0 ;UNIT #
1653 005412 000000          UTCNT: 0 ;UNIT COUNT
1654          ;-----

```

```

1657      .SBTTL - PRINT REPORT HEADER
1658      :-----:
1659 005414 005003      PRTHDR: CLR      R3      ;
1660 005416 013705 005504      MOV      PRT1,R5      ;SETUP 1ST PART OF HEADER PRINT
1661 005422 004737 006030      CALL     PREPT2      ;PRINT 1ST PART
1662 005426 012737 002336 005410      MOV      #UT00,UTTST ;GET BEGIN ADR OF UNITS-->TESTED FLAGS
1663 005434 012737 000004 005412      MOV      #4,UTCNT    ;SET UNIT COUNTER
1664 005442 005777 177742      1$:     TST      @UTTST ;IF UNIT TESTED FLAG
1665 005446 100407      BMI      2$          ;NOT=-1, THEN
1666 005450 017737 177734 006026      MOV      @UTTST,PAR  ;SET UNIT TESTED # FOR PRINT
1667 005456 013705 005506      MOV      PRT2,R5    ;SET UNIT MSG
1668 005462 004737 006002      CALL     PREPT1     ;PRINT UNIT #
1669 005466 062737 000002 005410      2$:     ADD      #2,UTTST ;ADVANCE ADR OF UNIT TESTED FLAG
1670 005474 005337 005412      DEC      UTCNT      ;DECREMENT UNIT COUNT
1671 005500 001360      BNE      1$         ;IF UNIT COUNT=0, THEN
1672 005507 000207      RTS      PC         ;RETURN
1673      :-----:
1674 005500 000000      PRT1:    0           ;
1675 005506 000000      PRT2:    0           ;
1676      :-----:
1677
1678      .SBTTL - PRINT REPORT DATA
1679      :-----:
1680 005510 000240      PRDAT:  NOP          ;
1681 005512 005737 005644      1$:     TST      PRNUM ;IF MODE
1682 005516 001410      BEQ      2$          ;
1683 005520 013737 005636 006026      MOV      LINECT,PAR ;SETUP LINE # TO PRINT
1684 005526 013705 005642      MOV      LINTYP,R5  ;SETUP LINE TYPE TO PRINT
1685 005532 004737 006002      CALL     PREPT1     ;PRINT LINE #
1686 005536 000403      BR       3$          ;
1687 005540 012105      2$:     MOV      (R1)+,R5 ;SETUP LOG TITLE ADR
1688 005542 004737 006030      CALL     PREPT2     ;PRINT LOG TITLES
1689 005546 012737 002336 005410      3$:     MOV      #UT00,UTTST ;GET UNIT # FOR PRINT
1690 005554 012737 000004 005412      MOV      #4,UTCNT   ;SETUP UNIT COUNT
1691 005562 012237 006026      4$:     MOV      (R2)+,PAR ;SETUP DATA TO PRINT
1692 005566 005777 177616      TST      @UTTST    ;IF UNIT # NOT = -1
1693 005572 100404      BMI      5$          ;THEN
1694 005574 012705 006243      MOV      #PTDAT1,R5 ;SETUP TO PRINT
1695 005600 004737 006002      CALL     PREPT1     ;PRINT DATA
1696 005604 062737 000002 005410      5$:     ADD      #2,UTTST ;SETUP TO CK NEXT UNIT
1697 005612 005337 005412      DEC      UTCNT      ;DECREMENT UNIT COUNT
1698 005616 001361      BNE      4$         ;IF DONE ALL UNITS THEN
1699 005620 005237 005636      INC      LINECT     ;INCREMENT LINE COUNT
1700 005624 023737 005640 005636      CMP      LINES,LINECT ;IF DONE ALL
1701 005632 101327      BHI      1$         ;LINES, THEN
1702 005634 000207      RTS      PC         ;RETURN
1703      :-----:
1704 005636 000000      LINECT:  0          ;LINE COUNTER
1705 005640 000000      LINES:   0          ;# OF LINES TO PRINT
1706 005642 000000      LINTYP:  0          ;LINE PRINT TYPE.
1707 005644 000000      PRNUM:   0          ;PRINT MODE
1708      :-----:
    
```

MISCELLANEOUS SECTIONS MACRO M1200 15-DEC-82 13:50 PAGE 42  
 - PRINT READ/WRITE SECTOR COUNTERS

```

1711          .SBTTL - PRINT READ/WRITE SECTOR COUNTERS
1712          :-----
1713
1714 005646 000240          PRTCTR: NOP          ;
1715 005650 005037 005640          CLR          LINES          ;CLEAR LINE COUNTER
1716 005654 012702 007314          MOV          #READSC,R2      ;GET ADDRESS OF READ SECTOR CTR
1717 005660 012705 006116          MOV          #PTRDSC,R5      ;SETUP READ SECTORS MSG
1718 005664 004737 006002          1$: CALL          PREPT1      ;CALL PRINT REPORT-MSG
1719 005670 012737 002336 005410  MOV          #UT00,UTTST     ;GET UNIT # FOR PRINT
1720 005676 012737 000004 005412  MOV          #4,UTCNT        ;SETUP UNIT COUNT
1721 005704 005777 177500          2$: TST          @UTTST      ;IF UNIT #
1722 005710 100410          BMI          5$            ;NOT=-1, THEN
1723 005712 062702 000002          ADD          #2,R2          ;INCREMENT ADR TO UPPER WORD
1724 005716 011204          MOV          (R2),R4        ;SETUP DATA UPPER PART FOR PRINT
1725 005720 014203          MOV          -(R2),R3       ;SETUP DATA LOWER PART FOR PRINT
1726 005722 012705 006315          MOV          #PTFMN1,R5     ;SETUP TO PRINT DATA
1727 005726 004737 006050          CALL          PREPT3        ;PRINT DATA
1728 005732 062737 000002 005410  5$: ADD          #2,UTTST      ;SETUP TO CK NEXT UNIT
1729 005740 062702 000004          ADD          #4,R2          ;SET ADR TO NEXT CTR
1730 005744 005337 005412          DEC          UTCNT         ;DECREMENT UNIT COUNT
1731 005750 001355          BNE          2$            ;IF DONE THIS LINE, THEN
1732 005752 005237 005640          INC          LINES         ;INCREMENT LINE CTR
1733 005756 022737 000002 005640  CMP          #2,LINES       ;DO WHILE LINE CTR
1734 005764 001405          BEQ          6$            ;EQUALS <2
1735 005766 012702 007334          MOV          #WRITSC,R2     ;GET ADDRESS OF WRITE SECTOR CTR
1736 005772 012705 006147          MOV          #PTWTSC,R5     ;SETUP WRITE SECTORS MSG
1737 005776 000732          BR          1$            ;BR TO WRITE SECTORS SECTION
1738 006000 000207          6$: RETURN          ;RETURN
1739          :-----
    
```

MISCELLANEOUS SECTIONS MACRO M1200 15-DEC-82 13:50 PAGE 44  
- PRINT REPORT TYPE 1

1742  
1743  
1744 006002  
1745 006024 000207  
1746  
1747 006026 000000  
1748  
1749  
1750  
1751  
1752  
1753  
1754  
1755  
1756 006030  
1757 006046 000207  
1758  
1759  
1760  
1761  
1762  
1763  
1764  
1765  
1766 006050  
1767 006072 000207  
1768  
1769 006074 045 116  
1770 006105 045 116  
1771 006116 045 116  
1772 006147 045 116  
1773 006200 045 116  
1774 006225 045 116  
1775 006243 045 101  
1776 006253 045 123  
1777 006274 045 123  
1778 006315 045 123  
1779 006327 045 116  
1780 006343 045 116  
1781  
1782

```
.SBTTL - PRINT REPORT TYPE 1
-----
PREPT1: PRINTS R5,PAR
        RTS    PC      ;
-----
PAR:    0      ;
-----
```

```
.SBTTL - PRINT REPORT TYPE 2
-----
PREPT2: PRINTS R5
        RTS    PC      ;
-----
```

```
.SBTTL - PRINT REPORT TYPE 3
-----
PREPT3: PRINTS R5,R4,R3
        RETURN
-----
PT20SP: .ASCIZ /%N%N%S20/
PT19SP: .ASCIZ /%N%N%S19/
PTRDSC: .ASCIZ /%N%A# SECTOR READS (8)=/
PTWTSC: .ASCIZ /%N%A# SECTOR WRITES (8)=/
PTEC:   .ASCIZ /%N%N%AERR%N%ACODE# /
PTTK:   .ASCIZ /%N%N%ATRACK# /
PTDAT1: .ASCIZ /%A %D6/
PTUNT1: .ASCIZ /%S1%AUNIT#%D1%S1/
PTUNT2: .ASCIZ /%S2%AUNIT#%D1%S5/
PTFMN1: .ASCIZ /%S2%06%05/
PTECN:  .ASCIZ /%N%02%A0%S3/
PTTKN:  .ASCIZ /%N%S1%D2%S3/
        .EVEN
-----
```

M H

1785  
 1786 006360 006426  
 1787 006362 006455  
 1788 006364 006504  
 1789 006366 006533  
 1790 006370 006562  
 1791 006372 006611  
 1792 006374 006640  
 1793 006376 006667  
 1794 006400 006716  
 1795 006402 006745  
 1796 006404 006774  
 1797 006406 007023  
 1798 006410 007052  
 1799 006412 007101  
 1800 006414 007130  
 1801 006416 007157  
 1802 006420 007206  
 1803 006422 007235  
 1804 006424 007264

```

-----
PRIDXX: .WORD PRID01
         .WORD PRID02
         .WORD PRID03
         .WORD PRID04
         .WORD PRID05
         .WORD PRID06
         .WORD PRID07
         .WORD PRID08
         .WORD PRID09
         .WORD PRID10
         .WORD PRID11
         .WORD PRID12
         .WORD PRID13
         .WORD PRID14
         .WORD PRID15
         .WORD PRID16
         .WORD PRID17
         .WORD PRID18
         .WORD PRID19
-----

```

1805  
 1806  
 1807  
 1808 006426 045 116  
 1809 006455 045 116  
 1810 006504 045 116  
 1811 006533 045 116  
 1812 006562 045 116  
 1813 006611 045 116  
 1814 006640 045 116  
 1815 006667 045 116  
 1816 006716 045 116  
 1817 006745 045 116  
 1818 006774 045 116  
 1819 007023 045 116  
 1820 007052 045 116  
 1821 007101 045 116  
 1822 007130 045 116  
 1823 007157 045 116  
 1824 007206 045 116  
 1825 007235 045 116  
 1826 007264 045 116  
 1827  
 1828

```

-----
045 PRID01: .ASCIZ /%ZN%ACHECK SUM: /
045 PRID02: .ASCIZ /%ZN%AFILL-EMP BUFF LOG:/
045 PRID03: .ASCIZ /%ZN%AND ERR BIT: /
045 PRID04: .ASCIZ /%ZN%AINTER-NO DONE ERR:/
045 PRID05: .ASCIZ /%ZN%AINTERRUPT ERR: /
045 PRID06: .ASCIZ /%ZN%ASEEK: /
045 PRID07: .ASCIZ /%ZN%ACRC ERR: /
045 PRID08: .ASCIZ /%ZN%ACRC BAD: /
045 PRID09: .ASCIZ /%ZN%AREAD ERR: /
045 PRID10: .ASCIZ /%ZN%AWRITE ERR: /
045 PRID11: .ASCIZ /%ZN%ADATA ERR: /
045 PRID12: .ASCIZ /%ZN%ADEL. DATA ERR: /
045 PRID13: .ASCIZ /%ZN%AHRD SEEK: /
045 PRID14: .ASCIZ /%ZN%AHRD CRC ERR: /
045 PRID15: .ASCIZ /%ZN%AHRD CRC BAD: /
045 PRID16: .ASCIZ /%ZN%AHRD READ: /
045 PRID17: .ASCIZ /%ZN%AHRD WRITE: /
045 PRID18: .ASCIZ /%ZN%AHRD DATA: /
045 PRID19: .ASCIZ /%ZN%AHRD DEL. DATA ERR:/
         .EVEN
-----

```

```

1831      .SBTTL - STATISTICAL TABLES
1832      ;-----
1833
1834 007314 READSC: .BLKW 8.      ;READ SECTOR COUNTER
1835 007334 WRITSC: .BLKW 8.      ;WRITE SECTOR COUNTER
1836 007354 CKSML: .BLKW 4        ;CKSUM LOG
1837 007364 BUFLERL: .BLKW 4      ;FILL/EMPTY BUFFER ERROR LOG
1838 007374 NOERL: .BLKW 4        ;NO ERR BIT LOG
1839 007404 UKINT: .BLKW 4        ;INTERRUPT - NO DONE LOG
1840 007414 INTER: .BLKW 4       ;INTERRUPT ERR
1841 007424 SEK: .BLKW 4         ;SEEK ERR
1842 007434 CRC: .BLKW 4         ;CRC ERR
1843 007444 CRCBAD: .BLKW 4      ;CRC BAD ERR
1844 007454 RD: .BLKW 4         ;READ ERR
1845 007464 WRT: .BLKW 4         ;WRITE ERR
1846 007474 DATA: .BLKW 4       ;DATA ERR
1847 007504 DLDTER: .BLKW 4      ;DEL DATA ERR
1848 007514 HSEK: .BLKW 4       ;HARD SEEK ERR
1849 007524 HCRC: .BLKW 4       ;HARD CRC ERR
1850 007534 HCRCBD: .BLKW 4     ;HARD CRC BAD ERR
1851 007544 HRD: .BLKW 4        ;HARD READ ERR
1852 007554 HWRT: .BLKW 4       ;HARD WRITE ERR
1853 007564 HDATA: .BLKW 4      ;HARD DATA ERR
1854 007574 HDD: .BLKW 4        ;HARD DEL DATA ERR
1855 007604 ECLOG: .BLKW 90.     ;ERROR CODE LOG
1856 010070 TKXX: .BLKW 308.    ;TRACK ERR LOG
1857      ;-----
1858 011240 000000 ENDST: .WORD 0          ;END TABLE
1859
1871      .EVEN
1872
1873      .SBTTL LOAD DEVICE PROTECTION
1874      ;-----
1875
1876 011242 BGNPROT
1877 011242 000000 .WORD 0          ;RX CSR - HARDWARE P-TABLE OFFSET
1878 011244 177777 .WORD -1        ;DON'T CARE
1879 011246 000004 .WORD 4          ;RX DRIVER-HARDWARE P-TABLE OFFSET
1880 011250 ENDPROT
1881      ;-----

```

MISCELLANEOUS SECTIONS  
LOAD DEVICE PROTECTION

MACRO M1200 15-DEC-82 13:50 PAGE 50

1884  
1885  
1886  
1887  
1888  
1889  
1890  
1891  
1892  
1897  
1898  
1899  
1900  
1901  
1902  
1903  
1904  
1905  
1906  
1907  
1908  
1909  
1910  
1911  
1912  
1913  
1914  
1915  
1916  
1917  
1918  
1919  
1920  
1921  
1922  
1923  
1924  
1925  
1926  
1927  
1928  
1929  
1930  
1931  
1932  
1933  
1934  
1935  
1955  
1956  
1957  
1958  
1959  
1960

011250  
011250 005037 002266  
011254  
011262  
011270  
011272 052737 000001 002266  
011300 000507  
011302  
011310  
011312 005037 002220  
011316 005037 002222  
011322 005037 002224  
011326 005037 002226  
011332 005037 002232  
011336 023727 002012 000004  
011344 003051  
011346  
011354  
011356 052737 000002 002266  
011364 005037 002270  
011370 012737 177777 002334  
011376 012737 177777 002336  
011404 012737 177777 002340  
011412 012737 177777 002342  
011420 012737 177777 002344  
011426 062737 000001 002334  
011434 023737 002012 002334  
011442 001426  
011444  
011456  
011460 000240  
011462 004737 011656  
011466 000757  
011470  
011510 012737 000001 002270  
011516  
011520  
011546 005737 002226  
011552 001413  
011554  
011602  
000000  
011606 045 116 045

```

.SBTTL INITIALIZE SECTION
:*****
: THE INITIALIZE SECTION CONTAINS THE CODING THAT IS PERFORMED
: AT THE BEGINNING OF EACH PASS. PRI07 HAS BEEN CHANGED TO PRI06
: TO MAKE THIS DIAGNOSTIC SBC-11/21 PROCESSOR SPECIFIC.
:-----
      BGNINIT
INIT:  CLR      FLAGS           ;CLEAR ALL FLAGS
      RFLAGS  FLGDRS         ;GET 'DRS' FLAGS
      REDEF   #EF.PWR        ;IF POWER FAIL FLAG IS
      BNCOMPLETE 1$          ;SET, THEN
      BIS     #POWERF,FLAGS   ;SET POWER FAIL FLAG
      BR      FIN             ;BR TO 'FIN'
1$:   REDEF   #EF.START       ;IF START FLAG
      BNCOMPLETE 2$          ;SET, THEN
      CLR     U0ADR           ;CLEAR SYS U0 ADDRESS
      CLR     U1ADR           ;CLEAR SYS U1 ADDRESS
      CLR     U0VECT         ;CLEAR SYS U0 VECTOR
      CLR     U1VECT         ;CLEAR SYS U1 VECTOR
2$:   CLR     SUT             ;CLEAR SYS UNDER TST WORD
      CMP     L$UNIT,#4       ;IF 4 UNITS OR LESS SELECTED
      BGT     INITER         ;THEN
      REDEF   #EF.RESTART    ;IF RESTART FLAG
      BNCOMPLETE SETUP      ;SET, THEN
      BIS     #RESTAR,FLAGS   ;SET RESTART FLAG
      CLR     ABORT          ;CLEAR ABORT FLAG
      MOV     #-1,UNIT        ;RESTORE UNIT # CTR
      MOV     #-1,U00         ;RESET UNIT#1
      MOV     #-1,U01         ;RESET UNIT#2
      MOV     #-1,U10         ;RESET UNIT#3
      MOV     #-1,U11         ;RESET UNIT#4
1$:   ADD     #1,UNIT         ;INCREMENT TO NEXT UNIT
      CMP     L$UNIT,UNIT     ;IF LOGICAL UNIT & UNIT
      BEQ     FIN            ;NOT YET EQUAL, THEN
      GPHARD  UNIT,PLOC      ;GET HARDWARE P-TABLE
      BNCOMPLETE 1$         ;IF P-TABLE AVAILABLE, THEN
      NOP
      JSR     PC,UNPKHP       ;CALL UNPACK HARDWARE P-TABLE
      BR      1$             ;BR TO BEGIN DO
INITER: PRINTF #INTER1      ;PRINT 'TOO MANY UNITS'
      MOV     #1,ABORT        ;SET ABORT
      DOCLN
      FIN:  SETVEC U0VECT,#INTH0,#PRI06 ;SET SYS U0 VECTOR
      TST    U1VECT          ;IF SYS U1 VECTOR
      BEQ    2$              ;NOT=0, THEN
1$:   SETVEC U1VECT,#INTH1,#PRI06 ;SET SYS U1 VECTOR
2$:   ENDINIT
:-----
PLOC:  .WORD  0
:-----
INTER1: .ASCIIZ /%N%ONLY FOUR UNITS ALLOWED, START OVER/
      .EVEN
:-----

```

MISCELLANEOUS SECTIONS MACRO M1200 15-DEC-82 13:50 PAGE 52  
 - MOD I.1 - UNPACK HARDWARE P-TABLES

```

1963          .SBTTL - MOD I.1 - UNPACK HARDWARE P-TABLES
1964          ;-----
1965
1966 011656 000240 UNPKHP: NOP          ;
1967 011660 005037 012330 CLR          ;CLEAR UNT
1968 011664 013701 011604 MOV PLOC,R1 ;SAVE P-TABLE LOCATION
1969 011670 005737 002334 IFAI1: TST UNIT ;IF UNIT
1970 011674 001005 BNE IFB11 ;IS ZERO
1971 011676 012137 002220 MOV (R1)+,UOADR ;LOAD UNIT #0 ADR
1972 011702 012137 002224 MOV (R1)+,UOVECT ;LOAD UNIT #0 VECTOR
1973 011706 000426 BR IFE11 ;BR TO END IF 'A'
1974 011710 021137 002220 IFB11: CMP (R1),UOADR ;IF THIS ADR
1975 011714 001003 BNE IFC11 ;EQUALS UNIT #0 ADR
1976 011716 062701 000004 ADD #4,R1 ;INCREMENT TEMP #1 BY 4
1977 011722 000420 BR IFE11 ;BR TO END IF 'A'
1978 011724 005737 002222 IFC11: TST U1ADR ;IF U1 ADDRESS
1979 011730 001005 BNE IFD11 ;NOT LOADED PREVIOUSLY
1980 011732 012137 002222 MOV (R1)+,U1ADR ;LOAD UNIT#1 ADR
1981 011736 012137 002226 MOV (R1)+,U1VECT ;LOAD UNIT #1 VECTOR
1982 011742 000405 BR EIC11 ;BR TO END IF 'C'
1983 011744 021137 002222 IFD11: CMP (R1),U1ADR ;IF UNIT ADR
1984 011750 001153 BNE ELD11 ;EQUALS UNIT #1 ADR
1985 011752 062701 000004 ADD #4,R1 ;THEN ADD 4 TO TEMP #1
1986 011756 012737 000001 012330 EIC11: MOV #1,UNT ;SET UNT=1
1987 011764 005737 002172 IFE11: TST RXXX ;IF RXXX
1988 011770 001445 BEQ IFI11 ;THEN
1989 011772 005711 IFF11: TST (R1) ;IF DRIVE #0
1990 011774 001021 BNE IFH11 ;THEN
1991 011776 062701 000002 IFG11: ADD #2,R1 ;ADD 2 TO TEMP #1
1992 012002 005711 TST (R1) ;IF SIDE #0 SELECTED
1993 012004 001006 BNE ELG11 ;THEN
1994 012006 052737 000001 002232 BIS #BIT0,SUT ;SET SIDE #0, DRIVE #0
1995 012014 005037 012326 CLR UNTCOD ;CLEAR UNIT CODE
1996 012020 000501 BR EIF11 ;BR TO END IF 'F'
1997 012022 052737 000004 002232 ELG11: BIS #BIT2,SUT ;SET SIDE #1, DRIVE #0
1998 012030 012737 000002 012326 MOV #2,UNTCOD ;SET UNIT CODE = 10
1999 012036 000472 BR EIF11 ;BR TO END IF 'F'
2000 012040 062701 000002 IFH11: ADD #2,R1 ;ADD 2 TO TEMP #1
2001 012044 005711 TST (R1) ;IF SIDE #0 SELECTED
2002 012046 001007 BNE ELH11 ;THEN
2003 012050 052737 000002 002232 BIS #BIT1,SUT ;SET SIDE #0, DRIVE #1
2004 012056 012737 000001 012326 MOV #1,UNTCOD ;SET UNIT CODE = 01
2005 012064 000457 BR EIF11 ;BR TO END IF 'F'
2006 012066 052737 000010 002232 ELH11: BIS #BIT3,SUT ;SET SIDE #1, DRIVE #1
2007 012074 012737 000003 012326 MOV #3,UNTCOD ;SET UNIT CODE = 11
2008 012102 000450 BR EIF11 ;BR TO END IF 'F'
2009 012104 062701 000002 IFI11: ADD #2,R1 ;ADD 2 TO R1
2010 012110 005711 TST (R1) ;IF SIDE
2011 012112 001056 BNE ELI11 ;EQUALS 0, THEN
2012 012114 162701 000002 IFJ11: SUB #2,R1 ;SUBTRACT 2 FROM TEMP #1
2013 012120 005711 TST (R1) ;IF DRIVE
2014 012122 001020 BNE IFL11 ;EQUALS ZERO, THEN
2015 012124 005737 012330 IFK11: TST UNT ;IF UNIT
2016 012130 001006 BNE ELK11 ;EQUALS ZERO
2017 012132 052737 000001 002232 BIS #BIT0,SUT ;SET UNIT #0, DRIVE #0
2018 012140 005037 012326 CLR UNTCOD ;CLEAR UNIT CODE
2019 012144 000427 BR EIF11 ;BR TO END IF 'F'
    
```



MISCELLANEOUS SECTIONS MACRO M1200 15-DEC-82 13:50 PAGE 52-1  
 - MOD 1.1 - UNPACK HARDWARE P-TABLES

```

2020 012146 052737 000004 002232 ELK11: BIS #BIT2,SUT ;SET UNIT #1, DRIVE #0
2021 012154 012737 000002 012326 MOV #2,UNTCOD ;SET UNIT CODE = 10
2022 012162 000420 BR EIFI1 ;BR TO END IF 'F'
2023 012164 005737 012330 IFL11: TST UNT ;IF UNIT
2024 012170 001007 BNE ELL11 ;EQUALS 0
2025 012172 052737 000002 002232 BIS #BIT1,SUT ;SET UNIT #0, DRIVE #1
2026 012200 012737 000001 012326 MOV #1,UNTCOD ;SET UNIT CODE = 01
2027 012206 000406 BR EIFI1 ;BR TO END IF 'F'
2028 012210 052737 000010 002232 ELL11: BIS #BIT3,SUT ;SET UNIT #1, DRIVE #1
2029 012216 012737 000003 012326 MOV #3,UNTCOD ;SET UNIT CODE = 11
2030 012224 012701 002336 EIFI1: MOV #UT00,R1 ;GET BEGINING OF UNIT CODE TABLE
2031 012230 013702 012326 MOV UNTCOD,R2 ;GET UNIT CODE
2032 012234 006302 ASL R2 ;DOUBLE R2 FOR ADDRESS: 5
2033 012236 060201 ADD R2,R1 ;FIND ADDRESS FOR THIS UNIT CODE
2034 012240 013703 002334 MOV UNIT,R3 ;GET LOGICAL UNIT#
2035 012244 010311 MOV R3,(R1) ;SET USER UNIT# FOR PRINT OUT
2036 012246 000426 BR ENDI1 ;BR TO END MOD
2037 012250 ELI11: PRINTF #INMSG2,UNIT ;PRINT 'MUST SELECT RXXX TO SEL SIDE'
2038 012274 DOCLN
2039 012276 000412 BR ENDI1 ;BR TO END MOD
2040 012300 ELDI1: PRINTF #INMSG3,UNIT ;PRINT 'NOT SCHEDULED-TWO BUS ADR ONLY'
2041 012324 000207 ENDI1: RTS PC ;RETURN
2042 :-----:
2043 012326 000000 UNTCOD: 0 ;UNIT CODE
2044 012330 000000 UNT: 0 ;UNIT FLAG
2045 :-----:
2046 012332 045 116 045 INMSG2: .ASCIZ /%N%AUNIT#%D1% ANS RXXX EXPANSION TO SELECT SIDE #1->START OVER/
2047 012432 045 116 045 INMSG3: .ASCIZ /%N%AUNIT#%D1% NOT SCHEDULED-TWO BUS ADDRESSSES ONLY%N/
2048 .EVEN
2049 :MOD 1.1 ----- END MODULE -----

```

MISCELLANEOUS SECTIONS MACRO M1200 15-DEC-82 13:50 PAGE 54  
CLEANUP CODING SECTION

2052  
2053  
2054  
2055  
2056  
2057  
2058  
2059  
2060  
2067  
2068  
2069  
2070  
2071  
2072  
2073  
2085  
2086

012522  
012522 000240  
012524  
012532 005737 002226  
012536 001403  
012540  
012546  
012550

```
.SBTTL CLEANUP CODING SECTION
:++
: THE CLEANUP CODING SECTION CONTAINS THE CODING THAT IS PERFORMED
: AT THE END OF EACH PASS.
:--

      BGNCLN
      NOP
      CLRVEC  UOJECT
      TST     U1VECT
      BEQ     2$
      CLRVEC  U1VECT
2$:   BRESET
      ENDCLN

      .EVEN
```

MISCELLANEOUS SECTIONS MACRO M1200 15-DEC-82 13:50 PAGE 56  
 AUTO DROP SECTION

```

2089      .SBTTL 'AUTO DROP SECTION
2090      :-----
2091 012552      BGNAUTO
2092 012552 005737 002220 IAATDP: TST      UOADR      ;IF SYS UNIT 0 ADDRESS
2093 012556 001447      BEQ      IDATDP      ;NOT=0, THEN
2094 012560 012703 002336      MOV      #UT00,R3      ;SETUP R3 = ADR OF SELECTED UNIT
2095 012564 013702 002220      MOV      UOADR,R2      ;GET SYS UNIT 0 ADDRESS
2096 012570 004737 012774      CALL     ADRTST      ;CALL ADDRESSING TEST
2097 012574 005737 002270 IBATDP: TST      ABORT      ;IF ABORT FLAG
2098 012600 001436      BEQ      IDATDP      ;SET, THEN
2099 012602 005737 002336 IGATDP: TST      UT00      ;IF UT00 SELECTED
2100 012606 100403      BMI      IHATDP      ;THEN
2101 012610      DODU      UT00      ;DROP UNIT 00
2102 012616 005737 002340 IHATDP: TST      UT01      ;IF UT01 SELECTED
2103 012622 100403      BMI      ICATDP      ;THEN
2104 012624      DODU      UT01      ;DROP UNIT 01
2105 012632 005737 002172 ICATDP: TST      RXXX      ;IF RXXX DEVICE
2106 012636 001417      BEQ      IDATDP      ;THEN
2107 012640 012703 002342      MOV      #UT10,R3      ;SETUP R3 = ADR OF SELECTED UNIT
2108 012644 005737 002342 IIATDP: TST      UT10      ;IF UT10 SELECTED
2109 012650 100403      BMI      IJATDP      ;THEN
2110 012652      DODU      UT10      ;DROP UNIT 10
2111 012660 005737 002344 IJATDP: TST      UT11      ;IF UT11 SELECTED
2112 012664 100440      BMI      XATDP      ;THEN
2113 012666      DODU      UT11      ;DROP UNIT 11
2114 012674 000434      BR       XATDP      ;BR TO EXIT
2115 012676 005737 002222 IDATDP: TST      U1ADR      ;IF SYS UNIT 1 ADDRESS
2116 012702 001425      BEQ      IFATDP      ;NOT=0, THEN
2117 012704 012703 002342      MOV      #UT10,R3      ;SETUP R3 = ADR OF SELECTED UNIT
2118 012710 013702 002222      MOV      U1ADR,R2      ;GET SYS UNIT 1 ADDRESS
2119 012714 004737 012774      CALL     ADRTST      ;CALL ADDRESSING TEST
2120 012720 005737 002270 IEATDP: TST      ABORT      ;IF ABORT FLAG
2121 012724 001420      BEQ      XATDP      ;SET, THEN
2122 012726 005737 002342 IKATDP: TST      UT10      ;IF UT10 SELECTED
2123 012732 100403      BMI      ILATDP      ;THEN
2124 012734      DODU      UT10      ;DROP UNIT 10
2125 012742 005737 002344 ILATDP: TST      UT11      ;IF UT11 SELECTED
2126 012746 100403      BMI      IFATDP      ;THEN
2127 012750      DODU      UT11      ;DROP UNIT 11
2128 012756 005737 002220 IFATDP: TST      UOADR      ;IF SYS UNIT 0 ADDRESS
2129 012762 001001      BNE      XATDP      ;EQUALS 0, THEN
2130 012764      DOCLN      ;DO CLEAN
2131 012766 005037 002270 XATDP: CLR      ABORT      ;CLEAR ABORT FLAG
2132 012772      ENDAUTO
2133      :-----

```

MISCELLANEOUS SECTIONS MACRO M1200 15-DEC-82 13:50 PAGE 58  
 - TEST 0: ADDRESSING TEST

```

2136 .SBTTL - TEST 0: ADDRESSING TEST
2137 -----
2138 BGNSUB
2139 IF FUNCTION TEST
2140 : THEN-SETUP TEST
2141 :     SETUP BUS TRAPS
2142 :     READ RXCSR
2143 :     RESET BUS TRAPS
2144 :     IF TRAP
2145 :     : THEN-SET SYSTEM FATAL FLAG
2146 :     :     CALL FUNCTION TEST ERROR
2147 :     :     REPORT BUS TRAP ON RXCSR
2148 :     ENDIF
2149 : ENDIF
2150 ENDSUB
2151 -----
2152
2153 012774 000240 ADRTST: NOP ;
2154 012776 005037 002270 CLR ABORT ;CLEAR ABORT FLAG
2155 013002 SETVEC #BTRP4,#TRAP,#PRI06
2156 013030 011201 MOV (R2),R1 ;READ RXCSR
2157 013032 CLRVEC #BTRP4
2158 013040 005737 002270 TST ABORT ;IF ABORT FLAG
2159 013044 001426 BEQ 2$ ;SET, THEN
2160 013046 012701 013144 MOV #TRPMS1,R1 ;SET TRAP MESSAGE
2161 013052 012337 002074 MOV (R3)+,L$LUN ;IF UNIT
2162 013056 100005 BPL 1$ ;NOT SELECTED, THEN
2163 013060 011337 002074 MOV (R3),L$LUN ;IF NEXT UNIT
2164 013064 100002 BPL 1$ ;NOT SELECTED, THEN
2165 013066 005037 002074 CLR L$LUN ;CLEAR UNIT
2166 013072 012737 000620 002376 1$: MOV #400,ERRNBR ;SETUP ERR NBR = ADR ERR
2167 013100 012737 013124 002400 MOV #TOMSG,ERRMSG ;SETUP ERROR MSG
2168 013106 012737 004510 002402 MOV #PRTB1,ERRBLK ;SETUP ERROR BLK
2169 013114 005037 002374 CLR ERRTP ;SETUP ERR TYP = SYS FTL
2170 013120 ERROR ;CALL ERROR
2171 013122 000207 2$: RETURN ;RETURN
2172 -----
2173 013124 101 104 104 TOMSG: .ASCIZ /ADDRESSING TEST/
2174 013144 045 101 040 TRPMS1: .ASCII /%A BUS TRAP AT ADDRESS:%06%N/
2175 013200 045 101 040 .ASCIZ /%A INTERFACE BAD OR NOT SET TO ABOVE ADDRESS%N/
2176 .EVEN

```

MISCELLANEOUS SECTIONS MACRO M1200 15-DEC-82 13:50 PAGE 60  
- MOD U.SFT.TRP - BUS TRAP HANDLER

```

2179      .SBTTL - MOD U.SFT.TRP - BUS TRAP HANDLER
2180      :++
2181      : FUNCTIONAL DESCRIPTION: SUBR TO HANDLE DEVICE BUS TRAP
2182      : INPUTS: NONE
2183      : IMPLICIT INPUTS: BUS TRAP
2184      : OUTPUTS: BUS TRAP ERROR, ABORT TEST
2185      : IMPLICIT OUTPUTS: NONE
2186      : SUBORDINATE ROUTINES USED: NONE
2187      : FUNCTIONAL SIDE EFFECTS: NONE
2188      : CALLING SEQUENCE: INTERRUPT
2189      :--
2190      :-----
2191      :
2192      :
2193 013260 052737 004000 002274 TRAP:  BIS      #SYSERR,ERRSY ;SET SYSTEM ERROR
2194 013266 005237 002270          INC      ABORT      ;ABORT TEST
2195 013272 000002          RTI          ;RETURN FROM TRAP INTERRUPT
2196      :-----

```

```

2199          .SBTTL  DROP UNIT SECTION
2200
2201          :++
2202          : THE DROP-UNIT SECTION CONTAINS THE CODING THAT CAUSES A DEVICE
2203          : TO NO LONGER BE TESTED.
2204          :--
2205
2211
2212 013274          BGNDU
2213
2214 013274 010037 013436          MOV      R0,UNITDP          :GET LOGICAL UNIT #
2215 013300 005002          CLR      R2                  :LET R2=UNIT CODE# & UNIT COUNT /CLEAR IT!
2216 013302 012701 002336          MOV      #UT00,R1          :GET BEGIN UNIT CODE ADRESS
2217 013306 023721 013436          1$:    CMP      UNITDP,(R1)+      :IF USER UNIT#
2218 013312 001417          BEQ      2$                  :IS = UNIT CODE - UNIT#
2219 013314 005202          INC      R2                  :INCREMENT UNIT CODE# & UNIT COUNT
2220 013316 022702 000005          CMP      #5,R2              :IF MAX # OF UNITS
2221 013322 101371          BHI      1$                  :EXCEEDED, THEN
2222 013324          PRINTF  #DUMSG2,UNITDP      :PRINT UNIT# NOT FOUND
2223 013350 000431          BR       3$                  :BR TO EXIT
2224 013352 012741 177777          2$:    MOV      #-1,-(R1)        :DESELECT UNIT
2225 013356 010237 004752          MOV      R2,CVUNIT          :SET UNIT CODE FOR CONVERSION
2226 013362 004737 004654          CALL    CVUTST              :CALL MOD U.A.1 CONVERT UNIT# TO SUT CODE
2227 013366 013737 004754 013440          MOV      SUTCV,SUTDRP        :SET SUT DROP CODE = SUT CONVERTED CODE
2228 013374 043737 013440 002232          BIC      SUTDRP,SUT          :DROP UNIT SPEC IN SUTDRP
2229 013402 043737 013440 002230          BIC      SUTDRP,SDD          :CLEAR UNIT SPEC IN SUT DROP
2230 013410          PRINTF  #DUMSG1,UNITDP
2231
2232 013434          3$:    ENDDU
2233          :-----
2234 013436 000000          UNITDP: 0                    :UNIT TO BE DROPPED
2235 013440 000000          SUTDRP: 0                    :SYS UNDER TST, DROP BIT
2236          :-----
2237 013442 045 116 045          DUMSG1: .ASCIZ /%NZA DROP UNIT#%D1ZA FROM TEST%N/
2238 013503 045 116 045          DUMSG2: .ASCIZ /%NZA COULD NOT DROP UNIT#%D1ZA -NOT SELECTED%N/
2239          :-----
2240
2252
2253          .EVEN

```

MISCELLANEOUS SECTIONS MACRO M1200 15-DEC-82 13:50 PAGE 64  
ADD UNIT SECTION

2256  
2257  
2258  
2259  
2260  
2261  
2262  
2263  
2264 013562  
2265  
2271  
2272 013562  
2273  
2285  
2286

.SBTTL ADD UNIT SECTION

:++  
: THE ADD-UNIT SECTION CONTAINS THE CODING THAT CAUSES A DEVICE  
: TO BE (A) TESTED FOR THE FIRST TIME, OR (B) RESUMED IN TESTING. IF  
: "EF.AUNIT" IS SET, THE UNIT WILL BE TESTED AS A NEW UNIT.  
:--

BGNAU

ENDAU

.EVEN

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 66  
ADD UNIT SECTION

```

2289 .TITLE HARDWARE TESTS
2290 .SBTTL TEST 1: RX02 SS PERF EXERCISER
2291 :++
2292 : TEST TO EXCERCISE RX02/XX SYSTEM
2293 :--
2294 .SBTTL MOD 0.0 - EXERCISE A SYSTEM
2295 -----
2296 .BGNST
2297 .BGND0
2298 : .BGNSUB
2299 : : INITIALIZE (LOCATIONS, ETC.)
2300 : : CALL MOD 1.0
2301 : .ENDSUB
2302 : IF ERR SYS=1
2303 : : THEN-
2304 : : CALL MOD 4.0
2305 : .ENDIF
2306 : IF ABORT=0
2307 : : THEN-
2308 : : .BGND0
2309 : : : .BGNSUB
2310 : : : CALL MOD 2.0
2311 : : : IF ERR SYS NOT=0
2312 : : : : THEN-
2313 : : : : CALL MOD 4.0
2314 : : : : IF ABORT=0
2315 : : : : : THEN-
2316 : : : : : CALL MOD 3.0
2317 : : : : .ENDIF
2318 : : : : ELSE-
2319 : : : : CALL MOD 3.0
2320 : : : .ENDIF
2321 : : : CK LOOP
2322 : : : .ENDSUB
2323 : : DO UNTIL ABORT=1 OR EXCMP=1
2324 : .ENDIF
2325 : DO UNTIL SWREG BIT#15 NOT SET
2326 : IF ABORT=1
2327 : : THEN-
2328 : : DO CLEAN UP
2329 : : ELSE-
2330 : : DO REPORT
2331 : .ENDIF
2332 .ENDTST
2333 -----

```



HARDWARE TESTS MALFO M1200 15-DEC-82 13:50 PAGE 67  
MOD 0.0 - EXERCISE A SYSTEM

```

2335 013564          BGNTST
2336 013564 000240  CONTRL: NOP
2337 013566          BG00: BGNSUB
2338 013570 005037 014020  CLR      EXCMP
2339 013574 005037 002270  CLR      ABORT
2340 013600 012737 000001 014016  MOV      #1,INITL
2341 013606 005037 002304  CLR      RETRY
2342 013612 005037 002230  CLR      SDD
2343 013616 005037 002274  CLR      ERRSY
2344 013622 005037 002276  CLR      ERRTY
2345 013626 005037 002246  CLR      CSRUUT
2346 013632 005037 002250  CLR      ESRUUT
2347 013636 005037 033544  CLR      XERUUT
2348 013642 005037 002332  CLR      CMD
2349 013646 005037 023330  CLR      WDOT
2350 013652 012737 000001 021426  MOV      #1,SUTPTR
2351 013660 004737 014022  CALL     GTSYEX
2352 013664          ENDSUB
2353 013666 005737 002274  IA00:   TST      ERRSY
2354 013672 001402          BEQ      IB00
2355 013674 004737 032466  CALL     OTSYER
2356 013700 005737 002270  IB00:   TST      ABORT
2357 013704 001030          BNE      UG00
2358 013706          BC00:   BGNSUB
2359 013710 004737 020676  CALL     SCSYEX
2360 013714 005737 002274  ID00:   TST      ERRSY
2361 013720 001410          BEQ      LD00
2362 013722 004737 032466  CALL     OTSYER
2363 013726 005737 002270  IE00:   TST      ABORT
2364 013732 001005          BNE      ED00
2365 013734 004737 032444  CALL     OTEXCM
2366 013740 000402          BR       ED00
2367 013742 004737 032444  LD00:   CALL     OTEXCM
2368 013746          ED00:   CKLOOP
2369 013750          ENDSUB
2370 013752 005737 002270  UC00:   TST      ABORT
2371 013756 001007          BNE      IF00
2372 013760 005737 014020  TST      EXCMP
2373 013764 001750          BEQ      BC00
2374 013766 032737 100000 002204  UG00:   BIT      #100000,SWREG
2375 013774 001274          BNE      BG00
2376 013776 005737 002270  IF00:   TST      ABORT
2377 014002 001402          BEQ      LF00
2378 014004          DOCLN
2379 014006 000401          BR       ENDOO
2380 014010          LF00:   DORPT
2381 014012          ENDOO: EXIT    TST
2382
-----
2383 014016 000000          INITL:  0
2384 014020 000000          EXCMP:  0
2385
;MOD 0.0 ----- END MODULE -----
;BEGIN SUB TEST
;CLEAR EXERCISE COMPLETE
;CLEAR ABORT FLAG
;SET INITIALIZE FLAG
;CLEAR RETRY FLAGS
;CLEAR SYS DRIVES DONE
;CLEAR SYSTEM ERROR FLAGS
;CLEAR DEVICE ERROR FLAGS
;CLEAR UUT CSR
;CLEAR UUT ESR
;CLEAR UUT TEST ERROR REG
;CLEAR COMMAND PRINT WORD
;CLEAR COMMAND WORD
;PRESET SYS UNDER TST PTR
;CALL MOD 1.0 GET SYS EXER.
;END SUB TEST
;IF ERR SYS
;NOT=0, THEN
;CALL MOD 4.0 - O/P SYSTEM ERROR
;IF ABORT
;NOT SET, THEN
;BEGIN SUB TEST
;CALL MOD 2.0 - SCHEDULE SYSTEM EXERCISE
;IF ERR SYSTEM
;NOT=0, THEN
;CALL MOD 4.0 - O/P SYSTEM ERROR
;IF ABORT
;NOT SET, THEN
;CALL MOD 3.0 - O/P SYSTEM EXERCISE COMPLETE
;BR TO END 'D'
;CALL MOD 3.0 - O/P SYSTEM EXERCISE COMPLETE
;CHECK LOOP ON ERROR
;END SUB TEST
;DUNTIL ABORT
;OR
;EXERCISE COMPLETE
;SET
;DUNTIL SWREG BIT#15
;NOT SET
;IF ABORT
;SET, THEN
;DO CLEAN UP
;BR TO END
;DO REPORT
;EXIT TEST
;INITIALIZE POINTERS FLAG
;EXERCISE COMPLETE FLAG

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 69  
MOD 0.0 - EXERCISE A SYSTEM

```

,88
589
2390
2391      .SBTTL MOD 1.0 - GET SYSTEM EXERCISE
2392 014022 000240      GTSYEX: NOP
2393 014024 032737 000001 002266 IFB10: BIT      #POWERF,FLAGS      ;IF POWER FLAG
2394 014032 001002      BNE      IFA10          ;NOT SET, THEN
2395 014034 004737 014076      JSR      PC,GTEXCD      ;CALL GET EXERCISE CONDITION
2396 014040 032737 040000 002204 IFA10: BIT      #40000,SWREG      ;IF NO INITIALIZE
2397 014046 001002      BNE      ELA10          ;NOT SET, THEN
2398 014050 004737 014216      JSR      PC,GTSYS      ;CALL GET SYSTEM TO EXERCISE
2399 014054 004737 017302      ELA10: JSR      PC,GTEX      ;CALL GET EXERCISE
2400 014060 042737 040000 002274 BIC      #BIT14,ERRSY      ;CLEAR ANY TIME OUT ERRORS ALREADY REPORTED
2401 014066 005037 014074      CLR      FIRST          ;CLEAR FIRST PASS FLAG
2402 014072 000207      RTS      PC            ;RETURN
2403
2404 014074 000001      FIRST: 1              ;FIRST PASS FLAG
2405      :MOD 1.0 ----- END MODULE -----
2406
2407
2408
2409      .SBTTL MOD 1.1 - GET EXERCISE CONDITIONS
2410
2411
2412
2413 014076 000240      GTEXCD: NOP
2414 014100 032737 000001 002204 IFA11: BIT      #1,SWREG          ;IF SET FOR DOUBLE DENSITY
2415 014106 001404      BEQ      ELA11          ;THEN
2416 014110 012737 000200 002252      MOV      #200,WDCNT      ;SET WORD COUNT=256 BYTES
2417 014116 000403      BR       EIA11          ;BR TO END IF 'A'
2418 014120 012737 000100 002252      ELA11: MOV      #100,WDCNT      ;SET WORD COUNT=128 BYTES
2419 014126 013737 002206 020650      EIA11: MOV      OIITK,OD      ;SET OUTSIDE TRACK ADR. (FROM SOFTW P-TAB)
2420 014134 013737 002210 020652      MOV      INDITK,ID        ;SET INSIDE TRACK ADR. (FROM SOFT P-TAB)
2421 014142 032737 000002 002204      BIT      #2,SWREG          ;IF DEL DATA SET
2422 014150 001404      BEQ      ELB11          ;THEN
2423 014152 012737 000010 002244      MOV      #10,DEL DAT      ;SET DEL DATA MODE
2424 014160 000402      BR       IFC11          ;BR TO END IF 'B'
2425 014162 005037 002244      ELB11: CLR      DEL DAT      ;CLEAR DEL DATA MODE
2426 014166 032737 000001 002204      IFC11: BIT      #1,SWREG          ;IF DOUBLE DEN IS SET IN SOFT SWREG
2427 014174 001404      BEQ      ELC11          ;THEN
2428 014176 012737 000400 002242      MOV      #400,DEN        ;SET DEN=DOUBLE
2429 014204 000402      BR       EIC11          ;BR TO END IF 'C'
2430 014206 005037 002242      ELC11: CLR      DEN          ;SET DEN=SINGLE
2431 014212 000240      EIC11: NOP
2432 014214 000207      RTS      PC            ;RETURN
2433      :MOD 1.1 ----- END MODULE -----

```

2436  
2437  
2438  
2439  
2440  
2441  
2442  
2443  
2444  
2445  
2446  
2447  
2448  
2449  
2450  
2451  
2452  
2453  
2454  
2455  
2456  
2457  
2458  
2459  
2460  
2461  
2462  
2463  
2464  
2465  
2466  
2467  
2468  
2469  
2470  
2471  
2472  
2473  
2474  
2475  
2476  
2477  
2478  
2479  
2480  
2481  
2482  
2483  
2484  
2485  
2486  
2487  
2488  
2489  
2490  
2491  
2492

014216  
014220 004737 014626  
014224 012737 000040 025330  
014232 013737 002220 025332  
014240 004737 025230  
014244 032777 000040 165746  
014252 001006  
014254 012737 016167 016130  
014262 004737 016016  
014266 000442  
014270 012777 040000 165722  
014276 012737 000040 025330  
014304 013737 002220 025332  
014312 004737 025230  
014316 032777 000040 165674  
014324 001006  
014326 012737 016235 016130  
014334 004737 016016  
014340 000415  
014342 012737 000002 015276  
014350 012737 000001 015302  
014356 005037 015300  
014362 013704 002220  
014366 004737 014742  
014372 000412  
014374 005737 002172  
014400 001404  
014402 042737 000017 002232  
014410 000403  
014412 042737 000003 002232  
014420 005737 002172  
014424 001401  
014426 000463  
014430 032737 000014 002232  
014436 001457  
014440 004737 014702  
014444 032777 000040 165550  
014452 001441  
014454 012777 040000 165540  
014462 012737 000040 025330  
014470 013737 002222 025332  
014476 004737 025230  
014502 032777 000040 165512  
014510 001416  
014512 012737 000004 015302  
014520 012737 000002 015276  
014526 012737 000002 015300  
014534 013704 002222  
014540 004737 014742  
014544 000414  
014546 012737 016235 016130  
014554 000403

.SBTTL MOD 1.2 - GET SYSTEM TO EXERCISE

-----  
GTSYS: BRESET ;ISSUE BUS RESET  
CALL GPSUN0 ;CALL GET PRINTABLE SYSTEM 0 UNIT #  
MOV #DNBIT, RDYWD ;SET READY WORD = DONE  
MOV UOADR, CSRADR ;SET ADDRESS  
CALL DELAY ;CALL MOD - DELAY FOR DONE  
IFA12: BIT #DNBIT, @UOADR ;IF UNIT #0 DONE BIT  
BNE ELA12 ;NOT SET THEN  
MOV #INTER2, ITMSG ;SET PRINT MSG#  
CALL ITERR ;INITIALIZE ERR-UO-NO DONE BIT  
BR EIA12 ;BR TO END IF 'A'  
ELA12: MOV #40000, @UOADR ;ELSE-ISSUE PROG INIT TO UO  
MOV #DNBIT, RDYWD ;SET READY WORD = DONE  
MOV UOADR, CSRADR ;SET TEST ADDRESS  
CALL DELAY ;CALL MOD - DELAY FOR DONE  
IFB12: BIT #DNBIT, @UOADR ;IF UNIT #0 DONE BIT  
BNE ELB12 ;NOT SET THEN  
MOV #INTER3, ITMSG ;SET PRINT MSG#  
CALL ITERR ;INITIALIZE ERR-UO, NO DONE BIT  
BR EIA12 ;BR TO END IF 'A'  
ELB12: MOV #2, UNTCNT ;SET # DRVS TO CK  
MOV #1, SUTPOS ;SET POSITION IN SUT TO TEST = 1  
CLR UNTCO ;SET UUT CODE = 0  
MOV UOADR, R4 ;SET TEMP #4 = UO ADDRESS  
CALL CKDVAV ;CALL MOD 1.2.1 - CK DRIVE STATUS  
BR IFC12 ;BR TO IF 'C'  
EIA12: TST RXXX ;IF RXXX  
IFH12: BEQ ELH12 ;THEN  
BIC #17, SUT ;CLEAR RXXX UO SELECTED DRIVES  
BR IFC12 ;BR TO IF 'C'  
ELH12: BIC #3, SUT ;CLEAR RX02 UO SELECTED DRIVES  
IFC12: TST RXXX ;IF RXXX  
BEQ IFD12 ;THEN  
BR IFG12 ;BR TO IF 'G'  
IFD12: BIT #14, SUT ;IF U1  
BEQ IFG12 ;SELECTED THEN  
CALL GPSUN1 ;CALL GET PRINTABLE SYSTEM 1 UNIT #  
IFE12: BIT #DNBIT, @U1ADR ;IF U1 DONE BIT  
BEQ ELE12 ;SET THEN  
MOV #40000, @U1ADR ;INITIALIZE DEVICE U1  
MOV #DNBIT, RDYWD ;SET READY WORD = DONE BIT  
MOV U1ADR, CSRADR ;SET TEST ADR  
CALL DELAY ;CALL MOD - WAIT FOR DONE  
IFF12: BIT #DNBIT, @U1ADR ;IF U1 DONE BIT  
BEQ ELF12 ;SET THEN  
MOV #4, SUTPOS ;SET POSITION IN SUT = 4  
MOV #2, UNTCNT ;SET # DRVS TO CK = 2  
MOV #2, UNTCO ;SET UUT CODE = 2  
MOV U1ADR, R4 ;SET TEMP #4 = U1 ADR  
CALL CKDVAV ;CALL MOD 1.2.1 - CK DRIVE STATUS  
BR IFG12 ;BR TO IF 'G'  
ELF12: MOV #INTER3, ITMSG ;SET MSG#-U1-'NO DONE BIT-PROG INT'  
BR EIE12 ;BR TO END IF 'E'

HARDWARE TESTS MACRO M'200 15-DEC-82 13:50 PAGE 71-1  
 MOD 1.2 - GET SYSTEM TO EXERCISE

```

2493 014556 012737 016167 016130 ELF12: MOV #INTER2,ITMSG ;SET MSG#-U1-'NO DONE BIT-BUS INIT''
2494 014564 004737 016016 EIE12: CALL ITERR ;INIT ERR
2495 014570 042737 000014 002232 BIC #14,SUT ;CLEAR SYS 1 FROM TEST
2496 014576 005737 002232 IFG12: TST SUT ;IF SYSTEM UNDER TEST
2497 014602 001007 BNE ELG12 ;EQUALS 0, THEN
2498 014604 012701 016305 MOV #INTER4,R1 ;SETUP PRINT - 'NO SYS TO TEST''
2499 014610 004737 004516 CALL PRTBOS ;CALL PRINT BASIC-0 ARG
2500 014614 012737 000001 002270 MOV #1,ABORT ;SET ABORT FLAG
2501 014622 000240 ELG12: NOP
2502 014624 000207 RTS PC ;RETURN
2503 ;MOD 1.2 ----- END MODULE -----
2504
2505 .SBTTL - MOD 1.2.U.1 - GET PRINTABLE SYSTEM 0 UNIT #
2506 -----
2507 014626 005037 002334 GPSUN0: CLR UNIT ;SET UNIT=0
2508 014632 005737 002336 TST UT00 ;IF UT00
2509 014636 100404 BMI 2$ ;VALID, THEN
2510 014640 013737 002336 002334 MOV UT00,UNIT ;SETUP UNIT FOR PRINT
2511 014646 000414 BR XPSUN0 ;BR TO EXIT
2512 014650 005737 002340 2$: TST UT01 ;IF UT01
2513 014654 100404 BMI 3$ ;VALID, THEN
2514 014656 013737 002340 002334 MOV UT01,UNIT ;SETUP UNIT FOR PRINT
2515 014664 000405 BR XPSUN0 ;BR TO EXIT
2516 014666 005737 002172 3$: TST RXXX ;IF RXXX
2517 014672 001402 BEQ XPSUN0 ;THEN
2518 014674 004737 014702 CALL GPSUN1 ;CALL GET PRINTABLE SYSTEM 1 UNIT #
2519 014700 000207 XPSUN0: RETURN ;RETURN
2520 -----
2521
2522 .SBTTL - MOD 1.2.U.2 - GET PRINTABLE SYSTEM 1 UNIT #
2523 -----
2524 014702 005037 002334 GPSUN1: CLR UNIT ;SET UNIT=0
2525 014706 005737 002342 1$: TST UT10 ;IF UT10
2526 014712 100404 BMI 2$ ;VALID, THEN
2527 014714 013737 002342 002334 MOV UT10,UNIT ;SETUP UNIT FOR PRINT
2528 014722 000406 BR XPSUN1 ;BR TO EXIT
2529 014724 005737 002344 2$: TST UT11 ;IF UT11
2530 014730 100403 BMI XPSUN1 ;VALID, THEN
2531 014732 013737 002344 002334 MOV UT11,UNIT ;SETUP UNIT FOR PRINT
2532 014740 000207 XPSUN1: RETURN ;RETURN
2533 -----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 73  
 MOD 1.2.1 - CK DRIVE AVAILABLE

```

2536      .SBTTL MOD 1.2.1 - CK DRIVE AVAILABLE
2537      :-----
2538 014742 010437 015272 CKDVAV: MOV R4,ITCSAD ;SAVE C & S ADR
2539 014746 062704 000002      ADD #2,R4 ;SET DATA BUFFER ADR
2540 014752 010437 015274      MOV R4,ITDBAD ;SAVE DB ADR
2541 014756 000240      BDA121: NOP
2542 014760 033737 015302 002232 IFA121: BIT SUTPOS,SUT ;IF THIS UNIT SUT & SUT
2543 014766 001521      BEQ EIA121 ;EQUAL, THEN
2544 014770      BGNSEG ;BEGIN SEGMENT-TO LOOP ON ERROR
2545 014772 013701 015300      MOV UNTCN,R1 ;SAVE UNIT CODE #
2546 014776 006301      ASL R1 ;DOUBLE UNIT CD FOR ADR
2547 015000 062701 002336      ADD #UT00,R1 ;FIND ADR UNIT#
2548 015004 011137 002334      MOV (R1),UNIT ;SET UNIT# FOR PRINT
2549 015010 032737 000001 015300 IFB121: BIT #1,UNTCN ;IF DRIVE #1 SET IN UNIT CODE
2550 015016 001407      BEQ ELB121 ;THEN
2551 015020 012737 000033 015266      MOV #33,INTCMD ;SET READ STATUS DRV #1
2552 015026 012737 000001 015270      MOV #1,DRIVEN ;SET PRINT FOR DRV #1
2553 015034 000405      BR EIB121 ;BR TO END IF 'B'
2554 015036 012737 000013 015266 ELB121: MOV #13,INTCMD ;SET READ STATUS DRV #0
2555 015044 005037 015270      CLR DRIVEN ;SET PRINT FOR DRIVE #0
2556 015050 013777 015266 000214 EIB121: MOV INTCMD,@ITCSAD ;EXECUTE READ STATUS ON DRIVE AT TEMP #4
2557 015056 013737 015272 025332      MOV ITCSAD,CSRADR ;PASS DOWN ADRS
2558 015064 012737 000040 025330      MOV #DNBIT,RDYWD ;PASS DOWN 'DONE' BIT TO TEST
2559 015072 004737 025230      CALL DELAY ;CALL MOD - DELAY FOR DONE BIT
2560 015076 032777 000010 000170 IFH121: BIT #10,@ITDBAD ;IF AC LOW BIT
2561 015104 001404      BEQ IFC121 ;SET, THEN
2562 015106 012737 017200 016130      MOV #ITER3,ITMSG ;SET MSG# - 'AC LOW'
2563 015114 000436      BR EIC121 ;BR TO END IF 'C'
2564 015116 032777 000200 000150 IFC121: BIT #200,@ITDBAD ;IF DRV RDY BIT
2565 015124 001004      BNE IFI121 ;NOT SET, THEN
2566 015126 012737 016334 016130      MOV #ITMSG1,ITMSG ;SET MSG# - 'NO DRIVE READY'
2567 015134 000426      BR EIC121 ;BR TO END IF 'C'
2568 015136 032777 004000 000126 IFI121: BIT #RX2BIT,@ITCSAD ;IF CSR RX02 BIT
2569 015144 001004      BNE IFD121 ;NOT SET, THEN
2570 015146 012737 016521 016130      MOV #ITMSG5,ITMSG ;SET MSG# - 'NOT CAP. OF DOUBLE DENS. OPS.'
2571 015154 000416      BR EIC121 ;BR TO END IF 'C'
2572 015156 005737 002172      IFD121: TST RXXX ;IF UNIT IS TO BE TESTED AS RXXX
2573 015162 001421      BEQ EID121 ;THEN
2574 015164 032737 000002 015300 IFE121: BIT #2,UNTCN ;IF SIDE #1
2575 015172 001415      BEQ EID121 ;SELECTED
2576 015174 032777 000002 000072 IFF121: BIT #2,@ITDBAD ;IF SIDE #1
2577 015202 001011      BNE EID121 ;NOT READY, THEN
2578 015204 012737 016357 016130      MOV #ITMSG2,ITMSG ;SET MSG# - 'NO SIDE RDY'
2579 015212 004737 016016      EIC121: CALL ITERR ;CALL INITIALIZE ERROR
2580 015216      ENDSEG ;END SEGMENT-TO LOOP ON ERROR
2581 015220 004737 016064      CALL ITDROP ;CALL DROP UNIT
2582 015224 000402      BR EIA121 ;BR TO ENDIF 'A'
2583 015226 004737 015306      EID121: CALL REFDRV ;CALL REFORMAT DRIVE DENSITY
2584 015232 006137 015302      EIA121: ROL SUTPOS ;MOVE SELECT BIT TO TEST SYS UNDER TEST
2585 015236 005337 015276      DEC UNTCN ;DECREMENT UNIT COUNT
2586 015242 005237 015300      INC UNTCN ;INCREMENT UNIT UNDER TEST CODE
2587 015246 005737 015276      DUA121: TST UNTCN ;DO
2588 015252 001402      BEQ END121 ;UNTIL
2589 015254 000137 014756      JMP BDA121 ;ALL UNITS DONE
2590 015260 000240      END121: NOP
2591 015262 000207      RTS PC ;RETURN
2592      :-----
    
```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 75  
MOD 1.2.1 - CK DRIVE AVAILABLE

2595		
2596	015264	000000
2597	015266	000000
2598	015270	000000
2599	015272	000000
2600	015274	000000
2601	015276	000000
2602	015300	000000
2603	015302	000000
2604	015304	000000
2605		

```

:-----:
REFCMD: 0      : REFORMAT COMMAND
INTCMD: 0      : INITIAL COMMAND WORD
DRIVEN: 0      : DRIVE NUMBER
ITCSAD: 0      : INITIAL C & S ADR
ITDBAD: 0      : INITIAL DATA BUFFER ADR
UNTCNT: 0      : UNIT COUNT
UNTCO: 0      : UNIT CODE
SUTPOS: 0      : SYS UNDER TST POSITION
FORMCK: 0      : FORMATT CK FLAG
:-----:

```

HARDWARE TFSTS MACRO M1200 15-DEC-82 13:50 PAGE 77  
 MOD 1.2.1.1 - REFORMAT DRIVE DENSITY

```

2608 .SBTTL MOD 1.2.1.1 - REFORMAT DRIVE DENSITY
2609 -----
2610
2611 015306 033737 015302 002232 REFDRV: BIT SUTPOS,SUT ;IF UNIT SELECTED IN
2612 015314 001003 BNE IA1211 ;SYS UNDER TEST
2613 015316 000137 016012 JMP X1211 ;THEN
2614 015322 BGNSEG ;BEGIN SEGMENT-FOR LOOP ON ERROR
2615 015324 032737 000001 002204 IA1211: BIT #1,SWREG ;IF DOUBLE DENSITY
2616 015332 001417 BEQ IC1211 ;SET, THEN
2617 015334 032777 000040 177732 IB1211: BIT #40,@ITDBAD ;IF DISKETTE IS NOT DOUBLE DENSITY
2618 015342 001011 BNE LB1211 ;THEN
2619 015344 012737 016401 016130 MOV #ITMSG3,ITMSG ;SET MSG# DSK SGL DEN
2620 015352 004737 016102 CALL ITPRNT ;CALL PRINT -
2621 015356 012737 000400 015264 MOV #BIT8,REFCMD ;SET REFORMAT CMD TO DOUBLE DENSITY
2622 015364 000417 BR ID1211 ;BR TO IF 'D'
2623 015366 000137 016012 LB1211: JMP X1211 ;ELSE BR TO END
2624 015372 032777 000040 177674 IC1211: BIT #40,@ITDBAD ;IF DISKETTE
2625 015400 001002 BNE 1$ ;IS NOT SINGLE DENSITY, THEN
2626 015402 000137 016012 JMP X1211 ;
2627 015406 012737 016576 016130 1$: MOV #ITMSG6,ITMSG ;SET MSG# DSK DBL DEN
2628 015414 004737 016102 CALL ITPRNT ;CALL PRINT -
2629 015420 005037 015264 CLR REFCMD ;SET REFORMAT CMD TO SINGLE DENSITY
2630 015424 ID1211: MANUAL ;IF MANUAL INTERVENTION
2631 015426 BNCOMPLETE LD1211 ;IS ALLOWED,THEN
2632 015430 GMANIL FCKMSG,FORMCK,1,YES
2633 015444 005737 015304 IE1211: TST FORMCK ;IF REFORMATT
2634 015450 001544 BEQ LE1211 ;OK, THEN
2635 015452 005037 015304 CLR FORMCK ;CLEAR REFORMATT CK
2636 015456 052737 000011 015264 BIS #11,REFCMD ;SET REFORMAT CMD
2637 015464 032737 000001 015300 IF1211: BIT #1,UNTCO ;IF DRIVE #1
2638 015472 001403 BEQ IG1211 ;SELECTED
2639 015474 052737 000020 015264 BIS #BIT4,REFCMD ;SET DRIVE #1 ON REFORMAT CMD
2640 015502 005737 002172 IG1211: TST RXXX ;IF RXXX
2641 015506 001407 BEQ EG1211 ;DEVICE AND
2642 015510 032737 000002 015300 BIT #2,UNTCO ;SIDE #1
2643 015516 001403 BEQ EG1211 ;SELECTED, THEN
2644 015520 052737 001000 015264 BIS #BIT9,REFCMD ;SET SIDE #1 ON REFORMAT CMD
2645 015526 013777 015264 177536 EG1211: MOV REFCMD,@ITCSAD ;SEND REFORMAT CMD
2646 015534 013737 015272 025332 MOV ITCSAD,CSRADR ;PASS UNIT ADRS
2647 015542 012737 000200 025330 MOV #TRBIT,RDYWD ;PASS 'TR' BIT TO TEST
2648 015550 004737 025230 CALL DELAY ;CALL DELAY
2649 015554 005737 002274 IH1211: TST ERRSY ;IF
2650 015560 001070 BNE LH1211 ;T.O. ERR
2651 015562 012777 000111 177504 MOV #111,@ITDBAD ;SEND VARIFY WORD (ASCII 'I')
2652 015570 013702 002334 MOV UNIT,R2 ;SETUP UNIT # PRT
2653 015574 012701 016753 MOV #ITMSG9,R1 ;SET MSG# WRG DEN REFORMAT
2654 015600 004737 004536 CALL PRIBIS ;CALL PRINT BASIC-1 ARG
2655 015604 013737 015272 025332 MOV ITCSAD,CSRADR ;SET UNIT BUS ADR
2656 015612 012737 000040 025330 MOV #DNBIT,RDYWD ;SET DONE BIT TST
2657 015620 013737 025324 016014 MOV RYDX,SAVDLY ;SAVE NORMAL DELAY MULTIPLIER
2658 015626 012737 001000 025324 MOV #1000,RYDX ;SET DELAY MULT HIGH
2659 015634 004737 025230 CALL DELAY ;DELAY UNTIL DONE OR T. O.
2660 015640 013737 016014 025324 MOV SAVDLY,RYDX ;RESET DELAY MULT
2661 015646 017737 177420 002246 MOV @ITCSAD,CSRUUT ;GET UUT CSR
2662 015654 017737 177414 002250 MOV @ITDBAD,ESRUUT ;GET UUT ESR
2663 015662 032777 000040 177402 II1211: BIT #40,@ITCSAD ;IF DONE BIT
2664 015670 001420 BEQ LI1211 ;SET, THEN

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 77-1  
 MOD 1.2.1.1 - REFORMAT DRIVE DENSITY

```

2665 015672 032777 100000 177372 IJ1211: BIT #100000,@ITCSAD :IF ERR BIT NOT SET
2666 015700 001444 BEQ X1211 :THEN BR TO EXIT
2667 015702 013737 015264 002332 MOV REFCMD,CMD :SET COMMAND FOR PRINT
2668 015710 013737 015272 002236 MOV ITCSAD,UUTADR :SET UUT ADR
2669 015716 004737 005026 CALL RDERCD :CALL DEVICE READ ERROR CODE
2670 015722 012737 017032 016130 MOV #ITER1,ITMSG :ELSE, SET "ERROR ON REFORMAT" MSG
2671 015730 000407 BR EH1211 :BR TO END IF 'H'
2672 015732 012737 017116 016130 LI1211: MOV #ITER2,ITMSG :SET "NO DONE BIT AFTER REFORMAT" MSG
2673 015740 000403 BR EH1211 :BR TO END IF 'H'
2674 015742 012737 016454 016130 LH1211: MOV #ITMSG4,ITMSG :SET MSG# NO "TR" BIT TIME OUT ERR
2675 015750 004737 016016 EH1211: CALL ITERR :CALL INITIALIZE ERROR
2676 015754 004737 002404 CALL PRERR :CALL PRINT ERR
2677 015760 000411 BR EA1211 :BR TO END IF 'A'
2678 015762 012737 016652 016130 LE1211: MOV #ITMSG7,ITMSG :SET MSG# DISK WRG DEN
2679 015770 000403 BR ED1211 :BR TO END IF 'D'
2680 015772 012737 016704 016130 LD1211: MOV #ITMSG8,ITMSG :SET MSG# MAN INTERVENTION NOT ALL
2681 016000 004737 016016 ED1211: CALL ITERR :CALL INITIALIZE ERROR
2682 016004 EA1211: ENDSEG :END SEGMENT-TO LOOP ON ERROR
2683 016006 004737 016064 CALL ITDROP :CALL DROP UNIT
2684 016012 000207 X1211: RTS PC :RETURN
2685 :-----:
2686 016014 000000 SAVDLY: 0 :SAVE NORMAL DELAY MULTIPLIER
2687 :-----:

```



HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 79  
 - MOD 1.2.U.3 - INITIALIZE ERROR

```

2690          .SBTTL - MOD 1.2.U.3 - INITIALIZE ERROR
2691          :-----:
2692
2693 016016 012737 000310 002376 ITERR: MOV #200,ERRNBR ;SET ERR NBR = INIT ERR
2694 016024 012737 016132 002400      MOV #ITERMG,ERRMSG ;
2695 016032 012737 004506 002402      MOV #NONE,ERRBLK ;
2696 016040 012737 000001 002374      MOV #1,ERRTYP ;SET ERR TYP = DEV FTL
2697 016046 013737 002334 002074      MOV UNIT,L&LUN ;SETUP LUN FOR PRINT
2698 016054      ERROR ;CALL ERROR
2699 016056 004737 016102      CALL ITPRNT ;CALL INITIALIZE PRINT
2700 016062 000207      RETURN ;RETURN
2701          :-----:
2702
2703          .SBTTL - MOD 1.2.U.4 - INITIALIZE DROP
2704          :-----:
2705 016064 013737 015302 013440 ITDROP: MOV SUTPOS,SUTDRP ;SETUP SYS. UNDER TEST DROP BIT
2706 016072      DODU UNIT ;DROP THIS UNIT FROM TEST
2707 016100 000207      RTS PC ;RETURN
2708          :-----:
2709
2710          .SBTTL - MOD 1.2.U.5 - INITIALIZE PRINT
2711          :-----:
2712
2713 016102 013702 002334 ITPRNT: MOV UNIT,R2 ;SETUP TO PRINT UNIT #
2714 016106 012701 016153      MOV #ITERUT,R1 ;SETUP MSG
2715 016112 004737 004536      CALL PRTB1S ;PRINT BASIC-1 ARG
2716 016116 013701 016130      MOV ITMSG,R1 ;SETUP TO PRINT MSG
2717 016122 004737 004516      CALL PRTB0S ;PRINT BASIC-0 ARG
2718 016126 000207      RTS PC ;RETURN
2719          :-----:
2720 016130 000000 ITMSG: 0 ;INITIALIZE MSG#
2721          :-----:
2722 016132 111 116 111 ITERMG: .ASCIZ /INITIALIZE ERROR/
2723 016153 045 101 040 ITERUT: .ASCIZ /%A UNIT#%D1/
2724 016167 045 101 055 INTER2: .ASCIZ /%A---NO DONE BIT AFTER BUS INITIALIZE/
2725 016235 045 101 055 INTER3: .ASCIZ /%A---NO DONE BIT AFTER PROG. INITIALIZE/
2726 016305 045 116 045 INTER4: .ASCIZ /%N% NO SYSTEM TO TEST/
2727 016334 045 101 055 ITMSG1: .ASCIZ /%A- NO DRIVE READY/
2728 016357 045 101 055 ITMSG2: .ASCIZ /%A- NO SIDE READY/
2729 016401 045 101 055 ITMSG3: .ASCIZ /%A- WRONG DENSITY -SINGLE DENSITY DISKETTE/
2730 016454 045 101 055 ITMSG4: .ASCIZ /%A- "TR" BIT AFTER SET DENSITY CMD%N/
2731 016521 045 101 055 ITMSG5: .ASCIZ /%A- NOT CAPABLE OF DOUBLE DENSITY OPERATIONS/
2732 016576 045 101 055 ITMSG6: .ASCIZ /%A- WRONG DENSITY - DOUBLE DENSITY DISKETTE/
2733 016652 045 101 040 ITMSG7: .ASCIZ /%A DISKETTE WRONG DENSITY/
2734 016704 045 101 040 ITMSG8: .ASCIZ /%A MAN. INTERVENTION REQ'D - REFORMAT/
2735 016753 045 101 040 ITMSG9: .ASCIZ /%A UNIT#%D1%-REFORMATTING, DO NOT INTERRUPT%N/
2736 017032 045 101 055 ITER1: .ASCIZ /%A- ERROR BIT SET AFTER REFORMAT COMMAND SEQUENCE%N/
2737 017116 045 101 055 ITER2: .ASCIZ /%A- NO DONE BIT AFTER REFORMAT COMMAND SEQUENCE%N/
2738 017200 045 101 055 ITER3: .ASCIZ /%A- AC LOW BIT SET/
2739 017223 040 040 040 FCKMSG: .ASCIZ / ->REFORMAT DISKETTE - ARE YOU SURE?/
2740          .EVEN
2741          :-----:

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 81  
 - MOD 1.2.U.5 - INITIALIZE PRINT

```

2744
2745      .SBTTL MOD 1.3 - GET EXERCISE
2746      :-----
2747
2748 017302 013737 002200 017750 GTEX:  MOV    TSTPAT,PAT      ;GET TEST PATTERN #
2749 017310 004737 017376          CALL    STSTPA        ;CALL MOD 1.3.1 SET TEST PATTERN
2750 017314 013737 002202 020654          MOV    TRKSEQ,SEQUEN ;GET TRACK SEQ #
2751 017322 013737 002206 020650          MOV    OTDITK,OD     ;GET OUTSIDE DIA. TRK
2752 017330 013737 002210 020652          MOV    INDITK,ID     ;GET INSIDE DIA. TRK
2753 017336 004737 017752          CALL    STKSEQ       ;CALL MOD 1.3.2 SET TRACK SEQUENCE
2754 017342 005737 014074          IFB13: TST    FIRST   ;IF A FIRST PASS
2755 017346 001007          BNE    THC13        ;THEN
2756 017350 032737 000040 002204          IFC13: BIT    #40,SWREG ;IF CLEAR STATISTICAL TABLES
2757 017356 001406          BEQ    END13        ;IS SELECTED THEN
2758 017360 042737 000040 002204          BIC    #40,SWREG    ;CLEAR SELECTED - CLR STAT TABLE
2759 017366 004737 020656          THC13: CALL   CLRSTA  ;CALL MOD 1.3.3 - CLEAR STATISTICAL TABLES
2760 017372 000240          NOP
2761 017374 000207          END13: RTS    PC    ;RETURN
2762      :MOD 1.3 ----- END MODULE -----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 83  
MOD 1.3.1 - SET DATA PATTERN

```

2765 .SBTTL MOD 1.3.1 - SET DATA PATTERN
2766 -----
2767 PAT # ROUTINE DATA PATTERN
2768 -----
2769 0 RANDAT NO PATTERN SPECIFIED (FORCE RANDOM DATA)
2770 1 DATA0 ALL ZEROS
2771 2 DATA1 ALL ONES
2772 3 FLOAT0 FLOAT ZERO THRU ONE'S
2773 4 FLOAT1 FLOAT ONE THRU ZERO'S
2774 5 PAT125 ALTERNATING BITS IN ONE BYTE COMP IN NEXT
2775 6 PAT333 ALTERNATING 1'S PAIR & 0 IN ONE BYTE COMP IN NEXT
2776 7 RANDAT RANDOM
2777
2778 NOTE: DATA PATTERNS WILL BE MODIFIED SO BYTE #0 WILL CONTAIN TRACK ADDRESS
2779 AND BYTE #1 THE SECTOR ADDRESS IN WHICH THE DATA IS WRITTEN.
2780 THE LAST TWO BYTE: CONTAIN THE CHECK SUM NUMBERS.
2781 -----
2782 017376 042737 000377 017462 STSTPA: BIC #377,@#BRONPT ;CLEAR BRANCH OFFSET
2783 017404 005037 017744 CLR SUM ;SET UP FOR ACCUMULATION OF CHECK SUM
2784 017410 005737 017750 TST PAT ;IF NO PATTERN SPECIFIED FORCE PATTERN 7
2785 017414 001003 BNE 1$
2786 017416 012737 000007 017750 MOV #7,PAT
2787 017424 013704 017750 1$: MOV PAT,R4 ;GET PATTERN BITS
2788 017430 005304 DEC R4 ;ADJUST FOR CORRECT OFFSET
2789 017432 006304 ASL R4
2790 017434 150437 017462 BISB R4,@#BRONPT ;INSERT OFFSFT
2791 017440 012704 034010 MOV #DATPAT+2,R4 ;SET UP ADDRESS OF FIRST BYTE
2792 017444 013705 002252 MOV WDCNT,R5 ;SETUP WORD COUNT
2793 017450 006305 ASL R5 ;DOUBLE WORD COUNT FOR ADR
2794 017452 062705 034006 ADD #DATPAT,R5 ;ADD DATA PATTERN ADR
2795 017456 162705 000004 SUB #4,R5 ;ADJ. FOR CHECKSUM
2796 017462 000777 BRONPT: BR ;BRANCH BY OFFSET SELECTED
2797 017464 000137 017520 JMP DATA0 ;000 DATA BYTE
2798 017470 000137 017536 JMP DATA1 ;377 DATA BYTE
2799 017474 000137 017546 JMP FLOAT0 ;FLOAT A 0 THROUGH ALL 1'S
2800 017500 000137 017614 JMP FLOAT1 ;FLOAT A 1 THROUGH ALL 0'S
2801 017504 000137 017622 JMP PAT125 ;125/052 DATA WORD
2802 017510 000137 017646 JMP PAT333 ;314/063 DATA WORD
2803 017514 000137 017656 JMP RANDAT ;RANDOM DATA BYTE
2804 -----
2805 017520 005037 017746 DATA0: CLR DATBYT
2806 017524 004737 017704 PG: JSR PC,LOAD ;GO LOAD THE DATA BUFFER
2807 017530 005705 TST R5 ;IF R5
2808 017532 001463 BEQ END131 ;NOT =0 ,THEN
2809 017534 000773 BR PG
2810 -----
2811 017536 112737 000377 017746 DATA1: MOVB #377,DATBYT
2812 017544 000767 BR PG
2813 -----
2814 017546 112737 000376 017746 FLOAT0: MOVB #376,DATBYT ;SET UP A ONES FIELD
2815 017554 000261 XPG: SEC ;SET THE C BIT TO ROTATE THROUGH THE DATA
2816 017556 012702 000000 1$: MOV #0,R2 ;CLR R2 (CAN'T USE "CLR" AS IT CLEARS "C" BIT)
2817 017562 103001 BCC 2$ ;BR IF THE "C" BIT IS CLEARED
2818 017564 005202 R2 ;SET R2 IF NOT
2819 017566 004737 017704 2$: JSR PC,LOAD ;GO LOAD THE DATA BUFFER
2820 017572 005705 TST R5 ;IF R5
2821 017574 001442 BEQ END131 ;NOT ZERO THEN

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 83-1  
 MOD 1.3.1 - SET DATA PATTERN

```

2822 017576 000241          CLC
2823 017600 005702          TST      R2          ;IS R2 NONZERO
2824 017602 001401          BEQ      3$
2825 017604 000261          SEC          ;YES, SET THE 'C' BIT
2826 017606 106137 017746  3$:  ROLB   DATBYT
2827 017612 000761          BR      1$
-----
2828
2829 017614 005037 017746  FLOAT1: CLR   DATBYT
2830 017620 000755          BR      XPG
-----
2831
2832 017622 112737 000125 017746  PAT125: MOVB  #125,DATBYT
2833 017630 004737 017704  XPG:   JSR   PC,LOAD
2834 017634 005705          TST      R5          ;IF R5
2835 017636 001421          BEQ      END131      ;NOT ZERO THEN
2836 017640 105137 017746  COMB   DATBYT
2837 017644 000771          BR      XPG
-----
2838
2839 017646 112737 000333 017746  PAT333: MOVB  #333,DATBYT
2840 017654 000765          BR      XPG
-----
2841
2842 017656 004737 004560 017746  RANDAT: JSR   PC,RANGEN ;GET RANDOM NUMBER
2843 017662 113737 004652  MOVB   RANUM,DATBYT
2844 017670 004737 017704  JSR   PC,LOAD
2845 017674 005705          TST      R5          ;IF R5
2846 017676 001401          BEQ      END131      ;NOT ZERO THEN
2847 017700 000766          BR      RANDAT
-----
2848
2849 017702 000207  END131: RTS   PC          ;RETURN.
-----
2850
2851
2852
-----
2853 017704 063737 017746 017744  LOAD:  ADD   DATBYT,SUM ;ACCUMULATE THE PATTERN CHECK SUM
2854 017712 113724 017746  MOVB   DATBYT,(R4)+ ;LOAD THE DATA BUFFER
2855 017716 020504          CMP     R5,R4      ;HAVE 124 BYTES BEEN GENERATED
2856 017720 001401          BEQ     1$         ;IF YES, RETURN
2857 017722 000407          BR     ENLDL      ;IF NO, RETURN TO PATTERN GENERATOR
2858 017724 113724 017744  1$:   MOVB  SUM,(R4)+ ;PUT CHECKSUM INTO TABLE
2859 017730 005137 017744  COM    SUM          ;COMPLIMENT CHECKSUM
2860 017734 113714 017744  MOVB  SUM,(R4)     ;PUT COMP CHECK SUM INTO TABLE
2861 017740 005005          CLR    R5          ;CLEAR TEMP #5 - FLAG DONE MODULE
2862 017742 000207  ENLDL: RTS   PC          ;RETURN
-----
2863
2864 017744 000000  SUM:   0
2865 017746 000000  DATBYT: 0
2866 017750 000000  PAT:   0
2867          ;MOD 1.3.1 ----- END MODULE -----

```

2870  
 2871  
 2872  
 2873  
 2874  
 2875  
 2876  
 2877  
 2878  
 2879  
 2880  
 2881  
 2882  
 2883  
 2884 017752 005037 020634  
 2885 017756 005037 020642  
 2886 017762 005037 020640  
 2887 017766 112737 000177 020642  
 2888 017774 113737 020650 020640  
 2889 020002 005037 020646  
 2890 020006 113737 020652 020646  
 2891 020014 005037 020644  
 2892 020020 113737 020650 020644  
 2893 020026 013737 020646 020636  
 2894 020034 163737 020644 020636  
 2895 020042 005237 020636  
 2896 020046 002005  
 2897 020050 012737 100000 002274  
 2898 020056 000137 020632  
 2899 020062 013737 002202 020654  
 2900 020070 142737 000377 020126  
 2901 020076 005737 020654  
 2902 020102 001003  
 2903 020104 012737 000007 020654  
 2904 020112 013704 020654  
 2905 020116 005304  
 2906 020120 006304  
 2907 020122 150437 020126  
 2908 020126 000777  
 2909 020130 000137 020164  
 2910 020134 000137 020220  
 2911 020140 000137 020254  
 2912 020144 000137 020272  
 2913 020150 000137 020340  
 2914 020154 000137 020422  
 2915 020160 000137 020476  
 2916  
 2917 020164 123737 020646 020642  
 2918 020172 001004  
 2919 020174 012737 177777 020640  
 2920 020202 000405  
 2921 020204 113737 020644 020640  
 2922 020212 005237 020644  
 2923 020216 000565  
 2924  
 2925 020220 123737 020644 020642  
 2926 020226 001004

SBTTL MOD 1.3.2 - SET TRACK SEQUENCE

```

-----
      SEQ #   SEQUENCE
-----
      0      NO SEQUENCE SPECIFIED (DEFAULT TO SEQ /)
      1      INCREMENT FROM OD TO ID
      2      DECREMENT FROM ID TO OD
      3      INCREMENT THEN DECREMENT TRACKS
      4      BOUNCE BETWEEN ID AND OD
      5      BOUNCE BETWEEN DECREASING ID & INCREASING OD
      6      STROBE BETWEEN OD AND DECREASING ID
      7      RANDOM TRACK SELECTION
-----
STKSEQ: CLR      TKTBPT      ;CLEAR TRK TBL PTR
        CLR      PRESTK     ;CLEAR PRESENT TRK
        CLR      TARGET     ;CLEAR TARGET TRK
        MOV      #177,PRESTK ;INIT PRESENT TRK TO HANDLE TRK #0
        MOV      OD,TARGET  ;INIT OD AS TARGET TRACK
        CLR      XID        ;INIT WORDING ID AND OD LOCATIONS
        MOV      ID,XID     ;SAVE INSIDE DIA. IN TEMP INSIDE DIA.
        CLR      XOD        ;CLEAR TEMP OUTSIDE DIA
        MOV      OD,XOD     ;SAVE OUTSIDE DIA. IN TEMP OUTSIDE DIA.
        MOV      XID,TRKCN  ;SET UP NUMBER OF TRACK MOVEMENTS
        SUB      XOD,TRKCN  ;
        INC      TRKCN      ;INCREMENT # OF TRACKS
        BGE      GTTK       ;IF # OF TRACKS IS NEGATIVE, THEN
        MOV      #10000,ERRSY ;SET SYSTEM ERROR
        JMP      ENDTKS     ;EXIT
GTTK:   MOV      TRKSEQ,SEQUEN ;GET TRACK SEQUENCE #
        BIC      #377,@#BRONTK ;CLEAR OUT BRANCH OFFSET
        TST      SEQUEN     ;IF TRACK SEQUENCE
        BNE      1$        ;EQUALS ZERO, THEN
        MOV      #7,SEQUEN  ;FORCE SEQ #7-RANDOM
1$:     MOV      SEQUEN,R4   ;GET SEQUENCE BITS
        DEC      R4        ;ADJUST FOR CORRECT OFFSET
        BRONTK: BIS      R4,@#BRONTK ;THIS BR INST. IS MODIFIED SELECTED TRACK SEQUENCE
        BR      .          ;BRANCH TO SELECTED TRACK SEQUENCE
        JMP      SEQ1
        JMP      SEQ2
        JMP      SEQ3
        JMP      SEQ4      ;BOUNCE ID TO OD
        JMP      SEQ5      ;DECREASING BOUNCE
        JMP      SEQ6      ;STROBE
        JMP      SEQ7      ;RANDOM
-----
SEQ1:   CMP      XID,PRESTK  ;IF PRESENT TRACK=ID
        BNE      1$         ;THEN
        MOV      #-1,TARGET  ;TERMINATE TABLE
        BR      2$         ;END SEQ1
1$:     MOV      XOD,TARGET  ;ELSE SET NEW TRACK-OUTSIDE DIA
        INC      XOD        ;INCREMENT OUTSIDE DIA
2$:     BR      NEWTRK     ;END SEQ1
-----
SEQ2:   CMP      XOD,PRESTK  ;
        BNE      1$
    
```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 85-1  
 MOD 1.3.2 - SET TRACK SEQUENCE

```

2927 020230 012737 177777 020640      MOV    #-1,TARGET      ;TERMINATE TABLE
2928 020236 000405                    BR     2$              ;END SEQ2
2929 020240 013737 020646 020640 1$:  MOV    XID,TARGET      ;SET NEXT TRACK=INSIDIA
2930 020246 005337 020646          DEC    XID              ;DECREMENT INSIDE DIA
2931 020252 000547          BR     2$              ;
2932                                     ;-----
2933 020254 005701          SEQ3:  TST    R1          ;IF MODE
2934 020256 001402          BEQ    1$              ;NOT EQUAL TO ZERO
2935 020260 005001          CLR    R1              ;THEN CHANGE MODE
2936 020262 000756          BR     SEQ2            ;DO SEQ2
2937 020264 012701 000001 1$:  MOV    #1,R1           ;ELSE CHANGE MODE
2938 020270 000735          BR     SEQ1            ;DO SEQ1
2939                                     ;-----
2940 020272 005701          SEQ4:  TST    R1          ;IF MODE
2941 020274 001405          BEQ    1$              ;NOT EQUAL TO ZERO
2942 020276 113737 020644 020640      MOVB   XOD,TARGET      ;THEN SET NEXT TRACK=OUTSIDE DIA
2943 020304 005001          CLR    R1              ;CHANGE MODE
2944 020306 000405          BR     2$              ;BR
2945 020310 113737 020646 020640 1$:  MOVB   XID,TARGET      ;ELSE SET NEXT TRACK=INSIDE DIA
2946 020316 012701 000001  MOV    #1,R1           ;TERMINATE TABLE
2947 020322 005337 020636          DEC    TRKCNT          ;
2948 020326 001003          BNE    3$              ;
2949 020330 012737 177777 020640      MOV    #-1,TARGET      ;TERMINATE TABLE
2950 020336 000515          BR     NEWTRK          ;
2951                                     ;-----
2952 020340 123737 020646 020644  SEQ5:  CMPB   XID,XOD        ;IF INSIDE & OUTSIDE DIA
2953 020346 001421          BEQ    2$              ;NOT EQUAL
2954 020350 005701          TST    R1              ;THEN, IF MODE
2955 020352 001407          BEQ    1$              ;
2956 020354 005001          CLR    R1              ;CHANGE MODE
2957 020356 013737 020644 020640      MOV    XOD,TARGET      ;SET NEXT TRACK=OUTSIDE DIA
2958 020364 005237 020644          INC    XOD             ;INCREMENT OUTSIDE DIA
2959 020370 000413          BR     3$              ;END SEQ5
2960 020372 012701 000001 1$:  MOV    #1,R1           ;CHANGE MODE
2961 020376 013737 020646 020640      MOV    XID,TARGET      ;SET NEXT TRACK=INSIDE DIA
2962 020404 005337 020646          DEC    XID             ;DECREMENT INSIDE DIA
2963 020410 000403          BR     3$              ;END SET5
2964 020412 012737 177777 020640 2$:  MOV    #-1,TARGET      ;TERMINATE TABLE
2965 020420 000464          BR     NEWTRK          ;
2966                                     ;-----
2967 020422 123737 020646 020644  SEQ6:  CMPB   XID,XOD        ;
2968 020430 001416          BEQ    1$              ;
2969 020432 123737 020642 020644      CMPB   PRESTK,XOD      ;IF O.D. JUST DONE
2970 020440 001006          BNE    3$              ;THEN
2971 020442 113737 020646 020640      MOVB   XID,TARGET      ;SET TO DO I.D.
2972 020450 005337 020646          DEC    XID             ;DECREMENT I.D. FOR NEXT
2973 020454 000407          BR     2$              ;
2974 020456 113737 020644 020640 3$:  MOVB   XOD,TARGET      ;ELSE SET TO DO O.D.
2975 020464 000403          BR     2$              ;
2976 020466 012737 177777 020640 1$:  MOV    #-1,TARGET      ;
2977 020474 000436          BR     NEWTRK          ;
2978                                     ;-----
2979 020476 000240          SEQ7:  NOP                    ;
2980 020500 004737 004560          JSR    PC,RANGEN       ;GET A RANDOM NUMBER
2981 020504 042737 177600 004652      BIC    #177600,RANUM   ;CLEAR ALL BUT LOW 7 BITS
2982 020512 123737 004652 020646  IDCOMP: CMPB   RANUM,XID     ;IF RANUM LARGER THAN ID ADDRESS
2983 020520 003401          BLE    ODCOMP          ;THEN
    
```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 85-2  
 MOD 1.3.2 - SET TRACK SEQUENCE

```

2984 020522 000765          BR      SEQ7          ;BR TO GET ANOTHER RANDOM NUMBER
2985 020524 123737 004652 020644 ODCOMP: CMPB   RANUM,XOD      ;IF RANUM SMALLER THAN OD ADDRESS
2986 020532 002001          BGE     PRESCK       ;THEN
2987 020534 000760          BR      SEQ7          ;BR TO GET ANOTHER RANDOM NUMBER
2988 020536 123737 004652 020642 PRESCK: CMPB   RANUM,PRESK  ;IF RANUM EQUALS PRESENT TRACK
2989 020544 001754          BEQ     SEQ7          ;GET ANOTHER RANDOM NUMBER
2990 020546 013737 004652 020640      MOV    RANUM,TARGET ;RANUM OK PUT IT IN TARGET TRACK
2991 020554 005337 020636      DEC    TRKCNT
2992 020560 001003          BNE     1$
2993 020562 012737 177777 020640      MOV    #-1,TARGET  ;TERMINATE TABLE
2994 020570 000400          1$:   BR      NEWTRK

```

```

2995
2996 020572 012702 033553      NEWTRK: MOV    #TRKTBL-1,R2
2997 020576 005237 020634      INC    TKTBPT
2998 020602 063702 020634      ADC    TKTBPT,R2
2999 020606 113712 020640      MOVB   TARGET,(R2)
3000 020612 005737 020640      1ST   TARGET
3001 020616 100405          BMI    ENDTKS
3002 020620 113737 020640 020642      MOVB   TARGET,PRESK
3003 020626 000137 020126      JMP    BRONTK
3004 020632 000207          ENDTKS: RTS    PC

```

```

3005
3006 020634 000000          TKTBPT: 0          ;TRACK TABLE POINTER
3007 020636 000000          TRKCNT: 0          ;TRACK COUNT
3008 020640 000000          TARGET: 0         ;TARGET TRACK
3009 020642 000000          PRESTK: 0         ;PRESENT TRACK
3010 020644 000000          XOD: 0            ;X OUTSIDE DIA.
3011 020646 000000          XID: 0            ;X INSIDE DIA.
3012 020650 000000          OD: 0             ;OUTSIDE DIA.
3013 020652 000000          ID: 0             ;INSIDE DIA.
3014 020654 000000          SEQUEN: 0         ;SEQUENCE #

```

```

3015 ;MOD 1.3.2 ----- END MODULE -----

```

```

3016
3017
3018
3019
3020 .SBTTL MOD 1.3.3 - CLEAR STATISTICAL TABLES
3021 ;-----

```

```

3022
3023 020656 012701 007314      CLRSTA: MOV    #READSC,R1      ;SET UP BEGINNING ADDRESS
3024 020662 012702 011240      MOV    #ENDST,R2             ;SET UP TABLE LENGTH
3025 020666 005021          BDA133: CLR    (R1)+          ;CLEAR ADDRESSED LOCATION
3026 020670 020102          CMP    R1,R2
3027 020672 001375          BNE    BDA133                ;DO UNTIL LAST ADDRESS DONE
3028 020674 000207          END133: RTS    PC            ;RETURN
3029 ;MOD 1.3.3 ----- END MODULE -----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 87  
MOD 1.3.3 - CLEAR STATISTICAL TABLES

```

3032
3033
3034
3035
3036
3037 020676 000240
3038 020700 005737 014016
3039 020704 001417
3040 020706 012737 000001 024252
3041 020714 005037 021430
3042 020720 005037 021432
3043 020724 005037 021434
3044 020730 005037 021442
3045 020734 005037 021444
3046 020740 005037 021452
3047 020744 005037 021446
3048 020750 033737 021426 002232
3049 020756 001406
3050 020760 004737 004756
3051 020764 013737 005024 002234
3052 020772 000410
3053 020774 006337 021426
3054 021000 022737 000020 021426
3055 021006 003360
3056 021010 000137 021404
3057 021014
3058 021016 013737 002176 021424
3059 021024 004737 021454
3060 021030 013737 022156 021422
3061 021036 032737 000400 021422
3062 021044 001514
3063 021046 004737 032352
3064 021052 032737 004000 021422
3065 021060 001001
3066 021062 000411
3067 021064 023727 021432 000003
3068 021072 001065
3069 021074 013737 021432 021444
3070 021102 005037 021432
3071 021106 013737 002234 021450
3072 021114 052737 002000 021450
3073 021122 032737 001000 021422
3074 021130 001001
3075 021132 000410
3076 021134 012737 002000 021440
3077 021142 005737 021430
3078 021146 001420
3079 021150 005037 021430
3080 021154 053737 021444 002230
3081 021162 006337 021426
3082 021166 013737 002234 021450
3083 021174 052737 002000 021450
3084 021202 005037 021432
3085 021206 000504
3086 021210 005737 002244
3087 021214 001403
3088 021216 005037 002244

.SBTTL MOD 2.0 - SCHEDULE SYSTEM EXERCISE
-----
SCSYEX: NOP
IFK20: TST INITL
BEQ ELK20
MOV #1,INITTK
CLR EXHCP
CLR BTHDRV
CLR BDVSCD
CLR DVDNCK
CLR DRVDN
CLR ERTSAV
ELK20: CLR SFERR
IFA20: BIT SUTPTR,SUT
BEQ ELA20
CALL CVSTUT
MOV UNITST,UUT
BR BDB20
ELA20: ASL SUTPTR
DUC20: CMP #20,SUTPTR
BGT IFA20
JMP EDC20
BDB20: BGNSEG
MOV TSTN,EXN
CALL GETTST
MOV TSTWD,TST
IFB20: BIT #400,TST
BEQ ELB20
CALL STDVDN
IFC20: BIT #4000,TST
BNE IFI20
BR EIC20
IFI20: CMP BTHDRV,#3
BNE IFL20
MOV BTHDRV,DRVDN
EIC20: CLR BTHDRV
MOV UUT,RESTK
BIS #2000,RESTK
IFF20: BIT #1000,TST
BNE ELF20
BR EIF20
ELF20: MOV #2000,ADVTRK
IFG20: TST EXHCP
BEQ IFH20
CLR EXHCP
EIF20: BIS DRVDN,SDD
ASL SUTPTR
MOV UUT,RESTK
BIS #2000,RESTK
CLR BTHDRV
BR END20
IFH20: TST DELDAT
BEQ ELH20
CLR DELDAT

:
: IF INITIALIZE
: THEN
: SET INITIALIZE TRK FLG
: CLEAR EX HALF COMPL
: CLEAR BOTH DRV DONE FLG
: CLEAR BOTH DRV SEC DONE FLG
: CLEAR DRV DONE CK FLG
: CLEAR DRV DONE
: CLEAR ERR TYP SAVE
: CLEAR SFT ERR
: IF SYSTEM UNDER TEST BIT
: IS SET
: CALL MOD U.A.2 - CONVERT SUTPTR-->UUT
: SET UNIT UNDER TEST
: BR TO BEGIN 'B'
: SHIFT SUT POINTER TO TEST
: DO UNTIL SUT POINTER
: EQUALS 10000 BIN
: BR TO END DO 'C'
: BEGIN SEGMENT FOR ERROR LOOPS
: GET TEST # = EXERCISE #
: CALL MOD 2.1 - GET A TEST
: SAVE TEST WORD
: IF NEXT UNIT BIT
: IS SET THEN
: CALL MOD 2.6 -SET DRIVES DONE
: IF ADV TRK BIT
: IS NOT SET THEN
: BR TO END IF 'C'
: IF BOTH DRIVES DONE
: THEN
: SET BOTH DRVS DONE TEST
: CLEAR BOTH DRIVES DONE FLAG & THEN
: SET UUT TO RESET TRK
: SET INC TRK ONTO RESET TRK
: IF DEL DATA CK BIT
: IS SET THEN
: BR TO IF 'F'
: SET ADV TRK = INCR TRK
: IF EXERCISE 1/2 COMPLETE
: IS SET, THEN
: CLEAR EX HALF COMPLETE
: SET THIS DRV DONE
: SETUP PTR TO CK NXT UNIT
: GET UUT
: SET INCTRK ON RESET TRK FLAG
: CLEAR BOTH DRV DN FLAG
: BR TO END
: IF DEL DATA MODE
: IS SET
: CLEAR DEL DATA MODE

```



HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 87-1  
MOD 2.0 - SCHEDULE SYSTEM EXERCISE

```

3089 021222 000403
3090 021224 012737 000010 002244 ELH20: MOV #10,DELDAT ;BR TO END IF 'H'
3091 021232 005037 021444 EIH20: CLR DRVDN ;SET DEC DATA MODE
3092 021236 012737 000001 021430 MOV #1,EXHCP ;CLEAR DRV DON
3093 021244 000443 BR EIB20 ;SET EX 1/2 COMPLETE
3094 021246 032737 000003 021434 IFL20: BIT #3,BDVSCD ;BR TO END IF 'B'
3095 021254 001405 BEQ ELL20 ;IF BOTH DRV SEC DONE
3096 021256 005037 021434 CLR BDVSCD ;THEN
3097 021262 012737 004000 021440 MOV #4000,ADVTRK ;CLEAR DRV SEC DONE FLAGS
3098 021270 004737 022320 ELL20: CALL GTDRV ;ALLOW TRACK ADVANCE
3099 021274 000427 BR EIB20 ;CALL MOD 2.2 - GET A DRIVE
3100 021276 053737 021440 021436 ELB20: BIS ADVTRK,INCTRK ;BR TO END IF 'B'
3101 021304 013737 021422 023324 MOV TST,DRVST ;SET ADV TRK (IF SET BY PREV OP)
3102 021312 004737 022504 CALL XDVST ;PASS DRIVE TEST
3103 021316 013737 023324 025410 MOV DRVST,TSTEV ;CALL MOD 2.3 - EXECUTE DRIVE TEST
3104 021324 004737 025334 CALL EVTSTR ;PASS DRIVE TEST FOR EVAL
3105 021330 013701 021422 MOV TST,R1 ;CALL MOD 2.4 - EVAL. TEST RESULTS
3106 021334 042701 171777 BIC #171777,R1 ;GET DRV TST
3107 021340 010137 021436 MOV R1,INCTRK ;SAVE TRK BITS
3108 021344 005037 021440 CLR ADVTRK ;SET TRK BITS
3109 021350 005037 014016 CLR INITL ;CLEAR ADV TRK FLAG
3110 021354 000240 EIB20: NOP ;CLEAR INITIALIZE FLAG
3111 021356 005737 002276 IFM20: TST ERRTY ;IF ERR TYPE
3112 021362 001402 BEQ DUB20 ;NOT=0
3113 021364 004737 030702 CALL OTERTP ;CALL MOD 2.5 - O/P ERR TYPE
3114 021370 005737 002274 DUB20: TST ERRSY ;DO UNLESS SYSTEM ERROR
3115 021374 001011 BNE END20 ;NOT=0 THEN
3116 021376 ENDSEG ;END SEGMENT FOR ERROR LOOPS
3117 021400 000137 021014 JMP BDB20 ;BR TO END MOD
3118 021404 012737 000001 021426 EDC20: MOV #1,SUTPTR ;SET SYS UNDER TEST PTR
3119 021412 052737 000001 021446 BIS #1,SFERR ;SET SFT ERR
3120 021420 000207 END20: RTS PC ;END MODULE
-----
3121
3122 021422 000000 TST: 0 ;TEST FOR EXECUTION
3123 021424 000000 EXN: 0 ;EXERCISE #
3124 021426 000001 SUTPTR: 1 ;SYSTEM UNDER TEST POINTER
3125 021430 000000 EXHCP: 0 ;EXERCISE HALF COMPLETE (EX#7) DEL DATA PASS
3126 021432 000000 BTHDRV: 0 ;BOTH DRIVES DONE FLAG
3127 021434 000000 BDVSCD: 0 ;BOTH DRIVE SECTORS DONE FLAG
3128 021436 000000 INCTRK: 0 ;INCREMENT TRACK FLAGS
3129 021440 000000 ADVTRK: 0 ;ADVANCE TRACK FLAG
3130 021442 000000 DVDNCK: 0 ;DRV DONE CK FLAG
3131 021444 000000 DRVDN: 0 ;DRIVE DONE
3132 021446 000000 SFERR: 0 ;SOFTWARE ERR
3133 021450 000000 RESTK: 0 ;RESET TRK FLAG
3134 021452 000000 ERTSAV: 0 ;ERR TYP SAVE REG
3135 ;MOD 2.0 ----- END MODULE -----

```

```

3138      .SBTTL MOD 2.1 - GET A TEST
3139      ;-----
3140
3141 021454 000240      GETTST: NOP      ;
3142 021456 013701 021424      MOV      EXN,R1      ;GET EXERCISE NUMBER
3143 021462 006301      ASL      R1      ;DOUBLE EXERCISE NUMBER
3144 021464 012702 022164      MOV      #EXADTB,R2 ;GET EXERCISE ADDRESS TABLE
3145 021470 060102      ADD      R1,R2      ;CAL EXERCISE TO BE USED
3146 021472 011237 022154      MOV      (R2),EXADR ;GET BEGIN ADR EXERCISE
3147 021476 005737 014016      IFL21: TST      INITL ;IF INITIALIZE
3148 021502 001406      BEQ      IFA21      ;IS SET, THEN
3149 021504 005037 022152      CLR      TSTPTR     ;CLEAR TST PTR
3150 021510      IFF21: INLOOP    ;IF IN LOOP
3151 021512      BNCOMPLT IFA21    ;SET, THEN
3152 021514 000137 022122      JMP      EIF21      ;BR TO END IF 'F'
3153 021520 005737 002304      IFA21: TST      RETRY ;IF RETRY
3154 021524 001410      BEQ      IFB21      ;NOT=0, AND
3155 021526 032737 000004 002204      BIT      #BIT02,SWREG ;IF RETRY ON ERROR
3156 021534 001106      BNE      IFH21      ;IS NOT SET, THEN
3157 021536 032737 000004 002264      BIT      #EVL,FLGDRS ;IF DRS "EVL" FLAG
3158 021544 001102      BNE      IFH21      ;IS NOT SET, THEN
3159 021546 005737 022152      IFB21: TST      TSTPTR ;IF TST PTR
3160 021552 001006      BNE      IFC21      ;EQUALS ZERO
3161 021554 012737 000002 022152      MOV      #2,TSTPTR  ;ADV. TST PTR I CMD
3162 021562 005037 022160      CLR      TBPRCT     ;CLEAR TABLE PAIR COUNT
3163 021566 000555      BR      EIF21      ;BR TO END IF 'F'
3164 021570 005737 002262      IFC21: TST      SECDN ;IF SECTOR DONE IS
3165 021574 001447      BEQ      IFG21      ;SET THEN
3166 021576 005737 022160      IFK21: TST      TBPRCT ;IF TABLE PAIR CN1=1,
3167 021602 001444      BEQ      IFG21      ;THEN
3168 021604 062737 000002 022152      ADD      #2,TSTPTR  ;ADVANCE ONE TEST CMD
3169 021612 005037 022160      CLR      TBPRCT     ;CLEAR TABLE PAIR COUNT
3170 021616 005037 021442      CLR      DVDNCK     ;CLEAR DRV DONE CK FLAG
3171 021622 032737 040000 022156      IFD21: BIT      #40000,TSTWD ;IF DONE CK
3172 021630 001411      BEQ      IFM21      ;IS SET, THEN
3173 021632 005737 002260      TST      TRKDN      ;IF TRACK DONE IS
3174 021636 001406      BEQ      IFM21      ;SET, THEN
3175 021640 005037 002260      CLR      TRKDN      ;CLEAR TRK DONE
3176 021644 012737 000001 021442      MOV      #1,DVDNCK  ;SET DRV DONE CK
3177 021652 000523      BR      EIF21      ;BR TO END IF 'F'
3178 021654 032737 006000 022156      IFM21: BIT      #6000,TSTWD ;IF ADV OR INCR TRK
3179 021662 001517      BEQ      EIF21      ;IS SET, THEN
3180 021664 032737 100000 022156      IFN21: BIT      #100000,TSTWD ;IF '4 CMD SEQ'
3181 021672 001404      BEQ      ELN21      ;IS SET, THEN
3182 021674 162737 000010 022152      SUB      #10,TSTPTR ;BACK UP 4 CMDS
3183 021702 000507      BR      EIF21      ;BR TO END IF 'F'
3184 021704 162737 000004 022152      ELN21: SUB      #4,TSTPTR ;BACK UP TWO TEST CMDS
3185 021712 000503      BR      EIF21      ;BR TO END IF 'F'
3186 021714 005737 022160      IFG21: TST      TBPRCT ;IF TABLE PAIR COUNT
3187 021720 001406      BEQ      ELG21      ;EQUALS 1 THEN
3188 021722 005037 022160      CLR      TBPRCT     ;CLEAR TABLE PAIR COUNT
3189 021726 162737 000002 022152      SUB      #2,TSTPTR  ;BACK UP ONE CMD
3190 021734 000472      BR      EIF21      ;BR END IF 'f'
3191 021736 005237 022160      ELG21: INC      TBPRCT ;INCREMENT TABLE PAIR COUNT
3192 021742 062737 000002 022152      ADD      #2,TSTPTR  ;ADVANCE ONE CMD
3193 021750 000464      BR      EIF21      ;BR END IF 'F'
3194 021752 032737 000010 002304      IFH21: BIT      #10,RETRY ;IF NO DATA RETRY IS
    
```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 89-1  
MOD 2.1 - GET A TEST

```

3195 021760 001005          BNE      IF121          ;SET, CR
3196 021762 032737 000020 002304  BIT      #20,RETRY     ;IF NO CRC RETRY IS
3197 021770 001001          BNE      IF121          ;SET, THEN
3198 021772 000453          BR       EIF21          ;BR END IF 'F'
3199 021774 032737 000002 002304  IF121:  BIT      #2,RETRY     ;IF WRITE RETRY IS
3200 022002 001412          BEQ      IFJ21          ;SET, THEN
3201 022004 162737 000006 022152  SUB      #6,TSTPTR     ;BACK UP 3 CMDS
3202 022012 042737 000002 002304  BIC      #2,RETRY     ;CLEAR WRITE RETRY
3203 022020 012737 000003 022162  MOV      #3,TSVAVCT    ;SET TEST ADV COUNT=3
3204 022026 000433          BR       E1I21          ;BR TO END IF 'I'
3205 022030 032737 000004 002304  IFJ21:  BIT      #4,RETRY     ;IF READ RETRY IS
3206 022036 001412          BEQ      ELJ21          ;SET THEN
3207 022040 162737 000002 022152  SUB      #2,TSTPTR     ;BACK UP 1 CMD
3208 022046 042737 000004 002304  BIC      #4,RETRY     ;CLEAR READ RETRY
3209 022054 012737 000001 022162  MOV      #1,TSVAVCT    ;SET TEST ADV COUNT=1
3210 022062 000415          BR       E1I21          ;BR TO END IF 'I'
3211 022064 005337 022162          ELJ21:  DEC      TSVAVCT    ;DECREMENT TEST ADV COUNT
3212 022070 062737 000002 022152  ADD      #2,TSTPTR     ;ADV TEST POINTER 1 CMD
3213 022076 005737 022162          IF021:  TST      TSVAVCT    ;IF TEST ADV COUNTER
3214 022102 001007          BNE      EIF21          ;EQUALS ZERO, THEN
3215 022104 005037 002304          CLR      RETRY        ;CLEAR RETRY
3216 022110 005237 022160          INC      TBPRCT       ;SET TABLE PAIR COUNT
3217 022114 000402          BR       EIF21          ;BR TO END IF 'F'
3218 022116 005037 022160          E1I21:  CLR      TBPRCT    ;CLEAR TABLE PAIR CNT
3219 022122 0137C3 022152          EIF21:  MOV      TSTPTR,R3 ;GET TEST POINTER
3220 022126 063703 022154          ADD      EXADR,R3     ;CAL. CUR. TEST OF THIS EXERCISE
3221 022132 011337 022156          MOV      (R3),TSTWD   ;PASS UP TEST WORD
3222 022136 105713          IFE21:  TSTB      (R3)    ;IF CMD LOWER BYTE
3223 022140 002002          BGE      E1E21        ;EQUALS -1, THEN
3224 022142 005037 022152          CLR      TSTPTR      ;RESET TEST PTR
3225 022146 000240          E1E21:  NOP          ;
3226 022150 000207          RTS      PC           ;RETURN
3227
-----
3228 022152 000000          TSTPTR: .WORD      0    ;TEST POINTER
3229 022154 000000          EXADR:  .WORD      0    ;CURRENT EXERCISE TABLE BASE ADDRESS
3230 022156 000000          TSTWD:  .WORD      0    ;TEST WORD TO PASS UP
3231 022160 000000          TBPRCT: .WORD      0    ;TABLE PAIR COUNT
3232 022162 000000          TSVAVCT: .WORD     0    ;TEST ADVANCE COUNTER
3233
3234 022164 022300          EXADTB: .WORD      EX7  ;EXERCISE ADDRESS TABLE
3235 022166 022204          .WORD      EX1
3236 022170 022214          .WORD      EX2
3237 022172 022230          .WORD      EX3
3238 022174 022244          .WORD      EX4
3239 022176 022254          .WORD      EX5
3240 022200 022264          .WORD      EX6
3241 022202 022300          .WORD      EX7
-----

```

3245		.SBTTL - EXERCISE/TEST TABLE		
3246		EX1:	.WORD -1	
3247	022204		.WORD 0	/ FILL BUFFER
3248	022206		.WORD 44002	/ WRITE SECTOR
3249	022210		.WORD 777	/ -1
3250	022212		.WORD -1	
3251	022214	EX2:	.WORD 0	/ FILL BUFFER
3252	022216		.WORD 2	/ WRITE SECTOR
3253	022220		.WORD 3	/ READ SECTOR
3254	022222		.WORD 154001	/ EMPTY BUFFER
3255	022224		.WORD 777	/ -1
3256	022226		.WORD -1	
3257	022230	EX3:	.WORD 0	/ FILL BUFFER
3258	022232		.WORD 2	/ WRITE SECTOR
3259	022234		.WORD 3	/ READ SECTOR
3260	022236		.WORD 174001	/ EMPTY BUFFER
3261	022240		.WORD 777	/ -1
3262	022242		.WORD -1	
3263	022244	EX4:	.WORD 3	/ READ SECTOR
3264	022246		.WORD 64001	/ EMPTY BUFFER
3265	022250		.WORD 777	/ -1
3266	022252		.WORD -1	
3267	022254	EX5:	.WORD 3	/ READ SECTOR
3268	022256		.WORD 44001	/ EMPTY BUFFER
3269	022260		.WORD 777	/ -1
3270	022262		.WORD -1	
3271	022264	EX6:	.WORD 0	/ FILL BUFFER
3272	022266		.WORD 2	/ WRITE SECTOR
3273	022270		.WORD 3	/ READ SECTOR
3274	022272		.WORD 170001	/ EMPTY BUFFER
3275	022274		.WORD 4777	/ -1
3276	022276		.WORD -1	
3277	022300	EX7:	.WORD 0	/ FILL BUFFER
3278	022302		.WORD 2	/ WRITE SECTOR
3279	022304		.WORD 3	/ READ SECTOR
3280	022306		.WORD 172001	/ EMPTY BUFFER
3281	022310		.WORD 3	/ READ SECTOR
3282	022312		.WORD 64001	/ EMPTY BUFFER
3283	022314		.WORD 1777	/ -1
3284	022316		.WORD 1777	/ -1
3285				
3286			BIT#	NUMONIC
3287			----	-----
3288				
3289			15	4CMD
3290			14	DCK
3291			13	DACK
3292			12	RAW
3293			11	ADVTRK
3294			10	INCTK
3295			09	DDCHK
3296			08	NXTUNT
3297				
3298				

:MOD 2.1 ----- END MODULE -----

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 93  
- EXERCISE/TEST TABLE

```

3301
3302
3303          .SBTTL  MOD 2.2 - GET A DRIVE
3304          ;-----
3305
3306 022320 000240 GTDRV: NOP
3307 022322 032737 000001 002234 IFA22: BIT #1,UUT ;IF UUT=DRIVE 0
3308 022330 001024 BNE IFD22 ;THEN
3309 022332 032737 000002 002234 IFB22: BIT #2,UUT ;IF UNIT/SIDE UNDER TEST (UUT)
3310 022340 001404 BEQ ELB22 ;EQUALS 1
3311 022342 012737 000010 022502 MOV #10,TSTSUT ;SET TEST OF SYS. UNDER TEST UNIT/SIDE=1
3312 022350 000403 BR IFC22 ;BR TO IF 'C'
3313 022352 012737 000002 022502 ELB22: MOV #2,TSTSUT ;SET TEST OF SYS. UNDER TEST UNIT/SIDE=0
3314 022360 033737 022502 002232 IFC22: BIT TSTSUT,SUT ;IF DRIVE 1 SELECTED FOR TEST
3315 022366 001404 BEQ ELC22 ;THEN
3316 022370 052737 000001 002234 BIS #1,UUT ;SET UNIT UNDER TEST TO DRV #1
3317 022376 000427 BR EIE22 ;BR TO END IF 'E'
3318 022400 000417 ELC22: BR THE22 ;BR TO THEN 'E'
3319 022402 032737 000002 002234 IFD22: BIT #2,UUT ;IF UNIT/SIDE UNDER TEST (UUT)
3320 022410 001404 BEQ ELD22 ;EQUALS 1
3321 022412 012737 000004 022502 MOV #4,TSTSUT ;SET TEST OF SYS. UNDER TEST UNIT/SIDE 1
3322 022420 000403 BR IFE22 ;BR TO IF 'E'
3323 022422 012737 000001 022502 ELD22: MOV #1,TSTSUT ;SET TEST OF SYS. UNDER TEST UNIT/SIDE 0
3324 022430 033737 022502 002232 IFE22: BIT TSTSUT,SUT ;IF DRIVE 0 SELECTED FOR TEST
3325 022436 001404 BEQ ELE22 ;THEN
3326 022440 042737 000001 002234 THE22: BIC #1,UUT ;SET UNIT UNDER TEST TO DRV#0
3327 022446 000403 BR EIE22 ;BR TO END IF 'E'
3328 022450 052737 000001 002234 ELE22: BIS #1,UUT ;SET UNIT UNDER TEST TO DRV#1
3329 022456 013704 002234 EIE22: MOV UUT,R4 ;GET UNIT UNDER TEST
3330 022462 006304 ASL R4 ;DOUBLE IT
3331 022464 010437 002240 MOV R4,UUTOFF ;SET UUT OFFSET
3332 022470 062704 002336 ADD #U00,R4 ;GET UUT UNIT # FOR PRINT
3333 022474 011437 002334 MOV (R4),UNIT ;SET UNIT=PRINT UNIT #
3334 022500 000207 END22: RTS PC ;RETURN
3335          ;-----
3336 022502 000000 TSTSUT: 0
3337          ;MOD 2.2 ----- END MODULE -----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 95  
MOD 2.2 - GET A DRIVE

```

3340
3341
3342      .SBTTL  MOD 2.3 - EXECUTE DRIVE TEST
3343      -----
3344
3345 022504 013737 002252 023326 XDVTST: MOV      WDCNT,WDCNT      :SET DRIVE WORD CNT
3346 022512 013702 002240          MOV      UUTOFF,R2      :GET UUT OFFSET
3347 022516 005737 002172          IFA23: TST      RXXX          :IF DEVICE IS AN
3348 022522 001010          BNE      1$          :RX02 THEN
3349 022524 032737 000002 002234          BIT      #2,UUT      :IF UNIT UNDER TEST IS
3350 022532 001404          BEQ      1$          :#1 THEN
3351 022534 013737 002222 002236          MOV      U1ADR,UUTADR :GET UNIT #1 UNIBUS ADR
3352 022542 000403          BR       IF123      :BR TO END IF 'A'
3353 022544 013737 002220 002236 1$: MOV      UOADR,UUTADR :GET UNIT #0 UNIBUS ADR
3354 022552 005737 021450          IF123: TST      RESTK      :IF RESET TRK
3355 022556 001413          BEQ      IFB23      :IF SET, THEN
3356 022560 113705 021450          MOVVB   RESTK,R5      :GET UUT OFFSET
3357 022564 006305          ASL     R5          :DOUBLE OFFSET
3358 022566 062705 023306          ADD     #CTRK,R5      :ADD TRK TABLE ADR
3359 022572 013715 002206          MOV     OTDITK,(R5)   :RESET TO MIN TRK
3360 022576 005037 002262          CLR     SECDN        :CLEAR SEC DONE FLAG
3361 022602 005037 021450          CLR     RESTK        :CLEAR RESET TRK FLAG
3362 022606 005737 014016          IFB23: TST      INITL      :IF INITIALIZE IS
3363 022612 001415          BEQ     E1B23        :SET, THEN
3364 022614 012705 023276          MOV     #CSEC,R5      :GET START OF CUR TRK &SEC TBL
3365 022620 012704 000004          MOV     #4,R4          :SET TBL LENGTH
3366 022624 005025          1$: CLR     (R5)+      :CLEAR TABLES
3367 022626 005304          DEC     R4          :DECR TBL LENGTH
3368 022630 001375          BNE     1$          :DO UNTIL LENGTH=0
3369 022632 012704 000004          MOV     #4,R4          :SET TBL LENGTH
3370 022636 013725 002206          2$: MOV     OTDITK,(R5)+ :SET STARTING TRACKS
3371 022642 005304          DEC     R4          :DECREMENT TBL LENGTH
3372 022644 001374          BNE     2$          :DO UNTIL LENGTH=0
3373 022646 012701 023306          E1B23: MOV     #CTRK,R1      :GET BEGIN ADR DRIVE CURRENT TRK.
3374 022652 060201          ADD     R2,R1          :CAL. DRIVE CUR. TRK. LOCATOR
3375 022654 010137 023320          MOV     R1,CNTKLC      :SAVE DRV. CUR. TRK.
3376 022660 017737 000434 024240          MOV     @CNTKLC,CURTRK :GET DRIVE CUR. TRK.
3377 022666 012701 023276          MOV     #CSEC,R1      :GET BEGIN ADR DRIVE CUR. SEC.
3378 022672 060201          ADD     R2,R1          :CAL. DRIVE CUR. SEC. LOCATOR
3379 022674 010137 023316          MOV     R1,CNSCLC      :SAVE DRV CUR SEC LOC.
3380 022700 017737 000412 023710          MOV     @CNSCLC,CURSEC :GET DRIVE CUR SEC.
3381 022706          IFJ23: INLOOP      :IF IN LOOP
3382 022710          BNCOMPLETE IFC23    :THEN
3383 022712 000532          BR      E1J23        :BR TO END IF 'I'
3384 022714 005737 002304          IFC23: TST      RETRY      :IF RETRY IS
3385 022720 001447          BEQ     IFG23        :NOT=0, AND
3386 022722 032737 000004 002204          BIT     #BIT02,SWREG  :IF RETRY ON ERR
3387 022730 001004          BNE     IFD23        :SET OR
3388 022732 032737 000004 002264          BIT     #EVL,FLGDRS  :DRS "EVL" FLAG
3389 022740 001437          BEQ     IFG23        :IS SET, THEN
3390 022742 032737 000001 002304  IFD23: BIT     #1,RETRY      :IF SEEK RETRY
3391 022750 001001          BNE     1$          :IS = 0
3392 022752 000404          BR      2$          :THEN BR TO 2$
3393 022754 032737 000010 002204  1$: BIT     #BIT03,SWREG  :ELSE IF RECAL SWITCH
3394 022762 001003          BNE     THD23        :IS NOT SET
3395 022764 005037 023322          2$: CLR     SEEK        :THEN CLEAR SEEK FUNCTION FLAG
3396 022770 000420          BR      E1D23        :BR TO END IF 'D'

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 95-1  
MOD 2.3 - EXECUTE DRIVE TEST

```

3397 022772 012737 040000 024404 THD23: MOV #40000,DVTST ;PASS PROGRAM INITIALIZE TO DRIVE TEST
3398 023000 004737 024254          CALL GTDVFN ;CALL MOD 2.3.3 GET DRIVE FUNCTION
3399 023004 013737 023332 023330          MOV DRVFN,WDOT ;PASS DRIVE FUNCTION
3400 023012 013737 002236 025034          MOV UUTADR,CSADR ;SET ADR FOR DRIVE FUNCTION
3401 023020 004737 024406          CALL OTDVFN ;CALL MOD 2.3.4 O/P DRIVE FUNCTION
3402 023024 012737 000001 023322          MOV #1,SEEK ;SET SEEK FLAG
3403 023032 005037 002304          EID23: CLR RETRY ;CLEAR RETRY FLAGS
3404 023036 000460          BR EIJ23 ;BR TO END IF 'C'
3405 023040 013705 023324          IFG23: MOV DRVST,R5 ;SETUP DRIVE TST
3406 023044 042705 177770          BIC #177770,R5 ;FOR TYPE CK
3407 023050 005705          TST R5 ;IF DRIVE TST
3408 023052 001404          BEQ IFE23 ;IS NOT 'FILL BUFF'
3409 023054 022705 000003          CMP #3,R5 ;OR
3410 023060 001401          BEQ IFE23 ;NOT 'READ SEC' , THEN
3411 023062 000434          BR IFH23 ;BR TO IF 'H'
3412 023064 005737 002262          IFE23: TST SECDN ;IF SEC DONE
3413 023070 001417          BEQ ELE23 ;IS = 1
3414 023072 005737 021436          IFF23: TST INCTRK ;IF INCR TRK FLAGS
3415 023076 001414          BEQ ELE23 ;ARE SET ,THEN
3416 023100 013737 021436 024236          MOV INCTRK,TRKINC ;PASS TRK FLAGS
3417 023106 004737 023742          CALL GETTRK ;CALL MOD 2.3.2 GET TRACK
3418 023112 013777 024240 000200          MOV CURTRK,@CNTKLC ;SAVE CURRENT TRACK
3419 023120 012737 000001 023322          MOV #1,SEEK ;SET SEEK FLAG
3420 023126 000402          BR EIE23 ;BR TO END IF 'E'
3421 023130 005037 023322          ELE23: CLR SEEK ;RESET SEEK
3422 023134 017737 000156 023710          EIE23: MOV @CNSCLC,CURSEC ;PASS CURRENT SECTOR
3423 023142 004737 023334          CALL GETSEC ;CALL MOD 2.3.1 GET A SECTOR
3424 023146 013777 023710 000142          MOV CURSEC,@CNSCLC ;SAVE UPDATED CURRENT SECTOR
3425 023154 032737 000006 023324          IFH23: BIT #6,DRVST ;IF DRIVE TST
3426 023162 001006          BNE EIJ23 ;IS 'FILL BUFF' ,THEN
3427 023164 012701 034006          MOV #DATA PAT,R1 ;SET UP DATA PATTERN ADR
3428 023170 117721 000124          MOVB @CNTKLC,(R1)+ ;SET TRK ADR IN DATA BUF BYTE #0
3429 023174 117711 000116          MOVB @CNSCLC,(R1) ;SET SEC ADR IN DATA BUF BYTE#1
3430 023200 005037 024404          EIJ23: CLR DVTST ;CLEAR DRIVE TEST
3431 023204 113737 023324 024404          MOVB DRVST,DVTST ;PASS DRIVE TEST
3432 023212 004737 024254          CALL GTDVFN ;CALL MOD 2.3.3 GET DRIVE FUNCTION
3433 023216 013737 023332 002332          MOV DRVFN,CMD ;SET COMMAND FOR PRINT
3434 023224 013737 023332 023330          MOV DRVFN,WDOT ;PASS FUNCTION WORD (PASS TO 2.3.4)
3435 023232 017737 000062 025036          MOV @CNTKLC,TRKADR ;PASS CURRENT TRACK (PASS TO 2.3.4)
3436 023240 017737 000052 025040          MOV @CNSCLC,SECADR ;PASS CURRENT SECTOR (PASS TO 2.3.4)
3437 023246 013737 002236 025034          MOV UUTADR,CSADR ;PASS UUT C&S ADR (PASS TO 2.3.4)
3438 023254 004737 024406          CALL OTDVFN ;CALL MOD 2.3.4 O/P DRIVE FUNCTION
3439 023260 013737 025036 002254          MOV TRKADR,TRACK ;SAVE TRACK ADDR IN GLOBAL
3440 023266 013737 025040 002256          MOV SECADR,SECTOR ;SAVE SECTOR ADDR IN GLOBAL
3441 023274 000207          RTS PC ;RETURN
34'2

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 97  
 MOD 2.3 - EXECUTE DRIVE TEST

```

3445
3446
3447 023276 000000
3448 023300 000000
3449 023302 000000
3450 023304 000000
3451 023306 000000
3452 023310 000000
3453 023312 000000
3454 023314 000000
3455
3456 023316 000000
3457 023320 000000
3458 023322 000000
3459 023324 000000
3460 023326 000000
3461 023330 000000
3462 023332 000000
3463

```

---

```

CSEC:  .WORD  0          ;CURRENT DRV SECTOR TABLE
      .WORD  0
      .WORD  0
      .WORD  0
CTRK:  .WORD  0          ;CURRENT DRV TRK TABLE
      .WORD  0
      .WORD  0
      .WORD  0
CNSCLC: .WORD  0         ;CURRENT SECTOR LOCATOR
CNTKLC: .WORD  0         ;CURRENT TRACK LOCATOR
SEEK:   .WORD  0         ;SEEK FLAG
DRVST:  .WORD  0         ;DRIVE TEST
WDCT:   .WORD  0         ;WORD COUNT
WDOT:   .WORD  0         ;FUNCTION WORD TO SEND OUT
DRVFN:  .WORD  0         ;DRIVE FUNCTION WORD
;MOD 2.3 ----- END MODULE -----

```



HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 99  
MOD 2.3.1 - GET A SECTOR

```

3466                                     .SBTTL MOD 2.3.1 - GET A SECTOR
3467                                     -----
3468
3469 023334 005037 023704 GETSEC: CLR      UTSCDN      ;CLEAR UUT SECTOR DONE
3470 023340 013705 002234      MOV      UUT,R5      ;GET UNIT UNDER TST
3471 023344 006305          ASL      R5          ;DOUBLE FOR WRD ADR
3472 023346 005737 014016 IFI231: TST     INITL      ;IF INITIALIZE IS
3473 023352 001406          BEQ      EI1231     ;SET, THEN
3474 023354 012701 023664      MOV      #SSEC,R1    ;GET STARTING SEC ADR
3475 023360 005021          CLR      (R1)+      ;CLEAR UNT00 SSEC
3476 023362 005021          CLR      (R1)+      ;CLEAR UNT01 SSEC
3477 023364 005021          CLR      (R1)+      ;CLEAR UNT10 SSEC
3478 023366 005011          CLR      (R1)       ;CLEAR UNT11 SSEC
3479 023370 012701 023664 EI1231: MOV     #SSEC,R1 ;GET START SECTOR BASE ADR
3480 023374 060501          ADD     R5,R1       ;FIND ADR UUT START SECTOR (TEMP 1)
3481 023376 011102          MOV     (R1),R2     ;SAVE UUT STARTING SECTOR (TEMP 2)
3482 023400 012703 023674      MOV     #NSEC,R3    ;GET NEXT SECTOR BASE ADR
3483 023404 060503          ADD     R5,R3       ;FIND ADR UUT NEXT SECTOR (TEMP 3)
3484 023406 011304          MOV     (R3),R4     ;SAVE UUT NEXT SECTOR (TEMP 4)
3485 023410 020237 002212 IFA231: CMP     R2,MINSEC ;IF STARTING SECTOR < MIN. SECTOR
3486 023414 103422          BLO     ELA231     ;THEN
3487 023416 010437 023710      MOV     R4,CURSEC   ;SET CURRENT SECTOR=UUT NEXT SECTOR
3488 023422 023737 023660 023706 IFG231: CMP     SCPSCT,INTLV ;IF SECTOR PASS CNT< INTERLV
3489 023430 103053          BHIS   THF231     ;THEN BR TO THEN 'F',ELSE
3490 023432 005737 023662 IFH231: TST     STSCFG   ;IF START SEC FLAG
3491 023436 001405          BEQ     ELH231     ;IS SET, THEN
3492 023440 005037 023662      CLR     STSCFG     ;CLEAR FLAG
3493 023444 010204          MOV     R2,R4       ;SET DRV NXT SEC= DRV START SEC
3494 023446 010213          MOV     R2,(R3)    ;SAVE DRV NXT SEC
3495 023450 000426          BR     IFC231     ;BR TO IF 'C'
3496 023452 063704 023706 ELH231: ADD     INTLV,R4 ;NSEC=NSEC+INTERLV
3497 023456 010413          MOV     R4,(R3)    ;SAVE NEXT SEC
3498 023460 000422          BR     IFC231     ;BR TO IF 'C'
3499 023462 013737 002212 023710 ELA231: MOV     MINSEC,CURSEC ;SET CURRENT SECTOR = MIN. SECTOR
3500 023470 013711 002212      MOV     MINSEC,(R1) ;SET UUT START SECTOR = MIN. SECTOR
3501 023474 013702 002212      MOV     MINSEC,R2  ;SET R2=MINSEC
3502 023500 005037 023660      CLR     SCPSCT     ;CLEAR SECTOR PASS COUNT
3503 023504 023737 002212 002214 IFB231: CMP     MINSEC,MAXSEC ;IF MAX. SECTOR NOT=MIN. SECTOR
3504 023512 001443          BEQ     ELB231     ;THEN
3505 023514 010205          THB231: MOV    R2,R5 ;GET UUT STARTING SECTOR
3506 023516 063705 023706      ADD     INTLV,R5   ;ADD SECTOR INTERLEAVE
3507 023522 010513          MOV     R5,(R3)   ;SAVE NEXT UUT NEXT SEC (TEMP 5)
3508 023524 010504          MOV     R5,R4     ;SAVE NEXT UUT NEXT SEC (TEMP 4)
3509 023526 020437 002214 IFC231: CMP     R4,MAXSEC ;IF NEXT SECTOR > MAX. SECTOR
3510 023532 103432          BLO     ELC231     ;THEN
3511 023534 005211          INC     (R1)       ;INCREMENT UUT STARTING SECTOR
3512 023536 011102          MOV     (R1),R2   ;SET UP NEW START SEC
3513 023540 005237 023660      INC     SCPSCT     ;INCR SECTOR PASS CNT
3514 023544 020437 002214 IFD231: CMP     R4,MAXSEC ;IF NXT SEC NOT = MAX SEC
3515 023550 001417          BEQ     ELD231     ;THEN
3516 023552 020237 002214 IFF231: CMP     R2,MAXSEC ;IF DRV START SEC > MAX SEC
3517 023556 101411          BLOS   ELF231     ;THEN
3518 023560 012737 000001 023704 THF231: MOV     #1,UTSCDN ;SET UUT SECTOR DONE
3519 023566 004737 023712      CALL   STSCDN     ;CALL MOD 2.3.1.A - SET DRIVE SECTOR DONE FLAG
3520 023572 005011          CLR     (R1)       ;CLEAR UUT STARTING SECTOR
3521 023574 005037 023660      CLR     SCPSCT     ;CLEAR SEC PASS CNT
3522 023600 000420          BR     END231     ;BRANCH TO END GET SECTOR

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 99-1  
MOD 2.3.1 - GET A SECTOR

```

3523 023602 010213 ELF231: MOV R2,(R3) ;SET DRV NXT SEC = DRV START SEC
3524 023604 010204 MOV R2,R4 ;SAVE DRV NXT SEC
3525 023606 000415 BR END231 ;BR TO END
3526 023610 012737 000001 023662 ELD231: MOV #1,STSCFG ;SET START SEC FLAG
3527 023616 000411 BR END231 ;BR TO END
3528 023620 000410 ELC231: BR END231 ;BRANCH TO END GET SECTOR
3529 023622 012737 000001 023704 ELB231: MOV #1,UTSCDN ;SET DRIVE SECTOR DONE FLAG
3530 023630 004737 023712 CALL STSCDN ;CALL MOD 2.3.1.A - SET DRIVE SECTOR DONE FLAG
3531 023634 005037 023660 CLR SCPSCT ;CLEAR SEC PASS CNT
3532 023640 005011 CLR (R1) ;CLEAR UUT STARTING SECTOR
3533 023642 013737 023704 002262 END231: MOV UTSCDN,SECDN ;PASSUP UNIT SECTOR DONE
3534 023650 010437 023656 MOV R4,NXSCSA
3535 023654 000207 RTS PC ;RETURN TO MOD 2.3

```

:MOD 2.3.1 ----- REGISTERS & TABLES -----

```

3536
3537 023656 000000 NXSCSA: 0
3538 023660 000000 SCPSCT: 0 ;SEC PASS COUNT
3539 023662 000000 STSCFG: 0 ;SET NEW STARTING SEC FLAG
3540 023664 000000 SSEC: 0 ;UUT STARTING SECTOR
3541 023666 000000 0
3542 023670 000000 0
3543 023672 000000 0
3544 023674 000000 NSEC: 0 ;UUT NEXT SECTOR
3545 023676 000000 0
3546 023700 000000 0
3547 023702 000000 0
3548 023704 000000 UTSCDN: 0 ;UUT SECTOR DONE FLAG
3549 023706 000003 INTLV: 3 ;SECTOR INTERLEAVE
3550 023710 000000 CURSEC: 0 ;CURRENT SECTOR UUT

```

:MOD 2.3.1 ----- END MODULE -----

3551  
3552  
3553  
3554

.SBTTL MOD 2.3.1.A - SET SECTOR DONE

```

3555
3556
3557
3558 023712 032737 000001 002234 STSCDN: BIT #1,UUT ;IF DRIVE #1 DONE
3559 023720 001404 BEQ 1$ ;THEN
3560 023722 052737 000002 021434 BIS #2,BDVSCD ;SET DRIVE #1 SEC DONE FLAG
3561 023730 000403 BR 2$ ;BR TO END
3562 023732 052737 000001 021434 1$: BIS #1,BDVSCD ;SET DRIVE #0 SEC DONE FLAG
3563 023740 000207 2$: RTS PC ;RETURN
3564

```

:MOD 2.3.1.A ----- END MODULE -----

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 101  
MOD 2.3.2 - GET A TRACK

```

3567          .SBTTL MOD 2.3.2 - GET A TRACK
3568          ;-----
3569
3570 023742 013737 002210 024234 GETTRK: MOV      INDITK,MAXTRK ;GET INSIDE DIA AS SET BY OP
3571 023750 013737 002206 024232          MOV      OTDITK,MINTRK ;GET OUTSIDE DIA AS SET BY OP
3572 023756 005737 024252          IFH232: TST      INITTK ;IF INITIALIZE TRK IS
3573 023762 001413          BEQ      EI232 ;SET, THEN
3574 023764 005037 024252          CLR      INITTK ;RESE: INITIALIZE TRK FLG
3575 023770 012701 024242          MOV      #TKTL,R1 ;GET START OF TRK TBL
3576 023774 005021          CLR      (R1)+ ;SET UNT00
3577 023776 005021          CLR      (R1)+ ;SET UNT01
3578 024000 005021          CLR      (R1)+ ;SET UNT10
3579 024002 005011          CLR      (R1) ;SET UNT11
3580 024004 013737 024232 024240          MOV      MINTRK,CURTRK ;SET MIN CURRENT TRK
3581 024012 013702 002234          EI232: MOV      UUT,R2 ;GET UNIT UNDER TEST INDICATOR
3582 024016 006302          ASL      R2 ;DOUBLE FOR ADDRESSING WORDS
3583 024020 005037 024230          CLR      TRKDNF ;CLEAR TRACK DONE FLAG
3584 024024 032737 002000 024236          IFA232: BIT      #2000,TRKINC ;IF INCREMENT TRACK FLAG
3585 024032 001023          BNE      IFG232 ;NOT SET, THEN (USE SELECTED TRK SEQ)
3586 024034 012701 024242          MOV      #TKTL,R1 ;GET DRIVE TRACK TABLE LOCATOR BASE ADR
3587 024040 060201          ADD      R2,R1 ;CAL. DRV. TRK. TAB. LOCATOR ADR
3588 024042 011102          MOV      (R1),R2 ;GET DRV. TRK. TAB. LOCATOR
3589 024044 012703 033554          MOV      #TRK1BL,R3 ;GET BEGIN TRACK TABLE ADR
3590 024050 060203          ADD      R2,R3 ;CAL. TRACK TAB. ADR. THIS DRIVE
3591 024052 005202          INC      R2 ;INCREMENT DRV. TRK. TAB. LOCATOR
3592 024054 010211          MOV      R2,(R1) ;SAVE DRV. TRK. TAB. LOCATOR
3593 024056 111337 024240          MOV      (R3),CURTRK ;SAVE CURRENT TRACK
3594 024062 005203          INC      R3 ;INCREMENT TRACK TAB. POINTER
3595 024064 105713          IFF232: TSTB    (R3) ;IF NEXT TRACK
3596 024066 002004          BGE      ELF232 ;EQUALS -1
3597 024070 012737 000001 024230          MOV      #1,TRKDNF ;THEN SET TRACK DONE FLAG
3598 024076 005011          CLR      (R1) ;RESET DRV. TRK. TAB. LOCATOR ADR.
3599 024100 000445          ELF232: BR      END232 ;BR TO END MOD.
3600 024102 123737 024240 024234          IFG232: CMPB    CURTRK,MAXTRK ;IF CURRENT TRK > OR = MAX TRK (O. D.)
3601 024110 103403          BLO      IFB232 ;THEN
3602 024112 013737 024232 024240          MOV      MINTRK,CURTRK ;SET CURRENT TRK = MIN TRK
3603 024120 123737 024240 024232          IFB232: CMPB    CURTRK,MINTRK ;IF CURRENT TRK > OR = MIN TRK (O.D.)
3604 024126 103427          BLO      ELB232 ;THEN
3605 024130 013701 024240          MOV      CURTRK,R1 ;GET CURRENT TRACK
3606 024134 005201          INC      R1 ;INCREMENT CURRENT TRACK
3607 024136 120137 024234          IFC232: CMPB    R1,MAXTRK ;IF CURRENT TRK +1 < MAX TRK (I.D.)
3608 024142 103001          BHIS    IFD232 ;THEN
3609 024144 000406          BR      EID232 ;BRANCH TO END IF 'D'
3610 024146 120137 024234          IFD232: CMPB    R1,MAXTRK ;IF CURRENT TRK +1 = MAX TRK
3611 024152 001006          BNE      IFE232 ;THEN
3612 024154 012737 000001 024230          MOV      #1,TRKDNF ;SET TRK DONE FLAG
3613 024162 010137 024240          EID232: MOV      R1,CURTRK ;SAVE CURRENT TRK +1 = CURRENT TRK
3614 024166 000412          BR      END232 ;BR END OF MOD.
3615 024170 123737 024234 024232          IFE232: CMPB    MAXTRK,MINTRK ;IF TRK MAX = TRK MIN
3616 024176 001003          BNE      ELB232 ;THEN
3617 024200 012737 000001 024230          MOV      #1,TRKDNF ;SET TRK DONE FLAG
3618 024206 013737 024232 024240          ELB232: MOV      MINTRK,CURTRK ;SET CURRENT TRK = MIN. TRK (O.D.)
3619 024214 013737 024230 002260          END232: MOV      TRKDNF,TRKDN ;SAVE TRACK DONE FLAG
3620 024222 005037 024236          CLR      TRKINC ;CLEAR TRK INCR FLAG
3621 024226 000207          RTS      PC ;
3622          ;-----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 103  
 MOD 2.3.2 - GET A TRACK

```

3625
3626 024230 000000
3627 024232 000000
3628 024234 000000
3629 024236 000000
3630 024240 000000
3631 024242 000000
3632 024244 000000
3633 024246 000000
3634 024250 000000
3635 024252 000000
3636

```

```

-----
TRKDNF: .WORD 0 ; TRACK DONE FLAG
MINTRK: .WORD 0 ; MINIMUM TRACK - O.D.
MAXTRK: .WORD 0 ; MAXIMUM TRACK - I.D.
TRKINC: .WORD 0 ; INCREMENT TRK FLAG
CURTRK: .WORD 0 ; CURRENT TRACK
TKTL: .WORD 0 ; DRV TRK TABLE LOCATOR
      .WORD 0
      .WORD 0
      .WORD 0
INITTK: .WORD 0 ; INITIALIZE TRK FLAG
;MOD 2.3.2 ----- END MODULE -----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 105  
 MOD 2.3.3 - GET A DRIVE FUNCTION

```

3639          .SBTTL MOD 2.3.3 - GET A DRIVE FUNCTION
3640          ;-----
3641
3642 024254 005001          GTDVFN: CLR      R1          :CLEAR REG #1
3643 024256 013701 024404          MOV      DVTST,R1       :GET DRIVE TEST
3644 024262 032701 040000          IFA233: BIT      #40000,R1 :IF NOT INITIALIZE
3645 024266 001012          BNE      IFB233        :THEN
3646 024270 042701 177700          BIC      #177700,R1    :CLEAR TOP BYTE OF R1
3647 024274 006301          ASL      R1            :FORMAT FUNCTION
3648 024276 052701 000001          BIS      #1,R1        :SET GO BIT
3649 024302 020127 000005          IFE233: CMP      R1,#5   :IF WRT FUNCT
3650 024306 001002          BNE      IFB233        :THEN
3651 024310 053701 002244          BIS      DELDAT,R1    :SET DEL DAT WRT (IF SET)
3652 024314 005737 002172          IFB233: TST      RXXX    :IF DRIVE IS RXXX
3653 024320 001411          BEQ      IFD233        :THEN
3654 024322 032737 000002 002234  IFC233: BIT      #2,UUT   :IF SIDE #1 IS SELECTED
3655 024330 001403          BEQ      ELC233        :THEN
3656 024332 052701 001000          BIS      #1000,R1    :SET SIDE #1 BIT
3657 024336 000402          BR       IFD233        :BRANCH TO IF 'D'
3658 024340 042701 001000          ELC233: BIC      #1000,R1 :SET FOR SIDE #0
3659 024344 032737 000001 002234  IFD233: BIT      #1,UUT   :IF UNIT UNDER TEST IS
3660 024352 001403          BEQ      ELD233        :DRIVE #1
3661 024354 052701 000020          BIS      #20,R1      :THEN SET DRIVE #1 SELECT BIT
3662 024360 000402          BR       EID233        :BRANCH TO IF 'D'
3663 024362 042701 000020          ELD233: BIC      #20,R1  :ELSE CLEAR DRIVE #1 SELECT BIT
3664 024366 053701 002242          EID233: BIS      DEN,R1  :SET DENSITY BIT
3665 024372 052701 000100          BIS      #100,R1     :SET INTERRUPT BIT
3666 024376 010137 023332          MOV      R1,DRVFN    :PASS UP FUNCTION WORD
3667 024402 000207          END233: RTS      PC    :RETURN
3668          ;-----
3669 024404 000000          DVTST: 0             :DRIVE TEST WORD
3670          ;MOD 2.3.3 ----- END MODULE -----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 107  
MOD 2.3.4 - OUTPUT DRIVE FUNCTION

```

3673          .SBTTL MOD 2.3.4 - OUTPUT DRIVE FUNCTION
3674          ;-----
3675
3676 024406 013701 025034 OTDVFN: MOV CSADR,R1      ;GET STATUS REG ADR
3677 024412 062701 000002      ADD #2,R1      ;ADD 2 TO ADR
3678 024416 010137 025032      MOV R1,DBADR   ;SAVE AS DATA ADDRESS
3679 024422 012737 000040 025330      MOV #DNBIT,RDYWD ;READY TEST WD (PASS TO 2.3.4.1)
3680 024430 013737 023330 025022      MOV WDOT,WRDS  ;WORD FOR OUTPUT (PASS TO 2.3.4.1)
3681 024436 013737 025034 025024      MOV CSADR,ADRS ;ADDRESS OF OUTPUT (PASS TO 2.3.4.1)
3682 024444 004737 025042      JSR PC,OUTSWD  ;OUTPUT FUNCTION WD (FW DO 2.3.4.1)
3683 024450 032737 040000 023330 IFA234: BIT #40000,WDOT ;IF FUNCTION IS
3684 024456 001402      BEQ THA234     ;NOT AN "INITIALIZE" (FW BIT#14=0)
3685 024460 000137 025016      JMP END234     ;THEN,
3686 024464 032737 000010 023330 THA234: BIT #10,WDOT ;IF FUNCTION IS
3687 024472 001043      BNE IFC234    ;"READ, WRITE, FILL, EMPTY" (FW BIT#3=0)
3688 024474 032737 000004 023330 IFH234: BIT #4,WDOT ;AND THEN IF FUNCTION IS
3689 024502 001047      BNE ELH234    ;"EMPTY, FILL" (FW BIT#2=0)
3690 024504 012737 000200 025330      MOV #TRBIT,RDYWD ;THEN SET OUTPUT READY TEST WORD (PASS TO 2.3.4.1)
3691 024512 013737 023326 025022      MOV WDOT,WRDS  ;AND SET WORD FOR OUTPUT (PASS TO 2.3.4.1)
3692 024520 013737 025032 025024      MOV DBADR,ADRS ;AND SET ADDRESS OF OUTPUT (PASS TO 2.3.4.1)
3693 024526 004737 025042      JSR PC,OUTSWD  ;OUTPUT BASE ADDRESS WORD DO 2.3.4.1
3694 024532 032737 000002 023330 IFK234: BIT #2,WDOT ;IF "FILL" (FW BIT#1=0)
3695 024540 001004      BNE ELK234    ;THEN
3696 024542 012737 034006 025022      MOV #DATPAT,WRDS ;SET DATA PATTERN ADR (PASS TO 2.3.4.1)
3697 024550 000403      BR EIK234     ;BR TO END IF "K"
3698 024552 012737 034406 025022 ELK234: MOV #DATBUF,WRDS ;SET DATA BUFFER ADR (PASS TO 2.3.4.1)
3699 024560 012737 000200 025330 EIK234: MOV #TRBIT,RDYWD ;SET OUTPUT READY TEST WORD (PASS TO 2.3.4.1)
3700 024566 013737 025032 025024      MOV DBADR,ADRS ;ADDRESS OF OUTPUT (PASS TO 2.3.4.1)
3701 024574 004737 025042      JSR PC,OUTSWD  ;OUTPUT WORD COUNT WORD DO 2.3.4.1
3702 024600 000444      BR EIH234     ;BRANCH TO END IF "H"
3703 024602 032737 000004 023330 IFC234: BIT #4,WDOT ;IF FUNCTION WORD IS
3704 024610 001455      BEQ IFE234    ;"WRITE D.D" OR "READ E.C" (FW BIT #2=1)
3705 024612 032737 000002 023330 IFD234: BIT #2,WDOT ;THEN, IF FUNCTION IS
3706 024620 001035      BNE ELD234    ;"WRITE D.D", THEN (FW BIT#1=0)
3707 024622 012737 000200 025330 ELH234: MOV #TRBIT,RDYWD ;SET OUTPUT READY TEST WORD
3708 024630 013737 025040 025022      MOV SECADR,WRDS ;MOVE TRACK AND SECTOR ADDRESS
3709 024636 042737 177700 025022      BIC #177700,WRDS ;FORMAT TO SECTOR ADDRESS
3710 024644 013737 025032 025024      MOV DBADR,ADRS ;ADDRESS OF OUTPUT
3711 024652 004737 025042      JSR PC,OUTSWD  ;OUTPUT SECTOR ADDRESS
3712 024656 013737 025036 025022      MOV TRKADR,WRDS ;MOVE TRACK AND SECTOR ADDRESS
3713 024664 042737 177600 025022      BIC #177600,WRDS ;FORMAT TRACK ADDRESS
3714 024672 012737 000200 025330      MOV #TRBIT,RDYWD ;SET OUTPUT READY TEST WORD
3715 024700 013737 025032 025024      MOV DBADR,ADRS ;ADDRESS OF OUTPUT
3716 024706 004737 025042      JSR PC,OUTSWD  ;OUTPUT TRACK ADDRESS
3717 024712 000437      BR EIB234     ;ENDIF H -DONE
3718 024714 012737 000200 025330 ELD234: MOV #TRBIT,RDYWD ;SET READY WD TO TR MODE
3719 024722 012737 033544 025022      MOV #XERUUT,WRDS ;EXT ERR. CODE TABLE ADD
3720 024730 013737 025032 025024      MOV DBADR,ADRS ;ADDRESS OF OUTPUT, RXDB
3721 024736 004737 025042      JSR PC,OUTSWD  ;O/P BASE ADD FOR ERR. CODE
3722 024742 000423      BR EIB234     ;DONE
3723 024744 032737 000002 023330 IFE234: BIT #2,WDOT ;IF FUNCTION IS
3724 024752 001404      BEQ ELE234    ;"READ STATUS" (FW BIT#1=1)
3725 024754 012737 000001 025026 THE234: MOV #1,ERSTAT ;THEN-SET ERR STATUS FLAG
3726 024762 000413      BR EIB234     ;DONE
3727 024764 012737 000200 025330 ELE234: MOV #TRBIT,RDYWD ;SET OUTPUT READY TEST WD
3728 024772 013737 025030 025022      MOV VALWD,WRDS ;VALIDATION WORD
3729 025000 013737 025032 025024      MOV DBADR,ADRS ;ADDRESS OF OUTPUT, RXDB

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 107-1  
 MOD 2.3.4 - OUTPUT DRIVE FUNCTION

```

3730 025006 004737 025042
3731 025012 004737 025104
3732 025016 000240
3733 025020 000207
3734
3735 025022 000000
3736 025024 000000
3737 025026 000000
3738 025030 000111
3739 025032 000000
3740 025034 000000
3741 025036 000000
3742 025040 000000
3743
3744
3745
3746
3747
3748
3749
3750
3751 025042 000240
3752 025044 013737 025034 025332
3753 025052 013737 025330 025330
3754 025060 004737 025230
3755 025064 033777 025330 177742
3756 025072 001403
3757 025074 013777 025022 177722
3758 025102 000207
3759

EIB234: JSR PC,OUTSWD ;OUTPUT VALIDATION WORD
          CALL WATCH ;CALL MOD U.2 -WATCH DOG
END234:  NOP          ;
          RTS PC      ;RETURN TO MOD 2.3
;-----
WRDS: 0 ;MODULE 2.3.4.1 OUTPUT WORD
ADRS: 0 ;MODULE 2.3.4.1 OUTPUT ADDRESS
ERSTAT: 0 ;MODULE 0.0 ERR STATUS READ FLAG
VALWD: 111 ;EXTERNAL, VALIDATION WD (SET DENS-ASCII 'I')
DBADR: 0 ;RX DATA BUFFER ADDRESS
CSADR: 0 ;RX CONT/STATUS ADDRESS
TRKADR: 0 ;TRACK ADDRESS
SECADR: 0 ;SECTOR ADDRESS
;MOD 2.3.4 ----- END MODULE -----
;-----
.SBTTL MOD 2.3.4.1 - OUTPUT SINGLE WORD
;-----
OUTSWD: NOP ;
          MOV CSADR,CSRADR ;SET CBS REG ADR
          MOV RDYWD,RDYWD ;OUTPUT READY WORD (PASS TO DELAY)
          JSR PC,DELAY ;DELAY FOR READY DO DELAY
          BIT RDYWD,@CSADR ;IF READY,
          BEQ ED2341 ;THEN
          MOV WRDS,@ADRS ;MOV WORD TO ADDRESS
ED2341: RTS PC ;RETURN TO MOD 2.3.4
;MOD 2.3.4.1 ----- END MODULE -----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 109  
 MOD U.2.3.4 - WATCH DOG TIMER

```

3762          .SBTTL MOD U.2.3.4 - WATCH DOG TIMER
3763          ;-----
3764
3765 025104 005037 025226 WATCH: CLR DNFLAG ;CLEAR DONE FLAG
3766 025110          SETPRI #PRI00 ;SET PROCESSOR PRI=0 - ALLOW INTERRUPTS
3767 025116 013704 025222          MOV DX,R4 ;SET DELAY MULT
3768 025122 013703 025224 BAU234: MOV DLY,R3 ;SET DELAY
3769 025126 05737 025226 IBU234: TST DNFLAG ;IF INTERRUPTS DONE FLAG
3770 025132 001410          BEQ LBU234 ;IS SET, THEN
3771 025134 032777 000040 177672 ICU234: BIT #DNBIT,@CSADR ;IF DONT BIT
3772 025142 001023          BNE XU234 ;IS NOT SET, THEN
3773 025144 012737 010000 002276          MOV #BIT12,ERRTY ;SET INTERR, BUT NO DONE ERROR
3774 025152 000417          BR XU234 ;BR TO MOD 'EXIT'
3775 025154 005303          LBU234: DEC R3 ;DECREMENT DELAY COUNT
3776 025156 001363          UDU234: BNE IBU234 ;DO UNIT DELAY COUNT=0
3777 025160 005304          DEC R4 ;DECREMENT DELAY MULT
3778 025162 001357          UAU234: BNE BAU234 ;DO UNTIL DELAY MULT=0
3779 025164 032777 000040 177642 IEU234: BIT #DNBIT,@CSADR ;IF DONE BIT IS
3780 025172 001404          BEQ LEU234 ;SET, THEN
3781 025174 052737 020000 002276          BIS #BIT13,ERRTY ;SET DONE, BUT NO INTERRUPT ERROR
3782 025202 000403          BR XU234 ;BR TO MOD 'EXIT'
3783 025204 052737 040000 002274 LEU234: BIS #BIT14,ERRSY ;SET T.O. ERROR
3784 025212          XU234: SETPRI #PRI06 ;SET PROCESSOR PRI=6 - NO INTERRUPTS
3785 025220 000207          RTS PC ;RETURN TO MOD 2.3.4
3786          ;-----
3787 025222 000040          DX: 40 ;DELAY MULT
3788 025224 100000          DLY: 100000 ;DELAY
3789 025226 000000          DNFLAG: 0 ;DONE FLAG
3790          ;MOD U.2.3.4 ---- END MODULE ----
3791
3792          .SBTTL MOD U.2.3/4 DELAY
3793          ;-----
3794
3795 025230 000240          DELAY: NOP ;
3796 025232 023727 025330 000000 IFAU23: CMP RDYWD,#0 ;IF READY WORD
3797 025240 001430          BEQ XU23 ;EQUALS ZERO, THEN BR TO END IF 'A'
3798 025242 013704 025324          MOV RYDX,R4 ;SET READY DELAY MULT
3799 025246 013703 025326          BDAU23: MOV RYDLY,R3 ;SET READY DELAY
3800 025252 033777 025330 000052          BDBU23: BIT RDYWD,@CSRADR ;IF READY
3801 025260 001020          BNE XU23 ;EQUAL TO '1', THEN BR TO END IF 'B'
3802 025262 005303          DEC R3 ;ELSE DECREMENT DELAY
3803 025264 001372          BNE BDBU23 ;DO UNTIL R3=0
3804 025266 005304          DEC R4 ;DECREMENT DELAY MULT.
3805 025270 001366          BNE BDAU23 ;DO UNTIL R4=0
3806 025272 052737 040000 002274          BIS #40000,ERRSY ;SET TIME OUT ERR
3807 025300 017737 000026 002246          MOV @CSRADR,CSRUUT ;GET UUT CBS REG
3808 025306 062737 000002 025332          ADD #2,CSRADR ;SET CSRADR TO DB REG
3809 025314 017737 000012 002250          MOV @CSRADR,ESRUUT ;GET UUT EBS REG
3810 025322 000207          XU23: RTS PC ;RETURN TO CALLING MOD
3811          ;-----
3812 025324 000040          RYDX: 40 ;READY MULTIPLIER
3813 025326 100000          RYDLY: 100000 ;READY DELAY
3814 025330 000000          RDYWD: 0 ;READY WORD - TEST FOR DEVICE READY
3815 025332 000000          CSRADR: 0 ;CBS REG OF UNIT- WAITING FOR
3816          ;MOD U.2.3.4 ---- END MODULE ----
    
```



HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 111  
 MOD U.2.3/4 DELAY

```

3819
3820
3821      .SBTTL  MOD 2.4 - EVALUATE TEST RESULTS
3822      :-----
3823 025334 013737 025410 027070 EVTSTR: MOV    TSTEV,FUNEV    :PASS TEST FUNCTION
3824 025342 004737 026206          CALL  EVDVST    :CALL MOD 2.4.2 - EVALUATE DRIVE STATE
3825 025346 013737 025410 030622          MOV    TSTEV,FNEV4  :PASS TEST FUNCTION
3826 025354 004737 030476          CALL  EVUTEC    :CALL MOD 2.4.4 - EVAL UNIT ERR CODE
3827 025360 032737 020000 025410 IFA24: BIT    #20000,TSTEV  :IF DATA CK BIT
3828 025366 001402          BEQ    EIA24      :IS SET, THEN
3829 025370 004737 025412          CALL  EVDATA    :CALL MOD 2.4.1 - EVALUATE DATA
3830 025374 013737 025410 027626 EIA24: MOV    TSTEV,TSTCK  :PASS DRIVE TEST
3831 025402 004737 027230          CALL  UPDVST    :CALL MOD 2.4.3 UPDATE DRIVE STATISTICS
3832 025406 000207          RTS     PC
3833      :-----
3834 025410 000000      TSTEV: 0
3835      :MOD 2.4 ----- END MODULE -----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 113  
MOD 2.4.1 - EVALUATE DATA

```

3838          .SBTTL MOD 2.4.1 - EVALUATE DATA
3839          ;-----
3840
3841 025412 005037 026054          EVDATA: CLR          DAERCT          ;CLEAR DATA ERR COUNT
3842 025416 005037 026046          CLR          SEEKCK          ;CLEAR SEEK CK
3843 025422 012737 000001 026062  MOV          #1,PTHEAD        ;SET PRINT HEADER FLAG
3844 025430 013701 002252          MOV          WDCNT,R1         ;SAVE WORD COUNT
3845 025434 006301          ASL          R1               ;
3846 025436 162701 000001          SUB          #1,R1           ;SUBTRACT 2 TO GET CHECKSUM
3847 025442 012702 034006          MOV          #DATPAT,R2      ;GET ADDRESS DATA SOURCE
3848 025446 012703 034406          MOV          #DATBUF,R3     ;GET ADDRESS DATA BUFFER
3849 025452 060102          ADD          R1,R2           ;CAL. ADDR SOURCE CHECKSUM
3850 025454 060103          ADD          R1,R3           ;CAL. ADDR BUFFER CHECKSUM
3851 025456 121213          IFA241: CMPB          (R2),(R3) ;IF CHECK SUMS
3852 025460 001407          BEQ          ELA241          ;NOT= THEN
3853 025462 032737 000002 021452  IFI241: BIT          #2,ERTSAV ;IF CRC ERR
3854 025470 001003          BNE          ELA241          ;NOT SET, THEN
3855 025472 052737 000004 002276  BIS          #4,ERRTY        ;SET CHECKSUM ERR
3856 025500 005037 026052          ELA241: CLR          BYTNUM    ;CLEAR BYTE NUMBER
3857 025504 162701 000001          SUB          #1,R1           ;CAL. TOTAL BYTE COUNT-LAST TWO
3858 025510 010137 026050          MOV          R1,BYTCNT       ;SAVE BYTE COUNT
3859 025514 012701 034006          BDA241: MOV          #DATPAT,R1 ;SET TEMP#1=DATA SOURCE BEGIN ADR
3860 025520 012702 034406          MOV          #DATBUF,R2     ;SET TEMP#2=DATA BUFFER BEGIN ADR
3861 025524 063701 026052          ADD          BYTNUM,R1       ;CAL CURRENT BYTE ADDR (SOURCE)
3862 025530 063702 026052          ADD          BYTNUM,R2       ;CAL CURRENT BYTE ADDR (BUFFER)
3863 025534 121112          CMPB          (R1),(R2)      ;IF SOURCE BYTE & BUFFER BYTE
3864 025536 001502          BEQ          ELB241          ;NOT EQUAL
3865 025540 005237 026054          INC          DAERCT          ;INCREMENT DATA ERR COUNT
3866 025544 052737 000010 002276  BIS          #10,ERRTY       ;SET DATA ERR-ERR TYPE
3867 025552 042737 000004 002276  BIC          #4,ERRTY        ;CLR CK SUM ERR-ERR TYPE
3868 025560 023727 026052 000002  IFC241: CMP          BYTNUM,#2 ;IF BYTE #0 OR #1
3869 025566 002006          BGE          IFE241          ;THEN
3870 025570 005737 026052          IFD241: TST          BYTNUM    ;IF BYTE #0
3871 025574 001003          BNE          IFE241          ;THEN
3872 025576 052737 000001 026046  BIS          #1,SEEKCK       ;SET SEEK ERR-ERR TYPE
3873 025604 023727 026054 000012  IFE241: CMP          DAERCT,#12 ;IF OVER 10 DATA ERRORS
3874 025612 103404          BLO          THF241          ;THEN
3875 025614 032737 000020 002204  IFF241: BIT          #20,SWREG ;IF PRINT ONLY 10 DATA ERROR FLAG
3876 025622 001047          BNE          EIF241          ;IS NOT SET, THEN
3877 025624 111137 026056          THF241: MOVB          (R1),DATASB ;
3878 025630 111237 026060          MOVB          (R2),DATAWS   ;
3879 025634 005737 026062          IFM241: TST          PTHEAD    ;IF PRINT HEADER
3880 025640 001420          BEQ          EIM241          ;OK, THEN
3881 025642 005037 026062          CLR          PTHEAD         ;CLEAR PRINT HEADER
3882 025646          PRINTB          #MSG1,UNIT,TRACK,SECTOR ;
3883 025702          EIM241: PRINTB          #MSG2,BYTNUM,<B,DATASB>,<B,DATAWS> ;
3884 025742 000240          EIF241: NOP               ;
3885 025744 005237 026052          ELB241: INC          BYTNUM    ;INCREMENT BYTE #
3886 025750 005337 026050          DEC          BYTCNT         ;DECREMENT BYTE COUNT
3887 025754 005737 026050          TST          BYTCNT         ;DO UNTIL BYTE COUNT
3888 025760 003255          BGT          BDA241         ;EQUALS 0
3889 025762 005737 026046          IFJ241: TST          SEEKCK   ;IF DISK SEEK ERR
3890 025766 001413          BEQ          END241         ;IS SET AND
3891 025770 032737 000010 002276  IFK241: BIT          #10,ERRTY ;IF DATA ERR
3892 025776 001007          BNE          END241         ;NOT SET AND
3893 026000 032737 000002 021452  IFL241: BIT          #2,ERTSAV ;IF CRC ERR
3894 026006 001003          BNE          END241         ;NOT SET

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 113-1  
 MOD 2.4.1 - EVALUATE DATA

```

3895 026010 052737 000001 002276      BIS      #1,ERRTY      ;THEN SET SEEK ERR
3896 026016 000240      END241: NOP          ;
3897 026020 005037 021452      CLR      ERTSAV     ;CLEAR ERR TYP SAV
3898 026024 012705 034406      MOV      #DATBUF,R5 ;GET BEGIN OF DATA BUFFER
3899 026030 012704 000200      MOV      #128.,R4  ;SET WORD LENGTH OF TABLE
3900 026034 005025      BDB241: CLR      (R5)+ ;CLEAR WORD IN DATA BUFFER TABLE
3901 026036 005304      DEC      R4        ;DECREMENT WORD COUNT
3902 026040 005704      TST     R4        ;DO UNTIL
3903 026042 001374      EDB241: BNE     BDB241 ;ALL TABLE WORDS ZEROED
3904 026044 000207      RTS      PC        ;RETURN
3905
-----
3906 026046 000000      SEEKCK: 0          ;SEEK CECK FLAG
3907 026050 000000      BYTCNT: 0         ;BYTE COUNT
3908 026052 000000      BYTNUM: 0        ;BYTE NUMBER
3909 026054 000000      DAERCT: 0       ;DATA ERR COUNT
3910 026056 000000      DATASB: 0       ;DATA SHOULD BE
3911 026060 000000      DATAWS: 0      ;DATA WAS
3912 026062 000000      PTHEAD: 0       ;PRINT HEADER FLAG
3913
-----
3914 026064      045      116      045      DMSG1: .ASCIZ /%N% UNIT#%01% TRK#%D3% SEC#%D2%N% BYTE#%S2%AGOOD%S6%ABAD/
3915 026161      045      116      045      DMSG2: .ASCIZ ,%N%S3%D3%S2%B8%S2%B8/
3916      .EVEN
3917      :MOD 2.4.1 ----- END MODULE -----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 115  
MOD 2.4.2 - EVALUATE DRIVE STATE

```

3920          .SBTTL MOD 2.4.2 - EVALUATE DRIVE STATE
3921          -----
3922 026206 013705 002236          EVDVST: MOV      UUTADR,R5
3923 026212 013737 002246 027072  MOV      CSRUUT,CSREV      ;GET COMMAND & STATUS LAST OP UUT
3924 026220 013737 002250 027074  MOV      ESRUUT,ESREV      ;GET ERROR STATUS LAST OP UUT
3925 026226 005037 033544          CLR      XERUUT          ;CLEAR EXTENDED ERROR CODE LOCATION
3926 026232 032737 000040 027072  IFA242: BIT      #40,CSREV      ;IF DONE NOT
3927 026240 001032          BNE      IFB242          ;SET THEN
3928 026242 012715 040000          MOV      #40000,(R5)      ;ISSUE PROG INIT TO UUT
3929 026246 013737 002236 025332  MOV      UUTADR,CSRADR      ;SET CSR ADR
3930 026254 012737 000040 025330  MOV      #DNBIT,RDYWD      ;SET DONE TEST
3931 026262 004737 025230          CALL     DELAY            ;WAIT FOR TR
3932 026266 032715 000040          IFC242: BIT      #40,(R5)      ;IF DONE NOT
3933 026272 001005          BNE      ELC242          ;SET THEN
3934 026274 052737 000010 002274  BIS      #10,ERRSY        ;SET NO DONE ON INT-SYS ERR
3935 026302 000137 027064          JMP      END242          ;BR TO END MOD
3936 026306 113701 027070          ELC242: MOVB     FUNEV,R1      ;GET DRIVE FUNCTION
3937 026312 042701 177770          BIC      #177770,R1      ;CLEAR ALL BUT FUNCTION
3938 026316 050137 002274          BIS      R1,ERRSY        ;SET NO DONE ON FUNCTION-SYS ERR
3939 026322 000137 027064          JMP      END242          ;BR TO END MOD
3940 026326 004737 027076          IFB242: CALL     EVDVRE      ;CALL MOD 2.4.2.1 EVALUATE DRIVE RESPONSE
3941 026332 005737 002274          TST      ERRSY          ;IF SYS ERR
3942 026336 001463          BEQ      IFG242          ;NOT=0 THEN
3943 026340 032737 000001 002234  BIT      #1,UUT          ;IF DRV#1 UNDER TST
3944 026346 001404          BEQ      1$              ;THEN
3945 026350 012737 000020 027066  MOV      #20,EVCMD        ;SET CMD TO DRV#1
3946 026356 000402          BR       2$              ;BR
3947 026360 005037 027066          1$:     CLR      EVCMD      ;SET CMD TO DRV#0
3948 026364 052737 000013 027066  2$:     BIS      #13,EVCMD    ;SET READ UUT ESR IN CMD
3949 026372 053737 002242 027066  BIS      DEN,EVCMD        ;SET DEN FOR CMD
3950 026400 013715 027066          MOV      EVCMD,(R5)      ;READ UUT ESR
3951 026404 013737 002236 025332  MOV      UUTADR,CSRADR      ;SET CSR ADR
3952 026412 012737 000040 025330  MOV      #DNBIT,RDYWD      ;SET DONE BIT
3953 026420 004737 025230          CALL     DELAY            ;CALL
3954 026424 032715 000040          IFX242: BIT      #40,(R5)      ;IF DONE BIT
3955 026430 001005          BNE      IFD242          ;NOT SET THEN
3956 026432 052737 000200 002274  BIS      #200,ERRSY        ;SET NO DONE BIT (SECONDARY PROBLEM)
3957 026440 000137 027064          JMP      END242          ;BR TO END
3958 026444 032715 100000          IFD242: BIT      #100000,(R5) ;IF ERR BIT
3959 026450 001403          BEQ      IFE242          ;SET
3960 026452 052737 100000 002276  BIS      #100000,ERRTY      ;ERR BIT - ERR TYPE
3961 026460 013701 002236          IFE242: MOV      UUTADR,R1      ;GET UUT ADR
3962 026464 062701 000002          ADD      #2,R1            ;CAL DBR ADR
3963 026470 032711 000200          BIT      #200,(R1)        ;IF DRV RDY BIT
3964 026474 001102          BNE      IFN242          ;EQUALS 0
3965 026476 052737 000040 002274  BIS      #40,ERRSY        ;SET DRIVE NOT RDY-SYS ERR
3966 026504 000561          BR       IFS242          ;BR TO END IF 'E'
3967 026506 032737 002021 027074  IFG242: BIT      #2021,ESREV    ;IF ANY ESR ERR BIT SET
3968 026514 001410          BEQ      IFH242          ;THEN
3969 026516 032737 100000 027072  IFI242: BIT      #100000,CSREV ;IF UUT ERR BIT
3970 026524 001010          BNE      IFJ242          ;NOT=1 THEN
3971 026526 052737 040000 002276  BIS      #40000,ERRTY      ;SET MISSING ERR BIT
3972 026534 000450          BR       IFL242          ;BR TO IF 'L'
3973 026536 032737 100000 027072  IFH242: BIT      #100000,CSREV ;IF UUT CSR ERR BIT
3974 026544 001456          BEQ      IFN242          ;EQUALS 1 THEN
3975 026546 013701 025410          IFJ242: MOV      TSTEV,R1      ;GET TEST FUNCTION
3976 026552 042701 177774          BIC      #177774,R1      ;CLEAR ALL BUT TWO BOTTOM BITS

```



HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 117  
 MOD 2.4.2 - EVALUATE DRIVE STATE

```

4036
4037
4038
4039
4040 027076 013701 025410
4041 027102 042701 177771
4042 027106 032701 000006
4043 027112 001445
4044 027114 005737 002172
4045 027120 001421
4046 027122 032737 000002 002234
4047 027130 001403
4048 027132 012701 001000
4049 027136 000401
4050 027140 005001
4051 027142 013702 002250
4052 027146 042702 176777
4053 027152 020102
4054 027154 001403
4055 027156 052737 001000 002274
4056 027164 032737 000001 002234
4057 027172 001403
4058 027174 012701 000400
4059 027200 000401
4060 027202 005001
4061 027204 013702 002250
4062 027210 042702 177377
4063 027214 020102
4064 027216 001403
4065 027220 052737 000400 002274
4066 027226 000207
4067

.SBTTL MOD 2.4.2.1 - EVALUATE DRIVE RESPONSE
-----
EVDVRE: MOV TSTEV,R1 ;GET TEST FUNCTION
        BIC #177771,R1 ;CLEAR BITS
        BIT #6,R1 ;IF NOT FILL/EMPTY BUFFER
        BEQ 6$ ;THEN
        TST RXXX ;IF RXXX
        BEQ 1$ ;AND
        BIT #2,UUT ;SIDE # SELECTED
        BEQ 2$ ;THEN
        MOV #1000,R1 ;SET R1 TO TEST SIDE #1 SELECT
        BR 3$ ;BR TO TEST RESPONSE
2$: CLR R1 ;SET R1 TO TEST SIDE #0 SELECT
3$: MOV ESRUUT,R2 ;GET ESR UNIT UNDER TEST
        BIC #176777,R2 ;CLEAR ALL BITS BUT SIDE SELECT
        CMP R1,R2 ;IF SIDE SELECT
        BEQ 1$ ;NOT=SIDE RESPONDING THEN
        BIS #1000,ERRSY ;SET WRONG SIDE RESPONDING SYS ERR
1$: BIT #1,UUT ;IF DRIVE #1 SELECTED
        BEQ 4$ ;THEN
        MOV #400,R1 ;SET R1 TO TEST DRIVE #1 SEL
        BR 5$ ;BR TO TEST RESPONSE
4$: CLR R1 ;SET R1 TO TEST DRIVE #0 SEL
5$: MOV ESRUUT,R2 ;GET ESR UNIT UNDER TEST
        BIC #177377,R2 ;CLEAR ALL BITS BUT DRIVE RESPONDING
        CMP R1,R2
        BEQ 6$
        BIS #400,ERRSY ;SET WRONG DRIVE RESPONDING SYS ERR
6$: RTS PC
:MOD 2.4.2.1 ----- END MODULE -----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 119  
 MOD 2.4.3 - UPDATE DRIVE STATISTICS

```

4070          .SBTTL MOD 2.4.3 - UPDATE DRIVE STATISTICS
4071          :-----
4072
4073 027230 013737 027626 030342 UPDVST: MOV      TSTCK,FUNTY ;PASS TEST FUNCTION TO UPDATE SEC CTR
4074 027236 004737 030216          CALL     UPSECT  ;CALL UP DATE SECTOR CONTENTS
4075 027242 032737 000002 027606 1A243: BIT      #2,ETSAV ;IF ERRTY SAVE
4076 027250 001405          BEQ      EA243  ;HAS CRC ERR BIT SET, THEN
4077 027252 004737 027722          CALL     UDCRST  ;CALL UPDATE CRC STATISTICS
4078 027256 005037 027606          CLR      ETSAV  ;CLEAR ERR TYPE SAVE
4079 027262 000457          BR       IG243  ;BR TO IF 'G'
4080 027264 013737 002276 027606  EA243: MOV      ERRTY,ETSAV ;SAVE ERR TYP --> ETSAV
4081 027272 013737 002276 027614          MOV      ERRTY,STERRG ;GET ERR TYP --> STAT ERR REG
4082 027300 005037 027616          CLR      STCNTR ;ZERO STAT COUNTER
4083 027304 032737 000002 027614 1D243: BIT      #2,STERRG ;IF ERR IS
4084 027312 001403          BEQ      BF243  ;CRC, THEN
4085 027314 042737 006002 027614          BIC      #6002,STERRG ;CLEAR CRC, RD, & WRT ERR BITS OF STAT ERR REG
4086 027322 000241          CLC          ;CLEAR CARRY BIT
4087 027324 006037 027614          ROR      STERRG ;ROTATE RIGHT STAT ERROR REG
4088 027330 103026          BCC      EB243  ;IF CARRY BIT SET, THEN
4089 027332 013701 027616          MOV      STCNTR,R1 ;GET STAT COUNTER
4090 027336 006301          ASL      R1     ;& DOUBLE FOR WORD ADDRESSING
4091 027340 062701 027630          ADD      #ETTAB,R1 ;CAL. CLASSIFICATION WORD-ADDRESS
4092 027344 011137 027620          MOV      (R1),CLASWD ;GET CLASSIFICATION WORD
4093 027350 011102          MOV      (R1),R2 ;GET CLASSIFICATION WORD-TO FIND LOG OFFSET
4094 027352 000302          SWAB     R2     ;GET CLASSIFICATION WORD UPPER BYTE
4095 027354 006302          ASL      R2     ;--SHIFT LEFT TO GET LOG REG OFFSET (LAST 6 BITS)
4096 027356 006302          ASL      R2     ;--SHIFT LEFT AGAIN
4097 027360 042702 177004          BIC      #177004,R2 ;CLEAR UNWANTED BITS
4098 027364 010237 027622          MOV      R2,LOGOFF ;SAVE ERROR LOG OFFSET
4099 027370 005711          IC243: TST      (R1) ;IF ERR TYP CLASSIFICATION WORD
4100 027372 100403          BMI      LC243  ;TYPE=SOFT, THEN
4101 027374 004737 030072          CALL     UDSFST  ;CALL UPDATE SOFT ERRGR STATISTICS
4102 027400 000402          BR       EB243  ;BR TO END 'B'
4103 027402 004737 027670          LC243: CALL     UDHDST  ;CALL UPDATE HARD ERROR STATISTICS
4104 027406 005237 027616          EB243: INC      STCNTR ;INCREMENT STAT COUNTER
4105 027412 022737 000020 027616  UF243: CMP      #16,STCNTR ;DG UNTIL ALL 16
4106 027420 101340          BHI      BF243  ;BITS ARE DONE
4107 027422 013703 033544          IG243: MOV      XERUUT,R3 ;GET EXTENDED ERROR CODE
4108 027426 042703 177400          BIC      #177400,R3 ;CLEAR UPPER BYTE
4109 027432 005703          TST      R3     ;IF EXTENDED ERROR CODE
4110 027434 001410          BEQ      IH243  ;NOT=0, THEN
4111 027436 162703 000010          SUB      #10,R3  ;ADJ ERROR CODE # FOR LOGGING
4112 027442 012702 007604          MOV      #ECLOG,R2 ;GET LOC OF ERR CODE LOG
4113 027446 060302          ADD      R3,R2  ;ADD ERR CODE TO LOC ERR CODE LOG
4114 027450 063702 002240          ADD      UUTOFF,R2 ;FIND LOC ERR REG THIS UNIT
4115 027454 005212          INC      (R2)  ;INCREMENT UNIT ERR REG
4116 027456 013703 002276          IH243: MOV      ERRTY,R3 ;GET ERR TYPE
4117 027462 042703 171774          BIC      #171774,R3 ;CLEAR ALL ERRS BUT RD, WT, CRC, SEEK
4118 027466 005703          TST      R3     ;IF ONE OF THESE ERRORS
4119 027470 001412          BEQ      II243  ;THEN
4120 027472 013702 002254          MOV      TRACK,R2 ;GET TRACK ADR
4121 027476 006302          ASL      R2     ;DOUBLE TRACK ADR FOR WORD ADDRESSING
4122 027500 006302          ASL      R2     ;ADJ TRK
4123 027502 006302          ASL      R2     ;FOR ADR.
4124 027504 062702 010070          ADD      #TKXX,R2 ;ADD TRACK LOG LOCATION
4125 027510 063702 002240          ADD      UUTOFF,R2 ;FIND LOC ERR REG THIS UNIT
4126 027514 005212          INC      (R2)  ;INCREMENT UNIT ERR REG
    
```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 119-1  
MOD 2.4.3 - UPDATE DRIVE STATISTICS

```

4127 027516 005737 027610      I1243: TST      ERRSAV      ;IF ERR SAVE HAS
4128 027522 001023              BNE      LI243      ;NO ERROR SET, THEN
4129 027524 005237 027612      INC      ERSVCT      ;INCREMENT ERROR SAVE COUNTER
4130 027530 022737 000004 027612 IJ243: CMP      #4,ERSVCT ;IF ERROR SAVE COUNTER
4131 027536 101017              BHI      E1243      ;NOT=4, THEN
4132 027540 012701 002306      MOV      #SEEKRT,R1 ;SET BEGIN ADDRESS OF RETRY COUNTERS
4133 027544 012702 000011      MOV      #11,R2     ;SET # OF RETRY COUNTERS
4134 027550 005021      BK243: CLR      (R1)+ ;CLEAR RETRY COUNTER
4135 027552 005302              DEC      R2         ;DECREMENT RETRY COUNTER #
4136 027554 005702      UK243: TST      R2     ;DO UNTIL
4137 027556 001374              BNE      BK243     ;ALL COUNTERS CLEARED
4138 027560 005037 027612      CLR      ERSVCT     ;CLEAR ERROR SAVE COUNTER
4139 027564 005037 002304      CLR      RETRY      ;CLEAR RETRY COUNTER
4140 027570 000402              BR       E1243     ;BR TO END 'I'
4141 027572 005037 027612      L1243: CLR      ERSVCT ;CLEAR ERROR SAVE COUNT
4142 027576 013737 002276 027610 E1243: MOV      ERRTY,ERRSAV ;SAVE ERROR TYPE FOR NEXT ERROR CHECK
4143 027604 000207      END243: RTS      PC ;RETURN
4144
4145 027606 000000      ETSAV: 0           ;ERR TYPE SAVE
4146 027610 000000      ERRSAV: 0         ;ERR TYPE SAVE REG
4147 027612 000000      ERSVCT: 0         ;ERROR SAVE COUNTER-COUNTS # OF NO ERROR PASSES
4148 027614 000000      STERRG: 0        ;STAT ERR REG
4149 027616 000000      STCNTR: 0        ;STAT COUNTER
4150 027620 000000      CLASWD: 0        ;ERROR CLASSIFICATION WORD-FROM TABLE
4151 027622 000000      LOGOFF: 0        ;ERROR LOG OFFSET FROM #CKSML
4152 027624 000000      RTOFF: 0         ;RETRY COUNTER OFFSET FROM # SEEKRT
4153 027626 000000      TSTCK: 0         ;TEST WORD-USED TO CHECK TEST DONE
4154
;MOD 2.4.3 ----- END MODULE -----

```

```

:----- ERROR TYPE CLASSIFICATION & OFFSETS TABLE -----
4156
4157
4158
4159 027630 005001      ETTAB: .WORD 005001 ;SFT /SEEK /SEEK /SK-RTMSK/ 0
4160 027632 006005      .WORD 006005 ;SFT /CRC /CRC /CRC / 1
4161 027634 100407      .WORD 100407 ;HRD /CKSML / - /HD / 2
4162 027636 012106      .WORD 012106 ;SFT /DATA /DATA /DT-RTMSK/ 3
4163 027640 154400      .WORD 154400 ;HRD / - / - / - / 4
4164 027642 113227      .WORD 113227 ;HRD /DDUNX /DD /HD / 5
4165 027644 113227      .WORD 113227 ;HRD /DDMIS /DD /HD / 6
4166 027646 154400      .WORD 154400 ;HRD / - / - / - / 7
4167 027650 154400      .WORD 154400 ;HRD /UNK / - / - / 8
4168 027652 101407      .WORD 101407 ;HRD /FIL-EMP/ - /HD / 9
4169 027654 010164      .WORD 010164 ;SFT /RD /RD /RD-RTMSK/ 10
4170 027656 011202      .WORD 011202 ;SFT /WRT /WT /WT-RTMSK/ 11
4171 027660 103407      .WORD 103407 ;HRD /INTR-ND/ - /HD / 12
4172 027662 104407      .WORD 104407 ;HRD /D-NINTR/ - /HD / 13
4173 027664 102407      .WORD 102407 ;HRD /ER-NSET/ - /HD / 14
4174 027666 154407      .WORD 154407 ;HRD /ERR BIT/ - /HD / 15
4175
4176
4177
4178
4179
4180

```

-----<CLASSIFICATION (SEEK=1/CRC=5/DATA=6/WRITE=2/READ=4)
-----<RETRY COUNTER OFFSET
-----<LOG REGISTER OFFSET-(FROM CKSML ADDRESS)
-----<TYPE (SOFT=0/HARD=1)
-----



HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 121  
 MOD 2.4.3.1 - UPDATE HARD ERROR STATISTICS

```

4183      .SBTTL MOD 2.4.3.1 - UPDATE HARD ERROR STATISTICS
4184      :-----
4185
4186 027670 000240 UDHDST: NOP
4187 027672 032737 000007 027620 IA2431: BIT #7,CLASWD ; IF ERROR CLASS WORD-
4188 027700 001007 BNE X2431 ; CLASS=HD(7), THEN
4189 027702 013701 027622 MOV LOGOFF,R1 ; GET ERROR LOG OFFSET
4190 027706 062701 007354 ADD #CKSML,R1 ; ERR LOG ADR=ERR LOG OFF + CKSML ADR
4191 027712 063701 002240 ADD UUTOFF,R1 ; UUT ERR LOG ADR=UUT OFFSET + ERR LOG ADR
4192 027716 005211 INC (R1) ; INCREMENT THE ERROR LOG
4193 027720 000207 X2431: RTS PC ; RETURN
4194      :MOD 2.4.3.1 ----- END MODULE -----
4195
4196
4197
4198      .SBTTL MOD 2.4.3.2 - UPDATE CRC STATISTICS
4199      :-----
4200
4201 027722 000240 UDCRST: NOP
4202 027724 032737 020000 027626 IA2432: BIT #BIT13,TSTCK ; IF TEST=DATA CHECK
4203 027732 001425 BEQ LA2432 ; BIT SET, THEN
4204 027734 032737 000010 002276 IB2432: BIT #BIT03,ERRTY ; IF ERR TYPE=DATA ERR
4205 027742 001007 BNE LB2432 ; NOT SET, THEN
4206 027744 012737 000020 027622 MOV #20,LOGOFF ; SET LOG OFFSET=CRC BAD LOG
4207 027752 012737 000006 027624 MOV #6,RTOFF ; SET RETRY OFFSET=CRC ERR
4208 027760 000420 BR IC2432 ; BR TO 'C'
4209 027762 012737 000050 027622 LB2432: MOV #50,LOGOFF ; SET DATA LOG OFFSET
4210 027770 005037 030474 CLR RTMASK ; CLEAR RETRY MASK
4211 027774 012737 000012 027624 MOV #12,RTOFF ; SET DUMMY DATA RETRY COUNTER OFFSET
4212 030002 004737 030344 CALL SFERLG ; CALL SOFT ERROR LOGGER
4213 030006 012737 000010 027622 LA2432: MOV #10,LOGOFF ; SET LOG OFFSET=CRC ERR LOG
4214 030014 012737 000006 027624 MOV #6,RTOFF ; SET RETRY OFFSET=CRC ERR
4215 030022 032737 010000 027626 IC2432: BIT #BIT12,TSTCK ; IF READ AFTER WRITE (RAW)
4216 030030 001407 BEQ LC2432 ; BIT SET, THEN
4217 030032 012737 000020 030474 MOV #BIT04,RTMASK ; SET RETRY MASK=CRC
4218 030040 052737 000002 030474 BIS #BIT1,RTMASK ; SET RETRY MASK=WRITE
4219 030046 000406 BR EC2432 ; BR TO END 'C'
4220 030050 012737 000020 030474 LC2432: MOV #BIT04,RTMASK ; SET RETRY MASK=CRC
4221 030056 052737 000004 030474 BIS #BIT02,RTMASK ; SET RETRY MASK=READ
4222 030064 004737 030344 EC2432: CALL SFERLG ; CALL SOFT ERROR LOGGER
4223 030070 000207 RETURN ; RETURN
4224      :MOD 2.4.3.2 ----- END MODULE -----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 123  
 MOD 2.4.3.3 - UPDATE SOFT ERROR STATISTICS

```

4227      .SBTTL MOD 2.4.3.3 - UPDATE SOFT ERROR STATISTICS
4228      :-----
4229
4230 030072 013702 027620      UDSFST: MOV      CLASWD,R2      ;PUT CLASSIFICATION WORD IN R1
4231 030076 006202              ASR      R2              ;  SHIF? WORD RIGHT
4232 030100 006202              ASR      R2              ;    3 TIMES TO GET
4233 030102 006202              ASR      R2              ;    RETRY COUNTER OFFSET (LAST 6 BITS)
4234 030104 042702 177700      BIC      #177700,R2      ;CLEAR TOP 10 BITS
4235 030110 010237 027624      MOV      R2,RTOFF        ;SET RETRY COUNTER OFFSET
4236 030114 013702 027620      IA2433: MOV      CLASWD,R2      ;GET CLASSIFICATION WORD
4237 030120 042702 177770      BIC      #177770,R2      ;CLEAR ALL BIT ERROR CLASSIFICATION
4238 030124 022702 000006      CMP      #6,R2          ;IF ERROR
4239 030130 001022              BNE      LA2433          ;CLASS=DATA, THEN
4240 030132 032737 010000 027626  IB2433: BIT      #BIT12,TSTCK ;IF TEST HAS
4241 030140 001404              BEQ      LB2433          ;READ AFTER WRITE (RAW) BIT SET, THEN
4242 030142 012737 000012 030474      MOV      #12,RTMASK      ;SET DATA & WRITE RETRY
4243 030150 000403              BR       EB2433          ;BR TO END IF 'B'
4244 030152 012737 000014 030474      LB2433: MOV      #14,RTMASK ;SET DATA & READ RETRY
4245 030160 012737 000010 027624      EB2433: MOV      #10,RTOFF ;SET DATA RT COUNTER OFFSET
4246 030166 012737 000050 027622      MOV      #50,LOGOFF      ;SET DATA LOG OFFSET
4247 030174 000405              BR       EA2433          ;BR TO END 'A'
4248 030176 010237 030474      LA2433: MOV      R2,RTMASK ;ELSE-PUT CLASS INTO RETRY MASK
4249 030202 162737 000050 027622      SUB      #50,LOGOFF      ;ADJ. LOG OFFSET SO THAT 'SEK' IS LOG BEGIN
4250 030210 004737 030344      EA2433: CALL     SFERLG      ;CALL SOFT ERROR LOGGER
4251 030214 000207              X2433:  RTS      PC      ;RETURN
4252      :MOD 2.4.3.3 ----- END MODULE -----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 125  
 MOD 2.4.3.3 - UPDATE SOFT ERROR STATISTICS

```

4255
4256      .SBTTL  MOD 2.4.3.4 - UPDATE SECTOR WRITTEN/READ COUNTERS
4257      ;-----
4258
4259 030216 013701 002234      UPSECT: MOV      UUT,R1      ;GET UNIT UNDER TEST
4260 030222 006301              ASL      R1      ;DOUBLE FOR WORD ADDRESSING
4261 030224 006301              ASL      R1      ;DOUBLE FOR 2 WORD ADDRESSING
4262 030226 042737 177770 030342 BIC      #177770,FUNTY ;CLEAR ALL BUT FUNCTION
4263 030234 022737 000003 030342 IA2434: CMP      #3,FUNTY ;IF FUNCTION TYPE
4264 030242 001002              BNE      IB2434 ;IS READ, THEN
4265 030244 005002              CLR      R2      ;CLEAR R2
4266 030246 000412              BR       EA2434 ;BR TO END 'A'
4267 030250 022737 000002 030342 IB2434: CMP      #2,FUNTY ;IF FUNCTION TYPE
4268 030256 001404              BEQ      LB2434 ;IS NOT WRITE #1, THEN
4269 030260 022737 000006 030342 IC2434: CMP      #6,FUNTY ;IF FUNCTION TYPE
4270 030266 001024              BNE      XUPSCT ;IS WRITE #2, THEN
4271 030270 012702 000020      LB2434: MOV      #20,R2 ;SET R2 OFFSET=WRITE
4272 030274 000241              EA2434: CLC      ;CLEAR CARRY BIT
4273 030276 060102              ADD      R1,R2 ;SETUP OFFSET
4274 030300 005262 007314              INC      READSC(R2) ;INCREMENT SECTOR COUNTER
4275 030304 100015              BPL      XUPSCT ;IF BIT#15 SET, THEN
4276 030306 005062 007314              CLR      READSC(R2) ;CLEAR SECTOR COUNTER
4277 030312 062702 000002              ADD      #2,R2 ;SETUP TO INCREMENT DOUBLE PRECISION WORD
4278 030316 005262 007314              INC      READSC(R2) ;INCREMENT DOUBLE PRECISION WORD
4279 030322 103006              BCC      XUPSCT ;IF CARRY BIT SET, THEN
4280 030324 005062 007314              CLR      READSC(R2) ;CLEAR DOUBLE PRECISION CTR
4281 030330 162702 000002              SUB      #2,R2 ;
4282 030334 005062 007314              CLR      READSC(R2) ;CLEAR DOUBLE PRECISION CTR
4283 030340 000207      XUPSCT: RETURN ;RETURN
4284      ;-----
4285 030342 000000      FUNTY: 0 ;STATISTICS FUNCTION CK
4286      ;-----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 127  
 - MOD 2.4.U.1 - SOFT ERROR LOGGER

```

4289          .SBTTL - MOD 2.4.U.1 - SOFT ERROR LOGGER
4290          ;-----
4291
4292 030344 013701 027622 SFERLG: MOV LOGOFF,R1 ;GET ERR LOG OFFSET
4293 030350 013702 027624          MOV RTOFF,R2 ;GET RETRY COUNTER OFFSET
4294 030354 062702 002306          ADD #SEKRT,R2 ;CAL. RETRY COUNTER ADR
4295 030360 032737 000004 002204 IA24U1: BIT #BIT02,SWREG ;IF (SFT SW REG) RETRY ON ERROR, LOG SOFT OR HD ERROR
4296 030366 001004          BNE IB24U1 ;SET OR
4297 030370 032737 000004 002264          BIT #EVL,FLGDRS ;DRS 'EVL' FLAG
4298 030376 001412          BEQ LB24U1 ;SET, THEN
4299 030400 021227 000012          IB24U1: CMP (R2),#12 ;IF RETRY COUNTER
4300 030404 103007          BHIS LB24U1 ;EQUALS < 10 ERRORS, THEN
4301 030406 005212          INC (R2) ;INCREMENT RETRY COUNTER
4302 030410 053737 030474 002304          BIS RTMASK,RETRY ;SET RT FLAGS PER RT MASK
4303 030416 005037 002300          CLR HARDER ;CLEAR HARD ERROR
4304 030422 000413          BR EB24U1 ;BR TO END 'B'
4305 030424 062701 007514          LB24U1: ADD #HSEK,R1 ;HD ERR LOG ADR=HARD SEEK ADR+LOG OFFSET
4306 030430 063701 002240          ADD UUTOFF,R1 ;UUT ERR LOG ADR=UUT OFFSET+LOG ADR
4307 030434 005211          INC (R1) ;INCREMENT UUT HARD ERROR LOG
4308 030436 043737 030474 002304          BIC RTMASK,RETRY ;CLEAR RETRY FALGS USING RT MASK
4309 030444 005012          CLR (R2) ;CLEAR RETRY COUNTER
4310 030446 005237 002300          INC HARDER ;SET HARD ERROR FLAG
4311 030452 013701 027622          EB24U1: MOV LOGOFF,R1 ;GET ERR LOG OFFSET
4312 030456 062701 007424          ADD #SEK,R1 ;ERR LOG ADR=SEK LOG ADR+LOG OFFSET
4313 030462 063701 002240          ADD UUTOFF,R1 ;UUT ERR LOG ADR=UUT OFFSET+LOG ADR
4314 030466 005211          INC (R1) ;INCREMENT UUT ERROR LOG
4315 030470 000240          X24U1: NOP ;
4316 030472 000207          RTS PC ;RETURN
4317          ;-----
4318 030474 000000          RTMASK: 0 ;RETRY MASK
4319          ;MOD 2.4.U1 ----- END MODULE -----

```

4322  
4323  
4324  
4325 030476 013701 033544  
4326 030502 042701 177400  
4327 030506 005701  
4328 030510 001443  
4329 030512 006201  
4330 030514 006201  
4331 030516 062701 030624  
4332 030522 011102  
4333 030524 105702  
4334 030526 001003  
4335 030530 050237 002274  
4336 030534 000431  
4337 030536 122702 000300  
4338 030542 001024  
4339 030544 022737 000003 030622  
4340 030552 001004  
4341 030554 052737 002000 002276  
4342 030562 000416  
4343 030564 022737 000002 030622  
4344 030572 001004  
4345 030574 052737 004000 002276  
4346 030602 000406  
4347 030604 052737 040000 002276  
4348 030612 000402  
4349 030614 050237 002276  
4350 030620 000207  
4351  
4352 030622 000000  
4353  
4354 030624 000000  
4355 030626 000001  
4356 030630 000001  
4357 030632 000000  
4358 030634 004000  
4359 030636 000001  
4360 030640 002000  
4361 030642 000300  
4362 030644 004000  
4363 030646 000300  
4364 030650 000300  
4365 030652 000300  
4366 030654 000002  
4367 030656 000001  
4368 030660 000300  
4369 030662 000300  
4370 030664 000002  
4371 030666 000000  
4372 030670 002000  
4373 030672 004000  
4374 030674 020000  
4375 030676 020000  
4376 030700 000000  
4377

```

.SBTTL MOD 2.4.4 - EVALUATE UNIT ERROR CODE
-----
EVUTEC: MOV XERUUT,R1 ;GET ERR CODE & SAVE
        BIC #177400,R1 ;CLEAR TOP BYTE
IFA244: TST R1 ;IF ERRCODE
        BEQ END244 ;NOT=0, THEN
        ASR R1 ;SHIFT ERR CODE FOR LOOK UP
        ASR R1 ;AND ADDRESSING
        ADD #ECCLAS,R1 ;CAL ERR TABLE CLASSIFICATION ADR
        MOV (R1),R2 ;GET ERR CODE CLASSIFICATION WORD
IFB244: TSTB R2 ;IF LOWER BYTE
        BNE IFC244 ;EQUALS 0, THEN
        BIS R2,ERRSY ;SET ERR ONTO ERRSY
        BR END244 ;BR TO END IF 'B'
IFC244: CMPB #300,R2 ;IF LOW BYTE
        BNE ELC244 ;EQUALS 300, THEN
IFD244: CMP #3,FNEV4 ;IF FUNCTION WAS
        BNE IFE244 ;A READ, THEN
        BIS #2000,ERRTY ;SET READ ERR
        BR END244 ;BR TO END IF 'B'
IFE244: CMP #2,FNEV4 ;IF FUNCTION WAS
        BNE ELE244 ;A WRITE, THEN
        BIS #4000,ERRTY ;SET WRITE ERROR
        BR END244 ;BR TO END IF 'B'
ELE244: BIS #40000,ERRTY ;SET UNK ERROR
        BR END244 ;BR TO END IF 'B'
ELC244: BIS R2,ERRTY ;SET CLASSIFIED ERROR ONTO ERRTY
END244: RTS PC ;RETURN
-----
FNEV4: 0 ;FUNCTION FOR EVALUATION
-----
ECCLAS: .WORD 0 ;ERR CODE # 00 ----> NOT USED (NO ERROR)
        .WORD 1 ;ERR CODE # 10 ----> SEEK
        .WORD 1 ;ERR CODE # 20 ----> SEEK
        .WORD 0 ;ERR CODE # 30 ----> NOT ASSIGNED
        .WORD 4000 ;ERR CODE # 40 ----> SYS ERR
        .WORD 1 ;ERR CODE # 50 ----> SEEK
        .WORD 2000 ;ERR CODE # 60 ----> SELF DIAG ERR
        .WORD 300 ;ERR CODE # 70 ----> READ OR WRITE ERR
        .WORD 4000 ;ERR CODE # 100 ----> SYS ERR
        .WORD 300 ;ERR CODE # 110 ----> READ OR WRITE ERR
        .WORD 300 ;ERR CODE # 120 ----> READ OR WRITE ERR
        .WORD 300 ;ERR CODE # 130 ----> READ OR WRITE ERR
        .WORD 2 ;ERR CODE # 140 ----> CRC ERR
        .WORD 1 ;ERR CODE # 150 ----> SEEK ERR
        .WORD 300 ;ERR CODE # 160 ----> READ OR WRITE ERR
        .WORD 300 ;ERR CODE # 170 ----> READ OR WRITE ERR
        .WORD 2 ;ERR CODE # 200 ----> CRC ERR
        .WORD 0 ;ERR CODE # 210 ----> NOT ASSIGNED
        .WORD 2000 ;ERR CODE # 220 ----> SELF DIAG ERR
        .WORD 4000 ;ERR CODE # 230 ----> SYS ERR
        .WORD 20000 ;ERR CODE # 240 ----> DENSITY ERR
        .WORD 20000 ;ERR CODE # 250 ----> DENSITY ERR
        .WORD 0 ;ERR CODE # 260 ----> NOT ASSIGNED
-----
:MOD 2.4.4 ----- END MODULE -----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 131  
MOD 2.5 - OUTPUT ERROR TYPE

```

4380 .SBTTL MOD 2.5 - OUTPUT ERROR TYPE
4381 -----
4382 030702 013737 002276 002604 OTERTP: MOV ERRTY,ERRREG ;SET ERROR TYPE FOR PRINT OUT
4383 030710 013701 002276 MOV ERRTY,R1 ;GET ERROR TYPE
4384 030714 005002 CLR R2 ;CLEAR ERROR # COUNT
4385 030716 000240 BDA25: NOP ;
4386 030720 032701 000001 IFA25: BIT #1,R1 ;IF BIT #1
4387 030724 001405 BEQ ELA25 ;EQUALS 1, THEN
4388 030726 010204 MOV R2,R4 ;SAVE ERROR # COUNT
4389 030730 006304 ASL R4 ;DOUBLE ERR # COUNT FOR ADDRESSING
4390 030732 062704 031616 ADD #ET1,R4 ;SET ADDR FOR ERR MSG PRINT
4391 030736 000407 BR THA25 ;BR TO THEN 'A'
4392 030740 000241 ELA25: CLC ;CLEAR CARRY BIT
4393 030742 006201 ASR R1 ;SHIFT ERR TYPE RIGHT
4394 030744 005202 INC R2 ;INCREMENT ERROR # COUNT
4395 030746 022702 000017 CMP #17,R2 ;DC UNTIL ERROR # COUNT
4396 030752 001361 BNE BDA25 ;EQUALS 15, THEN
4397 030754 000507 BR EIA25 ;BR TO END IF 'A'
4398 030756 005003 THA25: CLR R3 ;CLEAR R3
4399 030760 010205 MOV R2,R5 ;GET ERR#
4400 030762 062705 031656 ADD #ETCLAS,R5 ;CAL. ERR# CLASSIFICATION ADR
4401 030766 111503 MOVB (R5),R3 ;GET ERR# CLASSIFICATION
4402 030770 032703 000001 IFB25: BIT #1,R3 ;IF SOFT ERR
4403 030774 001415 BEQ IFC25 ;CLASS, THEN
4404 030776 005737 002300 TST HARDER ;IF HARD ERR
4405 031002 001015 BNE ELB25 ;NOT SET, THEN
4406 031004 010237 002376 MOV R2,ERRNBR ;SET ERR #
4407 031010 011437 002400 MOV (R4),ERRMSG ;SET ERR MSG
4408 031014 012737 000003 002374 MOV #SOFT,ERRTYP ;SET ERR TYP=SOFT
4409 031022 004737 002354 CALL ERROR ;CALL ERROR
4410 031026 000437 BR EIC25 ;
4411 031030 032703 000002 IFC25: BIT #2,R3 ;IF HARD ERR
4412 031034 001434 BEQ EIC25 ;CLASS, THEN
4413 031036 052702 000040 ELB25: BIS #40,R2 ;SET HARD ERROR #
4414 031042 010237 002376 MOV R2,ERRNBR ;SET ERR #
4415 031046 011437 002400 MOV (R4),ERRMSG ;SET ERR MSG
4416 031052 012737 000002 002374 MOV #HARD,ERRTYP ;PRESET ERR TYP=HARD ERR
4417 031060 032737 000004 002264 IFF25: BIT #EVL,FLGDRS ;IF DRS 'EVL' FLAG
4418 031066 001413 BEQ EIF25 ;IS SET, THEN
4419 031070 005237 002302 INC HDRCT ;INCREMENT HARD ERROR CTR
4420 031074 023737 002302 002216 IFE25: CMP HDRCT,DFTL ;IF DEVICE FATAL THRESHOLD
4421 031102 101005 BHI EIF25 ;REACHED, THEN
4422 031104 012737 000001 002374 MOV #DVFT,ERRTYP ;RESET ERR TYP=DEVICE FATAL
4423 031112 005037 002302 CLR HDRCT ;CLEAR HARD ERROR CTR
4424 031116 004737 002354 EIF25: CALL ERROR ;CALL ERROR
4425 031122 005237 002300 INC HARDER ;SET HARD ERROR FLAG
4426 031126 013737 002276 002604 EIC25: MOV ERRTY,ERRREG ;SET ERR TYPE FOR PRINT OUT
4427 031134 004737 002404 CALL PRterr ;CALL U.P.ERR - PRINT ERR INFO
4428 031140 013737 002276 021452 MOV ERRTY,ERTSAV ;SAVE ERR TYP FOR DATA CK
4429 031146 005037 002276 CLR ERRTY ;CLEAR DEVICE ERR
4430 031152 004737 003034 CALL XERPRT ;CALL MOD U.PRT.B - PRINT ERR CODE
4431 031156 005737 002300 IFD25: TST HARDER ;IF NOT A
4432 031162 001002 BNE ELD25 ;HARDER, THEN
4433 031164 004737 031676 CALL PTRTY ;CALL 2.5.1 - PRINT RETRY #
4434 031170 005037 002300 ELD25: CLR HARDER ;CLEAR HARD ERROR FLAG
4435 031174 000207 EIA25: RTS PC ;RETURN
4436 -----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 131-1  
MOD 2.5 - OUTPUT ERROR TYPE

```

4437 -----
4438 031176      040      123      105  ERT1:  .ASCIZ  / SEEK ERR/
4439 031210      040      103      122  ERT2:  .ASCIZ  / CRC ERR/
4440 031221      040      103      113  ERT3:  .ASCIZ  / CK SUM ERR/
4441 031235      040      104      101  ERT4:  .ASCIZ  / DATA ERR/
4442 031247      040      125      116  ERT5:  .ASCIZ  / UNASSG ERR/
4443 031263      040      104      105  ERT6:  .ASCIZ  / DEL. DATA UNEXPECTED ERR/
4444 031315      040      104      105  ERT7:  .ASCIZ  / DEL. DATA MISSING ERR/
4445 031344      040      125      116  ERT8:  .ASCIZ  / UNASSG ERR/
4446 031360      040      125      116  ERT9:  .ASCIZ  / UNK ERR/
4447 031371      040      106      111  ERT10: .ASCIZ  / FILL OR EMPTY BUFFER ERR/
4448 031423      040      122      105  ERT11: .ASCIZ  / READ ERR/
4449 031435      040      127      122  ERT12: .ASCIZ  / WRITE ERR/
4450 031450      040      111      116  ERT13: .ASCIZ  / INTERRUPT BUT NO DONE BIT ERR/
4451 031507      040      104      117  ERT14: .ASCIZ  / DONE BIT BUT NO INTERRUPT ERR/
4452 031546      040      105      122  ERT15: .ASCIZ  / ERROR, BUT NO ERR BIT SET/
4453 031601      040      105      122  ERT16: .ASCIZ  / ERR BIT SET/

```

```

4454
4455 031616 031176  ET1:  .WORD  ERT1
4456 031620 031210  .WORD  ERT2
4457 031622 031221  .WORD  ERT3
4458 031624 031235  .WORD  ERT4
4459 031626 031247  .WORD  ERT5
4460 031630 031263  .WORD  ERT6
4461 031632 031315  .WORD  ERT7
4462 031634 031344  .WORD  ERT8
4463 031636 031360  .WORD  ERT9
4464 031640 031371  .WORD  ERT10
4465 031642 031423  .WORD  ERT11
4466 031644 031435  .WORD  ERT12
4467 031646 031450  .WORD  ERT13
4468 031650 031507  .WORD  ERT14
4469 031652 031546  .WORD  ERT15
4470 031654 031601  .WORD  ERT16

```

```

4471 -----
4472                                     :ERROR
4473                                     - TYPE - ERR#
4474 031656      001  ETCLAS: .BYTE 1 :SEEK - SOFT - 0 -32
4475 031657      001  .BYTE 1 :CRC - SOFT - 1 -33
4476 031660      002  .BYTE 2 :CKSUM - HARD - -34
4477 031661      001  .BYTE 1 :DATA - SOFT - 3 -35
4478 031662      000  .BYTE 0 :UNASSIGNED -
4479 031663      002  .BYTE 0 :DEL. DATA UNEX - HARD - -37
4480 031664      002  .BYTE 2 :DEL. DATA MISSING - HARD - -38
4481 031665      000  .BYTE 0 :UNASSIGNED -
4482 031666      002  .BYTE 2 :UNK ERR - HARD - -40
4483 031667      002  .BYTE 2 :FILL/EMPTY BUFFER - HARD - -41
4484 031670      001  .BYTE 1 :READ - SOFT - 10-42
4485 031671      001  .BYTE 1 :WRITE - SOFT - 11-43
4486 031672      002  .BYTE 2 :INTER-BUT NO DONE - HARD - -44
4487 031673      002  .BYTE 2 :DONE-BUT NO INTER - HARD - -45
4488 031674      002  .BYTE 2 :ERR-BUT NO ERR BIT - HARD - -46
4489 031675      002  .BYTE 2 :ERR BIT SET - HARD - -47
4490
4491

```

:MOD 2.5 ----- END MODULE -----

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 133  
MOD 2.5 - OUTPUT ERROR TYPE

```

4494
4495
4496
4497
4498 031676 000240
4499 031700 005737 002304
4500 031704 001500
4501 031706 032737 000001 002304
4502 031714 001405
4503 031716 013702 002306
4504 031722 012701 032110
4505 031726 000465
4506 031730 032737 000002 002304
4507 031736 001427
4508 031740 032737 000030 002304
4509 031746 001416
4510 031750 032737 000010 002304
4511 031756 001405
4512 031760 013702 002316
4513 031764 012701 032134
4514 031770 000444
4515 031772 013702 002314
4516 031776 012701 032270
4517 032002 000437
4518 032004 013702 002326
4519 032010 012701 032166
4520 032014 000432
4521 032016 032737 000004 002304
4522 032024 001430
4523 032026 032737 000030 002304
4524 032034 001416
4525 032036 032737 000010 002304
4526 032044 001405
4527 032046 013702 002316
4528 032052 012701 032213
4529 032056 000411
4530 032060 013702 002314
4531 032064 012701 032321
4532 032070 000404
4533 032072 013702 002324
4534 032076 012701 032244
4535 032102 004737 004536
4536 032106 000207
4537
4538 032110 045 101 040
4539 032134 045 101 040
4540 032166 045 101 040
4541 032213 045 101 040
4542 032244 045 101 040
4543 032270 045 101 040
4544 032321 045 101 040
4545
4546

.SBTTL MOD 2.5.1 - PRINT RETRY
:-----
PTRTY: NOP
IFA251: TST RETRY ;IF RETRY
BEQ END251 ;NOT=0, THEN
IFB251: BIT #1,RETRY ;IF RETRY
BEQ IFC251 ;IS SEEK, THEN
MOV SEEKRT,R2 ;SET SEEK RT COUNT
MOV #MSKRT,R1 ;SET SEEK RT MSG
BR EIB251 ;BR TO END IF 'B'
IFC251: BIT #2,RETRY ;IF RETRY
BEQ IFE251 ;IS WRT, THEN
IFD251: BIT #30,RETRY ;IF RETRY
BEQ ELD251 ;IS DATA OR CRC, THEN
IFG251: BIT #10,RETRY ;IF RETRY
BEQ ELG251 ;IS DATA, THEN
MOV DATART,R2 ;SET DATA RT COUNT
MOV #MDWTRT,R1 ;SET DATA WRT MSG
BR EIB251 ;BR TO END IF 'B'
ELG251: MOV CRCRT,R2 ;SET CRC RETRY COUNT
MOV #MCWTRT,R1 ;SET CRC WRT MSG
BR EIB251 ;BR TO END IF 'B'
ELD251: MOV WTRT,R2 ;SET WRT RT COUNT
MOV #MWTRT,R1 ;SET WRT RT MSG
BR EIB251 ;BR TO END IF 'B'
IFE251: BIT #4,RETRY ;IF RETRY
BEQ END251 ;IS READ, THEN
IFF251: BIT #30,RETRY ;IF RETRY
BEQ ELF251 ;IS DATA OR CRC, THEN
IFH251: BIT #10,RETRY ;IF RETRY
BEQ ELH251 ;IS DATA, THEN
MOV DATART,R2 ;SET DATA RT COUNT
MOV #MDRDRT,R1 ;SET DATA READ RT MSG
BR EIB251 ;BR TO END IF 'B'
ELH251: MOV CRCRT,R2 ;SET CRC RETRY COUNT
MOV #MCRDRT,R1 ;SET CRC READ MSG
BR EIB251 ;BR TO END IF 'B'
ELF251: MOV READRT,R2 ;SET READ RT COUNT
MOV #MRDRT,R1 ;SET READ RT MSG
EIB251: CALL PRTB1S ;PRINT RETRY # & TYPE
END251: RTS PC ;RETURN
:-----
MSKRT: .ASCIZ /%A SEEK RETRY#%D2%N/
MDWTRT: .ASCIZ /%A DATA WRITE RETRY#%D2%N/
MWTRT: .ASCIZ /%A WRITE RETRY#%D2%N/
MDRDRT: .ASCIZ /%A DATA READ RETRY#%D2%N/
MRDRT: .ASCIZ /%A READ RETRY#%D2%N/
MCWTRT: .ASCIZ /%A CRC WRITE RETRY#%D2%N/
MCRDRT: .ASCIZ /%A CRC READ RETRY#%D2%N/
.EVEN
:MOD 2.5.1 ----- END MODULE -----

```



HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 135  
 MOD 2.6 - SET DRIVES DONE

```

4549          .SBTTL  MOD 2.6 - SET DRIVES DONE
4550          :-----
4551
4552 032352 000240          STDVDN: NOP          :
4553 032354 005737 021442  IFA26: TST          DVDNCK          : IF DRV DONE CK
4554 032360 001430          BEQ          END26          : IS SET, THEN
4555 032362 000240          NOP          :
4556 032364 005037 021442          CLR          DVDNCK          : CLEAR DRV DONE CK
4557 032370 032737 000001 002234  IFB26: BIT          #1,UUT          : IF DRV#1 DONE
4558 032376 001404          BEQ          ELB26          : THEN
4559 032400 052737 000002 021432          BIS          #2,BTHDRV          : SET DRV#1 DONE FLAG
4560 032406 000403          BR          EIB26          : BR TO END
4561 032410 052737 000001 021432  ELB26: BIS          #1,BTHDRV          : SET DRV#0 DONE FLAG
4562 032416 005001          EIB26: CLR          R1          : CLEAR TEMP DRV DONE REG
4563 032420 013703 002234          MOV          UUT,R3          : GET UNIT UNDER TEST
4564 032424 000261          SEC          : SET CARRY BIT
4565 032426 006101          BDA26: ROL          R1          : MOVE DRV BIT
4566 032430 005303          DEC          R3          : DECREMENT UNIT UNDER TEST
4567 032432 005703          TST          R3          : DO UNTIL UNIT UNDER TST
4568 032434 002374          DUA26: BGE          BDA26          : EQUALS -1
4569 032436 050137 021444          BIS          R1,DRVDN          : THEN SET THIS DRV DONE
4570 032442 000207          END26: RTS          PC          : RETURN
4571          :MOD 2.6 ---- END MODULE -----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 137  
 MOD 3.0 - OUTPUT EXERCISE COMPLETE

```

4574
4575      .SBTTL MOD 3.0 - OUTPUT EXERCISE COMPLETE
4576 032444 000240      :-----
4577 032446 023737 002232 002230 0TEXCM: NOP
4578 032454 001003      CMP      SUT,SDD      ;IF ALL SCHEDULED
4579 032456 012737 000001 014020      BNE      END30      ;DRIVE DONE
4580 032464 000207      MOV      #1,EXCMP    ;SET EXERCISE COMPLETE
4581      END30: RTS      PC      ;RETURN
      ;MOD 3.0 ----- END MODULE -----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 139  
MOD 4.0 - OUTPUT SYSTEM ERROR

```

4584
4585
4586 032466 013701 002274
4587 032472 000241
4588 032474 006201
4589 032476 000241
4590 032500 006201
4591 032502 006201
4592 032504 005002
4593 032506 000240
4594 032510 032701 000001
4595 032514 001405
4596 032516 010204
4597 032520 006304
4598 032522 062704 033416
4599 032526 000406
4600 032530 006201
4601 032532 005202
4602 032534 022702 000017
4603 032540 001362
4604 032542 000452
4605 032544 010205
4606 032546 062705 033450
4607 032552 111503
4608 032554 032703 000002
4609 032560 001415
4610 032562 010205
4611 032564 052705 000100
4612 032570 010537 002376
4613 032574 011437 002400
4614 032600 012737 000001 002374
4615 032606 004737 002354
4616 032612 000417
4617 032614 032703 000004
4618 032620 001414
4619 032622 010205
4620 032624 052705 000200
4621 032630 010537 002376
4622 032634 011437 002400
4623 032640 012737 000000 002374
4624 032646 004737 002354
4625 032652 013737 002274 002604
4626 032660 004737 002404
4627 032664 004737 003034
4628 032670 000240
4629 032672 005037 002274
4630 032676 000207
4631

```

```

.SBTTL MOD 4.0 - OUTPUT SYSTEM ERROR
-----
OTSYER: MOV ERRSY,R1 ;GET SYSTEM ERR
        CLC ;CLEAR CARRY BIT
        ASR R1 ;SHIFT
        CLC
        ASR R1 ;FUNCTION
        ASR R1 ;OUT
        CLR R2 ;CLEAR ERR # COUNT
BDA40: NOP
IFA40: BIT #1,R1 ;IF BIT #1
        BEQ ELA40 ;EQUALS 1, THEN
        MOV R2,R4 ;SAVE ERROR # COUNT
        ASL R4 ;DOUBLE ERR # COUNT FOR ADDRESSING
        ADD #SE1,R4 ;SET ADDR FOR ERR MSG PRINT
        BR THA40 ;BR TO THEN 'A'
ELA40: ASR R1 ;SHIFT ERR TYPE RIGHT
        INC R2 ;INCREMENT ERROR # COUNT
        CMP #17,R2 ;DO UNTIL ERR # COUNT
        BNE BDA40 ;EQUALS 15, THEN
        BR THA40 ;BR TO END IF 'A'
THA40: MOV R2,R5 ;GET ERR#
        ADD #ESCLAS,R5 ;CAL. ERR# CLASSIFICATION ADR
        MOVB (R5),R3 ;GET ERR# CLASSIFICATION
        BIT #2,R3 ;IF DEVICE FATAL
        BEQ IFC40 ;ERROR, THEN
        MOV R2,R5 ;GET ERR#
        BIS #100,R5 ;SET ERR CLASS=SYS
        MOV R5,ERRNBR ;SET ERR#
        MOV (R4),ERRMSG ;SET ERR MSG
        MOV #DVFT,ERRTYP ;SET DEVICE FATAL ERROR
        CALL ERROR ;CALL ERROR
        BR EIC40 ;BR TO END IF 'C'
IFC40: BIT #4,R3 ;IF SYSTEM FATAL
        BEQ EIC40 ;ERROR, THEN
        MOV R2,R5 ;GET ERR#
        BIS #200,R5 ;SET ERR CLASS=SYS
        MOV R5,ERRNBR ;SET ERR#
        MOV (R4),ERRMSG ;SET ERR MSG
        MOV #SYFT,ERRTYP ;SET ERR TYP=SYS FATAL
        CALL ERROR ;CALL ERROR
EIC40: MOV ERRSY,ERRREG ;SET SYS ERR FOR PRINT OUT
        CALL PRERR ;CALL U.P.ERR - PRINT ERR INFO
        CALL XERPRT ;CALL MOD U.PRT.B - PRINT ERROR CODE
EIA40: NOP
        CLR ERRSY ;CLEAR SYS ERRORS
END40: RTS PC
-----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 141  
MOD 4.0 - OUTPUT SYSTEM ERROR

```

4634
4635
4636 032700      040      116      117      SYSE4: .ASCIZ / NO DONE BIT ON INITIALIZE/
4637 032733      040      116      117      SYSE5: .ASCIZ / NO DONE BIT ON FUNCTION/
4638 032764      040      116      117      SYSE6: .ASCIZ / NO DRIVE READY BIT/
4639 033010      040      116      117      SYSE7: .ASCIZ / NO SIDE READY BIT/
4640 033033      040      116      117      SYSE8: .ASCIZ / NO DONE BIT AFTER READ STATUS/
4641 033072      040      127      122      SYSE9: .ASCIZ / WRONG DRIVE RESPONDING/
4642 033122      040      127      122      SYSE10: .ASCIZ / WRONG SIDE RESPONDING/
4643 033151      040      125      116      SYSE11: .ASCIZ / UNUSED/
4644 033161      040      125      116      SYSE12: .ASCIZ / UNUSED/
4645 033171      040      104      111      SYSE13: .ASCIZ / DISKETTE WRONG DENSITY ERR/
4646 033225      040      104      105      SYSE14: .ASCIZ / DENSITY ERR/
4647 033242      040      124      111      SYSE15: .ASCIZ / TIME OUT ON "TR" OR "DONE" BIT/
4648 033302      040      125      116      SYSE16: .ASCIZ / UNCLASSIFIED SYSTEM ERROR/
4649 033335      045      116      045      FUNCT: .ASCIZ /%N%AFUNCTION CODE:%O3/
4650 033363      045      116      045      ERRORS: .ASCIZ /%N%ASYSTEM ERROR REG=%B%N/
4651
4652 033416      032700      SE1: .EVEN
4653 033420      032733      .WORD SYSE4
4654 033422      032764      .WORD SYSE5
4655 033424      033010      .WORD SYSE6
4656 033426      033033      .WORD SYSE7
4657 033430      033072      .WORD SYSE8
4658 033432      033122      .WORD SYSE9
4659 033434      033151      .WORD SYSE10
4660 033436      033161      .WORD SYSE11
4661 033440      033171      .WORD SYSE12
4662 033442      033225      .WORD SYSE13
4663 033444      033242      .WORD SYSE14
4664 033446      033302      .WORD SYSE15
4665
4666
4667
4668 033450      004      ESCLAS: .BYTE 4
4669 033451      002      .BYTE 2
4670 033452      002      .BYTE 2
4671 033453      002      .BYTE 2
4672 033454      004      .BYTE 4
4673 033455      004      .BYTE 4
4674 033456      000      .BYTE 0
4675 033457      000      .BYTE 0
4676 033460      002      .BYTE 2
4677 033461      002      .BYTE 2
4678 033462      004      .BYTE 4
4679 033463      004      .BYTE 4
4680 033464      004      .BYTE 4
4681
4682

```

```

;-----
;ERROR - CLASS -ERR#
;-----
;NO DONE ON INIT - SYS FATAL - 128
;NO DONE ON FUNCTION - DEV FATAL - 65
;NO DRIVE RDY - DEV FATAL - 66
;NO SIDE RDY - DEV FATAL - 67
;NO DONE AFTER RD STA - DEV FATAL - 68
;WRG DRV RESPOND - SYS FATAL - 133
;WRG SIDE RESPOND - SYS FATAL - 134
;UNUSED - 0
;UNUSED - 0
;DISKETT WRG DEN - DEV FATAL - 73
;DENSITY ERR - DEV FATAL - 74
;T.O. ON "TR" OR "DONE" - SYS FATAL - 139
;SYS ERR - SYS FATAL - 140
;-----
;MOD 4.0 ----- END MODULE -----

```

HARDWARE TESTS MACRO M1200 15-DEC-82 13:50 PAGE 143  
 - MOD INTR.1 - INTERRUPT HANDLER #0

```

4685 .SBTTL - MOD INTR.1 - INTERRUPT HANDLER #0
4686 -----
4687 033466 013737 002220 033542 INTH0: MOV UOADR,INCSAD ;SET UNIT #0 ADDRESS
4688 033474 004737 033516 CALL SVUTRG ;CALL MOD U.INTR.U - SAVE UNIT REG
4689 033500 000002 RTI ;
4690 ;MOD U.INTR.1 ----- END MODULE -----
4691
4692 .SBTTL - MOD INTR.2 - INTERRUPT HANDLER #1
4693 -----
4694 033502 013737 002222 033542 INTH1: MOV U1ADR,INCSAD ;SET UNIT #1 ADDRESS
4695 033510 004737 033516 CALL SVUTRG ;CALL MOD U.INTR.U - SAVE UNIT REG
4696 033514 000002 RTI ;
4697 ;MOD U.INTR.2 ----- END MODULE -----
4698
4699 .SBTTL MOD U.INTR.U - SAVE UNIT REG
4700 -----
4701 033516 012737 000001 025226 SVUTRG: MOV #1,DNFLAG ;SET DONE FLAG
4702 033524 013701 033542 MOV INCSAD,R1 ;SAVE UUT ADDRESS
4703 033530 012137 002246 MOV (R1)+,CSRUUT ;SAVE UUT CSR
4704 033534 011137 002250 MOV (R1),ESRUUT ;SAVE UUT ESR
4705 033540 000207 RTS PC ;RETURN
4706 -----
4707 033542 000000 INCSAD: 0 ;INTERRUPTING UNIT CSR ADDRESS
4708 ;MOD U.I.U ----- END MODULE -----
4709
4710 .SBTTL - READ ERROR CODE BUFFER
4711 -----
4712 033544 000 XERUUT: .BYTE 0 ;ERROR CODE UUT
4713 033545 000 WC: .BYTE 0 ;WORD COUNT UUT
4714 033546 000 CTK0: .BYTE 0 ;CUR TRK DRV#0
4715 033547 000 CTK1: .BYTE 0 ;CUR TRK DRV#1
4716 033550 000 TTRK: .BYTE 0 ;TARGET TRK
4717 033551 000 TSEC: .BYTE 0 ;TARGET SEC
4718 033552 000 SFTSTS: .BYTE 0 ;MICRO CODE SOFT STATUS
4719 033553 000 BTRK: .BYTE 0 ;BAD TRK ADR
4720 -----
4721
4722 .SBTTL - TRACK TABLE
4723 -----
4724 033554 000232 TRKTBL: .REPT 154. ;TRACK TABLE
4727 -----
4728
4729 .SBTTL - DATA BUFFERS
4730 -----
4731 034006 000400 DATPAT: .REPT 256. ;DATA PATTERN
4734 034406 000400 DATBUF: .REPT 256. ;DATA BUFFER
4737 -----
4738 035006
  
```

ENDTST

PARAMETER CODING  
- DATA BUFFERS

MACRO M1200 15-DEC-82 13:50 PAGE 145

4741  
4752  
4753  
4789  
4790  
4791  
4792  
4793  
4794  
4795  
4796  
4797  
4798  
4799 035010  
4800  
4801 035012  
4802 035022  
4803 035032  
4804 035044  
4805  
4806 035056  
4807  
4813 035060  
4814  
4815 035060  
4816 035073  
4817 035106  
4818 035121  
4819  
4820

.TITLE PARAMETER CODING

.SBTTL HARDWARE PARAMETER CODING SECTION

:++  
: THE HARDWARE PARAMETER CODING SECTION CONTAINS MACROS  
: THAT ARE USED BY THE SUPERVISOR TO BUILD P-TABLES. THE  
: MACROS ARE NOT EXECUTED AS MACHINE INSTRUCTIONS BUT ARE  
: INTERPRETED BY THE SUPERVISOR AS DATA STRUCTURES. THE  
: MACROS ALLOW THE SUPERVISOR TO ESTABLISH COMMUNICATIONS  
: WITH THE OPERATOR.  
:--

BGNHRD

GPRMA MSG1,0,0,0,177777,YES  
GPRMA MSG2,2,0,0,177777,YES  
GPRMD MSG3,4,0,177777,0.,1.,YES  
GPRMD MSG4,6,0,177777,0.,1.,YES

EXIT HRD

ENDHRD

-----  
MSG1: .ASCIZ /RX BUS ADR/  
MSG2: .ASCIZ /VECTOR ADR/  
MSG3: .ASCIZ /DRIVE # /  
MSG4: .ASCIZ /EXP WRD-CR/  
-----

.EVEN

122 130 040  
126 105 103  
104 122 111  
105 130 120

PARAMETER CODING      MACRO M1200    15-DEC-82 13:50    PAGE 147  
 SOFTWARE PARAMETER CODING SECTION

4829  
 4830  
 4831  
 4832  
 4833  
 4834  
 4835  
 4836  
 4837  
 4838  
 4839  
 4840 035134  
 4841  
 4842 035136  
 4843 035144  
 4844 035146  
 4845 035154  
 4846 035166  
 4847 035200  
 4848 035212  
 4849 035224  
 4850 035232  
 4851 035240  
 4852 035246  
 4853 035250  
 4854 035256  
 4855 035264  
 4856 035272  
 4857 035300  
 4858 035306  
 4859 035310  
 4860 035322  
 4861 035334  
 4862 035342  
 4863 035344  
 4864 035356  
 4865 035370  
 4866 035376  
 4867  
 4874  
 4875  
 4876  
 4877 035400

.SBTTL SOFTWARE PARAMETER CODING SECTION

```

:++
: THE SOFTWARE PARAMETER CODING SECTION CONTAINS MACROS
: THAT ARE USED BY THE SUPERVISOR TO BUILD P-TABLES. THE
: MACROS ARE NOT EXECUTED AS MACHINE INSTRUCTIONS BUT ARE
: INTERPRETED BY THE SUPERVISOR AS DATA STRUCTURES. THE
: MACROS ALLOW THE SUPERVISOR TO ESTABLISH COMMUNICATIONS
: WITH THE OPERATOR.
:--

```

BGNSFT

```

GPRML MSG6,2,1,YES
XFERF 1$
GPRML MSG7,2,2,YES
1$: GPRMD MSG8,4,0,177777,0,6,YES
GPRMD MSG11,6,0,177777,0,6,YES
GPRMD MSG14,10,0,177777,0,6,YES
GPRMD MSG9,24,0,177777,1,10000,YES
GPRML MSG15,12,1,YES
GPRML MSG16,12,2,YES
GPRML MSG17,2,100,YES
XFERF 4$
GPRML MSG18,12,4,YES
GPRML MSG19,12,10,YES
GPRML MSG20,12,20,YES
GPRML MSG21,12,40,YES
4$: GPRML MSG22,2,200,YES
XFERF 5$
GPRMD MSG23,14,D,177777,0,76,YES
GPRMD MSG24,16,D,177777,0,76,YES
5$: GPRML MSG25,2,400,YES
XFERF 6$
GPRMD MSG26,20,D,177777,1,26,YES
GPRMD MSG27,22,D,177777,1,26,YES
6$: GPRML MSG5,0,177777,YES
EXIT SFT

```

.EVEN

ENDSFT

PARAMETER CODING MACRO M1200 15-DEC-82 13:50 PAGE 149  
SOFTWARE PARAMETER CODING SECTION

```

4880
4881 000015
4882 000012
4883 035400 122 130 130 MSG5: CR==15 :CARRIAGE RETURN
4884 035432 110 105 114 MSG6: LF==12 :LINE FEED
4885 035453 105 130 105 MSG7: .ASCIZ /RXXX EXPANSION TYPE <CR> /
4886 035475 040 040 040 .ASCIZ /HELP TEST SETUP /
4887 035547 040 040 040 .ASCIZ /EXERCISE OPTIONS/<CR><LF>
4888 035572 040 040 040 .ASCIZ / 0 = WRITE-READ-DATA CK & READ-DATA CK/<CR><LF>
4889 035615 040 040 040 .ASCIZ / 1 = WRITE ONLY/<CR><LF>
4890 035653 040 040 040 .ASCIZ / 2 = WRITE-READ/<CR><LF>
4891 035710 040 040 040 .ASCIZ / 3 = WRITE-READ-DATA CHECK/<CR><LF>
4892 035746 040 040 040 .ASCIZ / 4 = READ-DATA CHECK ONLY/<CR><LF>
4893 036030 104 101 124 .ASCIZ / 5 = READ ONLY (CRC CHECK)/<CR><LF>
4894 036056 040 040 040 .ASCIZ / 6 = WRITE-READ-DATA CHECK ON ALTERNATE DRIVES/<CR><LF>
4895 036075 040 040 040 .ASCIZ /DATA PATTERN OPTIONS/<CR><LF>
4896 036113 040 040 040 .ASCIZ / 0 = RANDOM/<CR><LF>
4897 036130 040 040 040 .ASCIZ / 1 = ZEROS/<CR><LF>
4898 036156 040 040 040 .ASCIZ / 2 = ONES/<CR><LF>
4899 036203 040 040 040 .ASCIZ / 3 = FLOATING ZERO/<CR><LF>
4900 036217 040 040 040 .ASCIZ / 4 = FLOATING ONE/<CR><LF>
4901 036233 124 122 101 .ASCIZ / 5 = 125/<CR><LF>
4902 036263 040 040 040 .ASCIZ / 6 = 333/<CR><LF>
4903 036302 040 040 040 .ASCIZ /TRACK SEQUENCE OPTIONS/<CR><LF>
4904 036331 040 040 040 .ASCIZ / 0 = RANDOM/<CR><LF>
4905 036360 040 040 040 .ASCIZ / 1 = INCREMENT O.D./<CR><LF>
4906 036426 040 040 040 .ASCIZ / 2 = DECREMENT I.D./<CR><LF>
4907 036471 040 040 040 .ASCIZ / 3 = INCREMENT O.D.-DECREMENT I.D./<CR><LF>
4908 036550 040 040 040 .ASCIZ / 4 = BOUNCE BETWEEN I.D. & O.D./<CR><LF>
4909 036621 040 040 040 .ASCIZ / 5 = BOUNCE BETWEEN INCR. O.D. & DECR. I.D./<CR><LF>
4910 036703 055 076 104 .ASCIZ / 6 = BOUNCE BETWEEN O.D. & DECR. I.D./<CR><LF>
4911 037016 040 040 111 .ASCIZ / (O.D. = OUTSIDE DIA. & I.D. = INSIDE DIA.)/<CR><LF>
4912 037126 040 040 124 .ASCIZ /->DEVICE FATAL THRESHOLD LVL=NO. OF HARD ERRS THAT CAUSE DEVICE FATAL ERR/<
4913 037235 124 131 120 .ASCIZ / IF DRS 'EVL' FLAG IS SET, BUT HARD ERR WILL STILL LOG AS A HARD ERR./<CR>
4914 037263 105 130 105 MSG8: .ASCIZ /TYPE "CR" TO CONTINUE/
4915 037312 104 101 124 MSG11: .ASCIZ /EXERCISE # (0-6)/
4916 037341 124 122 101 MSG14: .ASCIZ /DATA PATTERN # (0-6)/
4917 037370 104 105 126 MSG9: .ASCIZ /TRACK SEQUENCE # (0-6)/
4918 037425 122 125 116 MSG15: .ASCIZ /DEVICE FATAL THRESHOLD LEVEL/
4919 037463 122 125 116 MSG16: .ASCIZ /RUN TEST IN DOUBLE DENSITY /
4920 037521 101 116 131 MSG17: .ASCIZ /RUN TEST IN DELETED DATA MODE/
4921 037557 040 040 040 MSG18: .ASCIZ /ANY PROGRAM CONTROL FLAGS /
4922 037627 040 040 040 MSG19: .ASCIZ /RETRY ON ERROR, LOG SOFT & HARD ERRS/
4923 037677 040 040 040 MSG20: .ASCIZ /RECALIBRATE ON SEEK ERRORS /
4924 037747 040 040 040 MSG21: .ASCIZ /PRINT ONLY 10 DATA ERRORS & CONTINUE/
4925 040017 115 117 104 MSG22: .ASCIZ /CLEAR STATISTICAL TABLES NEXT PASS /
4926 040055 040 040 040 MSG23: .ASCIZ /MODIFY TRACK ADDRESS LIMITS /
4927 040105 040 040 040 MSG24: .ASCIZ / OUTER DIAMETER ADR #/
4928 040135 115 117 104 MSG25: .ASCIZ / INNER DIAMETER ADR #/
4929 040173 040 040 040 MSG26: .ASCIZ /MODIFY SECTOR ADDRESS LIMITS /
4930 040220 040 040 040 MSG27: .ASCIZ / MIN. SECTOR ADR #/
4931
4932 .EVEN

```



PARAMETER CODING  
- PATCH AREA

MACRO M1200 15-DEC-82 13:50 PAGE 151

4935  
4936  
4937 040246 000000  
4938 040450  
4939  
4940  
4947  
4948  
4949 040450  
040454  
4950 040454  
4951  
4952 040454  
4953 040454  
4954 040460 177170  
4955 040462 000264  
4956 040464 000000  
4957 040466 000000  
4958 040470  
4959 040470  
4960 040474 177170  
4961 040476 000264  
4962 040500 000001  
4963 040502 000000  
4964 040504  
4965 040504  
4966 000001

```

.SBTTL - PATCH AREA
-----
PATCH: 0 ;PATCH AREA
.=.+200
-----

L$LAST:: LASTAD
          ENDMOD
          BGNSETUP 2
          BGNPTAB
          177170
          264
          0
          0
          ENDPTAB
          BGNPTAB
          177170
          264
          1
          0
          ENDPTAB
          ENDSETUP

.END

```

PARAMETER CODING  
SYMBOL TABLE

MACRO M1200 15-DEC-82 13:50 PAGE 151-1

ABORT	002270	BYTNUM	026052	C\$GPHR=	000042	DUC20	021000	EF09	=	000011	G
ADR	= 000020	CKDVAV	014742	C\$GPLO=	000030	DUMSG1	013442	EF10	=	000012	G
ADRS	025024	CKSML	007354	C\$GPRI=	000040	DUMSG2	013503	EF11	=	000013	G
ADRTST	012774	CKSMRT	002310	C\$INIT=	000011	DVDNCK	021442	EF12	=	000014	G
ADVTRK	021440	CLASWD	027620	C\$INLP=	000020	DVFT	= 000001	EF13	=	000015	G
ASSEMB=	000010	CLRSTA	020656	C\$MANI=	000050	DVTST	024404	EF14	=	000016	G
BAU234	025122	CMD	002332	C\$MEM =	000031	DX	025222	EF15	=	000017	G
BC00	013706	CNSCLC	023316	C\$MESSG =	000023	EA1211	016004	EF16	=	000020	G
BDAU23	025246	CNTKLC	023320	C\$OPEN=	000034	EA243	027264	EG1211		015526	
BDA121	014756	CONTRL	013564	C\$PNTB=	000014	EA2433	030210	EH1211		015750	
BDA133	020666	CR	= 000015	C\$PNTF=	000017	EA2434	030274	EIA11		014126	
BDA241	025514	CRC	007434	C\$PNTS=	000016	EB24U1	030452	EIA12		014374	
BDA25	030716	CRCBAD	007444	C\$PNTX=	000015	EB243	027406	EIA121		015232	
BDA26	032426	CRCBRT	002312	C\$QIO =	000377	EB2433	030160	EIA24		025374	
BDA40	032506	CRCERT	002314	C\$RDBU=	000007	ECCLAS	030624	EIA25		031174	
BDBU23	025252	CSADR	025034	C\$REFG=	000047	ECL0G	007604	EIA40		032670	
BDB20	021014	CSEC	023276	C\$RESE=	000033	ECTAB	003116	EIB121		015050	
BDB241	026034	CSRADR	025332	C\$REVI=	000003	EC1	003170	EIB20		021354	
BDVSCD	021434	CSREV	027072	C\$RFLA=	000021	EC10	003555	EIB23		022646	
BF243	027322	CSRUUT	002246	C\$RPT =	000025	EC11	003603	EIB234		025012	
BG00	013566	CTKO	033546	C\$SEFG=	000046	EC12	003660	EIB251		032102	
BIT0	= 000001	CTK1	033547	C\$SPRI=	000041	EC13	003714	EIB26		032416	
BIT00	= 000001	CTRK	023306	C\$SVEC=	000037	EC14	003775	EIC11		011756	
BIT01	= 000002	CURSEC	023710	C\$TPRI=	000013	EC15	004021	EIC11		014212	
BIT02	= 000004	CURTRK	024240	DAERCT	026054	EC16	004107	EIC121		015212	
BIT03	= 000010	CVSTUT	004756	DARDRT	002320	EC17	004153	EIC20		021106	
BIT04	= 000020	CVUNIT	004752	DATA	007474	EC2	003236	EIC25		031126	
BIT05	= 000040	CVUTST	004654	DATART	002316	EC20	004207	EIC40		032652	
BIT06	= 000100	C\$AU =	000052	DATASB	026056	EC21	004254	EID121		015226	
BIT07	= 000200	C\$AUTO=	000061	DATAWS	026060	EC22	004311	EID23		023032	
BIT08	= 000400	C\$BRK =	000022	DATA0	017520	EC23	004360	EID232		024162	
BIT09	= 001000	C\$BSEG=	000004	DATA1	017536	EC24	004413	EID233		024366	
BIT1	= 000002	C\$BSUB=	000002	DATBUF	034406	EC2432	030064	EIE12		014564	
BIT10	= 002000	C\$CEFG=	000045	DATBYT	017746	EC25	004442	EIE21		022146	
BIT11	= 004000	C\$CLCK=	000062	DATPAT	034006	EC3	003304	EIE22		022456	
BIT12	= 010000	C\$CLEA=	000012	DAWTRT	002322	EC4	003332	EIE23		023134	
BIT13	= 020000	C\$CLOS=	000035	DBADR	025032	EC5	003400	EIF11		012224	
BIT14	= 040000	C\$CLP1=	000006	DDERCT	002330	EC6	003451	EIF20		021154	
BIT15	= 000040	C\$CVEC=	000036	DELAY	025230	EC7	003477	EIF21		022122	
BIT2	= 000004	C\$DCLN=	000044	DE DAT	002244	EDB241	026042	EIF241		025742	
BIT3	= 000010	C\$DODU=	000051	DEN	002242	EDC20	021404	EIF25		031116	
BIT4	= 000020	C\$DRPT=	000024	DFPTBL	002160	ED00	013746	EIH20		021232	
BIT5	= 000040	C\$DU =	000053	DFTL	002216	ED1211	016000	EIH232		024012	
BIT6	= 000100	C\$EDIT=	000003	DIAGMC=	000000	ED2341	025102	EIH234		024712	
BIT7	= 000200	C\$ERDF=	000055	DLDTER	007504	EF.CON=	000036	EII21		022116	
BIT8	= 000400	C\$ERHR=	000056	DLY	025224	EF.NEW=	000035	EII231		023370	
BIT9	= 001000	C\$ERRO=	000060	DMSG1	026064	EF.PWR=	000034	EIJ23		023200	
BK243	027550	C\$ERSF=	000054	DMSG2	026161	EF.RES=	000037	EIK234		024560	
BOE	= 000400	C\$ERSO=	000057	DNBIT =	000040	EF.STA=	000040	EIM241		025702	
BRONPT	017462	C\$ESCA=	000010	DNFLAG	025226	EF01	= 000001	EI243		027576	
BRONTK	020126	C\$ESEG=	000005	DRIVEN	015270	EF02	= 000002	ELA10		014054	
BTHDRV	021432	C\$ESUB=	000003	DRVDN	021444	EF03	= 000003	ELA11		014120	
BTRK	033553	C\$ETST=	000001	DRVFN	023332	EF04	= 000004	ELA12		014270	
BTRP4	= 000004	C\$EXIT=	000032	DRVST	023324	EF05	= 000005	ELA20		020774	
BTRP6	= 000005	C\$GETB=	000026	DUA121	015246	EF06	= 000006	ELA231		023462	
BUFERL	007364	C\$GETW=	000027	DUA26	032434	EF07	= 000007	ELA241		025500	
BYTCNT	026050	C\$GMAN=	000043	DUB20	021370	EF08	= 000010	ELA25		030740	

PARAMETER CODING  
SYMBOL TABLE

MACRO M1200 15-DEC-82 13:50 PAGE 151-2

ELA40	032530	ENDST	011240	ETTAB	027630	GETSEC	023334	IB1211	015334	
ELB11	014162	ENDTKS	020632	ET1	031616	GETTRK	023742	IB24U1	030400	
ELB12	014342	ENDUP	002576	EVCMD	027066	GETTST	021454	IB243	027330	
ELB121	015036	ENDXER	003112	EVDATA	025412	GPSUN0	014626	IB2432	027734	
ELB20	021276	END00	014012	EVDVRE	027076	GPSUN1	014702	IB2433	030132	
ELB22	022352	END121	015260	EVDVST	026206	GTDRV	022320	IB2434	030250	
ELB231	023622	END13	017374	EVL	= 000004	GTDVFN	024254	ICATDP	012632	
ELB232	024206	END131	017702	EVTSTR	025334	GTEX	017302	ICU234	025134	
ELB241	025744	END133	020674	EVUTEC	030476	GTEXCD	014076	IC1211	015372	
ELB25	031036	END20	021420	EXADR	022154	GTSYEX	014022	IC243	027370	
ELB26	032410	END22	022500	EXADTB	022164	GTSYS	014216	IC2432	030022	
ELC11	014206	END231	023642	EXCMP	014020	GTTK	020062	IC2434	030260	
ELC22	022400	END232	024214	EXHCP	021430	G\$CNT0=	000200	ID	020652	
ELC231	023620	END233	024402	EXMSG	003114	G\$DELM=	000372	IDATDP	012676	
ELC233	024340	END234	025016	EXN	021424	G\$DISP=	000003	IDCOMP	020512	
ELC242	026306	END241	026016	EX1	022204	G\$EXCP=	000400	IDENT1	002606	
ELC244	030614	END242	027064	EX2	022214	G\$HILI=	000002	IDU	= 000040	G
ELD11	012300	END243	027604	EX3	022230	G\$LOLI=	000001	ID00	013711	
ELD22	022422	END244	030620	EX4	022244	G\$NO	= 000000	ID1211	015424	
ELD231	023610	END251	032106	EX5	022254	G\$OFFS=	000400	ID243	027304	
ELD233	024362	END26	032442	EX6	022264	G\$OFFSI=	000376	IEATDP	012720	
ELD234	024714	END30	032464	EX7	022300	G\$PRMA=	000001	IER	= 020000	G
ELD25	031170	END40	032676	E\$END	= 002100	G\$PRMD=	000002	IEU234	025164	
ELD251	032004	ERRBLK	002402	E\$LOAD=	000035	G\$PRML=	000000	IE00	013726	
ELE12	014556	ERRMSG	002400	FCKMSG	017223	G\$RADA=	000140	IE1211	015444	
ELE22	022450	ERRNBR	002376	FIN	011520	G\$RADB=	000000	IFA11	011670	
ELE23	023130	ERROR	002354	FIRST	014074	G\$RADD=	000040	IFATDP	012756	
ELE234	024764	ERRORS	033363	FLAGS	002266	G\$RADL=	000120	IFAUP	002444	
ELE244	030604	ERRREG	002604	FLGDRS	002264	G\$RADO=	000020	IFAU23	025232	
ELF12	014546	ERRSAV	027610	FLOAT0	017546	G\$XFER=	000004	IFA10	014040	
ELF20	021134	ERRSY	002274	FLOAT1	017614	G\$YES	= 000010	IFA11	014100	
ELF231	023602	ERRTY	002276	FNEV4	030622	HARD	= 000002	IFA12	014244	
ELF232	024100	ERRTYP	002374	FORMCK	015304	HARDER	002300	IFA121	014760	
ELF251	032072	ERSTAT	025026	FUNCT	033335	HCRC	007524	IFA20	020750	
ELG11	012022	ERSVCT	027612	FUNEV	027070	HCRCBD	007534	IFA21	021520	
ELG12	014622	ERTSAV	021452	FUNTY	030342	HDATA	007564	IFA22	022322	
ELG21	021736	ERT1	031176	F\$AU	= 000015	HDD	007574	IFA23	022516	
ELG251	031772	ERT10	031371	F\$AUTO=	000020	HDERCT	002302	IFA231	023410	
ELH11	012066	ERT11	031423	F\$BGN=	000040	HELP	= 000000	IFA232	024024	
ELH12	014412	ERT12	031435	F\$CLEA=	000007	HOE	= 100000	IFA233	024262	
ELH20	021224	ERT13	031450	F\$DU	= 000016	HRD	007544	IFA234	024450	
ELH231	023452	ERT14	031507	F\$END	= 000041	HSEK	007514	IFA24	025360	
ELH234	024622	ERT15	031546	F\$HARD=	000004	HWRT	007554	IFA241	025456	
ELH251	032060	ERT16	031601	F\$HW	= 000013	IAATDP	012552	IFA242	026232	
ELI11	012250	ERT2	031210	F\$INIT=	000006	IAREC	005112	IFA244	030506	
ELJ21	022064	ERT3	031221	F\$JMP	= 000050	IA00	013666	IFA25	030720	
ELK11	012146	ERT4	031235	F\$MOD	= 000000	IA1211	015324	IFA251	031700	
ELK20	020744	ERT5	031247	F\$MESSG=	000011	IA24U1	030360	IFA26	032354	
ELK234	024552	ERT6	031263	F\$PROT=	000021	IA243	027242	IFA40	032510	
ELI1	012210	ERT7	031315	F\$PWR	= 000017	IA2431	027672	IFB11	011710	
ELL20	021270	ERT8	031344	F\$RPT	= 000012	IA2432	027724	IFB10	014024	
ELM242	026650	ERT9	031360	F\$SEG	= 000003	IA2433	030114	IFB12	014316	
ELN21	021704	ESCLAS	033450	F\$SOFT=	000005	IA2434	030234	IFB121	015010	
ENDCVT	004750	ESREV	027074	F\$SRV	= 000010	IBATDP	012574	IFB13	017342	
ENDI1	012324	ESRUUT	002250	F\$SUB	= 000002	IBE	= 010000	IFB20	021036	
ENDLD	017742	ETCLAS	031656	F\$SW	= 000014	IBU234	025126	IFB21	021546	
ENDRPT	005406	ETSAV	027606	F\$TEST=	000001	IB00	013700	IFB22	022332	

PARAMETER CODING  
SYMBOL TABLE

MACRO M1200 15-DEC-82 13:50 PAGE 151-3

IFB23	022606	IFE251	022016	IFM20	021356	ITER2	017116	LOE	=	040000	G	
IFB231	023504	IF11	011772	IFM21	021654	ITER3	017200	LOGOFF		027622		
IFB232	024120	IFF12	014502	IFM241	025634	ITMSG	016130	LOT	=	000010	G	
IFB233	024314	IFF121	015174	IFM242	026622	ITMSG1	016334	LSACP		002110	G	
IFB242	026326	IFF20	021122	IFN21	021664	ITMSG2	016357	LSAPT		002036	G	
IFB244	030524	IFF21	021510	IFN242	026702	ITMSG3	016401	LSAU		013562	G	
IFB25	030770	IFF23	023072	IFO21	022076	ITMSG4	016454	LSAUT		002070	G	
IFB251	031706	IFF231	023552	IFO242	026742	ITMSG5	016521	LSAUTO		012552	G	
IFB26	032370	IFF232	024064	IFP242	026750	ITMSG6	016576	LSCCP		002106	G	
IFB40	032554	IFF241	025614	IFQ242	026770	ITMSG7	016652	LSCLEA		012522	G	
IFC11	011724	IFF242	026722	IFR242	027006	ITMSG8	016704	LSCO		002032	G	
IFC11	014166	IFF25	031060	IFS242	027050	ITMSG9	016753	L\$DEPD		002011	G	
IFC12	014420	IFF251	032026	IFU242	027024	ITPRNT	016102	L\$DESC		002122	G	
IFC121	015116	IFG11	011776	IFV242	027032	IXE	=	004000	G	L\$DESP	002076	G
IFC13	017350	IFG12	014576	IFX242	026424	ISAU	=	000041		L\$DEVP	002060	G
IFC20	021052	IFG20	021142	IF00	013776	ISAUTO	=	000041		L\$DISP	002154	G
IFC21	021570	IFG21	021714	IF1211	015464	ISCLN	=	000041		L\$DLY	002116	G
IFC22	022360	IFG23	023040	IGATDP	012602	ISDU	=	000041		L\$DTP	002040	G
IFC23	022714	IFG231	023422	IG1211	015502	ISHRD	=	000041		L\$DTYP	002034	G
IFC231	023526	IFG232	024102	IG243	027422	ISINIT	=	000041		L\$DU	013274	G
IFC232	024136	IFG242	026506	IHATDP	012616	ISMOD	=	000041		L\$DUT	002072	G
IFC233	024322	IFG251	031750	IH1211	015554	ISMSG	=	000041		L\$DVTY	002346	G
IFC234	024602	IFH11	012040	IH243	027456	ISPROT	=	000040		L\$EF	002052	G
IFC241	025560	IFH12	014400	IIATDP	012644	ISPTAB	=	000041		L\$ENVI	002044	G
IFC242	026266	IFH121	015076	II1211	015662	ISPR	=	000041		L\$ERRT	002374	G
IFC244	030536	IFH20	021210	II243	027516	ISRPT	=	000041		L\$ETP	002102	G
IFC25	031030	IFH21	021752	IJATDP	012660	ISSEG	=	000041		L\$EXP1	002046	G
IFC251	031730	IFH23	023154	IJ1211	015672	ISSETU	=	000041		L\$EXP4	002064	G
IFC40	032614	IFH231	023432	IJ243	027530	ISSFT	=	000041		L\$EXP5	002066	G
IFD11	011744	IFH232	023756	IKATDP	012726	ISSRV	=	000041		L\$SHARD	035012	G
IFD12	014430	IFH234	024474	ILATDP	012742	ISSUB	=	000041		L\$HIME	002120	G
IFD121	015156	IFH242	026536	INCSAD	033542	ISTST	=	000041		L\$HPCP	002016	G
IFD21	021622	IFH251	032036	INCTRK	021436	JSJMP	=	000167		L\$HPTP	002022	G
IFD22	022402	IF11	012104	INDITK	002210	LAREC		005130		L\$HW	002160	G
IFD23	022742	IF1121	015136	INIT	011250	LA2432		030006		L\$ICP	002104	G
IFD231	023544	IF120	021064	INITER	011470	LA2433		030176		L\$INIT	011250	G
IFD232	024146	IF121	021774	INITL	014016	LBU234		025154		L\$LADP	002026	G
IFD233	024344	IF123	022552	INITTK	024252	LB1211		015366		L\$LAST	040454	G
IFD234	024612	IF1231	023346	INMSG2	012332	LB24U1		030424		L\$LOAD	002100	G
IFD241	025570	IF1241	025462	INMSG3	012432	LB2432		027762		L\$LUN	002074	G
IFD242	026444	IF1242	026516	INTCMD	015266	LB2433		030152		L\$MREV	002050	G
IFD244	030544	IFJ11	012114	INTER	007414	LB2434		030270		L\$NAME	002000	G
IFD25	031156	IFJ21	022030	INTER1	011606	LC243		027402		L\$PRIO	002042	G
IFD251	031740	IFJ23	022706	INTER2	016167	LC2432		030050		L\$PROT	011242	G
IFE11	011764	IFJ241	025762	INTER3	016235	LD00		013742		L\$PRT	002112	G
IFE12	014444	IFJ242	026546	INTER4	016305	LD1211		015772		L\$REPP	002062	G
IFE121	015164	IFK11	012124	INTHO	033466	LEU234		025204		L\$REV	002010	G
IFE21	022136	IFK20	020700	INTH1	033502	LE1211		015762		L\$RPT	005140	G
IFE22	022430	IFK21	021576	INTLV	023706	LF	=	000012	G	L\$SOFT	035136	G
IFE23	023064	IFK234	024532	ISR	=	000100	G	LF00		014010		
IFE232	024170	IFK241	025770	ITCSAD		015272		LH1211		015742		
IFE233	024302	IFK242	026574	ITDBAD		015274		LINCT		005636		
IFE234	024744	IFL11	012164	ITDROP		016064		LINES		005640		
IFE241	025604	IFL20	021246	ITRMG		016132		LINTYP		005642		
IFE242	026460	IFL21	021476	ITERR		016016		LI1211		015732		
IFE244	030564	IFL241	026000	ITERUT		016153		LI243		027572		
IFE25	031074	IFL242	026656	ITER1		017032		LOAD		017704		

PARAMETER CODING  
SYMBOL TABLE

MACRO M1200 15-DEC-82 13:50 PAGE 151-4

L10000	002170	NSEC	023674	PRI02 =	000100	G	SDD	002230	SYSE8	033033	
L10001	002220	NXSCSA	023656	PRI03 =	000140	G	SECADR	025040	SYSE9	033072	
L10002	004506	OD	020650	PRI04 =	000200	G	SECDN	002262	S\$LSYM=	010000	
L10003	004514	ODCOMP	020524	PRI05 =	000240	G	SECTOR	002256	TARGET	020640	
L10004	005406	ONEFIL=	000001	PRI06 =	000300	G	SEEK	023322	TBPRCT	022160	
L10006	011602	OTDITK	002206	PRI07 =	000340	G	SEEKCK	026046	THA234	024464	
L10007	012550	OTDVFN	024406	PRNUM	005644		SEEKRT	002306	THA25	030756	
L10010	012772	OTERTP	030702	PRTBOS	004516		SEK	007424	THA40	032544	
L10011	013434	OTEXCM	032444	PRTB1	004510	G	SEQUEN	020654	THB231	023514	
L10012	013562	OTSYER	032466	PRTB1S	004536		SEQ1	020164	THC13	017366	
L10013	035006	OUTSWD	025042	PRTCTR	005646		SEQ2	020220	THD23	022772	
L10014	013664	OSAPTS=	000000	PRTDAT	005510		SEQ3	020254	THE22	022440	
L10015	013750	OSAU =	000001	PRTECD	002272		SEQ4	020272	THE234	024754	
L10016	035060	OSBGNR=	000001	PRTEERR	002404		SEQ5	020340	THF231	023560	
L10017	035400	OSBGNS=	000001	PRTHDR	005414		SEQ6	020422	THF241	025624	
L10020	040460	OSDU =	000001	PRT1	005504		SEQ7	020476	TKTBPT	020634	
L10021	040474	OSERRT=	000001	PRT2	005506		SETUP	011364	TKTL	024242	
L10022	040470	OSGNSW=	000001	PTDAT1	006243		SE1	033416	TKXX	010070	
L10024	040504	OSPOIN=	000001	PTEC	006200		SFERLG	030344	TRACK	002254	
MAXSEC	002214	OSSETU=	000001	PTECN	006327		SFPTBL	002172	TRAP	013260	
MAXTRK	024234	PAR	006026	PTFMN1	006315		SFTSTS	033552	TRBIT =	000200	G
MCRDRT	032321	PAT	017750	PTHEAD	026062		SOFT =	000003	TRKADR	025036	G
MCWTRT	032270	PATCH	040246	PTRDSC	006116		SSEC	023664	TRKCNT	020636	
MDRDRT	032213	PAT125	017622	PTRTY	031676		STCNTR	027616	TRKDN	002260	
MDWTRT	032134	PAT333	017646	PTTK	006225		STDVDN	032352	TRKDNF	024230	
MINSEC	002212	PG	017524	PTTKN	006343		STERRG	027614	TRKINC	024236	
MINTRK	024232	FLOC	011604	PTUNT1	006253		STKSEQ	017752	TRKSEQ	002202	
MRDRT	032244	PNT =	001000	PTUNT2	006274		STSCDN	023712	TRKTBL	033554	
MSG1	035060	POWERF=	000001	PTWTSC	006147		STSCFG	023662	TRPMS1	013144	
MSG11	037312	PREPT1	006002	PT19SP	006105		STSTPA	017376	TSVCT	022162	
MSG14	037341	PREPT2	006030	PT20SP	006074		SUM	017744	TSEC	033551	
MSG15	037425	PREPT3	006050	RANDAT	017656		SUT	002232	TST	021422	
MSG16	037463	PRESCK	020536	RANGEN	004560		SUTCV	004754	TSTCK	027626	
MSG17	037521	PRESTK	020642	RANUM	004652		SUTDRP	013440	TSTEV	025410	
MSG18	037557	PRI =	002000	RAN1	004646		SUTPOS	015302	TSTN	002176	
MSG19	037627	PRIDXX	006360	RAN2	004650		SUTPTR	021426	TSTPAT	002200	
MSG2	035073	PRID01	006426	RD	007454		SVCGBL=	000000	TSTPTR	022152	
MSG20	037677	PRID02	006455	RDERCD	005026		SVCINS=	177777	TSTSUT	022502	
MSG21	037747	PRID03	006504	RDYWD	025330		SVCSUB=	177777	TSTWD	022156	
MSG22	040017	PRID04	006533	READRT	002324		SVCTAG=	177777	TTRK	033550	
MSG23	040055	PRID05	006562	READSC	007314		SVCTST=	177777	TSARGC=	000004	
MSG24	040105	PRID06	006611	RECCMD	005136		SVUTRG	033516	TSCODE=	001004	
MSG25	040135	PRID07	006640	REFCMD	015264		SWREG	002204	TSERRN=	000000	
MSG26	040173	PRID08	006667	REFDRV	015306		SYFT =	000000	TSEXCP=	000000	G
MSG27	040220	PRID09	006716	REPORT	005140		SYSE10	033122	TSFLAG=	000041	G
MSG3	035106	PRID10	006745	RESTAR=	000002	G	SYSE11	033151	TSFREE=	040504	
MSG4	035121	PRID11	006774	RESTK	021450		SYSE12	033161	TSGMAN=	000000	
MSG5	035400	PRID12	007023	RETRY	002304		SYSE13	033171	TSHILI=	000032	
MSG6	035432	PRID13	007052	RTMASK	030474		SYSE14	033225	TSLAST=	000001	
MSG7	035453	PRID14	007101	RTOFF	027624		SYSE15	033242	TSLOLI=	000001	
MSG8	037263	PRID15	007130	RXXX	002172		SYSE16	033302	TSLSYM=	010000	
MSG9	037370	PRID16	007157	KX2BIT=	004000	G	SYSE4	032700	TSLTNO=	000001	
MSKRT	032110	PRID17	007206	RYDLY	025326		SYSE5	032733	TSNEST=	177777	
MWTRT	032166	PRID18	007235	RYDX	025324		SYSE6	032764	TSNS0 =	000000	
NEWTRK	020572	PRID19	007264	SAVDLY	016014		SYSE7	033010	TSNS1 =	000005	
NOERL	007374	PRI00 =	000000	SCPSCT	023660				TSNS2 =	000003	
NONE	004506	PRI01 =	000040	SCSYEX	020676				TSPCNT=	000000	G

PARAMETER CODING  
SYMBOL TABLE

MACRO M1200 15-DEC-82 13:50 PAGE 151-5

T\$PTAB=	010023	T\$\$INI=	010006	UDU234	025156	UT11	002344	XERUUT	033544
T\$PTHV=	000002	T\$\$MSG=	010003	UF243	027412	UUT	002234	XER1	002663
T\$PTNU=	000002	T\$\$PC =	000002	UG00	013766	UUTADR	002236	XER2	002744
T\$\$AVL=	177777	T\$\$PRO=	010005	UKINT	007404	UUTOFF	002240	XID	020646
T\$SEGL=	177777	T\$\$PIA=	010023	UK243	027554	UOADR	002220	XOD	020644
T\$SEKO=	010003	T\$\$RPT=	010004	UNIT	002334	UOJECT	002224	XPG	017554
T\$SIZE=	000014	T\$\$SEG=	010003	UNITDP	013436	U1ADR	002222	XPSUN0	014700
T\$SUBN=	000002	T\$\$SOF=	010017	UNITST	005024	U1VECT	002226	XPSUN1	014740
T\$TAGL=	177777	T\$\$SUB=	010015	UNPKHP	011656	VALWD	025030	XREC	005134
T\$TAGN=	010025	T\$\$SW =	010001	UNT	012330	WATCH	025104	XJPSCT	030340
T\$TEMP=	000000	T\$\$TES=	010013	UNTCB	015300	WC	033545	XU23	025322
T\$TEST=	000001	TOMSG	013124	UNTCNT	015276	WDCNT	002252	XU234	025212
T\$TSTM=	177777	T1	013564 G	UNTCOD	012326	WDCNT	023326	XXPG	017630
T\$TSTS=	000001	T1.1	013566	UPDVST	027230	WDOT	023530	X\$ALWA=	000000
T\$\$AU =	010012	T1.2	013706	UPSECT	030216	WRDS	025022	X\$FALS=	000040
T\$\$AUT=	010010	UAM =	000200 G	UTCNT	005412	WRITSC	007334	X\$OFFS=	000400
T\$\$CLE=	010007	UAU234	025162	UTSCDN	023704	WRT	007464	X\$TRUE=	000020
T\$\$DAT=	010024	UC00	013752	UTTST	005410	WRTRT	002326	X1211	016012
T\$\$DU =	010011	UDCRST	027722	UT00	002336	XATDP	012766	X24U1	030470
T\$\$HAR=	010016	UDHDST	027670	UT01	002340	XDVST	022504	X2431	027720
T\$\$HW =	010000	UDSFST	030072	UT10	002342	XERPRT	003034	X2433	030214

. ABS. 040504 000  
 ERRORS DETECTED: 0

VIRTUAL MEMORY USED: 28641 WORDS ( 112 PAGES)

DYNAMIC MEMORY: 19748 WORDS ( 75 PAGES)

ELAPSED TIME: 00:03:13

CNRXDA.BIN/DS:GBL/EN:AMA:ABS,CNRXDA.LST/CR/-SP/NL:CND:MD:BEX=SVC34/MLB,CNRXDA.MAC

CNRXDA SYMBOL	CREATED BY	MACRO	ON 15-DEC-82 AT 13:51	PAGE 1						
SYMBOL	CROSS REFERENCE			CREF	V01					
ABORT	VALUE	REFERENCES								
	002270	#21-1115	*50-1914	*50-1929	56-2097	56-2120	*56-2131	*58-2154	58-2158	*60-2194
		*67-2339	67-2356	67-2363	67-2370	67-2376	*71-2500			
ADR	= 000020	#19-983								
ADRS	025024	*107-3681	*107-3692	*107-3700	*107-3710	*107-3715	*107-3720	*107-3729	#107-3736	107-3757
ADRTST	012774	56-2096	56-2119	#58-2153						
ADVTRK	021440	*87-3076	*87-3097	87-3100	*87-3108	#87-3129				
ASSEMB	= 000010	16-786	16-786							
BAU234	025122	#109-3768	109-3778							
BC00	013706	#67-2358	67-2373							
BDAU23	025246	#109-3799	109-3805							
BDA121	014756	#73-2541	73-2589							
BDA133	020666	#85-3025	85-3027							
BDA241	025514	#113-3859	113-3888							
BDA25	030716	#131-4385	131-4396							
BDA26	032426	#135-4565	135-4568							
BDA40	032506	#139-4593	139-4603							
BDBU23	025252	#109-3800	109-3803							
BDB20	021014	87-3052	#87-3057	87-3117						
BDB241	026034	#113-3900	113-3903							
BDVSCD	021434	*87-3043	87-3094	*87-3096	#87-3127	*99-3560	*99-3562			
BF243	027322	119-4084	#119-4086	119-4106						
BG00	013566	#67-2337	67-2375							
BIT0	= 000001	#19-983	#19-1014	19-1065	52-1994	52-2017				
BIT00	= 000001	#19-983	19-983	#19-1003	19-1014					
BIT01	= 000002	#19-983	19-983	#19-1002	19-1013					
BIT02	= 000004	#19-983	19-983	#19-1001	19-1012	89-3155	95-3386	121-4221	127-4295	
BIT03	= 000010	#19-983	19-983	#19-1000	19-1011	95-3393	121-4204			
BIT04	= 000020	#19-983	19-983	#19-999	19-1010	121-4217	121-4220			
BIT05	= 000040	#19-983	19-983	19-1009						
BIT06	= 000100	#19-983	19-983	#19-997	19-1008					
BIT07	= 000200	#19-983	19-983	#19-996	19-1007					
BIT08	= 000400	#19-983	19-983	#19-995	19-1006					
BIT09	= 001000	#19-983	19-983	#19-994	19-1005					
BIT1	= 000002	#19-983	#19-1013	19-1064	52-2003	52-2025	121-4218			
BIT10	= 002000	#19-983	#19-993							
BIT11	= 004000	#19-983	#19-992	19-1057	19-1066					
BIT12	= 010000	#19-983	#19-991	109-3773	121-4215	123-4240				
BIT13	= 020000	#19-983	#19-990	109-3781	121-4202					
BIT14	= 040000	#19-983	#19-989	69-2400	109-3783					
BIT15	= 000040	#19-983	#19-988	#19-998						
BIT2	= 000004	#19-983	#19-1012	52-1997	52-2020					
BIT3	= 000010	#19-983	#19-1011	52-2006	52-2028					
BIT4	= 000020	#19-983	#19-1010	77-2639						
BIT5	= 000040	#19-983	#19-1009							
BIT6	= 000100	#19-983	#19-1008							
BIT7	= 000200	#19-983	#19-1007							
BIT8	= 000400	#19-983	#19-1006	77-2621						
BIT9	= 001000	#19-983	#19-1005	77-2644						
BK243	027550	#119-4134	119-4137							
BOE	= 000400	#19-983								
BRONPT	017462	*83-2782	*83-2790	#83-2796						
BRONTK	020126	*85-2900	*85-2907	#85-2908	85-3003					

CNRXDA		CREATED BY	MACRO	ON 15-DEC-82 AT 13:51	PAGE 2						
SYMBOL	CROSS REFERENCE	VALUE	REFERENCES		CREF	V01					
BTHDRV		021432	*87-3042	87-3067	87-3069	*87-3070	*87-3084	#87-3126	*135-4559	*135-4561	
BTRK		033553	27-1261	#143-4719							
BTRP4	=	000004	#19-1062	58-2155	58-2157						
BTRP6	=	000006	#19-1063								
BUFERL		007364	#48-1837								
BYTCNT		026050	*113-3858	*113-3886	113-3887	#113-3907					
BYTNUM		026052	*113-3856	113-3861	113-3862	113-3868	113-3870	113-3883	*113-3885	#113-3908	
CKDVAV		014742	71-2464	71-2489	#73-2538						
CKSML		007354	38-1626	#48-1836	121-4190						
CKSMRT		002310	#21-1125								
CLASWD		027620	*119-4092	#119-4150	121-4187	123-4230	123-4236				
CLRSTA		020656	81-2759	#85-3023							
CMD		002332	#23-1138	27-1257	*67-2348	*77-2667	*95-3433				
CNSCLC		023316	*95-3379	95-3380	95-3422	95-3424	95-3429	95-3436	#97-3456		
CNTKLC		023320	*95-3375	95-3376	95-3418	95-3428	95-3435	#97-3457			
CONTRL		013564	#67-2336								
CR	=	000015	#149-4881	149-4885	149-4886	149-4887	149-4888	149-4889	149-4890	149-4891	149-4892
			149-4893	149-4894	149-4895	149-4896	149-4897	149-4898	149-4899	149-4900	149-4901
			149-4902	149-4903	149-4904	149-4905	149-4906	149-4907	149-4908	149-4909	149-4910
			149-4911	149-4912							
CRC		007434	#48-1842								
CRCBAD		007444	#48-1843								
CRCBRT		002312	#21-1126								
CRCERT		002314	#21-1127	133-4515	133-4530						
CSADR		025034	*95-3400	*95-3437	107-3676	107-3681	#107-3740	107-3752	107-3755	109-3771	109-3779
CSEC		023276	95-3364	95-3377	#97-3447						
CSRADR		025332	*37-1540	*71-2444	*71-2453	*71-2481	*73-2557	*77-2646	*77-2655	*107-3752	109-3800
			109-3807	*109-3808	109-3809	#109-3815	*115-3929	*115-3951			
CSREV		027072	*115-3923	115-3926	115-3969	115-3973	115-4024	#115-4031			
CSRUIT		002246	#21-1104	27-1257	*67-2345	*77-2661	*109-3807	115-3923	*143-4703		
CTKO		033546	27-1260	#143-4714							
CTK1		033547	27-1260	#143-4715							
CTRK		023306	95-3358	95-3373	#97-3451						
CURSEC		023710	*95-3380	*95-3422	95-3424	*99-3487	*99-3499	#99-3550			
CURTRK		024240	*95-3376	95-3418	*101-3580	*101-3593	101-3600	*101-3602	101-3603	101-3605	*101-3613
			*101-3618	#103-3630							
CVSTUT		004756	#35-1511	87-3050							
CVUNIT		004752	35-1489	35-1491	35-1497	#35-1504	*62-2225				
CVUTST		004654	#35-1487	62-2226							
C\$AU	=	000052	#16-786	64-2272							
C\$AUTO	=	000061	#16-786	56-2132							
C\$BRK	=	000022	#16-786								
C\$BSEG	=	000004	#16-786	73-2544	77-2614	87-3057					
C\$BSUB	=	000002	#16-786	67-2337	67-2358						
C\$CEFG	=	000045	#16-786								
C\$CLCK	=	000062	#16-786								
C\$CLEA	=	000012	#16-786	54-2072							
C\$CLOS	=	000035	#16-786								
C\$CLP1	=	000006	#16-786	67-2368							
C\$CVEC	=	000036	#16-786	54-2067	54-2070	58-2157					
C\$DCLN	=	000044	#16-786	50-1930	52-2038	56-2130	67-2378				
C\$DODU	=	000051	#16-786	56-2101	56-2104	56-2110	56-2113	56-2124	56-2127	79-2706	



CNRXDA SYMBOL	CREATED BY	MACRO ON 15-DEC-82 AT 13:5'	PAGE 3									
CROSS REFERENCE	VALUE	REFERENCES	CREF	V01								
CSDRPT	= 000024	#16-786	67-2380									
CSDU	= 000053	#16-786	62-2232									
CSEDIT	= 000003	#16-786	16-829									
CSERDF	= 000055	#16-786										
CSEHR	= 000056	#16-786										
CSEHRO	= 000060	#16-786	27-1249	58-2170	79-2698							
CSEPSF	= 000054	#16-786										
CSERSO	= 000057	#16-786										
CSESCA	= 000010	#16-786										
CSESEG	= 000005	#16-786	73-2580	77-2682	87-3116							
CSESUB	= 000003	#16-786	67-2352	67-2369								
CSETST	= 000001	#16-786	143-4738									
CSEXIT	= 000032	#16-786	67-2381									
CSGETB	= 000026	#16-786										
CSGETW	= 000027	#16-786										
CSGMAN	= 000043	#16-786	77-2632									
CSGPHR	= 000042	#16-786	50-1923									
CSGPLO	= 000030	#16-786										
CSGPRI	= 000040	#16-786										
CSINIT	= 000011	#16-786	50-1935									
CSINLP	= 000020	#16-786	89-3150	95-3381								
CSMANI	= 000050	#16-786	77-2630									
CSMEM	= 000031	#16-786										
CSMSG	= 000023	#16-786	31-1349	31-1369								
CSOPEN	= 000034	#16-786										
CSPNTB	= 000014	#16-786	27-1257	31-1371	31-1374	113-3882	113-3883					
CSPNTF	= 000017	#16-786	50-1928	52-2037	52-2040	62-2222	62-2230					
CSPNTS	= 000016	#16-786	44-1744	44-1756	44-1766							
CSPNTX	= 000015	#16-786	27-1260	27-1261	29-1289							
CSQIO	= 000377	#16-786										
CSRDBU	= 000007	#16-786										
CSREFG	= 000047	#16-786	50-1898	50-1902	50-1911							
CSRESE	= 000033	#16-786	#16-786	54-2071	71-2441							
CSREVI	= 000003	#16-786	16-829									
CSRFLA	= 000021	#16-786	50-1897									
CSRPT	= 000025	#16-786	38-1650									
CSSEFG	= 000046	#16-786										
CSSPRI	= 000041	#16-786	109-3766	109-3784								
CSSEVC	= 000037	#16-786	50-1931	50-1934	58-2155							
CSIPRI	= 000013	#16-786										
DAERCT	026054	*113-3841	*113-3865	113-3873	#113-3909							
DARDRT	002320	#21-1129										
DATA	007474	#48-1846										
DART	002316	#21-1128	133-4512	133-4527								
DATASB	026056	*113-3877	113-3883	#113-3910								
DATAWS	026060	*113-3878	113-3883	#113-3911								
DATAO	017520	83-2797	#83-2805									
DAT1	017536	83-2798	#83-2811									
DATBUF	034406	107-3698	113-3848	113-3860	113-3898	#143-4734						
DATBYT	017746	*83-2805	*83-2811	*83-2814	*83-2826	*83-2829	*83-2832	*83-2836	*83-2839	*83-2843		
		83-2853	83-2854	#83-2865								
DATPAT	034006	83-2791	83-2794	95-3427	107-3696	113-3847	113-3859	#143-4731				

CNRXDA SYMBOL	CREATED BY VALUE	CROSS REFERENCE	MACRO REFERENCES	ON 15-DEC-82 AT 13:51	PAGE 4 CREF	V01					
DAWTRT	002322		#21-1130								
DBADR	025032		*107-3678	107-3692	107-3700	107-3710	107-3715	107-3720	107-3729	#107-3739	
ORDERCT	002330		#21-1133								
DELAY	025230		37-1542	71-2445	71-2454	71-2482	73-2559	77-2648	77-2659	107-3754	#109-3795
			115-3931	115-3953							
DELDAI	002244		#21-1103	*69-2423	*69-2425	87-3086	*87-3088	*87-3090	105-3651	115-4007	
DEN	002242		#21-1102	37-1536	*69-2428	*69-2430	105-3664	115-3949	115-4019		
DFPTBL	002160	G	#18-866								
DFTL	002216		#18-903	131-4420							
DIAGMC	= 000000		16-786	16-786							
DLATER	007504		#48-1847								
DLY	025224		109-3768	#109-3788							
DMSG1	026064		113-3882	#113-3914							
DMSG2	026161		113-3883	#113-3915							
DNBIT	= 000040	G	#19-1056	71-2443	71-2446	71-2452	71-2455	71-2477	71-2480	71-2483	73-2558
			77-2656	107-3679	109-3771	109-3779	115-3930	115-3952			
DNFLAG	025226		*109-3765	109-3769	#109-3789	*143-4701					
DRIVEN	015270		*73-2552	*73-2555	#75-2598						
DRVON	021444		*87-3045	*87-3069	87-3080	*87-3091	#87-3131	*135-4569			
DRVFN	023332		95-3399	95-3433	95-3434	#97-3462	*105-3666				
DRVTST	023324		*87-3101	87-3103	95-3405	95-3425	95-3431	#97-3459			
DUA121	015246		#73-2587								
DUA26	032434		#135-4568								
DUB20	021370		87-3112	#87-3114							
DUC20	021000		#87-3054								
DUMSG1	013442		62-2230	#62-2237							
DUMSG2	013503		62-2222	#62-2238							
DVDNCK	021442		*87-3044	#87-3130	*89-3170	*89-3176	135-4553	*135-4556			
DVFT	= 000001	G	#19-1060	131-4422	139-4614						
DVTST	024404		*95-3397	*95-3430	*95-3431	105-3643	#105-3669				
DX	025222		109-3767	#109-3787							
EA1211	016004		77-2677	#77-2682							
EA243	027264		119-4076	#119-4080							
EA2433	030210		123-4247	#123-4250							
EA2434	030274		125-4266	#125-4272							
EB24U1	030452		127-4304	#127-4311							
EB243	027406		119-4088	119-4102	#119-4104						
EB2433	030160		123-4243	#123-4245							
ECCLAS	030624		129-4331	#129-4354							
ECLOG	007604		38-1636	#48-1855	119-4112						
ECTAB	003116		29-1287	#29-1297							
EC1	003170		29-1297	#31-1322							
EC10	003555		29-1304	#31-1329							
EC11	003603		29-1305	#31-1330							
EC12	003660		29-1306	#31-1331							
EC13	003714		29-1307	#31-1332							
EC14	003773		29-1308	#31-1333							
EC15	004021		29-1309	#31-1334							
EC16	004107		29-1310	#31-1335							
EC17	004153		29-1311	#31-1336							
EC2	003236		29-1298	#31-1323							
EC20	004207		29-1312	#31-1337							

CNRXDA SYMBOL	CREATED BY	CROSS REFERENCE	MACRO	ON 15-DEC-82 AT 13:51	PAGE 5	CREF	V01
SYMBOL	VALUE		REFERENCES				
EC21	004254		29-1313	#31-1338			
EC22	004311		29-1314	#31-1339			
EC23	004360		29-1315	#31-1340			
EC24	004413		29-1316	#31-1341			
EC2432	030064		121-4219	#121-4222			
EC25	004442		29-1317	#31-1342			
EC3	003304		29-1299	#31-1324			
EC4	003332		29-1300	#31-1325			
EC5	003400		29-1301	#31-1326			
EC6	003451		29-1302	#31-1327			
EC7	003477		29-1303	#31-1328			
EDB241	026042		#113-3903				
EDC20	021404		87-3056	#87-3118			
ED00	013746		67-2364	67-2366	#67-2368		
ED1211	016000		77-2679	#77-2681			
ED2341	025102		107-3756	#107-3758			
EF.CON	= 000036	G	#19-983	#19-1021			
EF.NEW	= 000035	G	#19-983	#19-1022			
EF.PWR	= 000034	G	#19-983	#19-1023	50-1898		
EF.RES	= 000037	G	#19-983	#19-1020	50-1911		
EF.STA	= 000040	G	#19-983	#19-1019	50-1902		
EF01	= 000001	G	#19-1040				
EF02	= 000002	G	#19-1039				
EF03	= 000003	G	#19-1038				
EF04	= 000004	G	#19-1037				
EF05	= 000005	G	#19-1036				
EF06	= 000006	G	#19-1035				
EF07	= 000007	G	#19-1034				
EF08	= 000010	G	#19-1033				
EF09	= 000011	G	#19-1032				
EF10	= 000012	G	#19-1031				
EF11	= 000013	G	#19-1030				
EF12	= 000014	G	#19-1029				
EF13	= 000015	G	#19-1028				
EF14	= 000016	G	#19-1027				
EF15	= 000017	G	#19-1026				
EF16	= 000020	G	#19-1025				
EG1211	015526		77-2641	77-2643	#77-2645		
EH1211	015750		77-2671	77-2673	#77-2675		
EIA11	014126		69-2417	#69-2419			
EIA12	014374		71-2450	71-2459	#71-2466		
EIA121	015232		73-2543	73-2582	#73-2584		
EIA24	025374		111-3828	#111-3830			
EIA25	031174		131-4397	#131-4435			
EIA40	032670		139-4604	#139-4628			
EIB121	015050		73-2553	#73-2556			
EIB20	021354		87-3093	87-3099	#87-3110		
EIB23	022646		95-3363	#95-3373			
EIB234	025012		107-3717	107-3722	107-3726	#107-3731	
EIB251	032102		133-4505	133-4514	133-4517	133-4520	133-4529 133-4532 #133-4535
EIB26	032416		135-4560	#135-4562			
EIC11	011756		52-1982	#52-1986			

CNRXDA SYMBOL	CREATED BY CROSS REFERENCE VALUE	MACRO ON 15-DEC-82 AT 13:51	PAGE 6 CREF	V01						
EIC11	014212	69-2429	#69-2431							
EIC121	015212	73-2563	73-2567	73-2571	#73-2579					
EIC20	021106	87-3066	#87-3071							
EIC25	031126	131-4410	131-4412	#131-4426						
EIC40	032652	139-4616	139-4618	#139-4625						
EID121	015226	73-2573	73-2575	73-2577	#73-2583					
EID23	023032	95-3396	#95-3403							
EID232	024162	101-3609	#101-3613							
EID233	024366	105-3662	#105-3664							
EIE12	014564	71-2492	#71-2494							
EIE21	022146	89-3223	#89-3225							
EIE22	022456	93-3317	93-3327	#93-3329						
EIE23	023134	95-3420	#95-3422							
EIF11	012224	52-1994	52-1999	52-2005	52-2008	52-2019	52-2022	52-2027	#52-2030	
EIF20	021154	87-3075	#87-3080							
EIF21	022122	89-3152	89-3163	89-3177	89-3179	89-3183	89-3185	89-3190	89-3193	89-3198
		89-3214	89-3217	#89-3219						
EIF241	025742	113-3876	#113-3884							
EIF25	031116	131-4418	131-4421	#131-4424						
EIH20	021232	87-3089	#87-3091							
EIH232	024012	101-3573	#101-3581							
EIH234	024712	107-3702	#107-3717							
EII21	022116	89-3204	89-3210	#89-3218						
EII231	023370	99-3473	#99-3479							
EIJ23	023200	95-3383	95-3404	95-3426	#95-3430					
EIK234	024560	107-3697	#107-3699							
EIM241	025702	113-3880	#113-3883							
EI243	027576	119-4131	119-4140	#119-4142						
ELA10	014054	69-2397	#69-2399							
ELA11	014120	69-2415	#69-2418							
ELA12	014270	71-2447	#71-2451							
ELA20	020774	87-3049	#87-3053							
ELA231	023462	99-3486	#99-3499							
ELA241	025500	113-3852	113-3854	#113-3856						
ELA25	030740	131-4387	#131-4392							
ELA40	032530	139-4595	#139-4600							
ELB11	014162	69-2422	#69-2425							
ELB12	014342	71-2456	#71-2460							
ELB121	015036	73-2550	#73-2554							
ELB20	021276	87-3062	#87-3100							
ELB22	022352	93-3310	#93-3313							
ELB231	023622	99-3504	#99-3529							
ELB232	024206	101-3604	101-3616	#101-3618						
ELB241	025744	113-3864	#113-3885							
ELB25	031036	131-4405	#131-4413							
ELB26	032410	135-4558	#135-4561							
ELC11	014206	69-2427	#69-2430							
ELC22	022400	93-3315	#93-3318							
ELC231	023620	99-3510	#99-3528							
ELC233	024340	105-3655	#105-3658							
ELC242	026306	115-3933	#115-3936							
ELC244	030614	129-4338	#129-4349							

CNRXDA SYMBOL	CREATED BY	MACRO ON 15-DEC-82 AT 13:51	PAGE 7	CREF	V01
CROSS REFERENCE	VALUE	REFERENCES			
ELD11	012300	52-1984	#52-2040		
ELD22	022422	93-3320	#93-3323		
ELD231	023610	99-3515	#99-3526		
ELD233	024362	105-3660	#105-3663		
ELD234	024714	107-3706	#107-3718		
ELD25	031170	131-4432	#131-4434		
ELD251	032004	133-4509	#133-4518		
ELE12	014556	71-2478	#71-2493		
ELE22	022450	93-3325	#93-3328		
ELE23	023130	95-3413	95-3415	#95-3421	
ELE234	024764	107-3724	#107-3727		
ELE244	030604	129-4344	#129-4347		
ELF12	014546	71-2484	#71-2491		
ELF20	021134	87-3074	#87-3076		
ELF231	023602	99-3517	#99-3523		
ELF232	024100	101-3596	#101-3599		
ELF251	032072	133-4524	#133-4533		
ELG11	012022	52-1993	#52-1997		
ELG12	014622	71-2497	#71-2501		
ELG21	021736	89-3187	#89-3191		
ELG251	031772	133-4511	#133-4515		
ELH11	012066	52-2002	#52-2006		
ELH12	014412	71-2467	#71-2470		
ELH20	021224	87-3087	#87-3090		
ELH231	023452	99-3491	#99-3496		
ELH234	024622	107-3689	#107-3707		
ELH251	032060	133-4526	#133-4530		
ELI11	012250	52-2011	#52-2037		
ELJ21	022064	89-3206	#89-3211		
ELK11	012146	52-2016	#52-2020		
ELK20	020744	87-3039	#87-3047		
ELK234	024552	107-3695	#107-3698		
ELL11	012210	52-2024	#52-2028		
ELL20	021270	87-3095	#87-3098		
ELM242	026650	115-3990	#115-3993		
ELN21	021704	89-3181	#89-3184		
ENDCVT	004750	35-1494	35-1496	35-1500	#35-1502
ENDI1	012324	52-2036	52-2039	#52-2041	
ENDLD	017742	83-2857	#83-2862		
ENDRPT	005406	#38-1650			
FNDST	011240	#48-1858	85-3024		
ENDTKS	020632	85-2898	85-3001	#85-3004	
ENDUP	002576	27-1259	#27-1263		
ENDXER	003112	29-1282	#29-1291		
END00	014012	67-2379	#67-2381		
END121	015260	73-2588	#73-2590		
END13	017374	81-2757	#81-2761		
END131	017702	83-2808	83-2821	83-2835	83-2846 #83-2849
END133	020674	#85-3028			
END20	021420	87-3085	87-3115	#87-3120	
END22	022500	#93-3334			
END231	023642	99-3522	99-3525	99-3527	99-3528 #99-3533

CNRXDA SYMBOL	CREATED BY	MACRO	ON 15-DEC-82 AT 13:51	PAGE 8	CREF	V01					
SYMBOL	CROSS REFERENCE	VALUE	REFERENCES								
END232		024214	101-3599	101-3614	#101-3619						
END233		024402	#105-3667								
END234		025016	107-3685	#107-3732							
END241		026016	113-3890	113-3892	113-3894	#113-3896					
END242		027064	115-3935	115-3939	115-3957	115-4025	#115-4027				
END243		027604	#119-4143								
END244		030620	129-4328	129-4336	129-4342	129-4346	129-4348	#129-4350			
END251		032106	133-4500	133-4522	#133-4536						
END26		032442	135-4554	#135-4570							
END30		032464	137-4578	#137-4580							
END40		032676	#139-4630								
ERRBLK		002402	*27-1247	#27-1252	*58-2168	*79-2695					
ERRMSG		002400	#27-1252	*58-2167	*79-2694	*131-4407	*131-4415	*139-4613	*139-4622		
ERRNBR		002376	#27-1252	*58-2166	*79-2693	*131-4406	*131-4414	*139-4612	*139-4621		
ERROR		002354	#27-1247	131-4409	131-4424	139-4615	139-4624				
ERRORS		033363	#141-4650								
ERRREG		002604	*27-1263	#27-1266	*131-4382	*131-4426	*139-4625				
ERRSAV		027610	119-4127	*119-4142	#119-4146						
ERRSY		002274	#21-1118	*37-1545	*60-2193	*67-2343	67-2353	67-2360	*69-2400	77-2649	*85-2897
			87-3114	*109-3783	*109-3806	*115-3934	*115-3938	115-3941	*115-3956	*115-3965	*115-4000
			*115-4018	*115-4023	*117-4055	*117-4065	*129-4335	139-4586	139-4625	*139-4629	
ERRTY	002276		#21-1119	*67-2344	87-3111	*109-3773	*109-3781	*113-3855	*113-3866	*113-3867	113-3891
			*113-3895	*115-3960	*115-3971	*115-3979	*115-3985	*115-3991	*115-3993	*115-3996	*115-3997
			*115-4011	*115-4015	119-4080	119-4081	119-4116	119-4142	121-4204	*129-4341	*129-4345
			*129-4347	*129-4349	131-4382	131-4383	131-4426	131-4428	*131-4429		
ERRTYP	002374		#27-1252	*58-2169	*79-2696	*131-4408	*131-4416	*131-4422	*139-4614	*139-4623	
ERSTAT	025026		*107-3725	#107-3737							
ERSVCT	027612		*119-4129	119-4130	*119-4138	*119-4141	#119-4147				
ERTSAV	021452		*87-3046	#87-3134	113-3853	113-3893	*113-3897	*131-4428			
ERT1	031176		#131-4438	131-4455							
ERT10	031371		#131-4447	131-4464							
ERT11	031423		#131-4448	131-4465							
ERT12	031435		#131-4449	131-4466							
ERT13	031450		#131-4450	131-4467							
ERT14	031507		#131-4451	131-4468							
ERT15	031546		#131-4452	131-4469							
ERT16	031601		#131-4453	131-4470							
ERT2	031210		#131-4439	131-4456							
ERT3	031221		#131-4440	131-4457							
ERT4	031235		#131-4441	131-4458							
ERT5	031247		#131-4442	131-4459							
ERT6	031263		#131-4443	131-4460							
ERT7	031315		#131-4444	131-4461							
ERT8	031344		#131-4445	131-4462							
ERT9	031360		#131-4446	131-4463							
ESCLAS	033450		139-4606	#141-4668							
ESREV	027074		*115-3924	115-3967	115-3994	115-3998	115-4009	115-4013	115-4016	115-4021	#115-4032
ESRUUT	002250		#21-1105	27-1257	*67-2346	*77-2662	*109-3809	115-3924	117-4051	117-4061	*143-4704
ETCLAS	031656		131-4400	#131-4474							
ETSAV	027606		119-4075	*119-4078	*119-4080	#119-4145					
ETTAB	027630		119-4091	#119-4159							
ET1	031616		131-4390	#131-4455							

CNRXDA SYMBOL	CREATED BY	MACRO	ON 15-DEC-82 AT 13:51	PAGE 9	CREF	V01					
SYMBOL	CROSS REFERENCE	VALUE	REFERENCES								
EVCMD		027066	*115-3945	*115-3947	*115-3948	*115-3949	115-3950	#115-4029			
EVDATA		025412	111-3829	#113-3841							
EVDVRE		027076	115-3940	#117-4040							
EVDVST		026206	111-3824	#115-3922							
EVL	=	000004	#19-983	89-3157	95-3388	127-4297	131-4417				
EVISTR		025334	87-3104	#111-3823							
EVUTEC		030476	111-3826	#129-4325							
EXADR		022154	*89-3146	89-3220	#89-3229						
EXADTB		022164	89-3144	#89-3234							
EXCMP		014020	*67-2338	67-2372	#67-2384	*137-4579					
EXHCP		021430	*87-3041	87-3077	*87-3079	*87-3092	#87-3125				
EXMSG		003114	*29-1288	29-1289	#29-1294						
EXN		021424	*87-3058	#87-3123	89-3142						
EX1		022204	89-3235	#91-3247							
EX2		022214	89-3236	#91-3251							
EX3		022230	89-3237	#91-3257							
EX4		022244	89-3238	#91-3263							
EX5		022254	89-3239	#91-3267							
EX6		022264	89-3240	#91-3271							
EX7		022300	89-3234	89-3241	#91-3277						
ESEND	=	002100	#16-786								
ESLOAD	=	000035	#16-786	16-829							
FCKMSG		017223	77-2632	#79-2739							
FIN		011520	50-1901	50-1922	#50-1931						
FIRST		014074	*69-2401	#69-2404	81-2754						
FLAGS		002266	#21-1114	*50-1892	*50-1900	*50-1913	69-2393				
FLGDRS		002264	#21-1113	*50-1897	89-3157	95-3388	127-4297	131-4417			
FLOATO		017546	83-2799	#83-2814							
FLOAT1		017614	83-2800	#83-2829							
FNEV4		030622	*111-3825	129-4339	129-4343	#129-4352					
FORMCK		015304	#75-2604	77-2632	77-2633	*77-2635					
FUNC		033335	#141-4649								
FUNEV		027070	*111-3823	115-3936	#115-4030						
FUNTY		030342	*119-4073	*125-4262	125-4263	125-4267	125-4269	#125-4285			
FSAU	=	000015	#16-786	64-2264	64-2272						
FSAUTO	=	000020	#16-786	56-2091	56-2132						
F\$BGN	=	000040	#16-786	16-812	18-914	19-976	31-1348	31-1367	37-1553	38-1606	38-1614
			48-1876	50-1891	54-2059	56-2091	62-2212	64-2264	67-2335	67-2337	67-2337
			67-2352	67-2358	67-2358	67-2369	67-2381	73-2544	77-2614	87-3057	143-4738
			145-4799	145-4806	147-4840	147-4866	151-4950	151-4952	151-4953	151-4953	151-4958
			151-4959	151-4959	151-4964	151-4965					
F\$CLEA	=	000007	#16-786	54-2054	54-2072						
F\$DU	=	000016	#16-786	62-2212	62-2232						
F\$END	=	000041	#16-786	16-786	16-786	16-786	16-786	16-786	16-786	16-786	16-786
			16-786	16-786	16-786	16-786	16-786	16-786	16-786	16-786	16-812
			18-914	19-976	31-1349	31-1369	37-1553	38-1606	38-1650	50-1935	54-2072
			56-2132	62-2232	64-2272	67-2335	67-2335	67-2335	67-2337	67-2337	67-2352
			67-2352	67-2358	67-2358	67-2369	67-2369	67-2381	73-2580	77-2682	87-3116
			143-4738	143-4738	145-4806	145-4813	147-4866	147-4877	151-4950	151-4952	151-4953
			151-4958	151-4959	151-4964	151-4965					
F\$HARD	=	000004	#16-786	145-4799	145-4806	145-4806	145-4813	147-4843	147-4852	147-4858	147-4862
			147-4866								

CNRXDA SYMBOL	CREATED BY	MACRO	ON	15-DEC-82	AT	13:51	PAGE	10	CREF	V01								
SYMBOL	CROSS REFERENCE	VALUE	REFERENCES															
F\$HW	=	000013	#16-786	18-866	18-879													
F\$INIT	=	000006	#16-786	50-1891	50-1935													
F\$JMP	=	000050	#16-786	67-2381	145-4806	147-4866												
F\$MOD	=	000000	#16-786	16-812	18-914	19-976	37-1553	38-1606	151-4950									
F\$MSG	=	000011	#16-786	31-1348	31-1349	31-1367	31-1369											
F\$PROT	=	000021	#16-786	48-1876	48-1880													
F\$PWP	=	000017	#16-786															
F\$RP	=	000012	#16-786	38-1614	38-1650													
F\$SEG	=	000003	#16-786	73-2544	73-2580	77-2614	77-2682	87-3057	87-3116									
F\$SOFT	=	000005	#16-786	147-4840	147-4843	147-4852	147-4858	147-4862	147-4866	147-4866	147-4877							
F\$SRV	=	000010	#16-786															
F\$SUB	=	000002	#16-786	67-2337	67-2352	67-2358	67-2369											
F\$SW	=	000014	#16-786	18-891	18-912													
F\$TEST	=	000001	#16-786	67-2335	143-4738													
GETSEC		023334	95-3423	#99-3469														
GETTRK		023742	95-3417	#101-3570														
GETTST		021454	87-3059	#89-3141														
GPSUNO		014626	71-2442	#71-2507														
GPSUN1		014702	71-2476	71-2518	#71-2524													
GDRV		022320	87-3098	#93-3306														
GDRVFN		024254	95-3398	95-3432	#105-3642													
GTEX		017302	69-2399	#81-2748														
GTEXCD		014076	69-2395	#69-2413														
GTSYEX		014022	67-2351	#69-2392														
GTSYS		014216	69-2398	#71-2441														
GITK		020062	85-2896	#85-2899														
G\$CNTO	=	000200	#16-786															
G\$DELM	=	000372	#16-786															
G\$DISP	=	000003	#16-786															
G\$EXCP	=	000400	#16-786															
G\$HILI	=	000002	#16-786															
G\$LOLI	=	000001	#16-786															
G\$NO	=	000000	#16-786															
G\$OFFS	=	000400	#16-786	77-2632	145-4801	145-4802	145-4803	145-4804	147-4842	147-4844	147-4845							
				147-4846	147-4847	147-4848	147-4849	147-4850	147-4851	147-4853	147-4854	147-4855						
				147-4856	147-4857	147-4859	147-4860	147-4861	147-4863	147-4864	147-4865							
G\$OF SI	=	000376	#16-786	77-2632	145-4801	145-4802	145-4803	145-4804	147-4842	147-4844	147-4845							
				147-4846	147-4847	147-4848	147-4849	147-4850	147-4851	147-4853	147-4854	147-4855						
				147-4856	147-4857	147-4859	147-4860	147-4861	147-4863	147-4864	147-4865							
G\$PRMA	=	000001	#16-786	145-4801	145-4802													
G\$PRMD	=	000002	#16-786	145-4803	145-4804	147-4845	147-4846	147-4847	147-4848	147-4859	147-4860							
				147-4863	147-4864													
G\$PRML	=	000000	#16-786	77-2632	147-4842	147-4844	147-4849	147-4850	147-4851	147-4853	147-4854							
				147-4855	147-4856	147-4857	147-4861	147-4865										
G\$RADA	=	000140	#16-786															
G\$RADB	=	000000	#16-786															
G\$RADD	=	000040	#16-786	147-4848	147-4859	147-4860	147-4863	147-4864										
G\$RADL	=	000120	#16-786	77-2632	147-4842	147-4844	147-4849	147-4850	147-4851	147-4853	147-4854							
				147-4855	147-4856	147-4857	147-4861	147-4865										
G\$RADO	=	000020	#16-786	145-4801	145-4802	145-4803	145-4804	147-4845	147-4846	147-4847								
G\$XFER	=	000004	#16-786	145-4806	147-4843	147-4852	147-4858	147-4862	147-4866									
G\$YES	=	000010	#16-786	77-2632	145-4801	145-4802	145-4803	145-4804	147-4842	147-4844	147-4845							

C  
S  
S

S  
S

S  
S  
S





CNRXDA SYMBOL	CREATED BY	MACRO	ON	DATE	TIME	PAGE	12
SYMBOL	CROSS REFERENCE	VALUE	REFERENCES	REF	V01		
IEATDP		012720	#56-2120				
IER	=	020000 G	#19-983				
IEU234		025164	#109-3779				
IE00		013726	#67-2363				
IE1211		015444	#77-2633				
IFA11		011670	#52-1969				
IFATDP		012756	56-2116	56-2126	#56-2128		
IFAUP		002444	#27-1258				
IFAU23		025232	#109-3796				
IFA10		014040	69-2394	#69-2396			
IFA11		014100	#69-2414				
IFA12		014244	#71-2446				
IFA121		014760	#73-2542				
IFA20		020750	#87-3048	87-3055			
IFA21		021520	89-3148	89-3151	#89-3153		
IFA22		022322	#93-3307				
IFA23		022516	#95-3347				
IFA231		023410	#99-3485				
IFA232		024024	#101-3584				
IFA233		024262	#105-3644				
IFA234		024450	#107-3683				
IFA24		025360	#111-3827				
IFA241		025456	#113-3851				
IFA242		026232	#115-3926				
IFA244		030506	#129-4327				
IFA25		030720	#131-4386				
IFA251		031700	#133-4499				
IFA26		032354	#135-4553				
IFA40		032510	#139-4594				
IFB11		011710	52-1970	#52-1974			
IFB10		014024	#69-2393				
IFB12		014316	#71-2455				
IFB121		015010	#73-2549				
IFB13		017342	#81-2754				
IFB20		021036	#87-3061				
IFB21		021546	89-3154	#89-3159			
IFB22		022332	#93-3309				
IFB23		022606	95-3355	#95-3362			
IFB231		023504	#99-3503				
IFB232		024120	101-3601	#101-3603			
IFB233		024314	105-3645	105-3650	#105-3652		
IFB242		026326	115-3927	#115-3940			
IFB244		030524	#129-4333				
IFB25		030770	#131-4402				
IFB251		031706	#133-4501				
IFB26		032370	#135-4557				
IFB40		032554	#139-4608				
IFC11		011724	52-1975	#52-1978			
IFC11		014166	69-2424	#69-2426			
IFC12		014420	71-2465	71-2469	#71-2471		
IFC121		015116	73-2561	#73-2564			
IFC13		017350	#81-2756				

CNRXDA SYMBOL	CREATED BY CROSS REFERENCE VALUE	MACRO ON 15-DEC-82 AT 13:51 REFERENCES	PAGE 13 CREF	V01
IFC20	021052	#87-3064		
IFC21	021570	89-3160 #89-3164		
IFC22	022360	93-3312 #93-3314		
IFC23	022714	95-3382 #95-3384		
IFC231	023526	99-3495 99-3498 #99-3509		
IFC232	024136	#101-3607		
IFC233	024322	#105-3654		
IFC234	024602	107-3687 #107-3703		
IFC241	025560	#113-3868		
IFC242	026266	#115-3932		
IFC244	030536	129-4334 #129-4337		
IFC25	031030	131-4403 #131-4411		
IFC251	031730	133-4502 #133-4506		
IFC40	032614	139-4609 #139-4617		
IFD11	011744	52-1979 #52-1983		
IFD12	014430	71-2472 #71-2474		
IFD121	015156	73-2569 #73-2572		
IFD21	021622	#89-3171		
IFD22	022402	93-3308 #93-3319		
IFD23	022742	95-3387 #95-3390		
IFD231	023544	#99-3514		
IFD232	024146	101-3608 #101-3610		
IFD233	024344	105-3653 105-3657 #105-3659		
IFD234	024612	#107-3705		
IFD241	025570	#113-3870		
IFD242	026444	115-3955 #115-3958		
IFD244	030544	#129-4339		
IFD25	031156	#131-4431		
IFD251	031740	#133-4508		
IFE11	011764	52-1973 52-1977 #52-1987		
IFE12	014444	#71-2477		
IFE121	015164	#73-2574		
IFE21	022136	#89-3222		
IFE22	022430	93-3322 #93-3324		
IFE23	023064	95-3408 95-3410 #95-3412		
IFE232	024170	101-3611 #101-3615		
IFE233	024302	#105-3649		
IFE234	024744	107-3704 #107-3723		
IFE241	025604	113-3869 113-3871 #113-3873		
IFE242	026460	115-3959 #115-3961		
IFE244	030564	129-4340 #129-4343		
IFE25	031074	#131-4420		
IFE251	032016	133-4507 #133-4521		
IFF11	011772	#52-1989		
IFF12	014502	#71-2483		
IFF121	015174	#73-2576		
IFF20	021122	#87-3073		
IFF21	021510	#89-3150		
IFF23	023072	#95-3414		
IFF231	023552	#99-3516		
IFF232	024064	#101-3595		
IFF241	025614	#113-3875		

CNRXDA SYMBOL	CREATED BY CROSS REFERENCE VALUE	MACRO ON 15-DEC-82 AT 13:51	PAGE 14 CREF	V01
IFF242	026722	REFERENCES		
IFF25	031060	115-3999 #115-4002		
IFF251	032026	#131-4417		
IFG11	011776	#133-4523		
IFG12	014576	#52-1991		
IFG20	021142	71-2473 71-2475 71-2490 #71-2496		
IFG21	021714	#87-3077		
IFG23	023040	89-3165 89-3167 #89-3186		
IFG231	023422	95-3385 95-3389 #95-3405		
IFG232	024102	#99-3488		
IFG242	026506	101-3585 #101-3600		
IFG251	031750	115-3942 #115-3967		
IFH11	012040	#133-4510		
IFH12	014400	52-1990 #52-2000		
IFH121	015076	#71-2467		
IFH20	021210	#73-2560		
IFH21	021752	87-3078 #87-3086		
IFH23	023154	89-3156 89-3158 #89-3194		
IFH231	023432	95-3411 #95-3425		
IFH232	023756	#99-3490		
IFH234	024474	#101-3572		
IFH242	026536	#107-3688		
IFH251	032036	115-3968 #115-3973		
IFI11	012104	#133-4525		
IFI121	015136	52-1988 #52-2009		
IFI20	021064	73-2565 #73-2568		
IFI21	021774	87-3065 #87-3067		
IFI23	022552	89-3195 89-3197 #89-3199		
IFI231	023346	95-3352 #95-3354		
IFI241	025462	#99-3472		
IFI242	026516	#113-3853		
IFJ11	012114	#115-3969		
IFJ21	022030	52-2012 #52-2012		
IFJ23	022706	89-3200 #89-3205		
IFJ241	025762	#95-3381		
IFJ242	026546	#113-3889		
IFK11	012124	115-3970 #115-3975		
IFK20	020700	#52-2015		
IFK21	021576	#87-3038		
IFK234	024532	#89-3166		
IFK241	025770	#107-3694		
IFK242	026574	#113-3891		
IFL11	012164	115-3978 #115-3981		
IFL20	021246	52-2014 #52-2023		
IFL21	021476	87-3068 #87-3094		
IFL241	026000	#89-3147		
IFL242	026656	#113-3893		
IFM20	021356	115-3972 115-3980 115-3986 115-3992 #115-3994		
IFM21	021654	#87-3111		
IFM241	025634	89-3172 89-3174 #89-3178		
IFM242	026622	#113-3879		
IFN21	021664	115-3984 #115-3987		
		#89-3180		



MACRO ON 15-DEC-82 AT 13:51		PAGE 16									
SYMBOL	CREATED BY	SYMBOL	VALUE	REFERENCES	REF	V01					
ITER1	017032	ITER1	017032	77-2670 #79-2736							
ITER2	017116	ITER2	017116	77-2672 #79-2737							
ITER3	017200	ITER3	017200	73-2562 #79-2738							
ITMSG	016130	ITMSG	016130	*71-2448 *71-2457 *71-2491 *71-2493 *73-2562 *73-2566 *73-2570 *73-2578 *77-2619							
				*77-2627 *77-2670 *77-2672 *77-2674 *77-2678 *77-2680 79-2716 #79-2720							
ITMSG1	016334	ITMSG1	016334	73-2566 #79-2727							
ITMSG2	016357	ITMSG2	016357	73-2578 #79-2728							
ITMSG3	016401	ITMSG3	016401	77-2619 #79-2729							
ITMSG4	016454	ITMSG4	016454	77-2674 #79-2730							
ITMSG5	016521	ITMSG5	016521	73-2570 #79-2731							
ITMSG6	016576	ITMSG6	016576	77-2627 #79-2732							
ITMSG7	016652	ITMSG7	016652	77-2678 #79-2733							
ITMSG8	016704	ITMSG8	016704	77-2680 #79-2734							
ITMSG9	016753	ITMSG9	016753	77-2653 #79-2735							
ITPRNT	016102	ITPRNT	016102	77-2620 77-2628 79-2699 #79-2713							
IXE	= 004000	IXE	= 004000	#19-983							
ISAU	= 000041	ISAU	= 000041	#16-786 #64-2264 #64-2272							
ISAUTO	= 000041	ISAUTO	= 000041	#16-786 #56-2091 #56-2132							
ISCLN	= 000041	ISCLN	= 000041	#16-786 #54-2059 #54-2072							
ISDU	= 000041	ISDU	= 000041	#16-786 #62-2212 #62-2232							
ISHRD	= 000041	ISHRD	= 000041	#145-4799 #145-4813							
ISINIT	= 000041	ISINIT	= 000041	#16-786 #50-1891 #50-1935							
ISMOD	= 000041	ISMOD	= 000041	#16-786 16-812 #16-812 18-914 #18-914 19-976 #19-976 37-1553 #37-1553							
				38-1606 #38-1606 151-4950 #151-4950							
ISMSG	= 000041	ISMSG	= 000041	#16-786 #31-1348 #31-1349 #31-1367 #31-1369							
ISPROT	= 000040	ISPROT	= 000040	#16-786 #48-1876							
ISPTAB	= 000041	ISPTAB	= 000041	#16-786 151-4953 #151-4953 151-4958 #151-4958 151-4959 #151-4959 151-4964 #151-4964							
ISPRW	= 000041	ISPRW	= 000041	#16-786							
ISRPT	= 000041	ISRPT	= 000041	#16-786 #38-1614 #38-1650							
ISSEG	= 000041	ISSEG	= 000041	#16-786 67-2335 67-2337 67-2358 #73-2544 #73-2580 #77-2614 #77-2682 #87-3057							
				#87-3116							
ISSETU	= 000041	ISSETU	= 000041	#16-786 151-4952 #151-4952 151-4953 151-4959 151-4965 #151-4965							
ISSFT	= 000041	ISSFT	= 000041	#147-4840 #147-4877							
ISSRV	= 000041	ISSRV	= 000041	#16-786							
ISSUB	= 000041	ISSUB	= 000041	#16-786 67-2335 67-2337 #67-2337 67-2352 #67-2352 #67-2352 67-2358 #67-2358							
				67-2369 #67-2369 #67-2369							
ISTST	= 000041	ISTST	= 000041	#16-786 67-2335 #67-2335 67-2337 67-2358 67-2381 143-4738 #143-4738 #143-4738							
JSJMP	= 000167	JSJMP	= 000167	#16-786							
LAREC	005130	LAREC	005130	37-1544 #37-1547							
LA2432	030006	LA2432	030006	121-4203 #121-4213							
LA2433	030176	LA2433	030176	123-4239 #123-4248							
LBU234	025154	LBU234	025154	109-3770 #109-3775							
LB1211	015366	LB1211	015366	77-2618 #77-2623							
LB24U1	030424	LB24U1	030424	127-4298 127-4300 #127-4305							
LB2432	027762	LB2432	027762	121-4205 #121-4209							
LB2433	030152	LB2433	030152	123-4241 #123-4244							
LB2434	030270	LB2434	030270	125-4268 #125-4271							
LC243	027402	LC243	027402	119-4100 #119-4103							
LC2432	030050	LC2432	030050	121-4216 #121-4220							
LD00	013742	LD00	013742	67-2361 #67-2367							
LD1211	015772	LD1211	015772	77-2631 #77-2680							
LEU234	025204	LEU234	025204	109-3780 #109-3783							



CNRXDA	CREATED BY	MACRO	ON 15-DEC-82 AT 13:51	PAGE 18			
SYMBCL	CROSS REFERENCE			REF	V01		
SYMBOL	VALUE	REFERENCES					
LSLOAD	002100 G	#16-829					
LSLUN	002074 G	#16-829	*27-1248	*58-2161	*58-2163	*58-2165	*79-2697
LSMREV	002050 G	#16-829					
LSNAME	002000 G	#16-829					
LSPRIO	002042 G	#16-829					
LSPROT	011242 G	16-829	#48-1876				
LSPRT	002112 G	#16-829					
LSREPP	002062 G	#16-829					
LSREV	002010 G	#16-829					
LSRPT	005140 G	16-829	#38-1614				
LSSOFT	035136 G	16-829	147-4840	#147-4840			
LSSPC	002056 G	#16-829					
LSSPCP	002020 G	#16-829					
LSSPTP	002024 G	#16-829					
LSSTA	002030 G	#16-829					
LSSW	002172 G	16-829	18-891	#18-891			
LSTEST	002114 G	#16-829					
LSTIML	002014 G	#16-829					
LSUNIT	002012 G	#16-829	50-1909	50-1921			
L10000	002170 G	18-866	#18-879				
L10001	002220 G	18-891	#18-912				
L10002	004506 G	#31-1349					
L10003	004514 G	#31-1369					
L10004	005406 G	#38-1650					
L10006	011602 G	#50-1935					
L10007	012550 G	#54-2072					
L10010	012772 G	#56-2132					
L10011	013434 G	#62-2232					
L10012	013562 G	#64-2272					
L10013	035006 G	67-2381	#143-4738				
L10014	013664 G	#67-2352					
L10015	013750 G	#67-2369					
L10016	035060 G	145-4799	145-4806	#145-4813			
L10017	035400 G	147-4840	147-4866	#147-4877			
L10020	040460 G	#151-4953					
L10021	040474 G	151-4953	#151-4959				
L10022	040470 G	151-4953	#151-4958				
L10024	040504 G	151-4959	#151-4964				
MAXSEC	002214 G	#18-902	99-3503	99-3509	99-3514	99-3516	
MAXTRK	024234 G	*101-3570	101-3600	101-3607	101-3610	101-3615	#103-3628
MCRDRT	032321 G	133-4531	#133-4544				
MCWTRT	032270 G	133-4516	#133-4543				
MDRDRT	032213 G	133-4528	#133-4541				
MDWTRT	032134 G	133-4513	#133-4539				
MINSEC	002212 G	#18-901	99-3485	99-3499	99-3500	99-3501	99-3503
MINTRK	024232 G	*101-3571	101-3580	101-3602	101-3603	101-3615	101-3618 #103-3627
MRDRT	032244 G	133-4534	#133-4542				
MSG1	035060 G	145-4801	#145-4815				
MSG11	037312 G	147-4846	#149-4915				
MSG14	037341 G	147-4847	#149-4916				
MSG15	037425 G	147-4849	#149-4918				
MSG16	037463 G	147-4850	#149-4919				





CNRXDA SYMBOL	CREATED BY	MA_RO	ON 15-DEC-82 AT 13:51	PAGE 20	CREF	V01				
CROSS REFERENCE	VALUE	REFERENCES								
PLOC	= 011604	*50-1923 #50-1956 52-1968								
PNT	= 001000	G #19-983								
POWERF	= 000001	G #19-1065 50-1900 69-2393								
PREPT1	006002	40-1668 40-1685 40-1695 42-1718 #44-1744								
PREPT2	006030	40-1661 40-1688 #44-1756								
PREPT3	006050	42-1727 #44-1766								
PRESCK	020536	85-2986 #85-2988								
PRESTK	020642	*85-2885 *85-2887 85-2917 85-2925 85-2969 85-2988 *85-3002 #85-3009								
PR1	= 002000	G #19-983								
PRIDXX	006360	38-1627 #46-1786								
PRID01	006426	46-1786 #46-1808								
PRID02	006455	46-1787 #46-1809								
PRID03	006504	46-1788 #46-1810								
PRID04	006533	46-1789 #46-1811								
PRID05	006562	46-1790 #46-1812								
PRID06	006611	46-1791 #46-1813								
PRID07	006640	46-1792 #46-1814								
PRID08	006667	46-1793 #46-1815								
PRID09	006716	46-1794 #46-1816								
PRID10	006745	46-1795 #46-1817								
PRID11	006774	46-1796 #46-1818								
PRID12	007023	46-1797 #46-1819								
PRID13	007052	46-1798 #46-1820								
PRID14	007101	46-1799 #46-1821								
PRID15	007130	46-1800 #46-1822								
PRID16	007157	46-1801 #46-1823								
PRID17	007206	46-1802 #46-1824								
PRID18	007235	46-1803 #46-1825								
PRID19	007264	46-1804 #46-1826								
PR100	= 000000	G #19-983 #19-1051 109-3766								
PR101	= 000040	G #19-983 #19-1050								
PR102	= 000100	G #19-983 #19-1049								
PR103	= 000140	G #19-983 #19-1048								
PR104	= 000200	G #19-983 #19-1047								
PR105	= 000240	G #19-983 #19-1046								
PR106	= 000300	G #19-983 #19-1045 50-1931 50-1934 58-2155 109-3784								
PR107	= 000340	G #19-983 #19-1044								
PRNUM	005644	*38-1625 *38-1635 *38-1645 40-1681 #40-1707								
PRTBOS	004516	#31-1371 71-2499 79-2717								
PRTB1	004510	G #31-1367 58-2168								
PRTB1S	004536	31-1368 #31-1374 77-2654 79-2715 133-4535								
PRTCTR	005646	38-1619 #42-1714								
PRTDAT	005510	38-1629 38-1640 38-1649 #40-1680								
PRTECD	002272	#21-1116 27-1258 *27-1262 *37-1534								
PRTERR	002404	#27-1257 77-2676 131-4427 139-4626								
PRTHDR	005414	38-1618 38-1622 38-1632 38-1643 #40-1659								
PRT1	005504	*38-1616 *38-1620 *38-1630 *38-1641 40-1660 #40-1674								
PRT2	005506	*38-1617 *38-1621 *38-1631 *38-1642 40-1667 #40-1675								
PTDAT1	006243	40-1694 #44-1775								
PTEC	006200	38-1630 #44-1773								
PTECN	006327	38-1637 38-1639 #44-1779								
PTFMN1	006315	42-1726 #44-1778								

CNRXDA SYMBOL	CREATED BY	MACRO	ON	AT	PAGE	21	CREF	V01						
CROSS REFERENCE	VALUE	REFERENCES												
PTHEAD	026062	*113-3843	113-3879	*113-3881	#113-3912									
PTRDSC	006116	42-1717	#44-1771											
PTRTY	031676	131-4433	#133-4498											
PTTK	006225	38-1641	#44-1774											
PTTKN	006343	38-1648	#44-1780											
PTUNT1	006253	38-1621	38-1631	38-1642	#44-1776									
PTUNT2	006274	38-1617	#44-1777											
PTWTSC	006147	42-1736	#44-1772											
PT19SP	006105	38-1620	#44-1770											
PT20SP	006074	38-1616	#44-1769											
RANDAT	017656	83-2803	#83-2842	83-2847										
RANGEN	004560	#33-1460	83-2842	85-2980										
RANUM	004652	*33-1475	#33-1480	83-2843	*85-2981	85-2982	85-2985	85-2988	85-2990					
RAN1	004646	33-1461	*33-1467	33-1472	#33-1478									
RAN2	004650	33-1462	33-1469	*33-1474	#33-1479									
RD	007454	#48-1844												
RDERCD	005026	#37-1532	77-2669	115-4026										
RDYWD	025330	*37-1541	*71-2443	*71-2452	*71-2480	*73-2558	*77-2647	*77-2656	*107-3679	*107-3690				
		*107-3699	*107-3707	*107-3714	*107-3718	*107-3727	107-3753	*107-3753	107-3755	109-3796				
		109-3800	#109-3814	*115-3930	*115-3952									
		#21-1131	133-4533											
READRT	002324	42-1716	#48-1834	85-3023	*125-4274	*125-4276	*125-4278	*125-4280	*125-4282					
READSC	007314	*37-1535	*37-1536	37-1537	#37-1550									
RECCMD	005136	#75-2596	*77-2621	*77-2629	*77-2636	*77-2639	*77-2644	77-2645	77-2667					
REFCMD	015264	73-2583	#77-2611											
REFDRV	015306	#38-1615												
REPORT	005140	#19-1064	50-1913											
RESTAR	= 000002	G	*87-3071	*87-3072	*87-3082	*87-3083	#87-3133	95-3354	95-3356	*95-3361				
RESTK	021450	#21-1123	*67-2341	89-3153	89-3194	89-3196	89-3199	*89-3202	89-3205	*89-3208				
RETRY	002304	*89-3215	95-3384	95-3390	*95-3403	*119-4139	*127-4302	*127-4308	133-4499	133-4501				
		133-4506	133-4508	133-4510	133-4521	133-4523	133-4525							
		*121-4210	*121-4217	*121-4218	*121-4220	*121-4221	*123-4242	*123-4244	*123-4248	127-4302				
		127-4308	#127-4318											
		#119-4152	*121-4207	*121-4211	*121-4214	*123-4235	*123-4245	127-4293						
RTMASK	030474	#18-893	52-1987	56-2105	71-2466	71-2471	71-2516	73-2572	77-2640	95-3347				
		105-3652	117-4044											
		#19-1057	73-2568											
		109-3799	#109-3813											
RTOFF	027624	77-2657	*77-2658	*77-2660	109-3798	#109-3812								
RXXX	002172	*77-2657	77-2660	#77-2686										
		99-3488	*99-3502	*99-3513	*99-3521	*99-3531	#99-3538							
		67-2359	#87-3037											
RX2BIT	= 004000	G	#21-1097	*62-2229	*67-2342	*87-3080	137-4577							
RYDLY	025326	*95-3436	95-3440	107-3708	#107-3742									
RYDX	025324	#21-1111	89-3164	*95-3360	95-3412	*99-3533								
SAVDLY	016014	#21-1109	*95-3440	113-3882										
SCPST	023060	*95-3395	*95-3402	*95-3419	*95-3421	#97-3458								
SCSYEX	020676	*113-3842	*113-3872	113-3889	#113-3906									
SDD	002230	#21-1124	119-4132	127-4294	133-4503									
SECADR	025040	#48-1841	127-4312											
SECDN	002262	*81-2750	*85-2899	85-2901	*85-2903	85-2904	#85-3014							
SECTOR	002256	85-2909	#85-2917	85-2938										
SEEK	023322													
SEEKCK	026046													
SEFKRT	002306													
SEK	007424													
SEQUEN	020654													
SEQ1	020164													



CNRXDA CREATED BY MACRO ON 15-DEC-82 AT 13:51  
SYMBOL CROSS REFERENCE  
SYMBOL VALUE

PAGE 23  
CREF V01

REFERENCES

16-829	16-829	16-829	16-829	16-829	16-829	16-829	16-829	16-829	16-829
16-829	16-829	16-829	16-829	16-829	16-829	16-829	16-829	16-829	16-829
16-829	16-829	16-829	16-829	16-837	16-837	16-848	16-848	16-848	18-866
18-891	25-1209	25-1209	27-1249	27-1257	27-1257	27-1257	27-1257	27-1257	27-1257
27-1257	27-1257	27-1257	27-1257	27-1260	27-1260	27-1260	27-1260	27-1260	27-1260
27-1260	27-1260	27-1260	27-1260	27-1260	27-1260	27-1260	27-1260	27-1260	27-1261
27-1261	27-1261	27-1261	27-1261	27-1261	27-1261	27-1261	27-1261	27-1261	27-1261
27-1261	27-1261	27-1261	29-1289	29-1289	29-1289	29-1289	29-1289	29-1289	31-1349
31-1369	31-1371	31-1371	31-1371	31-1371	31-1371	31-1374	31-1374	31-1374	31-1374
31-1374	31-1374	31-1374	38-1650	44-1744	44-1744	44-1744	44-1744	44-1744	44-1744
44-1744	44-1756	44-1756	44-1756	44-1756	44-1756	44-1766	44-1766	44-1766	44-1766
44-1766	44-1766	44-1766	44-1766	50-1897	50-1897	50-1898	50-1898	50-1898	50-1899
50-1902	50-1902	50-1903	50-1911	50-1911	50-1912	50-1923	50-1923	50-1923	50-1923
50-1924	50-1928	50-1928	50-1928	50-1928	50-1928	50-1930	50-1931	50-1931	50-1931
50-1931	50-1931	50-1931	50-1931	50-1934	50-1934	50-1934	50-1934	50-1934	50-1934
50-1934	50-1935	52-2037	52-2037	52-2037	52-2037	52-2037	52-2037	52-2037	52-2038
52-2040	52-2040	52-2040	52-2040	52-2040	52-2040	54-2067	54-2067	54-2067	54-2070
54-2070	54-2071	54-2072	56-2101	56-2101	56-2104	56-2104	56-2110	56-2110	56-2110
56-2113	56-2113	56-2124	56-2124	56-2127	56-2127	56-2130	56-2132	56-2132	58-2155
58-2155	58-2155	58-2155	58-2155	58-2155	58-2157	58-2157	58-2170	58-2170	62-2222
62-2222	62-2222	62-2222	62-2222	62-2222	62-2230	62-2230	62-2230	62-2230	62-2230
62-2230	62-2230	62-2232	64-2272	67-2337	67-2352	67-2358	67-2368	67-2368	67-2369
67-2378	67-2380	67-2381	67-2381	71-2441	73-2544	73-2580	77-2614	77-2614	77-2630
77-2631	77-2632	77-2632	77-2632	77-2632	77-2632	77-2632	77-2682	77-2682	79-2698
79-2706	79-2706	87-3057	87-3116	89-3150	89-3151	95-3381	95-3382	95-3382	109-3766
109-3766	109-3784	109-3784	113-3882	113-3882	113-3882	113-3882	113-3882	113-3882	113-3882
113-3882	113-3882	113-3883	113-3883	113-3883	113-3883	113-3883	113-3883	113-3883	113-3883
113-3883	113-3883	113-3883	143-4738	145-4799	145-4801	145-4801	145-4801	145-4801	145-4801
145-4802	145-4802	145-4802	145-4802	145-4803	145-4803	145-4803	145-4803	145-4803	145-4803
145-4804	145-4804	145-4804	145-4804	145-4804	145-4806	145-4813	147-4840	147-4840	147-4842
147-4842	147-4842	147-4843	147-4844	147-4844	147-4844	147-4845	147-4845	147-4845	147-4845
147-4845	147-4845	147-4846	147-4846	147-4846	147-4846	147-4846	147-4847	147-4847	147-4847
147-4847	147-4847	147-4847	147-4848	147-4848	147-4848	147-4848	147-4848	147-4848	147-4849
147-4849	147-4849	147-4850	147-4850	147-4850	147-4851	147-4851	147-4851	147-4851	147-4852
147-4853	147-4853	147-4853	147-4854	147-4854	147-4854	147-4855	147-4855	147-4855	147-4855
147-4856	147-4856	147-4856	147-4857	147-4857	147-4857	147-4858	147-4859	147-4859	147-4859
147-4859	147-4859	147-4859	147-4860	147-4860	147-4860	147-4860	147-4860	147-4860	147-4861
147-4861	147-4861	147-4862	147-4863	147-4863	147-4863	147-4863	147-4863	147-4863	147-4864
147-4864	147-4864	147-4864	147-4864	147-4865	147-4865	147-4865	147-4865	147-4865	147-4866
151-4949	151-4949	151-4949	151-4953	151-4953	151-4953	151-4959	151-4959	151-4959	151-4959
SVCSUB = 177777	#16-786	#16-794	67-2337	67-2337	67-2337	67-2358	67-2358	67-2358	67-2358
SVCTAG = 177777	#16-786	#16-796	18-879	18-879	18-879	18-912	18-912	18-912	31-1349
	31-1349	31-1349	31-1369	31-1369	31-1369	38-1650	38-1650	38-1650	50-1935
	50-1935	50-1935	54-2072	54-2072	54-2072	56-2132	56-2132	56-2132	62-2232
	62-2232	62-2232	64-2272	64-2272	64-2272	67-2352	67-2352	67-2352	67-2369
	67-2369	67-2369	73-2580	73-2580	73-2580	77-2632	77-2632	77-2632	77-2682
	77-2682	77-2682	87-3116	87-3116	87-3116	143-4738	143-4738	143-4738	145-4813
	145-4813	145-4813	147-4877	147-4877	147-4877	151-4953	151-4953	151-4953	151-4958
	151-4958	151-4958	151-4959	151-4959	151-4959	151-4964	151-4964	151-4964	151-4964
SVCTST = 177777	#16-786	#16-793	67-2335	67-2335	67-2335				
SVUTRG = 033516	143-4688	143-4695	#143-4701						
SWREG = 002204	#18-898	67-2374	69-2396	69-2414	69-2421	69-2426	77-2615	81-2756	81-2758

CNRXDA SYMBOL	CREATED BY	MACRO	ON	15-DEC-82	AT	13:51	PAGE	24	CREF	V01									
SYMBOL	CROSS REFERENCE	VALUE	REFERENCES																
SYFT	=	000000	G	#19-1061	95-3386	95-3393	113-3875	127-4295											
SYSE10	=	033122	G	#141-4642	139-4623														
SYSE11	=	033151		#141-4643	60-2193														
SYSE12	=	033161		#141-4644	141-4658														
SYSE13	=	033171		#141-4645	141-4659														
SYSE14	=	033225		#141-4646	141-4660														
SYSE15	=	033242		#141-4647	141-4661														
SYSE16	=	033302		#141-4648	141-4662														
SYSE4	=	032700		#141-4636	141-4663														
SYSE5	=	032733		#141-4637	141-4664														
SYSE6	=	032764		#141-4638	141-4652														
SYSE7	=	033010		#141-4639	141-4653														
SYSE8	=	033033		#141-4640	141-4654														
SYSE9	=	033072		#141-4641	141-4655														
SLSYM	=	010000		#16-786	#18-879	#18-912	#31-1349	#31-1369	#38-1650	#50-1935	#54-2072	#56-2132							
				#62-2232	#64-2272	#67-2352	#67-2369	73-2544	73-2544	#73-2544	77-2614	77-2614							
				#77-2614	77-2632	77-2632	77-2632	#77-2632	87-3057	87-3057	#87-3057	#143-4738							
				#145-4813	#147-4877														
TARGET		020640		*85-2886	*85-2888	*85-2919	*85-2921	*85-2927	*85-2929	*85-2942	*85-2945	*85-2949							
				*85-2957	*85-2961	*85-2964	*85-2971	*85-2974	*85-2976	*85-2990	*85-2993	85-2999							
				85-3000	85-3002	#85-3008													
				*89-3162	89-3166	*89-3169	89-3186	*89-3188	*89-3191	*89-3216	*89-3218	#89-3231							
TBPRCT		022160		107-3684	#107-3686														
TMA234		024464		131-4391	#131-4398														
TMA25		030756		139-4599	#139-4605														
TMA40		032544		#99-3505															
TMB231		023514		81-2755	#81-2759														
TMC13		017366		95-3394	#95-3397														
TMD23		022772		93-3318	#93-3326														
TME22		022440		#107-3725															
TME234		024754		99-3489	#99-3518														
TMF231		023560		113-3874	#113-3877														
TMF241		025624		*85-2884	*85-2997	85-2998	#85-3006												
TKTBPT		020634		101-3575	101-3586	#103-3631													
TKTL		024242		38-1646	#48-1856	119-4124													
TKXX		010070		#21-1108	*91-3439	113-3882	119-4120												
TRACK		002254		58-2155	#60-2193														
TRAP		013260		#19-1055	37-1541	77-2647	107-3690	107-3699	107-3707	107-3714	107-3718	107-3727							
TRBIT	=	000200	G	*95-3435	95-3439	107-3712	#107-3741												
TRKADR		025036		*85-2893	*85-2894	*85-2895	*85-2947	*85-2991	#85-3007										
TRKCNT		020636		#21-1110	89-3173	*89-3175	*101-3619												
TRKDN		002260		*101-3583	*101-3597	*101-3612	*101-3617	101-3619	#103-3626										
TRKDNF		024230		*95-3416	101-3584	*101-3620	#103-3629												
TRKINC		024236		#18-897	81-2750	85-2899													
TRKSEQ		002202		85-2996	101-3589	#143-4724													
TRKTBL		033554		58-2160	#58-2174														
TRPMS1		013144		*89-3203	*89-3209	*89-3211	89-3213	#89-3232											
TSVCT		022162		27-1261	#143-4717														
TSEC		033551		*87-3060	87-3061	87-3064	87-3073	87-3101	87-3105	#87-3122									
TST		021422		*111-3830	119-4073	#119-4153	121-4202	121-4215	123-4240										
TSTCK		027626																	







CNRXDA      CREA'ED BY    MACRO    ON 15-DEC-82 AT 13:51    PAGE 27  
SYMBOL    CROSS REFERENCE    VALUE    REFERENCES    CREF    V01

CNRXDA SYMBOL	CROSS REFERENCE VALUE	REFERENCES	CREF	V01
		#31-1348    31-1367    31-1367    #31-1367    38-1614    38-1614    #38-1614    48-1876    48-1876		
		#48-1876    50-1891    50-1891    #50-1891    54-2059    54-2059    #54-2059    56-2091    56-2091		
		#56-2091    62-2212    62-2212    #62-2212    64-2264    64-2264    #64-2264    67-2335    67-2335		
		#67-2335    67-2337    67-2337    #67-2337    67-2358    67-2358    #67-2358    145-4799    145-4799		
		#145-4799    147-4840    147-4840    #147-4840    151-4952    151-4952    #151-4952    151-4953    151-4953		
		#151-4953    151-4953    151-4953    #151-4953    151-4959    151-4959    #151-4959    151-4959    151-4959		
		#151-4959		
TSTEMP	= 000000	#16-848    16-848    16-848    #16-848    #18-879    18-879    #18-912    18-912    #18-914		
		18-914    #31-1349    31-1349    #31-1369    31-1369    #37-1553    37-1553    #38-1650    38-1650		
		#48-1880    48-1880    #50-1935    50-1935    #54-2072    54-2072    #56-2132    56-2132    #62-2232		
		62-2232    #64-2272    64-2272    #67-2352    67-2352    #67-2369    67-2369    #67-2381    67-2381		
		#73-2580    73-2580    #77-2632    77-2632    #77-2632    77-2632    #77-2632    77-2632    #77-2682		
		77-2682    #87-3116    87-3116    #143-4738    143-4738    #145-4801    145-4801    #145-4801    145-4801		
		#145-4801    145-4801    #145-4802    145-4802    #145-4802    145-4802    #145-4802    145-4802    #145-4803		
		145-4803    #145-4803    145-4803    #145-4803    145-4803    #145-4804    145-4804    #145-4804    145-4804		
		#145-4804    145-4804    #145-4806    145-4806    #145-4813    145-4813    #147-4842    147-4842    #147-4842		
		147-4842    #147-4842    147-4842    #147-4844    147-4844    #147-4844    147-4844    #147-4844    147-4844		
		#147-4845    147-4845    #147-4845    147-4845    #147-4845    147-4845    #147-4846    147-4846    #147-4846		
		147-4846    #147-4846    147-4846    #147-4847    147-4847    #147-4847    147-4847    #147-4847    147-4847		
		#147-4848    147-4848    #147-4848    147-4848    #147-4848    147-4848    #147-4849    147-4849    #147-4849		
		147-4849    #147-4849    147-4849    #147-4850    147-4850    #147-4850    147-4850    #147-4850    147-4850		
		#147-4851    147-4851    #147-4851    147-4851    #147-4851    147-4851    #147-4853    147-4853    #147-4853		
		147-4853    #147-4853    147-4853    #147-4854    147-4854    #147-4854    147-4854    #147-4854    147-4854		
		#147-4855    147-4855    #147-4855    147-4855    #147-4855    147-4855    #147-4856    147-4856    #147-4856		
		147-4856    #147-4856    147-4856    #147-4857    147-4857    #147-4857    147-4857    #147-4857    147-4857		
		#147-4859    147-4859    #147-4859    147-4859    #147-4859    147-4859    #147-4860    147-4860    #147-4860		
		147-4860    #147-4860    147-4860    #147-4861    147-4861    #147-4861    147-4861    #147-4861    147-4861		
		#147-4863    147-4863    #147-4863    147-4863    #147-4863    147-4863    #147-4864    147-4864    #147-4864		
		147-4864    #147-4864    147-4864    #147-4865    147-4865    #147-4865    147-4865    #147-4865    147-4865		
		#147-4866    147-4866    #147-4877    147-4877    #151-4950    151-4950		
TSTEST	= 000001	#16-786    67-2335    #67-2335    67-2335    67-2337    67-2358    151-4949		
TSTSTM	= 177777	#16-786    27-1249    27-1257    27-1260    27-1261    29-1289    31-1349    31-1369    31-1371		
		31-1374    38-1650    44-1744    44-1756    44-1766    50-1897    50-1898    50-1902    50-1911		
		50-1923    50-1928    50-1930    50-1931    50-1934    50-1935    52-2037    52-2038    52-2040		
		54-2067    54-2070    54-2071    54-2072    56-2101    56-2104    56-2110    56-2113    56-2124		
		56-2127    56-2130    56-2132    58-2155    58-2157    58-2170    62-2222    62-2230    62-2232		
		64-2272    67-2337    67-2352    67-2358    67-2368    67-2369    67-2378    67-2380    67-2381		
		71-2441    73-2544    73-2580    77-2614    77-2630    77-2632    77-2682    79-2698    79-2706		
		87-3057    87-3116    89-3150    95-3381    109-3766    109-3784    113-3882    113-3883    143-4738		
TSTSTS	= 000001	#16-786    #67-2335		
TSSAU	= 010012	#64-2264    64-2272		
TSSAUT	= 010010	#56-2091    56-2132		
TSSCLE	= 010007	#54-2059    54-2072		
TSSDAT	= 010024	#151-4953    151-4953    151-4958    #151-4959    151-4959    151-4964		
TSSDU	= 010011	#62-2212    62-2232		
TSSHAR	= 010016	#145-4799    145-4799    145-4806    145-4813		
TSSHW	= 010000	#18-866    18-866    18-879		
TSSINI	= 010006	#50-1891    50-1935		
TSSMSG	= 010003	#31-1348    31-1349    #31-1367    31-1369		
TSSPC	= 000002	#151-4952    151-4965		
TSSPRO	= 010005	#48-1876		
TSSPTA	= 010023	#151-4952    151-4953    #151-4953    151-4959    #151-4959		

CNRXDA		CREATED BY	MACRO	ON 15-DEC-82 AT 13:51	PAGE 28						
SYMBOL		CROSS REFERENCE	VALUE	REFERENCES	CREF	V01					
TSSRPT	=	010004	#38-1614	38-1650							
TSSSEG	=	010003	#73-2544	73-2544	#73-2580	73-2580	#77-2614	77-2614	#77-2682	77-2682	#87-3057
			87-3057	#87-3116	87-3116						
TSSSOF	=	010017	#147-4840	147-4840	147-4866	147-4877					
TSSSUB	=	010015	#67-2337	67-2352	#67-2358	67-2369					
TSSSW	=	010001	#18-891	18-891	18-912						
TSSTES	=	010013	#67-2335	67-2381	143-4738						
TOMSG		013124	58-2167	#58-2173							
T1		013564	16-848	#67-2335							
T1.1		013566	#67-2337								
T1.2		013706	#67-2358								
UAM	=	000200	#19-983								
UALI234		025162	#109-3778								
UCOO		013752	#67-2370								
UDCRST		027722	119-4077	#121-4201							
UDMDST		027670	119-4103	#121-4186							
UDSFST		030072	119-4101	#123-4230							
UDU234		025156	#109-3776								
UF243		027412	#119-4105								
UGOO		013766	67-2357	#67-2374							
UKINT		007404	#48-1839								
UK243		027554	#119-4136								
UNIT		002334	#23-1139	27-1248	27-1257	*35-1522	*50-1915	*50-1920	50-1921	50-1923	52-1969
			52-2034	52-2037	52-2040	*71-2507	*71-2510	*71-2514	*71-2524	*71-2527	*71-2531
			*73-2548	77-2652	79-2697	79-2706	79-2713	*93-3333	113-3882		
UNITDP		013436	*62-2214	62-2217	62-2222	62-2230	#62-2234				
UNITST		005024	*35-1518	#35-1525	87-3051						
UNPKHP		011656	50-1926	#52-1966							
UNT		012330	*52-1967	*52-1986	52-2015	52-2023	#52-2044				
UNTCO		015300	*71-2462	*71-2487	73-2545	73-2549	73-2574	*73-2586	#75-2602	77-2637	77-2642
UNTCNT		015276	*71-2460	*71-2486	*73-2585	73-2587	#75-2601				
UNTCOD		012326	*52-1995	*52-1998	*52-2004	*52-2007	*52-2018	*52-2021	*52-2026	*52-2029	52-2031
			#52-2043								
UPDVST		027230	111-3831	#119-4073							
UPSECT		030216	119-4074	#125-4259							
UTCNT		005412	#38-1653	*40-1663	*40-1670	*40-1690	*40-1697	*42-1720	*42-1730		
UTSCDN		023704	*99-3469	*99-3518	*99-3529	99-3533	#99-3548				
UTTST		005410	#38-1652	*40-1662	40-1664	40-1666	*40-1669	*40-1689	40-1692	*40-1696	*42-1719
			42-1721	*42-1728							
UT00		002336	#23-1140	35-1521	40-1662	40-1689	42-1719	*50-1916	52-2030	56-2094	56-2099
			56-2101	62-2216	71-2508	71-2510	73-2547	93-3332			
UT01		002340	#23-1141	*50-1917	56-2102	56-2104	71-2512	71-2514			
UT10		002342	#23-1142	*50-1918	56-2107	56-2108	56-2110	56-2117	56-2122	56-2124	71-2525
			71-2527								
UT11		002344	#23-1143	*50-1919	56-2111	56-2113	56-2125	56-2127	71-2529	71-2531	
UUT		002234	#21-1099	*87-3051	87-3071	87-3082	93-3307	93-3309	*93-3316	93-3319	*93-3326
			*93-3328	93-3329	95-3349	99-3470	99-3558	101-3581	105-3654	105-3659	115-3943
			117-4046	117-4056	125-4259	135-4557	135-4563				
UUTADR		002236	#21-1100	37-1533	37-1538	37-1540	*77-2668	*95-3351	*95-3353	95-3400	95-3437
			115-3922	115-3929	115-3951	115-3961					
UUTOFF		002240	#21-1101	*35-1520	*93-3331	95-3346	119-4114	119-4125	121-4191	127-4306	127-4313
UOADR		002220	#21-1092	*50-1904	*52-1971	52-1974	56-2092	56-2095	56-2128	71-2444	71-2446



CNRXDA CREATED BY MACRO ON 15-DEC-82 AT 13:51

PAGE 30  
CREF V01

MACRO NAME	REFERENCES						
BGNAU	64-2264						
BGNAUT	56-2091						
BGNCLN	54-2059						
BGNDU	62-2212						
BGNHRD	145-4799						
BGNHW	18-866						
BGNINI	50-1891						
BGNMOD	16-812	19-976	38-1606				
BGNMSG	31-1348	31-1367					
BGNPRO	48-1876						
BGNPTA	151-4953	151-495					
BGNRPT	38-1614						
BGNSEG	73-2544	77-2614	87-3057				
BGNSET	151-4952						
BGNSFT	147-4840						
BGNSUB	67-2337	67-2358					
BGNSW	18-891						
BGNTST	67-2335						
BNCOMP	50-1899	50-1903	50-1912	50-1924	77-2631	89-3151	95-3382
BRESET	54-2071	71-2441					
CKLOOP	67-2368						
CLRVEC	54-2067	54-2070	58-2157				
DESCRI	16-837						
DEVTYP	25-1209						
DISPAT	16-848						
DOCLN	50-1930	52-2038	56-2130	67-2378			
DODU	56-2101	56-2104	56-2110	56-2113	56-2124	56-2127	79-2706
DORPT	67-2380						
ENDAU	64-2272						
ENDAUT	56-2132						
ENDCLN	54-2072						
ENDDU	62-2232						
ENDHRD	145-4813						
ENDHW	18-879						
ENDINI	50-1935						
ENDMOD	18-914	37-1553	151-4950				
ENDMSG	31-1349	31-1369					
ENDPRO	48-1880						
ENDPTA	151-4958	151-4964					
ENDRPT	38-1650						
ENDSEG	73-2580	77-2682	87-3116				
ENDSET	151-4965						
ENDSFT	147-4877						
ENDSUB	67-2352	67-2369					
ENDSW	18-912						
ENDTST	143-4738						
EQUALS	19-983						
ERROR	27-1249	58-2170	79-2698				
ERRTBL	27-1252						
EXIT	67-2381	145-4806	147-4866				
GMANIL	77-2632						
GPHARD	50-1923						





CNRXDA CREATED BY MACRO ON 15-DEC-82 AT 13:51 PAGE 33  
MACRO CROSS REFERENCE CREF V01  
MACRO NAME REFERENCES

#31-1374	31-1374	#31-1374	31-1374	31-1374	#31-1374	31-1374	31-1374	#38-1650	38-1650
#44-1744	#44-1744	44-1744	#44-1744	44-1744	#44-1744	44-1744	44-1744	#44-1744	44-1744
44-1744	#44-1756	#44-1756	44-1756	#44-1756	44-1756	44-1756	#44-1756	44-1756	44-1756
#44-1766	#44-1766	44-1766	#44-1766	44-1766	#44-1766	44-1766	#44-1766	44-1766	44-1766
#44-1766	44-1766	44-1766	#50-1897	50-1897	#50-1897	50-1897	#50-1898	50-1898	#50-1898
50-1898	#50-1899	50-1899	#50-1902	50-1902	#50-1902	50-1902	#50-1903	50-1903	#50-1911
50-1911	#50-1911	50-1911	#50-1912	50-1912	#50-1923	50-1923	#50-1923	50-1923	#50-1923
50-1923	#50-1924	50-1924	#50-1928	50-1928	50-1928	#50-1928	50-1928	50-1928	#50-1928
50-1928	50-1928	#50-1930	50-1930	#50-1931	#50-1931	50-1931	#50-1931	50-1931	#50-1931
50-1931	#50-1931	50-1931	#50-1931	50-1931	50-1931	#50-1934	#50-1934	50-1934	#50-1934
50-1934	#50-1934	50-1934	#50-1934	50-1934	#50-1934	50-1934	50-1934	#50-1935	50-1935
#52-2037	#52-2037	52-2037	#52-2037	52-2037	#52-2037	52-2037	52-2037	#52-2037	52-2037
52-2037	#52-2038	52-2038	#52-2040	52-2040	#52-2040	52-2040	52-2040	#52-2040	52-2040
52-2040	#52-2040	52-2040	52-2040	#54-2067	54-2067	#54-2067	54-2067	#54-2070	54-2070
#54-2070	54-2070	#54-2071	54-2071	#54-2072	54-2072	#56-2101	56-2101	#56-2101	56-2101
#56-2104	56-2104	#56-2104	56-2104	#56-2110	56-2110	#56-2110	56-2110	#56-2113	56-2113
#56-2113	56-2113	#55-2124	56-2124	#56-2124	56-2124	#56-2127	56-2127	#56-2127	56-2127
#56-2130	56-2130	#56-2132	56-2132	#58-2155	#58-2155	58-2155	#58-2155	58-2155	#58-2155
58-2155	#58-2155	58-2155	#58-2155	58-2155	58-2155	#58-2157	58-2157	#58-2157	58-2157
#58-2170	58-2170	#62-2222	#62-2222	62-2222	#62-2222	62-2222	#62-2222	62-2222	62-2222
#62-2222	62-2222	62-2222	#62-2230	#62-2230	62-2230	#62-2230	62-2230	#62-2230	62-2230
62-2230	#62-2230	62-2230	62-2230	#62-2232	62-2232	#64-2272	64-2272	#67-2337	67-2337
#67-2352	67-2352	#67-2358	67-2358	#67-2368	67-2368	#67-2369	67-2369	#67-2378	67-2378
#67-2380	67-2380	#67-2381	67-2381	#67-2381	67-2381	#71-2441	71-2441	# 3-2544	73-2544
#73-2580	73-2580	#77-2614	77-2614	#77-2630	77-2630	#77-2631	77-2631	#77-2632	77-2632
#77-2632	77-2632	#77-2632	77-2632	#77-2632	77-2632	77-2632	77-2632	#77-2682	77-2682
#79-2698	79-2698	#79-2706	79-2706	#79-2706	79-2706	#87-3057	87-3057	#87-3116	87-3116
#89-3150	89-3150	#89-3151	89-3151	#95-3381	95-3381	#95-3382	95-3382	#109-3766	109-3766
#109-3766	109-3766	#109-3784	109-3784	#109-3784	109-3784	#113-3882	#113-3882	#113-3882	#113-3882
113-3882	#113-3882	113-3882	#113-3882	113-3882	#113-3882	113-3882	113-3882	#113-3882	113-3882
113-3882	#113-3883	#113-3883	113-3883	113-3883	#113-3883	113-3883	113-3883	#113-3883	113-3883
#113-3883	113-3883	#113-3883	113-3883	113-3883	#113-3883	113-3883	113-3883	#143-4738	143-4738
#145-4799	145-4799	#145-4801	145-4801	145-4801	145-4801	145-4801	#145-4802	145-4802	145-4802
145-4802	145-4802	#145-4803	145-4803	145-4803	145-4803	145-4803	145-4803	#145-4804	145-4804
145-4804	145-4804	145-4804	145-4804	#145-4806	145-4806	#145-4813	145-4813	#147-4840	147-4840
#147-4842	147-4842	147-4842	147-4842	#147-4843	147-4843	#147-4844	147-4844	147-4844	147-4844
#147-4845	147-4845	147-4845	147-4845	147-4845	147-4845	#147-4846	147-4846	147-4846	147-4846
147-4846	147-4846	#147-4847	147-4847	147-4847	147-4847	147-4847	147-4847	#147-4848	147-4848
147-4848	147-4848	147-4848	147-4848	#147-4849	147-4849	147-4849	147-4849	#147-4850	147-4850
147-4850	147-4850	#147-4851	147-4851	147-4851	147-4851	#147-4852	147-4852	#147-4853	147-4853
147-4853	147-4853	#147-4854	147-4854	147-4854	147-4854	#147-4855	147-4855	147-4855	147-4855
#147-4856	147-4856	147-4856	147-4856	#147-4857	147-4857	147-4857	147-4857	#147-4858	147-4858
#147-4859	147-4859	147-4859	147-4859	147-4859	147-4859	#147-4860	147-4860	147-4860	147-4860
147-4860	147-4860	#147-4861	147-4861	147-4861	147-4861	#147-4862	147-4862	#147-4863	147-4863
147-4863	147-4863	147-4863	147-4863	#147-4864	147-4864	147-4864	147-4864	147-4864	147-4864
#147-4865	147-4865	147-4865	147-4865	#147-4866	147-4866	#147-4877	147-4877	#151-4949	151-4949
151-4949	151-4949	#151-4953	151-4953	151-4953	#151-4953	#151-4959	151-4959	151-4959	151-4959
#73-2580	73-2580	#77-2632	77-2632	#77-2682	77-2682	#87-3116	87-3116		
#67-2337	67-2337	#67-2358	67-2358						
#18-879	18-879	#18-912	18-912	#31-1349	31-1349	#31-1369	31-1369	#38-1650	38-1650
#50-1935	50-1935	#54-2072	54-2072	#56-2132	56-2132	#62-2232	62-2232	#64-2272	64-2272
#67-2352	67-2352	#67-2369	67-2369	#143-4738	143-4738	#145-4813	145-4813	#147-4877	147-4877

MSGNLS  
MSGNSU  
MSGNTA

CNRXDA CREATED BY MACRO ON 15-DEC-82 AT 13:51

PAGE 34  
CREF V01

MACRO CROSS REFERENCE  
MACRO NAME

REFERENCES

MACRO NAME	REFERENCES	151-4953	#151-4958	151-4958	#151-4959	151-4959	#151-4964	151-4964		
MSGNTE	#151-4953	151-4953	#151-4958	151-4958	#151-4959	151-4959	#151-4964	151-4964		
MSHAPT	#67-2335	67-2335								
MSHNP	#16-829	16-829								
MSINCR	#16-829	16-829								
	#16-812	16-812	#18-866	#18-866	18-866	18-866	#18-891	#18-891	18-891	18-891
	#19-976	19-976	#27-1249	#27-1257	#27-1260	#27-1261	#29-1289	#31-1348	#31-1348	31-1348
	31-1348	#31-1349	#31-1367	#31-1367	31-1367	31-1367	#31-1369	#31-1371	#31-1374	#38-1606
	38-1606	#38-1614	#38-1614	38-1614	38-1614	#38-1650	#44-1744	#44-1756	#44-1766	#48-1876
	#48-1876	48-1876	48-1876	#50-1891	#50-1891	50-1891	50-1891	#50-1897	#50-1898	#50-1902
	#50-1911	#50-1923	#50-1928	#50-1930	#50-1931	#50-1934	#50-1935	#52-2037	#52-2038	#52-2040
	#54-2059	#54-2059	54-2059	54-2059	#54-2067	#54-2070	#54-2071	#54-2072	#56-2091	#56-2091
	56-2091	56-2091	#56-2101	#56-2104	#56-2110	#56-2113	#56-2124	#56-2127	#56-2130	#56-2132
	#58-2155	#58-2157	#58-2170	#62-2212	#62-2212	62-2212	62-2212	#62-2222	#62-2230	#62-2232
	#64-2264	#64-2264	64-2264	64-2264	#64-2272	#67-2335	#67-2335	67-2335	#67-2335	67-2335
	67-2335	#67-2337	67-2337	#67-2337	67-2337	67-2337	#67-2337	#67-2352	#67-2358	67-2358
	#67-2358	67-2358	67-2358	#67-2358	#67-2368	#67-2369	#67-2378	#67-2380	#67-2381	#71-2441
	#73-2544	#73-2544	73-2544	#73-2544	73-2544	73-2544	#73-2544	#73-2580	#77-2614	#77-2614
	77-2614	#77-2614	77-2614	77-2614	#77-2614	#77-2630	#77-2632	#77-2632	77-2632	#77-2682
	#79-2698	#79-2706	#87-3057	#87-3057	87-3057	#87-3057	87-3057	#87-3057	#87-3057	#87-3116
	#89-3150	#95-3381	#109-3766	#109-3784	#113-3882	#113-3883	#143-4738	#145-4799	#145-4799	145-4799
	145-4799	#147-4840	#147-4840	147-4840	147-4840	#151-4952	151-4952	#151-4953	151-4953	151-4953
	151-4953	#151-4959	151-4959	151-4959	151-4959					
MSLDRO	#50-1898	50-1898	#50-1902	50-1902	#50-1911	50-1911	#50-1923	50-1923	#54-2067	54-2067
	#54-2070	54-2070	#56-2101	56-2101	#56-2104	56-2104	#56-2110	56-2110	#56-2113	56-2113
	#56-2124	56-2124	#56-2127	56-2127	#58-2157	58-2157	#79-2706	79-2706	#109-3766	109-3766
	#109-3784	109-3784								
MSMCHI	#16-786	16-786								
MSMCLO	#16-786	16-786								
MSPOP	#18-879	18-879	#18-912	18-912	#18-914	18-914	#31-1349	31-1349	#31-1369	31-1369
	#37-1553	37-1553	#38-1650	38-1650	#48-1880	48-1880	#50-1935	50-1935	#54-2072	54-2072
	#56-2132	56-2132	#62-2232	62-2232	#64-2272	64-2272	#67-2352	67-2352	#67-2369	67-2369
	#73-2580	73-2580	73-2580	#77-2682	77-2682	77-2682	#87-3116	87-3116	87-3116	#143-4738
	143-4738	#145-4813	145-4813	#147-4877	147-4877	#151-4950	151-4950			
MSPRIN	#27-1257	27-1257	#27-1260	27-1260	#27-1261	27-1261	#29-1289	29-1289	#31-1371	31-1371
	#31-1374	31-1374	#44-1744	44-1744	#44-1756	44-1756	#44-1766	44-1766	#50-1928	50-1928
	#52-2037	52-2037	#52-2040	52-2040	#62-2222	62-2222	#62-2230	62-2230	#113-3882	113-3882
	#113-3883	113-3883								
MSPUSH	#16-812	16-812	#18-866	18-866	#18-891	18-891	#19-976	19-976	#31-1348	31-1348
	#31-1367	31-1367	#38-1606	38-1606	#38-1614	38-1614	#48-1876	48-1876	#50-1891	50-1891
	#54-2059	54-2059	#56-2091	56-2091	#62-2212	62-2212	#64-2264	64-2264	#67-2335	67-2335
	#67-2337	67-2337	#67-2358	67-2358	#73-2544	73-2544	73-2544	#77-2614	77-2614	77-2614
	#87-3057	87-3057	87-3057	#145-4799	145-4799	#147-4840	147-4840			
MSPUT	#27-1257	27-1257	27-1257	27-1257	27-1257	27-1257	27-1257	#27-1260	27-1260	27-1260
	27-1260	27-1260	27-1260	27-1260	#27-1261	27-1261	27-1261	27-1261	27-1261	27-1261
	27-1261	#29-1289	29-1289	29-1289	#31-1371	31-1371	31-1371	#31-1374	31-1374	31-1374
	31-1374	#44-1744	44-1744	44-1744	44-1744	#44-1756	44-1756	44-1756	#44-1766	44-1766
	44-1766	44-1766	44-1766	#50-1928	50-1928	50-1928	#50-1931	50-1931	50-1931	50-1931
	50-1931	#50-1934	50-1934	50-1934	50-1934	50-1934	#52-2037	52-2037	52-2037	52-2037
	#52-2040	52-2040	52-2040	52-2040	#58-2155	58-2155	58-2155	58-2155	58-2155	#62-2222
	62-2222	62-2222	62-2222	#62-2230	62-2230	62-2230	62-2230	#113-3882	113-3882	113-3882
	113-3882	113-3882	113-3882	#113-3883	113-3883	113-3883	113-3883	113-3883	113-3883	113-3883
MSPUT1	#27-1257	27-1257	#27-1257	27-1257	#27-1257	27-1257	27-1257	27-1257	27-1257	27-1257



CNRXDA CREATED BY MACRO ON 15-DEC-82 AT 13:51

PAGE 35  
CREF V01

MACRO CROSS REFERENCE	MACRO NAME	REFERENCES	REFERENCES	REFERENCES	REFERENCES	REFERENCES	REFERENCES	REFERENCES	REFERENCES	REFERENCES
		27-1257	27-1257	#27-1260	#27-1260	#27-1260	#27-1260	#27-1260	27-1260	27-1260
		27-1260	27-1260	27-1260	27-1260	#27-1261	#27-1261	#27-1261	#27-1261	#27-1261
		27-1261	27-1261	27-1261	27-1261	27-1261	27-1261	#29-1289	#29-1289	29-1289
		#31-1371	#31-1371	31-1371	31-1371	#31-1374	#31-1374	#31-1374	31-1374	31-1374
		#44-1744	#44-1744	#44-1744	44-1744	44-1744	44-1744	#44-1756	#44-1756	44-1756
		#44-1766	#44-1766	#44-1766	#44-1766	44-1766	44-1766	44-1766	#50-1928	#50-1928
		50-1928	50-1928	#50-1931	#50-1931	#50-1931	#50-1931	50-1931	50-1931	50-1931
		#50-1934	#50-1934	#50-1934	#50-1934	50-1934	50-1934	50-1934	50-1934	#52-2037
		#52-2037	52-2037	52-2037	52-2037	#52-2040	#52-2040	#52-2040	52-2040	52-2040
		#58-2155	#58-2155	#58-2155	#58-2155	58-2155	58-2155	58-2155	58-2155	#62-2222
		#62-2222	62-2222	62-2222	62-2222	#62-2230	#62-2230	#62-2230	62-2230	62-2230
		#113-3882	#113-3882	#113-3882	#113-3882	113-3882	113-3882	113-3882	113-3882	113-3882
		#113-3883	#113-3883	#113-3883	#113-3883	113-3883	113-3883	113-3883	113-3883	113-3883
MSRADI		#77-2632	77-2632	#145-4801	145-4801	#145-4802	145-4802	#145-4803	145-4803	#145-4804
		#147-4842	147-4842	#147-4844	147-4844	#147-4845	147-4845	#147-4846	147-4846	#147-4847
		#147-4848	147-4848	#147-4849	147-4849	#147-4850	147-4850	#147-4851	147-4851	#147-4853
		#147-4854	147-4854	#147-4855	147-4855	#147-4856	147-4856	#147-4857	147-4857	#147-4859
		#147-4860	147-4860	#147-4861	147-4861	#147-4863	147-4863	#147-4864	147-4864	#147-4865
MSRNRO		#50-1897	50-1897	#50-1923	50-1923					
MSSETS		#16-812	16-812	#18-866	18-866	#18-891	18-891	#19-976	19-976	#31-1348
		#31-1367	31-1367	#38-1606	38-1606	#38-1614	38-1614	#48-1876	48-1876	#50-1891
		#54-2059	54-2059	#56-2091	56-2091	#62-2212	62-2212	#64-2264	64-2264	#67-2335
		#67-2337	67-2337	#67-2358	67-2358	#73-2544	73-2544	#73-2544	73-2544	#77-2614
MSSVC		#77-2614	77-2614	#87-3057	87-3057	#87-3057	87-3057	#145-4799	145-4799	#147-4840
		#27-1249	27-1249	#27-1257	27-1257	#27-1260	27-1260	#27-1261	27-1261	#29-1289
		#31-1349	31-1349	#31-1369	31-1369	#31-1371	31-1371	#31-1374	31-1374	#38-1650
		#44-1744	44-1744	#44-1756	44-1756	#44-1766	44-1766	#50-1897	50-1897	#50-1898
		#50-1902	50-1902	#50-1911	50-1911	#50-1923	50-1923	#50-1928	50-1928	#50-1930
		#50-1931	50-1931	#50-1934	50-1934	#50-1935	50-1935	#52-2037	52-2037	#52-2038
		#52-2040	52-2040	#54-2067	54-2067	#54-2070	54-2070	#54-2071	54-2071	#54-2072
		#56-2101	56-2101	#56-2104	56-2104	#56-2110	56-2110	#56-2113	56-2113	#56-2124
		#56-2127	56-2127	#56-2130	56-2130	#56-2132	56-2132	#58-2155	58-2155	#58-2157
		#58-2170	58-2170	#62-2222	62-2222	#62-2230	62-2230	#62-2232	62-2232	#64-2272
		#67-2337	67-2337	#67-2352	67-2352	#67-2358	67-2358	#67-2368	67-2368	#67-2369
		#67-2378	67-2378	#67-2380	67-2380	#67-2381	67-2381	#71-2441	71-2441	#73-2544
		#73-2580	73-2580	#77-2614	77-2614	#77-2630	77-2630	#77-2632	77-2632	#77-2682
		#79-2698	79-2698	#79-2706	79-2706	#87-3057	87-3057	#87-3116	87-3116	#89-3150
		#95-3381	95-3381	#109-3766	109-3766	#109-3784	109-3784	#113-3882	113-3882	#113-3883
		#143-4738	143-4738	#145-806	#147-4866					
MSLAB		#27-1249	#27-1257	#27-1260	#27-1261	#29-1289	#31-1349	#31-1369	#31-1371	#31-1374
		#44-1744	#44-1756	#44-1766	#50-1897	#50-1898	#50-1902	#50-1911	#50-1923	#50-1928
		#50-1931	#50-1934	#50-1935	#52-2037	#52-2038	#52-2040	#54-2067	#54-2070	#54-2071
		#56-2101	#56-2104	#56-2110	#56-2113	#56-2124	#56-2127	#56-2130	#56-2132	#58-2155
		#58-2170	#62-2222	#62-2230	#62-2232	#64-2272	#67-2337	#67-2352	#67-2358	#67-2368
		#67-2378	#67-2380	#67-2381	#71-2441	#73-2544	#73-2580	#77-2614	#77-2630	#77-2632
		#79-2698	#79-2706	#87-3057	#87-3116	#89-3150	#95-3381	#109-3766	#109-3784	#113-3882
		#143-4738								
MSSTL		#27-1249	27-1249	#27-1257	27-1257	#27-1260	27-1260	#27-1261	27-1261	#29-1289
		#31-1349	31-1349	#31-1369	31-1369	#31-1371	31-1371	#31-1374	31-1374	#38-1650
		#44-1744	44-1744	#44-1756	44-1756	#44-1766	44-1766	#50-1897	50-1897	#50-1898
		#50-1902	50-1902	#50-1911	50-1911	#50-1923	50-1923	#50-1928	50-1928	#50-1930
		#50-1931	50-1931	#50-1934	50-1934	#50-1935	50-1935	#52-2037	52-2037	#52-2038

CNRXDA CREATED BY MACRO ON 15-DEC-82 AT 13:51

PAGE 36  
CREF V01

MACRO CROSS REFERENCE  
MACRO NAME

REFERENCES

	#52-2040	52-2040	#54-2067	54-2067	#54-2070	54-2070	#54-2071	54-2071	#54-2072	54-2072
	#56-2101	56-2101	#56-2104	56-2104	#56-2110	56-2110	#56-2113	56-2113	#56-2124	56-2124
	#56-2127	56-2127	#56-2130	56-2130	#56-2132	56-2132	#58-2155	58-2155	#58-2157	58-2157
	#58-2170	58-2170	#62-2222	62-2222	#62-2230	62-2230	#62-2232	62-2232	#64-2272	64-2272
	#67-2337	67-2337	#67-2352	67-2352	#67-2358	67-2358	#67-2368	67-2368	#67-2369	67-2369
	#67-2378	67-2378	#67-2380	67-2380	#67-2381	67-2381	#71-2441	71-2441	#73-2544	73-2544
	#73-2580	73-2580	#77-2614	77-2614	#77-2630	77-2630	#77-2632	77-2632	#77-2682	77-2682
	#79-2698	79-2698	#79-2706	79-2706	#87-3057	87-3057	#87-3116	87-3116	#89-3150	89-3150
	#95-3381	95-3381	#109-3766	109-3766	#109-3784	109-3784	#113-3882	113-3882	#113-3883	113-3883
	#143-4738	143-4738								
MSWORD	#16-829	16-829	#16-848	16-848	16-848	#67-2381	#77-2632	77-2632	#77-2632	77-2632
	#145-4801	145-4801	#145-4802	145-4802	#145-4803	145-4803	#145-4804	145-4804	#145-4806	#145-4806
	145-4806	#147-4842	147-4842	#147-4843	147-4843	#147-4844	147-4844	#147-4845	147-4845	#147-4846
	147-4846	#147-4847	147-4847	#147-4848	147-4848	#147-4849	147-4849	#147-4850	147-4850	#147-4851
	147-4851	#147-4852	147-4852	#147-4853	147-4853	#147-4854	147-4854	#147-4855	147-4855	#147-4856
	147-4856	#147-4857	147-4857	#147-4858	147-4858	#147-4859	147-4859	#147-4860	147-4860	#147-4861
	147-4861	#147-4862	147-4862	#147-4863	147-4863	#147-4864	147-4864	#147-4865	147-4865	#147-4866
	#147-4866	147-4866	#151-4953	#151-4959	151-4959					
MSXFER	#145-4806	145-4806	#147-4843	147-4843	#147-4852	147-4852	#147-4858	147-4858	#147-4862	147-4862
	#147-4866	147-4866								
POINTE	16-819									
PRINTB	27-1257	31-1371	31-1374	113-3882	113-3883					
PRINTF	50-1928	52-2037	52-2040	62-2222	62-2230					
PRINTS	44-1744	44-1756	44-1766							
PRINTX	27-1260	27-1261	29-1289							
REDEF	50-1898	50-1902	50-1911							
RFLAGS	50-1897									
SETPRI	109-3766	109-3784								
SETVEC	50-1931	50-1934	58-2155							
SVC	#16-785	16-786								
XFER	#67-2381	#145-4806	145-4806	#147-4866	147-4866					
XFERF	147-4843	147-4852	147-4858	147-4862						