

TSV05

TSV05 DATA REL
CVTSEA0

AH-T179A-MC
FICHE 1 OF 1

SEP 1982
COPYRIGHT © 1982
MADE IN USA



A large grid of data tables, likely representing a data matrix or a series of related tables. The content is extremely faint and illegible due to the low contrast of the scan. The grid appears to be organized into approximately 10 columns and 15 rows of data blocks.



5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46

.REM_

IDENTIFICATION

PRODUCT CODE: AC-T178A-MC
PRODUCT NAME: CVTSEAO TSV05 DATA RELIABILITY
PRODUCT DATE: 08-MAR-82
MAINTAINER: SCOTT SNOWDON
AUTHOR: DICK GORDON

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION. DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR ANY ERRORS THAT MAY APPEAR IN THIS DOCUMENT.

NO RESPONSIBILITY IS ASSUMED FOR THE USE OR RELIABILITY OF SOFTWARE ON EQUIPMENT THAT IS NOT SUPPLIED BY DIGITAL OR ITS AFFILIATED COMPANIES.

COPYRIGHT (C) 1982,1982 BY DIGITAL EQUIPMENT CORPORATION

THE FOLLOWING ARE TRADEMARKS OF DIGITAL EQUIPMENT CORPORATION:

DIGITAL	PDP	UNIBUS	MASSBUS
DEC	DECUS	DECTAPE	

48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104

USER DOCUMENTATION TABLE OF CONTENTS

GLOSSARY

1.0 GENERAL INFORMATION

1.1 PROGRAM ABSTRACT

- 1.1.1 FUNCTIONAL DESCRIPTION
- 1.1.2 STRUCTURE OF PROGRAM
- 1.1.3 MEMORY MAP
- 1.1.4 DIAGNOSTIC INFORMATION
 - 1.1.4.1 SCOPE
 - 1.1.4.2 ERROR RECOVERY
 - 1.1.4.3 WRITE ERROR RECOVERY
 - 1.1.4.3.1 MEDIA/OPERATIONAL
SELECTIVE WRITE-ERROR-RECOVERY
 - 1.1.4.3.2 OPERATIONAL WRITE-ERROR-RECOVERY
 - 1.1.4.4 DIAGNOSTIC TIMING ADJUSTMENT

1.2 SYSTEM REQUIREMENTS

- 1.2.1 HARDWARE REQUIREMENTS
- 1.2.2 SOFTWARE REQUIREMENTS

1.3 RELATED DOCUMENTS AND STANDARDS

1.4 DIAGNOSTIC HIERARCHY PREREQUISITES

1.5 ASSUMPTIONS

2.0 OPERATING INSTRUCTIONS

2.1 HARDWARE PARAMETERS

2.2 SOFTWARE PARAMETERS

- 2.2.1 TSV05 COMMAND LIST
- 2.2.2 DATA PATTERNS

2.3 EXAMPLES OF SOFTWARE PARAMETER DIALOGUE

- 2.3.1 BASIC FUNCTION AND DATA RELIABILITY
WITH ALL ERROR REPORTING ENABLED
- 2.3.2 SCOPE LOOP SET UP IN BASIC FUNCTIONS
- 2.3.3 SCOPE LOOP SET UP IN DATA RELIABILITY

2.4 EXECUTION TIMES

105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
1612.4.1 SYSTEM CONFIGURATION
2.4.2 TEST EXECUTION TIMES

3.0 ERROR INFORMATION

3.1 ERROR REPORTING

3.1.1 ERROR #1 - COMMAND PACKET ADDRESS IS NOT ON A
MODULO 4 BOUNDARY

3.1.2 ERROR #2 - TS05 NOT READY

3.1.3 ERROR #3 - NO RESPONSE ERRORS

3.1.4 ERROR #4 - NO INTERRUPT ERROR

3.1.5 SPECIAL CONDITION ERRORS

3.1.5.1 ERROR #5 - TCC0, UNDEFINED SPECIAL CONDITION

3.1.5.2 ERROR #6 - TCC1, ATTENTION CONDITION

3.1.5.3 ERROR #7 - TCC2, TAPE STATUS ALERT

3.1.5.4 ERROR #8 - TCC3, FUNCTION REJECT

3.1.5.5 ERROR #9 - TCC4, RECOVERABLE ERROR

3.1.5.6 ERROR #10- TCC5, RECOVERABLE ERROR

3.1.5.7 ERROR #11- TCC6, UNRECOVERABLE ERROR

3.1.5.8 ERROR #12- TCC7, FATAL SUBSYSTEM ERROR

3.1.6 ERROR #13 - RFC NON-ZERO ERROR

3.1.7 ERROR #14 - RETRY LIMIT EXCEEDED

3.1.8 ERROR #15 - TOO MANY INTERRUPTS

3.1.9 ERROR #16 - CAPSTAN RUNAWAY

3.1.10 ERROR #17 - DATA COMPARE ERRORS

3.2 ERROR HALTS

4.0 PERFORMANCE REPORT

5.0 TEST SUMMARIES

5.1 TEST 1 - BASIC FUNCTIONS

5.2 TEST 2 - DATA RELIABILITY

5.3 TEST 3 - WRITE COMPATABILITY/WRITE UTILITY

5.4 TEST 4 - READ COMPATABILITY/READ UTILITY

5.5 TEST 5 - RANDOM/OPERATOR SELECTED COMMAND SEQUENCE

6.0 DEVICE INFORMATION

6.1 GENERAL

6.2 Q-BUS INTERFACE SPECIFICATIONS

6.3 BIT DEFINITIONS FOR TSV05/TS05 REGISTERS

6.3.1 TSV05/TS05 REGISTER SUMMARY

6.3.2 TSV05 STATUS REGISTER (TSSR)

6.3.2.1 TSV05 EXTENDED DATA BUFFER REGISTER (TSDBX)

6.3.3 EXTENDED STATUS REGISTER 0 (XSTAT0)

6.3.4 EXTENDED STATUS REGISTER 1 (XSTAT1)

6.3.5 EXTENDED STATUS REGISTER 2 (XSTAT2)

162
163
164
165
166
167
168

6.3.6 EXTENDED STATUS REGISTER 3 (XSTAT3)
6.3.7 EXTENDED STATUS REGISTER 4 (XSTAT4)

7.0 DIAGNOSTIC HISTORY

170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226

1.0 GENERAL INFORMATION

1.1 PROGRAM ABSTRACT


1.1.1 FUNCTIONAL DESCRIPTION

THIS PROGRAM CAN BE USED AS A BASIC FUNCTION TEST, A DATA RELIABILITY TEST, OR A COMPATABILITY TEST.

1.1.2 STRUCTURE OF PROGRAM

THIS DIAGNOSTIC IS A SINGLE PROGRAM FROM THE STANDPOINT OF THE DIAGNOSTIC USER, BUT IT CONTAINS A CONTROL MODULE RELEASED INDEPENDENTLY AS A DIAGNOSTIC SUPERVISOR.

1.1.3 MEMORY MAP

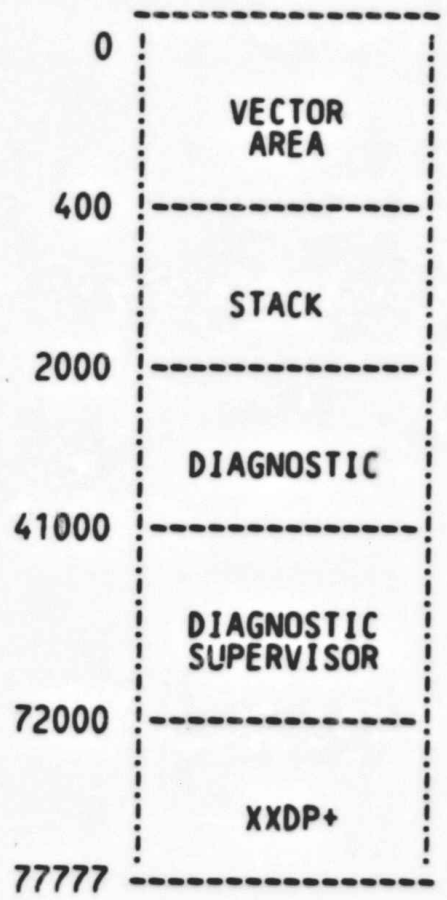

FREE MEMORY SPACE FOR WR/RD BFRS OR OTHER PUROSES

IS ALLOCATED BY THE SUPERVISOR ON REQUEST OR CHOSEN BY PROGRAMMER TO RESIDE BETWEEN THE DIAG AND THE SUPERVISOR.

1.1.4 DIAGNOSTIC INFORMATION

1.1.4.1 SCOPE

THIS DIAGNOSTIC CAN TEST ONE CONTROLLER AND UP TO 2 DRIVES. THE 2 DRIVES ARE ASSIGNED LOGICAL DRIVE NUMBERS 0 - 1 BY THE DIAGNOSTIC.

THERE ARE 5 TESTS IN THIS PROGRAM:

- TEST 1 - BASIC FUNCTIONS.
- TEST 2 - DATA RELIABILITY.
- TEST 3 - WRITE COMPATABILITY/WRITE UTILITY.
- TEST 4 - READ COMPATABILITY/READ UTILITY.
- TEST 5 - RANDOM/OPERATOR SELECTED SEQUENCE UTILITY.

1.1.4.2 ERROR RECOVERY

ERROR RECOVERY IS PERFORMED ON READ, WRITE AND WRITE TAPE MARK FUNCTIONS UNLESS ERROR RECOVERY IS INHIBITED BY THE OPERATOR AT START UP TIME. THE READ FORWARD/READ REVERSE RETRY LIMIT IS 16 (8 IN THE SAME DIRECTION AND 8 IN THE OPPOSITE DIRECTION). FOR MORE DETAILED INFORMATION ON ERROR RECOVERY PROCEDURES, REFER TO SECTION 3.0 (ERROR REPORTING) OF THIS LISTING.

1.1.4.3 WRITE ERROR RECOVERY

THERE ARE 2 , SELECTABLE WRITE-ERROR-RECOVERY ALGORITHMS USED BY THIS DIAGNOSTIC:

1. MEDIA/OPERATIONAL SELECTIVE ALGORITHM
2. OPERATIONAL ALGORITHM

BY DEFAULT THE DIAGNOSTIC SELECTS THE FIRST ALGORITHM TO IDENTIFY MEDIA RELATED WRITE ERRORS FROM OPERATIONAL ONES.

TO SELECT THE SECOND ALGORITHM:

- ANSWER 'Y' TO CHANGE SW (L) ?
- ANSWER 'N' TO BAD TAPE SPOT DETECTION (L) Y ?

IF ERROR RECOVERY IS INHIBITED, THE LATTER QUESTION IS NOT ASKED AND BOTH ALGORITHMS ARE BYPASSED.

1.1.4.3.1 MEDIA/OPERATIONAL SELECTIVE WRITE-ERROR-RECOVERY ALGORITHM

SCOPE

THIS ALGORITHM IDENTIFIES MEDIA RELATED WRITE ERRORS FROM OPERATIONAL ONES.

ALGORITHM

A WRITE RETRY SUBROUTINE IS CALLED BY THE RECOVERABLE ERROR SUBROUTINE WHICH IS ENTERED UPON DETECTION OF A WRITE RECOVERABLE ERROR. THE WRITE RETRY SUBROUTINE ATTEMPTS TO REWRITE THE RECORD IN SAME SPOT ON TAPE 4 TIMES.

227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283

284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340

IF ALL 4 REPEATS ARE GOOD, THE RECORD IS CONSIDERED AS RECOVERED AND A RECOVERABLE WRITE ERROR IS LOGGED AT THAT RECORD NUMBER.

IF ANY OF THE 4 REWRITE ATTEMPTS FAIL, THE ROUTINE WILL ERASE THE BAD RECORD, AND LOG BAD SPOT AT THAT RECORD NUMBER, THE ROUTINE WILL THEN ATTEMPT TO WRITE THE RECORD AGAIN 3 INCHES FURTHER DOWN TAPE AND RETRY THIS SEQUENCE 4 TIMES, FOR UP TO 4 REPEATS EACH.

IF A RECORD CANNOT BE WRITTEN WITHOUT RECOVERABLE ERRORS AFTER 4 RETRIES, THEN THE ROUTINE WILL ERASE THE RECORD AND REPORT RETRY FAILED ON BAD SPOT.

THE RECOVERABLE ERROR SUBROUTINE THEN CONTINUES TO CALL THE WRITE RETRY SUBROUTINE, WHICH REISSUES THE GROUP OF 4 RETRIES, UNTIL THE RECORD IS RECOVERED OR 20 BAD SPOTS HAVE BEEN LOGGED.

TWENTY (20) BAD SPOTS MAXIMUM ARE ALLOWED PER BOT TO EOT PASS OF TAPE. WHEN 20 BAD SPOTS HAVE BEEN LOGGED, WHETHER ON THE SAME RECORD NUMBER OR NOT, TAPE IS CONSIDERED DEFECTIVE: A BAD TAPE OVERFLOW MESSAGE IS PRINTED AND THE UNIT IS REWOUND, THEN DROPPED.

DURING THE RECOVERY PROCESS, IT IS NECESSARY TO PERFORM SEVERAL TAPE POSITIONING OPERATIONS: SPACE REVERSE, ERASE. IF A POSITION ERROR IS DETECTED IN THE STATUS WORD DURING THOSE OPERATIONS, THEN THE RECOVERY ATTEMPT IS AN APPROPRIATE UNRECOVERABLE ERROR MESSAGE IS PRINTED AND THE UNIT IS DROPPED.

ALL BADLY WRITTEN RECORDS LOGGED WITH RECOVERABLE ERRORS ARE ERASED UNTIL RECOVERED, INCLUDING THE RECORD AT THE 20TH BAD SPOT, SO THAT ALL RECORDS LEFT ON TAPE ARE KNOWN GOOD WRITTEN RECORDS.

BAD SPOTS ARE ERASED WITH ERASE GAPS FROM 3 TO 12 INCHES PER RETRY GROUP. UP TO 20 FEET OF ERASE GAP COULD RESULT WHEN RETRYING TO RECOVER A SINGLE RECORD.

THAT LONG STRETCH OF BAD TAPE WOULD THEN BE LOGGED WITH 20 BAD SPOTS AT SAME RECORD NUMBER AND THE TAPE CONSIDERED DEFECTIVE.

BAD SPOTS REPORTS

IF THE PRINTING OF RECOVERABLE ERRORS IS ENABLED, THE BAD SPOTS ON TAPE ARE IDENTIFIED AS THEY ARE DETECTED. SINCE THE BAD RECORDS ARE ERASED UNTIL RECOVERED, THE BAD SPOT ACTUALLY PRECEDES THE RECORD NUMBER THAT IDENTIFIES IT. THE NUMBER OF REPEATS AND RETRIES ATTEMPTED IS PRINTED, FROM WHICH THE LENGTH OF ERASE GAPS CAN BE DETERMINED: APPROXIMATELY 3 INCHES PER RETRY.

THE STATISTICAL REPORT PRINTED AT THE END OF TEST 2 OR UPON A "PRINT" REQUEST, CONTAINS A SUMMARY OF THE BAD SPOTS LOGGED ON THE CURRENT PASS OF TAPE. IN THAT REPORT, ALL COUNTS ARE CUMULATIVE FROM PASS TO PASS, EXCEPT FOR THE NUMBER OF BAD SPOTS: IT RELATES TO A "BOT TO EOT TAPE PASS" ONLY. FOR THIS PURPOSE, A "TAPE PASS" IS A WRITE PASS FROM BOT TO EOT, OR FROM BOT TO WHERE THE DIAGNOSTIC IS HALTED BEFORE REACHING EOT. DON'T CONFUSE THIS WITH A PASS BY THE SUPERVISOR WHICH IS DEFINED AS A RUN THROUGH A ON ALL UNITS SELECTED. THOSE PASSES ARE IDENTIFIED AS "PASS" AND "EOP".

THE NUMBER OF WRITE RETRIES, CUMULATIVE FROM PASS TO PASS, IS A GLOBAL COUNT OF HOW MANY TIMES THE GROUP OF 4 RETRIES HAS BEEN CALLED.

THE NUMBER OF WRITE RECOVERABLE ERRORS EXCLUDES BAD TAPE SPOTS

341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397

AND REFLECTS THE SPECIFICATIONS OF THE HARDWARE UNDER TEST.

TO CLEAR CUMULATIVE COUNTS, ANSWER 'Y' TO: CLEAR COUNTERS (L) Y ?.
THE BAD TAPE SPOTS COUNT IS THEN CLEARED WHEN WRITING THE TAPE FROM BOT.

IF TEST 2 IS HALTED, THEN RESTARTED OR CONTINUED, THE RECORD COUNT IS RESET TO ZERO AND THE BAD SPOT ID SHALL FOLLOW THAT RESET COUNT.

SINCE ALL WRITTEN RECORDS ARE KNOWN GOOD, THE READ ERRORS CAN BE ATTRIBUTED TO TRANSIENT NOISE, TRANSIENT ELECTRICAL MALFUNCTIONS, OR CONTAMINANTS ON TAPE AS OPPOSED TO TAPE DEFECTS.

THE SAME RECORDS MUST BE WRITTEN FROM TAPE PASS TO TAPE PASS FOR THE BAD SPOTS ID TO REMAIN CONSISTENT IN THOSE TAPE PASSES.

EXAMPLE OF A PRINT OUT FOR A BAD SPOT ON TAPE:

CVTSE SFT ERR 00009 ON UNIT 00 TST 002 SUB 000 PC: 012100

RECOVERABLE ERROR

WRT CMD FAILED - UNIT 0 PASS: 1 RECORD: 6

PREVIOUS CMD WAS WRT

CMDPKT	TSBA	RFC	TSSR	TCC
100205	002406	000000	100210	4

026600

000000

003107

XST0	XST1	XST2	XST3	XST4
000350	000002	100400	000000	000000

SUSPECT BAD SPOT AFTER 1 RETRY, 2 REPEAT

SUSPECT BAD SPOT AFTER 2 RETRY, 1 REPEAT

SUSPECT BAD SPOT AFTER 3 RETRY, 1 REPEAT

SUSPECT BAD SPOT AFTER 4 RETRY, 3 REPEAT

RETRY FAILED ON BAD SPOT...ERASED!

SUSPECT BAD SPOT AFTER 1 RETRY, 1 REPEAT

SUSPECT BAD SPOT AFTER 2 RETRY, 1 REPEAT

CVTSE SFT ERR 00009 ON UNIT 00 TST 002 SUB 000 PC: 012100

RECOVERABLE ERROR

WRT CMD FAILED - UNIT 0 PASS: 1 RECORD:10210

PREVIOUS CMD WAS WRT

CMDPKT	TSBA	RFC	TSSR	TCC
100205	002406	000000	100210	4

026600

000000

004000

XST0	XST1	XST2	XST3	XST4
000350	000002	100010	000000	000000

RECOVERED ON RETRY # 1

^C

DR>PRI

UNIT 0 PASS: 1 RECORD:10210

BYTES WRITTEN 0,272,279,691

BYTES READ REV 0,301,123,654

BYTES READ REV 0,301,120,381

WRT RDR RDF

398 RECOVERABLE ERRORS 1 0 0
 399 UNRECOVERABLE ERRORS 0 0 0
 400 WRITE RETRIES 3

2 BAD SPOTS THIS TAPE PASS PRECEDING RECORD #:

401
 402
 403
 404 SPEC COND ⁵ HARD ⁶ FATAL COMPARE
 405 2 0 0 0
 406 DR>

407
 408 THIS EXAMPLE SHOWS:

409 RECORD 6 RECOVERED ON 2ND RETRY GROUP
 410 THE 2 BAD SPOTS RESIDE IN A 18 INCH ERASE GAP BETWEEN RECORDS 5 AND 6
 411 RECORD 10210 RECOVERED ON 1ST RETRY OF 4 GOOD REPEATS
 412 3 WRITE GROUP RETRIES ATTEMPTED, RESULTING IN:
 413 1 RECOVERABLE WRT ERR FROM RECORD 10210
 414 2 BAD SPOTS BETWEEN RECORDS 5 AND 6
 415
 416
 417

418 1.1.4.3.2 OPERATIONAL WRITE-ERROR-RECOVERY ALGORITHM

419
 420 WHEN THIS ALGORITHM IS SELECTED, THE TSV05 WRITE RETRY COMMAND
 421 IS ISSUED UP TO 16 TIMES OR UNTIL RECORD IS RECOVERED, ON
 422 A WRITE RECOVERABLE ERROR. THE WRITE RETRY COMMAND CONSISTS
 423 OF A SPACE REVERSE OVER THE BAD RECORD, THEN AN ERASE OF 3 INCHES
 424 OF TAPE AND REWRITE OF THE RECORD. THAT COMPOSITE COMMAND
 425 DOES NOT ALLOW THE DETECTION OF BAD SPOTS ON TAPE.
 426 THEREFORE NO BAD TAPE SPOTS STATUS IS PRINTED.
 427

428 IF RECORD CANNOT BE RECOVERED AFTER 16 WRITE RETRY COMMANDS,
 429 A RETRY LIMIT EXCEEDED IS FLAGGED AND UNIT IS DROPPED.
 430

431 1.1.4.4 DIAGNOSTIC TIMING ADJUSTMENT

432
 433 A NUMBER OF SUPERVISOR TIMING DELAY MACROS, KNOWN AS WATCH DOG
 434 DELAYS, ARE CALLED BY THE DIAGNOSTIC TO WAIT FOR VARIOUS COMMANDS
 435 COMPLETION. THESE DELAYS ARE NOT CALIBRATED AND SIMPLY EXPANDS
 436 INTO AN INLINE NESTED LOOP PAIR. THE COUNT FOR THE OUTER LOOP
 437 COMES FROM THE VARIABLE ARGUMENT SUPPLIED BY THE DELAY CALLS.
 438 THE COUNT FOR THE INNER LOOP COMES FROM THE FIXED "HEADER"
 439 ELEMENT "LSDLY".
 440 AS THE DIAGNOSTIC IS RUN ON DIFFERENT CPU'S, THESE DELAYS WILL
 441 VARY IN LENGTH WITH MEMORY SPEED.
 442

443
 444 IF TIME-OUT OCCURS WHEN NO APPARENT MALFUNCTIONS IN THE TAPE
 445 UNIT IS EVIDENT, ALL TIMINGS OF THE DIAGNOSTIC MAY BE ADJUSTED
 446 TO MATCH MEMORY SPEED AND NOT RESULT IN TIME-OUTS, BY PATCHING
 447 THAT FIXED DELAY ELEMENT "LSDLY".
 448

449 A PRESET COUNT OF 500 RESIDES AT "LSDLY" IN LOCATION 2116 OF THE
 450 "HEADER" SECTION.
 451

452 1.2 SYSTEM REQUIREMENTS

453 -----
 454

455
456
457
458
459
460
461
462
463
464
465
466
467
468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511

1.2.1 HARDWARE REQUIREMENTS

PDP-11/23 PROCESSOR WITH 32K OR MORE OF MEMORY
CONSOLE DEVICE (VT52,LA36,ETC.)
PROGRAM LOAD DEVICE
TSV05/TS05

1.2.2 SOFTWARE REQUIREMENTS

DIAGNOSTIC SUPERVISOR

1.3 RELATED DOCUMENTS AND STANDARDS

DIGITAL EQUIPMENT CORPORATION DOCUMENTS:

1. CIQPM00 XDP+ PROGRAMMER'S MANUAL; DOCUMENT NUMBER AC-S296A-AC
DATE: 14 JULY 1980.
2. TSV05 TRANSPORT SUBSYSTEM USER'S GUIDE; DOCUMENT NUMBER EK-TSV05-UG-001
DATE: AUGUST 1982
3. TSV05 TRANSPORT SUBSYSTEM TECHNICAL MANUAL; DOCUMENT NUMBER EK-TSV05-TM-001
DATE: AUGUST 1982
4. TSV05 TRANSPORT SUBSYSTEM INSTALLATION MANUAL; DOCUMENT NUMBER EK-TSV05-IN-001
DATE: AUGUST 1982

1.4 DIAGNOSTIC HIERARCHY PREREQUISITES

ORDER OF MOST CPU DIAGNOSTIC USAGE:

- 1) CONTROL LOGIC PROGRAM - ALL TESTS.
(VTSA,VTSB,VTSC,VTSD)
- 2) DATA RELIABILITY PROGRAM:
 - A) BASIC FUNCTION TEST.
 - B) DATA RELIABILITY TEST.

1.5 ASSUMPTIONS

THE HARDWARE OTHER THAN THE SUBSYSTEM BEING TESTED IS ASSUMED TO WORK PROPERLY. FALSE ERRORS MAY BE REPORTED IF THE PROCESSOR, MEMORY, ETC., DO NOT FUNCTION PROPERLY.

512
513
514

VTSA,VTSB,VTSC, AND VTSD HAVE ALL SUCESSFULLY RUN WITHOUT ERRORS.

2.0 OPERATING INSTRUCTIONS

THIS SECTION CONTAINS A BRIEF DESCRIPTION OF THE RUNTIME SERVICES.
FOR DETAILED INFORMATION, REFER TO THE XXDP+ USER'S MANUAL (CHQUS).

COMMANDS

THERE ARE ELEVEN LEGAL COMMANDS FOR THE DIAGNOSTIC RUNTIME SERVICES
(SUPERVISOR). THIS SECTION LISTS THE COMMANDS AND GIVES A VERY
BRIEF DESCRIPTION OF THEM. THE XXDP+ USER'S MANUAL HAS MORE DETAILS.

COMMAND	EFFECT
START	START THE DIAGNOSTIC FROM AN INITIAL STATE
RESTART	START THE DIAGNOSTIC WITHOUT INITIALIZING
CONTINUE	CONTINUE AT TEST THAT WAS INTERRUPTED (AFTER ^C)
PROCEED	CONTINUE FROM AN ERROR HALT
EXIT	RETURN TO XXDP+ MONITOR (XXDP+ OPERATION ONLY!)
ADD	ACTIVATE A UNIT FOR TESTING (ALL UNITS ARE CONSIDERED TO BE ACTIVE AT START TIME)
DROP	DEACTIVATE A UNIT
PRINT	PRINT STATISTICAL INFORMATION (IF IMPLEMENTED BY THE DIAGNOSTIC)
DISPLAY	TYPE A LIST OF ALL DEVICE INFORMATION
FLAGS	TYPE THE STATE OF ALL FLAGS
ZFLAGS	CLEAR ALL FLAGS

A COMMAND CAN BE RECOGNIZED BY THE FIRST THREE CHARACTERS. SO
YOU MAY, FOR EXAMPLE, TYPE "STA" INSTEAD OF "START".

OPERATOR COMMANDS

THE TSV05 DIAGNOSTIC IS A PDP-11/23 DIAGNOSTIC SUPERVISOR COMPATIBLE
PROGRAM. ALL LOADING AND RUNTIME INSTRUCTIONS CAN BE REFERENCED IN THE
PDP-11 PROGRAMMER'S MANUAL "CIQMAO XXDP+ PROGRAMMERS MANUAL, NUMBER
AC-S296A-AC. THE USER ENTRY IS IN QUOTES.

BOOT THE DIAGNOSTIC XXDP MEDIA

```
CHMDLBO XXDP+ DL MONITOR 28K
BOOTED VIA UNIT 0
ENTER DATE (DD-MMM-YR): " ENTER DATE OR JUST <CR> "
RESTART ADDRESS: 153726
50 HZ? N " <CR> "
LSI? N " Y<CR> "
THIS IS XXDP+. TYPE 'H' OR 'H/L' FOR DETAILS
R VTSEAO
VTSEA0BINDRS LOADED
DIAG. RUN-TIME SERVICES REV D. APR 79
```

516
517
518
519
520
521
522
523
524
525
526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568
569
570
571
572

573
574
575
576
577
578
579
580
581
582
583
584
585
586
587
588
589
590
591
592
593
594
595
596
597
598
599
600
601
602
603
604
605
606
607
608
609
610
611
612
613
614
615
616
617
618
619
620
621
622
623
624
625
626
627
628
629

CVTSE-A-0
TSV05 DATA RELIABILITY
UNIT IS TSV05

SWITCHES

THERE ARE SEVERAL SWITCHES WHICH ARE USED TO MODIFY SUPERVISOR OPERATION. THESE SWITCHES ARE APPENDED TO THE LEGAL COMMANDS. ALL OF THE LEGAL SWITCHES ARE TABULATED BELOW WITH A BRIEF DESCRIPTION OF EACH. IN THE DESCRIPTIONS BELOW, A DECIMAL NUMBER IS DESIGNATED BY "DDDDD".

SWITCH	EFFECT
-----	-----
/TESTS:LIST	EXECUTE ONLY THOSE TESTS SPECIFIED IN THE LIST. LIST IS A STRING OF TEST NUMBERS, FOR EXAMPLE - /TESTS:1:5:7-10. THIS LIST WILL CAUSE TESTS 1,5,7,8,9,10 TO BE RUN. ALL OTHER TESTS WILL NOT BE RUN.
/PASS:DDDDD	EXECUTE DDDDD PASSES (DDDDD = 1 TO 64000)
/FLAGS:FLGS	SET SPECIFIED FLAGS.
/EOP:DDDDD	REPORT END OF PASS MESSAGE AFTER EVERY DDDDD PASSES ONLY. (DDDDD = 1 TO 64000)
/UNITS:LIST	TEST/ADD/DROP ONLY THOSE UNITS SPECIFIED IN THE LIST. LIST EXAMPLE - /UNITS:0:5:10-12 USE UNITS 0,5,10,11,12 (UNIT NUMBERS = 0-63)

EXAMPLE OF SWITCH USAGE:

START/TESTS:1-5/PASS:1000/EOP:100

THE EFFECT OF THIS COMMAND WILL BE: 1) TESTS 1 THROUGH 5 WILL BE EXECUTED, 2) ALL UNITS WILL TESTED 1000 TIMES AND 3) THE END OF PASS MESSAGES WILL BE PRINTED AFTER EACH 100 PASSES ONLY. A SWITCH CAN BE RECOGNIZED BY THE FIRST THREE CHARACTERS. YOU MAY, FOR EXAMPLE, TYPE "/TES:1-5" INSTEAD OF "/TESTS:1-5".

BELOW IS A TABLE THAT SPECIFIES WHICH SWITCHES CAN BE USED BY EACH COMMAND.

	TESTS	PASS	FLAGS	EOP	UNITS
	-----	-----	-----	-----	-----
START	X	X	X	X	X
RESTART	X	X	X	X	X
CONTINUE		X	X	X	
PROCEED			X		
DROP					X
ADD					X
PRINT					
DISPLAY					X
FLAGS					
ZFLAG					
EXIT					

630
631
632
633
634
635
636
637
638
639
640
641
642
643
644
645
646
647
648
649
650
651
652
653
654
655
656
657
658
659
660
661
662
663
664
665
666
667
668
669
670
671
672
673
674
675
676
677
678
679
680
681
682
683
684
685
686

FLAGS

FLAGS ARE USED TO SET UP CERTAIN OPERATIONAL PARAMETERS SUCH AS LOOPING ON ERROR. ALL FLAGS ARE CLEARED AT STARTUP AND REMAIN CLEARED UNTIL EXPLICITLY SET USING THE FLAGS SWITCH. FLAGS ARE ALSO CLEARED AFTER A START COMMAND UNLESS SET USING THE FLAG SWITCH. THE ZFLAGS COMMAND MAY ALSO BE USED TO CLEAR ALL FLAGS. WITH THE EXCEPTION OF THE START AND ZFLAGS COMMANDS, NO COMMANDS AFFECT THE STATE OF THE FLAGS; THEY REMAIN SET OR CLEARED AS SPECIFIED BY THE LAST FLAG SWITCH.

FLAG	EFFECT
----	-----
HOE	HALT ON ERROR - CONTROL IS RETURNED TO RUNTIME SERVICES COMMAND MODE
LOE	LOOP ON ERROR
IER*	INHIBIT ALL ERROR REPORTS
IBR*	INHIBIT ALL ERROR REPORTS EXCEPT FIRST LEVEL (FIRST LEVEL CONTAINS ERROR TYPE, NUMBER, PC, TEST AND UNIT)
IXE*	INHIBIT EXTENDED ERROR REPORTS (THOSE CALLED BY PRINTX MACRO'S)
PRI	DIRECT MESSAGES TO LINE PRINTER
PNT	PRINT TEST NUMBER AS TEST EXECUTES
BOE	'BELL' ON ERROR
UAM	UNATTENDED MODE (NO MANUAL INTERVENTION)
ISR	INHIBIT STATISTICAL REPORTS (DOES NOT APPLY TO DIAGNOSTICS WHICH DO NOT SUPPORT STATISTICAL REPORTING)
IDR	INHIBIT PROGRAM DROPPING OF UNITS
ADR	EXECUTE AUTODROP CODE
LOT	LOOP ON TEST

*ERROR MESSAGES ARE DESCRIBED IN SECTION 3.1

SEE THE XXDP+ USER'S MANUAL FOR MORE DETAILS ON FLAGS. YOU MAY SPECIFY MORE THAN ONE FLAG WITH THE FLAG SWITCH. FOR EXAMPLE, TO CAUSE THE PROGRAM TO LOOP ON ERROR, INHIBIT ERROR REPORTS AND TYPE A 'BELL' ON ERROR, YOU MAY USE THE FOLLOWING STRING:

```
/FLAGS:LOE:IER:BOE
```

2.1 HARDWARE PARAMETERS

ON A 'N' RESPONSE TO 'CHANGE HW?', THE DIAG SHALL RUN ASSUMING ONE UNIT AT TSDB = 172520 WITH A VECTOR = 224 AND DRIVE=0.

ON A 'Y' RESPONSE TO 'CHANGE HW?' QUESTION, THEN THE FOLLOWING QUESTIONS WILL BE ASKED ON A START COMMAND. THE VALUE LOCATED TO THE LEFT OF THE QUESTION MARK IS THE DEFAULT VALUE THAT WILL BE TAKEN ON A CARRIAGE RETURN RESPONSE.

687
688
689
690
691
692
693
694
695
696
697
698
699
700
701
702
703
704
705
706
707
708
709
710
711
712
713
714
715
716
717
718
719
720
721
722
723
724
725
726
727
728
729
730
731
732
733
734
735
736
737
738
739
740
741
742
743

TSDB ADDRESS (0) 172520 ?

VECTOR (0) 224 ?

SELECT DRIVE 0-1 (0) ?

THE VALIDITY OF THESE PARAMETERS CAN BE CHECKED BEFORE RUNNING THE TESTS BY SETTING THE FLAG "ADR" ON A STA, RES OR CON COMMAND. THE SO CALLED AUTO DROP CODE SHALL THEN BE EXECUTED AFTER THE INIT CODE AND BEFORE THE HARDWARE TESTS ARE RUN. THAT CODE FIRST TESTS THE ADDRESS OF THE TSDB(S). IF NO RESPONSE, IT DROPS THE UNIT(S) IMMEDIATELY WITH THE FOLLOWING MESSAGE:

BUS TRAP AT XXXXXX (XXXXXX = TSDB AD)
INTERFACE BAD OR NOT SET TO ABOVE ADDRESS.

ON A RESPONSE FROM THE INTERFACE, THE UNITS THAT ARE NOT READY OR NOT ON-LINE ARE DROPPED IMMEDIATELY. THE HARDWARE TESTS SHALL THEN BE RUN ON RESPONDING UNITS.

IF THE "ADR" FLAG IS NOT SET, THE READY AND OFF-LINE STATUS OF THE DRIVE IS CHECKED. A MESSAGE SHALL BE PRINTED EVERY SO OFTEN TO WARN THE OPERATOR OF DRIVES BEING NOT READY OR OFF-LINE. THESE DRIVES SHALL BE DROPPED AFTER A REASONABLE AMOUNT OF TIME.

2.2 SOFTWARE PARAMETERS

THE FOLLOWING QUESTIONS ARE ASKED WHEN ONE ANSWERS YES TO THE CHANGE SOFTWARE QUESTION ON A START, RESTART, OR CONTINUE. THEY ALLOW FLEXABILITY IN THE WAY THE PROGRAM BEHAVES.

CLEAR COUNTERS (L) Y ?

RESET RANDOM VARIABLES (L) N ?

PRINT RECOVERABLE ERRORS (L) N ?

HALT AFTER EACH CMD (L) N ?

INHIBIT RECOVERY (L) N ?

BAD TAPE SPOT DETECTION (L) Y ?

DISABLE INTERRUPTS (L) N ?

INHIBIT RFC ERROR REPORTS (L) N ?

CHANGE CMD SEQUENCE (L) N ? (SEE NOTE1:)

DEFAULT SWITCH SETTINGS (L) Y ?

100IPS (L) N ?

WRITE BUFFERING (L) N ?

744
745
746
747
748
749
750
751
752
753
754
755
756
757
758
759
760
761
762
763
764
765
766
767
768
769
770
771
772
773
774
775
776
777
778
779
780
781
782
783
784
785
786
787
788
789
790
791
792
793
794
795
796
797
798
799
800

READ BUFFERING (L) N ?

ANSWERING NO TO THE DEFAULT SWITCH QUESTION WILL CAUSE THE 100 IPS QUESTION TO BE ASKED.

ANSWERING YES TO THE 100 IPS QUESTION WILL INHIBIT THE LAST TWO QUESTIONS.

ANSWERING NO TO THE 100 IPS QUESTION WILL CAUSE THE WRITE BUFFERING QUESTION TO BE ASKED.

ANSWERING YES TO THE WRITE BUFFERING QUESTION WILL INHIBIT THE LAST QUESTION.

ANSWERING NO TO THE WRITE BUFFERING QUESTION WILL CAUSE THE READ BUFFERING QUESTION TO BE ASKED.

NOTE1: THIS QUESTION SHOULD BE ANSWERED (N) UNLESS AN OPERATOR SELECTED SEQUENCE IS TO BE EXECUTED. IF THIS QUESTION WAS ANSWERED Y, THE FOLLOWING QUESTIONS MUST BE ANSWERED OR DEFAULTED WITH A <CR> ONLY:

CHARACTERISTICS CODE (O) 40 ?	(0,20,40,200)	(OCTAL)
CMD/2 (D) 13 ?	(1-27)	(DECIMAL)
BRF COUNT (D) 1 ?	(1-2K)	(DECIMAL)
# OF OPERATIONS (D) 1 ?	(1-32K)	(DECIMAL)
PATTERN (D) 7 ?	(0-8)	(DECIMAL)
CMD/3 (D) 4 ?	(1-27)	(DECIMAL)
BRF COUNT (D) 2048 ?	(1-2K)	(DECIMAL)
# OF OPERATIONS (D) 32000 ?	(1-32K)	(DECIMAL)
PATTERN (D) 7 ?	(0-8)	(DECIMAL)
CMD/4 (D) 3 ?	(1-27)	(DECIMAL)
BRF COUNT (D) 2048 ?	(1-2K)	(DECIMAL)
# OF OPERATIONS (D) 32000 ?	(1-32K)	(DECIMAL)
PATTERN (D) 7 ?	(0-8)	(DECIMAL)
CMD/5 (D) 2 ?	(1-27)	(DECIMAL)
BRF COUNT (D) 2048 ?	(1-2K)	(DECIMAL)
# OF OPERATIONS (D) 32000 ?	(1-32K)	(DECIMAL)
PATTERN (D) 7 ?	(0-8)	(DECIMAL)
CMD/6 (D) 13 ?	(1-27)	(DECIMAL)
BRF COUNT (D) 1 ?	(1-2K)	(DECIMAL)
# OF OPERATIONS (D) 1 ?	(1-32K)	(DECIMAL)
PATTERN (D) 7 ?	(0-8)	(DECIMAL)
CMD/7 (D) 27 ?	(1-27)	(DECIMAL)
BRF COUNT (D) 2048 ?	(1-2K)	(DECIMAL)
# OF OPERATIONS (D) 32000 ?	(1-32K)	(DECIMAL)
PATTERN (D) 7 ?	(0-8)	(DECIMAL)
CMD/8 (D) 27 ?	(1-27)	(DECIMAL)
BRF COUNT (D) 2048 ?	(1-2K)	(DECIMAL)
# OF OPERATIONS (D) 32000 ?	(1-32K)	(DECIMAL)
PATTERN (D) 7 ?	(0-8)	(DECIMAL)

NOTE: THE PROGRAM AUTOMATICALLY INSERTS A CHARACTERISTIC CODE OF 40 AS THE FIRST COMMAND IN THE SEQUENCE TABLE. IF A DIFFERENT CHARACTERISTIC IS DESIRED, THE OPERATOR SHOULD

801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837
838
839
840
841
842
843
844
845
846
847
848
849
850
851
852
853
854
855
856
857

ENTER THAT CHARACTERISTIC CODE. A TOTAL OF 7 COMMANDS MAY BE ENTERED IN ADDITION TO THE SET CHARACTERISTICS COMMAND. IF THE OPERATOR WISHES TO USE LESS THAN 7 COMMANDS, AN END COMMAND MUST BE ENTERED AND THEN A CONTROL Z (^Z) CAN BE ENTERED TO TERMINATE SOFTWARE DIALOGUE.

2.2.1 COMMAND LIST FOR USE IN SOFTWARE DIALOGUE.

CODE	COMMAND	DESCRIPTION
1 =	DRI	DRIVE INITIATE.
2 =	RDF	READ FORWARD.
3 =	RDR	READ REVERSE.
4 =	WRT	WRITE.
5 =	WTV	WRITE/VERIFY. IE. WRITE N RECORDS; READ REVERSE AND CHECK N RECORDS OF DATA; READ FORWARD AND CHECK N RECORDS.
6 =	SRF	SPACE RECORDS FORWARD.
7 =	SRR	SPACE RECORDS REVERSE.
8 =	RNR	READ NEXT REVERSE, IE. SPACE FWD, READ REV.
9 =	RNF	READ NEXT FORWARD, IE. READ FWD, SPACE REV.
10 =	RPF	READ PREVIOUS FWD, IE. SPACE REV, READ FWD.
11 =	RPR	READ PREVIOUS REV, IE. READ REV, SPACE FWD.
12 =	WRR	WRITE RETRY.
13 =	RWD	REWIND.
14 =	MBR	MESSAGE BUFFER RELEASE.
15 =	WTM	WRITE TAPE MARK.
16 =	WTR	WRITE TAPE MARK RETRY.
17 =	SFF	SPACE FILES FORWARD.
18 =	SFR	SPACE FILES REVERSE.
19 =	GES	GET EXTENDED STATUS.
20 =	ERS	ERASE 3 INCHES OF TAPE.
21 =	UNL	UNLOAD.
22 =	CLN	CLEAN TAPE
23 =	SCH	SET DEVICE CHARACTERISTIC. WHERE BRF=200, 40, 20, 0. 200 = ENABLE SKIP TAPE MARKS STOP (STOP AT LOGICAL EOT) 40 = ENABLE ATTENTION INTERRUPTS. 20 = ENABLE MESSAGE BUFFER RELEASE INTERRUPTS. SEE TSV05/TS05 PROGRAMMING SPECIFICATION FOR DESCRIPTION.
25 =	JMP	JUMP TO THE NTH COMMAND IN THE COMMAND SEQUENCE TABLE, WHERE N IS DEFINED IN THE BRF FIELD. THE NUMBER OF JUMPS IS ENTERED IN THE # OF OPERATIONS FIELD
26 =	DLY	DELAY 'N' MILLISECONDS WHERE N IS DEFINED IN THE # OF OPERATIONS.
27 =	END	END OF COMMAND SEQUENCE.

2.2.2 DATA PATTERN LIST FOR USE IN SOFTWARE DIALOGUE.

PATTERN #	DESCRIPTION.
0	INCREMENTING PATTERN. 0 - 377.
1	ALL '1'S PATTERN.
2	ALL '0'S PATTERN.
3	'1' BIT WALKING FROM R TO L IN A FIELD OF '0'S.
4	'0' BIT WALKING FROM R TO L IF A FIELD OF '1'S.
5	ALTERNATING '1' AND '0' BITS WITH ALTERNATE BYTES COMPLIMENTED.
6	ALTERNATING BYTES OF 000 AND 377.

858
859

7
8

RANDOM DATA PATTERN.
NO PATTERN GENERATION.

2.3 EXAMPLES OF SOFTWARE DIALOGUE

```

CHANGE HW (L) ?
#UNITS (D) ?
TSDB ADDRESS (O) 172520 ?
VECTOR (O) 224 ?
SELECT DRIVE 0-1 (O) ?

```

IN ADDITION, ON A START, RESTART OR CONTINUE THE SUPERVISOR REQUESTS CHANGES TO THE SOFTWARE OPERATING PARAMETERS, AS FOLLOWS:

```
CHANGE SW (L) ?
```

2.3.1 BASIC FUNCTION AND DATA RELIABILITY WITH ALL ERROR REPORTING ENABLED

- A) RECEIVE PROMPT (DR>)
- B) ENTER STA/TE:1-2<CR>
- C) ANSWER HARDWARE QUESTIONS.
- D) PROCEED WITH THE FOLLOWING DIALOGUE:

```

CHANGE SW (L) ?                Y<CR>
CLEAR COUNTERS (L) N ?        Y<CR>
RESET RANDOM VARIABLES (L) N ? <CR>
PRINT RECOVERABLE ERRORS (L) N ? Y<CR>
HALT AFTER EACH CMD (L) N ?   <CR>
INHIBIT RECOVERY (L) N ?     <CR>
BAD TAPE SPOT DETECTION (L) Y ? <CR>
DISABLE INTERRUPTS (L) N ?   <CR>
INHIBIT RFC ERROR REPORT (L) N ? <CR>
CHANGE CMD SEQUENCE (L) N ?  <CR>
DEFAULT SWITCH SETTINGS (L) Y ? <CR>

```

2.3.2 TO SET UP A SCOPE LOOP FOR A FAILURE IN BASIC FUNCTIONS.

- A) RECEIVE PROMPT (DR>)
- B) ENTER STA/TE:1/FLA:LOE:IER:ISR:IDU<CR>
- C) ANSWER HARDWARE QUESTIONS.
- D) PROCEED WITH THE FOLLOWING DIALOGUE:

```

CHANGE SW (L) ?                Y<CR>
CLEAR COUNTERS (L) N ?        Y<CR>
RESET RANDOM VARIABLES (L) N ? N<CR>
PRINT RECOVERABLE ERRORS (L) N ? N<CR>
HALT AFTER EACH CMD (L) N ?   N<CR>
INHIBIT RECOVERY (L) N ?     N<CR>
BAD TAPE SPOT DETECTION (L) Y ? N<CR>
DISABLE INTERRUPTS (L) N ?   N<CR>

```

861
862
863
864
865
866
867
868
869
870
871
872
873
874
875
876
877
878
879
880
881
882
883
884
885
886
887
888
889
890
891
892
893
894
895
896
897
898
899
900
901
902
903
904
905
906
907
908
909
910
911
912
913
914
915
916
917

918
919
920
921
922
923
924
925
926
927
928
929
930
931
932
933
934
935
936
937
938
939
940
941
942
943
944
945
946
947
948
949
950
951
952
953
954
955
956
957
958
959
960
961
962
963
964
965
966
967
968
969
970
971
972
973
974

INHIBIT RFC ERROR REPORT (L) N ? Y<CR>
CHANGE CMD SEQUENCE (L) N ? N<CR>
DEFAULT SWITCH SETTINGS (L) Y ? <CR>

2.3.3 TO SET UP A SCOPE LOOP FOR A FAILURE IN DATA RELIABILITY

- A) RECEIVE PROMPT (DR>>
- B) ENTER STA/TES:5/FLA:IER:ISR:IDU/EOP:1000<CR>
- C) ANSWER HARDWARE QUESTIONS.
- D) PROCEED WITH THE FOLLOWING DIALOGUE:

```

- CHANGE SW (L) ? Y<CR>
  CLEAR COUNTERS (L) N ? Y<CR>
  RESET RANDOM VARIABLES (L) N ? N<CR>
  PRINT RECOVERABLE ERRORS (L) N ? N<CR>
  HALT AFTER EACH CMD (L) N ? N<CR>
  INHIBIT RECOVERY (L) N ? N<CR>
  BAD TAPE SPOT DETECTION (L) Y ? N<CR>
  DISABLE INTERRUPTS (L) N ? Y<CR>
  INHIBIT RFC ERROR REPORT (L) N ? Y<CR>
  CHANGE CMD SEQUENCE (L) N ? Y<CR>
  CHARACTERISTICS CODE (O) 40 ? 40<CR>
  CMD/2 (D) 5 ? 13<CR> (REWIND)
  BRF COUNT (D) 2048 ? 1<CR>
  # OF OPERATIONS (D) 10 ? 1<CR>
  PATTERN (D) 7 ? 1<CR>
  CMD/3 (D) 5 ? 4<CR> (WRITE)
  BRF (D) 2048 ? 1000<CR>
  # OF OPERATIONS (D) 10 ? 10000<CR>
  PATTERN (D) 7 ? 1<CR>
  CMD/4 (D) 5 ? 27<CR> (END)
  BRF (D) 2048 ? <^Z>
    
```

2.4 EXECUTION TIMES

2.4.1 SYSTEM CONFIGURATION

PDP11/23
MOS MEMORY
LA36
TSV05/TS05

2.4.2 TEST EXECUTION TIMES (2400 FT. TAPE)

TEST 1 - BASIC FUNCTIONS - 30 SECONDS PER PASS.
TEST 2 - DATA RELIABILITY - 45 MINUTES PER PASS.
TEST 3 - WRITE COMPATABILITY - 20 MINUTES PER PASS.
TEST 4 - READ COMPATABILITY - 20 MINUTES PER PASS.
TEST 5 - RANDOM/OPERATOR SELECTED SEQUENCE -20 MINUTES PER PASS.

NOTE: ALL EXECUTION TIMES ARE SHOWN FOR ONE DRIVE OEPRATION.

975
976
977
978
979
980
981
982
983
984
985
986
987
988
989
990
991
992
993
994
995
996
997
998
999
1000
1001
1002
1003
1004
1005
1006
1007
1008
1009
1010
1011
1012
1013
1014
1015
1016
1017
1018
1019
1020
1021
1022
1023
1024
1025
1026
1027
1028
1029
1030
1031

3.0 ERROR INFORMATION

3.1 ERROR REPORTING

ALL ERROR REPORTS EXCEPT FOR ERRORS #1 AND #17 INCLUDE A DUMP OF THE FOLLOWING INFORMATION:

ERROR #, TEST #, SUBTEST #, PROGRAM COUNTER, UNIT #, COMMAND, PREVIOUS COMMAND, PASS COUNT, # OF RECORDS FROM BOT, RECORD READ COUNT, THE COMMAND PACKET, TSSR, TCC, TSBA, RFC, AND THE EXTENDED STATUS REGISTERS (SEE 2.3.14.1 FOR LIST OF COMMANDS).

STANDARD ERROR REPORT FORMAT:

```
CVTSE SFT ERR XXXXX TST XXX SUB XXX PC: XXXXXX
(ASCII ERROR MESSAGE)
XXX CMD FAILED - UNIT X PASS: XXXXX RECORD: XXXXX
PREVIOUS CMD WAS XXX * RECORD READ: XXXXX *
CMDPKT TSBA RFC TSSR TCC
XXXXXX XXXXXX XXXXXX XXXXXX X
XXXXXX
XXXXXX
XXXXXX
XST0 XST1 XST2 XST3 XST4
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
```

* CAUTION *

INTERPRET THAT "RECORD READ" COUNT WITH CAUTION. IF VERY DIFFERENT FROM RECORD COUNT TRACKED BY THE DIAGNOSTIC, TAPE POSITION IS NOT NECESSARELY LOST. ERRORS IN READING THAT RECORD MIGHT HAVE CAUSED RECORD COUNT TO BE ERRONEOUSLY READ FROM TAPE. IN TEST 2, IF DIAGNOSTIC IS RESTARTED OR CONTINUED, RECORD COUNT IS RESET TO ZERO ALTHOUGH THE TAPE IS NOT REWOUND. THIS IS NECESSARY BECAUSE THERE IS NO ACCURATE WAY TO DETERMINE ON WHAT RECORD COUNT OF WHICH UNIT THE DIAGNOSTIC WAS HALTED BEFORE RESTARTING OR CONTINUING. IT IS SUGGESTED THAT A "PRINT" BE REQUESTED WHEN HALTING DIAG TO GET A PRINT OF THE RECORD COUNT WHEN HALTED.

EXAMPLE OF AN ERROR REPORT:

```
CVTSE SFT ERR 00009 TST 002 SUB 000 PC: 010606
RECOVERABLE ERROR
WRT CMD FAILED - UNIT 2 PASS: 2 RECORD: 254
PREVIOUS CMD WAS WRT
CMDPKT TSBA RFC TSSR TCC
100005 002324 000000 100210 4
051766
000000
```

1032
1033
1034
1035
1036
1037
1038
1039
1040
1041
1042
1043
1044
1045
1046
1047
1048
1049
1050
1051
1052
1053
1054
1055
1056
1057
1058
1059
1060
1061
1062
1063
1064
1065
1066
1067
1068
1069
1070
1071
1072
1073
1074
1075
1076
1077
1078
1079
1080
1081
1082
1083
1084
1085
1086
1087
1088

000371
XST0 XST1 XST2 XST3 XST4
000350 000002 100004 000000 040055

3.1.1 ERROR #1 - COMMAND PACKET ADDRESS NOT ON A MODULO 4 BOUNDARY:

IF THIS ERROR IS REPORTED, THE PROGRAM DID NOT LOAD PROPERLY. THIS IS A SYSTEM FATAL ERROR AND THE PROGRAM MUST BE RELOADED TO CORRECT IT.

3.1.2 ERROR #2 - TS05 NOT READY:

BEFORE ANY COMMAND IS ISSUED TO THE TS05, THE SUBSYSTEM READY BIT IN THE TSSR IS CHECKED. IF THE SSR IS NOT SET, THE PROGRAM REPORTS THE NOT READY ERROR. THIS IS A FATAL DEVICE ERROR AND THE DEVICE WILL BE DROPPED FROM THE TEST SEQUENCE UNLESS THE IDU OPTION IS USED.

3.1.3 ERROR #3 - NO RESPONSE ERROR:

ONCE THE TSDB IS LOADED, THE TS05 HAS ONE MILLISECOND TO RESPOND OR THE PROGRAM REPORTS A NO RESPONSE ERROR. THIS IS A FATAL DEVICE ERROR AND THE DEVICE WILL BE DROPPED FROM THE TEST SEQUENCE UNLESS THE IDU OPTION IS USED.

3.1.4 ERROR #4 - NO INTERRUPT ERROR:

COMMAND WAS ISSUED AND NO INTERRUPT RECEIVED. THE PROGRAM REPORTS THAT NO INTERRUPT OCCURRED. THIS IS A FATAL DEVICE ERROR AND THE DEVICE WILL BE DROPPED FROM THE TEST CYCLE UNLESS THE IDU OPTION IS USED.

3.1.5 SPECIAL CONDITION ERRORS:

IF, DURING EXECUTION, AN INCIDENT OCCURS FORCING THE TSSR SPECIAL CONDITION BIT TO SET, THE PROGRAM WILL SELECT ONE OF 8 ERROR HANDLING ROUTINES, DEPENDING ON THE TERMINATION CLASS CODE.

THE TERMINATION CLASS CODES IN THE TSSR ARE PROCESSED AS FOLLOWS WHEN SPECIAL CONDITION IS SET:

3.1.5.1 ERROR #5 - TERMINATION CLASS CODE 0, UNDEFINED SPECIAL CONDITION

THE ERROR IS REPORTED, A HARD ERROR IS LOGGED AND THE PROGRAM PROCEEDS NORMALLY.

3.1.5.2 ERROR #6 - TERMINATION CLASS CODE 1, ATTENTION CONDITION

THIS TCC INDICATES THAT THE DRIVE HAS UNDERGONE A STATUS CHANGE

1089
1090
1091
1092
1093
1094
1095
1096
1097
1098
1099
1100
1101
1102
1103
1104
1105
1106
1107
1108
1109
1110
1111
1112
1113
1114
1115
1116
1117
1118
1119
1120
1121
1122
1123
1124
1125
1126
1127
1128
1129
1130
1131
1132
1133
1134
1135
1136
1137
1138
1139
1140
1141
1142
1143
1144
1145

SUCH AS GOING OFFLINE OR COMING ONLINE. THIS IS A FATAL DEVICE ERROR AND THE DEVICE WILL BE DROPPED FROM THE TEST CYCLE UNLESS THE IDU OPTION IS USED.

3.1.5.3 ERROR #7 - TERMINATION CLASS CODE 2, TAPE STATUS ALERT

A STATUS CONDITION HAS BEEN ENCOUNTERED THAT MAY HAVE SIGNIFICANCE TO THE PROGRAM. BITS OF INTEREST INCLUDE TMK, RLS, LET, RLL, EOT. ACTION TAKEN DEPENDS ON THE TEST BEING EXECUTED. IF THE CONDITION IS UNEXPECTED, THE ERROR IS REPORTED AND A HARD ERROR IS LOGGED. THE PROGRAM PROCEEDS NORMALLY.

3.1.5.4 ERROR #8 - TERMINATION CLASS CODE 3, FUNCTION REJECT

THE SPECIFIED FUNCTION WAS NOT INITIATED. BITS OF INTEREST ARE RMR, OFL, VCK, BOT, ILC, WLE, ILA, AND NBA. THIS IS A FATAL DEVICE ERROR AND THE DEVICE WILL BE DROPPED FROM THE TEST CYCLE UNLESS THE IDU OPTION IS USED.

3.1.5.5 ERROR #9 - TERMINATION CLASS CODE 4, RECOVERABLE ERROR

TAPE POSITION IS ONE RECORD BEYOND WHAT ITS POSITION WAS WHEN THE FUNCTION WAS INITIATED. RECOVERY PROCEDURE IS TO LOG THE ERROR AND ISSUE THE APPROPRIATE RETRY COMMAND. IF RETRY LIMIT IS REACHED BEFORE THE ERROR IS RECOVERED, RETRY LIMIT EXCEEDED IS REPORTED AS DESCRIBED IN ERROR #14 BELOW.

3.1.5.6 ERROR #10 - TERMINATION CLASS CODE 5, RECOVERABLE ERROR

TAPE POSITION HAS NOT CHANGED. RECOVERY PROCEDURE IS TO LOG THE ERROR AND RE-ISSUE THE ORIGINAL COMMAND. IF RETRY LIMIT IS REACHED BEFORE THE ERROR IS RECOVERED, RETRY LIMIT EXCEEDED IS REPORTED AS DESCRIBED IN ERROR #14 BELOW.

3.1.5.7 ERROR #11 - TERMINATION CLASS CODE 6, UNRECOVERABLE ERROR

TAPE POSITION HAS BEEN LOST. THE ONLY VALID RECOVERY PROCEDURE IS TO REWIND AND START OVER AT BOT UNLESS THE TAPE HAS LABELS OR SEQUENCE NUMBERS. IF DENSITY CHECK IS SET THIS DIAGNOSTIC WILL REWIND AND RETRY THE COMMAND, OTHERWISE THIS IS A FATAL DEVICE ERROR AND THE DEVICE WILL BE DROPPED FROM THE TEST CYCLE UNLESS THE IDU OPTION IS USED.

3.1.5.8 ERROR #12 - TERMINATION CLASS CODE 7, FATAL SUBSYSTEM ERROR

THE SUBSYSTEM IS INCAPABLE OF PROPERLY PERFORMING COMMANDS OR AT LEAST ITS INTEGRITY IS SERIOUSLY QUESTIONABLE. REFER TO THE FATAL CLASS CODE FIELD IN THE TSSR REGISTER FOR ADDITIONAL INFORMATION ON THE TYPE OF FATAL ERROR. THE DEVICE WILL BE DROPPED FROM THE TEST CYCLE UNLESS THE IDU OPTION IS USED.

1146
1147
1148
1149
1150
1151
1152
1153
1154
1155
1156
1157
1158
1159
1160
1161
1162
1163
1164
1165
1166
1167
1168
1169
1170
1171
1172
1173
1174
1175
1176
1177
1178
1179
1180
1181
1182
1183
1184
1185
1186
1187
1188
1189
1190
1191
1192
1193
1194
1195
1196
1197
1198
1199
1200
1201
1202

3.1.6 ERROR #13 - RFC NON-ZERO ERROR:

IF, AFTER EXECUTION, THE RESIDUAL FRAME COUNT IS NON-ZERO, THE ERROR IS REPORTED AND A HARD ERROR IS LOGGED. THE PROGRAM THEN PROCEEDS NORMALLY. THE REPORTING AND LOGGING OF THESE ERRORS IS OPTIONAL.

3.1.7 ERROR #14 - RETRY LIMIT EXCEEDED:

ON A WRITE COMMAND THIS IS A FATAL DEVICE ERROR AND THE DEVICE WILL BE DROPPED FROM THE TEST CYCLE UNLESS THE IDU OPTION IS USED.

ON A READ COMMAND THIS ERROR IS LOGGED AS A HARD ERROR AND THE PROGRAM PROCEEDS NORMALLY.

3.1.8 ERROR #15 - TOO MANY INTERRUPTS:

IF MORE THAN ONE INTERRUPT OCCURS PER COMMAND, THIS ERROR IS REPORTED. THIS IS A FATAL DEVICE ERROR AND THE DEVICE WILL BE DROPPED FROM THE TEST CYCLE UNLESS THE IDU OPTION IS USED.

3.1.9 ERROR #16 - CAPSTAN RUNAWAY:

CAPSTAN DID NOT STOP WITHIN ACCEPTABLE WINDOW AFTER LAST COMMAND. THE PROGRAM WILL ISSUE A GET STATUS COMMAND BEFORE REPORTING THE ERROR SO THAT THE DEAD TRACK FIELD IN EXTENDED STATUS REGISTER 2 WILL CONTAIN THE TACH COUNT WHEN THE TAPE STOPPED. THIS IS A FATAL DEVICE ERROR AND THE DEVICE WILL BE DROPPED FROM THE TEST CYCLE UNLESS THE IDU OPTION IS USED.

3.1.10 ERROR #17 - DATA COMPARE ERROR:

IF A DATA VALIDATION ERROR OCCURS DURING A WRITE/VERIFY COMMAND, THE PROGRAM PRINTS WHAT THE DATA SHOULD HAVE BEEN AND WHAT THE DATA WAS, AND PRINTS THE BYTE AND RECORD NUMBER THE ERROR OCCURRED ON. ONLY THE FIRST 10 BYTES IN ERROR PER RECORD ARE PRINTED. THE TOTAL # OF BYTES IN ERROR PER RECORD IS ALSO PRINTED. A HARD ERROR IS LOGGED AND THE PROGRAM PROCEEDS NORMALLY.

3.2 ERROR HALTS

ERROR HALTS ARE SUPPORTED PER DESCRIBED IN THE PREVIOUS SECTION WITH /FLAG:HOE. THERE ARE NO OTHER HALTS.

4.0 PERFORMANCE REPORT

UNIT X PASS:XXXXX RECORD:XXXXX
BYTES WRITTEN XXX,XXX,XXX,XXX
BYTES READ REV XXX,XXX,XXX,XXX
BYTES READ FWD XXX,XXX,XXX,XXX

1203
1204
1205
1206
1207
1208
1209
1210
1211
1212
1213
1214
1215
1216
1217
1218
1219
1220
1221
1222
1223
1224
1225
1226
1227
1228
1229
1230
1231
1232
1233
1234
1235
1236
1237
1238
1239
1240
1241
1242
1243
1244
1245
1246
1247
1248
1249
1250
1251
1252
1253
1254
1255
1256
1257
1258
1259

		WRT	RDR	RDF
RECOVERABLE ERRORS		XXXXX	XXXXX	XXXXX
UNRECOVERABLE ERRORS		XXXXX	XXXXX	XXXXX
SPEC COND	HARD	FATAL	COMPARE	
XXXXX	XXXXX	XXXXX	XXXXX	

5.0 TEST SUMMARIES

5.1 TEST 1 -

BASIC FUNCTIONS.
EXECUTES AND VERIFIES CORRECT COMPLETION OF ALL TS05 FUNCTIONS.

SUBTEST 1 - SET CHAR, DRIVE INIT, GET STATUS.
+ SET CHARACTERISTIC 200.
+ DRIVE INITIATE.
+ SET CHARACTERISTIC 20.
+ GET STATUS
+ SET CHARACTERISTIC 40.
+ PRINT TS05 MICROCODE LEVEL (PASS 1 ONLY)

SUBTEST 2 - REWIND.
+ REWIND.
+ REWIND AT BOT.

SUBTEST 3 - WRITE/VERIFY.
+ WRITE/VERIFY PATTERN 1.
+ WRITE/VERIFY PATTERN 2.
+ WRITE/VERIFY PATTERN 3.
+ WRITE/VERIFY PATTERN 4.
+ WRITE/VERIFY PATTERN 5.
+ WRITE/VERIFY PATTERN 6.
+ WRITE/VERIFY PATTERN 0.

SUBTEST 4 - WRITE TAPE MARK, ERASE.
+ WRITE TAPE MARK.
+ WRITE 10 RECORDS
+ ERASE 10 TIMES
+ WRITE TAPE MARK.
+ WRITE TAPE MARK RETRY.

SUBTEST 5 - SPACE FILES.
+ SPACE 2 FILES REVERSE.
+ SPACE 2 FILES FORWARD.
+ SPACE 2 FILES REVERSE.
+ SPACE 2 FILES FORWARD.

SUBTEST 6 - SPACE RECORDS.
+ REWIND.
+ SPACE 7 RECORDS FORWARD.
+ SPACE 7 RECORDS REVERSE.
+ SPACE 7 RECORDS FORWARD.

1260
1261
1262
1263
1264
1265
1266
1267
1268
1269
1270
1271
1272
1273
1274
1275
1276
1277
1278
1279
1280
1281
1282
1283
1284
1285
1286
1287
1288
1289
1290
1291
1292
1293
1294
1295
1296
1297
1298
1299

- + SPACE 7 RECORDS REVERSE.
- SUBTEST 7 - WRITE RETRY.
 - + REWIND.
 - + WRITE DATA.
 - + WRITE RETRY.
- SUBTEST 8 - READ REV RETRY.
 - + READ REVERSE.
 - + READ NEXT REVERSE.
 - + READ NEXT FORWARD.
- SUBTEST 9 - READ FWD RETRY.
 - + READ FORWARD.
 - + READ PREVIOUS FORWARD.
 - + READ PREVIOUS REVERSE.
- SUBTEST 10 - CLEAN.
 - + CLEAN.
 - + REWIND.
- SUBTEST 11 - WRITE/VERIFY SWAPPED DATA BYTES.
 - + WRITE/VERIFY EVEN LENGTH (RECORD 1).
 - + WRITE/VERIFY ODD LENGTH (RECORD 2).
 - + SET DATA BYTE SWAP.
 - + WRITE/VERIFY EVEN LENGTH (RECORD 3).
 - + WRITE/VERIFY ODD LENGTH (RECORD 4).
 - + CLEAR DATA BYTE SWAP.
- SUBTEST 12 - READ SWAPPED DATA BYTES.
 - + READ REV RECORD 4.
 - + READ REV RECORD 3.
 - + SET DATA BYTE SWAP.
 - + READ REV RECORD 2.
 - + READ REV RECORD 1.
 - + READ FWD RECORD 1.
 - + READ FWD RECORD 2.
 - + CLEAR DATA BYTE SWAP.
 - + READ FWD RECORD 3.
 - + READ FWD RECORD 4.

1301
1302
1303
1304
1305
1306
1307
1308
1309
1310
1311
1312
1313
1314
1315
1316
1317
1318
1319
1320
1321
1322
1323
1324
1325
1326
1327
1328
1329
1330
1331
1332
1333
1334
1335
1336
1337
1338
1339
1340
1341
1342
1343
1344
1345
1346
1347
1348
1349
1350
1351
1352
1353
1354
1355
1356
1357

5.2 TEST 2 - DATA RELIABILITY.

1. THE TAPE IS INITIATED WITH THE FOLLOWING COMMANDS:
SET CHARACTERISTIC 40
REWIND
WRITE 64 RECORDS OF RANDOM LENGTH AND DATA
2. WRITE AND READ COMMANDS ARE SELECTED AT RANDOM AND ARE EXECUTED A RANDOM NUMBER OF TIMES WITH RANDOM LENGTHS AND RANDOM PATTERN UNTIL END OF TAPE IS REACHED.
3. AT THE END OF EACH PASS, A REWIND COMMAND IS ISSUED AND A PERFORMANCE REPORT IS PRINTED.

NOTE: IF A RESTART COMMAND IS USED TO INITIATE TEST 1, THE INITIAL REWIND COMMAND IS NOT ISSUED.

5.3 TEST 3 - WRITE COMPATABILITY/WRITE UTILITY.

REWINDS AND WRITES RECORDS OF RANDOM LENGTHS AND RANDOM DATA FROM BOT TO EOT.

5.4 TEST 4 - READ COMPATABILITY/READ UTILITY.

REWINDS AND READS ENTIRE TAPE, FORWARD AND REVERSE.

5.5 TEST 5 - RANDOM/OPERATOR SELECTED COMMAND SEQUENCE.

A DEFAULT SEQUENCE OF REWIND/WRITE/READ REV/READ FWD/REWIND OF ENTIRE TAPE IS EXECUTED WITH RANDOM PATTERN AND RECORD LENGTH OF 2048 BYTES. OPERATOR CAN ENTER SEQUENCE OF COMMANDS UP TO SEVEN IF THEY DON'T WANT DEFAULT SEQUENCE.

6.0 DEVICE INFORMATION TABLES

6.1 GENERAL

THE TS05 TAPE SUBSYSTEM CONSISTS OF A TSV05 Q-BUS CONTROLLER CONNECTED TO A TS05 DRIVE. FROM A SOFTWARE VIEWPOINT THIS CONFIGURATION IS UNIQUE (FOR A Q-BUS DEVICE) IN A NUMBER OF WAYS:

- A. ONLY ONE REGISTER MAY BE WRITTEN - TSDB (TAPE SYSTEM DATA BUFFER),
- B. TWO REGISTERS MAY BE READ - TSSR AND TSBA (TAPE SYSTEM STATUS REGISTER AND TAPE SYSTEM BUS ADDRESS REGISTER),
- C. COMMANDS ARE NOT WRITTEN TO THE DRIVE; RATHER, COMMAND POINTERS ARE WRITTEN WHICH POINT TO COMMAND PACKETS SOMEWHERE IN CPU MEMORY. THE COMMAND POINTER IS USED BY THE TS05 SUBSYSTEM TO FETCH THE WORD(S) WITHIN THE COMMAND PACKET. THE WORDS WITHIN THE COMMAND PACKET ARE:

1358
1359
1360
1361
1362
1363
1364
1365
1366
1367
1368
1369
1370
1371
1372
1373
1374
1375
1376
1377
1378
1379
1380
1381
1382
1383
1384
1385
1386
1387
1388
1389

1. COMMAND WORD
2. LOW ORDER BUFFER ADDRESS
3. HIGH ORDER BUFFER ADDRESS
4. BYTE COUNT

- D. THE TSSR CONTAINS ALL THE INFORMATION WHICH WILL BE NECESSARY TO DETERMINE WHETHER:
1. THE DRIVE IS READY TO ACCEPT ANOTHER COMMAND,
 2. THE PREVIOUS COMMAND WAS EXECUTED WITHOUT ERROR.
- IF EITHER OF THE ABOVE CONDITIONS IS UNTRUE AT "JOB DONE" OR "COMMAND INITIATION" TIME, IT MAY BE NECESSARY TO GET THE EXTENDED STATUS REGISTERS TO DETERMINE WHAT ACTION IS TO BE TAKEN AND/OR LOG THE ERROR INFORMATION.
- E. EXTENDED STATUS REGISTERS ARE NOT READ DIRECTLY FROM DRIVE REGISTERS; RATHER, A "GET STATUS" COMMAND IS ISSUED WHICH WILL CAUSE THE TS05 TO TRANSFER EXTENDED STATUS INFORMATION TO THE MEMORY AREA POINTED TO BY THE BUFFER ADDRESS OF THE "GET STATUS" COMMAND. THERE ARE FIVE EXTENDED STATUS REGISTERS. SEE .3.
- F. THE TSDB MUST BE WRITTEN WITH A DATO INSTRUCTION TO PROPERLY WRITE THE COMMAND POINTER. A DATOB WILL CAUSE A MAINTENANCE FUNCTION. A DATO TO THE TSSR WILL CAUSE SUBSYSTEM INIT.
- G. COMMAND PACKETS MUST RESIDE ON DIVIDE BY FOUR MEMORY BOUNDARIES (AS OPPOSED TO DIVIDE BY 2 OR WORD BOUNDARIES) .

1391
1392
1393
1394
1395
1396
1397
1398
1399
1400
1401

6.2 Q-BUS INTERFACE SPECIFICATIONS

<u>TSV05/ TS05</u>	<u>INT. VECTOR</u>	<u>UNIBUS ADDRESS</u>	<u>REGISTER</u>
FIRST	224	772520 772522	TSBA/TSDB TSSR

1403
1404
1405
1406
1407
1408
1409
1410
1411
1412
1413
1414
1415
1416
1417
1418
1419
1420
1421
1422
1423
1424
1425
1426
1427
1428
1429
1430
1431
1432
1433
1434
1435
1436
1437
1438
1439
1440
1441
1442
1443
1444
1445
1446
1447
1448
1449
1450
1451
1452
1453
1454
1455
1456
1457
1458
1459

6.3 BIT DEFINITIONS FOR TSV05/TS05 REGISTERS

6.3.1 TSV05/TS05 REGISTER SUMMARY

	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	
(R/O) TSBA	A15	A14	A13	A12	A11	A10	A09	A08	A07	A06	A05	A04	A03	A02	A01	A00	
(W/O) TSDB	P15	P14	P13	P12	P11	P10	P09	P08	P07	P06	P05	P04	P03	P02	P17	P16	
(R/O) TSSR	SC	0	SCE	RMR	NXM	NBA	A17	A16	SSR	OFL	FC1	FC0	TC2	TC1	TC0	0	
(W/O) TSDBX	BT	0	0	0	P21	P20	P19	P18	(TSDBX EXISTS ONLY WHEN ENABLED BY THE EXTENDED FEATURES SWITCH ON THE M7196)								
XST0	TMK	RLS	LET	RLI	WLE	NEF	ILC	ILA	MOT	ONL	IE	VCK	PED	WLK	BOT	EOT	
XST1	DLT	0	COR	0	0	0	0	RBP	0	0	0	0	0	0	UNC	0	
XST2	OPM	RCE	0	0	0	WCF	0	0	RL7	RL6	RL5	RL4	RL3	RL2	RL1	RL0	
XST3	MICRO DIAGNOSTIC ERROR CODE									0	OPI	REV	TRF	DCK	0	0	RIB
XST4	HSP	RCE	0	0	0	0	0	0	WRITE RETRY COUNT								

TERMINATION CLASS CODES (TSSR TC0-TC2):

- 0 = NORMAL TERMINATION
- 1 = ATTENTION CONDITION
- 2 = TAPE STATUS ALERT
- 3 = FUNCTION REJECT
- 4 = RECOVERABLE ERROR - TAPE POSITION = ONE RECORD
DOWN TAPE FROM START OF FUNCTION
- 5 = RECOVERABLE ERROR - TAPE NOT MOVED
- 6 = UNRECOVERABLE ERROR - TAPE POSITION LOST
- 7 = FATAL CONTROLLER ERROR


FATAL CLASS CODES (TSSR FC0-FC1):

- 0 = MICRO DIAGNOSTIC FAILURE. SEE ERROR CODE BYTE (XST3) FOR FAILED FUNCTION.
- 1 = RESERVED
- 2 = NOT USED
- 3 = RESERVED FOR FUTURE USE ALWAYS READ AS A 0

1461
1462
1463
1464
1465
1466
1467
1468
1469
1470
1471
1472
1473
1474
1475
1476
1477
1478
1479
1480
1481
1482
1483
1484
1485
1486
1487
1488
1489
1490
1491
1492
1493
1494
1495
1496
1497
1498
1499
1500
1501
1502
1503
1504
1505
1506
1507
1508
1509
1510
1511
1512
1513
1514
1515
1516
1517

6.3.2 TSV05 STATUS REGISTER (TSSR)

Q-BUS ADDRESS + 2 - READ ONLY

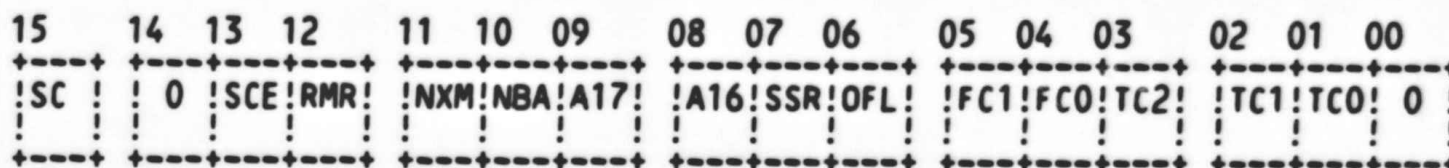

BIT	NAME	TCC	DEFINITION
15	SC	S	SPECIAL CONDITION. WHEN SET, INDICATES THAT THE LAST COMMAND DID NOT COMPLETE WITHOUT INCIDENT. SPECIFICALLY, EITHER AN ERROR WAS DETECTED OR AN EXCEPTION CONDITION OCCURRED. EXCEPTION CONDITIONS CAN BE TAPE MARKS ON READ COMMANDS, REVERSE MOTION AND AT BOT, EOT WHILE WRITING, ETC. MAY ALSO BE SET BY THE ERROR BITS CONTAINED IN THE TSSR REGISTER: SCE, RMR, AND NXM. THE TERMINATION CLASS BITS ARE SOMETHING OTHER THAN 0 (UNLESS RMR IS THE ONLY ERROR - SEE RMR).
14	-	-	RESERVED (ALWAYS A 0)
13	SCE	FC0	SANITY CHECK ERROR-SETS WHEN THE CONTROLLER DETECTS AN ABNORMAL CONDITION WITHIN ITSELF DURING EXECUTION OF IT'S FUNCTIONS AND THE PROBLEM IS SERIOUS ENOUGH THAT A MESSAGE PACKET IS NOT STORED.
12	RMR	S	REGISTER MODIFICATION REFUSED. SET BY THE TSV05 WHEN A COMMAND POINTER IS LOADED INTO TSDB AND SUB-SYSTEM READY (SSR) IS NOT SET. NOTE THAT THIS BIT CAUSES SPECIAL CONDITION BUT NO TERMINATION CLASS (IN FACT, THE TS05 NEVER SEES THIS ERROR) BECAUSE ON A SYSTEM WITH NO BUGS, THIS BIT MAY COME UP ON AN ATTENTION MESSAGE. IF ATTNS ARE NOT ENABLED, THIS BIT COMING UP IS AN INDICATION OF EITHER A FATAL CONTROLLER ERROR OR A SOFTWARE BUG.
11	NXM	4/5	NON-EXISTENT MEMORY. SET BY THE TSV05 WHEN TRYING TO TRANSFER TO OR FROM A MEMORY LOCATION WHICH DOES NOT EXIST. MAY OCCUR WHEN FETCHING THE COMMAND PACKET, FETCHING OR STORING DATA, OR STORING THE MESSAGE PACKET.
10	NBA	S	NEED BUFFER ADDRESS. WHEN SET, INDICATES THAT THE TS05 NEEDS A MESSAGE BUFFER ADDRESS. THIS BIT IS CLEARED DURING THE SET CHARACTERISTICS

1518				COMMAND (IF A GOOD ADDRESS WAS GIVEN).
1519				
1520	09	A17	S	BUS ADDRESS BIT 17. A17 AND A16 (BIT 08) TRACK
1521				THE VALUES OF BITS 17 AND 16 OF THE TSBA
1522				REGISTER. LOADED FROM TSDB BITS 01-00 WHEN TSDB
1523				IS WRITTEN.
1524				
1525	08	A16	S	BUS ADDRESS BIT 16. SEE A17 (BIT 09).
1526				
1527	07	SSR	S	SUB-SYSTEM READY. WHEN SET, INDICATES THAT THE
1528				TSV05/TS05 SUBSYSTEM IS NOT BUSY AND IS READY TO
1529				ACCEPT A NEW COMMAND POINTER.
1530				
1531	06	OFL	S,1,3	OFF-LINE. WHEN SET, INDICATES THAT THE TS05 IS
1532				OFF-LINE AND UNAVAILABLE FOR ANY TAPE MOTION
1533				COMMANDS. THIS BIT CAN CAUSE A TERMINATION CLASS
1534				OF 1 (ON ATTN INTERRUPT) OR 3 (RESULTS IN NEF).
1535				
1536	05	FC1	7	FATAL TERMINATION CLASS 01. FC1 AND FCO (BIT
1537				04) ARE USED TO INDICATE THE TYPE OF FATAL
1538				ERROR WHICH HAS OCCURRED ON THE TS05. THESE
1539				BITS ARE VALID ONLY WHEN SC IS SET AND THE
1540				TERMINATION CLASS CODE BITS ARE ALL SET (111).
1541				
1542	04	FC0	7	FATAL TERMINATION CLASS 00. SEE FC1 (BIT 05).
1543				
1544	03	TC2	S	TERMINATION CLASS BIT 02. THIS BIT, ALONG WITH
1545				THE TC1 AND TCO BITS, ACT AS AN OFFSET VALUE
1546				WHENEVER AN ERROR OR EXCEPTION CONDITION OCCURS
1547				ON A COMMAND. EACH OF THE EIGHT POSSIBLE
1548				VALUES OF THIS FIELD REPRESENT A PARTICULAR
1549				CLASS OF ERRORS OR EXCEPTIONS. THE CONDITIONS
1550				IN EACH CLASS HAVE SIMILAR SIGNIFICANCE AND, AS
1551				APPLICABLE, RECOVERY PROCEDURES. THE CODE
1552				PROVIDED IN THIS FIELD IS EXPECTED TO BE
1553				UTILIZED AS AN OFFSET INTO A DISPATCH TABLE FOR
1554				HANDLING OF THE CONDITION.
1555				
1556	02	TC1	S	TERMINATION CLASS BIT 01. SEE TC2 (BIT 03).
1557				
1558	01	TC0	S	TERMINATION CLASS BIT 00. SEE TC2 (BIT 03).
1559				
1560	00	-	-	NOT USED. (ALWAYS A 0)

Q-BUS ADDRESS + 2 - WRITE ONLY

SUBSYSTEM INITIALIZE

1561
1562
1563
1564
1565
1566
1567

1569
1570
1571
1572
1573
1574
1575
1576
1577
1578
1579
1580
1581
1582
1583
1584
1585
1586
1587
1588
1589
1590
1591
1592
1593
1594
1595
1596
1597
1598
1599
1600
1601
1602
1603
1604
1605
1606
1607
1608
1609
1610
1611
1612
1613
1614
1615
1616
1617
1618
1619
1620
1621
1622
1623
1624
1625


6.3.2.1 TSV05 EXTENDED DATA BUFFER REGISTER (TSDBX)



(TSDBX EXISTS ONLY WHEN ENABLED BY THE EXTENDED FEATURES SWITCH ON THE M7196)

BIT	NAME	TCC	DEFINITION
15	BT	-	BOOT COMMAND BIT. WHEN WRITTEN TO A 1, WITH SSR=1, CAUSES THE TAPE TO BE REWOUND TO BOT, THE FIRST TAPE RECORD TO BE SKIPPED, AND THE SECOND RECORD TO BE LOADED INTO CPU MEMORY SPACE STARTING AT LOCATION 0.
14-12			RESERVED (ALWAYS A 0)
11-08	P<21:18>		COMMAND POINTER BITS 21-18. WHEN THE TSDBX IS WRITTEN AND SSR=1, THE DATA IS LOADED INTO BITS 21-18 OF THE INTERNAL TSBA REGISTER.
07-00			RESERVED (ALWAYS A 0)

6.3.3 EXTENDED STATUS REGISTER 0 (XSTAT0)

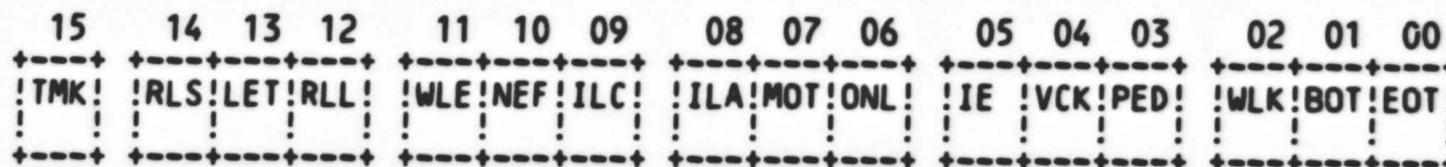

BIT	NAME	TCC	DEFINITION
15	TMK	S,2	TAPE MARK DETECTED. SET WHENEVER A TAPE MARK WAS DETECTED DURING A READ, SPACE, OR SKIP COMMAND AND AS A RESULT OF THE WRITE TAPE MARK OR WITE TAPE MARK RETRY COMMANDS.
14	RLS	2	RECORD LENGTH SHORT. THIS BIT INDICATES THAT EITHER THE RECORD'S LENGTH WAS SHORTER THAN THE BYTE COUNT ON READ OPERATIONS, A SPACE RECORD OPERATION ENCOUNTERED A TAPE MARK OR BOT BEFORE THE POSITION COUNT WAS EXHAUSTED, OR A SKIP TAPE MARKS COMMAND WAS TERMINATED BY ENCOUNTERING BOT OR A DOUBLE TAPE MARK (IF THAT OPERATIONAL MODE IS ENABLED, SEE LET) PRIOR TO EXHAUSTING THE POSITION COUNTER.

1626				
1627				
1628				
1629				
1630				
1631				
1632				
1633				
1634				
1635				
1636				
1637				
1638				
1639				
1640				
1641				
1642				
1643				
1644				
1645				
1646				
1647				
1648				
1649				
1650				
1651				

13 LET 2 LOGICAL END OF TAPE. SET ONLY ON THE SKIP TAPE MARKS COMMAND WHEN EITHER TWO CONTIGUOUS TAPE MARKS ARE DETECTED OR WHEN MOVING OFF OF BOT AND THE FIRST RECORD ENCOUNTERED IS A TAPE MARK. THE SETTING OF THIS BIT WILL NOT OCCUR UNLESS THIS MODE OF TERMINATION IS ENABLED THROUGH USE OF THE SET CHARACTERISTICS COMMAND.

12 RLL 2 RECORD LENGTH LONG. WHEN SET, THIS BIT INDICATES THAT THE RECORD READ WAS LONGER THAN THE BYTE COUNT SPECIFIED.

11 WLE 3,6 WRITE LOCK ERROR. WHEN SET, INDICATES THAT A WRITE OPERATION WAS ISSUED BUT THE MOUNTED TAPE DID NOT CONTAIN A WRITE ENABLE RING OR THE WRT LOCK SWITCH ACTIVATED DURING THE OPERATION.

10 NEF 3 NON-EXECUTABLE FUNCTION. WHEN SET, INDICATES THAT THE COMMAND COULD NOT BE EXECUTED DUE TO ONE OF THE FOLLOWING CONDITIONS:

- THE COMMAND SPECIFIED REVERSE TAPE DIRECTION BUT THE TAPE WAS ALREADY POSITIONED AT BOT.
- THE ISSUING OF ANY MOTION COMMAND EXCEPT


1653
1654
1655
1656
1657
1658
1659
1660
1661
1662
1663
1664
1665
1666
1667
1668
1669
1670
1671
1672
1673
1674
1675
1676
1677
1678
1679
1680
1681
1682
1683
1684
1685
1686
1687
1688
1689
1690
1691
1692
1693
1694
1695
1696
1697
1698
1699
1700
1701

WHEN THE VOLUME CHECK BIT IS SET.
- ANY COMMAND, EXCEPT GET STATUS OR DRIVE INITIALIZE, WHEN THE TS05 IS OFF-LINE.
- ANY WRITE COMMAND WHEN THE TAPE DOES NOT CONTAIN A WRITE ENABLE RING (WRITE LOCK STATUS - WLS).

09	ILC	3	ILLEGAL COMMAND. SET WHEN A COMMAND IS ISSUED AND EITHER ITS COMMAND FIELD OR ITS COMMAND MODE FIELD CONTAINS CODES WHICH ARE NOT SUPPORTED BY THE TS05.
08	ILA	3	ILLEGAL ADDRESS. (MORE THAN 18 BITS OR ODD WHEN AN EVEN ADDRESS IS REQUIRED.)
07	MOT	S	TAPE IS MOVING.
06	ONL	S	ON LINE. WHEN SET, INDICATES THAT THE TS05 IS ON-LINE AND OPERABLE.
05	IE	S	INTERRUPT ENABLE. REFLECTS THE STATE OF THE INTERRUPT ENABLE BIT SUPPLIED ON THE LAST COMMAND.
04	VCK	S	VOLUME CHECK. WHEN SET, INDICATES THAT THE DRIVE HAS BEEN EITHER POWERED DOWN OR TURNED OFF-LINE. CLEARED BY THE CLEAR VOLUME CHECK (CVC) BIT IN THE COMMAND HEADER WORD. THIS BIT CAN CAUSE A TERMINATION CLASS OF 3.
03	PED	S	PHASE ENCODED DRIVE. ALWAYS SET, INDICATES THAT THE TS05 IS CAPABLE OF READING AND WRITING ONLY 1600 BPI PHASE ENCODED DATA.
02	WLK	S,3	WRITE LOCKED. WHEN SET, INDICATES THAT THE MOUNTED REEL OF TAPE DOES NOT HAVE A WRITE-ENABLE RING INSTALLED. THE TAPE IS, THEREFORE, WRITE PROTECTED.
01	BOT	S,3	BEGINNING OF TAPE. WHEN SET, INDICATES THAT THE TAPE IS POSITIONED AT THE LOAD POINT AS DENOTED BY THE BOT REFLECTIVE STRIP ON THE TAPE.
00	EOT	S,2	END OF TAPE. THIS BIT IS SET WHENEVER THE TAPE IS POSITIONED AT OR BEYOND THE END OF TAPE REFLECTIVE STRIP.

1703
1704
1705
1706
1707
1708
1709
1710
1711
1712
1713
1714
1715
1716
1717
1718
1719
1720
1721
1722
1723
1724
1725
1726
1727
1728
1729
1730
1731
1732
1733
1734
1735
1736
1737
1738


6.3.4 EXTENDED STATUS REGISTER 1 (XSTAT1)

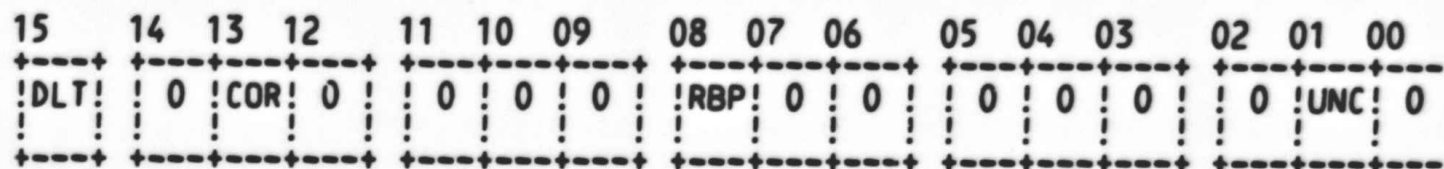

BIT	NAME	TCC	DEFINITION
15	DLT	4	DATA LATE. SET WHEN THE FIFO IS FULL ON A READ OR EMPTY ON A WRITE. THESE CONDITIONS OCCUR WHENEVER THE Q-BUS LATENCY EXCEEDS THE DATA TRANSFER RATE OF THE TS05.
14	-	-	NOT USED. (ALWAYS A 0)
13	COR	S	CORRECTABLE DATA. CORRECTABLE DATA ERROR HAS BEEN ENCOUNTERED.
12-09			RESERVED (ALWAYS A 0)
08	RPB	4	READ BUS PARITY ERROR. SET WHEN CONTROLLER DETECTS A PARITY ERROR ON THE READ DATA LINES OF THE TRANSPORT BUS.
07-02 & 00			RESERVED (ALWAYS A 0)
01	UNC	4	UNCORRECTABLE DATA ERROR.

1740
1741
1742
1743
1744
1745
1746
1747
1748
1749
1750
1751
1752
1753
1754
1755
1756
1757
1758
1759
1760
1761
1762
1763
1764
1765
1766
1767
1768
1769
1770


6.3.5 EXTENDED STATUS REGISTER 2 (XSTAT2)

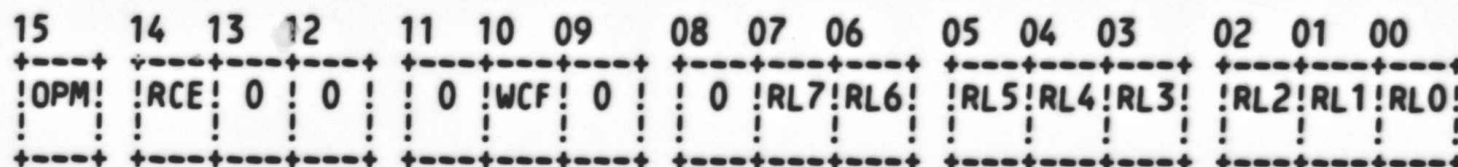

BIT	NAME	TCC	DEFINITION
15	OPM	S	OPERATION IN PROGRESS. (TAPE MOVING)
14	RCE	7,F2	RAM CHECKSUM ERROR. CAUSES FATAL CLASS 2 BECAUSE THE ERROR MIGHT HAVE OCCURRED DURING THE TRANSMISSION OF THE MESSAGE PACKET.
13-11			RESERVED (ALWAYS A 0)
10	WCF	7	WRITE CLOCK FAILURE. SET DURING A WRITE TO INDICATE THAT THE FIFO IS NOT BEING EMPTIED BY THE TRANSPORT.
09-08			RESERVED (ALWAYS A 0)
07-00	RL	-	REVISION LEVEL.


1772
1773
1774
1775
1776
1777
1778
1779
1780
1781
1782
1783
1784
1785
1786
1787
1788
1789
1790
1791
1792
1793
1794
1795
1796
1797
1798
1799
1800
1801
1802
1803
1804
1805
1806
1807
1808
1809
1810
1811
1812
1813
1814
1815
1816
1817
1818
1819
1820
1821
1822
1823
1824
1825
1826
1827
1828

6.3.6 EXTENDED STATUS REGISTER 3 (XSTAT3)

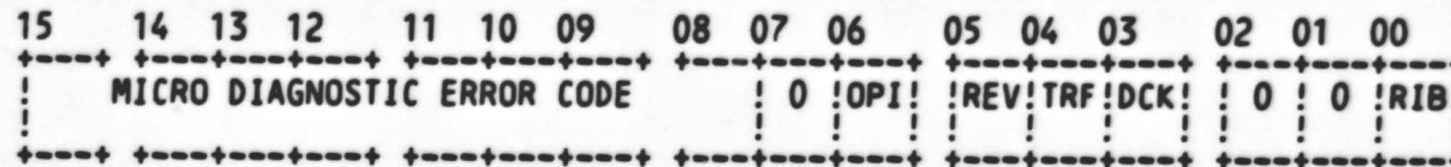

BIT	NAME	TCC	DEFINITION
15 TO 08			MICRO DIAGNOSTIC ERROR CODE. (SEE LIST OF CODES BELOW).
07			RESERVED (ALWAYS A 0)
06	OPI	6	OPERATION INCOMPLETE. SET WHEN A READ, SPACE, OR SKIP OPERATION HAS MOVED 25 FEET OF TAPE WITHOUT DETECTING ANY DATA ON THE TAPE.
05	REV	S	DIRECTION OF CURRENT OPERATION WAS REVERSE (BUT IS 0 IF REWIND OR FORWARD)
04	-	-	RESERVED (ALWAYS A 0)
03	DCK	S,6	DENSITY CHECK. SET WHEN A PE IDENTIFICATION BURST (IDB) WAS NOT DETECTED WHEN MOVING OFF OF BOT.
02-01			RESERVED (ALWAYS A 0)
00	RIB	2	REVERSE INTO BOT. A READ, SPACE, OR SKIP COMMAND ALREADY IN PROGRESS HAS ENCOUNTERED THE BOT MARKER WHEN MOVING TAPE IN THE REVERSE DIRECTION. TAPE MOTION WILL BE HALTED AT BOT.

6.3.7 EXTENDED STATUS REGISTER 4 (XSTAT4)

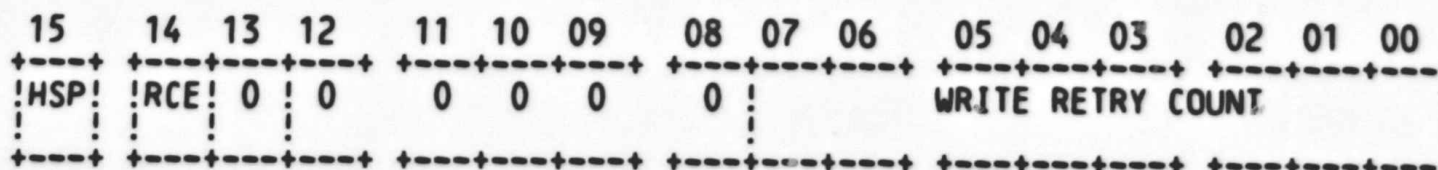

BIT	NAME	TCC	DEFINITION
-----	------	-----	------------

1829
1830
1831
1832
1833
1834
1835
1836
1837
1838
1839
1840
1841
1842
1843
1844
1845
1846
1847
1848
1849
1850
1851
1852
1853
1854
1855

15 HSP S
14 RCE 6
13-8 -
7-0 WRC S

HIGH SPEED. WHEN SET, INDICATES THAT THE TRANSPORT IS OPERATING IN HIGH SPEED MODE.(100IPS) WHEN CLEAR, THE TRANSPORT IS OPERATING IN LOW SPEED MODE.(25IPS)
RETRY COUNT EXCEEDED. WHEN SET, INDICATES THAT THE CONTROLLER WAS BUFFERING WRITE DATA AND COULD NOT SUCCESSFULLY OUTPUT THE BUFFERED RECORD WITHIN THE SPECIFIED NUMBER OF RETRIES. CAUSES TAPE POSITION LOST TERMINATION.
RESERVED (ALWAYS A 0)
WRITE RECOUNT COUNT STATISTIC. THIS FIELD INDICATES, WHEN THE CONTROLLER IS BUFFERING WRITE DATA RECORDS, THE TOTAL NUMBER OF CONTROLLER INITIATED RETRIES PERFORMED IN ORDER TO WRITE THE PREVIOUS BUFFERED RECORD. THIS COUNT IS CLEARED AFTER IT IS DISPLAYED.

7.0 DIAGNOSTIC HISTORY

REVISION A - MAR 1982
- MODIFIED CZTSHC FROM TS11 FOR TSV05

12
13
42
44
45
47
48
49
50
51
52
53
54
55
63
64

.TITLE PROGRAM HEADER AND TABLES
.SBTTL PROGRAM HEADER

.ENABL ABS,AMA
= 2000
BGNMOD

002000

002000

::++
: THE PROGRAM HEADER IS THE INTERFACE BETWEEN
: THE DIAGNOSTIC PROGRAM AND THE SUPERVISOR.
:--

POINTER BGNRPT,BGNSW,BGNSFT,BGNAU,BGN DU

002000

HEADER CVTSE,A,0,5000,1

LSNAME:: :DIAGNOSTIC NAME

002000 103
002001 126
002002 124
002003 123
002004 105
002005 000
002006 000
002007 000
002010
002010 101
002011
002011 060
002012
002012 000000
002014
002014 005000
002016
002016 027732
002020
002020 030040
002022
002022 002174
002024
002024 002204
002026
002026 032004
002030
002030 000000
002032
002032 000000
002034
002034 000001
002036
002036 000000
002040
002040 002124
002042
002042 000000
002044
002044 000000

LSREV:: :REVISION LEVEL
LSDEPO:: :0
LSUNIT:: :NUMBER OF UNITS
LSTIML:: :LONGEST TEST TIME
LSHPCP:: :POINTER TO H.W. QUES.
LSSPCP:: :POINTER TO S.W. QUES.
LSHPTP:: :PTR. TO DEF. H.W. PTABLE
LSSPTP:: :PTR. TO S.W. PTABLE
LSLADP:: :DIAG. END ADDRESS
LSSTA:: :RESERVED FOR APT STATS
LSCO::
LSDTYP:: :DIAGNOSTIC TYPE
LSAPT:: :APT EXPANSION
LSDTP:: :PTR. TO DISPATCH TABLE
LSPRIO:: :DIAGNOSTIC RUN PRIORITY
LSENV1:: :FLAGS DESCRIBE HOW IT WAS SETUP

.ASCII /C/
.ASCII /V/
.ASCII /T/
.ASCII /S/
.ASCII /E/
.BYTE 0
.BYTE 0
.BYTE 0
.ASCII /A/
.ASCII /O/
.WORD 0
.WORD 5000
.WORD L\$HARD
.WORD L\$SOFT
.WORD L\$HW
.WORD L\$SW
.WORD L\$LAST
.WORD 0
.WORD 0
.WORD 1
.WORD 0
.WORD L\$DISPATCH
.WORD 0
.WORD 0

002046		L\$EXP1::	;EXPANSION WORD		
002046	000000			.WORD	0
002050		L\$MREV::	;SVC REV AND EDIT #		
002050	003			.BYTE	C\$REVISION
002051	003			.BYTE	C\$EDIT
002052		L\$EF::	;DIAG. EVENT FLAGS		
002052	000000			.WORD	0
002054	000000			.WORD	0
002056		L\$SPC::			
002056	000000			.WORD	0
002060		L\$DEVP::	; POINTER TO DEVICE TYPE LIST		
002060	002164			.WORD	L\$DVTYP
002062		L\$REPP::	;PTR. TO REPORT CODE		
002062	017546			.WORD	L\$RPT
002064		L\$EXP4::			
002064	000000			.WORD	0
002066		L\$EXP5::			
002066	000000			.WORD	0
002070		L\$AUT::	;PTR. TO ADD UNIT CODE		
002070	024030			.WORD	L\$AU
002072		L\$DUT::	;PTR. TO DROP UNIT CODE		
002072	023756			.WORD	L\$DU
002074		L\$LUN::	;LUN FOR EXERCISERS TO FILL		
002074	000000			.WORD	0
002076		L\$DESP::	;POINTER TO DIAG. DESCRIPTION		
002076	002136			.WORD	L\$DESC
002100		L\$LOAD::	;GENERATE SPECIAL AUTOLOAD EMT		
002100	104035			EMT	ESLOAD
002102		L\$ETP::	;POINTER TO ERR_TBL		
002102	000000			.WORD	0
002104		L\$ICP::	;PTR. TO INIT CODE		
002104	021302			.WORD	L\$INIT
002106		L\$CCP::	;PTR. TO CLEAN-UP CODE		
002106	023714			.WORD	L\$CLEAN
002110		L\$ACP::	;PTR. TO AUTO CODE		
002110	023272			.WORD	L\$AUTO
002112		L\$PRT::	;PTR. TO PROTECT TABLE		
002112	021274			.WORD	L\$PROT
002114		L\$TEST::	;TEST NUMBER		
002114	000000			.WORD	0
002116		L\$DLY::	;DELAY COUNT		
002116	000000			.WORD	0
002120		L\$HIME::	;PTR. TO HIGH MEM		
002120	000000			.WORD	0

```

72      .SBTTL DISPATCH TABLE
73
74      :++
75      : THE DISPATCH TABLE CONTAINS THE STARTING ADDRESS OF EACH TEST.
76      : IT IS USED BY THE SUPERVISOR TO DISPATCH TO EACH TEST.
77      :--
78
79      DISPATCH 5
      002122      000005      .WORD 5
      002122      000005
      002124      024134      .WORD T1
      002126      025622      .WORD T2
      002130      026456      .WORD T3
      002132      026652      .WORD T4
      002134      027032      .WORD T5
80
87
88      .SBTTL DESCRIPTIVE TEXT
89
90      :++
91      : 2 LINES OF TEXT PRINTED TO THE OPERATOR TO IDENTIFY THE DIAGNOSTIC AND THE DEVICE UNDER TES
92      :--
93
94      DESCRIPT      <DATA RELIABILITY TEST>
      002136
      002136      104      101      124      .ASCIZ /DATA RELIABILITY TE
      002141      101      040      122
      002144      105      114      111
      002147      101      102      111
      002152      114      111      124
      002155      131      040      124
      002160      105      123      124
      002163      000
95      DEVTYP      <TSV05>      .EVEN
      002164
      002164      124      123      126      .ASCIZ /TSV05/
      002167      060      065      000      .EVEN

```


97
98
99
100
101
102
103
104
105 002172
002172 000003
002174
002174
106
107
108 002174 172520
109 002176 000224
110 002200 000000
111
112 002202
002202

.SBTTL DEFAULT HARDWARE P-TABLE

;++
: THE DEFAULT HARDWARE P-TABLE CONTAINS DEFAULT VALUES OF
: THE TEST-DEVICE PARAMETERS. THE STRUCTURE OF THIS TABLE
: IS IDENTICAL TO THE STRUCTURE OF THE RUN-TIME P-TABLE.
:--

BGNHW DFPTBL

LSHW::
DFPTBL::

.WORD L10000-LSHW/2

.WORD 172520
.WORD 224
.WORD 0

:TSDB ADDRESS.
:VECTOR ADDRESS.
:DRIVE #0 FOR DEFAULT

ENDHW
L10000:

```

114          .SBTTL  SOFTWARE P-TABLE
115
116          :++
117          : THE SOFTWARE P-TABLE CONTAINS THE VALUES OF THE PROGRAM
118          : PARAMETERS THAT CAN BE CHANGED BY THE OPERATOR.
119          :--
120
121 002202          BGNSW  SFPTBL
002202          000051
002204
002204          LSSW::
SFPTBL::          .WORD  L10001-LSSW/2

122
129 002204          001          CLRFLG:: .BYTE  1          ;CLEAR COUNTERS FLAG.
130 002205          000          RRANV:: .BYTE  0          ;RESET RANDOM VARIABLES EACH PASS FLAG.
131 002206          000          HAE:: .BYTE  0          ;HALT AFTER EACH COMMAND FLAG.
132 002207          000          ERCVER:: .BYTE  0          ;ENABLE RECOVERABLE ERROR PRINTS FLAG.
133 002210          001          BADTSW:: .BYTE  1          ;BAD TAPE SWITCH TO REWRITE ON SAME SPOT & DETECT BAD TAPE
134 002211          000          .BYTE  0          ;SPARE
135 002212          000          DINT:: .BYTE  0          ;DISABLE INTERRUPTS FLAG.
136 002213          000          IREC:: .BYTE  0          ;INHIBIT ERROR RECOVERY FLAG.
137 002214          000          CHGFLG:: .BYTE  0          ;CHANGE CMD SEQ TABLE FLAG.
138 002215          000          .BYTE  0          ;SPARE.
139 002216          000          PIRE:: .BYTE  0          ;INHIBIT RESIDUAL FRAMECOUNT ERROR REPORT FLAG.
140 002217          000          .BYTE  0          ;SPARE.
141 002220          000040        CHAR:: CH.EAI          ;CHARACTERISTICS CODE (DEFAULT = 40).
142 002222          000015        CMDD:: .WORD  13.          ;COMMAND 2 (DEFAULT = REWIND).
143 002224          000001        .WORD  1          ;BYTE COUNT
144 002226          000001        .WORD  1          ;NUMBER OF OPERATIONS
145 002230          000007        .WORD  RANP          ;PATTERN
146 002232          000004        .WORD  4          ;COMMAND 3 (DEFAULT = WRITE)
147 002234          004000        .WORD  DATCNT          ;BYTE COUNT (DEFAULT = MAX BUFFER SIZE).
148 002236          076400        .WORD  32000.          ;NUMBER OF OPERATIONS (DEFAULT = 32000).
149 002240          000007        .WORD  RANP          ;PATTERN (DEFAULT = RANDOM).
150 002242          000003        .WORD  3          ;COMMAND 4 (DEFAULT = READ REV).
151 002244          004000        .WORD  DATCNT          ;BYTE COUNT (DEFAULT = MAX BUFFER SIZE).
152 002246          076400        .WORD  32000.          ;NUMBER OF OPERATIONS (DEFAULT = 32,000).
153 002250          000007        .WORD  RANP          ;PATTERN (DEFAULT = RANDOM).
154 002252          000002        .WORD  2          ;COMMAND 5 (DEFAULT = READ FWD).
155 002254          004000        .WORD  DATCNT          ;BYTE COUNT (DEFAULT = MAX BUFFER SIZE).
156 002256          076400        .WORD  32000.          ;NUMBER OF OPERATIONS (DEFAULT = 32,000).
157 002260          000007        .WORD  RANP          ;PATTERN (DEFAULT = RANDOM).
158 002262          000015        .WORD  13.          ;COMMAND 6 (DEFAULT = REWIND).
159 002264          000001        .WORD  1          ;BYTE COUNT
160 002266          000001        .WORD  1          ;NUMBER OF OPERATIONS
161 002270          000007        .WORD  RANP          ;PATTERN
162 002272          000033        .WORD  27.          ;END OF CMD SEQ TABLE CODE (DEF) OR CMD 7
163 002274          004000        .WORD  DATCNT          ;BYTE COUNT (DEFAULT = MAX BUFFER SIZE).
164 002276          076400        .WORD  32000.          ;NUMBER OF OPERATIONS (DEFAULT = 32000).
165 002300          000007        .WORD  RANP          ;PATTERN (DEFAULT = RANDOM).
166 002302          000033        .WORD  27.          ;END OF CMD SEQ TABLE CODE (DEF) OR CMD 8
167 002304          004000        .WORD  DATCNT          ;BYTE COUNT (DEFAULT = MAX BUFFER SIZE).
168 002306          076400        .WORD  32000.          ;NUMBER OF OPERATIONS (DEFAULT = 32000).
169 002310          000007        .WORD  RANP          ;PATTERN (DEFAULT = RANDOM).
170 002312          000001        TS1MD:: .WORD  1          ;DEFAULT SWITCH SETTING
171 002314          000000        RDBUF:: .WORD  0          ;ENABLE READ BUFFERING
172 002316          000000        WTBUF:: .WORD  0          ;ENABLE WRITE BUFFERING
173 002320          000000        HSSW:: .WORD  0          ;RUN AT 100IPS SWITCH

```

PROGRAM HEADER AND TABLES
SOFTWARE P-TABLE

MACRO M1113 25-MAY-82 09:51 PAGE 19-1

G 4

SEQ 0045

174 002322 000000
175 002324 000000
176
177 002326
002326
178
179 002326

EXTFEA::WORD 0
BENBSW::WORD 0

:EXTENDED FEATURES SOFTWARE SW 0=OFF;1=ON
:BUFFER ENABLE SOFTWARE SW 0=OFF;1=ON

ENDSW
L10001:

ENDMOD

192
193
194
203
204 002326
205
206
207
208
209
210
211 002326

.TITLE GLOBAL AREAS
.SBTTL GLOBAL EQUATES SECTION

BGNMOD

;++
: THE GLOBAL EQUATES SECTION CONTAINS PROGRAM EQUATES THAT
: ARE USED IN MORE THAN ONE TEST.
:--

EQUALS

:
: BIT DIFINITIONS

100000	BIT15== 100000
040000	BIT14== 40000
020000	BIT13== 20000
010000	BIT12== 10000
004000	BIT11== 4000
002000	BIT10== 2000
001000	BIT09== 1000
000400	BIT08== 400
000200	BIT07== 200
000100	BIT06== 100
000040	BIT05== 40
000020	BIT04== 20
000010	BIT03== 10
000004	BIT02== 4
000002	BIT01== 2
000001	BIT00== 1

001000	BIT9== BIT09
000400	BIT8== BIT08
000200	BIT7== BIT07
000100	BIT6== BIT06
000040	BIT5== BIT05
000020	BIT4== BIT04
000010	BIT3== BIT03
000004	BIT2== BIT02
000002	BIT1== BIT01
000001	BIT0== BIT00

:
: EVENT FLAG DEFINITIONS
: EF32:EF17 RESERVED FOR SUPERVISOR TO PROGRAM COMMUNICATION

000040	EF.START== 32.	: START COMMAND WAS ISSUED
000037	EF.RESTART== 31.	: RESTART COMMAND WAS ISSUED
000036	EF.CONTINUE== 30.	: CONTINUE COMMAND WAS ISSUED
000035	EF.NEW== 29.	: A NEW PASS HAS BEEN STARTED
000034	EF.PWR== 28.	: A POWER-FAIL/POWER-UP OCCURRED

:
: PRIORITY LEVEL DEFINITIONS

000340	PRI07== 340
000300	PRI06== 300

```

000240      PRI05== 240
000200      PRI04== 200
000140      PRI03== 140
000100      PRI02== 100
000040      PRI01== 40
000000      PRI00== 0
:
:OPERATOR FLAG BITS
:
000004      EVL==      4
000010      LOT==     10
000020      ADR==     20
000040      IDU==     40
000100      ISR==    100
000200      UAM==    200
000400      BOE==    400
001000      PNT==   1000
002000      PRI==   2000
004000      IXE==   4000
010000      IBE==  10000
020000      IER==  20000
040000      LOE==  40000
100000      HOE== 100000
    
```

212
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252

: REGISTER USAGE.

```

:
:      R0 - PASSES PARAMETERS TO/FROM DIAGNOSTIC SUPERVISOR.
:      R1 - COMMAND SEQUENCE TABLE POINTER.
:      R2 - GENERAL PURPOSE REGISTER.
:      R3 - GENERAL PURPOSE REGISTER.
:      R4 - GENERAL PURPOSE REGISTER.
:      R5 - CURRENT LOGICAL DEVICE NUMBER X 2.
:      R6 - STACK POINTER.
:      R7 - PROGRAM COUNTER.
    
```

:THE FOLLOWING ARE BIT DEFINITIONS FOR THE TSSR REGISTERS.

```

100000      TS.SC==100000      :SPECIAL CONDITION BIT.
040000      TS.UPE==40000      :UNIBUS PARITY ERROR
020000      TS.SPE==20000      :SERIAL BUS PARITY ERROR.
010000      TS.RMR==10000      :REGISTER MODIFICATION REFUSED.
004000      TS.NXM==4000      :NON-EXISTENT MEMORY.
002000      TS.NBA==2000      :NEED BUFFER ADDRESS.
001000      TS.A17==1000      :BUS ADDRESS BIT 17.
000400      TS.A16==400      :BUS ADDRESS BIT 16.
000200      TS.SSR==200      :UNIT READY BIT.
000100      TS.OFL==100      :OFF LINE.
177717      TSC.FCC==177717    :FATAL CLASS CODE MASK.
177761      TSC.TCC==177761    :TERMINATION CLASS CODE MASK.
    
```

:THE FOLLOWING ARE BIT DEFINITIONS FOR THE COMMAND WORD

```

100000      ACK.C==100000      :ACKNOWLEDGE BIT
040000      CVC.C==40000      :CLEAR VOLUME CHECK.
020000      OPP.C==20000      :OPPOSITE BIT
010000      SWB.C==10000      :SWAP BYTE BIT
    
```

```

253      004000      MOD.C3==4000      :MODE BIT 3
254      004000      BRFC==4000      :BYTE/RECORD/FILE COUNT FLAG BIT. NOT USED
255      :BY TS05 BUT USED INTERNALLY BY THIS PROGRAM ONLY.
256      002000      MOD.C2==2000      :MODE BIT 2
257      001000      MOD.C1==1000      :MODE BIT 1
258      000400      MOD.C0==400      :MODE BIT 0
259      000200      IE.C==200      :INTERRUPT ENABLE
260      000100      FMT.C1==100      :FORMAT BIT 1
261      000100      VFY.C==100      :WRITE VERIFY FLAG BIT. INTERNAL USE ONLY.
262      :NOT USED BY TS05.
263      000040      FMT.C0==40      :FORMAT BIT 0.
264      000040      JMP.C==40      :JUMP BIT-TO DIRECT THIS PROGRAM TO JUMP TO
265      :A CERTAIN LOCATION IN THE COMMAND SEQUENCE
266      :TABLE. INTERNAL USE ONLY.
267      000020      CMD.C4==20      :COMMAND BIT 4
268      000020      DLY.C==20      :INSERT DELAY. INTERNAL USE ONLY.
269      000010      CMD.C3==10      :COMMAND BIT 3
270      000004      CMD.C2==4      :COMMAND BIT 2
271      000002      CMD.C1==2      :COMMAND BIT 1
272      000001      CMD.C0==1      :COMMAND BIT 0
273
274      :BIT DEFINITIONS FOR DEVICE CHARACTERISTICS.
275
276      000200      CH.ESS==200      :ENABLE SKIP TAPE MARKS STOP (STOP AT LOGICAL EOT).
277      000040      CH.EAI==40      :ENABLE ATTENTION INTERRUPTS.
278      000020      CH.ERI==20      :ENABLE MESSAGE BUFFER RELEASE INTERRUPTS.
279      000040      DFTSCH==CH.EAI :DEFAULT CHARACTERISTICS CODE.
280
281      :BIT DEFINITIONS FOR EXTENDED CONTROL WORD
282
283      000040      EF.HSS==40      :ENABLE HIGH SPEED SELECT
284      000030      EF.RWB==30      :ENABLE BOTH READ & WRITE BUFFERING
285      000020      EF.RBO==20      :ENABLE READ BUFFERING ONLY
286
287      :THE FOLLOWING INDICATES THE RELATIVE POSITIONS OF THE STATUS WORDS
288      :IN THE MESSAGE BUFFER.
289
290      000004      MS.RFC==4      :RESIDUAL FRAME COUNT.
291      000006      MS.XS0==6      :EXT STATUS REG 0
292      000010      MS.XS1==10     :EXT STATUS REG 1
293      000012      MS.XS2==12     :EXT STATUS REG 2
294      000014      MS.XS3==14     :EXT STATUS REG 3
295      000016      MS.XS4==16     :EXT STATUS REG 4
296
297      :THE FOLLOWING ARE BIT DEFINITIONS FOR EXTENDED STATUS REGISTER 0.
298
299      100000      XO.TMK==100000 :TAPE MARK.
300      040000      XO.RLS==40000  :RECORD LENGTH SHORT.
301      020000      XO.LET==20000  :LOGICAL EOT.
302      010000      XO.RLL==10000  :RECORD LENGTH LONG.
303      000100      XO.ONL==100    :ON LINE BIT.
304      000004      XO.WLK==4      :WRITE LOCK BIT
305      000002      XO.BOT==2      :BOT BIT.
306      000001      XO.EOT==1      :EOT BIT.
307
308      :THE FOLLOWING ARE BIT DEFINITIONS FOR EXTENDED STATUS REGISTER 2.
309
    
```



```

310      100000      X2.OPM==100000      ;OPERATION IN PROGRESS, TAPE MOVING
311      000200      X2.EFE==200      ;EXTENDED FEATURES ENABLED
312      000100      X2.BFE==100      ;BUFFERING ENABLED
313
314      ;THE FOLLOWING ARE BIT DEFINITIONS FOR EXTENDED STATUS REGISTER 3.
315
316      000010      X3.DCK==10      ;DENSITY CHECK.
317      157400      X3.RNY==157400      ;CAPSTAN RUNAWAY UDIAG ERROR CODE.
318
319      ;THE FOLLOWING ARE BIT DEFINITIONS FOR EXTENDED STATUS REGISTER 4.
320
321      100000      X4.HSS==100000      ;HIGH SPEED SWITCH INDICATING 100IPS
322      040000      X4.RCE== 40000      ;RETRY COUNT EXCEEDED
323
324
325      ;THE FOLLOWING DEFINITIONS SHOW THE RELATIVE POSITIONS OF THE COMMAND
326      ;PACKET ENTRIES.
327
328      000000      CP.CMD==0      ;CMDPKT+0==TS05 COMMAND.
329      000002      CP.ADL==2      ;CMDPKT+2==BUFFER ADDRESS LOW.
330      000004      CP.ADH==4      ;CMDPKT+4==BUFFER ADDRESS HIGH.
331      000006      CP.CNT==6      ;CKDPKT+6==BYTE/FILE/RECORD COUNT
332
333      ;MISCELLANEOUS DEFINITIONS.
334
335      000340      INTPRI==PRI07      ;PRIORITY TO BE USED IN INTERRUPT STATE.
336      000012      SCHCNT==12      ;ARBITRARY BYTE LENGTH FOR CHARACTERISTIC
337      ;BUFFER LENGTH. (EVEN #)
338      000020      MSGCNT==20      ;MESSAGE BUFFER LENGTH IN BYTES. (EVEN #)
339      000020      DIACNT==20      ;DIAGNOSTIC COMMAND BUFFER EXTENT.
340      004000      DATCNT==2048.      ;MAXIMUM RECORD LENGTH IN BYTES.
341      ;THIS COUNT SHOULD BE A MULTIPLE OF 256 TO INSURE
342      ;PROPER READ/WRITE BUFFER ALLOCATION BY THE SUPER.
343      177740      RNOPSC==177740      ;RANDOM # OF OPERATIONS MASK.
344      000007      RANP==7      ;CODE TO SELECT RANDOM PATTERN.
345      000020      RRECL==16.      ;READ RECOVERY ATTEMPT LIMIT.
346      000020      WRECL==16.      ;WRITE RECOVERY ATTEMPT LIMIT.
347      153624      RANBC==153624      ;CONSTANT USED TO RESET RANDOM # GENERATOR BASE.
348      032561      RANSC==32561      ;CONSTANT USED TO RESET RANDOM # SAVE LOCATION.
349      177774      NINUSE==177774      ;NOT IN USE CODE FOR DEVICE STATE TABLE.
350      177740      NCMD.C==ACK.C!CVC.C!OPP.C!SWB.C!MOD.C3!MOD.C2!MOD.C1!MOD.CO!IE.C!FMT.C1!FMT.CO
351      ;NOT "COMMAND" BITS.
352
353      ;THE FOLLOWING DEFINES THE COMMAND WORD FOR EACH TS05 COMMAND.
354
355      100013      DRI== ACK.C!CMD.C3!CMD.C1!CMD.CO      ;DRIVE INIT.
356
357
358      104001      RDF== ACK.C!BRF.C!CMD.CO      ;READ FORWARD
359
360
361      104401      RDR== ACK.C!BRF.C!MOD.CO!CMD.CO      ;READ REVERSE
362
363
364      104005      WRT== ACK.C!BRF.C!CMD.CO!CMD.C2      ;WRITE COMMAND
365
366
    
```

367	104105	WTV==	ACK.C!BRF.C!VFY.C!CMD.CO!CMD.C2 ;WRITE VERIFY
368			
369			
370	104010	SRF==	ACK.C!BRF.C!CMD.C3 ;SPACE RECORD FORWARD
371			
372			
373	104410	SRR==	ACK.C!BRF.C!MOD.CO!CMD.C3 ;SPACE RECORD REVERSE
374			
375			
376	105401	RNR==	ACK.C!BRF.C!MOD.C1!MOD.CO!CMD.CO ;READ REV RETRY1 - REREAD NEXT REVERSE, IE. SPACE FWD, READ REVERSE
377			
378			
379	125401	RNF==	ACK.C!BRF.C!OPP.C!MOD.C1!MOD.CO!CMD.CO ;READ REV RETRY2 - REREAD NEXT FORWARD, IE. READ FORWARD, SPACE REVERSE
380			
381			
382	105001	RPF==	ACK.C!BRF.C!MOD.C1!CMD.CO ;READ FWD RETRY1 - REREAD PREVIOUS FORWARD, IE. SPACE REVERSE, READ FORWARD
383			
384			
385	125001	RPR==	ACK.C!BRF.C!OPP.C!MOD.C1!CMD.CO ;READ FWD RETRY2 - REREAD PREVIOUS REVERSE, IE. READ REVERSE, SPACE FORWARD
386			
387			
388	105005	WRR==	ACK.C!MOD.C1!BRF.C!CMD.C2!CMD.CO ;WRITE RETRY
389			
390			
391	102010	RWD==	ACK.C!MOD.C2!CMD.C3 ;REWIND COMMAND
392			
393			
394	100012	MBR==	ACK.C!CMD.C3!CMD.C1 ;MESSAGE BUFFER RELEASE
395			
396			
397	100011	WTM==	ACK.C!CMD.C3!CMD.CO ;WRITE TAPE MARK.
398			
399			
400	101011	WTR==	ACK.C!MOD.C1!CMD.C3!CMD.CO ;WRITE TAPE MARK RETRY.
401			
402			
403	105010	SFF==	ACK.C!BRF.C!MOD.C1!CMD.C3 ;SPACE FILE FORWARD
404			
405			
406	105410	SFR==	ACK.C!BRF.C!MOD.CO!MOD.C1!CMD.C3 ;SPACE FILE REVERSE
407			
408			
409	100017	GES==	ACK.C!CMD.CO!CMD.C1!CMD.C2!CMD.C3 ;GET EXTENDED STATUS
410			
411			
412	100411	ERS==	ACK.C!MOD.CO!CMD.C3!CMD.CO ;ERASE 3 INCHES OF TAPE
413			
414			
415	100412	UNL==	ACK.C!MOD.CO!CMD.C3!CMD.C1 ;UNLOAD COMMAND
416			
417			
418	101012	CLN==	ACK.C!MOD.C1!CMD.C3!CMD.C1 ;ERASE TAPE.
419			
420			
421	140004	SCH==	ACK.C!CVC.C!CMD.C2 ;SET DEVICE CHARACTERISTICS.
422			
423	140006	WSM==	ACK.C!CVC.C!CMD.C2!CMD.C1 ;WRITE SUB-SYS MEM

```

424
425      100006      DIA==  ACK.C!CMD.C2!CMD.C1      ;DIAGNOSTICS.
426
427      000040      JMP==  JMP.C              ;JUMP TO 'N'TH COMMAND
428
429      000020      DLY==  DLY.C              ;DELAY 'N' MS.
430
431      177777      END==  177777            ;END OF COMMAND SEQUENCES
432
433      .SBTTL  GLOBAL DATA SECTION
434      :++
435      : THE GLOBAL DATA SECTION CONTAINS DATA THAT ARE USED
436      : IN MORE THAN ONE TEST.
437      :--
438
439
440
441      :          COMMAND PACKET.
442
443      :          =          <.+3>&177774      ;MUST BE ON MOD 4 BOUNDRY.
444 002330 000000      CNDPKT:: 0          ;1ST WORD IS TS05 COMMAND.
445 002332 000000      0          ;2ND WORD IS THE BUFFER LOW ADDRESS.
446 002334 000000      0          ;3RD WORD IS THE BUFFER HIGH ADDRESS.
447 002336 000000      0          ;4TH WORD IS THE BYTE/RECORD/FILE COUNT.
448
449
450
451      :          GET STATUS COMMAND PACKET.
452
453 002340 100017      GSCPK::  =          <.+3>&177774      ;MUST BE ON MOD 4 BOUNDRY.
454      .WORD      GES
455
456
457      :          MESSAGE BUFFER RELEASE COMMAND PACKET.
458
459      .          =          <.+3>&177774      ;MUST BE ON MOD 4 BOUNDRY.
460 002344 100012      BRCPK::  .WORD      MBR
461
462
463
464      :          REWIND COMMAND PACKET (USED IN ERROR RECOVERY ONLY)
465
466      .          =          <.+3>&177774      ;MUST BE ON MOD 4 BOUNDRY.
467 002350
468 002350 102010      RWCpk::  .WORD      RWD
469 002352 000001      .WORD      1
470
471
472
473      :          WORK AREA FOR ANALYSIS OF MESSAGE PACKET CONTENTS.
474 002354      MSGPKT::  .BLKW  8.          ;1ST WORD:: MESSAGE TYPE.
475      ;2ND WORD:: DATA FIELD LENGTH.
476      ;3RD WORD:: RESIDUAL FRAME COUNT.
477      ;4TH WORD:: XSTAT0
478      ;5TH WORD:: XSTAT1
479      ;6TH WORD:: XSTAT2
480      ;7TH WORD:: XSTAT3
    
```



```

481                                     ;8TH WORD:: XSTAT4
482                                     ;
483                                     ; MESSAGE PACKETS.
484 002374 MSGPK0:: .BLKW 8.           ;MESSAGE PACKET FOR DEVICE #0
485 002414 MSGPK1:: .BLKW 8.           ;MESSAGE PACKET FOR DEVICE #1
486 002434 MSGPK2:: .BLKW 8.           ;MESSAGE PACKET FOR DEVICE #2
487 002454 MSGPK3:: .BLKW 8.           ;MESSAGE PACKET FOR DEVICE #3
488
489                                     ;
490                                     ; SET CHARACTERISTIC BLOCK.
491 002474 002374 SCHBK:: MSGPK0       ;1ST WORD:: MSGPKT ADDR LO(SET UP BY EXECUTE ROUTINE).
492 002476 000000           0           ;2ND WORD:: MSGPKT ADDR HI.
493 002500 000020           MSGCNT      ;3RD WORD:: MSG BUFFER LENGTH (BYTES)
494 002502 000040           CH.EAI     ;4TH WORD:: CHARACTERISTICS WORD(SET BY SETUP ROUTINE).
495 002504 000000           0           ;5TH WORD:: HSP & BUFFER CONTROL ON EXT'D FEATURES
496
497
498                                     ;
499                                     ; WRITE SUB-SYSTEM MEMORY CHARACTERISTIC BLOCK.
500 002506 000000 WSMBK:: 0           ;1ST WORD:: SEL 0
501 002510 000000           0           ;2ND WORD:: SEL 2
502 002512 000000           0           ;3RD WORD:: SEL 4
503
504                                     ;
505                                     ; TS05 REGISTER ADDRESSES.
506 002514 TSDB:: .BLKW 4             ;TS05 DATA BUFFER ADDRESSES.
507 002524 TSSR:: .BLKW 4             ;TS05 STATUS REGISTER ADDRESSES.
508 002534 TSVCT:: .BLKW 4            ;TS05 VECTOR ADDRESSES.
509           002514 TSBA==TSDB       ;DATA BUFFER ADDRESS REGISTER.
510
511
512                                     ;
513                                     ; ADDRESSES OF MESSAGE PACKETS.
514 002544 002374 MSGPKA:: MSGPK0      ;DEVICE 0.
515 002546 002414           MSGPK1      ;DEVICE 1.
516 002550 002434           MSGPK2      ;DEVICE 2.
517 002552 002454           MSGPK3      ;DEVICE 3.
518
519                                     ;
520                                     ; ADDRESSES OF INTERRUPT HANDLING ROUTINES.
521 002554 010034 TS5INT:: TSSINO      ;DEVICE 0.
522 002556 010042           TSSIN1      ;DEVICE 1.
523 002560 010050           TSSIN2      ;DEVICE 2.
524 002562 010056           TSSIN3      ;DEVICE 3.
525
526                                     ;
527                                     ; TS05 CODE LEVELS, WILL BE STORED AFTER SCH CMD IN BASIC FUNCTION TEST
528 002564 000000 TS5CL:: 0           ;DEVICE 0
529 002566 000000           0           ;DEVICE 1
530 002570 000000           0           ;DEVICE 2
531 002572 000000           0           ;DEVICE 3
532
533                                     ;
534                                     ; TS05 EXT. FEA & BUF. ENA SW'S, WILL BE STORED AFTER SCH CMD IN BASIC FUNCTION TEST
535 002574 000000 TS5SW:: 0           ;DEVICE 0
536 002576 000000           0           ;DEVICE 1
537 002600 000000           0           ;DEVICE 2
    
```

```

538 002602 000000          0          ;DEVICE 3
539
540
541 : UNIT NUMBERS OF ALL DEVICES BEING TESTED(1-4).
542 : WHEN DEVICE IS NOT IN USE, IT,S LOCATION WILL = -3.
543 : RS WILL ALWAYS CONTAIN THE PRESENT LOGICAL UNIT NUMBER X 2.
544 002604 177774  DEVTBL:: .WORD NINUSE
545 002606 177774      .WORD NINUSE
546 002610 177774      .WORD NINUSE
547 002612 177774      .WORD NINUSE
548 002614 177777      .WORD END
549
550
551 : BAD TAPE TABLE POINTER: USED BY WRITE RETRY ROUTINE
552 : 'WRTY' TO LOG BAD TAPE SPOTS ON UNITS UNDER TEST
553
554 002616 003046  BTADDR:: BT0
555 002620 003120      BT1
556 002622 003172      BT2
557 002624 003244      BT3
558 : COUNT R AREA.
559
560          002626  CNTBGN=.
561 002626  WRBC:: .BLKW 20          ;BYTES WRITTEN.
562 002666  RRBC:: .BLKW 20          ;BYTES READ REV.
563 002726  RFBC:: .BLKW 20          ;BYTES READ FWD.
564 002766  WRREC:: .BLKW 4          ;RECOVERABLE WRITE ERRORS.
565 002776  WRUNR:: .BLKW 4          ;UNRECOVERABLE WRITE ERRORS.
566 003006  RRREC:: .BLKW 4          ;RECOVERABLE READ REV ERRORS.
567 003016  RRUNR:: .BLKW 4          ;UNRECOVERABLE READ REV ERRORS.
568 003026  RFREC:: .BLKW 4          ;RECOVERABLE READ FWD ERRORS.
569 003036  RFUNR:: .BLKW 4          ;UNRECOVERABLE READ FWD ERRORS.
570 003046  BT0:: .BLKW 21.         ;UNIT 0 BAT TAPE SPOTS LOG
571 003120  BT1:: .BLKW 21.         ;UNIT 1 BAT TAPE SPOTS LOG
572 003172  BT2:: .BLKW 21.         ;UNIT 2 BAT TAPE SPOTS LOG
573 003244  BT3:: .BLKW 21.         ;UNIT 3 BAT TAPE SPOTS LOG
574 003316  WRTYCT:: .BLKW 4        ;WRITE RETRY COUNTER
575 003326  PASCNT:: .BLKW 4        ;PASS COUNT.
576 003336  SCCNT:: .BLKW 4        ;SPECIAL CONDITION COUNT.
577 003346  VFYCN:: .BLKW 4        ;COUNT OF TS05 DATA COMPARE ERRORS.
578 003356  HRDCNT:: .BLKW 4       ;COUNT OF HARD ERRORS.
579 003366  FTLCNT:: .BLKW 4       ;COUNT OF FATAL ERRORS.
580          003376  CNTEND=.        ;END OF STATICTICAL COUNTERS.
581 003376  RECCNT:: .BLKW 4        ;NUMBER OF RECORDS FROM BOT: CLEARED ON REWIND
582          000550  CNTLEN==CNTEND-CNTBGN ;AND WHEN RESTARTING OR CONTINUING TEST 2.
583          ;LENGTH OF STATISTICAL COUNTER AREA.
584
585
586 : THE FOLLOWING ARE THE DEFINITIONS OF VARIABLES
587 : USED BY THE PROGRAM.
588
589 003406 000000  DATAWT:: .WORD 0          ;WRITE BUFFER ADDRESS.
590          003406  DIABLK==DATAWT      ;WRITE BUFFER ALSO USED FOR DIAG CMD.
591 003410 000000  DATARD:: .WORD 0          ;READ BUFFER ADDRESS.
592 003412 000000  NCNT:: .WORD 0          ;STORAGE FOR VALUE OF N.
593 003414 000000  NCNT1:: .WORD 0         ;TEMP STORAGE FOR VALUE OF N.
594 003416 000000  BRFCNT:: .WORD 0         ;STORAGE FOR BPCR VALUE.
    
```



```

595 003420 177777 CMDWRD:: .WORD END ;CONTAINS COMMAND WORD BEING EXECUTED PRESENTLY.
596 003422 177777 CMDSAV:: .WORD END ;SAVE LOCATION FOR CMD WORD DURING ERROR RECOVERY
597 003424 177777 PCMDWD:: .WORD END ;CONTAINS PREVIOUS COMMAND WORD.
598 003426 000000 CMDLG:: .WORD 0 ;CURRENT COMMAND LOGGING CODE.
599 003430 000000 LENMSK:: .WORD 0 ;RANDOM WRITE LENGTH MASK, TO BE SET UP BY TESTS
600 003432 153624 RANB:: .WORD 153624 ;RANDOM # GENERATOR BASE.
601 003434 032561 RANS:: .WORD 32561 ;RANDOM # SAVE LOCATION.
602 003436 000000 TIME1:: .WORD 0 ;TIME COUNT 1.
603 003440 000000 TIME2:: .WORD 0 ;TIME COUNT 2.
604 003442 000000 JLOOP:: .WORD 0 ;JMP COMMAND LOOP COUNT.
605 003444 000000 JLOC:: .WORD 0 ;JMP COMMAND LOCATION COUNT.
606 003446 000000 PATERN:: .WORD 0 ;PATTERN SELECT CODE.
607 003450 000000 CTCC:: .WORD 0 ;CURRENT TERMINATION CLASS CODE.
608 003452 000000 R5SAVE:: .WORD 0 ;LOCATION FOR SAVING CURRENT DEVICE POINTER.
609 003454 000000 TSSREG:: .WORD 0 ;CURRENT STATUS REGISTER.
610 003456 000000 WTMFLG:: .WORD 0 ;WRITE TAPE MARK FLAG
611
612
613 ; ERROR FLAG AREA, THESE FLAGS ARE CLEARED DURING INITIALIZATION AND
614 ; AFTER EACH COMMAND IS COMPLETED.
615
616 003460 000000 BGNFLG=.
617 003462 000 RETRYC:: .WORD 0 ;# OF RECOVERY ATTEMPTS EXECUTED.
618 003463 000 RPTCNT:: .BYTE 0 ;WRITE REPEAT ON SAME SPOT CNTR: 4 PER WRITE RETRY
619 003464 000 WRTYFG:: .BYTE 0 ;WRITE RETRY ON SAME SPOT IN PROGRESS FLAG
620 003465 000 WRTYER:: .BYTE 0 ;WRITE RETRY ON SAME SPOT ERROR FLAG
621 003466 000 RECLOG:: .BYTE 0 ;RECORD COUNT HAS BEEN UPDATED FOR THIS RECORD.
622 003467 000 ERLOG:: .BYTE 0 ;DATA BYTES AND ERRORS HAVE BEEN LOGGED FOR THIS RECORD.
623 003470 000 RWERR:: .BYTE 0 ;READ/WRITE ERROR HAS OCCURED.
624 003471 000 UNREC:: .BYTE 0 ;UNRECOVERABLE ERROR HAS OCCURED.
625 .EVEN ERRREC:: .BYTE 0 ;ERROR RECOVERY MODE.
626 003472 ENDERF=.
627
628 ; ADDITIONAL FLAGS, THESE FLAGS ARE CLEARED DURING INITIALIZATION.
629
630
631 003472 INTFLG:: .BLKW 4 ;INTERRUPT OCCURRED FLAGS FOR EACH DEVICE.
632 003502 EOTFLG:: .BLKW 4 ;EOT/BOT FLAGS FOR EACH DEVICE (XSTATO).
633 003512 000000 BTPT:: .WORD 0 ;BAD TAPE SPOT POINTER TO BT0-BT3 VIA BTADDR
634 003514 000 EXPBOT:: .BYTE 0 ;BOT IS EXPECTED, DO NOT ABORT ON BOT/FUNC RTI.
635 003515 000 RANDOM:: .BYTE 0 ;RANDOM EVERYTHING FLAG.
636 003516 000 VFYFLG:: .BYTE 0 ;SET DURING WRITE/VERIFY COMMAND.
637 003517 000 RPTFLG:: .BYTE 0 ;PERFORMANCE REPORT HAS BEEN REQUESTED.
638 003520 000 SWBFLG:: .BYTE 0 ;ENABLES SWAP BYTE FUNCTION WHEN NOT EQUAL TO ZERO.
639 003521 000 IRE:: .BYTE 0 ;INHIBIT RESIDUAL FRAME COUNT ERROR REPORT.
640 003522 000 DROPED:: .BYTE 0 ;CURRENT UNIT HAS BEEN DROPPED
641 003523 000 T1SWB:: .BYTE 0 ;TEST1 SWAP BYTES FLAG
642 003524 000 ALLEOT:: .BYTE 0 ;ALL UNITS @ EOT FLAG
643 003525 000 ERSFLG:: .BYTE 0 ;ERASE FLAG: DO ERASE AFTER A SPACE REV TO DELETE
644 ;BADLY WRITTEN RECORD. 1 TO 4 ERASES LEAVING
645 ;A 3 TO 12 INCH GAP MAY RESULT.
646 .EVEN
647 003526 ENDFLG=.
648
649 ; ADDITIONAL FLAGS, THESE FLAGS ARE CLEARED ONLY AFTER BEING CHECKED.
650
651 003526 000 STAF LG:: .BYTE 0 ;START FLAG - SET BY INIT CODE IF STARTING.
    
```



```

652 003527      000      PWRFLG:: .BYTE 0      ;POWER FAILURE FLAG - SET ONLY DURING INIT.
653 003530      000      TRAPD4:: .BYTE 0      ;TRAPED AT 4 FLAG
654 003531      000      MISCFG:: .BYTE 0      ;MISCELLANEOUS FLAG
655 003532     000000     TSUNT:: .WORD 0      ;NUMBER OF THE UNIT UNDER TEST PLUS HSSP&BUF
656 003534     000000     TSNP:: .WORD 0      ;FOR PRINT OUT UNIT # ONLY
657
658      ;      OPERATOR FLAG SETTINGS PASSED BY DIAG. SUPERVISOR IN A 16 BIT WORD
659      ;      SEE GLOBAL EQUATES SECTION FOR FLAG BIT LIST
660
661 003536     000000     OPFLAG:: .WORD 0      ;READ ONLY OPERATOR FLAG WORD
662      .EVEN
663
664      ;THE FOLLOWING IS THE COMMAND SEQUENCE TABLE. THE TABLE
665      ;HAS DEFAULT VALUES AT PROGRAM LOAD AS SHOWN. THESE VALUES
666      ;CAN BE UPDATED BY A TEST OR BY OPERATOR INPUT.
667
668 003540     140004     CMDSEQ:: .WORD SCH      ;SET CHARACTERISTICS.
669 003542     000040     .WORD CH.EAI
670 003544     000001     .WORD 1
671 003546     000000     .WORD 0
672 003550     102010     CMDSE2:: .WORD RWD      ;REWIND.
673 003552     000001     .WORD 1      ;BYTE COUNT.
674 003554     000001     .WORD 1      ;ONCE.
675 003556     000007     .WORD RANP     ;PATTERN.
676 003560     104005     .WORD WRT      ;WRITE.
677 003562     004000     .WORD DATCNT   ;MAX BUFFER LENGTH.
678 003564     076400     .WORD 32000.   ;32,000 RECORDS.
679 003566     000007     .WORD RANP     ;RANDOM PATTERN.
680 003570     104401     .WORD RDR      ;READ REV.
681 003572     004000     .WORD DATCNT   ;MAX BUFFER LENGTH.
682 003574     076400     .WORD 32000.   ;32,000 RECORDS
683 003576     000007     .WORD RANP     ;RANDOM PATTERN.
684 003600     104001     .WORD RDF      ;READ FWD.
685 003602     004000     .WORD DATCNT   ;MAX BUFFER LENGTH.
686 003604     076400     .WORD 32000.   ;32,000 RECORDS.
687 003606     000007     .WORD RANP     ;RANDOM PATTERN.
688 003610     102010     .WORD RWD      ;REWIND.
689 003612     000001     .WORD 1      ;BYTE COUNT.
690 003614     000001     .WORD 1      ;ONCE.
691 003616     000007     .WORD RANP     ;PATTERN.
692 003620     .BLKW 40.   ;EXTENSTION TO DOUBLE BUFFER SIZE
693 003740     177777     SEQEND:: .WORD END    ;SOFT END OF SEQUENCE TABLE.
694 003742     177777     .WORD END
695 003744     177777     .WORD END
696 003746     177777     .WORD END
697 003750     177777     .WORD END
698      ;HARD END OF SEQUENCE TABLE.
699      ;THE FOLLOWING IS THE TS05 COMMAND TABLE
700 003752     100013     CMDTBL:: .WORD DRI     ;DRIVE INIT.
701 003754     104001     .WORD RDF      ;READ FORWARD.
702 003756     104401     .WORD RDR      ;READ REVERSE.
703 003760     104005     .WORD WRT      ;WRITE
704 003762     104105     .WORD WTV      ;WRITE/VERIFY. (WRITE ALL RECORDS, RDR AND
705      ;CHECK DATA ON ALL RECORDS, RDF AND
706      ;CHECK DATA ON ALL RECORDS.)
707 003764     104010     .WORD SRF      ;SPACE 'N' RECORDS FORWARD.
708 003766     104410     .WORD SRR      ;SPACE 'N' RECORDS REVERSE.
    
```

709	003770	105401	.WORD	RNR	:READ NEXT REVERSE. I.E., SPACE FWD, READ REVERSE.
710	003772	125401	.WORD	RNF	:READ NEXT FORWARD, I.E., READ FORWARD, SPACE REVERSE.
711	003774	105001	.WORD	RPF	:READ PREVIOUS FORWARD. I.E., SPACE REVERSE, READ FORWARD
712	003776	125001	.WORD	RPR	:READ PREVIOUS REVERSE. I.E., READ REVERSE, SPACE FORWARD
713	004000	105005	.WORD	WRR	:WRITE RETRY.
714	004002	102010	.WORD	RWD	:REWIND.
715	004004	100012	.WORD	MBR	:MESSAGE BUFFER RELEASE
716	004006	100011	.WORD	WTM	:WRITE TAPE MARK
717	004010	101011	.WORD	WTR	:WRITE TAPE MARK RETRY.
718	004012	105010	.WORD	SFF	:SPACE 'N' FILES FORWARD.
719	004014	105410	.WORD	SFR	:SPACE 'N' FILES REVERSE.
720	004016	100017	.WORD	GES	:GET EXTENDED STATUS.
721	004020	100411	.WORD	ERS	:ERASE 3 INCHES OF TAPE.
722	004022	100412	.WORD	UNL	:REWIND AND UNLOAD.
723	004024	101012	.WORD	CLN	:CLEAR TAPE.
724	004026	140004	.WORD	SCH	:SET CHARACTERISTICS.
725	004030	100006	.WORD	DIA	:DIAGNOSTIC COMMAND.
726	004032	000040	.WORD	JMP	:JUMP TO THE NTH COMMAND IN THE SEQUENCE.
727	004034	000020	.WORD	DLY	:DELAY 'N' MS.
728	004036	177777	.WORD	END	:END OF COMMAND TABLE

: THE FOLLOWING TABLE CONTAINS THE ASCII FOR EACH COMMAND.

732	004040	104	122	111	CMDASC:: .ASCII /DRI/	:DRIVE INIT.
733	004043	122	104	106	.ASCII /RDF/	:READ FORWARD.
734	004046	122	104	122	.ASCII /RDR/	:READ REVERSE.
735	004051	127	122	124	.ASCII /WRT/	:WRITE
736	004054	127	124	126	.ASCII /WTV/	:WRITE/VERIFY. (WRITE ALL RECORDS, RDR AND CHECK DATA ON ALL RECORDS, RDF AND CHECK DATA ON ALL RECORDS.)
738	004057	123	122	106	.ASCII /SRF/	:SPACE 'N' RECORDS FORWARD.
739	004062	123	122	122	.ASCII /SRR/	:SPACE 'N' RECORDS REVERSE.
740	004065	122	116	122	.ASCII /RNR/	:READ NEXT REVERSE. I.E., SPACE FWD READ REVERSE.
741	004070	122	116	106	.ASCII /RNF/	:READ NEXT FORWARD, I.E., READ FORWARD, SPACE REVERSE.
742	004073	122	120	106	.ASCII /RPF/	:READ PREVIOUS FORWARD. I.E., SPACE REVERSE, READ FORWARD
743	004076	122	120	122	.ASCII /RPR/	:READ PREVIOUS REVERSE. I.E., READ REVERSE, SPACE FORWARD
744	004101	127	122	122	.ASCII /WRR/	:WRITE RETRY.
745	004104	122	127	104	.ASCII /RWD/	:REWIND.
746	004107	115	102	122	.ASCII /MBR/	:MESSAGE BUFFER RELEASE
747	004112	127	124	115	.ASCII /WTM/	:WRITE TAPE MARK
748	004115	127	124	122	.ASCII /WTR/	:WRITE TAPE MARK RETRY.
749	004120	123	106	106	.ASCII /SFF/	:SPACE 'N' FILES FORWARD.
750	004123	123	106	122	.ASCII /SFR/	:SPACE 'N' FILES REVERSE.
751	004126	107	105	123	.ASCII /GES/	:GET EXTENDED STATUS.
752	004131	105	122	123	.ASCII /ERS/	:ERASE 3 INCHES OF TAPE.
753	004134	125	116	114	.ASCII /UNL/	:REWIND AND UNLOAD.
754	004137	103	114	116	.ASCII /CLN/	:CLEAN TAPE.
755	004142	123	103	110	.ASCII /SCH/	:SET CHARACTERISTICS. WHERE BRF=200, 40, 20, 0.
756						:SEE TSV05/TS05 PROGRAMMING SPECIFICATION FOR DESCRIPTION.
757	004145	104	111	101	.ASCII /DIA/	:DIAGNOSTICS. SEE TSV05/TS05 PROGRAMMING SPECIFICATION FOR DESCRIPTION. ODT MUST BE USED TO LOAD DIAGNOSTIC DATA INTO THE WRITE BUFFER BEFORE THIS CMD IS ISSUED.
758						:JUMP TO THE NTH COMMAND IN THE COMMAND
759						:SEQUENCE TABLE, WHERE N IS DEFINED IN
760	004150	112	115	120	.ASCII /JMP/	:THE # OF OPERATIONS.
761						:DELAY 'N' MS, WHERE N IS DEFINED IN
762						:THE # OF OPERATIONS.
763	004153	104	114	131	.ASCII /DLY/	:END OF COMMAND SEQUENCE.
764						
765	004156	105	116	104	.ASCII /END/	

766
767
768
769
770
771
772
773
774
775
776
777
778
785
786
787
788
789
790
791
792
793
794
795
796
797
798
799
800
801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828

.EVEN

.SBTTL GLOBAL TEXT SECTION

```

:++
: THE GLOBAL TEXT SECTION CONTAINS FORMAT STATEMENTS,
: MESSAGES, AND ASCII INFORMATION THAT ARE USED IN
: MORE THAN ONE TEST.
:--
    
```

```

:
: FORMAT STATEMENTS USED IN PRINT CALLS
:
    
```

.NLIST BEX

```

045 CODELM:: .ASCIZ /%N%UNIT %D1% TS05 CODE LEVEL %O3%N%N/
045 SWSET:: .ASCIZ /%N%UNIT %D1% TS05 SWITCH SETTINGS %O3%N%N/
.EVEN
130 HALTM:: .ASCIZ /XXX CMD - TYPE <CR> TO CONTINUE/
104 CMDPKM:: .ASCIZ /CMD PACKET ADR NOT ON MODULO 4 BOUNDARY: RELOAD!/
.EVEN
124 WTVERM:: .ASCIZ /DATA COMPARE ERROR/
040 TOERM:: .ASCIZ /NO TSV05 RESPONSE/
104 SCERM:: .ASCIZ /UNDEFINED SPEC COND/
103 RFCERM:: .ASCIZ /RFC NON ZERO/
126 NSSRM:: .ASCIZ /TSV05 NOT READY/
124 RLEXM:: .ASCIZ /RETRY LIMIT EXCEEDED/
111 ATTNM:: .ASCIZ /DRIVE OFF LINE/
116 FUNRM:: .ASCIZ /FUNCTION REJECT/
124 FATSM:: .ASCIZ /FATAL SUBSYSTEM ERROR/
040 NOINTM:: .ASCIZ /NO INTERRUPT/
120 TSAM:: .ASCIZ /TAPE STATUS ALERT/
117 TOOMM:: .ASCIZ /TOO MANY INTERRUPTS/
120 RNYM:: .ASCIZ /CAPSTAN RUNAWAY-GET STATUS RESULTS:/
103 RERM:: .ASCIZ /RECOVERABLE ERROR/
122 URERM:: .ASCIZ /UNRECOVERABLE ERROR/
045 DROPDM:: .ASCIZ /%N%ADROPPED UNIT %D1%N/
045 AUDRPM:: .ASCIZ /%N%AALL UNITS DROPPED%N%N/
045 AUDRUN:: .ASCIZ /%N%ADIAGNOSTIC ONLY SUPPORTS ONE CONTROLLER%N%N/
045 DTAER2:: .ASCIZ "%N%ABYTE:%D4%S2%AWAS:%B8%S2%AS/B:%B8%N"
064 DTAER3:: .ASCIZ "%D4%A BYTES IN ERROR OUT OF %D4%N"
116 DTAER4:: .ASCIZ /%ANO DATA READ%N/
122 DTAER5:: .ASCIZ /%ARECORD TOO LONG: >%O4%A BYTES%N/
122 NURTY1:: .ASCIZ /%ARECOVERED ON RETRY #%D2%N/
104 OFLINM:: .ASCIZ /%ADRIVE %D1%A OFF LINE%N/
107 GETSTM:: .ASCIZ /%AGET STATUS CMD RESULTS:%N/
045 NODEV:: .ASCII /%N%ABUS TRAP AT %O6%N/
.ASCIZ /%AINTERFACE BAD OR TSDB NOT SET TO ABOVE ADDRESS%N/
052 UNIWLK:: .ASCIZ / *****TAPE IS WRITE-LOCKED AND WILL CAUSE ERRORS*****/
000 CRLF:: .ASCIZ /%N/
045 CRLFSP:: .ASCIZ /%N%S7/
.LIST BEX
.EVEN
    
```



```

829      .SBTTL  GLOBAL ERROR REPORT SECTION
830
831      :++
832      : THE GLOBAL ERROR REPORT SECTION CONTAINS THE PRINTB AND PRINTX CALLS
833      : THAT ARE USED IN MORE THAN ONE TEST.  IT ALSO INCLUDES THE ASCII MESSAGES
834      : THAT ARE USED BY THE PRINTB AND PRINTX CALLS..
835      :--
836
837
838      BGNMSG  DTAERM
839      DTAERM::
840      DATERM::PRINTB  #STAER1,TSNP,PASCNT(R5),RECCNT(R5)
841
842      005752  016546  003376
843      005756  016546  003326
844      005762  013746  003534
845      005766  012746  006436
846      005772  012746  000004
847      005776  010600
848      006000  104414
849      006002  062706  000012
850      006006  012746  006530
851      006012  012746  000001
852      006016  010600
853      006020  104414
854      006022  062706  000004
855      006026  010237  007066
856      006032  010337  003436
857      006036  010437  003440
858      006042  004737  010064
859      006046  013702  007066
860      006052  010337  007066
861      006056  013703  003436
862      006062  013704  003440
863      006066  013746  007066
864      006072  012746  006562
865      006076  012746  000002
866      006102  010600
867      006104  104414
868      006106  062706  000006
869      006112  000167
870      006114  000000
871
872      EXIT  MSG
873
874      .EVEN
875
876      ENDMSG
877      L10002:
878
879      BGNMSG  STAERM
880      STAERM::
881      STAERM::PRINTB  #STAER1,TSNP,PASCNT(R5),RECCNT(R5)
882
883      006116  016546  003376
884      006120  016546  003326
885      006124  013746  003534
886      006130  012746  006436
887      006134  012746  006436
888
889      MOV  RECCNT(R5),-(SP)
890      MOV  PASCNT(R5),-(SP)
891      MOV  TSNP, -(SP)
892      MOV  #STAER1, -(SP)
893      MOV  #4, -(SP)
894      MOV  SP,R0
895      TRAP C$PNTB
896      ADD  #12,SP
897
898      MOV  #STAER7, -(SP)
899      MOV  #1, -(SP)
900      MOV  SP,R0
901      TRAP C$PNTB
902      ADD  #4,SP
903
904      MOV  R2,RECCD      :SAVE R2
905      MOV  R3,TIME1     :SAVE R3
906      MOV  R4,TIME2     :SAVE R4
907      JSR  PC,RECTAP    ;RETRIEVE RECORD READ
908      MOV  RECCD,R2     :RESTORE R2
909      MOV  R3,RECCD     :SAVE RECORD READ
910      MOV  TIME1,R3     :RESTORE R3
911      MOV  TIME2,R4     :RESTORE R4
912      PRINTB #STAER6,RECCD :PRINT RECORD READ
913
914      MOV  RECCD, -(SP)
915      MOV  #STAER6, -(SP)
916      MOV  #2, -(SP)
917      MOV  SP,R0
918      TRAP C$PNTB
919      ADD  #6,SP
920
921      .WORD  JSJMP
922      .WORD  L10002-2-.
923
924      TRAP  C$MSG
925
926      BGNMSG  STAERM
927      STAERM::
928      STAERM::PRINTB  #STAER1,TSNP,PASCNT(R5),RECCNT(R5)
929
930      MOV  RECCNT(R5),-(SP)
931      MOV  PASCNT(R5),-(SP)
932      MOV  TSNP, -(SP)
933      MOV  #STAER1, -(SP)
    
```

006140	012746	000004				MOV	#4,-(SP)
006144	010600					MOV	SP,R0
006146	104414					TRAP	C\$PNTB
862 006150	062706	000012				ADD	#12,SP
006154			PRINTB	#STAER7			
006154	012746	006530				MOV	#STAER7,-(SP)
006160	012746	000001				MOV	#1,-(SP)
006164	010600					MOV	SP,R0
006166	104414					TRAP	C\$PNTB
006170	062706	000004				ADD	#4,SP
863 006174	013702	002330	MOV	CMDPKT,R2			
864 006200	042702	177740	BIC	#177740,R2			
865 006204	005302		DEC	R2			
866 006206	005702		TST	R2			:IF CMD IS A READ
867 006210	001016		BNE	50000\$			
868 006212	004737	010064	JSR	PC,RECTAP			:THEN RETRIEVE
869 006216	010337	010064	MOV	R3,RECTAP			:AND
870 006222			PRINTB	#STAER6,RECRE			:TYPE RECORD READ
006222	013746	007066				MOV	RECRE,-(SP)
006226	012746	006562				MOV	#STAER6,-(SP)
006232	012746	000002				MOV	#2,-(SP)
006236	010600					MOV	SP,R0
006240	104414					TRAP	C\$PNTB
006242	062706	000006				ADD	#6,SP
871 006246			50000\$: PRINTX	#STAER2			
006246	012746	006616				MOV	#STAER2,-(SP)
006252	012746	000001				MOV	#1,-(SP)
006256	010600					MOV	SP,R0
006260	104415					TRAP	C\$PNTX
006262	062706	000004				ADD	#4,SP
872 006266			PRINTX	#STAER3,CMDPKT,@TSDB(R5),MSGPKT+MS.RFC,TSSREG,CTCC			
006266	013746	003450				MOV	CTCC,-(SP)
006272	013746	003454				MOV	TSSREG,-(SP)
006276	013746	002360				MOV	MSGPKT+MS.RFC,-(SP)
006302	017546	002514				MOV	@TSDB(R5),-(SP)
006306	013746	002330				MOV	CMDPKT,-(SP)
006312	012746	006675				MOV	#STAER3,-(SP)
006316	012746	000006				MOV	#6,-(SP)
006322	010600					MOV	SP,R0
006324	104415					TRAP	C\$PNTX
006326	062706	000016				ADD	#16,SP
873 006332			PRINTX	#STAER4,CMDPKT+2,CMDPKT+4,CMDPKT+6			
006332	013746	002336				MOV	CMDPKT+6,-(SP)
006336	013746	002334				MOV	CMDPKT+4,-(SP)
006342	013746	002332				MOV	CMDPKT+2,-(SP)
006346	012746	006733				MOV	#STAER4,-(SP)
006352	012746	000004				MOV	#4,-(SP)
006356	010600					MOV	SP,R0
006360	104415					TRAP	C\$PNTX
006362	062706	000012				ADD	#12,SP
874 006366			PRINTX	#STAER5,MSGPKT+MS.XS0,MSGPKT+MS.XS1,MSGPKT+MS.XS2,MSGPKT+MS.XS3,MSGPKT+MS.XS			
006366	013746	002372				MOV	MSGPKT+MS.XS4,-(SP)
006372	013746	002370				MOV	MSGPKT+MS.XS3,-(SP)
006376	013746	002366				MOV	MSGPKT+MS.XS2,-(SP)
006402	013746	002364				MOV	MSGPKT+MS.XS1,-(SP)
006406	013746	002362				MOV	MSGPKT+MS.XS0,-(SP)
006412	012746	006753				MOV	#STAER5,-(SP)

```

006416 012746 000006
006422 010600
006424 104415
875 006426 062706 000016
006432
006432 000167
006434 000432
876
877
878 006436 045 101 130 STAER1:
879
880 006530 045 101 120 STAER7:
881 006562 045 123 061 STAER6:
882 006616 045 116 045 STAER2:
883 006675 045 117 066 STAER3:
884 006733 045 117 066 STAER4:
885 006740 045 117 066
886 006745 045 117 066
887 006753 045 101 130 STAER5:
888 007027 045 117 066
889
890
891 007066 000000
892
893 007070
007070
007070 104423
894
895
896
897
898
899
900
901
902
903
904
905
906
907
908
909
910
911
912
913
914
915
916
917
918
919
920
921
922
923
    
```

EXIT MSG

MOV #6,-(SP)
 MOV SP,R0
 TRAP C\$PNTX
 ADD #16,SP

.WORD JSJMP
 .WORD L10003-2-

```

.NLIST BEX
.ASCIIZ /%AXXX CMD FAILED - UNIT %D1%S3%APASS:%D5%S3%ARECORD:%D5%N/
.EVEN
.ASCIIZ /%APREVIOUS CMD WAS XXX /
.ASCIIZ /%S11%A* RECORD READ:%D5%A */
.ASCIIZ /%N%ACMDPKT%S2%ATSBA%S4%ARFC%S5%ATSSR%S3%ATCC%N/
.ASCIIZ /%06%S2%06%S2%06%S2%06%S2%D1%N/
.ASCII /%06%N/
.ASCII /%06%N/
.ASCII /%06%N/
.ASCII /%06%N/
.ASCII /%AXST0%S4%AXST1%S4%AXST2%S4%AXST3%S4%AXST4%N/
.ASCIIZ /%06%S2%06%S2%06%S2%06%S2%06%N/
.LIST BEX
.EVEN
    
```

RECREC: .WORD 0 ;RECORD READ FROM TAPE

ENDMSG

L10003:

TRAP C\$MSG

.SBTTL GLOBAL SUBROUTINES SECTION

```

:++
: THE GLOBAL SUBROUTINES SECTION CONTAINS THE SUBROUTINES
: THAT ARE USED IN MORE THAN ONE TEST.
:--
    
```

```

: +
: ROUTINE TO DO A SOFT INITIALIZE OF THE CONTROLLER
: BY WRITING INTO THE TSSR REGISTER. AFTER THE INIT,
: THE TSSR REGISTER IS TESTED FOR ERRORS. ANY ERRORS
: DETECTED SHOULD BE TREATED AS DEVICE FATAL ERRORS.
    
```

: INPUTS:

R5 CURRENT UNIT NUMBER

: OUTPUTS:

R0 CONTENTS OF TSSR, IF ERROR
 CARRY SET IF INIT WAS OKAY
 CLEAR IF FATAL ERROR

: CALLING SEQUENCE:

JSR PC,FIRSTU


```

924      :      JSR      PC,SOFINIT
925      :      BCS      CONTINUE
926      :      ERRDF      ;REPORT FATAL ERROR
927      :
928      :
929      :
930 007072 SOFINIT::
931      :
932 007072 012775 000000 002524      MOV      #0,@TSSR(R5)      ; (SAVREG) SAVE THE REGISTERS
933 007100 004737 012700      JSR      PC,WSSR      ; DO THE INIT.
934 007104 012703 000550      MOV      #360.,R3      ;WAIT FOR UNIT TO BE READY
935 007110 004737 007204 2$:      JSR      PC,WAITF      ; WAIT FOR SSR
936 007114 103416      BCS      3$
937 007116      DELAY      250
          MOV      #250,(PC)+
          .WORD      0
          MOV      LSDLY,(PC)+
          .WORD      0
          DEC      -6(PC)
          BNE      -4
          DEC      -22(PC)
          BNE      -20
938 007146 005303      DEC      R3
939 007150 001357      BNE      2$
940 007152 017500 002524 3$:      MOV      @TSSR(R5),R0      ;GET THE TSSR REGISTER
941 007156 010004      MOV      R0,R4      ;TSSR CONTENTS
942 007160 042704 176277      BIC      #^C<TS.A17!TS.A16!TS.OFL>,R4
943 007164 052704 002200      BIS      #TS.SSR!TS.NBA,R4      ;R4 HAS EXPECTED CONTENTS
944 007170 020400      CMP      R4,R0      ;ONLY EXPECTED BITS SET ?
945 007172 001402      BEQ      5$      ;BRANCH IF OKAY
946 007174 000241      CLC      ;CLEAR THE CARRY FOR ERROR
947 007176 000401      BR      10$      ;GO TO EXIT
948 007200 000261 5$:      SEC      ;SET THE CARRY BIT
949 007202 000207 10$:      RTS      PC      ;RETURN TO CALLER
950
951      :
952      : SUBROUTINE TO WAIT FOR THE SUBSYSTEM READY FLAG
953      :
954      : INPUTS:
955      :
956      :      R5      CURRENT UNIT NUMBER
957      :
958      :
959      : OUTPUTS:
960      :
961      :      R0      CONTENTS OF LAST TSSR READ
962      :      CARRY    SET - READY BIT SET
963      :              CLR - TIMEOUT WAITING FOR READY
964      :
965 007204      WAITF:: BREAK      ; DO A SUPVSR BREAK FIRST.
          TRAP      CSBRK
966 007206 012746 005670 2$:      MOV      #3000.,-(SP)      ; 300 MSEC TIMER.
967 007212 017500 002524      MOV      @TSSR(R5),R0      ;READ THE TSSR REGISTER
968 007216 105700      TSTB      R0      ;TEST FOR READY BIT SET
969 007220 100420      BMI      3$      ; EXIT ON STOP FLAG.
970 007222      DELAY      25      ; WAIT
          MOV      #25,(PC)+
    
```



```

1021 007326 032763 000100 000012      BIT    #X2.BFE,MS.XS2(R3)      ;BUFFER ENABLE SWITCH SET
1022 007334 001402                    BEQ    50$                      ;BR, IF SWITCH NOT SET
1023 007336 005237 002324                    INC    BENBSW                   ;SET SOFTWARE SWITCH FOR ENABLED
1024 007342                    50$:
1025 007342 000261                    55$: SEC                        ;SET CARRY NO TROUBLE
1026 007344 000401                    BR     70$                      ;EXIT
1027 007346 000241                    60$: CLC                       ;CARRY CLEAR = ERROR
1028 007350 017500 002524                    70$: MOV    @TSSR(R5),R0        ;RETURN TSSR CONTENTS
1029 007354 000207                    RTS     PC                       ;RETURN
1030
1031      ;+
1032      ;ROUTINE TO CHECK WRITE LOCK CONDITION
1033      ;INPUT:
1034      ;
1035      ;R4      ADDRESS OF COMMAND PACKET
1036      ;R5      CURRENT UNIT NUMBER
1037      ;
1038      ;-
1039      ;
1040      ;
1041 007356      WLKCHK::
1042 007356 010475 002514      10$: MOV    R4,@TSDB(R5)        ;SEND OUT COMMAND
1043 007362 004737 007204      JSR    PC,WAITF               ;WAIT FOR SSR
1044 007366 103401                    BCS    40$                     ;BR, IF SSR IS SET AND OK
1045 007370 000420                    BR     60$                     ;BR IF TROUBLE CARRY = CLEAR
1046 007372 005724                    40$: TST    (R4)+              ;STEP IT
1047 007374 011402                    MOV    (R4),R2                ;POINT TO WRT CHARA DATA PACKET
1048 007376 011203                    MOV    (R2),R3                ;GET ADDRESS OF MESSAGE BUFFER
1049 007400 032763 000004 000006      BIT    #X0.WLK,MS.XS0(R3)    ;IS UNIT WRITE LOCKED?
1050 007406 001407                    BEQ    55$                     ;NO,PROCEED WITH TESTING
1051 007410                    ERRHRD 1,UNIWLK              ;TAPE IS WRITE LOCKED
1052      ;
1053      ;TRAP      CSERHRD
1054      ;.WORD    1
1055      ;.WORD    UNIWLK
1056      ;.WORD    0
1057 007410 104456
1058 007412 000001
1059 007414 005653
1060 007416 000000
1061 007420 004737 017156      JSR    PC,DROPU              ;DROP IT
1062 007424 000402                    BR     60$                     ;EXIT WITH CARRY=0
1063 007426 000261                    55$: SEC                        ;SET CARRY NO TROUBLE
1064 007430 000401                    BR     70$                     ;EXIT
1065 007432 000241                    60$: CLC                       ;CARRY CLEAR = ERROR
1066 007434                    70$:
1067 007434 000207                    RTS     PC                       ;RETURN
1068
1069      ;+
1070      ;ROUTINE TO ISSUE A WRITE CHARACTERISTICS COMMAND
1071      ;INPUT:
1072      ;
1073      ;R4      ADDRESS OF COMMAND PACKET
1074      ;R5      CURRENT UNIT NUMBER
1075      ;REQUIRES A CALL TO SOFINIT BE DONE PREVIOUSLY
1076      ;OUTPUT:
1077      ;R0      TSSR CONTENTS
    
```



```

1074          :          CARRY SET - WRITE CHARACTERISTICS COMMAND OK
1075          :          CLR - WRITE CHARACTERISTICS FAILED
1076          :
1077          :IMPLICIT OUTPUT:
1078          :
1079          :
1080          :
1081          :SIDE EFFECTS:
1082          :
1083          :
1084          :-
1085          :
1086 007436    WRTCHR::
1087 007436    010475 002514 10$:  MOV    R4,@TSDB(R5)      ;SEND OUT COMMAND
1088 007442    004737 007204      JSR    PC,WAITF          ;WAIT FOR SSR
1089 007446    103401              BCS    50$              ;BR, IF SSR IS SET AND OK
1090 007450    000402              BR     60$              ;BR IF TROUBLE CARRY = CLEAR
1091 007452    50$:
1092 007452    000261              SEC                    ;SET CARRY NO TROUBLE
1093 007454    000401              BR     70$              ;EXIT
1094 007456    000241              60$:  CLC                    ;CARRY CLEAR = ERROR
1095 007460    017500 002524 70$:  MOV    @TSSR(R5),R0      ;RETURN TSSR CONTENTS
1096 007464    000207              RTS     PC              ;RETURN
    
```

```

1097          :
1098          :
1099          :+
1100          :ROUTINE TO DO SET UP OF RUNNING CONDITIONS
1101          :
1102          :INPUTS:
1103          :
1104          :
1105          :          R5          CURRENT UNIT NUMBER
1106          :
1107          :
1108          :OUTPUTS:
1109          :
1110          :
1111          :CALLING SEQUENCE:
1112          :          JSR    PC,FIRSTU
1113          :          JSR    PC,SOFINIT
1114          :          BCS    CONTINUE
1115          :          ERRDF
1116          :          JSR    PC,MDSET          ;REPORT FATAL ERROR
1117          :
1118          :-
    
```

```

1119          :
1120 007466    MDSET:: BREAK          ; DO A SUPVSR BREAK FIRST.
1121 007466    104422              TRAP    CSBRK
1122 007470    004737 007766      JSR    PC,SETDEF        ;RESTORE DEFAULT
1123 007474    004737 007356      JSR    PC,WLKCHK        ;CHECK WRITE LOCK
1124 007500    103416              BCS    1$              ;C=1 IS O.K.
1125 007502    012727 000001      DELAY  1              ;WAIT
1126 007506    000000              MOV    #1,(PC)+
1127 007510    013727 002116      .WORD 0
1128 007514    000000              MOV    LSDLY,(PC)+
1129 007516    005367 177772      .WORD 0
1130                                DEC    -6(PC)
    
```

```

007522 001375
007524 005367 177756
007530 001367
1125 007532          BREAK          :BREAK TO SUPER      BNE      -4
007532 104422          DOCLN          :DO CLEAN AND ABORT  DEC      -22(PC)
1126 007534          :DOCLN          :DO CLEAN AND ABORT  BNE      -20
007534 104444          :DOCLN          :DO CLEAN AND ABORT  TRAP     C$BRK
1127 007536 005737 002312 1$:  TST      TS1MD          :RUN IN DEFAULT MODE? TRAP     C$DCLN
1128 007542 001064          BNE      10$          :YES,RETURN
1129 007544 004737 007766          JSR      PC,SETDEF    :RESTORE DEFAULT
1130 007550 004737 007270          JSR      PC,WRTCHK   :GO DO SWITCH CHECK
1131 007554 005737 002320          TST      HSSW        :DO WE RUN AT 100IPS?
1132 007560 001415          BEQ      3$          :NO
1133 007562 052737 000040 003532  BIS      #EF.HSS,TSUNT :YES,SET THE BIT
1134 007570 005737 002322          TST      EXTFEA     :ARE WE SET?
1135 007574 001002          BNE      2$          :YES
1136 007576 004737 007724          JSR      PC,INVRT    :INVERT THE SWITCH
1137 007602 004737 007766          JSR      PC,SETDEF  :NOW SET THE MODES
1138 007606 004737 007436          JSR      PC,WRTCHR  :DO IT
1139 007612 000443          BR       11$
1140 007614 005737 002316          TST      WTBUF      :RUN WITH WRITE BUFFERING?
1141 007620 001415          BEQ      5$          :NO
1142 007622 052737 000030 003532  BIS      #EF.RWB,TSUNT :YES SET THE BITS
1143 007630 005737 002322          TST      EXTFEA     :ARE WE SET?
1144 007634 001002          BNE      4$          :YES
1145 007636 004737 007724          JSR      PC,INVRT    :INVERT THE SWITCH
1146 007642 004737 007766          JSR      PC,SETDEF  :NOW SET THE MODES
1147 007646 004737 007436          JSR      PC,WRTCHR  :DO IT
1148 007652 000423          BR       11$
1149 007654 005737 002314          TST      RDBUF      :RUN WITH READ BUFFERING?
1150 007660 001415          BEQ      10$         :NO
1151 007662 052737 000020 003532  BIS      #EF.RBO,TSUNT :YES SET THE BITS
1152 007670 005737 002322          TST      EXTFEA     :ARE WE SET?
1153 007674 001002          BNE      6$          :YES
1154 007676 004737 007724          JSR      PC,INVRT    :INVERT THE SWITCH
1155 007702 004737 007766          JSR      PC,SETDEF  :NOW SET THE MODES
1156 007706 004737 007436          JSR      PC,WRTCHR  :DO IT
1157 007712 000403          BR       11$
1158
1159 007714 013737 003532 002504 10$:  MOV      TSUNT,SCHBK+10 :AND UNIT #
1160
1161 007722 000207          11$:  RTS      PC          :RETURN
1162
1163
1164
1165      ; SUBROUTINE TO INVERT SENSE OF EXT'D FEATURES SWITCH
1166      ; INPUTS:
1167      ;
1168      ;
1169      ;
1170      ;
1171      ; OUTPUTS:
1172      ;
1173
1174
1175 007724          INVRT::
1176 007724 012737 140006 002330  MOV      #WSM,CMDPKT+CP.CMD :WRT SUB-SYS MEM
    
```



```

1177 007732 012737 002506 002332      MOV      #WSMBK,CMDPKT+CP.ADL      ;MSG BUF ADDR
1178 007740 012737 000006 002336      MOV      #6,CMDPKT+CP.CNT         ;BYTE COUNT
1179 007746 012737 100010 002506      MOV      #100010,WSMBK           ;INVERT THE SWITCH
1180 007754 012704 002330                MOV      #CMDPKT,R4              ;
1181 007760 004737 007436                JSR      PC,WRTCHR                ;DO IT
1182 007764 000207                RTS      PC                        ;RETURN
1183
1184
1185      ; SUBROUTINE TO SETUP DEFAULT SET CHAR CMD
1186      ;
1187      ; INPUTS:
1188      ;
1189      ;
1190      ;
1191      ; OUTPUTS:
1192      ;
1193      ;      R4      ADDRESS OF COMMAND PACKET
1194
1195      SETDEF::
1196 007766 012701 140004                MOV      #SCH,R1                  ;WRITE CHAR CMD
1197 007772 010137 002330                MOV      R1,CMDPKT+CP.CMD         ;SET UP COMMAND
1198 007776 012737 002474 002332                MOV      #SCHBK,CMDPKT+CP.ADL     ;SET UP ADR LO TO POINT TO MSG BUF(MSGPKO)
1199 010004 012737 000012 002336                MOV      #SCHCNT,CMDPKT+CP.CNT    ;SET BUFFER EXTENT
1200 010012 012737 000040 002502                MOV      #DFTSCH,SCHBK+6         ;STORE CHARACTERISTIC CODE IN SCH BLOCK.
1201 010020 013737 003532 002504                MOV      TSUNT,SCHBK+10          ;UNIT #
1202 010026 012704 002330                MOV      #CMDPKT,R4              ;ADDRESS OF CMD PACKET
1203 010032 000207                RTS      PC                        ;RETURN
1204
1205
1206      ; MODULES TO HANDLE TS05 INTERRUPTS.
1207
1208
1209 010034                BGNSRV  TS5IN0
1210 010034 005237 003472                TS5IN0::
1211 010040                INC      INTFLG                    ;SET INTERRUPT OCCURRED FLAG.
1212 010040                ENDSRV
1213 010040 000002                L10004:                            RTI
1214 010042                BGNSRV  TS5IN1
1215 010042 005237 003474                TS5IN1::
1216 010046                INC      INTFLG+2                  ;SET INTERRUPT OCCURRED FLAG.
1217 010046                ENDSRV
1218 010046 000002                L10005:                            RTI
1219 010050                BGNSRV  TS5IN2
1220 010050 005237 003476                TS5IN2::
1221 010054                INC      INTFLG+4                  ;SET INTERRUPT OCCURRED FLAG.
1222 010054                ENDSRV
1223 010054 000002                L10006:                            RTI
1224 010056                BGNSRV  TS5IN3
1225 010056 005237 003500                TS5IN3::
1226 010062                INC      INTFLG+6                  ;SET INTERRUPT OCCURRED FLAG.
1227 010062                ENDSRV
    
```



```

010062          L10007:
010062 000002          RTI
1224
1225
1226          :      SUBROUTINE TO RETRIEVE RECORD COUNT READ FROM TAPE FOR ERROR
1227          :      PRINTS.
1228          :      INPUTS:
1229          :      OUTPUTS: R3 = RECORD COUNT READ
1230          :      REGISTERS: R2, R3, R4
1231          :      CALLS:
1232 010064 032737 000400 003420 RECTAP: BIT      #MOD.CO,CMDWRD          ;READ REV FETCH
1233 010072 001430          BEQ      50001$
1234 010074 013702 002360          MOV      MSGPKT+MS.RFC,R2      ;FIND LAST READ AD.
1235 010100 063702 003410          ADD      DATARD,R2
1236 010104 032702 000001          BIT      #BIT00,R2          ;ODD AD., REASSEMBLE
1237 010110 001417          BEQ      50002$
1238 010112 005202          INC      R2          ;REC COUNT STARTING
1239 010114 111203          MOV      (R2),R3          ;WITH UPPER BYTE FETCH
1240 010116 142703 177400          BICB    #177400,R3
1241 010122 000303          SWAB    R3
1242 010124 005302          DEC      R2          ;LET R2 := R2 - #1          ;LOWER BYTE AD.
1243 010126 105737 003520          TSTB    SWBFLG          ;IFB SWBFLG NE #0 THEN
1244 010132 001401          BEQ      50003$
1245 010134 005302          DEC      R2          ;LET R2 := R2 - #1          ;LOWER BYTE AD. ON SWAP
1246
1247 010136          50003$:
1248 010136 111204          MOV      (R2),R4          ;FETCH LOWER BYTE
1249 010140 142704 177400          BICB    #177400,R4
1250 010144 050403          BIS      R4,R3
1251 010146 000401          BR      50004$
1252 010150          50002$:
1253 010150 011203          MOV      (R2),R3          ;LET R3 := (R2)          ;EVEN AD. FETCH
1254 010152          50004$:
1255 010152 000402          BR      50005$
1256 010154          50001$:
1257 010154 017703 173230          MOV      @DATARD,R3          ;LET R3 := @DATARD          ;READ FWD FETCH
1258
1259 010160          50005$:
1260 010160 000207          RTS      PC
1261
1262          :      SUBROUTINE TO STORE A SET CHARACTERISTIC COMMAND AS
1263          :      THE FIRST ENTRY IN THE SEQUENCE TABLE.
1264          :      INPUTS:
1265          :      OUTPUTS:
1266          :      REGISTERS:
1267          :      CALLS:
1268
1269 010162          SETCH::
1270 010162 012701 003540          MOV      #CMDSEQ,R1          ;INIT CMD SEQUENCE TABLE POINTER.
1271 010166 012721 140004          MOV      #SCH,(R1)+          ;THIS CODE SETS UP A SET CHARACTERISTIC
1272 010172 012721 000040          MOV      #DFTSCH,(R1)+      ;COMMAND AS THE FIRST COMMAND IN THE
1273 010176 012721 000001          MOV      #1,(R1)+          ;SEQUENCE TABLE.
1274 010202 005721          TST      (R1)+          ;SKIP PATTERN LOCATION.
1275 010204 000207          RTS      PC
1276
1277          :      SUBROUTINE TO STORE A REWIND COMMAND IN THE SEQUENCE TABLE
1278          :      INPUTS:
    
```

```

1279      :      OUTPUTS:
1280      :      REGISTERS:
1281      :      CALLS:
1282
1283 010206 012721 102010  SETRW:: MOV      #RWD,(R1)+      :CMD = REWIND.
1284 010212 012721 000001  MOV      #1,(R1)+      :BRF.
1285 010216 012721 000001  MOV      #1,(R1)+      :# OF OPERATIONS.
1286 010222 005721  TST      (R1)+      :SKIP PATTERN.
1287 010224 000207  RTS      PC      :RETURN
1288
1289      :      SUBROUTINE TO EXECUTE ALL COMMANDS IN THE SEQUENCE TABLE ON ALL
1290      :      DEVICES.
1291      :      INPUTS:
1292      :      OUTPUTS:      R2 = TERMINATION INDICATOR (0=END OF TABLE,1=EOT)
1293      :      REGISTERS:
1294      :      CALLS:      CMDAC,SETUP,EXSUB,CKHAE,NEXTU,FIRSTU,VFYDAT.
1295
1296 010226 012701 003540  EXALL:: MOV      #CMDSEQ,R1      :INIT SEQUENCE TABLE POINTER.
1297 010232 50006$  CMP      (R1),#END      :WHILE THERE ARE CMDS IN THE SEQUENCE TABLE.
1298 010232 021127 177777  BEQ      50007$
1299 010236 001530  JSR      PC,SETUP      :GO SETUP THE COMMAND BLOCK.
1300 010240 004737 011172  JSR      PC,SETUP      : DO A SUPVSR BREAK FIRST.
1301 010244 50010$  BREAK
1302 010246 023737 003412 003414  CMP      NCNT,NCNT1      :WHILE THERE ARE RECORDS REMAINING:      TRAP      CSBRK
1303 010254 002116  BGE      50011$
1304 010256 004737 011064  JSR      PC,CMDAC      :STORE CMD ASCII IN ERROR MESSAGE.
1305 010262 105737 003515  TSTB    RANDOM      :IF IN RANDOM MODE:
1306 010266 001435  BEQ      50012$
1307 010270 023727 003420 104005  CMP      CMDWRD,#WRT      :IF CMD IS A WRITE THEN:
1308 010276 001031  BNE      50013$
1309 010300 105737 003516  TSTB    VFYFLG      :IF DATA IS NOT TO BE VERIFIED THEN:
1310 010304 001026  BNE      50014$
1311 010306 063737 003434 003432  ADD      RANS,RANB      :LET RANB := RANB + RANS      :GENERATE
1312 010314 063737 003432 003434  ADD      RANB,RANS      :LET RANS := RANS + RANB      :RANDOM
1313 010322 013737 003434 003416  MOV      RANS,BRFCNT      :LET BRFCNT := RANS      :LENGTH
1314 010330 043737 003430 003416  BIC      LENMSK,BRFCNT      :MASK RANDOM LENGTH.
1315 010336 023727 003416 000022  CMP      BRFCNT,#18.      :DO NOT ALLOW BYTE COUNT OF LESS THAN 18
1316 010344 002003  BGE      50015$
1317 010346 012737 000022 003416  MOV      #18.,BRFCNT      :CHANGE COUNT OF 0-17 TO 18.
1318
1319 010354 50015$  :
1320 010354 013737 003416 002336  MOV      BRFCNT,CMDPKT+CP.CNT      :MOVE BRF TO CMD PACKET.
1321
1322 010362 50014$  :
1323
1324 010362 50013$  :
1325
1326 010362 50012$  :
1327 010362 004737 010524  JSR      PC,EXSUB      :ISSUE CMD TO ALL,AWAIT INTS,CHECK STATUS.
1328 010366 004737 017456  JSR      PC,CKHAE      :CHECK HALT AFTER EACH CMD FLAG.
1329 010372 012702 000001  MOV      #1,R2      :LET R2 := #1      :SET ALL UNITS AT BOT/EOT.
1330 010376 004737 017060  JSR      PC,FIRSTU      :FIND FIRST UNIT.
1331
1332 010402 50016$  :
1333 010402 026527 002604 177777  CMP      DEVTBL(R5),#END      :WHILE THERE ARE MORE UNITS:
1334 010410 001426  BEQ      50017$
    
```

```

1335 010412 032737 000400 003420      BIT      #MOD.CO,CMDWRD      ;IF CMD IS REVERSE THEN:
1336 010420 001406                    BEQ      50020$
1337 010422 032765 000002 003502      BIT      #X0.BOT,EOTFLG(R5) ;IF NOT AT BOT THEN:
1338 010430 001001                    BNE      50021$
1339 010432 005002                    CLR      R2                ;LET R2 := #0 ;CLEAR EOT/BOT FLAG.
1340
1341 010434                    50021$:
1342 010434 000411                    BR       50022$            ;ELSE IF CMD IS NOT REVERSE:
1343 010436                    50020$:
1344 010436 032765 000001 003502      BIT      #X0.EOT,EOTFLG(R5)
1345 010444 001404                    BEQ      50023$
1346 010446 032737 000001 003420      BIT      #CMD.CO,CMDWRD
1347 010454 001001                    BNE      50024$
1348 010456                    50023$:
1349
1350 010456 005002                    CLR      R2                ;IF NOT AT EOT OR NOT A MOTION CMD THEN:
1351
1352 010460                    50024$:
1353
1354 010460                    50022$:
1355 010460 004737 017126      JSR      PC,NEXTU          ;FIND NEXT UNIT
1356 010464 000746                    BR
1357 010466                    50017$:
1358 010466 020227 000001      CMP      R2,#1            ;IF ALL UNIT ARE AT EOT/BOT THEN:
1359 010472 001001                    BNE      50025$
1360 010474 000412                    BR       EXARTN           ;RETURN WITH R2 = #1.
1361
1362 010476                    50025$:
1363 010476 005237 003412      INC      NCNT             ;LET NCNT := NCNT + #1 ;UPDATE RECORD COUNT.
1364 010502 013737 003420 003424      MOV      CMDWRD,PCMDWD   ;SAVE PREVIOUS COMMAND WORD.
1365
1366 010510 000655                    BR       50010$
1367 010512                    50011$:
1368 010512 004737 016044      JSR      PC,VFYDAT        ;IF LAST CMD WAS A WRITE VERIFY, THEN GO
1369
1370
1371 010516 000645                    BR       50006$
1372 010520                    50007$:
1373 010520 005002                    CLR      R2                ;LET R2 := #0 ;SET NORMAL RETURN INDICATOR.
1374 010522 000207      EXARTN: RTS PC           ;RETURN.
1375
1376
1377
1378
1379      :      SUBROUTINE TO ISSUE COMMAND TO ALL DEVICES, WAIT FOR
1380      :      ALL INTERRUPTS, AND CHECK ALL STATUS.
1381      :      INPUTS:
1382      :      OUTPUTS:
1383      :      REGISTERS:
1384      :      CALLS:      EXECUTE,GOWAIT,NEXTU,FIRSTU.
1385 010524 004737 017060      EXSUB:: JSR      PC,FIRSTU ;SET UP FOR FIRST UNIT.
1386 010530                    50026$:
1387 010530 026527 002604 177777      CMP      DEVTBL(R5),#END ;WHILE THERE ARE MORE DEVICES:
1388 010536 001465                    BEQ      50027$
1389 010540 032737 000400 003420      BIT      #MOD.CO,CMDWRD ;IF CMD IS REVERSE THEN:
1390 010546 001421                    BEQ      50030$
1391 010550 032765 000002 003502      BIT      #X0.BOT,EOTFLG(R5) ;IF NOT AT BOT
    
```


1392	010556	001014			BNE	50031\$	
1393	010560	032765	000001	003502	BIT	#X0.EOT,EOTFLG(R5)	:BUT IF AT EOT
1394	010566	001406			BEQ	50032\$	
1395	010570	105737	003524		TSTB	ALLEOT	:AND ALL OTHERS AT EOT
1396	010574	001402			BEQ	50033\$	
1397	010576	004737	012054		JSR	PC,EXECUTE	:THEN EXECUTE REV CMD
1398							:IF NOT ALL AT EOT, FREEZE UNIT(S) AT EOT
1399	010602				50033\$:		
1400	010602	000402			BR	50034\$:IF NOT AT BOT AND
1401	010604				50032\$:		
1402	010604	004737	012054		JSR	PC,EXECUTE	:NOT AT EOT, EXEC REV CMD
1403							
1404	010610				50034\$:		
1405							
1406	010610				50031\$:		
1407	010610	000435			BR	50035\$:ELSE IF CMD IS NOT REVERSE:
1408	010612				50030\$:		
1409	010612	023727	003426	000002	CMP	CMDLG,#2	
1410	010620	001011			BNE	50036\$	
1411	010622	032765	000002	003502	BIT	#X0.BOT,EOTFLG(R5)	
1412	010630	001405			BEQ	50036\$	
1413							:CLEAR BAD SPOT COUNTS WHEN WRITING FROM BOT
1414	010632	016537	002616	003512	MOV	BTADDR(R5),BTPT	:LET BTPT := BTADDR(R5)
1415	010640	005077	172646		CLR	@BTPT	:LET @BTPT := #0
1416							
1417	010644				50036\$:		
1418	010644	032765	000001	003502	BIT	#X0.EOT,EOTFLG(R5)	
1419	010652	001404			BEQ	50037\$	
1420	010654	032737	000001	003420	BIT	#CMD.CO,CMDWRD	
1421	010662	001003			BNE	50040\$	
1422	010664				50037\$:		
1423							:IF NOT AT EOT OR NOT A MOTION CMD THEN:
1424	010664	004737	012054		JSR	PC,EXECUTE	:ISSUE CMD TO TS05
1425							
1426	010670	000405			BR	50041\$	
1427	010672				50040\$:		
1428	010672	105737	003524		TSTB	ALLEOT	:IFB ALLEOT NE #0 THEN
1429	010676	001402			BEQ	50042\$	
1430	010700	004737	012054		JSR	PC,EXECUTE	
1431							
1432	010704				50042\$:		
1433							
1434	010704				50041\$:		
1435							
1436	010704				50035\$:		
1437	010704	004737	017126		JSR	PC,NEXTU	:FIND NEXT UNIT IN TEST CYCLE.
1438							
1439	010710	000707			BR	50026\$	
1440	010712				50027\$:		
1441	010712	105737	003517		TSTB	RPTFLG	:IF REPORT HAS BEEN REQUESTED THEN:
1442	010716	001403			BEQ	50043\$	
1443	010720	105037	003517		CLRB	RPTFLG	:CLR THE FLAG,
1444	010724				DORPT		:PRINT THE PERFORMANCE REPORT.
1445	010726				50043\$:		TRAP C\$DRPT
1446	010726	004737	017060		JSR	PC,FIRSTU	:SET UP FOR FIRST UNIT.
1447	010732				50044\$:		

```

1448 010732 026527 002604 177777      CMP      DEVTBL(R5),#END      ;WHILE THERE ARE MORE DEVICES:
1449 010740 001450                      BEQ      50045$
1450 010742 032737 000400 003420      BIT      #MOD.CO,CMDWRD      ;IF CMD IS REVERSE THEN:
1451 010750 001421                      BEQ      50046$
1452 010752 032765 000002 003502      BIT      #X0.BOT,EOTFLG(R5) ;IF NOT AT BOT
1453 010760 001014                      BNE      50047$
1454 010762 032765 000001 003502      BIT      #X0.EOT,EOTFLG(R5) ;BUT IF AT EOT
1455 010770 001406                      BEQ      50050$
1456 010772 105737 003524      TSTB     ALLEOT              ;AND ALL OTHERS AT EOT
1457 010776 001402                      BEQ      50051$
1458 011000 004737 012364      JSR      PC,GOWAIT          ;THEN WAIT FOR CMD END
1459                                     ;IF NOT ALL AT EOT, DO NOT WAIT
1460 011004                                     50051$:
1461                                     ;NOT AT BOT, AND NOT AT EOT
1462 011004 000402                      BR       50052$
1463 011006                                     50050$:
1464 011006 004737 012364      JSR      PC,GOWAIT          ;WAIT FOR INT,CHECK STAT
1465                                     50052$:
1466 011012
1467
1468
1469 011012                                     50047$:
1470 011012 000420                      BR       50053$              ;ELSE IF CMD IS FORWARD:
1471 011014                                     50046$:
1472 011014 032765 000001 003502      BIT      #X0.EOT,EOTFLG(R5)
1473 011022 001404                      BEQ      50054$
1474 011024 032737 000001 003420      BIT      #CMD.CO,CMDWRD
1475 011032 001003                      BNE      50055$
1476 011034                                     50054$:
1477                                     ;IF NOT AT EOT OR NOT A MOTION CMD THEN:
1478 011034 004737 012364      JSR      PC,GOWAIT          ;WAIT FOR INT,CHECK STATUS.
1479
1480 011040 000405                      BR       50056$
1481 011042                                     50055$:
1482 011042 105737 003524      TSTB     ALLEOT              ;IFB ALLEOT NE #0 THEN
1483 011046 001402                      BEQ      50057$
1484 011050 004737 012364      JSR      PC,GOWAIT
1485
1486 011054                                     50057$:
1487
1488 011054                                     50056$:
1489
1490 011054                                     50053$:
1491 011054 004737 017126      JSR      PC,NEXTU          ;FIND NEXT UNIT IN TEST CYCLE.
1492
1493 011060 000724                      BR       50044$
1494 011062                                     50045$:
1495 011062 000207                      RTS      PC                  ;RETURN.
1496
1497 ;
1498 ; THIS SUBROUTINE STORES THE ASCII FOR THE CURRENT COMMAND AND PREVIOUS
1499 ; COMMAND IN THE STANDARD ERROR MESSAGE. ON ENTRY LOCATION CMDWRD
1500 ; CONTAINS CURRENT CMD AND LOCATION PCMDWD CONTAINS PREVIOUS CMD.
1501 ; INPUTS:
1502 ; OUTPUTS:
1503 ; REGISTERS: R3, R4.
1504 ; CALLS: GCMDB
    
```

```

1505 011064 013704 003420 CMDAC:: MOV CMDWRD,R4;LET R4 := CMDWRD ;R4 = CMD BINARY.
1506 011070 004737 011136 JSR PC,GCMDA ;GET CMD ASCII.
1507 011074 112337 006440 MOV (R3)+,STAER1+2 ;MOVE CMD ASCII
1508 011100 112337 006441 MOV (R3)+,STAER1+3 ;
1509 011104 111337 006442 MOV (R3),STAER1+4 ;INTO MSG.
1510 011110 013704 003424 MOV PCMDWD,R4 ;R4 = PREVIOUS CMD BINARY.
1511 011114 004737 011136 JSR PC,GCMDA ;GET CMD ASCII.
1512 011120 112337 006554 MOV (R3)+,STAER7+24 ;MOVE CMD ASCII
1513 011124 112337 006555 MOV (R3)+,STAER7+25 ;
1514 011130 111337 006556 MOV (R3),STAER7+26 ;INTO MSG.
1515 011134 000207 RTS PC ;RETURN. GO EXECUTE NEXT FUNCTION.
1516
1517
1518 : SUBROUTINE TO FIND THE ASCII EQUIVALENT OF THE COMMAND IN R4.
1519 : ADDRESS OF ASCII 1ST WORD IS RETURNED IN R3.
1520 : INPUTS: R4 = PRESENT COMMAND WORD.
1521 : OUTPUTS: R3 = ADDRESS OF PRESENT COMMAND ASCII.
1522 : REGISTERS:
1523 : CALLS:
1524
1525 011136 005003 GCMDA:: CLR R3;LET R3 := #0 ;INIT CMD TBL POINTER.
1526 011140 50060$: CMP CMDTBL(R3),R4 ;UNTIL CURRENT CMD IS FOUND:
1527 011140 026304 003752 BEQ 50061$
1528 011144 001403 ADD #2,R3 ;LET R3 := R3 + #2 ;SEARCH CMD TABLE.
1529 011146 062703 000002 BR 50060$
1530 011152 000772
1531 011154 50061$: MOV R3,R4 ;LET R4 := R3
1532 011154 010304 ASR R3 ;POINT TO ASCII FOR THAT COMMAND
1533 011156 006203 NOP
1534 011160 000240 ADD R4,R3
1535 011162 060403 ADD #CMDASC,R3
1536 011164 062703 004040 RTS PC ;RETURN.
1537 011170 000207
1538
1539 : THIS SUBROUTINE LOADS THE TS05 COMMAND PACKET FROM ONE
1540 : ENTRY IN THE SEQUENCE TABLE.
1541 : INPUTS:
1542 : OUTPUTS:
1543 : REGISTERS: R2, R3.
1544 : CALLS: GENPAT.
1545
1546 011172 005037 003426 SETUP:: CLR CMDLG ;CLR CMD LOGGING CODE(DISABLES LOGGING)
1547 011176 012137 002330 MOV (R1)+,CMDPKT ;LOAD THE COMMAND WORD.
1548 011202 011137 002336 MOV (R1),CMDPKT+CP.CNT ;LOAD THE BYTE/RECORD/FILE COUNT.
1549 011206 011137 003416 MOV (R1),BRFCNT ;SAVE BRF FOR THIS COMMAND.
1550 011212 013702 002330 MOV CMDPKT,R2 ;GET CMD.
1551 011216 042702 177740 BIC #NCMD.C,R2 ;CLR ALL BUT CMD BITS.
1552 011222 010203 MOV R2,R3 ;SAVE IT TWICE.
1553 011224 162703 000010 SUB #CMD.C3,R3 ;POSITION COMMAND?
1554 011230 001003 BNE 2$ ;BR IF NOT.
1555 011232 011137 002332 MOV (R1),CMDPKT+2 ;MOVE BPCR IN 2ND PKT WORD FOR POSITION CMD.
1556 011236 000464 BR 3$
1557 011240 023727 002330 100011 2$: CMP CMDPKT,#WTM ;IF CMD IS A WRITE TAPE MARK THEN:
1558 011246 001003 BNE 50062$
1559 011250 012737 000002 003426 MOV #2,CMDLG ;WTM LOGGING CODE IS 2.
1560
1561 011256 50062$:
    
```


1562	011256	010203			MOV	R2,R3			
1563	011260	162703	000001		SUB	#CMD.CO,R3			:IS IT A READ?
1564	011264	001017			BNE	1\$:BR IF NOT.
1565	011266	013737	003410	002332	MOV	DATARD,CMDPKT+CP.ADL			:IF SO, LOAD THE BUFFER ADDR.
1566	011274	032737	000400	002330	BIT	#MOD.CO,CMDPKT			:IF CMD IS A READ REV THEN:
1567	011302	001404			BEQ	50063\$			
1568	011304	012737	000004	003426	MOV	#4,CMDLG			:LOGGING CODE IS 4.
1569									:ELSE - IF CMD IS A READ FWD:
1570	011312	000403			BR	50064\$			
1571	011314						50063\$:		
1572	011314	012737	000006	003426	MOV	#6,CMDLG			:LOGGING CODE IS 6.
1573									
1574	011322						50064\$:		
1575	011322	000432			BR	3\$:CONTINUE.
1576	011324	010203			MOV	R2,R3			:IS IT
1577	011326	162703	000004		SUB	#CMD.C2,R3			:A SET CHARACTERISTICS CMD?
1578	011332	001014			BNE	4\$:BR IF NOT.
1579	011334	012737	002474	002332	MOV	#SCHBK,CMDPKT+CP.ADL			:SET UP ADR LO FOR SET CHAR.
1580	011342	012737	000012	002336	MOV	#SCHCNT,CMDPKT+CP.CNT			:SET BUFFER EXTENT
1581	011350	011137	002502		MOV	(R1),SCHBK+6			:STORE CHARACTERISTIC CODE IN SCH BLOCK.
1582	011354	013737	003532	002504	MOV	TSUNT,SCHBK+10			:UNIT #
1583	011362	000412			BR	3\$:CONTINUE.
1584	011364	010203			MOV	R2,R3			:IS IT
1585	011366	162703	000006		SUB	#CMD.C1!CMD.C2,R3			:A DIAGNOSTIC (DIA) CMD?
1586	011372	001006			BNE	3\$:BR IF NOT.
1587	011374	012737	000020	002336	MOV	#DIACNT,CMDPKT+CP.CNT			:LOAD BUFFER EXTENT.
1588	011402	012737	003406	002332	MOV	#DIABLK,CMDPKT+CP.ADL			:LOAD BUFFER ADR LOW.
1589	011410	005721			TST	(R1)+			:POINT TO N (NUMBER OF TIMES TO EXECUTE THIS INS
1590	011412	012137	003414		MOV	(R1)+,NCNT1			:SAVE NUMBER OF OPERATIONS
1591	011416	005037	003412		CLR	NCNT			:CLEAR OPERATION COUNTER.
1592	011422	012137	003446		MOV	(R1)+,PATERN			:SAVE PATTERN CODE FOR CURRENT CMD.
1593	011426	010203			MOV	R2,R3			:IS IT
1594	011430	162703	000005		SUB	#CMD.CO!CMD.C2,R3			:A WRITE?
1595	011434	001010			BNE	5\$:BR IF NOT.
1596	011436	013737	003406	002332	MOV	DATAWT,CMDPKT+CP.ADL			:LOAD WRITE BUFFER LO ORDER.
1597	011444	004737	011556		JSR	PC,GENPAT			:GO GENERATE THE WRITE PATTERN.
1598	011450	012737	000002	003426	MOV	#2,CMDLG			:WRITE LOGGING CODE IS 2.
1599	011456	032737	000100	002330	BIT	#VFY.C,CMDPKT			:IF DATA VERIFICATION IS REQUIRED:
1600	011464	001407			BEQ	50065\$			
1601	011466	112737	000001	003516	MOVB	#1,VFYFLG			:SET VERIFY FLAG.
1602	011474	042737	000100	002330	BIC	#VFY.C,CMDPKT			:CLEAR VERIFY BIT(NOT USED BY HARDWARE).
1603									:IF DATA VERIFICATION IS NOT REQUIRED:
1604	011502	000402			BR	50066\$			
1605	011504						50065\$:		
1606	011504	105037	003516		CLRB	VFYFLG			:CLR VERIFY FLAG.
1607									
1608	011510						50066\$:		
1609	011510	013737	003420	003424	MOV	CMDWRD,PCMDWD			:SAVE PREVIOUS CMD WORD.
1610	011516	013737	002330	003420	MOV	CMDPKT,CMDWRD			:SAVE PRESENT CMD WORD.
1611	011524	105737	003520		TSTB	SWBFLG			:IF SWAP BYTES IS ENABLED:
1612	011530	001403			BEQ	50067\$			
1613	011532	052737	010000	002330	BIS	#SWB.C,CMDPKT			:SET SWAP BIT IN COMMAND.
1614									
1615	011540						50067\$:		
1616	011540	042737	004000	002330	BIC	#BRF.C,CMDPKT			:CLR BRF BIT (INTERNAL ONLY).
1617	011546	013737	002330	003422	MOV	CMDPKT,CMSAV			:SAVE 1ST WORD OF COMMAND PACKET.
1618	011554	000207			RTS	PC			:RETURN.

```

1619
1620
1621
1622
1623
1624
1625
1626
1627 011556 013703 003446
1628 011562 006303
1629 011564 013704 003416
1630 011570 005204
1631 011572 042704 000001
1632 011576 162704 000002
1633 011602 013702 003406
1634 011606 062702 000002
1635 011612 004773 011620
1636 011616 000207
1637
1638
1639
1640
1641 011620 011642
1642 011622 011700
1643 011624 011720
1644 011626 011730
1645 011630 011754
1646 011632 011766
1647 011634 012000
1648 011636 012020
1649 011640 012052
1650
1651
1652
1653 011642 012703 000400
1654 011646 162704 000002
1655 011652 100411
1656 011654 010322
1657 011656 062703 001002
1658 011662 020327 001000
1659 011666 001002
1660 011670 012703 000400
1661
1662 011674
1663 011674 000764
1664
1665 011676 000207
1666
1667
1668
1669 011700 012703 177777
1670 011704 162704 000002
1671 011710 100402
1672 011712 010322
1673 011714 000773
1674
1675 011716 000207
    ; THIS SUBROUTINE SETS UP AND CALLS THE APPROPRIATE SUBROUTINE TO GENERATE
    ; THE DESIRED PATTERN FOR THE WRITE AND WRITE/VERIFY COMMANDS.
    ; INPUTS:
    ; OUTPUTS:
    ; REGISTERS: R2, R3, R4.
    ; CALLS: PATRO - PATR7
GENPAT: :MOV PATERN,R3 ;SETUP PATTERN ROUTINE POINTER
        :ASL R3
        :MOV BRFCNT,R4 ;SET LENGTH OF WRITE BFR
        :INC R4
        :BIC #1,R4 ;ROUNDED UP TO NEXT WORD
        :SUB #2,R4 ;WITH FIRST WORD RESERVED
        :MOV DATAWT,R2 ;FOR RECORD COUNT
        :ADD #2,R2
        :JSR PC,@PATTBL(R3) ;GO GENERATE THE APPROPRIATE PATTERN.
        :RTS PC ;RETURN TO SETUP SUBROUTINE.
    ;TS05 WRITE PATTERN LOOKUP TABLE. USED TO JSR TO THE
    ;CORRECT DATA PATTERN GENERATING ROUTINE.
PATTBL: PATRO
        PATR1
        PATR2
        PATR3
        PATR4
        PATR5
        PATR6
        PATR7
        PATR8
    ;INCREMENTING PATTERN. 0 - 377.
PATRO:: :MOV #400,R3;LET R3 := #400
1$: :SUB #2,R4;LET R4 := R4 - #2 ;DECREMENT WORD COUNT.
    :BMI 2$ ;BR IF DONE.
    :MOV R3,(R2)+ ;STORE DATA WORD.
    :ADD #1002,R3 ;UPDATE PATTERN.
    :CMP R3,#1000 ;IF PATTERN HAS WRAPPED AROUND THEN:
    :BNE 50070$
    :MOV #400,R3 ;INIT THE PATTERN AGAIN.
50070$:
    :BR 1$ ;DO IT AGAIN.
2$: :RTS PC ;RETURN.
    ;ALL ONE'S PATTERN.
PATR1:: :MOV #-1,R3 ;ALL ONES PATTERN;.
ZROPAT: :SUB #2,R4 ;DECREMENT BYTE COUNT.
    :BMI 1$ ;DONE?,BR IF YES.
    :MOV R3,(R2)+ ;IF NOT LOAD NEXT BYTE WITH PATTERN.
    :BR ZROPAT ;DO IT AGAIN.
1$: :RTS PC ;RETURN.
    
```

```

1676
1677
1678
1679 011720 005003
1680 011722 004737 011704
1681 011726 000207
1682
1683
1684
1685 011730 012703 000401
1686 011734 162704 000002
1687 011740 100404
1688 011742 010322
1689 011744 006303
1690 011746 005503
1691 011750 000771
1692 011752 000207
1693
1694
1695
1696 011754 012703 177376
1697 011760 004737 011734
1698 011764 000207
1699
1700
1701
1702
1703 011766 012703 125125
1704 011772 004737 011704
1705 011776 000207
1706
1707
1708
1709 012000 012703 177400
1710 012004 162704 000002
1711 012010 100402
1712 012012 010322
1713 012014 000773
1714 012016 000207
1715
1716
1717
1718 012020 162704 000002
1719 012024 100411
1720 012026 063737 003434 003432
1721 012034 063737 003432 003434
1722 012042 013722 003434
1723 012046 000764
1724 012050 000207
1725
1726
1727
1728 012052 000207
1729
1730
1731
1732

;ALL ZEROES PATTERN.
PATR2:: CLR R3 ;CLR PATTERN REGISTER.
        JSR PC,ZROPAT ;GO GENERATE IT.
        RTS PC ;RETURN.

;ONE BIT WALKING FROM R TO L IN A FIELD OF ZEROES.
PATR3:: MOV #401,R3 ;INIT PATTERN REGISTER.
        SUB #2,R4;LET R4 := R4 - #2 ;DECREMENT WORD COUNT.
        BMI 1$ ;BR IF DONE.
        MOV R3,(R2)+ ;LOAD DATA.
        ASL R3 ;SHIFT PATTERN.
        ADC R3 ;ADD CARRY BACK INTO PATTERN.
        BR WLKZRO ;DO IT AGAIN.
1$: RTS PC ;RETURN.

;ZERO BIT WALKING FROM R TO L IN A FIELD OF 1'S.
PATR4:: MOV #177376,R3 ;INIT PATTERN REGISTER.
        JSR PC,WLKZRO ;GO GENERATE ;IT.
        RTS PC ;RETURN.

;ALTERNATING ONE AND ZERO BITS WITH ALTERNATE BYTES
;COMPLEMENTED.
PATR5:: MOV #125125,R3 ;INIT PATTERN REGISTER.
        JSR PC,ZROPAT ;GO GENERATE IT.
        RTS PC ;RETURN.

;ALTERNATING BYTES OF 000 AND 377.
PATR6:: MOV #177400,R3 ;INIT PATTERN REGISTER.
1$: SUB #2,R4 ;DECREMENT WORD COUNT.
        BMI 2$ ;BR IF DONE.
        MOV R3,(R2)+ ;LOAD DATA.
        BR 1$ ;DO IT AGAIN.
2$: RTS PC ;RETURN.

;RANDOM PATTERN GENERATOR
PATR7:: SUB #2,R4 ;DECREMENT WORD COUNT
        BMI GIT ;BR IF DONE.
        ADD RANS,RANB
        ADD RANB,RANS ;GET NEW #.
        MOV RANS,(R2)+ ;SAVE #.
        BR PATR7 ;CONTINUE.
GIT: RTS PC ;RETURN

; NO PATTERN GENERATION.
PATR8:: RTS PC ;RETURN.

; THIS SUBROUTINE INITIATES TS05 COMMAND EXECUTION
; AND CHECKS FOR TS05 RESPONSE.
; INPUTS:
    
```



```

1733      :      OUTPUTS:
1734      :      REGISTERS:      R2, R3.
1735      :      CALLS:          DROPU, MOVMSG, FIRSTU, NEXTU, WSSR.
1736
1737 012054 012737 177777 003436 EXECUTE:: MOV # -1, TIME1      ;INIT TIMEOUT COUNTER.
1738 012062 50071$: ;REPEAT      ;WAIT -
1739 012062 005337 003436      DEC TIME1      ;UPDATE TIMEOUT COUNTER.
1740 012066 005737 003436      TST TIME1      ;IF TIMED OUT:
1741 012072 001011      BNE 50072$
1742 012074 004737 012734      JSR PC, MOVMSG      ;MOVE CURRENT PACKET MSG.
1743 012100      ERRDF 2, NSSRM, STAERM      ;REPORT TS05 NOT READY
      012100 104455
      012102 000002
      012104 004536
      012106 006120
1744 012110 004737 017156      JSR PC, DROPU      ;DROP THE UNIT.
1745 012114 000522      BR EXCRTN      ;RETURN.
1746
1747 012116 50072$:
1748 012116 032775 000200 002524 BIT #TS, SSR, @TSSR(R5)      ;WAIT UNTIL DEVICE IS READY.
1749 012124 001756      BEQ 50071$
1750 012126 023727 003420 140004 CMP CMDWRD, #SCH      ;IF WE ARE DOING A SET CHAR CMD THEN:
1751 012134 001022      BNE 50073$
1752 012136 010537 003452      MOV R5, R5SAVE      ;SAVE CURRENT DEVICE POINTER.
1753 012142 004737 017060      JSR PC, FIRSTU      ;FIND FIRST UNIT.
1754 012146 50074$:
1755 012146 026527 002604 177777 CMP DEVTBL(R5), #END      ;WHILE DEVTBL(R5) NE #END DO
1756 012154 001405      BEQ 50075$
1757 012156 004737 012700      JSR PC, WSSR      ;WAIT FOR UNIT READY OR TIME OUT.
1758 012162 004737 017126      JSR PC, NEXTU      ;FIND NEXT UNIT.
1759
1760 012166 000767      BR 50074$
1761 012170 50075$:
1762 012170 013705 003452      MOV R5SAVE, R5      ;RESTORE CURRENT DEVICE POINTER.
1763 012174 016537 002544 002474 MOV MSGPKA(R5), SCHBK      ;SET UP ADR OF MSG PKT IN SCH BLOCK.
1764
1765 012202 50073$:
1766 012202 016503 002544      MOV MSGPKA(R5), R3      ;ADR OF THIS UNIT'S MSG PACKET.
1767 012206 005002      CLR R2      ;CLR COUNTER.
1768 012210 50076$:
1769 012210 020227 000020      CMP R2, #MSGCNT      ;WHILE THERE ARE MORE LOCATIONS:
1770 012214 001405      BEQ 50077$
1771 012216 012723 177777      MOV # -1, (R3)+      ;INIT THE MSG PACKET WITH ALL 1'S
1772 012222 062702 000002      ADD #2, R2      ;UPDATE COUNTER.
1773
1774 012226 000770      BR 50076$
1775 012230 50077$:
1776 012230 105737 002212      TSTB DINT      ;ARE INTERRUPTS DISABLED.
1777 012234 001023      BNE 1$      ;BR IF YES.
1778 012236 126527 003472 000001 CMPB INTFLG(R5), #1      ;IF MORE THAN ONE INTERRUPT HAS OCCURED:
1779 012244 003412      BLE 50100$
1780 012246 017537 002524 003454 MOV @TSSR(R5), TSSREG      ;FREEZE THE CURRENT STATUS REG FOR PRINT
1781 012254      ERRDF 15, TOOMM, STAERM      ;REPORT TOO MANY INTERRUPTS.
      012254 104455
      012256 000017
      012260 004727
      012262 006120
      TRAP C$ERDF
      .WORD 15
      .WORD TOOMM
      .WORD STAERM
    
```

```

1782 012264 004737 017156      JSR    PC,DROPU      ;DROP THE UNIT
1783 012270 000434      BR     EXCRTN        ;RETURN - UNIT HAS BEEN DROPPED.
1784
1785 012272      50100$:
1786 012272 005065 003472      CLR    INTFLG(R5)   ;CLR INTERRUPT FLAG FOR THIS DEV.
1787 012276 052737 000200 002330      BIS    #IE.C,CMDPKT ;SET INT ENABLE BIT.
1788 012304 105737 003471      1$:    TSTB  ERRREC;IFB ERRREC EQ #0 THEN ;IF NOT RETRYING
1789 012310 001005      BNE    50101$
1790 012312 005265 003376      INC    RECCNT(R5)   ;LET RECCNT(R5) := RECCNT(R5) + #1
1791 012316 016577 003376 171062      MOV    RECCNT(R5),@DATAWT ;THEN UPDATE REC COUNT TO WRITE IT ON TAPE
1792
1793 012324      50101$:
1794 012324 012775 002330 002514      MOV    #CMDPKT,@TSDB(R5) ;LOAD TSDB WITH CMDPKT ADDRESS
1795      ;THIS INITIATES COMMAND EXECUTION.
1796 012332 032775 000200 002524      BIT    #TS.SSR,@TSSR(R5) ;IF READY DID NOT DROP THEN:
1797 012340 001410      BEQ    50102$
1798 012342 004737 012734      JSR    PC,MOVMSG    ;MOVE CURRENT MESSAGE PACKET TO COMMON.
1799 012346      ERRDF 3,TOERM,STAERM ;REPORT NO TS05 RESPONSE.
      TRAP    CSERDF
      .WORD 3
      .WORD TOERM
      .WORD STAERM
1800 012356 004737 017156      JSR    PC,DROPU      ;DROP THE UNIT
1801
1802 012362      50102$:
1803 012362 000207      EXCRTN: RTS    PC    ;RETURN.
1804
1805      :    THIS SUBROUTINE WAITS FOR THE TS05 INERRUPT OR DONE BIT TO SET AND ALLOWS THE
1806      :    OPERATOR TO TRANSFER CONROL TO THE SUPERVISOR.
1807      :    UPON APPEARANCE OF THE INTERRUPT OR DONE, CHECK TSSR FOR STATUS ERRORS,
1808      :    LOG BYTES AND ERRORS AND PERFORM ERROR RECOVERY IF NESSASARY.
1809      :    INPUTS:
1810      :    OUTPUTS:
1811      :    REGISTERS:    R2, R3.
1812      :    CALLS:    DROPU, MOVMSG, RECUD, CHKERR, LOG, CLRERR.
1813
1814 012364 012737 177777 003436      GOWAIT:: MOV    #-1,TIME1 ;INIT TIME OUT COUNTER.
1815 012372      50103$: ;REPEAT
1816 012372      BREAK ;REPEAT UNTIL INTERRUPT OCCURES:
      ;GO TO THE SUPER TO ALLOW TTY INPUT.
      TRAP    CSBRK
1817 012374 023727 003420 102010      CMP    CMDWRD,#RWD    ;IF COMMAND WAS REWIND THEN:
1818 012402 001014      BNE    50104$
1819 012404      DELAY 10. ;WAIT EXTRA MSECS EACH LOOP.
      MOV    #10.,(PC)+
      .WORD 0
      MOV    LSDLY,(PC)+
      .WORD 0
      DEC    -6(PC)
      BNE    -4
      DEC    -22(PC)
      BNE    -20
1820 012434      50104$:
1821 012434 023727 003420 105010      CMP    CMDWRD,#SFF    ;IF CMDWRD EQ #SFF OR CMDWRD EQ #SFR THEN
1822 012442 001404      BEQ    50105$
1823 012444 023727 003420 105410      CMP    CMDWRD,#SFR
1824 012452 001014      BNE    50106$
1825 012454      50105$:
    
```



```

1826 012454          DELAY 12.          ;ADD DELAY FOR SPACE TAPE MARK COMMANDS
      012454 012727 000014          MOV #12.,(PC)+
      012460 000000          .WORD 0
      012462 013727 002116          MOV LSDLY,(PC)+
      012466 000000          .WORD 0
      012470 005367 177772          DEC -6(PC)
      012474 001375          BNE .-4
      012476 005367 177756          DEC -22(PC)
      012502 001367          BNE .-20
1827 012504          50106$:
1828 012504 105737 002212          TSTB DINT          ;IF INTERRUPTS ARE ENABLED.
1829 012510 001003          BNE 50107$
1830 012512 016502 003472          MOV INTFLG(R5),R2 ;FETCH INTERRUPT OCCURRED FLAG.
1831
1832 012516 000406          BR 50110$
1833 012520          50107$:
1834 012520 012703 000200          MOV #TS.SSR,R3 ;SET UP A MASK FOR THE DONE BIT.
1835 012524 005103          COM R3
1836 012526 017502 002524          MOV @TSSR(R5),R2 ;FETCH DONE BIT.
1837 012532 040302          BIC R3,R2
1838
1839 012534          50110$:
1840 012534 005337 003436          DEC TIME1 ;UPDATE TIMEOUT COUNTER.
1841 012540 005702          TST R2 ;REPEAT UNTIL INTERRUPT OR READY OCCURES.
1842 012542 001003          BNE 50111$
1843 012544 005737 003436          TST TIME1
1844 012550 001310          BNE 50103$
1845 012552          50111$:
1846 012552 005737 003436          TST TIME1 ;IF TIME OUT HAS OCCURRED:
1847 012556 001022          BNE 50112$
1848 012560 016577 003376 170620          MOV RECCNT(R5),@DATAWT
1849 012566 005377 170614          DEC @DATAWT
1850 012572 004737 012734          JSR PC,MOVMSG ;MOVE CURRENT MSG PACKET TO COMMON AREA.
1851 012576          ERRDF 4,NOINTM,STAERM ;REPORT NO INTERRUPT.
      012576 104455          TRAP CSERDF
      012600 000004          .WORD 4
      012602 004670          .WORD NOINTM
      012604 006120          .WORD STAERM
1852 012606 004737 017156          JSR PC,DROPU ;DROP THE UNIT.
1853 012612 012703 003472          MOV #ENDERF,R3 ;LET R3 := #ENDERF
1854 012616 004737 012664          JSR PC,CLRERR ;CLEAR ALL ERROR FLAGS
1855
1856 012622 000417          BR 50113$
1857 012624          50112$:
1858 012624 004737 012734          JSR PC,MOVMSG ;MOVE CURRENT MSG. PACKET TO COMMON AREA.
1859 012630 004737 013020          JSR PC,RECU ;UPDATE THE RECORD COUNT.
1860 012634 004737 013166          JSR PC,CHKERR ;CHECK FOR STATUS ERRORS.
1861 012640 105737 003463          TSTB WRTYFG ;IFB WRTYFG EQ #0 THEN
1862 012644 001006          BNE 50114$
1863 012646 004737 015544          JSR PC,LOG ;LOG BYTES AND ERRORS.
1864 012652 012703 003472          MOV #ENDERF,R3 ;LET R3 := #ENDERF
1865 012656 004737 012664          JSR PC,CLRERR ;CLEAR ALL ERROR FLAGS
1866
1867 012662          50114$:
1868
1869 012662          50113$:
1870 012662 000207          RTS PC ;RETURN IF DONE.
    
```



```

1871
1872
1873      :      SUBROUTINE TO CLEAR FLAGS.
1874      :      INPUTS:          R3 = LWA TO BE CLEARED + 2.
1875      :      OUTPUTS:
1876      :      REGISTERS:      R2
1877      :      CALLS:
1878 012664 012702 003460 CLRERR:: MOV    #BGNFLG,R2      ;LET R2 := #BGNFLG
1879 012670 50115$: ;REPEAT
1880 012670 005022 CLR    (R2)+      ;LET (R2)+ := #0
1881 012672 020203 CMP    R2,R3      ;UNTIL R2 EQ R3
1882 012674 001375 BNE    50115$
1883 012676 000207 RTS    PC
1884
1885
1886      :      SUBROUTINE TO WAIT UNTIL CURRENT UNIT IS READY OR UNTIL TIME OUT.
1887      :      INPUTS:
1888      :      OUTPUTS:
1889      :      REGISTERS:
1890      :      CALLS:
1891
1892 012700 WSSR::
1893 012700 012737 177777 003436 50116$: MOV    #-1,TIME1      ;INIT TIMEOUT COUNTER.
1894 012706 50116$: ;REPEAT UNTIL DEV READY OR TIMEOUT:
1895 012706 104422 003436 002524 BREAK      ;BREAK TO THE SUPERVISOR.
1896 012710 005337 003436 002524 DEC    TIME1      ;UPDATE TIMEOUT COUNTER.
1897 012714 032775 000200 002524 BIT    #TS.SSR,@TSSR(R5) ;UNTIL #TS.SSR SET IN @TSSR(R5) OR TIME1 EQ #0
1898 012722 001003 003436 BNE    50117$
1899 012724 005737 003436 TST    TIME1
1900 012730 001366 50117$: BNE    50116$
1901 012732 000207 RTS    PC      ;RETURN.
1902 012732
1903
1904
1905
1906      :      SUBROUTINE TO MOVE THE CURRENT MESSAGE PACKET TO THE COMMON AREA AND
1907      :      TO UPDATE THE CURRENT TERMINATION CLASS CODE.
1908      :      INPUTS:
1909      :      OUTPUTS:
1910      :      REGISTERS:      R2, R3.
1911      :      CALLS:
1912
1913 012734 017537 002524 003454 MOVMSG::MOV    @TSSR(R5),TSSREG      ;FREEZE THE STATUS REG CONTENTS
1914 012742 013702 003454 MOV    TSSREG,R2      ;EXTRACT THE TERMINATION CLASS CODE.
1915 012746 042702 177761 BIC    #TSC.TCC,R2
1916 012752 010237 003450 MOV    R2,CTCC      ;AND SAVE IT
1917 012756 006237 003450 ASR    CTCC
1918 012762 016503 002544 MOV    MSGPKA(R5),R3      ;ADR OF THIS DEVICE'S MSG.
1919 012766 005002 50120$: CLR    R2      ;CLR COUNTER.
1920 012770 020227 000020 CMP    R2,#MSGCNT      ;WHILE THERE ARE MORE LOCATIONS:
1921 012774 001405 002354 BEQ    50121$
1922 012776 012362 000002 MOV    (R3)+,MSGPKT(R2) ;MOVE MSG TO COMMON AREA.
1923 013002 062702 000002 ADD    #2,R2      ;UPDATE COUNTER.
1924
1925
1926 013006 000770 BR    50120$
    
```

```

1927 013010
1928 013010 013737 002362 003502 50121$: MOV MSGPKT+MS.XS0,EOTFLG ;MOVE XSTATO TO EOT FLAG.
1929 013016 000207 RTS PC
1930
1931 ; SUBROUTINE TO ADJUST THE RECORD COUNT.
1932 ; INPUTS:
1933 ; OUTPUTS:
1934 ; REGISTERS:
1935 ; CALLS:
1936
1937 013020 105737 003465 RECUD:: TSTB RECLOG ;IF RECORD HAS NOT BEEN LOGGED:
1938 013024 001057 BNE 50122$
1939 013026 005365 003376 DEC RECCNT(R5) ;LET RECCNT(R5) := RECCNT(R5) - #1
1940 013032 032737 000001 003450 BIT #BITO,CTCC ;IF TAPE MOVED
1941 013040 001046 BNE 50123$
1942 013042 032737 100000 002366 BIT #X2.OPM,MSGPKT+MS.XS2
1943 013050 001442 BEQ 50123$
1944 013052 105237 003465 INCB RECLOG ;SET RECORD LOGGED,
1945 013056 023727 003420 102010 CMP CMDWRD,#RWD ;IF THIS IS A REWIND CMD:
1946 013064 001003 BNE 50124$
1947 013066 005065 003376 CLR RECCNT(R5) ;CLEAR RECORD COUNT,
1948
1949 013072 000431 BR 50125$
1950 013074
1951 013074 032737 004000 003420 50124$: BIT #BRF.C,CMDWRD ;IF BRF USED, UPDATE RECORD COUNT.
1952 013102 001425 BEQ 50126$
1953 013104 032737 000400 003420 BIT #MOD.CO,CMDWRD ;IF A FORWARD CMD:
1954 013112 001007 BNE 50127$
1955 013114 032737 000400 003424 BIT #MOD.CO,PCMDWD ;IF PREV CMD WAS A FWD ALSO:
1956 013122 001002 BNE 50130$
1957 013124 005265 003376 INC RECCNT(R5) ;INCREMENT RECORD COUNT.
1958
1959 013130 50130$:
1960
1961 013130 000412 BR 50131$ ;IF REVERSE CMD:
1962 013132 50127$:
1963 013132 032737 000400 003424 BIT #MOD.CO,PCMDWD ;IF PREVIOUS CMD WAS A REV ALSO:
1964 013140 001406 BEQ 50132$
1965 013142 032765 000002 003502 BIT #X0.BOT,EOTFLG(R5) ;WHEN NOT AT BOT THEN
1966 013150 001002 BNE 50133$
1967 013152 005365 003376 DEC RECCNT(R5) ;DECREMENT RECORD COUNT.
1968
1969 013156 50133$:
1970
1971 013156 50132$:
1972
1973 013156 50131$:
1974
1975
1976 013156 50126$:
1977
1978 013156 50125$:
1979
1980 013156 50123$:
1981 013156 016577 003376 170222 MOV RECCNT(R5),@DATAWT ;LET @DATAWT := RECCNT(R5)
1982
1983 013164 50122$:
    
```

```

1984 013164 000207          RTS      PC              ;RETURN.
1985
1986
1987      :
1988      : THIS IS THE ERROR CHECK SUBROUTINE. AFTER INTERRUPT THIS
1989      : SUBROUTINE IS CALLED TO CHECK THE TS05 STATUS.
1990      : IF SPECIAL COND IS SET THEN THE TCC HANDLING SUBROUTINE IS ENTERED.
1991      : IF THE RFC IS NON ZERO FOR A COMMAND REQUIRING A BPCR,
1992      : THEN AN ERROR RFC IS REPORTED,
1993      : INPUTS:
1994      : OUTPUTS:
1995      : REGISTERS:      R2, R4.
1996      : CALLS:          TCC0-TCC7.
1996 013166 032737 100000 003454 CHKERR:: BIT      #TS.SC,TSSREG      ;IF SPECIAL COND STATUS IS SET THEN:
1997 013174 001441          BEQ      50134$
1998 013176 023727 003450 000002      CMP      CTCC,#2          ;IF TCC IS NOT 2 THEN:
1999 013204 001405          BEQ      50135$
2000 013206 105737 003471      TSTB    ERRREC          ;IF NOT IN ERROR RECOVERY:
2001 013212 001002          BNE     50136$
2002 013214 005265 003336      INC     SCCNT(R5)      ;INC SC COUNTER.
2003
2004 013220          50136$:
2005
2006 013220          50135$:
2007 013220 032737 004000 003454      BIT      #TS.NXM,TSSREG      ;WHEN NON-EXISTANT MEMO
2008 013226 001004          BNE     50137$
2009 013230 032737 040000 003454      BIT      #TS.UPE,TSSREG
2010 013236 001412          BEQ     50140$
2011 013240          50137$:
2012 013240 032737 100000 002366      BIT      #X2.OPM,MSGPKT+MS.XS2 ;AND TAPE NOT MOVED
2013 013246 001003          BNE     50141$
2014 013250 012702 000005      MOV     #5,R2          ;SET TCC5 INDEX
2015
2016 013254 000402          BR      50142$
2017 013256          50141$:
2018 013256 012702 000004      MOV     #4,R2          ;TAPE MOVED, SET TCC4 INDEX
2019
2020 013262          50142$:
2021
2022 013262 000402          BR      50143$
2023 013264          50140$:
2024 013264 013702 003450      MOV     CTCC,R2          ;SET DETECTED TCC INDEX
2025
2026 013270          50143$:
2027 013270 006302          ASL     R2              ;CURRENT TCC X 2.
2028 013272 004772 013372      JSR     PC,@TCCRA(R2)   ;GO TO THE TCC HANDLING SUBROUTINE.
2029
2030 013276 000426          BR      50144$
2031 013300          50134$:
2032 013300 032737 004000 003420      BIT      #BRF.C,CMDWRD      ;IF BRF IS USED IN THIS CMD THEN:
2033 013306 001422          BEQ     50145$
2034 013310 005737 002360      TST     MSGPKT+MS.RFC     ;IF THERE IS AN RFC THEN:
2035 013314 001417          BEQ     50146$
2036 013316 105737 003515      TSTB    RANDOM          ;IFB RANDOM EQ #0 ORB VFYFLG NE #0 THEN
2037 013322 001403          BEQ     50147$
2038 013324 105737 003516      TSTB    VFYFLG
2039 013330 001411          BEQ     50150$
2040 013332          50147$:
    
```



```

2041
2042 013332 105737 003521          TSTB  IRE          ;IF NOT IN RANDOM OR IF CMD IS WTV:
2043 013336 001006                BNE   50151$      ;IF RFC ERROR REPORTS ARE ALLOWED:
2044 013340 005265 003356          INC   HRDCNT(R5)  ;UPDATE HARD ERROR COUNT
2045 013344                ERRHRD 13,RFCERM,STAERM ;REPORT RFC ERROR
                                TRAP  C$ERHRD
                                .WORD 13
                                .WORD RFCERM
                                .WORD STAERM
2046
2047 013354                50151$:
2048
2049 013354                50150$:
2050
2051 013354                50146$:
2052
2053 013354                50145$:
2054
2055 013354                50144$:
2056 013354 105737 003467          TSTB  RWERR       ;IF A READ/WRITE ERROR HAS OCCURRED THEN:
2057 013360 001403                BEQ   50152$      ;RESTORE CMD PACKET AFTER ERROR RECOV.
2058 013362 013737 003422 002330  MOV   CMDSAV,CMDPKT
2059
2060 013370                50152$:
2061 013370 000207          RTS   PC          ;RETURN.
2062
2063                :   ADDRESSES OF TCC HANDLING ROUTINES FOR TERMINATION CLASS CODES 0 - 7.
2064
2065 013372 013412          TCCRA: TCC0
2066 013374 013430                TCC1
2067 013376 013446                TCC2
2068 013400 013556                TCC3
2069 013402 013574                TCC4
2070 013404 014210                TCC5
2071 013406 014306                TCC6
2072 013410 014450                TCC7
2073
2074                :   SUBROUTINE TO HANDLE TERMINATION CLASS CODE 0, UNDEFINED SPECIAL
2075                :   CONDITION ERROR.
2076                :   INPUTS:
2077                :   OUTPUTS:
2078                :   REGISTERS:
2079                :   CALLS:
2080
2081 013412 005265 003356          TCC0:: INC   HRDCNT(R5)  ;UPDATE HARD ERROR COUNT.
2082 013416                ERRHRD 5,SCERM,STAERM ;REPORT SPECIAL CONDITION ERROR.
                                TRAP  C$ERHRD
                                .WORD 5
                                .WORD SCERM
                                .WORD STAERM
2083 013426 000207          RTS   PC          ;RETURN.
2084
2085
2086                :   SUBROUTINE TO HANDLE TERMINATION CLASS CODE 1, ATTENTION CONDITION.
2087                :   THIS TCC INDICATES THAT THE DRIVE HAS UNDERGONE A STATUS CHANGE
2088                :   SUCH AS GOING OFFLINE OR COMING ONLINE.
2089                :   INPUTS:
    
```

```

2090      :      OUTPUTS:
2091      :      REGISTERS:      R2,R4
2092      :      CALLS:      DROPU
2093
2094 013430 TCC1:: ERRDF 6,ATTNM,STAERM      ;REPORT ATTENTION-UNIT OFF LINE.
      013430 104455      TRAP      C$ERDF
      013432 000006      .WORD      6
      013434 004603      .WORD      ATTNM
      013436 006120      .WORD      STAERM
2095 013440 004737 017156      JSR      PC,DROPU      ;DROP THE UNIT.
2096 013444 000207      RTS      PC      ;RETURN.
2097
2098      :      SUBROUTINE TO HANDLE TERMINATION CLASS CODE 2, TAPE STATUS ALERT.
2099      :      A STATUS CONDITION HAS BEEN ENCOUNTERED THAT MAY HAVE SIGNIFICANCE
2100      :      TO THE PROGRAM. BITS OF INTEREST INCLUDE TMK, RLS, LET, RLL, BOT, EOT.
2101      :      INPUTS:
2102      :      OUTPUTS:
2103      :      REGISTERS:
2104      :      CALLS:
2105
2106 013446 032737 000002 002362 TCC2:: BIT      #X0.BOT,MSGPKT+MS.XS0
2107 013454 001404      BEQ      50153$
2108 013456 105737 003514      TSTB     EXPBOT
2109 013462 001401      BEQ      50153$
2110
2111 013464 000433      BR      TC2RTN      ;IF AT BOT AND BOT IS EXPECTED:
      ;RETURN-TCC2 CAUSED BY EXPECTED BOT.
2112
2113 013466 50153$:
2114 013466 032737 170002 002362 BIT      #X0.RLS!X0.RLL!X0.TMK!X0.LET!X0.BOT,MSGPKT+MS.XS0
2115      ;IF #X0.RLS!X0.RLL!X0.TMK!X0.LET!X0.BOT SETIN MSGPKT+MS.XS0 THEN
2116
2117 013474 001427      BEQ      50154$
2118
2119 013476 105737 003515      TSTB     RANDOM      ;IF TCC2 CAUSED BY ANYTHING BUT EOT:
      ;IFB RANDOM EQ #0 ORB VFYFLG NE #0 THEN
2120 013502 001403      BEQ      50155$
2121 013504 105737 003516      TSTB     VFYFLG
2122 013510 001421      BEQ      50156$
2123 013512 50155$:
2124
2125 013512 105737 003521      TSTB     IRE      ;IF NOT IN RANDOM OR IF CMD IS WTV:
      ;IF RFC ERROR REPORTS ARE ALLOWED:
2126 013516 001016      BNE      50157$
2127 013520 105737 003471      TSTB     ERRREC      ;IF WE ARE IN ERROR RECOVERY THEN:
2128 013524 001403      BEQ      50160$
2129 013526 105237 003470      INCB     UNREC      ;SET UNRECOVERABLE FLAG FOR LOG.
      ;ELSE - IF NOT IN ERROR RECOVERY:
2130
2131 013532 000402      BR      50161$
2132 013534 50160$:
2133 013534 005265 003336      INC      SCCNT(R5)      ;INCREMENT THE SPEC COND COUNTER.
2134
2135 013540 50161$:
2136 013540 005265 003356      INC      HRDCNT(R5)      ;UPDATE HARD ERROR COUNT.
2137 013544 005265 003356      ERRHRD  7,TSAM,STAERM      ;REPORT TAPE STATUS ALERT.
      013544 104456      TRAP      C$ERHRD
      013546 000007      .WORD      7
      013550 004705      .WORD      TSAM
      013552 006120      .WORD      STAERM
2138
    
```

```

2139 013554          50157$:
2140
2141 013554          50156$:
2142
2143 013554          50154$:
2144
2145 013554 000207  TC2RTN:  RTS  PC          ;RETURN.
2146
2147
2148 :               SUBROUTINE TO HANDLE TERMINATION CLASS CODE 3, FUNCTION REJECT.
2149 :               THE SPECIFIED FUNCTION WAS NOT INITIATED. BITS OF INTEREST ARE
2150 :               RMR, OFL, VCK, BOT, ILC, WLE, ILA, AND NBA.
2151 :               INPUTS:
2152 :               OUTPUTS:
2153 :               REGISTERS:      R2,R4
2154 :               CALLS:          DROPU
2155
2156 013556          TCC3::  ERRDF  8,FUNRM,STAERM          ;REPORT FUNCTION REJECT.
      013556 104455
      013560 000010
      013562 004622
      013564 006120
2157 013566 004737 017156  JSR  PC,DROPU          ;DROP THE UNIT.
2158 013572 000207  RTS  PC          ;RETURN.
2159
2160 :               SUBROUTINE TO HANDLE TERMINATION CLASS CODE 4, RECOVERABLE ERROR.
2161 :               TAPE POSITION IS ONE RECORD BEYOND WHAT ITS POSITION WAS WHEN
2162 :               THE FUNCTION WAS INITIATED. RECOVERY PROCEDURE IS TO LOG THE
2163 :               ERROR AND ISSUE THE APPROPRIATE RETRY COMMAND.
2164 :               2 WRITE-ERROR-RECOVERY ALGORITHMS CAN BE SELECTED:
2165 :               THE FIRST ONE, VIA BADTSW SWITCH, DOES DETECT BAD SPOTS ON TAPE.
2166 :               IT CALLS A WRITE RETRY SUBR UNTIL THE RECORD IS RECOVERED
2167 :               OR 20 BAD SPOTS HAVE BEEN LOGGED. ON REACHING 20 BAD
2168 :               SPOTS LOGGED, A BAD TAPE OVERFLOW MSG IS PRINTED AND THE
2169 :               UNIT DROPPED.
2170 :               THE SECOND ALGORITHM ISSUES THE TS05 WRITE RETRY COMMAND
2171 :               UP TO 16 TIMES BEFORE DROPPING THE UNIT OR PROCEEDING
2172 :               WITH THE NEXT RECORD ON RECOVERY.
2173 :               INPUTS:
2174 :               OUTPUTS:
2175 :               REGISTERS:      R2,R4.
2176 :               CALLS:          RTLE, EXCUTE, GOWAIT, DROPU, WRTY
2177
2178 013574 023727 003426 000002  TCC4::  CMP  CMDLG,#2          ;IF CMDLG EQ #2 ANDB BADTSW NE #0 THEN
2179 013602 001125  BNE  50162$
2180 013604 105737 002210  TSTB BADTSW
2181 013610 001522  BEQ  50162$
2182 013612 105737 003471  TSTB ERRREC          ;IFB ERRREC EQ #0 ANDB ERCVER NE #0 THEN
2183 013616 001007  BNE  50163$
2184 013620 105737 002207  TSTB ERCVER
2185 013624 001404  BEQ  50163$
2186 013626          ERRSOFT 9,RERM,STAERM  ;
      013626 104457
      013630 000011
      013632 005017
      013634 006120
2187
      TRAP  CSERDF
      .WORD 8
      .WORD FUNRM
      .WORD STAERM

      TRAP  CSERSOFT
      .WORD 9
      .WORD RERM
      .WORD STAERM
    
```



```

2188 013636
2189 013636 105737 002213
2190 013642 001102
2191 013644 105237 003471
2192 013650 105237 003464
2193 013654 105737 003463
2194 013660 001072
2195
2196 013662 013737 003420 015064
2197 013670 013737 002330 015062
2198 013676 013737 002336 015066
2199 013704 105237 003467
2200 013710 105237 003463
2201
2202 013714
2203 013714 005265 003316
2204 013720 005037 003460
2205 013724 105037 003462
2206 013730 004737 014614
2207 013734 105737 003464
2208 013740 001404
2209 013742 027727 167544 000050
2210 013750 103761
2211 013752
2212
2213 013752 027727 167534 000050
2214 013760 103423
2215 013762
    013762 012746 015155
    013766 012746 000001
    013772 010600
    013774 104414
    013776 062706 000004
2216 014002 004737 015274
2217 014006 005365 003376
2218 014012 004737 017156
2219 014016 005065 003376
2220 014022 012775 002350 002514
2221
2222 014030
2223 014030 105037 003463
2224 014034 105237 003531
2225 014040 013737 015064 003424
2226
2227 014046
2228
2229 014046 000402
2230 014050
2231 014050 105237 003470
2232
2233 014054
2234
2235 014054 000454
2236 014056
2237 014056 004737 014466
2238 014062 023727 003426 000002
2239 014070 003411

50163$:
TSTB IREC ;IFB IREC EQ #0 THEN
BNE 50164$
INCB ERRREC ;RETRY FLAG FOR EXECUTE SUBR: DON'T UPDATE REC CN
INCB WRTYER ;REWRITE ERROR FLAG FOR WRTY SUBR
TSTB WRTYFG ;FIRST RETRY ON THIS RECORD: SUBSEQUENT
BNE 50165$
;RETRIES WITH TCC4 ERRORS BY-PASS THIS SECTION
MOV CMDWRD,WTYWRD ;SAVE WRITE COMMAND PACKET
MOV CMDPKT,WTYCMD
MOV CMDPKT+CP.CNT,WTYBRF
INCB RWERR ;LOG SUBR FLAG: COUNT WRT ERRORS
INCB WRTYFG ;RETRY IN PROGRESS FLAG

50166$:
;REPEAT
INC WRTYCT(R5) ;COUNT GLOBAL WRITE RETRIES
CLR RETRYC ;CLEAR # OF RETRIES PER RECORD
CLR RPTCNT ;CLEAR # OF REPEATS
JSR PC,WRTY ;CALL WRITE RETRY
TSTB WRTYER ;REPEAT RETRIES ON SAME RECORD
BEQ 50167$
CMP @BTPT,#40.
BLO 50166$

50167$:
;UNTIL RECOVERED OR 20 BAD SPOTS
;WHEN 20 BAD SPOTS LOGGED
CMP @BTPT,#40.
BLO 50170$
PRINTB #BTMSG2 ;PRINT BAD TAPE OVERFLOW MSG
MOV #BTMSG2,-(SP)
MOV #1,-(SP)
MOV SP,R0
TRAP C$PNTB
ADD #4,SP

JSR PC,BORERS ;ERASE BAD RECORD
DEC RECCNT(R5)
JSR PC,DROPU ;DROP UNIT
CLR RECCNT(R5)
MOV #RWCPK,@TSDB(R5) ;REWIND UNIT

50170$:
CLR WRTYFG ;RETRY COMPLETE FLAG
INCB MISCFG ;DO NOT HALT ON THIS CMD FLG
MOV WTYWRD,PCMDWD ;RESTORE ORIGINAL WRT CMD AFTER RECOVERY

50165$:
BR 50171$

50164$:
INCB UNREC ;LET UNREC :B= UNREC + #1 ;

50171$:
BR 50172$

50162$:
JSR PC,RTLE ;CHECK FOR RETRY LIMIT EXCEEDED.
CMP CMDLG,#2 ;IF READ CMD THEN:
BLE 50173$
    
```

```

2240 014072 012702 000020      MOV      #RRECL,R2          ;R2=READ RETRY COUNT LIMIT / 2
2241 014076 006202              ASR      R2
2242 014100 023702 003460      CMP      RETRYC,R2        ;IF RETRY COUNT IS MORE THAN HALF LIMIT:
2243 014104 002403              BLT     50174$
2244 014106 052737 020000 002330  BIS     #OPP.C,CMDPKT     ;SET OPPOSITE BIT FOR RETRY2.
2245
2246 014114              50174$:
2247
2248 014114              50173$:
2249 014114 005737 003460      TST     RETRYC          ;IF THIS IS THE ORIGINAL ERROR THEN:
2250 014120 001007              BNE     50175$
2251 014122 105737 002207      TSTB   ERVER
2252 014126 001404              BEQ     50175$
2253 014130              ERRSOFT 9,RERM,STAERM ;REPORT RECOVERABLE ERROR
                014130 104457
                014132 000011          TRAP   CSERSOFT
                014134 005017          .WORD 9
                014136 006120          .WORD RERM
                .WORD STAERM
2254
2255 014140              50175$:          ;PROVIDED OPERATOR HAS ENABLED THE REPORT
2256 014140 005237 003460      INC     RETRYC          ;UPDATE RETRY COUNT.
2257 014144 052737 001000 002330  BIS     #MOD.C1,CMDPKT ;SET RETRY BIT IN CMD PACKET.
2258 014152 105737 002213      TSTB   IREC            ;IF ERROR RECOVERY ENABLED:
2259 014156 001011              BNE     50176$
2260 014160 105237 003471      INCB   ERRREC          ;SET ERROR RECOVERY FLAG.
2261 014164 012602              MOV     (SP)+,R2        ;POP 2 RTN ADRS FROM STACK.
2262 014166 012602              MOV     (SP)+,R2
2263 014170 004737 012054      JSR    PC,EXCUTE
2264 014174 000137 012364      JMP    GOWAIT          ;GO EXECUTE THE RETRY COMMAND.
2265
2266 014200 000402              BR     50177$          ;GO WAIT FOR INTERRUPT + CHECK STATUS.
2267 014202              50176$:          ;ELSE IF ERROR RECOVERY IS NOT ENABLED:
2268 014202 105237 003470      INCB   UNREC          ;SET UNRECOVERABLE ERROR FLAG.
2269
2270 014206              50177$:
2271
2272 014206              50172$:
2273 014206 000207      RTS PC                ;RETURN
2274
2275      : SUBROUTINE TO HANDLE TERMINATION CLASS CODE 5, RECOVERABLE ERROR.
2276      : TAPE POSITION HAS NOT CHANGED. RECOVERY PROCEDURE IS TO LOG THE
2277      : ERROR AND RE-ISSUE THE ORIGINAL COMMAND.
2278      : INPUTS:
2279      : OUTPUTS:
2280      : REGISTERS: R2,R4.
2281      : CALLS: RTLE, EXCUTE, GOWAIT, DROP.
2282
2283 014210 004737 014466      TCC5:: JSR    PC,RTLE          ;CHECK FOR RETRY LIMIT EXCEEDED
2284 014214 005737 003460      TST     RETRYC          ;IF THIS IS THE ORIGINAL ERROR THEN:
2285 014220 001004              BNE     50200$
2286 014222              ERRSOFT 10,RERM,STAERM ;REPORT RECOVERABLE ERROR.
                014222 104457
                014224 000012          TRAP   CSERSOFT
                014226 005017          .WORD 10
                014230 006120          .WORD RERM
                .WORD STAERM
2287 014232              50200$:
2288 014232 005237 003460      INC     RETRYC          ;UPDATE RETRY COUNTER.
    
```

```

2289 014236 105737 002213          TSTB  IREC          ;IF ERROR RECOVERY IS ENABLED:
2290 014242 001016          BNE   50201$
2291 014244 105237 003471          INCB  ERRREC        ;SET ERROR RECOVERY FLAG.
2292 014250 005265 003376          INC   RECCNT(R5)    ;UPDATE REC COUNT
2293 014254 016577 003376 167124  MOV   RECCNT(R5),@DATAWT ;AND INSERT IT INTO WRT BFR
2294 014262 012602          MOV   (SP)+,R2      ;POP 2 RTN ADRS FROM STACK.
2295 014264 012602          MOV   (SP)+,R2
2296 014266 004737 012054          JSR   PC,EXCUTE     ;GO RE-ISSUE THE COMMAND.
2297 014272 000137 012364          JMP   GOWAIT        ;GO WAIT FOR INTERRUPT + CHECK STATUS.
2298                                     ;ELSE IF ERROR RECOVERY IS NOT ENABLED:
2299 014276 000402          BR    50202$
2300 014300          50201$:
2301 014300 105237 003470          INCB  UNREC          ;SET UNRECOVERABLE ERROR FLAG.
2302
2303 014304          50202$:
2304 014304 000207          RTS   PC              ;RETURN.
2305
2306
2307 :
2308 :
2309 :
2310 :
2311 :
2312 :
2313 :
2314 :
2315 :
2316 :
2317 :
2318 014306 033737 000010 002370 TCC6:: BIT   X3.DCK,MSGPKT+MS.XS3;IF X3.DCK NOTSETIN MSGPKT+MS.XS3 THEN
2319 014314 001016          BNE   50203$
2320                                     ;IF THERE IS NO DENSITY CHECK THEN:
2321 014316 005737 003426          TST   CMDLG          ;IF CMD IS A READ OR WRITE THEN:
2322 014322 001404          BEQ   50204$
2323 014324 105237 003467          INCB  RWERR          ;SET RD/WR ERROR FLAG,
2324 014330 105237 003470          INCB  UNREC          ;SET UNRECOVERABLE ERROR FLAG.
2325
2326 014334          50204$:
2327 014334          ERRDF 11,URERM,STAERM ;REPORT UNRECOVERABLE ERROR.
2328 014334 104455          TRAP  CSERDF
2329 014336 000013          .WORD 11
2330 014340 005041          .WORD URERM
2331 014342 006120          .WORD STAERM
2332 014344 004737 017156          JSR   PC,DROPU      ;REPORT ERROR + DROP UNIT.
2333                                     ;ELSE-IF THERE IS DENSITY CHECK:
2334 014350 000436          BR    50205$
2335
2336 014352          50203$:
2337 014352 004737 014466          JSR   PC,RTLE      ;CHECK FOR RETRY LIMIT EXCEEDED.
2338 014356 005737 003460          TST   RETRYC        ;IF THIS IS THE ORIGINAL ERROR THEN:
2339 014362 001004          BNE   50206$
2340 014364          ERRSOFT 11,URERM,STAERM ;REPORT DENSITY CHECK ERROR
2341                                     TRAP  CSERSOFT
2342                                     .WORD 11
2343                                     .WORD URERM
2344                                     .WORD STAERM
2345
2346
2347 014374          50206$:
    
```



```

2338 014374 005237 003460      INC      RETRYC      ;UPDATE RETRY COUNT.
2339 014400 105737 003521      TSTB     IRE         ;IF ERROR RECOVERY IS ENABLED THEN:
2340 014404 001016                    BNE      50207$
2341 014406 105237 003471      INCB     ERRREC      ;SET ERROR RECOVERY FLAG,
2342 014412 012775 002350 002514  MOV      #RWCPR,@TSDB(R5) ;ISSUE A REWIND COMMAND,
2343 014420 004737 012700      JSR      PC,WSSR     ;WAIT FOR SUBSYSTEM READY,
2344 014424 012602                    MOV      (SP)+,R2    ;POP 2 RTN ADRS FROM STACK.
2345 014426 012602                    MOV      (SP)+,R2
2346 014430 004737 012054      JSR      PC,EXCUTE
2347 014434 000137 012364      JMP      GOWAIT      ;REISSUE THE COMMAND,
2348                                ;WAIT FOR INTERRUPT
2349 014440 000402                    BR       50210$      ;ELSE-IF ERR REC DISABLED:
2350 014442                    50207$:
2351 014442 105237 003470      INCB     UNREC       ;SET UNRECOVERABLE ERROR FLAG.
2352
2353 014446                    50210$:
2354
2355 014446                    50205$:
2356 014446 000207      RTS      PC          ;RETURN
2357
2358 :      SUBROUTINE TO HANDLE TERMINATION CLASS CODE 7, FATAL SUBSYSTEM
2359 :      ERROR. THE SUBSYSTEM IS INCAPABLE OF PROPERLY PERFORMING
2360 :      COMMANDS OR AT LEAST ITS INTEGRITY IS SERIOUSLY QUESTIONABLE.
2361 :      REFER TO THE FATAL CLASS CODE FIELD IN THE TSSR REGISTER FOR
2362 :      ADDITIONAL INFORMATION ON THE TYPE OF FATAL ERROR.
2363 :      INPUTS:
2364 :      OUTPUTS:
2365 :      REGISTERS:      R2, R4
2366 :      CALLS:
2367
2368 014450      TCC7::  ERRDF  12,FATSM,STAERM      ;REPORT FATAL SUBSYSTEM ERROR.
2369 014450 104455      TRAP      CSERDF
2370 014452 000014      .WORD    12
2371 014454 004642      .WORD    FATSM
2372 014456 006120      .WORD    STAERM
2373 014460 004737 017156      JSR      PC,DROPU   ;DROP THE UNIT.
2374 014464 000207      RTS      PC        ;RETURN.
2375
2376 :      SUBROUTINE TO CHECK FOR RETRY LIMIT EXCEEDED. PRINTS ERROR MESSAGE
2377 :      IF EXCEEDED AND DROP UNIT UNLESS COMMAND IS A READ.
2378 :      INPUTS:
2379 :      OUTPUTS:
2380 :      REGISTERS:      R2, R4.
2381 :      CALLS:      DROPU
2382
2383 014466 005737 003426      RTLE::  TST      CMDLG      ;IF CMD IS NOT A READ OR WRITE THEN:
2384 014472 001010      BNE      50211$
2385 014474 104455      ERRDF  11,URERM,STAERM ;REPORT UNRECOVERABLE ERROR.
2386 014476 000013      TRAP      CSERDF
2387 014500 005041      .WORD    11
2388 014502 006120      .WORD    URERM
2389 014504 004737 017156      JSR      PC,DROPU   ;DROP THE UNIT.
2390 014510 012602      MOV      (SP)+,R2    ;POP RTN ADRS FROM STACK.
2391 014512 000437      BR       RTLRTN     ;AND RETURN.
2392

```

```

2387 014514
2388 014514 105237 003467
2389 014520 023727 003426 000002
2390 014526 001016
2391 014530 023727 003460 000020
2392 014536 001011
2393 014540 105237 003470
2394 014544
    014544 104455
    014546 000016
    014550 004556
    014552 006120
2395 014554 004737 017156
2396 014560 012602
2397 014562
2398
2399 014562 000413
2400 014564
2401 014564 023727 003460 000020
2402 014572 001007
2403 014574 105237 003470
2404 014600
    014600 104456
    014602 000016
    014604 004556
    014606 006120
2405 014610 012602
2406 014612
2407
2408 014612
2409 014612 000207
2410
2411
2412
2413
2414
2415
2416
2417
2418
2419
2420
2421
2422
2423
2424
2425
2426
2427 014614
2428
2429 014614
2430
2431
2432 014614
2433 014614 004737 015274
2434 014620 105037 003464
2435 014624 004737 015450

50211$:
    INCB RWERR ;SET READ/WRITE ERROR FLAG.
    CMP CMDLG,#2 ;IF CMD IS A WRT. OR WTM:
    BNE 50212$
    CMP RETRYC,#WRECL ;IF RETRY COUNT HAS REACHED LIMIT:
    BNE 50213$
    INCB UNREC ;SET UNRECOVERABLE FLAG
    ERRDF 14,RLEXM,STAERM ;REPORT RETRY LIMIT EXCEEDED.
                                TRAP CSERDF
                                .WORD 14
                                .WORD RLEXM
                                .WORD STAERM

    JSR PC,DROPU ;DROP THE UNIT.
    MOV (SP)+,R2 ;POP 2 RTN ADRS FROM STACK.

50213$:
    ;ELSE - CMD IS A READ:

50212$:
    BR 50214$
    CMP RETRYC,#RRECL ;IF RETRY COUNT HAS REACHED LIMIT:
    BNE 50215$
    INCB UNREC ;SET UNRECOVERABLE FLAG
    ERRHRD 14,RLEXM,STAERM ;REPORT RECOVERABLE ERROR.
                                TRAP CSERHRD
                                .WORD 14
                                .WORD RLEXM
                                .WORD STAERM

    MOV (SP)+,R2 ;POP 2 RTN ADRS FROM STACK.

50215$:

50214$:
    RTLRTN: RTS PC ;RETURN

: SUBR TO REWRITE A BAD, BUT RECOVERABLE WRITTEN RECORD.
: REWRITE RECORD ON SAME SPOT: REPEAT 4 TIMES.
: IF ALL 4 REPEATS GOOD, RECORD IS RECOVERED
: AND A RECOVERABLE WRITE ERROR IS LOGGED.
: IF ANY OF 4 REPEATS BAD, ERASE BAD RECORD, LOG SUSPECTED
: BAD SPOT, RETRY AGAIN. RETRY 4 TIMES, UP TO 4 REPEATS EACH.
: IF RECORD NOT GOOD AFTER 4 RETRIES, ERASE IT, EXIT WITH
: ERROR FLAG WRTYER SET, PRINTING RETRY FAILED.
: THIS ALL SCHEME IS REENTERED 20 TIMES MAX, IE 20 BAD
: SPOTS MAX ARE ALLOWED.

: INPUTS:
: OUTPUTS:
: REGISTERS: R3,R4
: CALLS: BORERS, REWRT

WRTY:: ;BEGIN RETRY ;REPEAT

50217$:
    ;BEGIN REPEAT ;REPEAT

50221$:
    JSR PC,BORERS ;BACKSPACE/ERASE ONE RECORD
    CLRB WRTYER ;CLEAR WRITE RETRY ERROR
    JSR PC,REWRT ;REWRITE RECORD ON SAME SPOT
    
```

```

2436 014630 105237 003462          INCB  RPTCNT          ;COUNT REPEATS
2437 014634 123727 003462 000004  CMPB  RPTCNT,#4      ;LIMIT: 4 REPEATS OR RECOVERED
2438 014642 001403                    BEQ   50222$
2439 014644 105737 003464          TSTB  WRTYER
2440 014650 001761                    BEQ   50221$
2441 014652          50222$:
2442                    ;END REPEAT
2443 014652          50220$:
2444 014652 005237 003460          INC   RETRYC          ;COUNT RETRIES
2445 014656 105737 003464          TSTB  WRTYER
2446 014662 001001                    BNE   50223$
2447 014664 000457                    BR    50216$          ;EXIT RETRY LOOP IF RECOVERED
2448
2449 014666          50223$:
2450 014666 105737 002207          TSTB  ERCVER          ;IFB ERCVER NE #0 THEN
2451 014672 001415                    BEQ   50225$
2452 014674          PRINTB #BTMSG1,RETRYC,<B,RPTCNT> ;PRINT SUSPECTED BAD SPOT
          014674 005046                    CLR   -(SP)
          014676 153716 003462                    BISB  RPTCNT,(SP)
          014702 013746 003460                    MOV   RETRYC, -(SP)
          014706 012746 015070                    MOV   #BTMSG1, -(SP)
          014712 012746 000003                    MOV   #3, -(SP)
          014716 010600                    MOV   SP, R0
          014720 104414                    TRAP  C$PNTB
          014722 062706 000010                    ADD   #10, SP
2453 014726          50225$:
2454 014726 023727 003460 000001  CMP   RETRYC,#1      ;ON FIRST RETRY, LOGG BAD SPOT
2455 014734 001021                    BNE   50226$
2456 014736 016537 002616 003512  MOV   BTADDR(R5),BTPT ;BTPT IS BOTH THE BAD SPOT COUNTER
2457 014744 017704 166542          MOV   @BTPT,R4        ;AND THE LOGGING INDEX
2458 014750 062704 000002          ADD   #2,R4
2459 014754 010477 166532          MOV   R4,@BTPT
2460 014760 020427 000050          CMP   R4,#40         ;IF R4 LOS #40. THEN
2461 014764 101005                    BHI   50227$
2462 014766 013703 003512          MOV   BTPT,R3        ;STORE FIRST 20 BAD SPOTS
2463 014772 060304                    ADD   R3,R4          ;LET R4 := R4 + R3
2464 014774 016514 003376          MOV   RECCNT(R5),(R4) ;LET (R4) := RECCNT(R5)
2465
2466 015000          50227$:
2467
2468 015000          50226$:
2469 015000 105237 003525          INCB  ERSFLG          ;ERASE FLAG TO ERASE BAD RECORD
2470 015004 105037 003467          CLRB  RWERR          ;CANCELL "LOG" ERROR FLAG ON FAILING RET
2471 015010 105037 003462          CLRB  RPTCNT         ;CLEAR REPEAT COUNT FOR NEXT RETRY
2472
2473 015014          50224$:
2474 015014 023727 003460 000004  CMP   RETRYC,#4      ;LIMIT: 4 RETRIES
2475 015022 001274                    BNE   50217$
2476                    ;END RETRY
2477 015024          50216$:
2478 015024 105737 003464          TSTB  WRTYER          ;IFB WRTYER NE #0 THEN
2479 015030 001413                    BEQ   50230$
2480 015032 105737 002207          TSTB  ERCVER          ;IFB ERCVER NE #0 THEN
2481 015036 001410                    BEQ   50231$
2482 015040          PRINTB #BTMSG3          ;PRINT RETRY FAILED
          015040 012746 015225          MOV   #BTMSG3, -(SP)
          015044 012746 000001          MOV   #1, -(SP)
    
```



```

015271    045    116    000
2496
2497
2498
2499
2500
2501
2502
2503
2504
2505 015274 013737 003420 003424 BORERS::MOV  CMDWRD,PCMDWD ;SET COMMAND TO SPACE REV
2506 015302 012737 104410 003420      MOV  #SRR,CMDWRD ;LET CMDWRD := #SRR ;
2507 015310 013737 003420 002330      MOV  CMDWRD,CMDPKT ;LET CMDPKT := CMDWRD CLR.BY #BRF.C ;
2508 015316 042737 004000 002330      BIC  #BRF.C,CMDPKT
2509 015324 013737 002330 003422      MOV  CMDPKT,CMDSAV ;LET CMDSAV := CMDPKT ;
2510 015332 012737 000001 002332      MOV  #1,CMDPKT+CP.ADL ;LET CMDPKT+CP.ADL := #1 ;
2511 015340 005037 003426      CLR  CMDLG ;LET CMDLG := #0 ;
2512 015344 004737 011064      JSR  PC,CMDAC
2513 015350 004737 012054      JSR  PC,EXCUTE
2514 015354 004737 012364      JSR  PC,GOWAIT
2515 015360 004737 017456      JSR  PC,CKHAE
2516 015364 105737 003525      TSTB ERSFLG ;WHEN ERASE FLAG IS SET, DO ERASE
2517 015370 001426      BEQ  50232$
2518 015372 013737 003420 003424      MOV  CMDWRD,PCMDWD ;LET PCMDWD := CMDWRD ;
2519 015400 012737 100411 003420      MOV  #ERS,CMDWRD ;LET CMDWRD := #ERS ;
2520 015406 013737 003420 002330      MOV  CMDWRD,CMDPKT ;LET CMDPKT := CMDWRD ;
2521 015414 013737 002330 003422      MOV  CMDPKT,CMDSAV ;LET CMDSAV := CMDPKT ;
2522 015422 004737 011064      JSR  PC,CMDAC
2523 015426 004737 012054      JSR  PC,EXCUTE
2524 015432 004737 012364      JSR  PC,GOWAIT
2525 015436 004737 017456      JSR  PC,CKHAE
2526 015442 105037 003525      CLRB ERSFLG ;LET ERSFLG :B= #0
2527
2528 015446      50232$:
2529 015446 000207      RTS  PC
2530
2531
2532
2533 015450 013737 003420 003424 REWRT::MOV  CMDWRD,PCMDWD ;RESTORE WRITE COMMAND PACKET
2534 015456 013737 015064 003420      MOV  WTYWRD,CMDWRD ;LET CMDWRD := WTYWRD ;
2535 015464 013737 015062 002330      MOV  WTYCMD,CMDPKT ;LET CMDPKT := WTYCMD ;
2536 015472 013737 002330 003422      MOV  CMDPKT,CMDSAV ;LET CMDSAV := CMDPKT ;
2537 015500 013737 003406 002332      MOV  DATAWT,CMDPKT+CP.ADL ;LET CMDPKT+CP.ADL := DATAWT ;
2538 015506 013737 015066 002336      MOV  WTYBRF,CMDPKT+CP.CNT ;LET CMDPKT+CP.CNT := WTYBRF ;
2539 015514 012737 000002 003426      MOV  #2,CMDLG ;LET CMDLG := #2 ;
2540 015522 004737 011064      JSR  PC,CMDAC
2541 015526 004737 012054      JSR  PC,EXCUTE ;RE-WRITE RECORD
2542 015532 004737 012364      JSR  PC,GOWAIT
2543 015536 004737 017456      JSR  PC,CKHAE
2544 015542 000207      RTS  PC
2545
2546
2547
2548
2549
2550
2551

```

```

: SUBROUTINE TO LOG BYTES READ/WITTEN.
: ALSO UPDATES READ/WRITE ERROR COUNTERS.
: INPUTS:
: OUTPUTS:
: REGISTERS: R2, R3, R4.
: CALLS:

```



```

2552
2553 015544 105737 003466 LOG:: TSTB ERLOG ;IF DATA AND ERRORS HAVE NOT BEEN LOGGED THEN:
2554 015550 001126 BNE 50233$
2555 015552 105237 003466 INCB ERLOG ;SET LOG DONE FLAG.
2556 015556 013704 003426 MOV CMDLG,R4 ;GET CURRENT CMD LOGGING CODE.
2557 015562 005704 TST R4 ;IF THERE IS A CODE THEN:
2558 015564 001520 BEQ 50234$
2559 015566 162704 000002 SUB #2,R4 ;ADJUST THE CODE FOR TABLE INDEX.
2560 015572 010502 MOV R5,R2 ;R2 = ADR OF BYTE COUNT LSW.
2561 015574 066402 016030 ADD BINC(R4),R2
2562 015600 062702 002626 ADD #CNTBGN,R2
2563 015604 063712 003416 ADD BRFCNT,(R2) ;ADD BRFCNT TO LSW.
2564 015610 023737 002360 003416 CMP MSGPKT+MS.RFC,BRFCNT ;IF THE RFC IS LOWER OR THE SAME AS BRFCNT THEN
2565 015616 101002 BHI 50235$
2566 015620 163712 002360 SUB MSGPKT+MS.RFC,(R2) ;SUBTRACT RFC FROM EXPECTED BRFCNT.
2567
2568 015624 50235$:
2569 015624 010203 MOV R2,R3 ;R3 = ADR OF 2ND WORD.
2570 015626 062703 000010 ADD #10,R3
2571
2572 015632 50236$: ;WHILE (R2) GT #999. DO
2573 015632 021227 001747 CMP (R2),#999.
2574 015636 003404 BLE 50237$
2575 015640 162712 001750 SUB #1000.,(R2) ;UPDATE BYTE COUNT
2576 015644 005213 INC (R3) ;LET (R3) := (R3) + #1 ;2ND WORD.
2577
2578 015646 000771 BR 50236$
2579 015650 50237$:
2580 015650 010302 MOV R3,R2 ;LET R2 := R3 + #10 ;R2 = ADR OF 3RD WORD.
2581 015652 062702 000010 ADD #10,R2
2582 015656 50240$: ;WHILE (R3) GT #999. DO
2583 015656 021327 001747 CMP (R3),#999.
2584 015662 003404 BLE 50241$
2585 015664 162713 001750 SUB #1000.,(R3) ;UPDATE BYTE COUNT
2586 015670 005212 INC (R2) ;LET (R2) := (R2) + #1 ;3RD WORD.
2587
2588 015672 000771 BR 50240$
2589 015674 50241$:
2590 015674 010203 MOV R2,R3 ;LET R3 := R2 + #10 ;R3 = ADR OF 4TH WORD.
2591 015676 062703 000010 ADD #10,R3
2592 015702 50242$: ;WHILE (R2) GT #999. DO
2593 015702 021227 001747 CMP (R2),#999.
2594 015706 003404 BLE 50243$
2595 015710 162712 001750 SUB #1000.,(R2) ;UPDATE BYTE COUNT
2596 015714 005213 INC (R3) ;LET (R3) := (R3) + #1 ;4TH WORD.
2597
2598 015716 000771 BR 50242$
2599 015720 50243$:
2600 015720 105737 003467 TSTB RWERR ;IF R/W ERROR, UPDATE ERROR COUNT.
2601 015724 001440 BEQ 50244$
2602 015726 010502 MOV R5,R2 ;R2 = ADR OF COUNTER.
2603 015730 066402 016036 ADD EINC(R4),R2
2604 015734 062702 002766 ADD #WRREC,R2
2605 015740 105737 003470 TSTB UNREC ;IS THE ERROR UNRECOVERABLE?
2606 015744 001404 BEQ 50245$
2607 015746 062702 000010 ADD #10,R2 ;YES, POINT TO NEXT COUNTER.
2608 015752 005212 INC (R2) ;UPDATE THE ERROR COUNTER
    
```



```

2609
2610 015754 000424
2611 015756
2612 015756 005212
2613 015760 105737 002213
2614 015764 001020
2615 015766 105737 003522
2616 015772 001015
2617 015774 105737 002207
2618 016000 001412
2619 016002
    016002 013746 003460
    016006 012746 005422
    016012 012746 000002
    016016 010600
    016020 104414
    016022 062706 000006

2620
2621 016026
2622
2623 016026
2624
2625
2626 016026
2627
2628 016026
2629
2630 016026
2631
2632 016026
2633 016026 000207
2634
2635
2636 016030 000000
2637 016032 000040
2638 016034 000100
2639
2640 016036 000000
2641 016040 000020
2642 016042 000040
2643
2644
2645
2646
2647
2648
2649
2650
2651
2652 016044 105737 003516
2653 016050 001426
2654 016052 013737 003420 003424
2655 016060 012737 104401 003420
2656 016066 012737 000004 003426
2657 016074 004737 016130
2658 016100 013737 003420 003424
2659 016106 012737 104001 003420

;ELSE - IF ERROR IS RECOVERABLE:
50245$: BR 50246$
    INC (R2) ;UPDATE THE ERROR COUNTER
    TSTB IREC ;IF ERROR RECOVERY IS ENABLED:
    BNE 50247$
    TSTB DROPED ;IF UNIT HAS NOT BEEN DROPPED:
    BNE 50250$
    TSTB ERCVER
    BEQ 50250$
    PRINTB #NURTY1,RETRYC ;PRINT # OF RETRIES TO RECOVER
                                MOV RETRYC,-(SP)
                                MOV #NURTY1,-(SP)
                                MOV #2,-(SP)
                                MOV SP,R0
                                TRAP C$PNTB
                                ADD #6,SP
;PROVIDED PRINT HAS BEEN ENABLED

50250$:
50247$:
50246$:
50244$:
50234$:
50233$:
    RTS PC
;
;INDEXES TO BYTE COUNTERS.
BINC: 0 ;WRITE.
    40 ;READ REV.
    100 ;READ FWD.
;
;INDEXES TO READ/WRITE ERROR COUNTERS.
EINC: 0 ;WRITE.
    20 ;READ REV.
    40 ;READ FWD.
;
; IF A WRITE/VERIFY COMMAND IS ISSUED, CONTROL IS THEN
; TRANSFERRED TO THIS SUBROUTINE TO READ REVERSE, CHECK DATA,
; READ FORWARD, CHECK DATA, THEN CONTINUE TO NEXT COMMAND.
;
; INPUTS:
;
; OUTPUTS:
;
; REGISTERS:
;
; CALLS: VFEXC.

VFYDAT::TSTB VFYFLG ;IF DATA IS TO BE VERIFIED:
    BEQ 50251$
    MOV CMDWRD,PCMDWD ;SAVE THE PREVIOUS COMMAND WORD.
    MOV #RDR,CMDWRD ;COMMAND IS READ REV.
    MOV #4,CMDLG ;SET UP CMD LOGGING INDEX.
    JSR PC,VFEXC ;GO READ ALL THE RECORDS REV.
    MOV CMDWRD,PCMDWD ;SAVE THE PREVIOUS COMMAND WORD.
    MOV #RDF,CMDWRD ;COMMAND IS READ FWD.
    
```

```

2660 016114 012737 000006 003426      MOV      #6,CMDLG      ;SET UP CMD LOGGING INDEX.
2661 016122 004737 016130      JSR      PC,VFEXC     ;GO READ ALL RECORDS FWD.
2662
2663 016126      50251$:
2664 016126 000207      RTS      PC           ;RETURN.
2665
2666
2667
2668
2669      :      SUBROUTINE TO EXECUTE THE READ AND VERIFY, FORWARD OR REVERSE.
2670      :      INPUTS:
2671      :      OUTPUTS:
2672      :      REGISTERS:      R2
2673      :      CALLS:      CMDAC, FIRSTU, VFISU, NEXTU, CKHAE.
2674
2675 016130 013737 003420 002330  VFEXC:: MOV      CMDWRD,CMDPKT ;COMMAND PACKET = READ REV OR FWD.
2676 016136 042737 004000 002330      BIC      #BRF.C,CMDPKT
2677 016144 105737 003520      TSTB    SWBFLG      ;IF BYTES ARE TO BE SWAPPED:
2678 016150 001403      BEQ     50252$
2679 016152 052737 010000 002330      BIS      #SWB.C,CMDPKT ;SET SWAB BIT IN CMD PACKET.
2680
2681 016160      50252$:
2682 016160 013737 002330 003422      MOV      CMDPKT,CMSAV ;SAVE COMMAND PACKET 1ST WORD.
2683 016166 013737 003410 002332      MOV      DATARD,CMDPKT+CP.ADL ;SAVE BUFFER START ADDRESS.
2684 016174 005037 003412      CLR      NCNT        ;CLEAR NUMBER OF OPERATIONS.
2685
2686 016200      50253$: ;WHILE NCNT LT NCNT1 DO ;WHILE THERE ARE RECORDS REMAINING:
2687 016200 023737 003412 003414      CMP      NCNT,NCNT1
2688 016206 002062      BGE     50254$
2689 016210 004737 011064      JSR      PC,CMDAC    ;STORE CMD ASCII IN ERROR MSG.
2690 016214 004737 017060      JSR      PC,FIRSTU   ;SET UP FOR FIRST UNIT.
2691 016220      50255$: ;WHILE DEVTBL(R5) NE #END DO ;WHILE THERE ARE DEVICES REMAINING:
2692 016220 026527 002604 177777      CMP      DEVTBL(R5),#END
2693 016226 001442      BEQ     50256$
2694 016230 032737 000400 003420      BIT      #MOD.CO,CMDWRD ;IF CMD IS REVERSE THEN:
2695 016236 001421      BEQ     50257$
2696 016240 032765 000002 003502      BIT      #X0.BOT,EOTFLG(R5) ;IF NOT AT BOT
2697 016246 001014      BNE     50260$
2698 016250 032765 000001 003502      BIT      #X0.EOT,EOTFLG(R5) ;BUT IF AT EOT
2699 016256 001406      BEQ     50261$
2700 016260 105737 003524      TSTB    ALLEOT      ;AND ALL OTHERS AT EOT
2701 016264 001402      BEQ     50262$
2702 016266 004737 016356      JSR      PC,VFISU    ;THEN READ VERIFY
2703
2704 016272      50262$: ;IF NOT ALL AT EOT, FREEZE UNIT(S)
2705
2706 016272 000402      BR      50263$      ;IF NOT AT BOT AND
2707 016274      50261$:
2708 016274 004737 016356      JSR      PC,VFISU    ;NOT AT EOT, READ VFY
2709
2710 016300      50263$:
2711
2712 016300      50260$:
2713 016300 000412      BR      50264$      ;ELSE IF CMD IS NOT REVERSE:
2714 016302      50257$:
2715 016302 032765 000001 003502      BIT      #X0.EOT,EOTFLG(R5)
2716 016310 001404      BEQ     50265$
    
```

```

2717 016312 032737 000001 003420      BIT      #CMD.CO,CMDWRD
2718 016320 001002                          BNE      50266$
2719 016322                          50265$:
2720
2721 016322 004737 016356      JSR      PC,VFISU      ;IF NOT AT EOT OR NOT A MOTION CMD THEN:
2722
2723 016326                          50266$:
2724
2725 016326                          50264$:
2726 016326 004737 017126      JSR      PC,NEXTU      ;GO FIND THE NEXT UNIT.
2727
2728 016332 000732                          BR       50255$
2729 016334                          50256$:
2730 016334 004737 017456      JSR      PC,CKHAE      ;CHECK FOR HALT AFTER EACH CMD.
2731 016340 005237 003412      INC      NCNT          ;UPDATE THE RECORD COUNT.
2732 016344 013737 003420 003424      MOV      CMDWRD,PCMDWD ;SAVE PREVIOUS COMMAND WORD.
2733
2734 016352 000712                          BR       50253$
2735 016354                          50254$:
2736 016354 000207      RTS      PC            ;RETURN.
2737
2738      :      SUBROUTINE TO ISSUE COMMAND, AWAIT INTERRUPT,
2739      :      CHECK STATUS, CHECK DATA.
2740      :      INPUTS:
2741      :      OUTPUTS:
2742      :      REGISTERS:      R2
2743      :      CALLS:      EXCUTE, GOWAIT, CKDATA.
2744
2745 016356 013702 003410      VFISU:: MOV      DATARD,R2      ;INIT READ BUFFER POINTER.
2746 016362 062702 000010      ADD      #8.,R2
2747 016366                          50267$: ;WHILE R2 NE DATARD DO ;UNTIL 8 BYTES HAVE BEEN SET,
2748 016366 020237 003410      CMP      R2,DATARD
2749 016372 001403      BEQ      50270$
2750 016374 012742 177777      MOV      #-1,-(R2)      ;INIT READ BUFFER.
2751
2752 016400 000772                          BR       50267$
2753 016402                          50270$:
2754 016402 004737 012054      JSR      PC,EXCUTE      ;GO EXECUTE THE COMMAND.
2755 016406 105737 003522      TSTB     DROPED          ;IF UNIT HAS NOT BEEN DROPPED THEN:
2756 016412 001002      BNE      50271$
2757 016414 004737 012364      JSR      PC,GOWAIT      ;GO WAIT FOR DONE BIT.
2758
2759 016420                          50271$:
2760 016420 105737 003522      TSTB     DROPED          ;IF UNIT HAS NOT BEEN DROPPED THEN:
2761 016424 001006      BNE      50272$
2762 016426 032765 000002 003502      BIT      #X0.BOT,EOTFLG(R5) ;WHEN NOT REVERSED INTO BOT, THEN
2763 016434 001002      BNE      50273$
2764 016436 004737 016444      JSR      PC,CKDATA      ;GO VERIFY DATA.
2765
2766 016442                          50273$:
2767
2768 016442                          50272$:
2769 016442 000207      RTS      PC
2770
2771
2772      :      SUBROUTINE TO COMPARE DATA BETWEEN READ AND WRITE BUFFERS
2773      :      AND PRINT ERROR MESSAGE ON MISCOMPARE.
    
```



```

2774      :      INPUTS:
2775      :      OUTPUTS:
2776      :      REGISTERS:      R2, R3, R4.
2777      :      CALLS:      GCMDB
2778
2779 016444 013703 003416      CKDATA: :MOV      BRFCNT,R3      ;COMPUTE REC LENGTH READ
2780 016450 163703 002360      SUB      MSGPKT+MS.RFC,R3
2781 016454 005703      TST      R3      ;WHEN NO DATA RECEIVED
2782 016456 001015      BNE      50274$
2783 016460      ERRHRD 17,WTVERM,DTAERM      ;PRINT ERROR AND EXIT
      :      TRAP      C$ERHRD
      :      .WORD      17
      :      .WORD      WTVERM
      :      .WORD      DTAERM
2784 016470      PRINTB #DTAER4      ;COMPARE ROUTINE
      :      MOV      #DTAER4,-(SP)
      :      MOV      #1,-(SP)
      :      MOV      SP,R0
      :      TRAP      C$PNTB
      :      ADD      #4,SP
      :
      :      MOV      #DTAER4,-(SP)
      :      MOV      #1,-(SP)
      :      MOV      SP,R0
      :      TRAP      C$PNTB
      :      ADD      #4,SP
2785 016510 000560      BR      50275$
2786 016512      50274$:      CMP      R3,BRFCNT      ;WHEN REC READ IS LONGER
2787 016512 020337 003416      BLOS     50276$
2788 016516 101417      ERRHRD 17,WTVERM,DTAERM      ;THAN EXPECTED, PRINT
      :      TRAP      C$ERHRD
      :      .WORD      17
      :      .WORD      WTVERM
      :      .WORD      DTAERM
2789 016520      PRINTB #DTAER5,CMDPKT+CP.CNT      ;AN ERROR MESSAGE
      :      MOV      CMDPKT+CP.CNT,-(SP)
      :      MOV      #DTAER5,-(SP)
      :      MOV      #2,-(SP)
      :      MOV      SP,R0
      :      TRAP      C$PNTB
      :      ADD      #6,SP
2790 016530      BR      50277$
      :      ;AND EXIT ROUTINE
2791 016530 013746 002336      50276$:      MOV      R3,CKDCNT      ;SAVE VERIFICATION LENGTH - 1.
2792 016534 012746 005360      DEC      CKDCNT
2793 016540 012746 000002      CLR      CKDFF      ;CLEAR # OF BYTES IN ERROR COUNTER.
2794 016544 010600      CLR      R2      ;INIT BYTE COUNTER
2795 016546 104414      MOV      DATAW,R3      ;GET WRITE BUFFER ADDRESS.
2796 016550 062706 000006      MOV      DATARD,R4      ;GET READ BUFFER ADDRESS.
2797 016554 000536      TSTB    T1SWB      ;WHEN RUNNING TEST1-SUB 12.
2798 016556 005337 017054      BEQ     50300$
2799 016562 005337 017054      SWAB    (R3)      ;SWAP FIRST WORD OF WRT BFR
2800 016566 005037 017056      ;WHICH CONTAINS THE RECORD COUNT
2801 016572 005002      50300$:      ;REPEAT
2802 016574 013703 003406      50301$:      ;REPEAT UNTIL ALL DATA IS COMPARED:
2803 016574 013704 003410      CMP     R2,CKDCNT      ;IF THIS IS THE LAST BYTE THEN:
2804 016574 105737 003523      BNE     50302$
2805 016574 001401      TSTB    SWBFLG      ;IF BYTE SWAPPING IS ENABLED THEN:
2806 016574 000313      BEQ     50303$
2807 016574 000313      BIT     #BIT00,CKDCNT      ;IF RECORD LENGTH IS ODD THEN:
2808 016614
2809 016614 020237 017054
2810 016620 001011
2811 016622 105737 003520
2812 016626 001406
2813 016630 032737 000001 017054
    
```

```

2812 016636 001002          BNE      50304$
2813 016640 105723          TSTB   (R3)+
2814 016642 105724          TSTB   (R4)+
2815
2816 016644          50304$:
2817
2818 016644          50303$:
2819
2820 016644          50302$:
2821 016644 121314          CMPB   (R3),(R4)
2822 016646 001452          BEQ    3$
2823 016650 005737 017056          TST    CKDFF
2824 016654 001010          BNE    2$
2825 016656 005265 003346          INC    VFYCNT(R5)
2826 016662 005265 003356          INC    HRDCNT(R5)
2827 016666          ERRHRD 17,WTVERM,DTAERM
2828 016676 005237 017056          2$:    INC    CKDFF;LET CKDFF := CKDFF + #1
2829 016702 111437 003436          MOV    (R4),TIME1
2830 016706 042737 177400 003436          BIC    #177400,TIME1
2831 016714 111337 003440          MOV    (R3),TIME2
2832 016720 042737 177400 003440          BIC    #177400,TIME2
2833 016726 023727 017056 000013          CMP    CKDFF,#11.
2834 016734 002017          BGE    50305$
2835 016736          PRINTX #DTAER2,R2,<B,TIME1>,<B,TIME2>;PRINT ACTUAL & EXPECTED DATA
2836 016736 005046          CLR    -(SP)
2837 016740 153716 003440          BISB   TIME2,(SP)
2838 016744 005046          CLR    -(SP)
2839 016746 153716 003436          BISB   TIME1,(SP)
2840 016752 010246          MOV    R2,-(SP)
2841 016754 012746 005226          MOV    #DTAER2,-(SP)
2842 016760 012746 000004          MOV    #4,-(SP)
2843 016764 010600          MOV    SP,R0
2844 016766 104415          TRAP   C$PNTX
2845 016770 062706 000012          ADD    #12,SP
2846 016774          50305$:
2847 016774          3$:    TSTB   (R3)+
2848 016776 105724          TSTB   (R4)+
2849 017000 105722          TSTB   (R2)+
2850 017002 020237 017054          CMP    R2,CKDCNT
2851 017006 003702          BLE    50301$
2852 017010 005237 017054          INC    CKDCNT
2853 017014 005737 017056          TST    CKDFF
2854 017020 001414          BEQ    50306$
2855 017022          PRINTB #DTAER3,CKDFF,CKDCNT
2856 017022 013746 017054          ;PRINT # OF BYTES IN ERROR.
2857 017026 013746 017056          MOV    CKDCNT,-(SP)
2858 017032 012746 005275          MOV    CKDFF,-(SP)
2859 017036 012746 000003          MOV    #DTAER3,-(SP)
2860 017042 010600          MOV    #3,-(SP)
2861 017044 104414          MOV    SP,R0
2862 017046 062706 000010          TRAP   C$PNTB
2863          ADD    #10,SP
    
```

```

2848 017052          50306$:
2849
2850 017052          50277$:
2851
2852 017052          50275$:
2853 017052 000207      RTS      PC          ;OTHERWISE, RETURN.
2854
2855 017054 000000      CKDCNT: .WORD 0          ;# OF BYTES TO BE VERIFIED -1.
2856 017056 000000      CKDFF:  .WORD 0          ;# OF BYTES IN ERROR COUNTER.
2857
2858                :      SUBROUTINE TO FIND THE FIRST DEVICE IN THE TEST SEQUENCE.
2859                :      INPUTS:
2860                :      OUTPUTS:
2861                :      REGISTERS:
2862                :      CALLS:
2863
2864 017060 105037 003522  FIRSTU:: CLR B   DROPE          ;CLR UNIT DROPPED FLAG
2865 017064 005005          CLR      R5          ;CLR DEVICE POINTER.
2866 017066 026527 002604 177774 50307$: CMP      DEVTBL(R5),#NINUSE ;WHILE DEVICES ARE NOT IN USE:
2867 017074 001003          BNE      50310$
2868 017076 062705 000002          ADD      #2,R5          ;LET R5 := R5 + #2          ;POINT TO NEXT DEVICE.
2869 017102 000771          BR       50307$
2870 017104          50310$:
2871 017104 026527 002604 177777  CMP      DEVTBL(R5),#END    ;IF ALL UNITS HAVE BEEN DROPPED THEN:
2872 017112 001001          BNE      50311$
2873 017114          DOCLN          ;DO CLEAN CODE AND TERMINATE PASS.
2874 017114 104444          TRAP     CSDCLN
2875 017116          50311$:
2876 017116 016537 002604 002074  MOV      DEVTBL(R5),L$LUN  ;SET UNIT # IN 'HEADER' FOR ERROR REPORT
2877 017124 000207          RTS      PC          ;RETURN WITH 1ST DEVICE IN R5.
2878
2879
2880                :      SUBROUTINE TO FIND THE NEXT UNIT IN THE TEST CYCLE.
2881                :      INPUTS:
2882                :      OUTPUTS:
2883                :      REGISTERS:
2884                :      CALLS:
2885
2886 017126 105037 003522  NEXTU:: CLR B   DROPE          ;CLR UNIT DROPPED FLAG
2887                :REPEAT          ;REPEAT UNTIL THE NEXT DEVICE IS FOUND.
2888 017132          50312$:
2889 017132 062705 000002          ADD      #2,R5          ;UPDATE DEVICE TABLE POINTER.
2890 017136 026527 002604 177774  CMP      DEVTBL(R5),#NINUSE ;UNTIL DEVTBL(R5) NE #NINUSE
2891 017144 001772          BEQ      50312$
2892 017146 016537 002604 002074  MOV      DEVTBL(R5),L$LUN  ;SET UNIT # IN 'HEADER' FOR ERROR REPORT
2893 017154 000207          RTS      PC          ;RETURN.
2894
2895
2896                :      SUBROUTINE TO DROP A DEVICE FROM THE TEST SEQUENCE.
2897                :      INPUTS:
2898                :      OUTPUTS:
2899                :      REGISTERS:
2900                :      CALLS:          MOVMSG, PRXST, LOG
2901
2902 017156 005265 003366  DROPU:: INC      FTLCNT(R5) ;INCREMENT THE FATAL ERROR COUNT.
2903 017162 013704 002370  MOV      MSGPKT+MS.XS3,R4 ;GET UDIAG ERROR CODE FROM XSTAT3.
    
```



```

2904 017166 042704 000377      BIC      #377,R4
2905 017172 016503 002544      MOV      MSGPKA(R5),R3 ;ADR OF THIS UNIT'S MSG PACKET.
2906 017176 005002                    CLR      R2 ;LET R2 := #0 ;CLR COUNTER.
2907 017200                    50313$: ;WHILE R2 NE #MSGCNT DO ;WHILE THERE ARE MORE LOCATIONS:
2908 017200 020227 000020      CMP      R2,#MSGCNT
2909 017204 001405                    BEQ      50314$
2910 017206 012723 177777      MOV      #-1,(R3)+ ;INIT THE MSG PACKET WITH ALL 1'S
2911 017212 062702 000002      ADD      #2,R2 ;LET R2 := R2 + #2 ;UPDATE COUNTER.
2912
2913 017216 000770                    BR       50313$
2914 017220                    50314$:
2915 017220 012775 002340 002514  MOV      #GSCPK,@TSDB(R5) ;INITIATE A GET STATUS COMMAND.
2916 017226 004737 012700      JSR      PC,WSSR ;WAIT A WHILE FOR SSR=1
2917 017232 004737 012734      JSR      PC,MOVMSG ;MOVE MSG PACKET TO COMMON AREA.
2918 017236 020427 157400      CMP      R4,#X3.RNY ;IF WE HAVE A CAPSTAN RUNAWAY THEN:
2919 017242 001005                    BNE      50315$
2920 017244                    ERRDF    16,RNYM,STAERM ;REPORT CAPSTAN RUNAWAY WITH TACH CNT.
2921 017244 104455                    TRAP    CSERDF
2922 017246 000020                    .WORD  16
2923 017250 004753                    .WORD  RNYM
2924 017252 006120                    .WORD  STAERM
2925
2926 017254 000402                    BR       50316$
2927 017256 004737 017370      JSR      PC,PRXST ;PRINT EXTENDED STATUS REGISTERS.
2928
2929 017262                    50316$:
2930 017262 105737 003465      TSTB    RECLOG ;IF THE RECORD HAS BEEN LOGGED THEN:
2931 017266 001404                    BEQ      50317$
2932 017270 105237 003522      INCB    DROPED ;SET UNIT DROPPED FLAG.
2933 017274 004737 015544      JSR      PC,LOG ;LOG DATA BYTES + RD/WR ERRORS.
2934
2935 017300                    50317$:
2936 017300                    DORPT   ;PRINT PERFORMANCE REPORT
2937 017300 104424                    TRAP    C$DRPT
2938 017302 005765 003326      DROPUA: TST    PASCNT(R5) ;IF PASCNT(R5) NE #0 THEN
2939 017306 001402                    BEQ      50320$
2940 017310 005365 003326      DEC     PASCNT(R5) ;LET PASCNT(R5) := PASCNT(R5) - #1
2941
2942 017314                    50320$:
2943 017314 013737 003534 017366  MOV      TSNP,DROPN ;SAVE # OF UNIT TO BE DROPPED.
2944 017322 013700 003534      MOV      TSNP,R0 ;R0=LOGICAL DEVICE NUMBER
2945 017326 104451                    DODU    R0 ;DROP THE UNIT
2946
2947 017326                    TRAP    C$DODU
2948 017326                    ;EXEC BGNDDU-ENDDU CODE IF IDU = 0
2949
2950 017330 026527 002604 177774      CMP      DEVTBL(R5),#NINUSE ;IF UNIT NOT DROPPED
2951 017336 001410                    BEQ      50321$
2952 017340 105737 002213      TSTB    IREC ;IF RECOVERY IS ENABLED THEN:
2953 017344 001005                    BNE      50322$
2954 017346 000240                    NOP
2955 017350 000240                    NOP
2956 017352 000240                    NOP
2957 017354 105237 003526      INCB    STAFLG ;SET START FLAG TO ENABLE REWIND.
2958
2959 017360                    50322$:
2960

```

```

2955 017360
2956 017360 105237 003522
2957 017364 000207
2958
2959 017366 000000
2960
2961
2962
2963
2964
2965
2966
2967 017370
    017370 012746 005507
    017374 012746 000001
    017400 010600
    017402 104415
    017404 062706 000004
2968 017410
    017410 013746 002372
    017414 013746 002370
    017420 013746 002366
    017424 013746 002364
    017430 013746 002362
    017434 012746 006753
    017440 012746 000006
    017444 010600
    017446 104415
    017450 062706 000016
2969 017454 000207
2970
2971
2972
2973
2974
2975
2976
2977 017456 105737 002206
2978 017462 001430
2979 017464 105737 003531
2980 017470 001023
2981 017472
    017472 104450
2982 017474
    017474 103023
2983 017476 013704 003420
2984 017502 004737 011136
2985 017506 112337 004306
2986 017512 112337 004307
2987 017516 111337 004310
2988 017522
    017522 104443
    017524 000404
    017526 003436
    017530 000130
    017532 004306
    017534 000001

50321$:
DRORTN: INCB DROPE
        RTS PC ;SET UNIT DROPPED FLAG.
        ;RETURN.

DROPN: .WORD 0 ;# OF UNIT TO BE DROPPED

: SUBROUTINE TO PRINT EXTENDED STATUS REGISTERS.
: INPUTS:
: OUTPUTS:
: REGISTERS:
: CALLS:

PRXST:: PRINTX #GETSTM

MOV #GETSTM,-(SP)
MOV #1,-(SP)
MOV SP,R0
TRAP C$PNTX
ADD #4,SP
PRINTX #STAERS,MSGPKT+MS.XS0,MSGPKT+MS.XS1,MSGPKT+MS.XS2,MSGPKT+MS.XS3,MSGPKT+MS.XS
MOV MSGPKT+MS.XS4,-(SP)
MOV MSGPKT+MS.XS3,-(SP)
MOV MSGPKT+MS.XS2,-(SP)
MOV MSGPKT+MS.XS1,-(SP)
MOV MSGPKT+MS.XS0,-(SP)
MOV #STAERS,-(SP)
MOV #6,-(SP)
MOV SP,R0
TRAP C$PNTX
ADD #16,SP

RTS PC

: SUBROUTINE TO HALT AFTER EACH COMMAND.
: INPUTS:
: OUTPUTS:
: REGISTERS: R3, R4
: CALLS:

CKHAE:: TSTB HAE;IFB HAE NE #0 THEN ;IF HALT FLAG IS SET:
        BEQ 50323$
        TSTB MISCFG ;IFB MISCFG EQ #0 THEN ;
        BNE 50324$
        MANUAL ;IS MANUAL INTERVENTION ALLOWED?
        BNCOMPLETE CKHRTN ;BR IF NOT.
        TRAP C$MANI
        BCC CKHRTN
        ;COMMAND WORD.
MOV CMDWRD,R4 ;LET R4 := CMDWRD
JSR PC,GCMDA ;FETCH ADR OF CMD ASCII.
MOVB (R3)+,HALTM ;MOVE CMD ASCII
MOVB (R3)+,HALTM+1 ;LET HALTM+1 :B= (R3)+
MOVB (R3),HALTM+2 ;INTO MESSAGE.
GMANIL HALTM,TIME1,1,YES ;HALT - WAIT FOR AN OEPRTOR INPUT.
TRAP C$GMAN
BR 10000$
.WORD TIME1
.WORD T$CODE
.WORD HALTM
.WORD 1
    
```

```

2989 017536      10000$:
2990 017536      10000$:
2991 017536 000402
2992 017540
2993 017540 105037 003531
2994
2995 017544      50324$: BR      50325$
2996
2997 017544      50324$: CLRB   MISCFG   ;LET MISCFG :B= #0
2998 017544 000207      50323$: CKHRTN: RTS    PC      ;RETURN
2999                      .EVEN
3000
3001 017546      ENDMGD
3002
3003
3004
3005      .TITLE MISCELLANEOUS SECTIONS
3006      .SBTTL REPORT CODING SECTION
3007
3008
3009      :++
3010      : THE REPORT CODING SECTION CONTAINS THE
3011      : 'PRINTS' CALLS THAT GENERATE STATISTICAL REPORTS.
3012      :--
3013 017546      BGNRPT
3014 017546      LSRPT::
3015 017546 010537 003452      MOV    R5,R5SAVE      ;SAVE CURRENT DEVICE POINTER.
3016 017552 004737 017060      JSR    PC,FIRSTU      ;FIND THE FIRST UNIT.
3017 017556 026527 002604 177777 50326$: :WHILE DEVTBL(R5) NE #END DO ;WHILE THERE ARE MORE DEVICES:
3018 017564 001562      CMP    DEVTBL(R5),#END
3019 017566      BEQ    50327$
3019 017566      PRINTS      #RPT1A,DEVTBL(R5),PASCNT(R5),RECCNT(R5)
3019 017566 016546 003376      MOV    RECCNT(R5),-(SP)
3019 017572 016546 003326      MOV    PASCNT(R5),-(SP)
3019 017576 016546 002604      MOV    DEVTBL(R5),-(SP)
3019 017602 012746 020410      MOV    #RPT1A, -(SP)
3019 017606 012746 000004      MOV    #4, -(SP)
3019 017612 010600      MOV    SP,R0
3019 017614 104416      TRAP  C$PNTS
3019 017616 062706 000012      ADD    #12, SP
3020 017622      PRINTS      #RPT1B,WRBC+30(R5),WRBC+20(R5),WRBC+10(R5),WRBC(R5)
3020 017622 016546 002626      MOV    WRBC(R5),-(SP)
3020 017626 016546 002636      MOV    WRBC+10(R5),-(SP)
3020 017632 016546 002646      MOV    WRBC+20(R5),-(SP)
3020 017636 016546 002656      MOV    WRBC+30(R5),-(SP)
3020 017642 012746 020465      MOV    #RPT1B, -(SP)
3020 017646 012746 000005      MOV    #5, -(SP)
3020 017652 010600      MOV    SP,R0
3020 017654 104416      TRAP  C$PNTS
3021 017656 062706 000014      ADD    #14, SP
3021 017662      PRINTS      #RPT1C,RRBC+30(R5),RRBC+20(R5),RRBC+10(R5),RRBC(R5)
3021 017662 016546 002666      MOV    RRBC(R5),-(SP)
3021 017666 016546 002676      MOV    RRBC+10(R5),-(SP)
3021 017672 016546 002706      MOV    RRBC+20(R5),-(SP)
3021 017676 016546 002716      MOV    RRBC+30(R5),-(SP)
3021 017702 012746 020536      MOV    #RPT1C, -(SP)
    
```


017706	012746	000005				MOV	#5,-(SP)
017712	010600					MOV	SP,R0
017714	104416					TRAP	C\$PNTS
3022 017716	062706	000014				ADD	#14,SP
017722			PRINTS	#RPT1D,RFBC+30(R5),RFBC+20(R5),RFBC+10(R5),RFBC(R5)			
017722	016546	002726				MOV	RFBC(R5),-(SP)
017726	016546	002736				MOV	RFBC+10(R5),-(SP)
017732	016546	002746				MOV	RFBC+20(R5),-(SP)
017736	016546	002756				MOV	RFBC+30(R5),-(SP)
017742	012746	020607				MOV	#RPT1D,-(SP)
017746	012746	000005				MOV	#5,-(SP)
017752	010600					MOV	SP,R0
017754	104416					TRAP	C\$PNTS
3023 017756	062706	000014				ADD	#14,SP
017762			PRINTS	#RPT1F,WRREC(R5),RRREC(R5),RFREC(R5)			
017762	016546	003026				MOV	RFREC(R5),-(SP)
017766	016546	003006				MOV	RRREC(R5),-(SP)
017772	016546	002766				MOV	WRREC(R5),-(SP)
017776	012746	020713				MOV	#RPT1F,-(SP)
020002	012746	000004				MOV	#4,-(SP)
020006	010600					MOV	SP,R0
020010	104416					TRAP	C\$PNTS
3024 020012	062706	000012				ADD	#12,SP
020016			PRINTS	#RPT1G,WRUNR(R5),RRUNR(R5),RFUNR(R5)			
020016	016546	003036				MOV	RFUNR(R5),-(SP)
020022	016546	003016				MOV	RRUNR(R5),-(SP)
020026	016546	002776				MOV	WRUNR(R5),-(SP)
020032	012746	020764				MOV	#RPT1G,-(SP)
020036	012746	000004				MOV	#4,-(SP)
020042	010600					MOV	SP,R0
020044	104416					TRAP	C\$PNTS
020046	062706	000012				ADD	#12,SP
3025 020052	105737	002210	TSTB	BADTSW ;IFB BADTSW NE #0 THEN			
3026 020056	001402		BEQ	50330\$			
3027 020060	004737	020142	JSR	PC,BTRPT ;GO PRINT BAD TAPE SPOTS WHEN ENABLED			
3028							
3029 020064			50330\$:				
3030 020064			PRINTS	#RPT1I,SCCNT(R5),HRDCNT(R5),FTLCNT(R5),VFYCNT(R5)			
020064	016546	003346				MOV	VFYCNT(R5),-(SP)
020070	016546	003366				MOV	FTLCNT(R5),-(SP)
020074	016546	003356				MOV	HRDCNT(R5),-(SP)
020100	016546	003336				MOV	SCCNT(R5),-(SP)
020104	012746	021161				MOV	#RPT1I,-(SP)
020110	012746	000005				MOV	#5,-(SP)
020114	010600					MOV	SP,R0
020116	104416					TRAP	C\$PNTS
020120	062706	000014				ADD	#14,SP
3031 020124	004737	017126	JSR	PC,NEXTU ;FIND THE NEXT UNIT.			
3032							
3033 020130		000612	BR	50326\$			
3034 020132			50327\$:				
3035 020132	013705	003452	MOV	R\$SAVE,R\$;RESTORE CURRENT DEVICE POINTER.			
3036 020136			EXIT	RPT			
020136	000167					.WORD	J\$JMP
020140	001130					.WORD	L10010-2-
3037							
3038			:	SUBR TO PRINT BAD TAPES SPOTS DURING THE REPORT PRINTS			

```

3039      :      WRITE RETRIES: CUMULATIVE COUNT
3040      :      BAD TAPE SPOTS: COUNT PER TAPE PASS ONLY, NOT CUMULATIVE.
3041      :      COUNT OF RECOVERABLE WRITE ERRORS EXCLUDES BAD TAPE SPOTS.
3042
3043      BTRPT:: PRINTS  #RPT1E,WRTYCT(R5)      ;PRINT GLOBAL WRITE RETRY COUNT
          020142 016546 003316
          020142 012746 021035      MOV      WRTYCT(R5),-(SP)
          020146 012746 021035      MOV      #RPT1E,-(SP)
          020152 012746 000002      MOV      #2,-(SP)
          020156 010600
          020160 104416      MOV      SP,R0
          020162 062706 000006      TRAP    C$PNTS
          020166 016537 002616 003512      ADD     #6,SP
3044      MOV      BTADDR(R5),BTPT      ;BTPT IS BOTH THE BAD TAPE SPOT COUNTER
3045      MOV      @BTPT,R3      ;AND THE LOGGING INDEX
3046      ASR      R3
3047      PRINTS  #RPT1J,R3      ;PRINT # OF BAD TAPE SPOTS
          020202 010346
          020202 012746 021065      MOV      R3,-(SP)
          020204 012746 021065      MOV      #RPT1J,-(SP)
          020210 012746 000002      MOV      #2,-(SP)
          020214 010600
          020216 104416      MOV      SP,R0
          020220 062706 000006      TRAP    C$PNTS
          020224 005703
          020224 001457      TST     R3      ;PRINT RECORD # IF BAD SPOTS DETECTED
          020226 001457      BEQ     50331$
          020230 020327 000024      CMP     R3,#20. ;IF R3 HI #20. THEN
          020234 101402
          020234 101402      BLOS   50332$
          020236 012703 000024      MOV     #20.,R3 ;20 BAD SPOTS IS THE LIMIT
3053
3054      50332$:
3055      PRINTS  #CRLFSP
          020242 012746 005744
          020242 012746 000001      MOV     #CRLFSP,-(SP)
          020246 012746 000001      MOV     #1,-(SP)
          020252 010600
          020254 104416      MOV     SP,R0
          020256 062706 000004      TRAP   C$PNTS
          020262 013704 003512      ADD     #4,SP
3056      MOV     BTPT,R4      ;LET R4 := BTPT + #2 ;FETCH A BAD SPOT ID
3057      ADD     #2,R4
3058      CLR     R2      ;R2 = PRINT COUNT PER LINE: 10 MAX
3059      50333$: ;REPEAT
3060      PRINTS  #RPT1K,(R4) ;PRINT A BAD SPOT ID
          020274 011446
          020274 012746 021152      MOV     (R4),-(SP)
          020276 012746 021152      MOV     #RPT1K,-(SP)
          020302 012746 000002      MOV     #2,-(SP)
          020306 010600
          020310 104416      MOV     SP,R0
          020312 062706 000006      TRAP   C$PNTS
          020316 005202
          020316 062704 000002      INC     R2      ;LET R2 := R2 + #1 ;COUNT PRINTS
          020320 062704 000002      ADD     #2,R4   ;LET R4 := R4 + #2 ;NEXT
          020324 020227 000012      CMP     R2,#10. ;IF R2 EQ #10. THEN
          020330 001014
          020332 001014      BNE    50334$
          020332 012746 005744      PRINTS #CRLFSP ;GO TO NEXT PRINT LINE PAST 10 PRINTS
          020332 012746 005744      MOV     #CRLFSP,-(SP)
          020336 012746 000001      MOV     #1,-(SP)
          020342 010600
          020344 104416      MOV     SP,R0
          020346 062706 000004      TRAP   C$PNTS
          020352 162703 000012      ADD     #4,SP
3066      SUB     #10.,R3      ;LET R3 := R3 - #10. ;ADJUST BAD SPOT COUNT
3067      SUB     #10.,R2      ;LET R2 := R2 - #10. ;ADJUST PRINT COUNT

```



```

3068
3069 020362          50334$:
3070 020362 020203  CMP      R2,R3      ;UNTIL R2 EQ R3      ;LIMIT: # OF BAD SPOTS
3071 020364 001343  BNE      50333$
3072
3073 020366          50331$:
3074 020366          PRINTS #CRLF
      020366 012746 005741
      020372 012746 000001
      020376 010600
      020400 104416
      020402 062706 000004
3075 020406 000207          RTS PC
3076
3077          .NLIST BEX
3078 020410 045 116 045 RPT1A: .ASCIZ /%N%N%AUNIT %D1%S3%APASS:%D5%S3%ARECORD:%D5%N/
3079 020465 045 101 102 RPT1B: .ASCIZ /%ABYTES WRITTEN %D3%A,%Z3%A,%Z3%A,%Z3%N/
3080 020536 045 101 102 RPT1C: .ASCIZ /%ABYTES READ REV %D3%A,%Z3%A,%Z3%A,%Z3%N/
3081 020607 045 101 102 RPT1D: .ASCIZ /%ABYTES READ FWD %D3%A,%Z3%A,%Z3%A,%Z3%N/
3082 020657 045 123 062 .ASCIZ /%S23%AWRT%S4%ARDR%S4%ARDF%N/
3083 020713 045 101 122 RPT1F: .ASCIZ /%ARECOVERABLE ERRORS %D5%S2%D5%S2%D5%N/
3084 020764 045 101 125 RPT1G: .ASCIZ /%AUNRECOVERABLE ERRORS %D5%S2%D5%S2%D5%N/
3085 021035 045 101 127 RPT1E: .ASCIZ /%AWRITE RETRIES%S8%D5%N/
3086 021065 045 116 045 RPT1J: .ASCIZ /%N%D2%A BAD SPOTS THIS TAPE PASS PRECEDING RECORD #:/
3087 021152 045 104 065 RPT1K: .ASCIZ /%D5%S1/
3088 021161 045 101 123 RPT1I: .ASCIZ /%ASPEC COND%S3%AHARD%S3%AFATAL%S3%ACOMPARE%N"
3089 021235 045 123 063 .ASCIZ /%S3%D5%S3%D5%S3%D5%S3%D5%N%N/
3090          .LIST BEX
3091          .EVEN
3092
3093 021272          ENDRPT
      021272
      021272 104425          L10010:
3094
3095          TRAP CSRPT
3096          .SBTTL LOAD DEVICE PROTECTION TABLE
3097
3098          :++
3099          :TABLE FOR SUPERVISOR TO IDENTIFY THE P-TBL FOR THE LOAD DEV
3100          :THE SUPERVISOR USES THE TBL TO WARN THE OPERATOR WHEN HE TRIES TO TEST THE LOAD DEV
3101          :--
3102 021274          BGNPROT
      021274          L$PROT::
3103
3104 021274 000000          .WORD 0          ;P-TBL OFFSET OF TSDB
3105 021276 177777          .WORD -1          ;P-TBL OFFSET OF MASS BUS UNIT #: -1 = NOT A MASS BUS DE
3106 021300 177777          .WORD -1          ;P-TBL OFFSET OF DRIVE #: -1 = NONE, THREE DRIVES PER CONTRO
3107 021302          ENDPROT
3108
3109          .SBTTL INITIALIZE SECTION
3110
3111          :++
3112          : THE INITIALIZE SECTION CONTAINS THE CODING THAT IS PERFORMED
3113          : AT THE BEGINNING OF EACH PASS.
3114          :--
3115
3116 021302          BGNINIT

```



```

021302          LS$INIT::
3117          021302 032727 000003 002330 INIT10: BIT    #BIT0!BIT1,#CMDPKT ;IF CMD PACKET IS NOT ON MODULO 4 BOUNDRY:
3118          021310 001421          BEQ    50335$
3119          021312          ERRSF 1,CMDPKM          ;PRINT ERROR MSG,
3120          021312 104454          TRAP   CSERSF
          021314 000001          .WORD 1
          021316 004346          .WORD CMDPKM
          021320 000000          .WORD 0
3121          021322          DELAY 200.          ;GO TO SUPERVISOR, WAIT 2 SECONDS.
          021322 012727 000310          MOV   #200.,(PC)+
          021326 000000          .WORD 0
          021330 013727 002116          MOV   LSDLY,(PC)+
          021334 000000          .WORD 0
          021336 005367 177772          DEC   -6(PC)
          021342 001375          BNE   -4
          021344 005367 177756          DEC   -22(PC)
          021350 001367          BNE   -20
          021352 000753          BR    INIT10          ;
3122
3123
3124          021354          50335$:
3125
3126          021354 105737 002204          TSTB  CLRFLG          ;IF CLR COUNTERS FLAG SET:
3127          021360 001413          BEQ   50336$
          021362 105037 002204          CLRB  CLRFLG          ;INIT CLR FLAG.
3128          021366 005002          CLR   R2          ;LET R2 := #0
3129          021370          50337$: ;WHILE R2 NE #CNTLEN DO
          021370 020227 000550          CMP   R2,#CNTLEN
          021374 001405          BEQ   50340$
          021376 005062 002626          CLR   WRBC(R2)          ;CLR ALL STATISTICAL COUNTERS.
          021402 062702 000002          ADD   #2,R2          ;LET R2 := R2 + #2
3130
3131
3132
3133
3134
3135
3136          021406 000770          BR    50337$
3137          021410          50340$:
3138
3139          021410          50336$:
3140
3141          021410 105737 002205          TSTB  RRANV          ;IF RESET RANDOM VARIABLE FLAG IS SET THEN:
3142          021414 001406          BEQ   50341$
          021416 012737 153624 003432          MOV   #RANBC,RANB          ;RESET RANDOM BASE #.
3143
3144          021424 012737 032561 003434          MOV   #RANSC,RANS          ;RESET RANDOM SAVE LOCATION.
3145
3146          021432          50341$:
3147          021432          READEF #EF.START          ;READ START COMMAND EVENT FLAG.
          021432 012700 000040          MOV   #EF.START,RO
          021436 104447          TRAP CSREFG
3148
3149          021440          BNCOMPLETE          INIT15          ;BRANCH IF NOT STARTING.
          021440 103057          BCC   INIT15
3150          021442 105237 003526          INCB  STAF LG          ;SET START COMMAND FLAG.
3151          021446 012705 000006          MOV   #6,R5          ;LET R5 := #6
3152          021452          50342$: ;REPEAT
          021452 012765 177774 002604          MOV   #NINUSE,DEVTBL(R5) ;INITIATE UNIT NUMBER TABLE
          021460 162705 000002          SUB   #2,R5          ;BY STORING NOT IN USE IN EACH LOCATION.
          021464 005705          ;LET R5 := R5 - #2
          021466 001371          TST   R5          ;UNTIL R5 EQ #0
          021470 022737 000001 002012          BNE   50342$
          CMP   #1,LS$UNIT          ;ONLY ONE UNIT ALLOWED

```

```

3158 021476 001425          BEQ      5034$          :OK
3159 021500          PRINTF  #AUDRUN        :TELL THE MAN
      021500 012746 005146          MOV      #AUDRUN,-(SP)
      021504 012746 000001          MOV      #1,-(SP)
      021510 010600          MOV      SP,R0
      021512 104417          TRAP    C$PNTF
      021514 062706 000004          ADD      #4,SP
3160 021520          DELAY   25          :WAIT
      021520 012727 000025          MOV      #25,(PC)+
      021524 000000          .WORD   0
      021526 013727 002116          MOV      L$DLY,(PC)+
      021532 000000          .WORD   0
      021534 005367 177772          DEC      -6(PC)
      021540 001375          BNE     -.4
      021542 005367 177756          DEC      -22(PC)
      021546 001367          BNE     .-20
3161 021550          DOCLN          :ABORT
      021550 104444          TRAP    C$DCLN
3162 021552 013705 002012 5034$: MOV      L$UNIT,R5      ;LET R5 := L$UNIT SHIFT 1
3163 021556 006305          ASL     R5
3164 021560          50343$: :REPEAT          :STORE ALL UNIT
3165 021560 162705 000002          SUB     #2,R5      ;LET R5 := R5 - #2
3166 021564 010565 002604          MOV     R5,DEVTBL(R5) ;LET DEVTBL(R5) := R5 SHIFT -1
3167 021570 006265 002604          ASR     DEVTBL(R5)
3168 021574 005705          TST    R5          :UNTIL R5 EQ #0
3169 021576 001370          BNE     50343$
3170
3171 021600          INIT15: READEF #EF.PWR      ;HAS THERE BE A POWER FAILURE?
      021600 012700 000034          MOV     #EF.PWR,R0
      021604 104447          TRAP    C$REFG
3172 021606          BNCOMPLETE INIT16        ;BRANCH IF NOT.
      021606 103004          BCC     INIT16
3173 021610 105237 003526          INCB   STAF LG      ;IF SO - SET THE STAF FLAG.
3174 021614 105237 003527          INCB   PWRFLG      ;IF SO - SET THE POWER FAIL FLAG.
3175
3176 021620          INIT16: RFLAGS OPFLAG    ;READ AND STORE FLAGS SET BY OPERATOR
      021620 104421          TRAP    C$RFLA
      021622 010037 003536          MOV     R0,OPFLAG
3177 021626 005003          CLR    R3          ;LET R3 := #0
3178 021630 105737 003527          TSTB   PWRFLG      ;IF POWER FAIL HAS NOT OCCURRED THEN:
3179 021634 001020          BNE     50344$
3180 021636          READEF #EF.NEW          ;UPDATE PASS COUNT WHEN
      021636 012700 000035          MOV     #EF.NEW,R0
      021642 104447          TRAP    C$REFG
3181 021644 103014          BCC    50345$      ;SUPERVISOR IS IN NEW PASS
3182 021646 105737 003526          TSTB   STAF LG      ;AND DIAG WAS NEITHER STARTED
3183 021652 001010          BNE    50346$
3184 021654          READEF #EF.RES          ;NOR
      021654 012700 000037          MOV     #EF.RES,R0
      021660 104447          TRAP    C$REFG
3185 021662 103402          BCS    50347$      ;IFCOND CC THEN ;RESTARTED
3186 021664 005103          COM   R3          ;LET R3 := COMP R3 ;DO IT
3187
3188 021666 C00401          50347$: BR      50350$
3189 021670
3190 021670 005203          INC   R3          ;SET 1ST PASS IF NEW PASS AND
3191
          ;RESTARTING

```

MISCELLANEOUS SECTIONS
INITIALIZE SECTION

MACRO M1113 25-MAY-82 09:51 PAGE 20-62

E 9

SEQ 0108

```

3192 021672          50350$:
3193
3194 021672 000401
3195 021674          50346$: BR      50351$
3196 021674 005203          INC      R3
3197
3198 021676          50351$:
3199
3200 021676          50345$:
3201
3202 021676          50344$:
3203 021676 004737 017060
3204 021702 005002
3205 021704          50352$: JSR      PC,FIRSTU      ;INIT DEVICE POINTER.
3206 021704 026527 002604 177777 ;WHILE DEVTBL(R5) NE #END DO ;INIT DEVICE COUNTER.
3207 021712 001456          CMP      DEVTBL(R5),#END
3208 021714 005202          BEQ      50353$
3209 021716 010500          INC      R2      ;LET R2 := R2 + #1
3210 021720 006200          MOV      R5,R0   ;LET R0 := R5 SHIFT -1
3211 021722          ASR      R0
3212 021722 104442          GPHARD  R0,R0   ;GET HARDWARE P TABLE FROM SUPER.
3213 021724 103044          BCC      50354$   ;IFCOND CS THEN TRAP C$GPHRD
3214 021732 012065 002514          MOV      (R0),TSDB(R5) ;SAVE TSDB ADDRESS.
3215 021736 062765 000002 002524          MOV      (R0)+,TSSR(R5) ;SAVE TSSR ADDRESS.
3216 021744 012065 002534          ADD      #2,TSSR(R5)
3217 021750 011065 003532          MOV      (R0)+,TSVCT(R5) ;SAVE INTERRUPT VECTOR ADDRESS.
3218 021754 011037 003534          MOV      (R0),TSUNT(R5) ;SAVE NUMBER OF DRIVE
3219 021760          MOV      (R0),TSNP   ;SAVE FOR PRINT OUT'S
3220 021760 012746 000340          SETVEC  TSVCT(R5),TS5INT(R5),#INTPRI
3221 021764 016546 002554          MOV      #INTPRI,-(SP)
3222 021770 016546 002534          MOV      TS5INT(R5),-(SP)
3223 021774 012746 000003          MOV      TSVCT(R5),-(SP)
3224 022000 104437          MOV      #3,-(SP)
3225 022002 062706 000010          TRAP    C$SVEC
3226 022006 005065 003472          ADD      #10,SP
3227 022012 005703          ;SET UP INTERUPT PROCESSING CONDITIONS.
3228 022014 001410          CLR      INTFLG(R5) ;CLEAR INTERRUPT FLAGS.
3229 022016 005703          TST      R3        ;ACTUAL PASSCOUNT UPDATE PER R3
3230 022020 002003          BEQ      50355$
3231 022022 005265 003326          TST      R3
3232 022026 000403          BGE      50356$   ;IF R3 LT #0 THEN
3233 022030          INC      PASCNT(R5) ;LET PASCNT(R5) := PASCNT(R5) + #1
3234 022036          BR      50357$
3235 022036          50356$:
3236 022036          50357$:
3237 022036 005065 003376          MOV      #1,PASCNT(R5) ;LET PASCNT(R5) := #1
3238 022042 004737 017126          50355$:
3239
3240 022046 000716          50354$:
3241 022050          50353$: CLR      RECCNT(R5) ;CLEAR RECORD COUNT
          JSR      PC,NEXTU ;DO IT FOR ALL DEVICES.
          BR      50352$

```


022260	012727	000025							
022264	000000							MOV	#25,(PC)+
022266	013727	002116						.WORD	0
022272	000000							MOV	LSDLY,(PC)+
022274	005367	177772						.WORD	0
022300	001375							DEC	-6(PC)
022302	005367	177756						BNE	-.4
022306	001367							DEC	-22(PC)
3276	022310			CLRVEC	#4			BNE	.-20
	022310	012700	000004						
	022314	104436						MOV	#4,R0
3277	022316	105737	003530	TSTB	TRAPD4			TRAP	C\$CVEC
3278	022322	001423		BEQ	2\$				
3279	022324	005265	003366	INC	FTLCNT(R5)				
3280	022330			PRINTF	#NODEV,TSSR(R5)				
	022330	016546	002524						
	022334	012746	005543					MOV	TSSR(R5),-(SP)
	022340	012746	000002					MOV	#NODEV,-(SP)
	022344	010600						MOV	#2,-(SP)
	022346	104417						MOV	SP,R0
	022350	062706	000006					TRAP	C\$PNTF
3281	022354	016537	002604	017366	MOV	DEVTBL(R5),DROPN		ADD	#6,SP
3282	022362	010500			MOV	R5,R0			
3283	022364	006200			ASR	R0			
3284	022366				DODU	R0			
	022366	104451							
3285									
3286	022370			DOCLN				TRAP	C\$DODU
	022370	104444							
3287									
3288	022372	105037	003530	2\$:	CLRB	TRAPD4			
3289	022376				SETVEC	#4,#TRAP4,#INTPRI			
	022376	012746	000340						
	022402	012746	023706						
	022406	012746	000004					MOV	#INTPRI,-(SP)
	022412	012746	000003					MOV	#TRAP4,-(SP)
	022416	104437						MOV	#4,-(SP)
	022420	062706	000010					MOV	#3,-(SP)
3290	022424	005775	002524					TRAP	C\$SVEC
3291	022430			TST	@TSSR(R5)			ADD	#10,SP
	022430	012727	000025	DELAY	25				
	022434	000000							
	022436	013727	002116					MOV	#25,(PC)+
	022442	000000						.WORD	0
	022444	005367	177772					MOV	LSDLY,(PC)+
	022450	001375						.WORD	0
	022452	005367	177756					DEC	-6(PC)
	022456	001367						BNE	-.4
3292	022460			CLRVEC	#4			DEC	-22(PC)
	022460	012700	000004					BNE	.-20
	022464	104436							
3293	022466	105737	003530	TSTB	TRAPD4			MOV	#4,R0
3294	022472	001424		BEQ	3\$			TRAP	C\$CVEC
3295	022474	005265	003366	INC	FTLCNT(R5)				
3296	022500			PRINTF	#NODEV,TSSR(R5)				
	022500	016546	002524						
	022504	012746	005543					MOV	TSSR(R5),-(SP)
								MOV	#NODEV,-(SP)

MISCELLANEOUS SECTIONS
INITIALIZE SECTION

MACRO M1113 25-MAY-82 09:51 PAGE 20-65

H 9

SEQ 0111

```

022510 012746 000002
022514 010600
022516 104417
022520 062706 000006
3297 022524 016537 002604 017366      MOV      DEVTBL(R5),DROPN      ;SAVE # OF UNIT TO BE DROPPED.
3298 022532 010500      MOV      R5,R0                ;R0=LOGICAL DEVICE NUMBER
3299 022534 006200      ASR      R0
3300 022536      DODU      R0                  ;DROP THE UNIT
022536 104451
3301
3302 022540      DOCLN
022540 104444      ; EXEC BGNDU-ENDDU CODE IF IDU = 0
;DO CLEAN &ABORT
3303
3304 022542 003127      4$:      BGT      50367$
3305
3306 022544 004737 007766      3$:      JSR      PC,SETDEF      ;SET UNIT NUMBER
3307 022550 010475 002514      MOV      R4,@TSDB(R5)
3308 022554      DELAY      25
022554 012727 000025      MOV      #25,(PC)+
022560 000000      .WORD      0
022562 013727 002116      MOV      LSDLY,(PC)+
022566 000000      .WORD      0
022570 005367 177772      DEC      -6(PC)
022574 001375      BNE      -4
022576 005367 177756      DEC      -22(PC)
022602 001367      BNE      -20
3309 022604 012775 002340 002514      MOV      #GSCP, @TSDB(R5)      ;AND GET UNITS STATUS
3310 022612      DELAY      25                ;WAIT
022612 012727 000025      MOV      #25,(PC)+
022616 000000      .WORD      0
022620 013727 002116      MOV      LSDLY,(PC)+
022624 000000      .WORD      0
022626 005367 177772      DEC      -6(PC)
022632 001375      BNE      -4
022634 005367 177756      DEC      -22(PC)
022640 001367      BNE      -20
3311 022642 032775 000200 002524      BIT      #TS.SSR,@TSSR(R5)      ;IF #TS.SSR SETIN @TSSR(R5) THEN
3312 022650 001420      BEQ      50370$
3313 022652 032775 000100 002524      BIT      #TS.OFL,@TSSR(R5)      ;IF #TS.OFL NOTSETIN @TSSR(R5) THEN
3314 022660 001001      BNE      50371$
3315 022662 000457      BR       50364$                ;EXIT COUNTER WHEN UNIT ON LINE
3316
3317 022664      50371$:
3318 022664      PRINTF #OFLINM,TSNP          ;PRINT UNIT OFF LINE EVERY 10 SEC
022664 013746 003534      MOV      TSNP,-(SP)
022670 012746 005456      MOV      #OFLINM,-(SP)
022674 012746 000002      MOV      #2,-(SP)
022700 010600      MOV      SP,R0
022702 104417      TRAP     C$PNTF
022704 062706 000006      ADD      #6,SP
3319
3320 022710      50372$:
3321
3322 022710 000412      BR       50373$
3323 022712      50370$:
3324 022712      PRINTF #NRDYM,DEVTBL(R5)
022712 016546 002604      MOV      DEVTBL(R5),-(SP)

```


MISCELLANEOUS SECTIONS
INITIALIZE SECTION

MACRO M1113 25-MAY-82 09:51 PAGE 20-66

I 9

SEQ 0112

```

022716 012746 023656
022722 012746 000002
022726 010600
022730 104417
022732 062706 000006
3325
3326 022736
3327 022736 012737 000001 003440 50373$: MOV #1,TIME2 ;INCR TIME2 FROM #1 TO #13 BY #1
3328 022744 000402 BR 50374$
3329 022746
3330 022746 005237 003440 50375$: INC TIME2
3331 022752
3332 022752 023727 003440 000013 50374$: CMP TIME2,#13
3333 022760 003016 BGT 50376$
3334 022762 DELAY 100. ;WAIT FOR UNIT TO BE SET ON-LINE
022762 012727 000144 MOV #100.,(PC)+
022766 000000 .WORD 0
022770 013727 002116 MOV LSDLY,(PC)+
022774 000000 .WORD 0
022776 005367 177772 DEC -6(PC)
023002 001375 BNE -4
023004 005367 177756 DEC -22(PC)
023010 001367 BNE -20
3335 023012 BREAK ;ALLOW TERMINAL INTERRUPT
023012 104422 TRAP CSBRK
3336 023014 000754
3337 023016
3338 023016 000137 022236 50376$: BR 50375$
3339 023022 50367$: JMP 50366$
3340 023022 50364$:
3341 023022 CLRVEC #4 ;CLEAR VECTOR AT 4
023022 012700 000004 MOV #4,R0
023026 104436 TRAP CSCVEC
3342 023030 023727 003436 000025 CMP TIME1,#25 ;IF OFF LINE FOR 3.5 MINUTES
3343 023036 003404 BLE 50377$
3344 023040 004737 012734 JSR PC,MOVMSG ;GET MESSAGE PACKET
3345 023044 004737 013430 JSR PC,TCC1 ;PRINT ERROR AND DROP OFF LINE UNIT
3346
3347 023050
3348
3349 023050 004737 017126 JSR PC,NEXTU ;REPEAT UNTIL ON LINE OR TIMED OUT.
3350 ;SET UP FOR NEXT UNIT.
3351 023054 000137 022160 JMP 50362$
3352
3353 023060
3354 023060 50363$:
3355 023060 105737 003527 50361$: TSTB PWRFLG ;IFB PWRFLG EQ #0 THEN
3356 023064 001026 BNE 50400$
3357 023066 MEMORY DATAWT ;REQUEST MEMORY FROM SUPER FOR RD/WR BUFFERS.
023066 104431 TRAP CSMEM
023070 010037 003406 MOV R0,DATAWT
3358 023074 013737 003406 003410 MOV DATAWT,DATARD ;SET RD BFR ADDRESS
3359 023102 062737 004000 003410 ADD #DATCNT,DATARD
3360 023110 027727 160272 004000 CMP @DATAWT,#DATCNT ;WHEN NOT ENOUGH FREE MEMO AVAILABLE
3361 023116 002011 BGE 50401$
3362 023120 PRINTF #MEMOM ;WARN OPERATOR
023120 012746 023166 MOV #MEMOM,-(SP)

```

MISCELLANEOUS SECTIONS
INITIALIZE SECTION

```

023124 012746 000001
023130 010600
023132 104417
023134 062706 000004
3363 023140 DOCLN ;AND ABORT PASS
023140 104444 TRAP CSDCLN
3364 ;DIAG MUST BE RE-LOADED IN A CPU WITH LARGER MEMO
3365 023142 50401$:
3366
3367 023142 50400$:
3368
3369 023142 105037 002214 CLR B CHGFLG ;CLR CHANGE CMD SEQ TBL FLAG.
3370 023146 012703 003526 MOV #ENDFLG,R3 ;LET R3 := #ENDFLG
3371 023152 004737 012664 JSR PC,CLRERR ;CLEAR ALL FLAGS.
3372 023156 105037 003527 CLR B PWRFLG ;CLEAR THE POWER FAIL FLAG.
3373
3374 023162 EXIT INIT
023162 104432
023164 000104 TRAP CSEXIT
3375 023166 045 101 106 MEMOM: .ASCII /%AFREE MEMO TOO SMALL FOR RD-WR BFRS%/
023171 122 105 105
023174 040 115 105
023177 115 117 040
023202 124 117 117
023205 040 123 115
023210 101 114 114
023213 040 106 117
023216 122 040 122
023221 104 055 127
023224 122 040 102
023227 106 122 123
023232 045 116
3376 023234 045 101 122 .ASCIZ /%ARE-LOAD IN LARGER MEMO%/
023237 105 055 114
023242 117 101 104
023245 040 111 116
023250 040 114 101
023253 122 107 105
023256 122 040 115
023261 105 115 117
023264 045 116 000
3377 .EVEN
3378
3379 023270 ENDINIT
023270 L10012:
023270 104411 TRAP C$INIT
3380
3381 .SBTTL AUTO DROP SECTION
3382
3383 :++
3384 :SECTION EXECUTED AFTER THE INIT CODE WHEN "ADR" FLAG IS SET BY OPERATOR
3385 :SECTION CHEKS FOR A VALID INTERFACE LOCATION. DROPS UNIT IF NO RESPONSE
3386 :FROM INTERFACE
3387 :--
3388
3389 023272 BGNAUTO
023272 L$AUTO::

```

```

3390
3391 023272 004737 017060
3392 023276
3393 023276 026527 002604 177777 50402$: JSR PC,FIRSTU ;FIND FIRST UNIT
3394 023304 001525 ;WHILE DEVTBL(R5) NE #END DO ;
3395 023306 105037 003530 CMP DEVTBL(R5),#END
3396 023312 CLR B TRAPD4 ;LET TRAPD4 :B= #0 ;
023312 012746 000340 SETVEC #4,#TRAP4,#INTPRI ;SET VECTOR 4 ;
023316 012746 023706 MOV #INTPRI,-(SP)
023322 012746 000004 MOV #TRAP4,-(SP)
023326 012746 000003 MOV #4,-(SP)
023332 104437 MOV #3,-(SP)
023334 062706 000010 TRAP C$SVEC
3397 023340 017502 002514 MOV @TSDB(R5),R2 ;ADDRESS TS05 INTERFACE
3398 023344 CLRVEC #4 ;CLEAR VECTOR AT 4
023344 012700 000004 MOV #4,R0
023350 104436 TRAP C$CVEC
3399 023352 105737 003530 TSTB TRAPD4 ;IFB TRAPD4 NE #0 THEN
3400 023356 001423 BEQ 50404$
3401 023360 005265 003366 INC FTLCNT(R5) ;LET FTLCNT(R5) := FTLCNT(R5) + #1
3402 023364 PRINTF #AUTODM,TSDB(R5) ;PRINT ERROR
023364 016546 002514 MOV TSDB(R5),-(SP)
023370 012746 023562 MOV #AUTODM,-(SP)
023374 012746 000002 MOV #2,-(SP)
023400 010600 MOV SP,R0
023402 104417 TRAP C$PNTF
023404 062706 000006 ADD #6,SP
3403 023410 016537 002604 017366 MOV DEVTBL(R5),DROPN ;SAVE # OF UNIT TO BE DROPPED.
3404 023416 010500 MOV R5,R0 ;R0=LOGICAL DEVICE NUMBER
3405 023420 006200 ASR R0
3406 023422 DODU R0 ;DROP THE UNIT: EXEC BGNDU-ENDDU CODE IF IDU = 0
023422 104451 TRAP C$DODU
3407
3408 023424 000452
3409 023426
3410 023426 012775 002340 002514 50404$: BR 50405$
3411 023434 004737 012700 MOV #GSCP,#@TSDB(R5) ;SEND GET STATUS COMMAND
3412 023440 032775 000200 002524 JSR PC,WSSR ;WAIT
3413 023446 001423 000100 002524 BIT #TS.SSR,@TSSR(R5) ;IF #TS.SSR SETIN @TSSR(R5) THEN
3414 023450 032775 000100 002524 BEQ 50406$
3415 023456 001416 BIT #TS.OFL,@TSSR(R5) ;IF #TS.OFL SETIN @TSSR(R5) THEN
3416 023460 005265 003366 BEQ 50407$
3417 023464 INC FTLCNT(R5) ;LET FTLCNT(R5) := FTLCNT(R5) + #1
023464 013746 003534 PRINTF #OFLINM,TSNP
023470 012746 005456 MOV TSNP,-(SP)
023474 012746 000002 MOV #OFLINM,-(SP)
023500 010600 MOV #2,-(SP)
023502 104417 MOV SP,R0
023504 062706 000006 TRAP C$PNTF
3418 023510 004737 017302 ADD #6,SP
3419
3420 023514 50407$:
3421
3422 023514 000416
3423 023516 50406$: BR 50410$
3424 023516 005265 003366 INC FTLCNT(R5) ;LET FTLCNT(R5) := FTLCNT(R5) + #1
3425 023522 PRINTF #NRDYM,DEVTBL(R5)
    
```



```

023522 016546 002604
023526 012746 023656
023532 012746 000002
023536 010600
023540 104417
023542 062706 000006
3426 023546 004737 017302
                                JSR PC,DROPUA
3427
3428 023552          50410$:
3429
3430 023552          50405$:
3431 023552 004737 017126          JSR PC,NEXTU
3432
3433 023556 000647          BR      50402$
3434 023560          50403$:
3435
3436 023560          ENDAUTO
023560          L10013:
023560 104461          TRAP   C$AUTO
3437
3438 023562          045      101      102  AUTODM: .ASCII /%ABUS TRAP AT %06%N/
023565          125      123      040
023570          124      122      101
023573          120      040      101
023576          124      040      045
023601          117      066      045
023604          116
3439 023605          045      101      111          .ASCIZ /%AINTERFACE BAD OR NOT SET TO ABOVE AD%N/
023610          116      124      105
023613          122      106      101
023616          103      105      040
023621          102      101      104
023624          040      117      122
023627          040      116      117
023632          124      040      123
023635          105      124      040
023640          124      117      040
023643          101      102      117
023646          126      105      040
023651          101      104      045
023654          116      000
3440 023656          045      101      125  NRDYM: .ASCIZ /%AUNIT %D1%A NOT RDY%N/
023661          116      111      124
023664          040      045      104
023667          061      045      101
023672          040      116      117
023675          124      040      122
023700          104      131      045
023703          116      000
3441
3442          .EVEN
3443          :
3444          :   DEVICE BUS TRAP HANDLER
3445          :   OUTPUT: TRAPD4 BYTE 1: TRAPED AT 4
3446          :   :
3447 023706 105237 003530  TRAP4:: INCB   TRAPD4;LET TRAPD4 :B= TRAPD4 + #1
3448 023712 000002          RTI
    
```

```

MOV   DEVTBL(R5),-(SP)
MOV   #NRDYM, -(SP)
MOV   #2, -(SP)
MOV   SP, R0
TRAP  C$PNTF
ADD   #6, SP
    
```

```

TRAP  C$AUTO
    
```

3449
 3450
 3451
 3452
 3453
 3454
 3455
 3456
 3457

.SBTTL CLEANUP CODING SECTION

;++
 : THE CLEANUP CODING SECTION CONTAINS THE CODING THAT IS PERFORMED
 : AT THE END OF EACH PASS.
 :--

3458 023714
 023714

BGNCLN
 L\$CLEAN::

3459
 3460 023714 004737 017060

50411\$: JSR PC,FIRSTU ;FIND FIRST UNIT.

3461 023720
 3462 023720 026527 002604 177777

:WHILE DEVTBL(R5) NE #END DO
 CMP DEVTBL(R5),#END
 BEQ 50412\$

3463 023726 001410
 3464 023730 004737 012700

JSR PC,WSSR ;WAIT FOR UNIT READY OR TIMEOUT,
 CLRVEC TSVCT(R5) ;RELEASE INTERRUPT VECTORS FOR ALL DEV.
 MOV TSVCT(R5),R0
 TRAP CSCVEC

3465 023734
 023734 016500 002534
 023740 104436

JSR PC,NEXTU ;FIND NEXT UNIT.

3466 023742 004737 017126

3467
 3468 023746 000764

BR 50411\$

3469 023750
 3470

50412\$:

3471 023750
 023750 104432
 023752 000002

EXIT CLN

TRAP C\$EXIT
 .WORD L10014-

3472
 3473

.EVEN

3474 023754
 023754
 023754 104412

ENDCLN
 L10014:

TRAP C\$CLEAN

3475
 3476

.SBTTL DROP UNIT SECTION

3477
 3478

;++
 : THE DROP-UNIT SECTION CONTAINS THE CODING THAT CAUSES A DEVICE
 : TO NO LONGER BE TESTED. THAT CODE SHALL BE EXECUTED WHEN DODU
 : MACRO IS CALLED WHILE IDU FLAG IS NOT SET BY OPERATOR
 :--

3479
 3480

3481
 3482

3483
 3484

023756
 023756

BGNDU
 L\$DU::

3485
 3486 023756 010005
 3487 023760 006305

MOV R0,R5 ;R5 = LOGICAL DEVICE NUMBER X 2.
 ASL R5

3488 023762 012765 177774 002604
 3489 023770

MOV #NINUSE,DEVTBL(R5) ;SET NOT IN USE FLAG FOR THE DEVICE.
 CLRVEC TSVCT(R5) ;RELEASE THE INTERRUPT VECTOR.

023770 016500 002534
 023774 104436

MOV TSVCT(R5),R0
 TRAP CSCVEC

3490 023776
 023776 013746 017366

PRINTF #DROPPM,DROPN ;PRINT DROP DEVICE MESSAGE

024002 012746 005065
 024006 012746 000002

MOV DROPN,-(SP)
 MOV #DROPPM,-(SP)

024012 010600
 024014 104417

MOV #2,-(SP)
 MOV SP,R0
 TRAP C\$PRINTF

```

3491 024016 062706 000006          ADD    #6,SP
      024022          EXIT    DU          .WORD  JSJMP
      024022 000167          .WORD  L10015-2-.
      024024 000000
3492          .EVEN
3493
3494 024026          ENDDU
      024026 104453          L10015:
      024026          TRAP    C$DU
3495
3496          .SBTTL  ADD UNIT SECTION
3497
3498          :++
3499          : THE ADD-UNIT SECTION CONTAINS THE CODING THAT CAUSES A DEVICE
3500          : TO BE (A) TESTED FOR THE FIRST TIME, OR (B) RESUMED IN TESTING.  IF
3501          : 'EF.AUNIT' IS SET, THE UNIT WILL BE TESTED AS A NEW UNIT.
3502          :--
3503
3504 024030          BGNAU
      024030          L$AU::
3505 024030 010005          MOV    R0,R5          ;R5 = LOGICAL DEVICE NUMBER X 2.
3506 024032 006305          ASL   R5
3507 024034 010065 002604          MOV    R0,DEVTBL(R5) ;STORE UNIT # IN DEVICE TABLE.
3508 024040          GPHARD R0,R0          ;GET HARDWARE P TABLE FROM SUPER.
      024040 104442          TRAP   C$GPHRD
3509 024042 011065 002514          MOV    (R0),TSDB(R5) ;SAVE TSDB ADDRESS.
3510 024046 012065 002524          MOV    (R0)+,TSSR(R5) ;SAVE TSSR ADDRESS.
3511 024052 062765 000002 002524          ADD   #2,TSSR(R5)
3512 024060 011065 002534          MOV    (R0),TSVCT(R5) ;SAVE INTERRUPT VECTOR ADDRESS.
3513 024064 011065 003532          MOV    (R0),TSUNT(R5) ;SAVE NUMBER OF DRIVE
3514 024070 011037 003534          MOV    (R0),TSNP      ;SAVE FOR PRINT OUT'S
3515 024074          SETVEC TSVCT(R5),TSSINT(R5),#INTPRI
      024074 012746 000340          MOV    #INTPRI,-(SP)
      024100 016546 002554          MOV    TSSINT(R5),-(SP)
      024104 016546 002534          MOV    TSVCT(R5),-(SP)
      024110 012746 000003          MOV    #3,-(SP)
      024114 104437          TRAP   C$SVEC
      024116 062706 000010          ADD   #10,SP
3516          ;SET UP INTERRUPT PROCESSING CONDITIONS.
3517 024122 005065 003472          CLR   INTFLG(R5)    ;CLEAR INTERRUPT FLAGS.
3518
3519          EXIT    AU
      024126 000167          .WORD  JSJMP
      024130 000000          .WORD  L10016-2-.
3520
3521          .EVEN
3522
3523 024132          ENDAU
      024132          L10016:
      024132 104452          TRAP   C$AU
3524
3525
3526
3527          .TITLE  HARDWARE TESTS
3528
3529          .SBTTL  TEST 1:  BASIC FUNCTIONS.
3530
    
```



```

3531
3532      :++
3533      : TEST TO EXECUTE ALL TS05 FUNCTIONS.
3534      :--
3535 024134      BGNMOD
3536
3537 024134      BGNTST
      024134
T1::
3538
3539 024134 105037 003515      CLRB      RANDOM      ;CLR THE RANDOM OPERATIONS FLAG.
3540 024140 105037 003514      CLRB      EXPBOT      ;CLR EXPECT BOT FLAG.
3541
3542 024144      BGNSUB      ;SUBTEST 1 - SET CHAR, DRIVE INIT, GET STATUS.
      024144
T1.1:
      024144 104402
      TRAP      C$BSUB
3543
3544 024146 004737 017060      JSR      PC,FIRSTU      ;FIND THE FIRST UNIT.
3545 024152 004737 007072      JSR      PC,SOFINIT     ;INIT DEVICE
3546 024156 103404
3547 024160      BCS      11$
      ERRDF      2,NSSRM,STAERM ;REPORT TS05 NOT READY
      TRAP      C$ERDF
      .WORD      2
      .WORD      NSSRM
      .WORD      STAERM
3548
3549 024170 004737 007466      11$: JSR      PC,MDSET      ;GO DO SETUP'S
3550 024174 012702 025052      MOV      #BFSEQ0,R2     ;ADR OF CMD SEQ.
3551 024200 004737 025026      JSR      PC,BFSEQ      ;SET UP CMD SEQ.
3552 024204 004737 010226      JSR      PC,EXALL      ;EXECUTE CMD SEQ ON ALL DEVICES.
3553 024210 004737 017060      JSR      PC,FIRSTU     ;FIND THE FIRST UNIT.
3554 024214
3555 024214 026527 002604 177777 50413$: ;WHILE DEVTBL(R5) NE #END DO ;WHILE THERE ARE MORE DEVICES:
      CMP      DEVTBL(R5),#END
      BEQ      50414$
3556 024222 001451
3557 024224 016502 002544      MOV      MSGPKA(R5),R2 ;GET MSG PACKET ADR.
3558 024230 062702 000012      ADD      #12,R2 ;LET R2 := R2 + #12 ;GET XSTAT2 ADR.
3559 024234 011265 002564      MOV      (R2),TS5CL(R5) ;STORE CODE LEVEL FROM DTR BYTE.
3560 024240 042765 177700 002564      BIC      #177700,TS5CL(R5)
3561 024246 011265 002574      MOV      (R2),TS5SW(R5) ;STORE SWITCH SETTINGS
3562 024252 042765 177477 002574      BIC      #177477,TS5SW(R5)
3563 024260      PRINTF #CODELM,DEVTBL(R5),TS5CL(R5)
      MOV      TS5CL(R5),-(SP)
      MOV      DEVTBL(R5),-(SP)
      MOV      #CODELM,-(SP)
      MOV      #3,-(SP)
      MOV      SP,R0
      TRAP      C$PNTF
      ADD      #10,SP
3564
3565 024310      PRINTF #SWSET,DEVTBL(R5),TS5SW(R5) ;PRINT THE TS05 MICROCODE LEVEL.
      MOV      TS5SW(R5),-(SP)
      MOV      DEVTBL(R5),-(SP)
      MOV      #SWSET,-(SP)
      MOV      #3,-(SP)
      MOV      SP,R0
      TRAP      C$PNTF
      ADD      #10,SP
3566
      ;PRINT THE TS05 SWITCH SETTINGS.
    
```

```

3567 024340          50415$:
3568 024340 004737 017126      JSR  PC,NEXTU          ;FIND NEXT UNIT.
3569
3570 024344 000723          BR    50413$
3571 024346          50414$:
3572
3573 024346          L10020: ENDSUB
      024346
      024346 104403          TRAP  C$ESUB
3574
3575 024350          T1.2:  BGNSUB          ;SUBTEST 2 - REWIND.
      024350
      024350 104402          TRAP  C$BSUB
3576
3577 024352 012702 025124      MOV  #BFSEQ1,R2      ;ADR OF CMD SEQ.
3578 024356 004737 025026      JSR  PC,BFSEQ        ;SET UP CMD SEQ.
3579 024362 004737 010226      JSR  PC,EXALL        ;EXECUTE CMD SEQ ON ALL DEVICES.
3580 024366 105037 003526      CLR  STAFLG          ;CLEAR START FLAG
3581 024372          L10021: ENDSUB
      024372
      024372 104403          TRAP  C$ESUB
3582
3583 024374          T1.3:  BGNSUB          ;SUBTEST 3 - WRITE/VERIFY.
      024374
      024374 104402          TRAP  C$BSUB
3584
3585 024376 012702 025136      MOV  #BFSEQ2,R2      ;ADR OF CMD SEQ.
3586 024402 004737 025026      JSR  PC,BFSEQ        ;SET UP CMD SEQ.
3587 024406 004737 010226      JSR  PC,EXALL        ;EXECUTE CMD SEQ ON ALL DEVICES.
3588 024412          L10022: ENDSUB
      024412
      024412 104403          TRAP  C$ESUB
3589
3590 024414          T1.4:  BGNSUB          ;SUBTEST 4 - WRITE TAPE MARK, ERASE.
      024414
      024414 104402          TRAP  C$BSUB
3591
3592 024416 012702 025230      MOV  #BFSEQ3,R2      ;ADR OF CMD SEQ.
3593 024422 004737 025026      JSR  PC,BFSEQ        ;SET UP CMD SEQ.
3594 024426 004737 010226      JSR  PC,EXALL        ;EXECUTE CMD SEQ ON ALL DEVICES.
3595 024432          L10023: ENDSUB
      024432
      024432 104403          TRAP  C$ESUB
3596
3597 024434          T1.5:  BGNSUB          ;SUBTEST 5 - SPACE FILES.
      024434
      024434 104402          TRAP  C$BSUB
3598
3599 024436 012702 025302      MOV  #BFSEQ4,R2      ;ADR OF CMD SEQ.
3600 024442 004737 025026      JSR  PC,BFSEQ        ;SET UP CMD SEQ.
3601 024446 004737 010226      JSR  PC,EXALL        ;EXECUTE CMD SEQ ON ALL DEVICES.
3602 024452          L10024: ENDSUB
      024452
      024452 104403          TRAP  C$ESUB
3603
3604 024454          T1.6:  BGNSUB          ;SUBTEST 6 - SPACE RECORDS.
      024454
    
```



```

3641 024602 004737 025026      JSR      PC,BFSEQ      ;SET UP CMD SEQ.
3642 024606 004737 010226      JSR      PC,EXALL     ;WRITE/VERIFY RECORDS 1 AND 2.
3643 024612 112737 000001 003520  MOVB    #1,SWBFLG    ;ENABLE BYTE SWAPPING.
3644 024620 004737 010226      JSR      PC,EXALL     ;WRITE/VERIFY RECORDS 3 AND 4.
3645 024624 105037 003520      CLRB    SWBFLG      ;DISABLE BYTE SWAPPING.
3646 024630      ENDSUB
      L10032:
      024630      104403
3647 024632 013702 003406      MOV     DATAW,R2      ;INIT WRITE BUFFER POINTER. TRAP C$ESUB
3648 024636 062702 000012      ADD     #10.,R2
3649 024642      50416$: ;WHILE R2 NE DATAW DO ;UNTIL 10 BYTES HAVE BEEN SWAPPED.
3650 024642 020237 003406      CMP     R2,DATAW
3651 024646 001402      BEQ    50417$
3652 024650 000342      SWAB  -(R2)          ;SWAP DATA BYTES IN WRITE BUFFER.
3653
3654 024652 000773      BR     50416$
3655 024654      50417$:
3656 024654 105237 003523      INCB   T1SWB          ;SET T1 SWAP BYTES FLAG FOR "CKDATA" SUBR
3657
3658 024660      BGNSUB              ;SUBTEST 12 - READ SWAPPED DATA BYTES.
      024660      T1.12:
      024660      104402
3659 024662 012737 104401 003420  MOV     #RDR,CMDWRD    ;CMD IS READ REV. TRAP C$SUB
3660 024670 004737 016130      JSR    PC,VFEXC      ;VERIFY ODD LENGTH SWAP (RECORD 4).
3661 024674 012737 000012 002336  MOV     #12,CMDPKT+CP.CNT ;CHANGE BYTE COUNT TO 10.
3662 024702 004737 016130      JSR    PC,VFEXC      ;VERIFY EVEN LENGTH SWAP (RECORD 3).
3663 024706 112737 000001 003520  MOVB    #1,SWBFLG    ;ENABLE BYTE SWAPPING.
3664 024714 012737 000011 002336  MOV     #11,CMDPKT+CP.CNT ;CHANGE BYTE COUNT TO 9.
3665 024722 004737 016130      JSR    PC,VFEXC      ;VERIFY ODD LENGTH SWAP (RECORD 2).
3666 024726 012737 000012 002336  MOV     #12,CMDPKT+CP.CNT ;CHANGE BYTE COUNT TO 10.
3667 024734 004737 016130      JSR    PC,VFEXC      ;VERIFY EVEN LENGTH SWAP (RECORD 1).
3668 024740 012737 104001 003420  MOV     #RDF,CMDWRD    ;CMD IS READ FWD.
3669 024746 004737 016130      JSR    PC,VFEXC      ;VERIFY EVEN LENGTH SWAP (RECORD 1).
3670 024752 012737 000011 002336  MOV     #11,CMDPKT+CP.CNT ;CHANGE BYTE COUNT TO 9.
3671 024760 004737 016130      JSR    PC,VFEXC      ;VERIFY ODD LENGTH SWAP (RECORD 2).
3672 024764 105037 003520      CLRB    SWBFLG      ;DISABLE BYTE SWAPPING.
3673 024770 012737 000012 002336  MOV     #12,CMDPKT+CP.CNT ;CHANGE BYTE COUNT TO 10.
3674 024776 004737 016130      JSR    PC,VFEXC      ;VERIFY EVEN LENGTH SWAP (RECORD 3).
3675 025002 012737 000011 002336  MOV     #11,CMDPKT+CP.CNT ;CHANGE BYTE COUNT TO 9.
3676 025010 004737 016130      JSR    PC,VFEXC      ;VERIFY ODD LENGTH SWAP (RECORD 4).
3677
3678 025014      ENDSUB
      025014      L10033:
      025014      104403
3679 025016 105037 003523      CLRB   T1SWB          ;CLEAR T1 SWAP BYTES FLAG
3680
3681
3682 025022      EXIT   TST
      025022      104432
      025024      000574
3683
3684      ;
3685      ; SUBROUTINE TO MOVE A COMMAND SEQUENCE TO THE SEQUENCE TABLE.
3686      ; INPUTS: R2 = FWA OF COMMAND SEQUENCE.
3687      ;
3688      ;
3689      ;
    
```

```

3690 025026 012701 003540 BFSEQ:: MOV #CMDSEQ,R1 ;INIT SEQ TABLE ADDRESS.
3691 025032 50420$: ;WHILE (R2) NE #END DO ;WHILE THERE ARE MORE COMMANDS:
3692 025032 021227 177777 CMP (R2),#END
3693 025036 001402 BEQ 50421$
3694 025040 012221 MOV (R2)+,(R1)+ ;MOVE COMMANDS TO SEQ TABLE.
3695
3696 025042 000773 BR 50420$
3697 025044 50421$:
3698 025044 012711 177777 MOV #END,(R1) ;STORE END OF SEQUENCE CODE.
3699 025050 000207 RTS PC ;RETURN.
3700
3701
3702 ; BASIC FUNCTION COMMAND SEQUENCE
3703
3704 025052 140004 BFSEQ0: .WORD SCH ;SET CHAR. 200. (1)
3705 025054 000200 200
3706 025056 000001 1
3707 025060 000000 0
3708 025062 100013 DRI ;DRIVE INIT. (2)
3709 025064 000001 1
3710 025066 000001 1
3711 025070 000000 0
3712 025072 140004 SCH ;SET CHAR. 20 (3)
3713 025074 000020 20
3714 025076 000001 1
3715 025100 000000 0
3716 025102 100017 GES ;GET STATUS. (4)
3717 025104 000001 1
3718 025106 000001 1
3719 025110 000000 0
3720 025112 140004 SCH ;SET CHAR. 40. (5)
3721 025114 000040 40
3722 025116 000001 1
3723 025120 000000 0
3724 025122 177777 .WORD END
3725
3726 025124 102010 BFSEQ1: RWD ;REWIND TWICE. (6)
3727 025126 000001 1
3728 025130 000002 2
3729 025132 000000 0
3730 025134 177777 .WORD END
3731
3732 025136 104105 BFSEQ2: WTV ;WRITE/VERIFY PAT 1. (7)
3733 025140 004000 DATCNT
3734 025142 000001 1
3735 025144 000001 1
3736 025146 104105 WTV ;WTV PAT 2. (8)
3737 025150 004000 DATCNT
3738 025152 000001 1
3739 025154 000002 2
3740 025156 104105 WTV ;WTV PAT 3. (9)
3741 025160 004000 DATCNT
3742 025162 000001 1
3743 025164 000003 3
3744 025166 104105 WTV ;WTV PAT 4. (10)
3745 025170 004000 DATCNT
3746 025172 000001 1
    
```

3747	025174	000004		4			
3748	025176	104105		WTV		:WTV PAT 5.	(11)
3749	025200	004000		DATCNT			
3750	025202	000001		1			
3751	025204	000005		5			
3752	025206	104105		WTV		:WTV PAT 6.	(12)
3753	025210	004000		DATCNT			
3754	025212	000001		1			
3755	025214	000006		6			
3756	025216	104105		WTV		:WTV PAT 0.	(13)
3757	025220	004000		DATCNT			
3758	025222	000001		1			
3759	025224	000000		0			
3760	025226	177777	.WORD	END			
3761							
3762	025230	100011	BFSEQ3:	WTM		:WRITE TAPE MARK.	(14)
3763	025232	000001		1			
3764	025234	000001		1			
3765	025236	000000		0			
3766	025240	104005		WRT		:WRITE 10 RECORDS.	(15)
3767	025242	004000		DATCNT			
3768	025244	000010		10			
3769	025246	000001		1			
3770	025250	100411		ERS		:ERASE 10 TIMES.	(16)
3771	025252	000001		1			
3772	025254	000010		10			
3773	025256	000000		0			
3774	025260	100011		WTM		:WRITE TAPE MARK.	(17)
3775	025262	000001		1			
3776	025264	000001		1			
3777	025266	000000		0			
3778	025270	101011		WTR		:WTM RETRY	(18)
3779	025272	000001		1			
3780	025274	000001		1			
3781	025276	000000		0			
3782	025300	177777	.WORD	END			
3783							
3784	025302	105410	BFSEQ4:	SFR		:SPACE 2 FILES REV.	(19)
3785	025304	000002		2			
3786	025306	000001		1			
3787	025310	000000		0			
3788	025312	105010		SFF		:SPACE 2 FILES FWD.	(20)
3789	025314	000002		2			
3790	025316	000001		1			
3791	025320	000000		0			
3792	025322	105410		SFR		:SPACE 2 FILES REV.	(21)
3793	025324	000001		1			
3794	025326	000002		2			
3795	025330	000000		0			
3796	025332	105010		SFF		:SPACE 2 FILES FWD.	(22)
3797	025334	000001		1			
3798	025336	000002		2			
3799	025340	000000		0			
3800	025342	177777	.WORD	END			
3801							
3802	025344	102010	BFSEQ5:	RWD		:REWIND.	(23)
3803	025346	000001		1			

3804	025350	000001		1		
3805	025352	000000		0		
3806	025354	104010		SRF		;SPACE 7 RECORDS FWD. (24)
3807	025356	000007		7		
3808	025360	000001		1		
3809	025362	000000		0		
3810	025364	104410		SRR		;SPACE 7 RECORDS REV. (25)
3811	025366	000007		7		
3812	025370	000001		1		
3813	025372	000000		0		
3814	025374	104010		SRF		;SPACE 7 RECORDS FWD. (26)
3815	025376	000001		1		
3816	025400	000007		7		
3817	025402	000000		0		
3818	025404	104410		SRR		;SPACE 7 RECORDS REV. (27)
3819	025406	000001		1		
3820	025410	000007		7		
3821	025412	000000		0		
3822	025414	177777	.WORD	END		
3823						
3824	025416	102010	BFSEQ6:	RWD		;REWIND. (28)
3825	025420	000001		1		
3826	025422	000001		1		
3827	025424	000000		0		
3828	025426	104005		WRT		;WRITE. (29)
3829	025430	004000		DATCNT		
3830	025432	000001		1		
3831	025434	000001		1		
3832	025436	105005		WRR		;WRITE RETRY. (30)
3833	025440	004000		DATCNT		
3834	025442	000001		1		
3835	025444	000001		1		
3836	025446	100011		WTM		;WRITE TAPE MARK.
3837	025450	000001		1		
3838	025452	000001		1		
3839	025454	000000		0		
3840	025456	105410		SFR		;SPACE 1 FILE REV.
3841	025460	000001		1		
3842	025462	000001		1		
3843	025464	000000		0		
3844	025466	177777	.WORD	END		
3845						
3846	025470	104401	BFSEQ7:	RDR		;READ REV. (31)
3847	025472	004000		DATCNT		
3848	025474	000001		1		
3849	025476	000001		1		
3850	025500	105401		RNR		;READ NEXT REV. (32)
3851	025502	004000		DATCNT		
3852	025504	000001		1		
3853	025506	000001		1		
3854	025510	125401		RNF		;READ NEXT FWD. (33)
3855	025512	004000		DATCNT		
3856	025514	000001		1		
3857	025516	000001		1		
3858	025520	177777	.WORD	END		
3859						
3860	025522	104001	BFSEQ8:	RDF		;READ FWD. (34)

```

3861 025524 004000          DATCNT
3862 025526 000001          1
3863 025530 000001          1
3864 025532 105001          RPF          ;READ PREVIOUS FWD.      (35)
3865 025534 004000          DATCNT
3866 025536 000001          1
3867 025540 000001          1
3868 025542 125001          RPR          ;READ PREVIOUS REV.      (36)
3869 025544 004000          DATCNT
3870 025546 000001          1
3871 025550 000001          1
3872 025552 177777          .WORD      END
3873
3874 025554 101012          BFSEQ9: .WORD  CLN          ;CLEAN.                (37)
3875 025556 000001          1
3876 025560 000001          1
3877 025562 000000          0
3878 025564 102010          RWD          ;REWIND                (38)
3879 025566 000001          1
3880 025570 000001          1
3881 025572 000000          0
3882 025574 177777          .WORD      END          ;END OF SEQUENCE.
3883
3884 025576 104105          BFSE10:      WTV          ;WRITE/VERIFY EVEN LENGTH. (39)
3885 025600 000012          12
3886 025602 000001          1
3887 025604 000000          0
3888 025606 104105          WTV          ;WRITE/VERIFY ODD LENGTH.  (40)
3889 025610 000011          11
3890 025612 000001          1
3891 025614 000000          0
3892 025616 177777          .WORD      END
3893          .EVEN
3894
3895 025620          ENDTST
          025620          L10017:
          025620 104401          TRAP      C$ETST
3896
3897          .SBTTL  TEST 2: DATA RELIABILITY.
3898
3899          :++
3900          : TEST TO CHECK THE DATA RELIABILITY OF THE TS05.
3901          :--
3902 025622          BGNTST
          025622          T2::
3903
3904 025622 112737 000001 003515          MOVB      #1,RANDOM          ;SET THE RANDOM OPERATIONS FLAG.
3905 025630 105037 003514          CLR      EXPBOT          ;CLEAR EXPECT BOT FLAG.
3906 025634 005037 003456          CLR      WTMFLG          ;CLEAR WRITE TAPE MARK FLAG
3907 025640 004737 017060          JSR      PC,FIRSTU          ;FIND THE FIRST UNIT.
3908 025644 004737 007072          JSR      PC,SOFINIT          ;INIT DEVICE
3909 025650 103404          BCS      11$
3910 025652          ERRDF      2,NSSRM,STAERM          ;REPORT TS05 NOT READY
          025652 104455          TRAP      C$ERDF
          025654 000002          .WORD      2
          025656 004536          .WORD      NSSRM
          025660 006120          .WORD      STAERM
    
```

3911						
3912	025662	004737	007466	11\$:	JSR	PC,MDSET ;GO DO SETUP'S
3913	025666	012702	004000		MOV	#DATCNT,R2 ;SET UP THE RECORD LENGTH MASK,
3914	025672	005302			DEC	R2
3915	025674	010237	003430		MOV	R2,LENMSK ;ALLOW MAXIMUM BUFFER.
3916	025700	005137	003430		COM	LENMSK
3917	025704	004737	010162		JSR	PC,SETCH ;CMD 1 = SET CHARACTERISTIC.
3918	025710	105737	003526		TSTB	STAFLG ;IFB STAFLG NE #0 THEN ;IF STARTING THEN:
3919	025714	001417			BEQ	50424\$
3920	025716	004737	010206		JSR	PC,SETRW ;CMD2=REWIND
3921	025722	105037	003526		CLRB	STAFLG ;LET STAFLG :B= #0 ;CLR START FLAG.
3922						
3923	025726			50422\$:		
3924	025726	012721	104105		MOV	#WTV,(R1)+
3925	025732	012721	004000		MOV	#DATCNT,(R1)+
3926	025736	012702	177740		MOV	#RNOPSC,R2
3927	025742	005102			COM	R2
3928	025744	010221			MOV	R2,(R1)+
3929	025746	012721	000007		MOV	#RANP,(R1)+
3930						
3931	025752			50423\$:	BREAK	; DO A SUPVSR BREAK FIRST.
	025752	104422				TRAP CSBRK
3932						
3933	025754			50424\$:		;FILL SEQ TBL WITH RANDOM CMDS.
3934	025754	020127	003740		CMP	R1,#SEQEND
3935	025760	002012			BGE	50425\$
3936	025762	063737	003432	003434	ADD	RANB,RANS ;LET RANS := RANS + RANB
3937	025770	013702	003434		MOV	RANS,R2
3938	025774	042702	177741		BIC	#177741,R2
3939	026000	004772	026136		JSR	PC,@RANCMD(R2) ;SET UP A RANDOM CMD + BRP.
3940						
3941	026004	000763			BR	50424\$
3942	026006			50425\$:		
3943	026006	012711	177777		MOV	#END,(R1) ;STORE END OF SEQUENCE CODE IN TABLE.
3944	026012	004737	010226		JSR	PC,EXALL ;GO EXECUTE ALL CMDS IN SEQUENCE TABLE.
3945						
3946	026016	012701	003540		MOV	#CMDSEQ,R1 ;INIT CMD SEQ TBL POINTER,
3947	026022	005702			TST	R2 ;REPEAT UNTIL EOT IS REACHED
3948	026024	001752			BEQ	50423\$
3949	026026	105237	003524		INCB	ALLEOT ;FLAG ALL UNITS @ EOT
3950	026032	000240			NOP	
3951	026034	000240			NOP	
3952	026036	000240			NOP	
3953	026040	004737	027612		JSR	PC,T5WEOT ;WRITE ONE RECORD BEYOND EOT ON ALL UNITS
3954						;SO THAT SHORTER READ STOP DISTANCE
3955						;SHALL POSITION HEAD IN CLEAN IRG GAP
3956						;READ REV THAT EXTRA REC TO RE-POSITION THE TAPE
3957	026044	004737	026176		JSR	PC,RANRD ;SET UP READ REV/FWD CMDS,
3958	026050	012737	177740	003544	MOV	#RNOPSC,CMDSEQ+4 ;# OF RECORDS FOR READ REV.
3959	026056	005137	003544		COM	CMDSEQ+4
3960	026062	013737	003544	003554	MOV	CMDSEQ+4,CMDSEQ+14 ;# OF RECORDS FOR READ FORWARD.
3961	026070	012711	177777		MOV	#END,(R1) ;STORE END OF SEQUENCE CODE IN SEQ TABLE.
3962	026074	004737	010226		JSR	PC,EXALL ;GO EXECUTE READ REV/FWD OF LAST N RECORDS.
3963	026100	105037	003524		CLRB	ALLEOT ;CLEAR ALL UNITS @ EOT FLAG
3964	026104	112737	000001	003517	MOVB	#1,RPTFLG ;REQUEST PERFORMANCE REPORT DURING REWIND.
3965	026112	012701	003540		MOV	#CMDSEQ,R1 ;INIT SEQ TBL POINTER,
3966	026116	004737	010206		JSR	PC,SETRW ;STORE REWIND IN SEQ TBL.

3967 026122 012711 177777
 3968 026126 004737 010226
 3969

MOV #END,(R1) ;STORE END IN SEQ TBL,
 JSR PC,EXALL ;EXECUTE REWIND CMD ON ALL UNITS

3970 026132
 026132 104432
 026134 000320

EXIT TST
 TRAP CSEXIT
 .WORD L10034-

3971
 3972 : ADDRESSES OF SUBROUTINES USED TO SET UP RANDOM OPERATIONS IN
 3973 : THE DATA RELIABILITY TEST.
 3974

3975 026136 026334 RANCMD: RANWV ;WRITE/VERIFY.
 3976 026140 026310 RANWR ;WRITE.
 3977 026142 026310 RANWR ;WRITE.
 3978 026144 026310 RANWR ;WRITE.
 3979 026146 026310 RANWR ;WRITE.
 3980 026150 026310 RANWR ;WRITE.
 3981 026152 026310 RANWR ;WRITE.
 3982 026154 026310 RANWR ;WRITE.
 3983 026156 026176 RANRD ;READ.
 3984 026160 026176 RANRD ;READ.
 3985 026162 026176 RANRD ;READ.
 3986 026164 026176 RANRD ;READ.
 3987 026166 026176 RANRD ;READ.
 3988 026170 026176 RANRD ;READ.
 3989 026172 026176 RANRD ;READ.
 3990 026174 026176 RANRD ;READ.

3991
 3992 : SUBROUTINE TO SET UP READ COMMANDS IN SEQUENCE TABLE.
 3993 : INPUTS:
 3994 : OUTPUTS:
 3995 : REGISTERS: R2
 3996 : CALLS:
 3997

3998
 3999 026176 005737 003456 RANRD:: TST WTMFLG ;WAS LAST CMD A WRITE?
 4000 026202 001406 BEQ 1\$;NO,GO AHEAD
 4001 026204 004737 026346 JSR PC,RAWTM ;YES PUT DOWN TAPE MARK
 4002 026210 004737 026374 JSR PC,RASFR ;AND SPACE FILE REV
 4003 026214 005037 003456 CLR WTMFLG ;THEN CLEAR THE FLAG
 4004 026220 020127 003740 1\$: CMP R1,#SEQEND
 4005 026224 002030 BGE 2\$
 4006 026226 012721 104401 MOV #RDR,(R1)+ ;STORE READ REV CMD.
 4007 026232 012721 004000 MOV #DATCNT,(R1)+ ;SET BRJ TO MAX FOR READ RANDOM LENGTHS.
 4008 026236 063737 003434 003432 ADD RANS,RANB ;LET RANB := RANB + RANS
 4009 026244 013702 003432 MOV RANB,R2 ;LET R2 := RANB CLR.BY #RNOPSC
 4010 026250 042702 177740 BIC #RNOPSC,R2
 4011 026254 010221 MOV R2,(R1)+ ;SET RANDOM # OF OPERATIONS.
 4012 026256 012721 000007 MOV #RANP,(R1)+ ;RANDOM PATTERN.
 4013 026262 020127 003740 CMP R1,#SEQEND
 4014 026266 002007 BGE 2\$
 4015 026270 012721 104001 MOV #RDF,(R1)+ ;STORE READ FWD CMD.
 4016 026274 012721 004000 MOV #DATCNT,(R1)+ ;SET BRJ TO MAX TO READ RANDOM LENGTHS.
 4017 026300 010221 MOV R2,(R1)+ ;SET RANDOM # OF OPERATIONS.
 4018 026302 012721 000007 MOV #RANP,(R1)+ ;RANDOM PATTERN.
 4019 026306 000207 2\$: RTS PC

4020
 4021 : SUBROUTINE TO SET UP A WRITE COMMAND IN THE SEQUENCE TABLE.

```

4022      :      THEN A WRITE TAPE MARK AND SPACE FILE REVERSE.
4023      :
4024      :      INPUTS:
4025      :      OUTPUTS:
4026      :      REGISTERS:
4027      :      CALLS:
4028
4029 026310 012721 104005  RANWR:: MOV      #WRT,(R1)+      ;STORE WRITE CMD.
4030 026314 004737 026422      JSR PC,RANW      ;STORE BRf, # OF OPERATIONS, PATTERN.
4031 026320 005737 003456      TST      WTMFLG      ;LAST CMD A WRT?
4032 026324 001002      BNE      1$      ;YES,RETURN
4033 026326 005237 003456      INC      WTMFLG      ;NO,SET THE FLAG
4034 026332 000207      1$:      RTS PC
4035
4036
4037      :      SUBROUTINE TO SET UP A WRITE/VERIFY COMMAND IN THE SEQUENCE TABLE.
4038      :      INPUTS:
4039      :      OUTPUTS:
4040      :      REGISTERS:
4041      :      CALLS:
4042
4043 026334 012721 104105  RANWV:: MOV      #WTV,(R1)+      ;STORE WRITE/VERIFY CMD.
4044 026340 004737 026422      JSR PC,RANW      ;STORE BRf, # OF OPERATIONS, PATTERN.
4045 026344 000207      RTS      PC
4046
4047
4048      :      SUBROUTINE TO SET UP A WRITE TAPE MARK IN THE SEQUENCE TABLE.
4049      :      INPUTS:
4050      :      OUTPUTS:
4051      :      REGISTERS:
4052      :      CALLS:
4053
4054 026346 020127 003740  RAWTM:: CMP      R1,#SEQEND
4055 026352 002007      BGE      1$
4056 026354 012721 100011      MOV      #WTM,(R1)+      ;STORE WRITE TAPE MARK CMD.
4057 026360 012721 000001      MOV      #1,(R1)+      ;BRf
4058 026364 012721 000001      MOV      #1,(R1)+      ;# OF OPERATIONS
4059 026370 005721      TST      (R1)+      ;SKIP PATTERNS
4060 026372 000207      1$:      RTS PC
4061
4062      :      SUBROUTINE TO SET UP A SPACE FILE REVERSE IN THE SEQUENCE TABLE.
4063      :      INPUTS:
4064      :      OUTPUTS:
4065      :      REGISTERS:
4066      :      CALLS:
4067
4068 026374 020127 003740  RASFR:: CMP      R1,#SEQEND
4069 026400 002007      BGE      1$
4070 026402 012721 105410      MOV      #SFR,(R1)+      ;STORE SPACE FILE REVERSE
4071 026406 012721 000001      MOV      #1,(R1)+      ;BRf
4072 026412 012721 000001      MOV      #1,(R1)+      ;# OF OPERATIONS
4073 026416 005721      TST      (R1)+      ;SKIP PATTERNS
4074 026420 000207      1$:      RTS PC
4075
4076
4077      :      SUBROUTINE TO STORE BRf, # OF OPERATIONS, PATTERN IN COMMAND
4078      :      SEQUENCE TABLE FOR WRITE AND WRITE/VERIFY COMMANDS.
    
```

```

4079      :      INPUTS:
4080      :      OUTPUTS:
4081      :      REGISTERS:      R2
4082      :      CALLS:
4083
4084 026422 012721 004000      RANW:: MOV      #DATCNT,(R1)+      ;SET BRF TO MAX FOR PATTERN GENERATION.
4085      :      :RANDOM BRF WILL BE GENERATED FOR EACH RECORD.
4086 026426 063737 003434 003432      ADD      RANS,RANB      ;LET RANB := RANB + RANS
4087 026434 013702 003432      MOV      RANB,R2      ;LET R2 := RANB CLR.BY #RNOPSC
4088 026440 042702 177740      BIC      #RNOPSC,R2
4089 026444 010221      MOV      R2,(R1)+      ;SET RANDOM # OF OPERATIONS.
4090 026446 012721 000007      MOV      #RANP,(R1)+      ;RANDOM PATTERN.
4091 026452 000207      RTS PC      ;RETURN.
4092
4093      .EVEN
4094
4095 026454      ENDTST
      026454      L10034:
      026454 104401      TRAP      C$ETST
4096
4097      .SBTTL TEST 3: WRITE COMPATABILITY/WRITE UTILITY.
4098
4099      :++
4100      : TEST TO WRITE RECORDS FROM BOT TO EOT.
4101      :--
4102
4103 026456      BGNTST
      026456      T3::
4104
4105 026456 112737 000001 003515      MOVB     #1,RANDOM      ;SET THE RANDOM OPERATIONS FLAG.
4106 026464 105037 003514      CLRB     EXPBOT ;LET EXPBOT :B= #0      ;CLEAR EXPECT BOT FLAG.
4107
4108 026470 004737 017060      JSR      PC,FIRSTU      ;FIND THE FIRST UNIT.
4109 026474 004737 007072      JSR      PC,SOFINIT     ;INIT DEVICE
4110 026500 103404      BCS      11$
4111 026502      ERRDF     2,NSSRM,STAERM      ;REPORT TS05 NOT READY
      026502 104455      TRAP      C$ERDF
      026504 000002      .WORD     2
      026506 004536      .WORD     NSSRM
      026510 006120      .WORD     STAERM
4112
4113 026512 004737 007466      11$:     JSR      PC,MDSET      ;GO DO SETUP'S
4114 026516 012702 004000      MOV      #DATCNT,R2      ;SET UP THE RECORD LENGTH MASK.
4115 026522 005302      DEC      R2
4116 026524 010237 003430      MOV      R2,LENMSK      ;ALLOW MAXIMUM BUFFER.
4117 026530 005137 003430      COM      LENMSK
4118 026534 004737 010162      JSR PC,SETCH      ;CMD 1 = SET CHARACTERISTIC.
4119 026540 004737 010206      JSR PC,SETRW      ;CMD2=REWIND
4120 026544 105037 003526      CLRB     STAFLG ;LET STAFLG :B= #0      ;CLEAR START FLAG
4121 026550 50426$: BREAK      ; DO A SUPVSR BREAK FIRST.
      026550 104422      TRAP      C$BRK
4122
4123 026552      50427$:
4124 026552 020127 003740      CMP      R1,#SEQEND      ;WHILE THERE IS MORE ROOM IN SEQ TABLE:
4125 026556 002003      BGE      50430$
4126 026560 004737 026310      JSR      PC,RANWR      ;STORE A WRITE CMD IN SEQUENCE TABLE.
4127 026564 000772      BR       50427$
  
```



```

4128 026566          50430$:
4129 026566 012711 177777      MOV    #END,(R1)          ;STORE END OF SEQUENCE CODE IN TABLE.
4130 026572 004737 010226      JSR    PC,EXALL          ;EXECUTE ALL CMDS IN SEQ TBL ON UNITS.
4131 026576 012701 003540      MOV    #CMDSEQ,R1       ;INIT SEQ TBL POINTER,
4132 026602 005702              TST    R2                ;REPEAT UNTIL EOT IS REACHED
4133 026604 001761              BEQ    50426$
4134 026606 105237 003524      INCB   ALLEOT           ;SET ALL UNITS @ EOT FLAG
4135 026612 000240              NOP
4136 026614 000240              NOP
4137 026616 000240              NOP
4138 026620 004737 027612      JSR    PC,T5WEOT        ;WRITE ONE RECORD BEYOND EOT ON ALL UNITS
4139                                ;SO THAT SHORTER READ STOP DISTANCE
4140                                ;SHALL POSITION HEAD IN CLEAN IRG GAP
4141                                ;READ REV THAT EXTRA REC TO RE-POSITION TAPE
4142 026624 105037 003524      CLRB   ALLEOT           ;CLEAR ALL UNITS @ EOT FLAG
4143 026630 004737 010206      JSR    PC,SETRW         ;STORE REWIND IN SEQ TBL,
4144 026634 012711 177777      MOV    #END,(R1)       ;STORE END IN SEQ TBL,
4145 026640 004737 010226      JSR    PC,EXALL        ;EXECUTE REWIND CMD ON ALL UNITS
4146
4147
4148 026644          EXIT    TST
      026644 104432
      026646 000002          TRAP   CSEXIT
                                .WORD   L10035-.
4149
4150          .EVEN
4151
4152 026650          ENDTST
      026650
      026650 104401          L10035:
                                TRAP   CSETST
4153
4154          .SBTTL TEST 4: READ COMPATABILITY/READ UTILITY.
4155
4156          :++
4157          : TEST TO READ ENTIRE TAPE FORWARD AND REVERSE.
4158          :--
4159
4160
4161 026652          BGNTST
      026652          T4::
4162
4163 026652 112737 000001 003515      MOVB   #1,RANDOM       ;SET THE RANDOM OPERATIONS FLAG.
4164 026660 112737 000001 003514      MOVB   #1,EXPBOT       ;SET EXPECT BOT FLAG.
4165
4166 026666 004737 017060              JSR    PC,FIRSTU       ;FIND THE FIRST UNIT.
4167 026672 004737 007072              JSR    PC,SOFINIT     ;INIT DEVICE
4168 026676 103404              BCS    11$
4169 026700          ERRDF   2,NSSRM,STAERM ;REPORT TS05 NOT READY
      026700 104455
      026702 000002          TRAP   C$ERDF
      026704 004536          .WORD   2
      026706 006120          .WORD   NSSRM
                                .WORD   STAERM
4170
4171 026710 004737 007466          11$: JSR    PC,MDSET        ;GO DO SETUP'S
4172 026714 004737 010162          JSR    PC,SETCH       ;CMD 1 = SET CHARACTERISTIC.
4173 026720 004737 010206          JSR    PC,SETRW      ;CMD2=REWIND.
4174 026724 105037 003526          CLRB   STAFLG ;LET STAFLG :B= #0 ;CLEAR START FLAG
4175 026730 012721 104001          MOV    #RDF,(R1)+    ;CMD3 = READ FORWARD.
    
```

4176	026734	012721	004000		MOV	#DATCNT,(R1)+		:SET LENGTH TO MAX FOR UNKNOWN LENGTHS.
4177	026740	012721	077777		MOV	#77777,(R1)+		:SET RECORD COUNT TO MAX FOR WHOLE TAPE.
4178	026744	012721	000007		MOV	#RANP,(R1)+		:PATTERN = RANDOM.
4179	026750	012711	177777		MOV	#END,(R1)		:STORE END OF SEQUENCE CODE IN TABLE.
4180	026754	004737	010226		JSR	PC,EXALL		:EXECUTE ALL CMDS IN SEQ TBL ON ALL UNITS.
4181	026760	105237	003524		INCB	ALLEOT		:FLAG TO ALLOW ALL UNITS AT EOT TO READ REV
4182	026764	012701	003540		MOV	#CMDSEQ,R1		:INIT CMD SEQ TBL POINTER.
4183	026770	012721	104401		MOV	#RDR,(R1)+		:CMD1 = READ REVERSE.
4184	026774	012721	004000		MOV	#DATCNT,(R1)+		:SET LENGTH TO MAX FOR UNKNOWN LENGTHS.
4185	027000	012721	077777		MOV	#77777,(R1)+		:RECORD COUNT = MAX FOR WHOLE TAPE.
4186	027004	012721	000007		MOV	#RANP,(R1)+		:PATTERN = RANDOM.
4187	027010	012711	177777		MOV	#END,(R1)		:STORE END OF SEQUENCE CODE IN TABLE.
4188	027014	004737	010226		JSR	PC,EXALL		:GO EXECUTE READ REV. OF ENTIRE TAPE.
4189	027020	105037	003524		CLRB	ALLEOT		:CLEAR ALL UNITS @ EOT FLAG
4190								
4191	027024				EXIT	TST		
	027024	104432						TRAP C\$EXIT
	027026	000002						.WORD L10036-
4192								
4193						.EVEN		
4194								
4195	027030					ENDTST		
	027030			L10036:				
	027030	104401						TRAP C\$ETST
4196								
4197						.SBTTL	TEST 5: EXECUTE OPERATOR SELECTED COMMAND SEQUENCE.	
4198								
4199						;++		
4200						: TEST TO EXECUTE OPERATOR SELECTED COMMAND SEQUENCE.		
4201						!--		
4202								
4203	027032					BGNTST		
	027032			T5::				
4204								
4205	027032	105037	003515		CLRB	RANDOM		:CLEAR RAMDOM MODE FLAG.
4206	027036	112737	000001	003514	MOVB	#1,EXPBOT		:SET EXPECT BOT FLAG.
4207								
4208	027044	004737	017060		JSR	PC,FIRSTU		:FIND THE FIRST UNIT.
4209	027050	004737	007072		JSR	PC,SOFINIT		:INIT DEVICE
4210	027054	103404			BCS	11\$		
4211	027056				ERRDF	2,NSSRM,STAERM		:REPORT TS05 NOT READY
	027056	104455						TRAP C\$ERDF
	027060	000002						.WORD 2
	027062	004536						.WORD NSSRM
	027064	006120						.WORD STAERM
4212								
4213	027066	004737	007466		JSR	PC,MDSET		:GO DO SETUP'S
4214	027072	113737	002216	003521	MOVB	PIRE,IRE		:MOVE INHIBIT RFC ERROR REPORT FLAG.
4215	027100	004737	010162		JSR	PC,SETCH		:CMD 1 = SET CHARACTERISTIC.
4216	027104	013737	002220	003542	MOV	CHAR,CMDSEQ+2		:MOVE CHAR CODE FROM P TBL TO SEQ TBL.
4217	027112	012702	002222		MOV	#CMDD,R2		:R2 POINTS TO CMD2 IN SOFT P TABLE.
4218	027116	004737	027570		JSR	PC,PTCMDS		:MOVE CMD 2 FROM P TBL TO SEQ TBL.
4219	027122	004737	027570		JSR	PC,PTCMDS		:MOVE CMD 3 FROM P TBL TO SEQ TBL.
4220	027126	004737	027570		JSR	PC,PTCMDS		:MOVE CMD 4 FROM P TBL TO SEQ TBL.
4221	027132	004737	027570		JSR	PC,PTCMDS		:MOVE CMD 5 FROM P TBL TO SEQ TBL.
4222	027136	004737	027570		JSR	PC,PTCMDS		:MOVE CMD 6 FROM P TBL TO SEQ TBL.
4223	027142	004737	027570		JSR	PC,PTCMDS		:MOVE CMD 7 FROM P TBL TO SEQ TBL.

4224	027146	004737	027570	JSR	PC,PTCMDS		:MOVE END CMD FROM P TBL TO SEQ TBL.
4225	027152	005037	003442	CLR	JLOOP		:CLEAR JMP CMD LOOP COUNT.
4226	027156	105037	003526	CLRB	STAFLG		:CLEAR START FLAG
4227	027162	012701	003540	MOV	#CMDSEQ,R1		:INIT SEQUENCE TABLE POINTER.
4228	027166			3\$:	:WHILE (R1) NE #END DO		:WHILE THERE ARE CMDS LEFT IN SEQUENCE TBL:
4229	027166			50431\$:			
4230	027166	021127	177777	CMP	(R1),#END		
4231	027172	001574		BEQ	50432\$		
4232	027174	022711	000040	CMP	#JMP.C,(R1)		:IS THIS A JUMP CMD?
4233	027200	001024		BNE	6\$:BR IF NOT.
4234	027202	062701	000002	ADD	#2,R1	:LET R1 := R1 + #2	:POINT TO BRF.
4235	027206	012137	003444	MOV	(R1)+,JLOC		:SAVE BRF (LOCATION).
4236	027212	022137	003442	CMP	(R1)+,JLOOP		:HAS LOOP COUNT BE SATISFIED?
4237	027216	001003		BNE	1\$:IF NOT, JMP AGAIN.
4238	027220	062701	000002	ADD	#2,R1		:IF SO, ADJUST SEQ POINTER
4239	027224	000760		BR	3\$:AND GO TO NEXT COMMAND.
4240	027226	005237	003442	1\$:	INC	JLOOP	:UPDATE THE LOOP COUNT.
4241	027232	012701	003540	MOV	#CMDSEQ,R1		:INIT CMD SEQ TABLE POINTER.
4242	027236	005337	003444	2\$:	DEC	JLOC	:DECR LOCATION COUNTER.
4243	027242	001751		BEQ	3\$:IF THIS IS THE RIGHT LOCATION TO JMP TO, GO SET
4244	027244	062701	000010	ADD	#10,R1		:IF NOT, UPDATE SEQ POINTER TO NEXT CMD.
4245	027250	000772		BR	2\$:DO IT AGAIN.
4246							
4247	027252	022711	000020	6\$:	CMP	#DLY.C,(R1)	:DELAY?
4248	027256	001026		BNE	4\$:BR IF NOT.
4249	027260	062701	000004	ADD	#4,R1		:R1 = LOCATION OF N COUNT.
4250	027264	011137	003440	MOV	(R1),TIME2		:SAVE N COUNT.
4251	027270			7\$:	DELAY	1	:GO TO SUPER-WAIT 1 MSEC.
	027270	012727	000001				
	027274	000000					MOV #1,(PC)+
	027276	013727	002116				.WORD 0
	027302	000000					MOV LSDLY,(PC)+
	027304	005367	177772				.WORD 0
	027310	001375					DEC -6(PC)
	027312	005367	177756				BNE -4
	027316	001367					DEC -22(PC)
	027316	001367					BNE -20
4252	027320	005337	003440	DEC	TIME2		
4253	027324	001361		BNE	7\$		
4254	027326	062701	000004	ADD	#4,R1	:LET R1 := R1 + #4	:POINT TO NEXT CMD.
4255	027332	000715		BR	3\$:GO CHECK NEXT CMD.
4256	027334	004737	011172	4\$:	JSR	PC,SETUP	:GO SETUP THE COMMAND BLOCK.
4257	027340			50433\$:	:WHILE NCNT LT NCNT1 DO		:WHILE THERE ARE RECORDS REMAINING:
4258	027340	023737	003412	003414	CMP	NCNT,NCNT1	
4259	027346	002103		BGE	50434\$		
4260	027350	004737	011064	JSR	PC,CMDAC		:STORE CMD ASCII IN ERROR MSG.
4261	027354	004737	010524	JSR	PC,EXSUB		:ISSUE CMD TO ALL,AWAIT INTS,CHECK STATUS.
4262	027360	023727	003420	100017	CMP	CMDWRD,#GES	:IF CMD IS GET STATUS THEN:
4263	027366	001002		BNE	50435\$		
4264	027370	004737	017370	JSR	PC,PRXST		:PRINT EXTENDED STATUS REGISTERS.
4265							
4266	027374			50435\$:			
4267	027374	004737	017456	JSR	PC,CKHAE		:CHECK HALT AFTER EACH CMD FLAG.
4268	027400	012702	000001	MOV	#1,R2		:SET ALL UNITS AT BOT/EOT.
4269	027404	004737	017060	JSR	PC,FIRSTU		:FIND FIRST UNIT.
4270	027410			50436\$:	:WHILE DEVTBL(R5) NE #END DO		:WHILE THERE ARE MORE UNITS:
4271	027410	026527	002604	177777	CMP	DEVTBL(R5),#END	
4272	027416	001426		BEQ	50437\$		

HARDWARE TESTS MACRO M1113 25-MAY-82 09:51 PAGE 20-87
 TEST 5: EXECUTE OPERATOR SELECTED COMMAND SEQUENCE.

SEQ 0133

```

4273 027420 032737 000400 003420      BIT      #MOD.CO,CMDWRD      ;IF CMD IS REVERSE THEN:
4274 027426 001406                      BEQ      50440$
4275 027430 032765 000002 003502      BIT      #X0.BOT,EOTFLG(R5)      ;IF NOT AT BOT THEN:
4276 027436 001001                      BNE      50441$
4277 027440 005002                      CLR      R2                      ;CLEAR EOT/BOT FLAG.
4278
4279 027442                      50441$:
4280 027442 000411                      BR      50442$                      ;ELSE IF CMD IS NOT REVERSE:
4281 027444                      50440$:
4282 027444 032765 000001 003502      BIT      #X0.EOT,EOTFLG(R5)
4283 027452 001404                      BEQ      50443$
4284 027454 032737 000001 003420      BIT      #CMD.CO,CMDWRD
4285 027462 001001                      BNE      50444$
4286 027464                      50443$:
4287
4288 027464 005002                      CLR      R2                      ;IF NOT AT EOT OR NOT A MOTION CMD THEN:
4289
4290 027466                      50444$:
4291
4292 027466                      50442$:
4293 027466 004737 017126                      JSR PC,NEXTU                      ;FIND NEXT UNIT
4294
4295 027472 000746                      BR      50436$
4296 027474                      50437$:
4297 027474 020227 000001                      CMP      R2,#1                      ;IF ALL UNIT ARE AT EOT/BOT THEN:
4298 027500 001016                      BNE      50445$
4299 027502 013737 003412 003414      MOV      NCNT,NCNT1                ;FORCE TERMINATION OF COMMAND.
4300 027510 005237 003414                      INC      NCNT1
4301 027514 105237 003524                      INCB    ALLEOT                      ;FLAG ALL UNITS AT EOT/BOT TO ALLOW VERIFY OF D
4302 027520 023727 003426 000002      CMP      CMDLG,#2                  ;WHEN WRITING IS CURRENT COMMAND
4303 027526 001002                      BNE      50446$
4304 027530 004737 027612                      JSR PC,T5WEOT                      ;GO WRITE/READ REV ONE RECORD BEYOND EOT
4305
4306 027534                      50446$:
4307
4308 027534 000402                      BR      50447$
4309 027536                      50445$:
4310 027536 105037 003524                      CLRB    ALLEOT                      ;WHEN NOT ALL @EOT, CLEAR FLAG
4311
4312 027542                      50447$:
4313 027542 005237 003412                      INC      NCNT                      ;UPDATE RECORD COUNT.
4314 027546 013737 003420 003424      MOV      CMDWRD,PCMDWD              ;SAVE PREVIOUS COMMAND WORD.
4315
4316 027554 000671                      BR      50433$
4317 027556                      50434$:
4318 027556 004737 016044                      JSR PC,VFYDAT                      ;IF LAST CMD WAS A WRITE VERIFY, THEN GO
4319
4320
4321 027562 000601                      BR      50431$
4322 027564                      50432$:
4323
4324 027564                      EXIT  TST
      027564 104432                      TRAP   CSEXIT
      027566 000140                      .WORD  L10037-.
4325
4326 ;      SUBROUTINE TO MOVE A COMMAND FROM THE SOFTWARE P TABLE TO
4327 ;      THE COMMAND SEQUENCE TABLE.

```

```

4328      :      INPUTS:      R2 = POINTER TO SOFT 'P' TABLE
4329      :      OUTPUTS:
4330      :      REGISTERS:    R3.
4331      :      CALLS:
4332
4333 027570 012203      PTCMDS::MOV      (R2)+,R3      ;R3 = COMMAND TABLE INDEX.
4334 027572 005303      DEC      R3
4335 027574 006303      ASL      R3
4336 027576 016321 003752  MOV      CMDTBL(R3),(R1)+      ;MOVE COMMAND WORD.
4337 027602 012221      MOV      (R2)+,(R1)+      ;MOVE # OF BYTES.
4338 027604 012221      MOV      (R2)+,(R1)+      ;MOVE # OF OPERATIONS.
4339 027606 012221      MOV      (R2)+,(R1)+      ;MOVE PATTERN CODE.
4340 027610 000207      RTS PC
4341
4342      :      SUBROUTINE TO WRITE THEN READ REVERSE ONE RECORD BEYOND EOT
4343      :      INPUTS:
4344      :      OUTPUTS:
4345      :      REGISTERS:
4346      :      CALLS:      CMDAC,EXSUB,CKHAE
4347
4348 027612 000240      TSWEOT:: NOP
4349 027614 000240      NOP
4350 027616 004737 010524  JSR PC,EXSUB      ;WRITE ONE RECORD BEYOND EOT
4351 027622 004737 017456  JSR PC,CKHAE      ;SO THAT READ SHORTER STOP DISTANCE
4352
4353 027626 012700 000002      MOV      #2,R0      ;SHALL POSITION HEAD IN CLEAN IRG GAP
4354 027632 013737 003420 003424 1$: MOV      CMDWRD,PCMDWD      ;SET UP COUNTER FOR EOT
4355 027640 012737 104401 003420  MOV      #RDR,CMDWRD      ;LET PCMDWD := CMDWRD ;REPOSITION TAPE
4356 027646 012737 000004 003426  MOV      #4,CMDLG      ;LET CMDWRD := #RDR ;BEFORE EXTRA RECORD
4357 027654 013737 003420 002330  MOV      CMDWRD,CMDPKT      ;BY READING REVERSE
4358 027662 042737 004000 002330  BIC      #BRF.C,CMDPKT      ;LET CMDPKT := CMDWRD CLR.BY #BRF.C
4359 027670 013737 002330 003422  MOV      CMDPKT,CMDSAV      ;LET CMDSAV := CMDPKT ;THAT RECORD TO ALLOW
4360 027676 013737 003410 002332  MOV      DATARD,CMDPKT+CP.ADL ;NEXT COMMAND IN THE
4361 027704 004737 011064      JSR PC,CMDAC      ;TABLE TO BE EXECUTED
4362 027710 004737 010524      JSR PC,EXSUB
4363 027714 004737 017456      JSR PC,CKHAE
4364 027720 005300      DEC      R0      ;FOUND EOT YET?
4365 027722 001343      BNE     1$      ;NO,KEEP GOING
4366 027724 000207      RTS PC      ;YES,RETURN
4367
4368      .EVEN
4369
4370 027726      ENDTST
4371      104401      L10037:
4372 027730      TRAP     CSETST
4373
4374      .TITLE  PARAMETER CODING
4375
4376      .SBTTL  HARDWARE PARAMETER CODING SECTION
4377
4378 027730      BGNMOD
4379
4380      ;++
4381      ; THE HARDWARE PARAMETER CODING SECTION CONTAINS MACROS
4382      ; THAT ARE USED BY THE SUPERVISOR TO BUILD P-TABLES. THE
    
```

```
4383 : MACROS ARE NOT EXECUTED AS MACHINE INSTRUCTIONS BUT ARE
4384 : INTERPRETED BY THE SUPERVISOR AS DATA STRUCTURES. THE
4385 : MACROS ALLOW THE SUPERVISOR TO ESTABLISH COMMUNICATIONS
4386 : WITH THE OPERATOR.
4387 :--
4388
4389 027730          BGNHRD
      027730 000042
      027732          LSHARD::                .WORD L10040-LSHARD/2
4390
4391 027732          GPRMA  TS5ADR,0,0,160010,177564,YES
      027732 000031
      027734 027770
      027736 160010
      027740 177564
      027742          GPRMD  TS5VCT,2,0,777,60,776,YES
4392 027742 001032
      027742 030005
      027744 000777
      027750 000060
      027752 000776
      027754          GPRMD  TS5UNT,4,0,1,0,1,NO
4393 027754 002022
      027754 030014
      027760 000001
      027762 000000
      027764 000001
      027766          EXIT HRD
4394 027766 024004
      027766
4395
4396
4397 027770      124      123      104      TSSADR: .NLIST  BEX
4398 030005      126      105      103      TSSVCT: .ASCIZ  /TSDB ADDRESS/
4399 030014      123      105      114      TSSUNT: .ASCIZ  /VECTOR/
4400
4401
4402
4403 030036          ENDHRD
      030036
4404          L10040:                .EVEN
4405
4406          .SBTTL  SOFTWARE PARAMETER CODING SECTION
4407
4408 :++
4409 : THE SOFTWARE PARAMETER CODING SECTION CONTAINS MACROS
4410 : THAT ARE USED BY THE SUPERVISOR TO BUILD P-TABLES THE
4411 : MACROS ARE NOT EXECUTED AS MACHINE INSTRUCTIONS BUT ARE
4412 : INTERPRETED BY THE SUPERVISOR AS DATA STRUCTURES. THE
4413 : MACROS ALLOW THE SUPERVISOR TO ESTABLISH COMMUNICATIONS
4414 : WITH THE OPERATOR.
4415 :--
4416 030036          BGNSFT
      030036 000302
      030040          L$SOFT::                .WORD L10041-L$SOFT/2
4417 030040          GPRML  CLRM,0,1,YES
      030040 000130
      030040                .WORD  TSCODE
```


	030042	030644			.WORD	CLRM
	030044	000001			.WORD	1
4418	030046		GPRML	RRVM,0,400,YES		
	030046	000130			.WORD	TSCODE
	030050	030663			.WORD	RRVM
	030052	000400			.WORD	400
4419	030054		GPRML	RCVERM,2,400,YES		
	030054	001130			.WORD	TSCODE
	030056	030766			.WORD	RCVERM
	030060	000400			.WORD	400
4420	030062		GPRML	HAEM,2,1,YES		
	030062	001130			.WORD	TSCODE
	030064	030712			.WORD	HAEM
	030066	000001			.WORD	1
4421	030070		GPRML	IREFM,6,400,YES		
	030070	003130			.WORD	TSCODE
	030072	031042			.WORD	IREFM
	030074	000400			.WORD	400
4422	030076		XFERT	NEXTSP		
	030076	004024			.WORD	TSCODE
4423	030100		GPRML	BADTM,4,1,YES		
	030100	002130			.WORD	TSCODE
	030102	030736			.WORD	BADTM
	030104	000001			.WORD	1
4424	030106		NEXTSP: GPRML	DINTM,6,1,YES		
	030106	003130			.WORD	TSCODE
	030110	031017			.WORD	DINTM
	030112	000001			.WORD	1
4425	030114		GPRML	IREFM,12,1,YES		
	030114	005130			.WORD	TSCODE
	030116	031107			.WORD	IREFM
	030120	000001			.WORD	1
4426	030122		GPRML	CHGM,10,1,YES		
	030122	004130			.WORD	TSCODE
	030124	031063			.WORD	CHGM
	030126	000001			.WORD	1
4427	030130		XFERF	ENDSP1		
	030130	127044			.WORD	TSCODE
4428	030132		GPRMD	CHARM,14,0,377,0,777,YES		
	030132	006032			.WORD	TSCODE
	030134	031140			.WORD	CHARM
	030136	000377			.WORD	377
	030140	000000			.WORD	TSLOLIM
	030142	000777			.WORD	TSHILIM
4429	030144		GPRMD	CMD2M,16,D,37,1,33,YES		
	030144	007052			.WORD	TSCODE
	030146	031165			.WORD	CMD2M
	030150	000037			.WORD	37
	030152	000001			.WORD	TSLOLIM
	030154	000033			.WORD	TSHILIM
4430	030156		GPRMD	BPCRM,20,D,-1,1,DATCNT,YES		
	030156	010052			.WORD	TSCODE
	030160	031173			.WORD	BPCRM
	030162	177777			.WORD	-1
	030164	000001			.WORD	TSLOLIM
	030166	004000			.WORD	TSHILIM
4431	030170		GPRMD	NUMBM,22,D,-1,1,77777,YES		

	030170	011052				.WORD	TSCODE
	030172	031205				.WORD	NUMBM
	030174	177777				.WORD	-1
	030176	000001				.WORD	TSLOLIM
	030200	077777				.WORD	TSHILIM
4432	030202		GPRMD	PATTM,24,D,17,0,10,YES			
	030202	012052				.WORD	TSCODE
	030204	031225				.WORD	PATTM
	030206	000017				.WORD	17
	030210	000000				.WORD	TSLOLIM
	030212	000010				.WORD	TSHILIM
4433	030214		GPRMD	CMD3M,26,D,37,1,33,YES			
	030214	013052				.WORD	TSCODE
	030216	031334				.WORD	CMD3M
	030220	000037				.WORD	37
	030222	000001				.WORD	TSLOLIM
	030224	000033				.WORD	TSHILIM
4434	030226		GPRMD	BPCRM,30,D,-1,1,DATCNT,YES			
	030226	014052				.WORD	TSCODE
	030230	031173				.WORD	BPCRM
	030232	177777				.WORD	-1
	030234	000001				.WORD	TSLOLIM
	030236	004000				.WORD	TSHILIM
4435	030240		GPRMD	NUMBM,32,D,-1,1,77777,YES			
	030240	015052				.WORD	TSCODE
	030242	031205				.WORD	NUMBM
	030244	177777				.WORD	-1
	030246	000001				.WORD	TSLOLIM
	030250	077777				.WORD	TSHILIM
4436	030252		GPRMD	PATTM,34,D,17,0,10,YES			
	030252	016052				.WORD	TSCODE
	030254	031225				.WORD	PATTM
	030256	000017				.WORD	17
	030260	000000				.WORD	TSLOLIM
	030262	000010				.WORD	TSHILIM
4437	030264		GPRMD	CMD4M,36,D,37,1,33,YES			
	030264	017052				.WORD	TSCODE
	030266	031342				.WORD	CMD4M
	030270	000037				.WORD	37
	030272	000001				.WORD	TSLOLIM
	030274	000033				.WORD	TSHILIM
4438	030276		GPRMD	BPCRM,40,D,-1,1,DATCNT,YES			
	030276	020052				.WORD	TSCODE
	030300	031173				.WORD	BPCRM
	030302	177777				.WORD	-1
	030304	000001				.WORD	TSLOLIM
	030306	004000				.WORD	TSHILIM
4439	030310		GPRMD	NUMBM,42,D,-1,1,77777,YES			
	030310	021052				.WORD	TSCODE
	030312	031205				.WORD	NUMBM
	030314	177777				.WORD	-1
	030316	000001				.WORD	TSLOLIM
	030320	077777				.WORD	TSHILIM
4440	030322		GPRMD	PATTM,44,D,17,0,10,YES			
	030322	022052				.WORD	TSCODE
	030324	031225				.WORD	PATTM
	030326	000017				.WORD	17

	030330	000000				.WORD	T\$LOLIM
	030332	000010				.WORD	T\$HILIM
4441	030334		GPRMD	CMD5M,46,D,37,1,33,YES			
	030334	023052				.WORD	T\$CODE
	030336	031350				.WORD	CMD5M
	030340	000037				.WORD	37
	030342	000001				.WORD	T\$LOLIM
	030344	000033				.WORD	T\$HILIM
4442	030346		GPRMD	BPCRM,50,D,-1,1,DATCNT,YES			
	030346	024052				.WORD	T\$CODE
	030350	031173				.WORD	BPCRM
	030352	177777				.WORD	-1
	030354	000001				.WORD	T\$LOLIM
	030356	004000				.WORD	T\$HILIM
4443	030360		GPRMD	NUMBM,52,D,-1,1,77777,YES			
	030360	025052				.WORD	T\$CODE
	030362	031205				.WORD	NUMBM
	030364	177777				.WORD	-1
	030366	000001				.WORD	T\$LOLIM
	030370	077777				.WORD	T\$HILIM
4444	030372		GPRMD	PATTM,54,D,17,0,10,YES			
	030372	026052				.WORD	T\$CODE
	030374	031225				.WORD	PATTM
	030376	000017				.WORD	17
	030400	000000				.WORD	T\$LOLIM
	030402	000010				.WORD	T\$HILIM
4445	030404		XFER	ENDSP2			
	030404	002004				.WORD	T\$CODE
4446	030406		ENDSP1: XFER	ENDSP3			
	030406	076004				.WORD	T\$CODE
4447	030410		ENDSP2: GPRMD	CMD6M,56,D,37,1,33,YES			
	030410	027052				.WORD	T\$CODE
	030412	031356				.WORD	CMD6M
	030414	000037				.WORD	37
	030416	000001				.WORD	T\$LOLIM
	030420	000033				.WORD	T\$HILIM
4448	030422		GPRMD	BPCRM,60,D,-1,1,DATCNT,YES			
	030422	030052				.WORD	T\$CODE
	030424	031173				.WORD	BPCRM
	030426	177777				.WORD	-1
	030430	000001				.WORD	T\$LOLIM
	030432	004000				.WORD	T\$HILIM
4449	030434		GPRMD	NUMBM,62,D,-1,1,77777,YES			
	030434	031052				.WORD	T\$CODE
	030436	031205				.WORD	NUMBM
	030440	177777				.WORD	-1
	030442	000001				.WORD	T\$LOLIM
	030444	077777				.WORD	T\$HILIM
4450	030446		GPRMD	PATTM,64,D,17,0,10,YES			
	030446	032052				.WORD	T\$CODE
	030450	031225				.WORD	PATTM
	030452	000017				.WORD	17
	030454	000000				.WORD	T\$LOLIM
	030456	000010				.WORD	T\$HILIM
4451	030460		GPRMD	CMD7M,66,D,37,1,33,YES			
	030460	033052				.WORD	T\$CODE
	030462	031364				.WORD	CMD7M

	030464	000037			.WORD	37
	030466	000001			.WORD	T\$LOLIM
	030470	000033			.WORD	T\$HILIM
4452	030472		GPRMD	BPCRM,70,D,-1,1,DATCNT,YES		
	030472	034052			.WORD	T\$CODE
	030474	031173			.WORD	BPCRM
	030476	177777			.WORD	-1
	030500	000001			.WORD	T\$LOLIM
	030502	004000			.WORD	T\$HILIM
4453	030504		GPRMD	NUMBM,72,D,-1,1,77777,YES		
	030504	035052			.WORD	T\$CODE
	030506	031205			.WORD	NUMBM
	030510	177777			.WORD	-1
	030512	000001			.WORD	T\$LOLIM
	030514	077777			.WORD	T\$HILIM
4454	030516		GPRMD	PATTM,74,D,17,0,10,YES		
	030516	036052			.WORD	T\$CODE
	030520	031225			.WORD	PATTM
	030522	000017			.WORD	17
	030524	000000			.WORD	T\$LOLIM
	030526	000010			.WORD	T\$HILIM
4455	030530		GPRMD	CMD8M,76,D,37,1,33,YES		
	030530	037052			.WORD	T\$CODE
	030532	031372			.WORD	CMD8M
	030534	000037			.WORD	37
	030536	000001			.WORD	T\$LOLIM
	030540	000033			.WORD	T\$HILIM
4456	030542		GPRMD	BPCRM,100,D,-1,1,DATCNT,YES		
	030542	040052			.WORD	T\$CODE
	030544	031173			.WORD	BPCRM
	030546	177777			.WORD	-1
	030550	000001			.WORD	T\$LOLIM
	030552	004000			.WORD	T\$HILIM
4457	030554		GPRMD	NUMBM,102,D,-1,1,77777,YES		
	030554	041052			.WORD	T\$CODE
	030556	031205			.WORD	NUMBM
	030560	177777			.WORD	-1
	030562	000001			.WORD	T\$LOLIM
	030564	077777			.WORD	T\$HILIM
4458	030566		GPRMD	PATTM,104,D,17,0,10,YES		
	030566	042052			.WORD	T\$CODE
	030570	031225			.WORD	PATTM
	030572	000017			.WORD	17
	030574	000000			.WORD	T\$LOLIM
	030576	000010			.WORD	T\$HILIM
4459	030600		XFER	ENDSP		
	030600	022004			.WORD	T\$CODE
4460	030602		ENDSP3: GPRML	TSMD,106,1,YES		
	030602	043130			.WORD	T\$CODE
	030604	031235			.WORD	TSMD
	030606	000001			.WORD	1
4461	030610		XFERT	ENDSP		
	030610	016024			.WORD	T\$CODE
4462	030612		GPRML	FAST,114,1,YES		
	030612	046130			.WORD	T\$CODE
	030614	031325			.WORD	FAST
	030616	000001			.WORD	1

4463	030620					XFERT	ENDSP4		
	030620	011024							
4464	030622					GPRML	WTBF,112,1,YES	.WORD	T\$CODE
	030622	045130						.WORD	T\$CODE
	030624	031305						.WORD	WTBF
	030626	000001						.WORD	1
4465	030630					XFERT	ENDSP		
	030630	006024						.WORD	T\$CODE
4466	030632					GPRML	RDBF,110,1,YES	.WORD	T\$CODE
	030632	044130						.WORD	T\$CODE
	030634	031266						.WORD	RDBF
	030636	000001						.WORD	1
4467	030640					ENDSP5: XFER	ENDSP		
	030640	002004						.WORD	T\$CODE
4468	030642					ENDSP4: XFER	ENDSP		
	030642	001004						.WORD	T\$CODE
4469	030644					ENDSP:			
4470	030644					ENDSFT			
	030644					L10041:		.EVEN	
4471								.EVEN	
4472									
4473						.NLIST	BEX		
4474	030644	103	114	105	CLRM:	.ASCIZ	/CLEAR COUNTERS/		
4475	030663	122	105	123	RRVM:	.ASCIZ	/RESET RANDOM VARIABLES/		
4476	030712	110	101	114	HAEM:	.ASCIZ	/HALT AFTER EACH CMD/		
4477	030736	102	101	104	BADTM:	.ASCIZ	/BAD TAPE SPOT DETECTION/		
4478	030766	120	122	111	RCVERM:	.ASCIZ	/PRINT RECOVERABLE ERRORS/		
4479	031017	104	111	123	DINTM:	.ASCIZ	/DISABLE INTERRUPTS/		
4480	031042	111	116	110	IREFM:	.ASCIZ	/INHIBIT RECOVERY/		
4481	031063	103	110	101	CHGM:	.ASCIZ	/CHANGE CMD SEQUENCE/		
4482	031107	111	116	110	IREM:	.ASCIZ	/INHIBIT RFC ERROR REPORT/		
4483	031140	103	110	101	CHARM:	.ASCIZ	/CHARACTERISTICS CODE/		
4484	031165	103	115	104	CMD2M:	.ASCIZ	"CMD/2"		
4485	031173	102	122	106	BPCRM:	.ASCIZ	/BRF COUNT/		
4486	031205	043	040	117	NUMBM:	.ASCIZ	/# OF OPERATIONS/		
4487	031225	120	101	124	PATM:	.ASCIZ	/PATTERN/		
4488	031235	104	105	106	TSMD:	.ASCIZ	/DEFAULT SWITCH SETTINGS?/		
4489	031266	122	105	101	RDBF:	.ASCIZ	/READ BUFFERING/		
4490	031305	127	122	111	WTBF:	.ASCIZ	/WRITE BUFFERING/		
4491	031325	061	060	060	FAST:	.ASCIZ	/100IPS/		
4492						.LIST	BEX		
4493						.EVEN			
4494									
4495					.NLIST	BEX			
4496	031334	103	115	104	CMD3M:	.ASCIZ	"CMD/3"		
4497	031342	103	115	104	CMD4M:	.ASCIZ	"CMD/4"		
4498	031350	103	115	104	CMD5M:	.ASCIZ	"CMD/5"		
4499	031356	103	115	104	CMD6M:	.ASCIZ	"CMD/6"		
4500	031364	103	115	104	CMD7M:	.ASCIZ	"CMD/7"		
4501	031372	103	115	104	CMD8M:	.ASCIZ	"CMD/8"		
4502						.LIST	BEX		
4503						.EVEN			
4504									
4505									
4506									
4507									

```
4508 :*****
4509 :
4510 :   PATCH AREA
4511 :   AND AN ADJUSTMENT TO ACCOUNT FOR THE 'LASTAD BIT7' HACK
4512 :   DESCRIBED IN 'SUPPRG.MEM' (FOR REV C).
4513 :
4514 031400 PATCH:: .BLKW 64.
4515
4517      032000      .=.!377+1
4519
4520 032000      LASTAD
                                .EVEN
                                .WORD 0
                                .WORD 0
4521      032000 000000
4522      032002 000000
4523      032004
4524      032004
4525
4526      L$LAST::
4527      ENDMOD
4528
4529      .SBTTL HARD CODED P-TBL
4530
4531      :++
4532      :DIAG IS PRE-PARAMETERIZED PER TBL
4533      :--
4534
4535      BGNSETUP 1
4536      BGNPTAB
4537
4538      .WORD 0
4539      .WORD L10044-./2-1
4540
4541 L10042:      172522
4542      224
4543      0
4544      ENDPTAB
4545 L10044:
4546      ENDSETUP
4547
4548 .END
4549
4550      000001
```


PARAMETER CODING
SYMBOL TABLE

ACK.C = 100000 G	BTADDR 002616 G	CP.CNT= 000006 G	CSTPRI= 000013	EXPBOT 003514 G
ADR = 000020 G	BTMSG1 015070	CRLF 005741 G	DATARD 003410 G	EXSUB 010524 G
ALLEOT 003524 G	BTMSG2 015155	CRLFSP 005744 G	DATAWT 003406 G	EXTFEA 002322 G
ASSEMB= 000010	BTMSG3 015225	CTCC 003450 G	DATCNT= 004000 G	E\$END = 002100
ATTNM 004603 G	BTPT 003512 G	CVC.C = 040000 G	DATERM 005752 G	E\$LOAD= 003035
AUDRPM 005114 G	BTRPT 020142 G	CSAU = 000052	DEVTBL 002604 G	FAST 031325
AUDRUN 005146 G	BT0 003046 G	CSAUTO= 000061	DFPTBL 002174 G	FATSM 004642 G
AUTODM 023562	BT1 003120 G	CSBRK = 000022	DFTSCH= 000040 G	FIRSTU 017060 G
BADTM 030736	BT2 003172 G	CSBSEG= 000004	DIA = 100006 G	FMT.CO= 000040 G
BADTSW 002210 G	BT3 003244 G	CSBSUB= 000002	DIABLK= 003406 G	FMT.C1= 000100 G
BENBSW 002324 G	CHAR 002220 G	CSCEFG= 000045	DIACNT= 000020 G	FTLCNT 003366 G
BFSEQ 025026 G	CHARM 031140	CSCLCK= 000062	DIAGMC= 000000	FUNRM 004622 G
BFSEQ0 025052	CHGFLG 002214 G	C\$CLEA= 000012	DINT 002212 G	FSAU = 000015
BFSEQ1 025124	CHGM 031063	C\$CLOS= 000035	DINTM 031017	F\$AUTO= 000020
BFSEQ2 025136	CHKERR 013166 G	C\$CLP1= 000006	DLY = 000020 G	F\$BGN = 000040
BFSEQ3 025230	CH.EAI= 000040 G	C\$CVEC= 000036	DLY.C = 000020 G	F\$CLEA= 000007
BFSEQ4 025302	CH.ERI= 000020 G	C\$DCLN= 000044	DRI = 100013 G	F\$DU = 000016
BFSEQ5 025344	CH.ESS= 000200 G	C\$DODU= 000051	DROPDM 005065 G	F\$END = 000041
BFSEQ6 025416	CKDATA 016444 G	C\$DRPT= 000024	DROPEP 003522 G	F\$HARD= 000004
BFSEQ7 025470	CKDCNT 017054	C\$DU = 000053	DROPN 017366	F\$HW = 000013
BFSEQ8 025522	CKDFF 017056	C\$EDIT= 000003	DROPU 017156 G	F\$INIT= 000006
BFSEQ9 025554	CKHAE 017456 G	C\$ERDF= 000055	DROPUA 017302	F\$JMP = 000050
BFSE10 025576	CKHRTN 017544	C\$ERHR= 000056	DRORTN 017360	F\$MOD = 000000
BGNFLG= 003460	CLN = 101012 G	C\$ERRO= 000060	DTAERM 005752 G	F\$MSG = 000011
BINC 016030	CLRERR 012664 G	C\$ERSF= 000054	DTAER2 005226 G	F\$PROT= 000021
BIT0 = 000001 G	CLRFLG 002204 G	C\$ERSO= 000057	DTAER3 005275 G	F\$PWR = 000017
BIT00 = 000001 G	CLRM 030644	C\$ESCA= 000010	DTAER4 005337 G	F\$RPT = 000012
BIT01 = 000002 G	CMDAC 011064 G	C\$ESEG= 000005	DTAER5 005360 G	F\$SEG = 000003
BIT02 = 000004 G	CMDASC 004040 G	C\$ESUB= 000003	EF.CON= 000036 G	F\$SOFT= 000005
BIT03 = 000010 G	CMDD 002222 G	C\$ETST= 000001	EF.HSS= 000040 G	F\$SRV = 000010
BIT04 = 000020 G	CMDLG 003426 G	C\$EXIT= 000032	EF.NEW= 000035 G	F\$SUB = 000002
BIT05 = 000040 G	CMDPKM 004346 G	C\$GETB= 000026	EF.PWR= 000034 G	F\$SW = 000014
BIT06 = 000100 G	CMDPKT 002330 G	C\$GETW= 000027	EF.RBO= 000020 G	F\$TESi= 000001
BIT07 = 000200 G	CMDSAV 003422 G	C\$GMAN= 000043	EF.RES= 000037 G	GCMDA 011136 G
BIT08 = 000400 G	CMDSEQ 003540 G	C\$GPHR= 000042	EF.RWB= 000030 G	GENPAT 011556 G
BIT09 = 001000 G	CMDSE2 003550 G	C\$GPLO= 000030	EF.STA= 000040 G	GES = 100017 G
BIT1 = 000002 G	CMDSE3 003550 G	C\$GPRI= 000040	EINC 016036	GETSTM 005507 G
BIT10 = 002000 G	CMDTBL 003752 G	C\$INIT= 000011	END = 177777 G	GIT 012050
BIT11 = 004000 G	CMDWRD 003420 G	C\$INLP= 000020	ENDERF= 003472	GOWAIT 012364 G
BIT12 = 010000 G	CMD.CO= 000001 G	C\$MANI= 000050	ENDFLG= 003526	GSCPCK 002340 G
BIT13 = 020000 G	CMD.C1= 000002 G	C\$MEM = 000031	ENDSP 030644	G\$CNT0= 000200
BIT14 = 040000 G	CMD.C2= 000004 G	C\$MSG = 000023	ENDSP1 030406	G\$DELM= 000372
BIT15 = 100000 G	CMD.C3= 000010 G	C\$OPEN= 000034	ENDSP2 030410	G\$DISP= 000003
BIT2 = 000004 G	CMD.C4= 000020 G	C\$PNTB= 000014	ENDSP3 030602	G\$EXCP= 000400
BIT3 = 000010 G	CMD2M 031165	C\$PNTF= 000017	ENDSP4 030642	G\$HILI= 000002
BIT4 = 000020 G	CMD3M 031334	C\$PNTS= 000016	ENDSP5 030640	G\$LOLI= 000001
BIT5 = 000040 G	CMD4M 031342	C\$PNTX= 000015	EOTFLG 003502 G	G\$NO = 000000
BIT6 = 000100 G	CMD5M 031350	C\$QIO = 000377	ERCVER 002207 G	G\$OFFS= 000400
BIT7 = 000200 G	CMD6M 031356	C\$RDBU= 000007	ERLOG 003466 G	G\$OF SI= 000376
BIT8 = 000400 G	CMD7M 031364	C\$REFG= 000047	ERRREC 003471 G	G\$PRMA= 000001
BIT9 = 001000 G	CMD8M 031372	C\$RESE= 000033	ERS = 100411 G	G\$PRMD= 000002
BOE = 000400 G	CNTBGN= 002626	C\$REVI= 000003	ERSFLG 003525 G	G\$PRML= 000000
BORERS 015274 G	CNTEND= 003376	C\$RFLA= 000021	EVL = 000004 G	G\$RADA= 000140
BPCRM 031173	CNTLEN= 000550 G	C\$RPT = 000025	EXALL 010226 G	G\$RADB= 000000
BRCPK 002344 G	CODELM 004162 G	C\$SEFG= 000046	EXARTN 010522	G\$RADD= 000040
BRFCNT 003416 G	CP.ADH= 000004 G	C\$SPRI= 000041	EXCRTN 012362	G\$RADL= 000120
BRF.C = 004000 G	CP.ADL= 000002 G	C\$SVEC= 000037	EXCUTE 012054 G	G\$RADO= 000020
	CP.CMD= 000000 G			

PARAMETER CODING
SYMBOL TABLE

SETRW 010206 G	TRAP4 023706 G	T\$LAST= 000001	T1 024134 G	WRTY 014614 G
SETUP 011172 G	TSAM 004705 G	T\$LOLI= 000000	T1SWB 003523 G	WRTYCT 003316 G
SFF = 105010 G	TSBA = 002514 G	T\$LSYM= 010000	T1.1 024144	WRTYER 003464 G
SFPTBL 002204 G	TSC.FC= 177717 G	T\$LTNO= 000005	T1.10 024554	WRTYFG 003463 G
SFR = 105410 G	TSC.TC= 177761 G	T\$NEST= 177777	T1.11 024574	WRUNR 002776 G
SOFINI 007072 G	TSDB 002514 G	T\$NSO = 000000	T1.12 024660	WSM = 140006 G
SRF = 104010 G	TSMD 031235	T\$NS1 = 000005	T1.2 024350	WSMBK 002506 G
SRR = 104410 G	TSNP 003534 G	T\$NS2 = 000002	T1.3 024374	WSSR 012700 G
STAERM 006120 G	TSSR 002524 G	T\$PCNT= 000000	T1.4 024414	WTBF 031305
STAER1 006436	TSSREG 003454 G	T\$PTAB= 010043	T1.5 024434	WTBUF 002316 G
STAER2 006616	TSUNT 003532 G	T\$PTHV= 000001	T1.6 024454	WTM = 100011 G
STAER3 006675	TSVCT 002534 G	T\$PTNU= 000001	T1.7 024474	WTMFLG 003456 G
STAER4 006733	TS.A16= 000400 G	T\$SAVL= 177777	T1.8 024514	WTR = 101011 G
STAER5 006753	TS.A17= 001000 G	T\$SEGL= 177777	T1.9 024534	WTV = 104105 G
STAER6 006562	TS.NBA= 002000 G	T\$SIZE= 000005	T2 025622 G	WTVERM 004430 G
STAER7 006530	TS.NXM= 004000 G	T\$SUBN= 000000	T3 026456 G	WTYBRF 015066
STAF LG 003526 G	TS.OFL= 000100 G	T\$TAGL= 177777	T4 026652 G	WTYCMD 015062
SVCGBL= 000000	TS.RMR= 010000 G	T\$TAGN= 010045	T5 027032 G	WTYWRD 015064
SVCINS= 000001	TS.SC = 100000 G	T\$TEMP= 000000	T5WEOT 027612 G	XSALWA= 000000
SVC SUB= 000000	TS.SPE= 020000 G	T\$TEST= 000005	UAM = 000200 G	XSFALS= 000040
SVCTAG= 000000	TS.SSR= 000200 G	T\$TSTM= 177777	UNIWLK 005653	X\$OFFS= 000400
SVCTST= 000000	TS.UPE= 040000 G	T\$TSTS= 000001	UNL = 100412 G	X\$TRUE= 000020
SWBFLG 003520 G	TS1MD 002312 G	T\$SAU = 010016	UNREC 003470 G	X0.BOT= 000002 G
SWB.C = 010000 G	TS5ADR 027770	T\$SAUT= 010013	URERM 005041 G	X0.EOT= 000001 G
SWSET 004231 G	TS5CL 002564 G	T\$SCLE= 010014	VFEXC 016130 G	X0.LET= 020000 G
S\$LSYM= 010000	TS5INT 002554 G	T\$SDAT= 010044	VFISU 016356 G	X0.ONL= 000100 G
TCCRA 013372	TS5IN0 010034 G	T\$SDU = 010015	VFYCNT 003346 G	X0.RLL= 010000 G
TCC0 013412 G	TS5IN1 010042 G	T\$SHAR= 010040	VFYDAT 016044 G	X0.RLS= 040000 G
TCC1 013430 G	TS5IN2 010050 G	T\$SHW = 010000	VFYFLG 003516 G	X0.TMK= 100000 G
TCC2 013446 G	TS5IN3 010056 G	T\$SINI= 010012	VFY.C = 000100 G	X0.WLK= 000004 G
TCC3 013556 G	TS5SW 002574 G	T\$SMMSG= 010003	WAITF 007204 G	X2.BFE= 000100 G
TCC4 013574 G	TS5UNT 030014	T\$SPC = 000001	WLKCHK 007356 G	X2.EFE= 000200 G
TCC5 014210 G	TS5VCT 030005	T\$SPRO= 010011	WLKZRO 011734	X2.OPM= 100000 G
TCC6 014306 G	T\$ARGC= 000003	T\$SPTA= 010043	WRBC 002626 G	X3.DCK= 000010 G
TCC7 014450 G	T\$CODE= 001004	T\$SRP1= 010010	WRECL = 000020 G	X3.RNY= 157400 G
TC2RTN 013554	T\$ERRN= 000002	T\$SSOF= 010041	WRR = 105005 G	X4.HSS= 100000 G
TIME1 003436 G	T\$EXCP= 000000	T\$SSRV= 010007	WRREC 002766 G	X4.RCE= 040000 G
TIME2 003440 G	T\$FLAG= 000041	T\$SSUB= 010033	WRT = 104005 G	ZROPAT 011704
TOERM 004453 G	T\$FREE= 032016	T\$SSW = 010001	WRTCHK 007270 G	\$LSTIN= 000001
TOOMM 004727 G	T\$GMAN= 000000	T\$STES= 010037	WRTCHR 007436 G	\$LSTTA= 000001
TRAPD4 003530 G	T\$HILI= 000010			

. ABS. 032016 000
000000 001
ERRORS DETECTED: 0

VIRTUAL MEMORY USED: 26197 WORDS (103 PAGES)
DYNAMIC MEMORY: 20346 WORDS (78 PAGES)
ELAPSED TIME: 00:17:56
CVTSEA0,CVTSEA0/-SP= SVC34R/ML,TSV1E,CVTSEA.SRC/EN:AMA:ABS/DS:GBL