

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38

.REM 6

IDENTIFICATION

PRODUCT CODE: AC-T704B-MC
PRODUCT NAME: CZKDJB0 KDJ11 CPU DIAGNOSTIC
PRODUCT DATE: 15-MAR-84
MAINTAINER: DIAGNOSTIC ENGINEERING
AUTHORS: HENRY ENMAN, JIM PITTMAN, BARRY IRRGANG

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION. DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR ANY ERRORS THAT MAY APPEAR IN THIS DOCUMENT.

NO RESPONSIBILITY IS ASSUMED FOR THE USE OR RELIABILITY OF SOFTWARE ON EQUIPMENT THAT IS NOT SUPPLIED BY DIGITAL OR ITS AFFILIATED COMPANIES.

COPYRIGHT (C) 1983, 1984 BY DIGITAL EQUIPMENT CORPORATION

THE FOLLOWING ARE TRADEMARKS OF DIGITAL EQUIPMENT CORPORATION:

DIGITAL	PDP	UNIBUS	MASSBUS
DEC	DECUS	DECTAPE	

6

.REM 6

HISTORY

39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65

OCT-83 REV. A
FEB-84 REV. B

FIRST RELEASE
CORRECTIONS MADE TO:
1. CORRECT VECTOR AREA MAINTENANCE PROBLEM
2. SET APT SWR TO 2000 SO THAT DEFAULT IS TO NOT TEST BEVENT WHEN IN APT ENVIRONMENT.
3. PREVENT #TESTN FROM GETTING OUT OF SYNC WHEN SKIPPING DESELECTED TESTS.
4. PREVENT EXECUTION OF RESET INSTRUCTION TEST WHEN IN APT ENVIRONMENT.
5. CHANGE MARK INSTRUCTION TEST.
6. TURN CACHE MEMORY SYSTEM OFF DURING NON-CACHE TESTS.
7. ENSURE THAT CPU ERROR REGISTER IS CLEARED AFTER COMPLETION OF TEST THAT MIGHT CAUSE IT TO BE SET.
8. SAVE PC AND CONTENTS OF R6 ON UNEXPECTED INTERRUPTS

ADDITIONAL TESTS TO IMPROVE TEST COVERAGE INCLUDE:
1. RED ZONE TRAP TEST
2. I/O TIME OUT TRAP TEST
3. ODD ADDRESS TRAP TEST
4. PRE-FETCH BUFFER INVALIDATION TEST
5. TEST FOR SLOW C BIT ON ROR, ROL AND SXT INSTRUCTIONS
6. WAIT INSTRUCTION TEST WHEN BEVENT TEST IS SELECTED

6

66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83

.REM 6

TABLE OF CONTENTS

- 1.0 GENERAL INFORMATION
- 1.1 PROGRAM ABSTRACT
- 1.2 SYSTEM REQUIREMENTS
- 1.3 RELATED DOCUMENTS AND STANDARDS
- 1.4 DIAGNOSTIC HIERARCHY PREREQUISITES
- 1.5 ASSUMPTIONS
- 2.0 OPERATING INSTRUCTIONS
- 3.0 ERROR INFORMATION

6

.REM 8

84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139

1.0 GENERAL INFORMATION

1.1 PROGRAM ABSTRACT

THIS IS AN APT COMPATIBLE VERSION OF THE KDJ11 CPU DIAGNOSTIC.
IT FOCUSES ON TESTING THE KDJ11 BASIC INSTRUCTION SET INCLUDING
EIS, TRAPS AND THE ALTERNATE REGISTER SET.

1.2 SYSTEM REQUIREMENTS

KDJ11-A PROCESSOR MODULE
ENSURE THAT HALT TRAP OPTION IS DISABLED (JUMPER W9 INSTALLED)
32KW MEMORY
Q-22 BACKPLANE (18 BIT QBUS MAY BE USED WITH REDUCED TEST COVERAGE)
SERIAL LINE UNIT AND CONSOLE TERMINAL (CONSOLE TERMINAL NOT REQUIRED FOR APT)

1.3 RELATED DOCUMENTS AND STANDARDS

KDJ11-A MODULE SPECIFICATION REV 2.2
PDP11 MAINDEC SYSMAC PACKAGE
J11 CONTROL CHIP SPECIFICATION 21-17679-00
J11 DATA CHIP SPECIFICATION 21-17677-00

1.4 DIAGNOSTIC HIERARCHY PREREQUISITES

NONE

1.5 ASSUMPTIONS

IT IS ASSUMED THAT THE DIAGNOSTIC OPERATOR IS FAMILIAR WITH
THE XXDP+ OPERATING SYSTEM AND THE J11 MICRO-ODT.


2.0 OPERATING INSTRUCTIONS

2.1 LOADING AND STARTING PROCEEDURE

LOAD PROGRAM INTO MEMORY USING STANDARD XXDP+ PROCEEDURES.
THE PROGRAM IS STARTED BY LOADING ADDRESS 200 AND USING
THE J11 MICRO-ODT G COMMAND TO START. THE PROGRAM
IDENTIFICATION MESSAGE WILL BE TYPED AFTER THE FIRST PASS
OF THE COMPLETE PROGRAM.

2.2 PROGRAM OPTIONS

THE FOLLOWING ASSIGNMENTS HAVE BEEN MADE FOR THE KDJ11-A
DIAGNOSTIC SWITCH REGISTER BITS:

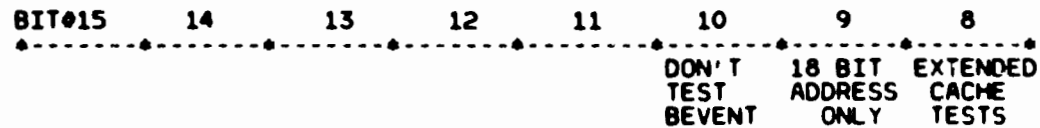

140
 141
 142
 143
 144
 145
 146
 147
 148
 149
 150
 151
 152
 153
 154
 155
 156
 157
 158
 159
 160
 161
 162
 163
 164
 165
 166
 167
 168
 169
 170
 171
 172
 173
 174
 175
 176
 177
 178
 179
 180
 181
 182
 183
 184
 185
 186
 187
 188
 189
 190
 191
 192

 ----------*-----*-----*-----*-----*-----*
 DEFAULT SETTINGS ARE TO TEST BEVENT, THE OTHER BITS HAVE NO
 EFFECT ON THE OPERATION OF THE CPU TEST.

TO CHANGE THE SWITCH REGISTER, HALT THE PROGRAM, LOAD THE SOFTWARE
 SWITCH REGISTER (ADDRESS 176) WITH THE DESIRED OPTIONS AND RESTART
 THE PROGRAM USING THE J11 MICRO ODT P COMMAND.

2.2 OPERATION UNDER APT

OPERATION IN THE APT ENVIRONMENT REQUIRES SOME SPECIAL CONSIDERA-
 TIONS DUE TO THE ASYNCHRONOUS HALTS OF THE DIAGNOSTIC BY THE APT
 MONITOR. IF THE EFFECTS OF THESE HALTS ARE NOT ANTICIPATED, FALSE
 ERRORS MAY BE REPORTED. THEREFORE, WHEN OPERATING IN THE APT ENVIRON-
 MENT THE FOLLOWING DIFFERENCES IN THE EXECUTION OF THE PROGRAM SHOULD
 BE NOTED:

1. THE RESET INSTRUCTION TEST IS NOT EXECUTED
2. BIT 10 IN THE SOFTWARE SWITCH REGISTER IS SET SO THAT BEVENT
 IS NOT TESTED UNDER APT.
3. THE SERIAL LINE UNIT INTERRUPT TEST IS EXECUTED ONLY ON THE
 FIRST PASS OF THE PROGRAM.
4. RED ZONE TRAP TEST CHECKS FOR APT ENVIRONMENT BEFORE CALLING
 ERROR ROUTINE. IF IN APT MODE AND AN ERROR OCCURS, IT WILL RETRY
 TEST ONE MORE TIME. IF IT PASSES ON SECOND ATTEMPT, THEN FIRST
 ERROR WILL BE CONSIDERED TO BE APT INDUCED.

3.0 ERROR INFORMATION

ALL ERRORS WILL HALT AFTER REPORTING TO APT. ERRORS RELATING
 TO BOARD TESTS WILL PRINT THE FOLLOWING ERROR MESSAGE:

ERROR WHILE TESTING BOARD FUNCTIONS
 ERROR # = (UNIQUE ERROR NUMBER)
 ERROR PC = (PC AT TIME OF ERROR)

ERRORS RELATED TO CPU TESTS WILL PRINT THE FOLLOWING MESSAGE.

ERROR DURING CPU TESTS
 ERROR # = (UNIQUE ERROR NUMBER)
 ERROR PC = (PC AT TIME OF ERROR)

4.0 PROGRESS REPORT

AT THE END OF EACH PASS THE DIAGNOSTIC NAME AND PASS COUNT ARE PRINTED.

PROGRAM HEADER AND TABLES
 KDJ11A.MAC 22-FEB 84 15:12

MACY1: 30A(1052) 15-MAR-84 13:28 PAGE 6

SEQ 0006

193
 194
 195
 196
 197
 198
 199
 200
 201
 202
 203
 204
 205
 206
 207
 208
 209
 210
 211
 212
 213

000001
 160000

.TITLE PROGRAM HEADER AND TABLES
 .SBTTL PROGRAM HEADER

.MCALL NEWTST,ERRDEF, .EQUAT, .KT11, .#40CAT, .#EOP, .#APTBL5,SETUF
 .MCALL .#TYPE, .#TYPDEC,ERRDF,BGNTST,ENDTST,BGNMOD,ENDMOD,CKLOOP
 .MCALL .HEADER, .SETUP, .#TRAP,BGNSUB,ENDSUB, .#ACT11, .#APTHOR
 .MCALL .#ATYPE, .#ERROR, .#TYPOCT, .#READ

.TITLE KDJ11-A CPU DIAGNOSTIC

;*COPYRIGHT (C) OCTOBER,1983

;*DIGITAL EQUIPMENT CORP.

;*MAYNARD, MASS. 01754

;*
 ;*

;*THIS PROGRAM WAS ASSEMBLED USING THE PDP-11 MAINDEC SYSMAC

;*PACKAGE (MAINDEC-11-DZQAC-C3), JAN 19, 1977.

;*
 ;*

;\$TN=1

;\$SWR=160000 ;;HALT ON ERROR, LOOP ON TEST, INHIBIT ERROR TYP0UT

```

214 .TITLE GLOBAL AREAS
215 .SBTTL GLOBAL EQUATES SECTION
216
217 ***
218 ; THE GLOBAL EQUATES SECTION CONTAINS PROGRAM EQUATES THAT
219 ; ARE USED IN MORE THAN ONE TEST.
220 ;--
221 .SBTTL BASIC DEFINITIONS
222
223 ;*INITIAL ADDRESS OF THE STACK POINTER *** 1000 ***
224 STACK= 1000
225 .EQUIV EMT,ERROR ;:BASIC DEFINITION OF ERROR CALL
226 .EQUIV IOT,SCOPE ;:BASIC DEFINITION OF SCOPE CALL
227
228 ;*MISCELLANEOUS DEFINITIONS
229 HT= 11 ;:CODE FOR HORIZONTAL TAB
230 LF= 12 ;:CODE FOR LINE FEED
231 CR= 15 ;:CODE FOR CARRIAGE RETURN
232 CRLF= 200 ;:CODE FOR CARRIAGE RETURN-LINE FEED
233 PS= 177776 ;:PROCESSOR STATUS WORD
234 .EQUIV PS,PSW
235 STKLMT= 177774 ;:STACK LIMIT REGISTER
236 PIRQ= 177772 ;:PROGRAM INTERRUPT REQUEST REGISTER
237 DSWR= 177570 ;:HARDWARE SWITCH REGISTER
238 DDISP= 177570 ;:HARDWARE DISPLAY REGISTER
239
240 ;*GENERAL PURPOSE REGISTER DEFINITIONS
241 R0= #0 ;:GENERAL REGISTER
242 R1= #1 ;:GENERAL REGISTER
243 R2= #2 ;:GENERAL REGISTER
244 R3= #3 ;:GENERAL REGISTER
245 R4= #4 ;:GENERAL REGISTER
246 R5= #5 ;:GENERAL REGISTER
247 R6= #6 ;:GENERAL REGISTER
248 R7= #7 ;:GENERAL REGISTER
249 SP= #6 ;:STACK POINTER
250 PC= #7 ;:PROGRAM COUNTER
251
252 ;*PRIORITY LEVEL DEFINITIONS
253 PR0= 0 ;:PRIORITY LEVEL 0
254 PR1= 40 ;:PRIORITY LEVEL 1
255 PR2= 100 ;:PRIORITY LEVEL 2
256 PR3= 140 ;:PRIORITY LEVEL 3
257 PR4= 200 ;:PRIORITY LEVEL 4
258 PR5= 240 ;:PRIORITY LEVEL 5
259 PR6= 300 ;:PRIORITY LEVEL 6
260 PR7= 340 ;:PRIORITY LEVEL 7
261
262 ;*"SWITCH REGISTER" SWITCH DEFINITIONS
263 SW15= 100000
264 SW14= 40000
265 SW13= 20000
266 SW12= 10000
267 SW11= 4000
268 SW10= 2000
269 SW09= 1000

```

```

270      000400      SW08= 400
271      000200      SW07= 200
272      000100      SW06= 100
273      000040      SW05= 40
274      000020      SW04= 20
275      000010      SW03= 10
276      000004      SW02= 4
277      000002      SW01= 2
278      000001      SW00= 1
279      .EQUIV SW09,SW9
280      .EQUIV SW08,SW8
281      .EQUIV SW07,SW7
282      .EQUIV SW06,SW6
283      .EQUIV SW05,SW5
284      .EQUIV SW04,SW4
285      .EQUIV SW03,SW3
286      .EQUIV SW02,SW2
287      .EQUIV SW01,SW1
288      .EQUIV SW00,SW0
289
290      ;*DATA BIT DEFINITIONS (BIT00 TO BIT15)
291      100000      BIT15= 100000
292      040000      BIT14= 40000
293      020000      BIT13= 20000
294      010000      BIT12= 10000
295      004000      BIT11= 4000
296      002000      BIT10= 2000
297      001000      BIT09= 1000
298      000400      BIT08= 400
299      000200      BIT07= 200
300      000100      BIT06= 100
301      000040      BIT05= 40
302      000020      BIT04= 20
303      000010      BIT03= 10
304      000004      BIT02= 4
305      000002      BIT01= 2
306      000001      BIT00= 1
307      .EQUIV BIT09,BIT9
308      .EQUIV BIT08,BIT8
309      .EQUIV BIT07,BIT7
310      .EQUIV BIT06,BIT6
311      .EQUIV BIT05,BIT5
312      .EQUIV BIT04,BIT4
313      .EQUIV BIT03,BIT3
314      .EQUIV BIT02,BIT2
315      .EQUIV BIT01,BIT1
316      .EQUIV BIT00,BIT0
317
318      ;*BASIC "CPU" TRAP VECTOR ADDRESSES
319      000004      ERRVEC= 4          ;:TIME OUT AND OTHER ERRORS
320      000010      RESVEC= 10       ;:RESERVED AND ILLEGAL INSTRUCTIONS
321      000014      TBITVEC=14       ;:"T" BIT
322      000014      TRTVEC= 14       ;:TRACE TRAP
323      J00014      BPTVEC= 14       ;:BREAKPOINT TRAP (BPT)
324      000020      IOTVEC= 20       ;:INPUT/OUTPUT TRAP (IOT) **SCOPE**
325      000024      PWRVEC= 24       ;:POWER FAIL

```



```

326      000030      EMTVEC= 30          ;;EMULATOR TRAP (EMT) **ERROR**
327      000034      TRAPVEC=34         ;;"TRAP" TRAP
328      000060      TKVEC= 60          ;;TTY KEYBOARD VECTOR
329      000064      TPVEC= 64          ;;TTY PRINTER VECTOR
330      000240      PIRQVEC=240       ;;PROGRAM INTERRUPT REQUEST VECTOR
331      .SBTTL      MEMORY MANAGEMENT DEFINITIONS
332
333      ;*KT11 VECTOR ADDRESS
334
335      000250      MMVEC= 250
336
337      ;*KT11 STATUS REGISTER ADDRESSES
338
339      177572      SR0= 177572
340      177574      SR1= 177574
341      177576      SR2= 177576
342      172516      SR3= 172516
343
344      ;*USER "I" PAGE DESCRIPTOR REGISTERS
345
346      177600      UIPDR0= 177600
347      177602      UIPDR1= 177602
348      177604      UIPDR2= 177604
349      177606      UIPDR3= 177606
350      177610      UIPDR4= 177610
351      177612      UIPDR5= 177612
352      177614      UIPDR6= 177614
353      177616      UIPDR7= 177616
354
355      ;*USER "D" PAGE DESCRIPTOR REGISTERS
356
357      177620      UDPDR0= 177620
358      177622      UDPDR1= 177622
359      177624      UDPDR2= 177624
360      177626      UDPDR3= 177626
361      177630      UDPDR4= 177630
362      177632      UDPDR5= 177632
363      177634      UDPDR6= 177634
364      177636      UDPDR7= 177636
365
366      ;*USER "I" PAGE ADDRESS REGISTERS
367
368      177640      UIPAR0= 177640
369      177642      UIPAR1= 177642
370      177644      UIPAR2= 177644
371      177646      UIPAR3= 177646
372      177650      UIPAR4= 177650
373      177652      UIPAR5= 177652
374      177654      UIPAR6= 177654
375      177656      UIPAR7= 177656
376
377      ;*USER "D" PAGE ADDRESS REGISTERS
378
379      177660      UOPAR0= 177660
380      177662      UOPAR1= 177662
381      177664      UOPAR2= 177664

```

382	177666	UDPAR3= 177666
383	177670	UDPAR4= 177670
384	177672	UDPAR5= 177672
385	177674	UDPAR6= 177674
386	177676	UDPAR7= 177676
387		
388		;*SUPERVISOR "I" PAGE DESCRIPTOR REGISTERS
389		
390	172200	SIPDR0= 172200
391	172202	SIPDR1= 172202
392	172204	SIPDR2= 172204
393	172206	SIPDR3= 172206
394	172210	SIPDR4= 172210
395	172212	SIPDR5= 172212
396	172214	SIPDR6= 172214
397	172216	SIPDR7= 172216
398		
399		;*SUPERVISOR "D" PAGE DESCRIPTOR REGISTERS
400		
401	172220	SDPDR0= 172220
402	172222	SDPDR1= 172222
403	172224	SDPDR2= 172224
404	172226	SDPDR3= 172226
405	172230	SDPDR4= 172230
406	172232	SDPDR5= 172232
407	172234	SDPDR6= 172234
408	172236	SDPDR7= 172236
409		
410		;*SUPERVISOR "I" PAGE ADDRESS REGISTERS
411		
412	172240	SIPAR0= 172240
413	172242	SIPAR1= 172242
414	172244	SIPAR2= 172244
415	172246	SIPAR3= 172246
416	172250	SIPAR4= 172250
417	172252	SIPAR5= 172252
418	172254	SIPAR6= 172254
419	172256	SIPAR7= 172256
420		
421		;*SUPERVISOR "D" PAGE ADDRESS REGISTERS
422		
423	172260	SDPAR0= 172260
424	172262	SDPAR1= 172262
425	172264	SDPAR2= 172264
426	172266	SDPAR3= 172266
427	172270	SDPAR4= 172270
428	172272	SDPAR5= 172272
429	172274	SDPAR6= 172274
430	172276	SDPAR7= 172276
431		
432		;*KERNEL "I" PAGE DESCRIPTOR REGISTERS
433		
434	172300	KIPDR0= 172300
435	172302	KIPDR1= 172302
436	172304	KIPDR2= 172304
437	172306	KIPDR3= 172306

```

438          172310          KIPDR4= 172310
439          172312          KIPDR5= 172312
440          172314          KIPDR6= 172314
441          172316          KIPDR7= 172316
442
443          ;*KERNEL "D" PAGE DESCRIPTOR REGISTERS
444
445          172320          KDPDR0= 172320
446          172322          KDPDR1= 172322
447          172324          KDPDR2= 172324
448          172326          KDPDR3= 172326
449          172330          KDPDR4= 172330
450          172332          KDPDR5= 172332
451          172334          KDPDR6= 172334
452          172336          KDPDR7= 172336
453
454          ;*KERNEL "I" PAGE ADDRESS REGISTERS
455
456          172340          KIPAR0= 172340
457          172342          KIPAR1= 172342
458          172344          KIPAR2= 172344
459          172346          KIPAR3= 172346
460          172350          KIPAR4= 172350
461          172352          KIPAR5= 172352
462          172354          KIPAR6= 172354
463          172356          KIPAR7= 172356
464
465          ;*KERNEL "D" PAGE ADDRESS REGISTERS
466
467          172360          KDPAR0= 172360
468          172362          KDPAR1= 172362
469          172364          KDPAR2= 172364
470          172366          KDPAR3= 172366
471          172370          KDPAR4= 172370
472          172372          KDPAR5= 172372
473          172374          KDPAR6= 172374
474          172376          KDPAR7= 172376
475
476          ;THESE ARE FLOATING POINT ACCUMULATOR EQUATES
477          000000          AC0=    #0
478          000001          AC1=    #1
479          000002          AC2=    #2
480          000003          AC3=    #3
481          000004          AC4=    #4
482          000005          AC5=    #5
483          000006          AC6=    #6
484          000007          AC7=    #7
485
486          000244          FPVEC=  244
487
488          ;THESE ARE CACHE REGISTER EQUATES
489          177746          CCR=    177746          ;CACHE CONTROL REGISTER
490          177744          MSER=   177744          ;MEMORY SYSTEM ERROR REGISTER
491          177752          HITMIS= 177752          ;HIT/MISS REGISTER
492          177766          CPereg= 177766          ;CPU ERROR REGISTER
493

```

```

494      ;MISCELLANEOUS DEFINITIONS
495      BEVENT= 177546      ;BEVENT CONTROL REGISTER
496      RCSR= 177560
497      RBUF= 177562
498      XCSR= 177564
499      XBUF= 177566
500      ERRTN= HALT
501      $TSTNU=1
502      ERRNUM= 1          ;INITIALIZE ERROR NUMBER COUNTER
503      AUSWR= 2000      ;SWR FOR APT--NO BEVENT TESTING
504
505
506      ;THIS EQUATE DEFINES THE BOTTOM OF THE PROGRAM STACK POINTER
507      STBOT= 1000
508      .ASECT
509      .SBTTL TRAP CATCHER
510
511      .=0
512      ;*ALL UNUSED LOCATIONS OF THE VECTOR AREA CONTAIN
513      ;*A ".+2, IOT" SEQUENCE TO CATCH AND PROCESS ILLEGAL
514      ;*TRAPS AND INTERRUPTS THAT MIGHT OCCUR.
515      ;*THE IOT TRAP WHICH IS TAKEN ON THE ILLEGAL TRAP/INT
516      ;*TRAPS TO THE $SCOPE ROUTINE WHICH (IF THE RETURN PC IS
517      ;*LESS THAN 1002) JUMPS TO THE $ERROR ROUTINE.
518      ;*THE $ERROR ROUTINE WILL REPORT THE ERROR AS FOLLOWS:
519      ;*   PC=YYYYYY UNEXPECTED TRAP TO XXX
520      ;*AND RETURN TO THE PROGRAM AT PC=YYYYYYY+2
521      ;*WHERE XXX=LOCATION OF ILLEGAL TRAP
522      ;*   YYYYYY=PC AT TIME OF TRAP
523      ;*NOTE: IF THE PROCESSOR IS NOT AN 11/05 THE PROGRAM
524      ;*   CAN BE STARTED AT ADDRESS 0 AS WELL AS ADDRESS 200.
525
526      000000 000000      $40CAT: HALT          ;;HALT
527      000002 000737      BR          .-100      ;;BRANCH TO 177700 & TIME OUT (NOT ON
528                                     ;;11/05)
529      000004 001266      .WORD START          ;;VECTOR TO STARTING ADDRESS
530      000006 000340      .WORD 340          ;;WITH PRIORITY LEVEL 7
531                                     .=174
532      000174 000000      DISPREG: .WORD 0      ;;SOFTWARE DISPLAY REGISTER
533      000176 000000      SWREG: .WORD 0      ;;SOFTWARE SWITCH REGISTER
534      .SBTTL STARTING ADDRES(ES)
535      000200 000137 001266      JMP B$START ;;GO TO START OF PROGRAM
536      .SBTTL ACT11 HOOKS
537
538      ;*****
539      ;HOOKS REQUIRED BY ACT11
540      000204      $SVPC=.          ;SAVE PC
541      000046      .=46
542      000046 042016      $ENDAD          ;;1)SET LOC.46 TO ADDRESS OF $ENDAD IN .$EOP
543      000052      .=52
544      000052      .WORD 0          ;;2)SET LOC.52 TO ZERO
545      000204      .=$SVPC          ;; RESTORE PC
546      .SBTTL APT PARAMETER BLOCK
547
548      ;*****
549      ;SET LOCATIONS 24 AND 44 AS REQUIRED FOR APT

```

```

550                                     ;*****
551          000204                    .#X=  ;SAVE CURRENT LOCATION
552          000024                    .=24  ;SET POWER FAIL TO POINT TO START OF PROGRAM
553 000024  000200                    200   ;OR APT START UP
554          000044                    .=44  ;POINT TO APT INDIRECT ADDRESS PNTR.
555 000044  000204                    #APTHDR ;POINT TO APT HEADER BLOCK
556          000204                    .=#X  ;RESET LOCATION COUNTER
557                                     ;*****
558 ;SETUP APT PARAMETER BLOCK AS DEFINED IN THE APT-PDP11 DIAGNOSTIC
559 ;INTERFACE SPEC.
560
561 000204  #APTHD:
562 000204  000000 #HIBTS: .WORD 0 ;TWO HIGH BITS OF 18 BIT MAILBOX ADDR.
563 000206  001000 #MBADR: .WORD #MAIL ;ADDRESS OF APT MAILBOX (BITS 0-15)
564 000210  000001 #TSTM: .WORD 1 ;RUN TIM OF LONGEST TEST
565 000212  000002 #PASTM: .WORD 2 ;RUN TIME IN SECS. OF 1ST PASS ON 1 UNIT (QUICK VERIFY)
566 000214  000000 #UNITH: .WORD 0 ;ADDITIONAL RUN TIME (SECS) OF A PASS FOR EACH ADDITIONAL UNIT
567 000216  000014 .WORD #ETEND-#MAIL/2 ;LENGTH MAILBOX-ETABLE(WORDS)
568          000204                    .=#X  ;SAVE CURRENT LOCATION COUNT
569          000002                    .=2
570 000002  0
571 000004  6
572 000006  4 ;SET UP SOME VECTORS
573          000204                    .=#X  ;RESTORE LOCATION COUNT
574          001000                    .=1000
    
```

```

575 .SBTTL GLOBAL DATA SECTION
576
577 ;*
578 ; THE GLOBAL DATA SECTION CONTAINS DATA THAT ARE USED
579 ; IN MORE THAN ONE TEST.
580 ;**
581 .SBTTL APT MAILBOX-ETABLE
582
583 ;*****
584 .EVEN
585 #MAIL: .WORD .WORD .WORD ; APT MAILBOX
586 #MSGTY: .WORD AMSGTY ; MESSAGE TYPE CODE
587 #FATAL: .WORD AFATAL ; FATAL ERROR NUMBER
588 #TESTN: .WORD ATESTN ; TEST NUMBER
589 #PASS: .WORD APASS ; PASS COUNT
590 #DEVCT: .WORD ADEVCT ; DEVICE COUNT
591 #UNIT: .WORD AUNIT ; I/O UNIT NUMBER
592 #MSGAD: .WORD AMSGAD ; MESSAGE ADDRESS
593 #MSGLG: .WORD AMSGLG ; MESSAGE LENGTH
594 #ETABLE: .WORD .WORD ; APT ENVIRONMENT TABLE
595 #ENV: .BYTE AENV ; ENVIRONMENT BYTE
596 #ENVN: .BYTE AENVN ; ENVIRONMENT MODE BITS
597 #SWREG: .WORD ASWREG ; APT SWITCH REGISTER
598 #USMR: .WORD AUSMR ; USER SWITCHES
599 #CPUOP: .WORD ACPUOP ; CPU TYPE, OPTIONS
600 ;*
601 ;* 11/04-01,11/05-02,11/20-03,11/40-04,11/45-05
602 ;* 11/70-06,PDQ=07,Q=10
603 ;* BIT 10-REAL TIME CLOCK
604 ;* BIT 9-FLOATING POINT PROCESSOR
605 ;* BIT 8-MEMORY MANAGEMENT
606 #ETEND:
607 .MEXIT
608
609 ; THESE LOCATIONS ARE USED IN MORE THAN ONE TEST TO STORE VECTOR DATA
610 ; WHEN THE TEST NEEDS TO HAVE AN ERROR CONDITION RESPOND DIFFERENTLY
611 ; FROM THE DEFAULT RESPONCE.
612 #SLOC00: .WORD 0
613 #SLOC01: .WORD 0
614
615 ; THESE LOCATIONS ARE USED IN MORE THAN ONE TEST TO STORE WORKING DATA.
616 #EXPDAT: .WORD 0 ; STORES EXPECTED (GOOD) DATA FOR COMPARISONS
617 #RECDAT: .WORD 0 ; STORES RECIEVED DATA TO BE VERIFIED
618 #COUNT: .WORD 0 ; ERROR INDICATOR FOR FLOATING POINT TESTS
619 #FLAG: .WORD 0 ; USED TO STORE "FLAG" CONDITIONS
620 #ERRCNT: .WORD 0 ; STORAGE FOR ERROR COUNT
621 #SMR: .WORD DSMR ; STORAGE FOR SWITCH REGISTER ADDRESS
622 #DISPLAY: .WORD DDISP ; STORAGE FOR DISPLAY REGISTER ADDRESS
623 #ERFLG: .WORD 0 ; ERROR FLAG
624 ; THESE LOCATIONS ARE USED BY MORE THAN ONE TEST AS LOOP COUNTERS
625 #DCOUNT: .WORD 0
626 #ALLCTR: .WORD 0
627 #LOOPIN: .WORD 0
628 #SAVSP1: .WORD 0 ; STORAGE FOR UNEXPECTED TRAP DATA
629 #SAVSP2: .WORD 0 ; " " " "
630

```

```

631
632
633
634
635 001066 000000      SEQ:  .WORD  0          ;STORES SEQUENCE NUMBER FOR JUMP TESTS
636 001070 000000      SPS:  .WORD  0          ;STORES STACK POINTER FOR JUMP TESTS
637 001072 000000      SPSJ: .WORD  0          ;STORES STACK POINTER FOR JUMP TESTS
638
639
640
641 001074 177777      WAITIN: .WORD  177777
642
643                    ;!!!!!!THIS IS IT. THE PROGRAM TEST LOCATION AND WRITE BUFFER!!!!!!!!!!!!!!!!!!!!!!
644 001076
645 001076 000002      TSTLOC: .BLKW  2

```

```

646 .SBTTL GLOBAL TEXT SECTION
647
648 ;*
649 ; THE GLOBAL TEXT SECTION CONTAINS FORMAT STATEMENTS,
650 ; MESSAGES, AND ASCII INFORMATION THAT ARE USED IN
651 ; MORE THAN ONE TEST.
652 ;--
653
654 ;
655 ; FORMAT STATEMENTS USED IN PRINT CALLS
656 ;
657
658 001102 005015 040503 044103 ERRMSG: .ASCIZ <CR><LF>/CACHE SYSTEM ERROR/
659 001110 020105 054523 052123
660 001116 046505 042440 051122
661 001124 051117 000
662 001127 015 042412 051122 CPUERR: .ASCIZ <CR><LF>/ERROR DURING CPU TESTS/
663 001134 051117 042040 051125
664 001142 047111 020107 050103
665 001150 020125 042524 052123
666 001156 000123
667 001160 005015 051105 047522 BRDERR: .ASCIZ <CR><LF>/ERROR WHILE TESTING BOARD FUNCTIONS/
668 001166 020122 044127 046111
669 001174 020105 042524 052123
670 001202 047111 020107 047502
671 001210 051101 020104 052506
672 001216 041516 044524 047117
673 001224 000123
674 001226 005015 051105 047522 ERR1: .ASCIZ <CR><LF>/ERROR # =/
675 001234 020122 020043 000075
676 001242 005015 051105 047522 ERR2: .ASCIZ <CR><LF>/ERROR PC =/
677 001250 020122 041520 036440
678 001256 000
679 001257 015 020012 020040 #CRLF: .ASCIZ <CR><LF>/ /
680 001264 000
681 001266 .EVEN

```


E2

GLOBAL AREAS MACY11 30A(1052) 15-MAR-84 13:28 PAGE 17
KDJ11A.MAC 22-FEB-84 15:12 GLOBAL ERROR REPORT SECTION

SEQ 0017

682
683
684
685
686
687
688

.SBTTL GLOBAL ERROR REPORT SECTION

!++
! THE GLOBAL ERROR REPORT SECTION CONTAINS MESSAGE PRINTING AREAS
! USED BY MORE THAN TEST TO OUTPUT ADDITIONAL ERROR INFORMATION.
!--

GLOBAL AREAS MACY11 30A(1052) 15-MAR-84 13:28 PAGE 18
KDJ11A.MAC 22-FEB-84 15:12 GLOBAL SUBROUTINES SECTION

689
690
691
692
693
694

.SBTTL GLOBAL SUBROUTINES SECTION

!++
! THE GLOBAL SUBROUTINES SECTION CONTAINS THE SUBROUTINES
! THAT ARE USED IN MORE THAN ONE TEST.
!--

```

695 001266          START:
696 001266 012737 000014 177746      MOV    #14,#CCR          ;SET CACHE TO FORCE MISS
697                                .SBTTL INITIALIZE THE COMMON TAGS
698 001274 012706 001000          MOV    #STACK,SP        ;SETUP THE STACK POINTER
699                                ;INITIALIZE A FEW VECTORS
700 001300 012737 043470 000030      MOV    #ERROR,#EMTVEC   ;EMT VECTOR FOR ERROR ROUTINE
701 001306 012737 000340 000032      MOV    #340,#EMTVEC+2  ;LEVEL 7
702 001314 012737 043152 000034      MOV    #TRAP,#TRAPVEC  ;TRAP VECTOR FOR TRAP CALLS
703 001322 012737 000340 000036      MOV    #340,#TRAPVEC+2;LEVEL 7
704 001330 005067 177452          CLR    #PASS           ;CLEAR THE PASS COUNT
705 001334 016767 040424 040414      MOV    #ENDCT,#EOPCT   ;SETUP END-OF-PROGRAM COUNTER
706 001342 105067 177504          CLR    #ERFLG         ;CLEAR THE ERROR FLAG
707                                ;SIZE FOR A HARDWARE SWITCH REGISTER, IF NOT FOUND OR IT IS
708                                ;EQUAL TO A "-1", SETUP FOR A SOFTWARE SWITCH REGISTER.
709 001346 013746 000004          MOV    #ERRVEC,-(SP)   ;SAVE ERROR VECTOR
710 001352 012737 001406 000004      MOV    #64,#ERRVEC     ;SET UP ERROR VECTOR
711 001360 012767 177570 177460      MOV    #SWR,SWR        ;SETUP FOR A HARDWARE SWICH REGISTER
712 001366 012767 177570 177454      MOV    #DISP,DISPLAY   ;AND A HARDWARE DISPLAY REGISTER
713 001374 022777 177444          CMP    #-1,#SWR        ;TRY TO REFERENCE HARDWARE SWR
714 001402 001012          BNE    66#           ;BRANCH IF NO TIMEOUT TRAP OCCURRED
715                                ;AND THE HARDWARE SWR IS NOT = -1
716 001404 000403          BR    65#           ;BRANCH IF NO TIMEOUT
717 001406 012716 001414          64#: MOV    #65#,(SP)     ;SET UP FOR TRAP RETURN
718 001412 000002          RTI
719 001414 012767 000176 177424          65#: MOV    #SWREG,SWR   ;POINT TO SOFTWARE SWR
720 001422 012767 000174 177420          MOV    #DISPREG,DISPLAY
721 001430 012637 000004          66#: MOV    (SP)+,#ERRVEC ;RESTORE ERROR VECTOR
722
723                                .MACRO  ##SETMAIL    ?#ARG1
724                                CLR    #PASS           ;CLEAR PASS COUNT
725                                BITB   #APTSIZE,#ENVM    ;TEST USER SIZE UNDER APT
726                                BEQ    #ARG1          ;YES,USE NON-APT SWITCH
727                                MOV    ##SWREG,SWR     ;NO,USE APT SWITCH REGISTER
728                                #ARG1:
729                                .ENDM
730 001434 005067 177346          ##SETMAIL
731 001440 132767 000200 177353          CLR    #PASS           ;CLEAR PASS COUNT
732 001446 001403          BITB   #APTSIZE,#ENVM    ;TEST USER SIZE UNDER APT
733 001450 012767 001022 177370          BEQ    67#           ;YES,USE NON-APT SWITCH
734 001456          MOV    ##SWREG,SWR     ;NO,USE APT SWITCH REGISTER
735 001456 012737 043470 000020          67#: MOV    #ERROR,#IOTVEC   ;SET UP IOT VECTORS
736 001464 012737 000340 000022          MOV    #340,#IOTVEC+2 ;TO GO TO ERROR ROUTINE
737 001472 005037 177766          CLR    #177766       ;CLEAR CPU ERROR REGISTER
738 001476 005067 177302          RESTART: CLR #TESTN   ;RESET #TESTN TO ZERO
739 001502 012737 000014 177746          MOV    #14,#CCR      ;SET CACHE TO FORCE MISS
740
741                                .SBTTL  BASE INSTRUCTION SET TESTS
742                                ;*****
743                                ;*****
744                                ;          BEGIN BASE INSTRUCTION SET TESTING
745                                ;*****
746                                ;*****
747 001510          FRSTST:
748                                ;*****
749                                ;#TEST 1      TEST BEQ BNE INSTRUCTIONS
750                                ;*****

```

```

751
752
753 001510
754 001510 005267 177270
755 001514 000277
756 001516 000244
757 001520 001401
758 001522 001003
759
760
761
762
763
764 001524
765 001524 104000
766 001526 000001
767 001530 001127
768 001532 000257
769 001534 000264
770 001536 001001
771 001540 001403
772
773 001542
774 001542 104000
775 001544 000002
776 001546 001127
777 001550
778
779 001550
780
781
782
783
784
785 001550
786 001550 005267 177230
787 001554 000257
788 001556 103003
789
790 001560
791 001560 104000
792 001562 000003
793 001564 001127
794 001566 000261
795 001570 103403
796
797 001572
798 001572 104000
799 001574 000004
800 001576 001127
801 001600
802
803 001600
804
805
806

```

```

;THESE TWO INSTRUCTIONS ARE FUNDAMENTAL TO RECOGNIZING ERROR CONDITIONS
;*****
TST1:
      INC      $TESTN      ;INCREMENT TEST NUMBER
      SCC
      CLZ
      BEQ      1$
      BNE      2$
;CC=0100 - Z BIT CLEARED
; *TEST INSTR -TRY TO CAUSE A BEQ ERROR
;BRANCH IF GOOD
;THE Z FLAG DIDNT CLEAR OR BRANCH FAILED.
;FAILURE AT THIS LOCATION
;COULD MEAN A BUS PROBLEM, MICRO-CODE PROBLEM
;CONDITION CODE PROBLEM OR JUST ABOUT ANYTHING
;ELSE.
1$:
      ERROR
      .WORD    1
      .WORD    CPUERR
;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE
2$:
      CCC
      SEZ
      BNE      3$
      BEQ      4$
;COND CODES = 0100 (ZERO)
; *TEST INSTR* TRY TO BRANCH ON ZERO FLAG
; *TEST INSTR* BRANCH IF GOOD
;BRANCH FAILURE WITH Z BIT SET
3$:
      ERROR
      .WORD    2
      .WORD    CPUERR
;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE
4$:
M2:
;*****
; *TEST 2      TEST BRANCH ON CARRY
;*****
;THIS IS A TEST TO SEE IF THE MODULE FORM ANTICIPATED IS FEASIBLE.
;*****
TST2:
      INC      $TESTN      ;INCREMENT TEST NUMBER
      CCC
      BCC      2$
;CC=0000
; *TEST INSTR*
;BRANCH CARRY CLEAR FAILED
1$:
      ERROR
      .WORD    3
      .WORD    CPUERR
;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE
2$:
      SEC
      BCS      4$
;CC=1111
; *TEST INSTR*
; BRANCH CARRY SET FAILED
3$:
      ERROR
      .WORD    4
      .WORD    CPUERR
;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE
4$:
M3:
;*****
; *TEST 3      TEST DATA PATHS
;*****

```

807 001600
808 001600 005267 177200
809 001604 005000
810 001606 001005
811
812 001610 005010
813 001612 001003
814 001614 005737 000000
815 001620 001403
816
817 001622
818 001622 104000
819 001624 000005
820 001626 001127
821 001630
822
823 001630
824
825
826
827 001630
828 001630 005267 177150
829 001634 012737 125252 000000
830 001642 022737 125252 000000
831 001650 001403
832
833
834
835 001652
836 001652 104000
837 001654 000006
838 001656 001127
839 001660
840
841
842 001660
843
844
845
846 001660
847 001660 005267 177120
848 001664 012737 052525 000000
849 001672 023727 000000 052525
850 001700 001403
851 001702
852 001702 104000
853 001704 000007
854 001706 001127
855 001710
856
857
858 001710
859
860
861
862 001710

```

TST3:
      INC      $TESTN      ;INCREMENT TEST NUMBER
      CLR      RO          ;TRY TO INSURE WE ARE TESTING
                          ;THE DATA PATH AND NOT THE "CLR RO" INSTRUCTION
      BNE     1$          ;FORCE LOCATION TO ZERO
                          ;TRY TO INSURE 0=0
      CLR      (RO)       ;AGAIN, TRY TO INSURE THAT 0=0
      BNE     1$          ;BRANCH IF GOOD
      TST     @#0        ;LOCATION 0 NOT SETUP PROPERLY
      BEQ     2$
1$:
      ERROR   5          ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD   CPUERR    ;UNIQUE ERROR NUMBER
      .WORD   CPUERR    ;ADDRESS OF ERROR MESSAGE
2$:
M4:
;*****
;+TEST 4      TEST DATA PATHS - ONES AND ZEROS
;*****
TST4:
      INC      $TESTN      ;INCREMENT TEST NUMBER
      MOV     @125252,@#0  ;0=125252
      CMP     @125252,@#0  ;SEE IF DATA MADE IT
      BEQ     2$          ;BRANCH IF IF DATA IS GOOD
                          ;ERROR! EITHER THE BUS IS BAD,
                          ;OR THE MOV OR COMPARE
                          ;INSTRUCTIONS FAILED
1$:
      ERROR   6          ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD   CPUERR    ;UNIQUE ERROR NUMBER
      .WORD   CPUERR    ;ADDRESS OF ERROR MESSAGE
2$:
      END OF TEST
;
M5:
;*****
;+TEST 5      TEST DATA PATHS - DATA 0'S AND 1'S
;*****
TST5:
      INC      $TESTN      ;INCREMENT TEST NUMBER
      MOV     @052525,@#0  ;SETUP DATA
      CMP     @#0,@052525 ; TEST FOR CORRECT DATA
      BEQ     2$
1$:
      ERROR   7          ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD   CPUERR    ;UNIQUE ERROR NUMBER
      .WORD   CPUERR    ;ADDRESS OF ERROR MESSAGE
2$:
;
M6:
;*****
;+TEST 6      TEST DATA PATHS - 1'S
;*****
TST6:

```

```

863 001710 005267 177070      INC      $TESTN      ;INCREMENT TEST NUMBER
864 001714 005037 000000      CLR      $R0         ;
865 001720 005137 000000      COM      $R0         ;SET UP MEMORY LOCATION 0 = 111111
866 001724 023727 000000 177777  CMP      $R0,$177777 ; TEST DATA
867 001732 001403              BEQ      2$         ;BRANCH IF NO ERROR
868 001734              1$:      ERROR              ;ALL ERRORS TO TRAP TO EMT VECTOR
869 001734 104000              .WORD    10         ;UNIQUE ERROR NUMBER
870 001736 000010              .WORD    CPUERR     ;ADDRESS OF ERROR MESSAGE
871 001740 001127              2$:
872 001742              3$:
873
874
875 001742              ;
876              ;GPR1TS:
877              ;*****
878              ;*TEST 7      R0 BIT TESTS
879              ;*****
879 001742              TST7:
880 001742 005267 177036      INC      $TESTN      ;INCREMENT TEST NUMBER
881 001746 012700 177777      MOV      $177777,R0  ;R0=177777
882 001752 020027 177777      CMP      R0,$177777 ;DOES R0=177777
883 001756 001403              BEQ      1$         ;YES GO ON
884              ;NO GO TO ERROR
885 001760 104000              ERROR      ;ALL ERRORS TO TRAP TO EMT VECTOR
886 001762 000011              .WORD    11         ;UNIQUE ERROR NUMBER
887 001764 001127              .WORD    CPUERR     ;ADDRESS OF ERROR MESSAGE
888 001766 005000              1$:      CLR      R0         ;R0=0
889 001770 020027 000000      CMP      R0,$0       ;DOES R0=0
890 001774 001403              BEQ      2$         ;YES GO ON
891              ;NO GO TO ERROR
892 001776 104000              ERROR      ;ALL ERRORS TO TRAP TO EMT VECTOR
893 002000 000012              .WORD    12         ;UNIQUE ERROR NUMBER
894 002002 001127              .WORD    CPUERR     ;ADDRESS OF ERROR MESSAGE
895 002004 012700 125252      2$:      MOV      $125252,R0  ;R0=125252
896 002010 020027 125252      CMP      R0,$125252 ;DOES R0=125252
897 002014 001403              BEQ      3$         ;YES GO ON
898              ;NO GO TO ERROR
899 002016 104000              ERROR      ;ALL ERRORS TO TRAP TO EMT VECTOR
900 002020 000013              .WORD    13         ;UNIQUE ERROR NUMBER
901 002022 001127              .WORD    CPUERR     ;ADDRESS OF ERROR MESSAGE
902 002024 012700 052525      3$:      MOV      $52525,R0  ;R0=52525
903 002030 020027 052525      CMP      R0,$52525  ;DOES R0=52525
904 002034 001403              BEQ      4$         ;YES GO ON
905              ;NO GO TO ERROR
906 002036 104000              ERROR      ;ALL ERRORS TO TRAP TO EMT VECTOR
907 002040 000014              .WORD    14         ;UNIQUE ERROR NUMBER
908 002042 001127              .WORD    CPUERR     ;ADDRESS OF ERROR MESSAGE
909 002044              4$:
910
911
912 002044              ;
913              ;GPR1TS:
914              ;*****
915              ;*TEST 10     R1 BIT TESTS
916              ;*****
916 002044              TST10:
917 002044 005267 176734      INC      $TESTN      ;INCREMENT TEST NUMBER
918 002050 012701 177777      MOV      $177777,R1  ;R1=177777

```

```

919 002054 020127 177777      CMP      R1,#177777      ;DOES R1=177777
920 002060 001403              BEQ      1#              ;YES GO ON
921                                ;NO GO TO ERROR
922 002062 104000              ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
923 002064 000015              .WORD    15              ;UNIQUE ERROR NUMBER
924 002066 001127              .WORD    CPUERR          ;ADDRESS OF ERROR MESSAGE
925 002070 005001              1# :    CLR      R1      ;R1=0
926 002072 020127 000000      CMP      R1,#0          ;DOES R1=0
927 002076 001403              BEQ      2#              ;YES GO ON
928                                ;NO GO TO ERROR
929 002100 104000              ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
930 002102 000016              .WORD    16              ;UNIQUE ERROR NUMBER
931 002104 001127              .WORD    CPUERR          ;ADDRESS OF ERROR MESSAGE
932 002106 012701 125252      2# :    MOV      #125252,R1 ;R1=125252
933 002112 020127 125252      CMP      R1,#125252     ;DOES R1=125252
934 002116 001403              BEQ      3#              ;YES GO ON
935                                ;NO GO TO ERROR
936 002120 104000              ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
937 002122 000017              .WORD    17              ;UNIQUE ERROR NUMBER
938 002124 001127              .WORD    CPUERR          ;ADDRESS OF ERROR MESSAGE
939 002126 012701 052525      3# :    MOV      #52525,R1 ;R1=52525
940 002132 020127 052525      CMP      R1,#52525     ;DOES R1=52525
941 002136 001403              BEQ      4#              ;YES GO ON
942                                ;NO GO TO ERROR
943 002140 104000              ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
944 002142 000020              .WORD    20              ;UNIQUE ERROR NUMBER
945 002144 001127              .WORD    CPUERR          ;ADDRESS OF ERROR MESSAGE
946 002146              4# :
947
948
949 002146              ;
950              ;GPR2TS:
951              ;*****
952              ;*TEST 11      R2 BIT TESTS
953              ;*****
954              ;TST11:
954 002146 005267 176632      INC      #TESTN          ;INCREMENT TEST NUMBER
955 002152 012702 177777      MOV      #177777,R2     ;R2=177777
956 002156 020227 177777      CMP      R2,#177777     ;DOES R2=177777
957 002162 001403              BEQ      1#              ;YES GO ON
958                                ;NO GO TO ERROR
959 002164 104000              ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
960 002166 000021              .WORD    21              ;UNIQUE ERROR NUMBER
961 002170 001127              .WORD    CPUERR          ;ADDRESS OF ERROR MESSAGE
962 002172 005002              1# :    CLR      R2      ;R2=0
963 002174 020227 000000      CMP      R2,#0          ;DOES R2=0
964 002200 001403              BEQ      2#              ;YES GO ON
965                                ;NO GO TO ERROR
966 002202 104000              ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
967 002204 000022              .WORD    22              ;UNIQUE ERROR NUMBER
968 002206 001127              .WORD    CPUERR          ;ADDRESS OF ERROR MESSAGE
969 002210 012702 125252      2# :    MOV      #125252,R2 ;R2=125252
970 002214 020227 125252      CMP      R2,#125252     ;DOES R2=125252
971 002220 001403              BEQ      3#              ;YES GO ON
972                                ;NO GO TO ERROR
973 002222 104000              ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
974 002224 000023              .WORD    23              ;UNIQUE ERROR NUMBER

```



```

1031 002366 001403          BEQ      1#          ;YES GO ON
1032                                ;NO GO TO ERROR
1033 002370 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
1034 002372 000031          .WORD    31          ;UNIQUE ERROR NUMBER
1035 002374 001127          .WORD    CPUERR      ;ADDRESS OF ERROR MESSAGE
1036 002376 005004          1# :    CLR      R4          ;R4=0
1037 002400 020427 000000    CMP      R4,#0       ;DOES R4=0
1038 002404 001403          BEQ      2#          ;YES GO ON
1039                                ;NO GO TO ERROR
1040 002406 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
1041 002410 000032          .WORD    32          ;UNIQUE ERROR NUMBER
1042 002412 001127          .WORD    CPUERR      ;ADDRESS OF ERROR MESSAGE
1043 002414 012704 125252    2# :    MOV      #125252,R4 ;R4=125252
1044 002420 020427 125252    CMP      R4,#125252 ;DOES R4=125252
1045 002424 001403          BEQ      3#          ;YES GO ON
1046                                ;NO GO TO ERROR
1047 002426 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
1048 002430 000033          .WORD    33          ;UNIQUE ERROR NUMBER
1049 002432 001127          .WORD    CPUERR      ;ADDRESS OF ERROR MESSAGE
1050 002434 012704 052525    3# :    MOV      #52525,R4 ;R4=52525
1051 002440 020427 052525    CMP      R4,#52525  ;DOES R4=52525
1052 002444 001403          BEQ      4#          ;YES GO ON
1053                                ;NO GO TO ERROR
1054 002446 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
1055 002450 000034          .WORD    34          ;UNIQUE ERROR NUMBER
1056 002452 001127          .WORD    CPUERR      ;ADDRESS OF ERROR MESSAGE
1057 002454          4# :
1058
1059          ;
1060 002454          GPRSTS:
1061          ;|*****
1062          ;|*TEST 14      R5 BIT TESTS
1063          ;|*****
1064 002454          TST14:
1065 002454 005267 176324    INC      #TESTN      ;INCREMENT TEST NUMBER
1066 002460 012705 177777    MOV      #177777,R5 ;R5=177777
1067 002464 020527 177777    CMP      R5,#177777 ;DOES R5=177777
1068 002470 001403          BEQ      1#          ;YES GO ON
1069                                ;NO GO TO ERROR
1070 002472 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
1071 002474 000035          .WORD    35          ;UNIQUE ERROR NUMBER
1072 002476 001127          .WORD    CPUERR      ;ADDRESS OF ERROR MESSAGE
1073 002500 005005          1# :    CLR      R5          ;R5=0
1074 002502 020527 000000    CMP      R5,#0       ;DOES R5=0
1075 002506 001403          BEQ      2#          ;YES GO ON
1076                                ;NO GO TO ERROR
1077 002510 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
1078 002512 000036          .WORD    36          ;UNIQUE ERROR NUMBER
1079 002514 001127          .WORD    CPUERR      ;ADDRESS OF ERROR MESSAGE
1080 002516 012705 125252    2# :    MOV      #125252,R5 ;R5=125252
1081 002522 020527 125252    CMP      R5,#125252 ;DOES R5=125252
1082 002526 001403          BEQ      3#          ;YES GO ON
1083                                ;NO GO TO ERROR
1084 002530 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
1085 002532 000037          .WORD    37          ;UNIQUE ERROR NUMBER
1086 002534 001127          .WORD    CPUERR      ;ADDRESS OF ERROR MESSAGE

```

```

1087 002536 012705 052525      3#:  MOV    #52525,R5      ;R5=52525
1088 002542 020527 052525      CMP    R5,#52525      ;DOES R5=52525
1089 002546 001403              BEQ    4#              ;YES GO ON
1090                                ;NO GO TO ERROR
1091 002550 104000              ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1092 002552 000040              .WORD ;UNIQUE ERROR NUMBER
1093 002554 001127              .WORD 40              ;ADDRESS OF ERROR MESSAGE
1094 002556              4#:  CPUERR
1095
1096
1097 002556              ;
1098                                ;*****
1099                                ;*TEST 15      R6 BIT TESTS
1100                                ;*****
1101 002556              TST15:
1102 002556 005267 176222      INC    #TESTN          ;INCREMENT TEST NUMBER
1103 002562 012706 177777      MOV    #17777,R6      ;R6=17777
1104 002566 020627 177777      CMP    R6,#177777    ;DOES R6=17777
1105 002572 001403              BEQ    1#              ;YES GO ON
1106                                ;NO GO TO ERROR
1107 002574 104000              ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1108 002576 000041              .WORD ;UNIQUE ERROR NUMBER
1109 002600 001127              .WORD ;ADDRESS OF ERROR MESSAGE
1110 002602 005006              CLR    R6              ;R6=0
1111 002604 020627 000000      1#:  CMP    R6,#0         ;DOES R6=0
1112 002610 001403              BEQ    2#              ;YES GO ON
1113                                ;NO GO TO ERROR
1114 002612 104000              ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1115 002614 000042              .WORD ;UNIQUE ERROR NUMBER
1116 002616 001127              .WORD ;ADDRESS OF ERROR MESSAGE
1117 002620 012706 125252      2#:  MOV    #125252,R6  ;R6=125252
1118 002624 020627 125252      CMP    R6,#125252    ;DOES R6=125252
1119 002630 001403              BEQ    3#              ;YES GO ON
1120                                ;NO GO TO ERROR
1121 002632 104000              ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1122 002634 000043              .WORD ;UNIQUE ERROR NUMBER
1123 002636 001127              .WORD ;ADDRESS OF ERROR MESSAGE
1124 002640 012706 052525      3#:  MOV    #52525,R6   ;R6=52525
1125 002644 020627 052525      CMP    R6,#52525     ;DOES R6=52525
1126 002650 001403              BEQ    4#              ;YES GO ON
1127                                ;NO GO TO ERROR
1128 002652 104000              ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1129 002654 000044              .WORD ;UNIQUE ERROR NUMBER
1130 002656 001127              .WORD ;ADDRESS OF ERROR MESSAGE
1131 002660 012706 001000      4#:  MOV    #STBOT,R6   ;RESTORE SP
1132
1133
1134 002664              ;
1135                                ;*****
1136                                ;*TEST 16      PSW LOW BYTE BIT TESTS
1137                                ;*****
1138 002664              TST16:
1139 002664 005267 176114      INC    #TESTN          ;INCREMENT TEST NUMBER
1140 002670 012737 000377 177776  MOV    #377,#177776  ;PS=357 T BIT SHOULDN'T SET
1141 002676 022737 000357 177776  CMP    #357,#177776  ;DOES PS=357
1142 002704 001403              BEQ    1#              ;YES GO ON

```



```

1199
1200
1201
1202 003044
1203 003044 005267 175734
1204 003050 005004
1205 003052 005104
1206 003054 105004
1207 003056 001403
1208
1209 003060
1210 003060 104000
1211 003062 000053
1212 003064 001127
1213 003066 105304
1214 003070 100002
1215 003072 105104
1216 003074 001403
1217
1218 003076
1219 003076 104000
1220 003100 000054
1221 003102 001127
1222 003104
1223
1224
1225 003104
1226
1227
1228
1229 003104
1230 003104 005267 175674
1231 003110 005004
1232 003112 005014
1233 003114 005114
1234 003116 005014
1235 003120 001403
1236
1237 003122
1238 003122 104000
1239 003124 000055
1240 003126 001127
1241 003130 005114
1242 003132 001403
1243 003134 100002
1244 003136 005214
1245 003140 001403
1246
1247 003142
1248 003142 104000
1249 003144 000056
1250 003146 001127
1251 003150
1252
1253
1254 003150

```

```

;*****
;*TEST 20 TEST SINGLE OPS - EVEN BYTE OF CLRB, DECB, AND COMB
;*****
TST20:
      INC      #TESTN          ;INCREMENT TEST NUMBER
      CLR      R4
      COM      R4              ;SETUP TEST REGISTER
      CLRB    R4              ;*TEST CLEAR BYTE INSTRUCTION
      BEQ     2#              ;BRANCH IF GOOD
                               ;CLEAR EVEN BYTE FAILED
1# :
      ERROR   53              ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD   CPUERR         ;UNIQUE ERROR NUMBER
                               ;ADDRESS OF ERROR MESSAGE
2# :
      DECB   R4              ;*TEST DECREMENT BYTE
      BPL    3#              ;DECREMENT BYTE FAILED
      COMB   R4              ;*TEST COMPLIMENT BYTE
      BEQ    4#              ;BRANCH IF GOOD
                               ;COMPLIMENT OR DECREMENT FAILED TO WORK
3# :
      ERROR   54              ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD   CPUERR         ;UNIQUE ERROR NUMBER
                               ;ADDRESS OF ERROR MESSAGE
4# :
;
;MSPC:
;*****
;*TEST 21 TEST SINGLE OPS - MODE 1 CLRB, COMB, AND INCB
;*****
TST21:
      INC      #TESTN          ;INCREMENT TEST NUMBER
      CLR      R4
      CLR     (R4)
      COM     (R4)              ;SETUP TEST DATA
      CLRB   (R4)              ;*TEST INSTRUCTION
      BEQ    2#              ;BRANCH IF GOOD
                               ;MODE 1 FAILED
1# :
      ERROR   55              ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD   CPUERR         ;UNIQUE ERROR NUMBER
                               ;ADDRESS OF ERROR MESSAGE
2# :
      COM     (R4)              ;*TEST INSTRUCTION
      BEQ    3#              ;(O)SHOULD = -1
      BPL    3#
      INC     (R4)              ;*TEST INSTRUCTION
      BEQ    4#              ;BRANCH IF GOOD
                               ;COM OR INC FAILED TO ALTER LOC 0 CORRECTLY
3# :
      ERROR   56              ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD   CPUERR         ;UNIQUE ERROR NUMBER
                               ;ADDRESS OF ERROR MESSAGE
4# :
;
;MSPD:

```

```

1255
1256
1257
1258 003150
1259 003150 005267 175630
1260 003154 005004
1261 003156 005014
1262 003160 005114
1263 003162 105014
1264 003164 105014
1265 003166 001403
1266
1267 003170
1268 003170 104000
1269 003172 000057
1270 003174 001127
1271 003176 105214
1272 003200 100405
1273 003202 001404
1274 003204 105114
1275 003206 105214
1276 003210 105214
1277 003212 001403
1278
1279 003214
1280 003214 104000
1281 003216 000060
1282 003220 001127
1283 003222
1284
1285
1286 003222
1287
1288
1289
1290 003222
1291 003222 005267 175556
1292 003226 005004
1293 003230 005014
1294 003232 005114
1295 003234 005204
1296 003236 105014
1297 003240 001403
1298
1299 003242 104000
1300 003244 000061
1301 003246 001127
1302 003250 005304
1303 003252 005214
1304 003254 005204
1305 003256 105114
1306 003260 105214
1307 003262 100003
1308 003264 001402
1309 003266 105214
1310 003270 001403

```

```

;*****
;*TEST 22 TEST SINGLE OPS MODE1-EVEN BYTE-CLRB,COMB,INCB
;*****
TST22:
INC      $TESTN          ;INCREMENT TEST NUMBER
CLR      R4
CLR      (R4)
COM      (R4)           ;SETUP TEST DATA
CLRB    (R4)           ;*TEST INSTRUCTION
CLRB    (R4)           ;*TEST INSTRUCTION
BEQ     2$             ;BRANCH IF GOOD
;CLEAR (0) EVEN BYTE FAILED

1$:
ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
.WORD   57             ;UNIQUE ERROR NUMBER
.WORD   CPUERR        ;ADDRESS OF ERROR MESSAGE
2$:
INCB    (R4)           ;*TEST INSTRUCTION
BMI     3$             ; TEST FLAGS
BEQ     3$
COMB    (R4)           ;*TEST INSTRUCTION
INCB    (R4)
INCB    (R4)
BEQ     4$             ;BRANCH IF GOOD
;COMB OR INCB FAILED

3$:
ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
.WORD   60             ;UNIQUE ERROR NUMBER
.WORD   CPUERR        ;ADDRESS OF ERROR MESSAGE
4$:
;
;MSPEO:
;*****
;*TEST 23 TEST SINGLE OPS - ODD BYTE - CLRB, COMB, DECB
;*****
TST23:
INC      $TESTN          ;INCREMENT TEST NUMBER
CLR      R4
CLR      (R4)
COM      (R4)           ;SETUP TEST DATA
INC     R4              ;POINT TO ODD BYTE
CLRB    (R4)           ;*TEST INSTRUCTION
BEQ     1$             ;BRANCH IF GOOD
;CLEAR ODD BYTE FAILED
;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE

1$:
DEC     R4              ;POINT TO EVEN BYTE
;LOC 0=1 0
INC     R4              ;POINT TO ODD BYTE
COMB    (R4)           ;*TEST INSTRUCTION
INCB    (R4)           ;LOC 0=-1 0
BPL     2$             ;BRANCH IF ERROR
BEQ     2$
;
INCB    (R4)           ;*TEST INSTRUCTION
BEQ     3$             ;BRANCH IF GOOD

```

1311
1312 003272
1313 003272 104000
1314 003274 000062
1315 003276 001127
1316 003300
1317
1318
1319 003300
1320
1321
1322
1323 003300
1324 003300 005267 175500
1325 003304 005004
1326 003306 105104
1327 003310 005204
1328 003312 005014
1329 003314 005114
1330 003316 005024
1331 003320 001403
1332
1333 003322 104000
1334 003324 000063
1335 003326 001127
1336 003330 005304
1337 003332 005304
1338 003334 005124
1339 003336 100004
1340 003340 005304
1341 003342 005304
1342 003344 005224
1343 003346 001403
1344
1345 003350
1346 003350 104000
1347 003352 000064
1348 003354 001127
1349 003356
1350
1351
1352 003356
1353
1354
1355
1356 003356
1357 003356 005267 175422
1358 003362 005004
1359 003364 105104
1360 003366 005204
1361 003370 005014
1362 003372 005114
1363 003374 105024
1364 003376 001403
1365
1366 003400 104000

```

;MODE 1, ODD BYTE FAILED
2:  ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
   .WORD 62                               ;UNIQUE ERROR NUMBER
   .WORD CPUERR                            ;ADDRESS OF ERROR MESSAGE
3:
;
;MSPF:
;*****
;*TEST 24 TEST SINGLE OP - MODE 2 - CLR, COM, INC
;*****
TST24:
  INC      ;TESTN                        ;INCREMENT TEST NUMBER
  CLR      R4
  COMB     R4
  INC      R4                            ;R4=400
  CLR      (R4)                          ;400=0
  COM      (R4)                          ;400=-1
  CLR      (R4)+                          ;*TEST INSTRUCTION
  BEQ      1;                             ;BRANCH IF GOOD
                                           ;MODE 2 CLEAR FAILED
  ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
   .WORD 63                               ;UNIQUE ERROR NUMBER
   .WORD CPUERR                            ;ADDRESS OF ERROR MESSAGE
1:  DEC      R4
  DEC      R4                            ;R4=400
  COM      (R4)+                          ;*TEST INSTRUCTION
  BPL      2;                             ;BRANCH IF FAILURE
  DEC      R4
  DEC      R4                            ;R4=400
  INC      (R4)+                          ;*TEST INSTRUCTION
  BEQ      3;                             ;BRANCH IF GOOD
                                           ;MODE 2 FAILURE
2:  ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
   .WORD 64                               ;UNIQUE ERROR NUMBER
   .WORD CPUERR                            ;ADDRESS OF ERROR MESSAGE
3:
;
;MSPG:
;*****
;*TEST 25 TEST CLRB, COMB, DECB, MODE 2 - EVEN BYTE
;*****
TST25:
  INC      ;TESTN                        ;INCREMENT TEST NUMBER
  CLR      R4
  COMB     R4
  INC      R4                            ;R4=400
  CLR      (R4)                          ;400=-1
  COM      (R4)                          ;*TEST INSTRUCTION
  CLRB    (R4)+                          ;BRANCH IF GOOD
  BEQ      1;                             ;MODE 2 EVEN BYTE FAILED
                                           ;ALL ERRORS TO TRAP TO EMT VECTOR
  ERROR

```

```

1367 003402 000065          .WORD 65          ;UNIQUE ERROR NUMBER
1368 003404 001127          .WORD CPUERR      ;ADDRESS OF ERROR MESSAGE
1369 003406 005304          1#: DEC R4
1370 003410 105324          DECB (R4)+       ;*TEST INSTRUCTION
1371 003412 100003          BPL 2#           ;BRANCH IF BAD
1372 003414 005304          DEC R4           ;POINT TO EVEN BYTE
1373 003416 105124          COMB (R4)+      ;*TEST INSTRUCTION
1374 003420 001403          BEQ 3#          ;BRANCH IF GOOD
1375                                     ;MODE 2, EVEN BYTE FAILED
1376 003422                                     2#:
1377 003422 104000          ERROR           ;ALL ERRORS TO TRAP TO EMT VECTOR
1378 003424 000066          .WORD 66          ;UNIQUE ERROR NUMBER
1379 003426 001127          .WORD CPUERR      ;ADDRESS OF ERROR MESSAGE
1380 003430                                     3#:
1381                                     ;
1382                                     ;MSPH:
1383 003430                                     ;*****
1384                                     ;*TEST 26 TEST CLR, COMB, INCB MODE 2 - ODD BYTE
1385                                     ;*****
1386                                     ;TST26:
1387 003430                                     INC #TESTN      ;INCREMENT TEST NUMBER
1388 003430 005267 175350          CLR R4
1389 003434 005004          COMB R4
1390 003436 105104          INC R4          ;R4=400
1391 003440 005204          CLR (R4)
1392 003442 005014          COM (R4)       ;400=-1 -1
1393 003444 005114          INC (R4)       ;POINT TO ODD BYTE
1394 003446 005214          CLR (R4)+     ;*TEST INSTRUCTION
1395 003450 105024          BEQ 1#         ;BRANCH IF GOOD
1396 003452 001403          ;MODE 2, ODD BYTE FAILED
1397                                     ;ALL ERRORS TO TRAP TO EMT VECTOR
1398 003454 104000          ERROR           ;UNIQUE ERROR NUMBER
1399 003456 000067          .WORD CPUERR      ;ADDRESS OF ERROR MESSAGE
1400 003460 001127          1#: DEC R4
1401 003462 005304          DECB (R4)+     ;POINT TO ODD BYTE
1402 003464 005304          INC R4
1403 003466 105224          INCB (R4)+    ;400=1 0
1404 003470 105124          COMB (P4)+    ;*TEST INSTRUCTION
1405 003472 100003          BPL 2#         ;BRANCH IF MODE 2 FAILED
1406 003474 005304          DEC R4         ;POINT TO ODD BYTE
1407 003476 105224          INCB (R4)+
1408 003500 001403          BEQ 3#         ;BRANCH IF GOOD
1409                                     ;MODE 2, ODD BYTE FAILED
1410                                     2#:
1411 003502          ERROR           ;ALL ERRORS TO TRAP TO EMT VECTOR
1412 003504 000070          .WORD 70          ;UNIQUE ERROR NUMBER
1413 003506 001127          .WORD CPUERR      ;ADDRESS OF ERROR MESSAGE
1414 003510                                     3#:
1415                                     ;
1416                                     ;MSPI:
1417 00351C                                     ;*****
1418                                     ;*TEST 27 TEST CLR, COM, INC - MODE 3
1419                                     ;*****
1420                                     ;TST27:
1421 003510                                     INC #TESTN      ;INCREMENT TEST NUMBER
1422 003510 005267 175270

```

```

1423 003514 005004          CLR      R4          ;
1424 003516 005014          CLR      (R4)         ;0=0
1425 003520 105114          COMB     (R4)         ;
1426 003522 005214          INC      (R4)         ;0=400
1427 003524 005034          CLR      @R4)+       ;*TEST INSTRUCTION
1428 003526 001403          BEQ     1#           ;BRANCH IF GOOD
1429                                ;MODE 3 FAILED, 400 SHOULD=0
1430 003530 104000          ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
1431 003532 000071          .WORD   71           ;UNIQUE ERROR NUMBER
1432 003534 001127          .WORD   CPUERR       ;ADDRESS OF ERROR MESSAGE
1433 003536 005304          1# : DEC      R4
1434 003540 005304          DEC      R4          ;R4=0
1435 003542 005134          COM     @R4)+       ;*TEST INSTRUCTION
1436 003544 100004          BPL     2#           ;BRANCH IF BAD
1437 003546 005304          DEC      R4
1438 003550 005304          DEC      R4          ;REPOSITION POINTER
1439 003552 005234          INC     @R4)+       ;*TEST INSTRUCTION
1440 003554 001403          BEQ     3#           ;BRANCH IF GOOD
1441                                ;MODE 3 FAILED
1442 003556                                2# :
1443 003556 104000          ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
1444 003560 000072          .WORD   72           ;UNIQUE ERROR NUMBER
1445 003562 001127          .WORD   CPUERR       ;ADDRESS OF ERROR MESSAGE
1446 003564                                3# :
1447                                ;
1448                                ;
1449 003564          ; MSPJ:
1450                                ; *****
1451                                ; *TEST 30      TEST CLR, COM, INC - MODE 3, EVEN/ODD BYTE
1452                                ; *****
1453 003564          TST30:
1454 003564 005267 175214          INC     @TESTN      ; INCREMENT TEST NUMBER
1455 003570 005004          CLR     R4          ;R4=0
1456 003572 005001          CLR     R1
1457 003574 105101          COMB    R1
1458 003576 005201          INC     R1          ;R1=400
1459 003600 005011          CLR     (R1)
1460 003602 005121          COM     (R1)+       ;400--1
1461 003604 005011          CLR     (R1)
1462 003606 105111          COMB    (R1)        ;402=000 377
1463 003610 005014          CLR     (R4)
1464 003612 105114          COMB    (R4)
1465 003614 005214          INC     (R4)
1466 003616 105034          CLR     @R4)+       ;0=400
1467 003620 001403          BEQ     1#           ;*TEST INSTRUCTION 400=377 000
1468                                ;BRANCH IF MODE 3 EVEN BYTE CLEARED
1469                                ; TEST INSTRUCTION FAILED
1470 003622 104000          ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
1471 003624 000073          .WORD   73           ;UNIQUE ERROR NUMBER
1472 003626 001127          .WORD   CPUERR       ;ADDRESS OF ERROR MESSAGE
1473 003630 005304          1# : DEC      R4
1474 003632 005304          DEC      R4          ;REPOSITION POINTER
1475 003634 105134          COM     @R4)+       ;*TEST INSTRUCTION
1476 003636 005304          DEC      R4
1477 003640 005304          DEC      R4          ;REPOSITION POINTER
1478 003642 105234          INCB    @R4)+       ;*TEST INSTRUCTION
1479 003644 001403          BEQ     3#           ;BRANCH IF GOOD

```



```

1479                                     ;MODE 3, EVEN BYTE FAILED
1480 003646                               2#:
1481 003646 104000                       ERROR                               ;ALL ERRORS TO TRAP TO EMT VECTOR
1482 003650 000074                       .WORD 74                               ;UNIQUE ERROR NUMBER
1483 003652 001127                       .WORD CPUERR                           ;ADDRESS OF ERROR MESSAGE
1484 003654 005304                               3#:
1485 003656 005304                       DEC R4
1486 003660 005214                       DEC R4
1487 003662 105234                       INC (R4)                               ;R4=401
1488 003664 001004                       INCB B(R4)+                             ;*TEST INSTRUCTION
1489 003666 005304                       BNE 4#                                   ;BRANCH IF 402 NEQ 0
1490 003670 005304                       DEC R4
1491 003672 105034                       DEC R4                               ;R4=401
1492 003674 001403                       CLRB B(R4)+                             ;401=0
1493                                     BEQ 5#                                   ;BRANCH IF GOOD
1494                                     ;ODD BYTE FAILED
1495 003676                               4#:
1496 003700 104000                       ERROR                               ;ALL ERRORS TO TRAP TO EMT VECTOR
1497 003702 000075                       .WORD 75                               ;UNIQUE ERROR NUMBER
1498 003704 005304                       .WORD CPUERR                           ;ADDRESS OF ERROR MESSAGE
1499 003706 005304                               5#:
1500 003710 105134                       DEC R4
1501 003712 005304                       DEC R4                               ;R4=401
1502 003714 005304                       COMB B(R4)+                             ;403=377
1503 003716 105234                       DEC R4
1504 003720 001403                       DEC R4
1505                                     INCB B(R4)+                             ;*TEST INSTRUCTION
1506                                     BEQ 7#                                   ;BRANCH IF GOOD
1507                                     ;MODE3 ODD BYTE FAILED.
1508 003722                               6#:
1509 003722 104000                       ERROR                               ;ALL ERRORS TO TRAP TO EMT VECTOR
1510 003724 000076                       .WORD 76                               ;UNIQUE ERROR NUMBER
1511 003726 001127                       .WORD CPUERR                           ;ADDRESS OF ERROR MESSAGE
1512                                     7#:
1513                                     ;
1514                                     ;MSPL:
1515                                     ;*****
1516                                     ;*TEST 31 TEST CLR, COM, DEC - MODE 4
1517                                     ;*****
1518 003730                               TST31:
1519 003730 005267 175050                   INC #TESTN                               ;INCREMENT TEST NUMBER
1520 003734 005004                       CLR R4
1521 003736 105104                       COMB R4
1522 003740 005204                       INC R4                               ;R4=400
1523 003742 005014                       CLR (R4)
1524 003744 005124                       COM (R4)+                             ;400=-1
1525 003746 005014                       CLR (R4)
1526 003750 005224                       INC (R4)+                             ;402=1
1527 003752 005044                       CLR -(R4)                             ;*TEST INSTRUCTION
1528 003754 001403                       BEQ 1#                                   ;BRANCH IF GOOD
1529                                     ;MODE 4 FAILED
1530 003756 104000                               1#:
1531 003760 000077                       ERROR                               ;ALL ERRORS TO TRAP TO EMT VECTOR
1532 003762 001127                       .WORD 77                               ;UNIQUE ERROR NUMBER
1533 003764 005344                       .WORD CPUERR                           ;ADDRESS OF ERROR MESSAGE
1534 003766 005114                       DEC -(R4)                             ;*TEST INSTRUCTION 400=-2
1535 003770 001405                       COM (R4)                               ;400=1
1536                                     BEQ 2#                                   ;BRANCH IF BAD

```

```

1535 003772 100404          BMI      2#           ;BRANCH IF BAD
1536 003774 005204          INC      R4
1537 003776 005204          INC      R4           ;R4=400
1538 004000 005344          DEC     -(R4)        ;*TEST INSTRUCTION
1539 004002 001403          BEQ     3#           ;BRANCH IF GOOD
1540
1541 004004          2#:
1542 004004 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1543 004006 000100          .WORD 100       ;UNIQUE ERROR NUMBER
1544 004010 001127          .WORD CPUERR    ;ADDRESS OF ERROR MESSAGE
1545 004012          3#:
1546
1547
1548 004012          ;
1549          ;MSPM:
1550          ;*****
1551          ;*TEST 32      TEST COMB, INCB, CLRB - MODE 4, ODD BYTE
1552          ;*****
1553 004012 005267 174766          TST32:
1554 004016 005004          INC      #TESTN    ;INCREMENT TEST NUMBER
1555 004020 105104          CLR      R4
1556 004022 005204          COMB    R4         ;
1557 004024 005044          INC      R4         ;R4=400
1558 004026 105114          CLR     -(R4)      ;376=0
1559 004030 005224          COMB    (R4)
1560 004032 005014          INC     (R4)+      ;376=001 000
1561 004034 005124          CLR     (R4)
1562 004036 005204          COM     (R4)+      ;400=1
1563 004040 105044          INC     R4         ;R4=403
1564 004042 001403          CLRB   -(R4)      ; TEST INST. CLEAR ODD BYTE (401)
1565          BEQ     2#           ;BRANCH IF GOOD
1566          ;MODE 4 BYTE FAILED
1567 004044 104000          1#:
1568 004046 000101          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1569 004050 001127          .WORD 101       ;UNIQUE ERROR NUMBER
1570 004052 005204          .WORD CPUERR    ;ADDRESS OF ERROR MESSAGE
1571 004054 005204          2#:
1572 004056 105144          INC      R4
1573 004060 005304          COMB   -(R4)      ;R4=403
1574 004062 005304          DEC     R4         ; TEST INST. 401=377
1575 004064 105244          DEC     R4
1576 004066 001403          INCB   -(R4)      ; TEST INST. 401=0
1577          BEQ     4#           ;BRANCH IF GOOD
1578          ;MODE 4 ODD BYTE FAILED
1579 004070 104000          3#:
1580 004072 000102          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1581 004074 001127          .WORD 102       ;UNIQUE ERROR NUMBER
1582 004076 105344          .WORD CPUERR    ;ADDRESS OF ERROR MESSAGE
1583 004100 001403          4#:
1584          DECB   -(R4)      ;*TEST INST.
1585          BEQ     6#           ;BRANCH IF GOOD
1586          ;MODE 4 DECREMENT ODD BYTE FAILED
1587 004102 104000          5#:
1588 004104 000103          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1589 004106 001127          .WORD 103       ;UNIQUE ERROR NUMBER
1590          .WORD CPUERR    ;ADDRESS OF ERROR MESSAGE

```

1591
1592 004110
1593
1594
1595
1596 004110
1597 004110 005267 174670
1598 004114 005004
1599 004116 005014
1600 004120 105114
1601 004122 005224
1602 004124 005054
1603 004126 001403
1604
1605 004130 104000
1606 004132 000104
1607 004134 001127
1608 004136 005204
1609 004140 005204
1610 004142 005154
1611 004144 001407
1612 004146 005204
1613 004150 005204
1614 004152 005354
1615 004154 001403
1616 004156 005224
1617 004160 105254
1618 004162 001403
1619
1620 004164
1621 004164 104000
1622 004166 000105
1623 004170 001127
1624 004172
1625
1626
1627 004172
1628
1629
1630
1631 004172
1632 004172 005267 174606
1633 004176 005004
1634 004200 105104
1635 004202 005204
1636 004204 005001
1637 004206 105101
1638 004210 005301
1639 004212 005002
1640 004214 005012
1641 004216 005014
1642 004220 005114
1643 004222 005011
1644 004224 005454
1645 004226 001403
1646

```

;
; MSPN:
;*****
; *TEST 33      TEST CLR, COM, INC - MODE 5
;*****
TST33:
      INC      #TESTN          ;INCREMENT TEST NUMBER
      CLR      R4
      CLR      (R4)
      COMB     (R4)
      INC      (R4)+          ;0=400
      CLR      @-(R4)         ;*TEST INST. 400=0
      BEQ      1#            ;BRANCH IF GOOD
                               ;MODE 5 FAILED
      ERROR    .WORD 104      ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD    CPUERR        ;UNIQUE ERROR NUMBER
      .WORD    CPUERR        ;ADDRESS OF ERROR MESSAGE
1# :   INC      R4
      INC      R4            ;RESET POINTER TO 0
      COM      @-(R4)        ;*TEST INST. 376=1
      BEQ      2#            ;BRANCH IF BAD
      INC      R4
      INC      R4            ;REPOSITION POINTER
      DEC      @-(R4)        ;*TEST INST. 376=0
      BEQ      2#            ;BRANCH IF BAD
      INC      (R4)+          ;0=401 R4=2
      INCB     @-(R4)        ;*TEST INST.,400= 0 376
      BEQ      3#            ;BRANCH IF GOOD
                               ;MODE 5 FAILED
2# :   ERROR    .WORD 105      ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD    CPUERR        ;UNIQUE ERROR NUMBER
      .WORD    CPUERR        ;ADDRESS OF ERROR MESSAGE
3# :
;
; MSP0:
;*****
; *TEST 34      TEST NEG MODE 5
;*****
TST34:
      INC      #TESTN          ;INCREMENT TEST NUMBER
      CLR      R4
      COMB     R4
      INC      R4            ;R4=400
      CLR      R1
      COMB     R1
      DEC      R1            ;R1=376
      CLR      R2            ;R2=0
      CLR      (R2)         ;0=0
      CLR      (R4)
      COM      (R4)         ;400=-1
      CLR      (R1)         ;376=0
      NEG      @-(R4)        ;0=0
      BEQ      2#            ;BRANCH IF GOOD
                               ;NEG FAILED

```

```

1647 004230          1#:
1648 004230 104000   ERROR                      ;ALL ERRORS TO TRAP TO EMT VECTOR
1649 004232 000106   .WORD 106                      ;UNIQUE ERROR NUMBER
1650 004234 001127   .WORD CPUERR                      ;ADDRESS OF ERROR MESSAGE
1651 004236 005334   2#: DEC 8(R4)+                      ;0=-1
1652 004240 005454   NEG 8-(R4)                      ;0=1
1653 004242 001403   BEQ 3#                          ;BRANCH IF BAD
1654 004244 102402   BVS 3#                          ;BRANCH IF BAD
1655 004246 100401   BMI 3#                          ;BRANCH IF BAD
1656 004250 103403   BCS 4#                          ;BRANCH IF GOOD
1657
1658 004252          3#:
1659 004252 104000   ERROR                      ;ALL ERRORS TO TRAP TO EMT VECTOR
1660 004254 000107   .WORD 107                      ;UNIQUE ERROR NUMBER
1661 004256 001127   .WORD CPUERR                      ;ADDRESS OF ERROR MESSAGE
1662 004260 005334   4#: DEC 8(R4)+                      ; TEST RESULT OF NEGATE
1663 004262 001403   BEQ 6#                          ;BRANCH IF GOOD
1664
1665 004264          5#:
1666 004264 104000   ERROR                      ;ALL ERRORS TO TRAP TO EMT VECTOR
1667 004266 000110   .WORD 110                      ;UNIQUE ERROR NUMBER
1668 004270 001127   .WORD CPUERR                      ;ADDRESS OF ERROR MESSAGE
1669 004272 105212   6#: INCB (R2)                      ;0=1
1670 004274 005454   NEG 8-(R4)                      ;0=-1
1671 004276 001403   BEQ 7#                          ;
1672 004300 102402   BVS 7#                          ;
1673 004302 103001   BCC 7#                          ;
1674 004304 100403   BMI 8#                          ;BRANCH IF GOOD
1675
1676 004306          7#:
1677 004306 104000   ERROR                      ;ALL ERRORS TO TRAP TO EMT VECTOR
1678 004310 000111   .WORD 111                      ;UNIQUE ERROR NUMBER
1679 004312 001127   .WORD CPUERR                      ;ADDRESS OF ERROR MESSAGE
1680 004314 105212   8#: INCB (R2)                      ;0=0
1681 004316 001403   BEQ 10#                         ;BRANCH IF GOOD
1682
1683 004320          9#:
1684 004322 104000   ERROR                      ;ALL ERRORS TO TRAP TO EMT VECTOR
1685 004322 000112   .WORD 112                      ;UNIQUE ERROR NUMBER
1686 004324 001127   .WORD CPUERR                      ;ADDRESS OF ERROR MESSAGE
1687
1688
1689
1690 004326          MSPP:
1691
1692
1693
1694 004326          ;*****
1695 004326 005267 174452 ;*****
1696 004332 005004 ;*TEST 35 TEST CLR, COM, INC - MODE 6
1697 004334 005204 ;*****
1698 004336 005204 TST35:
1699 004340 005001   INC $TESTN                      ;INCREMENT TEST NUMBER
1700 004342 105101   CLR R4
1701 004344 005201   INC R4
1702 004346 005011   CLR (R1)                      ;R4=2

```

```

1703 004350 005121 COM (R1)+ ;400=-1
1704 004352 005011 CLR (R1) ;R1=402
1705 004354 005211 INC (R1) ;402=1
1706 004356 005002 CLR R2 ;R2=0
1707 004360 005012 CLR (R2) ;0=0
1708 004362 005064 000376 CLR 376(R4) ;400=0
1709 004366 001403 BEQ 2# ;BRANCH IF GOOD
1710 004370 1# :
1711 004370 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1712 004372 000113 .WORD 113 ;UNIQUE ERROR NUMBER
1713 004374 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
1714 004376 005364 000376 2# : DEC 376(R4) ;400=-1
1715 004402 005164 000400 COM 400(R4) ;402=-1
1716 004406 001405 BEQ 3# ;BRANCH IF BAD
1717 004410 005264 000400 INC 400(R4) ;402=-2
1718 004414 005264 000400 INC 400(R4)
1719 004420 001403 BEQ 4# ;BRANCH IF GOOD
1720 ;MODE 6 FAILED
1721 004422 3# :
1722 004422 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1723 004424 000114 .WORD 114 ;UNIQUE ERROR NUMBER
1724 004426 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
1725 004430 005261 177776 4# : INC -2(R1) ;400=0
1726 004434 001403 BEQ 6# ;BRANCH IF GOOD
1727 ;ERROR! INC MODE 6 FAILED
1728 004436 5# :
1729 004436 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1730 004440 000115 .WORD 115 ;UNIQUE ERROR NUMBER
1731 004442 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
1732 004444 6# :
1733 ;
1734 ;
1735 ;
1736 ;
1737 004444 MSPQ:
1738 ;*****
1739 ;*TEST 36 TEST NEG MODE 6
1740 ;*****
1741 TST36:
1742 004444 005267 174334 INC #TESTN ;INCREMENT TEST NUMBER
1743 004450 005001 CLR R1 ;R1=0
1744 004452 005004 CLR R4
1745 004454 105104 COMB R4
1746 004456 005204 INC R4 ;R4=400
1747 004460 005014 CLR (R4) ;
1748 004462 005114 COM (R4) ;400=-1
1749 004464 005044 CLR -(R4) ;376=0
1750 004466 005044 CLR -(R4) ;
1751 004470 005224 INC (R4)+ ;374=1 R4=376
1752 004472 005464 000002 NEG 2(R4) ;400=1
1753 004476 001403 BEQ 1# ;NEGATE FAILED
1754 004500 102402 BVS 1#
1755 004502 100401 BMI 1#
1756 004504 103403 BCS 2# ;BRANCH IF GOOD
1757 ;NEGATE FAILED
1758 004506 1# :

```

```

1759 004506 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1760 004510 000116          .WORD          ;UNIQUE ERROR NUMBER
1761 004512 001127          .WORD          ;ADDRESS OF ERROR MESSAGE
1762 004514 005364 000002  2#: DEC          ; TEST RESULT OF NEGATE
1763 004520 001403          BEQ           ;BRANCH IF GOOD
1764                                     ;RESULT OF NEGATE FAILED
1765 004522                                     3#:
1766 004522 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1767 004524 000117          .WORD          ;UNIQUE ERROR NUMBER
1768 004526 001127          .WORD          ;ADDRESS OF ERROR MESSAGE
1769 004530 005464 000000  4#: NEG          ;*0=0
1770 004534 001403          BEQ           ; BRANCH IF GOOD
1771                                     ;NEGATE FAILED
1772 004536 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1773 004540 000120          .WORD          ;UNIQUE ERROR NUMBER
1774 004542 001127          .WORD          ;ADDRESS OF ERROR MESSAGE
1775 004544 105461 000374  5#: NEGB         ;374=0 377
1776 004550 102403          BVS          ;
1777 004552 001402          BEQ           ;
1778 004554 100001          BPL          ;BRANCH IF GOOD
1779 004556 103403          BCS          ;NEGATE FAILED
1780
1781 004560                                     6#:
1782 004560 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1783 004562 000121          .WORD          ;UNIQUE ERROR NUMBER
1784 004564 001127          .WORD          ;ADDRESS OF ERROR MESSAGE
1785 004566 105261 000374  7#: INCB         ;374=0
1786 004572 001403          BEQ           ;BRANCH IF GOOD
1787                                     ;NEGATE FAILED
1788 004574                                     8#:
1789 004574 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1790 004576 000122          .WORD          ;UNIQUE ERROR NUMBER
1791 004600 001127          .WORD          ;ADDRESS OF ERROR MESSAGE
1792 004602                                     9#:
1793
1794
1795 004602                                     ;
1796                                     ;MSPR:
1797                                     ;*****
1798                                     ;*TEST 37      TEST CLR, COM, INC - MODE 7
1799                                     ;*****
1800 004602 005267 174176  TST37:      INC          ;TESTN          ;INCREMENT TEST NUMBER
1801 004606 005001          CLR          R1          ;R1=0
1802 004610 005004          CLR          R4          ;
1803 004612 105104          COMB        R4          ;
1804 004614 005204          INC          R4          ;R4=400
1805 004616 005011          CLR          (R1)
1806 004620 105111          COMB        (R1)
1807 004622 005211          INC          (R1)
1808 004624 005211          INC          (R1)
1809 004626 005211          INC          (R1)
1810 004630 005014          CLR          (R4)          ;;0=402
1811 004632 005064 000002  CLR          (R4)          ;400=0
1812 004636 005164 000002  CLR          2(R4)          ;
1813 004642 005074 177400  COM          2(R4)          ;402=-1
1814 004646 001403          CLR          8-400(R4)     ;402=0
                                     BEQ          2#           ;BRANCH IF GOOD

```

```

1815 004650 1# :
1816 004650 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1817 004652 000123 .WORD 123 ;UNIQUE ERROR NUMBER
1818 004654 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
1819 ;INSTRUCTION FAILED
1820 004656 005171 000000 2# : COM 80(R1) ;402=-1
1821 004662 100403 BMI 4# ;BRANCH IF GOOD
1822 004664
1823 004664 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1824 004666 000124 .WORD 124 ;UNIQUE ERROR NUMBER
1825 004670 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
1826
1827 004672 005104 4# : COM R4
1828 004674 005274 000401 INC 8401(R4) ;402=0
1829 004700 001403 BEQ 6# ;BRANCH IF GOOD
1830 004702
1831 004702 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1832 004704 000125 .WORD 125 ;UNIQUE ERROR NUMBER
1833 004706 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
1834 ;MODE 7 FAILED
1835 004710 6# :
1836
1837 ;
1838 004710 ;MSPS:
1839 ;*****
1840 ;*TEST 40 TEST NEG MODE 7
1841 ;*****
1842 TST40:
1843 004710 005267 174070 INC #TESTN ;INCREMENT TEST NUMBER
1844 004714 005004 CLR R4
1845 004716 005014 CLR (R4) ;0=0
1846 004720 005002 CLR R2 ;
1847 004722 105102 COMB R2
1848 004724 005202 INC R2 ;R2=400
1849 004726 005012 CLR (R2) ;400=0
1850 004730 005472 177400 NEG 8-400(R2) ;NEG OF 0=0
1851 004734 103401 BCS 1# ;****
1852 004736 001403 BEQ 2# ;BRANCH IF GOOD
1853 004740
1854 004740 104000 1# : ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1855 004742 000126 .WORD 126 ;UNIQUE ERROR NUMBER
1856 004744 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
1857 ;
1858 004746 005314 2# : DEC (R4) ;0=-1
1859 004750 005474 000400 NEG 8+400(R4) ;0=1
1860 004754 001403 BEQ 3# ;BRANCH IF ERROR
1861 004756 102402 BVS 3# ;
1862 004760 100401 BMI 3# ;
1863 004762 103403 BCS 4# ;BRANCH IF GOOD
1864 004764
1865 004764 104000 3# : ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1866 004766 000127 .WORD 127 ;UNIQUE ERROR NUMBER
1867 004770 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
1868 ;NEGATE MODE 7 FAILED
1869 004772 4# :
1870

```

```

1871
1872 004772
1873
1874
1875
1876 004772
1877 004772 005267 174006
1878 004776 005004
1879 005000 105104
1880 005002 005204
1881 005004 005027
1882 005006 177777
1883 005010 001403
1884 005012
1885 005012 104000
1886 005014 000130
1887 005016 001127
1888 005020
1889
1890
1891
1892 005020
1893
1894
1895
1896 005020
1897 005020 005267 173760
1898 005024 005004
1899 005026 000277
1900 005030 000244
1901 005032 005704
1902 005034 103403
1903 005036 102402
1904 005040 100401
1905 005042 001403
1906 005044
1907 005044 104000
1908 005046 000131
1909 005050 001127
1910
1911 005052 005304
1912 005054 000277
1913 005056 000250
1914 005060 005704
1915 005062 103403
1916 005064 102402
1917 005066 001401
1918 005070 100403
1919 005072
1920 005072 104000
1921 005074 000132
1922 005076 001127
1923
1924 005100
1925
1926

;
MSPT:
;*****
;TEST 41 TEST SINGLE OPERAND MODE 2 REG 7
;*****
TST41:
INC R4 ;INCREMENT TEST NUMBER
CLR R4
COMB R4
INC R4 ;R4=400
CLR (R7); ;CLEAR NEXT LOCATION
10: .WORD -1 ;SETUP INITIAL DATA
BEQ 30 ;BRANCH IF GOOD

20:
ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
.WORD 130 ;UNIQUE ERROR NUMBER
.WORD CPUERR ;ADDRESS OF ERROR MESSAGE

30:
;
;
MSPU:
;*****
;TEST 42 TEST TST MODE 0
;*****
TST42:
INC R4 ;INCREMENT TEST NUMBER
CLR R4 ;R4=0
SCC ;CONDITION CODES =1111
CLZ ;CC=1011
TST R4 ;TEST INSTRUCTION
BCS 10
BVS 10
BMI 10 ;BRANCH IF ERROR
BEQ 20 ;BRANCH IF GOOD

10:
ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
.WORD 131 ;UNIQUE ERROR NUMBER
.WORD CPUERR ;ADDRESS OF ERROR MESSAGE
;TST MODE 0 FAILED
;R4=-1

20:
DEC R4
SCC
CLN ;CC=0111
TST R4 ;TEST INSTRUCTION MODE 0
BCS 30 ;BRANCH IF ERROR
BVS 30
BEQ 30
BMI 40 ;BRANCH IF GOOD

30:
ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
.WORD 132 ;UNIQUE ERROR NUMBER
.WORD CPUERR ;ADDRESS OF ERROR MESSAGE
;TST FAILED

40:
;

```



```

1927 005100 MSPV0:
1928 ;*****
1929 ;*TEST 43 TEST TST MODE 0 BYTE
1930 ;*****
1931 005100 TST43:
1932 005100 005267 173700 INC #TESTN ;INCREMENT TEST NUMBER
1933 005104 005004 CLR R4
1934 005106 105104 COMB R4 ;0=000 377
1935 005110 000277 SCC
1936 005112 000250 CLN ;CC=0111
1937 005114 105704 TSTB R4 ;*TEST INSTRUCTION ON EVEN BYTE
1938 005116 102403 BVS 1# ;BRANCH IF ERROR
1939 005120 103402 BCS 1#
1940 005122 102401 BVS 1#
1941 005124 100403 BMI 2# ;BRANCH IF GOOD
1942 005'26 1#
1943 005126 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1944 005130 000133 .WORD 133 ;UNIQUE ERROR NUMBER
1945 005132 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
1946
1947 005134 005204 2# INC R4 ;POINT TO 1
1948 005136 105704 TSTB R4 ;TEST INSTRUCTION
1949 005140 001403 BEQ 4# ;BRANCH IF GOOD
1950 005142 3#
1951 005142 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1952 005144 000134 .WORD 134 ;UNIQUE ERROR NUMBER
1953 005146 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
1954 ;TST FAILED ON BYTE
1955 005150 4#
1956
1957 ;
1958 005150 MSPV:
1959 ;*****
1960 ;*TEST 44 TEST TST MODE 1
1961 ;*****
1962 005150 TST44:
1963 005150 005267 173630 INC #TESTN ;INCREMENT TEST NUMBER
1964 005154 005004 CLR R4
1965 005156 005014 CLR (R4) ;0=0
1966 005160 000277 SCC
1967 005162 000244 CLZ ;CC=1011
1968 005164 005714 TST (R4) ;*TEST INSTRUCTION IN MODE 1
1969 005166 103403 BCS 1# ;BRANCH IF ERROR
1970 005170 102402 BVS 1#
1971 005172 100401 BMI 1#
1972 005174 001403 BEQ 2# ;BRANCH IF GOOD
1973 005176 1#
1974 005176 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1975 005200 000135 .WORD 135 ;UNIQUE ERROR NUMBER
1976 005202 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
1977
1978 005204 005214 2# INC (R4) ;0=1
1979 005206 000277 SCC
1980 005210 005714 TST (R4) ;TEST INSTRUCTION
1981 005212 001403 BEQ 3# ;BRANCH IF ERROR
1982 005214 102402 BVS 3#

```

```

1983 005216 103401          BCS      3#
1984 005220 100003          BPL      4#          ;BRANCH IF GOOD
1985 005222                3#:
1986 005222 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1987 005224 000136          .WORD    136          ;UNIQUE ERROR NUMBER
1988 005226 001127          .WORD    CPUERR       ;ADDRESS OF ERROR MESSAGE
1989
1990 005230                4#:
1991
1992
1993 005230                ;
1994                MSPX:
1995                ;*****
1996                ;*TEST 45      TEST TST MODE 1 BYTE
1997                ;*****
1997 005230                TST45:
1998 005230 005267 173550    INC      #TESTN          ;INCREMENT TEST NUMBER
1999 005234 005004          CLR      R4              ;R4=0
2000 005236 005014          CLR      (R4)
2001 005240 105114          COMB    (R4)
2002 005242 005214          INC      (R4)          ;0=001 000
2003 005244 000277          SCC
2004 005246 000244          CLZ          ;CC=1011
2005 005250 105714          TSTB    (R4)          ;*TEST INTRUCTION
2006 005252 103403          BCS     1#              ;BRANCH IF ERROR
2007 005254 102402          BVS     1#
2008 005256 100401          BMI     1#
2009 005260 001403          BEQ     2#              ;BRANCH IF GOOD
2010 005262
2011 005262 104000          1#:          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2012 005264 000137          .WORD    137          ;UNIQUE ERROR NUMBER
2013 005266 001127          .WORD    CPUERR       ;ADDRESS OF ERROR MESSAGE
2014
2015 005270 005204          2#:          INC      R4              ;R4=1
2016 005272 000277          SCC
2017 005274 105714          TSTB    (R4)          ; TEST INSTRUCTION
2018 005276 001403          BEQ     3#              ;BRANCH IF ERROR
2019 005300 100402          BMI     3#
2020 005302 102401          BVS     3#
2021 005304 103003          BCC     4#              ;BRANCH IF GOOD
2022 005306
2023 005306 104000          3#:          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2024 005310 000140          .WORD    140          ;UNIQUE ERROR NUMBER
2025 005312 001127          .WORD    CPUERR       ;ADDRESS OF ERROR MESSAGE
2026
2027 005314                4#:
2028
2029
2030 005314                ;
2031                MSPY:
2032                ;*****
2033                ;*TEST 46      TEST TST MODE 2
2034                ;*****
2034 005314                TST46:
2035 005314 005267 173464    INC      #TESTN          ;INCREMENT TEST NUMBER
2036 005320 005004          CLR      R4              ;
2037 005322 005024          CLR      (R4)+          ;0=0
2038 005324 005014          CLR      (R4)

```

```

2039 005326 005114 COM (R4) ;2=-1
2040 005330 005004 CLR R4 ;R4=0
2041 005332 000277 SCC ;
2042 005334 000244 CLZ ;CC=1011
2043 005336 005724 TST (R4)+ ; TEST INSTRUCTION
2044 005340 103403 BCS 1# ;BRANCH IF ERROR
2045 005342 102402 BVS 1#
2046 005344 100401 BMI 1#
2047 005346 001403 BEQ 2# ;BRANCH IF GOOD
2048 005350 1# :
2049 005350 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2050 005352 000141 .WORD 141 ;UNIQUE ERROR NUMBER
2051 005354 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
2052 ;MODE 2 TEST FAILED
2053 005356 005724 2# : TST (R4)+ ;TST LOC2
2054 005360 103403 BCS 3#
2055 005362 102402 BVS 3#
2056 005364 001401 BEQ 3#
2057 005366 100403 BMI 4#
2058 005370 3# :
2059 005370 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2060 005372 000142 .WORD 142 ;UNIQUE ERROR NUMBER
2061 005374 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
2062 ;MODE 2 FAILED
2063 005376 4# :
2064 ;
2065 ;
2066 005376 ; MSPZ:
2067 ;*****
2068 ;*TEST 47 TEST TST MODE 2 BYTE
2069 ;*****
2070 TST47:
2071 005376 005267 173402 INC #TESTN ;INCREMENT TEST NUMBER
2072 005402 005004 CLR R4
2073 005404 005024 CLR (R4)+ ;
2074 005406 105144 COMB -(R4) ;0=377 000
2075 005410 005304 DEC R4 ;R4=0
2076 005412 000277 SCC ;
2077 005414 000244 CLZ ;CC=1011
2078 005416 105724 TSTB (R4)+ ;
2079 005420 102403 BVS 1# ;BRANCH IF ERROR
2080 005422 103402 BCS 1#
2081 005424 100401 BMI 1#
2082 005426 001403 BEQ 2# ;BRANCH IF GOOD
2083 005430 1# :
2084 005430 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2085 005432 000143 .WORD 143 ;UNIQUE ERROR NUMBER
2086 005434 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
2087 ;MODE 2 EVEN BYTE FAILED
2088 005436 000277 2# : SCC ;
2089 005440 000250 CLN ;CC=0111
2090 005442 105724 TSTB (R4)+ ;
2091 005444 001403 BEQ 3# ;
2092 005446 103402 BCS 3# ;
2093 005450 102401 BVS 3# ;
2094 005452 100403 BMI 4# ;BRANCH IF GOOD

```



```

2151 005562 005267 173216      INC      $TESTN      ;INCREMENT TEST NUMBER
2152 005566 005004              CLR      R4
2153 005570 005014              CLR      (R4)          ;0=0
2154 005572 105114              COMB     (R4)          ;
2155 005574 005214              INC      (R4)          ;0=400
2156 005576 005001              CLR      R1
2157 005600 105101              COMB     R1
2158 005602 005201              INC      R1          ;R1=400
2159 005604 005011              CLR      (R1)        ;400=0
2160 005606 000277              SCC
2161 005610 005734              TST      @R4)+       ;400=0
2162 005612 103403              BCS     1#           ;ERROR IF CARRY
2163 005614 102402              BVS     1#           ;ERROR IF OVERFLOW
2164 005616 100401              BMI     1#           ;ERROR IF MINUS
2165 005620 001403              BEQ     2#           ;ERROR IF NOT EQUAL
2166                                ;CC SHOULD = 0100
2167 005622                                1# :
2168 005622 104000              ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
2169 005624 000147              .WORD   147          ;UNIQUE ERROR NUMBER
2170 005626 001127              .WORD   CPUERR      ;ADDRESS OF ERROR MESSAGE
2171 005630 005304              2# : DEC      R4
2172 005632 005304              DEC      R4
2173 005634 005704              TST      R4          ;SEE IF AUTO-INC WORKED
2174 005636 001403              BEQ     4#           ;ERROR IF R4 NE 0
2175                                ;AUTO-INC FAILED
2176 005640                                3# :
2177 005640 104000              ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
2178 005642 000150              .WORD   150          ;UNIQUE ERROR NUMBER
2179 005644 001127              .WORD   CPUERR      ;ADDRESS OF ERROR MESSAGE
2180 005646                                4# :
2181                                ;
2182                                ;
2183 005646                                ;MSTB3:
2184                                ;*****
2185                                ;*TEST 52      TEST TST MODE 3 BYTE
2186                                ;*****
2187                                ;TST52:
2188 005646 005267 173132      INC      $TESTN      ;INCREMENT TEST NUMBER
2189 005652 005004              CLR      R4
2190 005654 005014              CLR      (R4)
2191 005656 105114              COMB     (R4)
2192 005660 005214              INC      (R4)
2193 005662 005214              INC      (R4)          ;0=401
2194 005664 005001              CLR      R1
2195 005666 105101              COMB     R1
2196 005670 005201              INC      R1          ;R1=400
2197 005672 005011              CLR      (R1)
2198 005674 005111              COM      (R1)
2199 005676 105011              CLR      (R1)        ;400=377 000
2200 005700 105734              TST      @R4)+       ;** TEST INSTRUCTION
2201 005702 001403              BEQ     1#           ;ERROR IF EQUAL
2202 005704 103402              BCS     1#           ;ERROR IF CARRY SET
2203 005706 102401              BVS     1#           ;ERROR IR OVERFLOW
2204 005710 100403              BMI     2#           ;BRANCH IF MINUS
2205                                ;CC ERROR
2206 005712                                1# :

```

```

2207 005712 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2208 005714 000151          .WORD          151          ;UNIQUE ERROR NUMBER
2209 005716 001127          .WORD          CPUERR       ;ADDRESS OF ERROR MESSAGE
2210 005720 005304          2#: DEC          R4          ;
2211 005722 005304          DEC          R4          ;
2212 005724 001403          BEQ          4#          ;BRANCH IF AUTO-INC WORKED
2213                                     ;AUTO-INC FAILED
2214 005726          3#:
2215 005726 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2216 005730 000152          .WORD          152          ;UNIQUE ERROR NUMBER
2217 005732 001127          .WORD          CPUERR       ;ADDRESS OF ERROR MESSAGE
2218 005734          4#:
2219
2220
2221 005734          ;
2222          ;MST4:
2223          ;*****
2224          ;*TEST 53      TEST TST MODE 4
2225          ;*****
2226 005734          TST53:
2227 005734 005267 173044      INC          $TESTN        ;INCREMENT TEST NUMBER
2228 005740 005004          CLR          R4
2229 005742 005014          CLR          (R4)         ;0=0
2230 005744 005204          INC          R4
2231 005746 005204          INC          R4          ;R4=2
2232 005750 000277          SCC
2233 005752 000244          CLZ          ;CC=1011
2234 005754 005744          TST          -(R4)       ;**TEST INTRUCTION
2235 005756 103403          BCS          1#          ;ERROR IF CARRY
2236 005760 102402          BVS          1#          ;ERROR IF OVERFLOW
2237 005762 100401          BMI          1#          ;ERROR IF MINUS
2238 005764 001403          BEQ          2#          ;BRANCH IF GOOD
2239                                     ;ERROR! CC WRONG
2240 005766          1#:
2241 005770 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2242 005772 000153          .WORD          153          ;UNIQUE ERROR NUMBER
2243 005774 001127          .WORD          CPUERR       ;ADDRESS OF ERROR MESSAGE
2244 005776 005704          2#: TST          R4          ;INSURE CORRECT AUTO-DEC
2245                                     ;BRANCH IF GOOD AUTO-DEC
2246                                     ;BAD AUTO-DEC
2247 006000          3#:
2248 006002 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2249 006004 000154          .WORD          154          ;UNIQUE ERROR NUMBER
2250 006006 001127          .WORD          CPUERR       ;ADDRESS OF ERROR MESSAGE
2251
2252
2253 006006          ;
2254          ;MST4B:
2255          ;*****
2256          ;*TEST 54      TEST TST MODE 4 BYTE
2257          ;*****
2258 006006          TST54:
2259 006012 005267 172772      INC          $TESTN        ;INCREMENT TEST NUMBER
2260 006014 005004          CLR          R4
2261 006016 005014          CLR          (R4)
2262 006020 105114          COM          (R4)
2263                                     ;0=377 000

```

```

2263 006022 000277 SCC
2264 006024 005204 INC R4
2265 006026 005204 INC R4 ;R4=2
2266 006030 105744 TSTB -(R4) ;**TEST INSTRUCTION
2267 006032 001403 BEQ 1# ;ERROR IF EQUAL TO 0
2268 006034 103402 BCS 1# ;ERROR IF CARRY
2269 006036 102401 BVS 1# ;ERROR IF OVERFLOW
2270 006040 100403 BMI 2# ;BRANCH IF MINUS
2271 ;ERROR! CC SHOULD EQUAL 0100
2272 006042 1# :
2273 006042 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2274 006044 000155 .WORD 155 ;UNIQUE ERROR NUMBER
2275 006046 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
2276 006050 105744 2# : TSTB -(R4) ;**TEST EVEN BYTE
2277 006052 001403 BEQ 4# ;BRANCH IF GOOD
2278 ;ERROR! CC SHOULD EQUAL 0100 AND R4=-1
2279 006054 3# :
2280 006054 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2281 006056 000156 .WORD 156 ;UNIQUE ERROR NUMBER
2282 006060 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
2283 006062 4# :
2284 ;
2285 006062 MST5:
2286 ;*****
2287 ;*TEST 55 TEST TST MODE 5
2288 ;*****
2289 006062 TST55:
2290 006062 005267 172716 INC #TESTN ;INCREMENT TEST NUMBER
2291 006066 005004 CLR R4 ;
2292 006070 005024 CLR (R4) ;0=0, R4=2
2293 006072 000277 SCC
2294 006074 000244 CLZ ;CC=1011
2295 006076 005754 TST B-(R4) ;TEST INSTRUCTION
2296 006100 103403 BCS 1# ;ERROR IF CARRY
2297 006102 102402 BVS 1# ;ERROR IF OVERFLOW
2298 006104 100401 BMI 1# ;ERROR IF MINUS
2299 006106 001403 BEQ 2# ;BRANCH IF GOOD
2300 ;ERROR! CC WRONG, SHOULD = 0100
2301 006110 1# :
2302 006110 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2303 006112 000157 .WORD 157 ;UNIQUE ERROR NUMBER
2304 006114 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
2305 006116 005704 2# : TST R4
2306 006120 001403 BEQ 4# ;BRANCH IF AUTO-DEC WORKED
2307 ;ERROR! AUTO-DEC FAILED
2308 006122 3# :
2309 006122 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2310 006124 000160 .WORD 160 ;UNIQUE ERROR NUMBER
2311 006126 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
2312 006130 4# :
2313 ;
2314 ;
2315 006130 MST58:
2316 ;*****
2317 ;*TEST 56 TEST TST MODE 5 BYTE
2318 ;*****

```

```

2319 006130          TST56:
2320 006130 005267 172650      INC      $TESTN          ;INCREMENT TEST NUMBER
2321 006134 005004          CLR      R4
2322 006136 005014          CLR      (R4)
2323 006140 105114          COMB    (R4)
2324 006142 005214          INC      (R4)          ;0=400
2325 006144 005034          CLR      @-R4)         ;400=0, R4=2
2326 006146 005154          COM      @-(R4)
2327 006150 105134          COMB    @-R4)         ;400=377 000 R4=2
2328 006152 105754          TSTB   @-(R4)         ;**TEST INSTRUCTION
2329 006154 103403          BCS    1#             ;ERROR IF CARRY
2330 006156 100402          BMI    1#             ;ERROR IF MINUS
2331 006160 102401          BVS    1#             ;ERROR IF OVERFLOW
2332 006162 001403          BEQ    2#             ;BRANCH IF GOOD
2333                                     ;ERROR! CC SHOULD = 0100
2334 006164          1#:
2335 006164 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2336 006166 000161          .WORD    161          ;UNIQUE ERROR NUMBER
2337 006170 001127          .WORD    CPUERR       ;ADDRESS OF ERROR MESSAGE
2338 006172 005224          2#:  INC      (R4)         ;0=401
2339 006174 105754          TSTB   @-(R4)         ;**TEST INSTRUCTION
2340 006176 100403          BMI    4#             ;BRANCH IF GOOD
2341                                     ;EVEN BYTE FAILURE
2342 006200          3#:
2343 006200 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2344 006202 000162          .WORD    162          ;UNIQUE ERROR NUMBER
2345 006204 001127          .WORD    CPUERR       ;ADDRESS OF ERROR MESSAGE
2346 006206          4#:
2347
2348
2349 006206          ;
2350          MST6:
2351          ;*****
2352          ;*TEST 57      TEST TST MODE 6
2353          ;*****
2354 006206 005267 172572      TST57:
2355 006212 005004          INC      $TESTN          ;INCREMENT TEST NUMBER
2356 006214 005014          CLR      R4
2357 006216 105104          CLR      (R4)          ;0=0
2358 006220 005204          COMB    R4             ;R4=400
2359 006222 005014          INC      R4
2360 006224 005114          CLR      (R4)
2361 006226 005764 17740     COM      -400(R4)       ;400=-1
2362 006232 103403          TST     1#             ;**TEST LOCATION 0
2363 006234 102402          BCS    1#             ;ERROR IF CARRY
2364 006236 100401          BVS    1#             ;ERROR IF OVERFLOW
2365 006240 001403          BMI    1#             ;ERROR IF MINUS
2366                                     ;BRANCH IF ZERO
2367                                     ;ERROR! CC ARE WRONG
2368 006242          1#:
2369 006244 000163          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2370 006246 001127          .WORD    163          ;UNIQUE ERROR NUMBER
2371 006250 005004          .WORD    CPUERR       ;ADDRESS OF ERROR MESSAGE
2372 006252 005764 000400     2#:  CLR      R4
2373 006256 001401          TST     400(R4)       ;TST LOCATION 400
2374 006260 100403          BEQ    3#             ;ERROR IF EQUAL
2375                                     ;BRANCH IF MINUS
2376                                     ;
2377                                     ;
2378                                     ;
2379                                     ;
2380                                     ;
2381                                     ;
2382                                     ;
2383                                     ;
2384                                     ;
2385                                     ;
2386                                     ;
2387                                     ;
2388                                     ;
2389                                     ;
2390                                     ;
2391                                     ;
2392                                     ;
2393                                     ;
2394                                     ;
2395                                     ;
2396                                     ;
2397                                     ;
2398                                     ;
2399                                     ;

```



```

2375                                     ;ERROR! CC ERROR
2376 006262                               3#:
2377 006262 104000                        ERROR
2378 006264 000164                        .WORD 164
2379 006266 001127                        .WORD CPUERR
2380 006270                               ;ALL ERRORS TO TRAP TO EMT VECTOR
2381                                     ;UNIQUE ERROR NUMBER
2382                                     ;ADDRESS OF ERROR MESSAGE
2383 006270                               4#:
2384                                     ;
2385                                     ;MST7:
2386                                     ;*****
2387 006270                               ;*TEST 60 TEST TST MODE 7
2388 006270 005267 172510                 ;*****
2389 006274 005004                        TST60:
2390 006276 005014                        INC      $TESTN           ;INCREMENT TEST NUMBER
2391 006300 005124                        CLR      R4
2392 006302 005014                        CLR      (R4)
2393 006304 005002                        CLR      (R4)+         ;0=-1
2394 006306 005004                        CLR      (R4)         ;2=0
2395 006310 105104                        CLR      R2           ;R2=0
2396 006312 005204                        CLR      R4
2397 006314 005014                        COMB    R4
2398 006316 005774 177402                 INC      R4           ;R4=400
2399 006322 103403                        CLR      (R4)         ;400=0
2400 006324 102402                        TST     @-376(R4)     ;**TEST LOCATION 0
2401 006326 001401                        BCS     1#           ;ERROR IF CARRY
2402 006330 100403                        BVS     1#           ;ERROR IF OVERFLOW
2403                                     BEQ     1#           ;ERROR IF ZERO
2404 006332                               BMI     2#           ;BRANCH IF GOOD
2405                                     ;ERROR! ERROR IN CC
2406 006332 104000                        1#:
2407 006334 000165                        ERROR
2408 006336 001127                        .WORD 165
2409 006340 005222                        .WORD CPUERR
2410 006342 005774 177402                 2#:
2411 006346 100401                        INC      (R2)+         ;0=-2 R2=2
2412 006350 001403                        TST     @-376(R4)     ;** CHECK CONTENTS OF LOCATION 2
2413                                     BMI     3#           ;ERROR IF MINUS
2414                                     BEQ     4#           ;BRANCH IF GOOD
2415                                     ;ERROR! CC SHOULD = 0100
2416 006352                               3#:
2417 006352 104000                        ERROR
2418 006354 000166                        .WORD 166
2419 006356 001127                        .WORD CPUERR
2420                                     ;ALL ERRORS TO TRAP TO EMT VECTOR
2421                                     ;UNIQUE ERROR NUMBER
2422                                     ;ADDRESS OF ERROR MESSAGE
2423                                     4#:
2424                                     ;
2425                                     ;MDMO:
2426                                     ;*****
2427                                     ;*TEST 61 TEST MOVE MODE 0
2428                                     ;*****
2429 006360                               TST61:
2430 006360 005267 172420                 INC      $TESTN           ;INCREMENT TEST NUMBER
2431 006364 005004                        CLR      R4           ;R4=0
2432 006366 005001                        CLR      R1
2433 006370 005101                        COM     R1           ;R1=-1
2434 006372 010104                        MOV     R1,R4        ;**TEST MOVE INSTRUCTION

```



```

2487 006504          1#:          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2488 006504 104000   .WORD          172          ;UNIQUE ERROR NUMBER
2489 006506 000172   .WORD          CPUERR        ;ADDRESS OF ERROR MESSAGE
2490 006510 001127   .WORD          R1            ;R1=1
2491 006512 005101   COM           R1            ;GET TWO'S COMPLIMENT, R1=-1
2492 006514 005201   INC           R1            ;**TEST R4-R1 (1- 1= 0
2493 006516 160104   SUB           R1,R4         ;BRANCH IF ZERO
2494 006520 001403   BEQ          4#            ;ERROR! CC SHOULD = 0100
2495
2496 006522          3#:          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2497 006522 104000   .WORD          173          ;UNIQUE ERROR NUMBER
2498 006524 000173   .WORD          CPUERR        ;ADDRESS OF ERROR MESSAGE
2499 006526 001127
2500 006530
2501
2502
2503 006530          ;
2504          MDM27:
2505          ;*****
2506          ;*TEST 64          TEST MOV MODE 27,00
2507          ;*****
2508          TST64:
2509 006530 005267 172250   INC          #TESTN         ;INCREMENT TEST NUMBER
2510 006534 000257          CCC          ;CC=0000
2511 006536 012704 125252   MOV          #125252,R4     ;**TEST MOVE
2512 006542 001401          BEQ          1#            ;ERROR IF = 0
2513 006544 100403          BMI          2#            ;BRANCH IF MINUS
2514          ;ERROR! CC SHOULD = 1000
2515 006546          1#:          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2516 006550 104000   .WORD          174          ;UNIQUE ERROR NUMBER
2517 006552 001127   .WORD          CPUERR        ;ADDRESS OF ERROR MESSAGE
2518 006554 012701 052525   MOV          #052525,R1     ;**TEST MOVE
2519 006560 100401          BMI          3#            ;ERROR IF MINUS
2520 006562 001003          BNE          4#            ;BRANCH IF NE 0
2521          ;ERROR! CC SHOULD = 0000
2522 006564          3#:          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2523 006564 104000   .WORD          175          ;UNIQUE ERROR NUMBER
2524 006566 000175   .WORD          CPUERR        ;ADDRESS OF ERROR MESSAGE
2525 006570 001127   .WORD          R1,R4         ;R1+R4=-1
2526 006572 060104          ADD          6#            ;BRANCH IF MINUS
2527 006574 100403          BMI          ;ERROR! MOV FAILED
2528
2529 006576          5#:          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2530 006576 104000   .WORD          176          ;UNIQUE ERROR NUMBER
2531 006600 000176   .WORD          CPUERR        ;ADDRESS OF ERROR MESSAGE
2532 006602 001127   .WORD          R4            ;R4+1=0
2533 006604 005204          INC          5#            ;ERROR IF NOT ZERO
2534 006606 001373          BNE
2535
2536          ;
2537 006610          ;
2538          MBI00:
2539          ;*****
2540          ;*TEST 65          TEST BIC, BIS MODE 0,0
2541          ;*****
2542 006610 005267 172170   INC          #TESTN         ;INCREMENT TEST NUMBER

```

```

2543 006614 005004          CLR      R4
2544 006616 005104          COM      R4                ;R4=-1
2545 006620 012701 125252  MOV      #125252,R1        ;SETUP R1 TEST DATA
2546 006624 012702 052525  MOV      #052525,R2        ;R2=COMPLIMENT OF R1
2547 006630 000261          SEC
2548 006632 040104          BIC      R1,R4            ;**TEST BIC WITH CARRY SET
2549 006634 103003          BCC      1#              ;ERROR IF NO CARRY
2550 006636 102402          BVS      1#              ;ERROR IF OVERFLOW
2551 006640 001401          BEQ      1#              ;ERROR IF 0
2552 006642 100003          BPL      2#              ;BRANCH IF PLUS
2553
2554 006644                1#:
2555 006644 104000          ERROR
2556 006646 000177          .WORD   177              ;ALL ERRORS TO TRAP TO EMT VECTOR
2557 006650 001127          .WORD   CPUERR          ;UNIQUE ERROR NUMBER
2558 006652 020402          2#:  CMP      R4,R2        ;ADDRESS OF ERROR MESSAGE
2559 006654 001403          BEQ      4#              ;COMPARE CONTENTS OF R4 AND R2
2560
2561 006656                3#:
2562 006656 104000          ERROR
2563 006660 000200          .WORD   200              ;ALL ERRORS TO TRAP TO EMT VECTOR
2564 006662 001127          .WORD   CPUERR          ;UNIQUE ERROR NUMBER
2565 006664 005301          4#:  DEC      R1              ;ADDRESS OF ERROR MESSAGE
2566 006666 050201          BIS      R2,R1          ;R1=125251
2567 006670 100403          BMI      6#              ;BIS 052525 AND 125251=177775
2568
2569 006672                5#:
2570 006672 104000          ERROR
2571 006674 000201          .WORD   201              ;ALL ERRORS TO TRAP TO EMT VECTOR
2572 006676 001127          .WORD   CPUERR          ;UNIQUE ERROR NUMBER
2573 006700 005201          6#:  INC      R1              ;ADDRESS OF ERROR MESSAGE
2574 006702 005201          INC      R1
2575 006704 005201          INC      R1              ;R1=0
2576 006706 001371          BNE      5#              ;ERROR IF NE 0
2577
2578
2579 006710
2580
2581
2582
2583
2584 006710
2585 006714 005267 172070  TST66:
2586 006720 012704 100000  INC      #TESTN          ;INCREMENT TEST NUMBER
2587 006724 012702 052525  MOV      #125252,R1        ;R1=125252
2588 006730 030401          MOV      #100000,R4       ;R4=100000
2589 006732 001401          MOV      #052525,R2       ;R2=052525
2590 006734 100403          BIT      R4,R1            ;**TEST OF BIT .CC=1000
2591
2592 006736                1#:
2593 006736 104000          ERROR
2594 006740 000202          .WORD   202              ;ALL ERRORS TO TRAP TO EMT VECTOR
2595 006742 001127          .WORD   CPUERR          ;UNIQUE ERROR NUMBER
2596 006744 020401          2#:  CMP      R4,R1          ;ADDRESS OF ERROR MESSAGE
2597 006746 001402          BEQ      3#              ;*TEST 100000-125252=25252
2598 006750 103001          BCC      3#              ;ERROR IF EQUAL 0
                          ;ERROR IF CARRY CLEARED

```

```

2599 006752 100403          BMI      4:          ;BRANCH IF GOOD
2600                                ;ERROR! CC SHOULD = 0010
2601 006754                3:
2602 006754 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2603 006756 000203          .WORD      203          ;UNIQUE ERROR NUMBER
2604 006760 001127          .WORD      CPUERR       ;ADDRESS OF ERROR MESSAGE
2605 006762 020104          4:      CMP      R1,R4          ;125252-100000 = 25252
2606 006764 001403          BEQ      5:          ;ERROR IF EQUAL
2607 006766 103402          BCS      5:          ;ERROR IF CARRY
2608 006770 102401          BVS      5:          ;ERROR IF OVERFLOW
2609 006772 100003          BPL      6:          ;BRANCH IF GOOD
2610                                ;ERROR! CC SHOULD =0001
2611 006774                5:
2612 006774 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2613 006776 000204          .WORD      204          ;UNIQUE ERROR NUMBER
2614 007000 001127          .WORD      CPUERR       ;ADDRESS OF ERROR MESSAGE
2615 007002 005004          6:      CLR      R4
2616 007004 005204          INC      R4          ;R4=1
2617 007006 000277          SCC
2618 007010 030401          BIT      R4,R1          ;R4 & R1 = 2
2619 007012 001403          BEQ      8:          ;BRANCH IF GOOD
2620                                ;ERROR! CC SHOULD = 0101
2621 007014                7:
2622 007014 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2623 007016 000205          .WORD      205          ;UNIQUE ERROR NUMBER
2624 007020 001127          .WORD      CPUERR       ;ADDRESS OF ERROR MESSAGE
2625 007022                8:
2626
2627
2628 007022                ;
2629                                ;*****
2630                                ;*TEST 67      TEST MOV, MOV8 MODE 1,1 AND SIGN EXT ON MOV8 TO GPR
2631                                ;*****
2632 007022                TST67:
2633 007022 005267 171756          INC      $TESTN          ;INCREMENT TEST NUMBER
2634 007026 012704 000400          MOV      @400,R4          ;R4=400
2635 007032 012701 000402          MOV      @402,R1          ;R1=402
2636 007036 005014                CLR      (R4)
2637 007040 005114                COM      (R4)
2638 007042 005011                CLR      (R1)
2639 007044 105111                COMB     (R1)
2640 007046 005002                CLR      R2
2641 007050 012703 000405          MOV      @405,R3          ;402=000 377
2642 007054 000277                SCC
2643 007056 011412                MOV      (R4),(R2)       ;R2=0
2644 007060 001403                BEQ      1:          ;R3=405
2645 007062 102402                BVS      1:          ;CC=1111
2646 007064 103001                BCC      1:          ;MOV 400 TO 0 ,0=-1
2647 007066 100403                BMI      2:          ;ERROR IF 0
2648                                ;ERROR IF OVERFLOW
2649 007070                1:      ;ERROR IF NO CARRY
2650                                ;BRANCH IF GOOD
2651 007072 104000          1:      ERROR          ;ERROR! CC SHOULD =1001
2652 007074 000206          .WORD      206          ;ALL ERRORS TO TRAP TO EMT VECTOR
2653 007076 005212          .WORD      CPUERR       ;UNIQUE ERROR NUMBER
2654 007100 001004          2:      INC      (R2)          ;ADDRESS OF ERROR MESSAGE
                                ;0=0
                                ;ERROR IF NOT 0

```

```

2655 007102 000257          CCC          ;CC=0000
2656 007104 111113          MOVB (R1),(R3) ;ERROR 405-377
2657 007106 001401          BEQ 3#        ;ERROR IF EQUAL
2658 007110 100403          BMI 4#        ;BRANCH IF GOOD
2659 007112
2660 007112 104000          3#:          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2661 007114 000207          .WORD 207     ;UNIQUE ERROR NUMBER
2662 007116 001127          .WORD CPUERR  ;ADDRESS OF ERROR MESSAGE
2663 007120 105213          4#:          INCB (R3)     ;405=0
2664 007122 001373          BNE 3#        ;ERROR IF 405 NOT 0
2665          ;CHECK THAT SIGN EXTENSION OCCURS ON A MOVB TO GENERAL REGISTER.
2666 007124 005002          CLR R2        ;INIT R2 TO ZERO.
2667 007126 111102          MOVB (R1),R2  ;MOVE 377 TO R2
2668 007130 100005          BPL 5#        ;ERROR! BIT 15 SHOULD BE SET.
2669 007132 102404          BVS 5#        ;V BIT SHOULD BE CLEARED
2670 007134 103403          BCS 5#        ;CARRY BIT SHOULD BE UNAFFECTED
2671 007136 022702 177777          CMP #177777,R2 ;TEST R2
2672 007142 001403          BEQ 6#        ;SIGN EXTENDED THROUGH UPPER BYTE
2673          ;ERROR! BYTE SHOULD HAVE
2674          ;SIGN EXTENDED THROUGH UPPER BYTE
2675 007144
2676 007144 104000          5#:          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2677 007146 000210          .WORD 210     ;UNIQUE ERROR NUMBER
2678 007150 001127          .WORD CPUERR  ;ADDRESS OF ERROR MESSAGE
2679 007152
2680
2681
2682 007152          ;
2683          ;MA11:
2684          ;*****
2685          ;TEST 70      TEST ADD MODE 1,1
2686          ;*****
2687 007152 005267 171626          TST70:      INC #TESTN     ;INCREMENT TEST NUMBER
2688 007156 012704 000400          MOV #400,R4   ;R4=400
2689 007162 012701 000402          MOV #402,R1   ;R1=402
2690 007166 012714 177753          MOV #-25,(R4) ;400=-25
2691 007172 012711 000024          MOV #24,(R1)  ;402=24
2692 007176 061114          ADD (R1),(R4) ;-25+24=-1
2693 007200 001404          BEQ 1#        ;ERROR IF 0
2694 007202 103403          BCS 1#        ;ERROR IF CARRY
2695 007204 100002          BPL 1#        ;ERROR IF POSITIVE RESULT
2696 007206 005214          INC (R4)      ;-1+1=0
2697 007210 001403          BEQ 2#        ;BRANCH IF GOOD
2698          ;ERROR! CC SHOULD = 1000
2699 007212
2700 007212 104000          1#:          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2701 007214 000211          .WORD 211     ;UNIQUE ERROR NUMBER
2702 007216 001127          .WORD CPUERR  ;ADDRESS OF ERROR MESSAGE
2703 007220
2704
2705
2706 007220          ;
2707          ;MS11:
2708          ;*****
2709          ;TEST 71      TEST SUB MODE 1,1
2710          ;*****
2711 007220          ;TST71:

```

```

2711 007220 005267 171560      INC      #TESTN      ;INCREMENT TEST NUMBER
2712 007224 012704 000400      MOV      #400,R4      ;R4=400
2713 007230 012701 000404      MOV      #404,R1      ;R1=404
2714 007234 012714 000003      MOV      #3,(R4)      ;400=3
2715 007240 012711 000006      MOV      #6,(R1)      ;406=6
2716 007244 000277              SCC              ;CC=1111
2717 007246 161411              SUB      (R4),(R1)    ;6-3=3
2718 007250 001402              BEQ      1#           ;ERROR IF 0
2719 007252 100401              BMI      1#           ;ERROR IF MINUS
2720 007254 103003              BCC      2#           ;BRANCH IF GOOD
2721                                ;ERROR! CC SHOULD = 0000
2722 007256                                1#:
2723 007256 104000              .ERROR      ;ALL ERRORS TO TRAP TO EMT VECTOR
2724 007260 000212              .WORD      212      ;UNIQUE ERROR NUMBER
2725 007262 001127              .WORD      CPUERR   ;ADDRESS OF ERROR MESSAGE
2726 007264 161411              2#: SUB      (R4),(R1) ;3-3=0
2727 007266 001373              BNE      1#           ;ERROR IF NOT 0
2728
2729
2730 007270                                ;
2731                                ;*****
2732                                ;*TEST 72      TEST BIC, BIS MODE 1.1
2733                                ;*****
2734                                ;TST72:
2735 007270 005267 171510      INC      #TESTN      ;INCREMENT TEST NUMBER
2736 007274 012704 000400      MOV      #400,R4      ;R4=400
2737 007300 012701 000402      MOV      #402,R1      ;R1=402
2738 007304 012714 052525      MOV      #052525,(R4) ;400=052525
2739 007310 012711 125252      MOV      #125252,(R1) ;402=125252
2740 007314 051411              BIS      (R4),(R1)    ;R4 V R1 = -1
2741 007316 001401              BEQ      1#           ;ERROR IF 0
2742 007320 100403              BMI      2#           ;BRANCH IF GOOD
2743                                ;ERROR! CC SHOULD = 1000
2744 007322                                1#:
2745 007322 104000              .ERROR      ;ALL ERRORS TO TRAP TO EMT VECTOR
2746 007324 000213              .WORD      213      ;UNIQUE ERROR NUMBER
2747 007326 001127              .WORD      CPUERR   ;ADDRESS OF ERROR MESSAGE
2748 007330 005211              2#: INC      (R1)      ;402=0
2749 007332 001403              BEQ      4#           ;BRANCH IF GOOD
2750                                ;ERROR! CC SHOULD = 0100
2751 007334                                3#:
2752 007334 104000              .ERROR      ;ALL ERRORS TO TRAP TO EMT VECTOR
2753 007336 000214              .WORD      214      ;UNIQUE ERROR NUMBER
2754 007340 001127              .WORD      CPUERR   ;ADDRESS OF ERROR MESSAGE
2755 007342 005311              4#: DEC      (R1)      ;402=-1
2756 007344 041411              BIC      (R4),(R1)    ;R1=125252
2757 007346 001401              BEQ      5#           ;ERROR IF 0
2758 007350 100403              BMI      6#           ;BRANCH IF GOOD
2759                                ;ERROR! CC SHOULD = 1000
2760 007352                                5#:
2761 007352 104000              .ERROR      ;ALL ERRORS TO TRAP TO EMT VECTOR
2762 007354 000215              .WORD      215      ;UNIQUE ERROR NUMBER
2763 007356 001127              .WORD      CPUERR   ;ADDRESS OF ERROR MESSAGE
2764 007360 005111              6#: COM      (R1)      ;402=052525
2765 007362 041114              BIC      (R1),(R4)    ;400=0
2766 007364 001403              BEQ      8#           ;BRANCH IF GOOD

```

```

2767                                     ;ERROR! CC SHOULD = 0100
2768 007366                               7#:
2769 007366 104000                        .WORD 216                ;ALL ERRORS TO TRAP TO EMT VECTOR
2770 007370 000216                        .WORD CPUERR             ;UNIQUE ERROR NUMBER
2771 007372 001127                                     ;ADDRESS OF ERROR MESSAGE
2772 007374
2773
2774
2775 007374
2776
2777
2778
2779 007374
2780 007374 005267 171404                  TST73:                   ;INCREMENT TEST NUMBER
2781 007400 012704 000400                  INC $TESTN                ;R4=400
2782 007404 012714 052525                  MOV #400,R4              ;400=052525
2783 007410 012701 000402                  MOV #052525,(R4)        ;R1=402
2784 007414 012711 125252                  MOV #402,R1              ;402=125252
2785 007420 000241                  CLC                       ;CLEAR CARRY
2786 007422 031411                  BIT (R4),(R1)            ;**052525+125252=0
2787 007424 103401                  BCS 1#                   ;ERROR IF CARRY
2788 007426 001403                  BEQ 2#                   ;BRANCH IF GOOD
2789                                     ;ERROR! CC SHOULD = 0100
2790 007430
2791 007430 104000                               1#:
2792 007432 000217                        .WORD 217                ;ALL ERRORS TO TRAP TO EMT VECTOR
2793 007434 001127                        .WORD CPUERR             ;UNIQUE ERROR NUMBER
2794 007436 021411                                     ;ADDRESS OF ERROR MESSAGE
2795 007440 001403                               2#:
2796 007442 103002                  CMP (R4),(R1)            ;400-402=125253
2797 007444 102001                  BEQ 3#                   ;ERROR IF ZERO
2798 007446 100403                  BCC 3#                   ;ERROR IF NO CARRY
2799                                     ;ERROR IF NO OVERFLOW
2800 007450                               3#:
2801 007450 104000                        .WORD 220                ;ALL ERRORS TO TRAP TO EMT VECTOR
2802 007452 000220                        .WORD CPUERR             ;UNIQUE ERROR NUMBER
2803 007454 001127                                     ;ADDRESS OF ERROR MESSAGE
2804 007456 005014                               4#:
2805 007460 005214                  CLR (R4)                 ;400=1
2806 007462 031114                  INC (R4)                 ;125252+1=0
2807 007464 001403                  BIT (R1),(R4)            ;BRANCH IF GOOD
2808                                     ;ERROR! CC SHOULD= 0100
2809 007466
2810 007466 104000                               5#:
2811 007470 000221                        .WORD 221                ;ALL ERRORS TO TRAP TO EMT VECTOR
2812 007472 001127                        .WORD CPUERR             ;UNIQUE ERROR NUMBER
2813 007474                                     ;ADDRESS OF ERROR MESSAGE
2814
2815
2816 007474
2817
2818
2819
2820 007474
2821 007474 005267 171304                  TST74:                   ;INCREMENT TEST NUMBER
2822 007500 012704 000400                  INC $TESTN                ;R4=400
                MOV #400,R4

```



```

2823 007504 012701 000402      MOV      #402,R1      ;R1=402
2824 007510 012714 000005      MOV      #5,(R4)     ;400=5
2825 007514 005021              CLR      (R1)+       ;402=0
2826 007516 005011              CLR      (R1)        ;
2827 007520 005111              COM      (R1)        ;404=-1
2828 007522 005741              TST     -(R1)        ;R1=402
2829 007524 000277              SCC      ;CC=1111
2830 007526 012124              MOV     (R1)+,(R4)+ ;400=0 R4=402 R1=404
2831 007530 100403              BMI     1#           ;ERROR IF MINUS
2832 007532 103002              BCC     1#           ;ERROR IF NO CARRY
2833 007534 102401              BVS     1#           ;ERROR IF OVERFLOW
2834 007536 001403              BEQ     2#           ;BRANCH IF GOOD
2835                                ;ERROR! CC SHOULD= 0101
2836 007540                                1#:
2837 007540                                .WORD   ;ALL ERRORS TO TRAP TO EMT VECTOR
2838 007542 000222                                .WORD   222          ;UNIQUE ERROR NUMBER
2839 007544 001127                                .WORD   CPUERR      ;ADDRESS OF ERROR MESSAGE
2840 007546 005244                                2#:  INC      -(R4)     ;400=1 R4=400
2841
2842 007550 061411              ADD     (R4),(R1)    ;1+ -1 =0
2843 007552 001403              BEQ     4#           ;BRANCH IF GOOD
2844                                ;ERROR! CC SHOULD = 0100
2845 007554                                3#:
2846 007554 104000              .WORD   ;ALL ERRORS TO TRAP TO EMT VECTOR
2847 007556 000223              .WORD   223          ;UNIQUE ERROR NUMBER
2848 007560 001127              .WORD   CPUERR      ;ADDRESS OF ERROR MESSAGE
2849 007562                                4#:
2850
2851                                ;
2852 007562                                ;MS22:
2853                                ;*****
2854                                ;*TEST 75      TEST SUB MODE 2,2
2855                                ;*****
2856 007562                                TST75:
2857 007562 005267 171216      INC     #TESTN       ;INCREMENT TEST NUMBER
2858 007566 012704 000400      MOV     #400,R4      ;R4=400
2859 007572 012701 000402      MOV     #402,R1      ;R1=402
2860 007576 012714 177760      MOV     #177760,(R4) ;400=177760
2861 007602 012711 177750      MOV     #177750,(R1) ;402=177750
2862 007606 162421              SUB     (R4)+,(R1)+ ;R1=177770
2863 007610 001403              BEQ     1#           ;ERROR IF ZERO
2864 007612 102402              BVS     1#           ;ERROR IF OVERFLOW
2865 007614 103001              BCC     1#           ;ERROR IF NO CARRY
2866 007616 100403              BMI     2#           ;BRANCH IF GOOD
2867                                ;ERROR! CC SHOULD=1000
2868 007620                                1#:
2869 007620 104000              .WORD   ;ALL ERRORS TO TRAP TO EMT VECTOR
2870 007622 000224              .WORD   224          ;UNIQUE ERROR NUMBER
2871 007624 001127              .WORD   CPUERR      ;ADDRESS OF ERROR MESSAGE
2872 007626 005241              2#:  INC      -(R1)     ;R1=177771
2873 007630 162721 177771      SUB     #177771,(R1)+ ;R1=0
2874 007634 100401              BMI     3#           ;ERROR IF MINUS
2875 007636 001403              BEQ     4#           ;BRANCH IF GOOD
2876                                ;ERROR! CCSHOULD = 0100
2877 007640                                3#:
2878 007640 104000              .WORD   ;ALL ERRORS TO TRAP TO EMT VECTOR

```

```

2879 007642 000225          .WORD 225          ;UNIQUE ERROR NUMBER
2880 007644 001127          .WORD CPUERR       ;ADDRESS OF ERROR MESSAGE
2881 007646
2882
2883
2884 007646
2885
2886
2887
2888 007646
2889 007646 005267 171132          INC      $TESTN      ;INCREMENT TEST NUMBER
2890 007652 012704 000400          MOV      $400,R4      ;R4=400
2891 007656 012701 000402          MOV      $402,R1      ;R1=402
2892 007662 012702 000404          MOV      $404,R2      ;R2=404
2893 007666 012714 141401          MOV      $141401,(R4) ;400=303 001
2894 007672 012711 177405          MOV      $177405,(R1) ;402=377 005
2895 007676 012722 000070          MOV      $70,(R2)+    ;404=2070
2896 007702 012722 177777          MOV      $-1,(R2)+   ;406=-1
2897 007706 042421          BIC      (R4)+,(R1)+  ;402=074004
2898 007710 001401          BEQ      1$          ;ERROR IF ZERO
2899 007712 100003          BPL      2$          ;BRANCH IF GOOD
2900
2901 007714
2902 007714 104000          1$:      ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2903 007716 000226          .WORD 226          ;UNIQUE ERROR NUMBER
2904 007720 001127          .WORD CPUERR       ;ADDRESS OF ERROR MESSAGE
2905 007722 052421          2$:      BIS      (R4)+,(R1)+ ;404=074074
2906 007724 142421          BICB    (R4)+,(R1)+ ;406=074
2907 007726 005301          DEC      R1          ;R4=405 R1=406
2908 007730 152421          BISB    (R4)+,(R1)+ ;406=-1 R4=406 R1=407
2909 007732 100403          BMI      4$          ;BRANCH IF GOOD
2910
2911 007734
2912 007734 104000          3$:      ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2913 007736 000227          .WORD 227          ;UNIQUE ERROR NUMBER
2914 007740 001127          .WORD CPUERR       ;ADDRESS OF ERROR MESSAGE
2915 007742 005214          4$:      INC      (R4)      ;406 SHOULD=0
2916 007744 001403          BEQ      6$          ;BRANCH IF GOOD
2917
2918 007746
2919 007746 104000          5$:      ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2920 007750 000230          .WORD 230          ;UNIQUE ERROR NUMBER
2921 007752 001127          .WORD CPUERR       ;ADDRESS OF ERROR MESSAGE
2922 007754
2923
2924
2925 007754
2926
2927
2928
2929 007754
2930 007754 005267 171024          INC      $TESTN      ;INCREMENT TEST NUMBER
2931 007760 012704 000400          MOV      $400,R4      ;R4=400
2932 007764 012701 000402          MOV      $402,R1      ;R1=402
2933 007770 012714 125252          MOV      $125252,(R4) ;400=125252
2934 007774 012721 100001          MOV      $100001,(R1)+ ;402=100001

```

```

2935 01000V 012711 100002      MOV      #100002,(R1)      ;404=100002
2936 010004 005741              TST      -(R1)            ;R1=402
2937 010006 132421              BITB     (R4)+,(R1)+     ;**ANDED RESULT= 000
2938 010010 100401              BMI      1#              ;ERROR IF MINUS
2939 010012 001403              BEQ      2#              ;BRANCH IF GOOD
2940                                     ;ERROR! CC SHOULD = C100
2941 010014                                     1# :
2942 010014 104000              ERROR                                     ;ALL ERRORS TO TRAP TO EMT VECTOR
2943 010016 000231              .WORD   231              ;UNIQUE ERROR NUMBER
2944 010020 001127              .WORD   CPUERR          ;ADDRESS OF ERROR MESSAGE
2945 010022 132124              2# : BITB     (R1)+,(R4)+     ;** ANDED RESULT = 200
2946 010024 001401              BEQ      3#              ;ERROR IF EQUAL
2947 010026 100403              BMI      4#              ;BRANCH IF GOOD
2948                                     ;ERROR! CC SHOULD= 1000 R4=402 R1=404
2949 010030                                     3# :
2950 010030 104000              ERROR                                     ;ALL ERRORS TO TRAP TO EMT VECTOR
2951 010032 000232              .WORD   232              ;UNIQUE ERROR NUMBER
2952 010034 001127              .WORD   CPUERR          ;ADDRESS OF ERROR MESSAGE
2953 010036 022421              4# : CMP      (R4)+,(R1)+     ;RESULT =+1
2954 010040 001402              BEQ      5#              ;ERROR IF EQUAL
2955 010042 103001              BCC      5#              ;ERROR IF NO CARRY
2956 010044 100403              BMI      6#              ;BRANCH IF GOOD
2957                                     ;ERROR! CC SHOULD = 0000
2958 010046                                     5# :
2959 010046 104000              ERROR                                     ;ALL ERRORS TO TRAP TO EMT VECTOR
2960 010050 000233              .WORD   233              ;UNIQUE ERROR NUMBER
2961 010052 001127              .WORD   CPUERR          ;ADDRESS OF ERROR MESSAGE
2962 010054 005341              6# : DEC      -(R1)            ;404=100001
2963 010056 005741              TST      -(R1)            ;R4=404 R1=402
2964 010060 022124              CMP      (R1)+,(R4)+     ;RESULT =0
2965 010062 001403              BEQ      8#              ;BRANCH IF GOOD
2966                                     ;CC SHOULD = 0100 R1=404 R4=406
2967 010064                                     7# :
2968 010064 104000              ERROR                                     ;ALL ERRORS TO TRAP TO EMT VECTOR
2969 010066 000234              .WORD   234              ;UNIQUE ERROR NUMBER
2970 010070 001127              .WORD   CPUERR          ;ADDRESS OF ERROR MESSAGE
2971 010072                                     8# :
2972                                     ;
2973                                     ;MS33:
2974 010072                                     ;*****
2975                                     ;*TEST 100      TEST SUB MODE 3,3
2976                                     ;*****
2977                                     ;
2978 010072 TST100:                                     ;
2979 010072 005267 170706      INC      $TESTN          ;INCREMENT TEST NUMBER
2980 010076 005004              CLR      R4              ;R4=0
2981 010100 012701 000002      MOV      #2,R1           ;R1=2
2982 010104 012702 000400      MOV      #400,R2        ;R2=400
2983 010110 012714 000400      MOV      #400,(R4)      ;0=400
2984 010114 012711 000402      MOV      #402,(R1)      ;2=402
2985 010120 012722 000200      MOV      #200,(R2)+     ;400=200
2986 010124 012712 054320      MOV      #54320,(R2)   ;402=54320
2987 010130 163431              SUB      B(R4)+,B(R1)+   ;54320 - 200=54120
2988 010132 001402              BEQ      1#              ;ERROR IF ZERO
2989 010134 103401              BCS      1#              ;ERROR IF CARRY
2990 010136 100003              BPL      2#              ;BRANCH IF GOOD

```

```

2991                                     ;ERROR! CC SHOULD =0001
2992 010140                               1#:
2993 010140 104000                       ERROR
2994 010142 000235                       .WORD 235
2995 010144 001127                       .WORD CPUERR
2996 010146 022712 054120               2#: CMP #54120,(R2)
2997 010152 001403                       BEQ 4#
2998                                     ;TEST R4 AUTO-INC AND RESULT
2999                                     ;BRANCH IF GOOD
3000 010154                               3#: ;ERROR! CC SHOULD = 0100 R4=2 R1=4
3001 010154 104000                       ERROR
3002 010156 000236                       .WORD 236
3003 010160 001127                       .WORD CPUERR
3004 010162 005067 167612               4#: CLR 0
3005 010166 005067 167610               CLR 2
3006                                     ;RESTORE VECTORS
3007                                     ;
3008 010172                               ;
3009 MCB44:
3010 ;*****
3011 ;*TEST 101 TEST CMP, BIT MODE 4,4
3012 ;*****
3013 010172 005267 170606               TST101:
3014 010176 012704 000400               INC #TESTN
3015 010202 012701 000402               MOV #400,R4
3016 010206 012721 125366               MOV #402,R1
3017 010212 012724 173001               MOV #125366,(R1)+
3018 010216 024441                       MOV #173001,(R4)+
3019 010220 103401                       CMP -(R4),-(R1)
3020 010222 100003                       BCS 1#
3021                                     BPL 2#
3022                                     ;INCREMENT TEST NUMBER
3023 010224 104000                       1#: ;R4=400
3024 010226 000237                       .WORD 237
3025 010230 001127                       .WORD CPUERR
3026 010232 005204                       2#: INC R4
3027 010234 005201                       INC R1
3028 010236 000261                       SEC
3029 010240 134144                       BITB -(R1),-(R4)
3030 010242 103001                       BCC 3#
3031 010244 001403                       BEQ 4#
3032                                     ;R1=403
3033 010246                               3#: ;SET CARRY
3034 010246 104000                       ERROR
3035 010250 000240                       .WORD 240
3036 010252 001127                       .WORD CPUERR
3037 010254 005724                       4#: TST (R4)+
3038 010256 005201                       INC R1
3039 010260 124441                       CMPB -(R4),-(R1)
3040 010262 001403                       BEQ 6#
3041                                     ;R1=403
3042 010264                               5#: ;173 - 173=0
3043 010264 104000                       ERROR
3044 010266 000241                       .WORD 241
3045 010270 001127                       .WORD CPUERR
3046 010272                               6#: ;BAD COMPARE

```

```

3047
3048
3049 010272
3050
3051
3052
3053 010272
3054 010272 005267 170506
3055 010276 012704 000400
3056 010302 012724 000001
3057 010306 012724 177776
3058 010312 012724 000400
3059 010316 012714 000402
3060 010322 012701 000410
3061 010326 065451
3062 010330 001402
3063 010332 100001
3064 010334 103003
3065
3066 010336
3067 010336 104000
3068 010340 000242
3069 010342 001127
3070 010344 062704 000004
3071 010350 065154
3072 010352 001403
3073
3074 010354
3075 010354 104000
3076 010356 000243
3077 010360 001127
3078 010362
3079
3080
3081
3082
3083
3084
3085
3086
3087
3088
3089 010362
3090
3091
3092
3093 010362
3094 010362 005267 170416
3095 010366 005004
3096 010370 012701 000400
3097 010374 012721 125252
3098 010400 012721 000001
3099 010404 012721 100000
3100 010410 036461 000400 177774
3101 010416 001403
3102

```

```

;
; MASS:
;*****
; TEST 102 TEST ADD MODE 5,5
;*****
TST102:
INC      $TESTN          ; INCREMENT TEST NUMBER
MOV      #400,R4
MOV      #1,(R4)+        ; 400=1
MOV      #-2,(R4)+       ; 402=-2
MOV      #400,(R4)+      ; 404=400
MOV      #402,(R4)       ; 406=402 R4=406
MOV      #410,R1         ; R1=410
ADD      @-(R4),@-(R1)   ; 1+ -2= -1
BEQ      1#              ; ERROR IF ZERO
BPL      1#              ; ERROR IF PLUS
BCC      2#              ; BRANCH IF GOOD
; ERROR! BAD ADD

1#:
ERROR
.WORD    242             ; ALL ERRORS TO TRAP TO EMT VECTOR
.WORD    CPUERR         ; UNIQUE ERROR NUMBER
; ADDRESS OF ERROR MESSAGE

2#:
ADD      @R,R4           ; R4=410
ADD      @-(R1),@-(R4)  ; -1 + 1 = 0
BEQ      4#              ; BRANCH IF GOOD
; ERROR! CC SHOULD= 0100 R4=406 R1=402

3#:
ERROR
.WORD    243             ; ALL ERRORS TO TRAP TO EMT VECTOR
.WORD    CPUERR         ; UNIQUE ERROR NUMBER
; ADDRESS OF ERROR MESSAGE

4#:
;
;
;-----
; TEST DOP BIT(B) MODE 6,6
;
;
;
;
MB66:
;*****
; TEST 103 TEST BIT, BITB MODE 6,6
;*****
TST103:
INC      $TESTN          ; INCREMENT TEST NUMBER
CLR      R4              ; R4=0
MOV      #400,R1
MOV      #125252,(R1)+   ; 400=125252
MOV      #1,(R1)+       ; 402=1
MOV      #100000,(R1)+  ; 404=100000 R1=406
BIT      400(R4),-4(R1) ; (400)+(402)=0
BEQ      2#              ; BRANCH IF GOOD
; CC SHOULD = 0100

```

```

3103 010420          1# :
3104 010420 104000          ERROR
3105 010422 000244          .WORD 244
3106 010424 001127          .WORD CPUERR
3107 010426 136461 000405 177772 2# : BITB 405(R4),-6(R1)
3108 010434 001401          BEQ 3#
3109 010436 100403          BMI 4#
3110
3111 010440          3# :
3112 010440 104000          ERROR
3113 010442 000245          .WORD 245
3114 010444 001127          .WORD CPUERR
3115 010446          4# :
3116
3117
3118 010446          ;
MS77:
3119          ;*****
3120          ;*TEST 104 TEST SUB MODE 7,7
3121          ;*****
3122 010446          TST104:
3123 010446 005267 170332          INC #TESTN
3124 010452 012704 000400          MOV #400,R4
3125 010456 005001          CLR R1
3126 010460 012724 177776          MOV #2,(R4)+
3127 010464 012724 177777          MOV #1,(R4)+
3128 010470 012724 000400          MOV #400,(R4)+
3129 010474 012711 000402          MOV #402,(R1)
3130 010500 005201          INC R1
3131 010502 167471 177372 000403          SUB #406(R4),#403(R1)
3132 010510 001401          BEQ 1#
3133 010512 100403          BMI 2#
3134
3135 010514          1# :
3136 010514 104000          ERROR
3137 010516 000246          .WORD 246
3138 010520 001127          .WORD CPUERR
3139 010522 167174 177777 177776 2# : SUB #1(R1),#2(R4)
3140 010530 001403          BEQ 4#
3141
3142 010532          3# :
3143 010532 104000          ERROR
3144 010534 000247          .WORD 247
3145 010536 001127          .WORD CPUERR
3146 010540 005067 167234          4# : CLR 0
3147 010544 005067 167232          CLR 2
3148
3149
3150
3151 010550          ;
MRLO:
3152          ;*****
3153          ;*TEST 105 TEST ROL, ROLB MODE 0
3154          ;*****
3155 010550          TST105:
3156 010550 005267 170230          INC #TESTN
3157 010554 012704 125252          MOV #125252,R4
3158 010560 000277          SCC
;INCREMENT TEST NUMBER
;R4=125252
;CC=1111
;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE
;(405)+(400)=200
;ERROR IF ZERO
;BRANCH IF GOOD
;CC SHOULD = 1000
;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE
;INCREMENT TEST NUMBER
;400--2
;402--1
;404=400 R4=406
;0=402
;R1=1
;-2 - -1 = -1
;ERROR IF ZERO
;BRANCH IF GOOD
;CC SHOULD=1000
;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE
;-1 - -1 = 0
;BRANCH IF GOOD
;ERROR! ERROR ON SUBTRACT 400=0
;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE
;RESTORE VECTORS
;

```

```

3159 010562 006104          ROL      R4          ;R4=052525 WITH CARRY SET
3160 010564 102004          BVC     1#          ;ERROR IF V CLEAR
3161 010566 103003          BCC     1#          ;ERROR IF CARRY CLEAR
3162 010570 022704 052525  CMP     #052525,R4 ;SEE IF R0 = EXPECTED
3163 010574 001403          BEQ     2#          ;ERROR IF R4 NE EXPECTED
3164                                ;ERROR! ROL FAILED, CC SHOULD=0011
3165 010576                                1#:
3166 010576 104000          ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
3167 010600 000250          .WORD  250          ;UNIQUE ERROR NUMBER
3168 010602 001127          .WORD  CPUERR       ;ADDRESS OF ERROR MESSAGE
3169 010604 012704 125252  2#:  MOV     #125252,R4 ;R4=125252
3170 010610 000257          CCC                                ;CC=0000
3171 010612 106104          ROLB   R4          ;ROTATE EVEN BYTE
3172 010614 103005          BCC     3#          ;ERROR IF NO CARRY
3173 010616 102004          BVC     3#          ;ERROR IF NO OVERFLOW
3174 010620 100403          BMI     3#          ;ERROR IF MINUS
3175 010622 022704 125124  CMP     #125124,R4 ;SEE IF R4 = EXPECTED
3176 010626 001403          BEQ     4#          ;BRANCH IF GOOD
3177                                ;ERROR! ROLB FAILED, CC SHOULD=1011, R4=125125
3178 010630                                3#:
3179 010630 104000          ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
3180 010632 000251          .WORD  251          ;UNIQUE ERROR NUMBER
3181 010634 001127          .WORD  CPUERR       ;ADDRESS OF ERROR MESSAGE
3182 010636                                4#:
3183
3184
3185 010636                                ;
3186                                ;MRLB1:
3187                                ;*****
3188                                ;*TEST 106      TEST ROL, ROLB MODE 1
3189                                ;*****
3190 010636 005267 170142  TST106: INC     #TESTN      ;INCREMENT TEST NUMBER
3191 010642 005004          CLR     R4          ;R4=0
3192 010644 012714 052525  MOV     #52525,(R4) ;0=52525
3193 010650 006114          ROL     (R4)        ;**TEST INSTRUCTION, 0=125252
3194 010652 100005          BPL     1#          ;ERROR IF PLUS
3195 010654 102004          BVC     1#          ;ERROR IF NO OVERFLOW
3196 010656 103403          BCS     1#          ;ERROR IF CARRY
3197 010660 021427 125252  CMP     (R4),#125252 ;SEE IF R4=EXPECTED
3198 010664 001403          BEQ     2#          ;BRANCH IF GOOD
3199                                ;BAD ROL ,CC SHOULD=1010
3200 010666                                1#:
3201 010666 104000          ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
3202 010670 000252          .WORD  252          ;UNIQUE ERROR NUMBER
3203 010672 001127          .WORD  CPUERR       ;ADDRESS OF ERROR MESSAGE
3204 010674 012714 125252  2#:  MOV     #125252,(R4) ;0=125252
3205 010700 005204          INC     R4          ;R4=1
3206 010702 000277          SCC                                ;CC=1111
3207 010704 106114          ROLB   (R4)        ;**TEST INSTRUCTION
3208 010706 100406          BMI     3#          ;ERROR IF RESULT IS POSITIVE
3209 010710 103005          BCC     3#          ;ERROR IF NO CARRY
3210 010712 102004          BVC     3#          ;ERROR IF V CLEAR
3211 010714 005304          DEC     R4          ;R4=0
3212 010716 022714 052652  CMP     #52652,(R4) ;ERROR IF 0 NE EXPECTED
3213 010722 001403          BEQ     4#          ;BRANCH IF GOOD
3214                                ;ERROR! BAD ROLB ODD BYTE,CC SHOULD=1011

```

```

3215 010724
3216 010724 104000
3217 010726 000253
3218 010730 001127
3219 010732
3220
3221
3222 010732
3223
3224
3225
3226 010732
3227 010732 005267 170046
3228 010736 005004
3229 010740 012714 100000
3230 010744 000257
3231 010746 006124
3232 010750 103002
3233 010752 102001
3234 010754 001403
3235
3236 010756
3237 010756 104000
3238 010760 000254
3239 010762 001127
3240 010764 005304
3241 010766 005304
3242 010770 001012
3243 010772 012714 004040
3244 010776 000241
3245 011000 106124
3246 011002 103405
3247 011004 102404
3248 011006 005304
3249 011010 022714 004100
3250 011014 001403
3251
3252 011016
3253 011016 104000
3254 011020 000255
3255 011022 001127
3256 011024
3257
3258
3259 011024
3260
3261
3262
3263 011024
3264 011024 005267 167754
3265 011030 005004
3266 011032 012714 052525
3267 011036 000277
3268 011040 006137 000000
3269 011044 100005
3270 011046 102004

```

```

3#: ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD 253 ;UNIQUE ERROR NUMBER
      .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4#:
;
;MRL2:
;*****
; *TEST 107 TEST ROL, ROLB MODE 2
;*****
TST107:
      INC      #TESTN ;INCREMENT TEST NUMBER
      CLR      R4 ;R4=0
      MOV      #100000,(R4) ;O=100000
      CCC      ;CC=0000
      ROL      (R4)+ ;*TEST INSTRUCTION
      BCC      1# ;ERROR IF NO CARRY
      BVC      1# ;ERROR IF NO OVERFLOW
      BEQ      2# ;BRANCH IF GOOD
              ;ROL FAILED ,CCSHOULD= 0100
1#: ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD 254 ;UNIQUE ERROR NUMBER
      .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
2#: DEC R4 ;ERROR IN AUTO-DEC
      DEC R4 ;O=4040
      BNE 3#
      MOV #4040,(R4)
      CLC
      ROLB (R4)+ ;**TEST INSTURCTION
      BCS 3# ;ERROR IF CARRY SET
      BVS 3# ;ERROR IF V
      DEC R4
      CMP #04100,(R4) ;SEE IF O= EXPECTED RESULT
      BEQ 4# ;BRANCH IF GOOD
              ;ERROR! BAD ROL
3#: ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD 255 ;UNIQUE ERROR NUMBER
      .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4#:
;
;MRL3:
;*****
; *TEST 110 TEST ROL, ROLB MODE 3
;*****
TST110:
      INC      #TESTN ;INCREMENT TEST NUMBER
      CLR      R4 ;R4=0
      MOV      #052525,(R4) ;O=52525
      SCC      ;CC=1111
      ROL      #0 ;**TEST INSTRUCTION MODE 3 WITH PC
      BPL 1# ;ERROR IF PLUS
      BVC 1# ;ERROR IF NO OVERFLOW

```



```

3271 011050 103403          BCS      1#          ;ERROR IF CARRY
3272 011052 022714 125253  CMP      #125253,(R4) ;COMPARE RESULT WITH EXPECTED
3273 011056 001403          BEQ      2#          ;BRANCH IF GOOD
3274                                ;BAD ROL CC SHOULD=1010
3275 011060                                1#:
3276 011060 104000          ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
3277 011062 000256          .WORD      256          ;UNIQUE ERROR NUMBER
3278 011064 001127          .WORD      CPUERR        ;ADDRESS OF ERROR MESSAGE
3279 011066 012714 125252  2#:  MOV      #125252,(R4) ;O=125252
3280 011072 000261          SEC                                ;CC=---1
3281 011074 106137 000000  ROLB     #00          ;**TEST INSTRUCTION
3282 011100 100402          BMI      3#          ;ERROR IF MINUS
3283 011102 103001          BCC     3#          ;ERROR IF NO CARRY
3284 011104 102403          BVS     4#          ;BRANCH IF OVERFLOW
3285                                ;ERROR! BAD ROL, CC SHOULD=1011
3286 011106                                3#:
3287 011106 104000          ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
3288 011110 000257          .WORD      257          ;UNIQUE ERROR NUMBER
3289 011112 001127          .WORD      CPUERR        ;ADDRESS OF ERROR MESSAGE
3290 011114                                4#:
3291                                ;
3292                                ;MRL4:
3293 011114                                ;*****
3294                                ;*TEST 111      TEST ROL MODE 4
3295                                ;*****
3296                                ;TST111:
3297 011114                                ;
3298 011114 005267 167664  INC      #TESTN          ;INCREMENT TEST NUMBER
3299 011120 005001          CLR      R1          ;R1=0
3300 011122 012704 000002  MOV      #2,R4          ;R4=2
3301 011126 012711 054321  MOV      #54321,(R1)   ;O=54321
3302 011132 000277          SCC                                ;CC=1111
3303 011134 006144          ROL     -(R4)         ;**TEST INSTRUCTION
3304 011136 100007          BPL     1#          ;ERROR IF PLUS
3305 011140 102006          BVC     1#          ;ERROR IF NO OVERFLOW
3306 011142 103405          BCS     1#          ;ERROR IF CARRY
3307 011144 022711 130643  CMP      #130643,(R1) ;SEE IF EXPECTED RESULT
3308 011150 001002          BNE     1#          ;BRANCH IF ROL FAILED
3309 011152 005704          TST     R4          ;SEE IF AUTO-DEC WORKED
3310 011154 001403          BEQ     2#          ;BRANCH IF GOOD
3311                                ;ERROR! BAD ROL INST
3312 011156                                1#:
3313 011156 104000          ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
3314 011160 000260          .WORD      260          ;UNIQUE ERROR NUMBER
3315 011162 001127          .WORD      CPUERR        ;ADDRESS OF ERROR MESSAGE
3316 011164                                2#:
3317                                ;
3318                                ;MRL5:
3319 011164                                ;*****
3320                                ;*TEST 112      TEST ROL MODE 5
3321                                ;*****
3322                                ;TST112:
3323 011164                                ;
3324 011164 005267 167614  INC      #TESTN          ;INCREMENT TEST NUMBER
3325 011170 005004          CLR      R4          ;R4=0
3326 011172 012714 000400  MOV      #400,(R4)     ;O=400

```



```

3383 011342 005737 000000          TST      B#0          ;CHECK RESULT
3384 011346 001403                   BEQ      2#          ;BRANCH IF GOOD
3385                                     ;BAD ROL MODE 7
3386 011350                                     1#:
3387 011350 104000          ERROR
3388 011352 000263          .WORD    263          ;ALL ERRORS TO TRAP TO EMT VECTOR
3389 011354 001127          .WORD    CPUERR       ;UNIQUE ERROR NUMBER
3390 011356                                     2#:          ;ADDRESS OF ERROR MESSAGE
3391
3392
3393 011356          ;MSW37:
3394          ;|*****
3395          ;|*TEST 115      TEST SWAB MODE 37
3396          ;|*****
3397 011356          TST115:
3398 011356 005267 167422          INC      #TESTN       ;INCREMENT TEST NUMBER
3399 011362 012704 000400          MOV     #400,R4      ;R4=400
3400 011366 012714 040700          MOV     #40700,(R4)  ;400= 101 300
3401 011372 000337 000400          SWAB   B#400        ;400 SHOULD = 300 101
3402 011376 100406          BMI     1#          ;ERROR IF MINUS
3403 011400 022714 140101          CMP     #140101,(R4) ;SEE IF EXPECTED RESULT
3404 011404 001003          BNE     1#          ;BRANCH IF BAD
3405 011406 000337 000400          SWAB   B#400        ;400=101 300
3406 011412 100403          BMI     2#          ;BRANCH IF GOOD
3407                                     ;ERROR! BAD SWAB MODE 37
3408 011414                                     1#:
3409 011414 104000          ERROR
3410 011416 000264          .WORD    264          ;ALL ERRORS TO TRAP TO EMT VECTOR
3411 011420 001127          .WORD    CPUERR       ;UNIQUE ERROR NUMBER
3412 011422                                     2#:          ;ADDRESS OF ERROR MESSAGE
3413
3414
3415 011422          ;MRR0:
3416          ;|*****
3417          ;|*TEST 116      TEST ROR MODE 0
3418          ;|*****
3419 011422          TST116:
3420 011422 005267 167356          INC      #TESTN       ;INCREMENT TEST NUMBER
3421 011426 012704 052525          MOV     #52525,R4   ;R4=52525
3422 011432 000257          CCC     ;CC=0000
3423 011434 006004          ROR     R4           ;R4 SHOULD = 25252 WITH CARRY
3424 011436 103003          BCC     1#          ;ERROR IF NO CARRY
3425 011440 022704 025252          CMP     #25252,R4   ;SEE IF R4= EXPECTED
3426 011444 001403          BEQ     2#          ;BRANCH IF GOOD
3427                                     ;ROR MODE 0 FAILED
3428 011446                                     1#:
3429 011446 104000          ERROR
3430 01:450 000265          .WORD    265          ;ALL ERRORS TO TRAP TO EMT VECTOR
3431 011452 001127          .WORD    CPUERR       ;UNIQUE ERROR NUMBER
3432 011454                                     2#:          ;ADDRESS OF ERROR MESSAGE
3433
3434
3435 011454          ;MRRB1:
3436          ;|*****
3437          ;|*TEST 117      TEST RORB MODE 1
3438          ;|*****

```

```

3439 011454          TST117:
3440 011454 005267 167324      INC      #TESTN      ;INCREMENT TEST NUMBER
3441 011460 005004          CLR      R4          ;R4=0
3442 011462 012714 000001      MOV      #1,(R4)    ;0=1
3443 011466 000277          SCC          ;CC=1111
3444 011470 106014          RORB     (R4)        ;0=000200, NO C
3445 011472 103004          BCC     1#          ;ERROR IF NO CARRY
3446 011474 100003          BPL     1#          ;ERROR IF PLUS
3447 011476 022714 000200      CMP      #200,(R4)  ;CHECK RESULT
3448 011502 001403          BEQ     2#          ;BRANCH IF GOOD
3449
3450 011504          1#:
3451 011504 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3452 011506 000266          .WORD    266      ;UNIQUE ERROR NUMBER
3453 011510 001127          .WORD    CPUERR   ;ADDRESS OF ERROR MESSAGE
3454 011512
3455
3456
3457
3458 011512          MJ:
3459
3460          ;*****
3461          ;*TEST 120      TEST JMP - ALL MODES
3462          ;*****
3462 011512          TST120:
3463 011512 005267 167266      INC      #TESTN      ;INCREMENT TEST NUMBER
3464 011516 012737 000001 001066  MOV      #1,#SEQ    ;SETUP TEST SEQUENCER
3465 011524 012701 011600      MOV      #MJU1,R1   ;SET MODE 1 JUMP ADDRESS
3466 011530 000111          JMP      (R1)        ;*JMP MODE 1
3467 011532 023727 001066 000002 MJU2:  CMP      #SEQ,#2    ;CHECK FOR CORRECT SEQUENCE
3468 011540 001403          BEQ     MJU2A       ;BRANCH IF GOOD
3469
3470 011542          1#:
3471 011542 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3472 011544 000267          .WORD    267      ;UNIQUE ERROR NUMBER
3473 011546 001127          .WORD    CPUERR   ;ADDRESS OF ERROR MESSAGE
3474
3475 011550 020127 011534          MJU2A:  CMP      R1,#MJU2+2 ;CHECK FOR AUTO-INCREMENT
3476 011554 001403          BEQ     MJU2B       ;BRANCH IF GOOD
3477
3478 011556          2#:
3479 011556 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3480 011560 000270          .WORD    270      ;UNIQUE ERROR NUMBER
3481 011562 001127          .WORD    CPUERR   ;ADDRESS OF ERROR MESSAGE
3482
3483 011564 005237 001066          MJU2B:  INC      #SEQ      ;UPDATE TEST SEQUENCER
3484 011570 012701 011576      MOV      #MJU2,R1   ;SETUP MODE 3 JUMP
3485 011574 000131          JMP      #R1)+      ;JMP MODE 3
3486 011576 011630          MJ2:    .WORD    MJU3    ;MODE 3 DESTINATION
3487 011600 023727 001066 000001 MJU1:  CMP      #SEQ,#1    ;TEST FOR CORRECT SEQUENCE
3488 011606 001403          BEQ     MJU1A       ;BRANCH IF GOOD
3489
3490 011610          3#:
3491 011610 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3492 011612 000271          .WORD    271      ;UNIQUE ERROR NUMBER
3493 011614 001127          .WORD    CPUERR   ;ADDRESS OF ERROR MESSAGE
3494

```

GLOBAL AREAS MACY11 30A(1052) 15-MAR-84 13:28 PAGE 69
 KOJ11A.MAC 22-FEB-84 15:12 T120 TEST JMP - ALL MODES

SEQ 0069

```

3495 011616 005237 001066 MJU1A: INC @#SEQ ;UPDATE SEQUENCE
3496 011622 012701 011532 MOV @MJU2,R1 ;SETUP MODE 2 DESTINATION
3497 011626 000121 JMP (R1)+ ;JUMP MODE 2
3498 011630 023727 001066 000003 MJU3: CMP @#SEQ,#3 ;TEST FOR CORRECT SEQUENCE
3499 011636 001403 BEQ MJU3A ;BRANCH IF GOOD
3500 ;ERROR! JMP OUT OF SEQUENCE
3501 011640 41: ;
3502 011640 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3503 011642 000272 .WORD 272 ;UNIQUE ERROR NUMBER
3504 011644 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
3505 ;
3506 011646 022701 011600 MJU3A: CMP @MJ2+2,R1 ;TEST AUTO-INCREMENT
3507 011652 001403 BEQ MJU3B ;BRANCH IF GOOD
3508 ;ERROR! AUTO-INCREMENT FAILED MODE 3
3509 011654 51: ;
3510 011654 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3511 011656 000273 .WORD 273 ;UNIQUE ERROR NUMBER
3512 011660 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
3513 ;
3514 011662 005237 001066 MJU3B: INC @#SEQ ;UPDATE SEQUENCER
3515 011666 012701 011746 MOV @MJU4+2,R1 ;SETUP DESTINATION MODE 4
3516 011672 000141 JMP -(R1) ;EXECUTE JUMP MODE 4
3517 011674 000000 MJU5: HALT ;
3518 011676 022701 012012 CMP @MJ5,R1 ;CHECK AUTO-DECREMENT
3519 011702 001403 BEQ MJU5A ;BRANCH IF GOOD AUTO-DEC
3520 ;ERROR! AUTO-DEC FAILED MODE 5
3521 011704 61: ;
3522 011704 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3523 011706 000274 .WORD 274 ;UNIQUE ERROR NUMBER
3524 011710 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
3525 ;
3526 011712 023727 001066 000005 MJU5A: CMP @#SEQ,#5 ;TEST CORRECT SEQUENCE
3527 011720 001403 BEQ MJU5B ;BRANCH IF GOOD SEQUENCE
3528 ;ERROR! JMP OUT OF SEQUENCE
3529 011722 71: ;
3530 011722 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3531 011724 000275 .WORD 275 ;UNIQUE ERROR NUMBER
3532 011726 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
3533 ;
3534 011730 005237 001066 MJU5B: INC @#SEQ ;UPDATE SEQUENCE COUNT
3535 011734 012701 012007 MOV @MJU6-5,R1 ;SETUP DESTINATION MODE6
3536 011740 000161 000005 JMP +5(R1) ;JUMP MODE 6
3537 ;
3538 011744 000240 11 MJU4: NOP ;TEST AUTO-DECR
3539 011746 022701 011744 CMP @MJU4,R1 ;BRANCH IF GOOD
3540 011752 001403 BEQ MJU4A ;ERROR! MODE 4 AUTO-DEC FAILED
3541 ;
3542 011754 81: ;
3543 011754 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3544 011756 000276 .WORD 276 ;UNIQUE ERROR NUMBER
3545 011760 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
3546 ;
3547 011762 023727 001066 000004 MJU4A: CMP @#SEQ,#4 ;TEST FOR CORRECT SEQUENCE
3548 011770 001403 BEQ MJU4B ;BRANCH IF CORRECT SEQUENCE
3549 ;ERROR! INCORRECT JMP SEQUENCE
3550 011772 91: ;

```

```

3551 011772 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3552 011774 000277          .WORD          277          ;UNIQUE ERROR NUMBER
3553 011776 001127          .WORD          CPUERR       ;ADDRESS OF ERROR MESSAGE
3554
3555 012000 005237 001066    MJU4B: INC      @#SEQ        ;UPDATE SEQUENCE
3556 012004 012701 012014    MOV      @MJ5+2,R1        ;SETUP MODE 5 POINTER
3557 012010 000151          JMP      @-(R1)          ;EXECUTE MODE 5 JMP
3558
3559 012012 011676          MJ5:  .WORD      MJU5+2    ;POINTER MODE 5
3560
3561 012014 022737 000006 001066    MJU6: CMP      @#6,@#SEQ    ;CHECK FOR CORRECT SEQUENCE
3562 012022 001403          BEQ      MJU6A           ;BRANCH IF GOOD
3563
3564 012024          10#:
3565 012024 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3566 012026 000300          .WORD          300          ;UNIQUE ERROR NUMBER
3567 012030 001127          .WORD          CPUERR       ;ADDRESS OF ERROR MESSAGE
3568
3569 012032 005237 001066    MJU6A: INC     @#SEQ        ;UPDATE SEQUENCER
3570 012036 012701 012056    MOV     @MJ7+10,R1        ;SETUP INDEX
3571 012042 000171 177770    JMP     @-10(R1)         ;EXECUTE MODE 7 JUMP
3572 012046 012052          MJ7:  .WORD      MJU7      ;POINTER FOR MODE 7
3573 012050 000000          HALT
3574 012052 022737 000007 001066    MJU7: CMP     @#7,@#SEQ    ; TEST FOR CORRECT SEQUENCE
3575 012060 001403          BEQ     MJU7E           ;BRANCH IF GOOD SEQUENCE
3576
3577 012062          11#:
3578 012062 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3579 012064 000301          .WORD          301          ;UNIQUE ERROR NUMBER
3580 012066 001127          .WORD          CPUERR       ;ADDRESS OF ERROR MESSAGE
3581
3582 012070          MJU7E:
3583
3584
3585
3586
3587
3588 012070          ;
3589 012070 005267 166710    ;*****
3590 012074 012701 012404    ;*TEST 121      TEST THAT PRE-FETCH BUFFER CAN BE OVER WRITTEN
3591
3592
3593
3594
3595
3596
3597
3598
3599
3600
3601
3602
3603
3604
3605
3606

```

3607	012136	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3608	012140	000240		.WORD	NOP		;NOP INSTRUCTION
3609	012142	000111	69:	.WORD	111		;JMP (R1)
3610	012144	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3611	012146	000240		.WORD	NOP		;NOP INSTRUCTION
3612	012150	000111	70:	.WORD	111		;JMP (R1)
3613	012152	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3614	012154	000240		.WORD	NOP		;NOP INSTRUCTION
3615	012156	000111	71:	.WORD	111		;JMP (R1)
3616	012160	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3617	012162	000240		.WORD	NOP		;NOP INSTRUCTION
3618	012164	000111	72:	.WORD	111		;JMP (R1)
3619	012166	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3620	012170	000240		.WORD	NOP		;NOP INSTRUCTION
3621	012172	000111	73:	.WORD	111		;JMP (R1)
3622	012174	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3623	012176	000240		.WORD	NOP		;NOP INSTRUCTION
3624	012200	000111	74:	.WORD	111		;JMP (R1)
3625	012202	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3626	012204	000240		.WORD	NOP		;NOP INSTRUCTION
3627	012206	000111	75:	.WORD	111		;JMP (R1)
3628	012210	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3629	012212	000240		.WORD	NOP		;NOP INSTRUCTION
3630	012214	000111	76:	.WORD	111		;JMP (R1)
3631	012216	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3632	012220	000240		.WORD	NOP		;NOP INSTRUCTION
3633	012222	000111	77:	.WORD	111		;JMP (R1)
3634	012224	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3635	012226	000240		.WORD	NOP		;NOP INSTRUCTION
3636	012230	000111	78:	.WORD	111		;JMP (R1)
3637	012232	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3638	012234	000240		.WORD	NOP		;NOP INSTRUCTION
3639	012236	000111	79:	.WORD	111		;JMP (R1)
3640	012240	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3641	012242	000240		.WORD	NOP		;NOP INSTRUCTION
3642	012244	000111	80:	.WORD	111		;JMP (R1)
3643	012246	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3644	012250	000240		.WORD	NOP		;NOP INSTRUCTION
3645	012252	000111	81:	.WORD	111		;JMP (R1)
3646	012254	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3647	012256	000240		.WORD	NOP		;NOP INSTRUCTION
3648	012260	000111	82:	.WORD	111		;JMP (R1)
3649	012262	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3650	012264	000240		.WORD	NOP		;NOP INSTRUCTION
3651	012266	000111	83:	.WORD	111		;JMP (R1)
3652	012270	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3653	012272	000240		.WORD	NOP		;NOP INSTRUCTION
3654	012274	000111	84:	.WORD	111		;JMP (R1)
3655	012276	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3656	012300	000240		.WORD	NOP		;NOP INSTRUCTION
3657	012302	000111	85:	.WORD	111		;JMP (R1)
3658	012304	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3659	012306	000240		.WORD	NOP		;NOP INSTRUCTION
3660	012310	000111	86:	.WORD	111		;JMP (R1)
3661	012312	012717		MOV	(PC)+,(PC)		;WRITE THE NOP OVER THE JMP INSTRUCTION
3662	012314	000240		.WORD	NOP		;NOP INSTRUCTION

```

3663 012316 000111
3664 012320 012717
3665 012322 000240
3666 012324 000111
3667 012326 012717
3668 012330 000240
3669 012332 000111
3670 012334 012717
3671 012336 000240
3672 012340 000111
3673 012342 012717
3674 012344 000240
3675 012346 000111
3676 012350 012717
3677 012352 000240
3678 012354 000111
3679 012356 012717
3680 012360 000240
3681 012362 000111
3682 012364 012717
3683 012366 000240
3684 012370 000111
3685 012372 012717
3686 012374 000240
3687 012376 000111
3688 012400 000137 012412
3689 012404
3690
3691 012404 104000
3692 012406 000302
3693 012410 001127
3694
3695
3696
3697 012412 012702 000040
3698 012416 012703 012104
3699 012422 012713 000111
3700 012426 062703 000006
3701 012432 077205
3702
3703
3704 012434
3705
3706
3707
3708 012434
3709 012434 005267 166344
3710 012440 012737 000000 001066
3711 012446 000117
3712
3713 012450 005737 001066
3714 012454 001403
3715
3716 012456
3717 012456 104000
3718 012460 000303

```

```

870: .WORD 111 ;JMP (R1)
      MOV (PC)+,(PC) ;WRITE THE NOP OVER THE JMP INSTRUCTION
      .WORD NOP ;NOP INSTRUCTION
880: .WORD 111 ;JMP (R1)
      MOV (PC)+,(PC) ;WRITE THE NOP OVER THE JMP INSTRUCTION
      .WORD NOP ;NOP INSTRUCTION
890: .WORD 111 ;JMP (R1)
      MOV (PC)+,(PC) ;WRITE THE NOP OVER THE JMP INSTRUCTION
      .WORD NOP ;NOP INSTRUCTION
900: .WORD 111 ;JMP (R1)
      MOV (PC)+,(PC) ;WRITE THE NOP OVER THE JMP INSTRUCTION
      .WORD NOP ;NOP INSTRUCTION
910: .WORD 111 ;JMP (R1)
      MOV (PC)+,(PC) ;WRITE THE NOP OVER THE JMP INSTRUCTION
      .WORD NOP ;NOP INSTRUCTION
920: .WORD 111 ;JMP (R1)
      MOV (PC)+,(PC) ;WRITE THE NOP OVER THE JMP INSTRUCTION
      .WORD NOP ;NOP INSTRUCTION
930: .WORD 111 ;JMP (R1)
      MOV (PC)+,(PC) ;WRITE THE NOP OVER THE JMP INSTRUCTION
      .WORD NOP ;NOP INSTRUCTION
940: .WORD 111 ;JMP (R1)
      MOV (PC)+,(PC) ;WRITE THE NOP OVER THE JMP INSTRUCTION
      .WORD NOP ;NOP INSTRUCTION
950: .WORD 111 ;JMP (R1)
      JMP 001290 ;JUMP OVER ERROR CALL
1280: ;ERROR! PRE-FETCH BUFFER WAS NOT
      ;OVER WRITTEN
      ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD 302 ;UNIQUE ERROR NUMBER
      .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
;
; NOW RESTORE THE OVER WRITTEN JMP INSTRUCTIONS FOR THE NEXT PASS.
;
1290: MOV #32,R2 ;SET UP R2 AS COUNTER
      MOV #64,R3 ;SET UP R3 AS POINTER
1300: MOV #111,(R3) ;RESTORE OVER WRITTEN JUMPS
      ADD #6,R3 ;POINT TO NEXT OVER WRITTEN ADDR.
      SOB R2,1300 ;DO UNTIL R2=0
;
;MJP:
;*****
; *TEST 122 TEST JMP MODES 17,27,37,67,77
;*****
TST122:
      INC #TESTN ;INCREMENT TEST NUMBER
      MOV #0,#SEQ ;SETUP TEST SEQUENCER
      JMP (R7) ;JUMP MODE 17(SHOULD BE IN-LINE)
;
;MJP17: TST #SEQ ;CHECK SEQUENCE
      BEQ 20 ;BRANCH IF GOOD
      ;ERROR! BAD JUMP
10: ;ALL ERROR. TO TRAP TO EMT VECTOR
      .WORD 303 ;UNIQUE ERROR NUMBER

```



```

3775      |
3776      |
3777      | MJSR:
3778      | ;*****
3779      | ;*TEST 123      TEST JSR ALL MODES
3780      | ;*****
3781      | TST123:
3782      | INC      #TESTN      ;INCREMENT TEST NUMBER
3783      | MOV      R6,#SPS     ;SAVE STACK POINTER LOCATION
3784      | MOV      R6,#SPSJ    ;
3785      | SUB      #2,#SPSJ    ;SPSJ = R6 AFTER DECRIMENT
3786      | MOV      #1,#SEQ     ;SETUP SEQUENCE COUNTER
3787      | MOV      #MJSR1,R1  ;SETUP INITIAL JUMP IN MODE 1
3788      | CLR      R4          ;
3789      | COM      R4          ;R4--1 TO BE SAVED ON STACK
3790      | JSR      R4,(R1)    ;JSR MODE 1
3791      |
3792      | MJSR2: CMP      #2,#SEQ     ; TEST FOR CORRECT SEQUENCE
3793      | BEQ      MJSR2A     ;BRANCH IF GOOD
3794      |
3795      | 5#:
3796      | ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
3797      | .WORD  310      ;UNIQUE ERROR NUMBER
3798      | .WORD  CPUERR   ;ADDRESS OF ERROR MESSAGE
3799      |
3800      | MJSR2A: CMP      #SPSJ,R6   ;VERIFY STACK DECRIMENT
3801      | BNE      6#      ;BRANCH IF STACK INCORRECT
3802      | CMP      (R6),#125252 ;VERIFY CONTENTS OF STACK
3803      | BNE      6#      ;BRANCH IF DATA ON STACK INCORRECT
3804      | CMP      #MJSR4,R4   ;SEE IF CORRECT RETURN ADDRESS
3805      | BEQ      MJSR2B     ;BRANCH IF GOOD
3806      |
3807      | 6#:
3808      | ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
3809      | .WORD  311      ;UNIQUE ERROR NUMBER
3810      | .WORD  CPUERR   ;ADDRESS OF ERROR MESSAGE
3811      |
3812      | MJSR2B: INC      #SEQ     ;UPDATE SEQUENCE COUNTER
3813      | MOV      #SPS,R6    ;RELOAD STACK POINTER
3814      | MOV      #MJSRA,R1  ;SETUP JSR MODE 3
3815      | CLR      R4          ;DIFFERENT DATA TO R4
3816      | JSR      R4,(R1)    ;JSR MODE 3
3817      | HALT
3818      | MJSRA: .WORD  MJSR3   ;LITERAL FOR JUMP MODE 3
3819      |
3820      | MJSR1: CMP      #1,#SEQ     ; TEST FOR CORRECT SEQUENCE
3821      | BEQ      MJSR1A     ;BRANCH IF GOOD
3822      |
3823      | 7#:
3824      | ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
3825      | .WORD  312      ;UNIQUE ERROR NUMBER
3826      | .WORD  CPUERR   ;ADDRESS OF ERROR MESSAGE
3827      |
3828      | MJSR1A: CMP      #SPSJ,R6   ;VERIFY STACK DECRIMENT
3829      | BNE      8#      ;BRANCH IF STACK INCORRECT
3830      | CMP      (R6),#-1  ;VERIFY CONTENT OF STACK

```

```

3831 013010 001003      BNE      8#
3832 013012 022704 012666  CMP      #MJSR2,R4
3833 013016 001403      BEQ      MJSR1B
3834
3835 013020      8#:
3836 013020 104000      ERROR
3837 013022 000313      .WORD   313
3838 013024 001127      .WORD   CPUERR
3839
3840 013026 005237 001066  MJSR1B: INC      @#SEQ
3841 013032 013706 001070  MOI      @#SPS,R6
3842 013036 012704 125252  MOV      #125252,R4
3843 013042 012701 012666  MOV      #MJSR2,R1
3844 013046 004421      JSR      R4,(R1)+
3845
3846
3847 013050 022737 000004 001066  MJSR4:  CMP      #4,@#SEQ
3848 013056 001403      BEQ      MJSR4A
3849
3850 013060      9#:
3851 013060 104000      ERROR
3852 013062 000314      .WORD   314
3853 013064 001127      .WORD   CPUERR
3854
3855 013066 023706 001072  MJSR4A: CMP      @#SPSJ,R6
3856 013072 001006      BNE      10#
3857 013074 021627 052525  CMP      (R6),#052525
3858 013100 001003      BNE      10#
3859 013102 022704 013236  CMP      #MJSR6,R4
3860 013106 001403      BEQ      MJSR4B
3861
3862 013110      10#:
3863 013110 104000      ERROR
3864 013112 000315      .WORD   315
3865 013114 001127      .WORD   CPUERR
3866
3867 013116 005237 001066  MJSR4B: INC      @#SEQ
3868 013122 013706 001070  MOV      @#SPS,R6
3869 013126 012704 000377  MOV      #377,R4
3870 013132 012701 013144  MOV      #MJSR8+2,R1
3871 013136 004451      JSR      R4,@-(R1)
3872 013140 000000      HALT
3873 013142 013332  MJSR8:  .WORD   MJSR5
3874
3875
3876 013144 022737 000003 001066  MJSR3:  CMP      #3,@#SEQ
3877 013152 001403      BEQ      MJSR3A
3878
3879 013154      11#:
3880 013154 104000      ERROR
3881 013156 000316      .WORD   316
3882 013160 001127      .WORD   CPUERR
3883
3884 013162 023706 001072  MJSR3A: CMP      @#SPSJ,R6
3885 013166 001006      BNE      12#
3886 013170 021627 000000  CMP      (R6),#0

```

```

;BRANCH IF DATA ON STACK INCORRECT
;SEE IF CORRECT RETURN ADDRESS
;BRANCH IF GOOD
;ERROR! JSR MODE 2 FAILED

;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE

;UPDATE SEQUENCE COUNTER
;RELOAD STACK POINTER
;SETUP R4 DATA
;SETUP MODE 2 JUMP ADDRESS
;*JUMP MODE 2

; TEST FOR CORRECT SEQUENCE
;BRANCH IF GOOD
;ERROR! MODE 4 JUMPED TO OUT OF SEQUENCE

;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE

;VERIFY STACK DECRIMENT
;BRANCH IF STACK INCORRECT
;VERIFY CONTENTS OF STACK
;BRANCH IF DATA ON STACK INCORRECT
;SEE IF CORRECT RETURN ADDRESS
;BRANCH IF GOOD
;ERROR! JSR MODE 4 FAILED

;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE

;UPDATE SEQUENCE COUNTER
;RELOAD STACK POINTER
;SETUP R4 DATA
;SETUP JSR VECTOR
;JSR MODE 5

;MODE 5 VECTOR

; TEST FOR CORRECT SEQUENCE
;BRANCH IF GOOD
;ERROR! MODE 3 JUMPED TO OUT OF SEQUENCE

;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE

;VERIFY STACK DECRIMENT
;BRANCH IF STACK INCORRECT
;VERIFY CONTENTS OF STACK

```

3887	013174	001003			BNE	12#		;BRANCH IF DATA ON STACK INCORRECT
3888	013176	022704	012754		CMF	#MJSRA-2,R4		;SEE IF CORRECT RETURN ADDRESS
3889	013202	001403			BEQ	MJSR3B		;BRANCH IF GOOD
3890								;ERROR! JSR MODE 3 FAILED
3891	013204						12#:	
3892	013204	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
3893	013206	000317			.WORD	317		;UNIQUE ERROR NUMBER
3894	013210	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
3895								
3896	013212	005237	001066		MJSR3B:	INC	#0SEQ	;UPDATE SEQUENCE COUNTER
3897	013216	013706	001070		MOV	#0SPS,R6		;RELOAD STACK POINTER
3898	013222	012704	052525		MOV	#052525,R4		;SETUP R4 DATA
3899	013226	012701	013052		MOV	#MJSR4+2,R1		;SETUP JSR VECTOR
3900	013232	000257			CCC			;CLEAR CONDITION CODES
3901	013234	004441			JSR	R4,-(R1)		;JSR MODE 4
3902								
3903								
3904	013236	022737	000006	001066	MJSR6:	CMF	#6,#0SEQ	;TEST FOR CORRECT SEQUENCE
3905	013244	001403			BEQ	MJSR6A		;BRANCH IF GOOD
3906								;ERROR! MODE 6 JUMPED TO OUT OF SEQUENCE
3907	013246						13#:	
3908	013246	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
3909	013250	000320			.WORD	320		;UNIQUE ERROR NUMBER
3910	013252	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
3911								
3912	013254	023706	001072		MJSR6A:	CMF	#0SPSJ,R6	;VERIFY STACK DECREMENT
3913	013260	001006			BNE	14#		;BRANCH IF STACK INCORRECT
3914	013262	021627	123456		CMF	(R6),#123456		;VERIFY CONTENTS OF STACK
3915	013266	001003			BNE	14#		;BRANCH IF DATA ON STACK INCORRECT
3916	013270	022704	013424		CMF	#MJSR7,R4		;SEE IF CORRECT RETURN ADDRESS
3917	013274	001403			BEQ	MJSR6B		;BRANCH IF GOOD
3918								;ERROR! JSR MODE 6 FAILED
3919	013276						14#:	
3920	013276	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
3921	013300	000321			.WORD	321		;UNIQUE ERROR NUMBER
3922	013302	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
3923								
3924	013304	005237	001066		MJSR6B:	INC	#0SEQ	;UPDATE SEQUENCE COUNTER
3925	013310	013706	001070		MOV	#0SPS,R6		;RELOAD STACK POINTER
3926	013314	012704	177773		MOV	#-5,R4		;SETUP R4 DATA
3927	013320	012701	013340		MOV	#MJSRC+10,R1		;SETUP JSR VECTOR
3928	013324	004471	177770		JSR	R4,#-10(R1)		;JSR MODE 7
3929	013330	013424			MJSRC:	.WORD	MJSR7	;JSR VECTOR
3930								
3931								
3932	013332	022737	000005	001066	MJSR5:	CMF	#5,#0SEQ	;TEST FOR CORRECT SEQUENCE
3933	013340	001403			BEQ	MJSR5A		;BRANCH IF GOOD
3934								;ERROR! MODE 5 JUMPED TO OUT OF SEQUENCE
3935	013342						15#:	
3936	013342	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
3937	013344	000322			.WORD	322		;UNIQUE ERROR NUMBER
3938	013346	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
3939								
3940	013350	023706	001072		MJSR5A:	CMF	#0SPSJ,R6	;VERIFY STACK DECREMENT
3941	013354	001006			BNE	16#		;BRANCH IF STACK INCORRECT
3942	013356	021627	000377		CMF	(R6),#377		;VERIFY CONTENTS OF STACK

```

3943 013362 001003          BNE      16#
3944 013364 022704 013140    CMP      #MJSRB-2,R4
3945 013370 001403          BEQ      MJSR5B
3946
3947 013372          16#:
3948 013372 104000          ERROR
3949 013374 000323          .WORD   323
3950 013376 001127          .WORD   CPUERR
3951
3952 013400 005237 001066    MJSR5B: INC      @#SEQ
3953 013404 013706 001070    MOV      @#SPS,R6
3954 013410 012704 123456    MOV      @123456,R4
3955 013414 012701 013246    MOV      #MJSR6+10,R1
3956 013420 004461 177770    JSR      R4,-10(R1)
3957
3958
3959 013424 022737 000007 001066  MJSR7:  CMP      #7,@#SEQ
3960 013432 001403          BEQ      MJSR7A
3961
3962 013434          17#:
3963 013434 104000          ERROR
3964 013436 000324          .WORD   324
3965 013440 001127          .WORD   CPUERR
3966
3967 013442 023706 001072    MJSR7A: CMP      @#SPSJ,R6
3968 013446 001006          BNE      18#
3969 013450 021627 177773    CMP      (R6),@-5
3970 013454 001003          BNE      18#
3971 013456 022704 013330    CMP      #MJSR5-2,R4
3972 013462 001403          BEQ      MJSR7E
3973
3974 013464          18#:
3975 013464 104000          ERROR
3976 013466 000325          .WORD   325
3977 013470 001127          .WORD   CPUERR
3978
3979 013472          MJSR7E:
3980 013472 013706 001070    MOV      @#SPS,R6
3981
3982
3983 013476          MJSR7:
3984
3985          ;*****
3986          ;TEST 124      TEST JSR MODES 27, 37, 67, 77
3987          ;*****
3988          TST124:
3989 013476 005267 165302          INC      #TESTN
3990 013502 012737 000001 001066    MOV      #1,@#SEQ
3991 013510 010637 001070    MOV      R6,@#SPS
3992 013514 010637 001072    MOV      R6,@#SPSJ
3993 013520 162737 000002 001072    SUB      #2,@#SPSJ
3994 013526 012704 177777    MOV      #-1,R4
3995 013532 004427 000240    JSR      R4,@240
3996 013536 022737 000001 001066  MJSR7:  CMP      #1,@#SEQ
3997 013544 001011          BNE      1#
3998 013546 023706 001072    CMP      @#SPSJ,R6

```

```

;BRANCH IF DATA ON STACK INCORRECT
;SEE IF CORRECT RETURN ADDRESS
;BRANCH IF GOOD
;ERROR! JSR MODE 5 FAILED

;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE

;UPDATE SEQUENCE COUNTER
;RELOAD STACK POINTER
;SETUP DATA IN R4
;SETUP JSR VECTOR
;JUMP MODE 6

; TEST FOR CORRECT SEQUENCE
;BRANCH IF GOOD
;ERROR! MODE 7 JUMPED TO OUT OF SEQUENCE

;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE

;VERIFY STACK DECIMENT
;BRANCH IF STACK INCORRECT
;VERIFY CONTENTS OF STAACK
;BRANCH IF DATA ON STACK INCORRECT
;SEE IF CORRECT RETURN ADDRESS
;BRANCH IF GOOD
;ERROR! JSR MODE 7 FAILED

;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE

;REPLACE STACK

;*****
;TEST 124      TEST JSR MODES 27, 37, 67, 77
;*****

;INCREMENT TEST NUMBER
;SETUP SEQUENCER
;SAVE STACK ADDRESS
;SAVE STACK DECIMENT ADDRESS
;
;SETUP R4 DATA
;EXECUTE A JSR MODE 27

;VERIFY COERRECT TEST SEQUENCE
;INCORRECT TEST SEQUENCE
;VERIFY STACK POINTER

```

3999	013552	001006				BNE	1#		
4000	013554	021627	177777			CMP	(R6),#-1		;VERIFY R4 GOT LOADED ON THE STACK
4001	013560	001003				BNE	1#		;BRANCH IF INCORRECT STACK CONTENTS
4002	013562	020427	013536			CMP	R4,#MJR27		;VERIFY CORRECT RETURN ADDRESS
4003	013566	001403				BEQ	MJR27A		;BRANCH IF GOOD RETURN ADDRESS ON STACK
4004									;ERROR! MODE 27 FAILED
4005	013570				1#:				
4006	013570	104000				ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
4007	013572	000326				.WORD	326		;UNIQUE ERROR NUMBER
4008	013574	001127				.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
4009									
4010	013576	005237	001066			MJR27A: INC	0#SEQ		;UPDATE SEQUENCER
4011	013602	012704	152525			MOV	#152525,R4		;SETUP R4 TEST DATA
4012	013606	013706	001070			MOV	0#SPS,R6		;RESET STACK POINTER
4013	013612	004437	013704			JSR	R4,0#MJR37		;JSR MODE 37
4014	013616	000000				MJR27B: HALT			
4015									
4016	013620	023727	001066	000003		MJR67: CMP	0#SEQ,#3		;VERIFY TEST SEQUENCE
4017	013626	001011				BNE	2#		;INCORRECT TEST SEQUENCE
4018	013630	023706	001072			CMP	0#SPSJ,R6		;VERIFY STACK DECREMENT
4019	013634	001006				BNE	2#		;INCORRECT STACK DECREMENT
4020	013636	021627	000125			CMP	(R6),#125		;VERIFY STACK WAS LOADED
4021	013642	001003				BNE	2#		
4022	013644	020427	013764			CMP	R4,#MJR77		;VERIFY RETURN ADDRESS
4023	013650	001403				BEQ	MJR67A		;BRANCH IF GOOD
4024									;ERROR! MODE 67 FAILED
4025	013652								
4026	013652	104000			2#:	ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
4027	013654	000327				.WORD	327		;UNIQUE ERROR NUMBER
4028	013656	001127				.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
4029									
4030	013660	005237	001066			MJR67A: INC	0#SEQ		;UPDATE SEQUENCER
4031	013664	013706	001070			MOV	0#SPS,R6		;RESET STACK
4032	013670	012704	000001			MOV	#1,R4		;SETUP R4 DATA
4033	013674	004477	000002			JSR	R4,0#MJR68		;JSR MODE 77
4034	013700	000000				MJR6A: HALT			
4035	013702	013764				MJR68: .WORD	MJR77		;DATA FOR MODE 77 JUMP
4036									
4037	013704	023727	001066	000002		MJR37: CMP	0#SEQ,#2		;VERIFY TEST SEQUENCE
4038	013712	001011				BNE	2#		;INCORRECT TEST SEQUENCE
4039	013714	023706	001072			CMP	0#SPSJ,R6		;VERIFY STACK DECREMENT
4040	013720	001006				BNE	2#		;INCORRECT STACK DECREMENT
4041	013722	021627	152525			CMP	(R6),#152525		;VERIFY STACK WAS LOADED
4042	013726	001003				BNE	2#		
4043	013730	020427	013616			CMP	R4,#MJR27B		;VERIFY RETURN ADDRESS
4044	013734	001403				BEQ	MJR37A		;BRANCH IF GOOD
4045									;ERROR! MODE 37 FAILED
4046	013736				2#:	ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
4047	013736	104000				.WORD	330		;UNIQUE ERROR NUMBER
4048	013740	000330				.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
4049	013742	001127							
4050									
4051	013744	005237	001066			MJR37A: INC	0#SEQ		;UPDATE SEQUENCER
4052	013750	013706	001070			MOV	0#SPS,R6		;RELOAD STACK
4053	013754	012704	000125			MOV	#125,R4		;SETUP R4 TEST DATA
4054	013760	004467	177634			JSR	R4,MJR67		;JSR MODE 6

```

4055
4056 013764 023727 001066 000004 MJR77: CMP      @SEQ,@4      ;VERIFY TEST SEQUENCE
4057 013772 001011                BNE      21          ;INCORRECT TEST SEQUENCE
4058 013774 023706 001072                CMP      @SPSJ,R6   ;VERIFY STACK DECIMENT
4059 014000 001006                BNE      21          ;INCORRECT STACK DECIMENT
4060 014002 021627 000001                CMP      (R6),@1    ;VERIFY STACK WAS LOADED
4061 014006 001003                BNE      21
4062 014010 020427 013700                CMP      R4,@MJR6A  ;VERIFY RETURN ADDRESS
4063 014014 001403                BEQ      MJR77A     ;BRANCH IF GOOD
4064
4065
4066 014016                21:          ;ALL ERRORS TO TRAP TO EMT VECTOR
4067 014020 104000                .WORD    331        ;UNIQUE ERROR NUMBER
4068 014022 001127                .WORD    CPUERR     ;ADDRESS OF ERROR MESSAGE
4069
4070 014024                MJR77A:
4071
4072 014024 013706 001070                MOV      @SPSJ,R6   ;RESET STACK
4073
4074
4075 014030                ;
4076                ;*****
4077                ;*TEST 125      TEST RTS AND RTS R6
4078                ;*****
4079 014030                TST125:
4080 014030 005267 164750                INC      @TESTN     ;INCREMENT TEST NUMBER
4081 014034 012706 001000                MOV      @STBOT,R6  ;INSURE VALID STACK
4082 014040 012746 123456                MOV      @123456,-(R6) ;SETUP TEST REGISTER
4083 014044 012703 014060                MOV      @RTS1,R3   ;SETUP TEST PC
4084 014050 000203                RTS      R3         ;**TEST INSTRUCTION
4085 014052 104000                .WORD    332        ;ALL ERRORS TO TRAP TO EMT VECTOR
4086 014054 000332                .WORD    CPUERR     ;UNIQUE ERROR NUMBER
4087 014056 001127                .WORD    CPUERR     ;ADDRESS OF ERROR MESSAGE
4088
4089
4090 014060 022703 123456                RTS1:  CMP      @123456,R3 ;INCORRECT PC ON RTS
4091 014064 001403                BEQ      RTS6
4092
4093 014066 104000                .WORD    333        ;BRANCH IF GOOD
4094 014070 000333                .WORD    CPUERR     ;ERROR! REGISTER CONTENTS INCORRECT
4095 014072 001127                .WORD    CPUERR     ;ALL ERRORS TO TRAP TO EMT VECTOR
4096
4097
4098                ;THIS TEST CHECKS AN UN-TESTED PLA TERM
4099
4100 014074 010601 014114                RTS6:  MOV      R6,R1     ;SAVE STACK IN R1
4101 014076 012705                MOV      @10,R5     ;MOVE EXPECTED RETURN ADDR TO R5
4102 014102 010506                MOV      R5,R6     ;MOVE RETURN ADDR TO R6
4103 014104 000206                RTS      R6         ;>>>>TEST INSTRUCTION<<<<<
4104
4105 014106 104000                .WORD    334        ;ERROR! RTS NOT EXECUTED
4106 014110 000334                .WORD    CPUERR     ;ALL ERRORS TO TRAP TO EMT VECTOR
4107 014112 001127                .WORD    CPUERR     ;UNIQUE ERROR NUMBER
4108 014114 021506                10:    CMP      (R5),R6   ;ADDRESS OF ERROR MESSAGE
4109 014116 001403                BEQ      RTSE       ;IS R6=31506?
4110

```

```

4111 014120 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
4112 014122 000335          .WORD      335          ;UNIQUE ERROR NUMBER
4113 014124 001127          .WORD      CPUERR       ;ADDRESS OF ERROR MESSAGE
4114 014126 010106          RTSE:  MOV      R1,R6    ;RESTORE STACK
4115
4116 014130          TSMUO:
4117          ;*****
4118          ;TEST 126      SETUP AND TEST KERNEL, SUPERVISOR AND USER STACKS
4119          ;*****
4120 014130          TST126:
4121 014130 005267 164650          INC      #TESTN          ;INCREMENT TEST NUMBER
4122 014134 012737 040000 177776          MOV      #40000,0#177776 ;SET PS TO SUP MODE
4123 014142 012706 177777          MOV      #177777,R6     ;INIT SUP STACK TO ALL ONES
4124 014146 022706 177777          CMP      #177777,R6     ;ARE ALL BITS SET
4125 014152 001403          BEQ      1#            ;YES GO ON
4126          ;NO GO TO ERROR
4127 014154 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
4128 014156 000336          .WORD      336          ;UNIQUE ERROR NUMBER
4129 014160 001127          .WORD      CPUERR       ;ADDRESS OF ERROR MESSAGE
4130
4131 014162 005006          1#:  CLR      R6        ;SET SUP STACK TO ALL ZEROES
4132 014164 022706 000000          CMP      #0,R6         ;ARE ALL BITS CLEARED
4133 014170 001403          BEQ      2#            ;YES GO ON
4134          ;NO GO TO ERROR
4135 014172 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
4136 014174 000337          .WORD      337          ;UNIQUE ERROR NUMBER
4137 014176 001127          .WORD      CPUERR       ;ADDRESS OF ERROR MESSAGE
4138
4139 014200 012706 125252          2#:  MOV      #125252,R6 ;SET SUP STACK TO ALTERNATING PATTERN
4140 014204 022706 125252          CMP      #125252,R6    ;IS SUP SP CORRECT
4141 014210 001403          BEQ      3#            ;YES GO ON
4142          ;NO GO TO ERROR
4143 014212 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
4144 014214 000340          .WORD      340          ;UNIQUE ERROR NUMBER
4145 014216 001127          .WORD      CPUERR       ;ADDRESS OF ERROR MESSAGE
4146
4147 014220 012706 052525          3#:  MOV      #52525,R6  ;SET SUP STACK TO ALTERNATING PATTERN
4148 014224 022706 052525          CMP      #52525,R6    ;IS SUP SP CORRECT
4149 014230 001403          BEQ      4#            ;YES GO ON
4150          ;NO GO TO ERROR
4151 014232 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
4152 014234 000341          .WORD      341          ;UNIQUE ERROR NUMBER
4153 014236 001127          .WORD      CPUERR       ;ADDRESS OF ERROR MESSAGE
4154
4155 014240 012706 000700          4#:  MOV      #700,R6    ;SETUP SUP SP
4156 014244 012737 140000 177776          MOV      #140000,0#177776 ;SET PS TO USER MODE
4157 014252 012706 177777          MOV      #177777,R6    ;INIT USER STACK TO ALL ONES
4158 014256 022706 177777          CMP      #177777,R6    ;ARE ALL BITS SET
4159 014262 001403          BEQ      5#            ;YES GO ON
4160          ;NO GO TO ERROR
4161 014264 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
4162 014266 000342          .WORD      342          ;UNIQUE ERROR NUMBER
4163 014270 001127          .WORD      CPUERR       ;ADDRESS OF ERROR MESSAGE
4164
4165 014272 005006          5#:  CLR      R6        ;SET USER STACK TO ALL ZEROES
4166 014274 022706 000000          CMP      #0,R6         ;ARE ALL BITS CLEARED

```



```

4167 014300 001403          BEQ      6#          ;YES GO ON
4168                                ;NO GO TO ERROR
4169 014302 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
4170 014304 000343          .WORD    343        ;UNIQUE ERROR NUMBER
4171 014306 001127          .WORD    CPUERR     ;ADDRESS OF ERROR MESSAGE
4172
4173 014310 012706 125252    6#:      MOV      #125252,R6 ;SET USER STACK TO ALTERNATING PATTERN
4174 014314 022706 125252    CMP      #125252,R6 ;IS USER SP CORRECT
4175 014320 001403          BEQ      7#          ;YES GO ON
4176                                ;NO GO TO ERROR
4177 014322 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
4178 014324 000344          .WORD    344        ;UNIQUE ERROR NUMBER
4179 014326 001127          .WORD    CPUERR     ;ADDRESS OF ERROR MESSAGE
4180
4181 014330 012706 052525    7#:      MOV      #52525,R6 ;SET USER STACK TO ALTERNATING PATTERN
4182 014334 022706 052525    CMP      #52525,R6 ;IS USER SP CORRECT
4183 014340 001403          BEQ      8#          ;YES GO ON
4184                                ;NO GO TO ERROR
4185 014342 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
4186 014344 000345          .WORD    345        ;UNIQUE ERROR NUMBER
4187 014346 001127          .WORD    CPUERR     ;ADDRESS OF ERROR MESSAGE
4188
4189 014350 012706 000600    8#:      MOV      #600,R6    ;SETUP USER SP
4190 014354 005037 177776    CLR      @#177776   ;SET PS TO KER MODE
4191 014360 012706 001000    MOV      @STBOT,R6 ;SETUP KERNEL SP
4192 014364 005037 000700    CLR      @#700     ;CLEAR FIRST WORDS OF SUP, KER, AND USE STACKS
4193 014370 005037 000600    CLR      @#600
4194 014374 005037 001000    CLR      @#STBOT
4195 014400 004767 000070    JSR      PC,CHECK  ;
4196 014404 012737 040000    177776 RET1:  MOV      #40000,@#177776 ; TEST KER, SUP, AND USE STACKS
4197 014412 022706 000700    CMP      #700,R6  ;SET PSW TO SUP MODE
4198 014416 001403          BEQ      1#          ;IS SUP SP CORRECT
4199                                ;YES GO ON
4200                                ;NO GO TO ERROR
4201 014422 000346          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
4202 014424 001127          .WORD    346        ;UNIQUE ERROR NUMBER
4203                                ;ADDRESS OF ERROR MESSAGE
4204 014426 012737 140000    177776 1#:      MOV      #140000,@#177776 ;SET PSW TO USE MODE
4205 014434 022706 000600    CMP      #600,R6  ;IS USE SP CORRECT
4206 014440 001403          BEQ      2#          ;YES GO ON
4207                                ;NO GO TO ERROR
4208 014442 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
4209 014444 000347          .WORD    347        ;UNIQUE ERROR NUMBER
4210 014446 001127          .WORD    CPUERR     ;ADDRESS OF ERROR MESSAGE
4211
4212 014450 005037 177776    2#:      CLR      @#177776   ;SET PSW TO KER MODE
4213 014454 022706 001000    CMP      @STBOT,R6 ;IS KER SP CORRECT
4214 014460 001403          BEQ      3#          ;YES GO ON
4215                                ;NO GO TO ERROR
4216 014462 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
4217 014464 000350          .WORD    350        ;UNIQUE ERROR NUMBER
4218 014466 001127          .WORD    CPUERR     ;ADDRESS OF ERROR MESSAGE
4219
4220 014470          3#:
4221
4222 014470 000167 000252    JMP      MTSO

```

```

4223
4224
4225
4226 014474 012737 040000 177776 CHECK: MOV #40000, @177776 ;SET PSW TO SUP MODE
4227 014502 004767 000060 JSR PC,CHECK1 ; TEST SUP, KER, AND USE STACKS
4228 014506 022716 000000 RET2: CMP #0,(SP) ;IS SUP STACK CLEARED
4229 014512 001403 BEQ 1# ;YES GO ON
4230 ;NO GO TO ERROR
4231 014514 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4232 014516 000351 .WORD 351 ;UNIQUE ERROR NUMBER
4233 014520 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4234
4235 014522 012737 140000 177776 1#: MOV #140000, @177776 ;SET PSW TO USE MODE
4236 014530 022716 000000 CMP #0,(SP) ;IS USE STACK CLEARED
4237 014534 001403 BEQ 2# ;YES GO ON
4238 ;NO GO TO ERROR
4239 014536 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4240 014540 000352 .WORD 352 ;UNIQUE ERROR NUMBER
4241 014542 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4242
4243 014544 005037 177776 2#: CLR @177776 ;SET PSW TO KER MODE
4244 014550 022716 014404 CMP @RET1,(SP) ;DOES KER STACK HAVE CORRECT DATA
4245 014554 001403 BEQ 3# ;YES GO ON
4246 ;NO GO TO ERROR
4247 014556 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4248 014560 000353 .WORD 353 ;UNIQUE ERROR NUMBER
4249 014562 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4250
4251 014564 000207 3#: RTS PC ;RETURN
4252
4253 ;ROUTINE TO CHECK STACKS AFTER ONE RTS
4254
4255 014566 012737 140000 177776 CHECK1: MOV #140000, @177776 ;SET PSW TO USE MODE
4256 014574 004767 000060 JSR PC,CHECK2 ; TEST KER, SUP, AND USE STACKS
4257 014600 022716 000000 RET3: CMP #0,(SP) ;IS USE STACK CLEARED
4258 014604 001403 BEQ 1# ;YES GO ON
4259 ;NO GO TO ERROR
4260 014606 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4261 014610 000354 .WORD 354 ;UNIQUE ERROR NUMBER
4262 014612 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4263
4264 014614 005037 177776 1#: CLR @177776 ;SET PSW TO KER MODE
4265 014620 022716 014404 CMP @RET1,(SP) ;IS KER STACK CORRECT
4266 014624 001403 BEQ 2# ;YES GO ON
4267 ;NO GO TO ERROR
4268 014626 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4269 014630 000355 .WORD 355 ;UNIQUE ERROR NUMBER
4270 014632 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4271
4272 014634 012737 040000 177776 2#: MOV #40000, @177776 ;SET PSW TO SUP MODE
4273 014642 022716 014506 CMP @RET2,(SP) ;IS SUP STACK CORRECT
4274 014646 001403 BEQ 3# ;YES GO ON
4275 ;NO GO TO ERROR
4276 014650 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4277 014652 000356 .WORD 356 ;UNIQUE ERROR NUMBER
4278 014654 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE

```

```

4279
4280 014656 000207 3#: RTS PC ;RETURN
4281 ;ROUTINE TO CHECK STACKS AFTER ZERO RTS
4282
4283
4284 014660 022716 014600 CHECK2: CMP #RET3,(SP) ;IS USE STACK CORRECT
4285 014664 001403 BEQ 1# ;YES GO ON
4286 ;NO GO TO ERROR
4287 014666 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4288 014670 000357 .WORD ;UNIQUE ERROR NUMBER
4289 014672 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4290
4291 014674 012737 040000 177776 1#: MOV #40000,#177776 ;SET PSW TO SUP MODE
4292 014702 022716 014506 CMP #RET2,(SP) ;IS SUP STACK CORRECT
4293 014706 001403 BEQ 2# ;YES GO ON
4294 ;NO GO TO ERROR
4295 014710 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4296 014712 000360 .WORD ;UNIQUE ERROR NUMBER
4297 014714 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4298
4299 014716 005037 177776 2#: CLR #177776 ;SET PSW TO KER MODE
4300 014722 022716 014404 CMP #RET1,(SP) ;IS KER STACK CORRECT
4301 014726 001403 BEQ 3# ;YES GO ON
4302 ;NO GO TO ERROR
4303 014730 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4304 014732 000361 .WORD ;UNIQUE ERROR NUMBER
4305 014734 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4306
4307 014736 012737 140000 177776 3#: MOV #140000,#177776 ;SET PSW TO USE MODE
4308 014744 000207 RTS PC ;RETURN
4309
4310 014746 ;
4311 014746 ; MTSO:
4312 ; MMVCC:
4313 ;*****
4314 ;*TEST 127 TEST MOV CONDITION CODES - *0-
4315 ;*****
4315 014746 TST127:
4316 014746 005267 164032 INC #TESTN ;INCREMENT TEST NUMBER
4317 014752 000277 SCC ;
4318 014754 000244 CLZ ;CC=1011
4319 014756 012704 000000 MOV #0,R4 ;CC=0101, R4=0
4320 014762 100403 BMI 1# ;ERROR IF N FLAG
4321 014764 102402 BVS 1# ;ERROR IF V FLAG SET
4322 014766 103001 BCC 1# ;ERROR IF C FLAG CLEAR
4323 014770 001403 BEQ 2# ;SKIP IF Z FLAG SET
4324 ;CC SHOULD=0101
4325 014772 1#:
4326 014772 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4327 014774 000362 .WORD ;UNIQUE ERROR NUMBER
4328 014776 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4329
4330 015000 000277 2#: SCC
4331 015002 000251 .WORD 251 ;CC=0110
4332 015004 012704 100000 MOV #100000,R4 ;R4=100000, CC=1000
4333 015010 001403 BEQ 3# ;ERROR IF Z SET
4334 015012 102402 BVS 3# ;ERROR IF V SET

```

```

4335 015014 103401          BCS      3#          ;ERROR IF C SET
4336 015016 100403          BMI      4#          ;EXIT IF N SET
4337                                     ;ERROR! CC SHOULD= 1000
4338 015020          3#:
4339 015020 104000          ERROR
4340 015022 000363          .WORD    363          ;ALL ERRORS TO TRAP TO EMT VECTOR
4341 015024 001127          .WORD    CPUERR       ;UNIQUE ERROR NUMBER
4342                                     ;ADDRESS OF ERROR MESSAGE
4343 015026          4#:
4344
4345
4346 015026          MBTCC:
4347          ;*****
4348          ;*TEST 130      TEST BIT CONDITION CODES - **0-
4349          ;*****
4350 015026          TST130:
4351 015026 005267 163752          INC      #TESTN          ;INCREMENT TEST NUMBER
4352 015032 005004          CLR      R4
4353 015034 005104          COM      R4              ;R4=-1
4354 015036 000277          SCC
4355 015040 000244          CLZ          ;CC=1011
4356 015042 032704 000000          BIT      #0,R4          ;CC=0101
4357 015046 100403          BMI      1#          ;ERROR IF N FLAG
4358 015050 102402          BVS      1#          ;ERROR IF V FLAG SET
4359 015052 103001          BCC      1#          ;ERROR IF C FLAG CLEAR
4360 015054 001403          BEQ      2#          ;SKIP IF Z FLAG SET
4361                                     ;ERROR! CC SHOULD=0101
4362 015056          1#:
4363 015056 104000          ERROR
4364 015060 000364          .WORD    364          ;ALL ERRORS TO TRAP TO EMT VECTOR
4365 015062 001127          .WORD    CPUERR       ;UNIQUE ERROR NUMBER
4366                                     ;ADDRESS OF ERROR MESSAGE
4367 015064 000277          2#:      SCC
4368 015066 000251          .WORD    251          ;CC=0110
4369 015070 032704 100000          BIT      #100000,R4    ;CC=1000
4370 015074 001403          BEQ      3#          ;ERROR IF Z SET
4371 015076 102402          BVS      3#          ;ERROR IF V SET
4372 015100 103401          BCS      3#          ;ERROR IF C SET
4373 015102 100403          BMI      4#          ;EXIT IF N SET
4374                                     ;ERROR! CC SHOULD= 1000
4375 015104          3#:
4376 015104 104000          ERROR
4377 015106 000365          .WORD    365          ;ALL ERRORS TO TRAP TO EMT VECTOR
4378 015110 001127          .WORD    CPUERR       ;UNIQUE ERROR NUMBER
4379                                     ;ADDRESS OF ERROR MESSAGE
4380 015112          4#:
4381
4382
4383 015112          MBCCC:
4384          ;*****
4385          ;*TEST 131      TEST BIC CONDITION CODES - **0-
4386          ;*****
4387 015112          TST131:
4388 015112 005267 163666          INC      #TESTN          ;INCREMENT TEST NUMBER
4389 015116 005004          CLR      R4
4390 015120 005104          COM      R4              ;R4=-1

```

```

4391 015122 000277 SCC
4392 015124 000244 CLZ
4393 015126 042704 177777 BIC #177777,R4
4394 015132 100403 BMI 1#
4395 015134 102402 BVS 1#
4396 015136 103001 BCC 1#
4397 015140 001403 BEQ 2#
4398
4399 015142 1#
4400 015142 104000 ERROR
4401 015144 000366 .WORD 366
4402 015146 001127 .WORD CPUERR
4403
4404 015150 005104 2# COM R4
4405 015152 000277 SCC
4406 015154 000251 .WORD 251
4407 015156 042704 077777 BIC #77777,R4
4408 015162 001403 BEQ 3#
4409 015164 102402 BVS 3#
4410 015166 103401 BCS 3#
4411 015170 100403 BMI 4#
4412
4413 015172 3#
4414 015172 104000 ERROR
4415 015174 000367 .WORD 367
4416 015176 001127 .WORD CPUERR
4417
4418 015200 4#
4419
4420
4421 015200 MBSCC:
4422 ;*****
4423 ;*TEST 132 TEST BIS CONDITION CODES
4424 ;*****
4425 015200 TST132:
4426 015200 005267 163600 INC #TESTN
4427 015204 005004 CLR R4
4428 015206 000277 SCC
4429 015210 000246 .WORD 246
4430 015212 052704 000000 BIS #0,R4
4431 015216 100403 BMI 1#
4432 015220 102402 BVS 1#
4433 015222 103001 BCC 1#
4434 015224 001403 BEQ 2#
4435
4436 015226 1#
4437 015226 104000 ERROR
4438 015230 000370 .WORD 370
4439 015232 001127 .WORD CPUERR
4440
4441 015234 000277 2# SCC
4442 015236 000241 CLC
4443 015240 052704 100076 BIS #100076,R4
4444 015244 001403 BEQ 3#
4445 015246 102402 BVS 3#
4446 015250 103401 BCS 3#

;CC=1011
;CC=0101
;ERROR IF N FLAG
;ERROR IF V FLAG SET
;ERROR IF C FLAG CLEAR
;SKIP IF Z FLAG SET
;ERROR! CC SHOULD=0101

;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE

;R4=-1

;CC=0110
;CC=1000
;ERROR IF Z SET
;ERROR IF V SET
;ERROR IF C SET
;EXIT IF N SET
;ERROR! CC SHOULD= 1000

;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE

;INCREMENT TEST NUMBER
;R4=0

;CC=1001
;R4=0, CC=0101
;ERROR IF MINUS
;ERROR IF V SET
;ERROR IF C CLEAR
;BRANCH IF GOOD
;ERROR! BIS CC FAILED

;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE

;CC=1110
;R4=100076, CC=1000
;ERROR IF Z SET
;ERROR IF V SET
;ERROR IF C SET

```

```

4447 015252 100403          BMI      4#          ;BRANCH IF GOOD
4448                                     ;ERROR! BAD BIS CC
4449 015254          3#:
4450 015254 104000          ERROR
4451 015256 000371          .WORD    371          ;ALL ERRORS TO TRAP TO EMT VECTOR
4452 015260 001127          .WORD    CPUERR       ;UNIQUE ERROR NUMBER
4453                                     ;ADDRESS OF ERROR MESSAGE
4454 015262          4#:
4455
4456
4457 015262          MDCCC:
4458 ;*****
4459 ;*TEST 133      TEST DEC, INC CONDITION CODES
4460 ;*****
4461 015262          TST133:
4462 015262 005267 163516      INC      #TESTN        ;INCREMENT TEST NUMBER
4463 015266 012704 077777      MOV      #77777,R4    ;R4=77777
4464 015272 000257          CCC
4465 015274 000261          SEC          ;CC=0001
4466 015276 005204          INC      R4          ;R4=100000, CC=0011
4467 015300 001403          BEQ      1#          ;ERROR IF ZERO
4468 015302 100002          BPL      1#          ;ERROR IF POSITIVE
4469 015304 102001          BVC      1#          ;ERROR IF V CLEAR
4470 015306 103403          BCS      2#          ;BRANCH IF GOOD
4471                                     ;ERROR! INC FAILED
4472 015310          1#:
4473 015310 104000          ERROR
4474 015312 000372          .WORD    372          ;ALL ERRORS TO TRAP TO EMT VECTOR
4475 015314 001127          .WORD    CPUERR       ;UNIQUE ERROR NUMBER
4476                                     ;ADDRESS OF ERROR MESSAGE
4477 015316 000257          2#:      CCC
4478 015320 005204          INC      R4          ;R4=100001, CC=1000
4479 015322 103413          BCS      3#          ;ERROR IF C SET
4480 015324 102412          BVS      3#          ;ERROR IF V SET
4481 015326 005304          DEC      R4          ;R4=100000, CC=1000
4482 015330 102410          BVS      3#          ;ERROR IF V SET
4483 015332 103407          BCS      3#          ;ERROR IF C SET
4484 015334 000277          SCC
4485 015336 000252          .WORD    252         ;CC=0101
4486 015340 005304          DEC      R4          ;R4=77777, CC=1011
4487 015342 001403          BEQ      3#          ;ERROR IF Z SET
4488 015344 102002          BVC      3#          ;ERROR IF V CLEAR
4489 015346 103001          BCC      3#          ;ERROR IF C CLEAR
4490 015350 100003          BPL      4#          ;BRANCH IF GOOD
4491                                     ;ERROR! BAD CC
4492 015352          3#:
4493 015352 104000          ERROR
4494 015354 000373          .WORD    373          ;ALL ERRORS TO TRAP TO EMT VECTOR
4495 015356 001127          .WORD    CPUERR       ;UNIQUE ERROR NUMBER
4496                                     ;ADDRESS OF ERROR MESSAGE
4497 015360          4#:
4498
4499
4500 015360          MCTSCC:
4501 ;*****
4502 ;*TEST 134      TEST CLR, TST, SWAB CONDITION CODES

```

```

4503
4504
4505
4506 015360
4507 015360 005267 163420
4508 015364 000277
4509 015366 000244
4510 015370 005004
4511 015372 100403
4512 015374 102402
4513 015376 103401
4514 015400 001403
4515
4516 015402
4517 015402 104000
4518 015404 000374
4519 015406 001127
4520
4521 015410 005104
4522 015412 000277
4523 015414 005704
4524 015416 001403
4525 015420 102402
4526 015422 103401
4527 015424 100403
4528
4529 015426
4530 015426 104000
4531 015430 000375
4532 015432 001127
4533
4534 015434 000277
4535 015436 000304
4536 015440 102402
4537 015442 103401
4538 015444 100403
4539
4540 015446
4541 015446 104000
4542 015450 000376
4543 015452 001127
4544
4545 015454
4546
4547
4548 015454
4549
4550
4551
4552 015454
4553 015454 005267 163324
4554 015460 012704 077777
4555 015464 012701 000001
4556 015470 000257
4557 015472 060401
4558 015474 102003

```

```

;*****
;0100 - **00 - **00
;*****
TST134:
      INC      #TESTN          ;INCREMENT TEST NUMBER
      SCC
      CLZ          ;CC=1011
      CLR      R4          ;R4=0, CC=0100
      BMI      1#          ;ERROR IF MINUS
      BVC      1#          ;ERROR IF V SET
      BCS      1#          ;ERROR IF C SET
      BEQ      2#          ;BRANCH IF GOOD
                          ;ERROR! BAD CC ON CLR
1#:
      ERROR
      .WORD    374          ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD    CPUERR      ;UNIQUE ERROR NUMBER
                          ;ADDRESS OF ERROR MESSAGE
2#:
      COM      R4          ;R4=-1
      SCC
      TST      R4          ;CC=1111
      BEQ      3#          ;CC=1000
      BVS      3#          ;ERROR IF Z SET
      BCS      3#          ;ERROR IF V SET
      BMI      4#          ;ERROR IF C SET
                          ;BRANCH IF GOOD
                          ;ERROR! BAD TST CC
3#:
      ERROR
      .WORD    375          ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD    CPUERR      ;UNIQUE ERROR NUMBER
                          ;ADDRESS OF ERROR MESSAGE
4#:
      SCC
      SWAB     R4          ;CC=1111
      BVS      5#          ;CC=1000
      BCS      5#          ;ERROR IF V SET
      BMI      6#          ;ERROR IF C SET
                          ;BRANCH IF GOOD
                          ;ERROR! BAD SWAB CC
5#:
      ERROR
      .WORD    376          ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD    CPUERR      ;UNIQUE ERROR NUMBER
                          ;ADDRESS OF ERROR MESSAGE
6#:
MADCC:
;*****
;#TEST 135      TEST ADD CONDITION CODES - ****
;*****
TST135:
      INC      #TESTN          ;INCREMENT TEST NUMBER
      MOV      #77777,R4      ;R4=77777
      MOV      #1,R1         ;R1=1
      CCC          ;CC=0000
      ADD      R4,R1         ;77777 * 1 = 100000 IN R1
      BVC      1#          ;ERROR IF V CLEAR

```

```

4559 015476 103402          BCS 1#          ;ERROR IF CARRY
4560 015500 001401          BEQ 1#          ;ERROR IF Z SET
4561 015502 100403          BMI 2#          ;BRANCH IF GOOD
4562                                     ;ERROR! CC SHOULD =1010
4563 015504                                     1#:
4564 015504 104000          ;ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
4565 015506 000377          .WORD 377       ;UNIQUE ERROR NUMBER
4566 015510 001127          .WORD CPUERR    ;ADDRESS OF ERROR MESSAGE
4567
4568 015512 005204          2#:  INC R4          ;R4=100000
4569 015514 060401          ADD R4,R1       ;100000 + 100000 = 0 IN R1
4570 015516 102002          BVC 3#          ;ERROR IF V CLEAR
4571 015520 103001          BCC 3#          ;ERROR IF CARRY CLEAR
4572 015522 001403          BEQ 4#          ;BRANCH IF GOOD
4573                                     ;ERROR! CC SHOULD = 0111
4574 015524                                     3#:
4575 015524 104000          ;ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
4576 015526 000400          .WORD 400       ;UNIQUE ERROR NUMBER
4577 015530 001127          .WORD CPUERR    ;ADDRESS OF ERROR MESSAGE
4578
4579 015532 060401          4#:  ADD R4,R1       ;0 + 100000 = 100000
4580 015534 102402          BVS 5#          ;ERROR IF V SET
4581 015536 103401          BCS 5#          ;ERROR IF SET
4582 015540 100403          BMI 6#          ;BRANCH IF GOOD
4583                                     ;ERROR! CC SHOULD = 1000
4584 015542                                     5#:
4585 015542          ;ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
4586 015544 000401          .WORD 401       ;UNIQUE ERROR NUMBER
4587 015546 001127          .WORD CPUERR    ;ADDRESS OF ERROR MESSAGE
4588
4589 015550                                     6#:
4590
4591
4592 015550          MACCC:
4593          ;*****
4594          ;*TEST 136      TEST ADC CONDITION CODES - ****
4595          ;*****
4596 015550          TST136:
4597 015550 005267 163250  INC #TESTN      ;INCREMENT TEST NUMBER
4598 015554 012704 177777  MOV #177777,R4 ;R4=177777
4599 015560 000277          SCC             ;CC=1111
4600 015562 005504          ADC R4         ;R4=0 CC=0101
4601 015564 100403          BMI 1#        ;ERROR IF MINUS
4602 015566 102402          BVS 1#        ;ERROR IF V SET
4603 015570 103001          BCC 1#        ;ERROR IF C SET
4604 015572 001403          BEQ 2#        ;BRANCH IF GOOD
4605                                     ;ERROR! BAD ADC
4606 015574                                     1#:
4607 015574 104000          ;ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
4608 015576 000402          .WORD 402       ;UNIQUE ERROR NUMBER
4609 015600 001127          .WORD CPUERR    ;ADDRESS OF ERROR MESSAGE
4610
4611 015602 012704 077777  2#:  MOV #077777,R4 ;R4=077777
4612 015606 000277          SCC             ;
4613 015610 000242          CLV            ;CC=1101
4614 015612 005504          ADC R4         ;R4=100000 CC=1010

```


4615	015614	100003		BPL	3#		;ERROR IF PLUS
4616	015616	103402		BCS	3#		;ERROR IF C SET
4617	015620	001401		BEQ	3#		;ERROR IF ZERO
4618	015622	102403		BVS	4#		;BRANCH IF GOOD
4619							;ERROR! BAD ADC
4620	015624		3#:				
4621	015624	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
4622	015626	000403		.WORD	403		;UNIQUE ERROR NUMBER
4623	015630	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
4624							
4625	015632	000277	4#:	SCC			;CC=1111
4626	015634	005504		ADC	R4		;R4=100000 CC=1000
4627	015636	102402		BVS	5#		;ERROR IF V SET
4628	015640	103401		BCS	5#		;ERROR IF C SET
4629	015642	100403		BMI	6#		;BRANCH IF GOOD
4630							;ERROR! BAD ADC CC SHOULD= 1000
4631	015644		5#:				
4632	015644	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
4633	015646	000404		.WORD	404		;UNIQUE ERROR NUMBER
4634	015650	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
4635							
4636	015652		6#:				
4637							
4638							
4639	015652		MNCCCC:				
4640			;;*****				
4641			;*TEST 137				TEST NEG, CMP, COM CONDITION CODES
4642			;;*****				
4643	015652		TST137:				
4644	015652	005267		INC	#TESTN		;INCREMENT TEST NUMBER
4645	015656	012704	163126	MOV	#077777,R4		;R4=77777
4646	015662	000257	077777	CCC			;CC=0000
4647	015664	005404		NEG	R4		;R4=100001 CC=1001
4648	015666	102403		BVS	1#		;ERROR IF V SET
4649	015670	103002		BCC	1#		;ERROR IF C CLEAR
4650	015672	001401		BEQ	1#		;ERROR IF Z SET
4651	015674	100403		BMI	2#		;BRANCH IF GOOD
4652							;ERROR! BAD NEGATE
4653	015676		1#:				
4654	015676	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
4655	015700	000405		.WORD	405		;UNIQUE ERROR NUMBER
4656	015702	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
4657							
4658	015704	005004	2#:	CLR	R4		;R4=0
4659	015706	000257		CCC			;CC=0000
4660	015710	005404		NEG	R4		;CC=0101
4661	015712	100403		BMI	3#		;ERROR IF N SET
4662	015714	103402		BCS	3#		;ERROR IF C SET
4663	015716	102401		BVS	3#		;ERROR IF V SET
4664	015720	001403		BEQ	4#		;BRANCH IF GOOD
4665							;ERROR! BAD NEG
4666	015722		3#:				
4667	015722	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
4668	015724	000406		.WORD	406		;UNIQUE ERROR NUMBER
4669	015726	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
4670							

```

4671 015730 012704 077777 4#: MOV #77777,R4 ;R4=77777
4672 015734 012701 170000 MOV #170000,R1 ;R1=170000
4673 015740 000257 CCC ;CC=0000
4674 015742 020401 CMP R4,R1 ;77777 - 170000 = 107777 CC= 1011
4675 015744 102003 BVC 5# ;ERROR IF V CLEAR
4676 015746 103002 BCC 5# ;ERROR IF C CLEAR
4677 015750 001401 BEQ 5# ;ERROR IF ZERO
4678 015752 100403 BMI 6# ;BRANCH IF GOOD
4679 ;ERROR! BAD CMP
4680 015754 5#:
4681 015754 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4682 015756 000407 .WORD 407 ;UNIQUE ERROR NUMBER
4683 015760 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4684
4685 015762 000257 6#: CCC
4686 015764 005101 COM R1 ;R1=7777
4687 015766 100403 BMI 7# ;ERROR IF MINUS
4688 015770 001402 BEQ 7# ;ERROR IF ZERO
4689 015772 103001 BCC 7# ;ERROR IF CARRY
4690 015774 102003 BVC 8# ;BRANCH IF GOOD
4691 ;ERROR! BAD COM
4692 015776 7#:
4693 015776 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4694 016000 000410 .WORD 410 ;UNIQUE ERROR NUMBER
4695 016002 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4696
4697 016004 000277 8#: SCC
4698 016006 005101 COM R1
4699 016010 100403 BMI 10# ;BRANCH IF GOOD
4700 ;ERROR! BAD COM
4701 016012 9#:
4702 016012 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4703 016014 000411 .WORD 411 ;UNIQUE ERROR NUMBER
4704 016016 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4705
4706 016020 10#:
4707
4708
4709 016020 MSBCC:
4710 ;*****
4711 ;*TEST 140 TEST SUB CONDITION CODES - ****
4712 ;*****
4713 016020 TST140:
4714 016020 005267 162760 INC #TESTN ;INCREMENT TEST NUMBER
4715 016024 012704 077775 MOV #77775,R4 ;R4=77775
4716 016030 000257 CCC ;CC=0000
4717 016032 162704 137757 SUB #137757,R4 ;77775 - 137757
4718 ;TRY TO CAUSE AN ARITHMETIC OVERFLOW
4719 016036 102003 BVC 1# ;ERROR IF V CLEAR
4720 016040 100002 BPL 1# ;ERROR IF RESULT IS POSITIVE
4721 016042 001401 BEQ 1# ;ERROR IF 7 SET
4722 016044 103403 BCS 2# ;BRANCH IF GOOD
4723 ;ERROR! BAD SUBTRACT
4724 016046 1#:
4725 016046 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4726 016050 000412 .WORD 412 ;UNIQUE ERROR NUMBER

```

```

4727 016052 001127          .WORD  CPUERR          ;ADDRESS OF ERROR MESSAGE
4728
4729 016054 012704 000005  2#:  MOV      #5,R4          ;R4=5
4730 016060 000257          CCC              ;CC=00.)
4731 016062 162704 000012  SUB      #12,R4     ;5-12=-5 AND SETS CARRY
4732 016066 103003          BCC      3#       ;ERROR IF CARRY CLEAR
4733 016070 102402          BVS      3#       ;ERROR IF OVERFLOW
4734 016072 001401          BEQ      3#       ;ERROR IF ZERO
4735 016074 100403          BMI      4#       ;BRANCH IF GOOD
4736
4737 016076          3#:
4738 016076 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
4739 016100 000413          .WORD  413      ;UNIQUE ERROR NUMBER
4740 016102 001127          .WORD  CPUERR   ;ADDRESS OF ERROR MESSAGE
4741
4742 016104          4#:
4743
4744
4745 016104          MSBCCC:
4746          ;*****
4747          ;*TEST 141      TEST SBC CONDITION CODES - *****
4748          ;*****
4749          TST141:
4750 016104 005267 162674  INC      #TESTN     ;INCREMENT TEST NUMBER
4751 016110 012704 100000  MOV      #100000,R4 ;R4=100000
4752 016114 000257          CCC              ;C=0000
4753 016116 005604          SBC      R4        ;TRY TO SET V
4754 016120 100006          BPL      1#       ;ERROR IF N CLEAR
4755 016122 102405          BVS      1#       ;ERROR IF V SET (HAVENT SET C YET)
4756 016124 000261          SEC              ;CC SHOULD = 1001
4757 016126 005604          SBC      R4        ;TRY AGAIN TO SET V
4758 016130 102002          BVC      1#       ;ERROR IF V CLEAR
4759 016132 103401          BCS      1#       ;ERROR IF C SET
4760 016134 100003          BPL      2#       ;BRANCH IF GOOD
4761
4762 016136          1#:
4763 016136 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
4764 016140 000414          .WORD  414      ;UNIQUE ERROR NUMBER
4765 016142 001127          .WORD  CPUERR   ;ADDRESS OF ERROR MESSAGE
4766
4767 016144 005004          2#:  CLR      R4        ;R4=0
4768 016146 000277          SCC              ;CC=1110
4769 016150 000241          CLC              ;TRY TO CAUSE C FLAG FAILURE
4770 016152 005604          SBC      R4        ;ERROR IF C SET
4771 016154 103410          BCS      3#       ;ERROR IF V SET
4772 016156 102407          BVS      3#       ;ERROR IF NOT ZERO
4773 016160 001006          BNE      3#       ;SET CARRY
4774 016162 000261          SEC              ;NOW, 0 - CARRY = 177777
4775 016164 005604          SEC              ;ERROR IF CARRY CLEAR
4776 016166 103003          BCC      3#       ;ERROR IF V SET
4777 016170 102402          BVS      3#       ;ERROR IF ZERO
4778 016172 001401          BEQ      3#       ;BRANCH IF GOOD
4779 016174 100403          BMI      4#       ;ERROR! SBC FAILED
4780
4781 016176          3#:
4782 016176 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR

```

```

4783 016200 000415 .WORD 415 ;UNIQUE ERROR NUMBER
4784 016202 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4785
4786 016204 4#;
4787
4788
4789 016204 MRLCC;
4790 ;*****
4791 ;*TEST 142 TEST ROL CONDITION CODES - ****
4792 ;*****
4793 016204 TST142;
4794 016204 005267 162574 INC ;INCREMENT TEST NUMBER
4795 016210 012704 060000 MOV #60000,R4 ;R4= 0110000000000000
4796 016214 000257 CCC ;CC=0000
4797 016216 006104 ROL R4 ;R4= 1100000000000000
4798 016220 103402 BCS 1# ;ERROR IF CARRY
4799 016222 102001 BVC 1# ;ERROR IF V CLEAR
4800 016224 100403 BMI 2# ;BRANCH IF GOOD
4801 ;ERROR! ROL FAILED
4802 016226 1#;
4803 016226 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4804 016230 000416 .WORD 416 ;UNIQUE ERROR NUMBER
4805 016232 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4806
4807 016234 006104 2#; ROL R4 ;R4= 1000000000000000
4808 016236 103002 BCC 3# ;ERROR IF CARRY CLEAR
4809 016240 102401 BVS 3# ;ERROR IF V SET
4810 016242 100403 BMI 4# ;BRANCH IF GOOD
4811 ;ERROR! BAD ROL
4812 016244 3#;
4813 016244 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4814 016246 000417 .WORD 417 ;UNIQUE ERROR NUMBER
4815 016250 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4816
4817 016252 006104 4#; ROL R4 ;R4 = 0000000000000001
4818 016254 102003 BVC 5# ;ERROR IF V CLEAR
4819 016256 103002 BCC 5# ;ERROR IF C CLEAR
4820 016260 100401 BMI 5# ;ERROR IF MINUS
4821 016262 001003 BNE 6# ;BRANCH IF GOOD
4822 ;ERROR! BAD ROL
4823 016264 5#;
4824 016264 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4825 016266 000420 .WORD 420 ;UNIQUE ERROR NUMBER
4826 016270 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4827
4828 016272 006104 6#; ROL R4 ;R4=0000000000000011
4829 016274 102402 BVS 7# ;ERROR IF V SET
4830 016276 103401 BCS 7# ;ERROR IF C SET
4831 016300 100003 BPL 8# ;BRANCH IF GOOD
4832 ;ERROR! BAD ROL
4833 016302 7#;
4834 016302 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4835 016304 000421 .WORD 421 ;UNIQUE ERROR NUMBER
4836 016306 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4837
4838 016310 8#;

```

4839
4840
4841 016310
4842
4843
4844
4845 016310
4846 016310 005267 162470
4847 016314 012704 000003
4848 016320 000257
4849 016322 006004
4850 016324 103002
4851 016326 102001
4852 016330 100003
4853
4854 016332
4855 016332 104000
4856 016334 000422
4857 016336 001127
4858
4859 016340 006004
4860 016342 103002
4861 016344 102401
4862 016346 100403
4863
4864 016350
4865 016350 104000
4866 016352 000423
4867 016354 001127
4868
4869 016356 006004
4870 016360 102002
4871 016362 103401
4872 016364 100403
4873
4874 016366
4875 016366 104000
4876 016370 000424
4877 016372 001127
4878
4879 016374 006004
4880 016376 102402
4881 016400 103401
4882 016402 100003
4883
4884 016404
4885 016404 104000
4886 016406 000425
4887 016410 001127
4888
4889 016412
4890
4891
4892
4893
4894

```

MRRCC:
;*****
;+TEST 143      TEST ROR CONDITION CODES - ****
;*****
TST143:
      INC      $TESTN      ;INCREMENT TEST NUMBER
      MOV      $3,R4      ;R4= 0000000000000011
      CCC      ;CC= 0000
      ROR      R4          ;R4= 0000000000000001
      BCC      1$        ;ERROR IF NO CARRY
      BVC      1$        ;ERROR IF V CLEAR
      BPL      2$        ;BRANCH IF GOOD
                        ;ERROR! ROR FAILED
1$:
      ERROR
      .WORD    422
      .WORD    CPUERR
                        ;ALL ERRORS TO TRAP TO EMT VECTOR
                        ;UNIQUE ERROR NUMBER
                        ;ADDRESS OF ERROR MESSAGE
2$:
      ROR      R4          ;R4= 1000000000000000
      BCC      3$        ;ERROR IF CARRY CLEAR
      BVS      3$        ;ERROR IF V SET
      BMI      4$        ;BRANCH IF GOOD
                        ;ERROR! BAD ROR
3$:
      ERROR
      .WORD    423
      .WORD    CPUERR
                        ;ALL ERRORS TO TRAP TO EMT VECTOR
                        ;UNIQUE ERROR NUMBER
                        ;ADDRESS OF ERROR MESSAGE
4$:
      ROR      R4          ;R4 = 1100000000000000
      BVC      5$        ;ERROR IF V
      BCS      5$        ;ERROR IF C SET
      BMI      6$        ;BRANCH IF GOOD
                        ;ERROR! BAD ROR
5$:
      ERROR
      .WORD    424
      .WORD    CPUERR
                        ;ALL ERRORS TO TRAP TO EMT VECTOR
                        ;UNIQUE ERROR NUMBER
                        ;ADDRESS OF ERROR MESSAGE
6$:
      ROR      R4          ;R4= 0110000000000000
      BVS      7$        ;ERROR IF V SET
      BCS      7$        ;ERROR IF C SET
      BPL      8$        ;BRANCH IF GOOD
                        ;ERROR! BAD ROR
7$:
      ERROR
      .WORD    425
      .WORD    CPUERR
                        ;ALL ERRORS TO TRAP TO EMT VECTOR
                        ;UNIQUE ERROR NUMBER
                        ;ADDRESS OF ERROR MESSAGE
8$:
;*****
;+TEST 144      TEST C BIT WITH ROR/ROL

```

```

4895
4896
4897
4898
4899 016412
4900 016412 005267 162366
4901 016416 012701 052525
4902 016422 000241
4903 016424 006001
4904 016426 006001
4905 016430 006001
4906 016432 103403
4907 016434 104000
4908 016436 000426
4909 016440 001127
4910 016442 022701 045252
4911 016446 001403
4912 016450 104000
4913 016452 000427
4914 016454 001127
4915 016456 012701 125252
4916 016462 000241
4917 016464 006101
4918 016466 006101
4919 016470 006101
4920 016472 103403
4921 016474 104000
4922 016476 000430
4923 016500 001127
4924 016502 022701 052522
4925 016506 001403
4926 016510 104000
4927 016512 000431
4928 016514 001127
4929 016516
4930
4931
4932 016516
4933
4934
4935
4936 016516
4937 016516 005267 162262
4938 016522 012704 060000
4939 016526 000257
4940 016530 006304
4941 016532 103402
4942 016534 102001
4943 016536 100403
4944
4945 016540
4946 016540 104000
4947 016542 000432
4948 016544 001127
4949
4950 016546 006304

```

```

;*****
;THIS TEST IS TO CHECK FOR A SLOW C BIT PATH INTERNAL TO THE J11 DATA CHIP
;PROBLEM IS ONLY EXHIBITED ON EARLY MASK SETS (1590 AND 1593)
;*****
TST144:
    INC     #TESTN           ;INCREMENT TEST NUMBER
    MOV     #52525,R1       ;INIT R1 WITH DATA
    CLC
    ROR     R1              ;CLEAR THE C BIT
                          ;R1=025252, C BIT =1
    ROR     R1              ;R1=112525, C BIT =0
    ROR     R1              ;R1=045252, C BIT =1
    BCS     1#             ;BRANCH IF CARRY BIT SET
    ERROR   426            ;ALL ERRORS TO TRAP TO EMT VECTOR
    .WORD   CPUERR        ;UNIQUE ERROR NUMBER
    .WORD   045252        ;ADDRESS OF ERROR MESSAGE
1#:   CMP     #45252,R1     ;IS DATA IN R1 = TO EXPECTED DATA?
    BEQ     2#             ;BRANCH IF YES
    ERROR   427            ;ALL ERRORS TO TRAP TO EMT VECTOR
    .WORD   CPUERR        ;UNIQUE ERROR NUMBER
    .WORD   125252        ;ADDRESS OF ERROR MESSAGE
2#:   MOV     #125252,R1    ;SET UP R1
    CLC
    ROL     R1              ;CLEAR THE CARRY BIT
                          ;R1=052524, C BIT =1
    ROL     R1              ;R1=125251, C BIT =0
    ROL     R1              ;R1=052522, C BIT =1
    BCS     3#             ;BRANCH IF CARRY SET
    ERROR   430            ;ALL ERRORS TO TRAP TO EMT VECTOR
    .WORD   CPUERR        ;UNIQUE ERROR NUMBER
    .WORD   052522        ;ADDRESS OF ERROR MESSAGE
3#:   CMP     #052522,R1    ;IS DATA IN R1 = TO EXPECTED DATA?
    BEQ     4#             ;BRANCH IF YES
    ERROR   431            ;ALL ERRORS TO TRAP TO EMT VECTOR
    .WORD   CPUERR        ;UNIQUE ERROR NUMBER
    .WORD   052522        ;ADDRESS OF ERROR MESSAGE
4#:

```

```

MALCC:
;*****
;#TEST 145 TEST ASL CONDITION CODES - ****
;*****
TST145:
    INC     #TESTN           ;INCREMENT TEST NUMBER
    MOV     #60000,R4       ;R4= 0110000000000000
    CCC
    ASL     R4              ;CC=0000
                          ;C=0 R4= 1100000000000000
    BCS     1#             ;ERROR IF CARRY
    BVC     1#             ;ERROR IF V CLEAR
    BMI     2#             ;BRANCH IF GOOD
                          ;ERROR! ASL FAILED
1#:   ERROR   432            ;ALL ERRORS TO TRAP TO EMT VECTOR
    .WORD   CPUERR        ;UNIQUE ERROR NUMBER
    .WORD   060000        ;ADDRESS OF ERROR MESSAGE
2#:   ASL     R4              ;C=1 R4= 1000000000000000

```

```

4951 016550 103002          BCC      3#          ;ERROR IF CARRY CLEAR
4952 016552 102401          BVS      3#          ;ERROR IF V SET
4953 016554 100403          BMI      4#          ;BRANCH IF GOOD
4954                                ;ERROR! BAD ASL
4955 016556          3#:
4956 016556 104000          ERROR
4957 016560 000433          .WORD    433        ;ALL ERRORS TO TRAP TO EMT VECTOR
4958 016562 001127          .WORD    CPUERR     ;UNIQUE ERROR NUMBER
4959                                ;ADDRESS OF ERROR MESSAGE
4960 016564 006304          4#:  ASL      R4          ;C=1 R4= 0000000000000000
4961 016566 102003          BVC      5#          ;ERROR IF V CLEAR
4962 016570 103002          BCC      5#          ;ERROR IF C CLEAR
4963 016572 100401          BMI      5#          ;ERROR IF MINUS
4964 016574 001403          BEQ      6#          ;BRANCH IF GOOD
4965                                ;ERROR! BAD ASL
4966 016576          5#:
4967 016576 104000          ERROR
4968 016600 000434          .WORD    434        ;ALL ERRORS TO TRAP TO EMT VECTOR
4969 016602 001127          .WORD    CPUERR     ;UNIQUE ERROR NUMBER
4970                                ;ADDRESS OF ERROR MESSAGE
4971 016604 006304          6#:  ASL      R4          ;C=0 R4= 0000000000000000
4972 016606 102402          BVS      7#          ;ERROR IF V SET
4973 016610 103401          BCS      7#          ;ERROR IF C SET
4974 016612 100003          BPL      8#          ;BRANCH IF GOOD
4975                                ;ERROR! BAD ASL
4976 016614          7#:
4977 016614 104000          ERROR
4978 016616 000435          .WORD    435        ;ALL ERRORS TO TRAP TO EMT VECTOR
4979 016620 001127          .WORD    CPUERR     ;UNIQUE ERROR NUMBER
4980                                ;ADDRESS OF ERROR MESSAGE
4981 016622          8#:
4982
4983
4984 016622          MARCC:
4985          ;*****
4986          ;*TEST 146      TEST ASR CONDITION CODES - ****
4987          ;*****
4988          TST146:
4989 016622 005267 162156      INC      #TESTN      ;INCREMENT TEST NUMBER
4990 016626 012704 000341      MOV      #341,R4    ;R4= 000000001110001
4991 016632 000257          CCC          ;CC=0000
4992 016634 006204          ASR      R4          ;R4= 0000000001110000
4993 016636 103002          BCC      1#          ;ERROR IF NO CARRY
4994 016640 102001          BVC      1#          ;ERROR IF V CLEAR
4995 016642 100003          BPL      2#          ;BRANCH IF GOOD
4996                                ;ERROR! ASR FAILED
4997 016644          1#:
4998 016644 104000          ERROR
4999 016646 000436          .WORD    436        ;ALL ERRORS TO TRAP TO EMT VECTOR
5000 016650 001127          .WORD    CPUERR     ;UNIQUE ERROR NUMBER
5001                                ;ADDRESS OF ERROR MESSAGE
5002 016652 052704 100001      2#:  BIS      #100001,R4 ;R4= 1000000001110001
5003 016656 006204          ASR      R4          ;R4= 1100000000111000
5004 016660 103002          BCC      3#          ;ERROR IF CARRY CLEAR
5005 016662 102401          BVS      3#          ;ERROR IF V SET
5006 016664 100403          BMI      4#          ;BRANCH IF GOOD

```

```

5007                                     ;ERROR! BAD ASR
5008 016666                               3#:
5009 016666 104000                       ERROR
5010 016670 000437                       .WORD 437
5011 016672 001127                       .WORD CPUERR
5012                                     ;ALL ERRORS TO TRAP TO EMT VECTOR
5013 016674 006204                               4#: ASR R4
5014 016676 102002                       BVC 5#
5015 016700 103401                       BCS 5#
5016 016702 100403                       BMI 6#
5017                                     ;R4= 1110000000011100
5018 016704                               5#: ERROR
5019 016704 104000                       .WORD 440
5020 016706 000440                       .WORD CPUERR
5021 016710 001127                       ;ALL ERRORS TO TRAP TO EMT VECTOR
5022                                     ;UNIQUE ERROR NUMBER
5023 016712 006204                               6#: ASR R4
5024 016714 102005                       BVC 7#
5025 016716 103404                       BCS 7#
5026 016720 100003                       BPL 7#
5027 016722 022704 170016                 CMP #170016,R4
5028 016726 001403                       BEQ 8#
5029                                     ;R4= 1111000000001110
5030 016730                               7#: ERROR
5031 016730 104000                       .WORD 441
5032 016732 000441                       .WORD CPUERR
5033 016734 001127                       ;ALL ERRORS TO TRAP TO EMT VECTOR
5034                                     ;UNIQUE ERROR NUMBER
5035 016736                               8#: ;ADDRESS OF ERROR MESSAGE
5036
5037
5038 016736
5039
5040
5041
5042 016736
5043 016736 005267 162042                 ;MSXTCC:
5044 016742 012704 123456                 ;*****
5045 016746 010401                         ;*TEST 147 TEST SXT CONDITION CODES / -#0-
5046 016750 000257                         ;*****
5047 016752 006704                         ;TST147:
5048 016754 103403                         INC #TESTN
5049 016756 100402                         MOV #123456,R4
5050 016760 102401                         MOV R4,R1
5051 016762 001403                         ;INCREMENT TEST NUMBER
5052                                     ;R4=123456
5053 016764                               1#: ;SAVE CONTENTS
5054 016764 104000                       CCC
5055 016766 000442                       SXT R4
5056 016770 001127                       BCS 1#
5057                                     ;CC=0000
5058 016772 010104                       BMI 1#
5059 016774 000277                       BVS 1#
5060 016776 006704                       BEQ 2#
5061 017000 001405                       ;R4=0 CC=0100
5062 017002 100004                       ;ERROR IF CARRY
5063                                     ;ERROR IF MINUS
5064                                     ;ERROR IF OVERFLOW
5065                                     ;BRANCH IF GOOD
5066                                     ;ERROR! BAD SXT
5067
5068 016764                               1#: ERROR
5069 016766 000442                       .WORD 442
5070 016770 001127                       .WORD CPUERR
5071                                     ;ALL ERRORS TO TRAP TO EMT VECTOR
5072                                     ;UNIQUE ERROR NUMBER
5073                                     ;ADDRESS OF ERROR MESSAGE
5074
5075 016772 010104                               2#: MOV #1,R4
5076 016774 000277                       SCC
5077 016776 006704                       SXT R4
5078 017000 001405                       BEQ 3#
5079 017002 100004                       BPL 3#
5080                                     ;RESTORE R4
5081                                     ;CC=1111
5082                                     ;R4=-1 CC=1001
5083                                     ;ERROR IF ZERO
5084                                     ;ERROR IF PLUS

```



```

5063 017004 103003          BCC      3#          ;ERROR IF NO CARRY
5064 017006 102402          BVS      3#          ;ERROR IF OVERFLOW
5065 017010 005104          COM      R4          ;R4=0
5066 017012 001403          BEQ      4#          ;BRANCH IF GOOD
5067                                ;ERROR! BAD SXT
5068 017014          3#:
5069 017014 104000          ERROR
5070 017016 000443          .WORD    443        ;ALL ERRORS TO TRAP TO EMT VECTOR
5071 017020 001127          .WORD    CPUERR     ;UNIQUE ERROR NUMBER
5072                                ;ADDRESS OF ERROR MESSAGE
5073 017022          4#:
5074
5075
5076 017022          MXRCC:
5077                                ;*****
5078                                ;*TEST 150      TEST XOR CONDITION CODES / *0-
5079                                ;*****
5080 017022          TST150:
5081 017022 005267 161756      INC      #TESTN      ;INCREMENT TEST NUMBER
5082 017026 012704 123456      MOV      #123456,R4  ;R4=123456
5083 017032 012701 052525      MOV      #52525,R1  ;R1=52525
5084 017036 000257          CCC          ;CC=0000
5085 017040 074104          XOR      R1,R4      ;*TI* R4=171173
5086 017042 102403          BVS      1#          ;ERROR IF OVERFLOW
5087 017044 001402          BEQ      1#          ;ERROR IF ZERO
5088 017046 103401          BCS      1#          ;ERROR IF CARRY
5089 017050 100403          BMI      2#          ;BRANCH IF GOOD
5090                                ;ERROR! BAD XOR
5091 017052          1#:
5092 017052 104000          ERROR
5093 017054 000444          .WORD    444        ;ALL ERRORS TO TRAP TO EMT VECTOR
5094 017056 001127          .WORD    CPUERR     ;UNIQUE ERROR NUMBER
5095                                ;ADDRESS OF ERROR MESSAGE
5096 017060 012701 125252      2#:  MOV      #125252,R1  ;R1=125252
5097 017064 000277          SCC          ;CC=1111
5098 017066 074104          XOR      R1,R4      ;R4=054321
5099 017070 100403          BMI      3#          ;ERROR IF MINUS
5100 017072 001402          BEQ      3#          ;ERROR IF ZERO
5101 017074 103001          BCC      3#          ;ERROR IF CARRY CLEAR
5102 017076 102003          BVC      4#          ;BRANCH IF GOOD
5103                                ;ERROR! BAD XOR
5104 017100          3#:
5105 017100 104000          ERROR
5106 017102 000445          .WORD    445        ;ALL ERRORS TO TRAP TO EMT VECTOR
5107 017104 001127          .WORD    CPUERR     ;UNIQUE ERROR NUMBER
5108                                ;ADDRESS OF ERROR MESSAGE
5109 017106 074404          4#:  XOR      R4,R4      ;R4=0
5110 017110 102406          BVS      5#          ;ERROR IF OVREFLOW
5111 017112 100405          BMI      5#          ;ERROR IF MINUS
5112 017114 103004          BCC      5#          ;ERROR IF NO CARRY
5113 017116 001003          BNE      5#          ;ERROR IF NOT ZERO
5114 017120 022704 000000      CMP      #0,R4      ;SEE IF EXPECTED RESULT
5115 017124 001403          BEQ      6#          ;BRANCH IF GOOD
5116                                ;ERROR! BAD XOR
5117 017126          5#:
5118 017126 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR

```

```

5119 017130 000446          .WORD 446          ;UNIQUE ERROR NUMBER
5120 017132 001127          .WORD CPUERR       ;ADDRESS OF ERROR MESSAGE
5121
5122 017134                60:
5123
5124
5125
5126 017134                ;
5127                ;MSXT:
5128                ;*****
5129                ;*TEST 151      TEST SXT (SIGN EXTEND INSTRUCTION)
5130                ;*****
5131                ;AN ADDITIONAL TEST IS INCLUDED TO CHECK FOR A SLOW N BIT PATH
5132                ;ON A TRANSITION FROM ZERO TO ONE INTERNAL TO THE J11 DATA CHIP
5133                ;THE PROBLEM IS ONLY EXHIBITED ON EARLY MASK SETS (1590 OR 1593)
5134                ;*****
5134 017134                TST151:
5135 017134 005267 161644      INC      $TESTN      ;INCREMENT TEST NUMBER
5136 017140 005004                CLR      R4          ;TRASH R4
5137 017142 000257                CCC                ;CC=0000
5138 017144 000271          .WORD 271          ;CC=1001
5139 017146 006704                SXT      R4          ;*TEST INSTRUCTION
5140 017150 102405                BVS     1$          ;BRANCH IF OVERFLOW IS NOT CLEARED
5141 017152 100004                BPL     1$          ;BRANCH IF N BIT EFFECTED
5142 017154 001403                BEQ     1$          ;BRANCH IF Z BIT EFFECTED
5143 017156 103002                BCC     1$          ;BRANCH IF C BIT EFFECTED
5144 017160 005204                INC     R4          ;
5145 017162 001403                BEQ     2$          ;BRANCH IF R4 =0
5146                ;ERROR! CC SHOULD HAVE = 1101
5147 017164                1$:
5148 017164 104000                ERROR                ;ALL ERRORS TO TRAP TO EMT VECTOR
5149 017166 000447          .WORD 447          ;UNIQUE ERROR NUMBER
5150 017170 001127          .WORD CPUERR       ;ADDRESS OF ERROR MESSAGE
5151 017172 000277                2$:
5152 017174 000250                SCC                ;
5153 017176 005004                CLN                ;CC=0111
5154 017200 012714 000055      CLR      R4          ;
5155 017204 006714                MOV     #55,(R4)    ;TRASH R4
5156 017206 001005                SXT     (R4)        ;*TEST INSTRUCTION
5157 017210 102404                BNE     3$          ;BRANCH IF BIT EFFECTED
5158 017212 103403                BVS     3$          ;BRANCH IF OVERFLOW
5159 017214 100402                BCS     3$          ;
5160 017216 005714                BMI     3$          ;BRANCH IF N IS SET
5161 017220 001403                TST     (R4)        ;VERIFY INSTRUCTION WORKED
5162                BEQ     4$          ;BRANCH IF R4=0
5163                ;ERROR! SXT FAILED
5163 017222                3$:
5164 017222 104000                ERROR                ;ALL ERRORS TO TRAP TO EMT VECTOR
5165 017224 000450          .WORD 450          ;UNIQUE ERROR NUMBER
5166 017226 001127          .WORD CPUERR       ;ADDRESS OF ERROR MESSAGE
5167
5168                ;
5169                ;NOW TEST FOR SLOW N BIT IN J11 DATA CHIP
5170 017230 012700 177777      4$:
5171 017234 005004                MOV     #-1,R0      ;R0=177777, N BIT = 1
5172 017236 006700                CLR     R4          ;CLEAT THE N BIT
5173                SXT     R0          ;****TEST INSTRUCTION***
5174                TST     R0          ;TEST N BIT TRANSITION 1 TO 0
5174 017240 005700                ;R0 SHOULD = 0

```

```

5175 017242 001403          BEQ      50          ;BRANCH IF OK
5176 017244 104000          ERROR                     ;ALL ERRORS TO TRAP TO EMT VECTOR
5177 017246 000451          .WORD   451          ;UNIQUE ERROR NUMBER
5178 017250 001127          .WORD   CPUERR       ;ADDRESS OF ERROR MESSAGE
5179 017252 005000          50:    CLR      R0          ;CLEAR R0, N BIT = 0
5180 017254 012704 177777    MOV     @-1,R4        ;SET N BIT
5181 017260 006700          SXT     R0            ;***TEST INSTRUCTION***
5182                                     ;TEST N BIT TRANSITION 0 TO 1
5183 017262 022700 177777    CMP     @-1,R0        ;R0 SHOULD = 177777
5184 017266 001403          BEQ     60            ;BRANCH IF OK
5185 017270 104000          ERROR                     ;ALL ERRORS TO TRAP TO EMT VECTOR
5186 017272 000452          .WORD   452          ;UNIQUE ERROR NUMBER
5187 017274 001127          .WORD   CPUERR       ;ADDRESS OF ERROR MESSAGE
5188 017276                                     60:
5189
5190
5191 017276          ;
5192          ;*****
5193          ;*TEST 152      TEST XOR
5194          ;*****
5195          TST152:
5196 017276 005267 161502    INC     @TESTN        ;INCREMENT TEST NUMBER
5197 017302 012701 007643    MOV     @7643,R1      ;SETUP DATA
5198 017306 012704 133333    MOV     @133333,R4    ;SETUP DATA
5199 017312 000277          SCC
5200 017314 074401          XOR     R4,R1          ;*TEST INSTRUCTION
5201 017316 100006          BPL     10            ;BRANCH IF PLUS TO ERROR
5202 017320 001405          BEQ     10            ;ERROR IF ZERO
5203 017322 103004          BCC     10            ;ERROR IF CARRY CLEAR
5204 017324 102403          BVS     10            ;ERROR IF V SET
5205 017326 020127 134570    CMP     R1,@134570    ;VERIFY CORRECT RESULT
5206 017332 001403          BEQ     20            ;BRANCH IF GOOD
5207                                     ;ERROR! BAD XOR
5208
5209 017334 104000          10:    ERROR                     ;ALL ERRORS TO TRAP TO EMT VECTOR
5210 017336 000453          .WORD   453          ;UNIQUE ERROR NUMBER
5211 017340 001127          .WORD   CPUERR       ;ADDRESS OF ERROR MESSAGE
5212 017342 010102          20:    MOV     R1,R2
5213 017344 000257          CCC
5214 017346 074402          XOR     R4,R2          ;*TEST INSTRUCTION
5215 017350 100405          BMI     30            ;ERROR IF MINUS
5216 017352 102404          BVS     30            ;ERROR IF OVERFLOW
5217 017354 103403          BCS     30            ;ERROR IF CARRY
5218 017356 020227 007643    CMP     R2,@7643
5219 017362 001403          BEQ     40            ;BRANCH IF GOOD
5220                                     ;ERROR! BAD XOR
5221
5222 017364 104000          30:    ERROR                     ;ALL ERRORS TO TRAP TO EMT VECTOR
5223 017366 000454          .WORD   454          ;UNIQUE ERROR NUMBER
5224 017370 001127          .WORD   CPUERR       ;ADDRESS OF ERROR MESSAGE
5225 017372                                     40:
5226
5227
5228 017372          ;
5229          ;MSOB:
5230          ;*****
          ;*TEST 153      TEST SOB

```

```

5231
5232 017372
5233 017372 005267 161406
5234 017376 012704 000555
5235 017402 000277
5236 017404 103017
5237 017406 102016
5238 017410 100015
5239 017412 001014
5240 017414 077405
5241 017416 103005
5242 017420 102004
5243 017422 100003
5244 017424 001002
5245 017426 000167 000020
5246
5247 017432
5248 017432 104000
5249 017434 000455
5250 017436 001127
5251 017440 000167 000006
5252
5253 017444
5254 017444 104000
5255 017446 000456
5256 017450 001127
5257 017452 020427 000000
5258 017456 001403
5259
5260 017460 104000
5261 017462 000457
5262 017464 001127
5263 017466
5264
5265
5266 017466
5267
5268
5269
5270 017466
5271 017466 005267 161312
5272 017472 012706 000700
5273 017476 012737 125252 000776
5274 017504 012705 017526
5275 017510 012746 006437
5276 017514 000277
5277 017516 000116
5278
5279 017520 104000
5280 017522 000460
5281 017524 001127
5282
5283 017526 101002
5284 017530 100001
5285 017532 102403
5286

|||||*****
TST153:
      INC      $TESTN          ;INCREMENT TEST NUMBER
      MOV      $555,R4        ;SETUP TEST COUNTER
      SCC
      10:     BCC      20      ;CC=17
                       ;ERROR IF CARRY CLEAR
                       ;ERROR IF NO OVERFLOW
                       ;ERROR IF PLUS
                       ;ERROR IF ZERO
      BVC      20
      BPL      20
      BNE      20
      SOB      R4,10         ;*TEST INSTRUCTION
      BCC      30          ;ERROR IF CARRY CLEAR
      BVC      30          ;ERROR IF NO OVERFLOW
      BPL      30          ;ERROR IF PLUS
      BNE      30          ;ERROR IF ZERO
      JMP      40
                       ;ERROR! CC EFFECTED DURING TEST
      30:     ERROR
                       ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD   455          ;UNIQUE ERROR NUMBER
      .WORD   CPUERR      ;ADDRESS OF ERROR MESSAGE
      JMP      40
                       ;ERROR! CC EFFECTED AFTER TEST
      20:     ERROR
                       ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD   456          ;UNIQUE ERROR NUMBER
      .WORD   CPUERR      ;ADDRESS OF ERROR MESSAGE
      40:     CMP      R4,#0   ;IS R4 CORRECT
      BEQ      50          ;YES GO ON
                       ;ERROR! NO GO TO ERROR
      ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD   457          ;UNIQUE ERROR NUMBER
      .WORD   CPUERR      ;ADDRESS OF ERROR MESSAGE
      50:

MARK:
|||||*****
;*TEST 154      TEST MARK INSTRUCTION
|||||*****
TST154:
      INC      $TESTN          ;INCREMENT TEST NUMBER
      MOV      $STBOT-100,SP   ;SETUP TEST STACK = 700
      MOV      $125252,$STBOT-2 ;SET UP NEW R5 VALUE ON STACK
      MOV      $10,R5         ;PUT NEW PC IN R5
      MOV      $MARK+37,-(SP) ;INSERT MARK 37 INSTRUCTION ONTO STACK
      SCC
      JMP      (SP)
                       ;* TEST INSTRUCTION
                       ;MARK INSTRUCTION SHOULD HAVE GONE TO 10
      ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD   460          ;UNIQUE ERROR NUMBER
      .WORD   CPUERR      ;ADDRESS OF ERROR MESSAGE
      10:     BHI      20      ;ERROR IF C OR Z BIT CLEAR
      BPL      20          ;ERROR IF N BIT CLEAR
      BVS      30          ;BRANCH IF V BIT SET
                       ;BAD CONDITION CODES ON MARK

```

5287	017534			24:	ERROR		; ALL ERRORS TO TRAP TO EMT VECTOR
5288	017534	104000			.WORD	461	; UNIQUE ERROR NUMBER
5289	017536	000461			.WORD	CPUERR	; ADDRESS OF ERROR MESSAGE
5290	017540	001127			.WORD	CPUERR	; ADDRESS OF ERROR MESSAGE
5291	017542	022705	125252	34:	CMP	#125252,R5	; VERIFY R5
5292	017546	001403			BEG	44	; BRANCH IF GOOD
5293	017550	104000			ERROR		; ALL ERRORS TO TRAP TO EMT VECTOR
5294	017552	000462			.WORD	462	; UNIQUE ERROR NUMBER
5295	017554	001127			.WORD	CPUERR	; ADDRESS OF ERROR MESSAGE
5296							
5297	017556	020627	001000	44:	CMP	SP,#STBOT	; VERIFY THAT STACK IS CORRECT
5298	017562	001403			BEG	154	; BRANCH IF OK
5299							; ERROR! STACK WAS NOT CORRECT AFTER MARK
5300	017564	104000			ERROR		; ALL ERRORS TO TRAP TO EMT VECTOR
5301	017566	000463			.WORD	463	; UNIQUE ERROR NUMBER
5302	017570	001127			.WORD	CPUERR	; ADDRESS OF ERROR MESSAGE
5303							
5304	017572	012746	052525	154:	MOV	#52525,-(SP)	; SETUP EXPECTED R5
5305	017576	012746	006400		MOV	#6400,-(SP)	; MOVE MARK 0 INSTRUCTION ON STACK
5306	017602	010605			MOV	SP,R5	; R5=ADDRESS OF INSTRUCTION
5307	017604	004767	000004		JSR	PC,54	; LEAVE 64 ON STACK
5308	017610	000167	000012	64:	JMP	164	; MARK RETURNED CORRECTLY
5309							
5310	017614	000257		54:	CCC		; CLEAR THE CONDITION CODES
5311	017616	000205			RTS	R5	; RETURN TO MARK INSTRUCTION
5312							; NEXT INSTRUCTION ON STACK IS THE RETURN
5313							; FROM THE JSR
5314							; ERROR! BAD MARK SEQUENCE
5315	017620	104000			ERROR		; ALL ERRORS TO TRAP TO EMT VECTOR
5316	017622	000464			.WORD	464	; UNIQUE ERROR NUMBER
5317	017624	001127			.WORD	CPUERR	; ADDRESS OF ERROR MESSAGE
5318							
5319	017626	101402		164:	BLOS	74	; IS C OR Z BIT SET?
5320	017630	100401			BMI	74	; IS N BIT SET?
5321	017632	102003			BVC	84	; IS V BIT SET?
5322							; ERROR! CONDITIONS CODES INCORRECT
5323	017634			74:			
5324	017634	104000			ERROR		; ALL ERRORS TO TRAP TO EMT VECTOR
5325	017636	000465			.WORD	465	; UNIQUE ERROR NUMBER
5326	017640	001127			.WORD	CPUERR	; ADDRESS OF ERROR MESSAGE
5327							
5328	017642	020627	001000	84:	CMP	R6,#STBOT	; IS THE STACK CORRECT?
5329	017646	001403			BEG	94	; BRANCH IF YES
5330							; ERROR! BAD STACK CLEANUP
5331	017650	104000			ERROR		; ALL ERRORS TO TRAP TO EMT VECTOR
5332	017652	000466			.WORD	466	; UNIQUE ERROR NUMBER
5333	017654	001127			.WORD	CPUERR	; ADDRESS OF ERROR MESSAGE
5334	017656	022705	052525	94:	CMP	#52525,R5	; VERIFY THAT R5 WAS LOADED PROPERLY.
5335	017662	001403			BEG	104	; IF OK, GO TO NEXT TEST.
5336							; ERROR! R5 WAS NOT CORRECT AFTER MARK.
5337	017664	104000			ERROR		; ALL ERRORS TO TRAP TO EMT VECTOR
5338	017666	000467			.WORD	467	; UNIQUE ERROR NUMBER
5339	017670	001127			.WORD	CPUERR	; ADDRESS OF ERROR MESSAGE
5340	017672			104:			
5341							
5342							

```

5343 ;*****
5344 ;*TEST 155 TEST CCC (CLEAR CONDITION CODES) INSTRUCTION
5345 ;*****
5346 017672 TST155:
5347 017672 005267 161106 INC #TESTN ;INCREMENT TEST NUMBER
5348 017676 012737 030017 177776 MOV #30017,#177776 ;SETUP PSW
5349 017704 000257 CCC ; TEST INSTRUCTION
5350 017706 022737 030000 177776 CMP #30000,#177776 ;DID IT CLEAR ALL CONDITION CODE BITS
5351 017714 001403 BEQ 1# ;YES GO ON
5352 ;NO GO TO ERROR
5353 017716 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
5354 017720 000470 .WORD 470 ;UNIQUE ERROR NUMBER
5355 017722 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
5356 017724 1# :
5357 ;
5358 ;
5359 ;
5360 ;*****
5361 ;*TEST 156 TEST CLEAR C BIT INSTRUCTION
5362 ;*****
5363 017724 TST156:
5364 017724 005267 161054 INC #TESTN ;INCREMENT TEST NUMBER
5365 017730 012737 030017 177776 MOV #30017,#177776 ;SETUP PSW
5366 017736 000241 CLC ; TEST INSTRUCTION
5367 017740 022737 030016 177776 CMP #30016,#177776 ;DID IT CLEAR CARRY BIT
5368 017746 001403 BEQ 1# ;YES GO ON
5369 ;C BIT NOT CLEAR GO TO ERROR
5370 017750 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
5371 017752 000471 .WORD 471 ;UNIQUE ERROR NUMBER
5372 017754 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
5373 017756 1# :
5374 ;
5375 ;
5376 017756 TE102:
5377 ;*****
5378 ;*TEST 157 TEST CLN (CLEAR N BIT) INST
5379 ;*****
5380 017756 TST157:
5381 017756 005267 161022 INC #TESTN ;INCREMENT TEST NUMBER
5382 017762 012737 030017 177776 MOV #30017,#177776 ;SETUP PSW
5383 017770 000250 CLN ; TEST INSTRUCTION
5384 017772 022737 030007 177776 CMP #30007,#177776 ;DID IT CLEAR NEGATIVE BIT
5385 020000 001403 BEQ 1# ;YES GO ON
5386 ;NO GO TO ERROR
5387 020002 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
5388 020004 000472 .WORD 472 ;UNIQUE ERROR NUMBER
5389 020006 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
5390 020010 1# :
5391 ;
5392 ;
5393 020010 TE103:
5394 ;*****
5395 ;*TEST 160 TEST CLV (CLEAR V BIT) INST
5396 ;*****
5397 020010 TST160:
5398 020010 005267 160770 INC #TESTN ;INCREMENT TEST NUMBER

```

```

5399 020014 012737 030017 177776      MOV      #30017,0#177776      ;SETUP PSW
5400 020022 000242                      CLV                          ; TEST INSTRUCTION
5401 020024 022737 030015 177776      CMP      #30015,0#177776     ;DID IT CLEAR OVERFLOW BIT
5402 020032 001403                      BEQ      1#                   ;YES GO ON
5403                                     ;NO GO TO ERROR
5404 020034 104000                      ERROR                       ;ALL ERRORS TO TRAP TO EMT VECTOR
5405 020036 000473                      .WORD   473                  ;UNIQUE ERROR NUMBER
5406 020040 001127                      .WORD   CPUERR              ;ADDRESS OF ERROR MESSAGE
5407 020042                               1#:
5408
5409
5410 020042                               |
5411                               |TE104:
5412                               |*****
5413                               |*TEST 161      TEST CLZ (CLEAR Z BIT) INST
5414                               |*****
5415 020042 005267 160736      TST161:
5416 020046 012737 030017 177776      INC      #TESTN              ;INCREMENT TEST NUMBER
5417 020054 000244                      MOV      #30017,0#177776     ;SETUP PSW
5418 020056 022737 030013 177776      CLZ                          ; TEST INSTRUCTION
5419 020064 001403                      CMP      #30013,0#177776     ;DID IT CLEAR ZERO BIT
5420                                     BEQ      1#                   ;YES GO ON
5421                                     ;NO GO TO ERROR
5422 020066 104000                      ERROR                       ;ALL ERRORS TO TRAP TO EMT VECTOR
5423 020070 000474                      .WORD   474                  ;UNIQUE ERROR NUMBER
5424 020074 001127                      .WORD   CPUERR              ;ADDRESS OF ERROR MESSAGE
5425
5426                               1#:
5427 020074                               |
5428                               |TE105:
5429                               |*****
5430                               |*TEST 162      TEST SCC (SET CONDITION CODES) INST
5431                               |*****
5432 020074 005267 160704      TST162:
5433 020100 012737 030000 177776      INC      #TESTN              ;INCREMENT TEST NUMBER
5434 020106 000277                      MOV      #30000,0#177776     ;SETUP PSW
5435 020110 022737 030017 177776      SCC                          ; TEST INSTRUCTION
5436 020116 001403                      CMP      #30017,0#177776     ;DID IT SET ALL CONDITION CODE BITS
5437                                     BEQ      1#                   ;YES GO ON
5438                                     ;NO GO TO ERROR
5439 020120 104000                      ERROR                       ;ALL ERRORS TO TRAP TO EMT VECTOR
5440 020122 000475                      .WORD   475                  ;UNIQUE ERROR NUMBER
5441 020126 001127                      .WORD   CPUERR              ;ADDRESS OF ERROR MESSAGE
5442
5443                               1#:
5444 020126                               |
5445                               |TE106:
5446                               |*****
5447                               |*TEST 163      TEST SEC (SET C BIT) INST
5448                               |*****
5449 020126 005267 160652      TST163:
5450 020132 012737 030000 177776      INC      #TESTN              ;INCREMENT TEST NUMBER
5451 020140 000261                      MOV      #30000,0#177776     ;SETUP PSW
5452 020142 022737 030001 177776      SEC                          ; TEST INSTRUCTION
5453 020150 001403                      CMP      #30001,0#177776     ;DID IT SET THE CARRY BIT
5454                                     BEQ      1#                   ;YES GO ON
5454                                     ;NO GO TO ERROR

```

```

5455 020152 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
5456 020154 000476          .WORD      476          ;UNIQUE ERROR NUMBER
5457 020156 001127          .WORD      CPUERR       ;ADDRESS OF ERROR MESSAGE
5458 020160          10:
5459
5460
5461 020160          ;
5462          ;TE107:
5463          ;*****
5464          ;*TEST 164      TEST SEN (SET N BIT) INST
5465          ;*****
5465 020160          TST164:
5466 020160 005267 160620          INC      $TESTN          ;INCREMENT TEST NUMBER
5467 020164 012737 030000 177776  MOV      #30000,0#177776 ;SETUP PSW
5468 020172 000270          SEN          ; TEST INSTRUCTION
5469 020174 022737 030010 177776  CMP      #30010,0#177776 ;DID IT SET THE NEGATIVE BIT
5470 020202 001403          BEQ      1#              ;YES GO ON
5471          ;NO GO TO ERROR
5472 020204 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
5473 020206 000477          .WORD      477          ;UNIQUE ERROR NUMBER
5474 020210 001127          .WORD      CPUERR       ;ADDRESS OF ERROR MESSAGE
5475 020212          10:
5476
5477
5478 020212          ;
5479          ;TE110:
5480          ;*****
5481          ;*TEST 165      TEST SEV (SET V BIT) INST
5482          ;*****
5482 020212          TST165:
5483 020212 005267 160566          INC      $TESTN          ;INCREMENT TEST NUMBER
5484 020216 012737 030000 177776  MOV      #30000,0#177776 ;SETUP PSW
5485 020224 000262          SEV          ; TEST INSTRUCTION
5486 020226 022737 030002 177776  CMP      #30002,0#177776 ;DID IT SET THE OVERFLOW BIT
5487 020234 001403          BEQ      1#              ;YES GO ON
5488          ;NO GO TO ERROR
5489 020236 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
5490 020240 000500          .WORD      500          ;UNIQUE ERROR NUMBER
5491 020242 001127          .WORD      CPUERR       ;ADDRESS OF ERROR MESSAGE
5492 020244          10:
5493
5494
5495 020244          ;
5496          ;TE111:
5497          ;*****
5498          ;*TEST 166      TEST SEZ (SET Z BIT) INST
5499          ;*****
5499 020244          TST166:
5500 020244 005267 160534          INC      $TESTN          ;INCREMENT TEST NUMBER
5501 020250 012737 030000 177776  MOV      #30000,0#177776 ;SETUP PSW
5502 020256 000264          SEZ          ; TEST INSTRUCTION
5503 020260 022737 030004 177776  CMP      #30004,0#177776 ;DID IT SET THE ZERO BIT
5504 020266 001403          BEQ      1#              ;YES GO ON
5505          ;NO GO TO ERROR
5506 020270 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
5507 020272 000501          .WORD      501          ;UNIQUE ERROR NUMBER
5508 020274 001127          .WORD      CPUERR       ;ADDRESS OF ERROR MESSAGE
5509 020276          10:
5510

```



```

5511
5512 020276
5513
5514
5515
5516 020276
5517 020276 005267 160502
5518 020302 012737 030000 177776
5519 020310 000277
5520 020312 000243
5521 020314 022737 030014 177776
5522 020322 001403
5523
5524 020324 104000
5525 020326 000502
5526 020330 001127
5527 020332 000277
5528 020334 000245
5529 020336 022737 030012 177776
5530 020344 001403
5531
5532 020346 104000
5533 020350 000503
5534 020352 001127
5535
5536 020354 000277
5537 020356 000246
5538 020360 022737 030011 177776
5539 020366 001403
5540
5541 020370 104000
5542 020372 000504
5543 020374 001127
5544
5545 020376 000277
5546 020400 000247
5547 020402 022737 030010 177776
5548 020410 001403
5549
5550 020412 104000
5551 020414 000505
5552 020416 001127
5553
5554 020420 000277
5555 020422 000251
5556 020424 022737 030006 177776
5557 020432 001403
5558
5559 020434 104000
5560 020436 000506
5561 020440 001127
5562
5563 020442 000277
5564 020444 000252
5565 020446 022737 030005 177776
5566 020454 001403

```

TE112:
|*****
|*TEST 167 TEST MULTIPLE CLEARS OF CC BITS
|*****
TST167:
INC ITESTN INCREMENT TEST NUMBER
MOV #30000,B#177776 INIT PSW
SCC SETUP PSW
.WORD 243 TEST CLC CLV
CMP #30014,B#177776 PSW CORRECT?
BEQ 11 YES GO ON
NO GO TO ERROR
ALL ERRORS TO TRAP TO EMT VECTOR
.WORD 502 UNIQUE ERROR NUMBER
.WORD CPUERR ADDRESS OF ERROR MESSAGE
11: SCC SETUP PSW
.WORD 245 TEST CLC CLZ
CMP #30012,B#177776 PSW CORRECT?
BEQ 21 YES GO ON
NO GO TO ERROR
ALL ERRORS TO TRAP TO EMT VECTOR
.WORD 503 UNIQUE ERROR NUMBER
.WORD CPUERR ADDRESS OF ERROR MESSAGE
21: SCC SETUP PSW
.WORD 246 TEST CLV CLZ
CMP #30011,B#177776 PSW CORRECT?
BEQ 31 YES GO ON
NO GO TO ERROR
ALL ERRORS TO TRAP TO EMT VECTOR
.WORD 504 UNIQUE ERROR NUMBER
.WORD CPUERR ADDRESS OF ERROR MESSAGE
31: SCC SETUP PSW
.WORD 247 TEST CLC CLV CLZ
CMP #30010,B#177776 PSW CORRECT?
BEQ 41 YES GO ON
NO GO TO ERROR
ALL ERRORS TO TRAP TO EMT VECTOR
.WORD 505 UNIQUE ERROR NUMBER
.WORD CPUERR ADDRESS OF ERROR MESSAGE
41: SCC SETUP PSW
.WORD 251 TEST CLN CLC
CMP #30006,B#177776 PSW CORRECT?
BEQ 51 YES GO ON
NO GO TO ERROR
ALL ERRORS TO TRAP TO EMT VECTOR
.WORD 506 UNIQUE ERROR NUMBER
.WORD CPUERR ADDRESS OF ERROR MESSAGE
51: SCC SETUP PSW
.WORD 252 TEST CLN CLV
CMP #30005,B#177776 PSW CORRECT?
BEQ 61 YES GO ON

```

5567
5568 020456 104000 ERROR
5569 020460 000507 .WORD 507
5570 020462 001127 .WORD CPUERR
5571
5572 020464 000277 61: SCC
5573 020466 000253 .WORD 253
5574 020470 022737 030004 177776 CMP #30004,B#177776
5575 020476 001403 BEQ 71
5576
5577 020500 104000 ERROR
5578 020502 000510 .WORD 510
5579 020504 001127 .WORD CPUERR
5580
5581 020506 000277 71: SCC
5582 020510 000254 .WORD 254
5583 020512 022737 030003 177776 CMP #30003,B#177776
5584 020520 001403 BEQ 81
5585
5586 020522 104000 ERROR
5587 020524 000511 .WORD 511
5588 020526 001127 .WORD CPUERR
5589
5590 020530 000277 81: SCC
5591 020532 000255 .WORD 255
5592 020534 022737 030002 177776 CMP #30002,B#177776
5593 020542 001403 BEQ 91
5594
5595 020544 104000 ERROR
5596 020546 000512 .WORD 512
5597 020550 001127 .WORD CPUERR
5598
5599 020552 000277 91: SCC
5600 020554 000256 .WORD 256
5601 020556 022737 030001 177776 CMP #30001,B#177776
5602 020564 001403 BEQ 101
5603
5604 020566 104000 ERROR
5605 020570 000513 .WORD 513
5606 020572 001127 .WORD CPUERR
5607
5608 020574 101:
5609
5610
5611 020574
5612
5613
5614
5615 020574
5616 020574 005267 160204
5617 020600 012737 030000 177776 INC #TESTN
5618 020606 000263 .WORD 263
5619 020610 022737 030003 177776 CMP #30003,B#177776
5620 020616 001403 BEQ 11
5621
5622 020620 104000 ERROR

```

```

;NO GO TO ERROR
;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE

;SETUP PSW
; TEST CLN CLC CLV
;PSW CORRECT?
;YES GO ON
;NO GO TO ERROR
;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE

;SETUP PSW
; TEST CLN CLZ
;PSW CORRECT?
;YES GO ON
;NO GO TO ERROR
;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE

;SETUP PSW
; TEST CLN CLC CLZ
;PSW CORRECT?
;YES GO ON
;NO GO TO ERROR
;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE

;SETUP PSW
; TEST CLN CLV CLZ
;SETUP PSW
;YES GO ON
;NO GO TO ERROR
;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE

;INCREMENT TEST NUMBER
;INIT PSW
; TEST SEC SEV
;PSW CORRECT?
;YES GO ON
;NO GO TO ERROR
;ALL ERRORS TO TRAP TO EMT VECTOR

```

```

;
;TE113:
;*****
;*TEST 170 TEST MULTIPLE SETS OF CC BITS
;*****
;TST170:

```

5623	020622	000514				.WORD	514		;UNIQUE ERROR NUMBER
5624	020624	001127				.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5625									
5626	020626	000257			18:	CCC			;SETUP PSW
5627	020630	000265				.WORD	265		;TEST SEC SEZ
5628	020632	022737	030005	177776		CHP	#30005,0#177776		;PSW CORRECT?
5629	020640	001403				BEQ	2#		;YES GO ON
5630									;NO GO TO ERROR
5631	020642	104000				ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5632	020644	000515				.WORD	515		;UNIQUE ERROR NUMBER
5633	020646	001127				.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5634									
5635	020650	000257			28:	CCC			;SETUP PSW
5636	020652	000266				.WORD	266		;TEST SEC SEZ
5637	020654	022737	030006	177776		CHP	#30006,0#177776		;PSW CORRECT?
5638	020662	001403				BEQ	3#		;YES GO ON
5639									;NO GO TO ERROR
5640	020664	104000				ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5641	020666	000516				.WORD	516		;UNIQUE ERROR NUMBER
5642	020670	001127				.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5643									
5644	020672	000257			38:	CCC			;SETUP PSW
5645	020674	000267				.WORD	267		;TEST SEC SEV SEZ
5646	020676	022737	030007	177776		CHP	#30007,0#177776		;PSW CORRECT?
5647	020704	001403				BEQ	4#		;YES GO ON
5648									;NO GO TO ERROR
5649	020706	104000				ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5650	020710	000517				.WORD	517		;UNIQUE ERROR NUMBER
5651	020712	001127				.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5652									
5653	020714	000257			48:	CCC			;SETUP PSW
5654	020716	000271				.WORD	271		;TEST SEN SEC
5655	020720	022737	030011	177776		CHP	#30011,0#177776		;PSW CORRECT?
5656	020726	001403				BEQ	5#		;YES GO ON
5657									;NO GO TO ERROR
5658	020730	104000				ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5659	020732	000520				.WORD	520		;UNIQUE ERROR NUMBER
5660	020734	001127				.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5661									
5662	020736	000257			58:	CCC			;SETUP PSW
5663	020740	000272				.WORD	272		;TEST SEN SEV
5664	020742	022737	030012	177776		CHP	#30012,0#177776		;PSW CORRECT?
5665	020750	001403				BEQ	6#		;YES GO ON
5666									;NO GO TO ERROR
5667	020752	104000				ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5668	020754	000521				.WORD	521		;UNIQUE ERROR NUMBER
5669	020756	001127				.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5670									
5671	020760	000257			68:	CCC			;SETUP PSW
5672	020762	000273				.WORD	273		;TEST SEN SEC SEV
5673	020764	022737	030013	177776		CHP	#30013,0#177776		;PSW CORRECT?
5674	020772	001403				BEQ	7#		;YES GO ON
5675									;NO GO TO ERROR
5676	020774	104000				ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5677	020776	000522				.WORD	522		;UNIQUE ERROR NUMBER
5678	021000	001127				.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE

```

5679
5680 021002 000257          74:  CCC          ; SETUP PSW
5681 021004 000274          .WORD 274      ; TEST SEN SEZ
5682 021006 022737 030014 177776  CMP      #30014,#177776 ; PSW CORRECT?
5683 021014 001403          BEQ      81      ; YES GO ON
5684                                     ; NO GO TO ERROR
5685 021016 104000          ERROR     ; ALL ERRORS TO TRAP TO EMT VECTOR
5686 021020 000523          .WORD 523      ; UNIQUE ERROR NUMBER
5687 021022 001127          .WORD CPUERR   ; ADDRESS OF ERROR MESSAGE
5688
5689 021024 000257          84:  CCC          ; SETUP PSW
5690 021026 000275          .WORD 275      ; TEST SEN SEC SEZ
5691 021030 022737 030015 177776  CMP      #30015,#177776 ; PSW CORRECT?
5692 021036 001403          BEQ      91      ; YES GO ON
5693                                     ; NO GO TO ERROR
5694 021040 104000          ERROR     ; ALL ERRORS TO TRAP TO EMT VECTOR
5695 021042 000524          .WORD 524      ; UNIQUE ERROR NUMBER
5696 021044 001127          .WORD CPUERR   ; ADDRESS OF ERROR MESSAGE
5697
5698 021046 000257          94:  CCC          ; SETUP PSW
5699 021050 000276          .WORD 276      ; TEST SEN SEV SEZ
5700 021052 022737 030016 177776  CMP      #30016,#177776 ; PSW CORRECT?
5701 021060 001403          BEQ      101     ; YES GO ON
5702                                     ; NO GO TO ERROR
5703 021062 104000          ERROR     ; ALL ERRORS TO TRAP TO EMT VECTOR
5704 021064 000525          .WORD 525      ; UNIQUE ERROR NUMBER
5705 021066 001127          .WORD CPUERR   ; ADDRESS OF ERROR MESSAGE
5706
5707 021070          104:
5708
5709          ;
5710 021070          ; TE113A:
5711          ; !!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
5712          ; *TEST 171      TEST SIGNED AND CONDITIONAL BRANCHES
5713          ; !!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
5714          ; TST171:
5715 021070 005267 157710      INC      #TESTN    ; INCREMENT TEST NUMBER
5716 021074 000257          CCC          ; CLEAR ALL CC BITS IN PSW
5717 021076 002003          BGE      11      ; BGE SHOULD BRANCH
5718                                     ; ERROR! DIDN'T BRANCH
5719 021100 104000          ERROR     ; ALL ERRORS TO TRAP TO EMT VECTOR
5720 021102 000526          .WORD 526      ; UNIQUE ERROR NUMBER
5721 021104 001127          .WORD CPUERR   ; ADDRESS OF ERROR MESSAGE
5722
5723 021106 003003          14:  BGT      21      ; BGT SHOULD BRANCH
5724                                     ; ERROR! DIDN'T BRANCH
5725 021110 104000          ERROR     ; ALL ERRORS TO TRAP TO EMT VECTOR
5726 021112 000527          .WORD 527      ; UNIQUE ERROR NUMBER
5727 021114 001127          .WORD CPUERR   ; ADDRESS OF ERROR MESSAGE
5728
5729 021116 003401          24:  BLE      31      ; BLE SHOULDN'T BRANCH
5730 021120 000403          BR       41      ; BRANCH TO NEXT TEST
5731                                     ; ERROR; BLE SHOULD NOT HAVE BRANCHED
5732 021122          34:
5733 021122 104000          ERROR     ; ALL ERRORS TO TRAP TO EMT VECTOR
5734 021124 000530          .WORD 530      ; UNIQUE ERROR NUMBER

```

5735	021126	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5736							
5737	021130	002401	4#:	BLT	5#		;BLT SHOULD NOT BRANCH
5738	021132	000403		BR	6#		;BRANCH TO NEXT TEST
5739							;ERROR; BLT SHOULD NOT HAVE BRANCHED
5740	021134		5#:				
5741	021134	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5742	021136	000531		.WORD	531		;UNIQUE ERROR NUMBER
5743	021140	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5744							
5745	021142	000264	6#:	SEZ			;SET THE Z BIT IN PSW
5746	021144	003403		BLE	7#		;BLE SHOULD BRANCH
5747							;ERROR; BLE DIDN'T BRANCH
5748	021146	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5749	021150	000532		.WORD	532		;UNIQUE ERROR NUMBER
5750	021152	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5751							
5752	021154	003001	7#:	BGT	8#		;BGT SHOULD NOT BRANCH
5753	021156	000403		BR	9#		;BRANCH TO NEXT TEST
5754							;ERROR; BGT SHOULD NOT HAVE BRANCHED
5755	021160		8#:				
5756	021160	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5757	021162	000533		.WORD	533		;UNIQUE ERROR NUMBER
5758	021164	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5759							
5760	021166	000257	9#:	CCC			;CLEAR ALL CC BITS IN PSW
5761	021170	000270		SEN			;SET N BIT IN PSW
5762	021172	002403		BLT	10#		;SHOULD BRANCH TO NEXT TEST
5763							;ERROR; BLT SHOULD HAVE BRANCHED
5764	021174	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5765	021176	000534		.WORD	534		;UNIQUE ERROR NUMBER
5766	021200	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5767							
5768	021202	003403	10#:	BLE	11#		;SHOULD BRANCH TO NEXT TEST
5769							;ERROR; BLE SHOULD HAVE BRANCHED
5770	021204	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5771	021206	000535		.WORD	535		;UNIQUE ERROR NUMBER
5772	021210	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5773							
5774	021212	002001	11#:	BGE	12#		;BGE SHOULD NOT BRANCH
5775	021214	000403		BR	13#		;BRANCH TO NEXT TEST
5776							;ERROR; BGE SHOULD NOT HAVE BRANCHED
5777	021216		12#:				
5778	021216	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5779	021220	000536		.WORD	536		;UNIQUE ERROR NUMBER
5780	021222	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5781							
5782	021224	003001	13#:	BGT	14#		;BGT SHOULD NOT BRANCH
5783	021226	000403		BR	15#		;BRANCH TO NEXT TEST
5784							;ERROR; BGT SHOULD NOT HAVE BRANCHED
5785	021230		14#:				
5786	021230	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5787	021232	000537		.WORD	537		;UNIQUE ERROR NUMBER
5788	021234	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5789							
5790	021236	000257	15#:	CCC			;CLEAR ALL CC BITS

5791	021240	000262		SEV			;SET V BIT IN PSW
5792	021242	003403		BLE	160		;BLE SHOULD BRANCH
5793							;ERROR; BLE DIDN'T BRANCH
5794	021244	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5795	021246	000540		.WORD	540		;UNIQUE ERROR NUMBER
5796	021250	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5797							
5798	021252	002403	160:	BLT	170		;BLT SHOULD BRANCH
5799							;ERROR; BLT DIDN'T BRANCH
5800	021254	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5801	021256	000541		.WORD	541		;UNIQUE ERROR NUMBER
5802	021260	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5803							
5804	021262	002001	170:	BGE	180		;BGE SHOULDN'T BRANCH
5805	021264	000403		BR	190		;BRANCH TO NEXT TEST
5806							;ERROR; BGE SHOULD NOT HAVE BRANCHED
5807	021266		180:				
5808	021266	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5809	021270	000542		.WORD	542		;UNIQUE ERROR NUMBER
5810	021272	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5811							
5812	021274	003001	190:	BGT	200		;BGT SHOULD NOT BRANCH
5813	021276	000403		BR	210		;BRANCH TO NEXT TEST
5814							;ERROR; BGT SHOULD NOT HAVE BRANCHED
5815	021300		200:				
5816	021300	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5817	021302	000543		.WORD	543		;UNIQUE ERROR NUMBER
5818	021304	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5819							
5820	021306	000257	210:	CCC			;CLEAR ALL CC BITS
5821	021310	000272		.WORD	272		;SET N AND V BITS IN PSW
5822	021312	002003		BGE	220		;BGE SHOULD BRANCH
5823							;ERROR; BGE DIDN'T BRANCH
5824	021314	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5825	021316	000544		.WORD	544		;UNIQUE ERROR NUMBER
5826	021320	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5827							
5828	021322	003003	220:	BGT	230		;BGT SHOULD BRANCH
5829							;ERROR; BGT DIDN'T BRANCH
5830	021324	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5831	021326	000545		.WORD	545		;UNIQUE ERROR NUMBER
5832	021330	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5833							
5834	021332	003401	230:	BLE	240		;BLE SHOULDN'T BRANCH
5835	021334	000403		BR	250		;BRANCH TO NEXT TEST
5836							;ERROR; BLE SHOULD NOT HAVE BRANCHED
5837	021336		240:				
5838	021336	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
5839	021340	000546		.WORD	546		;UNIQUE ERROR NUMBER
5840	021342	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
5841							
5842	021344	002401	250:	BLT	260		;BLT SHOULD NOT BRANCH
5843	021346	000403		BR	270		;BRANCH TO NEXT TEST
5844							;ERROR; BLT SHOULD NOT HAVE BRANCHED
5845	021350		260:				
5846	021350	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR

```

5847 021352 000547          .WORD 547          ;UNIQUE ERROR NUMBER
5848 021354 001127          .WORD CPUERR       ;ADDRESS OF ERROR MESSAGE
5849
5850 021356                278:
5851
5852 021356                TE114:
5853 ;*****
5854 ;*TEST 172      TEST NOP INST
5855 ;*****
5856 021356                TST172:
5857 021356 005267 157422      INC      #TESTN      ;INCREMENT TEST NUMBER
5858 021362 012737 030000 177776  MOV      #30000,0#177776 ;INIT PSW
5859 021370 012700 000001      MOV      #1,R0        ;INIT R0
5860 021374 012701 000002      MOV      #2,R1        ;INIT R1
5861 021400 012702 000003      MOV      #3,R2        ;INIT R2
5862 021404 012703 000004      MOV      #4,R3        ;INIT R3
5863 021410 012704 000005      MOV      #5,R4        ;INIT R4
5864 021414 012705 000006      MOV      #6,R5        ;INIT R5
5865 021420 010637 001030      MOV      R6,0#SLOC00  ;SAVE SP
5866 021424 012737 030017 001034  MOV      #30017,0#EXPDAT ;SETUP PSW
5867 021432 000277          SCC          ;SET ALL CONDITION CODE BITS
5868 021434 000240          NOP          ; TEST INSTRUCTION
5869 021436 000240          NOP          ; TEST INSTRUCTION
5870 021440 000240          NOP          ; TEST INSTRUCTION
5871 021442 004767 000056      JSR      PC,T114      ;CHECK PSW, AND GPR'S
5872 021446 020637 001030      CMP      R6,0#SLOC00 ;CHECK SP
5873 021452 001403          BEQ          ;OK GO ON
5874
5875 021454 104000          ERROR; BLT SHOULD NOT HAVE BRANCHED
5876 021456 000550          .WORD      ;ALL ERRORS TO TRAP TO EMT VECTOR
5877 021460 001127          .WORD 550          ;UNIQUE ERROR NUMBER
5878
5879 021462 012737 030000 001034 18:  MOV      #30000,0#EXPDAT ;SETUP PSW
5880 021470 000257          CCC          ;CLEAR ALL CONDITION CODE BITS
5881 021472 000260          .WORD 260        ; TEST FOR NOP OPERATION
5882 021474 000260          .WORD 260        ; TEST FOR NOP OPERATION
5883 021476 000260          .WORD 260        ; TEST FOR NOP OPERATION
5884 021500 004767 000020      JSR      PC,T114      ;CHECK PSW, AND GPR'S
5885 021504 020637 001030      CMP      R6,0#SLOC00 ;CHECK SP
5886 021510 001403          BEQ          ;OK GO ON
5887
5888 021512 104000          ERROR; BLT SHOULD NOT HAVE BRANCHED
5889 021514 000551          .WORD      ;ALL ERRORS TO TRAP TO EMT VECTOR
5890 021516 001127          .WORD CPUERR       ;UNIQUE ERROR NUMBER
5891
5892 021520                28:
5893
5894 021520 000167 000140      JMP      FINNOP
5895
5896 021524 023737 001034 177776 T114: CMP      0#EXPDAT,0#177776 ;CHECK PSW
5897 021532 001407          BEQ      TA114      ;OK GO ON
5898 021534 010067 156640      MOV      R0,400      ;SAVE R0
5899
5900 021540 104000          ERROR; BLT SHOULD NOT HAVE BRANCHED
5901 021542 000552          .WORD      ;ALL ERRORS TO TRAP TO EMT VECTOR
5902 021544 001127          .WORD 552          ;UNIQUE ERROR NUMBER
          .WORD CPUERR       ;ADDRESS OF ERROR MESSAGE

```

```

5903
5904 021546 016700 156626          MOV      400,R0          ;RESTORE R0
5905 021552 022700 000001          TA114:  CMP      #1,R0          ;CHECK R0
5906 021556 001403                  BEQ      TB114           ;OK GO ON
5907                                     ;ERROR; BLT SHOULD NOT HAVE BRANCHED
5908 021560 104000                  ERROR
5909 021562 000553                  .WORD   553             ;ALL ERRORS TO TRAP TO EMT VECTOR
5910 021564 001127                  .WORD   CPUERR         ;UNIQUE ERROR NUMBER
5911                                     ;ADDRESS OF ERROR MESSAGE
5912 021566 022701 000002          TB114:  CMP      #2,R1          ;CHECK R1
5913 021572 001403                  BEQ      TC114           ;OK GO ON
5914                                     ;ERROR; BLT SHOULD NOT HAVE BRANCHED
5915 021574 104000                  ERROR
5916 021576 000554                  .WORD   554             ;ALL ERRORS TO TRAP TO EMT VECTOR
5917 021600 001127                  .WORD   CPUERR         ;UNIQUE ERROR NUMBER
5918                                     ;ADDRESS OF ERROR MESSAGE
5919 021602 022702 000003          TC114:  CMP      #3,R2          ;CHECK R2
5920 021606 001403                  BEQ      TD114           ;OK GO ON
5921                                     ;ERROR; BLT SHOULD NOT HAVE BRANCHED
5922 021610 104000                  ERROR
5923 021612 000555                  .WORD   555             ;ALL ERRORS TO TRAP TO EMT VECTOR
5924 021614 001127                  .WORD   CPUERR         ;UNIQUE ERROR NUMBER
5925                                     ;ADDRESS OF ERROR MESSAGE
5926 021616 022703 000004          TD114:  CMP      #4,R3          ;CHECK R3
5927 021622 001403                  BEQ      TF114           ;OK GO ON
5928                                     ;ERROR; BLT SHOULD NOT HAVE BRANCHED
5929 021624 104000                  ERROR
5930 021626 000556                  .WORD   556             ;ALL ERRORS TO TRAP TO EMT VECTOR
5931 021630 001127                  .WORD   CPUERR         ;UNIQUE ERROR NUMBER
5932                                     ;ADDRESS OF ERROR MESSAGE
5933 021632 022704 000005          TF114:  CMP      #5,R4          ;CHECK R4
5934 021636 001403                  BEQ      TG114           ;OK GO ON
5935                                     ;ERROR; BLT SHOULD NOT HAVE BRANCHED
5936 021640 104000                  ERROR
5937 021642 000557                  .WORD   557             ;ALL ERRORS TO TRAP TO EMT VECTOR
5938 021644 001127                  .WORD   CPUERR         ;UNIQUE ERROR NUMBER
5939                                     ;ADDRESS OF ERROR MESSAGE
5940 021646 022705 000006          TG114:  CMP      #6,R5          ;CHECK R5
5941 021652 001403                  BEQ      TH114           ;OK GO ON
5942                                     ;ERROR; BLT SHOULD NOT HAVE BRANCHED
5943 021654 104000                  ERROR
5944 021656 000560                  .WORD   560             ;ALL ERRORS TO TRAP TO EMT VECTOR
5945 021660 001127                  .WORD   CPUERR         ;UNIQUE ERROR NUMBER
5946                                     ;ADDRESS OF ERROR MESSAGE
5947 021662 000207          TH114:  RTS      PC          ;RETURN
5948
5949 021664          ;FINNOP:
5950          ;*****
5951          ;*TEST 173      TEST ATERNATE REGISTER SET
5952          ;*****
5953 021664          TST173:
5954 021664 005267 157114          INC      #TESTN          ;INCREMENT TEST NUMBER
5955 021670 005000                  CLR      R0              ;-----CLEAR-----
5956 021672 005001                  CLR      R1              ;-----PRIMARY-----
5957 021674 005002                  CLR      R2              ;-----GENERAL-----
5958 021676 005003                  CLR      R3              ;-----PURPOSE-----

```



```

6071 022246
6072
6073
6074
6075 022236
6076 022236 005267 156542
6077 022242 012700 177777
6078 022246 020027 177777
6079 022252 001403
6080
6081 022254 104000
6082 022256 000577
6083 022260 001127
6084 022262 005000
6085 022264 020027 000000
6086 022270 001403
6087
6088 022272 104000
6089 022274 000600
6090 022276 001127
6091 022300 012700 125252
6092 022304 020027 125252
6093 022310 001403
6094
6095 022312 104000
6096 022314 000601
6097 022316 001127
6098 022320 012700 052525
6099 022324 020027 052525
6100 022330 001403
6101
6102 022332 104000
6103 022334 000602
6104 022336 001127
6105 022340
6106
6107
6108 022340
6109
6110
6111
6112 022340
6113 022340 005267 156440
6114 022344 012701 177777
6115 022350 020127 177777
6116 022354 001403
6117
6118 022356 104000
6119 022360 000603
6120 022362 001127
6121 022364 005001
6122 022366 020127 000000
6123 022372 001403
6124
6125 022374 104000
6126 022376 000604

```

```

ALROTS:
;*****
;TEST 174 ALTERNATE REGISTER SET R0 BIT TESTS
;*****
TST174:
INC #TESTN ;INCREMENT TEST NUMBER
MOV #177777,R0 ;R0=177777
CMP R0,#177777 ;DOES R0=177777
BEQ 1# ;YES GO ON
;NO GO TO ERROR
;ALL ERRORS TO TRAP TO EMT VECTOR
;WORD 577 ;UNIQUE ERROR NUMBER
;WORD CPUERR ;ADDRESS OF ERROR MESSAGE
1#: CLR R0 ;R0=0
CMP R0,#0 ;DOES R0=0
BEQ 2# ;YES GO ON
;NO GO TO ERROR
;ALL ERRORS TO TRAP TO EMT VECTOR
;WORD 600 ;UNIQUE ERROR NUMBER
;WORD CPUERR ;ADDRESS OF ERROR MESSAGE
2#: MOV #125252,R0 ;R0=125252
CMP R0,#125252 ;DOES R0=125252
BEQ 3# ;YES GO ON
;NO GO TO ERROR
;ALL ERRORS TO TRAP TO EMT VECTOR
;WORD 601 ;UNIQUE ERROR NUMBER
;WORD CPUERR ;ADDRESS OF ERROR MESSAGE
3#: MOV #52525,R0 ;R0=52525
CMP R0,#52525 ;DOES R0=52525
BEQ 4# ;YES GO ON
;NO GO TO ERROR
;ALL ERRORS TO TRAP TO EMT VECTOR
;WORD 602 ;UNIQUE ERROR NUMBER
;WORD CPUERR ;ADDRESS OF ERROR MESSAGE
4#:
;
;ALR1TS:
;*****
;TEST 175 ALTERNATE REGISTER SET R1 BIT TESTS
;*****
TST175:
INC #TESTN ;INCREMENT TEST NUMBER
MOV #177777,R1 ;R1=177777
CMP R1,#177777 ;DOES R1=177777
BEQ 1# ;YES GO ON
;NO GO TO ERROR
;ALL ERRORS TO TRAP TO EMT VECTOR
;WORD 603 ;UNIQUE ERROR NUMBER
;WORD CPUERR ;ADDRESS OF ERROR MESSAGE
1#: CLR R1 ;R1=0
CMP R1,#0 ;DOES R1=0
BEQ 2# ;YES GO ON
;NO GO TO ERROR
;ALL ERRORS TO TRAP TO EMT VECTOR
;WORD 604 ;UNIQUE ERROR NUMBER

```

```

6127 022400 001127          .WORD CPUERR          ;ADDRESS OF ERROR MESSAGE
6128 022402 012701 125252 2#: MOV    #125252,R1      ;R1=125252
6129 022406 020127 125252   CMP    R1,#125252     ;DOES R1=125252
6130 022412 001403          BEQ    3#             ;YES GO ON
6131                                ;NO GO TO ERROR
6132 022414 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6133 022416 000605          .WORD    605        ;UNIQUE ERROR NUMBER
6134 022420 001127          .WORD    CPUERR     ;ADDRESS OF ERROR MESSAGE
6135 022422 012701 052525 3#: MOV    #52525,R1      ;R1=52525
6136 022426 020127 052525   CMP    R1,#52525     ;DOES R1=52525
6137 022432 001403          BEQ    4#             ;YES GO ON
6138                                ;NO GO TO ERROR
6139 022434 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6140 022436 000606          .WORD    606        ;UNIQUE ERROR NUMBER
6141 022440 001127          .WORD    CPUERR     ;ADDRESS OF ERROR MESSAGE
6142 022442                                ;
6143                                ;
6144                                ;
6145 022442                                ;ALR2TS:
6146                                ;|*****
6147                                ;|*TEST 176 ALTERNATE REGISTER SET R2 BIT TESTS
6148                                ;|*****
6149                                ;TST176:
6150 022442 005267 156336   INC    #TESTN        ;INCREMENT TEST NUMBER
6151 022446 012702 177777   MOV    #177777,R2    ;R2=177777
6152 022452 020227 177777   CMP    R2,#177777    ;DOES R2=177777
6153 022456 001403          BEQ    1#             ;YES GO ON
6154                                ;NO GO TO ERROR
6155 022460 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6156 022462 000607          .WORD    607        ;UNIQUE ERROR NUMBER
6157 022464 001127          .WORD    CPUERR     ;ADDRESS OF ERROR MESSAGE
6158 022466 005002          CLR    R2             ;R2=0
6159 022470 020227 000000 1#: CMP    R2,#0        ;DOES R2=0
6160 022474 001403          BEQ    2#             ;YES GO ON
6161                                ;NO GO TO ERROR
6162 022476 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6163 022500 000610          .WORD    610        ;UNIQUE ERROR NUMBER
6164 022502 001127          .WORD    CPUERR     ;ADDRESS OF ERROR MESSAGE
6165 022504 012702 125252 2#: MOV    #125252,R2    ;R2=125252
6166 022510 020227 125252   CMP    R2,#125252    ;DOES R2=125252
6167 022514 001403          BEQ    3#             ;YES GO ON
6168                                ;NO GO TO ERROR
6169 022516 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6170 022520 000611          .WORD    611        ;UNIQUE ERROR NUMBER
6171 022522 001127          .WORD    CPUERR     ;ADDRESS OF ERROR MESSAGE
6172 022524 012702 052525 3#: MOV    #52525,R2    ;R2=52525
6173 022530 020227 052525   CMP    R2,#52525     ;DOES R2=52525
6174 022534 001403          BEQ    4#             ;YES GO ON
6175                                ;NO GO TO ERROR
6176 022536 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6177 022540 000612          .WORD    612        ;UNIQUE ERROR NUMBER
6178 022542 001127          .WORD    CPUERR     ;ADDRESS OF ERROR MESSAGE
6179 022544                                ;
6180                                ;
6181                                ;
6182 022544                                ;ALR3TS:

```

```

6183
6184
6185
6186 022544
6187 022544 005267 156234
6188 022550 012703 177777
6189 022554 020327 177777
6190 022560 001403
6191
6192 022562 104000
6193 022564 000613
6194 022566 001127
6195 022570 005003
6196 022572 020327 000000
6197 022576 001403
6198
6199 022600 104000
6200 022602 000614
6201 022604 001127
6202 022606 012703 125252
6203 022612 020327 125252
6204 022616 001403
6205
6206 022620 104000
6207 022622 000615
6208 022624 001127
6209 022626 012703 052525
6210 022632 020327 052525
6211 022636 001403
6212
6213 022640 104000
6214 022642 000616
6215 022644 001127
6216 022646
6217
6218
6219 022646
6220
6221
6222
6223 022646
6224 022646 005267 156132
6225 022652 012704 177777
6226 022656 020427 177777
6227 022662 001403
6228
6229 022664 104000
6230 022666 000617
6231 022670 001127
6232 022672 005004
6233 022674 020427 000000
6234 022700 001403
6235
6236 022702 104000
6237 022704 000620
6238 022706 001127

```

```

;*****
; *TEST 177 ALTERNATE REGISTER SET R3 BIT TESTS
;*****
TST177:
      INC      #TESTN          ;INCREMENT TEST NUMBER
      MOV      #177777,R3     ;R3=177777
      CMP      R3,#17777     ;DOES R3=177777
      BEQ      1#            ;YES GO ON
                               ;NO GO TO ERROR
                               ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD    613           ;UNIQUE ERROR NUMBER
      .WORD    CPUERR        ;ADDRESS OF ERROR MESSAGE
1#:   CLR      R3             ;R3=0
      CMP      R3,#0         ;DOES R3=0
      BEQ      2#            ;YES GO ON
                               ;NO GO TO ERROR
                               ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD    614           ;UNIQUE ERROR NUMBER
      .WORD    CPUERR        ;ADDRESS OF ERROR MESSAGE
2#:   MOV      #125252,R3    ;R3=125252
      CMP      R3,#125252   ;DOES R3=125252
      BEQ      3#            ;YES GO ON
                               ;NO GO TO ERROR
                               ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD    615           ;UNIQUE ERROR NUMBER
      .WORD    CPUERR        ;ADDRESS OF ERROR MESSAGE
3#:   MOV      #52525,R3     ;R3=52525
      CMP      R3,#52525   ;DOES R3=52525
      BEQ      4#            ;YES GO ON
                               ;NO GO TO ERROR
                               ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD    616           ;UNIQUE ERROR NUMBER
      .WORD    CPUERR        ;ADDRESS OF ERROR MESSAGE
4#:
;
;ALR4TS:
;*****
; *TEST 200 ALTERNATE REGISTER SET R4 BIT TESTS
;*****
TST200:
      INC      #TESTN          ;INCREMENT TEST NUMBER
      MOV      #177777,R4     ;R4=177777
      CMP      R4,#177777   ;DOES R4=177777
      BEQ      1#            ;YES GO ON
                               ;NO GO TO ERROR
                               ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD    617           ;UNIQUE ERROR NUMBER
      .WORD    CPUERR        ;ADDRESS OF ERROR MESSAGE
1#:   CLR      R4             ;R4=0
      CMP      R4,#0         ;DOES R4=0
      BEQ      2#            ;YES GO ON
                               ;NO GO TO ERROR
                               ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD    620           ;UNIQUE ERROR NUMBER
      .WORD    CPUERR        ;ADDRESS OF ERROR MESSAGE

```

```

6239 022710 012704 125252      20:  MOV      #125252,R4      ;R4=125252
6240 022714 020427 125252      CMP      R4,#125252      ;DOES R4=125252
6241 022720 001403                BEQ      30              ;YES GO ON
6242                                ;NO GO TO ERROR
6243 022722 104000                ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
6244 022724 000621                .WORD    621            ;UNIQUE ERROR NUMBER
6245 022726 001127                .WORD    CPUERR         ;ADDRESS OF ERROR MESSAGE
6246 022730 012704 052525      30:  MOV      #52525,R4      ;R4=52525
6247 022734 020427 052525      CMP      R4,#52525      ;DOES R4=52525
6248 022740 001403                BEQ      40              ;YES GO ON
6249                                ;NO GO TO ERROR
6250 022742 104000                ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
6251 022744 000622                .WORD    622            ;UNIQUE ERROR NUMBER
6252 022746 001127                .WORD    CPUERR         ;ADDRESS OF ERROR MESSAGE
6253 022750                40:
6254
6255                                |
6256 022750                ALR5TS:
6257                                |*****
6258                                |*TEST 201      ALTERNATE REGISTER SET R5 BIT TESTS
6259                                |*****
6260 022750                TST201:
6261 022750 005267 156030      INC      #TESTN          ;INCREMENT TEST NUMBER
6262 022754 012705 177777      MOV      #177777,R5      ;R5=177777
6263 022760 020527 177777      CMP      R5,#177777      ;DOES R5=177777
6264 022764 001403                BEQ      10              ;YES GO ON
6265                                ;NO GO TO ERROR
6266 022766 104000                ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
6267 022770 000623                .WORD    623            ;UNIQUE ERROR NUMBER
6268 022772 001127                .WORD    CPUERR         ;ADDRESS OF ERROR MESSAGE
6269 022774 005005                10:  CLR      R5              ;R5=0
6270 022776 020527 000000      CMP      R5,#0           ;DOES R5=0
6271 023002 001403                BEQ      20              ;YES GO ON
6272                                ;NO GO TO ERROR
6273 023004 104000                ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
6274 023006 000624                .WORD    624            ;UNIQUE ERROR NUMBER
6275 023010 001127                .WORD    CPUERR         ;ADDRESS OF ERROR MESSAGE
6276 023012 012705 125252      20:  MOV      #125252,R5      ;R5=125252
6277 023016 020527 125252      CMP      R5,#125252      ;DOES R5=125252
6278 023022 001403                BEQ      30              ;YES GO ON
6279                                ;NO GO TO ERROR
6280 023024 104000                ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
6281 023026 000625                .WORD    625            ;UNIQUE ERROR NUMBER
6282 023030 001127                .WORD    CPUERR         ;ADDRESS OF ERROR MESSAGE
6283 023032 012705 052525      30:  MOV      #52525,R5      ;R5=52525
6284 023036 020527 052525      CMP      R5,#52525      ;DOES R5=52525
6285 023042 001403                BEQ      40              ;YES GO ON
6286                                ;NO GO TO ERROR
6287 023044 104000                ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
6288 023046 000626                .WORD    626            ;UNIQUE ERROR NUMBER
6289 023050 001127                .WORD    CPUERR         ;ADDRESS OF ERROR MESSAGE
6290 023052 042767 004000 154716 40:  BIC      #BIT11,PS      ;RETURN TO PRIMARY GEN PURPOSE REGS
6291
6292                                |
6293 023060                TE115:
6294                                |*****

```

```

6295          ;*TEST 202          TEST MPFS (MOVE FROM PROCESSOR STATUS) INST
6296          ;*****
6297          ;TST202:
6298          023060      005267      155720          INC          #TESTN          ;INCREMENT TEST NUMBER
6299          023064      005004          CLR          R4          ;SETUP DESTINATION R4
6300
6301          023066      012701      023330          MOV          #TE115A,R1          ;SETUP POINTERS TO TABLES
6302          023072      012702      023340          MOV          #TE115B,R2          ;
6303          023076      012703      023346          MOV          #TE115C,R3          ;
6304          023102      012137      177776          10:          MOV          (R1),#0177776          ;SETUP PSW
6305          023106      106704          MFPS          R4          ; TEST INSTRUCTION
6306          023110      023722      177776          CMP          #0177776,(R2)          ;CHECK PSW
6307          023114      001403          BEQ          20          ;OK GO ON
6308          ;NO GO TO ERROR
6309          023116      104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6310          023120      000627          .WORD          627          ;UNIQUE ERROR NUMBER
6311          023122      001127          .WORD          CPUERR          ;ADDRESS OF ERROR MESSAGE
6312
6313          023124      020423          20:          CMP          R4,(R3)          ;CHECK R4
6314          023126      001403          BEQ          30          ;OK GO ON
6315          ;NO GO TO ERROR
6316          023130      104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6317          023132      000630          .WORD          630          ;UNIQUE ERROR NUMBER
6318          023134      001127          .WORD          CPUERR          ;ADDRESS OF ERROR MESSAGE
6319
6320          023136      021127      177777          30:          CMP          (R1),#0177777          ;ARE WE DONE
6321          023142      001357          BNE          10          ;NO GO TO 10
6322
6323
6324          023144      012701      023330          MOV          #TE115A,R1          ;SETUP POINTERS TO TABLES
6325          023150      012702      023340          MOV          #TE115B,R2          ;
6326          023154      012703      023346          MOV          #TE115C,R3          ;
6327          023160      010605          MOV          R6,R5          ;SAVE STACK IN R5
6328          023162      011137      177776          1010:          MOV          (R1),#0177776          ;SETUP PSW
6329          023166      106706          MFPS          R6          ; TEST INSTRUCTION
6330          023170      023712      177776          CMP          #0177776,(R2)          ;CHECK PSW
6331          023174      001403          BEQ          1020          ;OK GO ON
6332          ;NO GO TO ERROR
6333          023176      104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6334          023200      000631          .WORD          631          ;UNIQUE ERROR NUMBER
6335          023202      001127          .WORD          CPUERR          ;ADDRESS OF ERROR MESSAGE
6336
6337          023204      020613          1020:          CMP          R6,(R3)          ;CHECK R6
6338          023206      001403          BEQ          1030          ;OK GO ON
6339          ;NO GO TO ERROR
6340          023210      104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6341          023212      000632          .WORD          632          ;UNIQUE ERROR NUMBER
6342          023214      001127          .WORD          CPUERR          ;ADDRESS OF ERROR MESSAGE
6343
6344          023216      010506          1030:          MOV          R5,R6          ;RESTORE STACK
6345
6346
6347          023220      012701      023330          MOV          #TE115A,R1          ;SETUP POINTERS TO TABLES
6348          023224      012702      023340          MOV          #TE115B,R2          ;
6349          023230      012703      023354          MOV          #TE115D,R3          ;
6350          023234      005037      001034          CLR          #0EXPDAT          ;INIT EXPECTED DATA HOLDER.
    
```

TEST MTPS (MOVE FROM PROCESSOR STATUS) INST

```

6351 023240 012704 001034      4:  MOV    #EXPDAT,R4      ;SETUP POINTER TO TEST LOCATION
6352 023244 012137 177776      MOV    (R1),#0177776    ;SETUP PSW
6353 023250 106724              MFPs   (R4),             ; TEST INSTRUCTION
6354 023252 023722 177776      CMP    #0177776,(R2),   ;CHECK PSW
6355 023256 001403              BEQ    5:                ;OK GO ON
6356                                ;NO GO TO ERROR
6357 023260 104000              ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
6358 023262 000633              .WORD  633              ;UNIQUE ERROR NUMBER
6359 023264 001127              .WORD  CPUERR           ;ADDRESS OF ERROR MESSAGE
6360
6361 023266 020427 001035      5:  CMP    R4,#EXPDAT+1    ;CHECK R4
6362 023272 001403              BEQ    6:                ;OK GO ON
6363                                ;NO GO TO ERROR
6364 023274 104000              ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
6365 023276 000634              .WORD  634              ;UNIQUE ERROR NUMBER
6366 023300 001127              .WORD  CPUERR           ;ADDRESS OF ERROR MESSAGE
6367
6368 023302 023723 001034      6:  CMP    #EXPDAT,(R3),   ;CHECK TEST LOCATION
6369 023306 001403              BEQ    7:                ;OK GO ON
6370                                ;NO GO TO ERROR
6371 023310 104000              ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
6372 023312 000635              .WORD  635              ;UNIQUE ERROR NUMBER
6373 023314 001127              .WORD  CPUERR           ;ADDRESS OF ERROR MESSAGE
6374 023316 021127 177777      7:  CMP    (R1),#177777    ;ARE WE DONE
6375 023322 001346              BNE    4:                ;NO GO TO 4:
6376
6377 023324 000167 000032      JMP    TE115F
6378
6379 ;
6380 ;
6381 023330 030207      TE115A: .WORD  30207
6382 023332 030000      .WORD  30000
6383 023334 030057      .WORD  30057
6384 023336 177777      .WORD  177777
6385 023340 030211      TE115B: .WORD  30211
6386 023342 030004      .WORD  30004
6387 023344 030041      .WORD  30041
6388 023346 177607      TE115C: .WORD  177607
6389 023350 000000      .WORD  0
6390 023352 000057      .WORD  57
6391 023354 000207      TE115D: .WORD  207
6392 023356 000000      .WORD  0
6393 023360 000057      .WORD  57
6394 023362 000240      TE115F: NOP
6395 ;
6396 023364      TE116:
6397 ;
6398 ;*****
6399 ;*TEST 203      TEST MTPS (MOVE TO PROCESSOR STATUS) INST
6400 ;*****
6401 023364 005267 155414      TST203: INC    #TESTN          ;INCREMENT TEST NUMBER
6402
6403 023370 012737 030000 177776      MOV    #30000,#177776  ;SET PSW TO KERNEL MODE
6404 023376 012701 023722      MOV    #TE116D,R1      ;SETUP POINTERS TO TABLES
6405 023402 012702 023700      MOV    #TE116B,R2
6406 023406 010103      MOV    R1,R3

```



```

6407 023410 004767 000142      JSR      PC,T116      ; TEST INSTRUCTION AND CHECK PSW
6408                                ; AND SOURCE OPERAND
6409
6410
6411 023414 012737 140000 177776      MOV      #140000,#0177776 ; SET PSW TO USER MODE
6412 023422 012706 000600              MOV      #600,R6        ; SETUP USER STACK
6413 023426 012701 023722              MOV      #TE116D,R1    ; SETUP POINTERS TO TABLES
6414 023432 012702 023712              MOV      #TE116C,R2
6415 023436 010103              MOV      R1,R3
6416 023440 004767 000112      JSR      PC,T116      ; TEST INSTRUCTION AND CHECK PSW
6417                                ; AND SOURCE OPERAND
6418
6419
6420 023444 012737 140000 177776      MOV      #140000,#0177776 ; SET PSW TO USER MODE AND CLEAR CC BITS
6421 023452 012701 023674              MOV      #TE116A,R1    ; SETUP POINTERS TO TABLES
6422 023456 012702 023712              MOV      #TE116C,R2
6423 023462 012703 023722              MOV      #TE116D,R3
6424 023466 010104              MOV      R1,R4
6425 023470 004767 000124      JSR      PC,TA116     ; TEST INSTRUCTION AND CHECK PSW
6426                                ; AND SOURCE OPERAND
6427
6428
6429 023474 012737 030000 177776      MOV      #30000,#0177776 ; SET PSW TO KERNEL MODE
6430 023502 012701 023674              MOV      #TE116A,R1    ; SETUP POINTERS TO TABLES
6431 023506 012702 023700              MOV      #TE116B,R2
6432 023512 012703 023722              MOV      #TE116D,R3
6433 023516 010104              MOV      R1,R4
6434 023520 004767 000074      JSR      PC,TA116     ; TEST INSTRUCTION AND CHECK PSW
6435                                ; AND SOURCE OPERAND
6436
6437 023524 005037 177776      CLR      #0177776      ; SET PSW TO KERNEL MODE
6438 023530 106427 177412      MTPS    #177412      ; TEST INSTRUCTION
6439 023534 022737 000012 177776      CMP      #12,#0177776 ; IS PSW CORRECT
6440 023542 001403              BEQ      1000         ; YES GO ON
6441                                ; NO GO TO ERROR
6442 023544 104000              ERROR    ; ALL ERRORS TO TRAP TO EMT VECTOR
6443 023546 000636              .WORD   636          ; UNIQUE ERROR NUMBER
6444 023550 001127              .WORD   CPUERR       ; ADDRESS OF ERROR MESSAGE
6445 023552                                1000:
6446
6447 023552 000167 000154      JMP      FIN116
6448
6449 023556 012105              ; T116: MOV      (R1)+,R5    ; MOVE TEST DATA TO R5
6450 023560 106405              MTPS    R5           ; TEST INSTRUCTION
6451 023562 023722 177776      CMP      #0177776,(R2)+ ; IS PSW CORRECT
6452 023566 001403              BEQ      10          ; YES GO ON
6453                                ; NO GO TO ERROR
6454 023570 104000              ERROR    ; ALL ERRORS TO TRAP TO EMT VECTOR
6455 023572 000637              .WORD   637          ; UNIQUE ERROR NUMBER
6456 023574 001127              .WORD   CPUERR       ; ADDRESS OF ERROR MESSAGE
6457
6458 023576 022305              ; 10:  CMP      (R3)+,R5    ; IS R5 CORRECT
6459 023600 001403              BEQ      20          ; YES GO ON
6460                                ; NO GO TO ERROR
6461 023602 104000              ERROR    ; ALL ERRORS TO TRAP TO EMT VECTOR
6462 023604 000640              .WORD   640          ; UNIQUE ERROR NUMBER

```

```

6463 023606 001127          .WORD  CPUERR          ;ADDRESS OF ERROR MESSAGE
6464
6465 023610 021227 177777    21:  CMP      (R2),#177777    ;ARE WE DONE
6466 023614 001360          BNE      T116             ;NO GO TO T116
6467 023616 000207          RTS      PC              ;RETURN
6468
6469 023620 106421          |
6470 023622 023722 177776    |TA116: MTPS      (R1),      ; TEST INSTRUCTION
6471 023626 001403          CMP      @#177776,(R2),  ;IS PSW CORRECT
6472                                BEQ      11              ;YES GO ON
6473 023630 104000          |                                ;NO GO TO ERROR
6474 023632 000641          |                                ;ALL ERRORS TO TRAP TO EMT VECTOR
6475 023634 001127          |                                ;UNIQUE ERROR NUMBER
6476                                |                                ;ADDRESS OF ERROR MESSAGE
6477 023636 122423          11:  CMPB     (R4),.(R3),    ;CHECK TEST LOCATION
6478 023640 001403          BEQ      21              ;OK GO ON
6479                                |                                ;NO GO TO ERROR
6480 023642 104000          |                                ;ALL ERRORS TO TRAP TO EMT VECTOR
6481 023644 000642          |                                ;UNIQUE ERROR NUMBER
6482 023646 001127          |                                ;ADDRESS OF ERROR MESSAGE
6483
6484 023650 020104          21:  CMP      R1,R4        ;IS SOURCE OPERAND CORRECT
6485 023652 001403          BEQ      31              ;YES GO ON
6486                                |                                ;NO GO TO ERROR
6487 023654 104000          |                                ;ALL ERRORS TO TRAP TO EMT VECTOR
6488 023656 000643          |                                ;UNIQUE ERROR NUMBER
6489 023660 001127          |                                ;ADDRESS OF ERROR MESSAGE
6490
6491 023662 005203          31:  INC      R3           ;POINT TO NEXT WORD
6492 023664 021227 177777    CMP      (R2),#177777    ;ARE WE DONE
6493 023670 001353          BNE      TA116          ;NO GO TO TA116
6494 023672 000207          RTS      PC              ;RETURN
6495
6496 023674          377    |
6497 023675          000    |
6498 023676          252    |
6499 023677          125    |
6500 023700 030357          TE116A: .BYTE  377
6501 023702 030000          .BYTE  0
6502 023704 030252          .BYTE  252
6503 023706 030105          .BYTE  125
6504 023710 177777          TE116B: .WORD  30357
6505 023712 140017          .WORD  30000
6506 023714 140000          .WORD  30252
6507 023716 140012          .WORD  30105
6508 023720 140005          .WORD  177777
6509 023722 177777          TE116C: .WORD  140017
6510 023724 177400          .WORD  140000
6511 023726 177652          .WORD  140012
6512 023730 177525          .WORD  140005
6513                                |                                ;UNIQUE ERROR NUMBER
6514                                |                                ;ADDRESS OF ERROR MESSAGE
6514 023732          |
6515                                |
6516 023732          |TE117:
6517          |
6518          |*****
          |*TEST 204          TEST MFPT (MOVE FROM PROCESSOR TYPE)
    
```

```

6519
6520 023732
6521 023732 005267 155046
6522 023736 013746 000010
6523 023742 012737 024070 000010
6524 023750 012700 177777
6525 023754 012737 030000 177776
6526 023762 000007
6527 023764 022737 030000 177776
6528 023772 001403
6529
6530 023774 104000
6531 023776 000644
6532 024000 001127
6533 024002 020027 000005
6534 024006 001403
6535
6536 024010 104000
6537 024012 000645
6538 024014 001127
6539
6540 024016 012700 177777
6541 024022 000277
6542 024024 000007
6543 024026 022737 030017 177776
6544 024034 001403
6545
6546 024036 104000
6547 024040 000646
6548 024042 001127
6549
6550 024044 020027 000005
6551 024050 001403
6552
6553 024052 104000
6554 024054 000647
6555 024056 001127
6556
6557 024060 012637 000010
6558
6559 024064 000167 000006
6560
6561
6562 024070
6563 024070 104000
6564 024072 000650
6565 024074 001127
6566
6567
6568 024076
6569
6570 024076
6571
6572
6573
6574 024076

```

```

;*****
TST204:
INC      $TESTN          ;INCREMENT TEST NUMBER
MOV      @#10,-(SP)     ;SAVE VECTOR
MOV      @TE117A,@#10   ;SETUP VECTOR TO HANDLE POSSIBLE ILLEGAL INST TR
MOV      @177777,R0     ;INIT R0
MOV      @30000,@#177776 ;SETUP PSW
        .WORD 7         ;TEST INSTRUCTION
CMP      @30000,@#177776 ;IS PSW CORRECT
BEQ      1$            ;YES GO ON
                ;NO GO TO ERROR
                ;ALL ERRORS TO TRAP TO EMT VECTOR
        .WORD 644       ;UNIQUE ERROR NUMBER
        .WORD CPUERR    ;ADDRESS OF ERROR MESSAGE
1$:      CMP      R0,#5   ;IS R0 CORRECT
        BEQ      2$            ;YES GO ON
                ;NO GO TO ERROR
                ;ALL ERRORS TO TRAP TO EMT VECTOR
        .WORD 645       ;UNIQUE ERROR NUMBER
        .WORD CPUERR    ;ADDRESS OF ERROR MESSAGE
2$:      MOV      @177777,R0 ;INIT R0
        SCC      ;SET ALL CC BITS
        .WORD 7         ;TEST INSTRUCTION
CMP      @30017,@#177776 ;IS PSW CORRECT
BEQ      3$            ;YES GO ON
                ;NO GO TO ERROR
                ;ALL ERRORS TO TRAP TO EMT VECTOR
        .WORD 646       ;UNIQUE ERROR NUMBER
        .WORD CPUERR    ;ADDRESS OF ERROR MESSAGE
3$:      CMP      R0,#5   ;IS R0 CORRECT
        BEQ      4$            ;YES GO ON
                ;NO GO TO ERROR
                ;ALL ERRORS TO TRAP TO EMT VECTOR
        .WORD 647       ;UNIQUE ERROR NUMBER
        .WORD CPUERR    ;ADDRESS OF ERROR MESSAGE
4$:      MOV      (SP)+,@#10 ;RESTORE VECTOR
        JMP      FIN117
;
;ERROR! GO TO ERROR IF TRAP TAKES PLACE
TE117A:
ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
        .WORD 650       ;UNIQUE ERROR NUMBER
        .WORD CPUERR    ;ADDRESS OF ERROR MESSAGE
;
;FIN117:
;
;TE120:
;*****
;*TEST 205      TEST HALT (NOT KERNEL MODE)
;*****
TST205:

```

```

6575 024076 005267 154702      INC      #TESTN      ;INCREMENT TEST NUMBER
6576 024102 005037 177766      CLR      @#177766    ;INIT CPU ERROR REG
6577 024106 005037 177776      CLR      @#177776    ;INIT PSW-SET KERNEL MODE
6578 024112 013746 000004      MOV      @#4,-(SP)   ;SAVE VECTOR
6579 024116 013746 000006      MOV      @#6,-(SP)   ;SAVE VECTOR
6580 024122 012737 024162 000004      MOV      @TE120A,@#4 ;SET UP VECTOR TO HANDLE ILLEGAL HALT
6581 024130 005037 000006      CLR      @#6         ;SET UP VECTOR TO COME BACK IN KERNEL MODE
6582 024134 012767 140000 153634      MOV      @140000,PS  ;SET IN USER MODE
6583 024142 012706 000600      MOV      @#600,R6   ;INITIALIZE THE USER STACK POINTER
6584 024146 000000      HALT              ; TEST INSTRUCTION
6585                                     ;ERROR! IF NOTHING HAPPENED GO TO ERROR
6586 024150      PROCNT:
6587 024150 104000      ERROR      ;ALL ERRORS TO TRAP TO EMT VECTOR
6588 024152 000651      .WORD     651      ;UNIQUE ERROR NUMBER
6589 024154 001127      .WORD     CPUERR   ;ADDRESS OF ERROR MESSAGE
6590
6591 024156 000167 000064      JMP      FIN120     ;
6592
6593
6594 024162 022737 030000 177776 TE120A: CMP      @#30000,@#177776 ;IS PSW CORRECT/PREVIOUS MODE = USER?
6595 024170 001403      BEQ      1#        ;YES GO ON
6596                                     ;NO, GO TO ERROR
6597 024172 104000      ERROR      ;ALL ERRORS TO TRAP TO EMT VECTOR
6598 024174 000652      .WORD     652      ;UNIQUE ERROR NUMBER
6599 024176 001127      .WORD     CPUERR   ;ADDRESS OF ERROR MESSAGE
6600
6601 024200 022737 000200 177766 1#:  CMP      @#200,@#177766 ; TEST CPU ERROR REGISTER
6602 024206 001403      BEQ      2#        ;YES GO ON
6603                                     ;NO,GO TO ERROR
6604 024210 104000      ERROR      ;ALL ERRORS TO TRAP TO EMT VECTOR
6605 024212 000653      .WORD     653      ;UNIQUE ERROR NUMBER
6606 024214 001127      .WORD     CPUERR   ;ADDRESS OF ERROR MESSAGE
6607
6608 024216 022627 024150 2#:  CMP      (SP)+,@PROCNT ;DOES STACK CONTAIN CORRECT PC
6609 024222 001403      BEQ      3#        ;YES GO ON
6610                                     ;NO GO TO ERROR
6611 024224 104000      ERROR      ;ALL ERRORS TO TRAP TO EMT VECTOR
6612 024226 000654      .WORD     654      ;UNIQUE ERROR NUMBER
6613 024230 001127      .WORD     CPUERR   ;ADDRESS OF ERROR MESSAGE
6614 024232 022627 140000 3#:  CMP      (SP)+,@140000 ;DOES STACK CONTAIN CORRECT PSW
6615 024236 001403      BEQ      FIN120    ;YES GO ON
6616                                     ;NO GO TO ERROR
6617 024240 104000      ERROR      ;ALL ERRORS TO TRAP TO EMT VECTOR
6618 024242 000655      .WORD     655      ;UNIQUE ERROR NUMBER
6619 024244 001127      .WORD     CPUERR   ;ADDRESS OF ERROR MESSAGE
6620
6621 024246 005037 177766      FIN120: CLR      @#CPEREG ;CLEAR CPU ERROR REGISTER
6622 024252 012637 000006      MOV      (SP)+,@#6  ;RESTORE VECTOR
6623 024256 012637 000004      MOV      (SP)+,@#4  ;RESTORE VECTOR
6624
6625
6626 024262      ;
6627      ;*****
6628      ;*TEST 206      TEST RESET
6629      ;*****
6630 024262      TST206:

```

6631	024262	005267	154516			INC	#TESTN		; INCREMENT TEST NUMBER
6632	024266	122767	000001	154524		CHPB	#APTENV, #ENV		; ARE WE IN APT MODE?
6633	024274	001002				BNE	1#		; IF NOT: DO THIS TEST
6634	024276	000167	000426			JMP	FIN121		; ELSE SKIP THIS TEST BECAUSE RESETS
6635									; SCREW UP THE APT MONITOR.
6636	024302	012737	030340	177776	1#:	MOV	#30340, #0177776		; SETUP PSM TO KERNEL MODE
6637	024310	012737	160000	177572		MOV	#160000, #0177572		; SETUP MPRO
6638	024316	012737	000077	172516		MOV	#77, #0172516		; SETUP MPR3
6639	024324	005037	177772			CLR	#0177772		; CLEAR PIRQ
6640	024330	023727	177772	000000		CMF	#0177772, #0		; IS PIRQ CORRECT
6641	024336	001403				BEG	C121A		; YES GO ON
6642									; NO GO TO ERROR
6643	024340	104000				ERROR			; ALL ERRORS TO TRAP TO EMT VECTOR
6644	024342	000656				.WORD	656		; UNIQUE ERROR NUMBER
6645	024344	001127				.WORD	CPUERR		; ADDRESS OF ERROR MESSAGE
6646									
6647	024346	012737	025000	177772	C121A:	MOV	#25000, #0177772		; MOVE AN ALTERNATING PATTERN TO PIRQ
6648	024354	022737	025252	177772		CMF	#25252, #0177772		; IS PIRQ CORRECT
6649	024362	001403				BEG	C121B		; YES GO ON
6650									; NO GO TO ERROR
6651	024364	104000				ERROR			; ALL ERRORS TO TRAP TO EMT VECTOR
6652	024366	000657				.WORD	657		; UNIQUE ERROR NUMBER
6653	024370	001127				.WORD	CPUERR		; ADDRESS OF ERROR MESSAGE
6654									
6655	024372	012737	077000	177772	C121B:	MOV	#77000, #0177772		; SETUP PIRQ
6656	024400	022737	077314	177772		CMF	#77314, #0177772		; IS PIRQ CORRECT
6657	024406	001403				BEG	C121C		; YES GO ON
6658									; NO GO TO ERROR
6659	024410	104000				ERROR			; ALL ERRORS TO TRAP TO EMT VECTOR
6660	024412	000660				.WORD	660		; UNIQUE ERROR NUMBER
6661	024414	001127				.WORD	CPUERR		; ADDRESS OF ERROR MESSAGE
6662									
6663	024416	000277			C121C:	SCC			; SET ALL CC BITS
6664	024420	000005				RESET			; TEST INSTRUCTION
6665	024422	022737	030357	177776		CMF	#30357, #0177776		; IS PSM CORRECT
6666	024430	001403				BEG	1#		; YES GO ON
6667									; NO GO TO ERROR
6668	024432	104000				ERROR			; ALL ERRORS TO TRAP TO EMT VECTOR
6669	024434	000661				.WORD	661		; UNIQUE ERROR NUMBER
6670	024436	001127				.WORD	CPUERR		; ADDRESS OF ERROR MESSAGE
6671									
6672	024440	013701	177572		1#:	MOV	#SRO, R1		; SAVE SRO IN R1.
6673	024444	042701	000176			BIC	#176, R1		; STRIP OFF UNDEFINED BITS 1-6 FROM MPRO
6674	024450	022701	000000			CMF	#0, R1		; IS MPRO CORRECT
6675	024454	001403				BEG	2#		; YES GO ON
6676									; NO GO TO ERROR
6677	024456	104000				ERROR			; ALL ERRORS TO TRAP TO EMT VECTOR
6678	024460	000662				.WORD	662		; UNIQUE ERROR NUMBER
6679	024462	001127				.WORD	CPUERR		; ADDRESS OF ERROR MESSAGE
6680									
6681	024464	022737	000000	172516	2#:	CMF	#0, #0172516		; IS MPR3 CORRECT
6682	024472	001403				BEG	3#		; YES GO ON
6683									; NO GO TO ERROR
6684	024474	104000				ERROR			; ALL ERRORS TO TRAP TO EMT VECTOR
6685	024476	000663				.WORD	663		; UNIQUE ERROR NUMBER
6686	024500	001127				.WORD	CPUERR		; ADDRESS OF ERROR MESSAGE


```

6743 024706 000002      80: RTI ;USER MODE HALT OCCURRED; GO TO ERROR.
6744
6745 024710 005037 177772 90: CLR 00177772 ;CLEAR PIRQ
6746 024714 005037 177776 CLR 00177776 ;CLEAR PSW
6747 024720 010237 000004 MOV R2,004 ;RESTORE VECTORS TO PREVIOUS STATE
6748 024724 010337 000006 MOV R3,006 ;
6749 024730
6750
6751
6752 024730 I
TE122:
6753 ;*****
6754 ;*TEST 207 TEST SPL (SET PRIORITY LEVEL)
6755 ;*****
6756 024730 TST207:
6757 024730 005267 154050 INC #TESTN ;INCREMENT TEST NUMBER
6758
6759 024734 012705 000010 MOV #0,R5 ;INIT COUNTER
6760 024740 012701 025174 MOV #T1220,R1 ;SETUP POINTER TO DATA
6761 024744 012737 030000 177776 10: MOV #30000,00177776 ;INIT PSW
6762 024752 004767 000064 JSR PC,T122A ; TEST INSTRUCTION
6763 024756 022137 177776 CMP (R1),00177776 ;IS PSW CORRECT
6764 024762 001403 BEQ 20 ;YES GO ON
6765 ;NO GO TO ERROR
6766 024764 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
6767 024766 000671 .WORD 671 ;UNIQUE ERROR NUMBER
6768 024770 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
6769
6770 024772 077514 20: SOB R5,10 ;REPEAT UNTIL ALL CASES ARE TESTED
6771
6772
6773 024774 012705 000010 MOV #0,R5 ;INIT COUNTER
6774 025000 012737 140000 177776 30: MOV #140000,00177776 ;SETUP PSW TO USER MODE
6775 025006 012706 000600 MOV #600,R6 ;SETUP USER STACK
6776 025012 004767 000024 JSR PC,T122A ; TEST INSTRUCTION
6777 025016 022737 140017 177776 CMP #140017,00177776 ;IS PSW CORRECT
6778 025024 001403 BEQ 40 ;YES GO ON
6779 ;NO GO TO ERROR
6780 025026 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
6781 025030 000672 .WORD 672 ;UNIQUE ERROR NUMBER
6782 025032 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
6783
6784 025034 077517 40: SOB R5,30 ;REPEAT UNTIL ALL CASES ARE TESTED
6785
6786
6787 025036 000167 000152 JMP FIN122
6788
6789 025042 020527 000010 I
T122A: 6790 025046 001003 CMP R5,#0. ;FIND OUT WHAT COUNTER IS
6791 025050 000277 BNE 10 ;IF NOT PRIORITY 0 GO TO 10
6792 025052 000230 SCC ;SET ALL CC BITS
6793 025054 000446 SPL 0 ;SET PRIORITY TO 0
6794 025056 020527 000007 10: BR 80 ;RETURN
6795 025062 001003 CMP R5,#7 ;FIND OUT WHAT COUNTER IS
6796 025064 000277 BNE 20 ;IF NOT PRIORITY 1 GO TO 20
6797 025066 000231 SCC ;SET ALL CC BITS
6798 025070 000440 SPL 1 ;SET PRIORITY TO 1
BR 80 ;RETURN

```

```

6799 025072 020527 000006 2#: CMP R5,#6 ;FIND OUT WHAT COUNTER IS
6800 025076 001003 ;BNE 3# ;IF NOT PRIORITY 2 GO TO 3#
6801 025100 000277 ;SCC ;SET ALL CC BITS
6802 025102 000232 ;SPL 2 ;SET PRIORITY TO 2
6803 025104 000432 ;BR 8# ;RETURN
6804 025106 020527 000005 3#: CMP R5,#5 ;FIND OUT WHAT COUNTER IS
6805 025112 001003 ;BNE 4# ;IF NOT PRIORITY 3 GO TO 4#
6806 025114 000277 ;SCC ;SET ALL CC BITS
6807 025116 000233 ;SPL 3 ;SET PRIORITY TO 3
6808 025120 000424 ;BR 8# ;RETURN
6809 025122 020527 000004 4#: CMP R5,#4 ;FIND OUT WHAT COUNTER IS
6810 025126 001003 ;BNE 5# ;IF NOT PRIORITY 4 GO TO 5#
6811 025130 000277 ;SCC ;SET ALL CC BITS
6812 025132 000234 ;SPL 4 ;SET PRIORITY TO 4
6813 025134 000416 ;BR 8# ;RETURN
6814 025136 020527 000003 5#: CMP R5,#3 ;FIND OUT WHAT COUNTER IS
6815 025142 001003 ;BNE 6# ;IF NOT PRIORITY 5 GO TO 6#
6816 025144 000277 ;SCC ;SET ALL CC BITS
6817 025146 000235 ;SPL 5 ;SET PRIORITY TO 5
6818 025150 000410 ;BR 8# ;RETURN
6819 025152 020527 000002 6#: CMP R5,#2 ;FIND OUT WHAT COUNTER IS
6820 025156 001003 ;BNE 7# ;IF NOT PRIORITY 6 GO TO 7#
6821 025160 000277 ;SCC ;SET ALL CC BITS
6822 025162 000236 ;SPL 6 ;SET PRIORITY TO 6
6823 025164 000402 ;BR 8# ;RETURN
6824 025166 000277 7#: SCC ;SET ALL CC BITS
6825 025170 000237 ;SPL 7 ;SET PRIORITY TO 7
6826 025172 000207 8#: RTS PC ;RETURN
6827 ;
6828 025174 030017 T1228: .WORD 30017
6829 025176 030057 .WORD 30057
6830 025200 030117 .WORD 30117
6831 025202 030157 .WORD 30157
6832 025204 030217 .WORD 30217
6833 025206 030257 .WORD 30257
6834 025210 030317 .WORD 30317
6835 025212 030357 .WORD 30357
6836 025214 FIN122:
6837 ;
6838 025214 TE123:
6839 ;*****
6840 ;*TEST 210 TEST TSTSET INSTRUCTION (MULTI PROCESSING INST)
6841 ;*****
6842 025214 TST210:
6843 025214 005267 153564 INC #TESTN ;INCREMENT TEST NUMBER
6844 025220 005037 177776 CLR #177776 ;INIT PSW
6845 025224 012703 000012 MOV #10,R3 ;INIT COUNTER
6846 025230 012701 000400 MOV #400,R1 ;SETUP DESTINATION
6847 025234 012700 025426 MOV #T123A,R0 ;SETUP SOURCE
6848 025240 012021 100#: MOV (R0),(R1); ;RELOCATE TABLES
6849 025242 077302 SOB R3,100# ;ARE WE DONE
6850 025244 013746 000010 MOV #10,-(SP) ;SAVE VECTOR
6851 025250 012737 025452 000010 MOV #T123D,#10 ;SETUP NEW VECTOR
6852 025256 005000 CLR R0 ;INIT R0
6853 025260 012701 000400 MOV #400,R1 ;SETUP POINTERS TO TABLES
6854 025264 012702 000410 MOV #410,R2 ;

```


6855	025270	012703	000416		MOV	#416,R3		
6856	025274	010104			MOV	R1,R4		
6857	025276	012737	030000	177776	1#:	MOV	#30000,#0177776	
6858	025304	000262				SEV		
6859	025306	007221				.WORD	7221	
6860	025310	022237	177776			CMP	(R2)+,#0177776	
6861	025314	001403				BEG	2#	
6862								
6863	025316	104000				ERROR		
6864	025320	000673				.WORD	673	
6865	025322	001127				.WORD	CPUERR	
6866								
6867	025324	020013			2#:	CMP	R0,(R3)	
6868	025326	001403				BEG	3#	
6869								
6870	025330	104000				ERROR		
6871	025332	000674				.WORD	674	
6872	025334	001127				.WORD	CPUERR	
6873								
6874	025336	005204			3#:	INC	R4	
6875	025340	005204				INC	R4	
6876	025342	020401				CMP	R4,R1	
6877	025344	001403				BEG	4#	
6878								
6879	025346	104000				ERROR		
6880	025350	000675				.WORD	675	
6881	025352	001127				.WORD	CPUERR	
6882								
6883	025354	052713	000001		4#:	BIS	#1,(R3)	
6884	025360	022341				CMP	(R3)+,-(R1)	
6885	025362	001403				BEG	5#	
6886								
6887	025364	104000				ERROR		
6888	025366	000676				.WORD	676	
6889	025370	001127				.WORD	CPUERR	
6890								
6891	025372	005201			5#:	INC	R1	
6892	025374	005201				INC	R1	
6893	025376	021127	177777			CMP	(R1),#177777	
6894	025402	001335				BNE	1#	
6895	025404	012737	025460	000010		MOV	#T123E,#010	
6896	025412	007201				.WORD	7201	
6897								
6898	025414	104000				ERROR		
6899	025416	000677				.WORD	677	
6900	025420	001127				.WORD	CPUERR	
6901								
6902	025422	000167	000036			JMP	T123F	
6903								
6904								
6905	025426	167604			T123A:	.WORD	167604	
6906	025430	000000				.WORD	0	
6907	025432	000001				.WORD	1	
6908	025434	177777				.WORD	177777	
6909	025436	030010			T123B:	.WORD	30010	
6910	025440	030004				.WORD	30004	

```

6911 025442 030001          .WORD 30001
6912 025444 167604          .WORD 167604
6913 025446 000000          .WORD 0
6914 025450 000001          .WORD 1
6915
6916 025452          T123D:          ;ERROR! GO TO ERROR IF TRAPPED
6917 025452 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6918 025454 000700          .WORD 700      ;UNIQUE ERROR NUMBER
6919 025456 001127          .WORD CPUERR   ;ADDRESS OF ERROR MESSAGE
6920
6921 025460 005726          T123E: TST      (SP)+ ;CLEAN UP STACK
6922 025462 005726          TST      (SP)+ ;
6923 025464 012637 000010  T123F: MOV      (SP)+,B#10 ;RESTORE VECTOR
6924
6925
6926 025470          ;
6927          TE124:
6928          ;*****
6929          ;*TEST 211      TEST WRTLCK (WRITE LOCK MULTI PROCESSING INST)
6930          ;*****
6931 025470          TST211:
6932 025470 005267 153310          INC      #TESTN          ;INCREMENT TEST NUMBER
6933 025474 005037 177776          CLR      B#177776       ;INIT PSW
6934 025500 012703 000012          MOV      #10.,R3        ;INIT COUNTER
6935 025504 012701 000400          MOV      #400,R1        ;SETUP DESTINATION
6936 025510 012700 025714          MOV      #T124A,R0      ;SETUP SOURCE
6937 025514 012021          100#: MOV      (R0)+,(R1)+   ;RELOCATE TABLES
6938 025516 077302          SOB      R3,100#        ;ARE WE DONE
6939 025520 013746 000010          MOV      B#10,-(SP)     ;SAVE VECTOR
6940 025524 012737 025740 000010  MOV      #T124D,B#10    ;SETUP NEW VECTOR
6941 025532 012701 000400          MOV      #400,R1        ;SETUP POINTERS TO TABLES
6942 025536 012702 000410          MOV      #410,R2
6943 025542 012703 000416          MOV      #416,R3
6944 025546 010204          MOV      R2,R4
6945 025550 012737 030000 177776 1#: MOV      #30000,B#177776 ;SETUP PSW
6946 025556 011100          MOV      (R1),R0        ;SETUP R0
6947 025560 020327 000416          CMP      R3,#416        ;IS THIS THE FIRST TEST CASE
6948 025564 001401          BEQ      2#             ;YES GO TO 2#
6949 025566 000402          BR       3#             ;NO GO TO 3#
6950 025570 000261          2#: SEC              ;SET C BIT
6951 025572 000401          BR       4#
6952 025574 000241          3#: CLC              ;CLEAR C BIT
6953 025576 000262          4#: SEV              ;SET V BIT
6954 025600 007322          .WORD 7322            ; TEST INSTRUCTION
6955 025602 022337 177776          CMP      (R3)+,B#177776 ; IS PSW CORRECT
6956 025606 001403          BEQ      5#             ; YES GO ON
6957 025610 104000          ERROR          ;ERROR! NO GO TO ERROR
6958 025612 000701          .WORD 701            ;ALL ERRORS TO TRAP TO EMT VECTOR
6959 025614 001127          .WORD CPUERR         ;UNIQUE ERROR NUMBER
6960
6961 025616 021100          5#: CMP      (R1),R0    ;IS R0 CORRECT
6962 025620 001403          BEQ      6#             ;YES GO ON
6963 025622 104000          ERROR          ;NO GO TO ERROR
6964 025624 000702          .WORD 702            ;ALL ERRORS TO TRAP TO EMT VECTOR
6965 025626 001127          .WORD CPUERR         ;UNIQUE ERROR NUMBER
6966

```


7023	025756	005267	153022		INC	#TESTN		; INCREMENT TEST NUMBER
7024	025762	005037	177776		CLR	#017776		; INIT PS
7025	025766	012701	026266		MOV	#TE125A,R1		; SETUP POINTERS TO TABLES
7026								
7027	025772	010137	001034	10:	MOV	R1,#EXPDAT		
7028	025776	062737	000002	001034	ADD	#2,#EXPDAT		; POINT TO SOURCE
7029	026004	012703	122222		MOV	#122222,R3		; INIT R3 TO A KNOWN STATE
7030	026010	011102			MOV	(R1),R2		; INIT DESTINATION REG
7031	026012	000277			SCC			; SET ALL CC BITS
7032	026014	070261	000002		MUL	2(R1),R2		; TEST INSTRUCTION
7033	026020	026137	000004	177776	CMP	4(R1),#017776		; IS PS CORRECT
7034	026026	001403			BEG	2#		; YES GO ON
7035								; NO GO TO ERROR
7036	026030	104000			ERROR			; ALL ERRORS TO TRAP TO EMT VECTOR
7037	026032	000707			.WORD	707		; UNIQUE ERROR NUMBER
7038	026034	001127			.WORD	CPUERR		; ADDRESS OF ERROR MESSAGE
7039								
7040	026036	026103	000006	20:	CMP	6(R1),R3		; IS R3 CORRECT
7041	026042	001403			BEG	3#		; YES GO ON
7042								; NO GO TO ERROR
7043	026044	104000			ERROR			; ALL ERRORS TO TRAP TO EMT VECTOR
7044	026046	000710			.WORD	710		; UNIQUE ERROR NUMBER
7045	026050	001127			.WORD	CPUERR		; ADDRESS OF ERROR MESSAGE
7046								
7047	026052	026102	000010	30:	CMP	10(R1),R2		; IS R2 CORRECT
7048	026056	001403			BEG	4#		; YES GO ON
7049								; NO GO TO ERROR
7050	026060	104000			ERROR			; ALL ERRORS TO TRAP TO EMT VECTOR
7051	026062	000711			.WORD	711		; UNIQUE ERROR NUMBER
7052	026064	001127			.WORD	CPUERR		; ADDRESS OF ERROR MESSAGE
7053								
7054	026066	026177	000002	152740	40:	CMP	2(R1),#EXPDAT	; IS SOURCE LOCATION OK
7055	026074	001403			BEG	5#		; YES GO ON
7056								; NO GO TO ERROR
7057	026076	104000			ERROR			; ALL ERRORS TO TRAP TO EMT VECTOR
7058	026100	000712			.WORD	712		; UNIQUE ERROR NUMBER
7059	026102	001127			.WORD	CPUERR		; ADDRESS OF ERROR MESSAGE
7060								
7061	026104	062701	000012	50:	ADD	#12,R1		; GO TO NEXT TEST
7062	026110	020127	026514		CMP	R1,#FIN125		; ARE WE FINISHED
7063	026114	001326			BNE	1#		; NO GO TO 1#
7064								
7065								
7066								
7067								
7068								
7069	026116	012701	026266	60:	MOV	#TE125A,R1		; SETUP POINTERS TO TABLES
7070	026122			70:				
7071								
7072	026122	010102			MOV	R1,R2		
7073	026124	012706	001000		MOV	#STBOT,R6		; INIT R6 TO A KNOWN STATE
7074	026130	012704	000004		MOV	#4,R4		; SETUP R4 VALUE
7075	026134	011105			MOV	(R1),R5		; INIT DESTINATION REG
7076	026136	000277			SCC			; SET ALL CC BITS
7077	026140	070561	000002		MUL	2(R1),R5		; TEST INSTRUCTION
7078	026144	026137	000004	177776	CMP	4(R1),#017776		; IS PS CORRECT

; SECOND PART
 ; USING ODD REGISTER

7079	026152	001403		BEQ	8#		;YES GO ON
7080							;NO GO TO ERROR
7081	026154	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
7082	026156	000713		.WORD	713		;UNIQUE ERROR NUMBER
7083	026160	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
7084							
7085	026162	026105	000006	8#:	CMP	6(R1),R5	;IS R5 CORRECT
7086	026166	001403		BEQ	9#		;YES GO ON
7087							;NO GO TO ERROR
7088	026170	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
7089	026172	000714		.WORD	714		;UNIQUE ERROR NUMBER
7090	026174	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
7091							
7092	026176	020627	001000	9#:	CMP	R6,#STBOT	;IS R6 CORRECT
7093	026202	001405		BEQ	10#		;YES GO ON
7094	026204	012706	001000	MOV	#STBOT,R6		;RESTORE SP
7095							;NO GO TO ERROR
7096	026210	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
7097	026212	000715		.WORD	715		;UNIQUE ERROR NUMBER
7098	026214	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
7099							
7100	026216	005722		10#:	TST	(R2)+	;POINT TO SOURCE OPERAND
7101	026220	021261	000002	CMP	(R2),2(R1)		;IS SOURCE LOCATION OK
7102	026224	001403		BEQ	11#		;YES GO ON
7103							;NO GO TO ERROR
7104	026226	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
7105	026230	000716		.WORD	716		;UNIQUE ERROR NUMBER
7106	026232	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
7107							
7108	026234	020427	000004	11#:	CMP	R4,#4	;IS R4 CORRECT
7109	026240	001403		BEQ	12#		;YES GO ON
7110							;NO GO TO ERROR
7111	026242	104000		ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
7112	026244	000717		.WORD	717		;UNIQUE ERROR NUMBER
7113	026246	001127		.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
7114							
7115	026250	062701	000012	12#:	ADD	#12,R1	
7116	026254	020127	026514	CMP	R1,#FIN125		;ARE WE FINISHED
7117	026260	001320		BNE	7#		;NO GO TO 7#
7118							
7119							
7120	026262	000167	000226	JMP	FIN125		
7121							
7122							
7123	026266	177777		TE125A:	.WORD	177777	;MULTIPLICAND
7124	026270	177777		.WORD	177777		;MULTIPLIER
7125	026272	000000		.WORD	0		
7126	026274	000001		.WORD	1		
7127	026276	000000		.WORD	0		
7128							
7129	026300	006772		.WORD	6772		;MULTIPLICAND
7130	026302	100000		.WORD	100000		;MULTIPLIER
7131	026304	000011		.WORD	11		
7132	026306	000000		.WORD	0		
7133	026310	174403		.WORD	174403		
7134							

GLOBAL AREAS MACY11 30A(1052) 15-MAR-84 13.28 PAGE 134
 KDJ11A.MAC 22-FEB-84 15:12 T212 TEST MUL (MULTIPLY INST)

SEQ 0134

7135	026312	177777	.WORD	177777	;MULTIPLICAND
7136	026314	077777	.WORD	77777	;MULTIPLIER
7137	026316	000010	.WORD	10	
7138	026320	100001	.WORD	100001	
7139	026322	177777	.WORD	177777	
7140					
7141	026324	077777	.WORD	77777	;MULTIPLICAND
7142	026326	000456	.WORD	456	;MULTIPLIER
7143	026330	000001	.WORD	1	
7144	026332	177322	.WORD	177322	
7145	026334	000226	.WORD	226	
7146					
7147	026336	173210	.WORD	173210	;MULTIPLICAND
7148	026340	000000	.WORD	0	;MULTIPLIER
7149	026342	000004	.WORD	4	
7150	026344	000000	.WORD	0	
7151	026346	000000	.WORD	0	
7152					
7153	026350	000000	.WORD	0	;MULTIPLICAND
7154	026352	003251	.WORD	3251	;MULTIPLIER
7155	026354	000004	.WORD	4	
7156	026356	000000	.WORD	0	
7157	026360	000000	.WORD	0	
7158					
7159	026362	000000	.WORD	0	;MULTIPLICAND
7160	026364	000000	.WORD	0	;MULTIPLIER
7161	026366	000004	.WORD	4	
7162	026370	000000	.WORD	0	
7163	026372	000000	.WORD	0	
7164					
7165	026374	100000	.WORD	100000	;MULTIPLICAND
7166	026376	000001	.WORD	1	;MULTIPLIER
7167	026400	000010	.WORD	10	
7168	026402	100000	.WORD	100000	
7169	026404	177777	.WORD	177777	
7170					
7171	026406	077777	.WORD	77777	;MULTIPLICAND
7172	026410	000001	.WORD	1	;MULTIPLIER
7173	026412	000000	.WORD	0	
7174	026414	077777	.WORD	77777	
7175	026416	000000	.WORD	0	
7176					
7177	026420	000010	.WORD	10	;MULTIPLICAND
7178	026422	010000	.WORD	10000	;MULTIPLIER
7179	026424	000001	.WORD	1	
7180	026426	100000	.WORD	100000	
7181	026430	000000	.WORD	0	
7182					
7183	026432	001452	.WORD	1452	;MULTIPLICAND
7184	026434	034527	.WORD	34527	;MULTIPLIER
7185	026436	000001	.WORD	1	
7186	026440	066506	.WORD	66506	
7187	026442	000265	.WORD	265	
7188					
7189	026444	000007	.WORD	7	;MULTIPLICAND
7190	026446	000400	.WORD	400	;MULTIPLIER

7191	026450	000000				.WORD	0	
7192	026452	003400				.WORD	3400	
7193	026454	000000				.WORD	0	
7194								
7195	026456	000002				.WORD	2	;MULTIPLICAND
7196	026460	100000				.WORD	100000	;MULTIPLIER
7197	026462	000011				.WORD	11	
7198	026464	000000				.WORD	0	
7199	026466	177777				.WORD	177777	
7200								
7201	026470	100000				.WORD	100000	;MULTIPLICAND
7202	026472	077777				.WORD	77777	;MULTIPLIER
7203	026474	000011				.WORD	11	
7204	026476	100000				.WORD	100000	
7205	026500	140000				.WORD	140000	
7206								
7207	026502	000001				.WORD	1	;MULTIPLICAND
7208	026504	177777				.WORD	177777	;MULTIPLIER
7209	026506	000010				.WORD	10	
7210	026510	177777				.WORD	177777	
7211	026512	177777				.WORD	177777	
7212	026514							
7213								
7214	026514							
7215								
7216								
7217								
7218	026514							
7219	026514	005267	152264			INC	#TESTN	;INCREMENT TEST NUMBER
7220	026520	005037	177776			CLR	#0177776	;INIT PSM
7221	026524	005006				CLR	R6	;INIT SP
7222	026526	013705	000000			MOV	#0,R5	;SAVE VECTORS
7223	026532	013701	000002			MOV	#02,R1	
7224	026536	012737	000137	000000		MOV	#137,#00	;SETUP NEW VECTORS
7225	026544	012737	026572	000002		MOV	#TE126A,#02	
7226	026552	000277				SCC		;SET ALL CC BITS
7227	026554	071627	000002			DIV	#2,R6	;TEST INSTRUCTION
7228	026560	012706	001000			DIV	#STBOT,R6	;RESTORE SP BEFORE GOING TO ERROR
7229								;IF R7 ISN'T CORRECT GO TO ERROR
7230	026564	104000				ERROR		;ALL ERRORS TO TRAP TO EMT VECTOR
7231	026566	000720				.WORD	720	;UNIQUE ERROR NUMBER
7232	026570	001127				.WORD	CPUERR	;ADDRESS OF ERROR MESSAGE
7233								
7234	026572	022737	000000	177776	TE126A:	CMP	#0,#0177776	;IS PS CORRECT
7235	026600	001405				BEQ	1#	;YES GO ON
7236	026602	012706	001000			MOV	#STBOT,R6	;RESTORE SP BEFORE GOING TO ERROR
7237								;NO GO TO ERROR
7238	026606	104000				ERROR		;ALL ERRORS TO TRAP TO EMT VECTOR
7239	026610	000721				.WORD	721	;UNIQUE ERROR NUMBER
7240	026612	001127				.WORD	CPUERR	;ADDRESS OF ERROR MESSAGE
7241								
7242	026614	012704	026560		1#:	MOV	#A126,R4	;SETUP EXPECTED DATA
7243	026620	006204				ASR	R4	
7244	026622	020406				CMP	R4,R6	;IS R6 CORRECT
7245	026624	001405				BEQ	2#	;YES GO ON
7246	026626	012706	001000			MOV	#STBOT,R6	;RESTORE SP BEFORE GOING TO ERROR

FIN125:

TE126:

;TEST 213 TEST DIV (DIVIDE INST)

TST213:

INC	#TESTN	;INCREMENT TEST NUMBER
CLR	#0177776	;INIT PSM
CLR	R6	;INIT SP
MOV	#0,R5	;SAVE VECTORS
MOV	#02,R1	
MOV	#137,#00	;SETUP NEW VECTORS
MOV	#TE126A,#02	
SCC		;SET ALL CC BITS
DIV	#2,R6	;TEST INSTRUCTION
DIV	#STBOT,R6	;RESTORE SP BEFORE GOING TO ERROR
		;IF R7 ISN'T CORRECT GO TO ERROR
		;ALL ERRORS TO TRAP TO EMT VECTOR
ERROR		
.WORD	720	;UNIQUE ERROR NUMBER
.WORD	CPUERR	;ADDRESS OF ERROR MESSAGE
CMP	#0,#0177776	;IS PS CORRECT
BEQ	1#	;YES GO ON
MOV	#STBOT,R6	;RESTORE SP BEFORE GOING TO ERROR
		;NO GO TO ERROR
ERROR		;ALL ERRORS TO TRAP TO EMT VECTOR
.WORD	721	;UNIQUE ERROR NUMBER
.WORD	CPUERR	;ADDRESS OF ERROR MESSAGE
MOV	#A126,R4	;SETUP EXPECTED DATA
ASR	R4	
CMP	R4,R6	;IS R6 CORRECT
BEQ	2#	;YES GO ON
MOV	#STBOT,R6	;RESTORE SP BEFORE GOING TO ERROR

Address	OpCode	Operand 1	Operand 2	Operand 3	Label	Instruction	Comment
7303	027016	001127				.WORD CPUERR	;ADDRESS OF ERROR MESSAGE
7304							
7305	027020	012700	000004		8#:	MOV #4,R0	;INIT R0
7306	027024	012705	000010			MOV #10,R5	;INIT R5
7307	027030	005004				CLR R4	;INIT R4
7308	027032	000277				SCC	;SET ALL CC BITS
7309	027034	071400				DIV R0,R4	; TEST INSTRUCTION
7310	027036	022737	000000	177776		CMP #0,0#177776	;IS PS CORRECT
7311	027044	001407				BEQ 9#	;YES GO ON
7312	027046	010067	151326			MOV R0,400	;SAVE R0
7313							;NO GO TO ERROR
7314	027052	104000				ERROR	;ALL ERRORS TO TRAP TO EMT VECTOR
7315	027054	000731				.WORD 731	;UNIQUE ERROR NUMBER
7316	027056	001127				.WORD CPUERR	;ADDRESS OF ERROR MESSAGE
7317							
7318	027060	016700	151314			MOV 400,R0	;RESTORE R0
7319	027064	022700	000004		9#:	CMP #4,R0	;IS R0 CORRECT
7320	027070	001403				BEQ 10#	;YES GO ON
7321							;NO GO TO ERROR
7322	027072	104000				ERROR	;ALL ERRORS TO TRAP TO EMT VECTOR
7323	027074	000732				.WORD 732	;UNIQUE ERROR NUMBER
7324	027076	001127				.WORD CPUERR	;ADDRESS OF ERROR MESSAGE
7325							
7326	027100	022704	000002		10#:	CMP #2,R4	;IS R4 CORRECT
7327	027104	001403				BEQ 11#	;YES GO ON
7328							;NO GO TO ERROR
7329	027106	104000				ERROR	;ALL ERRORS TO TRAP TO EMT VECTOR
7330	027110	000733				.WORD 733	;UNIQUE ERROR NUMBER
7331	027112	001127				.WORD CPUERR	;ADDRESS OF ERROR MESSAGE
7332							
7333	027114	022705	000000		11#:	CMP #0,R5	;IS R5 CORRECT
7334	027120	001403				BEQ 12#	;YES GO ON
7335							;NO GO TO ERROR
7336	027122	104000				ERROR	;ALL ERRORS TO TRAP TO EMT VECTOR
7337	027124	000734				.WORD 734	;UNIQUE ERROR NUMBER
7338	027126	001127				.WORD CPUERR	;ADDRESS OF ERROR MESSAGE
7339							
7340	027130	012705	000010		12#:	MOV #10,R5	;INIT R5
7341	027134	005004				CLR R4	;INIT R4
7342	027136	000277				SCC	;SET ALL CC BITS
7343	027140	071427	000003			DIV #3,R4	; TEST INSTRUCTION
7344	027144	022737	000000	177776		CMP #0,0#177776	;IS PS CORRECT
7345	027152	001403				BEQ 13#	;YES GO ON
7346							;NO GO TO ERROR
7347	027154	104000				ERROR	;ALL ERRORS TO TRAP TO EMT VECTOR
7348	027156	000735				.WORD 735	;UNIQUE ERROR NUMBER
7349	027160	001127				.WORD CPUERR	;ADDRESS OF ERROR MESSAGE
7350							
7351	027162	022704	000002		13#:	CMP #2,R4	;IS R4 CORRECT
7352	027166	001403				BEQ 14#	;YES GO ON
7353							;NO GO TO ERROR
7354	027170	104000				ERROR	;ALL ERRORS TO TRAP TO EMT VECTOR
7355	027172	000736				.WORD 736	;UNIQUE ERROR NUMBER
7356	027174	001127				.WORD CPUERR	;ADDRESS OF ERROR MESSAGE
7357							
7358	027176	022705	000002		14#:	CMP #2,R5	;IS R5 CORRECT

7359	027202	001403			BEQ	15:			; YES GO ON
7360									; NO GO TO ERROR
7361	027204	104000			ERROR				; ALL ERRORS TO TRAP TO EMT VECTOR
7362	027206	000737			.WORD	737			; UNIQUE ERROR NUMBER
7363	027210	001127			.WORD	CPUERR			; ADDRESS OF ERROR MESSAGE
7364									
7365									
7366									
7367									
7368	027212	012701	027366		15:	MOV	#TE1268,R1		; SETUP POINTERS TO TABLES
7369									
7370	027216	010137	001034		16:	MOV	R1,#EXPDAT		; SAVE A COPY OF R1
7371	027222	011104				MOV	(R1),R4		; INIT R4
7372	027224	016103	000004			MOV	4(R1),R3		; SAVE SOURCE
7373	027230	016105	000002			MOV	2(R1),R5		; INIT R5
7374	027234	000277				SCC			; SET ALL CC BITS
7375	027236	071461	000004			DIV	4(R1),R4		; TEST INSTRUCTION
7376	027242	026137	000006	177775		CMP	6(R1),#0177776		; IS PS CORRECT
7377	027250	001403				BEQ	17:		; YES GO ON
7378									; NO GO TO ERROR
7379	027252	104000			ERROR				; ALL ERRORS TO TRAP TO EMT VECTOR
7380	027254	000740			.WORD	740			; UNIQUE ERROR NUMBER
7381	027256	001127			.WORD	CPUERR			; ADDRESS OF ERROR MESSAGE
7382									
7383	027260	026105	000010		17:	CMP	10(R1),R5		; IS R5 CORRECT
7384	027264	001403				BEQ	18:		; YES GO ON
7385									; NO GO TO ERROR
7386	027266	104000			ERROR				; ALL ERRORS TO TRAP TO EMT VECTOR
7387	027270	000741			.WORD	741			; UNIQUE ERROR NUMBER
7388	027272	001127			.WORD	CPUERR			; ADDRESS OF ERROR MESSAGE
7389									
7390	027274	026104	000012		18:	CMP	12(R1),R4		; IS R4 CORRECT
7391	027300	001403				BEQ	19:		; YES GO ON
7392									; NO GO TO ERROR
7393	027302	104000			ERROR				; ALL ERRORS TO TRAP TO EMT VECTOR
7394	027304	000742			.WORD	742			; UNIQUE ERROR NUMBER
7395	027306	001127			.WORD	CPUERR			; ADDRESS OF ERROR MESSAGE
7396									
7397	027310	023701	001034		19:	CMP	#EXPDAT,R1		; IS R1 CORRECT
7398	027314	001405				BEQ	20:		; YES GO ON
7399									; NO GO TO ERROR
7400	027316	104000			ERROR				; ALL ERRORS TO TRAP TO EMT VECTOR
7401	027320	000743			.WORD	743			; UNIQUE ERROR NUMBER
7402	027322	001127			.WORD	CPUERR			; ADDRESS OF ERROR MESSAGE
7403									
7404	027324	013701	001034		20:	MOV	#EXPDAT,R1		; RESTORE CORRECT VALUE
7405	027330	026103	000004			CMP	4(R1),R3		; IS SOURCE CORRECT
7406	027334	001405				BEQ	21:		; YES GO ON
7407									; NO GO TO ERROR
7408	027336	104000			ERROR				; ALL ERRORS TO TRAP TO EMT VECTOR
7409	027340	000744			.WORD	744			; UNIQUE ERROR NUMBER
7410	027342	001127			.WORD	CPUERR			; ADDRESS OF ERROR MESSAGE
7411									
7412	027344	010361	000004		21:	MOV	R3,4(R1)		; TRY TO RESTORE CODE
7413	027350	062701	000014			ADD	#14,R1		; POINT TO NEXT LOCATION
7414	027354	021127	000333			CMP	(R1),#333		; ARE WE DONE

```

7415 027360 001316          BNE      164          ;NO GO TO 164
7416
7417
7418 027362 000167 000316          JMP      FIN126
7419
7420
7421 027366 177777          ;TE1268: .WORD 177777 ;DIVIDEND
7422 027370 177777          .WORD 177777 ;INIT R5
7423 027372 177777          .WORD 177777 ;DIVISOR
7424 027374 000000          .WORD 0       ;PSW
7425 027376 000000          .WORD 0       ;R5 RESULT
7426 027400 000001          .WORD 1       ;R4 RESULT
7427
7428 027402 000000          .WORD 0       ;DIVIDEND
7429 027404 177777          .WORD 177777 ;INIT R5
7430 027406 177777          .WORD 177777 ;DIVISOR
7431 027410 000012          .WORD 12      ;PSW
7432 027412 177777          .WORD 177777 ;R5 RESULT
7433 027414 000000          .WORD 0       ;R4 RESULT
7434
7435 027416 177777          .WORD 177777 ;DIVIDEND
7436 027420 000000          .WORD 0       ;INIT R5
7437 027422 177777          .WORD 177777 ;DIVISOR
7438 027424 000002          .WORD 2       ;PSW
7439 027426 000000          .WORD 0       ;R5 RESULT
7440 027430 177777          .WORD 177777 ;R4 RESULT
7441
7442 027432 000000          .WORD 0       ;DIVIDEND
7443 027434 007642          .WORD 7642   ;INIT R5
7444 027436 007643          .WORD 7643   ;DIVISOR
7445 027440 000004          .WORD 4       ;PSW
7446 027442 007642          .WORD 7642   ;R5 RESULT
7447 027444 000000          .WORD 0       ;R4 RESULT
7448
7449 027446 000000          .WORD 0       ;DIVIDEND
7450 027450 000137          .WORD 137    ;INIT R5
7451 027452 177543          .WORD 177543 ;DIVISOR
7452 027454 000004          .WORD 4       ;PSW
7453 027456 000137          .WORD 137    ;R5 RESULT
7454 027460 000000          .WORD 0       ;R4 RESULT
7455
7456 027462 000000          .WORD 0       ;DIVIDEND
7457 027464 007643          .WORD 7643   ;INIT R5
7458 027466 007643          .WORD 7643   ;DIVISOR
7459 027470 000000          .WORD 0       ;PSW
7460 027472 000000          .WORD 0       ;R5 RESULT
7461 027474 000001          .WORD 1       ;R4 RESULT
7462
7463 027476 100000          .WORD 100000 ;DIVIDEND
7464 027500 004376          .WORD 4376   ;INIT R5
7465 027502 010021          .WORD 10021  ;DIVISOR
7466 027504 000012          .WORD 12     ;PSW
7467 027506 004376          .WORD 4376   ;R5 RESULT
7468 027510 100000          .WORD 100000 ;R4 RESULT
7469
7470 027512 177700          .WORD 177700 ;DIVIDEND

```

7471	027514	170033	.WORD	170033	;INIT R5
7472	027516	010021	.WORD	10021	;DIVISOR
7473	027520	000010	.WORD	10	;PSW
7474	027522	171307	.WORD	171307	;R5 RESULT
7475	027524	176024	.WORD	176024	;R4 RESULT
7476					
7477	027526	177700	.WORD	177700	;DIVIDEND
7478	027530	170033	.WORD	170033	;INIT R5
7479	027532	167757	.WORD	167757	;DIVISOR
7480	027534	000000	.WORD	0	;PSW
7481	027536	171307	.WORD	171307	;R5 RESULT
7482	027540	001754	.WORD	1754	;R4 RESULT
7483					
7484	027542	000000	.WORD	0	;DIVIDEND
7485	027544	177777	.WORD	177777	;INIT R5
7486	027546	000001	.WORD	1	;DIVISOR
7487	027550	000002	.WORD	2	;PSW
7488	027552	177777	.WORD	177777	;R5 RESULT
7489	027554	000000	.WORD	0	;R4 RESULT
7490					
7491	027556	177777	.WORD	177777	;DIVIDEND
7492	027560	045716	.WORD	45716	;INIT R5
7493	027562	000001	.WORD	1	;DIVISOR
7494	027564	000012	.WORD	12	;PSW
7495	027566	045716	.WORD	45716	;R5 RESULT
7496	027570	177777	.WORD	177777	;R4 RESULT
7497					
7498	027572	000000	.WORD	0	;DIVIDEND
7499	027574	000002	.WORD	2	;INIT R5
7500	027576	177770	.WORD	177770	;DIVISOR
7501	027600	000004	.WORD	4	;PSW
7502	027602	000002	.WORD	2	;R5 RESULT
7503	027604	000000	.WORD	0	;R4 RESULT
7504					
7505	027606	177777	.WORD	177777	;DIVIDEND
7506	027610	177776	.WORD	177776	;INIT R5
7507	027612	000010	.WORD	10	;DIVISOR
7508	027614	000004	.WORD	4	;PSW
7509	027616	177776	.WORD	177776	;R5 RESULT
7510	027620	000000	.WORD	0	;R4 RESULT
7511					
7512	027622	000001	.WORD	1	;DIVIDEND
7513	027624	177777	.WORD	177777	;INIT R5
7514	027626	000001	.WORD	1	;DIVISOR
7515	027630	000002	.WORD	2	;PSW
7516	027632	177777	.WORD	177777	;R5 RESULT
7517	027634	000001	.WORD	1	;R4 RESULT
7518					
7519	027636	000001	.WORD	1	;DIVIDEND
7520	027640	000000	.WORD	0	;INIT R5
7521	027642	000002	.WORD	2	;DIVISOR
7522	027644	000002	.WORD	2	;PSW
7523	027646	000000	.WORD	0	;R5 RESULT
7524	027650	000001	.WORD	1	;R4 RESULT
7525					
7526	027652	000001	.WORD	1	;DIVIDEND

7527	027654	000000	.WORD	0	;INIT R5
7528	027656	000003	.WORD	3	;DIVISOR
7529	027660	000000	.WORD	0	;PSW
7530	027662	000001	.WORD	1	;R5 RESULT
7531	027664	052525	.WORD	52525	;R4 RESULT
7532					
7533	027666	000023	.WORD	23	;DIVIDEND
7534	027670	016054	.WORD	16054	;INIT R5
7535	027672	016537	.WORD	16537	;DIVISOR
7536	027674	000000	.WORD	0	;PSW
7537	027676	010222	.WORD	10222	;R5 RESULT
7538	027700	000246	.WORD	246	;R4 RESULT
7539					
7540	027702	000333	.WORD	333	

FIN126:

TE127:

```

;*****
; TEST 214 TEST ASH (ARITHMETIC SHIFT)
;*****
TST214:

```

7547	027704								
7548	027704	005267	151074		INC	#TESTN		;INCREMENT TEST NUMBER	
7549	027710	005037	177776		CLR	#0177776		;INIT PSW	
7550	027714	012702	000001		MOV	#1,R2		;SETUP OPERAND	
7551	027720	000277			SCC			;SET ALL CC BITS	
7552	027722	072202			ASH	R2,R2		; TEST INSTRUCTION	
7553	027724	022737	000000	177776	CMF	#0,#0177776		;IS PS CORRECT	
7554	027732	001403			BEQ	1#		;YES GO ON	
7555								;NO GO TO ERROR	
7556	027734	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR	
7557	027736	000745			.WORD	745		;UNIQUE ERROR NUMBER	
7558	027740	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE	
7559									
7560	027742	020227	000002	1#:	CMF	R2,#2		;IS R2 CORRECT	
7561	027746	001403			BEQ	2#		;YES GO ON	
7562								;NO GO TO ERROR	
7563	027750	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR	
7564	027752	000746			.WORD	746		;UNIQUE ERROR NUMBER	
7565	027754	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE	
7566									
7567	027756	012702	100000	2#:	MOV	#100000,R2		;SETUP R2	
7568	027762	012703	000001		MOV	#1,R3		;SETUP R3	
7569	027766	000257			CCC			;CLEAR ALL CC BITS	
7570	027770	072203			ASH	R3,R2		; TEST INSTRUCTION	
7571	027772	022737	000007	177776	CMF	#7,#0177776		;IS PS CORRECT	
7572	030000	001403			BEQ	3#		;YES GO ON	
7573								;NO GO TO ERROR	
7574	030002	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR	
7575	030004	000747			.WORD	747		;UNIQUE ERROR NUMBER	
7576	030006	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE	
7577									
7578	030010	020327	000001	3#:	CMF	R3,#1		;IS R3 CORRECT	
7579	030014	001403			BEQ	4#		;YES GO ON	
7580								;NO GO TO ERROR	
7581	030016	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR	
7582	030020	000750			.WORD	750		;UNIQUE ERROR NUMBER	

7583	030022	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
7584								
7585	030024	020227	000000	4#:	CMP	R2,#0		;IS R2 CORRECT
7586	030030	001403			BEQ	5#		;YES GO ON
7587								;NO GO TO ERROR
7588	030032	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
7589	030034	000751			.WORD	751		;UNIQUE ERROR NUMBER
7590	030036	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
7591								
7592	030040	012701	030154	5#:	MOV	#TE127A,R1		;SETUP POINTERS TO TABLES
7593								
7594	030044	010103		6#:	MOV	R1,R3		
7595	030046	016102	000002		MOV	2(R1),R2		;SETUP R2
7596	030052	000277			SCC			;SET ALL CC BITS
7597	030054	072211			ASH	(R1),R2		;TEST INSTRUCTION
7598	030056	026137	000004	177776	CMP	4(R1),#177776		;IS PS CORRECT
7599	030064	001403			BEQ	7#		;YES GO ON
7600								;NO GO TO ERROR
7601	030066	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
7602	030070	000752			.WORD	752		;UNIQUE ERROR NUMBER
7603	030072	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
7604								
7605	030074	026102	000006	7#:	CMP	6(R1),R2		;IS R2 CORRECT
7606	030100	001403			BEQ	8#		;YES GO ON
7607								;NO GO TO ERROR
7608	030102	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
7609	030104	000753			.WORD	753		;UNIQUE ERROR NUMBER
7610	030106	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
7611								
7612	030110	020301		8#:	CMP	R3,R1		;IS R1 CORRECT
7613	030112	001404			BEQ	9#		;YES GO ON
7614								;NO GO TO ERROR
7615	030114	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
7616	030116	000754			.WORD	754		;UNIQUE ERROR NUMBER
7617	030120	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
7618	030122	010301			MOV	R3,R1		;RESTORE R1
7619								
7620	030124	021311		9#:	CMP	(R3),(R1)		;IS SOURCE CORRECT
7621	030126	001403			BEQ	10#		;YES GO ON
7622								;NO GO TO ERROR
7623	030130	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
7624	030132	000755			.WORD	755		;UNIQUE ERROR NUMBER
7625	030134	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
7626								;SOURCE LOOKS INCORRECT
7627	030136	062701	000010	10#:	ADD	#10,R1		;INCREMENT POINTER
7628	030142	020127	030414		CMP	R1,#FIN127		;ARE WE DONE
7629	030146	001336			BNE	6#		;NO GO TO 6#
7630								
7631								
7632	030150	000167	000240		JMP	FIN127		
7633								
7634								
7635	030154	177761			.WORD	177761		;SOURCE
7636	030156	077777			.WORD	77777		;DEST
7637	030160	000005			.WORD	5		
7638	030162	000000			.WORD	0		

7639					
7640	030164	177700	.WORD	177700	; SOURCE
7641	030166	017777	.WORD	17777	; DEST
7642	030170	000000	.WORD	0	
7643	030172	017777	.WORD	17777	
7644					
7645	030174	177700	.WORD	177700	; SOURCE
7646	030176	100000	.WORD	100000	; DEST
7647	030200	000010	.WORD	10	
7648	030202	100000	.WORD	100000	
7649					
7650	030204	177777	.WORD	177777	; SOURCE
7651	030206	100000	.WORD	100000	; DEST
7652	030210	000010	.WORD	10	
7653	030212	140000	.WORD	140000	
7654					
7655	030214	177737	.WORD	177737	; SOURCE
7656	030216	177777	.WORD	177777	; DEST
7657	030220	000011	.WORD	11	
7658	030222	177777	.WORD	177777	
7659					
7660	030224	177706	.WORD	177706	; SOURCE
7661	030226	102000	.WORD	102000	; DEST
7662	030230	000007	.WORD	7	
7663	030232	000000	.WORD	0	
7664					
7665	030234	177710	.WORD	177710	; SOURCE
7666	030236	017777	.WORD	17777	; DEST
7667	030240	000013	.WORD	13	
7668	030242	177400	.WORD	177400	
7669					
7670	030244	177713	.WORD	177713	; SOURCE
7671	030246	000012	.WORD	12	; DEST
7672	030250	000000	.WORD	0	
7673	030252	050000	.WORD	50000	
7674					
7675	030254	177707	.WORD	177707	; SOURCE
7676	030256	170001	.WORD	170001	; DEST
7677	030260	000002	.WORD	2	
7678	030262	000200	.WORD	200	
7679					
7680	030264	177717	.WORD	177717	; SOURCE
7681	030266	000001	.WORD	1	; DEST
7682	030270	000012	.WORD	12	
7683	030272	100000	.WORD	100000	
7684					
7685	030274	177740	.WORD	177740	; SOURCE
7686	030276	017777	.WORD	17777	; DEST
7687	030300	000004	.WORD	4	
7688	030302	000000	.WORD	0	
7689					
7690	030304	177771	.WORD	177771	; SOURCE
7691	030306	150000	.WORD	150000	; DEST
7692	030310	000010	.WORD	10	
7693	030312	177640	.WORD	177640	
7694					

7695	030314	177742	.WORD	177742	;SOURCE
7696	030316	100000	.WORD	100000	;DEST
7697	030320	000011	.WORD	11	
7698	030322	177777	.WORD	177777	
7699					
7700	030324	177764	.WORD	177764	;SOURCE
7701	030326	100000	.WORD	100000	;DEST
7702	030330	000010	.WORD	10	
7703	030332	177770	.WORD	177770	
7704					
7705	030334	177750	.WORD	177750	;SOURCE
7706	030336	052525	.WORD	52525	;DEST
7707	030340	000004	.WORD	4	
7708	030342	000000	.WORD	0	
7709					
7710	030344	177760	.WORD	177760	;SOURCE
7711	030346	100000	.WORD	100000	;DEST
7712	030350	000011	.WORD	11	
7713	030352	177777	.WORD	177777	
7714					
7715	030354	177770	.WORD	177770	;SOURCE
7716	030356	100000	.WORD	100000	;DEST
7717	030360	000010	.WORD	10	
7718	030362	177600	.WORD	177600	
7719					
7720	030364	177712	.WORD	177712	;SOURCE
7721	030366	004367	.WORD	4367	;DEST
7722	030370	000013	.WORD	13	
7723	030372	156000	.WORD	156000	
7724					
7725	030374	177764	.WORD	177764	;SOURCE
7726	030376	017777	.WORD	17777	;DEST
7727	030400	000001	.WORD	1	
7728	030402	000001	.WORD	1	
7729					
7730	030404	177701	.WORD	177701	;SOURCE
7731	030406	110000	.WORD	110000	;DEST
7732	030410	000003	.WORD	3	
7733	030412	020000	.WORD	20000	
7734					

FIN127:

TE130:

```

*****
; TEST 215 TEST ASHC (ARITHMETIC SHIFT COMBINED)
*****

```

TST215:

7741	030414								
7742	030414	005267	150364	INC	TESTN			INCREMENT TEST NUMBER	
7743	030420	005037	177776	CLR	B#177776			INIT PSW	
7744	030424	012701	000023	MOV	#23,R1			SETUP R1	
7745	030430	012705	052525	MOV	#52525,R5			SETUP R5	
7746	030434	005004		CLR	R4			SETUP R4	
7747	030436	000277		SCC				SET ALL CC BITS	
7748	030440	073401		ASHC	R1,R4			TEST INSTRUCTION	
7749	030442	023727	177776 000012	CHP	B#177776,#12			IS PS CORRECT	
7750	030450	001403		BEG	1#			YES GO ON	

7807	030622	000765			.WORD	765		;UNIQUE ERROR NUMBER
7808	030624	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
7809								;
7810								;
7811	030626	012701	030762	8#:	MOV	#TE130A,R1		;SETUP POINTERS TO TABLES
7812								;
7813	030632	010104		9#:	MOV	R1,R4		;SAVE A COPY OF R1
7814	030634	016102	000002		MOV	2(R1),R2		;SETUP R2
7C15	030640	016103	000004		MOV	4(R1),R3		;SETUP R3
7816	030644	000277			SCC			;SET ALL CC BITS
7817	030646	073211			ASHC	(R1),R2	; TEST INSTRUCTION	
7818	030650	023761	177776	000006	CMF	#0177776,6(R1)		;IS PS CORRECT
7819	030656	001403			BEQ	10#		;YES GO ON
7820								;NO GO TO ERROR
7821	030660	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
7822	030662	000766			.WORD	766		;UNIQUE ERROR NUMBER
7823	030664	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
7824								;
7825	030666	026102	000010	10#:	CMF	10(R1),R2		;IS R2 CORRECT
7826	030672	001403			BEQ	11#		;YES GO ON
7827								;NO GO TO ERROR
7828	030674	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
7829	030676	000767			.WORD	767		;UNIQUE ERROR NUMBER
7830	030700	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
7831								;
7832	030702	026103	000012	11#:	CMF	12(R1),R3		;IS R3 CORRECT
7833	030706	001403			BEQ	12#		;YES GO ON
7834								;NO GO TO ERROR
7835	030710	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
7836	030712	000770			.WORD	770		;UNIQUE ERROR NUMBER
7837	030714	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
7838								;
7839	030716	020401		12#:	CMF	R4,R1		;IS R1 CORRECT
7840	030720	001404			BEQ	13#		;YES GO ON
7841								;NO GO TO ERROR
7842	030722	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
7843	030724	000771			.WORD	771		;UNIQUE ERROR NUMBER
7844	030726	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
7845	030730	010401			MOV	R4,R1		;
7846								;
7847	030732	021114		13#:	CMF	(R1),(R4)		;IS SOURCE CORRECT
7848	030734	001403			BEQ	14#		;YES GO ON
7849								;NO GO TO ERROR
7850	030736	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
7851	030740	000772			.WORD	772		;UNIQUE ERROR NUMBER
7852	030742	001127			.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
7853								;POSSIBLE SOURCE CODE CORRUPTION
7854	030744	062701	000014	14#:	ADD	#14,R1		;GO TO NEXT TEST
7855	030750	020127	031372		CMF	R1,#FIN130		;ARE WE DONE
7856	030754	001326			BNE	9#		;NO GO TO 9#
7857								;
7858								;
7859	030756	000167	000410		JMP	FIN130		;
7860								;
7861								;
7862	030762	177700			TE130A: .WORD	177700		;SOURCE

GLOBAL AREAS MACY11 30A(1052) 15-MAR-84 13:28 PAGE 147
 KDJ11A.MAC 22-FEB-84 15:12 T215 TEST ASMC (ARITHMETIC SHIFT COMBINED)

SEQ 0147

7863	030764	100125	.WORD	100125	DESTINATION WORD 1
7864	030766	177777	.WORD	177777	DESTINATION WORD 2
7865	030770	000010	.WORD	10	TEST PSW
7866	030772	100125	.WORD	100125	RESULT WORD 1
7867	030774	177777	.WORD	177777	RESULT WORD 2
7868					
7869	030776	177777	.WORD	177777	SOURCE
7870	031000	000001	.WORD	1	DESTINATION WORD 1
7871	031002	000000	.WORD	0	DESTINATION WORD 2
7872	031004	000000	.WORD	0	TEST PSW
7873	031006	000000	.WORD	0	RESULT WORD 1
7874	031010	100000	.WORD	100000	RESULT WORD 2
7875					
7876	031012	177701	.WORD	177701	SOURCE
7877	031014	047777	.WORD	47777	DESTINATION WORD 1
7878	031016	100000	.WORD	100000	DESTINATION WORD 2
7879	031020	000012	.WORD	12	TEST PSW
7880	031022	117777	.WORD	117777	RESULT WORD 1
7881	031024	000000	.WORD	0	RESULT WORD 2
7882					
7883	031026	177706	.WORD	177706	SOURCE
7884	031030	004256	.WORD	4256	DESTINATION WORD 1
7885	031032	177700	.WORD	177700	DESTINATION WORD 2
7886	031034	000002	.WORD	2	TEST PSW
7887	031036	025677	.WORD	25677	RESULT WORD 1
7888	031040	170000	.WORD	170000	RESULT WORD 2
7889					
7890	031042	177711	.WORD	177711	SOURCE
7891	031044	065700	.WORD	65700	DESTINATION WORD 1
7892	031046	000012	.WORD	12	DESTINATION WORD 2
7893	031050	000013	.WORD	13	TEST PSW
7894	031052	100000	.WORD	100000	RESULT WORD 1
7895	031054	012000	.WORD	12000	RESULT WORD 2
7896					
7897	031056	177737	.WORD	177737	SOURCE
7898	031060	000000	.WORD	0	DESTINATION WORD 1
7899	031062	000001	.WORD	1	DESTINATION WORD 2
7900	031064	000004	.WORD	4	TEST PSW
7901	031066	000000	.WORD	0	RESULT WORD 1
7902	031070	000000	.WORD	0	RESULT WORD 2
7903					
7904	031072	177736	.WORD	177736	SOURCE
7905	031074	000000	.WORD	0	DESTINATION WORD 1
7906	031076	000001	.WORD	1	DESTINATION WORD 2
7907	031100	000000	.WORD	0	TEST PSW
7908	031102	040000	.WORD	40000	RESULT WORD 1
7909	031104	000000	.WORD	0	RESULT WORD 2
7910					
7911	031106	177740	.WORD	177740	SOURCE
7912	031110	100000	.WORD	100000	DESTINATION WORD 1
7913	031112	000000	.WORD	0	DESTINATION WORD 2
7914	031114	000011	.WORD	11	TEST PSW
7915	031116	177777	.WORD	177777	RESULT WORD 1
7916	031120	177777	.WORD	177777	RESULT WORD 2
7917					
7918	031122	177725	.WORD	177725	SOURCE

GLOBAL AREAS MACY11 30A(1052) 15-MAR-84 13:28 PAGE 148
 KOJ11A.MAC 22-FEB-84 15:12 T215 TEST ASHC (ARITHMETIC SHIFT COMBINED)

SEQ 0148

7919	031124	177777	.WORD	177777	;DESTINATION WORD 1
7920	031126	174000	.WORD	174000	;DESTINATION WORD 2
7921	031130	000007	.WORD	7	;TEST PSW
7922	031132	000000	.WORD	0	;RESULT WORD 1
7923	031134	000000	.WORD	0	;RESULT WORD 2
7924					
7925	031136	177724	.WORD	177724	;SOURCE
7926	031140	177777	.WORD	177777	;DESTINATION WORD 1
7927	031142	174000	.WORD	174000	;DESTINATION WORD 2
7928	031144	000011	.WORD	11	;TEST PSW
7929	031146	100000	.WORD	100000	;RESULT WORD 1
7930	031150	000000	.WORD	0	;RESULT WORD 2
7931					
7932	031152	177733	.WORD	177733	;SOURCE
7933	031154	177777	.WORD	177777	;DESTINATION WORD 1
7934	031156	157023	.WORD	157023	;DESTINATION WORD 2
7935	031160	000012	.WORD	12	;TEST PSW
7936	031162	114000	.WORD	114000	;RESULT WORD 1
7937	031164	000000	.WORD	0	;RESULT WORD 2
7938					
7939	031166	177727	.WORD	177727	;SOURCE
7940	031170	000000	.WORD	0	;DESTINATION WORD 1
7941	031172	177777	.WORD	177777	;DESTINATION WORD 2
7942	031174	000013	.WORD	13	;TEST PSW
7943	031176	177600	.WORD	177600	;RESULT WORD 1
7944	031200	000000	.WORD	0	;RESULT WORD 2
7945					
7946	031202	177717	.WORD	177717	;SOURCE
7947	031204	177777	.WORD	177777	;DESTINATION WORD 1
7948	031206	000001	.WORD	1	;DESTINATION WORD 2
7949	031210	000011	.WORD	11	;TEST PSW
7950	031212	100000	.WORD	100000	;RESULT WORD 1
7951	031214	100000	.WORD	100000	;RESULT WORD 2
7952					
7953	031216	177741	.WORD	177741	;SOURCE
7954	031220	100000	.WORD	100000	;DESTINATION WORD 1
7955	031222	000000	.WORD	0	;DESTINATION WORD 2
7956	031224	000010	.WORD	10	;TEST PSW
7957	031226	177777	.WORD	177777	;RESULT WORD 1
7958	031230	177777	.WORD	177777	;RESULT WORD 2
7959					
7960	031232	177742	.WORD	177742	;SOURCE
7961	031234	037777	.WORD	37777	;DESTINATION WORD 1
7962	031236	177777	.WORD	177777	;DESTINATION WORD 2
7963	031240	000005	.WORD	5	;TEST PSW
7964	031242	000000	.WORD	0	;RESULT WORD 1
7965	031244	000000	.WORD	0	;RESULT WORD 2
7966					
7967	031246	177742	.WORD	177742	;SOURCE
7968	031250	077777	.WORD	77777	;DESTINATION WORD 1
7969	031252	177777	.WORD	177777	;DESTINATION WORD 2
7970	031254	000001	.WORD	1	;TEST PSW
7971	031256	000000	.WORD	0	;RESULT WORD 1
7972	031260	000001	.WORD	1	;RESULT WORD 2
7973					
7974	031262	177711	.WORD	177711	;SOURCE

7975	031264	065600	.WORD	65600	;DESTINATION WORD 1
7976	031266	000012	.WORD	12	;DESTINATION WORD 2
7977	031270	000003	.WORD	3	;TEST PSW
7978	031272	000000	.WORD	0	;RESULT WORD 1
7979	031274	012000	.WORD	12000	;RESULT WORD 2
7980					
7981	031276	177740	.WORD	177740	;SOURCE
7982	031300	077777	.WORD	77777	;DESTINATION WORD 1
7983	031302	177777	.WORD	177777	;DESTINATION WORD 2
7984	03_304	000004	.WORD	4	;TEST PSW
7985	031306	000000	.WORD	0	;RESULT WORD 1
7986	031310	000000	.WORD	0	;RESULT WORD 2
7987					
7988	031312	177737	.WORD	177737	;SOURCE
7989	031314	177777	.WORD	177777	;DESTINATION WORD 1
7990	031316	177774	.WORD	177774	;DESTINATION WORD 2
7991	031320	000011	.WORD	11	;TEST PSW
7992	031322	177777	.WORD	177777	;RESULT WORD 1
7993	031324	177777	.WORD	177777	;RESULT WORD 2
7994					
7995	031326	177747	.WORD	177747	;SOURCE
7996	031330	100000	.WORD	100000	;DESTINATION WORD 1
7997	031332	174000	.WORD	174000	;DESTINATION WORD 2
7998	031334	000010	.WORD	10	;TEST PSW
7999	031336	177777	.WORD	177777	;RESULT WORD 1
8000	031340	177700	.WORD	177700	;RESULT WORD 2
8001					
8002	031342	177753	.WORD	177753	;SOURCE
8003	031344	006324	.WORD	6324	;DESTINATION WORD 1
8004	031346	071002	.WORD	71002	;DESTINATION WORD 2
8005	031350	000001	.WORD	1	;TEST PSW
8006	031352	000000	.WORD	0	;RESULT WORD 1
8007	031354	000146	.WORD	146	;RESULT WORD 2
8008					
8009	031356	177765	.WORD	177765	;SOURCE
8010	031360	102351	.WORD	102351	;DESTINATION WORD 1
8011	031362	177231	.WORD	177231	;DESTINATION WORD 2
8012	031364	000011	.WORD	11	;TEST PSW
8013	031366	177760	.WORD	177760	;RESULT WORD 1
8014	031370	116477	.WORD	116477	;RESULT WORD 2

FIN130:

MSPAUI:

```

;*****
; *TEST 216 TEST THAT AUTO DEC/INC OPERATIONS USING SP ARE ON WORD BOUNDYS
;*****

```

TST216:

INC	#TESTN	;INCREMENT TEST NUMBER	
CLR	R6	;CLEAR SP	
MOVB	(R6)+,COUNT	;TRY AUTOINC ON R6	
CMP	#2,R6	;VERIFY AUTO INC BY 2	
BEG	SPAUI	;BRANCH IF GOOD	
		;BAD AUTO-INC	
		;ALL ERRORS TO TRAP TO EMT VECTOR	
ERROR		;UNIQUE ERROR NUMBER	
.WORD	773	;ADDRESS OF ERROR MESSAGE	
.WORD	CPUERR		
SPAUI:	CLR	R6	;CLEAR R6

8020	031372		
8021	031372	005267	147406
8022	031376	005006	
8023	031400	112667	147434
8024	031404	022706	000002
8025	031410	001403	
8026			
8027	031412	104000	
8028	031414	000773	
8029	031416	001127	
8030	031420	005006	

```

8031 031422 112667 147412      MOVB      (R6)+,COUNT
8032 031426 112667 147406      MOVB      (R6)+,COUNT      ;DOUBLE BYTE AUTO-INC
8033 031432 022706 000004      CMP       #4,R6             ;VERIFY RESULT
8034 031436 001403              BEQ       SPAU2             ;BRANCH IF GOOD
8035                                ;BAD DOUBLE AUTO-INC
8036 031440 104000              ERROR
8037 031442 000774              .WORD     774               ;ALL ERRORS TO TRAP TO EMT VECTOR
8038 031444 001127              .WORD     CPUERR            ;UNIQUE ERROR NUMBER
8039 031446 012706 001000      SPAU2:  MOV     #STBOT,R6    ;ADDRESS OF ERROR MESSAGE
8040 031452 114667 147362      MOVB      -(R6),COUNT     ;LOAD R6
8041 031456 022706 000776      CMP       #776,R6          ;TEST AUTO-DEC
8042 031462 001403              BEQ       SPAU3             ;VERIFY RESULT
8043 031464 104000              ERROR                        ;BRANCH IF GOOD
8044 031466 000775              .WORD     775               ;ALL ERRORS TO TRAP TO EMT VECTOR
8045 031470 001127              .WORD     CPUERR            ;UNIQUE ERROR NUMBER
8046 031472 012706 001000      SPAU3:  MOV     #STBOT,R6    ;ADDRESS OF ERROR MESSAGE
8047 031476 114667 147336      MOVB      -(R6),COUNT     ;LOAD R6
8048 031502 114667 147332      MOVB      -(R6),COUNT     ;TEST AUTO-DEC
8049 031506 022706 000774      CMP       #774,R6          ;TEST AUTO-DEC
8050 031512 001403              BEQ       SPAU4             ;VERIFY RESULT
8051 031514 104000              ERROR                        ;BRANCH IF GOOD
8052 031516 000776              .WORD     776               ;ALL ERRORS TO TRAP TO EMT VECTOR
8053 031520 001127              .WORD     CPUERR            ;UNIQUE ERROR NUMBER
8054 031522 005006              SPAU4:  CLR      R6           ;ADDRESS OF ERROR MESSAGE
8055 031524 105726              TSTB     (R6)+             ;TEST AUTO-INC ON SOP
8056 031526 020627 000002      CMP       R6,#2            ;TEST AUTO-INC
8057 031532 001403              BEQ       SPAU5             ;BRANCH IF GOOD
8058 031534 104000              ERROR                        ;ALL ERRORS TO TRAP TO EMT VECTOR
8059 031536 000777              .WORD     777               ;UNIQUE ERROR NUMBER
8060 031540 001127              .WORD     CPUERR            ;ADDRESS OF ERROR MESSAGE
8061 031542 012706 001000      SPAU5:  MOV     #STBOT,R6    ;LOAD R6
8062 031546 105746              TSTB     -(R6)             ;TEST AUTO-DEC
8063 031550 022706 000776      CMP       #776,R6          ;VERIFY RESULT
8064 031554 001403              BEQ       SPAU6             ;BRANCH IF GOOD
8065 031556 104000              ERROR                        ;ALL ERRORS TO TRAP TO EMT VECTOR
8066 031560 001000              .WORD     1000              ;UNIQUE ERROR NUMBER
8067 031562 001127              .WORD     CPUERR            ;ADDRESS OF ERROR MESSAGE
8068 031564 012706 001000      SPAU6:  MOV     #STBOT,R6
8069
8070
8071 031570                      ;
8072                      MTRY:
8073                      ;*****
8074                      ;*TEST 217    VERIFY YELLOW ZONE TRAP ON AUTO DEC OF R6
8075                      ;*****
8076 031570 005267 147210      TST217: INC     #TESTN          ;INCREMENT TEST NUMBER
8077 031574 005067 146166      CLR     CPREG              ;INIT CPU ERROR REGISTER
8078 031600 012706 000150      MOV     #150,R6            ;LOAD R6 WITH A VALUE THAT WILL
8079                                ;CAUSE A YELLOW STACK TRAP(IE. <400)
8080 031604 016767 146174 147216  MOV     4,SLOC00           ;SAVE VECTOR
8081 031612 012767 031654 146164  MOV     #MTRYA,4          ;SETUP THE STACK OVERFLOW TRAP POINTER
8082 031620 016701 146322      MOV     146,R1             ;SAVE VECTOR
8083 031624 016702 146314      MOV     144,R2             ;SAVE VECTOR
8084 031630 016703 146306      MOV     142,R3             ;SAVE VECTOR
8085 031634 005067 146306      CLR     146                ;JUST AS A PRECAUTION
8086 031640 005046              CLR     -(R6)              ;CAUSE A STACK OVERFLOW TRAP

```

VERIFY YELLOW ZONE TRAP ON AUTO DEC OF R6

```

8087 031642 012706 001000      MOV     #STBOT,R6      ;RESTORE R6 FOR ERROR CALL
8088                                ;OVERFLOW TRAP FAILED
8089 031646 104000      ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
8090 031650 001001      .WORD  1001           ;UNIQUE ERROR NUMBER
8091 031652 001127      .WORD  CPUERR        ;ADDRESS OF ERROR MESSAGE
8092 031654                                MTRYA:
8093 031654 022767 000010 146104  CMP     #BIT03,CPEREG ;WAS CPU ERROR REG SET PROPERLY?
8094 031662 001003      BNE     1#           ;GO TO ERROR IF NOT
8095 031664 020627 000142  CMP     R6,#142      ;VERIFY CORRECT DECREMENT OF R6
8096 031670 001403      BEQ     MTRYB       ;BRANCH IF GOOD
8097                                ;ERROR! R6 IMPROPERLY DECREMENTED
8098                                ;OR CPU ERROR REGISTER NOT CORRECT
8099 031672                                1#:
8100 031672 104000      ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
8101 031674 001002      .WORD  1002           ;UNIQUE ERROR NUMBER
8102 031676 001127      .WORD  CPUERR        ;ADDRESS OF ERROR MESSAGE
8103 031700                                MTRYB:
8104 031700 005067 146062  CLR     CPEREG       ;CLEAR THE CPU ERROR REGISTER
8105 031704 016767 147120 146072  MOV     SLOC00,4     ;RESTORE VECTOR
8106 031712 010167 146230  MOV     R1,146       ;RESTORE VECTORS
8107 031716 010267 146222  MOV     R2,144       ;
8108 031722 010367 146214  MOV     R3,142       ;
8109 031726 012706 001000  MOV     #STBOT,R6   ;
8110
8111
8112                                ;
8113 031732                                MTRYM:
8114                                ;*****
8115                                ;*TEST 220 TEST STACK OVERFLOW TRAPS IN VARIOUS MODES
8116                                ;*****
8117 031732                                TST220:
8118 031732 005267 147046  INC     #TESTN       ;INCREMENT TEST NUMBER
8119 031736 005067 146024  CLR     CPEREG       ;CLEAR CPU ERROR REGISTER
8120 031742 012706 000400  MOV     #400,R6      ;SETUP OVERFLOW R6 DATA
8121 031746 016767 146032 147054  MOV     4,SLOC00     ;SAVE VECTOR
8122 031754 012767 032002 146022  MOV     #TRYMA,4
8123 031762 005067 146410  CLR     376          ;JUST AS A PRECAUTION
8124 031766 005046  CLR     -(R6)       ;CAUSE OVERFLOW TRAP
8125 031770 012706 001000  MOV     #STBOT,R6   ;RESTORE R6 FOR ERROR CALL
8126                                ;NO OVERFLOW TRAP
8127 031774 104000      ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
8128 031776 001003      .WORD  1003           ;UNIQUE ERROR NUMBER
8129 032000 001127      .WORD  CPUERR        ;ADDRESS OF ERROR MESSAGE
8130 032002                                TRYMA:
8131 032002 005067 145760  CLR     CPEREG       ;CLEAR CPU ERROR REGISTER
8132 032006 012705 001000  MOV     #1000,R5     ;SETUP R5 DATA
8133 032012 012706 000400  MOV     #400,R6      ;SETUP OVERFLOW R6 DATA
8134 032016 012767 032040 145760  MOV     #TRYMB,4
8135 032024 064645  ADD     -(R6),-(R5)  ;CAUSE OVERFLOW TRAP
8136 032026 012706 001000  MOV     #STBOT,R6   ;RESTORE R6 FOR ERROR CALL
8137                                ;NO OVERFLOW TRAP
8138 032032 104000      ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
8139 032034 001004      .WORD  1004           ;UNIQUE ERROR NUMBER
8140 032036 001127      .WORD  CPUERR        ;ADDRESS OF ERROR MESSAGE
8141 032040                                TRYMB:
8142 032040 005067 145722  CLR     CPEREG       ;CLEAR CPU ERROR REGISTER

```

```

8143 032044 012706 000150      MOV      #150,R6      ;SETUP OVERFLOW R6 DATA
8144 032050 012767 032072 145726  MOV      #TRYMC,4
8145 032056 044546      BIC      -(R5),-(R6)  ;CAUSE OVERFLOW TRAP
8146 032060 012706 001000      MOV      #STBOT,R6   ;RESTORE R6 FOR ERROR CALL
8147                                ;NO OVERFLOW TRAP
8148 032064 104000      ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
8149 032066 001005      .WORD   1005        ;UNIQUE ERROR NUMBER
8150 032070 001127      .WORD   CPUERR      ;ADDRESS OF ERROR MESSAGE
8151 032072 005067 145670  TRYMC:  CLR      CPEREG    ;CLEAR CPU ERROR REGISTER
8152 032076 016767 146726 145700  MOV      SLOC00,4    ;RESTORE VECTOR
8153 032104 012706 001000      MOV      #STBOT,R6

8154
8155
8156
8157 032110      ;
8158                                ;MILLO:
8159                                ;*****
8159                                ;*TEST 221      TEST STACK OVERFLOW ON ILLEGAL INST TRAP
8160                                ;*****
8161 032110      TST221:
8162 032110 005267 146670      INC      #TESTN      ;INCREMENT TEST NUMBER
8163 032114 005067 145646      CLR      CPEREG    ;CLEAR CPU ERROR REGISTER
8164 032120 012706 000400      MOV      #400,R6    ;SETUP FOR OVERFLOW TRAP
8165 032124 016767 145660 146676  MOV      10,SLOC00  ;SAVE VECTOR
8166 032132 012767 032160 145650  MOV      #MILLOA,10 ;SETUP ILLEGAL TRAP VECTOR
8167 032140 016767 145640 146664  MOV      4,SLOC01  ;SAVE VECTOR
8168 032146 012767 032172 145630  MOV      #MILLOB,4  ;SETUP OVERFLOW TRAP VECTOR
8169 032154 000077      77                ;UNUSED INSTRUCTION TRAP
8170 032156 000240      NOP
8171 032160 012706 001000  MILLOA: MOV      #STBOT,R6 ;RESTORE R6 FOR ERROR CALL
8172                                ;UNUSED INSTRUCTION TRAP
8173 032164 104000      ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
8174 032166 001006      .WORD   1006        ;UNIQUE ERROR NUMBER
8175 032170 001127      .WORD   CPUERR      ;ADDRESS OF ERROR MESSAGE
8176 032172
8177 032172 016767 146634 145604  MOV      SLOC01,4  ;RESTORE VECTOR
8178 032200 016767 146624 145602  MOV      SLOC00,10 ;RESTORE VECTOR
8179 032206 005067 145554      CLR      CPEREG    ;CLEAR CPU ERROR REGISTER
8180 032212 012706 001000      MOV      #STBOT,R6 ;RESTORE R6
8181
8182
8183
8184
8185 032216      ;
8186                                ;MIOTO:
8187                                ;*****
8187                                ;*TEST 222      TEST STACK OVERFLOW ON IOT TRAP
8188                                ;*****
8189 032216      TST222:
8190 032216 005267 146562      INC      #TESTN      ;INCREMENT TEST NUMBER
8191 032222 005067 145540      CLR      CPEREG    ;CLEAR CPU ERROR REGISTER
8192 032226 012706 000400      MOV      #400,R6    ;SETUP STACK FOR OVERFLOW
8193 032232 016767 145562 146570  MOV      20,SLOC00  ;SAVE OLD IOT VECTOR
8194 032240 012767 032266 145552  MOV      #IOTOA,20  ;SETUP ERROR ACTION ON IOT
8195 032246 016767 145532 146556  MOV      4,SLOC01  ;SAVE VECTOR
8196 032254 012767 032300 145522  MOV      #IOTOB,4  ;SETUP CORRECT TRAP VECTOR FOR
8197                                ;OVERFLOW
8198 032262 000004      IOT                ; TEST INSTRUCTION
    
```



```

8199 032264 000240
8200 032266 012706 001000 IOTOA: NOP
MOV #STBOT,R6 ;RESTORE R6 FOR ERROR CALL
;FAILURE OF STACK OVERFLOW
8201 ;ALL ERRORS TO TRAP TO EMT VECTOR
8202 032272 104000 ERROR ;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE
8203 032274 001007 .WORD 1007
8204 032276 001127 .WORD CPUERR
IOTOB:
8205 032300 CLR CPEREG ;CLEAR CPU ERROR REGISTER
8206 032300 005067 145462 MOV #STBOT,R6
8207 032304 012706 001000 MOV SLOC01,4 ;RESTORE VECTOR
8208 032310 016767 146516 145466 MOV SLOC00,20 ;RESTORE TRAP VECTOR
8209 032316 016767 146506 145474
8210
8211 ;
8212 ;
8213 032324 MEMTO:
8214 ;*****
8215 ;*TEST 223 TEST STACK OVERFLOW ON EMT TRAP
8216 ;*****
8217 032324 TST223:
8218 032324 005267 146454 INC #TESTN ;INCREMENT TEST NUMBER
8219 032330 005067 145432 CLR CPEREG ;CLEAR CPU ERROR REGISTER
8220 032334 012706 000400 MOV #400,R6 ;SETUP STACK FOR OVERFLOW
8221 032340 016767 145464 146462 MOV 30,SLOC00 ;SAVE OLD EMT VECTOR
8222 032346 012767 032374 145454 MOV #EMTOA,30 ;SETUP ERROR ACTION ON EMT
8223 032354 016767 145424 146450 MOV 4,SLOC01 ;SAVE VECTOR
8224 032362 012767 032406 145414 MOV #EMTOB,4 ;SETUP CORRECT TRAP VECTOR FOR
8225 ;OVERFLOW
8226 032370 104000 EMT ;TEST INSTRUCTION
8227 032372 000240 NOP
8228 032374 012706 001000 EMTOA: MOV #STBOT,R6 ;RESTORE R6 FOR ERROR CALL
8229 ;FAILURE OF STACK OVERFLOW
8230 032400 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
8231 032402 001010 .WORD 1010 ;UNIQUE ERROR NUMBER
8232 032404 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
8233 032406
8234 032406 016767 146416 145414 EMTOB: MOV SLOC00,30 ;RESTORE TRAP VECTOR
8235 032414 016767 146412 145362 MOV SLOC01,4 ;RESTORE VECTOR
8236 032422 005067 145340 CLR CPEREG ;CLEAR CPU ERROR REGISTER
8237 032426 012706 001000 MOV #STBOT,R6
8238
8239 032432 MTRPO:
8240 ;*****
8241 ;*TEST 224 TEST STACK OVERFLOW ON TRAP
8242 ;*****
8243 032432 TST224:
8244 032432 005267 146346 INC #TESTN ;INCREMENT TEST NUMBER
8245 032436 005067 145324 CLR CPEREG ;CLEAR CPU ERROR REGISTER
8246 032442 012706 000400 MOV #400,R6 ;SETUP STACK FOR OVERFLOW
8247 032446 016767 145362 146354 MOV 34,SLOC00 ;SAVE OLD TRP VECTOR
8248 032454 012767 032502 145352 MOV #TRPOA,34 ;SETUP ERROR ACTION ON TRP
8249 032462 016767 145316 146342 MOV 4,SLOC01 ;SAVE VECTOR
8250 032470 012767 032520 145306 MOV #TRPOB,4 ;SETUP CORRECT TRAP VECTOR FOR
8251 ;OVERFLOW
8252 032476 104400 TRAP ;TEST INSTRUCTION
8253 032500 000240 NOP
8254 032502 010637 001062 TRPOA: MOV SP,#SAVSP1 ;SAVE ERROR DATA

```

```

8255 032506 012706 001000      MOV      #STBOT,R6          ;RESTORE R6 FOR ERROR CALL
8256                                ;FAILURE OF STACK OVERFLOW
8257 032512 104000              ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
8258 032514 001011              .WORD      1011          ;UNIQUE ERROR NUMBER
8259 032516 001127              .WORD      CPUERR       ;ADDRESS OF ERROR MESSAGE
8260 032520                      TRPOB:
8261 032520 016767 146304 145306  MOV      SLOC00,34      ;RESTORE TRAP VECTOR
8262 032526 016767 146300 145250  MOV      SLOC01,4       ;RESTORE VECTOR
8263 032534 005067 145226              CLR      CPEREG        ;CLEAR CPU ERROR REGISTER
8264 032540 012706 001000      MOV      #STBOT,R6
8265
8266
8267
8268 032544                      ;
8269                                ;BPTO:
8270                                ;*****
8271                                ;*TEST 225      TEST STACK OVERFLOW ON BPT
8272                                ;*****
8273 032544 005267 146234          TST225:      INC      #TESTN          ;INCREMENT TEST NUMBER
8274 032550 005067 145212          CLR      CPEREG        ;CLEAR CPU ERROR REGISTER
8275 032554 012706 000400          MOV      #400,R6       ;SETUP STACK FOR OVERFLOW
8276 032560 016767 145230 146242  MOV      14,SLOC00     ;SAVE OLD BPT VECTOR
8277 032566 012767 032614 145220  MOV      #BPTOA,14     ;SETUP ERROR ACTION ON BPT
8278 032574 016767 145204 146230  MOV      4,SLOC01      ;SAVE VECTOR
8279 032602 012767 032772 145174  MOV      #BPTOB,4      ;SETUP CORRECT TRAP VECTOR FOR
8280                                ;OVERFLOW
8281 032610 000003              BPT          ; TEST INSTRUCTION
8282 032612 000240              NOP
8283 032614 010637 001062          BPTOA:      MOV      SP,#SAVSP1 ;SAVE ERROR DATA
8284 032620 012706 001000      MOV      #STBOT,R6     ;RESTORE R6 FOR ERROR CALL
8285                                ;FAILURE OF STACK OVERFLOW
8286 032624 104000              ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
8287 032626 001012              .WORD      1012          ;UNIQUE ERROR NUMBER
8288 032630 001127              .WORD      CPUERR       ;ADDRESS OF ERROR MESSAGE
8289 032632                      BPTOB:
8290 032632 005067 145130          CLR      CPEREG        ;CLEAR CPU ERROR REGISTER
8291 032636 016767 146166 145150  MOV      SLOC00,14     ;RESTORE TRAP VECTOR
8292 032644 016767 146162 145132  MOV      SLOC01,4       ;RESTORE VECTOR
8293 032652 012706 001000      MOV      #STBOT,R6
8294
8295
8296
8297 032656                      ;
8298                                ;MILAO:
8299                                ;*****
8300                                ;*TEST 226      TEST STACK OVERFLOW AND ILLEGAL JMP INSTRUCTION
8301                                ;*****
8302 032656 005267 146122          TST226:      INC      #TESTN          ;INCREMENT TEST NUMBER
8303 032662 005067 145100          CLR      CPEREG        ;CLEAR CPU ERROR REGISTER
8304 032666 012706 000400          MOV      #400,R6       ;SETUP STACK FOR OVERFLOW
8305 032672 016767 145112 146130  MOV      10,SLOC00     ;SAVE OLD ILLEGAL INST. VECTOR
8306 032700 012767 032730 145102  MOV      #ILAOA,10     ;SETUP ERROR ACTION ILLEGAL OPCODE
8307 032706 016767 145072 146116  MOV      4,SLOC01      ;SAVE VECTOR
8308 032714 012767 032742 145062  MOV      #ILBOB,4      ;SETUP CORRECT TRAP VECTOR FOR
8309                                ;OVERFLOW
8310 032722 005001              CLR      R1

```

```

8311 032724 000101          JMP      R1                ; TEST INSTRUCTION
8312 032726 000240          NOP
8313 032730 012706 001000  ILA0A:  MOV      #STBOT,R6        ;RESTORE R6 FOR ERROR CALL
8314                                ;FAILURE OF STACK OVERFLOW
8315 032734 104000          ERROR                     ;ALL ERRORS TO TRAP TO EMT VECTOR
8316 032736 001013          .WORD 1013                ;UNIQUE ERROR NUMBER
8317 032740 001127          .WORD CPUERR              ;ADDRESS OF ERROR MESSAGE
8318 032742
8319 032742 016767 146064 145034  ILB0B:  MOV      SLOC01,4        ;RESTORE VECTOR
8320 032750 016767 146054 145032  MOV      SLOC00,10       ;RESTORE TRAP VECTOR
8321 032756 005067 145004          CLR      CPEREG          ;CLEAR CPU ERROR REGISTER
8322 032762 012706 001000  MOV      #STBOT,R6
8323
8324
8325 032766          ;
8326          ;*****
8327          ;*TEST 227 TEST STACK OVERFLOW ON ILLEGAL JSR INST
8328          ;*****
8329 032766          TST227:
8330 032766 005267 146012          INC      #TESTN          ;INCREMENT TEST NUMBER
8331 032772 012706 000400          MOV      #400,R6        ;SETUP STACK FOR OVERFLOW
8332 032776 016767 145006 146024          MOV      10,SLOC00      ;SAVE OLD VECTOR
8333 033004 012767 033034 144776          MOV      #ILLBOA,10     ;SETUP ERROR ACTION ON ILL. OPCODE
8334 033012 016767 144766 146012          MOV      4,SLOC01       ;SAVE VECTOR
8335 033020 012767 033046 144756          MOV      #ILLB0B,4      ;SETUP CORRECT TRAP VECTOR FOR OVERFLOW
8336 033026 005001          CLR      R1
8337 033030 004501          JSR      R5,R1          ;*** TEST INSTRUCTION***
8338 033032 000240          NOP
8339 033034 012706 001000  ILLBOA: MOV      #STBOT,R6        ;RESTORE R6 FOR ERROR CALL
8340                                ;ERROR!! FAILURE OF STACK OVERFLOW
8341 033040 104000          ERROR                     ;ALL ERRORS TO TRAP TO EMT VECTOR
8342 033042 001014          .WORD 1014                ;UNIQUE ERROR NUMBER
8343 033044 001127          .WORD CPUERR              ;ADDRESS OF ERROR MESSAGE
8344 033046 005037 177766          CLR      #CPEREG        ;CLEAR CPU ERROR REGISTER
8345 033052 016767 145752 144730          MOV      SLOC00,10     ;RESTORE TRAP VECTOR
8346 033060 016767 145746 144716          MOV      SLOC01,4      ;RESTORE VECTOR
8347 033066 012706 001000  MOV      #STBOT,R6
8348
8349          ;
8350          ;
8351 033072          ;
8352          ;*****
8353          ;*TEST 230 TEST FOR FALSE STACK OVERFLOW
8354          ;*****
8355 033072          TST230:
8356 033072 005267 145706          INC      #TESTN          ;INCREMENT TEST NUMBER
8357 033076 016767 144702 145724          MOV      4,SLOC00      ;SAVE VECTOR
8358 033104 012767 033152 144672          MOV      #MSTOE,4      ;ANTICIPATE OVERFLOW ERROR
8359 033112 012706 001002          MOV      #1002,R6      ;SETUP LEGAL R6
8360 033116 005746          TST      -(R6)          ;TRY TO CAUSE STACK OVERFLOW
8361 033120 012706 002002          MOV      #2002,R6      ;SETUP LEGAL R6
8362 033124 005746          TST      -(R6)          ;TRY TO CAUSE STACK OVERFLOW
8363 033126 012706 004002          MOV      #4002,R6      ;SETUP LEGAL R6
8364 033132 005746          TST      -(R6)          ;TRY TO CAUSE STACK OVERFLOW
8365 033134 012706 010002          MOV      #10002,R6     ;SETUP LEGAL R6
8366 033140 005746          TST      -(R6)          ;TRY TO CAUSE STACK OVERFLOW

```


8423	033312	005267	145466		INC	#TESTN	;INCREMENT TEST NUMBER
8424	033316	012706	001000		MOV	#STBOT,R6	;SETUP STACK
8425	033322	016767	144466	145500	MOV	14,SLOC00	;SAVE OLD T-BIT VECTOR
8426	033330	012746	000020		MOV	#20,-(R6)	;PUSH T-BIT
8427	033334	012746	033356		MOV	#MTTSA,-(R6)	;SETUP ERROR TRAP VECTOR
8428	033340	012767	033366	144446	MOV	#MTT.S,14	;SETUP NEW T-BIT VECTOR
8429	033346	000006			RTT		;CAUSE A T BIT SET IN PSW
8430							;SHOULD NEVER BE EXECUTED
8431	033350	104000			ERROR		;ALL ERRORS TO TRAP TO EMT VECTOR
8432	033352	001022			.WORD	1022	;UNIQUE ERROR NUMBER
8433	033354	001127			.WORD	CPUERR	;ADDRESS OF ERROR MESSAGE
8434	033356	000240			MTTSA:	NOP	;RTT WILL EXECUTE THIS INSTRUCTION
8435							;WITH A T-BIT TRAP
8436							;DIDNT TAKE CORRECT TRAP
8437	033360				MTTSG:		
8438	033360	104000			ERROR		;ALL ERRORS TO TRAP TO EMT VECTOR
8439	033362	001023			.WORD	1023	;UNIQUE ERROR NUMBER
8440	033364	001127			.WORD	CPUERR	;ADDRESS OF ERROR MESSAGE
8441	033366	022706	000774		MTTSSB:	CMP	#STBOT-4,R6
8442	033372	001403			BEQ	MTTSD	;VERIFY SP DECIRMENT
8443							;BRANCH IF GOOD
8444	033374	104000					;BAD SP
8445	033376	001024			ERROR		;ALL ERRORS TO TRAP TO EMT VECTOR
8446	033400	001127			.WORD	1024	;UNIQUE ERROR NUMBER
8447	033402	021627	033360		.WORD	CPUERR	;ADDRESS OF ERROR MESSAGE
8448	033406	001403			MTTSD:	CMP	(R6),#MTTSG
8449					BEQ	MTTSE	;VERIFY PC SAVED ON STACK
8450	033410	104000					;BRANCH IF GOOD
8451	033412	001025			ERROR		;INCORRECT PC ON STACK
8452	033414	001127			.WORD	1025	;ALL ERRORS TO TRAP TO EMT VECTOR
8453	033416				.WORD	CPUERR	;UNIQUE ERROR NUMBER
8454	033416	016767	145406	144370	MTTSE:	MOV	SLOC00,14
8455	033424	012706	001000		MOV	#STBOT,R6	;RESTORE VECTOR 14
8456							
8457	033430				MTTR:		
8458							
8459							
8460							
8461	033430						
8462	033430	005267	145350				
8463	033434	012706	001000		INC	#TESTN	;INCREMENT TEST NUMBER
8464	033440	016767	144350	145362	MOV	#STBOT,R6	;SETUP STACY
8465	033446	012746	000020		MOV	14,SLOC00	;SAVE OLD VECTOR
8466	033452	012746	033504		MOV	#20,-(R6)	;PUSH T-BIT
8467	033456	012767	033512	144330	MOV	#MTTRA,-(R6)	;SETUP ERROR TRAP VECTOR
8468	033464	012767	000357	144304	MOV	#MTTRB,14	;SETUP NEW T-BIT VECTOR
8469	033472	000277			MOV	#357,PS	;SET PRIORITY AND COND C
8470	033474	000002			SCC		
8471					RTI		
8472	033476	104000					;SHOULD NEVER EXECUTE
8473	033500	001026			ERROR		;ALL ERRORS TO TRAP TO EMT VECTOR
8474	033502	001127			.WORD	1026	;UNIQUE ERROR NUMBER
8475					.WORD	CPUERR	;ADDRESS OF ERROR MESSAGE
8476	033504				MTTRA:		;DIDNT TAKE CORRECT TRAP
8477	033504	104000					
8478	033506	001027			ERROR		;ALL ERRORS TO TRAP TO EMT VECTOR
					.WORD	1027	;UNIQUE ERROR NUMBER

```

8479 033510 001127          .WORD  CPUERR          ;ADDRESS OF ERROR MESSAGE
8480 033512 026727 145260 000020 MTRB:  CMP      STBOT-2,#20    ;VERIFY PSW ON STACK
8481 033520 001403          BEQ      MTRC          ;BRANCH IF CORRECT STATUS
8482                                     ;BAD STATUS ON STACK
8483 033522 104000          ERROR                                     ;ALL ERRORS TO TRAP TO EMT VECTOR
8484 033524 001030          .WORD  1030          ;UNIQUE ERROR NUMBER
8485 033526 001127          .WORD  CPUERR          ;ADDRESS OF ERROR MESSAGE
8486 033530 012706 001000 MTRC:  MOV      #STBOT,R6    ;SETUP STACK
8487 033534 012746 000377      MOV      #377,-(R6)    ;PUSH T-BIT
8488 033540 012746 033572      MOV      #MTRD,-(R6)  ;SETUP ERROR TRAP VECTOR
8489 033544 012767 033600 144242  MOV      #MTRD,14    ;SETUP NEW T-BIT VECTOR
8490 033552 012767 000000 144216  MOV      #0,PS       ;CLEAR PRIORITY
8491 033560 000257          CCC                                     ;CLEAR CONDITION CODES
8492 033562 000002          RTI
8493                                     ;SHOULD NEVER EXECUTE
8494 033564 104000          ERROR                                     ;ALL ERRORS TO TRAP TO EMT VECTOR
8495 033566 001031          .WORD  1031          ;UNIQUE ERROR NUMBER
8496 033570 001127          .WORD  CPUERR          ;ADDRESS OF ERROR MESSAGE
8497                                     ;DIDNT TAKE CORRECT TRAP
8498 MTRD:
8499 033572 104000          ERROR                                     ;ALL ERRORS TO TRAP TO EMT VECTOR
8500 033574 001032          .WORD  1032          ;UNIQUE ERROR NUMBER
8501 033576 001127          .WORD  CPUERR          ;ADDRESS OF ERROR MESSAGE
8502 033600 026727 145172 000377 MTRD:  CMP      STBOT-2,#377  ;VERIFY OLD PSW ON STACK
8503 033606 001403          BEQ      MTRF          ;BRANCH IF GOOD
8504                                     ;OLD PSW INCORRECT
8505 033610 104000          ERROR                                     ;ALL ERRORS TO TRAP TO EMT VECTOR
8506 033612 001033          .WORD  1033          ;UNIQUE ERROR NUMBER
8507 033614 001127          .WORD  CPUERR          ;ADDRESS OF ERROR MESSAGE
8508 033616 MTRF:
8509 033616 016767 145206 144170  MOV      SLOC00,14   ;RESTORE VECTOR
8510 033624 012706 001000      MOV      #STBOT,R6
8511
8512
8513 MRT:
8514 033630
8515 ;*****
8516 ;*TEST 234 TEST RESERVED INST TRAP
8517 ;*****
8518 033630 005267 145150      TST234: INC      #TESTN      ;INCREMENT TEST NUMBER
8519 033634 012706 001000      MOV      #STBOT,R6  ;SETUP STACK
8520 033640 016767 144144 145162  MOV      10,SLOC00  ;SAVE OLD VECTOR
8521 033646 012767 033664 144134  MOV      #MRTB,10   ;SETUP NEW RESERVED VECTOR
8522 033654 000077          77
8523                                     ;DIDNT TAKE CORRECT TRAP
8524 MRTA:
8525 033656 104000          ERROR                                     ;ALL ERRORS TO TRAP TO EMT VECTOR
8526 033660 001034          .WORD  1034          ;UNIQUE ERROR NUMBER
8527 033662 001127          .WORD  CPUERR          ;ADDRESS OF ERROR MESSAGE
8528 033664 022706 000774 MRTB:  CMP      #STBOT-4,R6 ;VERIFY SP DECRIMENT
8529 033670 001403          BEQ      MRTE          ;BRANCH IF GOOD
8530                                     ;BAD PC ON STACK
8531 033672 104000          ERROR                                     ;ALL ERRORS TO TRAP TO EMT VECTOR
8532 033674 001035          .WORD  1035          ;UNIQUE ERROR NUMBER
8533 033676 001127          .WORD  CPUERR          ;ADDRESS OF ERROR MESSAGE
8534 033700 021627 033656 MRTD:  CMP      (R6),#MRTA  ;VERIFY PROPER PC ON STACK

```

```

8535 033704 001403          BEQ      MRTF          ;BRANCH IF GOOD
8536                                ;INCORRECT PC ON STACK
8537 033706 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
8538 033710 001036          .WORD    1036          ;UNIQUE ERROR NUMBER
8539 033712 001127          .WORD    CPUERR        ;ADDRESS OF ERROR MESSAGE
8540 033714
8541 033714 016767 145110 144066 MRTF:  MOV      SLOC00,10    ;RESTORE TRAP VECTOR
8542 033722 012706 001000          MOV      #STBOT,R6
8543
8544
8545
8546 033726          ;
8547          MRT0:
8548          ;*****
8549          ;*TEST 235      TEST OLD STATUS ON RESERVED INST TRAP
8550          ;*****
8551 033726 005267 145052          TST235: INC      #TESTN          ;INCREMENT TEST NUMBER
8552 033732 012706 001000          MOV      #STBOT,R6    ;SETUP STACK
8553 033736 016767 144046 145064  MOV      10,SLOC00    ;SAVE OLD VECTOR
8554 033744 012767 033770 144036  MOV      #MRT0B,10   ;SETUP NEW VECTOR
8555 033752 005067 144020          CLR      PS           ;CLEAR PRIORITY AND COND C
8556 033756 000257
8557 033760 000077          CCC      77
8558
8559 033762          ;DIDNT TAKE CORRECT TRAP
8560 033762 104000          MRT0A: ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
8561 033764 001037          .WORD    1037          ;UNIQUE ERROR NUMBER
8562 033766 001127          .WORD    CPUERR        ;ADDRESS OF ERROR MESSAGE
8563 033770 026727 145002 000000 MRT0B: CMP      STBOT-2,#0   ;VERIFY PSW ON STACK
8564 033776 001403          BEQ      MRT0C        ;BRANCH IF CORRECT STATUS
8565
8566 034000 104000          ;BAD STATUS ON STACK
8567 034002 001040          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
8568 034004 001127          .WORD    1040          ;UNIQUE ERROR NUMBER
8569 034006 012706 001000          ;ADDRESS OF ERROR MESSAGE
8570 034012 012767 034040 143770 MRT0C: MOV      #STBOT,R6    ;SETUP STACK
8571 034020 012767 000357 143750  MOV      #MRT0E,10   ;SET UP TRAP VECTOR
8572 034026 000277          MOV      #357,PS     ;SET PRIORITY
8573 034030 000077          SCC      77          ;SET CONDITION CODES
8574
8575          ;RESERVED INSTRUCTION
8576          ;DIDNT TAKE CORRECT TRAP
8577 034032          MRT0D: ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
8578 034034 001041          .WORD    1041          ;UNIQUE ERROR NUMBER
8579 034036 001127          .WORD    CPUERR        ;ADDRESS OF ERROR MESSAGE
8580 034040 026727 144732 000357 MRT0E: CMP      STBOT-2,#357 ;VERIFY OLD PSW ON STACK
8581 034046 001403          BEQ      MRT0F        ;BRANCH IF GOOD
8582
8583 034050 104000          ;OLD PSW INCORRECT
8584 034052 001042          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
8585 034054 001127          .WORD    1042          ;UNIQUE ERROR NUMBER
8586 034056          ;ADDRESS OF ERROR MESSAGE
8587 034056 016767 144746 143724 MRT0F: MOV      SLOC00,10    ;RESOTRE TRAP VECTOR
8588 034064 012706 001000          MOV      #STBOT,R6
8589
8590 034070          MTP:

```

```

8591 ;*****
8592 ;*TEST 236 TEST TRAP INST
8593 ;*****
8594 034070 TST236:
8595 034070 005267 144710 INC #TESTN ;INCREMENT TEST NUMBER
8596 034074 012706 001000 MOV #STBOT,R6 ;SETUP STACK
8597 034100 016767 143730 144722 MOV 34,SLOC00 ;SAVE OLD VECTOR
8598 034106 012767 034132 143720 MOV #MTPB,34 ;SETUP NEW TRAP VECTOR
8599 034114 005067 143656 CLR PS ;CLEAR PRIORITY ABND COND C
8600 034120 000257 CCC
8601 034122 104400 TRAP
8602 ;DIDNT TAKE CORRECT TRAP
8603 034124 MTPR:
8604 034124 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
8605 034126 001043 .WORD ;UNIQUE ERROR NUMBER
8606 034130 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
8607 034132 022706 000774 MTPB: CMP #STBOT-4,R6 ;VERIFY SP DECRIMENT
8608 034136 001403 BEQ MTPQ ;BRANCH IF GOOD
8609 ;BAD PC ON STACK
8610 034140 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
8611 034142 001044 .WORD ;UNIQUE ERROR NUMBER
8612 034144 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
8613 034146 021627 034124 MTPQ: CMP (R6),#MTPR ;VERIFY PROPER PC ON STACK
8614 034152 001403 BEQ MTPF ;BRANCH IF GOOD
8615 ;INCORRECT PC ON STACK
8616 034154 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
8617 034156 001045 .WORD ;UNIQUE ERROR NUMBER
8618 034160 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
8619 034162 MTPF:
8620 034162 016767 144642 143644 MOV SLOC00,34 ;RESTORE VECTOR
8621 034170 012706 001000 MOV #STBOT,R6
8622 ;
8623 ;
8624 ;
8625 034174 MTPD:
8626 ;*****
8627 ;*TEST 237 TEST OLD STATUS SAVED ON TRAP
8628 ;*****
8629 034174 TST237:
8630 034174 005267 144604 INC #TESTN ;INCREMENT TEST NUMBER
8631 034200 012706 001000 MOV #STBOT,R6 ;SETUP STACK
8632 034204 016767 143624 144616 MOV 34,SLOC00 ;SAVE OLD VECTOR
8633 034212 012767 034236 143614 MOV #MTPOB,34 ;SETUP NEW TRAP VECTOR
8634 034220 005067 143552 CLR PS ;CLEAR PRIORITY AND COND C
8635 034224 000257 CCC
8636 034226 104400 TRAP
8637 ;DIDNT TAKE CORRECT TRAP
8638 034230 MTPOA:
8639 034230 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
8640 034232 001046 .WORD ;UNIQUE ERROR NUMBER
8641 034234 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
8642 034236 026727 144534 000000 MTPOB: CMP STBOT-2,#0 ;VERIFY PSW ON STACK
8643 034244 001403 BEQ MTPOC ;BRANCH IF CORRECT STATUS
8644 ;BAD STATUS ON STACK
8645 034246 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
8646 034250 001047 .WORD 1047 ;UNIQUE ERROR NUMBER

```



```

8647 034252 001127          .WORD  CPUERR          ;ADDRESS OF ERROR MESSAGE
8648 034254 012706 001000  MTPDC:  MOV    @STBOT,R6    ;SETUP STACK
8649 034260 012767 034306 143546  MOV    @MTPOE,34    ;SET UP TRAP VECTOR
8650 034266 012767 000357 143502  MOV    @357,PS     ;SET PRIORITY
8651 034274 000277          SCC          ;SET CONDITION CODES
8652 034276 104400          TRAP          ;ISSUE TRAP
8653                                ;DIDNT TAKE CORRECT TRAP
8654 034300          MTPDC:
8655 034300 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
8656 034302 001050          .WORD  1050        ;UNIQUE ERROR NUMBER
8657 034304 001127          .WORD  CPUERR      ;ADDRESS OF ERROR MESSAGE
8658 034306 026727 144464 000357 MTPOE:  CMP    STBOT-2,@357 ;VERIFY OLD PSM ON STACK
8659 034314 001403          BEQ    MTPDF       ;BRANCH IF GOOD
8660                                ;OLD PSM INCORRECT
8661 034316 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
8662 034320 001051          .WORD  1051        ;UNIQUE ERROR NUMBER
8663 034322 001127          .WORD  CPUERR      ;ADDRESS OF ERROR MESSAGE
8664 034324          MTPDF:
8665 034324 016767 144500 143502  MOV    SLOC00,34   ;RESTORE TRAP VECTOR
8666 034332 012706 001000          MOV    @STBOT,R6
8667
8668                                ;
8669                                ;
8670 034336          MTPA:
8671                                ;*****
8672                                ;*TEST 240    TEST ALL TRAP OPCODES - SELF MODIFYING
8673                                ;*****
8674 034336          TST240:
8675 034336 005267 144442          INC    @TESTN      ;INCREMENT TEST NUMBER
8676 034342 005003          CLR    R3         ;SETUP REGISTER TO INDICATE OPCODE
8677 034344 012706 001000          MOV    @STBOT,R6  ;SETUP STACK
8678 034350 016767 143460 144452  MOV    34,SLOC00  ;SAVE OLD VECTOR
8679 034356 016767 143422 144446  MOV    4,SLOC01   ;SAVE IN CASE OF HALT
8680 034364 012767 034420 143412  MOV    @MTPAH,4   ;SETUP HALT TRAP
8681 034372 012767 034426 143434  MOV    @MTPAA,34  ;SETUP NEW TRAP VECTOR
8682 034400 000167 000022          JMP    MTPAA      ;GO INTO LOOPING CODE
8683
8684 034404 000000          MTPAL:  HALT     ;SET TO A ZERO
8685                                ;TRAP INSTRUCTION FAILED TO TRAP
8686 034406 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
8687 034410 001052          .WORD  1052        ;UNIQUE ERROR NUMBER
8688 034412 001127          .WORD  CPUERR      ;ADDRESS OF ERROR MESSAGE
8689                                ;EXAMINE OPCCODE AT LOCATION MTPAL:
8690
8691 034414 000167 000006          JMP    MTPAA      ;ATTEMPT TO GO ON
8692
8693                                ;
8694 034420          MTPAH:
8695 034420 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
8696 034422 001053          .WORD  1053        ;UNIQUE ERROR NUMBER
8697 034424 001127          .WORD  CPUERR      ;ADDRESS OF ERROR MESSAGE
8698
8699                                ;OR TRAP INSTRUCTION FAILED
8700 034426          MTPAA:
8701 034426 005203          INC    R3         ;GET NEXT OPCODE
8702
    
```

```

8703 034430 012706 001000      MOV      #STBOT,R6      ;RESTORE STACK
8704 034434 020327 000400      CMP      R3,#400      ;SEE IF LAST OPCODE
8705 034440 001406              BEQ      MTPAE         ;BRANCH IF DONE
8706 034442 012767 104400 177734  MOV      #104400,MTPAL ;TRAP OPCODE INTO LOCATION
8707 034450 060367 177730      ADD      R3,MTPAL     ;FORM TEST OPCODE
8708 034454 000753              BR       MTPAL        ;EXECUTE TEST
8709 034456              MTPAE:
8710
8711 034456 016767 144346 143350      MOV      SLOC00,34
8712 034464 016767 144342 143312      MOV      SLOC01,4      ;RESTORE VECTORS
8713
8714 034472 012706 001000      MOV      #STBOT,R6
8715
8716
8717
8718 034476      MIOT:
8719      ;*****
8720      ;*TEST 241      TEST IOT TRAP
8721      ;*****
8722      TST241:
8723 034476 005267 144302      INC      #TESTN        ;INCREMENT TEST NUMBER
8724 034502 012706 001000      MOV      #STBOT,R6     ;SETUP STACK
8725 034506 016767 143306 144314  MOV      20,SLOC00     ;SAVE OLD VECTOR
8726 034514 012767 034532 143276  MOV      #MIOTB,20     ;SETUP NEW IOT VECTOR
8727 034522 000004              IOT                  ;***TEST INSTRUCTION***
8728                          ;ERROR! DIDNT TAKE CORRECT TRAP
8729 034524      MIOTA:
8730 034524 104000      ERROR                      ;ALL ERRORS TO TRAP TO EMT VECTOR
8731 034526 001054      .WORD 1054                 ;UNIQUE ERROR NUMBER
8732 034530 001127      .WORD CPUERR              ;ADDRESS OF ERROR MESSAGE
8733 034532 022706 000774      MIOTB: CMP      #STBOT-4,R6 ;VERIFY SP DECRIMENT
8734 034536 001403      BEQ      MIOTD            ;BRANCH IF GOOD
8735                          ;BAD PC ON STACK
8736 034540 104000      ERROR                      ;ALL ERRORS TO TRAP TO EMT VECTOR
8737 034542 001055      .WORD 1055                 ;UNIQUE ERROR NUMBER
8738 034544 001127      .WORD CPUERR              ;ADDRESS OF ERROR MESSAGE
8739 034546 021627 034524      MIOTD: CMP      (R6),#MIOTA  ;VERIFY PROPER PC ON STACK
8740 034552 001403      BEQ      MIOTF            ;BRANCH IF GOOD
8741                          ;INCORRECT PC ON STACK
8742 034554 104000      ERROR                      ;ALL ERRORS TO TRAP TO EMT VECTOR
8743 034556 001056      .WORD 1056                 ;UNIQUE ERROR NUMBER
8744 034560 001127      .WORD CPUERR              ;ADDRESS OF ERROR MESSAGE
8745 034562 016767 144242 143230  MIOTF: MOV      SLOC00,20     ;RESTORE VECTOR
8746 034570 012706 001000      MOV      #STBOT,R6
8747
8748 034574      MITO:
8749      ;*****
8750      ;*TEST 242      TEST OLD STATUS ON IOT TRAP
8751      ;*****
8752      TST242:
8753 034574 005267 144204      INC      #TESTN        ;INCREMENT TEST NUMBER
8754 034600 012706 001000      MOV      #STBOT,R6     ;SETUP STACK
8755 034604 016767 143210 144216  MOV      20,SLOC00     ;SAVE OLD VECTOR
8756 034612 012767 034636 143200  MOV      #MITOB,20     ;SETUP NEW IOT VECTOR
8757 034620 005067 143152      CLR      PS            ;CLEAR PRIORITY AND COND C
8758 034624 000257      CCC

```

```

8759 034626 000004 IOT ;DIDNT TAKE CORRECT TRAP
8760 ;
8761 034630 MITOA: ;
8762 034630 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
8763 034632 001057 .WORD 1057 ;UNIQUE ERROR NUMBER
8764 034634 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
8765 034636 026727 144134 000000 MITOB: CMP STBOT-2,#0 ;VERIFY PSW ON STACK
8766 034644 001403 BEQ MITOC ;BRANCH IF CORRECT STATUS
8767 ; ;BAD STATUS ON STACK
8768 034646 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
8769 034650 001060 .WORD 1060 ;UNIQUE ERROR NUMBER
8770 034652 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
8771 034654 012706 001000 MITOC: MOV #STBOT,R6 ;SETUP STACK
8772 034660 012767 034706 143132 MOV #MITOE,20 ;SET UP TRAP VECTOR
8773 034666 012767 000357 143102 MOV #357,PS ;SET PRIORITY
8774 034674 000277 SCC ;SET CONDITION CODES
8775 034676 000004 IOT ;
8776 ; ;DIDNT TAKE CORRECT TRAP
8777 034700 MITOD: ;
8778 034700 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
8779 034702 001061 .WORD 1061 ;UNIQUE ERROR NUMBER
8780 034704 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
8781 034706 026727 144064 000357 MITOE: CMP STBOT-2,#357 ;VERIFY OLD PSW ON STACK
8782 034714 001403 BEQ MITOF ;BRANCH IF GOOD
8783 ; ;OLD PSW INCORRECT
8784 034716 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
8785 034720 001062 .WORD 1062 ;UNIQUE ERROR NUMBER
8786 034722 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
8787 ; ;
8788 034724 016767 144100 143066 MITOF: MOV SLOC00,20 ;RESTORE VECTOR
8789 034732 012706 001000 MOV #STBOT,R6 ;
8790 ;
8791 ;
8792 034736 ;
8793 ;
8794 ;
8795 ;
8796 034736 ;
8797 034736 005267 144042 INC #TESTN ;INCREMENT TEST NUMBER
8798 034742 012706 001000 MOV #STBOT,R6 ;SETUP STACK
8799 034746 016767 143056 144054 MOV 30,SLOC00 ;SAVE OLD VECTOR
8800 034754 012767 035006 143046 MOV #METB,30 ;SETUP NEW EMT VECTOR
8801 034762 016767 143046 144042 MOV 34,SLOC01 ;SAVE TRAP VECTOR
8802 034770 012767 043470 143036 MOV #ERROR,34 ;SET UP TO HANDLE EMT ERROR
8803 034776 104000 EMT ;
8804 ; ;DIDNT TAKE CORRECT TRAP
8805 035000 META: ;
8806 035000 104400 TRAP ;ERROR TRAP
8807 035002 001063 .WORD 1063 ;ERROR NUMBER
8808 035004 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
8809 035006 022706 000774 METB: CMP #STBOT-4,R6 ;VERIFY SP DECRIMENT
8810 035012 001403 BEQ METD ;BRANCH IF GOOD
8811 ; ;BAD PC ON STACK
8812 035014 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
8813 035016 001064 .WORD 1064 ;UNIQUE ERROR NUMBER
8814 035020 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE

```

8815	035022	021627	035000			METD:	CMP	(R6),#META		;VERIFY PROPER PC ON STACK
8816	035026	001403					BEQ	METF		;BRANCH IF GOOD
8817										;INCORRECT PC ON STACK
8818	035030	104000					ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
8819	035032	001065					.WORD	1065		;UNIQUE ERROR NUMBER
8820	035034	001127					.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
8821	035036	016767	143770	142770		METF:	MOV	SLOC01,34		;RESTORE VECTOR
8822	035044	016767	143760	142756			MOV	SLOC00,30		;RESTORE VECTOR
8823	035052	012706	001000				MOV	#STBOT,R6		
8824										
8825										
8826	035056									
8827										
8828										
8829										
8830	035056									
8831	035056	005267	143722				INC	#TESTN		;INCREMENT TEST NUMBER
8832	035062	012706	001000				MOV	#STBOT,R6		;SETUP STACK
8833	035066	016767	142736	143734			MOV	30,SLOC00		;SAVE OLD VECTOR
8834	035074	012767	035134	142726			MOV	#METOB,30		;SETUP NEW EMT VECTOR
8835	035102	016767	142726	143722			MOV	34,SLOC01		;SAVE TRAP VECTOR
8836	035110	012767	043470	142716			MOV	#ERROR,34		;SET UP TRAP VECTOR
8837	035116	005067	142654				CLR	PS		;CLEAR PRIORITY AND COND C
8838	035122	(0257					CCC			
8839	035124	104000					EMT			
8840										;DIDNT TAKE CORRECT TRAP
8841	035126					METOA:				
8842	035126	104400					TRAP			;ERROR TRAP
8843	035130	001066					.WORD	1066		;ERROR NUMBER
8844	035132	001127					.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
8845	035134	026727	143636	000000		METOB:	CMP	STBOT-2,#0		;VERIFY PSW ON STACK
8846	035142	001403					BEQ	METOC		;BRANCH IF CORRECT STATUS
8847										;BAD STATUS ON STACK
8848	035144	104000					ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
8849	035146	001067					.WORD	1067		;UNIQUE ERROR NUMBER
8850	035150	001127					.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
8851	035152	012706	001000			METOC:	MOV	#STBOT,R6		;SETUP STACK
8852	035156	012767	035204	142644			MOV	#METOE,30		;SET UP TRAP VECTOR
8853	035164	012767	000357	142604			MOV	#357,PS		;SET PRIORITY
8854	035172	000277					SCC			;SET CONDITION CODES
8855	035174	104000					EMT			
8856										;DIDNT TAKE CORRECT TRAP
8857	035176					METOD:				
8858	035176	104400					TRAP			;ERROR TRAP
8859	035200	001070					.WORD	1070		;ERROR NUMBER
8860	035202	001127					.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
8861	035204	026727	143566	000357		METOE:	CMP	STBOT-2,#357		;VERIFY OLD PSW ON STACK
8862	035212	001403					BEQ	METOF		;BRANCH IF GOOD
8863										;OLD PSW INCORRECT
8864	035214	104000					ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
8865	035216	001071					.WORD	1071		;UNIQUE ERROR NUMBER
8866	035220	001127					.WORD	CPUERR		;ADDRESS OF ERROR MESSAGE
8867	035222					METOF:				
8868	035222	016767	143604	142604			MOV	SLOC01,34		;RESTORE VECTOR
8869	035230	016767	143574	142572			MOV	SLOC00,30		;RESTORE VECTOR
8870	035236	012706	001000				MOV	#STBOT,R6		


```

8927 035414 001076 .WORD 1076 ;UNIQUE ERROR NUMBER
8928 035416 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
8929 035420 012706 001000 MBTOC: MOV #STBOT,R6 ;SETUP STACK
8930 035424 012767 035452 142362 MOV #MBTOE,14 ;SET UP TRAP VECTOR
8931 035432 012767 000357 142336 MOV #357,PS ;SET PRIORITY
8932 035440 000277 SCC ;SET CONDITION CODES
8933 035442 000003 BPT
8934 ;DIDNT TAKE CORRECT TRAP
8935 035444 MBTOD: ;
8936 035444 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
8937 035446 001077 .WORD 1077 ;UNIQUE ERROR NUMBER
8938 035450 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
8939 035452 026727 143320 000357 MBTOE: CMP STBOT-2,#357 ;VERIFY OLD PSW ON STACK
8940 035460 001403 BEQ MBTOF ;BRANCH IF GOOD
8941 ;OLD PSW INCORRECT
8942 035462 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
8943 035464 001100 .WORD 1100 ;UNIQUE ERROR NUMBER
8944 035466 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
8945 MBTOF: ;
8946 035470 016767 143334 142316 MOV SLOC00,14 ;RESTORE VECTOR
8947 035476 012706 001000 MOV #STBOT,R6
8948 ;
8949 ;
8950 ;
8951 035502 MIL: ;
8952 ;*****
8953 ;*TEST 247 TEST ILLEGAL JUMP INSTRUCTION TRAP
8954 ;*****
8955 035502 TST247: ;
8956 035502 005267 143276 INC #TESTN ;INCREMENT TEST NUMBER
8957 035506 012706 001000 MOV #STBOT,R6 ;SETUP STACK
8958 035512 016767 142272 143310 MOV 10,SLOC00 ;SAVE OLD VECTOR
8959 035520 012767 035540 142262 MOV #MILB,10 ;SETUP NEW ILLEGAL VECTOR
8960 035526 005001 CLR R1
8961 035530 000101 JMP R1 ;**TEST INSTRUCTIO
8962 ;DIDNT TAKE CORRECT TRAP
8963 035532 MILA: ;
8964 035532 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
8965 035534 001101 .WORD 1101 ;UNIQUE ERROR NUMBER
8966 035536 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
8967 035540 022706 000774 MILB: CMP #STBOT-4,R6 ;VERIFY SP DECRIMENT
8968 035544 001403 BEQ MILD ;BRANCH IF GOOD
8969 ;BAD PC ON STACK
8970 035546 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
8971 035550 001102 .WORD 1102 ;UNIQUE ERROR NUMBER
8972 035552 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
8973 035554 021627 035532 MILD: CMP (R6),#MILA ;VERIFY PROPER PC ON STACK
8974 035560 001403 BEQ MILF ;BRANCH IF GOOD
8975 ;INCORRECT PC ON STACK
8976 035562 104000 ERROR ;ALL FRRORS TO TRAP TO EMT VECTOR
8977 035564 001103 .WORD 1103 ;UNIQUE ERROR NUMBER
8978 035566 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
8979 035570 016767 143234 142212 MILF: MOV SLOC00,10 ;RESTORE VECTOR
8980 035576 012706 001000 MOV #STBOT,R6
8981 ;
8982 035602 MILO: ;

```

```

8983 ;*****
8984 ;*TEST 250 TEST OLD STATUS ON ILLEGAL JUMP TRAP
8985 ;*****
8986 TST250:
8987 035602 005267 143176 INC #TESTN ;INCREMENT TEST NUMBER
8988 035606 012706 001000 MOV #STBOT,R6 ;SETUP STACK
8989 035612 016767 142172 143210 MOV 10,SLOC00 ;SAVE OLD VECTOR
8990 035620 012767 035646 142162 MOV #MILOB,10 ;SETUP NEW ILLEGAL VECTOR
8991 035626 005067 142144 CLR PS ;CLEAR PRIORITY AND COND C
8992 035632 000257 CCC
8993 035634 005001 CLR R1
8994 035636 000101 JMP R1
8995 ;DIDNT TAKE CORRECT TRAP
8996 035640 MILOA:
8997 035640 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
8998 035642 001104 .WORD 1104 ;UNIQUE ERROR NUMBER
8999 035644 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
9000 035646 026727 143124 000004 MILOB: CMP STBOT-2,#4 ;VERIFY PSW ON STACK
9001 035654 001403 BEQ MILOC ;BRANCH IF CORRECT STATUS
9002 ;BAD STATUS ON STACK
9003 035656 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
9004 035660 001105 .WORD 1105 ;UNIQUE ERROR NUMBER
9005 035662 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
9006 035664 012706 001000 MILOC: MOV #STBOT,R6 ;SETUP STACK
9007 035670 012767 035716 142112 MOV #MILOE,10 ;SET UP TRAP VECTOR
9008 035676 012767 000357 142072 MOV #357,PS ;SET PRIORITY
9009 035704 000277 SCC ;SET CONDITION CODES
9010 035706 000101 JMP R1
9011 ;DIDNT TAKE CORRECT TRAP
9012 035710 MILOD:
9013 035710 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
9014 035712 001106 .WORD 1106 ;UNIQUE ERROR NUMBER
9015 035714 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
9016 035716 026727 143054 000357 MILOE: CMP STBOT-2,#357 ;VERIFY OLD PSW ON STACK
9017 035724 001403 BEQ MILOF ;BRANCH IF GOOD
9018 ;OLD PSW INCORRECT
9019 035726 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
9020 035730 001107 .WORD 1107 ;UNIQUE ERROR NUMBER
9021 035732 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
9022 035734 MILOF:
9023 035734 016767 143070 142046 MOV SLOC00,10 ;RESTORE VECTOR
9024 035742 012706 001000 MOV #STBOT,R6
9025
9026 ;
9027 ;
9028 035746 MIALL:
9029 ;*****
9030 ;*TEST 251 TEST ILLEGAL JSR INSTRUCTION TRAP
9031 ;*****
9032 TST251:
9033 035746 005267 143032 INC #TESTN ;INCREMENT TEST NUMBER
9034 035752 012706 001000 MOV #STBOT,R6 ;SETUP STACK
9035 035756 016767 142026 143044 MOV 10,SLOC00 ;SAVE OLD VECTOR
9036 035764 012767 036004 142016 MOV #MIALLB,10 ;SETUP NEW ILLEGAL VECTOR
9037 035772 005003 CLR R3
9038 035774 004303 JSR R3,R3

```

```

9039                                     ;DIDNT TAKE CORRECT TRAP
9040 035776                               MIALLA: ERROR                                     ;ALL ERRORS TO TRAP TO EMT VECTOR
9041 035776 104000                        .WORD 1110                               ;UNIQUE ERROR NUMBER
9042 036000 001110                        .WORD CPUERR                            ;ADDRESS OF ERROR MESSAGE
9043 036002 001127                        .WORD #STBOT-4,R6                       ;VERIFY SP D'CRIMENT
9044 036004 022706 000774                MIALLB: CMP MIALLD                        ;BRANCH IF GOOD
9045 036010 001403                        BEQ                                       ;BAD PC ON STACK
9046                                     ;ALL ERRORS TO TRAP TO EMT VECTOR
9047 036012 104000                        .WORD 1111                               ;UNIQUE ERROR NUMBER
9048 036014 001111                        .WORD CPUERR                            ;ADDRESS OF ERROR MESSAGE
9049 036016 001127                        .WORD (R6),#MIALLA                      ;VERFY PROPER PC ON STACK
9050 036020 021627 035776                MIALLD: CMP MIALLF                       ;BRANCH IF GOOD
9051 036024 001403                        BEQ                                       ;INCORRECT PC ON STACK
9052                                     ;ALL ERRORS TO TRAP TO EMT VECTOR
9053 036026 104000                        .WORD 1112                               ;UNIQUE ERROR NUMBER
9054 036030 001112                        .WORD CPUERR                            ;ADDRESS OF ERROR MESSAGE
9055 036032 001127                        .WORD SLOC00,10                         ;RESTORE VECTOR
9056 036034 016767 142770 141746        MIALLF: MOV #STBOT,R6
9057 036042 012706 001000                MOV
9058                                     ;
9059                                     ;
9060                                     ;
9061 036046                               MJSI:
9062                                     ;*****
9063                                     ;*TEST 252 TEST OLD STATUS ON ILLEGAL JSR TRAP
9064                                     ;*****
9065 TST252:
9066 036046 005267 142732                INC #TESTN                               ;INCREMENT TEST NUMBER
9067 036052 012706 001000                MOV #STBOT,R6                           ;SETUP STACK
9068 036056 016767 141726 142744        MOV 10,SLOC00                            ;SAVE OLD VECTOR
9069 036064 012767 036112 141716        MOV #MJSIB,10                            ;SETUP NEW VECTOR
9070 036072 005067 141700                CLR PS                                   ;CLEAR PRIORITY AND COND C
9071 036076 000257                        CCC
9072 036100 005003                        CLR R3
9073 036102 004303                        JSR R3,R3
9074                                     ;DIDNT TAKE CORRECT TRAP
9075 036104                               MJSIA: ERROR                               ;ALL ERRORS TO TRAP TO EMT VECTOR
9076 036104 104000                        .WORD 1113                               ;UNIQUE ERROR NUMBER
9077 036106 001113                        .WORD CPUERR                            ;ADDRESS OF ERROR MESSAGE
9078 036110 001127                        .WORD STBOT-2,#4                        ;VERIFY PSM ON STACK
9079 036112 026727 142660 000004        MJSIB: CMP MJSIC                          ;BRANCH IF CORRECT STATUS
9080 036120 001403                        BEQ                                       ;BAD STATUS ON STACK
9081                                     ;ALL ERRORS TO TRAP TO EMT VECTOR
9082 036122 104000                        .WORD 1114                               ;UNIQUE ERROR NUMBER
9083 036124 001114                        .WORD CPUERR                            ;ADDRESS OF ERROR MESSAGE
9084 036126 001127                        .WORD #STBOT,R6                         ;SETUP STACK
9085 036130 012706 001000                MJSIC: MOV #MJSIE,10                    ;SET UP TRAP VECTOR
9086 036134 012767 036162 141646        MOV #357,PS                              ;SET PRIORITY
9087 036142 012767 000357 141626        SCC                                       ;SET CONDITION CODES
9088 036150 000277                        JSR R3,R3
9089 036152 004303
9090                                     ;DIDNT TAKE CORRECT TRAP
9091 036154                               MJSID: ERROR                               ;ALL ERRORS TO TRAP TO EMT VECTOR
9092 036154 104000                        .WORD 1115                               ;UNIQUE ERROR NUMBER
9093 036156 001115                        .WORD CPUERR                            ;ADDRESS OF ERROR MESSAGE
9094 036160 001127
    
```



```

9095 036162 026727 142610 000357 MJSIE: CMP STBOT-2,#357 ;VERIFY OLD PSW ON STACK
9096 036170 001403 BEQ MJSIF ;BRANCH IF GOOD
9097 ;OLD PSW INCORRECT
9098 036172 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
9099 036174 001116 .WORD 1116 ;UNIQUE ERROR NUMBER
9100 036176 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
9101 036200 MJSIF:
9102 036200 016767 142624 141602 MOV SLOC00,10 ;RESTORE VECTOR
9103 036206 012706 001000 MOV #STBOT,R6
9104 ;
9105 ;
9106 ;
9107 ;*****
9108 ;*TEST 253 I/O TIME OUT TEST
9109 ;*****
9110 TST253:
9111 036212 INC #TESTN ;INCREMENT TEST NUMBER
9112 036216 005267 142566 CLR CPEREG ;CLEAR CPU ERROR REGISTER
9113 036222 016767 141556 142600 MOV 4,SLOC00 ;SAVE VECTOR
9114 036230 012767 036256 141546 MOV #2#,4 ;SET UP VECTOR TO HANDLE NXM
9115 036236 012767 030000 141532 MOV #30000,PS ;INIT THE PSW TO A KNOWN STATE
9116 036244 005737 177700 TST #177700 ;TRY TO ACCESS HARDWARE ADDRESS
9117 ;FOR GENERAL PURPOSE REG 0. THIS
9118 ;IS NOT IMPLEMENTED ON KDJ11
9119 ;SHOULD CAUSE TIME OUT.
9120 1#:
9121 036250 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
9122 036252 104000 .WORD 1117 ;UNIQUE ERROR NUMBER
9123 036254 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
9124 036256 022767 000020 141502 2#: CMP #BIT04,CPEREG ;IS CPU ERROR REGISTER CORRECT?
9125 036264 001403 BEQ 3#
9126 036266 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
9127 036270 001120 .WORD 1120 ;UNIQUE ERROR NUMBER
9128 036272 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
9129 036274 022627 036250 3#: CMP (SP)+,#1# ;CHECK THAT STACK CONTAINS CORRECT ADDR.
9130 036300 001403 BEQ 4#
9131 036302 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
9132 036304 001121 .WORD 1121 ;UNIQUE ERROR NUMBER
9133 036306 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
9134 036310 022627 030000 4#: CMP (SP)+,#30000 ;IS THE PSW OK?
9135 036314 001403 BEQ 5#
9136 036316 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
9137 036320 001122 .WORD 1122 ;UNIQUE ERROR NUMBER
9138 036322 001127 .WORD CPUERR ;ADDRESS OF ERROR MESSAGE
9139 036324 005067 141436 5#: CLR CPEREG ;CLEAR THE CPU ERROR REGISTER
9140 036330 016767 142474 141446 MOV SLOC00,4 ;RESTORE VECTOR
9141 ;
9142 ;
9143 ;*****
9144 ;*TEST 254 ODD ADDRESS/ILLEGAL INST FETCH TRAP TEST
9145 ;*****
9146 ;THIS PROGRAM GENERATES AN ODD ADDRESS IN THE PC. THE KDJ11 SHOULD
9147 ;TRAP THROUGH ADDR 4
9148 ;*****
9148 036336 TST254:
9149 036336 005267 142442 INC #TESTN ;INCREMENT TEST NUMBER
9150 036342 005067 141420 CLR CPEREG ;INIT THE CPU ERROR REG
    
```


SW4	000020	284#			
SW5	000040	283#			
SW6	000100	282#			
SW7	000200	281#			
SW8	000400	280#			
SW9	001000	279#			
SXT	***** U	5126			
SXTCC	***** U	5038			
S11	***** U	2706			
S22	***** U	2852			
S33	***** U	2974			
S77	***** U	3118			
TAGRAM	000001	1#	738		
TA114	021552	5897	5905#		
TA116	023620	6425	6434	6469#	6493
TBITVE	000014	321#			
TB114	021566	5906	5912#		
TC114	021602	5913	5919#		
TD114	021616	5920	5926#		
TE102	017756	5376#			
TE103	020010	5393#			
TE104	020042	5410#			
TE105	020074	5427#			
TE106	020126	5444#			
TE107	020160	5461#			
TE110	020212	5478#			
TE111	020244	5495#			
TE112	020276	5512#			
TE113	020574	5611#			
TE113A	021070	5710#			
TE114	021356	5852#			
TE115	023060	6293#			
TE115A	023330	6301	6324	6347	6381#
TE115B	023340	6302	6325	6348	6385#
TE115C	023346	6303	6326	6388#	
TE115D	023354	6349	6391#		
TE115F	023362	6377	6394#		
TE116	023364	6396#			
TE116A	023674	6421	6430	6496#	
TE116B	023700	6405	6431	6500#	
TE116C	023712	6414	6422	6505#	
TE116D	023722	6404	6413	6423	6432 6509#
TE117	023732	6516#			
TE117A	024070	6523	6562#		
TE120	024076	6570#			
TE120A	024162	6580	6594#		
TE121	024262	6626#			
TE122	024730	6752#			
TE123	025214	6838#			
TE124	025470	6926#			
TE125	025756	7018#			
TE125A	026266	7025	7069	7123#	
TE126	026514	7214#			
TE126A	026572	7225	7234#		
TE126B	027366	7368	7421#		
TE127	027704	7543#			

TE127A	032154	7592	7635*						
TE130	030414	7737*							
TE130A	030762	7811	7862*						
TF114	021632	5927	5933*						
TG114	021646	5934	5940*						
TH114	021662	5941	5947*						
TKVEC	000060	328*							
TP	***** U	8590							
TPA	***** U	8670							
TPO	***** U	8625							
TPVEC	000064	329*	9599	9600	9601*	9602*	9625*	9626*	
TRAPVE	000034	327*	702*	703*					
TRPO	***** U	8239							
TRPOA	032502	8248	8254*						
TRPOB	032520	8250	8260*						
TRTVEC	000014	322*							
TRY	***** U	8071							
TRYM	***** U	8113							
TRYMA	032002	8122	8130*						
TRYMB	032040	8134	8141*						
TRYMC	032072	8144	8151*						
TSGPRO	***** U	875							
TSGPR1	***** U	912							
TSGPR2	***** U	949							
TSGPR3	***** U	986							
TSGPR4	***** U	1023							
TSGPR5	***** U	1060							
TSGPR6	***** U	1097							
TSMUO	014130	4116*							
TSPSWB	***** U	1134							
TSTLOC	001076	644*							
TST1	001510	753*							
TST10	002044	916*							
TST100	010072	2978*							
TST101	010172	3012*							
TST102	010272	3053*							
TST103	010362	3093*							
TST104	010446	3122*							
TST105	010550	3155*							
TST106	010636	3189*							
TST107	010732	3226*							
TST11	002146	953*							
TST110	011024	3263*							
TST111	011114	3297*							
TST112	011164	3323*							
TST113	011236	3349*							
TST114	011304	3373*							
TST115	011356	3397*							
TST116	011422	3419*							
TST117	011454	3439*							
TST12	002250	990*							
TST120	011512	3462*							
TST121	012070	3588*							
TST122	012434	3708*							
TST123	012624	3781*							
TST124	013476	3987*							

GLOBAL AREA^C MACy11 30A(1052) 15 MAR 84 13:28 PAGE 214
KDJ11A.MAC 22 FEB-84 15:12 CROSS REFERENCE TABLE

USER SYMBOLS

TST125	014030	4079#
TST126	014130	4120#
TST127	014746	4315#
TST13	002352	1027#
TST130	015026	4350#
TST131	015112	4387#
TST132	015200	4425#
TST133	015262	4461#
TST134	015360	4506#
TST135	015454	4552#
TST136	015550	4596#
TST137	015652	4643#
TST14	002454	1064#
TST140	016020	4713#
TST141	016104	4749#
TST142	016204	4793#
TST143	016310	4845#
TST144	016412	4899#
TST145	016516	4936#
TST146	016622	4988#
TST147	016736	5042#
TST15	002556	1101#
TST150	017022	5080#
TST151	017134	5134#
TST152	017276	5195#
TST153	017372	5232#
TST154	017466	5270#
TST155	017672	5346#
TST156	017724	5363#
TST157	017756	5380#
TST16	002664	1138#
TST160	020010	5397#
TST161	020042	5414#
TST162	020074	5431#
TST163	020126	5448#
TST164	020160	5465#
TST165	020212	5482#
TST166	020244	5499#
TST167	020276	5516#
TST17	003006	1177#
TST170	020574	5615#
TST171	021070	5714#
TST172	021356	5856#
TST173	021664	5953#
TST174	022236	6075#
TST175	022340	6112#
TST176	022442	6149#
TST177	022544	6186#
TST2	001550	785#
TST20	003044	1202#
TST200	022646	6223#
TST201	022750	6260#
TST202	023060	6297#
TST203	023364	6400#
TST204	023732	6520#
TST205	024076	6574#

TST206	024262	6630#
TST207	024730	6756#
TST21	003104	1229#
TST210	025214	6842#
TST211	025470	6930#
TST212	025756	7022#
TST213	026514	7218#
TST214	027704	7547#
TST215	030414	7741#
TST216	031372	8020#
TST217	031570	8075#
TST22	003150	1258#
TST220	031732	8117#
TST221	032110	8161#
TST222	032216	8189#
TST223	032324	8217#
TST224	032432	8243#
TST225	032544	8272#
TST226	032656	8301#
TST227	032766	8329#
TST23	003222	1290#
TST230	033072	8355#
TST231	033176	8384#
TST232	033312	8422#
TST233	033430	8461#
TST234	033630	8517#
TST235	033726	8550#
TST236	034070	8594#
TST237	034174	8629#
TST24	003300	1323#
TST240	034336	8674#
TST241	034476	8722#
TST242	034574	8752#
TST243	034736	8796#
TST244	035056	8830#
TST245	035242	8878#
TST246	035340	8910#
TST247	035502	8955#
TST25	003356	1356#
TST250	035602	8986#
TST251	035746	9032#
TST252	036046	9065#
TST253	036212	9110#
TST254	036336	9148#
TST255	036626	9224#
TST256	037046	9278#
TST257	037114	9298#
TST26	003430	1387#
TST260	037250	9351#
TST261	037354	9390#
TST262	037464	9431#
TST263	037552	9467#
TST264	040002	9550#
TST265	040134	9592#
TST266	040314	9639#
TST267	040374	9665#

TST27	003510	1421#	
TST270	040556	9714#	
TST271	040712	9748#	
TST272	040750	9768#	
TST273	041046	9802#	
TST274	041144	9830#	
TST275	041416	9891#	
TST276	041550	9929#	
TST3	001600	807#	
TST30	003564	1453#	
TST31	003730	1517#	
TST32	004012	1552#	
TST33	004110	1596#	
TST34	004172	1631#	
TST35	004326	1694#	
TST36	004444	1741#	
TST37	004602	1799#	
TST4	001630	827#	
TST40	004710	1842#	
TST41	004772	1875#	
TST42	005020	1896#	
TST43	005100	1931#	
TST44	005150	1962#	
TST45	005230	1997#	
TST46	005314	2034#	
TST47	005376	2070#	
TST5	001660	846#	
TST50	005462	2107#	
TST51	005562	2150#	
TST52	005646	2187#	
TST53	005734	2225#	
TST54	006006	2257#	
TST55	006062	2289#	
TST56	006130	2319#	
TST57	006206	2353#	
TST6	001710	862#	
TST60	006270	2387#	
TST61	006360	2425#	
TST62	006414	2447#	
TST63	006460	2476#	
TST64	006530	2507#	
TST65	006610	2541#	
TST66	006710	2583#	
TST67	007022	2632#	
TST7	001742	879#	
TST70	007152	2686#	
TST71	007220	2710#	
TST72	007270	2734#	
TST73	007374	2779#	
TST74	007474	2820#	
TST75	007562	2856#	
TST76	007646	2888#	
TST77	007754	2929#	
TT	= ***** U	8380	8418
TTR	= ***** U	8457	
TYPDS	= 104405	9992	10328#

TYPE	9980	9990	9993	10060	10182	10251	10324#	10405	10408	10411
TYPOC = 104402	10325#	10410	10413							
TYPON = 104404	10327#									
TYPOS = 104403	10326#									
T114 021524	5871	5884	5896#							
T116 023556	6407	6416	6449#	6466						
T122A 025042	6762	6776	6789#							
T122B 025174	6760	6828#								
T123A 025426	6847	6905#								
T123B 025436	6909#									
T123C 025444	6912#									
T123D 025452	6851	6916#								
T123E 025460	6895	6921#								
T123F 025464	6902	6923#								
T124A 025714	6935	6998#								
T124B 025724	7002#									
T124C 025732	7005#									
T124D 025740	6939	7009#								
T124E 025746	6988	7013#								
T124F 025752	6995	7015#								
UDPAR0= 177660	379#									
UDPAR1= 177662	380#									
UDPAR2= 177664	381#									
UDPAR3= 177666	382#									
UDPAR4= 177670	383#									
UDPAR5= 177672	384#									
UDPAR6= 177674	385#									
UDPAR7= 177676	386#									
UDPDR0= 177620	357#									
UDPDR1= 177622	358#									
UDPDR2= 177624	359#									
UDPDR3= 177626	360#									
UDPDR4= 177630	361#									
UDPDR5= 177632	362#									
UDPDR6= 177634	363#									
UDPDR7= 177636	364#									
UIPAR0= 177640	368#									
UIPAR1= 177642	369#									
UIPAR2= 177644	370#									
UIPAR3= 177646	371#									
UIPAR4= 177650	372#									
UIPAR5= 177652	373#									
UIPAR6= 177654	374#									
UIPAR7= 177656	375#									
UIPDR0= 177600	346#									
UIPDR1= 177602	347#									
UIPDR2= 177604	348#									
UIPDR3= 177606	349#									
UIPDR4= 177610	350#									
UIPDR5= 177612	351#									
UIPDR6= 177614	352#									
UIPDR7= 177616	353#									
UNXPIR 037346	9302	9376#								
WAITIN 001074	641#	9726	9776	9809	9837	9848	9859	9872	9897	
XBUF = 177566	499#									
XCSR = 177564	498#	9603*	9611*							

USER SYMBOLS

		7019#	7215#	7544#	7738#	8017#	8072#	8114#	8158#	8186#	8214#	8240#	8269#	8298#
		8326#	8352#	8381#	8419#	8458#	8514#	8547#	8591#	8626#	8671#	8719#	8749#	8793#
		8827#	8875#	8907#	8952#	8983#	9029#	9062#	9107#	9142#	9144	9221#	9275#	9295#
		9344#	9346	9385#	9387	9425#	9427	9456#	9458	9538#	9540	9589#	9633#	9635
		9659#	9661	9708#	9710	9742#	9744	9762#	9764	9791#	9793	9827#	9888#	9926#
\$OCNT	043146	10223#	10252#	10265#										
\$OMODE	043150	10218#	10222#	10227	10230#	10241#	10267#							
\$PASS	001006	589#	704#	730#	9596	9978	9982#	9983#	9991	10004				
\$PASTM	000212	565#												
\$PATCH	043636 G	10422#												
\$QUES	042474	10121#												
\$RDCMR=	***** U	10331												
\$RDDEC=	***** U	10331												
\$RDLIN=	***** U	10331												
\$RDOCT=	***** U	10331												
\$RTNAD	042030	10003#												
\$R2A =	***** U	10331												
\$SAVRE=	***** U	10331												
\$SETUP=	000126	508#	699	700	702	704	706	707	9982					
\$STUP =	177777	508#												
\$SVPC =	000204	540#	545											
\$SWR =	160000	212	213#	707	755	787	809	829	848	864	881	918	955	992
		1029	1066	1103	1140	1179	1204	1231	1260	1292	1325	1358	1389	1423
		1455	1519	1554	1598	1633	1696	1743	1801	1844	1878	1898	1933	1964
		1999	2036	2072	2109	2152	2189	2227	2259	2291	2321	2355	2389	2427
		2449	2478	2509	2543	2585	2634	2688	2712	2736	2781	2822	2858	2890
		2931	2980	3014	3055	3095	3124	3157	3191	3228	3265	3299	3325	3351
		3375	3399	3421	3441	3464	3590	3710	3783	3989	4081	4122	4317	4352
		4389	4427	4463	4508	4554	4598	4645	4715	4751	4795	4847	4901	4938
		4990	5044	5082	5136	5197	5234	5272	5348	5365	5382	5399	5416	5433
		5450	5467	5484	5501	5518	5617	5716	5858	5955	6077	6114	6151	6188
		6225	6262	6299	6402	6522	6576	6632	6758	6844	6932	7024	7220	7549
		7743	8022	8077	8119	8163	8191	8219	8245	8274	8303	8331	8357	8386
		8424	8463	8519	8552	8596	8631	8676	8724	8754	8798	8832	8880	8912
		8957	8988	9034	9067	9112	9150	9226	9280	9300	9353	9392	9433	9469
		9552	9594	9641	9667	9716	9750	9770	9804	9832	9893	9931	9974	9982
		9996	10002	10004										
\$SWREG	001022	597#	733											
\$TESTN	001004	588#	738#	754#	786#	808#	828#	847#	863#	880#	917#	954#	991#	1028#
		1065#	1102#	1139#	1178#	1203#	1230#	1259#	1291#	1324#	1357#	1388#	1422#	1454#
		1518#	1553#	1597#	1632#	1695#	1742#	1800#	1843#	1877#	1897#	1932#	1963#	1998#
		2035#	2071#	2108#	2151#	2188#	2226#	2258#	2290#	2320#	2354#	2388#	2426#	2448#
		2477#	2508#	2542#	2584#	2633#	2687#	2711#	2735#	2780#	2821#	2857#	2889#	2930#
		2979#	3013#	3054#	3094#	3123#	3156#	3190#	3227#	3264#	3298#	3324#	3350#	3374#
		3398#	3420#	3440#	3463#	3589#	3709#	3782#	3988#	4080#	4121#	4316#	4351#	4388#
		4426#	4462#	4507#	4553#	4597#	4644#	4714#	4750#	4794#	4846#	4900#	4937#	4989#
		5043#	5081#	5135#	5196#	5233#	5271#	5347#	5364#	5381#	5398#	5415#	5432#	5449#
		5466#	5483#	5500#	5517#	5616#	5715#	5857#	5954#	6076#	6113#	6150#	6187#	6224#
		6261#	6298#	6401#	6521#	6575#	6631#	6757#	6843#	6931#	7023#	7219#	7548#	7742#
		8021#	8076#	8118#	8162#	8190#	8218#	8244#	8273#	8302#	8330#	8356#	8385#	8423#
		8462#	8518#	8551#	8595#	8630#	8675#	8723#	8753#	8797#	8831#	8879#	8911#	8956#
		8987#	9033#	9066#	9111#	9149#	9225#	9279#	9299#	9352#	9391#	9437#	9468#	9551#
		9593#	9640#	9666#	9715#	9718#	9749#	9769#	9803#	9831#	9892#	9930#		
\$TKB	042462	10086	10093	10114#										
\$TKS	042460	10084	10091	10113#										
\$TN =	000277	212#	748	755#	780	787#	804	809#	824	829#	843	848#	859	864#

		876	881#	913	918#	950	955#	987	992#	1024	1029#	1061	1066#	1098
		1103#	1135	1140#	1172	1179#	1199	1204#	1226	1231#	1255	1260#	1287	1292#
		1320	1325#	1353	1358#	1384	1389#	1418	1423#	1450	1455#	1514	1519#	1549
		1554#	1593	1598#	1628	1633#	1691	1696#	1738	1743#	1796	1801#	1839	1844#
		1873	1878#	1893	1898#	1928	1933#	1959	1964#	1994	1999#	2031	2036#	2067
		2072#	2104	2109#	2147	2152#	2184	2189#	2222	2227#	2254	2259#	2286	2291#
		2316	2321#	2350	2355#	2384	2389#	2422	2427#	2444	2449#	2473	2478#	2504
		2509#	2538	2543#	2580	2585#	2629	2634#	2683	2688#	2707	2712#	2731	2736#
		2776	2781#	2817	2822#	2853	2858#	2885	2890#	2926	2931#	2975	2980#	3009
		3014#	3050	3055#	3090	3095#	3119	3124#	3152	3157#	3186	3191#	3223	3228#
		3260	3265#	3294	3299#	3320	3325#	3346	3351#	3370	3375#	3394	3399#	3416
		3421#	3436	3441#	3459	3464#	3585	3590#	3705	3710#	3778	3783#	3984	3989#
		4076	4081#	4117	4122#	4312	4317#	4347	4352#	4384	4389#	4422	4427#	4458
		4463#	4501	4508#	4549	4554#	4593	4598#	4640	4645#	4710	4715#	4746	4751#
		4790	4795#	4842	4847#	4893	4901#	4933	4938#	4985	4990#	5039	5044#	5077
		5082#	5127	5136#	5192	5197#	5229	5234#	5267	5272#	5343	5348#	5360	5365#
		5377	5382#	5394	5399#	5411	5416#	5428	5433#	5445	5450#	5462	5467#	5479
		5484#	5496	5501#	5513	5518#	5612	5617#	5711	5716#	5853	5858#	5950	5955#
		6072	6077#	6109	6114#	6146	6151#	6183	6188#	6220	6225#	6257	6262#	6294
		6299#	6397	6402#	6517	6522#	6571	6576#	6627	6632#	6753	6758#	6839	6844#
		6927	6932#	7019	7024#	7215	7220#	7544	7549#	7738	7743#	8017	8022#	8072
		8077#	8114	8119#	8158	8163#	8186	8191#	8214	8219#	8240	8245#	8269	8274#
		8298	8303#	8326	8331#	8352	8357#	8381	8386#	8419	8424#	8458	8463#	8514
		8519#	8547	8552#	8591	8596#	8626	8631#	8671	8676#	8719	8724#	8749	8754#
		8793	8798#	8827	8832#	8875	8880#	8907	8912#	8952	8957#	8983	8988#	9029
		9034#	9062	9067#	9107	9112#	9142	9150#	9221	9226#	9275	9280#	9295	9300#
		9344	9353#	9385	9392#	9425	9433#	9456	9469#	9538	9552#	9589	9594#	9633
		9641#	9659	9667#	9708	9716#	9742	9750#	9762	9770#	9791	9804#	9827	9832#
		9888	9893#	9926	9931#									
\$TPB	042466	10102#	10116#											
\$TPFLG	042473	10034	10120#											
\$TPS	042464	10100	10115#											
\$TRAP	043152	702	10276#											
\$TRAP2	043174	10287#	10323											
\$TRP =	000006	10316#	10325#	10326#	10327#	10328#	10329#							
\$TRPAD	043206	10281	10323#											
\$TSTM	000210	564#												
\$TSTNU=	000001	501#												
\$TYPBN=	***** U	10329												
\$TYPDS	042500	10136#	10328											
\$TYPE	042124	10034#	10316	10324	10362									
\$TYPEC	042336	10064	10071	10078	10083#									
\$TYPEX	042456	10106	10108	10111#										
\$TYPOC	042750	10221#	10325											
\$TYPON	042764	10220	10223#	10327										
\$TYPOS	042724	10216#	10326											
\$UNIT	001012	591#												
\$UNITM	000214	566#												
\$USWR	001024	598#												
\$XOFF =	000023	10088	10115											
\$XON =	000021	10095	10115											
\$GET4=	000000	9996#												
\$OFILL	043147	10217#	10221#	10231	10266#									
\$4OCAT	000000	526#												
.	043656	511#	527	531#	540	541#	543#	545#	551	552#	554#	556#	568#	569#
		573#	574#	645#	681#	10004	10005#	10016#	10113	10114	10115	10116	10117	10118

N1

GLOBAL AREAS MACY11 30A(1052) 15 MAR 84 13:28 PAGE 221
KDJ11A.MAC 22 FEB 84 15:12 CROSS REFERENCE TABLE

USER SYMBOLS

SEQ 0220

.#ASTA= ***** U	10119	10120	10121	10122	10123#	10190#	10383#	10423#
.#X = 000204	10335	10338						
	551#	556	568	573				

BEV1MS	9631#	9635													
BEV2MS	9658#	9661													
BEV3MS	9707#	9710													
BEV4MS	9741#	9744													
BEV5MS	9761#	9764													
BEV6MS	9791#	9793													
BGNMOD	197#	740													
BGNSUB	198#	6300	6323	6346	6402	6410	6419	6428	6695	6758	6772	6785	7026	7070	7369
	7593	7812	8702												
BGNTST	197#	753	785	807	827	846	862	879	916	953	990	1027	1064	1101	1138
	1177	1202	1229	1258	1290	1323	1356	1387	1421	1453	1517	1552	1596	1631	1694
	1741	1799	1842	1876	1896	1931	1962	1997	2034	2070	2107	2150	2187	2225	2257
	2289	2319	2353	2387	2425	2447	2476	2507	2541	2583	2632	2686	2710	2734	2779
	2820	2856	2888	2929	2978	3012	3053	3093	3122	3155	3189	3226	3263	3297	3323
	3349	3373	3397	3419	3439	3462	3588	3708	3781	3987	4079	4120	4315	4350	4387
	4425	4461	4506	4552	4596	4643	4713	4749	4793	4845	4899	4936	4988	5042	5080
	5134	5195	5232	5270	5346	5363	5380	5397	5414	5431	5448	5465	5482	5499	5516
	5615	5714	5856	5953	6075	6112	6149	6186	6223	6260	6297	6400	6520	6574	6630
	6756	6842	6930	7022	7218	7547	7741	8020	8075	8117	8161	8189	8217	8243	8272
	8301	8329	8355	8384	8422	8461	8517	8550	8594	8629	8674	8722	8752	8796	8830
	8878	8910	8955	8986	9032	9065	9110	9148	9224	9278	9298	9351	9390	9431	9467
	9550	9592	9639	9665	9714	9748	9768	9802	9830	9891	9929				
CBITMS	4893#	4895													
CKLOOP	197#	3474	3482	3494	3505	3513	3525	3533	3546	3554	3568	3581	3720	3734	3744
	3760	3768	3799	3811	3827	3839	3854	3866	3883	3895	3911	3923	3939	3951	3966
	3978	4009	4029	4050	4069	4089	4096	4130	4138	4146	4154	4164	4172	4180	4188
	4203	4211	4219	4234	4242	4250	4263	4271	4279	4290	4298	4306	4329	4342	4366
	4379	4403	4417	4440	4453	4476	4496	4520	4533	4544	4567	4573	4588	4610	4624
	4635	4657	4670	4684	4696	4705	4728	4741	4766	4785	4806	4816	4827	4837	4858
	4868	4878	4888	4949	4959	4970	4980	5001	5012	5022	5034	5057	5072	5095	5108
	5121	5535	5544	5553	5562	5571	5580	5589	5598	5607	5625	5634	5643	5652	5661
	5670	5679	5688	5697	5706	5722	5728	5736	5744	5751	5759	5767	5773	5781	5789
	5797	5803	5811	5819	5827	5833	5841	5849	5878	5891	5903	5911	5918	5925	5932
	5939	5946	6312	6319	6336	6343	6360	6367	6457	6464	6476	6483	6490	6539	6549
	6556	6566	6590	6600	6607	6620	6646	6654	6662	6671	6680	6687	6694	6716	6726
	6734	6742	6769	6783	6866	6873	6882	6890	6901	6920	6960	6967	6976	6983	6994
	7039	7046	7053	7060	7084	7091	7099	7107	7114	7233	7241	7251	7265	7272	7279
	7290	7297	7304	7317	7325	7332	7339	7350	7357	7364	7382	7389	7396	7403	7411
	7559	7566	7577	7584	7591	7604	7611	7619	7755	7762	7769	7776	7788	7795	7802
	7824	7831	7839	7846	8690	8698									
COMMEN	331#														
DATA01	2884#														
DEFPRG	1#														
ENDCOM	331#														
ENDMOD	197#	9967													
ENDPAS	9968#	9990													
ENDSUB	198#	6322	6345	6376	6409	6418	6427	6436	6744	6771	7064	7118	7416	7630	7857
	8710														
END,ST	197#	777	801	821	840	855	873	909	946	983	1020	1057	1094	1132	1168
	1196	1223	1252	1284	1317	1350	1381	1415	1447	1511	1546	1590	1625	1687	1733
	1793	1836	1870	1889	1925	1956	1991	2028	2064	2101	2144	2181	2219	2251	2313
	2347	2381	2418	2441	2470	2501	2535	2577	2626	2680	2704	2728	2773	2814	2850
	2882	2923	2972	3006	3046	3079	3116	3149	3183	3220	3257	3291	3317	3343	3367
	3391	3413	3433	3455	3582	3702	3773	3981	4073	4115	4220	4344	4381	4419	4455
	4498	4546	4590	4637	4707	4743	4787	4839	4890	4929	4981	5036	5074	5123	5188
	5226	5264	5340	5356	5373	5390	5407	5424	5441	5458	5475	5492	5509	5608	5707

	5850	5892	6068	6105	6142	6179	6216	6253	6291	6378	6445	6558	6624	6749	6786
	6924	7016	7119	7417	7631	7858	8069	8110	8154	8183	8210	8238	8265	8294	8323
	8348	8377	8416	8456	8511	8543	8589	8622	8667	8715	8747	8790	8824	8871	8903
	8948	8981	9025	9058	9104	9141	9219	9272	9291	9339	9381	9420	9451	9533	9585
	9628	9656	9705	9740	9759	9789	9825	9886	9921	9965					
ERRDEF	1960	8805	8841	8857											
ERRDF	1970	764	773	790	797	817	835	851	868	885	892	899	906	922	929
	936	943	959	966	973	980	996	1003	1010	1017	1033	1040	1047	1054	1070
	1077	1084	1091	1107	1114	1121	1128	1144	1151	1158	1165	1183	1191	1209	1218
	1237	1247	1267	1279	1299	1312	1333	1345	1366	1376	1398	1410	1430	1442	1469
	1480	1494	1506	1529	1541	1566	1578	1585	1605	1620	1647	1658	1665	1676	1682
	1710	1721	1728	1758	1765	1772	1781	1788	1815	1822	1830	1853	1864	1884	1906
	1919	1942	1950	1973	1985	2010	2022	2048	2058	2083	2095	2122	2139	2167	2176
	2206	2214	2239	2246	2272	2279	2301	2308	2334	2342	2367	2376	2404	2413	2435
	2458	2465	2487	2496	2514	2522	2529	2554	2561	2569	2592	2601	2611	2621	2649
	2659	2675	2699	2722	2744	2751	2760	2768	2790	2800	2809	2836	2845	2868	2877
	2901	2911	2918	2941	2949	2958	2967	2992	2999	3022	3033	3042	3066	3074	3103
	3111	3135	3142	3165	3178	3200	3215	3236	3252	3275	3286	3312	3338	3362	3386
	3408	3428	3450	3470	3478	3490	3501	3509	3521	3529	3542	3550	3564	3577	3691
	3716	3730	3740	3756	3764	3795	3807	3823	3835	3850	3862	3879	3891	3907	3919
	3935	3947	3962	3974	4005	4025	4046	4065	4085	4093	4105	4111	4127	4135	4143
	4151	4161	4169	4177	4185	4200	4208	4216	4231	4239	4247	4260	4268	4276	4287
	4295	4303	4325	4338	4362	4375	4399	4413	4436	4449	4472	4492	4516	4529	4540
	4563	4574	4584	4606	4620	4631	4653	4666	4680	4692	4701	4724	4737	4762	4781
	4802	4812	4823	4833	4854	4864	4874	4884	4907	4912	4921	4926	4945	4955	4966
	4976	4997	5008	5018	5030	5053	5068	5091	5104	5117	5147	5163	5176	5185	5208
	5221	5247	5253	5260	5279	5287	5293	5300	5315	5323	5331	5337	5353	5370	5387
	5404	5421	5438	5455	5472	5489	5506	5524	5532	5541	5550	5559	5568	5577	5586
	5595	5604	5622	5631	5640	5649	5658	5667	5676	5685	5694	5703	5719	5725	5732
	5740	5748	5755	5764	5770	5777	5785	5794	5800	5807	5815	5824	5830	5837	5845
	5875	5888	5900	5908	5915	5922	5929	5936	5943	5965	5979	5985	5991	5997	6003
	6009	6015	6036	6042	6048	6054	6060	6065	6081	6088	6095	6102	6118	6125	6132
	6139	6155	6162	6169	6176	6192	6199	6206	6213	6229	6236	6243	6250	6266	6273
	6280	6287	6309	6316	6333	6340	6357	6364	6371	6442	6454	6461	6473	6480	6487
	6530	6536	6546	6553	6562	6586	6597	6604	6611	6617	6643	6651	6659	6668	6677
	6684	6691	6713	6723	6731	6739	6766	6780	6863	6870	6879	6887	6898	6916	6957
	6964	6973	6980	6991	7009	7036	7043	7050	7057	7081	7088	7096	7104	7111	7230
	7238	7248	7262	7269	7276	7287	7294	7301	7314	7322	7329	7336	7347	7354	7361
	7379	7386	7393	7400	7408	7556	7563	7574	7581	7588	7601	7608	7615	7623	7752
	7759	7766	7773	7785	7792	7799	7806	7821	7828	7835	7842	7850	8027	8036	8043
	8051	8058	8065	8089	8099	8127	8138	8148	8173	8202	8230	8257	8286	8315	8341
	8372	8393	8397	8404	8410	8431	8437	8444	8450	8472	8476	8483	8494	8498	8505
	8524	8531	8537	8559	8566	8576	8583	8603	8610	8616	8638	8645	8654	8661	8686
	8694	8729	8736	8742	8761	8768	8777	8784	8812	8818	8848	8864	8885	8892	8898
	8919	8926	8935	8942	8963	8970	8976	8996	9003	9012	9019	9040	9047	9053	9075
	9082	9091	9098	9120	9126	9131	9136	9159	9165	9170	9175	9190	9198	9203	9208
	9213	9240	9247	9253	9259	9264	9287	9314	9323	9363	9377	9400	9415	9448	9487
	9510	9520	9566	9574	9607	9615	9621	9652	9673	9687	9694	9699	9732	9756	9783
	9819	9842	9853	9866	9879	9901	9913	9937	9943	9958					
ERROR	2250	765	774	791	798	818	836	852	869	885	892	899	906	922	929
	936	943	959	966	973	980	996	1003	1010	1017	1033	1040	1047	1054	1070
	1077	1084	1091	1107	1114	1121	1128	1144	1151	1158	1165	1184	1192	1210	1219
	1238	1248	1268	1280	1299	1313	1333	1346	1366	1377	1398	1411	1430	1443	1469
	1481	1495	1507	1529	1542	1567	1579	1586	1605	1621	1648	1659	1666	1677	1683
	1711	1722	1729	1759	1766	1772	1782	1789	1816	1823	1831	1854	1865	1885	1907
	1920	1943	1951	1974	1986	2011	2023	2049	2059	2084	2096	2123	2140	2168	2177

2207	2215	2240	2247	2273	2280	2302	2309	2335	2343	2368	2377	2405	2414	2436
2459	2466	2488	2497	2515	2523	2530	2555	2562	2570	2593	2602	2612	2622	2650
2660	2676	2700	2723	2745	2752	2761	2769	2791	2801	2810	2837	2846	2869	2878
2902	2912	2919	2942	2950	2959	2968	2993	3000	3023	3034	3043	3067	3075	3104
3112	3136	3143	3166	3179	3201	3216	3237	3253	3276	3287	3313	3339	3363	3387
3409	3429	3451	3471	3479	3491	3502	3510	3522	3530	3543	3551	3565	3578	3691
3717	3731	3741	3757	3765	3796	3808	3824	3836	3851	3863	3880	3892	3908	3920
3936	3948	3963	3975	4006	4026	4047	4066	4085	4093	4105	4111	4127	4135	4143
4151	4161	4169	4177	4185	4200	4208	4216	4231	4239	4247	4260	4268	4276	4287
4295	4303	4326	4339	4363	4376	4400	4414	4437	4450	4473	4493	4517	4530	4541
4564	4575	4585	4607	4621	4632	4654	4667	4681	4693	4702	4725	4738	4763	4782
4803	4813	4824	4834	4855	4865	4875	4885	4907	4912	4921	4926	4946	4956	4967
4977	4998	5009	5019	5031	5054	5069	5092	5105	5118	5148	5164	5176	5185	5209
5222	5248	5254	5260	5279	5288	5293	5300	5315	5324	5331	5337	5353	5370	5387
5404	5421	5438	5455	5472	5489	5506	5524	5532	5541	5550	5559	5568	5577	5586
5595	5604	5622	5631	5640	5649	5658	5667	5676	5685	5694	5703	5719	5725	5733
5741	5748	5756	5764	5770	5778	5786	5794	5800	5808	5816	5824	5830	5838	5846
5875	5888	5900	5908	5915	5922	5929	5936	5943	5965	5979	5985	5991	5997	6003
6009	6015	6036	6042	6048	6054	6060	6065	6081	6088	6095	6102	6118	6125	6132
6139	6155	6162	6169	6176	6192	6199	6206	6213	6229	6236	6243	6250	6266	6273
6280	6287	6309	6316	6333	6340	6357	6364	6371	6442	6454	6461	6473	6480	6487
6530	6536	6546	6553	6563	6587	6597	6604	6611	6617	6643	6651	6659	6668	6677
6684	6691	6713	6723	6731	6739	6766	6780	6863	6870	6879	6887	6898	6917	6957
6964	6973	6980	6991	7010	7036	7043	7050	7057	7081	7088	7096	7104	7111	7230
7238	7248	7262	7269	7276	7287	7294	7301	7314	7322	7329	7336	7347	7354	7361
7379	7386	7393	7400	7408	7556	7563	7574	7581	7588	7601	7608	7615	7623	7752
7759	7766	7773	7785	7792	7799	7806	7821	7828	7835	7842	7850	8027	8036	8043
8051	8058	8065	8089	8100	8127	8138	8148	8173	8202	8230	8257	8286	8315	8341
8372	8393	8398	8404	8410	8431	8438	8444	8450	8472	8477	8483	8494	8499	8505
8525	8531	8537	8560	8566	8577	8583	8604	8610	8616	8639	8645	8655	8661	8686
8695	8730	8736	8742	8762	8768	8778	8784	8812	8818	8848	8864	8886	8892	8898
8920	8926	8936	8942	8964	8970	8976	8997	9003	9013	9019	9041	9047	9053	9076
9082	9092	9098	9121	9126	9131	9136	9160	9165	9170	9175	9191	9198	9203	9208
9213	9241	9247	9253	9259	9264	9288	9314	9323	9363	9377	9400	9415	9448	9487
9510	9520	9566	9574	9608	9615	9621	9653	9673	9687	9694	9700	9732	9756	9784
9820	9842	9853	9867	9880	9901	9913	9938	9943	9958					
ESCAPE	331#													
FRONT	1#													
FRONT1	1#	193#												
GETPRI	331#													
GETSWR	331#													
HALTMS	6570#													
IDMSG	9968#	9978												
MFPTMS	6516#													
MULT	331#													
NEWTST	196#	331#	748	780	804	824	843	858	875	912	949	986	1023	1060
1134	1172	1199	1225	1255	1287	1319	1353	1384	1418	1450	1514	1549	1593	1628
1691	1738	1796	1839	1873	1893	1928	1959	1994	2031	2067	2104	2147	2184	2222
2254	2286	2316	2350	2384	2422	2444	2473	2504	2538	2580	2629	2683	2707	2731
2776	2817	2853	2885	2926	2975	3009	3050	3090	3119	3152	3186	3223	3260	3294
3320	3346	3370	3394	3416	3436	3459	3585	3705	3778	3984	4076	4116	4312	4347
4384	4422	4458	4501	4549	4593	4640	4710	4746	4790	4842	4893	4933	4985	5039
5077	5127	5192	5229	5267	5343	5360	5376	5393	5410	5427	5444	5461	5478	5495
5512	5611	5710	5852	5950	6071	6108	6145	6182	6219	6256	6293	6396	6516	6570
6626	6752	6838	6926	7018	7214	7543	7737	8017	8072	8114	8158	8186	8214	8240
8269	8298	8326	8352	8381	8419	8458	8514	8547	8591	8626	8671	8719	8749	8793

