

1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38

.REM E

IDENTIFICATION

PRODUCT CODE: AC-T708B-MC  
PRODUCT NAME: CZKDLBO KDJ11 FLOATING POINT DIAGNOSTIC  
PRODUCT DATE: 15-MAR-84  
MAINTAINER: DIAGNOSTIC ENGINEERING  
AUTHORS: HENRY ENMAN, JIM PITTMAN, BARRY IRRGANG

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION. DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR ANY ERRORS THAT MAY APPEAR IN THIS DOCUMENT.

NO RESPONSIBILITY IS ASSUMED FOR THE USE OR RELIABILITY OF SOFTWARE ON EQUIPMENT THAT IS NOT SUPPLIED BY DIGITAL OR ITS AFFILIATED COMPANIES.

COPYRIGHT (C) 1983, 1984 BY DIGITAL EQUIPMENT CORPORATION

THE FOLLOWING ARE TRADEMARKS OF DIGITAL EQUIPMENT CORPORATION:

|         |       |         |         |
|---------|-------|---------|---------|
| DIGITAL | PDP   | UNIBUS  | MASSBUS |
| DEC     | DECUS | DECTAPE |         |

E

39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51

HISTORY

.REM 6

OCT 83 REV. A  
FEB 84 REV. B

- FIRST RELEASE  
CORRECTIONS MADE TO:  
1. CORRECT VECTOR AREA MAINTENANCE PROBLEM  
2. TURN CACHE MEMORY SYSTEM OFF DURING NON-CACHE TESTS.  
3. ENSURE THAT CPU ERROR REGISTER IS CLEARED AFTER  
COMPLETION OF TEST THAT MIGHT CAUSE IT TO BE SET.  
4. SAVE PC AND CONTENTS OF R6 ON UNEXPECTED INTERRUPTS

6

52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68  
69  
70

.REM 6

TABLE OF CONTENTS

|     |                                    |
|-----|------------------------------------|
| 1.0 | GENERAL INFORMATION                |
| 1.1 | PROGRAM ABSTRACT                   |
| 1.2 | SYSTEM REQUIREMENTS                |
| 1.3 | RELATED DOCUMENTS AND STANDARDS    |
| 1.4 | DIAGNOSTIC HIERARCHY PREREQUISITES |
| 1.5 | ASSUMPTIONS                        |
| 2.0 | OPERATING INSTRUCTIONS             |
| 3.0 | ERROR INFORMATION                  |

6

.REM E

71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118  
119  
120  
121  
122  
123  
124  
125  
126

1.0 GENERAL INFORMATION

1.1 PROGRAM ABSTRACT

THIS IS AN APT COMPATIBLE VERSION OF THE KDJ11 FLOATING POINT INSTRUCTION TESTS. IT FOCUSES ON TESTING THE KDJ11 FLOATING POINT INSTRUCTION FUNCTIONALITY.

1.2 SYSTEM REQUIREMENTS

KDJ11-A PROCESSOR MODULE  
ENSURE THAT HALT TRAP OPTION IS DISABLED (JUMPER W9 INSTALLED)  
32KW MEMORY  
Q-22 BACKPLANE (18 BIT QBUS MAY BE USED WITH REDUCED TEST COVERAGE)  
SERIAL LINE UNIT AND CONSOLE TERMINAL (CONSOLE TERMINAL NOT REQUIRED FOR APT)

1.3 RELATED DOCUMENTS AND STANDARDS

KDJ11-A MODULE SPECIFICATION REV 2.2  
PDP11 MAINDEC SYSMAC PACKAGE  
J11 CONTROL CHIP SPECIFICATION 21-17679-00  
J11 DATA CHIP SPECIFICATION 21-17677-00

1.4 DIAGNOSTIC HIERARCHY PREREQUISITES

THE KDJ11 CPU AND MEMORY MANAGEMENT DIAGNOSTICS MUST RUN SUCCESSFULLY PRIOR TO RUNNING THE FLOATING POINT TESTS.

1.5 ASSUMPTIONS

IT IS ASSUMED THAT THE DIAGNOSTIC OPERATOR IS FAMILIAR WITH THE XXDP. OPERATING SYSTEM AND THE J11 MICRO-ODT.


2.0 OPERATING INSTRUCTIONS

2.1 LOADING AND STARTING PROCEEDURE

LOAD PROGRAM INTO MEMORY USING STANDARD XXDP. PROCEEDURES. THE PROGRAM IS STARTED BY LOADING ADDRESS 200 AND USING THE J11 MICRO-ODT G COMMAND TO START. THE PROGRAM IDENTIFICATION MESSAGE WILL BE TYPED AFTER THE FIRST PASS OF THE COMPLETE PROGRAM.

2.2 PROGRAM OPTIONS

THE FOLLOWING ASSIGNMENTS HAVE BEEN MADE FOR THE KDJ11-A DIAGNOSTIC SWITCH REGISTER BITS:

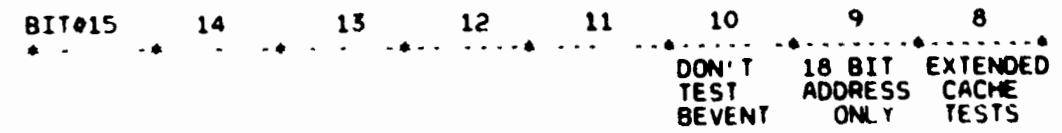

127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155

.....  
\* \* \* \* \*  
THE SOFTWARE SWITCH REGISTER HAS NO EFFECT ON THE OPERATION OF  
THIS DIAGNOSTIC.

### 2.3 OPERATION UNDER APT

THERE ARE NO ABNORMALITIES IN THE EXECUTION OF THIS DIAGNOSTIC  
WHEN OPERATING IN AN APT ENVIRONMENT. PROBLEMS CAUSED BY THE  
ASYNCHRONOUS HALTS OF THE DIAGNOSTIC BY THE APT MONITOR HAVE  
NOT BEEN NOTED.

### 3.0 ERROR INFORMATION

ERRORS WILL CAUSE THE FOLLOWING ERROR MESSAGE TO BE PRINTED:

ERROR DURING FPP TESTING  
ERROR # = (UNIQUE ERROR NUMBER)  
ERROR PC = (PC AT TIME OF ERROR)

THE ERROR WILL THEN BE REPORTED TO APT AND THE PROGRAM  
WILL HALT.

### 4.0 PROGRESS REPORT

AT THE END OF EACH PASS THE DIAGNOSTIC NAME AND PASS COUNT ARE PRINTED.

156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167  
168  
169  
170  
171  
172  
173  
174  
175  
176

000001  
160000

```
.TITLE PROGRAM HEADER AND TABLES
.SBTTL PROGRAM HEADER

.MCALL NEWTST,ERRDEF,,EQUAT,,KT11,,#40CAT,,#EOP,,#APTBL,SETUP
.MCALL .$TYPE,.$TYPDEC,ERRDF,BGNTST,ENDTST,BGNMOD,ENDMOD,CKLOOP
.MCALL .HEADER,.SETUP,.$TRAP,BGNSUB,ENDSUB,.$ACT11,.$APTHDR
.MCALL .$ATYPE,.$ERROR,.$TYPOCT,.$READ

.TITLE KDJ11-A FLOATING POINT DIAGNOSTIC
;*COPYRIGHT (C) OCTOBER,1983
;*DIGITAL EQUIPMENT CORP.
;*MAYNARD, MASS. 01754
;*
;*
;*THIS PROGRAM WAS ASSEMBLED USING THE PDP-11 MAINDEC SYSMAC
;*PACKAGE (MAINDEC-11-DZQAC-C3), JAN 19, 1977.
;*
$TN=1
$SWR=160000 ;;HALT ON ERROR, LOOP ON TEST, INHIBIT ERROR TYP0UT
```

```

177 .TITLE GLOBAL AREAS
178 .SBTTL GLOBAL EQUATES SECTION
179
180 ;**
181 ; THE GLOBAL EQUATES SECTION CONTAINS PROGRAM EQUATES THAT
182 ; ARE USED IN MORE THAN ONE TEST.
183 ;
184 .SBTTL BASIC DEFINITIONS
185
186 ;*INITIAL ADDRESS OF THE STACK POINTER *** 1000 ***
187 001000 STACK= 1000
188 .EQUIV EMT,ERROR ;:BASIC DEFINITION OF ERROR CALL
189 .EQUIV IOT,SCOPE ;:BASIC DEFINITION OF SCOPE CALL
190
191 ;*MISCELLANEOUS DEFINITIONS
192 000011 MT= 11 ;:CODE FOR HORIZONTAL TAB
193 000012 LF= 12 ;:CODE FOR LINE FEED
194 000015 CR= 15 ;:CODE FOR CARRIAGE RETURN
195 000200 CRLF= 200 ;:CODE FOR CARRIAGE RETURN-LINE FEED
196 177776 PS= 177776 ;:PROCESSOR STATUS WORD
197 .EQUIV PS,PSW
198 177774 STKLMT= 177774 ;:STACK LIMIT REGISTER
199 177772 PIRQ= 177772 ;:PROGRAM INTERRUPT REQUEST REGISTER
200 177570 DSWR= 177570 ;:HARDWARE SWITCH REGISTER
201 177570 DDISP= 177570 ;:HARDWARE DISPLAY REGISTER
202
203 ;*GENERAL PURPOSE REGISTER DEFINITIONS
204 000000 R0= #0 ;:GENERAL REGISTER
205 000001 R1= #1 ;:GENERAL REGISTER
206 000002 R2= #2 ;:GENERAL REGISTER
207 000003 R3= #3 ;:GENERAL REGISTER
208 000004 R4= #4 ;:GENERAL REGISTER
209 000005 R5= #5 ;:GENERAL REGISTER
210 000006 R6= #6 ;:GENERAL REGISTER
211 000007 R7= #7 ;:GENERAL REGISTER
212 000006 SP= #6 ;:STACK POINTER
213 000007 PC= #7 ;:PROGRAM COUNTER
214
215 ;*PRIORITY LEVEL DEFINITIONS
216 000000 PRO= 0 ;:PRIORITY LEVEL 0
217 000040 PR1= 40 ;:PRIORITY LEVEL 1
218 000100 PR2= 100 ;:PRIORITY LEVEL 2
219 000140 PR3= 140 ;:PRIORITY LEVEL 3
220 000200 PR4= 200 ;:PRIORITY LEVEL 4
221 000240 PR5= 240 ;:PRIORITY LEVEL 5
222 000300 PR6= 300 ;:PRIORITY LEVEL 6
223 000340 PR7= 340 ;:PRIORITY LEVEL 7
224
225 ;*"SWITCH REGISTER" SWITCH DEFINITIONS
226 100000 SW15= 100000
227 040000 SW14= 40000
228 020000 SW13= 20000
229 010000 SW12= 10000
230 004000 SW11= 4000
231 002000 SW10= 2000
232 001000 SW09= 1000
  
```

11

|     |        |        |          |
|-----|--------|--------|----------|
| 233 | 000400 | SW08=  | 400      |
| 234 | 000200 | SW07=  | 200      |
| 235 | 000100 | SW06=  | 100      |
| 236 | 000040 | SW05=  | 40       |
| 237 | 000020 | SW04=  | 20       |
| 238 | 000010 | SW03=  | 10       |
| 239 | 000004 | SW02=  | 4        |
| 240 | 000002 | SW01=  | 2        |
| 241 | 000001 | SW00=  | 1        |
| 242 |        | .EQUIV | SW09,SW9 |
| 243 |        | .EQUIV | SW08,SW8 |
| 244 |        | .EQUIV | SW07,SW7 |
| 245 |        | .EQUIV | SW06,SW6 |
| 246 |        | .EQUIV | SW05,SW5 |
| 247 |        | .EQUIV | SW04,SW4 |
| 248 |        | .EQUIV | SW03,SW3 |
| 249 |        | .EQUIV | SW02,SW2 |
| 250 |        | .EQUIV | SW01,SW1 |
| 251 |        | .EQUIV | SW00,SW0 |

252 ;\*DATA BIT DEFINITIONS (BIT00 TO BIT15)

|     |        |        |            |
|-----|--------|--------|------------|
| 253 |        | BIT15= | 100000     |
| 254 | 100000 | BIT14= | 40000      |
| 255 | 040000 | BIT13= | 20000      |
| 256 | 020000 | BIT12= | 10000      |
| 257 | 010000 | BIT11= | 4000       |
| 258 | 004000 | BIT10= | 2000       |
| 259 | 002000 | BIT09= | 1000       |
| 260 | 001000 | BIT08= | 400        |
| 261 | 000400 | BIT07= | 200        |
| 262 | 000200 | BIT06= | 100        |
| 263 | 000100 | BIT05= | 40         |
| 264 | 000040 | BIT04= | 20         |
| 265 | 000020 | BIT03= | 10         |
| 266 | 000010 | BIT02= | 4          |
| 267 | 000004 | BIT01= | 2          |
| 268 | 000002 | BIT00= | 1          |
| 269 | 000001 | .EQUIV | BIT09,BIT9 |
| 270 |        | .EQUIV | BIT08,BIT8 |
| 271 |        | .EQUIV | BIT07,BIT7 |
| 272 |        | .EQUIV | BIT06,BIT6 |
| 273 |        | .EQUIV | BIT05,BIT5 |
| 274 |        | .EQUIV | BIT04,BIT4 |
| 275 |        | .EQUIV | BIT03,BIT3 |
| 276 |        | .EQUIV | BIT02,BIT2 |
| 277 |        | .EQUIV | BIT01,BIT1 |
| 278 |        | .EQUIV | BIT00,BIT0 |

280 ;\*BASIC "CPU" TRAP VECTOR ADDRESSES

|     |        |          |    |                                      |
|-----|--------|----------|----|--------------------------------------|
| 281 |        | ERRVEC=  | 4  | ;; TIME OUT AND OTHER ERRORS         |
| 282 | 000004 | RESVEC=  | 10 | ;; RESERVED AND ILLEGAL INSTRUCTIONS |
| 283 | 000010 | TBITVEC= | 14 | ;; "T" BIT                           |
| 284 | 000014 | TRTVEC=  | 14 | ;; TRACE TRAP                        |
| 285 | 000014 | BPTVEC=  | 14 | ;; BREAKPOINT TRAP (BPT)             |
| 286 | 000014 | IOTVEC=  | 20 | ;; INPUT/OUTPUT TRAP (IOT) **SCOPE** |
| 287 | 000020 | PWRVEC=  | 24 | ;; POWER FAIL                        |
| 288 | 000024 |          |    |                                      |



```

289      000030      EMTVEC= 30      ;;EMULATOR TRAP (EMT) **ERROR**
290      000034      TRAPVEC=34      ;;"TRAP" TRAP
291      000060      TKVEC= 60      ;;TTY KEYBOARD VECTOR
292      000064      TPVEC= 64      ;;TTY PRINTER VECTOR
293      000240      PIRQVEC=240      ;;PROGRAM INTERRUPT REQUEST VECTOR
294      .SBTTL      MEMORY MANAGEMENT DEFINITIONS
295
296      ;*KT11 VECTOR ADDRESS
297
298      000250      MMVEC= 250
299
300      ;*KT11 STATUS REGISTER ADDRESSES
301
302      177572      SR0= 177572
303      177574      SR1= 177574
304      177576      SR2= 177576
305      172516      SR3= 172516
306
307      ;*USER "I" PAGE DESCRIPTOR REGISTERS
308
309      177600      UIPDR0= 177600
310      177602      UIPDR1= 177602
311      177604      UIPDR2= 177604
312      177606      UIPDR3= 177606
313      177610      UIPDR4= 177610
314      177612      UIPDR5= 177612
315      177614      UIPDR6= 177614
316      177616      UIPDR7= 177616
317
318      ;*USER "D" PAGE DESCRIPTOR REGISTORS
319
320      177620      UDPDR0= 177620
321      177622      UDPDR1= 177622
322      177624      UDPDR2= 177624
323      177626      UDPDR3= 177626
324      177630      UDPDR4= 177630
325      177632      UDPDR5= 177632
326      177634      UDPDR6= 177634
327      177636      UDPDR7= 177636
328
329      ;*USER "I" PAGE ADDRESS REGISTERS
330
331      177640      UIPAR0= 177640
332      177642      UIPAR1= 177642
333      177644      UIPAR2= 177644
334      177646      UIPAR3= 177646
335      177650      UIPAR4= 177650
336      177652      UIPAR5= 177652
337      177654      UIPAR6= 177654
338      177656      UIPAR7= 177656
339
340      ;*USER "D" PAGE ADDRESS REGISTERS
341
342      177660      UDPAR0= 177660
343      177662      UDPAR1= 177662
344      177664      UDPAR2= 177664

```

|     |        |                |
|-----|--------|----------------|
| 345 | 177666 | UDPAR3= 177666 |
| 346 | 177670 | UDPAR4= 177670 |
| 347 | 177672 | UDPAR5= 177672 |
| 348 | 177674 | UDPAR6= 177674 |
| 349 | 177676 | UDPAR7= 177676 |

350  
351 ;\*SUPERVISOR "I" PAGE DESCRIPTOR REGISTERS

|     |        |                |
|-----|--------|----------------|
| 352 |        |                |
| 353 | 172200 | SIPDR0= 172200 |
| 354 | 172202 | SIPDR1= 172202 |
| 355 | 172204 | SIPDR2= 172204 |
| 356 | 172206 | SIPDR3= 172206 |
| 357 | 172210 | SIPDR4= 172210 |
| 358 | 172212 | SIPDR5= 172212 |
| 359 | 172214 | SIPDR6= 172214 |
| 360 | 172216 | SIPDR7= 172216 |

361  
362 ;\*SUPERVISOR "D" PAGE DESCRIPTOR REGISTERS

|     |        |                |
|-----|--------|----------------|
| 363 |        |                |
| 364 | 172220 | SDPDR0= 172220 |
| 365 | 172222 | SDPDR1= 172222 |
| 366 | 172224 | SDPDR2= 172224 |
| 367 | 172226 | SDPDR3= 172226 |
| 368 | 172230 | SDPDR4= 172230 |
| 369 | 172232 | SDPDR5= 172232 |
| 370 | 172234 | SDPDR6= 172234 |
| 371 | 172236 | SDPDR7= 172236 |

372  
373 ;\*SUPERVISOR "I" PAGE ADDRESS REGISTERS

|     |        |                |
|-----|--------|----------------|
| 374 |        |                |
| 375 | 172240 | SIPAR0= 172240 |
| 376 | 172242 | SIPAR1= 172242 |
| 377 | 172244 | SIPAR2= 172244 |
| 378 | 172246 | SIPAR3= 172246 |
| 379 | 172250 | SIPAR4= 172250 |
| 380 | 172252 | SIPAR5= 172252 |
| 381 | 172254 | SIPAR6= 172254 |
| 382 | 172256 | SIPAR7= 172256 |

383  
384 ;\*SUPERVISOR "D" PAGE ADDRESS REGISTERS

|     |        |                |
|-----|--------|----------------|
| 385 |        |                |
| 386 | 172260 | SDPAR0= 172260 |
| 387 | 172262 | SDPAR1= 172262 |
| 388 | 172264 | SDPAR2= 172264 |
| 389 | 172266 | SDPAR3= 172266 |
| 390 | 172270 | SDPAR4= 172270 |
| 391 | 172272 | SDPAR5= 172272 |
| 392 | 172274 | SDPAR6= 172274 |
| 393 | 172276 | SDPAR7= 172276 |

394  
395 ;\*KERNEL "I" PAGE DESCRIPTOR REGISTERS

|     |        |                |
|-----|--------|----------------|
| 396 |        |                |
| 397 | 172300 | KIPDR0= 172300 |
| 398 | 172302 | KIPDR1= 172302 |
| 399 | 172304 | KIPDR2= 172304 |
| 400 | 172306 | KIPDR3= 172306 |

401 172310  
402 172312  
403 172314  
404 172316

KIPDR4= 172310  
KIPDR5= 172312  
KIPDR6= 172314  
KIPDR7= 172316

;\*KERNEL "D" PAGE DESCRIPTOR REGISTERS

408 172320  
409 172322  
410 172324  
411 172326  
412 172330  
413 172332  
414 172334  
415 172336

KDPDR0= 172320  
KDPDR1= 172322  
KDPDR2= 172324  
KDPDR3= 172326  
KDPDR4= 172330  
KDPDR5= 172332  
KDPDR6= 172334  
KDPDR7= 172336

;\*KERNEL "I" PAGE ADDRESS REGISTERS

419 172340  
420 172342  
421 172344  
422 172346  
423 172350  
424 172352  
425 172354  
426 172356

KIPAR0= 172340  
KIPAR1= 172342  
KIPAR2= 172344  
KIPAR3= 172346  
KIPAR4= 172350  
KIPAR5= 172352  
KIPAR6= 172354  
KIPAR7= 172356

;\*KERNEL "D" PAGE ADDRESS REGISTERS

430 172360  
431 172362  
432 172364  
433 172366  
434 172370  
435 172372  
436 172374  
437 172376

KDPAR0= 172360  
KDPAR1= 172362  
KDPAR2= 172364  
KDPAR3= 172366  
KDPAR4= 172370  
KDPAR5= 172372  
KDPAR6= 172374  
KDPAR7= 172376

;THESE ARE FLOATING POINT ACCUMULATOR EQUATES

440 000000  
441 000001  
442 000002  
443 000003  
444 000004  
445 000005  
446 000006  
447 000007

AC0= #0  
AC1= #1  
AC2= #2  
AC3= #3  
AC4= #4  
AC5= #5  
AC6= #6  
AC7= #7

449 000244

FPVEC= 244

;THESE ARE CACHE REGISTER EQUATES

452 177746  
453 177744  
454 177752  
455 177766  
456

CCR= 177746 ;CACHE CONTROL REGISTER  
MSER= 177744 ;MEMORY SYSTEM ERROR REGISTER  
HITMIS= 177752 ;HIT/MISS REGISTER  
CPEREG= 177766 ;CPU ERROR REGISTER

```

457 ;MISCELLANEOUS DEFINITIONS
458 BEVENT= 177546 ;BEVENT CONTROL REGISTER
459 RCSR= 177560
460 RBUF= 177562
461 XCSR= 177564
462 XBUF= 177566
463 ERRTN= HALT
464 $TSTNU=1
465 ERRNUM= 1 ;INITIALIZE ERROR NUMBER COUNTER
466 AUSWR= 2000 ;SWR FOR APT--NO BEVENT TESTING
467
468
469 ;THIS EQUATE DEFINES THE BOTTOM OF THE PROGRAM STACK POINTER
470 STBOT= 1000
471 .ASECT
472 .SBTTL TRAP CATCHER
473
474 .=0
475 ;*ALL UNUSED LOCATIONS OF THE VECTOR AREA CONTAIN
476 ;*A ".+2, IOT" SEQUENCE TO CATCH AND PROCESS ILLEGAL
477 ;*TRAPS AND INTERRUPTS THAT MIGHT OCCUR.
478 ;*THE IOT TRAP WHICH IS TAKEN ON THE ILLEGAL TRAP/INT
479 ;*TRAPS TO THE $SCOPE ROUTINE WHICH (IF THE RETURN PC IS
480 ;*LESS THAN 1002) JUMPS TO THE $ERROR ROUTINE.
481 ;*THE $ERROR ROUTINE WILL REPORT THE ERROR AS FOLLOWS:
482 ;* PC=YYYYYY UNEXPECTED TRAP TO XXX
483 ;*AND RETURN TO THE PROGRAM AT PC=YYYYYY+2
484 ;*WHERE XXX=LOCATION OF ILLEGAL TRAP
485 ;* YYYYYY=PC AT TIME OF TRAP
486 ;*NOTE: IF THE PROCESSOR IS NOT AN 11/05 THE PROGRAM
487 ;* CAN BE STARTED AT ADDRESS 0 AS WELL AS ADDRESS 200.
488
489 000000 000000 $40CAT: HALT ;;HALT
490 000002 000737 BR .-100 ;;BRANCH TO 177700 & TIME OUT (NOT ON
491 ;;11/05)
492 000004 002200 .WORD START ;;VECTOR TO STARTING ADDRESS
493 000006 000340 .WORD 340 ;;WITH PRIORITY LEVEL 7
494 .=174
495 000174 000000 DISPREG: .WORD 0 ;;SOFTWARE DISPLAY REGISTER
496 000176 000000 SWREG: .WORD 0 ;;SOFTWARE SWITCH REGISTER
497 .SBTTL STARTING ADDRES(ES)
498 000200 000137 002200 JMP @*START ;;GO TO START OF PROGRAM
499 .SBTTL ACT11 HOOKS
500
501 ;*****
502 ;HOOKS REQUIRED BY ACT11
503 000204 $SVPC= . ;;SAVE PC
504 000046 .=46
505 000046 036362 $ENDAD ;;1)SET LOC.46 TO ADDRESS OF $ENDAD IN .$EOP
506 000052 .=52
507 000052 000000 .WORD 0 ;;2)SET LOC.52 TO ZERO
508 000204 .=$SVPC ;; RESTORE PC
509 .SBTTL APT PARAMETER BLOCK
510
511 ;*****
512 ;SET LOCATIONS 24 AND 44 AS REQUIRED FOR APT

```

```

513                                     ;;*****
514                                     . $X=.    ;;SAVE CURRENT LOCATION
515                                     .-24      ;;SET POWER FAIL TO POINT TO START OF PROGRAM
516 000024 000200                       200      ;;FOR APT START UP
517                                     .-44      ;;POINT TO APT INDIRECT ADDRESS PNTR.
518 000044 000204                       $APTHDR  ;;POINT TO APT HEADER BLOCK
519                                     .-. $X     ;;RESET LOCATION COUNTER
520                                     ;;*****
521                                     ;SETUP APT PARAMETER BLOCK AS DEFINED IN THE APT-PDP11 DIAGNOSTIC
522                                     ;INTERFACE SPEC.
523
524 000204 $APTHD:
525 000204 000000 $HIBITS: .WORD 0          ;;TWO HIGH BITS OF 18 BIT MAILBOX ADDR.
526 000206 001000 $MBADR: .WORD $MAIL    ;;ADDRESS OF APT MAILBOX (BITS 0-15)
527 000210 000001 $TSTM: .WORD 1          ;;RUN TIM OF LONGEST TEST
528 000212 000002 $PASTM: .WORD 2         ;;RUN TIME IN SECS. OF 1ST PASS ON 1 UNIT (QUICK VERIFY)
529 000214 000000 $UNITM: .WORD 0        ;;ADDITIONAL RUN TIME (SECS) OF A PASS FOR EACH ADDITIONAL UNIT
530 000216 000014 .WORD $ETEND-$MAIL/2  ;;LENGTH MAILBOX-ETABLE(WORDS)
531                                     .-. $X     ;;SAVE CURRENT LOCATION COUNT
532                                     .-2
533 000002 000000 0
534 000004 000006 6
535 000006 000004 4
536                                     .-. $X
537 001000                                     ;SET UP SOME VECTORS
                                     ;RESTORE LOCATION COUNT
                                     .-1000
    
```

```

538 .SBTTL GLOBAL DATA SECTION
539
540 ;**
541 ; THE GLOBAL DATA SECTION CONTAINS DATA THAT ARE USED
542 ; IN MORE THAN ONE TEST.
543 ;
544 .SBTTL APT MAILBOX-ETABLE
545
546 ;*****
547 .EVEN
548 $MAIL: ; APT MAILBOX
549 $MSGTY: .WORD AMSGTY ; MESSAGE TYPE CODE
550 $FATAL: .WORD AFATAL ; FATAL ERROR NUMBER
551 $TESTN: .WORD ATESTN ; TEST NUMBER
552 $PASS: .WORD APASS ; PASS COUNT
553 $DEVCT: .WORD ADEVCT ; DEVICE COUNT
554 $UNIT: .WORD AUNIT ; I/O UNIT NUMBER
555 $MSGAD: .WORD AMSGAD ; MESSAGE ADDRESS
556 $MSGLG: .WORD AMSGLG ; MESSAGE LENGTH
557 $ETABLE: ; APT ENVIRONMENT TABLE
558 $ENV: .BYTE AENV ; ENVIRONMENT BYTE
559 $ENVM: .BYTE AENVM ; ENVIRONMENT MODE BITS
560 $SWREG: .WORD ASWREG ; APT SWITCH REGISTER
561 $USWR: .WORD AUSWR ; USER SWITCHES
562 $CPUOP: .WORD ACPUOP ; CPU TYPE, OPTIONS
563 ;*
564 ;* 11/04=01,11/05=02,11/20=03,11/40=04,11/45=05
565 ;* 11/70=06,PDQ=07,Q=10
566 ;*
567 ;* BIT 10=REAL TIME CLOCK
568 ;* BIT 9=FLOATING POINT PROCESSOR
569 ;* BIT 8=MEMORY MANAGEMENT
570 $ETEND:
571 .MEXIT
572 ; THESE LOCATIONS ARE USED IN MORE THAN ONE TEST TO STORE VECTOR DATA
573 ; WHEN THE TEST NEEDS TO HAVE AN ERROR CONDITION RESPOND DIFFERENTLY
574 ; FROM THE DEFAULT RESPONSE.
575 $SLOC0: .WORD 0
576 $SLOC1: .WORD 0
577
578 ; THESE LOCATIONS ARE USED IN MORE THAN ONE TEST TO STORE WORKING DATA.
579 $EXPDAT: .WORD 0 ; STORES EXPECTED (GOOD) DATA FOR COMPARISONS
580 $RECDAT: .WORD 0 ; STORES RECEIVED DATA TO BE VERIFIED
581 $COUNT: .WORD 0 ; ERROR INDICATOR FOR FLOATING POINT TESTS
582 $FLAG: .WORD 0 ; USED TO STORE "FLAG" CONDITIONS
583 $ERRCNT: .WORD 0 ; STORAGE FOR ERROR COUNT
584 $SWR: .WORD DSWR ; STORAGE FOR SWITCH REGISTER ADDRESS
585 $DISPLAY: .WORD DDISP ; STORAGE FOR DISPLAY REGISTER ADDRESS
586 $ERFLG: .WORD 0 ; ERROR FLAG
587 ; THESE LOCATIONS ARE USED BY MORE THAN ONE TEST AS LOOP COUNTERS
588 $DCOUNT: .WORD 0
589 $ALLCTR: .WORD 0
590 $LOOPIN: .WORD 0
591 $SAVSP1: .WORD 0 ; STORAGE FOR UNEXPECTED TRAP DATA
592 $SAVSP2: .WORD 0
593

```

C2

```
594
595
596 001066 000004      BTEXP: .BLKW 4      ;STORES EXPONENT DURING BIT TESTS
597 001076 000004      BTRES: .BLKW 4      ;STORES RECIEVED DATA FOR BIT TESTS
598 001106 000004      RECFEC: .BLKW 4    ;RECIEVED FLOATING POINT EXCEPTION CODE
599 001116 000004      RECST: .BLKW 4    ;RECIEVED FLOATING POINT STATUS
600 001126 000004      RECDST: .BLKW 4   ;DESTINATION ADDRESS FOR FLOATING POINT TESTS
601
602
603
604
605
606
607
608 001136
609 001136 000020      ;!!!!!!THIS IS IT. THE PROGRAM TEST LOCATION AND WRITE BUFFER!!!!!!!!!!!!!!!!!!!!!!
                        TSTLOC: .BLKW 20
```

D2

|     |        |        |        |        |         |       |                |
|-----|--------|--------|--------|--------|---------|-------|----------------|
| 610 | 001176 | 123456 |        |        | TAB1:   | .WORD | 123456         |
| 611 | 001200 | 000000 |        |        |         | .WORD | 000000         |
| 612 | 001202 | 000000 |        |        |         | .WORD | 0              |
| 613 | 001204 | 000001 |        |        |         | .WORD | 1              |
| 614 | 001206 | 055555 |        |        | TAB2:   | .WORD | 055555         |
| 615 | 001210 | 177777 |        |        |         | .WORD | 177777         |
| 616 | 001212 | 145671 |        |        |         | .WORD | 145671         |
| 617 | 001214 | 100000 |        |        |         | .WORD | 100000         |
| 618 | 001216 | 003000 |        |        | TAB3:   | .WORD | 003000         |
| 619 | 001220 | 123456 |        |        |         | .WORD | 123456         |
| 620 | 001222 | 000000 |        |        |         | .WORD | 0              |
| 621 | 001224 | 000000 |        |        |         | .WORD | 0              |
| 622 | 001226 | 055555 |        |        | TAB4:   | .WORD | 55555          |
| 623 | 001230 | 177777 |        |        |         | .WORD | -1             |
| 624 | 001232 | 000000 |        |        |         | .WORD | 0              |
| 625 | 001234 | 000000 |        |        |         | .WORD | 0              |
| 626 | 001236 | 043243 |        |        | TAB5:   | .WORD | 43243          |
| 627 | 001240 | 000000 |        |        |         | .WORD | 0              |
| 628 | 001242 | 000000 |        |        |         | .WORD | 0              |
| 629 | 001244 | 000000 |        |        |         | .WORD | 0              |
| 630 | 001246 | 162400 |        |        | TAB5A:  | .WORD | 162400         |
| 631 | 001250 | 000000 |        |        |         | .WORD | 0              |
| 632 | 001252 | 000000 |        |        |         | .WORD | 0              |
| 633 | 001254 | 000000 |        |        |         | .WORD | 0              |
| 634 | 001256 | 000000 |        |        | TAB6:   | .WORD | 0              |
| 635 | 001260 | 000000 |        |        |         | .WORD | 0              |
| 636 | 001262 | 000000 |        |        |         | .WORD | 0              |
| 637 | 001264 | 000000 |        |        |         | .WORD | 0              |
| 638 | 001266 | 047050 |        |        | TAB6A:  | .WORD | 47050          |
| 639 | 001270 | 010000 |        |        |         | .WORD | 10000          |
| 640 | 001272 | 000000 |        |        |         | .WORD | 0              |
| 641 | 001274 | 000000 |        |        |         | .WORD | 0              |
| 642 | 001276 | 000200 |        |        | TAB7:   | .WORD | 200            |
| 643 | 001300 | 000000 |        |        |         | .WORD | 0              |
| 644 | 001302 | 000000 |        |        |         | .WORD | 0              |
| 645 | 001304 | 000000 |        |        |         | .WORD | 0              |
| 646 | 001306 | 000200 |        |        | TAB8:   | .WORD | 200            |
| 647 | 001310 | 000000 |        |        |         | .WORD | 0              |
| 648 | 001312 | 000000 |        |        |         | .WORD | 0              |
| 649 | 001314 | 000001 |        |        |         | .WORD | 1              |
| 650 | 001316 | 000400 | 000000 | 000000 | TAB9:   | .WORD | 400,0,0,0      |
| 651 | 001324 | 000000 |        |        |         |       |                |
| 652 | 001326 | 030000 |        |        | TAB10:  | .WORD | 30000          |
| 653 | 001330 | 003000 |        |        |         | .WORD | 3000           |
| 654 | 001332 | 000000 |        |        |         | .WORD | 0              |
| 655 | 001334 | 000000 |        |        |         | .WORD | 0              |
| 656 | 001336 | 016400 |        |        | TAB11:  | .WORD | 16400          |
| 657 | 001340 | 000000 |        |        |         | .WORD | 0              |
| 658 | 001342 | 000000 |        |        |         | .WORD | 0              |
| 659 | 001344 | 000000 |        |        |         | .WORD | 0              |
| 660 | 001346 | 030000 | 003000 | 000002 | TAB11A: | .WORD | 30000,3000,2,0 |
| 661 | 001354 | 000000 |        |        |         |       |                |
| 662 | 001356 | 016100 | 000000 | 000000 | TAB12:  | .WORD | 16100,0,0,1    |
| 663 | 001364 | 000001 |        |        |         |       |                |
| 664 | 001366 | 016200 |        |        | TAB13:  | .WORD | 16200          |
| 665 | 001370 | 000000 |        |        |         | .WORD | 0              |



|     |        |        |        |        |         |       |                     |
|-----|--------|--------|--------|--------|---------|-------|---------------------|
| 666 | 001372 | 000000 |        |        |         | .WORD | 0                   |
| 667 | 001374 | 000001 |        |        |         | .WORD | 1                   |
| 668 | 001376 | 030000 | 003000 | 000000 | TAB13B: | .WORD | 30000,3000,0,140000 |
| 669 | 001404 | 140000 |        |        |         |       |                     |
| 670 | 001406 | 030000 |        |        | TAB14:  | .WORD | 30000               |
| 671 | 001410 | 000000 |        |        |         | .WORD | 0                   |
| 672 | 001412 | 000000 |        |        |         | .WORD | 0                   |
| 673 | 001414 | 000000 |        |        |         | .WORD | 0                   |
| 674 | 001416 | 024700 |        |        | TAB15:  | .WORD | 24700               |
| 675 | 001420 | 000000 |        |        |         | .WORD | 0                   |
| 676 | 001422 | 000000 |        |        |         | .WORD | 0                   |
| 677 | 001424 | 000000 |        |        |         | .WORD | 0                   |
| 678 | 001426 | 025000 |        |        | TAB16:  | .WORD | 25000               |
| 679 | 001430 | 175363 |        |        |         | .WORD | 175363              |
| 680 | 001432 | 123456 |        |        |         | .WORD | 123456              |
| 681 | 001434 | 123456 |        |        |         | .WORD | 123456              |
| 682 | 001436 | 030000 |        |        | TAB17:  | .WORD | 30000               |
| 683 | 001440 | 007020 |        |        |         | .WORD | 7020                |
| 684 | 001442 | 000000 | 000000 |        |         | .WORD | 0,0                 |
| 685 | 001446 | 023456 |        |        | TAB18:  | .WORD | 23456               |
| 686 | 001450 | 000000 |        |        |         | .WORD | 0                   |
| 687 | 001452 | 000000 |        |        |         | .WORD | 0                   |
| 688 | 001454 | 000001 |        |        |         | .WORD | 1                   |
| 689 | 001456 | 100200 | 000000 | 000000 | TAB21:  | .WORD | 100200,0,0,0        |
| 690 | 001464 | 000000 |        |        |         |       |                     |
| 691 | 001466 | 100400 | 000000 | 000000 | TAB22:  | .WORD | 100400,0,0,0        |
| 692 | 001474 | 000000 |        |        |         |       |                     |
| 693 | 001476 | 000200 | 000000 | 000000 | TAB23:  | .WORD | 200,0,0,1           |
| 694 | 001504 | 000001 |        |        |         |       |                     |
| 695 | 001506 | 062400 | 000000 | 000000 | TAB24:  | .WORD | 62400,0,0,0         |
| 696 | 001514 | 000000 |        |        |         |       |                     |
| 697 | 001516 | 001100 | 000000 | 000000 | TAB25:  | .WORD | 1100,0,0,0          |
| 698 | 001524 | 000000 |        |        |         |       |                     |
| 699 | 001526 | 100600 | 000000 | 000000 | TAB26:  | .WORD | 100600,0,0,0        |
| 700 | 001534 | 000000 |        |        |         |       |                     |
| 701 | 001536 | 001000 | 000000 | 000000 | TAB27:  | .WORD | 1000,0,0,0          |
| 702 | 001544 | 000000 |        |        |         |       |                     |
| 703 | 001546 | 000600 | 000000 | 000000 | TAB28:  | .WORD | 600,0,0,0           |
| 704 | 001554 | 000000 |        |        |         |       |                     |
| 705 | 001556 | 010100 | 000000 | 000000 | TAB29:  | .WORD | 10100,0,0,0         |
| 706 | 001564 | 000000 |        |        |         |       |                     |
| 707 | 001566 | 010100 | 000000 | 002000 | TAB29A: | .WORD | 10100,0,2000,0      |
| 708 | 001574 | 000000 |        |        |         |       |                     |
| 709 |        |        |        |        |         |       |                     |
| 710 | 001576 | 000500 | 000000 | 000000 | TAB30:  | .WORD | 500,0,0,0           |
| 711 | 001604 | 000000 |        |        |         |       |                     |
| 712 | 001606 | 100400 | 000000 | 000000 | TAB31:  | .WORD | 100400,0,0,0        |
| 713 | 001614 | 000000 |        |        |         |       |                     |
| 714 | 001616 | 016000 | 000000 | 000000 | TAB32:  | .WORD | 16000,0,0,0         |
| 715 | 001624 | 000000 |        |        |         |       |                     |
| 716 | 001626 | 011600 | 000000 | 000000 | TAB33:  | .WORD | 11600,0,0,0         |
| 717 | 001634 | 000000 |        |        |         |       |                     |
| 718 | 001636 | 000640 | 000000 | 000000 | TAB34:  | .WORD | 640,0,0,0           |
| 719 | 001644 | 000000 |        |        |         |       |                     |
| 720 | 001646 | 077600 | 000000 | 000000 | TAB40:  | .WORD | 77600,0,0,0         |
| 721 | 001654 | 000000 |        |        |         |       |                     |

|     |        |        |        |        |         |       |                            |
|-----|--------|--------|--------|--------|---------|-------|----------------------------|
| 722 | 001656 | 100200 | 000000 | 000000 | TAB41:  | .WORD | 100200,0,0,1               |
| 723 | 001664 | 000001 |        |        |         |       |                            |
| 724 | 001666 | 000340 | 000000 | 000000 | TAB42:  | .WORD | 340,0,0,0                  |
| 725 | 001674 | 000000 |        |        |         |       |                            |
| 726 | 001676 | 000077 | 177777 | 177777 | TAB43:  | .WORD | 77,177777,177777,177776    |
| 727 | 001704 | 177776 |        |        |         |       |                            |
| 728 | 001706 | 000577 | 177777 | 177777 | TAB45:  | .WORD | 577,-1,-1,-1               |
| 729 | 001714 | 177777 |        |        |         |       |                            |
| 730 | 001716 | 000577 | 177777 | 000000 | TAB46:  | .WORD | 577,-1,0,0                 |
| 731 | 001724 | 000000 |        |        |         |       |                            |
| 732 | 001726 | 173737 | 124242 | 052525 | TAB47:  | .WORD | 173737,124242,052525,12346 |
| 733 | 001734 | 012346 |        |        |         |       |                            |
| 734 | 001736 | 000000 | 000000 | 052525 | TAB47A: | .WORD | 0,0,052525,12346           |
| 735 | 001744 | 012346 |        |        |         |       |                            |
| 736 | 001746 | 173737 | 124242 | 000000 | TAB48:  | .WORD | 173737,124242,0,0          |
| 737 | 001754 | 000000 |        |        |         |       |                            |
| 738 | 001756 | 000600 | 000000 | 000000 | TAB49:  | .WORD | 600,0,0,0                  |
| 739 | 001764 | 000000 |        |        |         |       |                            |

```

740 .SBTTL GLOBAL TEXT SECTION
741
742 ;**
743 ; THE GLOBAL TEXT SECTION CONTAINS FORMAT STATEMENTS,
744 ; MESSAGES, AND ASCII INFORMATION THAT ARE USED IN
745 ; MORE THAN ONE TEST.
746 ;--
747
748 ;
749 ; FORMAT STATEMENTS USED IN PRINT CALLS
750 ;
751
752 001766 005015 040503 044103 ERRMSG: .ASCIZ <CR><LF>/CACHE SYSTEM ERROR/
753 001774 020105 054523 052123
754 002002 046505 042440 051122
755 002010 051117 000
756 002013 015 042412 051122 FPPERR: .ASCIZ <CR><LF>/ERROR DURING FPP TESTING/
757 002020 051117 042040 051125
758 002026 047111 020107 050106
759 002034 020120 042524 052123
760 002042 047111 000107
761 002046 005015 051105 047522 ERR1: .ASCIZ <CR><LF>/ERROR # =/
762 002054 020122 020043 000075
763 002062 005015 051105 047522 ERR2: .ASCIZ <CR><LF>/ERROR PC =/
764 002070 020122 041520 036440
765 002076 000
766 002077 015 020012 020040 $CRLF: .ASCIZ <CR><LF>/ /
767 002104 000
768 002106 .EVEN

```

GLOBAL AREAS      MAC111 30A(1052) 15-MAR-84 16:58 PAGE 20  
KDJ11A.MAC      15-MAR 84 15:51

GLOBAL ERROR REPORT SECTION

769  
770  
771  
772  
773  
774  
775

.SBTTL GLOBAL ERROR REPORT SECTION

\*\*\*  
; THE GLOBAL ERROR REPORT SECTION CONTAINS MESSAGE PRINTING AREAS  
; USED BY MORE THAN TEST TO OUTPUT ADDITIONAL ERROR INFORMATION.  
---

```

776 .SBTTL GLOBAL SUBROUTINES SECTION
777
778 ;**
779 ; THE GLOBAL SUBROUTINES SECTION CONTAINS THE SUBROUTINES
780 ; THAT ARE USED IN MORE THAN ONE TEST.
781 ;--
782 ;FPP COMMON SUBROUTINES
783 002106 012600 WLDTRP: MOV (SP)+,R0 ;SAVE PC
784 002110 012605 MOV (SP)+,R5 ;SAVE STATUS AND RESTORE STACK
785 002112 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
786 002114 000001 .WORD 1 ;UNIQUE ERROR NUMBER
787 002116 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
788 002120 000110 JMP (R0) ;GO BACK INLINE
789
790 ;
791 ;
792 002122 000000 TRPFLG: .WORD 0
793 002124 000207 ERRFP: RTS R7
794 002126 000207 ERR: RTS R7
795
796 ;
797 ;
798 ;
799 ;
800 ;SUBROUTINE DATA VERIFICATION
801 ;
802 ; CALLED BY JSR R7,DATVER
803 ;
804 ;INPUT: (R4)=EXPECTED DATA
805 ; (R1)=RECEIVED DATA
806 ;
807 ;
808 ;THIS ROUTINE VERIFIES THAT THE 4 CONSECUTIVE WORDS STARTING WITH (R4) ARE
809 ;EQUAL TO THE FOUR WORDS ADDRESSED BY (R1). THE CONTENTS OF R4, AND R1 ARE NOT
810 ;DISTURBED.
811 ;LOCATION "COUNT" , IF NOT EQUAL TO 0 SIGNIFIES DATA ERROR
812 ;IF THE STATUS IS FLOATING MODE, THE LAST TWO BYTES OF RECEIEVED
813 ;ARE SIMPLY CHECKED FOR ZEROS
814 ;
815 002130 010446 DATVFR: MOV R4,-(SP) ;SAVE R4
816 002132 010146 MOV R1,-(SP) ;SAVE R1
817 002134 012767 000003 176676 MOV #3,COUNT ;SET UP ITERATION COUNT
818 002142 000167 000012 JMP DAT1 ;
819 ;
820 002146 010446 DATVER: MOV R4,-(SP) ;SAVE R4
821 002150 010146 MOV R1,-(SP) ;SAVE R1
822 002152 012767 000005 176660 MOV #5,COUNT ;SET UP ITERATION COUNT
823 002160 005367 176654 DAT1: DEC COUNT
824 002164 001402 BEQ 2$ ;BRANCH IF DONE
825 002166 022421 CMP (R4)+,(R1)+ ;
826 002170 001773 BEQ DAT1 ;
827 002172 012601 2$: MOV (SP)+,R1 ;RESTORE R1
828 002174 012604 MOV (SP)+,R4 ;RESTORE R4
829 002176 000207 RTS R7 ;GO BACK TO CALLING ROUTINE
830 ;IF DATA ERROR, COUNT NE 0
    
```

```

831 002200 START:
832 002200 012737 000014 177746 MOV #14,#CCR ;SET CACHE TO FORCE MISS
833 .SBTTL INITIALIZE THE COMMON TAGS
834 002206 012706 001000 MOV #STACK,SP ;SETUP THE STACK POINTER
835 ;;INITIALIZE A FEW VECTORS
836 002212 012737 040046 000030 MOV #ERROR,#EMTVEC ;;EMT VECTOR FOR ERROR ROUTINE
837 002220 012737 000340 000032 MOV #340,#EMTVEC+2 ;;LEVEL 7
838 002226 012737 037530 000034 MOV #TRAP,#TRAPVEC ;;TRAP VECTOR FOR TRAP CALLS
839 002234 012737 000340 000036 MOV #340,#TRAPVEC+2;LEVEL 7
840 002242 005067 176540 CLR #PASS ;CLEAR THE PASS COUNT
841 002246 016767 034056 034046 MOV #ENDCT,#EOPCT ;SETUP END-OF-PROGRAM COUNTER
842 002254 105067 176572 CLRB #ERFLG ;CLEAR THE ERROR FLAG
843 ;;SIZE FOR A HARDWARE SWITCH REGISTER. IF NOT FOUND OR IT IS
844 ;;EQUAL TO A "-1", SETUP FOR A SOFTWARE SWITCH REGISTER.
845 002260 013746 000004 MOV #ERRVEC,-(SP) ;SAVE ERROR VECTOR
846 002264 012737 002320 000004 MOV #64,#ERRVEC ;SET UP ERROR VECTOR
847 002272 012767 177570 176546 MOV #DSWR,SWR ;SETUP FOR A HARDWARE SWICH REGISTER
848 002300 012767 177570 176542 MOV #DISP,DISPLAY ;AND A HARDWARE DISPLAY REGISTER
849 002306 022777 177777 176532 CMP #-1,SWR ;TRY TO REFERENCE HARDWARE SWR
850 002314 001012 BNE 66# ;BRANCH IF NO TIMEOUT TRAP OCCURRED
851 ;;AND THE HARDWARE SWR IS NOT = 1
852 002316 000403 BR 65# ;BRANCH IF NO TIMEOUT
853 002320 012716 002326 64#: MOV #65#,(SP) ;SET UP FOR TRAP RETURN
854 002324 000002 RTI
855 002326 012767 000176 176512 65#: MOV #SWREG,SWR ;POINT TO SOFTWARE SWR
856 002334 012767 000174 176506 MOV #DISPREG,DISPLAY
857 002342 012637 000004 66#: MOV (SP)+,#ERRVEC ;RESTORE ERROR VECTOR
858
859 .MACRO ##SETMAIL ?#ARG1
860 CLR #PASS ;CLEAR PASS COUNT
861 BITB #APTSIZE,#ENVM ;TEST USER SIZE UNDER APT
862 BEQ #ARG1 ;YES,USE NON-APT SWITCH
863 MOV #SWREG,SWR ;NO,USE APT SWITCH REGISTER
864 #ARG1:
865 .ENDM
866 002346 005067 176434 CLR #PASS ;CLEAR PASS COUNT
867 002352 132767 000200 176441 BITB #APTSIZE,#ENVM ;TEST USER SIZE UNDER APT
868 002360 001403 BEQ 67# ;YES,USE NON-APT SWITCH
869 002362 012767 001022 176456 MOV #SWREG,SWR ;NO,USE APT SWITCH REGISTER
870 002370 67#:
871 002370 012737 040046 000020 MOV #ERROR,#IOTVEC ;SET UP IOT VECTORS
872 002376 012737 000340 000022 MOV #340,#IOTVEC+2 ;TO GO TO ERROR ROUTINE
873 002404 005037 177766 CLR #177766 ;CLEAR CPU ERROR REGISTER
874 002410 005067 176370 RESTART: CLR #TESTN ;RESET #TESTN TO ZERO
875 002414 012737 000014 177746 MOV #14,#CCR ;SET CACHE TO FORCE MISS
876
877 ;*****
878 .SBTTL FLOATING POINT TESTS
879 ;*****
880 ; BEGIN FLOATING POINT TESTING
881 ;*****
882 ;*****
883 002422 MBT1:
884 ;*****
885 ;#TEST 1 FPP REGISTER BIT TESTS
886 ;*****

```

```

887 ;R5=FPP POINTER
888 ;R1=TEMPORARY COUNTER
889 ;R2=POINTER TO EXPECTED DATA
890 ;R3=POINTER TO RECEIVED DATA
891 ;R4=ODD/EVEN COUNTER
892 ;*****
893 002422 TST1:
894 002422 005267 176356 INC $TESTN ;INCREMENT TEST NUMBER
895 002426 170011 CLR SETD
896 002430 005005 MBT2: CLR R5 ;SETUP FPP ACC POINTER
897 002432 012702 001066 MOV #BTEXP,R2 ;POINT TO TEST DATA
898 002436 012703 001076 MOV #BTRES,R3 ;POINT TO RECEIVED DATA
899 002442 170400 MBT2A: CLRD ACO ;SETUP FPP REGISTER VALUES
900 002444 174012 STD ACO,(R2) ;CLEAR EXPECTED VALUE
901 002446 005004 CLR R4
902 002450 170400 BTGO: CLRD ACO ;SETUP FPP REGISTER VALUES
903 002452 170401 CLRD AC1
904 002454 170402 CLRD AC2
905 002456 170403 CLRD AC3
906 002460 170404 CLRD AC4
907 002462 170405 CLRD AC5
908
909 002464 010501 MOV R5,R1 ;GET FPP AC NUMBER INTO R1
910 002466 070127 000014 MUL #14,R1 ;ALLOW 10 LOCATIONS FOR OPERATION
911 002472 062701 002500 ADD #MACO,R1 ;SETUP JMP LOCATION
912 002476 000111 JMP (R1)
913 002500 172467 176362 MACO: LDD BTEXP,ACO ;LOAD TEST DATA INTO TEST REGISTER
914 002504 174067 176366 MACOA: STD ACO,BTRES ;SAVE TEST RESULT
915 002510 000167 000074 JMP MACE ;GET OUT
916 002514 172567 176346 MAC1: LDD BTEXP,AC1 ;LOAD TEST DATA INTO TEST REGISTER
917 002520 174167 176352 STD AC1,BTRES ;SAVE TEST RESULT
918 002524 000167 000060 JMP MACE ;GET OUT
919 002530 172667 176332 MAC2: LDD BTEXP,AC2 ;LOAD TEST DATA INTO TEST REGISTER
920 002534 174267 176336 STD AC2,BTRES ;SAVE TEST RESULT
921 002540 000167 000044 JMP MACE ;GET OUT
922 002544 172767 176316 MAC3: LDD BTEXP,AC3 ;LOAD TEST DATA INTO TEST REGISTER
923 002550 174367 176322 STD AC3,BTRES ;SAVE TEST RESULT
924 002554 000167 000030 JMP MACE ;GET OUT
925 002560 172467 176302 MAC4: LDD BTEXP,ACO ;LOAD TEST DATA INTO TEST REGISTER
926 002564 174004 STD ACO,AC4 ;SAVE TEST RESULT
927 002566 172404 LDD AC4,ACO ;GET OUT
928 002570 000167 177710 JMP MACOA ;LOAD TEST DATA INTO TEST XFER REGISTER
929 002574 172467 176266 MAC5: LDD BTEXP,ACO ;LOAD TEST DATA INTO TEST REGISTER
930 002600 174005 STD ACO,AC5 ;LOAD TEST REGISTER
931 002602 172405 LDD AC5,ACO ;STORE RESULT INTO XFER FPP REGISTER
932 002604 000167 177674 JMP MACOA ;GET OUT
933 002610 026767 176252 176260 MACE: CMP BTEXP,BTRES
934 002616 001014 BNE BTER ;BRANCH IF REGISTER ERROR
935 002620 026767 176244 176252 CMP BTEXP+2,BTRES+2
936 002626 001010 BNE BTER
937 002630 026767 176236 176244 CMP BTEXP+4,BTRES+4
938 002636 001004 BNE BTER
939 002640 026767 176230 176236 CMP BTEXP+6,BTRES+6
940 002646 001403 BEQ MBT8 ;GOOD RESULT
941 002650
942 002650 104000 BTER: ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR

```

```

943 002652 000002          .WORD 2          ;UNIQUE ERROR NUMBER
944 002654 002013          .WORD FPPERR     ;ADDRESS OF ERROR MESSAGE
945                                     ;FPP AC LOADED INCORRECTLY
946                                     ;NOW VERIFY THE OTHER REGISTERS REMAINED ZERO
947 002656                                     MBT8:
948 002656 005001          CLR R1           ;CLEAR TEMPORARY COUNTER
949 002660 005705          TST R5          ;SEE IF R0 UNDER TEST
950 002662 001413          BEQ MBT8A       ;BRANCH IF TEST ING R0
951 002664 020527 000004  CMP R5,#4       ;SEE IF TESTING FPP REGISTER >R4
952 002670 100010          BPL MBT8A       ;SKIP R0 TESTING
953 002672 174067 176200  STD AC0,BTRES   ;SAVE AC TEST RESULT
954 002676 004767 000246  JSR R7,BTTST   ;VERIFY THAT CONTENTS REMAINED ZERO
955 002702 001403          BEQ MBT8A       ;BRANCH IF EXPECTED RESULT
956 002704 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
957 002706 000003          .WORD 3         ;UNIQUE ERROR NUMBER
958 002710 002013          .WORD FPPERR     ;ADDRESS OF ERROR MESSAGE
959
960 002712 020527 000001  MBT8A: CMP R5,#1   ;BAD AC0 ;SEE IF R1 UNDER TEST
961 002716 001410          BEQ MBT8B       ;BRANCH IF R1 UNDER TEST
962 002720 174167 176152  STD AC1,BTRES   ;SAVE AC TEST RESULT
963 002724 004767 000220  JSR R7,BTTST   ;VERIFY THAT CONTENTS REMAINED ZERO
964 002730 001403          BEQ MBT8B       ;BRANCH IF GOOD
965 002732 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
966 002734 000004          .WORD 4         ;UNIQUE ERROR NUMBER
967 002736 002013          .WORD FPPERR     ;ADDRESS OF ERROR MESSAGE
968
969 002740 020527 000002  MBT8B: CMP R5,#2   ;BAD AC1 ;SEE IF TESTING FPP REGISTER AC2
970 002744 001410          BEQ MBT8C       ;BRANCH IF R2 UNDER TEST
971 002746 174267 176124  STD AC2,BTRES   ;SAVE AC TEST RESULT
972 002752 004767 000172  JSR R7,BTTST   ;VERIFY THAT CONTENTS REMAINED ZERO
973 002756 001403          BEQ MBT8C       ;BRANCH IF GOOD
974 002760 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
975 002762 000005          .WORD 5         ;UNIQUE ERROR NUMBER
976 002764 002013          .WORD FPPERR     ;ADDRESS OF ERROR MESSAGE
977
978 002766 020527 000003  MBT8C: CMP R5,#3   ;BAD AC2 ;SEE IF R3 UNDER TEST
979 002772 001410          BEQ MBT8D       ;BRANCH IF R3 UNDER TEST
980 002774 174367 176076  STD AC3,BTRES   ;SAVE AC TEST RESULT
981 003000 004767 000144  JSR R7,BTTST   ;VERIFY THAT CONTENTS REMAINED ZERO
982 003004 001403          BEQ MBT8D       ;BRANCH IF GOOD
983 003006 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
984 003010 000006          .WORD 6         ;UNIQUE ERROR NUMBER
985 003012 002013          .WORD FPPERR     ;ADDRESS OF ERROR MESSAGE
986
987 003014 020527 000004  MBT8D: CMP R5,#4   ;BAD AC3 ;SEE IF R4 UNDER TEST
988 003020 001411          BEQ MBT8E       ;BRANCH IF R4 UNDER TEST
989 003022 172404          LDD AC4,ACO     ;MOVE REGISTER CONTENT
990 003024 174067 176046  STD AC0,BTRES   ;SAVE AC TEST RESULT
991 003030 004767 000114  JSR R7,BTTST   ;VERIFY THAT CONTENTS REMAINED ZERO
992 003034 001403          BEQ MBT8E       ;BRANCH IF GOOD
993 003036 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
994 003040 000007          .WORD 7         ;UNIQUE ERROR NUMBER
995 003042 002013          .WORD FPPERR     ;ADDRESS OF ERROR MESSAGE
996
997 003044 020527 000005  MBT8E: CMP R5,#5   ;BAD AC4 ;SEE IF R0 UNDER TEST
998 003050 001411          BEQ MBT8F       ;BRANCH IF R0 UNDER TEST

```



```

999 003052 172405          LDD    AC5,ACO          ;MOVE REGISTER CONTENTS
1000 003054 174067 176016  STD    ACO,BTRES       ;SAVE AC TEST RESULT
1001 003060 004767 000064  JSR    R7,BTTST        ;VERIFY THAT CONTENTS REMAINED ZERO
1002 003064 001403          BEQ    MBT8F           ;BRANCH IF GOOD
1003 003066 104000          ERROR  ;ALL ERRORS TO TRAP TO EMT VECTOR
1004 003070 000010          .WORD 10              ;UNIQUE ERROR NUMBER
1005 003072 002013          .WORD FPPERR         ;ADDRESS OF ERROR MESSAGE
1006
1007 003074 005204          MBT8F: INC    R4          ;BAD ACS ;INCREMENT PATTERN COUNTER
1008 003076 000241          CLC
1009 003100 042704 177776  BIC    #177776,R4     ; TEST FOR ODD /EVEN
1010 003104 001401          BEQ    MBT8FG         ;BRANCH IF EVEN
1011 003106 000261          SEC
1012 003110 006112          MBT8FG: ROL   (R2)     ;SET CARRY FOR TEST PATTERN SHIFT
1013 003112 006162 000002  ROL   2(R2)          ;ROTATE LSW OF TEST PATTERN
1014 003116 006162 000004  ROL   4(R2)          ;ROTATE 2 WORD OF TEST PATTERN
1015 003122 006162 000006  ROL   6(R2)          ;ROTATE 3 WORD OF TEST PATTERN
1016 003126 103402          BCS   MBT8I           ;ROTATE 4 WORD OF TEST PATTERN
1017 003130 000167 177314  JMP    BTGO           ;JUMP IF THROUGH WITH TEST PATTERN
1018
1019 003134 005205          MBT8I: INC    R5          ;GO TO NEXT REGISTER TEST
1020 003136 020527 000006  CMP   R5,#6          ;SEE IF THROUGH TESTING
1021 003142 100016          BPL   MBTE           ;JUMP IF THROUGH
1022 003144 000167 177272  JMP   MBT2A          ;CONTINUE TESTING WITH NEW PATTERN
1023
1024
1025 003150 005767 175722  BTST: TST   BTRES     ;VERIFY CONTENTS AS ZERO
1026 003154 001010          BNE   BTTST         ;EXIT IF NOT ZERO
1027 003156 005767 175716  TST   BTRES+2       ;VERIFY CONTENTS AS ZERO
1028 003162 001005          BNE   BTTST         ;EXIT IF NOT ZERO
1029 003164 005767 175712  TST   BTRES+4       ;VERIFY CONTENTS AS ZERO
1030 003170 001002          BNE   BTTST         ;EXIT IF NOT ZERO
1031 003172 005767 175706  TST   BTRES+6       ;VERIFY CONTENTS AS ZERO
1032 003176 000207          BTTST: RTS    R7          ;GO BACK TO CALLING ROUTINE
1033
1034
1035
1036
1037 003200          MBTE:
1038
1039
1040 003200          MFACU:
1041
1042
1043
1044
1045
1046
1047
1048 003200          TST2:
1049 003200 005267 175600  INC   $TESTN         ;INCREMENT TEST NUMBER
1050
1051
1052
1053 003204 170011          MFA:  SETD   R0
1054 003206 005000          CLR

```

|      |        |        |        |            |             |   |
|------|--------|--------|--------|------------|-------------|---|
| 1055 | 003210 | 005004 |        | CLR        | R4          |   |
| 1056 | 003212 | 012702 | 001066 | MOV        | #BTEXP,R2   | ;POINT TO TEST DATA                     |
| 1057 | 003216 | 012703 | 001076 | MOV        | #BTRES,R3   | ;POINT TO RECEIVED DATA                 |
| 1058 | 003222 | 012767 | 000051 | MOV        | #51,BTEXP   | ;SETUP EXPECTED DATA                    |
| 1059 | 003230 | 012767 | 000052 | MOV        | #52,BTEXP+2 | ;                                       |
| 1060 | 003236 | 012767 | 000053 | MOV        | #53,BTEXP+4 | ;                                       |
| 1061 | 003244 | 012767 | 000054 | MOV        | #54,BTEXP+6 | ;                                       |
| 1062 | 003252 | 172467 | 175610 | LDD        | BTEXP,ACO   | ;MOVE DATA TEMPORARILY                  |
| 1063 | 003256 | 174005 |        | STD        | ACO,AC5     | ;PUT DATA INTO TEST REGISTER            |
| 1064 | 003260 | 004567 | 000240 | JSR        | R5,SUBT     | ;SUBTRACT TEN FROM EACH EXPECTED DATA   |
| 1065 | 003264 | 172467 | 175576 | LDD        | BTEXP,ACO   | ;MOVE DATA TEMPORARILY                  |
| 1066 | 003270 | 174004 |        | STD        | ACO,AC4     | ;MOVE DATA INTO TEST REGISTER           |
| 1067 | 003272 | 004567 | 000226 | JSR        | R5,SUBT     | ;SUBTRACT 10 FROM TEST DATA WORDS       |
| 1068 | 003276 | 172767 | 175564 | LDD        | BTEXP,AC3   | ;STORE INTO TEST REGISTER               |
| 1069 | 003302 | 004567 | 000216 | JSR        | R5,SUBT     | ;GET NEXT SET OF UNIQUE DATA WORDS      |
| 1070 | 003306 | 172667 | 175554 | LDD        | BTEXP,AC2   | ;STORE INTO TEST REGISTER               |
| 1071 | 003312 | 004567 | 000206 | JSR        | R5,SUBT     | ;GET NEXT SET OF TEST DATAS             |
| 1072 | 003316 | 172567 | 175544 | LDD        | BTEXP,AC1   | ;LOAD TEST REGISTER                     |
| 1073 | 003322 | 004567 | 000176 | JSR        | R5,SUBT     | ;GET NEXT SET OF TEST WORDS             |
| 1074 | 003326 | 172467 | 175534 | LDD        | BTEXP,ACO   | ;LOAD FINAL TEST REGISTER               |
| 1075 |        |        |        |            |             | ;ALL REGISTER CONTAIN UNIQUE TEST WORDS |
| 1076 | 003332 | 174067 | 175540 | STD        | ACO,BTRES   | ;STORE ACO,RESULT                       |
| 1077 | 003336 | 004567 | 000246 | JSR        | R5,BFA      | ;CHECK RESULT                           |
| 1078 | 003342 | 001403 |        | BEQ        | BFAC1       | ;BRANCH IF GOOD                         |
| 1079 | 003344 | 104000 |        | ERROR      |             | ;ALL ERRORS TO TRAP TO EMT VECTOR       |
| 1080 | 003346 | 000011 |        | .WORD      | 11          | ;UNIQUE ERROR NUMBER                    |
| 1081 | 003350 | 002013 |        | .WORD      | FPPERR      | ;ADDRESS OF ERROR MESSAGE               |
| 1082 |        |        |        |            |             | ;BAD ACO                                |
| 1083 | 003352 | 004567 | 000200 | BFAC1: JSR | R5,ADDT     | ;UPDATE EXPECTED RESULT                 |
| 1084 | 003356 | 174167 | 175514 | STD        | AC1,BTRES   | ;STORE AC1 RESULT                       |
| 1085 | 003362 | 004567 | 000222 | JSR        | R5,BFA      | ;CHECK RESULT                           |
| 1086 | 003366 | 001403 |        | BEQ        | BFAC2       | ;BRANCH IF GOOD                         |
| 1087 | 003370 | 104000 |        | ERROR      |             | ;ALL ERRORS TO TRAP TO EMT VECTOR       |
| 1088 | 003372 | 000012 |        | .WORD      | 12          | ;UNIQUE ERROR NUMBER                    |
| 1089 | 003374 | 002013 |        | .WORD      | FPPERR      | ;ADDRESS OF ERROR MESSAGE               |
| 1090 |        |        |        |            |             | ;BAD RESULT AC1                         |
| 1091 | 003376 | 004567 | 000154 | BFAC2: JSR | R5,ADDT     | ;UPDATE EXPECTED RESULT                 |
| 1092 | 003402 | 174267 | 175470 | STD        | AC2,BTRES   | ;STORE AC2 RESULT                       |
| 1093 | 003406 | 004567 | 000176 | JSR        | R5,BFA      | ;CHECK RESULT                           |
| 1094 | 003412 | 001403 |        | BEQ        | BFAC3       | ;BRANCH IF GOOD                         |
| 1095 | 003414 | 104000 |        | ERROR      |             | ;ALL ERRORS TO TRAP TO EMT VECTOR       |
| 1096 | 003416 | 000013 |        | .WORD      | 13          | ;UNIQUE ERROR NUMBER                    |
| 1097 | 003420 | 002013 |        | .WORD      | FPPERR      | ;ADDRESS OF ERROR MESSAGE               |
| 1098 |        |        |        |            |             | ;BAD AC2 RESULT                         |
| 1099 | 003422 | 004567 | 000130 | BFAC3: JSR | R5,ADDT     | ;UPDATE EXPECTED RESULT                 |
| 1100 | 003426 | 174367 | 175444 | STD        | AC3,BTRES   | ;SAVE TEST RESULT                       |
| 1101 | 003432 | 004567 | 000152 | JSR        | R5,BFA      | ;CHECK RESULT                           |
| 1102 | 003436 | 001403 |        | BEQ        | BFAC4       | ;BRANCH IF GOOD                         |
| 1103 | 003440 | 104000 |        | ERROR      |             | ;ALL ERRORS TO TRAP TO EMT VECTOR       |
| 1104 | 003442 | 000014 |        | .WORD      | 14          | ;UNIQUE ERROR NUMBER                    |
| 1105 | 003444 | 002013 |        | .WORD      | FPPERR      | ;ADDRESS OF ERROR MESSAGE               |
| 1106 |        |        |        |            |             | ;BAD AC3 RESULT                         |
| 1107 | 003446 | 004567 | 000104 | BFAC4: JSR | R5,ADDT     | ;UPDATE EXPECTED RESULT                 |
| 1108 | 003452 | 172704 |        | LDD        | AC4,AC3     | ;SAVE TEMPORARY                         |
| 1109 | 003454 | 174367 | 175416 | STD        | AC3,BTRES   | ;STORE AC4 RESULT                       |
| 1110 | 003460 | 004567 | 000124 | JSR        | R5,BFA      | ;CHECK RESULT                           |

```

1111 003464 001403          BEQ      BFAC5          ;BRANCH IF GOOD
1112 003466 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1113 003470 000015          .WORD      15          ;UNIQUE ERROR NUMBER
1114 003472 002013          .WORD      FPPERR      ;ADDRESS OF ERROR MESSAGE
1115                                     ;BAD AC4 RESULT
1116 003474 004567 000056    BFAC5: JSR      R5,ADDT   ;UPDATE EXPECTED RESULT
1117 003500 172605          LDD      AC5,AC2      ;SAVE TEMPORARY COPY
1118 003502 174267 175370    STD      AC2,BTRES    ;MOVE AC5 RESULT
1119 003506 004567 000076    JSR      R5,BFA       ;CHECK RESULT
1120 003512 001456          BEQ      BFAE         ;BRANCH IF GOOD
1121 003514 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1122 003516 000016          .WORD      16          ;UNIQUE ERROR NUMBER
1123 003520 002013          .WORD      FPPERR      ;ADDRESS OF ERROR MESSAGE
1124                                     ;BAD AC5 RESULT
1125 003522 000452          BR        BFAE         ;EXIT MODULE
1126
1127 003524 162767 000010 175334  SUBT:  SUB      @10,BTEXP ;UPDATE EXPECTED CONTENTS
1128 003532 162767 000010 175330  SUB      @10,BTEXP.2   ;UPDATE EXPECTED CONTENTS
1129 003540 162767 000010 175324  SUB      @10,BTEXP.4   ;UPDATE EXPECTED CONTENTS
1130 003546 162767 000010 175320  SUB      @10,BTEXP.6   ;UPDATE EXPECTED CONTENTS
1131 003554 000205          RTS      R5           ;
1132 003556 062767 000010 175302  ADDT:  ADD      @10,BTEXP ;UPDATE EXPECTED CONTENTS
1133 003564 062767 000010 175276  ADD      @10,BTEXP.2   ;UPDATE EXPECTED CONTENTS
1134 003572 062767 000010 175272  ADD      @10,BTEXP.4   ;UPDATE EXPECTED CONTENTS
1135 003600 062767 000010 175266  ADD      @10,BTEXP.6   ;UPDATE EXPECTED CONTENTS
1136 003606 000205          RTS      R5           ;
1137
1138 003610 026767 175252 175260  BFA:   CMP      BTEXP,BTRES ;VERIFY CONTENTS
1139 003616 001013          BNE      BFB          ;EXIT IF NOT ZERO
1140 003620 026767 175244 175252  CMP      BTEXP.2,BTRES.2 ;VERIFY CONTENTS
1141 003626 001007          BNE      BFB          ;EXIT IF NOT ZERO
1142 003630 026767 175236 175244  CMP      BTEXP.4,BTRES.4 ;VERIFY CONTENTS
1143 003636 001003          BNE      BFB          ;EXIT IF NOT ZERO
1144 003640 026767 175230 175236  CMP      BTEXP.6,BTRES.6 ;VERIFY CONTENTS
1145 003646 000205          BFB:   RTS      R5          ;GO BACK TO CALLING ROUTINE
1146
1147
1148 003650          BFAE:
1149
1150
1151
1152 003650          TSFP1:
1153          ;*****
1154          ;*TEST 3          TEST LDFPS AND STFPS MODE 0
1155          ;*****
1156          TST3:
1157 003650 005267 175130          INC      @TESTN        ;INCREMENT TEST NUMBER
1158 003654 005037 002122          CLR      @TRPFLG      ;CLEAR TRAP FLAG
1159 003660 012704 147757          MOV      @147757,R4   ;SETUP DATA TO BE LOADED
1160 003664 004767 000032          JSR      PC,LOST      ;LOAD AND STORE FPS WITH DATA
1161 003670 012704 105252          MOV      @105252,R4   ;SETUP DATA TO BE LOADED
1162 003674 004767 000022          JSR      PC,LOST      ;LOAD AND STORE FPS WITH DATA
1163 003700 012704 042505          MOV      @42505,R4    ;SETUP DATA TO BE LOADED
1164 003704 004767 000012          JSR      PC,LOST      ;LOAD AND STORE FPS WITH DATA
1165 003710 005004          CLR      R4           ;SETUP DATA TO BE LOADED
1166 003712 004767 000004          JSR      PC,LOST      ;LOAD AND STORE FPS WITH DATA

```

```

1167
1168
1169 003716 000167 000020      ;      JMP      FIN1
1170
1171 003722 170104      ; LOST:  LDFPS  R4      ;LOAD FPS WITH DATA
1172 003724 170201      ;      STFPS  R1      ;LOAD R1 WITH (FPS)
1173 003726 020401      ;      CMP   R4,R1    ;DID THE INSTRUCTIONS WORK
1174 003730 001403      ;      BEQ   1#      ;YES GO ON
1175 003732 104000      ;      ERROR      ;ALL ERRORS TO TRAP TO EMT VECTOR
1176 003734 000017      ;      .WORD  17    ;UNIQUE ERROR NUMBER
1177 003736 002013      ;      .WORD  FPPERR ;ADDRESS OF ERROR MESSAGE
1178
1179 003740 000207      ;#:     RTS   PC      ;NO GO TO ERROR
1180 003742      ;FIN1:      ;RETURN
1181
1182 003742      ;
1183      ;TSFP2:
1184      ;*****
1185      ;*TEST 4      TEST CFCC
1186      ;*****
1186 003742      ;TST4:
1187 003742 005267 175036      ;      INC   #TESTN      ;INCREMENT TEST NUMBER
1188 003746 005037 002122      ;      CLR   @TRPFLG    ;CLEAR TRAP FLAG
1189 003752 012704 000017      ;      MOV   @17,R4     ;SETUP DATA TO BE LOADED
1190 003756 004767 000032      ;      JSR  PC,TSF2    ;LOAD FPS AND COPY CONDITION CODES TO PS
1191 003762 012704 000012      ;      MOV   @12,R4     ;SETUP DATA TO BE LOADED
1192 003766 004767 000022      ;      JSR  PC,TSF2    ;LOAD FPS AND COPY CONDITION CODES TO PS
1193 003772 012704 000005      ;      MOV   @5,R4      ;SETUP DATA TO BE LOADED
1194 003776 004767 000012      ;      JSR  PC,TSF2    ;LOAD FPS AND COPY CONDITION CODES TO PS
1195 004002 005004      ;      CLR   R4        ;SETUP DATA TO BE LOADED
1196 004004 004767 000004      ;      JSR  PC,TSF2    ;LOAD FPS AND COPY CONDITION CODES TO PS
1197
1198
1199 004010 000167 000030      ;      JMP      FIN2
1200
1201 004014 170104      ;TSF2:  LDFPS  R4      ;LOAD FPS
1202 004016 170000      ;      CFCC      ;COPY CONDITION CODES TO PS
1203 004020 013701 177776      ;      MOV   @177776,R1 ;SAVE PS TO R1
1204 004024 042701 177760      ;      BIC   @177760,R1 ;MASK OUT UNWANTED BITS
1205 004030 020401      ;      CMP   R4,R1    ;WAS CONDITION CODE BITS TRANSFERRED
1206      ;      ;CORRECTLY
1207 004032 001403      ;      BEQ   1#      ;YES GO ON
1208 004034 104000      ;      ERROR      ;ALL ERRORS TO TRAP TO EMT VECTOR
1209 004036 000020      ;      .WORD  20    ;UNIQUE ERROR NUMBER
1210 004040 002013      ;      .WORD  FPPERR ;ADDRESS OF ERROR MESSAGE
1211
1212 004042 000207      ;#:     RTS   PC      ;NO GO TO ERROR
1213 004044      ;FIN2:      ;RETURN
1214
1215 004044      ;
1216      ;TSFP3:
1217      ;*****
1218      ;*TEST 5      TEST SEIF, SETD, SETI, SETL
1219      ;*****
1219 004044      ;TST5:
1220 004044 005267 174734      ;      INC   #TESTN      ;INCREMENT TEST NUMBER
1221 004050 005037 002122      ;      CLR   @TRPFLG    ;CLEAR TRAP FLAG
1222 004054 012704 000200      ;      MOV   @200,R4     ;SETUP DATA TO BE LOADED

```

|      |        |        |        |   |               |         |                                   |
|------|--------|--------|--------|---|---------------|---------|-----------------------------------|
| 1223 | 004060 | 170104 |        | LDFPS                                   | R4            |         | ;LOAD FPS                         |
| 1224 | 004062 | 170001 |        | SETF                                    |               |         | ;MAKE FD=0                        |
| 1225 | 004064 | 170201 |        | STFPS                                   | R1            |         | ;STORE FPS                        |
| 1226 | 004066 | 020127 | 000000 | CMP                                     | R1,#0         |         | ;IS FD=0                          |
| 1227 | 004072 | 001403 |        | BEQ                                     | 1#            |         | ;YES GO ON                        |
| 1228 | 004074 | 104000 |        | ERROR                                   |               |         | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 1229 | 004076 | 000021 |        | .WORD                                   |               |         | ;UNIQUE ERROR NUMBER              |
| 1230 | 004100 | 002013 |        | .WORD                                   | FPPERR        |         | ;ADDRESS OF ERROR MESSAGE         |
| 1231 |        |        |        |   |               |         | ;NO GO TO ERROR                   |
| 1232 | 004102 | 170011 |        | 16:                                     | SETD          |         | ;MAKE FD=1                        |
| 1233 | 004104 | 170201 |        | STFPS                                   | R1            |         | ;STORE FPS                        |
| 1234 | 004106 | 020104 |        | CMP                                     | R1,R4         |         | ;IS FD=1                          |
| 1235 | 004110 | 001403 |        | BEQ                                     | 2#            |         | ;YES GO ON                        |
| 1236 | 004112 | 104000 |        | ERROR                                   |               |         | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 1237 | 004114 | 000022 |        | .WORD                                   |               |         | ;UNIQUE ERROR NUMBER              |
| 1238 | 004116 | 002013 |        | .WORD                                   | FPPERR        |         | ;ADDRESS OF ERROR MESSAGE         |
| 1239 |        |        |        |   |               |         | ;NO GO TO ERROR                   |
| 1240 | 004120 | 012704 | 000100 | 21:                                     | MOV           | #100,R4 | ;SETUP DATA TO BE LOADED          |
| 1241 | 004124 | 170104 |        | LDFPS                                   | R4            |         | ;LOAD FPS                         |
| 1242 | 004126 | 170002 |        | SETI                                    |               |         | ;MAKE FL=0                        |
| 1243 | 004130 | 170201 |        | STFPS                                   | R1            |         | ;STORE FPS                        |
| 1244 | 004132 | 020127 | 000000 | CMP                                     | R1,#0         |         | ;IS FL=0                          |
| 1245 | 004136 | 001403 |        | BEQ                                     | 3#            |         | ;YES GO ON                        |
| 1246 | 004140 | 104000 |        | ERROR                                   |               |         | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 1247 | 004142 | 000023 |        | .WORD                                   |               |         | ;UNIQUE ERROR NUMBER              |
| 1248 | 004144 | 002013 |        | .WORD                                   | FPPERR        |         | ;ADDRESS OF ERROR MESSAGE         |
| 1249 |        |        |        |   |               |         | ;NO GO TO ERROR                   |
| 1250 | 004146 | 170012 |        | 31:                                     | SETL          |         | ;MAKE FL=1                        |
| 1251 | 004150 | 170201 |        | STFPS                                   | R1            |         | ;STORE FPS                        |
| 1252 | 004152 | 020104 |        | CMP                                     | R1,R4         |         | ;IS FL=1                          |
| 1253 | 004154 | 001403 |        | BEQ                                     | 4#            |         | ;YES GO ON                        |
| 1254 | 004156 | 104000 |        | ERROR                                   |               |         | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 1255 | 004160 | 000024 |        | .WORD                                   |               |         | ;UNIQUE ERROR NUMBER              |
| 1256 | 004162 | 002013 |        | .WORD                                   | FPPERR        |         | ;ADDRESS OF ERROR MESSAGE         |
| 1257 |        |        |        |   |               |         | ;NO GO TO ERROR                   |
| 1258 | 004164 |        |        | 41:                                     |               |         |                                   |
| 1259 |        |        |        |   |               |         |                                   |
| 1260 |        |        |        |   |               |         |                                   |
| 1261 | 004164 |        |        | ;TSFP4:                                 |               |         |                                   |
| 1262 |        |        |        | ;*****                                  |               |         |                                   |
| 1263 |        |        |        | ;*TEST 6 TEST ILLEGAL OP CODES AND STST |               |         |                                   |
| 1264 |        |        |        | ;*****                                  |               |         |                                   |
| 1265 | 004164 |        |        | TST6:                                   |               |         |                                   |
| 1266 | 004164 | 005267 | 174614 | INC                                     | #TESTN        |         | ;INCREMENT TEST NUMBER            |
| 1267 | 004170 | 005037 | 002122 | CLR                                     | #TRPFLG       |         | ;CLEAR TRAP FLAG                  |
| 1268 | 004174 | 012705 | 170003 | MOV                                     | #170003,R5    |         | ;INIT OP CODE                     |
| 1269 | 004200 | 013746 | 000244 | MOV                                     | #0244,-(SP)   |         | ;SAVE FP VECTOR                   |
| 1270 | 004204 | 012737 | 004340 | 000244                                  | #ILLOP1,#0244 |         | ;SETUP NEW VECTOR                 |
| 1271 | 004212 | 013746 | 000004 | MOV                                     | #04,-(SP)     |         | ;SAVE TIME OUT VECTOR             |
| 1272 | 004216 | 012737 | 004424 | 000004                                  | #TIMEOU,#04   |         | ;SETUP NEW VECTOR                 |
| 1273 | 004224 | 013746 | 000010 | MOV                                     | #010,-(SP)    |         | ;SAVE ILLEGAL VECTOR              |
| 1274 | 004230 | 012737 | 004434 | 000010                                  | #ILLOP2,#010  |         | ;SETUP NEW VECTOR                 |
| 1275 | 004236 | 005003 |        | D1:                                     | CLR           | R3      |                                   |
| 1276 | 004240 | 170103 |        | LDFPS                                   | R3            |         | ;CLEAR FPS                        |
| 1277 | 004242 | 005002 |        | CLR                                     | R2            |         |                                   |
| 1278 | 004244 | 010537 | 004250 | MOV                                     | R5,#002       |         | ;SETUP THE ILLEGAL INST           |

|      |        |        |        |         |       |             |  |  |   |
|------|--------|--------|--------|---------|-------|-------------|--|--|---|
| 1279 | 004250 | 000000 |        | D2:     | .WORD | 0           |  |  |   |
| 1280 | 004252 | 170000 |        | D3:     | CFCC  |             |  |  | ; MEMORY WORDS TO BE USED WITH          |
| 1281 | 004254 | 005202 |        |         | INC   | R2          |  |  | ; EXECUTION OF ILLEGAL OP CODE          |
| 1282 | 004256 | 005202 |        |         | INC   | R2          |  |  |   |
| 1283 | 004260 | 170201 |        |         | STFPS | R1          |  |  | ; SAVE FPS                              |
| 1284 | 004262 | 104000 |        |         | ERROR |             |  |  | ; ALL ERRORS TO TRAP TO EMT VECTOR      |
| 1285 | 004264 | 000025 |        |         | .WORD | 25          |  |  | ; UNIQUE ERROR NUMBER                   |
| 1286 | 004266 | 002013 |        |         | .WORD | FPPERR      |  |  | ; ADDRESS OF ERROR MESSAGE              |
| 1287 |        |        |        |         |       |             |  |  | ; GO TO ERROR                           |
| 1288 | 004270 | 022705 | 170010 | D4:     | CMP   | #170010,R5  |  |  | ; COMPUTE NEXT OP CODE                  |
| 1289 | 004274 | 001003 |        |         | BNE   | D5          |  |  |   |
| 1290 | 004276 | 012705 | 170013 |         | MOV   | #170013,R5  |  |  |   |
| 1291 | 004302 | 000755 |        |         | BR    | D1          |  |  |   |
| 1292 | 004304 | 022705 | 170077 | D5:     | CMP   | #170077,R5  |  |  |   |
| 1293 | 004310 | 001001 |        |         | BNE   | D6          |  |  |   |
| 1294 | 004312 | 000402 |        |         | BR    | D7          |  |  |   |
| 1295 | 004314 | 005205 |        | D6:     | INC   | R5          |  |  |   |
| 1296 | 004316 | 000747 |        |         | BR    | D1          |  |  |   |
| 1297 | 004320 | 012637 | 000010 | D7:     | MOV   | (SP)+,B#10  |  |  | ; RESTORE VECTORS                       |
| 1298 | 004324 | 012637 | 000004 |         | MOV   | (SP)+,B#4   |  |  |   |
| 1299 | 004330 | 012637 | 000244 |         | MOV   | (SP)+,B#244 |  |  |   |
| 1300 |        |        |        |         |       |             |  |  |   |
| 1301 |        |        |        |         |       |             |  |  |   |
| 1302 | 004334 | 000167 | 000104 |         | JMP   | FIN4        |  |  |   |
| 1303 |        |        |        |         |       |             |  |  |   |
| 1304 | 004340 | 022716 | 004252 | ILLOP1: | CMP   | #D3,(SP)    |  |  | ; DID TRAP OCCUR ON TEST INST           |
| 1305 | 004344 | 001403 |        |         | BEQ   | 1#          |  |  | ; YES GO ON                             |
| 1306 | 004346 | 104000 |        |         | ERROR |             |  |  | ; ALL ERRORS TO TRAP TO EMT VECTOR      |
| 1307 | 004350 | 000026 |        |         | .WORD | 26          |  |  | ; UNIQUE ERROR NUMBER                   |
| 1308 | 004352 | 002013 |        |         | .WORD | FPPERR      |  |  | ; ADDRESS OF ERROR MESSAGE              |
| 1309 |        |        |        |         |       |             |  |  | ; NO GO TO ERROR                        |
| 1310 | 004354 | 022626 |        | 1#:     | CMP   | (SP)+,(SP)+ |  |  | ; CLEAN UP STACK                        |
| 1311 | 004356 | 170201 |        |         | STFPS | R1          |  |  | ; STORE FPS                             |
| 1312 | 004360 | 022701 | 100000 |         | CMP   | #100000,R1  |  |  | ; IS FPS CORRECT                        |
| 1313 | 004364 | 001403 |        |         | BEQ   | 2#          |  |  | ; YES GO ON                             |
| 1314 | 004366 | 104000 |        |         | ERROR |             |  |  | ; ALL ERRORS TO TRAP TO EMT VECTOR      |
| 1315 | 004370 | 000027 |        |         | .WORD | 27          |  |  | ; UNIQUE ERROR NUMBER                   |
| 1316 | 004372 | 002013 |        |         | .WORD | FPPERR      |  |  | ; ADDRESS OF ERROR MESSAGE              |
| 1317 |        |        |        |         |       |             |  |  | ; NO GO TO ERROR                        |
| 1318 | 004374 | 005004 |        | 2#:     | CLR   | R4          |  |  | ; INT R4 TO A KNOWN STATE               |
| 1319 | 004376 | 170304 |        |         | STST  | R4          |  |  | ; STORE FEC AT R4                       |
| 1320 |        |        |        |         |       |             |  |  | ; IF THE DESTINATION MODE IS IMPROPERLY |
| 1321 |        |        |        |         |       |             |  |  | ; DECODED AN ODD ADDRESS TRAP TO 4      |
| 1322 |        |        |        |         |       |             |  |  | ; SHOULD OCCUR                          |
| 1323 | 004400 | 022704 | 000002 |         | CMP   | #2,R4       |  |  | ; IS FEC CORRECT                        |
| 1324 | 004404 | 001002 |        |         | BNE   | 3#          |  |  | ; NO GO TO ERROR                        |
| 1325 | 004406 | 000167 | 177656 |         | JMP   | D4          |  |  | ; YES GO ON                             |
| 1326 | 004412 |        |        | 3#:     |       |             |  |  |   |
| 1327 | 004412 | 104000 |        |         | ERROR |             |  |  | ; ALL ERRORS TO TRAP TO EMT VECTOR      |
| 1328 | 004414 | 000030 |        |         | .WORD | 30          |  |  | ; UNIQUE ERROR NUMBER                   |
| 1329 | 004416 | 002013 |        |         | .WORD | FPPERR      |  |  | ; ADDRESS OF ERROR MESSAGE              |
| 1330 |        |        |        |         |       |             |  |  | ; GO TO ERROR                           |
| 1331 | 004420 | 000167 | 177644 |         | JMP   | D4          |  |  | ; THEN GO ON                            |
| 1332 |        |        |        |         |       |             |  |  |   |
| 1333 | 004424 |        |        | TIMEOU: |       |             |  |  |   |
| 1334 | 004424 | 104000 |        |         | ERROR |             |  |  | ; ALL ERRORS TO TRAP TO EMT VECTOR      |

```

1335 004426 000031          .WORD 31          ;UNIQUE ERROR NUMBER
1336 004430 002013          .WORD FPPERR      ;ADDRESS OF ERROR MESSAGE
1337                                ;ERROR BECAUSE OF TRAP TO 4
1338 004432 000006          RTT                ;RETURN
1339                                ;
1340                                ; ILL0P2:
1341 004434 104000          ERROR              ;ALL ERRORS TO TRAP TO EMT VECTOR
1342 004436 000032          .WORD 32          ;UNIQUE ERROR NUMBER
1343 004440 002013          .WORD FPPERR      ;ADDRESS OF ERROR MESSAGE
1344                                ;ERROR BECAUSE OF TRAP TO 10
1345 004442 000006          RTT                ;RETURN
1346 004444
1347                                ;
1348 004444          ;TSFP5:
1349                                ;*****
1350                                ;*TEST 7          TEST FID (INTERRUPT DISABLE BIT)
1351                                ;*****
1352                                ;TST7:
1353 004444 005267 174334          INC              ;INCREMENT TEST NUMBER
1354 004450 005037 002122          CLR              ;CLEAR TRAP FLAG
1355 004454 013746 000244          MOV              ;SAVE FP VECTOR
1356 004460 012737 004544 000244          MOV              ;SETUP NEW VECTOR
1357 004466 012703 040000          MOV              ;SETUP DATA TO BE LOADED
1358 004472 170103          LDFPS R3         ;LOAD FPS, FID=1
1359 004474 170020          .WORD 170020    ;ILLEGAL FP INSTRUCTION
1360 004476 170000          CFCC
1361 004500 170201          STFPS R1         ;SEE IF ERROR WAS RECORDED IN FPS
1362 004502 022701 140000          CMP              ;
1363 004506 001403          BEQ 1$          ;YES GO ON
1364 004510 104000          ERROR           ;ALL ERRORS TO TRAP TO EMT VECTOR
1365 004512 000033          .WORD 33          ;UNIQUE ERROR NUMBER
1366 004514 002013          .WORD FPPERR      ;ADDRESS OF ERROR MESSAGE
1367                                ;NO GO TO ERROR
1368 004516 170304          1$: STST R4        ;SEE IF FEC=2
1369 004520 022704 000002          CMP              ;
1370 004524 001403          BEQ 2$          ;YES GO ON
1371 004526 104000          ERROR           ;ALL ERRORS TO TRAP TO EMT VECTOR
1372 004530 000034          .WORD 34          ;UNIQUE ERROR NUMBER
1373 004532 002013          .WORD FPPERR      ;ADDRESS OF ERROR MESSAGE
1374                                ;NO GO TO ERROR
1375 004534 012637 000244          2$: MOV (SP)+,R0244 ;RESTORE VECTOR
1376
1377                                ;
1378 004540 000167 000010          ; JMP FIN5
1379                                ;
1380                                ; ILL:
1381 004544 104000          ERROR           ;ALL ERRORS TO TRAP TO EMT VECTOR
1382 004546 000035          .WORD 35          ;UNIQUE ERROR NUMBER
1383 004550 002013          .WORD FPPERR      ;ADDRESS OF ERROR MESSAGE
1384                                ;FID ERROR
1385 004552 000006          RTT                ;RETURN
1386 004554          ;FIN5:
1387                                ;
1388 004554          ;TSFP6:
1389                                ;*****
1390                                ;*TEST 10          TEST LDD, STD FSRC AND FDST MODE 1
    
```

```

1391
1392 004554
1393 004554 005267 174224
1394 004560 005037 002122
1395 004564 005004
1396 004566 170104
1397 004570 170011
1398 004572 013746 000004
1399 004576 012737 004750 000004
1400 004604 012704 004740
1401 004610 172414
1402 004612 020427 004740
1403 004616 001403
1404 004620 104000
1405 004622 000036
1406 004624 002013
1407
1408 004626 012701 004730 1#:
1409 004632 012703 000004 MOV #4,R3
1410 004636 022421 2#: CMP (R4)+,(R1)+
1411 004640 001403 BEQ 3#
1412 004642 104000 ERROR
1413 004644 000037 .WORD 37
1414 004646 002013 .WORD FPPERR
1415
1416 004650 077306 3#: SOB R3,2#
1417 004652 012704 001136 MOV #TSTLOC,R4
1418 004656 174014 STD ACO,(R4)
1419 004660 020427 001136 CMP R4,#TSTLOC
1420 004664 001403 BEQ 4#
1421 004666 104000 ERROR
1422 004670 000040 .WORD 40
1423 004672 002013 .WORD FPPERR
1424
1425 004674 012701 004730 4#: MOV #TS6DA,R1
1426 004700 012703 000004 MOV #4,R3
1427 004704 022421 5#: CMP (R4)+,(R1)+
1428 004706 001403 BEQ 6#
1429 004710 104000 ERROR
1430 004712 000041 .WORD 41
1431 004714 002013 .WORD FPPERR
1432
1433 004716 077306 6#: SOB R3,5#
1434 004720 012637 000004 MOV (SP)+,#0#
1435
1436
1437 004724 000167 000030 JMP FIN6
1438
1439 004730 177777 TS6DA: .WORD 177777
1440 004732 000000 .WORD 000000
1441 004734 052525 .WORD 052525
1442 004736 125252 .WORD 125252
1443 004740 177777 TS6DAT: .WORD 177777
1444 004742 000000 .WORD 000000
1445 004744 052525 .WORD 052525
1446 004746 125252 .WORD 125252

```





```

1503 005150 077306          CHK7: SOB      R3,CHEK7      ;ARE WE DONE
1504 005152 000207          RTS      PC          ;YES RETURN
1505
1506 005154                ;
1507 005154 104000          ;SF7:
1508 005156 000044          ERROR                      ;ALL ERRORS TO TRAP TO EMT VECTOR
1509 005160 002013          .WORD    44              ;UNIQUE ERROR NUMBER
1510                                .WORD    FPPERR           ;ADDRESS OF ERROR MESSAGE
1511 005162 000006          RTT                      ;ODD ADDRESS TRAP
1512                                ;RETURN
1513 005164 000000          ;TS7DA1: .WORD    0
1514 005166 000000          .WORD    0
1515 005170 000000          .WORD    0
1516 005172 000000          .WORD    0
1517 005174 037641          TS7DA2: .WORD    37641
1518 005176 065121          .WORD    65121
1519 005200 037373          .WORD    37373
1520 005202 022265          .WORD    22265
1521 005204 000000          TS7DA4: .WORD    0
1522 005206 000000          .WORD    0
1523 005210 037373          .WORD    37373
1524 005212 022265          .WORD    22265
1525 005214
1526
1527 005214          FIN7:
1528          ;
1529          ;TSFP10:
1530          ;*****
1531          ;*TEST 12      TEST STD, STF FDST MODE 0
1532          ;*****
1533          ;
1534          ;TST12:
1535          INC      #TESTN          ;INCREMENT TEST NUMBER
1536          CLR      #TRPFLG        ;CLEAR TRAP FLAG
1537          MOV     #200,R4         ;SETUP TC LOAD FPS
1538          LDFPS  R4              ;LOAD FPS, FD=1
1539          MOV     @R4,-(SP)       ;SAVE TIMEOUT VECTOR
1540          MOV     #TSF10,@R4      ;SETUP NEW VECTOR
1541          MOV     #TS10D1,R4      ;SETUP POINTER TO DATA
1542          LDD    (R4),AC0         ;CLEAR ACO
1543          MOV     #TS10D2,R1      ;SETUP POINTER TO DATA
1544          LDD    (R1),AC1         ;LOAD AC1 WITH DATA
1545          STD    AC1,AC0          ; TEST INSTRUCTION
1546          MOV     #TSTLOC,R4      ;
1547          STD    AC1,(R4)         ;CHECK IF AC1 HAS BEEN ALTERED
1548          JSR    PC,CHEC10        ;
1549          MOV     #TSTLOC,R4      ;SETUP POINTERS FOR DATA
1550          MOV     #TS10D2,R1      ;
1551          STD    ACO,(R4)         ;CHECK IF ACO RECEIVED CORRECT DATA
1552          JSR    PC,CHEC10        ;
1553          MOV     #TS10D1,R1      ;SETUP POINTER TO DATA
1554          LDD    (R1),AC1         ;CLEAR AC1
1555          SETF  AC1,AC0          ;SET FD=0
1556          STF   AC1,AC0          ; TEST INSTRUCTION
1557          SETD  AC1,AC0          ;SET FD=1
1558          MOV     #TSTLOC,R4      ;SETUP POINTER TO DATA
1559          STD    AC1,(R4)         ;CHECK IF AC1 HAS BEEN ALTERED
1560          JSR    PC,CHEC10        ;
1561          MOV     #TS10D4,R4      ;SETUP POINTERS FOR DATA

```

000004

```

1559 005344 012701 001136      MOV    #TSTLOC,R1
1560 005350 174011              STD    ACO,(R1)          ;CHECK IF ACO HAS CORRECT DATA
1561 005352 004767 000010      JSR    PC,CHEC10        ;
1562 005356 012637 000004      MOV    (SP)+,#04        ;RESTORE VECTOR
1563
1564
1565 005362 000167 000062      JMP    FIN10
1566
1567 005366 012703 000004      CHEC10: MOV    #4,R3          ;INIT COUNTER
1568 005372 022421      CH10:  CMP    (R4)+,(R1)+    ;IS DATA OK
1569 005374 001403      BEQ    CHK10             ;YES GO ON
1570 005376 104000      ERROR  ;ALL ERRORS TO TRAP TO EMT VECTOR
1571 005400 000045      .WORD  45                ;UNIQUE ERROR NUMBER
1572 005402 002013      .WORD  FPPERR           ;ADDRESS OF ERROR MESSAGE
1573
1574 005404 077306      CHK10: SOB   R3,CH10      ;NO GO TO ERROR
1575 005406 000207      RTS    PC                ;ARE WE DONE
1576
1577
1578 005410 104000      TSF10: ERROR  ;ALL ERRORS TO TRAP TO EMT VECTOR
1579 005412 000046      .WORD  46                ;UNIQUE ERROR NUMBER
1580 005414 002013      .WORD  FPPERR           ;ADDRESS OF ERROR MESSAGE
1581
1582 005416 000006      RTT                      ;ODD ADDRESS TRAP
1583
1584 005420 000000      TS10D1: .WORD  0
1585 005422 000000      .WORD  0
1586 005424 000000      .WORD  0
1587 005426 000000      .WORD  0
1588 005430 177777      TS10D2: .WORD  177777
1589 005432 111236      .WORD  111236
1590 005434 100045      .WORD  100045
1591 005436 003651      .WORD  3651
1592 005440 000000      TS10D4: .WORD  0
1593 005442 000000      .WORD  0
1594 005444 100045      .WORD  100045
1595 005446 003651      .WORD  3651
1596 005450
1597
1598 005450
1599
1600
1601
1602 005450
1603 005450 005267 173330      TST13: INC    #TESTN          ;INCREMENT TEST NUMBER
1604 005454 005037 002122      CLR    #TRPFLG         ;CLEAR TRAP FLAG
1605 005460 012704 006200      MOV    #200,R4         ;SETUP TO LOAD FPS
1606 005464 170164      LDFPS R4                ;SET FD=1
1607 005466 012704 005550      MOV    #TS11D1,R4      ;SETUP POINTER TO DATA
1608 005472 172414      LDD    (R4),ACO        ;LOAD ALL ONES TO ACO
1609 005474 170400      CLR   ACO              ; TEST INSTRUCTION
1610 005476 170203      STFPS R3                ;GET FPS
1611 005500 012704 001136      MOV    #TSTLOC,R4
1612 005504 174014      STD    ACO,(R4)        ;CHECK ACO FOR ALL ZEROES
1613 005506 012701 000004      MOV    #4,R1           ;INIT COUNTER
1614 005512 022427 000000      18:   CMP    (R4)+,#0

```

<3

```

1615 005516 001403          BEQ      2#                ;OK GO ON
1616 005520 104000          ERROR                    ;ALL ERRORS TO TRAP TO EMT VECTOR
1617 005522 000047          .WORD    47                ;UNIQUE ERROR NUMBER
1618 005524 002013          .WORD    FPPERR           ;ADDRESS OF ERROR MESSAGE
1619                                     ;NO GO TO ERROR
1620 005526 077107          2# :   SOB      R1,1#        ;ARE WE DONE
1621 005530 020327 000204   CMP      R3,#204          ;CHECK FPS
1622 005534 001403          BEQ      3#                ;OK GO ON
1623 005536 104000          ERROR                    ;ALL ERRORS TO TRAP TO EMT VECTOR
1624 005540 000050          .WORD    50                ;UNIQUE ERROR NUMBER
1625 005542 002013          .WORD    FPPERR           ;ADDRESS OF ERROR MESSAGE
1626                                     ;NO GO TO ERROR
1627 005544          3# :
1628
1629
1630 005544 000167 000010   ;           JMP      FIN11
1631
1632 005550 177777          ;TS1101: .WORD    177777
1633 005552 177777          .WORD    177777
1634 005554 177777          .WORD    177777
1635 005556 177777          .WORD    177777
1636 005560          FIN11:
1637
1638 005560          ;TSFP12:
1639          ;*****
1640          ;*TEST 14      TEST FDST SOP MODE 0 WITH ILLEGAL AC7
1641          ;*****
1642          TST14:
1643 005560 005267 173220   INC      #TESTN           ;INCREMENT TEST NUMBER
1644 005564 005037 002122   CLR      @TRPFLG         ;CLEAR TRAP FLAG
1645 005570 012703 040200   MOV      #40200,R3       ;SETUP TO LOAD FPS
1646 005574 170103          LDFPS   R3                ;SET FID=1, AND FD=1
1647 005576 170407          CLRD   AC7               ; TEST INSTRUCTION
1648 005600 170204          STFPS  R4                ;GET FPS
1649 005602 170305          STST   R5                ;GET FEC
1650 005604 022704 140200   CMP      #140200,R4      ;IS FPS CORRECT
1651 005610 001403          BEQ     1#                ;YES GO ON
1652 005612 104000          ERROR                    ;ALL ERRORS TO TRAP TO EMT VECTOR
1653 005614 000051          .WORD    51                ;UNIQUE ERROR NUMBER
1654 005616 002013          .WORD    FPPERR           ;ADDRESS OF ERROR MESSAGE
1655                                     ;NO GO TO ERROR
1656 005620 022705 000002   1# :   CMP      #2,R5        ;IS FEC CORRECT
1657 005624 001403          BEQ     2#                ;YES GO ON
1658 005626 104000          ERROR                    ;ALL ERRORS TO TRAP TO EMT VECTOR
1659 005630 000052          .WORD    52                ;UNIQUE ERROR NUMBER
1660 005632 002013          .WORD    FPPERR           ;ADDRESS OF ERROR MESSAGE
1661                                     ;NO GO TO ERROR
1662 005634          2# :
1663
1664
1665 005634          ;TSFP13:
1666          ;*****
1667          ;*TEST 15      TEST FDST SOP MODE 1
1668          ;*****
1669 005634          TST15:
1670 005634 005267 173144   INC      #TESTN           ;INCREMENT TEST NUMBER
    
```

```

1671 005640 013746 000004      MOV      @#4,-(SP)      ;SAVE TIMEOUT VECTOR
1672 005644 012737 005774 000004      MOV      @TSF13,@#4    ;SETUP NEW VECTOR
1673 005652 005037 002122      CLR      @#TRPFLG      ;CLEAR TRAP FLAG
1674 005656 012702 000200      MOV      @200,R2       ;SETUP TO LOAD FPS
1675 005662 170102      LDFPS    R2             ;SET FD=1
1676 005664 012705 000004      MOV      @#4,R5        ;INIT COUNTER
1677 005670 012704 001136      MOV      @TSTLOC,R4    ;SETUP POINTER TO TEST LOCATION
1678 005674 012724 177777      100$:    MOV      @177777,(R4)+ ;MOVE ALL ONES TO TEST LOCATION
1679 005700 077503      SOB      R5,100$       ;ARE WE DONE
1680 005702 012702 001136      MOV      @TSTLOC,R2    ;SETUP POINTER TO DATA
1681 005706 170412      CLRD     (R2)          ; TEST INSTRUCTION
1682 005710 170203      STFPS    R3            ;GET FPS
1683 005712 020227 001136      CMP      R2,@TSTLOC    ;WAS R2 ALTERED
1684 005716 001403      BEQ      1$           ;NO GO ON
1685 005720 104000      ERROR   ;              ;ALL ERRORS TO TRAP TO EMT VECTOR
1686 005722 000053      .WORD   53            ;UNIQUE ERROR NUMBER
1687 005724 002013      .WORD   FPPERR        ;ADDRESS OF ERROR MESSAGE
1688      ;YES GO TO ERROR
1689 005726 012701 000004      1$:    MOV      @#4,R1      ;INIT COUNTER
1690 005732 022227 000000      2$:    CMP      (R2)+,@#0    ;CHECK LOCATION FOR 0
1691 005736 001403      BEQ      3$           ;OK GO ON
1692 005740 104000      ERROR   ;              ;ALL ERRORS TO TRAP TO EMT VECTOR
1693 005742 000054      .WORD   54            ;UNIQUE ERROR NUMBER
1694 005744 002013      .WORD   FPPERR        ;ADDRESS OF ERROR MESSAGE
1695      ;NO GO TO ERROR
1696 005746 077107      3$:    SOB      R1,2$       ;ARE WE DONE
1697 005750 020327 000204      CMP      R3,@204      ;CHECK FPS
1698 005754 001403      BEQ      4$           ;OK GO ON
1699 005756 104000      ERROR   ;              ;ALL ERRORS TO TRAP TO EMT VECTOR
1700 005760 000055      .WORD   55            ;UNIQUE ERROR NUMBER
1701 005762 002013      .WORD   FPPERR        ;ADDRESS OF ERROR MESSAGE
1702      ;NO GO TO ERROR
1703 005764 012637 000004      4$:    MOV      (SP)+,@#4    ;RESTORE VECTOR
1704
1705      ;
1706 005770 000167 000010      JMP      FIN13
1707
1708      ;
1708 005774      TSF13:
1709 005774 104000      ERROR   ;              ;ALL ERRORS TO TRAP TO EMT VECTOR
1710 005776 000056      .WORD   56            ;UNIQUE ERROR NUMBER
1711 006000 002013      .WORD   FPPERR        ;ADDRESS OF ERROR MESSAGE
1712      ;ODD ADDRESS TRAP
1713 006002 000006      RTT      ;RETURN
1714
1715      ;
1715 006004      FIN13:
1716      ;
1717 006004      TSFP14:
1718      ;*****
1719      ;*TEST 16      TEST FDST SOP MODE 2
1720      ;*****
1721 006004      TST16:
1722 006004 005267 172774      INC      @TESTN        ;INCREMENT TEST NUMBER
1723 006010 013746 000004      MOV      @#4,-(SP)     ;SAVE TIMEOUT VECTOR
1724 006014 012737 006150 000004      MOV      @TSF14,@#4    ;SETUP NEW VECTOR
1725 006022 005037 002122      CLR      @#TRPFLG      ;CLEAR TRAP FLAG
1726 006026 012702 000200      MOV      @200,R2       ;SETUP TO LOAD FPS

```

```

1727 006032 170102          LDFPS R2          ;SET FD=1
1728 006034 012705 000004    MOV  #4,R5        ;INIT COUNTER
1729 006040 012704 001136    MOV  #TSTLOC,R4   ;SETUP POINTER TO TEST LOCATION
1730 006044 012724 177777    MOV  #177777,(R4);MOVE ALL ONES TO TEST LOCATION
1731 006050 077503          SOB  R5,100#      ;ARE WE DONE
1732 006052 012702 001136    MOV  #TSTLOC,R2   ;SETUP POINTER TO DATA
1733 006056 170422          CLRD (R2)+        ; TEST INSTRUCTION
1734 006060 170203          STFPS R3         ;GET FPS
1735 006062 020227 001146    CMP  R2,#TSTLOC+10; IS R2 CORRECT
1736 006066 001403          BEQ  1#          ;YES GO ON
1737 006070 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1738 006072 000057          .WORD 57        ;UNIQUE ERROR NUMBER
1739 006074 002013          .WORD FPPERR    ;ADDRESS OF ERROR MESSAGE
1740                                ;NO GO TO ERROR
1741 006076 012702 001136    1#: MOV  #TSTLOC,R2 ;SETUP POINTER TO DATA
1742 006102 012701 000004    MOV  #4,R1        ;INIT COUNTER
1743 006106 022227 000000    2#: CMP  (R2)+,#0 ;CHECK LOCATION FOR 0
1744 006112 001403          BEQ  3#          ;YES GO ON
1745 006114 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1746 006116 000060          .WORD 60        ;UNIQUE ERROR NUMBER
1747 006120 002013          .WORD FPPERR    ;ADDRESS OF ERROR MESSAGE
1748                                ;NO GO TO ERROR
1749 006122 077107          3#: SOB  R1,2#    ;ARE WE DONE
1750 006124 020327 000204    CMP  R3,#204     ;CHECK FPS
1751 006130 001403          BEQ  4#          ;OK GO ON
1752 006132 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1753 006134 000061          .WORD 61        ;UNIQUE ERROR NUMBER
1754 006136 002013          .WORD FPPERR    ;ADDRESS OF ERROR MESSAGE
1755                                ;NO GO TO ERROR
1756 006140 012637 000004    4#: MOV  (SP)+,#0# ;RESTORE VECTOR
1757
1758                                ;
1759 006144 000167 000010    ; JMP  FIN14
1760                                ;
1761 006150          ;TSF14:
1762 006150 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1763 006152 000062          .WORD 62        ;UNIQUE ERROR NUMBER
1764 006154 002013          .WORD FPPERR    ;ADDRESS OF ERROR MESSAGE
1765                                ;ODD ADDRESS TRAP
1766 006156 000006          RTT           ;RETURN
1767                                ;
1768 006160          ;FIN14:
1769                                ;
1770 006160          ;TSFP15:
1771                                ;*****
1772                                ;*TEST 17 TEST FDST SOP MODE 3
1773                                ;*****
1774 006160          ;TST17:
1775 006160 005267 172620    INC  #TESTN      ;INCREMENT TEST NUMBER
1776 006164 013746 000004    MOV  #0#,-(SP)  ;SAVE TIMEOUT VECTOR
1777 006170 012737 006370 000004    MOV  #TSF15,#0# ;SETUP NEW VECTOR
1778 006176 005037 002122    CLR  #TRPFLG    ;CLEAR TRAP FLAG
1779 006202 012702 000200    MOV  #200,R2    ;SETUP TO LOAD FPS
1780 006206 170102          LDFPS R2        ;SET FD=1
1781 006210 012705 000011    MOV  #9,R5      ;INIT COUNTER
1782 006214 012704 001136    MOV  #TSTLOC,R4 ;SETUP POINTER TO TEST LOCATION

```

```

1783 006220 012724 177777      100$:  MOV    #177777,(R4)+      ;INIT TEST LOCATION
1784 006224 077503              SOB    R5,100$          ;ARE WE DONE
1785 006226 012737 001150 001136  MOV    #TSTLOC+12,#TSTLOC ;INIT TEST LOCATION
1786 006234 012702 001136      MOV    #TSTLOC,R2      ;SETUP POINTER TO DATA
1787 006240 170432              CLRD  @R2)+            ; TEST INSTRUCTION
1788 006242 170203              STFPS R3                ;GET FPS
1789 006244 020227 001140      CMP    R2,#TSTLOC+2    ;IS R2 CORRECT
1790 006250 001403              BEQ   1$                ;YES GO ON
1791 006252 104000              ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1792 006254 000063              .WORD 63                ;UNIQUE ERROR NUMBER
1793 006256 002013              .WORD FPPERR           ;ADDRESS OF ERROR MESSAGE
1794                                ;NO GO TO ERROR
1795 006260 012702 001136      1$:  MOV    #TSTLOC,R2      ;SETUP POINTER TO DATA
1796 006264 022227 001150      CMP    (R2)+,#TSTLOC+12 ;IS DATA CORRECT
1797 006270 001403              BEQ   2$                ;YES GO ON
1798 006272 104000              ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1799 006274 000064              .WORD 64                ;UNIQUE ERROR NUMBER
1800 006276 002013              .WORD FPPERR           ;ADDRESS OF ERROR MESSAGE
1801                                ;NO GO TO ERROR
1802 006300 012701 000004      2$:  MOV    #4,R1           ;INIT COUNTER
1803 006304 022227 177777      3$:  CMP    (R2)+,#177777  ;IS LOCATION ALL ONES
1804 006310 001403              BEQ   4$                ;YES GO ON
1805 006312 104000              ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1806 006314 000065              .WORD 65                ;UNIQUE ERROR NUMBER
1807 006316 002013              .WORD FPPERR           ;ADDRESS OF ERROR MESSAGE
1808                                ;NO GO TO ERROR
1809 006320 077107              4$:  SOB    R1,3$           ;ARE WE DONE
1810 006322 012701 000004      MOV    #4,R1           ;INIT COUNTER
1811 006326 022227 000000      5$:  CMP    (R2)+,#0       ;IS LOCATION 0
1812 006332 001403              BEQ   6$                ;YES GO ON
1813 006334 104000              ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1814 006336 000066              .WORD 66                ;UNIQUE ERROR NUMBER
1815 006340 002013              .WORD FPPERR           ;ADDRESS OF ERROR MESSAGE
1816                                ;NO GO TO ERROR
1817 006342 077107              6$:  SOB    R1,5$           ;ARE WE DONE
1818 006344 020327 000204      CMP    R3,#204        ;CHECK FPS
1819 006350 001403              BEQ   7$                ;OK GO ON
1820 006352 104000              ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1821 006354 000067              .WORD 67                ;UNIQUE ERROR NUMBER
1822 006356 002013              .WORD FPPERR           ;ADDRESS OF ERROR MESSAGE
1823                                ;NO GO TO ERROR
1824 006360 012637 000004      7$:  MOV    (SP)+,#04      ;RESTORE VECTOR
1825
1826
1827 006364 000167 000010      ;      JMP    FIN15
1828
1829 006370      ;TSF15:
1830 006370 104000              ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1831 006372 000070              .WORD 70                ;UNIQUE ERROR NUMBER
1832 006374 002013              .WORD FPPERR           ;ADDRESS OF ERROR MESSAGE
1833                                ;ODD ADDRESS TRAP
1834 006376 000006              RTT                    ;RETURN
1835
1836 006400      ;FIN15:
1837
1838 006400      ;TSFP16:

```

```

1839                                     ;*****
1840 ;*TEST 20          TEST F0ST SOP MODE 4
1841 ;*****
1842 006400                                TST20:
1843 006400 005267 172400                INC      #TESTN          ;INCREMENT TEST NUMBER
1844 006404 013746 000004                MOV      #04,-(SP)      ;SAVE TIMEOUT VECTOR
1845 006410 012737 006562 000004        MOV      #TSF16,#04    ;SETUP NEW VECTOR
1846 006416 005037 002122                CLR      #TRPFLG       ;CLEAR TRAP FLAG
1847 006422 012702 000200                MOV      #200,R2       ;SETUP TO LOAD FPS
1848 006426 170102                        LDFPS   R2             ;SET FD=1
1849 006430 012705 000010                MOV      #0,R5         ;INIT COUNTER
1850 006434 012704 001136                MOV      #TSTLOC,R4    ;SETUP POINTER TO TEST LOCATION
1851 006440 012724 177777 1000:        MOV      #177777,(R4)  ;INIT TEST LOCATION
1852 006444 077503                        SOB      R5,1000      ;ARE WE DONE
1853 006446 012702 001146                MOV      #TSTLOC+10,R2 ;SETUP POINTER TO DATA
1854 006452 170442                        CLRD    -(R2)         ;TEST INSTRUCTION
1855 006454 170203                        STFPS   R3            ;GET FPS
1856 006456 020227 001136                CMP      R2,#TSTLOC    ;IS R2 CORRECT
1857 006462 001403                        BEQ     1#            ;YES GO ON
1858 006464 104000                        ERROR   ;              ;ALL ERRORS TO TRAP TO EMT VECTOR
1859 006466 000071                        .WORD  71            ;UNIQUE ERROR NUMBER
1860 006470 002013                        .WORD  FPPERR        ;ADDRESS OF ERROR MESSAGE
1861                                     ;NO GO TO ERROR
1862 006472 012701 000004 1#:         MOV      #4,R1         ;INIT COUNTER
1863 006476 022227 000000 2#:         CMP      (R2)+,#0     ;IS LOCATION 0
1864 006502 001403                        BEQ     3#            ;YES GO ON
1865 006504 104000                        ERROR   ;              ;ALL ERRORS TO TRAP TO EMT VECTOR
1866 006506 000072                        .WORD  72            ;UNIQUE ERROR NUMBER
1867 006510 002013                        .WORD  FPPERR        ;ADDRESS OF ERROR MESSAGE
1868                                     ;NO GO TO ERROR
1869 006512 077107 3#:         SOB      R1,2#        ;ARE WE DONE
1870 006514 012701 000004                MOV      #4,R1         ;INIT COUNTER
1871 006520 022227 177777 4#:         CMP      (R2)+,#177777 ;IS LOCATION UNCHANGED
1872 006524 001403                        BEQ     5#            ;YES GO ON
1873 006526 104000                        ERROR   ;              ;ALL ERRORS TO TRAP TO EMT VECTOR
1874 006530 000073                        .WORD  73            ;UNIQUE ERROR NUMBER
1875 006532 002013                        .WORD  FPPERR        ;ADDRESS OF ERROR MESSAGE
1876                                     ;NO GO TO ERROR
1877 006534 077107 5#:         SOB      R1,4#        ;ARE WE DONE
1878 006536 020327 000204                CMP      R3,#204      ;CHECK FPS
1879 006542 001403                        BEQ     6#            ;OK GO ON
1880 006544 104000                        ERROR   ;              ;ALL ERRORS TO TRAP TO EMT VECTOR
1881 006546 000074                        .WORD  74            ;UNIQUE ERROR NUMBER
1882 006550 002013                        .WORD  FPPERR        ;ADDRESS OF ERROR MESSAGE
1883                                     ;NO GO TO ERROR
1884 006552 012637 000004 6#:         MOV      (SP)+,#04    ;RESTORE VECTOR
1885
1886
1887 006556 000167 000010                JMP     FIN16
1888
1889 ;TSF16:
1890 006562 104000                        ERROR   ;              ;ALL ERRORS TO TRAP TO EMT VECTOR
1891 006564 000075                        .WORD  75            ;UNIQUE ERROR NUMBER
1892 006566 002013                        .WORD  FPPERR        ;ADDRESS OF ERROR MESSAGE
1893                                     ;ODD ADDRESS TRAP
1894 006570 000006                RTT                ;RETURN

```



```

1895
1896 006572
1897
1898 006572
1899
1900
1901
1902 006572
1903 006572 005267 172206
1904 006576 013746 000004
1905 006602 012737 006776 000004
1906 006610 005037 002122
1907 006614 012702 000200
1908 006620 170102
1909 006622 012705 000011
1910 006626 012704 001136
1911 006632 012724 177777 1001:
1912 006636 077503
1913 006640 012737 001150 001136
1914 006646 012702 001140
1915 006652 170452
1916 006654 170203
1917 006656 020227 001136
1918 006662 001403
1919 006664 104000
1920 006666 000076
1921 006670 002013
1922
1923 006672 022227 001150 11:
1924 006676 001403
1925 006700 104000
1926 006702 000077
1927 006704 002013
1928
1929 006706 012701 000004 21:
1930 006712 022227 177777 31:
1931 006716 001403
1932 006720 104000
1933 006722 000100
1934 006724 002013
1935
1936 006726 077107 41:
1937 006730 012701 000004
1938 006734 022227 000000 51:
1939 006740 001403
1940 006742 104000
1941 006744 000101
1942 006746 002013
1943
1944 006750 077107 61:
1945 006752 020327 000204
1946 006756 001403
1947 006760 104000
1948 006762 000102
1949 006764 002013
1950
    
```

```

;
FIN16:
;
TSFP17:
;*****
; *TEST 21 TEST FDST SOP MODE 5
;*****
TST21:
    INC      #TESTN          ; INCREMENT TEST NUMBER
    MOV      #4, -(SP)       ; SAVE TIMEOUT VECTOR
    MOV      #TSF17, #4     ; SETUP NEW VECTOR
    CLR      #TRPFLG        ; CLEAR TRAP FLAG
    MOV      #200, R2       ; SETUP TO LOAD FPS
    LDFPS   R2              ; SET FD=1
    MOV      #9, R5         ; INIT COUNTER
    MOV      #TSTLOC, R4    ; SETUP POINTER TO TEST LOCATION
    MOV      #177777, (R4). ; INIT TEST LOCATION
    SOB     R5, 1001        ; ARE WE DONE
    MOV      #TSTLOC+12, #TSTLOC ; INIT TEST LOCATION
    MOV      #TSTLOC+2, R2  ; SETUP POINTER TO DATA
    CLRD    #-(R2)         ; TEST INSTRUCTION
    STFPS   R3              ; GET FPS
    CMP     R2, #TSTLOC     ; IS R2 CORRECT
    BEQ     11             ; YES GO ON
    ERROR   76             ; ALL ERRORS TO TRAP TO EMT VECTOR
    .WORD   FPPERR        ; UNIQUE ERROR NUMBER
    .WORD   FPPERR        ; ADDRESS OF ERROR MESSAGE
    .NO GO TO ERROR
    CMP     (R2), #TSTLOC+12 ; IS DATA CORRECT
    BEQ     21             ; YES GO ON
    ERROR   77             ; ALL ERRORS TO TRAP TO EMT VECTOR
    .WORD   FPPERR        ; UNIQUE ERROR NUMBER
    .WORD   FPPERR        ; ADDRESS OF ERROR MESSAGE
    .NO GO TO ERROR
    MOV     #4, R1         ; INIT COUNTER
    CMP     (R2), #177777 ; IS LOCATION ALL ONES
    BEQ     41             ; YES GO ON
    ERROR   100            ; ALL ERRORS TO TRAP TO EMT VECTOR
    .WORD   FPPERR        ; UNIQUE ERROR NUMBER
    .WORD   FPPERR        ; ADDRESS OF ERROR MESSAGE
    .NO GO TO ERROR
    SOB     R1, 31        ; ARE WE DONE
    MOV     #4, R1         ; INIT COUNTER
    CMP     (R2), #0      ; IS LOCATION 0
    BEQ     61             ; YES GO ON
    ERROR   101           ; ALL ERRORS TO TRAP TO EMT VECTOR
    .WORD   FPPERR        ; UNIQUE ERROR NUMBER
    .WORD   FPPERR        ; ADDRESS OF ERROR MESSAGE
    .NO GO TO ERROR
    SOB     R1, 51        ; ARE WE DONE
    CMP     R3, #204      ; CHECK FPS
    BEQ     71             ; OK GO ON
    ERROR   102           ; ALL ERRORS TO TRAP TO EMT VECTOR
    .WORD   FPPERR        ; UNIQUE ERROR NUMBER
    .WORD   FPPERR        ; ADDRESS OF ERROR MESSAGE
    .NO GO TO ERROR
    
```

```

1951 006766 012637 000004      7:  MOV      (SP),004      ;RESTORE VECTOR
1952
1953
1954 006772 000167 000010      ;
1955      JMP      FIN17
1956 006776      ;
1957 006776 104000      TSF17:
1958 007000 000103      ERROR      ;ALL ERRORS TO TRAP TO EMT VECTOR
1959 007002 002013      .WORD     103      ;UNIQUE ERROR NUMBER
1960      .WORD     FPPERR      ;ADDRESS OF ERROR MESSAGE
1961 007004 000006      RTT      ;ODD ADDRESS TRAP
1962      ;RETURN
1963 007006      ;
1964      FIN17:
1965 007006      ;
1966      TSFP20:
1967      ;
1968      ;*****
1969      ;+TEST 22      TEST FDST SOP MODE 6
1970      ;*****
1971 007006 005267 171772      TST22:
1972 007012 005037 002122      INC      @TESTN      ;INCREMENT TEST NUMBER
1973 007016 013746 000004      CLR      @TRPFLG      ;CLEAR TRAP FLAG
1974 007022 012737 007176 000004      MOV      @04,-(SP)      ;SAVE TIMEOUT VECTOR
1975 007030 012702 000200      MOV      @TSF20,@04      ;SETUP NEW VECTOR
1976 007034 170102      MOV      @200,R2      ;SETUP TO LOAD FPS
1977 007036 012705 000010      LDFPS   R2      ;SET FD=1
1978 007042 012704 001136      MOV      @8,R5      ;INIT COUNTER
1979 007046 012724 177777      MOV      @TSTLOC,R4      ;SETUP POINTER TO TEST LOCATION
1980 007052 077503      SOB      R5,100      ;INIT TEST LOCATION
1981 007054 012702 001137      MOV      @TSTLOC+1,R2      ;ARE WE DONE
1982 007060 170462 000007      CLRD    7(R2)      ;SETUP POINTER TO DATA
1983 007064 170203      STFPS   R3      ;TEST INSTRUCTION
1984 007066 020227 001137      CMP      R2,@TSTLOC+1      ;GET FPS
1985 007072 001403      BEQ     10      ;IS R2 CORRECT
1986 007074 104000      ERROR   ;YES GO ON
1987 007076 000104      .WORD   104      ;ALL ERRORS TO TRAP TO EMT VECTOR
1988 007100 002013      .WORD   FPPERR      ;UNIQUE ERROR NUMBER
1989      ;ADDRESS OF ERROR MESSAGE
1990 007102 012702 001136      10:  MOV      @TSTLOC,R2      ;NO GO TO ERROR
1991 007106 012701 000004      MOV      @4,R1      ;SETUP POINTER TO DATA
1992 007112 022227 177777      20:  CMP      (R2),@177777      ;INIT COUNTER
1993 007116 001403      BEQ     30      ;IS DATA CORRECT
1994 007120 104000      ERROR   ;YES GO ON
1995 007122 000105      .WORD   105      ;ALL ERRORS TO TRAP TO EMT VECTOR
1996 007124 002013      .WORD   FPPERR      ;UNIQUE ERROR NUMBER
1997      ;ADDRESS OF ERROR MESSAGE
1998 007126 077107      30:  SOB      R1,20      ;NO GO TO ERROR
1999 007130 012701 000004      MOV      @4,R1      ;ARE WE DONE
2000 007134 022227 000000      40:  CMP      (R2),@0      ;INIT COUNTER
2001 007140 001403      BEQ     50      ;IS DATA CORRECT
2002 007142 104000      ERROR   ;YES GO ON
2003 007144 000106      .WORD   106      ;ALL ERRORS TO TRAP TO EMT VECTOR
2004 007146 002013      .WORD   FPPERR      ;UNIQUE ERROR NUMBER
2005      ;ADDRESS OF ERROR MESSAGE
2006 007150 077107      50:  SOB      R1,40      ;NO GO TO ERROR
2007 007152 020327 000204      CMP      R3,@204      ;ARE WE DONE
2008      ;IS FPS CORRECT

```

```

2007 007156 001403 BEQ 6# ;YES GO ON
2008 007160 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2009 007162 000107 .WORD 107 ;UNIQUE ERROR NUMBER
2010 007164 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
2011 ;NO GO TO ERROR
2012 007166 012637 000004 6# : MOV (SP)+,0#4 ;RESTORE VECTOR
2013 ;
2014 ;
2015 007172 000167 000010 ; JMP FIN20
2016 ;
2017 ;TSF20.
2018 007176 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2019 007200 000110 .WORD 110 ;UNIQUE ERROR NUMBER
2020 007202 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
2021 ;ODD ADDRESS TRAP
2022 007204 000006 RTT ;RETURN
2023 ;
2024 ;FIN20:
2025 ;
2026 007206 ;TSFP21:
2027 ;*****
2028 ;*TEST 23 TEST FDST SOP MODE 7
2029 ;*****
2030 007206 TST23:
2031 007206 005267 171572 INC #TESTN ;INCREMENT TEST NUMBER
2032 007212 005037 002122 CLR #TRPFLG ;CLEAR TRAP FLAG
2033 007216 013746 000004 MOV #4,-(SP) ;SAVE TIMEOUT VECTOR
2034 007222 012737 007420 000004 MOV #TSF21,#4 ;SETUP NEW VECTOR
2035 007230 012702 000200 MOV #200,R2 ;SETUP TO LOAD FPS
2036 007234 170102 LDFPS R2 ;SET FD=1
2037 007236 012705 000010 MOV #0,R5 ;INIT COUNTER
2038 007242 012704 001136 MOV #TSTLOC,R4 ;SETUP POINTER TO TEST LOCATION
2039 007246 012724 177777 100# : MOV #177777,(R4) ;INIT TEST LOCATION
2040 007252 077503 SOB R5,100# ;ARE WE DONE
2041 007254 012737 001136 001146 MOV #TSTLOC,#TSTLOC+10 ;INIT TEST LOCATION
2042 007262 012702 001141 MOV #TSTLOC+3,R2 ;SETUP POINTER TO DATA
2043 007266 170472 000005 CLRD #5(R2) ;***TEST INSTRUCTION***
2044 007272 170203 STFPS R3 ;GET FPS
2045 007274 020227 001141 CMP R2,#TSTLOC+3 ;IS R2 CORRECT
2046 007300 001403 BEQ 1# ;YES GO ON
2047 ;NO GO TO ERROR
2048 007302 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2049 007304 000111 .WORD 111 ;UNIQUE ERROR NUMBER
2050 007306 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
2051 007310 012702 001136 1# : MOV #TSTLOC,R2 ;SETUP POINTER TO DATA
2052 007314 012701 000004 MOV #4,R1 ;INIT COUNTER
2053 007320 022227 000000 2# : CMP (R2)+,#0 ;IS DATA CORRECT
2054 007324 001403 BEQ 3# ;YES GO ON
2055 007326 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2056 007330 000112 .WORD 112 ;UNIQUE ERROR NUMBER
2057 007332 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
2058 ;NO GO TO ERROR
2059 007334 077107 001136 3# : SOB R1,2# ;ARE WE DONE
2060 007336 022227 001136 CMP (R2)+,#TSTLOC ;IS DATA CORRECT
2061 007342 001403 BEQ 4# ;YES GO ON
2062 007344 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR

```

```

2063 007346 000113 .WORD 113 ;UNIQUE ERROR NUMBER
2064 007350 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
2065 ;NO GO TO ERROR
2066 007352 012701 000003 4$: MOV #3,R1 ;INIT COUNTER
2067 007356 022227 177777 5$: CMP (R2)+,#177777 ;IS DATA CORRECT
2068 007362 001403 BEQ 6$ ;YES GO ON
2069 007364 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2070 007366 000114 .WORD 114 ;UNIQUE ERROR NUMBER
2071 007370 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
2072 ;NO GO TO ERROR
2073 007372 077107 6$: SOB R1,5$ ;ARE WE DONE
2074 007374 020327 000204 CMP R3,#204 ;CHECK FPS
2075 007400 001403 BEQ 7$ ;OK GO ON
2076 007402 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2077 007404 000115 .WORD 115 ;UNIQUE ERROR NUMBER
2078 007406 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
2079 ;NO GO TO ERROR
2080 007410 012637 000004 7$: MOV (SP)+,#04 ;RESTORE VECTOR
2081 ;
2082 ;
2083 007414 000167 000010 JMP FIN21
2084 ;
2085 TSF21: ;
2086 007420 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2087 007422 000116 .WORD 116 ;UNIQUE ERROR NUMBER
2088 007424 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
2089 ;ODD ADDRESS TRAP
2090 007426 000006 RTT ;RETURN
2091 ;
2092 FIN21: ;
2093 TSFP22: ;
2094 ;*****
2095 ;*TEST 24 TEST FOST SOP MODE 3 GR7
2096 ;*****
2097 TST24: ;
2098 007430 005267 171350 INC #TESTN ;INCREMENT TEST NUMBER
2099 007434 005037 002122 CLR #TRPFLG ;CLEAR TRAP FLAG
2100 007440 013746 000004 MOV #04,-(SP) ;SAVE TIME OUT VECTOR
2101 007444 012737 007606 000004 MOV #TSF22,#04 ;SETUP NEW VECTOR
2102 007452 012702 000200 MOV #200,R2 ;SETUP TO LOAD FPS
2103 007456 170102 LDFPS R2 ;SET FD=1
2104 007460 012705 000010 MOV #8,R5 ;INIT COUNTER
2105 007464 012704 001136 MOV #TSTLOC,R4 ;SETUP POINTER TO TEST LOCATION
2106 007470 012724 177777 100$: MOV #177777,(R4)+ ;INIT TEST LOCATION
2107 007474 077503 SOB R5,100$ ;ARE WE DONE
2108 007476 012737 001146 001136 MOV #TSTLOC+10,#TSTLOC ;INIT TEST LOCATION
2109 007504 170437 001136 CLRD #TSTLOC ; TEST INSTRUCTION
2110 007510 170203 STFPS R3 ;GET FPS
2111 007512 012702 001136 MOV #TSTLOC,R2 ;SETUP POINTER TO DATA
2112 007516 012701 000004 MOV #4,R1 ;INIT COUNTER
2113 007522 022227 000000 1$: CMP (R2)+,#0 ;IS DATA CORRECT
2114 007526 001403 BEQ 2$ ;YES GO ON
2115 007530 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2116 007532 000117 .WORD 117 ;UNIQUE ERROR NUMBER
2117 007534 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
2118 ;NO GO TO ERROR
    
```

```

2119 007536 077107      2$: SOB      R1,1$      ;ARE WE DONE
2120 007540 012701      MOV      #4,R1      ;INIT COUNTER
2121 007544 022227 000004 3$: CMP      (R2)+,#177777 ;IS DATA CORRECT
2122 007550 001403      BEQ      4$         ;YES GO ON
2123 007552 104000      ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
2124 007554 000120      .WORD   120        ;UNIQUE ERROR NUMBER
2125 007556 002013      .WORD   FPPERR     ;ADDRESS OF ERROR MESSAGE
2126                                     ;NO GO TO ERROR
2127 007560 077107      4$: SOB      R1,3$      ;ARE WE DONE
2128 007562 020327 000204  CMP      R3,#204    ;CHECK FPS
2129 007566 001403      BEQ      5$         ;OK GO ON
2130 007570 104000      ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
2131 007572 000121      .WORD   121        ;UNIQUE ERROR NUMBER
2132 007574 002013      .WORD   FPPERR     ;ADDRESS OF ERROR MESSAGE
2133                                     ;NO GO TO ERROR
2134 007576 012637 000004 5$: MOV      (SP)+,#0$ ;RESTORE VECTOR
2135
2136 ;
2137 007602 000167 000010 ; JMP      FIN22
2138 ;
2139 ;TSF22:
2140 007606 104000      ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
2141 007610 000122      .WORD   122        ;UNIQUE ERROR NUMBER
2142 007612 002013      .WORD   FPPERR     ;ADDRESS OF ERROR MESSAGE
2143                                     ;ODD ADDRESS TRAP
2144 007614 000006      RTT         ;RETURN
2145 ;
2146 ;FIN22:
2147 ;
2148 ;TSFP23:
2149 ;*****
2150 ;*TEST 25 TEST F0ST SOP MODE 6 GR7
2151 ;*****
2152 ;TST25:
2153 007616 005267 171162      INC      #TESTN     ;INCREMENT TEST NUMBER
2154 007622 005037 002122      CLR      #TRPFLG    ;CLEAR TRAP FLAG
2155 007626 013746 000004      MOV      #0$,-(SP)  ;SAVE TIMEOUT VECTOR
2156 007632 012737 007744 000004  MOV      #TSF23,#0$ ;SETUP NEW VECTOR
2157 007640 012702 000200      MOV      #200,R2    ;SETUP TO LOAD FPS
2158 007644 170102      LDFPS   R2         ;SET FD=1
2159 007646 012705 000004      MOV      #4,R5      ;INIT COUNTER
2160 007652 012704 001136      MOV      #TSTLOC,R4 ;SETUP POINTER TO TEST LOCATION
2161 007656 012724 177777 100$: MOV      #177777,(R4)+ ;INIT TEST LOCATION
2162 007662 077503      SOB      R5,100$   ;ARE WE DONE
2163 007664 170467 171246      CLRD    TSTLOC     ; TEST INSTRUCTION
2164 007670 170203      STFPS   R3         ;GET FPS
2165 007672 012701 000004      MOV      #4,R1      ;INIT COUNTER
2166 007676 012702 001136      MOV      #TSTLOC,R2 ;SETUP POINTER TO DATA
2167 007702 022227 000000 1$: CMP      (R2)+,#0 ;IS DATA CORRECT
2168 007706 001403      BEQ      2$         ;YES GO ON
2169 007710 104000      ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
2170 007712 000123      .WORD   123        ;UNIQUE ERROR NUMBER
2171 007714 002013      .WORD   FPPERR     ;ADDRESS OF ERROR MESSAGE
2172                                     ;NO GO TO ERROR
2173 007716 077107      2$: SOB      R1,1$      ;ARE WE DONE
2174 007720 020327 000204  CMP      R3,#204    ;CHECK FPS

```

```

2175 007724 001403      BEQ      3#      ;OK GO ON
2176 007726 104000      ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
2177 007730 000124      .WORD    124    ;UNIQUE ERROR NUMBER
2178 007732 002013      .WORD    FPPERR ;ADDRESS OF ERROR MESSAGE
2179                                ;NO GO TO ERROR
2180 007734 012637 000004 3# : MOV      (SP)+,B#4 ;RESTORE VECTOR
2181
2182
2183 007740 000167 000010 ;      JMP      FIN23
2184
2185 007744                ;TSF23:
2186 007744 104000      ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
2187 007746 000125      .WORD    125    ;UNIQUE ERROR NUMBER
2188 007750 002013      .WORD    FPPERR ;ADDRESS OF ERROR MESSAGE
2189                                ;OOD ADDRESS TRAP
2190 007752 000006      RTT
2191 007754                ;
2192
2193 007754                ;TSFP24:
2194                ;*****
2195                ;*TEST 26      TEST FDST SOP MODE 7 GR7
2196                ;*****
2197
2198 007754                TST26:
2198 007754 005267 171024      INC      $TESTN ;INCREMENT TEST NUMBER
2199 007760 005037 002122      CLR      @TRPFLG ;CLEAR TRAP FLAG
2200 007764 013746 000004      MOV      @#4,-(SP) ;SAVE TIMEOUT VECTOR
2201 007770 012737 010146 000004      MOV      @TSF24,B#4 ;SETUP NEW VECTOR
2202 007776 012702 000200      MOV      @200,R2 ;SETUP TO LOAD FPS
2203 010002 170102                LDFPS    R2 ;SET FD=1
2204 010004 012705 000010      MOV      @# ,R5 ;INIT COUNTER
2205 010010 012704 001136      MOV      @TSTLOC,R4 ;SETUP TEST LOCATION POINTER
2206 010014 012724 177777      100# : MOV      @177777,(R4)+ ;INIT TEST LOCATION
2207 010020 077503                SOB      R5,100# ;ARE WE DONE
2208 010022 012737 001136 001146      MOV      @TSTLOC,@TSTLOC+10 ;INIT TEST LOCATION
2209 010030 170477 171112      CLRD    @TSTLOC+10 ;***TEST INSTRUCTION***
2210 010034 170203                STFPS    R3 ;GET FPS
2211 010036 012702 001136      MOV      @TSTLOC,R2 ;SETUP POINTER TO DATA
2212 010042 012701 000004      MOV      @#4,R1 ;INIT COUNTER
2213 010046 022227 000000      1# : CMP      (R2)+,@#0 ;IS DATA CORRECT
2214 010052 001403                BEQ      2# ;YES GO ON
2215                                ;NO, GO TO ERROR
2216 010054 104000      ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
2217 010056 000126      .WORD    126    ;UNIQUE ERROR NUMBER
2218 010060 002013      .WORD    FPPERR ;ADDRESS OF ERROR MESSAGE
2219 010062 077107      2# : SOB      R1,1# ;ARE WE DONE
2220 010064 022227 001136      CMP      (R2)+,@TSTLOC ;IS DATA CORRECT
2221 010070 001403                BEQ      3# ;YES GO ON
2222                                ;NO, GO TO ERROR
2223 010072 104000      ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
2224 010074 000127      .WORD    127    ;UNIQUE ERROR NUMBER
2225 010076 002013      .WORD    FPPERR ;ADDRESS OF ERROR MESSAGE
2226 010100 012701 000003      3# : MOV      @3,R1 ;INIT COUNTER
2227 010104 022227 177777      4# : CMP      (R2)+,@177777 ;IS DATA CORRECT
2228 010110 001403                BEQ      5# ;YES GO ON
2229 010112 104000      ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
2230 010114 000130      .WORD    130    ;UNIQUE ERROR NUMBER

```

```

2231 010116 002013          .WORD  FPPERR          ;ADDRESS OF ERROR MESSAGE
2232                                ;NO GO TO ERROR
2233 010120 077107          SOB    R1,4#          ;ARE WE DONE
2234 010122 020327 000204   CMP    R3,#204       ;CHECK FPS
2235 010126 001403          BEQ    6#             ;OK GO ON
2236 010130 104000          ERROR  ;ALL ERRORS TO TRAP TO EMT VECTOR
2237 010132 000131          .WORD  131           ;UNIQUE ERROR NUMBER
2238 010134 002013          .WORD  FPPERR          ;ADDRESS OF ERROR MESSAGE
2239                                ;NO GO TO ERROR
2240 010136 012637 000004   MOV    (SP),#0#4     ;RESTORE VECTOR
2241                                ;
2242                                ;
2243 010142 000167 000010   JMP    FIN24
2244                                ;
2245                                ;TSF24:
2246 010146 104000          ERROR  ;ALL ERRORS TO TRAP TO EMT VECTOR
2247 010150 000132          .WORD  132           ;UNIQUE ERROR NUMBER
2248 010152 002013          .WORD  FPPERR          ;ADDRESS OF ERROR MESSAGE
2249                                ;ODD ADDRESS TRAP
2250 010154 000006          RTT
2251                                ;
2252 010156          ;FIN24:
2253                                ;
2254 010156          ;TSFP25:
2255          ;:*****
2256          ;*TEST 27      TEST CLRF
2257          ;:*****
2258          ;TST27:
2259 010156 005267 170622   INC    #TESTN          ;INCREMENT TEST NUMBER
2260 010162 005037 002122   CLR    @TRPFLG         ;CLEAR TRAP FLAG
2261 010166 005002          CLR    R2              ;SETUP TO LOAD FPS
2262 010170 170102          LDFPS R2              ;SET FD=0
2263 010172 012705 000004   MOV    #4,R5           ;INIT COUNTER
2264 010176 012704 001136   MOV    @TSTLOC,R4      ;SETUP POINTER TO TEST LOCATION
2265 010202 012724 177777   MOV    #177777,(R4)    ;INIT TEST LOCATION
2266 010206 077503          SOB    R5,100#         ;ARE WE DONE
2267 010210 012702 001136   MOV    @TSTLOC,R2      ;SETUP POINTER TO DATA
2268 010214 170422          CLRF  (R2)             ; TEST INSTRUCTION
2269 010216 170203          STFPS R3              ;GET FPS
2270 010220 020227 001142   CMP    R2,@TSTLOC*4    ;IS R2 CORRECT
2271 010224 001403          BEQ    1#              ;YES GO ON
2272                                ;NO, GO TO ERROR
2273                                ;ALL ERRORS TO TRAP TO EMT VECTOR
2274 010230 000133          .WORD  133           ;UNIQUE ERROR NUMBER
2275 010232 002013          .WORD  FPPERR          ;ADDRESS OF ERROR MESSAGE
2276 010234 012702 001136   MOV    #TSTLOC,R2      ;SETUP POINTER TO DATA
2277 010240 012701 000002   MOV    #2,R1           ;INIT COUNTER
2278 010244 022227 000000   CMP    (R2),#0         ;IS DATA CORRECT
2279 010250 001403          BEQ    3#              ;YES GO ON
2280                                ;NO, GO TO ERROR
2281                                ;ALL ERRORS TO TRAP TO EMT VECTOR
2282 010252 104000          ERROR  ;UNIQUE ERROR NUMBER
2283 010254 000134          .WORD  134           ;ADDRESS OF ERROR MESSAGE
2284 010256 002013          .WORD  FPPERR          ;ADDRESS OF ERROR MESSAGE
2285 010260 077107          SOB    R1,2#           ;ARE WE DONE
2286 010262 012701 000002   MOV    #2,R1           ;INIT COUNTER
2287 010266 022227 177777   CMP    (R2),#177777    ;IS DATA CORRECT

```

```

2287 010272 001403          BEQ      5#          ;YES GO ON
2288                                ;NO GO TO ERROR
2289 010274 104000          ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
2290 010276 000135          .WORD    135                                ;UNIQUE ERROR NUMBER
2291 010300 002013          .WORD    FPPERR                            ;ADDRESS OF ERROR MESSAGE
2292 010302 077107          .WORD    R1,4#                             ;ARE WE DONE
2293 010304 020327 000004 5#: SOB      R1,4#                             ;CHECK FPS
2294 010310 001403          CMP      R3,#04                             ;OK GO ON
2295                                BEQ      6#          ;NO, GO TO ERROR
2296 010312 104000          ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
2297 010314 000136          .WORD    136                                ;UNIQUE ERROR NUMBER
2298 010316 002013          .WORD    FPPERR                            ;ADDRESS OF ERROR MESSAGE
2299 010320          6#:
2300
2301
2302 010320          ;
2303          ;*****
2304          ;*TEST 30      TEST TSTF AND TSTD
2305          ;*****
2306 010320          TST30:
2307 010320 005267 170460          INC      #TESTN                            ;INCREMENT TEST NUMBER
2308 010324 005037 002122          CLR     @TRPFLG                            ;CLEAR TRAP FLAG
2309 010330 005004          CLR     R4                                ;SETUP TO LOAD FPS
2310 010332 170104          LDFPS  R4                                ;SET FD=0
2311 010334 170567 000300          TSTF   TS26D0                             ;***TEST INSTRUCTION***
2312 010340 170203          STFPS  R3                                ;GET FPS
2313 010342 020327 000004          CMP     R3,#04                             ;CHECK FPS
2314 010346 001403          BEQ     1#          ;OK GO ON
2315                                ;NO, GO TO ERROR
2316 010350 104000          ERROR                                ;ALL ERRORS TO TRAP TO EMT VECTOR
2317 010352 000137          .WORD    137                                ;UNIQUE ERROR NUMBER
2318 010354 002013          .WORD    FPPERR                            ;ADDRESS OF ERROR MESSAGE
2319 010356 012704 010640          1#: MOV     @TS26D0,R4                       ;SETUP POINTERS TO DATA
2320 010362 012702 010670          MOV     @TS26D3,R2
2321 010366 004767 000224          JSR    PC,CHEC26
2322 010372 170537 010650          TSTF   @TS26D1
2323 010376 170203          STFPS  R3                                ;CHECK IF DATA IS CORRECT
2324 010400 020327 000010          CMP     R3,#10                             ;***TEST INSTRUCTION***
2325 010404 001403          BEQ     2#          ;GET FPS
2326                                ;CHECK FPS
2327                                ;OK GO ON
2328 010410 104000          ERROR                                ;NO, GO TO ERROR
2329 010412 002013          .WORD    FPPERR                            ;ALL ERRORS TO TRAP TO EMT VECTOR
2330 010414 012704 010650          2#: MOV     @TS26D1,R4                       ;UNIQUE ERROR NUMBER
2331 010420 012702 010700          MOV     @TS26D4,R2                          ;ADDRESS OF ERROR MESSAGE
2332 010424 004767 000166          JSR    PC,CHEC26                            ;SETUP POINTERS TO DATA
2333 010430 170567 000224          TSTF   TS26D2
2334 010434 170203          STFPS  R3                                ;CHECK IF DATA IS CORRECT
2335 010436 020327 000000          CMP     R3,#0
2336 010442 001403          BEQ     3#          ;***TEST INSTRUCTION***
2337                                ;GET FPS
2338 010444 104000          ERROR                                ;CHECK FPS
2339 010446 000141          .WORD    141                                ;OK GO ON
2340 010450 002013          .WORD    FPPERR                            ;NO, GO TO ERROR
2341 010452 012704 010660          3#: MOV     @TS26D2,R4                       ;ALL ERRORS TO TRAP TO EMT VECTOR
2342 010456 012702 010710          MOV     @TS26D5,R2                          ;UNIQUE ERROR NUMBER

```



<4

|      |        |        |        |     |         |              |  |                                   |
|------|--------|--------|--------|-----|---------|--------------|--|-----------------------------------|
| 2343 | 010462 | 004767 | 000130 |     | JSR     | PC,CHEC26    |  | ;CHECK IF DATA IS CORRECT         |
| 2344 | 010466 | 012704 | 000200 |     | MOV     | #200,R4      |  | ;SETUP TO LOAD FPS                |
| 2345 | 010472 | 170104 |        |     | LDFPS   | R4           |  | ;SET FD=1                         |
| 2346 | 010474 | 170537 | 010640 |     | TSTD    | #TS26D0      |  | ;***TEST INSTRUCTION***           |
| 2347 | 010500 | 170203 |        |     | STFPS   | R3           |  | ;GET FPS                          |
| 2348 | 010502 | 020327 | 000204 |     | CMP     | R3,#204      |  | ;CHECK FPS                        |
| 2349 | 010506 | 001403 |        |     | BEQ     | 4#           |  | ;OK GO ON                         |
| 2350 |        |        |        |     |         |              |  | ;NO, GO TO ERROR                  |
| 2351 | 010510 | 104000 |        |     | ERROR   |              |  | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 2352 | 010512 | 000142 |        |     | .WORD   | 142          |  | ;UNIQUE ERROR NUMBER              |
| 2353 | 010514 | 002013 |        |     | .WORD   | FPPERR       |  | ;ADDRESS OF ERROR MESSAGE         |
| 2354 | 010516 | 012704 | 010640 | 4#: | MOV     | #TS26D0,R4   |  | ;SETUP POINTERS TO DATA           |
| 2355 | 010522 | 012702 | 010670 |     | MOV     | #TS26D3,R2   |  |                                   |
| 2356 | 010526 | 004767 | 000064 |     | JSR     | PC,CHEC26    |  | ;CHECK IF DATA IS CORRECT         |
| 2357 | 010532 | 170567 | 000112 |     | TSTD    | TS26D1       |  | ;***TEST INSTRUCTION***           |
| 2358 | 010536 | 170203 |        |     | STFPS   | R3           |  | ;GET FPS                          |
| 2359 | 010540 | 020327 | 000210 |     | CMP     | R3,#210      |  | ;CHECK FPS                        |
| 2360 | 010544 | 001403 |        |     | BEQ     | 5#           |  | ;OK GO ON                         |
| 2361 |        |        |        |     |         |              |  | ;NO, GO TO ERROR                  |
| 2362 | 010546 | 104000 |        |     | ERROR   |              |  | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 2363 | 010550 | 000143 |        |     | .WORD   | 143          |  | ;UNIQUE ERROR NUMBER              |
| 2364 | 010552 | 002013 |        |     | .WORD   | FPPERR       |  | ;ADDRESS OF ERROR MESSAGE         |
| 2365 | 010554 | 012704 | 010650 | 5#: | MOV     | #TS26D1,R4   |  | ;SETUP POINTERS TO DATA           |
| 2366 | 010560 | 012702 | 010700 |     | MOV     | #TS26D4,R2   |  |                                   |
| 2367 | 010564 | 004767 | 000026 |     | JSR     | PC,CHEC26    |  | ;CHECK IF DATA IS CORRECT         |
| 2368 | 010570 | 170567 | 000064 |     | TSTD    | TS26D2       |  | ;***TEST INSTRUCTION              |
| 2369 | 010574 | 170203 |        |     | STFPS   | R3           |  | ;GET FPS                          |
| 2370 | 010576 | 020327 | 000200 |     | CMP     | R3,#200      |  | ;CHECK FPS                        |
| 2371 | 010602 | 001403 |        |     | BEQ     | 6#           |  | ;OK GO ON                         |
| 2372 | 010604 | 104000 |        |     | ERROR   |              |  | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 2373 | 010606 | 000144 |        |     | .WORD   | 144          |  | ;UNIQUE ERROR NUMBER              |
| 2374 | 010610 | 002013 |        |     | .WORD   | FPPERR       |  | ;ADDRESS OF ERROR MESSAGE         |
| 2375 |        |        |        |     |         |              |  | ;NO GO TO ERROR                   |
| 2376 | 010612 |        |        | 6#: |         |              |  |                                   |
| 2377 |        |        |        |     |         |              |  |                                   |
| 2378 |        |        |        |     |         |              |  |                                   |
| 2379 | 010612 | 000167 | 000102 |     | JMP     | FIN26        |  |                                   |
| 2380 |        |        |        |     |         |              |  |                                   |
| 2381 | 010616 | 012701 | 000004 |     | CHEC26: | MOV #4,R1    |  | ;INIT COUNTER                     |
| 2382 | 010622 | 022422 |        | 1#: | CMP     | (R4),,(R2)   |  | ;IS DATA CORRECT                  |
| 2383 | 010624 | 001403 |        |     | BEQ     | 2#           |  | ;YES GO ON                        |
| 2384 | 010626 | 104000 |        |     | ERROR   |              |  | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 2385 | 010630 | 000145 |        |     | .WORD   | 145          |  | ;UNIQUE ERROR NUMBER              |
| 2386 | 010632 | 002013 |        |     | .WORD   | FPPERR       |  | ;ADDRESS OF ERROR MESSAGE         |
| 2387 |        |        |        |     |         |              |  | ;NO GO TO ERROR                   |
| 2388 | 010634 | 077106 |        | 2#: | SQB     | R1,1#        |  | ;ARE WE DONE                      |
| 2389 | 010636 | 000207 |        |     | RTS     | PC           |  | ;RETURN                           |
| 2390 |        |        |        |     |         |              |  |                                   |
| 2391 | 010640 | 000177 |        |     | TS26D0: | .WORD 177    |  |                                   |
| 2392 | 010642 | 177777 |        |     | .WORD   | 177777       |  |                                   |
| 2393 | 010644 | 177777 |        |     | .WORD   | 177777       |  |                                   |
| 2394 | 010646 | 177777 |        |     | .WORD   | 177777       |  |                                   |
| 2395 | 010650 | 177777 |        |     | TS26D1: | .WORD 177777 |  |                                   |
| 2396 | 010652 | 000000 |        |     | .WORD   | 0            |  |                                   |
| 2397 | 010654 | 000000 |        |     | .WORD   | 0            |  |                                   |
| 2398 | 010656 | 000000 |        |     | .WORD   | 0            |  |                                   |

2399 010660 077777  
 2400 010662 000000  
 2401 010664 000000  
 2402 010666 000000  
 2403 010670 000177  
 2404 010672 177777  
 2405 010674 177777  
 2406 010676 177777  
 2407 010700 177777  
 2408 010702 000000  
 2409 010704 000000  
 2410 010706 000000  
 2411 010710 077777  
 2412 010712 000000  
 2413 010714 000000  
 2414 010716 000000  
 2415 010720  
 2416  
 2417 010720  
 2418  
 2419  
 2420  
 2421 010720  
 2422 010720 005267 170060  
 2423 010724 005037 002122  
 2424 010730 005005  
 2425 010732 170105  
 2426 010734 012701 000014  
 2427 010740 012704 001136  
 2428 010744 012703 011204  
 2429 010750 012324  
 2430 010752 077102  
 2431 010754 012705 001136  
 2432 010760 170615  
 2433 010762 170203  
 2434 010764 020527 001136  
 2435 010770 001403  
 2436  
 2437 010772 104000  
 2438 010774 000146  
 2439 010776 002013  
 2440 011000 012702 011234  
 2441 011004 004767 000152  
 2442 011010 020327 000000  
 2443 011014 001403  
 2444  
 2445 011016 104000  
 2446 011020 000147  
 2447 011022 002013  
 2448 011024 012705 001146  
 2449 011030 170625  
 2450 011032 170203  
 2451 011034 020527 001152  
 2452 011040 001403  
 2453  
 2454 011042 104000

TS26D2: .WORD 77777  
 .WORD 0  
 .WORD 0  
 .WORD 0  
 TS26D3: .WORD 177  
 .WORD 177777  
 .WORD 177777  
 .WORD 177777  
 TS26D4: .WORD 177777  
 .WORD 0  
 .WORD 0  
 .WORD 0  
 TS26D5: .WORD 77777  
 .WORD 0  
 .WORD 0  
 .WORD 0

FIN26:

TSFP27:

\*\*\*\*\*  
 ;\*TEST 31 TEST ABSF  
 \*\*\*\*\*

TST31:

|          |               |                                    |
|----------|---------------|------------------------------------|
| INC      | #TESTN        | ; INCREMENT TEST NUMBER            |
| CLR      | #TRPFLG       | ; CLEAR TRAP FLAG                  |
| CLR      | R5            | ; SETUP TO LOAD FPS                |
| LDFPS    | R5            | ; SET FD=0                         |
| MOV      | #12,R1        | ; INIT COUNTER                     |
| MOV      | #TSTLOC,R4    | ; SETUP POINTER TO TEST LOCATION   |
| MOV      | #TS27D0,R3    | ; SETUP POINTER TO TEST VALUE      |
| 100: MOV | (R3),(R4)     | ; INIT TEST LOCATION               |
| SQB      | R1,100        | ; ARE WE DONE                      |
| MOV      | #TSTLOC,R5    | ; SETUP POINTER TO DATA            |
| ABSF     | (R5)          | ; ***TEST INSTRUCTION***           |
| STFPS    | R3            | ; GET FPS                          |
| CMP      | R5,#TSTLOC    | ; IS R5 CORRECT                    |
| BEQ      | 1             | ; YES GO ON                        |
|          |               | ; NO, GO TO ERROR                  |
|          |               | ; ALL ERRORS TO TRAP TO EMT VECTOR |
| .WORD    | 146           | ; UNIQUE ERROR NUMBER              |
| .WORD    | FPPERR        | ; ADDRESS OF ERROR MESSAGE         |
| 1: MOV   | #TS27D3,R2    | ; SETUP POINTER TO DATA            |
| JSR      | PC,CHEC27     | ; CHECK IF DATA IS CORRECT         |
| CMP      | R3,#0         | ; CHECK FPS                        |
| BEQ      | 2             | ; OK GO ON                         |
|          |               | ; NO, GO TO ERROR                  |
|          |               | ; ALL ERRORS TO TRAP TO EMT VECTOR |
| .WORD    | 147           | ; UNIQUE ERROR NUMBER              |
| .WORD    | FPPERR        | ; ADDRESS OF ERROR MESSAGE         |
| 2: MOV   | #TSTLOC+10,R5 | ; SETUP POINTER TO DATA            |
| ABSF     | (R5)          | ; ***TEST INSTRUCTION***           |
| STFPS    | R3            | ; GET FPS                          |
| CMP      | R5,#TSTLOC+14 | ; IS R5 CORRECT                    |
| BEQ      | 3             | ; YES GO ON                        |
|          |               | ; NO, GO TO ERROR                  |
|          |               | ; ALL ERRORS TO TRAP TO EMT VECTOR |
| ERROR    |               |                                    |

|      |        |        |        |         |             |               |  |                                   |
|------|--------|--------|--------|---------|-------------|---------------|--|-----------------------------------|
| 2455 | 011044 | 000150 |        |         | .WORD       | 150           |  | ;UNIQUE ERROR NUMBER              |
| 2456 | 011046 | 002013 |        |         | .WORD       | FPPERR        |  | ;ADDRESS OF ERROR MESSAGE         |
| 2457 | 011050 | 012705 | 001146 | 3#:     | MOV         | @TSTLOC+10,R5 |  | ;SETUP POINTER TO DATA            |
| 2458 | 011054 | 012702 | 011244 |         | MOV         | @TS27D4,R2    |  |                                   |
| 2459 | 011060 | 004767 | 000076 |         | JSR         | PC,CHEC27     |  | ;CHECK IF DATA IS CORRECT         |
| 2460 | 011064 | 020327 | 000000 |         | CMP         | R3,#0         |  | ;CHECK FPS                        |
| 2461 | 011070 | 001403 |        |         | BEQ         | 4#            |  | ;OK GO ON                         |
| 2462 |        |        |        |         |             |               |  | ;NO, GO TO ERROR                  |
| 2463 | 011072 | 104000 |        |         | ERROR       |               |  | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 2464 | 011074 | 000151 |        |         | .WORD       | 151           |  | ;UNIQUE ERROR NUMBER              |
| 2465 | 011076 | 002013 |        |         | .WORD       | FPPERR        |  | ;ADDRESS OF ERROR MESSAGE         |
| 2466 | 011100 | 012705 | 001136 | 4#:     | MOV         | @TSTLOC,R5    |  | ;SETUP POINTER TO DATA            |
| 2467 | 011104 | 170665 | 000020 |         | ABSF        | 20(R5)        |  | ;***TEST INSTRUCTION***           |
| 2468 | 011110 | 170203 |        |         | STFPS       | R3            |  | ;GET FPS                          |
| 2469 | 011112 | 020527 | 001136 |         | CMP         | R5,@TSTLOC    |  | ;IS R5 CORRECT                    |
| 2470 | 011116 | 001403 |        |         | BEQ         | 5#            |  | ;YES GO ON                        |
| 2471 |        |        |        |         |             |               |  | ;NO, GO TO ERROR                  |
| 2472 | 011120 | 104000 |        |         | ERROR       |               |  | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 2473 | 011122 | 000152 |        |         | .WORD       | 152           |  | ;UNIQUE ERROR NUMBER              |
| 2474 | 011124 | 002013 |        |         | .WORD       | FPPERR        |  | ;ADDRESS OF ERROR MESSAGE         |
| 2475 | 011126 | 012705 | 001156 | 5#:     | MOV         | @TSTLOC+20,R5 |  | ;SETUP POINTERS TO DATA           |
| 2476 | 011132 | 012702 | 011254 |         | MOV         | @TS27D5,R2    |  |                                   |
| 2477 | 011136 | 004767 | 000020 |         | JSR         | PC,CHEC27     |  | ;CHECK IF DATA IS CORRECT         |
| 2478 | 011142 | 020327 | 000004 |         | CMP         | R3,#4         |  | ;CHECK FPS                        |
| 2479 | 011146 | 001403 |        |         | BEQ         | 6#            |  | ;OK GO ON                         |
| 2480 |        |        |        |         |             |               |  | ;NO, GO TO ERROR                  |
| 2481 | 011150 | 104000 |        |         | ERROR       |               |  | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 2482 | 011152 | 000153 |        |         | .WORD       | 153           |  | ;UNIQUE ERROR NUMBER              |
| 2483 | 011154 | 002013 |        |         | .WORD       | FPPERR        |  | ;ADDRESS OF ERROR MESSAGE         |
| 2484 | 011156 |        |        | 6#:     |             |               |  |                                   |
| 2485 |        |        |        |         |             |               |  |                                   |
| 2486 |        |        |        |         |             |               |  |                                   |
| 2487 | 011156 | 000167 | 000102 |         | JMP         | FIN27         |  |                                   |
| 2488 |        |        |        |         |             |               |  |                                   |
| 2489 | 011162 | 012701 | 000004 |         | CHEC27: MOV | #4,R1         |  | ;INIT COUNTER                     |
| 2490 | 011166 | 022522 |        | 1#:     | CMP         | (R5)+,(R2)+   |  | ;IS DATA CORRECT                  |
| 2491 | 011170 | 001403 |        |         | BEQ         | 2#            |  | ;YES GO ON                        |
| 2492 |        |        |        |         |             |               |  | ;NO, GO TO ERROR                  |
| 2493 | 011172 | 104000 |        |         | ERROR       |               |  | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 2494 | 011174 | 000154 |        |         | .WORD       | 154           |  | ;UNIQUE ERROR NUMBER              |
| 2495 | 011176 | 002013 |        |         | .WORD       | FPPERR        |  | ;ADDRESS OF ERROR MESSAGE         |
| 2496 | 011200 | 077106 |        | 2#:     | SOB         | R1,1#         |  | ;ARE WE DONE                      |
| 2497 | 011202 | 000207 |        |         | RTS         | PC            |  | ;RETURN                           |
| 2498 |        |        |        |         |             |               |  |                                   |
| 2499 | 011204 | 177777 |        | TS27D0: | .WORD       | 177777        |  |                                   |
| 2500 | 011206 | 177777 |        |         | .WORD       | 177777        |  |                                   |
| 2501 | 011210 | 177777 |        |         | .WORD       | 177777        |  |                                   |
| 2502 | 011212 | 177777 |        |         | .WORD       | 177777        |  |                                   |
| 2503 | 011214 | 000377 |        | TS27D1: | .WORD       | 377           |  |                                   |
| 2504 | 011216 | 175436 |        |         | .WORD       | 175436        |  |                                   |
| 2505 | 011220 | 136477 |        |         | .WORD       | 136477        |  |                                   |
| 2506 | 011222 | 000001 |        |         | .WORD       | 1             |  |                                   |
| 2507 | 011224 | 000177 |        | TS27D2: | .WORD       | 177           |  |                                   |
| 2508 | 011226 | 175436 |        |         | .WORD       | 175436        |  |                                   |
| 2509 | 011230 | 136477 |        |         | .WORD       | 136477        |  |                                   |
| 2510 | 011232 | 000001 |        |         | .WORD       | 1             |  |                                   |

2511 011234 077777  
 2512 011236 177777  
 2513 011240 177777  
 2514 011242 177777  
 2515 011244 000377  
 2516 011246 175436  
 2517 011250 136477  
 2518 011252 000001  
 2519 011254 000000  
 2520 011256 000000  
 2521 011260 136477  
 2522 011262 000001  
 2523 011264  
 2524  
 2525 011264  
 2526  
 2527  
 2528  
 2529 011264  
 2530 011264 005267 167514  
 2531 011270 005037 002122  
 2532 011274 012705 000200  
 2533 011300 170105  
 2534 011302 012701 000014  
 2535 011306 012704 001136  
 2536 011312 012703 011552  
 2537 011316 012324  
 2538 011320 077102  
 2539 011322 012705 001136  
 2540 011326 170615  
 2541 011330 170203  
 2542 011332 020527 001136  
 2543 011336 001403  
 2544  
 2545 011340 104000  
 2546 011342 000155  
 2547 011344 002013  
 2548 011346 012702 011602  
 2549 011352 004767 000152  
 2550 011356 020327 000200  
 2551 011362 001403  
 2552  
 2553 011364 104000  
 2554 011366 000156  
 2555 011370 002013  
 2556 011372 012705 001146  
 2557 011376 170625  
 2558 011400 170203  
 2559 011402 020527 001156  
 2560 011406 001403  
 2561  
 2562 011410 104000  
 2563 011412 000157  
 2564 011414 002013  
 2565 011416 012705 001146  
 2566 011422 012702 011612

TS27D3: .WORD 77777  
 .WORD 177777  
 .WORD 177777  
 .WORD 177777  
 TS27D4: .WORD 377  
 .WORD 175436  
 .WORD 136477  
 .WORD 1  
 TS27D5: .WORD 0  
 .WORD 0  
 .WORD 136477  
 .WORD 1  
 FIN27:  
 |  
 TSFP30:  
 |\*\*\*\*\*  
 |\*TEST 32 TEST ABSD  
 |\*\*\*\*\*  
 TST32:  
 INC #TESTN ;INCREMENT TEST NUMBER  
 CLR @TRPFLG ;CLEAR TRAP FLAG  
 MOV #200,R5 ;SETUP TO LOAD FPS  
 LDFPS R5 ;SET FD=1  
 MOV #12.,R1 ;INIT COUNTER  
 MOV #TSTLOC,R4 ;SETUP POINTER TO TEST LOCATION  
 MOV #TS3000,R3 ;SETUP POINTER TO TEST VALUE  
 100#: MOV (R3), (R4). ;INIT TEST LOCATION  
 SOB R1,100# ;ARE WE DONE  
 MOV #TSTLOC,R5 ;SETUP POINTER TO DATA  
 ABSD (R5) ;\*\*\*TEST INSTRUCTION\*\*\*  
 STFPS R3 ;GET FPS  
 CMP R5,#TSTLOC ;IS R5 CORRECT  
 BEQ 1# ;YES GO ON  
 ;NO. GO TO ERROR  
 ;ALL ERRORS TO TRAP TO EMT VECTOR  
 .WORD 155 ;UNIQUE ERROR NUMBER  
 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE  
 1#: MOV #TS3003,R2 ;SETUP POINTER TO DATA  
 JSR PC,CHEC30 ;CHECK IF DATA IS CORRECT  
 CMP R3,#200 ;CHECK FPS  
 BEQ 2# ;OK GO ON  
 ;NO. GO TO ERROR  
 ;ALL ERRORS TO TRAP TO EMT VECTOR  
 .WORD 156 ;UNIQUE ERROR NUMBER  
 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE  
 2#: MOV #TSTLOC+10,R5 ;SETUP POINTER TO DATA  
 ABSD (R5). ;\*\*\*TEST INSTRUCTION\*\*\*  
 STFPS R3 ;GET FPS  
 CMP R5,#TSTLOC+20 ;IS R5 CORRECT  
 BEQ 3# ;YES GO ON  
 ;NO. GO TO ERROR  
 ;ALL ERRORS TO TRAP TO EMT VECTOR  
 .WORD 157 ;UNIQUE ERROR NUMBER  
 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE  
 3#: MOV #TSTLOC+10,R5 ;SETUP POINTERS TO DATA  
 MOV #TS3004,R2 ;



|      |        |        |        |         |             |               |   |                                  |
|------|--------|--------|--------|---------|-------------|---------------|---|----------------------------------|
| 2567 | 011426 | 004767 | 000076 |         | JSR         | PC,CHEC30     | ; | CHECK IF DATA IS CORRECT         |
| 2568 | 011432 | 020327 | 000200 |         | CMP         | R3,#200       | ; | CHECK FPS                        |
| 2569 | 011436 | 001403 |        |         | BEQ         | 4:            | ; | OK GO ON                         |
| 2570 |        |        |        |         |             |               | ; | NO, GO TO ERROR                  |
| 2571 | 011440 | 104900 |        |         | ERROR       |               | ; | ALL ERRORS TO TRAP TO EMT VECTOR |
| 2572 | 011442 | 000160 |        |         | .WORD       | 160           | ; | UNIQUE ERROR NUMBER              |
| 2573 | 011444 | 002013 |        |         | .WORD       | FPPERR        | ; | ADDRESS OF ERROR MESSAGE         |
| 2574 | 011446 | 012705 | 001136 | 4:      | MOV         | #TSTLOC,R5    | ; | SETUP POINTER TO DATA            |
| 2575 | 011452 | 170665 | 000020 |         | ABSD        | 20(R5)        | ; | ***TEST INSTRUCTION***           |
| 2576 | 011456 | 170203 |        |         | STFPS       | R3            | ; | GET FPS                          |
| 2577 | 011460 | 020527 | 001136 |         | CMP         | R5,#TSTLOC    | ; | IS R5 CORRECT                    |
| 2578 | 011464 | 001403 |        |         | BEQ         | 5:            | ; | YES GO ON                        |
| 2579 |        |        |        |         |             |               | ; | NO, GO TO ERROR                  |
| 2580 | 011466 | 104000 |        |         | ERROR       |               | ; | ALL ERRORS TO TRAP TO EMT VECTOR |
| 2581 | 011470 | 000161 |        |         | .WORD       | 161           | ; | UNIQUE ERROR NUMBER              |
| 2582 | 011472 | 002013 |        |         | .WORD       | FPPERR        | ; | ADDRESS OF ERROR MESSAGE         |
| 2583 | 011474 | 012705 | 001156 | 5:      | MOV         | #TSTLOC+20,R5 | ; | SETUP POINTERS TO DATA           |
| 2584 | 011500 | 012702 | 011622 |         | MOV         | #TS30D5,R2    | ; |                                  |
| 2585 | 011504 | 004767 | 000020 |         | JSR         | PC,CHEC30     | ; | CHECK IF DATA IS CORRECT         |
| 2586 | 011510 | 020327 | 000204 |         | CMP         | R3,#204       | ; | CHECK FPS                        |
| 2587 | 011514 | 001403 |        |         | BEQ         | 6:            | ; | OK GO ON                         |
| 2588 |        |        |        |         |             |               | ; | NO, GO TO ERROR                  |
| 2589 | 011516 | 104000 |        |         | ERROR       |               | ; | ALL ERRORS TO TRAP TO EMT VECTOR |
| 2590 | 011520 | 000162 |        |         | .WORD       | 162           | ; | UNIQUE ERROR NUMBER              |
| 2591 | 011522 | 002013 |        |         | .WORD       | FPPERR        | ; | ADDRESS OF ERROR MESSAGE         |
| 2592 | 011524 |        |        | 6:      |             |               |   |                                  |
| 2593 |        |        |        |         |             |               |   |                                  |
| 2594 | 011524 | 000167 | 000102 |         | JMP         | FIN30         |   |                                  |
| 2595 |        |        |        |         |             |               |   |                                  |
| 2596 | 011530 | 012701 | 000004 |         | ;           |               | ; | INIT COUNTER                     |
| 2597 | 011534 | 022522 |        | 1:      | CHEC30: MOV | #4,R1         | ; | IS DATA CORRECT                  |
| 2598 | 011536 | 001403 |        |         | CMP         | (R5)-(R2)     | ; | YES GO ON                        |
| 2599 |        |        |        |         | BEQ         | 2:            | ; | NO, GO TO ERROR                  |
| 2600 | 011540 | 104000 |        |         | ERROR       |               | ; | ALL ERRORS TO TRAP TO EMT VECTOR |
| 2601 | 011542 | 000163 |        |         | .WORD       | 163           | ; | UNIQUE ERROR NUMBER              |
| 2602 | 011544 | 002013 |        |         | .WORD       | FPPERR        | ; | ADDRESS OF ERROR MESSAGE         |
| 2603 | 011546 | 077106 |        | 2:      | SQB         | R1,1:         | ; | ARE WE DONE                      |
| 2604 | 011550 | 000207 |        |         | RTS         | PC            | ; | RETURN                           |
| 2605 |        |        |        |         |             |               |   |                                  |
| 2606 | 011552 | 177777 |        |         | ;           |               |   |                                  |
| 2607 | 011554 | 177777 |        | TS3000: | .WORD       | 177777        |   |                                  |
| 2608 | 011556 | 177777 |        |         | .WORD       | 177777        |   |                                  |
| 2609 | 011560 | 177777 |        |         | .WORD       | 177777        |   |                                  |
| 2610 | 011562 | 000377 |        | TS3001: | .WORD       | 377           |   |                                  |
| 2611 | 011564 | 175436 |        |         | .WORD       | 175436        |   |                                  |
| 2612 | 011566 | 136477 |        |         | .WORD       | 136477        |   |                                  |
| 2613 | 011570 | 000001 |        |         | .WORD       | 1             |   |                                  |
| 2614 | 011572 | 000177 |        | TS3002: | .WORD       | 177           |   |                                  |
| 2615 | 011574 | 175436 |        |         | .WORD       | 175436        |   |                                  |
| 2616 | 011576 | 136477 |        |         | .WORD       | 136477        |   |                                  |
| 2617 | 011600 | 000001 |        |         | .WORD       | 1             |   |                                  |
| 2618 | 011602 | 077777 |        | TS3003: | .WORD       | 77777         |   |                                  |
| 2619 | 011604 | 177777 |        |         | .WORD       | 177777        |   |                                  |
| 2620 | 011606 | 177777 |        |         | .WORD       | 177777        |   |                                  |
| 2621 | 011610 | 177777 |        |         | .WORD       | 177777        |   |                                  |
| 2622 | 011612 | 000377 |        | TS3004: | .WORD       | 377           |   |                                  |

|      |        |        |        |        |       |        |  |
|------|--------|--------|--------|--------|-------|--------|--|
| 2623 | 011614 | 175436 |        |        | .WORD | 175436 |  |
| 2624 | 011616 | 136477 |        |        | .WORD | 136477 |  |
| 2625 | 011620 | 000001 |        |        | .WORD | 1      |  |
| 2626 | 011622 | 000000 |        |        | .WORD | 0      |  |
| 2627 | 011624 | 000000 |        |        | .WORD | 0      |  |
| 2628 | 011626 | 000000 |        |        | .WORD | 0      |  |
| 2629 | 011630 | 000000 |        |        | .WORD | 0      |  |
| 2630 | 011632 |        |        |        |       |        |  |
| 2631 |        |        |        |        |       |        |  |
| 2632 | 011632 |        |        |        |       |        |  |
| 2633 |        |        |        |        |       |        |  |
| 2634 |        |        |        |        |       |        |  |
| 2635 |        |        |        |        |       |        |  |
| 2636 | 011632 |        |        |        |       |        |  |
| 2637 | 011632 | 005267 | 167146 |        |       |        |  |
| 2638 | 011636 | 005037 | 002122 |        |       |        |  |
| 2639 | 011642 | 013746 | 000004 |        |       |        |  |
| 2640 | 011646 | 012737 | 011764 | 000004 |       |        |  |
| 2641 | 011654 | 012702 | 000200 |        |       |        |  |
| 2642 | 011660 | 170102 |        |        |       |        |  |
| 2643 | 011662 | 170527 | 000005 |        |       |        |  |
| 2644 | 011666 | 000240 |        |        |       |        |  |
| 2645 | 011670 | 000240 |        |        |       |        |  |
| 2646 | 011672 | 000240 |        |        |       |        |  |
| 2647 | 011674 | 170203 |        |        |       |        |  |
| 2648 | 011676 | 020327 | 000204 |        |       |        |  |
| 2649 | 011702 | 001403 |        |        |       |        |  |
| 2650 | 011704 | 104000 |        |        |       |        |  |
| 2651 | 011706 | 000164 |        |        |       |        |  |
| 2652 | 011710 | 002013 |        |        |       |        |  |
| 2653 |        |        |        |        |       |        |  |
| 2654 | 011712 | 012702 | 011664 |        |       |        |  |
| 2655 | 011716 | 022227 | 000005 |        |       |        |  |
| 2656 | 011722 | 001403 |        |        |       |        |  |
| 2657 | 011724 | 104000 |        |        |       |        |  |
| 2658 | 011726 | 000165 |        |        |       |        |  |
| 2659 | 011730 | 002013 |        |        |       |        |  |
| 2660 |        |        |        |        |       |        |  |
| 2661 | 011732 | 012701 | 000003 |        |       |        |  |
| 2662 | 011736 | 022227 | 000240 |        |       |        |  |
| 2663 | 011742 | 001403 |        |        |       |        |  |
| 2664 | 011744 | 104000 |        |        |       |        |  |
| 2665 | 011746 | 000166 |        |        |       |        |  |
| 2666 | 011750 | 002013 |        |        |       |        |  |
| 2667 |        |        |        |        |       |        |  |
| 2668 | 011752 | 077107 |        |        |       |        |  |
| 2669 | 011754 | 012637 | 000004 |        |       |        |  |
| 2670 |        |        |        |        |       |        |  |
| 2671 |        |        |        |        |       |        |  |
| 2672 | 011760 | 000167 | 000010 |        |       |        |  |
| 2673 |        |        |        |        |       |        |  |
| 2674 | 011764 |        |        |        |       |        |  |
| 2675 | 011764 | 104000 |        |        |       |        |  |
| 2676 | 011766 | 000167 |        |        |       |        |  |
| 2677 | 011770 | 002013 |        |        |       |        |  |
| 2678 |        |        |        |        |       |        |  |

```

        .WORD 175436
        .WORD 136477
        .WORD 1
        TS30D5: .WORD 0
                .WORD 0
                .WORD 0
                .WORD 0
        FIN30:
        |
        |TSFP31:
        |*****
        |*TEST 33      TEST FDST SOP MODE 2 GR7
        |*****
        |TST33:
        |      INC      |TESTN          |INCREMENT TEST NUMBER
        |      CLR      @TRPFLG       |CLEAR TRAP FLAG
        |      MOV      @4,-(SP)       |SAVE TIMEOUT VECTOR
        |      MOV      @TSF31,@4     |SETUP NEW VECTOR
        |      MOV      @200,R2       |SETUP TO LOAD FPS
        |      LDFPS   R2            |SET FD=1
        |      TSTD    @5            |***TEST INSTRUCTION***
        |      NOP
        |      NOP
        |      NOP
        |      STFPS   R3            |GET FPS
        |      CMP      R3,@204       |CHECK FPS
        |      BEQ     1$            |OK GO ON
        |      ERROR   164           |ALL ERRORS TO TRAP TO EMT VECTOR
        |      .WORD   FPPERR        |UNIQUE ERROR NUMBER
        |      .WORD   FPPERR        |ADDRESS OF ERROR MESSAGE
        |NO GO TO ERROR
        |      MOV      @TSD31*2,R2  |SETUP POINTER TO DATA
        |      CMP      (R2),@5       |IS DATA CORRECT
        |      BEQ     2$            |YES GO ON
        |      ERROR   165           |ALL ERRORS TO TRAP TO EMT VECTOR
        |      .WORD   FPPERR        |UNIQUE ERROR NUMBER
        |      .WORD   FPPERR        |ADDRESS OF ERROR MESSAGE
        |NO GO TO ERROR
        |      MOV      @3,R1        |INIT COUNTER
        |      CMP      (R2),@240     |IS DATA CORRECT
        |      BEQ     4$            |YES GO ON
        |      ERROR   166           |ALL ERRORS TO TRAP TO EMT VECTOR
        |      .WORD   FPPERR        |UNIQUE ERROR NUMBER
        |      .WORD   FPPERR        |ADDRESS OF ERROR MESSAGE
        |NO GO TO ERROR
        |      SOB     R1,3$         |ARE WE DONE
        |      MOV      (SP),@4      |RESTORE VECTOR
        |
        |      JMP     FIN31
        |
        |TSF31:
        |      ERROR   167           |ALL ERRORS TO TRAP TO EMT VECTOR
        |      .WORD   FPPERR        |UNIQUE ERROR NUMBER
        |      .WORD   FPPERR        |ADDRESS OF ERROR MESSAGE
        |ODD ADDRESS TRAP
    
```

| Address | OpCode | Op1    | Op2    | Op3  | Op4 | Comment  |
|---------|--------|--------|--------|------|-----|--|
| 2679    | 011772 | 000006 |        |      |     | RTT ;RETURN                                    |
| 2680    |        |        |        |      |     |  |
| 2681    | 011774 |        |        |      |     | FIN31:   |
| 2682    |        |        |        |      |     |  |
| 2683    | 011774 |        |        |      |     | SFP32:   |
| 2684    |        |        |        |      |     | *****  |
| 2685    |        |        |        |      |     | TEST 34 TEST NEGF                              |
| 2686    |        |        |        |      |     | *****  |
| 2687    | 011774 |        |        |      |     | TST34.   |
| 2688    | 011774 | 005267 | 167004 |      |     | INC #TESTN ;INCREMENT TEST NUMBER              |
| 2689    | 012000 | 005037 | 002122 |      |     | CLR #TRPFLG ;CLEAR TRAP FLAG                   |
| 2690    | 012004 | 005005 |        |      |     | CLR R5 ;SETUP TO LOAD FPS                      |
| 2691    | 012006 | 170105 |        |      |     | LDFPS R5 ;SET FD=0                             |
| 2692    | 012010 | 012701 | 000014 |      |     | MOV #12,R1 ;INIT COUNTER                       |
| 2693    | 012014 | 012704 | 001136 |      |     | MOV #TSTLOC,R4 ;SETUP POINTER TO TEST LOCATION |
| 2694    | 012020 | 012703 | 012210 |      |     | MOV #TS32D0,R3 ;SETUP POINTER TO TEST VALUE    |
| 2695    | 012024 | 012324 |        | 100: |     | MOV (R3),(R4) ;INIT TEST LOCATION              |
| 2696    | 012026 | 077102 |        |      |     | SOB R1,100 ;ARE WE DONE                        |
| 2697    | 012030 | 170767 | 167102 |      |     | NEGF TSTLOC ;***TEST INSTRUCTION***            |
| 2698    | 012034 | 170203 |        |      |     | STFPS R3 ;GET FPS                              |
| 2699    | 012036 | 012705 | 001136 |      |     | MOV #TSTLOC,R5 ;SETUP POINTERS TO DATA         |
| 2700    | 012042 | 012702 | 012240 |      |     | MOV #TS32D3,R2 ;                               |
| 2701    | 012046 | 004767 | 000114 |      |     | JSR PC,CHEC32 ;CHECK IF DATA IS CORRECT        |
| 2702    | 012052 | 020327 | 000000 |      |     | CMP R3,#0 ;CHECK FPS                           |
| 2703    | 012056 | 001403 |        |      |     | BEQ 1 ;YES GO ON                               |
| 2704    |        |        |        |      |     | NO, GO TO ERROR                                |
| 2705    | 012060 | 104000 |        |      |     | ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR        |
| 2706    | 012062 | 000170 |        |      |     | .WORD 170 ;UNIQUE ERROR NUMBER                 |
| 2707    | 012064 | 002013 |        |      |     | .WORD FPPERR ;ADDRESS OF ERROR MESSAGE         |
| 2708    | 012066 | 170767 | 167054 | 1:   |     | NEGF TSTLOC+10 ;***TEST INSTRUCTION***         |
| 2709    | 012072 | 170203 |        |      |     | STFPS R3 ;GET FPS                              |
| 2710    | 012074 | 012705 | 001146 |      |     | MOV #TSTLOC+10,R5 ;SETUP POINTERS TO DATA      |
| 2711    | 012100 | 012702 | 012250 |      |     | MOV #TS32D4,R2 ;                               |
| 2712    | 012104 | 004767 | 000056 |      |     | JSR PC,CHEC32 ;CHECK IF DATA IS CORRECT        |
| 2713    | 012110 | 020327 | 000010 |      |     | CMP R3,#10 ;CHECK FPS                          |
| 2714    | 012114 | 001403 |        |      |     | BEQ 2 ;OK GO ON                                |
| 2715    |        |        |        |      |     | NO, GO TO ERROR                                |
| 2716    | 012116 | 104000 |        |      |     | ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR        |
| 2717    | 012120 | 000171 |        |      |     | .WORD 171 ;UNIQUE ERROR NUMBER                 |
| 2718    | 012122 | 002013 |        |      |     | .WORD FPPERR ;ADDRESS OF ERROR MESSAGE         |
| 2719    | 012124 | 170767 | 167026 | 2:   |     | NEGF TSTLOC+20 ;***TEST INSTRUCTION***         |
| 2720    | 012130 | 170203 |        |      |     | STFPS R3 ;GET FPS                              |
| 2721    | 012132 | 012705 | 001156 |      |     | MOV #TSTLOC+20,R5 ;SETUP POINTERS TO DATA      |
| 2722    | 012136 | 012702 | 012260 |      |     | MOV #TS32D5,R2 ;                               |
| 2723    | 012142 | 004767 | 000020 |      |     | JSR PC,CHEC32 ;CHECK IF DATA IS CORRECT        |
| 2724    | 012146 | 020327 | 000004 |      |     | CMP R3,#4 ;CHECK FPS                           |
| 2725    | 012152 | 001403 |        |      |     | BEQ 3 ;OK GO ON                                |
| 2726    |        |        |        |      |     | NO, GO TO ERROR                                |
| 2727    | 012154 | 104000 |        |      |     | ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR        |
| 2728    | 012156 | 000172 |        |      |     | .WORD 172 ;UNIQUE ERROR NUMBER                 |
| 2729    | 012160 | 002013 |        |      |     | .WORD FPPERR ;ADDRESS OF ERROR MESSAGE         |
| 2730    | 012162 |        |        | 3:   |     |  |
| 2731    |        |        |        |      |     |  |
| 2732    | 012162 | 000167 | 000102 |      |     | JMP FIN32                                      |
| 2733    |        |        |        |      |     |  |
| 2734    | 012166 | 012701 | 000004 |      |     | CHEC32: MOV #4,R1 ;INIT COUNTER                |

ES

|      |        |        |        |        |                 |                                  |
|------|--------|--------|--------|--------|-----------------|----------------------------------|
| 2735 | 012172 | 022522 | 18:    | CMP    | (R5), (R2),     | IS DATA CORRECT                  |
| 2736 | 012174 | 001403 |        | BEQ    | 28              | YES GO ON                        |
| 2737 |        |        |        |        |                 | NO, GO TO ERROR                  |
| 2738 | 012176 | 104000 |        | ERROR  |                 | ALL ERRORS TO TRAP TO EMT VECTOR |
| 2739 | 012200 | 000173 |        | .WORD  | 173             | UNIQUE ERROR NUMBER              |
| 2740 | 012202 | 002013 |        | .WORD  | FPPERR          | ADDRESS OF ERROR MESSAGE         |
| 2741 | 012204 | 077106 | 28:    | SOB    | R1, 18          | ARE WE DONE                      |
| 2742 | 012206 | 000207 |        | RTS    | PC              | RETURN                           |
| 2743 |        |        |        |        |                 |                                  |
| 2744 | 012210 | 170000 |        | T32D0: | .WORD 170000    |                                  |
| 2745 | 012212 | 003541 |        |        | .WORD 3541      |                                  |
| 2746 | 012214 | 177777 |        |        | .WORD 177777    |                                  |
| 2747 | 012216 | 172710 |        |        | .WORD 172710    |                                  |
| 2748 | 012220 | 070000 |        | T32D1: | .WORD 70000     |                                  |
| 2749 | 012222 | 003541 |        |        | .WORD 3541      |                                  |
| 2750 | 012224 | 177777 |        |        | .WORD 177777    |                                  |
| 2751 | 012226 | 172710 |        |        | .WORD 172710    |                                  |
| 2752 | 012230 | 000177 |        |        | .WORD 177       |                                  |
| 2753 | 012232 | 100000 |        |        | .WORD 100000    |                                  |
| 2754 | 012234 | 177777 |        |        | .WORD 177777    |                                  |
| 2755 | 012236 | 177007 |        |        | .WORD 177007    |                                  |
| 2756 | 012240 | 070000 |        | T32D3: | .WORD 70000     |                                  |
| 2757 | 012242 | 003541 |        |        | .WORD 3541      |                                  |
| 2758 | 012244 | 177777 |        |        | .WORD 177777    |                                  |
| 2759 | 012246 | 172710 |        |        | .WORD 172710    |                                  |
| 2760 | 012250 | 170000 |        | T32D4: | .WORD 170000    |                                  |
| 2761 | 012252 | 003541 |        |        | .WORD 3541      |                                  |
| 2762 | 012254 | 177777 |        |        | .WORD 177777    |                                  |
| 2763 | 012256 | 172710 |        |        | .WORD 172710    |                                  |
| 2764 | 012260 | 000000 |        | T32D5: | .WORD 0         |                                  |
| 2765 | 012262 | 000000 |        |        | .WORD 0         |                                  |
| 2766 | 012264 | 177777 |        |        | .WORD 177777    |                                  |
| 2767 | 012266 | 177007 |        |        | .WORD 177007    |                                  |
| 2768 | 012270 |        |        | FIN32: |                 |                                  |
| 2769 |        |        |        |        |                 |                                  |
| 2770 | 012270 |        |        | T32D6: |                 |                                  |
| 2771 |        |        |        |        |                 |                                  |
| 2772 |        |        |        |        |                 |                                  |
| 2773 |        |        |        |        |                 |                                  |
| 2774 | 012270 |        |        | T32D7: |                 |                                  |
| 2775 | 012270 | 005267 | 166510 |        |                 |                                  |
| 2776 | 012274 | 005037 | 002122 |        |                 |                                  |
| 2777 | 012300 | 012705 | 000200 |        |                 |                                  |
| 2778 | 012304 | 170105 |        |        |                 |                                  |
| 2779 | 012306 | 012701 | 000014 |        |                 |                                  |
| 2780 | 012312 | 012704 | 001136 |        |                 |                                  |
| 2781 | 012316 | 012703 | 012506 |        |                 |                                  |
| 2782 | 012322 | 012324 |        |        |                 |                                  |
| 2783 | 012324 | 077102 |        | 1001:  | MOV (R3), (R4), | INIT TEST LOCATION               |
| 2784 | 012326 | 170767 | 166604 |        | SOB R1, 1001    | ARE WE DONE                      |
| 2785 | 012332 | 170203 |        |        | NEGD TSTLOC     | TEST INSTRUCTION                 |
| 2786 | 012334 | 012705 | 001136 |        | STFPS R3        | GET FPS                          |
| 2787 | 012340 | 012702 | 012536 |        | MOV #TSTLOC, R5 | SETUP POINTERS TO DATA           |
| 2788 | 012344 | 004767 | 000114 |        | MOV #T32D3, R2  |                                  |
| 2789 | 012350 | 020327 | 000200 |        | JSR PC, CMEC33  | CHECK IF DATA IS CORRECT         |
| 2790 | 012354 | 001403 |        |        | CMP R3, #200    | CHECK FPS                        |
|      |        |        |        |        | BEQ 18          | OK GO ON                         |



|      |        |        |        |  |     |         |               |  |  |  |  |
|------|--------|--------|--------|--|-----|---------|---------------|--|--|--|--|
| 2791 |        |        |        |  |     |         |               |  |  |  |  |
| 2792 | 012356 | 104000 |        |  |     |         |               |  |  |  |  |
| 2793 | 012360 | 000174 |        |  |     |         |               |  |  |  |  |
| 2794 | 012362 | 002013 |        |  |     |         |               |  |  |  |  |
| 2795 | 012364 | 170767 | 166556 |  | 1#: | NEGD    | TSTLOC+10     |  |  |  |  |
| 2796 | 012370 | 170203 |        |  |     | STFPS   | R3            |  |  |  |  |
| 2797 | 012372 | 012705 | 001146 |  |     | MOV     | @TSTLOC+10,R5 |  |  |  |  |
| 2798 | 012376 | 012702 | 012546 |  |     | MOV     | @TS33D4,R2    |  |  |  |  |
| 2799 | 012402 | 004767 | 000056 |  |     | JSR     | PC,CHEC33     |  |  |  |  |
| 2800 | 012406 | 020327 | 000210 |  |     | CMP     | R3,@210       |  |  |  |  |
| 2801 | 012412 | 001403 |        |  |     | BEQ     | 2#            |  |  |  |  |
| 2802 |        |        |        |  |     |         |               |  |  |  |  |
| 2803 | 012414 | 104000 |        |  |     | ERROR   |               |  |  |  |  |
| 2804 | 012416 | 000175 |        |  |     | .WORD   | 174           |  |  |  |  |
| 2805 | 012420 | 002013 |        |  |     | .WORD   | FPPERR        |  |  |  |  |
| 2806 | 012422 | 170767 | 166530 |  | 2#: | NEGD    | TSTLOC+20     |  |  |  |  |
| 2807 | 012426 | 170203 |        |  |     | STFPS   | R3            |  |  |  |  |
| 2808 | 012430 | 012705 | 001156 |  |     | MOV     | @TSTLOC+20,R5 |  |  |  |  |
| 2809 | 012434 | 012702 | 012556 |  |     | MOV     | @TS33D5,R2    |  |  |  |  |
| 2810 | 012440 | 004767 | 000020 |  |     | JSR     | PC,CHEC33     |  |  |  |  |
| 2811 | 012444 | 020327 | 000204 |  |     | CMP     | R3,@204       |  |  |  |  |
| 2812 | 012450 | 001403 |        |  |     | BEQ     | 3#            |  |  |  |  |
| 2813 |        |        |        |  |     |         |               |  |  |  |  |
| 2814 | 012452 | 104000 |        |  |     | ERROR   |               |  |  |  |  |
| 2815 | 012454 | 000176 |        |  |     | .WORD   | 176           |  |  |  |  |
| 2816 | 012456 | 002013 |        |  |     | .WORD   | FPPERR        |  |  |  |  |
| 2817 | 012460 |        |        |  | 3#: |         |               |  |  |  |  |
| 2818 |        |        |        |  |     |         |               |  |  |  |  |
| 2819 | 012460 | 000167 | 000102 |  |     | JMP     | FIN33         |  |  |  |  |
| 2820 |        |        |        |  |     |         |               |  |  |  |  |
| 2821 | 012464 | 012701 | 000004 |  |     | CHEC33: | MOV @4,R1     |  |  |  |  |
| 2822 | 012470 | 022522 |        |  | 1#: | CMP     | (R5),.(R2).   |  |  |  |  |
| 2823 | 012472 | 001403 |        |  |     | BEQ     | 2#            |  |  |  |  |
| 2824 |        |        |        |  |     |         |               |  |  |  |  |
| 2825 | 012474 | 104000 |        |  |     | ERROR   |               |  |  |  |  |
| 2826 | 012476 | 000177 |        |  |     | .WORD   | 177           |  |  |  |  |
| 2827 | 012500 | 002013 |        |  |     | .WORD   | FPPERR        |  |  |  |  |
| 2828 | 012502 | 077106 |        |  | 2#: | SQB     | R1,1#         |  |  |  |  |
| 2829 | 012504 | 000207 |        |  |     | RTS     | PC            |  |  |  |  |
| 2830 |        |        |        |  |     |         |               |  |  |  |  |
| 2831 | 012506 | 170000 |        |  |     | TS33D0: | .WORD 170000  |  |  |  |  |
| 2832 | 012510 | 003541 |        |  |     | .WORD   | 3541          |  |  |  |  |
| 2833 | 012512 | 177777 |        |  |     | .WORD   | 177777        |  |  |  |  |
| 2834 | 012514 | 172710 |        |  |     | .WORD   | 172710        |  |  |  |  |
| 2835 | 012516 | 070000 |        |  |     | TS33D1: | .WORD 70000   |  |  |  |  |
| 2836 | 012520 | 003541 |        |  |     | .WORD   | 3541          |  |  |  |  |
| 2837 | 012522 | 177777 |        |  |     | .WORD   | 177777        |  |  |  |  |
| 2838 | 012524 | 172710 |        |  |     | .WORD   | 172710        |  |  |  |  |
| 2839 | 012526 | 000177 |        |  |     | TS33D2: | .WORD 177     |  |  |  |  |
| 2840 | 012530 | 100000 |        |  |     | .WORD   | 100000        |  |  |  |  |
| 2841 | 012532 | 177777 |        |  |     | .WORD   | 177777        |  |  |  |  |
| 2842 | 012534 | 177007 |        |  |     | .WORD   | 177007        |  |  |  |  |
| 2843 | 012536 | 070000 |        |  |     | TS33D3: | .WORD 70000   |  |  |  |  |
| 2844 | 012540 | 003541 |        |  |     | .WORD   | 3541          |  |  |  |  |
| 2845 | 012542 | 177777 |        |  |     | .WORD   | 177777        |  |  |  |  |
| 2846 | 012544 | 172710 |        |  |     | .WORD   | 172710        |  |  |  |  |

```

;NO, GO TO ERROR
;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE
;***TEST INSTRUCTION***
;GET FPS
;SETUP POINTERS TO DATA
;
;CHECK IF DATA IS CORRECT
;CHECK FPS
;OK GO ON
;NO, GO TO ERROR
;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE
;***TEST INSTRUCTION***
;GET FPS
;SETUP POINTERS TO DATA
;
;CHECK IF DATA IS CORRECT
;CHECK FPS
;OK GO ON
;NO, GO TO ERROR
;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE

;INIT COUNTER
;IS DATA CORRECT
;YES GO ON
;NO, GO TO ERROR
;ALL ERRORS TO TRAP TO EMT VECTOR
;UNIQUE ERROR NUMBER
;ADDRESS OF ERROR MESSAGE
;ARE WE DONE
;RETURN
    
```

2847 012546 170000  
 2848 012550 003541  
 2849 012552 177777  
 2850 012554 172710  
 2851 012556 000000  
 2852 012560 000000  
 2853 012562 000000  
 2854 012564 000000  
 2855 012566  
 2856  
 2857 012566  
 2858  
 2859  
 2860  
 2861 012566  
 2862 012566 005267 166212  
 2863 012572 012704 047600  
 2864 012576 170104  
 2865 012600 012702 001106  
 2866 012604 172407  
 2867  
 2868 012606 170201  
 2869 012610 022701 147600  
 2870 012614 001403  
 2871 012616 104000  
 2872 012620 000200  
 2873 012622 002013  
 2874  
 2875 012624 170312  
 2876 012626 022722 000002  
 2877 012632 001403  
 2878 012634 104000  
 2879 012636 000201  
 2880 012640 002013  
 2881  
 2882 012642 022722 012604  
 2883 012646 001403  
 2884 012650 104000  
 2885 012652 000202  
 2886 012654 002013  
 2887  
 2888 012656  
 2889  
 2890  
 2891 012656  
 2892  
 2893  
 2894  
 2895 012656  
 2896 012656 005267 166122  
 2897 012662 012701 001126  
 2898 012666 012704 001176  
 2899 012672 012702 047750  
 2900 012676 170102  
 2901 012700 172424  
 2902 012702 170203

TS33D4: .WORD 170000  
 .WORD 3541  
 .WORD 177777  
 .WORD 172710  
 TS33D5: .WORD 0  
 .WORD 0  
 .WORD 0  
 .WORD 0

FIN33:  
 ;  
 MF SRCMO:  
 ;\*\*\*\*\*  
 ;\*TEST 36 TEST LDD MODE 0, ILLEGAL AC7  
 ;\*\*\*\*\*  
 TST36:  
 INC \$TESTN ;INCREMENT TEST NUMBER  
 MOV #47600,R4 ;SETUP FPP STATUS  
 LDFPS R4 ;LOAD FP STATUS  
 MOV #RECFEC,R2 ;POINT TO RECEIVED FEC MEMORY  
 1\$: LDD R7,ACO ;\*TEST INSTRUCTION  
 ;LOAD ACO FROM ILLEGAL AC7  
 STFPS R1 ;SAVE FPP STATUS  
 CMP #147600,R1 ;VERIFY FER BIT SET  
 BEQ 2\$ ;BRANCH IF GOOD ERROR CONDITION  
 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR  
 .WORD 200 ;UNIQUE ERROR NUMBER  
 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE  
 ;THE FER BIT DIDNT SET  
 2\$: STST (R2) ;SAVE FEC AND FEA  
 CMP #2,(R2)+ ;VERIFY FEC CONTENTS  
 BEQ 3\$ ;BRANCH IF GOOD  
 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR  
 .WORD 201 ;UNIQUE ERROR NUMBER  
 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE  
 ;FEC NE 2 (OPCODE ERROR)  
 3\$: CMP #1,(R2)+ ;VERIFY FEA CONTENTS  
 BEQ 4\$ ;BRANCH IF GOOD  
 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR  
 .WORD 202 ;UNIQUE ERROR NUMBER  
 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE  
 ;FEA NOT CORRECT ERROR ADDRESS  
 4\$:  
 MLDDM2:  
 ;\*\*\*\*\*  
 ;\*TEST 37 TEST LDD MODE2  
 ;\*\*\*\*\*  
 TST37:  
 INC \$TESTN ;INCREMENT TEST NUMBER  
 MOV #RECDST,R1 ;POINT TO RECEIVED DATA LOCATION  
 MOV #TAB1,R4 ;POINT TO GOOD DATA  
 MOV #47750,R2 ;LOAD GOOD STATUS  
 LDFPS R2 ;LOAD FPP STATUS - DOUBLE, ID  
 LDD (R4)+,ACO ;\*\*\*TEST INSTRUCTION - MODE 2\*\*\*  
 STFPS R3 ;SAVE TEST FPP STATUS

F5

|      |        |        |        |        |       |                   |              |                                   |
|------|--------|--------|--------|--------|-------|-------------------|--------------|-----------------------------------|
| 2903 | 012704 | 174021 |        |        | STD   | AC0,(R1)+         |              | ;SAVE TEST RESULT MODE 2          |
| 2904 | 012706 | 020203 |        |        | CMP   | R2,R3             |              | ;VERIFY FPP STATUS                |
| 2905 | 012710 | 001403 |        |        | BEQ   | 11                |              | ;BRANCH IF GOOD                   |
| 2906 | 012712 | 104000 |        |        | ERROR |                   |              | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 2907 | 012714 | 000203 |        |        | .WORD | 203               |              | ;UNIQUE ERROR NUMBER              |
| 2908 | 012716 | 002013 |        |        | .WORD | FPPERR            |              | ;ADDRESS OF ERROR MESSAGE         |
| 2909 |        |        |        |        |       |                   |              | ;BAD FPP STATUS                   |
| 2910 | 012720 | 022704 | 001206 |        | 11:   | CMP               | #TAB1+10,R4  | ;VERIFY AUTO-INCR                 |
| 2911 | 012724 | 001403 |        |        | BEQ   | 21                |              | ;BRANCH IF GOOD                   |
| 2912 | 012726 | 104000 |        |        | ERROR |                   |              | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 2913 | 012730 | 000204 |        |        | .WORD | 204               |              | ;UNIQUE ERROR NUMBER              |
| 2914 | 012732 | 002013 |        |        | .WORD | FPPERR            |              | ;ADDRESS OF ERROR MESSAGE         |
| 2915 |        |        |        |        |       |                   |              | ;BAD AUTO-INCR                    |
| 2916 | 012734 | 012704 | 001176 |        | 21:   | MOV               | #TAB1,R4     | ;POINT TO RECEIVED DATA           |
| 2917 | 012740 | 162701 | 000010 |        | SUB   | #10,R1            |              | ;RETURN R1 TO PROPER VALUE        |
| 2918 | 012744 | 004767 | 167176 |        | JSR   | R7,DATVER         |              | ;VERIFY DATA FROM FPP             |
| 2919 | 012750 | 005767 | 166064 |        | TST   | COUNT             |              | ;SEE IF COUNTER=0                 |
| 2920 | 012754 | 001403 |        |        | BEQ   | 31                |              | ;BRANCH IF GOOD COMPARE           |
| 2921 |        |        |        |        |       |                   |              | ;BAD DATA FROM FPP                |
| 2922 | 012756 | 104000 |        |        | ERROR |                   |              | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 2923 | 012760 | 000205 |        |        | .WORD | 205               |              | ;UNIQUE ERROR NUMBER              |
| 2924 | 012762 | 002013 |        |        | .WORD | FPPERR            |              | ;ADDRESS OF ERROR MESSAGE         |
| 2925 | 012764 |        |        |        | 31:   |                   |              |                                   |
| 2926 |        |        |        |        |       |                   |              |                                   |
| 2927 |        |        |        |        |       |                   |              |                                   |
| 2928 | 012764 |        |        |        |       |                   |              |                                   |
| 2929 |        |        |        |        |       |                   |              |                                   |
| 2930 |        |        |        |        |       |                   |              |                                   |
| 2931 |        |        |        |        |       |                   |              |                                   |
| 2932 | 012764 |        |        |        |       |                   |              |                                   |
| 2933 | 012764 | 005267 | 166014 |        |       |                   |              |                                   |
| 2934 | 012770 | 012737 | 001126 | 001140 | INC   | #TESTN            |              | ;INCREMENT TEST NUMBER            |
| 2935 | 012776 | 012701 | 001140 |        | MOV   | #RECDST,#TSTLOC+2 |              | ;POINT TO RECEIVED DATA LOCATION  |
| 2936 | 013002 | 012737 | 001206 | 001136 | MOV   | #TSTLOC+2,R1      |              | ;SETUP STD IN MODE 3              |
| 2937 | 013010 | 012704 | 001136 |        | MOV   | #TAB2,#TSTLOC     |              | ;POINT TO DATA TABLE              |
| 2938 | 013014 | 012702 | 047750 |        | MOV   | #TSTLOC,R4        |              | ;POINT TO GOOD DATA               |
| 2939 | 013020 | 170102 |        |        | MOV   | #47750,R2         |              | ;LOAD GOOD STATUS                 |
| 2940 | 013022 | 172434 |        |        | LDFPS | R2                |              | ;LOAD FPP STATUS - DOUBLE.ID      |
| 2941 | 013024 | 170203 |        |        | LDD   | #(R4)+,AC0        |              | ;...TEST INSTRUCTION - MODE 2...  |
| 2942 | 013026 | 174031 |        |        | STFPS | R3                |              | ;SAVE TEST FPP STATUS             |
| 2943 | 013030 | 022703 | 047740 |        | STD   | AC0,#(R1)+        |              | ;SAVE TEST RESULT IN MODE 3       |
| 2944 | 013034 | 001403 |        |        | CMP   | #47740,R3         |              | ;VERIFY FPP STATUS                |
| 2945 | 013036 | 104000 |        |        | BEQ   | 11                |              | ;BRANCH IF GOOD                   |
| 2946 | 013040 | 000206 |        |        | ERROR |                   |              | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 2947 | 013042 | 002013 |        |        | .WORD | 206               |              | ;UNIQUE ERROR NUMBER              |
| 2948 |        |        |        |        | .WORD | FPPERR            |              | ;ADDRESS OF ERROR MESSAGE         |
| 2949 | 013044 | 022704 | 001140 |        | 11:   | CMP               | #TSTLOC+2,R4 | ;VERIFY AUTO-INCR                 |
| 2950 | 013050 | 001403 |        |        | BEQ   | 21                |              | ;BAD AUTO-DEC ON LDD              |
| 2951 | 013052 | 104000 |        |        | ERROR |                   |              | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 2952 | 013054 | 000207 |        |        | .WORD | 207               |              | ;UNIQUE ERROR NUMBER              |
| 2953 | 013056 | 002013 |        |        | .WORD | FPPERR            |              | ;ADDRESS OF ERROR MESSAGE         |
| 2954 |        |        |        |        |       |                   |              | ;BAD AUTO-INC                     |
| 2955 | 013060 | 022701 | 001142 |        | 21:   | CMP               | #TSTLOC+4,R1 | ;TEST STD AUTO-INC                |
| 2956 | 013064 | 001403 |        |        | BEQ   | 31                |              | ;BRANCH IF GOOD                   |
| 2957 | 013066 | 104000 |        |        | ERROR |                   |              | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 2958 | 013070 | 000210 |        |        | .WORD | 210               |              | ;UNIQUE ERROR NUMBER              |

;MLDDM3:

\*\*\*\*\*

;TEST 40 TEST LDD MODE 3

\*\*\*\*\*

TST40:

```

2959 013072 002013          .WORD  FPPERR          ;ADDRESS OF ERROR MESSAGE
2960                                ;BAD AUTO INCR
2961 013074 012704 001206    3$:  MOV    #TAB2,R4          ;POINT TO RECEIVED DATA
2962 013100 012701 001126    MOV    #RECDST,R1        ;POINT TO RECEIVED DATA
2963 013104 004767 167036    JSR   R7,DATVER         ;VERIFY DATA FROM FPP
2964 013110 005767 165724    TST   COUNT             ;SEE IF COUNTER=0
2965 013114 001403          BEQ   4$                ;BRANCH IF GOOD COMPARE
2966 013116 104000          ERROR                    ;ALL ERRORS TO TRAP TO EMT VECTOR
2967 013120 000211          .WORD  211              ;UNIQUE ERROR NUMBER
2968 013122 002013          .WORD  FPPERR          ;ADDRESS OF ERROR MESSAGE
2969                                ;BAD DATA FROM FPP
2970 013124          4$:
2971
2972 013124          MLDDM4:
2973          ;*****
2974          ;*TEST 41      TEST LDF, STD MODE 4
2975          ;*****
2976 013124          TST41:
2977 013124 005267 165654    INC    #TESTN           ;INCREMENT TEST NUMBER
2978 013130 012701 001132    MOV    #RECDST+4,R1    ;POINT TO RECEIVED DATA LOCATION
2979 013134 012704 001222    MOV    #TAB3+4,R4     ;POINT TO GOOD DATA
2980 013140 012705 001256    MOV    #TAB6,R5       ;CLEAR OUT ACO
2981 013144 170127 000200    LDFPS #200             ;SET TO DOUBLE
2982 013150 172415          LDD   (R5),ACO        ;ACO=0
2983 013152 012702 047550    MOV    #47550,R2      ;LOAD GOOD STATUS FLOATING
2984 013156 170102          LDFPS R2              ;LOAD FPP STATUS - DOUBLE.ID
2985 013160 172444          LDF   -(R4),ACO      ;*TEST INSTRUCTION - MODE 4
2986 013162 170203          STFPS R3              ;SAVE TEST FPP STATUS
2987 013164 012702 047750    MOV    #47750,R2      ;SET TO DOUBLE MODE
2988 013170 170102          LDFPS R2              ;SET FPP TO DOUBLE
2989 013172 174041          STD   ACO,-(R1)       ;SAVE TEST RESULT
2990 013174 022703 047540    CMP    #47540,R3      ;VERIFY FPP STATUS
2991 013200 001403          BEQ   1$              ;BRANCH IF GOOD
2992 013202 104000          ERROR                    ;ALL ERRORS TO TRAP TO EMT VECTOR
2993 013204 000212          .WORD  212              ;UNIQUE ERROR NUMBER
2994 013206 002013          .WORD  FPPERR          ;ADDRESS OF ERROR MESSAGE
2995                                ;BAD FPP STATUS
2996 013210 022704 001216    1$:  CMP    #TAB3,R4       ;VERIFY AUTO-DEC
2997 013214 001403          BEQ   2$              ;BRANCH IF GOOD
2998 013216 104000          ERROR                    ;ALL ERRORS TO TRAP TO EMT VECTOR
2999 013220 000213          .WORD  213              ;UNIQUE ERROR NUMBER
3000 013222 002013          .WORD  FPPERR          ;ADDRESS OF ERROR MESSAGE
3001                                ;BAD AUTO-INCR
3002 013224 012704 001216    2$:  MOV    #TAB3,R4       ;POINT TO RECEIVED DATA
3003 013230 004767 166712    JSR   R7,DATVER         ;VERIFY DATA FROM FPP
3004 013234 005767 165600    TST   COUNT             ;SEE IF COUNTER=0
3005 013240 001403          BEQ   3$              ;BRANCH IF GOOD COMPARE
3006 013242 104000          ERROR                    ;ALL ERRORS TO TRAP TO EMT VECTOR
3007 013244 000214          .WORD  214              ;UNIQUE ERROR NUMBER
3008 013246 002013          .WORD  FPPERR          ;ADDRESS OF ERROR MESSAGE
3009                                ;BAD DATA FROM FPP
3010 013250          3$:
3011
3012 013250          MLDDM5:
3013          ;*****
3014          ;*TEST 42      TEST LDD MODE 5
    
```

```

3015
3016 013250
3017 013250 005267 165530
3018 013254 012701 001126
3019 013260 012704 001140
3020 013264 012737 001176 001136
3021 013272 012702 047750
3022 013276 170102
3023 013300 172454
3024 013302 170203
3025 013304 174011
3026 013306 020203
3027 013310 001403
3028 013312 104000
3029 013314 000215
3030 013316 002013
3031
3032 013320 022704 001136
3033 013324 001403
3034 013326 104000
3035 013330 000216
3036 013332 002013
3037
3038 013334 012704 001176
3039 013340 004767 166602
3040 013344 005767 165470
3041 013350 001403
3042 013352 104000
3043 013354 000217
3044 013356 002013
3045
3046 013360
3047
3048 013360
3049
3050
3051
3052 013360
3053 013360 005267 165420
3054 013364 012701 001326
3055 013370 012704 001006
3056 013374 012702 047750
3057 013400 170102
3058 013402 172464 000200
3059 013406 170203
3060 013410 174061 177600
3061 013414 022703 047740
3062 013420 001403
3063 013422 104000
3064 013424 000220
3065 013426 002013
3066
3067 013430 162701 000200
3068 013434 062704 000200
3069 013440 004767 166502
3070 013444 005767 165370

```

```

;*****
TST42:
INC #TESTN ;INCREMENT TEST NUMBER
MOV #RECDST,R1 ;POINT TO RECEIVED DATA LOCATION
MOV #TSTLOC+2,R4 ;POINT TO GOOD DATA
MOV #TAB1,#TSTLOC ;SET UP MODE 5 POINTER TO DATA
MOV #47750,R2 ;LOAD GOOD STATUS
LDFPS R2 ;LOAD FPP STATUS - DOUBLE.ID
LDD #-(R4),ACO ;*TEST INSTRUCTION - MODE 5
STFPS R3 ;SAVE TEST FPP STATUS
STD ACO,(R1) ;SAVE TEST RESULT
CMP R2,R3 ;VERIFY FPP STATUS
BEQ 1$ ;BRANCH IF GOOD
ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
.WORD 215 ;UNIQUE ERROR NUMBER
.WORD FPPERR ;ADDRESS OF ERROR MESSAGE
;BAD FPP STATUS
1$: CMP #TSTLOC,R4 ;VERFIY AUTO-DEC
BEQ 2$ ;BRANCH IF GOOD
ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
.WORD 216 ;UNIQUE ERROR NUMBER
.WORD FPPERR ;ADDRESS OF ERROR MESSAGE
;BAD AUTO-DEC
2$: MOV #TAB1,R4 ;POINT TO EXPECTED DATA
JSR R7,DATVER ;VERFIY DATA FROM FPP
TST COUNT ;SEE IF COUNTER=0
BEQ 3$ ;BRANCH IF GOOD COMPARE
ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
.WORD 217 ;UNIQUE ERROR NUMBER
.WORD FPPERR ;ADDRESS OF ERROR MESSAGE
;BAD DATA FROM FPP
3$:

```

```

MLDDM6:
;*****
;*TEST 43 TEST LOD MODE 6
;*****
TST43:
INC #TESTN ;INCREMENT TEST NUMBER
MOV #RECDST+200,R1 ;POINT TO RECEIVED DATA LOCATION
MOV #TAB2-200,R4 ;SETUP R4 FOR MODE 6
MOV #47750,R2 ;LOAD GOOD STATUS
LDFPS R2 ;LOAD FPP STATUS - DOUBLE.ID
LDD 200(R4),ACO ;LOAD MODE 6
STFPS R3 ;SAVE TEST FPP STATUS
STD ACO,-200(R1) ;SAVE TEST RESULT
CMP #47740,R3 ;VERIFY FPP STATUS
BEQ 1$ ;BRANCH IF GOOD
ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
.WORD 220 ;UNIQUE ERROR NUMBER
.WORD FPPERR ;ADDRESS OF ERROR MESSAGE
;BAD FPP STATUS
1$: SUB #200,R1 ;R1=RECDST
2$: ADD #200,R4 ;POINT TO EXPECTED DATA
JSR R7,DATVER ;VERFIY DATA FROM FPP
TST COUNT ;SEE IF COUNTER=0

```

```

3071 013450 001403          BEQ      3$          ;BRANCH IF GOOD COMPARE
3072 013452 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3073 013454 000221          .WORD    221          ;UNIQUE ERROR NUMBER
3074 013456 002013          .WORD    FPPERR       ;ADDRESS OF ERROR MESSAGE
3075                                     ;BAD DATA FROM FPP
3076 013460
3077
3078 013460          3$:
3079
3080          MLDDM7:
3081          ;*****
3082          ;*TEST 44      TEST LDD MODE 7
3083          ;*****
3083 013460 005267 165320          TST44:          INC      $TESTN          ;INCREMENT TEST NUMBER
3084 013464 012701 001126          MOV      @RECDST,R1     ;POINT TO RECEIVED DATA LOCATION
3085 013470 005004          CLR      R4             ;R4=0
3086 013472 012727 001176 001136          MOV      @TAB1,@TSTLOC  ;POINTER FOR MODE 7 GOOD DATA
3087 013500 012702 047750          MOV      @47750,R2     ;LOAD GOOD STATUS
3088 013504 170102          LDFPS   R2             ;LOAD FPP STATUS - DOUBLE.ID
3089 013506 172474 001136          LDD     @TSTLOC(R4),ACO ;*TEST INSTRUCTION - MODE 7
3090 013512 170203          STFPS   R3             ;SAVE TEST FPP STATUS
3091 013514 174011          STD     ACO,(R1)       ;SAVE TEST RESULT
3092 013516 020203          CMP     R2,R3          ;VERIFY FPP STATUS
3093 013520 001403          BEQ     1$             ;BRANCH IF GOOD
3094 013522 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3095 013524 000222          .WORD    222          ;UNIQUE ERROR NUMBER
3096 013526 002013          .WORD    FPPERR       ;ADDRESS OF ERROR MESSAGE
3097                                     ;BAD FPP STATUS
3098 013530 005704          1$:          TST     R4             ;VERIFY CONTENTS OF R4
3099 013532 001403          BEQ     2$             ;BRANCH IF GOOD
3100 013534 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3101 013536 000223          .WORD    223          ;UNIQUE ERROR NUMBER
3102 013540 002013          .WORD    FPPERR       ;ADDRESS OF ERROR MESSAGE
3103                                     ;BAD R4
3104 013542 012704 001176          2$:          MOV     @TAB1,R4        ;POINT TO RECEIVED DATA
3105 013546 004767 166374          JSR     R7,DATVER      ;VERIFY DATA FROM FPP
3106 013552 005767 165262          TST     COUNT          ;SEE IF COUNTER=0
3107 013556 001403          BEQ     3$             ;BRANCH IF GOOD COMPARE
3108 013560 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3109 013562 000224          .WORD    224          ;UNIQUE ERROR NUMBER
3110 013564 002013          .WORD    FPPERR       ;ADDRESS OF ERROR MESSAGE
3111                                     ;BAD DATA FROM FPP
3112 013566
3113
3114 013566          3$:
3115
3116          MLDM27:
3117          ;*****
3118          ;*TEST 45      TEST LDD MODE 27 - ONLY 16 BITS ARE LOADED OR STORED
3119          ;*****
3119 013566 005267 165212          TST45:          INC      $TESTN          ;INCREMENT TEST NUMBER
3120 013572 012701 001126          MOV      @RECDST,R1     ;POINT TO RECEIVED DATA LOCATION
3121 013576 012704 001236          MOV      @TAB5,R4        ;POINT TO GOOD DATA
3122 013602 012702 047750          MOV      @47750,R2     ;LOAD GOOD STATUS
3123 013606 005005          CLR     R5             ;R5=0
3124 013610 170102          LDFPS   R2             ;LOAD FPP STATUS - DOUBLE.ID
3125 013612 172427 043243          LDD     @5205,ACO      ;*TEST INSTRUCTION - MODE 27
3126 013616 005205          INC     R5

```

L5

|      |        |        |        |         |   |            |                                    |
|------|--------|--------|--------|---------|---|------------|------------------------------------|
| 3127 | 013620 | 005205 |        | INC     | R5  |            |                                    |
| 3128 | 013622 | 005205 |        | INC     | R5  |            | ; TEST PROPER PC PATH              |
| 3129 | 013624 | 022705 | 000003 | CMP     | #3,R5   |            | ; VERIFY ONLY 3 PC INCREMENT       |
| 3130 | 013630 | 001403 |        | BEQ     | 1#  |            | ; BRANCH IF PROPER PC ACTION       |
| 3131 | 013632 | 104000 |        | ERROR   |   |            | ; ALL ERRORS TO TRAP TO EMT VECTOR |
| 3132 | 013634 | 000225 |        | .WORD   | 225   |            | ; UNIQUE ERROR NUMBER              |
| 3133 | 013636 | 002013 |        | .WORD   | FPPERR  |            | ; ADDRESS OF ERROR MESSAGE         |
| 3134 |        |        |        |         |   |            | ; BAD MODE 27 LOAD                 |
| 3135 | 013640 | 170203 |        | 1#:     | STFPS   | R3         | ; SAVE TEST FPP STATUS             |
| 3136 | 013642 | 174011 |        |         | STD   | ACO,(R1)   | ; SAVE TEST RESULT                 |
| 3137 | 013644 | 022703 | 047740 |         | CMP   | #47740,R3  | ; VERIFY FPP STATUS                |
| 3138 | 013650 | 001403 |        |         | BEQ   | 2#         | ; BRANCH IF GOOD                   |
| 3139 | 013652 | 104000 |        |         | ERROR   |            | ; ALL ERRORS TO TRAP TO EMT VECTOR |
| 3140 | 013654 | 000226 |        |         | .WORD   | 226        | ; UNIQUE ERROR NUMBER              |
| 3141 | 013656 | 002013 |        |         | .WORD   | FPPERR     | ; ADDRESS OF ERROR MESSAGE         |
| 3142 |        |        |        |         |   |            | ; BAD FPP STATUS                   |
| 3143 | 013660 | 004767 | 166262 | 2#:     | JSR   | R7,DATVER  | ; VERIFY DATA FROM FPP             |
| 3144 | 013664 | 005767 | 165150 |         | TST   | COUNT      | ; SEE IF COUNTER=0                 |
| 3145 | 013670 | 001403 |        |         | BEQ   | 3#         | ; BRANCH IF GOOD COMPARE           |
| 3146 | 013672 | 104000 |        |         | ERROR   |            | ; ALL ERRORS TO TRAP TO EMT VECTOR |
| 3147 | 013674 | 000227 |        |         | .WORD   | 227        | ; UNIQUE ERROR NUMBER              |
| 3148 | 013676 | 002013 |        |         | .WORD   | FPPERR     | ; ADDRESS OF ERROR MESSAGE         |
| 3149 |        |        |        |         |   |            | ; BAD DATA FROM FPP                |
| 3150 | 013700 |        |        | 3#:     |   |            |                                    |
| 3151 |        |        |        |         |   |            |                                    |
| 3152 | 013700 |        |        |         |   |            |                                    |
| 3153 |        |        |        | MINRM1: |   |            |                                    |
| 3154 |        |        |        | ;       | *****   |            |                                    |
| 3155 |        |        |        | ;       | TEST 46 TEST ADDF, ADDO, SUBF, SUBD - ACO=0 FSRC=0; |            |                                    |
| 3156 | 013700 |        |        | ;       | *****   |            |                                    |
| 3157 | 013700 | 005267 | 165100 | TST46:  | INC   | #TESTN     | ; INCREMENT TEST NUMBER            |
| 3158 | 013704 | 012704 | 001256 |         | MOV   | #TAB6,R4   | ; POINT TO FSRC TEST DATA          |
| 3159 | 013710 | 005067 | 165216 |         | CLR   | RECDST.4   | ; CLEAR OUT RECEIVED DATA TABLE    |
| 3160 | 013714 | 005067 | 165214 |         | CLR   | RECDST.6   |                                    |
| 3161 | 013720 | 012702 | 040000 |         | MOV   | #40000,R2  | ; SET UP GOOD STATUS               |
| 3162 | 013724 | 170102 |        |         | LDFPS   | R2         | ; LOAD FPP STATUS, FLOATING        |
| 3163 | 013726 | 172414 |        |         | LDF   | (R4),ACO   | ; LOAD ACO WITH 0                  |
| 3164 | 013730 | 172014 |        |         | ADDF  | (R4),ACO   | ; 0.0                              |
| 3165 | 013732 | 170203 |        |         | STFPS   | R3         | ; SAVE STATUS                      |
| 3166 | 013734 | 022703 | 040004 |         | CMP   | #40004,R3  | ; VERIFY STATUS                    |
| 3167 | 013740 | 001403 |        |         | BEQ   | 1#         | ; BRANCH IF GOOD                   |
| 3168 | 013742 | 104000 |        |         | ERROR   |            | ; ALL ERRORS TO TRAP TO EMT VECTOR |
| 3169 | 013744 | 000230 |        |         | .WORD   | 230        | ; UNIQUE ERROR NUMBER              |
| 3170 | 013746 | 002013 |        |         | .WORD   | FPPERR     | ; ADDRESS OF ERROR MESSAGE         |
| 3171 |        |        |        |         |   |            | ; BAD FPP STATUS                   |
| 3172 | 013750 | 012701 | 001126 | 1#:     | MOV   | #RECDST,R1 | ; POINT TO RECEIVED DATA           |
| 3173 | 013754 | 174011 |        |         | STF   | ACO,(R1)   | ; SAVE DATA                        |
| 3174 | 013756 | 004767 | 166164 |         | JSR   | R7,DATVER  | ; VERIFY DATA                      |
| 3175 | 013762 | 005767 | 165052 |         | TST   | COUNT      |                                    |
| 3176 | 013766 | 001403 |        |         | BEQ   | 2#         | ; BRANCH IF GOOD                   |
| 3177 | 013770 | 104000 |        |         | ERROR   |            | ; ALL ERRORS TO TRAP TO EMT VECTOR |
| 3178 | 013772 | 000231 |        |         | .WORD   | 231        | ; UNIQUE ERROR NUMBER              |
| 3179 | 013774 | 002013 |        |         | .WORD   | FPPERR     | ; ADDRESS OF ERROR MESSAGE         |
| 3180 |        |        |        |         |   |            | ; BAD DATA IN ACO                  |
| 3181 | 013776 | 012702 | 040200 | 2#:     | MOV   | #40200,R2  | ; LOAD FLOATING STATUS             |
| 3182 | 014002 | 170102 |        |         | LDFPS   | R2         |                                    |

|      |        |        |        |        |       |           |  |                                   |
|------|--------|--------|--------|--------|-------|-----------|--|-----------------------------------|
| 3183 | 014004 | 172414 |        |        | LDD   | (R4),ACO  |  | ;LOAD ACO WITH 0                  |
| 3184 | 014006 | 172014 |        |        | ADD   | (R4),ACO  |  | ;*TEST INSTRUCTION                |
| 3185 | 014010 | 174011 |        |        | STD   | ACO,(R1)  |  | ;SAVE DATA                        |
| 3186 | 014012 | 170203 |        |        | STFPS | R3        |  | ;SAVE FPS                         |
| 3187 | 014014 | 022703 | 040204 |        | CMP   | #40204,R3 |  | ;VERFIY STATUS                    |
| 3188 | 014020 | 001403 |        |        | BEQ   | 3#        |  | ;BRANCH IF GOOD                   |
| 3189 | 014022 | 104000 |        |        | ERROR |           |  | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 3190 | 014024 | 000232 |        |        | .WORD | 232       |  | ;UNIQUE ERROR NUMBER              |
| 3191 | 014026 | 002013 |        |        | .WORD | FPPERR    |  | ;ADDRESS OF ERROR MESSAGE         |
| 3192 |        |        |        |        |       |           |  | ;BAD FPS                          |
| 3193 | 014030 | 004767 | 166112 | 3#:    | JSR   | R7,DATVER |  | ;VERFIY DATA                      |
| 3194 | 014034 | 005737 | 001040 |        | TST   | ##COUNT   |  | ;VERIFY RESULT                    |
| 3195 | 014040 | 001403 |        |        | BEQ   | 44#       |  | ;BRANCH IF GOOD                   |
| 3196 | 014042 | 104000 |        |        | ERROR |           |  | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 3197 | 014044 | 000233 |        |        | .WORD | 233       |  | ;UNIQUE ERROR NUMBER              |
| 3198 | 014046 | 002013 |        |        | .WORD | FPPERR    |  | ;ADDRESS OF ERROR MESSAGE         |
| 3199 |        |        |        |        |       |           |  | ;BAD ACO                          |
| 3200 | 014050 | 172414 |        | 44#:   | LDD   | (R4),ACO  |  | ;SETUP DATA                       |
| 3201 | 014052 | 173014 |        |        | SUBD  | (R4),ACO  |  | ;*TEST INSTRUCTION                |
| 3202 | 014054 | 170203 |        |        | STFPS | R3        |  | ;SAVE STATUS                      |
| 3203 | 014056 | 022703 | 040204 |        | CMP   | #40204,R3 |  | ;VERFIY STATUS                    |
| 3204 | 014062 | 001403 |        |        | BEQ   | 4#        |  | ;BRANCH IF GOOD                   |
| 3205 | 014064 | 104000 |        |        | ERROR |           |  | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 3206 | 014066 | 000234 |        |        | .WORD | 234       |  | ;UNIQUE ERROR NUMBER              |
| 3207 | 014070 | 002013 |        |        | .WORD | FPPERR    |  | ;ADDRESS OF ERROR MESSAGE         |
| 3208 |        |        |        |        |       |           |  | ;BAD FPS                          |
| 3209 | 014072 | 174011 |        | 4#:    | STD   | ACO,(R1)  |  | ;SAVE ACO DATA                    |
| 3210 | 014074 | 004767 | 166046 |        | JSR   | R7,DATVER |  | ;VERFIY DATA                      |
| 3211 | 014100 | 005767 | 164734 |        | TST   | COUNT     |  |                                   |
| 3212 | 014104 | 001403 |        |        | BEQ   | 5#        |  | ;BRANCH IF GOOD                   |
| 3213 | 014106 | 104000 |        |        | ERROR |           |  | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 3214 | 014110 | 000235 |        |        | .WORD | 235       |  | ;UNIQUE ERROR NUMBER              |
| 3215 | 014112 | 002013 |        |        | .WORD | FPPERR    |  | ;ADDRESS OF ERROR MESSAGE         |
| 3216 |        |        |        |        |       |           |  | ;BAD ACO                          |
| 3217 | 014114 | 170127 | 000000 | 5#:    | LDFPS | #0        |  | ;STORE FPP STATUS                 |
| 3218 | 014120 | 172414 |        |        | LDD   | (R4),ACO  |  | ;LOAD ACO                         |
| 3219 | 014122 | 173014 |        |        | SUBF  | (R4),ACO  |  | ;0-0                              |
| 3220 | 014124 | 170203 |        |        | STFPS | R3        |  | ;SAVE STATUS                      |
| 3221 | 014126 | 174011 |        |        | STD   | ACO,(R1)  |  | ;SAVE ACO                         |
| 3222 | 014130 | 022703 | 000004 |        | CMP   | #4,R3     |  | ;VERFIY STATUS                    |
| 3223 | 014134 | 001403 |        |        | BEQ   | 6#        |  | ;BRANCH IF GOOD                   |
| 3224 | 014136 | 104000 |        |        | ERROR |           |  | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 3225 | 014140 | 000236 |        |        | .WORD | 236       |  | ;UNIQUE ERROR NUMBER              |
| 3226 | 014142 | 002013 |        |        | .WORD | FPPERR    |  | ;ADDRESS OF ERROR MESSAGE         |
| 3227 |        |        |        |        |       |           |  | ;BAD FPS                          |
| 3228 | 014144 | 004767 | 165776 | 6#:    | JSR   | R7,DATVER |  | ;VERFIY DATAT                     |
| 3229 | 014150 | 005767 | 164664 |        | TST   | COUNT     |  |                                   |
| 3230 | 014154 | 001403 |        |        | BEQ   | 7#        |  | ;BRANC IF GOOD                    |
| 3231 | 014156 | 104000 |        |        | ERROR |           |  | ;ALL ERRORS TO TRAP TO EMT VECTOR |
| 3232 | 014160 | 000237 |        |        | .WORD | 237       |  | ;UNIQUE ERROR NUMBER              |
| 3233 | 014162 | 002013 |        |        | .WORD | FPPERR    |  | ;ADDRESS OF ERROR MESSAGE         |
| 3234 |        |        |        |        |       |           |  | ;BAD ACO                          |
| 3235 | 014164 |        |        | 7#:    |       |           |  |                                   |
| 3236 |        |        |        |        |       |           |  |                                   |
| 3237 |        |        |        |        |       |           |  |                                   |
| 3238 | 014164 |        |        | MNRM2: |       |           |  |                                   |



```

3239
3240 ;*****
; *TEST 47 TEST ADDF,SUBD - FSRC=0, ACO NE 0
3241 ;*****
3242 TST47:
3243 014164 005267 164614 INC #TESTN ;INCREMENT TEST NUMBER
3244 014170 012701 001126 MOV #RECDST,R1 ;POINT TO RECEIVED DATA TABLE
3245 014174 012705 001256 MOV #TAB6,R5 ;POINT TO SOURCE DATA TABLE
3246 014200 012704 001206 MOV #TAB2,R4 ;POINT TO ACO DATA
3247 014204 170127 000200 LDFPS #200 ;SET TO DOUBLE FOR CLEAR
3248 014210 172415 LDD (R5),ACO ;
3249 014212 005002 CLR R2 ;SETUP FPP STATUS
3250 014214 170102 LDFPS R2 ;LOAD FPS
3251 014216 172414 LDF (R4),ACO ;LOAD ACO
3252 014220 172015 ADDF (R5),ACO ; *TEST INSTRUCTION
3253 014222 170203 STFPS R3 ;SAVE STATUS
3254 014224 174011 STF ACO,(R1) ;SAVE ACO
3255 014226 022703 000000 CMP #0,R3 ;VERIFY NEGATIVE RESULT
3256 014232 001403 BEQ 1# ;BRANCH IF GOOD
3257 014234 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3258 014236 000240 .WORD 240 ;UNIQUE ERROR NUMBER
3259 014240 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
3260 ;BAD FPS
3261 014242 012704 001226 1#: MOV #TAB4,R4 ;POINT TO EXPECTED DATA
3262 014246 004767 165674 JSR R7,DATVER ;VERIFY ACO
3263 014252 005767 164562 TST COUNT ;CHECK RESULT
3264 014256 001403 BEQ 2# ;BRANCH IF GOOD
3265 014260 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3266 014262 000241 .WORD 241 ;UNIQUE ERROR NUMBER
3267 014264 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
3268 ;BAD ACO
3269 014266 170127 000200 2#: LDFPS #200 ;SET STATUS TO DOUBLE NODE
3270 014272 172414 LDD (R4),ACO ;LOAD ACO WITH A VALUE
3271 014274 173015 SUBD (R5),ACO ; *TEST INSTRUCTION
3272 014276 170203 STFPS R3 ;SAVE FPP STATUS
3273 014300 174011 STD ACO,(R1) ;SAVE ACO
3274 014302 022703 000200 CMP #200,R3 ;VERIFY RESULT
3275 014306 001403 BEQ 3# ;BRANCH IF GOOD
3276 014310 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3277 014312 000242 .WORD 242 ;UNIQUE ERROR NUMBER
3278 014314 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
3279 ;BAD SUBD
3280 014316 012704 001226 3#: MOV #TAB4,R4 ;POINT TO EXPECTED
3281 014322 004767 165620 JSR R7,DATVER ;VERIFY ACO
3282 014326 005767 164506 TST COUNT ;
3283 014332 001403 BEQ 4# ;BRANCH IF GOOD ACO
3284 014334 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3285 014336 000243 .WORD 243 ;UNIQUE ERROR NUMBER
3286 014340 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
3287 ;BAD ACO
3288 014342 4#:
3289
3290
3291 014342 MNNRM3:
3292 ;*****
3293 ; *TEST 50 TEST ADDD, SUBF FSRC NE 0, ACO=0
3294 ;*****

```

3295 014342  
3296 014342 005267 164436  
3297 014346 012701 001126  
3298 014352 012705 001256  
3299 014356 012704 001176  
3300 014362 012702 000200  
3301 014366 170102  
3302 014370 172415  
3303 014372 172014  
3304 014374 170203  
3305 014376 174011  
3306 014400 022703 000210  
3307 014404 001403  
3308 014406 104000  
3309 014410 000244  
3310 014412 002013  
3311  
3312 014414 004767 165526  
3313 014420 005767 164414  
3314 014424 001403  
3315 014426 104000  
3316 014430 000245  
3317 014432 002013  
3318  
3319 014434 170127 000200  
3320 014440 172415  
3321 014442 173014  
3322 014444 170203  
3323 014446 174011  
3324 014450 022703 000200  
3325 014454 001403  
3326 014456 104000  
3327 014460 000246  
3328 014462 002013  
3329  
3330 014464 012704 001446  
3331 014470 004767 165452  
3332 014474 005767 164340  
3333 014500 001403  
3334 014502 104000  
3335 014504 000247  
3336 014506 002013  
3337  
3338 014510  
3339  
3340  
3341 014510  
3342  
3343  
3344  
3345 014510  
3346 014510 005267 164270  
3347 014514 012702 003240  
3348 014520 170102  
3349 014522 012704 001276  
3350 014526 012705 001306

TST50:

INC #TESTN  
MOV #RECDST,R1  
MOV #TAB6,R5  
MOV #TAB1,R4  
MOV #200,R2  
LDFPS R2  
LDD (R5),ACO  
ADD (R4),ACO  
STFPS 93  
STD #0,(R1)  
CMP #210,R3  
BEQ 1#  
ERROR  
.WORD 244  
.WORD FPPERR  
1#:  
JSR R7,DATVER  
TST COUNT  
BEQ 2#  
ERROR  
.WORD 245  
.WORD FPPERR  
2#:  
LDFPS #200  
LDF (R5),ACO  
SUBD (R4),ACO  
STFPS R3  
STF ACO,(R1)  
CMP #200,R3  
BEQ 3#  
ERROR  
.WORD 246  
.WORD FPPERR  
3#:  
MOV #TAB18,R4  
JSR R7,DATVER  
TST COUNT  
BEQ 4#  
ERROR  
.WORD 47  
.WORD FPPERR

INCREMENT TEST NUMBER  
POINT TO RECEIVED DATA TABLE  
POINT TO ACO DATA TABLE  
POINT TO FSRC DATA  
SETUP FPP STATUS  
LOAD FPS  
LOAD ACO  
TEST INSTRUCTION  
SAVE STATUS  
SAVE ACO  
VERIFY NEGATIVE RESULT  
BRANCH IF GOOD  
ALL ERRORS TO TRAP TO EMT VECTOR  
UNIQUE ERROR NUMBER  
ADDRESS OF ERROR MESSAGE  
BAD FPS  
VERIFY ACO  
CHECK RESULT  
BRANCH IF GOOD  
ALL ERRORS TO TRAP TO EMT VECTOR  
UNIQUE ERROR NUMBER  
ADDRESS OF ERROR MESSAGE  
BAD ACO  
SET STATUS TO DOUBLE NODE  
LOAD ACO WITH A VALUE  
TEST INSTRUCTION  
SAVE FPP STATUS  
SAVE ACO  
VERIFY RESULT  
BRANCH IF GOOD  
ALL ERRORS TO TRAP TO EMT VECTOR  
UNIQUE ERROR NUMBER  
ADDRESS OF ERROR MESSAGE  
BAD SUBD  
POINT TO EXPECTED DATA  
VERIFY ACO  
BRANCH IF GOOD ACO  
ALL ERRORS TO TRAP TO EMT VECTOR  
UNIQUE ERROR NUMBER  
ADDRESS OF ERROR MESSAGE  
BAD ACO

MINIMUM:

\*\*\*\*\*  
TEST 51 TEST ADD, SUBD - EXP(ACO) - EXP(FSRC)  
\*\*\*\*\*

TST51:

INC #TESTN  
MOV #3240,R2  
LDFPS R2  
MOV #TAB7,R4  
MOV #TAB8,R5

INCREMENT TEST NUMBER  
SET FIU,FD,FT  
SET FSRC  
SETUP ACO

```

3351 014532 012701 001126      MOV    #RECDST,R1      ;POINT TO RECEIVED DATA
3352 014536 172415              LOD    (R5),ACO       ;LOAD ACO
3353 014540 172014              ADD    (R4),ACO       ;*TEST INSTRUCTION
3354 014542 174011              STD    ACO,(R1)       ;SAVE TEST RESULT
3355 014544 012704 001316      MOV    #TAB9,R4       ;POINT TO EXPECTED DATA
3356 014550 004767 165372      JSR   R7,DATVER       ;VERIFY ACO DATA
3357 014554 005767 164260      TST   COUNT          ;
3358 014560 001403              BEQ   1#             ;BRANCH IF GOOD
3359 014562 104000              ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3360 014564 000250              .WORD 250          ;UNIQUE ERROR NUMBER
3361 014566 002013              .WORD FPPERR       ;ADDRESS OF ERROR MESSAGE
3362                                     ;BAD ADD
3363 014570 012704 001306      1# : MOV    #TAB8,R4      ;
3364 014574 012703 001306      MOV    #TAB8,R3      ;SETUP SAME ACO
3365 014600 012702 003200      MOV    #3200,R2      ;ROUND MODE
3366 014604 170102              LDFPS R2            ;
3367 014606 172413              LOD    (R3),ACO       ;LOAD ACO
3368 014610 061400              ADD    (R4),ACO       ;*TEST INSTRUCTION
3369 014612 174011              STD    ACO,(R1)       ;SAVE DATA
3370 014614 004767 165326      JSR   R7,DATVER       ;VERIFY ACO
3371 014620 005767 164214      TST   COUNT          ;
3372 014624 001403              BEQ   2#             ;BRANCH IF GOOD
3373 014626 104000              ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3374 014630 000251              .WORD 251          ;UNIQUE ERROR NUMBER
3375 014632 002013              .WORD FPPERR       ;ADDRESS OF ERROR MESSAGE
3376                                     ;BAD ROUND RESULT
3377 014634      2# :
3378
3379
3380 014634      MXDF1:
3381      ;*****
3382      ;*TEST 52      TEST ADD - EXP(FSRC) .GT. EXP(ACO)
3383      ;*****
3384      TST52:
3385 014634 005267 164144      INC    #TESTN        ;INCREMENT TEST NUMBER
3386 014640 012702 003200      MOV    #3200,R2      ;R2=FPP STATUS
3387 014644 170102              LDFPS R2            ;LOAD FPS STATUS
3388 014646 012704 001336      MOV    #TAB11,R4     ;POINT TO FSRC DATA
3389 014652 012701 001126      MOV    #RECDST,R1   ;POINT TO ACO RESULT
3390 014656 012705 001326      MOV    #TAB10,R5     ;POINT TO ACO DATA
3391 014662 172415              LOD    (R5),ACO       ;LOAD ACO DATA
3392 014664 172014              ADD    (R4),ACO       ;*TEST INSTRUCTIONS
3393 014666 170203              STFPS R3            ;SAVE FPP STATUS
3394 014670 174011              STD    ACO,(R1)       ;SAVE ACO DATA
3395 014672 022703 003200      CMP    #3200,R3      ;VERIFY FPP STATUS
3396 014676 001403              BEQ   1#             ;BRANCH IF GOOD
3397 014700 104000              ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3398 014702 000252              .WORD 252          ;UNIQUE ERROR NUMBER
3399 014704 002013              .WORD FPPERR       ;ADDRESS OF ERROR MESSAGE
3400                                     ;BAD FPP STATUS
3401 014706 012704 001346      1# : MOV    #TAB11A,R4   ;POINT TO EXPECTED DATA
3402 014712 004767 165230      JSR   R7,DATVER       ;VERIFY CONTENTS OF ACO
3403 014716 005767 164116      TST   COUNT          ;
3404 014722 001403              BEQ   2#             ;BRANCH IF GOOD ACO
3405 014724 104000              ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3406 014726 000253              .WORD 253          ;UNIQUE ERROR NUMBER

```

```

3407 014730 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
3408 ;BAD ACO ; SHOULD = FSRC
3409 014732 012704 001356 21: MOV #TAB12,R4 ;POINT TO FSRC DATA
3410 014736 172415 LDD (R5),ACO ;ACO
3411 014740 172014 ADD (R4),ACO ;*TEST INSTRUCTION
3412 014742 012704 001376 MOV #TAB13B,R4 ;POINT TO EXPECTED RESULT
3413 014746 174011 STD ACO,(R1) ;SAVE ACO DATA INTO RECDAT
3414 014750 004767 165172 JSR R7,DATVER ;VERIFY DATA
3415 014754 005767 164060 TST COUNT
3416 014760 001403 BEQ 31 ;BRANCH IF GOOD DATA
3417 014762 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3418 014764 000254 .WORD 254 ;UNIQUE ERROR NUMBER
3419 014766 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
3420 ;BAD ACO DATA
3421 014770 012702 003000 31: MOV #3000,R2 ;GET FPP STATUS DATA
3422 014774 012704 001406 MOV #TAB14,R4 ;POINT TO FSRC DATA
3423 015000 012705 001416 MOV #TAB15,R5 ;POINT TO ACO DATA
3424 015004 172415 LDD (R5),ACO ;LOAD ACO
3425 015006 170102 LDFPS R2 ;FPP STATUS = FLOAT, INTERRUPTS ENABLE
3426 015010 172014 ADDF (R4),ACO ;*TEST INSTRUCTION
3427 015012 170127 000200 LDFPS #200 ;RESET TO DOUBLE
3428 015016 174011 STD ACO,(R1) ;RECDST=ACO
3429 015020 012704 001326 MOV #TAB10,R4 ;POINT TO GOOD DATA
3430 015024 004767 165116 JSR R7,DATVER ;VERIFY CONTENTS OF ACO
3431 015030 005767 164004 TST COUNT
3432 015034 001403 BEQ 41 ;BRANCH IF GOOD
3433 015036 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3434 015040 000255 .WORD 255 ;UNIQUE ERROR NUMBER
3435 015042 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
3436 ;BAD FLOATING ADD
3437 015044 012705 001426 41: MOV #TAB16,R5 ;POINT TO ACO DATA
3438 015050 170102 LDFPS R2 ;FPP STATUS = FLOAT
3439 015052 172415 LDF (R5),ACO ;LOAD ACO
3440 015054 172014 ADDF (R4),ACO ;*TEST INSTRUCTION
3441 015056 174011 STD ACO,(R1) ;SAVE ACO DATA
3442 015060 012704 001436 MOV #TAB17,R4 ;POINT TO GOOD DATA
3443 015064 004767 165056 JSR R7,DATVER
3444 015070 005767 163744 TST COUNT
3445 015074 001403 BEQ 51 ;BRANCH IF GOOD
3446 015076 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3447 015100 000256 .WORD 256 ;UNIQUE ERROR NUMBER
3448 015102 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
3449 ;BAD FLOATING ADD
3450 015104 51:
3451
3452
3453
3454 015104 MNGOP:
3455 ;*****
3456 ;*TEST 53 TEST ADD WITH NEGATIVE OPERANDS
3457 ;*****
3458 015104 TST53:
3459 015104 005267 163674 INC #TESTN ;INCREMENT TEST NUMBER
3460 015110 012702 003200 MOV #3200,R2 ;LOAD FPS VALUE
3461 015114 170102 LDFPS R2 ;
3462 015116 012704 001456 MOV #TAB21,R4 ;DATA ADDRESS FOR ACO AND FSRC

```

```

3463 015122 172414 LDD (R4),ACO ;ACO=100200 0 0 0
3464 015124 172014 ADD (R4),ACO ;*TEST INSTRUCTION
3465 015126 170203 STFPS R3 ;SAVE STATUS
3466 015130 012701 001126 MOV @RECDST,R1 ;POINT TO RECEIVED DATA TABLE
3467 015134 174011 STD ACO,(R1) ;SAVE ACO DATA
3468 015136 022703 003210 CMP @3210,R3 ;VERIFY STATUS
3469 015142 001403 BEQ 1# ;BRANCH IF GOOD
3470 015144 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3471 015146 000257 .WORD ;UNIQUE ERROR NUMBER
3472 015150 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
3473
3474 015152 012704 001466 1#: MOV @TAB22,R4 ;POINT TO EXPECTED DATA
3475 015156 004767 164764 JSR R7,DATVER ;
3476 015162 005767 163652 TST COUNT ;
3477 015166 001403 BEQ 2# ;VERIFY DATA
3478 015170 104000 ERROR ;BRANCH IF GOOD
3479 015172 000260 .WORD ;ALL ERRORS TO TRAP TO EMT VECTOR
3480 015174 002013 .WORD 260 ;UNIQUE ERROR NUMBER
3481 ; FPPERR ;ADDRESS OF ERROR MESSAGE
3482
3483 015176 012704 001456 2#: ; !-FSRC! = !ACO!
3484 015202 012701 001476 MOV @TAB21,R4 ;POINT TO FSRC DATA
3485 015206 012737 015230 000244 MOV @TAB23,R1 ;POINT TO ACO DATA
3486 015214 172411 MOV @101#,B#FPVEC ;SETUP FP VECTOR
3487 015216 172014 LDD (R1),ACO ;LOAD ACO
3488 015220 170000 100#: ADD (R4),ACO ;*TEST INSTRUCTION
3489 015222 104000 CFCC ;COPY FPP CC
3490 015224 000261 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3491 015226 002013 .WORD 261 ;UNIQUE ERROR NUMBER
3492 ; FPPERR ;ADDRESS OF ERROR MESSAGE
3493 101#: ;GO TO ERROR
3494 015232 170203 STFPS R3 ;SAVE FPP STATUS
3495 015236 174011 001126 MOV @RECDST,R1 ;POINT TO RECEIVED DATA TABLE
3496 015240 022703 103200 STD ACO,(R1) ;SAVE ACO DATA
3497 015244 001403 CMP @103200,R3 ;VERIFY STATUS
3498 015246 104000 BEQ 3# ;BRANCH IF GOOD
3499 015250 000262 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3500 015252 002013 .WORD 262 ;UNIQUE ERROR NUMBER
3501 ; FPPERR ;ADDRESS OF ERROR MESSAGE
3502 ;BAD STATUS
3503 015254 012605 3#: MOV (SP)+,R5 ;GET ERROR PC
3504 015256 020527 015220 CMP R5,#100# ;VERIFY ERROR ADDRESS ON STACK
3505 015262 001403 BEQ 102# ;BRANCH IF GOOD
3506 015264 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3507 015270 000263 .WORD 263 ;UNIQUE ERROR NUMBER
3508 ; FPPERR ;ADDRESS OF ERROR MESSAGE
3509 ;BAD ERROR RETURN ON STACK
3510 015272 005726 102#: TST (SP)+ ;RESTORE STACK
3511 015274 012704 001506 MOV @TAB24,R4 ;POINT TO EXPECTED DATA TABLE
3512 015300 004767 164642 JSR R7,DATVER ;VERIFY DATA
3513 015304 005767 163530 TST COUNT ;
3514 015310 001403 BEQ 4# ;BRANC IF GOOD
3515 015312 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3516 015314 000264 .WORD 264 ;UNIQUE ERROR NUMBER
3517 ; FPPERR ;ADDRESS OF ERROR MESSAGE
3518 ;BAD ACO DATA
; !-ACO! = !FSRC!

```



```

3575 015534 005767 163300      TST      COUNT      ;
3576 015540 001403              BEQ      8#          ;BRANCH IF GOOD
3577 015542 104000              ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
3578 015544 000272              .WORD    272        ;UNIQUE ERROR NUMBER
3579 015546 002013              .WORD    FPPERR     ;ADDRESS OF ERROR MESSAGE
3580
3581
3582 015550 012704 001516      8#:     MOV      !FSRC! > ! AC! ;POINT TO FSRC DATA
3583 015554 012701 001526      MOV      @TAB25,R4 ;POINT TO ACO DATA
3584 015560 172411              LDD      (R1),ACO  ;LOAD ACO DATA
3585 015562 172014              ADDD    (R4),ACO  ;*TEST INSTRUCTION
3586 015564 170203              STFPS   R3        ;SAVE STATUS
3587 015566 012701 001126      MOV      @RECDST,R1 ;POINT TO RECEIVED DATA TABLE
3588 015572 174011              STD     ACO,(R1)  ;SAVE ACO
3589 015574 020327 003200      CMP     R3,#3200 ;VERIFY STATUS
3590 015600 001403              BEQ     9#          ;BRANCH IF GOOD
3591 015602 104000              ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
3592 015604 000273              .WORD    273        ;UNIQUE ERROR NUMBER
3593 015606 002013              .WORD    FPPERR     ;ADDRESS OF ERROR MESSAGE
3594
3595 015610 012704 001536      9#:     MOV      @TAB27,R4 ;POINT TO EXPECTED DSATA
3596 015614 004767 164326      JSR     R7,DATVER ;VERIFY DATA
3597 015620 005767 163214      TST     COUNT     ;
3598 015624 001403              BEQ     10#         ;BRANCH IF GOOD
3599 015626 104000              ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
3600 015630 000274              .WORD    274        ;UNIQUE ERROR NUMBER
3601 015632 002013              .WORD    FPPERR     ;ADDRESS OF ERROR MESSAGE
3602
3603
3604 015634 012704 001556      10#:    MOV      !-FSRC! < !ACO! ;POINT TO FSRC DATA
3605 015640 012701 001546      MOV      @TAB29,R4 ;POINT TO ACO DATA
3606 015644 172411              LDD      (R1),ACO  ;LOAD ACO DATA
3607 015646 172014              ADDD    (R4),ACO  ;*TEST INSTRUCTION
3608 015650 170203              STFPS   R3        ;SAVE STATUS
3609 015652 012701 001126      MOV      @RECDST,R1 ;POINT TO RECEIVED DATA TABLE
3610 015656 174011              STD     ACO,(R1)  ;SAVE ACO
3611 015660 020327 003200      CMP     R3,#3200 ;VERIFY STATUS
3612 015664 001403              BEQ     11#         ;BRANCH IF GOOD
3613 015666 104000              ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
3614 015670 000275              .WORD    275        ;UNIQUE ERROR NUMBER
3615 015672 002013              .WORD    FPPERR     ;ADDRESS OF ERROR MESSAGE
3616
3617 015674 012704 001566      11#:    MOV      @TAB29A,R4 ;POINT TO EXPECTED DATA
3618 015700 004767 164242      JSR     R7,DATVER ;VERIFY DATA
3619 015704 005767 163130      TST     COUNT     ;
3620 015710 001403              BEQ     12#         ;BRANCH IF GOOD
3621 015712 104000              ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
3622 015714 000276              .WORD    276        ;UNIQUE ERROR NUMBER
3623 015716 002013              .WORD    FPPERR     ;ADDRESS OF ERROR MESSAGE
3624
3625 015720
3626
3627
3628
3629 015720
3630
;
;
;MSB:
;*****

```

```

3631
3632
3633 015720
3634 015720 005267 163060
3635 015724 012702 003200
3636 015730 170102
3637 015732 012704 001456
3638 015736 012701 001126
3639 015742 172414
3640 015744 173014
3641 015746 170203
3642 015750 174011
3643 015752 022703 003204
3644 015756 001403
3645 015760 104000
3646 015762 000277
3647 015764 002013
3648
3649 015766 012704 001256
3650 015772 004767 164150
3651 015776 005767 163036
3652 016002 001403
3653 016004 104000
3654 016006 000300
3655 016010 002013
3656
3657 016012 012704 001406
3658 016016 172414
3659 016020 173014
3660 016022 170203
3661 016024 174011
3662 016026 022703 003204
3663 016032 001403
3664 016034 104000
3665 016036 000301
3666 016040 002013
3667
3668 016042 012704 001256
3669 016046 004767 164074
3670 016052 005767 162762
3671 016056 001403
3672 016060 104000
3673 016062 000302
3674 016064 002013
3675
3676 016066
3677
3678
3679 016066
3680
3681
3682
3683 016066
3684 016066 005267 162712
3685 016072 012702 003200
3686 016076 170102

```

```

; *TEST 54 TEST SUB WITH EXP[ACO]=EXP[FSRC]
;*****
TST54:
      INC      $TESTN      ;INCREMENT TEST NUMBER
      MOV      #3200,R2    ;LOAD FPS DATA
      LDFPS   R2           ;LOAD FPS
      MOV      @TAB21,R4   ;POINT TO FSRC DATA
      MOV      @RECDST,R1  ;POINT TO ACO RECEIVED DATA TABLE
      LDD     (R4),ACO     ;LOAD ACO
      SUBD    (R4),ACO     ; *TEST INSTRUCTION
      STFPS   R3           ;SAVE STATUS
      STD     ACO,(R1)     ;SAVE ACO INTO RECDST
      CMP     #3204,R3     ;VERIFY STATUS
      BEQ     1$          ;BRANCH IF GOOD
      ERROR   277         ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD   FPPERR      ;UNIQUE ERROR NUMBER
      .WORD   FPPERR      ;ADDRESS OF ERROR MESSAGE
1$:   MOV      @TAB6,R4    ;BAD FPS STATUS
      JSR     R7,DATVER    ;POINT TO EXPECTED DATA
      TST     COUNT       ;VERIFY ACO
      BEQ     2$          ;BRANCH IF GOOD
      ERROR   300         ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD   FPPERR      ;UNIQUE ERROR NUMBER
      .WORD   FPPERR      ;ADDRESS OF ERROR MESSAGE
2$:   MOV      @TAB14,R4   ;BAD ACO
      LDD     (R4),ACO     ;POINT TO FSRC AND ACO DATA
      SUBD    (R4),ACO     ;LOAD ACO DATA
      STFPS   R3           ; *TEST INSTRUCTION
      STD     ACO,(R1)     ;SAVE FPS
      CMP     #3204,R3     ;SAVE ACO INTO RECDST
      BEQ     3$          ;VERIFY FPS
      ERROR   301         ;BRANCH IF GOOD
      .WORD   FPPERR      ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD   FPPERR      ;UNIQUE ERROR NUMBER
      .WORD   FPPERR      ;ADDRESS OF ERROR MESSAGE
3$:   MOV      @TAB6,R4    ;BAD ACO
      JSR     R7,DATVER    ;POINT TO EXPECTED DATA
      TST     COUNT       ;VERIFY ACO
      BEQ     4$          ;BRANCH IF GOOD
      ERROR   502         ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD   FPPERR      ;UNIQUE ERROR NUMBER
      .WORD   FPPERR      ;ADDRESS OF ERROR MESSAGE
4$:
;
;NORM:
;*****
; *TEST 55 TEST NORMALIZE
;*****
TST55:
      INC      $TESTN      ;INCREMENT TEST NUMBER
      MOV      #3200,R2    ;LOAD FPS
      LDFPS   R2

```



```
3687 016100 012705 001606      MOV      #TAB31,R5      ;POINT TO FSRC DATA
3688 016104 012701 001576      MOV      #TAB30,R1      ;POINT TO ACO DATA
3689 016110 172411              LDD      (R1),ACO      ;LOAD ACO
3690 016112 173015              SUBD     (R5),ACO      ;*TEST INSTRUCTION
3691                                ;1 LEFT SHIFT
3692 016114 170203              STFPS   R3              ;SAVE STATUS
3693 016116 012704 001126      MOV      #RECDST,R4      ;POINT TO RECDATA
3694 016122 174014              STD     ACO,(R4)        ;SAVE ACO
3695 016124 012701 001636      MOV      #TAB34,R1      ;POINT TO EXPECTED DATA
3696 016130 004767 164012      JSR     R7,DATVER        ;VERIFY DATA
3697 016134 005767 162700      TST     COUNT
3698 016140 001403              BEQ     1#
3699 016142 104000              ERROR
3700 016144 000303              .WORD   303
3701 016146 002013              .WORD   FPPERR        ;ADDRESS OF ERROR MESSAGE
3702
3703 016150 012701 001616      1#:    MOV      #TAB32,R1      ;ACO DATA
3704 016154 012705 001626      MOV      #TAB33,R5      ;FSRC DATA
3705 016160 172411              LDD      (R1),ACO      ;LOAD ACO
3706 016162 173015              SUBD     (R5),ACO      ;*TST INSTRUCTION
3707                                ;56 LEFT SHIFTS
3708 016164 012701 001126      MOV      #RECDST,R1      ;SAVE DATA
3709 016170 174011              STD     ACO,(R1)
3710 016172 004767 163750      JSR     R7,DATVER
3711 016176 005767 162636      TST     COUNT
3712 016202 001403              BEQ     2#
3713 016204 104000              ERROR
3714 016206 000304              .WORD   304
3715 016210 002013              .WORD   FPPERR        ;ADDRESS OF ERROR MESSAGE
3716
3717 016212
3718
3719 016212
3720
3721
3722
3723 016212
3724 016212 005267 162566      MUVAD:
3725 016216 012702 000200      ;*****
3726 016222 170102              ;*TEST 56      TEST ADDD WITH OVERFLOW AND UNDERFLOW
3727 016224 012704 001646      ;*****
3728 016230 012701 001646      TST56:
3729 016234 172411              INC     #TESTN          ;INCREMENT TEST NUMBER
3730 016236 172014              MOV     #200,R2         ;SETUP FLOATING POINT STATUS
3731 016240 170203              LDFPS  R2              ;LOAD FPS
3732 016242 012701 001126      MOV     #TAB40,R4       ;POINT TO FSRC DATA
3733 016246 174011              MOV     #TAB40,R1       ;POINT TO ACO DATA
3734 016250 022703 0C0206      LDD     (R1),ACO        ;LOAD ACO WITH TEST DATA
3735 016254 001403              ADDD   (R4),ACO        ;*TEST INSTRUCTION
3736 016256 104000              STFPS  R3              ;SAVE FPS
3737 016260 000305              MOV     #RECDST,R1      ;POINT TO RECEIVED DATA TABLE
3738 016262 002013              STD     ACO,(R1)        ;SAVE ACO RESULT
3739
3740 016264 012704 001256      CMP     #206,R3         ;VERIFY STATUS
3741 016270 004767 163652      BEQ     1#              ;BRANCH IF GOOD
3742 016274 005767 162540      ERROR
                                ;ALL ERRORS TO TRAP TO EMT VECTOR
                                ;UNIQUE ERROR NUMBER
                                ;ADDRESS OF ERROR MESSAGE
                                ;BAD FPS
                                ;POINT TO EXPECTED DATA
                                ;VERIFY DATA
```

Jo

```

3743 016300 001403      BEQ      2#          ;BRANCH IF GOOD
3744 016302 104000      ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3745 016304 000306      .WORD     306     ;UNIQUE ERROR NUMBER
3746 016306 002013      .WORD     FPPERR  ;ADDRESS OF ERROR MESSAGE
3747
3748                      ;OVERFLOW TRAPS ENABLED
3749 016310 012702 001200 2#:      MOV      #1200,R2          ;SETUP FLOATING POINT STATUS
3750 016314 170102          LDFPS    R2              ;LOAD FPS
3751 016316 012704 001646      MOV      #TAB40,R4        ;POINT TO FSRC DATA
3752 016322 012701 001646      MOV      #TAB40,R1        ;POINT TO ACO DATA
3753 016326 172411          LDD      (R1),ACO        ;LOAD ACO WITH TEST DATA
3754 016330 012737 016350 000244      MOV      #3#,B#FPVEC    ;CHANGE TRAP VECTOR
3755 016336 172014          ADD      (R4),ACO        ;*TEST INSTRUCTION
3756 016340 170000          23#:     CFCC
3757 016342 104000      ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3758 016344 000307      .WORD     307     ;UNIQUE ERROR NUMBER
3759 016346 002013      .WORD     FPPERR  ;ADDRESS OF ERROR MESSAGE
3760
3761 016350 170203          3#:      STFPS    R3          ;SAVE FPS
3762 016352 012701 001126      MOV      #RECDST,R1      ;POINT TO RECEIVED DATA TABLE
3763 016356 174011          STD      ACO,(R1)        ;SAVE ACO RESULT
3764 016360 022703 101206      CMP      #101206,R3      ;VERIFY STATUS
3765 016364 001403      BEQ      4#          ;BRANCH IF GOOD
3766 016366 104000      ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3767 016370 000310      .WORD     310     ;UNIQUE ERROR NUMBER
3768 016372 002013      .WORD     FPPERR  ;ADDRESS OF ERROR MESSAGE
3769
3770 016374 012600          4#:      MOV      (SP)+,R0        ;CHECK STORED PC
3771 016376 022700 016340      CMP      #23#,R0
3772 016402 001403      BEQ      5#          ;BRANCH IF RETURN ADDRESS IS GOOD
3773 016404 104000      ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3774 016406 000311      .WORD     311     ;UNIQUE ERROR NUMBER
3775 016410 002013      .WORD     FPPERR  ;ADDRESS OF ERROR MESSAGE
3776
3777 016412 012600          5#:      MOV      (SP)+,R0        ;BAD RETURN ADDRESS
3778 016414 012704 001256      MOV      #TAB6,R4        ;CLEAN UP STACK
3779 016420 004767 163522      JSR      R7,DATVER      ;POINT TO EXPECTED DATA
3780 016424 005767 162410      TST      COUNT          ;VERIFY DATA
3781 016430 001403      BEQ      7#          ;BRANCH IF GOOD
3782 016432 104000      ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3783 016434 000312      .WORD     312     ;UNIQUE ERROR NUMBER
3784 016436 002013      .WORD     FPPERR  ;ADDRESS OF ERROR MESSAGE
3785
3786                      ;UNDERFLOW TRAPS DISABLED
3787 016440 012702 000200 7#:      MOV      #200,R2          ;SETUP FLOATING POINT STATUS
3788 016444 170102          LDFPS    R2              ;LOAD FPS
3789 016446 012737 002106 000244      MOV      #WLDTRP,B#FPVEC ;REPLACE WILD TRAP VECTOR
3790 016454 012704 001276      MOV      #TAB7,R4        ;POINT TO FSRC DATA
3791 016460 012701 001656      MOV      #TAB41,R1        ;POINT TO ACO DATA
3792 016464 172411          LDD      (R1),ACO        ;LOAD ACO WITH TEST DATA
3793 016466 172014          ADD      (R4),ACO        ;*TEST INSTRUCTION
3794 016470 170203          STFPS    R3          ;SAVE FPS
3795 016472 012701 001126      MOV      #RECDST,R1      ;POINT TO RECEIVED DATA TABLE
3796 016476 174011          STD      ACO,(R1)        ;SAVE ACO RESULT
3797 016500 022703 000204      CMP      #204,R3        ;VERIFY STATUS
3798 016504 001403      BEQ      8#          ;BRANCH IF GOOD
    
```

| Address | OpCode | Operand 1 | Operand 2 | Operand 3 | Operand 4 | Comments  |
|---------|--------|-----------|-----------|-----------|-----------|---|
| 3799    | 016506 | 104000    |           |           |           |   |
| 3800    | 016510 | 000313    |           |           |           | ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR               |
| 3801    | 016512 | 002013    |           |           |           | .WORD 313 ;UNIQUE ERROR NUMBER                        |
| 3802    |        |           |           |           |           | .WORD FPPERR ;ADDRESS OF ERROR MESSAGE                |
| 3803    | 016514 | 012704    | 001256    |           |           | 8#: MOV #TAB6,R4 ;BAD FPS ;POINT TO EXPECTED DATA     |
| 3804    | 016520 | 004767    | 163422    |           |           | JSR R7,DATVER ;VERIFY DATA                            |
| 3805    | 016524 | 005767    | 162310    |           |           | TST COUNT   |
| 3806    | 016530 | 001403    |           |           |           | BEQ 9# ;BRANCH IF GOOD                                |
| 3807    | 016532 | 104000    |           |           |           | ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR               |
| 3808    | 016534 | 000314    |           |           |           | .WORD 314 ;UNIQUE ERROR NUMBER                        |
| 3809    | 016536 | 002013    |           |           |           | .WORD FPPERR ;ADDRESS OF ERROR MESSAGE                |
| 3810    |        |           |           |           |           | 3811 ;UNDERFLOW TRAPS ENABLED ;BAD ACO                |
| 3812    | 016540 | 012702    | 002200    |           |           | 9#: MOV #2200,R2 ;SETUP FLOATING POINT STATUS         |
| 3813    | 016544 | 170102    |           |           |           | LDFPS R2 ;LOAD FPS                                    |
| 3814    | 016546 | 012737    | 016600    | 000244    |           | MOV #11#,#FPVEC ;REPOSITION TRAP VECTOR               |
| 3815    | 016554 | 012704    | 001276    |           |           | MOV #TAB7,R4 ;POINT TO FSRC DATA                      |
| 3816    | 016560 | 012701    | 001656    |           |           | MOV #TAB41,R1 ;POINT TO ACO DATA                      |
| 3817    | 016564 | 172411    |           |           |           | LDD (R1),ACO ;LOAD ACO WITH TEST DATA                 |
| 3818    | 016566 | 172014    |           |           |           | ADD (R4),ACO ;TEST INSTRUCTION                        |
| 3819    | 016570 | 170000    |           |           |           | 10#: CFCC ;COPY FPP CC                                |
| 3820    | 016572 | 104000    |           |           |           | ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR               |
| 3821    | 016574 | 000315    |           |           |           | .WORD 315 ;UNIQUE ERROR NUMBER                        |
| 3822    | 016576 | 002013    |           |           |           | .WORD FPPERR ;ADDRESS OF ERROR MESSAGE                |
| 3823    |        |           |           |           |           | 3824 ;FAILED TO TRAP ON UNDERFLOW                     |
| 3824    | 016600 | 170203    |           |           |           | 11#: STFPS R3 ;SAVE FPS                               |
| 3825    | 016602 | 012701    | 001126    |           |           | MOV #RECDST,R1 ;POINT TO RECEIVED DATA TABLE          |
| 3826    | 016606 | 174011    |           |           |           | STD ACO,(R1) ;SAVE ACO RESULT                         |
| 3827    | 016610 | 022703    | 102210    |           |           | CMP #102210,R3 ;VERIFY STATUS                         |
| 3828    | 016614 | 001403    |           |           |           | BEQ 12# ;BRANCH IF GOOD                               |
| 3829    | 016616 | 104000    |           |           |           | ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR               |
| 3830    | 016620 | 000316    |           |           |           | .WORD 316 ;UNIQUE ERROR NUMBER                        |
| 3831    | 016622 | 002013    |           |           |           | .WORD FPPERR ;ADDRESS OF ERROR MESSAGE                |
| 3832    |        |           |           |           |           | 3833 ;BAD FPS   |
| 3833    | 016624 | 012605    |           |           |           | 12#: MOV (SP),R5 ;GET ERROR PC                        |
| 3834    | 016626 | 020527    | 016570    |           |           | CMP R5,#10# ;VERIFY ERROR ADDRESS ON STACK            |
| 3835    | 016632 | 001403    |           |           |           | BEQ 13# ;BRANCH IF GOOD                               |
| 3836    | 016634 | 104000    |           |           |           | ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR               |
| 3837    | 016636 | 000317    |           |           |           | .WORD 317 ;UNIQUE ERROR NUMBER                        |
| 3838    | 016640 | 002013    |           |           |           | .WORD FPPERR ;ADDRESS OF ERROR MESSAGE                |
| 3839    |        |           |           |           |           | 3840 ;BAD ERROR RETURN ON STACK                       |
| 3840    | 016642 | 005726    |           |           |           | 13#: TST (SP),R5 ;RESTORE STACK                       |
| 3841    | 016644 | 012704    | 001246    |           |           | MOV #TAB5A,R4 ;POINT TO EXPECTED DATA                 |
| 3842    | 016650 | 004767    | 163272    |           |           | JSR R7,DATVER ;VERIFY DATA                            |
| 3843    | 016654 | 005767    | 162160    |           |           | TST COUNT   |
| 3844    | 016660 | 001403    |           |           |           | BEQ 14# ;BRANCH IF GOOD                               |
| 3845    | 016662 | 104000    |           |           |           | ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR               |
| 3846    | 016664 | 000320    |           |           |           | .WORD 320 ;UNIQUE ERROR NUMBER                        |
| 3847    | 016666 | 002013    |           |           |           | .WORD FPPERR ;ADDRESS OF ERROR MESSAGE                |
| 3848    |        |           |           |           |           | 3849 ;BAD ACO   |
| 3849    |        |           |           |           |           | 14#: ;UNDERFLOW WITH TRAPS DISABLED - NON-ZERO RESULT |
| 3850    | 016670 | 012702    | 000200    |           |           | MOV #200,R2 ;SETUP FLOATING POINT STATUS              |
| 3851    | 016674 | 170102    |           |           |           | LDFPS R2 ;LOAD FPS                                    |
| 3852    | 016676 | 012737    | 002106    | 000244    |           | MOV #WLDTRP,#FPVEC ;RESTORE TRAP VECTOR               |
| 3853    | 016704 | 012704    | 001656    |           |           | MOV #TAB41,R4 ;POINT TO FSRC DATA                     |
| 3854    | 016710 | 012701    | 001666    |           |           | MOV #TAB42,R1 ;POINT TO ACO DATA                      |

```

3855 016714 172411          LDD      (R1),ACO          ;LOAD ACO WITH TEST DATA
3856 016716 172014          ADD      (R4),ACO          ;*TEST INSTRUCTION
3857 016720 170203          STFPS   R3                ;SAVE FPS
3858 016722 012701 001126  MOV      @RECDST,R1        ;POINT TO RECEIVED DATA TABLE
3859 016726 174011          STD      ACO,(R1)         ;SAVE ACO RESULT
3860 016730 022703 000204  CMP      @204,R3          ;VERIFY STATUS
3861 016734 001403          BEQ     15#               ;BRANCH IF GOOD
3862 016736 104000          ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
3863 016740 000321          .WORD  321               ;UNIQUE ERROR NUMBER
3864 016742 002013          .WORD  FPPERR            ;ADDRESS OF ERROR MESSAGE
3865                                     ;BAD FPS
3866 016744 012704 001256 15#:  MOV      @TAB6,R4          ;POINT TO EXPECTED DATA
3867 016750 004767 163172  JSR      R7,DATVER        ;VERIFY DATA
3868 016754 005767 162060  TST     COUNT
3869 016760 001403          BEQ     16#               ;BRANCH IF GOOD
3870 016762 104000          ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
3871 016764 000322          .WORD  322               ;UNIQUE ERROR NUMBER
3872 016766 002013          .WORD  FPPERR            ;ADDRESS OF ERROR MESSAGE
3873                                     ;BAD ACO
3874                                     ;UNERFLOW WITH TRAPS ENABLED - NON-ZERO RESULT
3875 016770 012702 102200 16#:  MOV      @102200,R2        ;SETUP FLOATING POINT STATUS
3876 016774 170102          LDFPS  R2                ;LOAD FPS
3877 016776 012737 017030 000244  MOV      @18#,@FPVEC      ;RESTORE TRAP VECTOR
3878 017004 012704 001656  MOV      @TAB41,R4        ;POINT TO FSRC DATA
3879 017010 012701 001666  MOV      @TAB42,R1        ;POINT TO ACO DATA
3880 017014 172411          LDD      (R1),ACO          ;LOAD ACO WITH TEST DATA
3881 017016 172014          ADD      (R4),ACO          ;*TEST INSTRUCTION
3882 017020 170000          CFCC   17#:             ;
3883 017022 104000          ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
3884 017024 000323          .WORD  323               ;UNIQUE ERROR NUMBER
3885 017026 002013          .WORD  FPPERR            ;ADDRESS OF ERROR MESSAGE
3886                                     ;NO TRAP ON UNDERFLOW
3887 017030 170203          STFPS   R3                ;SAVE FPS
3888 017032 012701 001126  MOV      @RECDST,R1        ;POINT TO RECEIVED DATA TABLE
3889 017036 174011          STD      ACO,(R1)         ;SAVE ACO RESULT
3890 017040 012600          MOV      (SP),R0          ;SAVE STACK CONTENTS
3891 017042 005726          TST     (SP)             ;CLEAN UP STACK
3892 017044 022700 017020  CMP      @17#,R0          ;VERIFY RETURN ADDRESS
3893 017050 001403          BEQ     19#               ;BRANCH IF GOOD
3894 017052 104000          ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
3895 017054 000324          .WORD  324               ;UNIQUE ERROR NUMBER
3896 017056 002013          .WORD  FPPERR            ;ADDRESS OF ERROR MESSAGE
3897                                     ;BAD RETURN ADDRESS
3898 017060 022703 102204 19#:  CMP      @102204,R3        ;VERIFY STATUS
3899 017064 001403          BEQ     20#               ;BRANCH IF GOOD
3900 017066 104000          ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
3901 017070 000325          .WORD  325               ;UNIQUE ERROR NUMBER
3902 017072 002013          .WORD  FPPERR            ;ADDRESS OF ERROR MESSAGE
3903                                     ;BAD FPS
3904 017074 012704 001676 20#:  MOV      @TAB43,R4          ;POINT TO EXPECTED DATA
3905 017100 004767 163042  JSR      R7,DATVER        ;VERIFY DATA
3906 017104 005767 161730  TST     COUNT
3907 017110 001403          BEQ     21#               ;BRANCH IF GOOD
3908 017112 104000          ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
3909 017114 000326          .WORD  326               ;UNIQUE ERROR NUMBER
3910 017116 002013          .WORD  FPPERR            ;ADDRESS OF ERROR MESSAGE

```

```

3911                                     ;BAD ACO
3912 017120                             21:
3913
3914
3915 017120                             MLDC:
3916 ;*****
3917 ;*TEST 57      TEST LDCFD, LDCDF
3918 ;*****
3919 017120                             TST57:
3920 017120 005267 161660                INC      $TESTN          ;INCREMENT TEST NUMBER
3921 ;TRUNCATE
3922 017124 012702 000300                MOV      @300,R2          ;SETUP FLOATING POINT STATUS
3923 017130 170102                       LDFPS   R2              ;LOAD FPS
3924 017132 012704 001706                MOV      @TAB45,R4       ;POINT TO FSRC DATA
3925 017136 012701 001256                MOV      @TAB6,R1        ;POINT TO ACO DATA
3926 017142 172411                       LDD     (R1),ACO         ;LOAD ACO WITH TEST DATA
3927 017144 177424                       LDCDF   (R4),ACO        ;*TEST INSTRUCTION
3928 017146 012701 001126                MOV      @RECDST,R1     ;POINT TO RECEIVED DATA TABLE
3929 017152 174011                       STD     ACO,(R1)        ;SAVE ACO RESULT
3930 017154 022704 001712                CMP      @TAB45+4,R4    ;VERIFY AUTO-INC
3931 017160 001403                       BEQ     1$              ;BRANCH IF GOOD AUTO-INC
3932 017162 104000                       ERROR   327             ;ALL ERRORS TO TRAP TO EMT VECTOR
3933 017164 000327                       .WORD  327             ;UNIQUE ERROR NUMBER
3934 017166 002013                       .WORD  FPPERR          ;ADDRESS OF ERROR MESSAGE
3935                                     ;BAD AUTO-INC
3936 017170 012704 001716                1$:  MOV      @TAB46,R4       ;POINT TO EXPECTED DATA
3937 017174 004767 162746                JSR     R7,DATVER       ;VERIFY DATA
3938 017200 005767 161634                TST     COUNT
3939 017204 001403                       BEQ     2$              ;BRANCH IF GOOD
3940 017206 104000                       ERROR   330             ;ALL ERRORS TO TRAP TO EMT VECTOR
3941 017210 000330                       .WORD  330             ;UNIQUE ERROR NUMBER
3942 017212 002013                       .WORD  FPPERR          ;ADDRESS OF ERROR MESSAGE
3943                                     ;BAD ACO
3944 ;AUTO-INC DOUBLE MODE
3945 017214 005002                             21:  CLR      R2              ;SETUP FLOATING POINT STATUS
3946 017216 170102                       LDFPS   R2              ;LOAD FPS
3947 017220 012704 001706                MOV      @TAB45,R4       ;POINT TO FSRC DATA
3948 017224 012701 001426                MOV      @TAB16,R1      ;POINT TO ACO DATA
3949 017230 172411                       LDD     (R1),ACO         ;LOAD ACO WITH TEST DATA
3950 017232 177424                       LDCDF   (R4),ACO        ;*TEST INSTRUCTION
3951 017234 020427 001716                CMP      R4,@TAB45+10   ;VERIFY AUTO-INC
3952 017240 001403                       BEQ     3$              ;BRANCH IF GOOD
3953 017242 104000                       ERROR   331             ;ALL ERRORS TO TRAP TO EMT VECTOR
3954 017244 000331                       .WORD  331             ;UNIQUE ERROR NUMBER
3955 017246 002013                       .WORD  FPPERR          ;ADDRESS OF ERROR MESSAGE
3956                                     ;BAD AUTO-INC ON DOUBLE
3957 017250 170203                             31:  STFPS   R3              ;SAVE FPS
3958 017252 012701 001126                MOV      @RECDST,R1     ;POINT TO RECEIVED DATA TABLE
3959 017256 174011                       STD     ACO,(R1)        ;SAVE ACO RESULT
3960 017260 022703 000000                CMP      @0,R3          ;VERIFY STATUS
3961 017264 001403                       BEQ     4$              ;BRANCH IF GOOD
3962 017266 104000                       ERROR   332             ;ALL ERRORS TO TRAP TO EMT VECTOR
3963 017270 000332                       .WORD  332             ;UNIQUE ERROR NUMBER
3964 017272 002013                       .WORD  FPPERR          ;ADDRESS OF ERROR MESSAGE
3965                                     ;BAD FPS
3966 017274 012704 001756                4$:  MOV      @TAB49,R4       ;POINT TO EXPECTED DATA

```

```

3967 017300 004767 162642      JSR    R7,DATVER          ;VERIFY DATA
3968 017304 005767 161530      TST    COUNT
3969 017310 001403              BEQ    5#                ;BRANCH IF GOOD
3970 017312 104000              ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3971 017314 000333              .WORD    333           ;UNIQUE ERROR NUMBER
3972 017316 002013              .WORD    FPPERR        ;ADDRESS OF ERROR MESSAGE
3973
3974
3975 017320 012702 000200      ;LDCFD GR7
5# :   MOV    #200,R2          ;SETUP FLOATING POINT STATUS
      LDFPS  R2                ;LOAD FPS
      CLR    R3
      LDCFD #5203,ACO         ;*TEST INSTRUCTION
      INC    R3
      INC    R3
      INC    R3
      CMP    #3,R3            ;IF LDCFD WORKED, R3 SHOULD=3
      BEQ    6#                ;VERIFY CORRECT PROGRAM FLOW
      ERROR          ;BRANCH IF GOOD
      .WORD    334           ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD    FPPERR        ;UNIQUE ERROR NUMBER
      .WORD    FPPERR        ;ADDRESS OF ERROR MESSAGE
3976 017324 170102
3977 017326 005003
3978 017330 177427 043243
3979 017334 005203
3980 017336 005203
3981 017340 005203
3982 017342 022703 000003      CMP    #3,R3
3983 017346 001403              BEQ    6#
3984 017350 104000              ERROR          ;IF LDCFD WORKED, R3 SHOULD=3
3985 017352 000334              .WORD    334           ;VERIFY CORRECT PROGRAM FLOW
3986 017354 002013              .WORD    FPPERR        ;BRANCH IF GOOD
3987
3988
3989 017356 012702 000200      ;NEGATIVE OPERANDS
6# :   MOV    #200,R2          ;SETUP FLOATING POINT STATUS
      LDFPS  R2                ;LOAD FPS
      MOV    #TAB47,R4         ;POINT TO FSRC DATA
      MOV    #TAB45,R1         ;POINT TO ACO DATA
      LDD    (R1),ACO          ;LOAD ACO WITH TEST DATA
      LDCFD (R4),ACO          ;*TEST INSTRUCTION
      STFPS  R3                ;SAVE FPS
      MOV    #RECDST,R1        ;POINT TO RECEIVED DATA TABLE
      STD    ACO,(R1)          ;SAVE ACO RESULT
      CMP    #210,R3           ;VERIFY STATUS
      BEQ    7#                ;BRANCH IF GOOD
      ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD    335           ;UNIQUE ERROR NUMBER
      .WORD    FPPERR        ;ADDRESS OF ERROR MESSAGE
3989 017362 170102
3991 017364 012704 001726
3992 017370 012701 001706
3993 017374 172411
3994 017376 177414
3995 017400 170203
3996 017402 012701 001126
3997 017406 174011
3998 017410 022703 000210
3999 017414 001403
4000 017416 104000
4001 017420 000335
4002 017422 002013
4003
4004 017424 012704 001746
4005 017430 004767 162512      7# :   MOV    #TAB48,R4
      JSR    R7,DATVER          ;POINT TO EXPECTED DATA
      TST    COUNT            ;VERIFY DATA
      BEQ    8#                ;BRANCH IF GOOD
      ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
      .WORD    336           ;UNIQUE ERROR NUMBER
      .WORD    FPPERR        ;ADDRESS OF ERROR MESSAGE
4006 017434 005767 161400
4007 017440 001403
4008 017442 104000
4009 017444 000336
4010 017446 002013
4011
4012
4013 017450 012702 000200      ;LOAD A ZERO
8# :   MOV    #200,R2          ;SETUP FLOATING POINT STATUS
      LDFPS  R2                ;LOAD FPS
      MOV    #TAB6,R4          ;POINT TO FSRC DATA
      MOV    #TAB48,R1         ;POINT TO ACO DATA
      LDD    (R1),ACO          ;LOAD ACO WITH TEST DATA
      LDCFD (R4),ACO          ;*TEST INSTRUCTION
      STFPS  R3                ;SAVE FPS
      MOV    #RECDST,R1        ;POINT TO RECEIVED DATA TABLE
      STD    ACO,(R1)          ;SAVE ACO RESULT
      CMP    #204,R3           ;VERIFY STATUS
4014 017454 170102
4015 017456 012704 001256
4016 017462 012701 001746
4017 017466 172411
4018 017470 177414
4019 017472 170203
4020 017474 012701 001126
4021 017500 174011
4022 017502 022703 000204

```

B7

```

4023 017506 001403      BEQ      9#          ;BRANCH IF GOOD
4024 017510 104000      ERROR                    ;ALL ERRORS TO TRAP TO EMT VECTOR
4025 017512 000337      .WORD   337           ;UNIQUE ERROR NUMBER
4026 017514 002013      .WORD   FPPERR        ;ADDRESS OF ERROR MESSAGE
4027                                     ;BAD FPS
4028 017516 012704 001256 9#:  MOV      @TAB6,R4      ;POINT TO EXPECTED DATA
4029 017522 004767 162420  JSR      R7,DATVER     ;VERIFY DATA
4030 017526 005767 161306  TST      COUNT
4031 017532 001403      BEQ      10#          ;BRANCH IF GOOD
4032 017534 104000      ERROR                    ;ALL ERRORS TO TRAP TO EMT VECTOR
4033 017536 000340      .WORD   340           ;UNIQUE ERROR NUMBER
4034 017540 002013      .WORD   FPPERR        ;ADDRESS OF ERROR MESSAGE
4035                                     ;BAD ACO
4036 017542
4037
4038
4039 017542      MCMPD:
4040      ;*****
4041      ;*TEST 60      TEST CMPD
4042      ;*****
4043      TST60:
4044 017542 005267 161236      INC      @TESTN        ;INCREMENT TEST NUMBER
4045      ; CMPD WITH FSRC=ACO=0
4046 017546 005037 001042      CLR      @FLAG        ;SIGNAL THAT ACO REMAINS CONSTANT
4047 017552 004767 000152      JSR      R7,CMPRTN    ;ROUTINE TO TEST DATA
4048 017556 000000 000000 000000 .WORD   0,0,0,0        ;ACO AT START
4049 017564 000000
4050 017566 000000 000000 000000 .WORD   0,0,0,0        ;FSRC AT START
4051 017574 000000
4052 017576 000200      .WORD   200           ;FPS AT START (D)
4053 017600 000204      .WORD   204           ;FPS AT END
4054      ; CMPD WITH EXP[FSRC]=0, EXP[ACO]=0
4055 017602 012737 000001 001042  MOV      @1,@FLAG      ;SIGNAL THAT ACO WILL = 0
4056 017610 004767 000114      JSR      R7,CMPRTN    ;ROUTINE TO TEST DATA
4057 017614 000000 000000 000000 .WORD   0,0,0,125252   ;ACO AT START
4058 017622 125252
4059 017624 000100 000022 000123 .WORD   100,22,123,123 ;FSRC AT START
4060 017632 000123
4061 017634 000200      .WORD   200           ;FPS AT START (D)
4062 017636 000204      .WORD   204           ;FPS AT END
4063      ; CMPD FSRC>EXP[ACO]=0
4064 017640 005037 001042      CLR      @FLAG        ;ACO REMAINS UNCHANGED
4065 017644 004767 000060      JSR      R7,CMPRTN    ;ROUTINE TO TEST DATA
4066 017650 000400 012346 012346 .WORD   400,12346,12346,23 ;ACO AT START
4067 017656 000023
4068 017660 000200 000000 000000 .WORD   200,0,0,0      ;FSRC AT START
4069 017666 000000
4070 017670 000200      .WORD   200           ;FPS AT START (D)
4071 017672 000210      .WORD   210           ;FPS AT END
4072      ; CMPD FSRC=ACO>0
4073 017674 004767 000030      JSR      R7,CMPRTN    ;ROUTINE TO TEST DATA
4074 017700 077777 177777 177777 .WORD   77777,-1,-1,-1 ;ACO AT START
4075 017706 177777
4076 017710 077777 177777 177777 .WORD   77777,-1,-1,-1 ;FSRC AT START
4077 017716 177777
4078 017720 000200      .WORD   200           ;FPS AT START (D)

```

```

4079 017722 000204          .WORD 204          ;FPS AT END
4080 017724 000167 000126  JMP      HOP44          ;HOP OVER SUBROUTINE
4081
4082 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
4083 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
4084 ;COMPARE ROUTINE DATA TABLES
4085 ;
4086 ;          ACO
4087 ;          FSRC
4088 ;          FPS BEFORE EXECUTION
4089 ;          FPS AFTER EXECUTION
4090 ;          (FEC)
4091 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
4092 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
4093 ;
4094 ;
4095 017730 012605          CMPRTN: MOV      (SP),R5          ; RETURN ADDRESS TO USE AS POINTER
4096 017732 012702 000200  MOV      @200,R2          ;SET TO DOUBLE MODE FOR LOAD
4097 017736 170102          LDFPS   R2              ;LOAD FPS
4098 017740 010504          MOV      R5,R4          ;POINT TO FSRC DATA
4099 017742 062704 000010  ADD      @10,R4          ;
4100 017746 010501          MOV      R5,R1          ;POINT TO ACO DATA
4101 017750 172411          LDD      (R1),ACO       ;LOAD ACO WITH TEST DATA
4102 017752 016502 000020  MOV      20(R5),R2      ;GET TEST FPS
4103 017756 170102          LDFPS   R2              ;LOAD TEST FPS
4104 017760 173414          1#:  CMPD      (R4),ACO    ;*TEST INSTRUCTION
4105 017762 170203          STFPS   R3              ;SAVE FPS
4106 017764 012702 000200  MOV      @200,R2          ;SET FPP TO DOUBLE
4107 017770 170102          LDFPS   R2              ;
4108 017772 012701 001126  MOV      @RECDST,R1     ;POINT TO RECEIVED DATA TABLE
4109 017776 174011          STD      ACO,(R1)       ;SAVE ACO RESULT
4110 020000 026503 000022  CMP      22(R5),R3      ;VERIFY STATUS
4111 020004 001403          BEQ      2#            ;BRANCH IF GOOD
4112 020006 104000          ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
4113 020010 000341          .WORD   341            ;UNIQUE ERROR NUMBER
4114 020012 002013          .WORD   FPPERR        ;ADDRESS OF ERROR MESSAGE
4115 ;
4116 020014 005737 001042  2#:  TST      @FLAG          ;SEE IF ACO REMAINS UNCHANGED
4117 020020 001403          BEQ      3#            ;BRANCH IF ACO STAYS THE SAME
4118 020022 012704 001256  MOV      @TAB6,R4       ;ACO=0
4119 020026 000401          BR      4#            ;GO VERIFY DATA
4120 020030 010504          3#:  MOV      R5,R4          ;POINT TO EXPECTED DATA
4121 020032 004767 162110  4#:  JSR      R7,DATVER     ;VERIFY DATA
4122 020036 005767 160776  TST      COUNT
4123 020042 001403          BEQ      5#            ;BRANCH IF GOOD
4124 020044 104000          ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
4125 020046 000342          .WORD   342            ;UNIQUE ERROR NUMBER
4126 020050 002013          .WORD   FPPERR        ;ADDRESS OF ERROR MESSAGE
4127 ;
4128 020052 000165 000024  5#:  JMP      24(R5)        ;BAD FPS
4129 020056          HOP44: ;RETURN
4130
4131
4132
4133 020056          MDIVF:
4134 ;*****
    
```



07

```

4135      ;*TEST 61      TEST DIVF
4136      ;*****
4137      020056      005267      160722      ;TST61:
4138      020056      005267      160722      INC      #TESTN      ;INCREMENT TEST NUMBER
4139      ;1/EXP[AC]=FSRC=0
4140      020062      012737      000002      001042      MOV      #2,#FLAG      ;NO INTERRUPT, BUT FEC
4141      020070      004767      000706      JSR      R7,DVFSUB      ;DO TEST
4142      020074      000100      000027      .WORD   100,27      ;ACO
4143      020100      000000      000000      .WORD   0,0      ;FSRC
4144      020104      000100      000027      .WORD   100,27      ;RESULT
4145      020110      040000      .WORD   40000      ; TEST FPS
4146      020112      140000      .WORD   140000      ;RESULT FPS
4147      020114      000004      .WORD   4      ;FEC
4148      ;2/AC=EXP[FSRC]=0
4149      ;TRAPS ENABLED
4150      020116      012737      000001      001042      MOV      #1,#FLAG      ;INTERRUPT
4151      020124      004767      000652      JSR      R7,DVFSUB      ;DO TEST
4152      020130      000000      000000      .WORD   0,0      ;ACO
4153      020134      000100      000000      .WORD   100,0      ;FSRC
4154      020140      000000      000000      .WORD   0,0      ;RESULT
4155      020144      000000      .WORD   0      ; TEST FPS
4156      020146      100000      .WORD   100000      ;RESULT FPS
4157      020150      000004      .WORD   4      ;FEC
4158      ;3/FSRC>ACO=0
4159      020152      005037      001042      CLR      #FLAG      ;NO INTERRUPT
4160      020156      004767      000620      JSR      R7,DVFSUB      ;DO TEST
4161      020162      000177      000234      .WORD   177,234      ;ACO
4162      020164      004100      000000      .WORD   4100,0      ;FSRC
4163      020172      000000      000000      .WORD   0,0      ;RESULT
4164      020176      007400      .WORD   7400      ; TEST FPS
4165      020200      007404      .WORD   7404      ;RESULT FPS
4166      ;4/ACO>EXP[FSRC]=0
4167      020202      012737      000001      001042      MOV      #1,#FLAG      ;INTERRUPT
4168      020210      004767      000566      JSR      R7,DVFSUB      ;DO TEST
4169      020214      040200      104210      .WORD   40200,104210      ;ACO
4170      020220      000125      025252      .WORD   125,25252      ;FSRC
4171      020224      040200      104210      .WORD   40200,104210      ;RESULT
4172      020230      007557      .WORD   7557      ; TEST FPS
4173      020232      107557      .WORD   107557      ;RESULT FPS
4174      020234      000004      .WORD   4      ;FEC
4175      ;5/EXP[AC]=EXP[FSRC]
4176      020236      005037      001042      CLR      #FLAG      ;NO INTERRUPT
4177      020242      004767      000534      JSR      R7,DVFSUB      ;DO TEST
4178      020246      077760      177777      .WORD   77760,-1      ;ACO
4179      020252      077760      000000      .WORD   77760,0      ;FSRC
4180      020256      040200      104210      .WORD   40200,104210      ;RESULT
4181      020262      007414      .WORD   7414      ; TEST FPS
4182      020264      007400      .WORD   7400      ;RESULT FPS
4183      ;6/AC=FSRC
4184      020266      005037      001042      CLR      #FLAG      ;NO INTERRUPT
4185      020272      004767      000504      JSR      R7,DVFSUB      ;DO TEST
4186      020276      052525      052525      .WORD   52525,52525      ;ACO
4187      020302      052525      052525      .WORD   52525,52525      ;FSRC
4188      020306      040200      000000      .WORD   40200,0      ;RESULT
4189      020312      007400      .WORD   7400      ; TEST FPS
4190      020314      007400      .WORD   7400      ;RESULT FPS
    
```

|      |        |        |        |                     |               |               |
|------|--------|--------|--------|---------------------|---------------|---------------|
| 4191 |        |        |        | ;7/FSRC>0<ACO, ROUN |               |               |
| 4192 | 020316 | 005037 | 001042 | CLR                 | 0#FLAG        | ;NO INTERRUPT |
| 4193 | 020322 | 004767 | 000454 | JSR                 | R7,DVFSUB     | ;DO TEST      |
| 4194 | 020326 | 077777 | 125252 | .WORD               | 77777,125252  | ;ACO          |
| 4195 | 020332 | 040300 | 000000 | .WORD               | 40300,0       | ;FSRC         |
| 4196 | 020336 | 077652 | 070707 | .WORD               | 77652,070707  | ;RESULT       |
| 4197 | 020342 | 007400 |        | .WORD               | 7400          | ; TEST FPS    |
| 4198 | 020344 | 007400 |        | .WORD               | 7400          | ;RESULT FPS   |
| 4199 |        |        |        |                     |               |               |
| 4200 | 020346 | 005037 | 001042 | ;8/AC>0<FSRC        |               |               |
| 4201 | 020352 | 004767 | 000424 | CLR                 | 0#FLAG        | ;NO INTERRUPT |
| 4202 | 020356 | 055377 | 177777 | JSR                 | R7,DVFSUB     | ;DO TEST      |
| 4203 | 020362 | 055300 | 000000 | .WORD               | 55377,-1      | ;ACO          |
| 4204 | 020366 | 040252 | 125252 | .WORD               | 55300,0       | ;FSRC         |
| 4205 | 020372 | 000000 |        | .WORD               | 40252,125252  | ;RESULT       |
| 4206 | 020374 | 000000 |        | .WORD               | 0             | ; TEST FPS    |
| 4207 |        |        |        | .WORD               | 0             | ;RESULT FPS   |
| 4208 | 020376 | 005037 | 001042 | ;9/FSRC>AC>0        |               |               |
| 4209 | 020402 | 004767 | 000374 | CLR                 | 0#FLAG        | ;NO INTERRUPT |
| 4210 | 020406 | 064600 | 000001 | JSR                 | R7,DVFSUB     | ;DO TEST      |
| 4211 | 020412 | 066600 | 000000 | .WORD               | 64600,1       | ;ACO          |
| 4212 | 020416 | 036200 | 000001 | .WORD               | 66600,0       | ;FSRC         |
| 4213 | 020422 | 000000 |        | .WORD               | 36200,1       | ;RESULT       |
| 4214 | 020424 | 000000 |        | .WORD               | 0             | ; TEST FPS    |
| 4215 |        |        |        | .WORD               | 0             | ;RESULT FPS   |
| 4216 | 020426 | 005037 | 001042 | ;10/AC>FSRC>0       |               |               |
| 4217 | 020432 | 004767 | 000344 | CLR                 | 0#FLAG        | ;NO INTERRUPT |
| 4218 | 020436 | 012345 | 156024 | JSR                 | R7,DVFSUB     | ;DO TEST      |
| 4219 | 020442 | 005600 | 000000 | .WORD               | 12345,156024  | ;ACO          |
| 4220 | 020446 | 044745 | 156024 | .WORD               | 05600,0       | ;FSRC         |
| 4221 | 020452 | 000017 |        | .WORD               | 44745,156024  | ;RESULT       |
| 4222 | 020454 | 000000 |        | .WORD               | 17            | ; TEST FPS    |
| 4223 |        |        |        | .WORD               | 0             | ;RESULT FPS   |
| 4224 | 020456 | 005037 | 001042 | ;11/FSRC<0          |               |               |
| 4225 | 020462 | 004767 | 000314 | CLR                 | 0#FLAG        | ;NO INTERRUPT |
| 4226 | 020466 | 040422 | 101010 | JSR                 | R7,DVFSUB     | ;DO TEST      |
| 4227 | 020472 | 140511 | 101010 | .WORD               | 40422,101010  | ;ACO          |
| 4228 | 020476 | 140072 | 020167 | .WORD               | 140511,101010 | ;FSRC         |
| 4229 | 020502 | 000057 |        | .WORD               | 140072,20167  | ;RESULT       |
| 4230 | 020504 | 000050 |        | .WORD               | 57            | ; TEST FPS    |
| 4231 |        |        |        | .WORD               | 50            | ;RESULT FPS   |
| 4232 | 020506 | 005037 | 001042 | ;12/AC<0            |               |               |
| 4233 | 020512 | 004767 | 000264 | CLR                 | 0#FLAG        | ;NO INTERRUPT |
| 4234 | 020516 | 160077 | 000101 | JSR                 | R7,DVFSUB     | ;DO TEST      |
| 4235 | 020522 | 040417 | 177777 | .WORD               | 160077,101    | ;ACO          |
| 4236 | 020526 | 157651 | 143527 | .WORD               | 40417,-1      | ;FSRC         |
| 4237 | 020532 | 000007 |        | .WORD               | 157651,143527 | ;RESULT       |
| 4238 | 020534 | 000010 |        | .WORD               | 7             | ; TEST FPS    |
| 4239 |        |        |        | .WORD               | 10            | ;RESULT FPS   |
| 4240 | 020536 | 005037 | 001042 | ;13/TRUNCATE TEST   |               |               |
| 4241 | 020542 | 004767 | 000234 | CLR                 | 0#FLAG        | ;NO INTERRUPT |
| 4242 | 020546 | 060100 | 000177 | JSR                 | R7,DVFSUB     | ;DO TEST      |
| 4243 | 020552 | 040300 | 000000 | .WORD               | 60100,177     | ;ACO          |
| 4244 | 020556 | 060000 | 000124 | .WORD               | 40300,0       | ;FSRC         |
| 4245 | 020562 | 000040 |        | .WORD               | 60000,124     | ;RESULT       |
| 4246 | 020564 | 000040 |        | .WORD               | 40            | ; TEST FPS    |
|      |        |        |        | .WORD               | 40            | ;RESULT FPS   |

```
4247 ;14/ROUND TEST
4248
4249 020566 005037 001042 CLR @FLAG ;NO INTERRUPT
4250 020572 004767 000204 JSR R7,DVFSUB ;DO TEST
4251 020576 060100 000177 .WORD 60100,177 ;ACO
4252 020602 040300 000000 .WORD 40300,0 ;FSRC
4253 020606 060000 000125 .WORD 60000,125 ;RESULT
4254 020612 000000 .WORD 0 ;TEST FPS
4255 020614 000000 .WORD 0 ;RESULT FPS
4256 ;15/OVERFLOW, INTERRUPTS ENABLED
4257 020616 012737 000001 001042 MOV #1,@FLAG ;INTERRUPT
4258 020624 004767 000152 JSR R7,DVFSUB ;DO TEST
4259 020630 177700 000000 .WORD 177700,0 ;ACO
4260 020634 000200 000000 .WORD 200,0 ;FSRC
4261 020640 137700 000000 .WORD 137700,0 ;RESULT
4262 020644 001100 .WORD 1100 ;TEST FPS
4263 020646 101112 .WORD 101112 ;RESULT FPS
4264 020650 000010 .WORD 10 ;FEC
4265 ;16/OVERFLOW, TRAPS DISABLED
4266 020652 012737 000002 001042 MOV #2,@FLAG ;NO INTERRUPT
4267 020660 004767 000116 JSR R7,DVFSUB ;DO TEST
4268 020664 000200 000000 .WORD 200,0 ;ACO
4269 020670 177700 000000 .WORD 177700,0 ;FSRC
4270 020674 000000 000000 .WORD 0,0 ;RESULT
4271 020700 041100 .WORD 41100 ;TEST FPS
4272 020702 041104 .WORD 41104 ;RESULT FPS
4273 020704 000010 .WORD 10 ;FEC OVERFLOW
4274 ;17/UNDERFLOW, TRAPS ENABLED, UV RESULT
4275 020706 012737 000001 001042 MOV #1,@FLAG ;INTERRUPT
4276 020714 004767 000062 JSR R7,DVFSUB ;DO TEST
4277 020720 100200 000000 .WORD 100200,0 ;ACO
4278 020724 040377 177777 .WORD 40377,-1 ;FSRC
4279 020730 100000 000001 .WORD 100000,1 ;RESULT
4280 020734 002000 .WORD 2000 ;TEST FPS
4281 020736 102014 .WORD 102014 ;RESULT FPS
4282 020740 000012 .WORD 12 ;FEC
4283 ;18/UNDERFLOW, TRAPS ENABLED, ROUND
4284 020742 012737 000001 001042 MOV #1,@FLAG ;INTERRUPT
4285 020750 004767 000026 JSR R7,DVFSUB ;DO TEST
4286 020754 030325 025252 .WORD 30325,25252 ;ACO
4287 020760 076777 023456 .WORD 76777,23456 ;FSRC
4288 020764 071525 157716 .WORD 71525,157716 ;RESULT
4289 020770 002537 .WORD 2537 ;TEST FPS
4290 020772 102500 .WORD 102500 ;RESULT FPS
4291 020774 000012 .WORD 12 ;FEC
4292 ;
4293 ;
4294 020776 000167 000242 JMP MOP10 ;GO TO NEXT TEST
4295 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
4296 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
4297 ;DIVF SUBROUTINE:
4298 ;
4299 ; ACO
4300 ; FSRC
4301 ; FPS BEFORE EXECUTION
4302 ; FPS AFTER EXECUTION
 ; (FEC)
```

```

4303
4304
4305
4306
4307 021002 012605
4308 021004 012737 021064 000244
4309 021012 012702 000200
4310 021016 170102
4311 021020 010504
4312 021022 062704 000004
4313 021026 172415
4314 021030 016502 000014
4315 021034 170102
4316
4317 021036 174414
4318 021040 170001
4319
4320
4321 021042 032737 000001 001042
4322 021050 001426
4323 021052 104000
4324 021054 000343
4325 021056 002013
4326
4327 021060 000167 000042
4328
4329
4330 021064 032737 000001 001042
4331 021072 001005
4332 021074 104000
4333 021076 000344
4334 021100 002013
4335
4336 021102 000167 000020
4337 021106 012604
4338 021110 005726
4339 021112 022704 021040
4340 021116 001403
4341 021120 104000
4342 021122 000345
4343 021124 002013
4344
4345
4346
4347 021126 170203
4348 021130 012702 000200
4349 021134 170102
4350 021136 012701 001126
4351 021142 174011
4352 021144 026503 000016
4353 021150 001403
4354 021152 104000
4355 021154 000346
4356 021156 002013
4357
4358 021160 010504
    
```

```

;
;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
;
DVF SUB: MOV      (SP),R5          ; RETURN ADDRESS TO USE AS POINTER
MOV      #501,0#FPVEC          ; REDIRECT TRAP VECTOR
MOV      #200,R2               ; SET TO DOUBLE MODE FOR LOAD
LDFPS   R2                     ; LOAD FPS
MOV      R5,R4                 ; POINT TO FSRC DATA
ADD      #1,R4
LDD      (R5),ACO              ; LOAD ACO WITH TEST DATA
MOV      14(R5),R2             ; GET TEST FPS
LDFPS   R2                     ; LOAD TEST FPS
;
; DIVF      (R4),ACO           ; *TEST INSTRUCTION
1$: SETF                          ; WAIT FOR POSSIBLE FPA TRAP.
;
; INSTRUCTION DIDNT TRAP
;
; BIT      #1,0#FLAG          ; VERIFY A NO TRAP CONDITION
; BEQ      2$                 ; BRANCH IF GOOD
; ERROR    104000             ; ALL ERRORS TO TRAP TO EMT VECTOR
; .WORD    343                ; UNIQUE ERROR NUMBER
; .WORD    FPPERR             ; ADDRESS OF ERROR MESSAGE
; INSTRUCTION SHOULD HAVE TRAPPED
; JMP      2$                 ; REJOIN CODE
;
; INSTRUCTION TRAPPED
50$: BIT      #1,0#FLAG          ; SEE IF EXPECTING A TRAP
; BNE      51$                ; BRANCH IF EXPECTING A TRAP
; ERROR    104000             ; ALL ERRORS TO TRAP TO EMT VECTOR
; .WORD    344                ; UNIQUE ERROR NUMBER
; .WORD    FPPERR             ; ADDRESS OF ERROR MESSAGE
; INSTRUCTION WASNT SUPPOSE TO TRAP
; JMP      2$                 ; REJOIN CODE
51$: MOV      (SP),R4           ; SEE IF PC = INSTRUCTION
; TST      (SP),              ; CLEAN UP STACK
; CMP      #1,R4              ;
; BEQ      2$                 ; BRANCH IF GOOD COMPARE
; ERROR    104000             ; ALL ERRORS TO TRAP TO EMT VECTOR
; .WORD    345                ; UNIQUE ERROR NUMBER
; .WORD    FPPERR             ; ADDRESS OF ERROR MESSAGE
; PC WAS INCORRECT
;
; COMMON CODE FOR TRAP AND NO TRAP
2$: STFPS   R3                  ; SAVE FPS
MOV      #200,R2               ; SET FPP TO DOUBLE
LDFPS   R2                     ;
MOV      #RECDST,R1            ; POINT TO RECEIVED DATA TABLE
STD      ACO,(R1)              ; SAVE ACO RESULT
CMP      16(R5),R3             ; VERIFY STATUS
; BEQ      3$                 ; BRANCH IF GOOD
; ERROR    104000             ; ALL ERRORS TO TRAP TO EMT VECTOR
; .WORD    346                ; UNIQUE ERROR NUMBER
; .WORD    FPPERR             ; ADDRESS OF ERROR MESSAGE
; BAD FPS
3$: MOV      R5,R4              ; POINT TO EXPECTED DATA
    
```

```

4359 021162 062704 000010          ADD    #10,R4
4360 021166 004767 160736          JSR    R7,DATVFR          ;VERIFY DATA
4361 021172 005767 157642          TST    COUNT
4362 021176 001403          BEQ    5#
4363 021200 104000          ERROR          ;BRANCH IF GOOD
4364 021202 000347          .WORD 347          ;ALL ERRORS TO TRAP TO EMT VECTOR
4365 021204 002013          .WORD FPPERR          ;UNIQUE ERROR NUMBER
4366                                ;ADDRESS OF ERROR MESSAGE
4367 021206 005737 001042          5#:    TST    @#FLAG          ;BAD ACO
4368 021212 001002          BNE    6#          ;SEE IF NEED TO CHECK FEC
4369 021214 000165 000020          JMP    20(R5)          ;BRANCH IF NEED TO CHECK
4370 021220 170301          6#:    STST   R1          ;RETURN FROM TEST
4371 021222 016504 000020          MOV    20(R5),R4          ;SAVE FEC
4372 021226 020401          CMP    R4,R1          ;GET FEC
4373 021230 001403          BEQ    7#          ;VERIFY FEC
4374 021232 104000          ERROR          ;BRANCH IF GOOD
4375 021234 000350          .WORD 350          ;ALL ERRORS TO TRAP TO EMT VECTOR
4376 021236 002013          .WORD FPPERR          ;UNIQUE ERROR NUMBER
4377                                ;ADDRESS OF ERROR MESSAGE
4378 021240 000165 000022          7#:    JMP    22(R5)          ;BAD FEC
4379                                ;RETURN FROM TEST
4380 021244          MOP10:
4381 021244          MDIVD:
4382          ;*****
4383          ;*TEST 62      TEST DIVD -
4384          ;*****
4385 021244          TST62:
4386 021244 005267 157534          INC    #TESTN          ;INCREMENT TEST NUMBER
4387          ;1/AC=FSRC=0 TRAPS DISABLED
4388 021250 012737 000002 001042          MOV    #2,@#FLAG          ;NO INTERRUPT
4389 021256 004767 000516          JSR    R7,DVDSUB          ;DO TEST
4390 021262 000000 000000 000000          .WORD 0,0,0,1          ;ACO
4391 021270 000001          ;FSRC
4392 021272 000100 000000 000000          .WORD 100,0,0,0
4393 021300 000000          ;RESULT
4394 021302 000000 000000 000000          .WORD 0,0,0,1
4395 021310 000001          ; TEST FPS
4396 021312 040000          .WORD 40000          ;RESULT FPS
4397 021314 140000          .WORD 140000          ;FEC
4398 021316 000004          ;2/FSRC=0, TRAPS ENABLED
4399          ;INTERRUPT
4400 021320 012737 000001 001042          MOV    #1,@#FLAG          ;DO TEST
4401 021326 004767 000446          JSR    R7,DVDSUB
4402 021332 000402 000000 000000          .WORD 402,0,0,0          ;ACO
4403 021340 000000          ;FSRC
4404 021342 000000 000000 000000          .WORD 0,0,0,0
4405 021350 000000          ;RESULT
4406 021352 000402 000000 000000          .WORD 402,0,0,0
4407 021360 000000          ; TEST FPS
4408 021362 000200          .WORD 200          ;RESULT FPS
4409 021364 1C0200          .WORD 100200          ;FEC
4410 021366 000004          .WORD 4
4411          ;3/ROUND
4412 021370 005037 001042          CLR    @#FLAG          ;NO INTERRUPT
4413 021374 004767 000400          JSR    R7,DVDSUB          ;DO TEST
4414 021400 034300 000000 000000          .WORD 34300,0,0,1          ;ACO
    
```

|      |        |        |        |        |  |                                       |                       |  |               |  |
|------|--------|--------|--------|--------|--|---------------------------------------|-----------------------|--|---------------|--|
| 4415 | 021406 | 000001 |        |        |  |                                       |                       |  |               |  |
| 4416 | 021410 | 140300 | 000000 | 000000 |  | .WORD                                 | 140300,0,0,0          |  | ;FSRC         |  |
| 4417 | 021416 | 000000 |        |        |  |                                       |                       |  |               |  |
| 4418 | 021420 | 134200 | 000000 | 000000 |  | .WORD                                 | 134200,0,0,1          |  | ;RESULT       |  |
| 4419 | 021426 | 000001 |        |        |  |                                       |                       |  |               |  |
| 4420 | 021430 | 000200 |        |        |  | .WORD                                 | 200                   |  | ;TEST FPS     |  |
| 4421 | 021432 | 000210 |        |        |  | .WORD                                 | 210                   |  | ;RESULT FPS   |  |
| 4422 |        |        |        |        |  | ;4/TRUNCATE                           |                       |  |               |  |
| 4423 | 021434 | 005037 | 001042 |        |  | CLR                                   | #FLAG                 |  | ;NO INTERRUPT |  |
| 4424 | 021440 | 004767 | 000334 |        |  | JSR                                   | R7,DVDSUB             |  | ;DO TEST      |  |
| 4425 | 021444 | 034300 | 000000 | 000000 |  | .WORD                                 | 34300,0,0,1           |  | ;ACO          |  |
| 4426 | 021452 | 000001 |        |        |  |                                       |                       |  |               |  |
| 4427 | 021454 | 140300 | 000000 | 000000 |  | .WORD                                 | 140300,0,0,0          |  | ;FSRC         |  |
| 4428 | 021462 | 000000 |        |        |  |                                       |                       |  |               |  |
| 4429 | 021464 | 134200 | 000000 | 000000 |  | .WORD                                 | 134200,0,0,0          |  | ;RESULT       |  |
| 4430 | 021472 | 000000 |        |        |  |                                       |                       |  |               |  |
| 4431 | 021474 | 000240 |        |        |  | .WORD                                 | 240                   |  | ;TEST FPS     |  |
| 4432 | 021476 | 000250 |        |        |  | .WORD                                 | 250                   |  | ;RESULT FPS   |  |
| 4433 |        |        |        |        |  | ;5/ROUND NEGATIVE AC, FSRC            |                       |  |               |  |
| 4434 | 021500 | 005037 | 001042 |        |  | CLR                                   | #FLAG                 |  | ;NO INTERRUPT |  |
| 4435 | 021504 | 004767 | 000270 |        |  | JSR                                   | R7,DVDSUB             |  | ;DO TEST      |  |
| 4436 | 021510 | 177642 | 000000 | 000000 |  | .WORD                                 | 177642,0,0,151        |  | ;ACO          |  |
| 4437 | 021516 | 000151 |        |        |  |                                       |                       |  |               |  |
| 4438 | 021520 | 166600 | 000000 | 000000 |  | .WORD                                 | 166600,0,0,123        |  | ;FSRC         |  |
| 4439 | 021526 | 000123 |        |        |  |                                       |                       |  |               |  |
| 4440 | 021530 | 051242 | 000000 | 000000 |  | .WORD                                 | 51242,0,0,0           |  | ;RESULT       |  |
| 4441 | 021536 | 000000 |        |        |  |                                       |                       |  |               |  |
| 4442 | 021540 | 000200 |        |        |  | .WORD                                 | 200                   |  | ;TEST FPS     |  |
| 4443 | 021542 | 000200 |        |        |  | .WORD                                 | 200                   |  | ;RESULT FPS   |  |
| 4444 |        |        |        |        |  | ;6/TRUNCATE NEGATIVE AC, FSRC         |                       |  |               |  |
| 4445 | 021544 | 005037 | 001042 |        |  | CLR                                   | #FLAG                 |  | ;NO INTERRUPT |  |
| 4446 | 021550 | 004767 | 000224 |        |  | JSR                                   | R7,DVDSUB             |  | ;DO TEST      |  |
| 4447 | 021554 | 177642 | 000000 | 000000 |  | .WORD                                 | 177642,0,0,151        |  | ;ACO          |  |
| 4448 | 021562 | 000151 |        |        |  |                                       |                       |  |               |  |
| 4449 | 021564 | 166600 | 000000 | 000000 |  | .WORD                                 | 166600,0,0,123        |  | ;FSRC         |  |
| 4450 | 021572 | 000123 |        |        |  |                                       |                       |  |               |  |
| 4451 | 021574 | 051241 | 177777 | 177777 |  | .WORD                                 | 51241,-1,-1,-1        |  | ;RESULT       |  |
| 4452 | 021602 | 177777 |        |        |  |                                       |                       |  |               |  |
| 4453 | 021604 | 000240 |        |        |  | .WORD                                 | 240                   |  | ;TEST FPS     |  |
| 4454 | 021606 | 000240 |        |        |  | .WORD                                 | 240                   |  | ;RESULT FPS   |  |
| 4455 |        |        |        |        |  | ;7/AC=FSRC                            |                       |  |               |  |
| 4456 | 021610 | 005037 | 001042 |        |  | CLR                                   | #FLAG                 |  | ;NO INTERRUPT |  |
| 4457 | 021614 | 004767 | 000160 |        |  | JSR                                   | R7,DVDSUB             |  | ;DO TEST      |  |
| 4458 | 021620 | 055521 | 047621 | 100333 |  | .WORD                                 | 55521,47621,100333,-1 |  | ;ACO          |  |
| 4459 | 021626 | 177777 |        |        |  |                                       |                       |  |               |  |
| 4460 | 021630 | 055521 | 047621 | 100333 |  | .WORD                                 | 55521,47621,100333,-1 |  | ;FSRC         |  |
| 4461 | 021636 | 177777 |        |        |  |                                       |                       |  |               |  |
| 4462 | 021640 | 040200 | 000000 | 000000 |  | .WORD                                 | 40200,0,0,0           |  | ;RESULT       |  |
| 4463 | 021646 | 000000 |        |        |  |                                       |                       |  |               |  |
| 4464 | 021650 | 007717 |        |        |  | .WORD                                 | 7717                  |  | ;TEST FPS     |  |
| 4465 | 021652 | 007700 |        |        |  | .WORD                                 | 7700                  |  | ;RESULT FPS   |  |
| 4466 |        |        |        |        |  | ;8/UNDERFLOW TRAPS ENABLED, UV RESULT |                       |  |               |  |
| 4467 | 021654 | 012737 | 000001 | 001042 |  | MOV                                   | #1,#FLAG              |  | ;INTERRUPT    |  |
| 4468 | 021662 | 004767 | 000112 |        |  | JSR                                   | R7,DVDSUB             |  | ;DO TEST      |  |
| 4469 | 021666 | 100200 | 000000 | 000000 |  | .WORD                                 | 100200,0,0,0          |  | ;ACO          |  |
| 4470 | 021674 | 000000 |        |        |  |                                       |                       |  |               |  |

```

4471 021676 077777 000000 000000 .WORD 77777,0,0,0 ;FSRC
4472 021704 000000
4473 021706 140400 100200 100200 .WORD 140400,100200,100200,100201 ;RESULT
4474 021714 100201
4475 021716 002200 .WORD 2200 ; TEST FPS
4476 021720 102210 .WORD 102210 ;RESULT FPS
4477 021722 000012 .WORD 12 ;FEC
4478 ;9/OVERFLOW TRAPS ENABLED
4479 021724 012737 000001 001042 MOV #1,0#FLAG ; INTERRUPT
4480 021732 004767 000042 JSR R7,DVDSUB ;DO TEST
4481 021736 077000 123465 012346 .WORD 77000,123465,12346,525 ;ACO
4482 021744 000525
4483 021746 000303 000001 140000 .WORD 303,1,140000,140001 ;FSRC
4484 021754 140001
4485 021756 036650 163002 103645 .WORD 36650,163002,103645,64003 ;RESULT
4486 021764 064003
4487 021766 001700 .WORD 1700 ; TEST FPS
4488 021770 101702 .WORD 101702 ;RESULT FPS
4489 021772 000010 .WORD 10 ;FEC
4490 ;
4491 ;
4492 021774 000167 000242 JMP HOP11 ;HOP OVER SUBROUTINE
4493 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
4494 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
4495 ;
4496 ;DIVD SUBROUTINE:
4497 ; ACO
4498 ; FSRC
4499 ; FPS BEFORE EXECUTION
4500 ; FPS AFTER EXECUTION
4501 ; (FEC)
4502 ;
4503 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
4504 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
4505 ;
4506 022000 012605 DVDSUB: MOV (SP)+,R5 ; RETURN ADDRESS TO USE AS POINTER
4507 022002 012737 022062 000244 MOV #50,0#FPVEC ;REDIRECT TRAP VECTOR
4508 022010 012702 000200 MOV #200,R2 ;SET TO DOUBLE MODE FOR LOAD
4509 022014 170102 LDFPS R2 ;LOAD FPS
4510 022016 010504 MOV R5,R4 ;POINT TO FSRC DATA
4511 022020 062704 000010 ADD #10,R4
4512 022024 172415 LDD (R5),ACO ;LOAD ACO WITH TEST DATA
4513 022026 016502 000030 MOV 30(R5),R2 ;GET TEST FPS
4514 022032 170102 LDFPS R2 ;LOAD TEST FPS
4515 ;
4516 022034 174414 DIVD (R4),ACO ;TEST INSTRUCTION
4517 022036 170000 1$: CFCC ;WAIT FOR POSSIBLE FPA TRAP.
4518 ;
4519 ;INSTRUCTION DIDNT TRAP
4520 022040 032737 000001 001042 BIT #1,0#FLAG ;VERIFY A NO TRAP CONDITION
4521 022046 001426 BEQ 2$ ;BRANCH IF GOOD
4522 022050 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4523 022052 000351 .WORD 351 ;UNIQUE ERROR NUMBER
4524 022054 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
4525 ;INSTRUCTION SHOULD HAVE TRAPPED
4526 022056 000167 000042 JMP 2$ ;REJOIN CODE

```

```

4527
4528
4529 022062 032737 000001 001042 50:  ; INSTRUCTION TRAPPED
4530 022070 001005          ; BIT #1,0#FLAG ; SEE IF EXPECTING A TRAP
4531 022072 104000          ; BNE 51# ; BRANCH IF EXPECTING A TRAP
4532 022074 000352          ; ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
4533 022076 002013          ; .WORD 352 ; UNIQUE ERROR NUMBER
4534          ; .WORD FPPERR ; ADDRESS OF ERROR MESSAGE
4535 022100 000167 000020          ; INSTRUCTION WASNT SUPPOSE TO TRAP
4536 022104 012604          ; JMP 2# ; REJOIN CODE
4537 022106 005726          ; 51: MOV (SP)+,R4 ; SEE IF PC = INSTRUCTION
4538 022110 022704 022036          ; TST (SP)+ ; CLEAN UP STACK
4539 022114 001403          ; CMP #1#,R4 ;
4540 022116 104000          ; BEQ 2# ; BRANCH IF GOOD COMPARE
4541 022120 000353          ; ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
4542 022122 002013          ; .WORD 353 ; UNIQUE ERROR NUMBER
4543          ; .WORD FPPERR ; ADDRESS OF ERROR MESSAGE
4544          ; PC WAS INCORRECT
4545          ;
4546 022124 170203          ; COMMON CODE FOR TRAP AND NO TRAP
4547 022126 012702 000200          ; 2: STFPS R3 ; SAVE FPS
4548 022132 170102          ; MOV #200,R2 ; SET FPP TO DOUBLE
4549 022134 012701 001126          ; LDFPS R2 ;
4550 022140 174011          ; MOV #RECDST,R1 ; POINT TO RECEIVED DATA TABLE
4551 022142 026503 000032          ; STD ACO,(R1) ; SAVE ACO RESULT
4552 022146 001403          ; CMP 32(R5),R3 ; VERIFY STATUS
4553 022150 104000          ; BEQ 3# ; BRANCH IF GOOD
4554 022152 000354          ; ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
4555 022154 002013          ; .WORD 354 ; UNIQUE ERROR NUMBER
4556          ; .WORD FPPERR ; ADDRESS OF ERROR MESSAGE
4557 022156 010504          ; 3: MOV R5,R4 ; BAD FPS
4558 022160 062704 000020          ; ADD #20,R4 ; POINT TO EXPECTED DATA
4559 022164 004767 157756          ; 4: JSR R7,DATVER ; VERIFY DATA
4560 022170 005767 156644          ; TST COUNT ;
4561 022174 001403          ; BEQ 5# ; BRANCH IF GOOD
4562 022176 104000          ; ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
4563 022200 000355          ; .WORD 355 ; UNIQUE ERROR NUMBER
4564 022202 002013          ; .WORD FPPERR ; ADDRESS OF ERROR MESSAGE
4565          ;
4566 022204 005737 001042          ; 5: TST #0#FLAG ; BAD ACO
4567 022210 001002          ; BNE 6# ; SEE IF NEED TO CHECK FEC
4568 022212 000165 000034          ; JMP 34(R5) ; BRANCH IF NEED TO CHECK
4569 022216 170301          ; 6: STST R1 ; RETURN FROM TEST
4570 022220 016504 000034          ; MOV 34(R5),R4 ; SAVE FEC
4571 022224 020401          ; CMP R4,R1 ; GET FEC
4572 022226 001403          ; BEQ 7# ; VERIFY FEC
4573 022230 104000          ; ERROR ; BRANCH IF GOOD
4574 022232 000356          ; .WORD 356 ; ALL ERRORS TO TRAP TO EMT VECTOR
4575 022234 002013          ; .WORD FPPERR ; UNIQUE ERROR NUMBER
4576          ; ADDRESS OF ERROR MESSAGE
4577 022236 000165 000036          ; 7: JMP 36(R5) ; BAD FEC
4578          ; RETURN FROM TEST
4579 022242          ;
4580 022242          ; MOP11:
4581          ; MMULF:
4582          ; *****
          ; *TEST 63 TEST MULF
    
```



```

4583
4584 022242
4585 022242 005267 156536
4586
4587 022246 005037 001042
4588 022252 004767 000564
4589 022256 000000 000000
4590 022262 000000 000000
4591 022266 000000 000000
4592 022272 007517
4593 022274 007504
4594
4595 022276 005037 001042
4596 022302 004767 000534
4597 022306 000200 000000
4598 022312 000000 000000
4599 022316 000000 000000
4600 022322 000013
4601 022324 000004
4602
4603 022326 005037 001042
4604 022332 004767 000504
4605 022336 000100 000000
4606 022342 000300 000000
4607 022346 000000 000000
4608 022352 007500
4609 022354 007504
4610
4611 022356 005037 001042
4612 022362 004767 000454
4613 022366 040200 000000
4614 022372 040177 177777
4615 022376 040177 177777
4616 022402 000000
4617 022404 000000
4618
4619 022406 005037 001042
4620 022412 004767 000424
4621 022416 040177 177777
4622 022422 040200 000000
4623 022426 040177 177777
4624 022432 000040
4625 022434 000040
4626
4627 022436 005037 001042
4628 022442 004767 000374
4629 022446 040100 000000
4630 022452 040100 000000
4631 022456 040020 000000
4632 022462 000012
4633 022464 000000
4634
4635 022466 005037 001042
4636 022472 004767 000344
4637 022476 017500 000000
4638 022502 023652 125252

```

```

*****
TST63:
      INC      #TESTN          ;INCREMENT TEST NUMBER
;1/ACO=FSRC=0 -INTERRUPTS DISABLED
      CLR      #FLAG          ;NO INTERRUPT
      JSR      R7,MLFSUB      ;DO TEST
      .WORD   0,0             ;ACO
      .WORD   0,0             ;FSRC
      .WORD   0,0             ;RESULT
      .WORD   7517            ;TEST FPS
      .WORD   7504            ;RESULTANT FPS
;2/AC>FSRC=0 -INTERRUPTS ON
      CLR      #FLAG          ;NO INTERRUPT
      JSR      R7,MLFSUB      ;DO TEST
      .WORD   200,0          ;ACO
      .WORD   0,0             ;FSRC
      .WORD   0,0             ;RESULT
      .WORD   13              ;TEST FPS
      .WORD   4               ;RESULTANT FPS
;3/AC=0 FSRC>0 -
      CLR      #FLAG          ;NO INTERRUPT
      JSR      R7,MLFSUB      ;DO TEST
      .WORD   100,0          ;ACO
      .WORD   300,0          ;FSRC
      .WORD   0,0             ;RESULT
      .WORD   7500            ;TEST FPS
      .WORD   7504            ;RESULTANT FPS
;4/AC=1 >FSRC -ROUND
      CLR      #FLAG          ;NO INTERRUPT
      JSR      R7,MLFSUB      ;DO TEST
      .WORD   40200,0        ;ACO
      .WORD   40177,-1       ;FSRC
      .WORD   40177,-1       ;RESULT
      .WORD   0               ;TEST FPS
      .WORD   0               ;RESULTANT FPS
;5/TRUNCATE
      CLR      #FLAG          ;NO INTERRUPT
      JSR      R7,MLFSUB      ;DO TEST
      .WORD   40177,-1       ;ACO
      .WORD   40200,0        ;FSRC
      .WORD   40177,-1       ;RESULT
      .WORD   40             ;TEST FPS
      .WORD   40             ;RESULTANT FPS
;6/NORMALIZE
      CLR      #FLAG          ;NO INTERRUPT
      JSR      R7,MLFSUB      ;DO TEST
      .WORD   40100,0        ;ACO
      .WORD   40100,0        ;FSRC
      .WORD   40020,0        ;RESULT
      .WORD   12             ;TEST FPS
      .WORD   0               ;RESULTANT FPS
;7/ROUND
      CLR      #FLAG          ;NO INTERRUPT
      JSR      R7,MLFSUB      ;DO TEST
      .WORD   17500,0        ;ACO
      .WORD   23652,125252   ;FSRC

```

|      |        |        |        |        |                              |               |  |                |
|------|--------|--------|--------|--------|------------------------------|---------------|--|----------------|
| 4639 | 022506 | 003177 | 177777 |        | .WORD                        | 3177, 1       |  | ;RESULT        |
| 4640 | 022512 | 007417 |        |        | .WORD                        | 7417          |  | ;TEST FPS      |
| 4641 | 022514 | 007400 |        |        | .WORD                        | 7400          |  | ;RESULTANT FPS |
| 4642 |        |        |        |        | ;8/AC>0>FSRC ROUND           |               |  |                |
| 4643 | 022516 | 005037 | 001042 |        | CLR                          | #0FLAG        |  | ;NO INTERRUPT  |
| 4644 | 022522 | 004767 | 000314 |        | JSR                          | R7,MLFSUB     |  | ;DO TEST       |
| 4645 | 022526 | 040342 | 177777 |        | .WORD                        | 40342, -1     |  | ;ACO           |
| 4646 | 022532 | 176543 | 025252 |        | .WORD                        | 176543,025252 |  | ;FSRC          |
| 4647 | 022536 | 176711 | 067324 |        | .WORD                        | 176711,67324  |  | ;RESULT        |
| 4648 | 022542 | 007500 |        |        | .WORD                        | 7500          |  | ;TEST FPS      |
| 4649 | 022544 | 007510 |        |        | .WORD                        | 7510          |  | ;RESULTANT FPS |
| 4650 |        |        |        |        | ;9/IAC<FSRC<0, ROUND         |               |  |                |
| 4651 | 022546 | 005037 | 001042 |        | CLR                          | #0FLAG        |  | ;NO INTERRUPT  |
| 4652 | 022552 | 004767 | 000264 |        | JSR                          | R7,MLFSUB     |  | ;DO TEST       |
| 4653 | 022556 | 144600 | 000000 |        | .WORD                        | 144600,0      |  | ;ACO           |
| 4654 | 022562 | 154000 | 000000 |        | .WORD                        | 154000,0      |  | ;FSRC          |
| 4655 | 022566 | 060400 | 000000 |        | .WORD                        | 60400,0       |  | ;RESULT        |
| 4656 | 022572 | 000017 |        |        | .WORD                        | 17            |  | ;TEST FPS      |
| 4657 | 022574 | 000000 |        |        | .WORD                        | 0             |  | ;RESULT FPS    |
| 4658 |        |        |        |        | ;10/AC<FSRC, ROUND           |               |  |                |
| 4659 | 022576 | 005037 | 001042 |        | CLR                          | #0FLAG        |  | ;NO INTERRUPT  |
| 4660 | 022602 | 004767 | 000234 |        | JSR                          | R7,MLFSUB     |  | ;DO TEST       |
| 4661 | 022606 | 060000 | 000000 |        | .WORD                        | 60000,0       |  | ;ACO           |
| 4662 | 022612 | 140377 | 177776 |        | .WORD                        | 140377,177776 |  | ;FSRC          |
| 4663 | 022616 | 160177 | 177776 |        | .WORD                        | 160177,177776 |  | ;RESULT        |
| 4664 | 022622 | 000017 |        |        | .WORD                        | 17            |  | ;TEST FPS      |
| 4665 | 022624 | 000010 |        |        | .WORD                        | 10            |  | ;RESULT FPS    |
| 4666 |        |        |        |        | ;11/AC>0>FSRC, TRUNCATE      |               |  |                |
| 4667 | 022626 | 005037 | 001042 |        | CLR                          | #0FLAG        |  | ;NO INTERRUPT  |
| 4668 | 022632 | 004767 | 000204 |        | JSR                          | R7,MLFSUB     |  | ;DO TEST       |
| 4669 | 022636 | 060000 | 000000 |        | .WORD                        | 60000,0       |  | ;ACO           |
| 4670 | 022642 | 140377 | 177776 |        | .WORD                        | 140377,177776 |  | ;FSRC          |
| 4671 | 022646 | 160177 | 177776 |        | .WORD                        | 160177,177776 |  | ;RESULT        |
| 4672 | 022652 | 007547 |        |        | .WORD                        | 7547          |  | ;TEST FPS      |
| 4673 | 022654 | 007550 |        |        | .WORD                        | 7550          |  | ;RESULT FPS    |
| 4674 |        |        |        |        | ;12/UNDERFLOW, NO INTERRUPTS |               |  |                |
| 4675 | 022656 | 012737 | 000002 | 001042 | MOV                          | #2,#0FLAG     |  | ;NO INTERRUPT  |
| 4676 | 022664 | 004767 | 000152 |        | JSR                          | R7,MLFSUB     |  | ;DO TEST       |
| 4677 | 022670 | 000200 | 000001 |        | .WORD                        | 200,1         |  | ;ACO           |
| 4678 | 022674 | 000200 | 000001 |        | .WORD                        | 200,1         |  | ;FSRC          |
| 4679 | 022700 | 040200 | 000002 |        | .WORD                        | 40200,2       |  | ;RESULT        |
| 4680 | 022704 | 042117 |        |        | .WORD                        | 42117         |  | ;TEST FPS      |
| 4681 | 022706 | 142100 |        |        | .WORD                        | 142100        |  | ;RESULT FPS    |
| 4682 | 022710 | 000012 |        |        | .WORD                        | 12            |  | ;FEC           |
| 4683 |        |        |        |        | ;13/OVERFLOW, TRAP           |               |  |                |
| 4684 | 022712 | 012737 | 000001 | 001042 | MOV                          | #1,#0FLAG     |  | ;INTERRUPT     |
| 4685 | 022720 | 004767 | 000116 |        | JSR                          | R7,MLFSUB     |  | ;DO TEST       |
| 4686 | 022724 | 177777 | 177777 |        | .WORD                        | 177777, -1    |  | ;ACO           |
| 4687 | 022730 | 040300 | 000000 |        | .WORD                        | 40300,0       |  | ;FSRC          |
| 4688 | 022734 | 100077 | 177777 |        | .WORD                        | 100077, -1    |  | ;RESULT        |
| 4689 | 022740 | 001117 |        |        | .WORD                        | 1117          |  | ;TEST FPS      |
| 4690 | 022742 | 101116 |        |        | .WORD                        | 101116        |  | ;RESULT FPS    |
| 4691 | 022744 | 000010 |        |        | .WORD                        | 10            |  | ;FEC           |
| 4692 |        |        |        |        | ;14/OVERFLOW NO TRAP         |               |  |                |
| 4693 | 022746 | 012737 | 000002 | 001042 | MOV                          | #2,#0FLAG     |  | ;NO INTERRUPT  |
| 4694 | 022754 | 004767 | 000062 |        | JSR                          | R7,MLFSUB     |  | ;DO TEST       |

```

4695 022760 077700 000000 .WORD 77700,0 ;ACO
4696 022764 077700 000000 .WORD 77700,0 ;FSRC
4697 022770 000000 000000 .WORD 0,0 ;RESULT
4698 022774 040117 .WORD 40117 ;TEST FPS
4699 022776 040106 .WORD 40106 ;RESULT FPS
4700 023000 000010 .WORD 10 ;FEC
4701 ;15/UNDEFINED VARIABLE IN FSRC, TRAP ENABLED
4702 023002 012737 000001 001042 MOV #1,B#FLAG ;INTERRUPT
4703 023010 004767 000026 JSR R7,MLFSUB ;DO TEST
4704 023014 123465 000000 .WORD 123465,0 ;ACO
4705 023020 100022 000000 .WORD 100022,0 ;FSRC
4706 023024 123465 000000 .WORD 123465,0 ;RESULT
4707 023030 004000 .WORD 4000 ;TEST FPS
4708 023032 104000 .WORD 104000 ;RESULT FPS
4709 023034 000014 .WORD 14 ;FEC
4710 ;
4711 ;
4712 023036 000167 000242 JMP HOP12
4713 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
4714 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
4715 ;
4716 ; ACO
4717 ; FSRC
4718 ; FPS BEFORE EXECUTION
4719 ; FPS AFTER EXECUTION
4720 ; (FEC)
4721 ;
4722 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
4723 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
4724 ;
4725 023042 012605 MLFSUB: MOV (SP)+,R5 ; RETURN ADDRESS TO USE AS POINTER
4726 023044 012737 023124 000244 MOV #50#,B#FVEC ; REDIRECT TRAP VECTOR
4727 023052 012702 000200 MOV #200,R2 ; SET TO DOUBLE MODE FOR LOAD
4728 023056 170102 LDFPS R2 ; LOAD FPS
4729 023060 172415 LDD (R5),ACO ; LOAD ACO WITH TEST DATA
4730 023062 010504 MOV R5,R4 ; POINT TO FSRC DATA
4731 023064 062704 000004 ADD #4,R4
4732 023070 016502 000014 MOV 14(R5),R2 ; GET TEST FPS
4733 023074 170102 LDFPS R2 ; LOAD TEST FPS
4734 ;
4735 023076 171014 MULF (R4),ACO ; *TEST INSTRUCTION
4736 023100 170001 1#: SETF ; WAIT FOR POSSIBLE FPA TRAP.
4737 ;
4738 ; INSTRUCTION DIDNT TRAP
4739 023102 032737 000001 001042 BIT #1,B#FLAG ; VERIFY A NO TRAP CONDITION
4740 023110 001426 BEQ 2# ; BRANCH IF GOOD
4741 023112 104000 ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
4742 023114 000357 .WORD 357 ; UNIQUE ERROR NUMBER
4743 023116 002013 .WORD FPPERR ; ADDRESS OF ERROR MESSAGE
4744 ; INSTRUCTION SHOULD HAVE TRAPPED
4745 023120 000167 000042 JMP 2# ; REJOIN CODE
4746 ;
4747 ; INSTRUCTION TRAPPED
4748 023124 032737 000001 001042 50#: BIT #1,B#FLAG ; SEE IF EXPECTING A TRAP
4749 023132 001005 BNE 51# ; BRANCH IF EXPECTING A TRAP
4750 023134 104000 ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR

```

```

4751 023136 000360 .WORD 360 ;UNIQUE ERROR NUMBER
4752 023140 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
4753 ;INSTRUCTION WASNT SUPPOSE TO TRAP
4754 023142 000167 000020 JMP 21 ;REJOIN CODE
4755 023146 012604 511: MOV (SP),R4 ;SEE IF PC = INSTRUCTION
4756 023150 005726 TST (SP); ;CLEAN UP STACK
4757 023152 022704 023100 CMP #11,R4 ;
4758 023156 001403 BEQ 21 ;BRANCH IF GOOD COMPARE
4759 023160 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4760 023162 000361 .WORD 361 ;UNIQUE ERROR NUMBER
4761 023164 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
4762 ;PC WAS INCORRECT
4763 ;
4764 ;COMMON CODE FOR TRAP AND NO TRAP
4765 023166 170203 21: STFPS R3 ;SAVE F14
4766 023170 012702 000200 MOV #200,R2 ;SET FPP TO DOUBLE
4767 023174 170102 LDFPS R2 ;
4768 023176 012701 001126 MOV #RECDST,R1 ;POINT TO RECEIVED DATA TABLE
4769 023202 174011 STD ACO,(R1) ;SAVE ACO RESULT
4770 023204 026503 000016 CMP 16(R5),R3 ;VERIFY STATUS
4771 023210 001403 BEQ 31 ;BRANCH IF GOOD
4772 023212 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4773 023214 000362 .WORD 362 ;UNIQUE ERROR NUMBER
4774 023216 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
4775 ;BAD FPS
4776 023220 010504 31: MOV R5,R4 ;POINT TO EXPECTED DATA
4777 023222 062704 000010 ADD #10,R4 ;
4778 023226 004767 156676 41: JSR R7,DATVFR ;VERIFY DATA
4779 023232 005767 155602 TST COUNT ;
4780 023236 001403 BEQ 51 ;BRANCH IF GOOD
4781 023240 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4782 023242 000363 .WORD 363 ;UNIQUE ERROR NUMBER
4783 023244 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
4784 ;BAD ACO
4785 023246 005737 001042 51: TST #FLAG ;SEE IF NEED TO CHECK FEC
4786 023252 001002 BNE 61 ;BRANCH IF NEED TO CHECK
4787 023254 000165 000020 JMP 20(R5) ;RETURN FROM TEST
4788 ;VERIFY ERROR STATUS
4789 023260 170301 61: STST R1 ;SAVE FEC
4790 023262 016504 000020 MOV 20(R5),R4 ;GET FEC
4791 023266 020401 CMP R4,R1 ;VERIFY FEC
4792 023270 001403 BEQ 71 ;BRANCH IF GOOD
4793 023272 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4794 023274 000364 .WORD 364 ;UNIQUE ERROR NUMBER
4795 023276 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
4796 ;BAD FEC
4797 023300 000165 000022 71: JMP 22(R5) ;RETURN FROM TEST
4798 023304 HOP12:
4799 023304 MPULD:
4800 ;*****
4801 ;*TEST 64 TEST MULD
4802 ;*****
4803 023304 TST64:
4804 023304 005267 155474 INC #TESTN ;INCREMENT TEST NUMBER
4805 ;1/AC=0
4806 023310 005037 001042 CLR #FLAG ;NO INTERRUPT
    
```

|      |        |        |        |        |  |       |                 |                        |          |
|------|--------|--------|--------|--------|--|-------|-----------------|------------------------|----------|
| 4807 | 023314 | 004767 | 000554 |        |  | JSR   | R7,MLDSUB       |                        | ;DO TEST |
| 4808 | 023320 | 000100 | 000000 | 000000 |  | .WORD | 100,0,0,0       | ;ACO                   |          |
| 4809 | 023326 | 000000 |        |        |  |       |                 |                        |          |
| 4810 | 023330 | 000411 | 177777 | 000000 |  | .WORD | 411, 1,0,1      | ;FSRC                  |          |
| 4811 | 023336 | 000001 |        |        |  |       |                 |                        |          |
| 4812 | 023340 | 000000 | 000000 | 000000 |  | .WORD | 0,0,0,0         | ;RESULT                |          |
| 4813 | 023346 | 000000 |        |        |  |       |                 |                        |          |
| 4814 | 023350 | 000200 |        |        |  | .WORD | 200             | ; TEST FPS             |          |
| 4815 | 023352 | 000204 |        |        |  | .WORD | 204             | ;RESULTANT FPS         |          |
| 4816 |        |        |        |        |  |       |                 | ;2/FSRC=0              |          |
| 4817 | 023354 | 005037 | 001042 |        |  | CLR   | B#FLAG          | ;NO INTERRUPT          |          |
| 4818 | 023360 | 004767 | 000510 |        |  | JSR   | R7,MLDSUB       | ;DO TEST               |          |
| 4819 | 023364 | 077777 | 000000 | 000000 |  | .WORD | 77777,0,0,0     | ;ACO                   |          |
| 4820 | 023372 | 000000 |        |        |  |       |                 |                        |          |
| 4821 | 023374 | 000000 | 000000 | 000000 |  | .WORD | 0,0,0,0         | ;FSRC                  |          |
| 4822 | 023402 | 000000 |        |        |  |       |                 |                        |          |
| 4823 | 023404 | 000000 | 000000 | 000000 |  | .WORD | 0,0,0,0         | ;RESULT                |          |
| 4824 | 023412 | 000000 |        |        |  |       |                 |                        |          |
| 4825 | 023414 | 007700 |        |        |  | .WORD | 7700            | ; TEST FPS             |          |
| 4826 | 023416 | 007704 |        |        |  | .WORD | 7704            | ;RESULTANT FPS         |          |
| 4827 |        |        |        |        |  |       |                 | ;3/AC=1                |          |
| 4828 | 023420 | 005037 | 001042 |        |  | CLR   | B#FLAG          | ;NO INTERRUPT          |          |
| 4829 | 023424 | 004767 | 000444 |        |  | JSR   | R7,MLDSUB       | ;DO TEST               |          |
| 4830 | 023430 | 040200 | 000000 | 000000 |  | .WORD | 40200,0,0,0     | ;ACO                   |          |
| 4831 | 023436 | 000000 |        |        |  |       |                 |                        |          |
| 4832 | 023440 | 000277 | 177777 | 177777 |  | .WORD | 277,-1,-1, 1    | ;FSRC                  |          |
| 4833 | 023446 | 177777 |        |        |  |       |                 |                        |          |
| 4834 | 023450 | 000277 | 177777 | 177777 |  | .WORD | 277,-1,-1,-1    | ;RESULT                |          |
| 4835 | 023456 | 177777 |        |        |  |       |                 |                        |          |
| 4836 | 023460 | 007717 |        |        |  | .WORD | 7717            | ; TEST FPS             |          |
| 4837 | 023462 | 007700 |        |        |  | .WORD | 7700            | ;RESULTANT FPS         |          |
| 4838 |        |        |        |        |  |       |                 | ;4/AC>FSRC>0, TRUNCATE |          |
| 4839 | 023464 | 005037 | 001042 |        |  | CLR   | B#FLAG          | ;NO INTERRUPT          |          |
| 4840 | 023470 | 004767 | 000400 |        |  | JSR   | R7,MLDSUB       | ;DO TEST               |          |
| 4841 | 023474 | 065500 | 000000 | 000000 |  | .WORD | 65500,0,0,1     | ;ACO                   |          |
| 4842 | 023502 | 000001 |        |        |  |       |                 |                        |          |
| 4843 | 023504 | 037577 | 177777 | 177777 |  | .WORD | 37577,-1,-1, 2  | ;FSRC                  |          |
| 4844 | 023512 | 177776 |        |        |  |       |                 |                        |          |
| 4845 | 023514 | 065077 | 177777 | 177777 |  | .WORD | 65077,-1,-1, 1  | ;RESULT                |          |
| 4846 | 023522 | 177777 |        |        |  |       |                 |                        |          |
| 4847 | 023524 | 007717 |        |        |  | .WORD | 7717            | ; TEST FPS             |          |
| 4848 | 023526 | 007700 |        |        |  | .WORD | 7700            | ;RESULTANT FPS         |          |
| 4849 |        |        |        |        |  |       |                 | ;5/AC<FSRC<0           |          |
| 4850 | 023530 | 005037 | 001042 |        |  | CLR   | B#FLAG          | ;NO INTERRUPT          |          |
| 4851 | 023534 | 004767 | 000334 |        |  | JSR   | R7,MLDSUB       | ;DO TEST               |          |
| 4852 | 023540 | 137577 | 177777 | 177777 |  | .WORD | 137577,-1, 1, 2 | ;ACO                   |          |
| 4853 | 023546 | 177776 |        |        |  |       |                 |                        |          |
| 4854 | 023550 | 165400 | 000000 | 000000 |  | .WORD | 165400,0,0,1    | ;FSRC                  |          |
| 4855 | 023556 | 000001 |        |        |  |       |                 |                        |          |
| 4856 | 023560 | 065000 | 000000 | 000000 |  | .WORD | 65000,0,0,0     | ;RESULT                |          |
| 4857 | 023566 | 000000 |        |        |  |       |                 |                        |          |
| 4858 | 023570 | 007717 |        |        |  | .WORD | 7717            | ; TEST FPS             |          |
| 4859 | 023572 | 007700 |        |        |  | .WORD | 7700            | ;RESULTANT FPS         |          |
| 4860 |        |        |        |        |  |       |                 | ;6/AC>FSRC>0           |          |
| 4861 | 023574 | 005037 | 001042 |        |  | CLR   | B#FLAG          | ;NO INTERRUPT          |          |
| 4862 | 023600 | 004767 | 000270 |        |  | JSR   | R7,MLDSUB       | ;DO TEST               |          |

```

4863 023604 017500 000000 000000 .WORD 17500,0,0,0 ;ACO
4864 023612 000000
4865 023614 123652 125252 125252 .WORD 123652,125252,125252,125252 ;FSRC
4866 023622 125252
4867 023624 103177 177777 177777 .WORD 103177, 1, 1, 1 ;RESULT
4868 023632 177777
4869 023634 000200 .WORD 200 ; TEST FPS
4870 023636 000210 .WORD 210 ;RESULTANT FPS
4871 ;7/UNDERFLOW, TRAPS DISABLED
4872 023640 005037 001042 CLR #0FLAG ;NO INTERRUPT
4873 023644 004767 000224 JSR R7,MLDSUB ;DO TEST
4874 023650 000300 000000 000000 .WORD 300,0,0,252 ;ACO
4875 023656 000252
4876 023660 000377 000001 000002 .WORD 377,1,2,3 ;FSRC
4877 023666 000003
4878 023670 000000 000000 000000 .WORD 0,0,0,0 ;RESULT
4879 023676 000000
4880 023700 005740 .WORD 5740 ; TEST FPS
4881 023702 005744 .WORD 5744 ;RESULT FPS
4882 ;8/UNDERFLOW, TRAP ENABLED
4883 023704 012737 000001 001042 MOV #1,#0FLAG ;INTERRUPT
4884 023712 004767 000156 JSR R7,MLDSUB ;DO TEST
4885 023716 100277 000001 000002 .WORD 100277,1,2,-1 ;ACO
4886 023724 177777
4887 023726 100300 000001 000001 .WORD 100300,1,1,1 ;FSRC
4888 023734 000001
4889 023736 040417 040001 077403 .WORD 40417,40001,77403,0 ;RESULT
4890 023744 000000
4891 023746 002217 .WORD 2217 ; TEST FPS
4892 023750 102200 .WORD 102200 ;RESULT FPS
4893 023752 000012 .WORD 12 ;FEC
4894 ;9/OVERFLOW, TRAPS DISABLED
4895 023754 005037 001042 CLR #0FLAG ;NO INTERRUPT
4896 023760 004767 000110 JSR R7,MLDSUB ;DO TEST
4897 023764 177777 177777 177777 .WORD -1,-1,-1,-1 ;ACO
4898 023772 177777
4899 023774 040200 177777 177777 .WORD 40200,-1,-1,-1 ;FSRC
4900 024002 177777
4901 024004 000000 000000 000000 .WORD 0,0,0,0 ;RESULT
4902 024012 000000
4903 024014 006740 .WORD 6740 ; TEST FPS
4904 024016 006746 .WORD 6746 ;RESULT FPS
4905 ;10/OVERFLOW, TRAPS ENABLED
4906 024020 012737 000001 001042 MOV #1,#0FLAG ;INTERRUPT
4907 024026 004767 000042 JSR R7,MLDSUB ;DO TEST
4908 024032 157700 025252 025252 .WORD 157700,25252,25252,25252 ;ACO
4909 024040 025252
4910 024042 167700 000000 000000 .WORD 167700,0,0,0 ;FSRC
4911 024050 000000
4912 024052 007420 017777 117777 .WORD 7420,017777,117777,117777 ;RESULT
4913 024060 117777
4914 024062 001240 .WORD 1240 ; TEST FPS
4915 024064 101242 .WORD 101242 ;RESULT FPS
4916 024066 000010 .WORD 10 ;FEC
4917
4918
    
```

```

4919 024070 000167 000242          JMP      HOP13
4920
4921          ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
4922          ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
4923
4924          ;          ACO
4925          ;          FSRC
4926          ;          FPS BEFORE EXECUTION
4927          ;          FPS AFTER EXECUTION
4928          ;          (FEC)
4929
4930          ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
4931          ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
4932
4933 024074 012605          MLDSUB: MOV      (SP),R5          ; RETURN ADDRESS TO USE AS POINTER
4934 024076 012737 024156 000244      MOV      #501,0#FPVEC      ; REDIRECT TRAP VECTOR
4935 024104 012702 000200              MOV      #200,R2          ; SET TO DOUBLE MODE FOR LOAD
4936 024110 170102              LDFPS   R2                ; LOAD FPS
4937 024112 172415              LDO     (R5),ACO          ; LOAD ACO WITH TEST DATA
4938 024114 010501              MOV      R5,R1          ; POINT TO FSRC DATA
4939 024116 062701 000010              ADD     #10,R1
4940 024122 016502 000030              MOV      30(R5),R2       ; GET TEST FPS
4941 024126 170102              LDFPS   R2                ; LOAD TEST FPS
4942
4943          ;          MULD      (R1),ACO          ; *TEST INSTRUCTION
4944 024132 170011      1$:      SETD
4945          ;          ;WAIT FOR POSSIBLE FPA TRAP.
4946          ; INSTRUCTION DIDNT TRAP
4947 024134 032737 000001 001042      BIT      #1,0#FLAG          ; VERIFY A NO TRAP CONDITION
4948 024142 001426              BEQ      2$                ; BRANCH IF GOOD
4949 024144 104000              ERROR
4950 024146 000365              .WORD   365                ; ALL ERRORS TO TRAP TO EMT VECTOR
4951 024150 002013              .WORD   FPPERR            ; UNIQUE ERROR NUMBER
4952          ;          ;ADDRESS OF ERROR MESSAGE
4953 024152 000167 000042              JMP      2$                ; INSTRUCTION SHOULD HAVE TRAPPED
4954          ;          ;REJOIN CODE
4955          ; INSTRUCTION TRAPPED
4956 024156 032737 000001 001042      50$:    BIT      #1,0#FLAG          ; SEE IF EXPECTING A TRAP
4957 024164 001005              BNE     51$                ; BRANCH IF EXPECTING A TRAP
4958 024166 104000              ERROR
4959 024170 000366              .WORD   366                ; ALL ERRORS TO TRAP TO EMT VECTOR
4960 024172 002013              .WORD   FPPERR            ; UNIQUE ERROR NUMBER
4961          ;          ;ADDRESS OF ERROR MESSAGE
4962 024174 000167 000020              JMP      2$                ; INSTRUCTION WASNT SUPPOSE TO TRAP
4963 024200 012604              51$:    MOV      (SP),R4          ; REJOIN CODE
4964 024202 005726              TST     (SP),R4          ; SEE IF PC = INSTRUCTION
4965 024204 022704 024132              CMP     #1$,R4          ; CLEAN UP STACK
4966 024210 001403              BEQ     2$                ; BRANCH IF GOOD COMPARE
4967 024212 104000              ERROR
4968 024214 000367              .WORD   367                ; ALL ERRORS TO TRAP TO EMT VECTOR
4969 024216 002013              .WORD   FPPERR            ; UNIQUE ERROR NUMBER
4970          ;          ;ADDRESS OF ERROR MESSAGE
4971          ;          ;PC WAS INCORRECT
4972          ; COMMON CODE FOR TRAP AND NO TRAP
4973 024220 170203              2$:     STFPS   R3                ; SAVE FPS
4974 024222 012702 000200              MOV      #200,R2          ; SET FPP TO DOUBLE
    
```

```

4975 024226 170102          LDFPS R2
4976 024230 012701 001126  MOV 0RECDST,R1 ;POINT TO RECEIVED DATA TABLE
4977 024234 174011          STD ACO,(R1) ;SAVE ACO RESULT
4978 024236 026503 000032  CMP 32(R5),R3 ;VERIFY STATUS
4979 024242 001403          BEQ 30 ;BRANCH IF GOOD
4980 024244 104000          ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4981 024246 000370          .WORD 370 ;UNIQUE ERROR NUMBER
4982 024250 002013          .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
4983
4984 024252 010504          30: MOV R5,R4 ;BAD FPS ;POINT TO EXPECTED DATA
4985 024254 062704 000020  ADD 020,R4
4986 024260 004767 155662  40: JSR R7,DATVER ;VERIFY DATA
4987 024264 005767 154550  TST COUNT
4988 024270 001403          BEQ 50 ;BRANCH IF GOOD
4989 024272 104000          ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
4990 024274 000371          .WORD 371 ;UNIQUE ERROR NUMBER
4991 024276 002013          .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
4992
4993 024300 005737 001042  50: TST 00FLAG ;BAD ACO ;SEE IF NEED TO CHECK FEC
4994 024304 001002          BNE 60 ;BRANCH IF NEED TO CHECK
4995 024306 000165 000034  JMP 34(R5) ;RETURN FROM TEST
4996
4997 024312 170301          ;VERIFY ERROR STATUS
4998 024314 016504 000034  60: STST R1 ;SAVE FEC
4999 024320 020401          MOV 34(R5),R4 ;GET FEC
5000 024322 001403          CMP R4,R1 ;VERIFY FEC
5001 024324 104000          BEQ 70 ;BRANCH IF GOOD
5002 024326 000372          ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
5003 024330 002013          .WORD 372 ;UNIQUE ERROR NUMBER
5004 024332 000165 000036  .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
5005 024336          JMP 36(R5) ;BAD FEC ;RETURN FROM TEST
5006
5007 024336
5008
5009
5010
5011 024336          ;*****
5012 024336 005267 154442  ;*TEST 65 TEST MODF
5013
5014 024342 005037 001042  TST65: ;*****
5015 024346 004767 000554  ;1/AC=0 INC 0TESTN ;INCREMENT TEST NUMBER
5016 024352 000100 000000  CLR FSRC=0
5017 024356 012346 177777  CLR 00FLAG ;NO INTERRUPT
5018 024362 000000 000000  JSR R7,MDFSUB ;DO TEST
5019 024366 000000 000000  .WORD 100,0 ;ACO
5020 024372 000013          .WORD 12346,-1 ;FSRC
5021 024374 000004          .WORD 0,0 ;FRACTIONAL RESULT
5022
5023 024376 005037 001042  ;2/FSRC=0 .WORD 0,0 ;INTEGER RESULT
5024 024402 004767 000520  CLR 00FLAG ;NO INTERRUPT
5025 024406 012356 177777  JSR R7,MDFSUB ;DO TEST
5026 024412 000000 000000  .WORD 12356,-1 ;ACO
5027 024416 000000 000000  .WORD 0,0 ;FSRC
5028 024422 000000 000000  .WORD 0,0 ;FRACTIONAL RESULT
5029 024426 000003          .WORD 0,0 ;INTEGER RESULT
5030 024430 000004          .WORD 3 ;TEST FPS
                    .WORD 4 ;RESULTANT FPS
    
```



68

|      |        |        |        |                          |       |              |                    |
|------|--------|--------|--------|--------------------------|-------|--------------|--------------------|
| 5031 |        |        |        |                          |       |              |                    |
| 5032 | 024432 | 005037 | 001042 | ;3/AC=0                  | CLR   | 0#FLAG       | ;NO INTERRUPT      |
| 5033 | 024436 | 004767 | 000464 |                          | JSR   | R7,MDFSUB    | ;DO TEST           |
| 5034 | 024442 | 000000 | 000000 |                          | .WORD | 0,0          | ;ACO               |
| 5035 | 024446 | 177777 | 177777 |                          | .WORD | 1,-1         | ;FSRC              |
| 5036 | 024452 | 000000 | 000000 |                          | .WORD | 0,0          | ;FRACTIONAL RESULT |
| 5037 | 024456 | 000000 | 000000 |                          | .WORD | 0,0          | ;INTEGER RESULT    |
| 5038 | 024462 | 007500 |        |                          | .WORD | 7500         | ;TEST FPS          |
| 5039 | 024464 | 007504 |        |                          | .WORD | 7504         | ;RESULT FPS        |
| 5040 |        |        |        |                          |       |              |                    |
| 5041 | 024466 | 005037 | 001042 | ;4/AC>FSRC>0             | CLR   | 0#FLAG       | ;NO INTERRUPT      |
| 5042 | 024472 | 004767 | 000430 |                          | JSR   | R7,MDFSUB    | ;DO TEST           |
| 5043 | 024476 | 046252 | 125252 |                          | .WORD | 46252,125252 | ;ACO               |
| 5044 | 024502 | 040300 | 000000 |                          | .WORD | 40300,0      | ;FSRC              |
| 5045 | 024506 | 000000 | 000000 |                          | .WORD | 0,0          | ;FRACTIONAL RESULT |
| 5046 | 024512 | 046377 | 177777 |                          | .WORD | 46377,-1     | ;INTEGER RESULT    |
| 5047 | 024516 | 000013 |        |                          | .WORD | 13           | ;TEST FPS          |
| 5048 | 024520 | 000004 |        |                          | .WORD | 4            | ;RESULTANT FPS     |
| 5049 |        |        |        |                          |       |              |                    |
| 5050 | 024522 | 005037 | 001042 | ;5/AC>FSRC>0             | CLR   | 0#FLAG       | ;NO INTERRUPT      |
| 5051 | 024526 | 004767 | 000374 |                          | JSR   | R7,MDFSUB    | ;DO TEST           |
| 5052 | 024532 | 077652 | 125252 |                          | .WORD | 77652,125252 | ;ACO               |
| 5053 | 024536 | 040300 | 000000 |                          | .WORD | 40300,0      | ;FSRC              |
| 5054 | 024542 | 000000 | 000000 |                          | .WORD | 0,0          | ;FRACTIONAL RESULT |
| 5055 | 024546 | 077777 | 177777 |                          | .WORD | 77777,-1     | ;INTEGER RESULT    |
| 5056 | 024552 | 000000 |        |                          | .WORD | 0            | ;TEST FPS          |
| 5057 | 024554 | 000004 |        |                          | .WORD | 4            | ;RESULTANT FPS     |
| 5058 |        |        |        |                          |       |              |                    |
| 5059 |        |        |        |                          |       |              |                    |
| 5060 | 024556 | 005037 | 001042 | ;6/AC>0<FSRC, INTEGERS   | CLR   | 0#FLAG       | ;NO INTERRUPT      |
| 5061 | 024562 | 004767 | 000340 |                          | JSR   | R7,MDFSUB    | ;DO TEST           |
| 5062 | 024566 | 060600 | 000000 |                          | .WORD | 60600,0      | ;ACO               |
| 5063 | 024572 | 147400 | 025700 |                          | .WORD | 147400,25700 | ;FSRC              |
| 5064 | 024576 | 000000 | 000000 |                          | .WORD | 0,0          | ;FRACTIONAL RESULT |
| 5065 | 024602 | 170000 | 025700 |                          | .WORD | 170000,25700 | ;INTEGER RESULT    |
| 5066 | 024606 | 007400 |        |                          | .WORD | 7400         | ;TEST FPS          |
| 5067 | 024610 | 007404 |        |                          | .WORD | 7404         | ;RESULT FPS        |
| 5068 |        |        |        |                          |       |              |                    |
| 5069 |        |        |        |                          |       |              |                    |
| 5070 | 024612 | 005037 | 001042 | ;7/AC<0<FSRC, FRACTIONAL | CLR   | 0#FLAG       | ;NO INTERRUPT      |
| 5071 | 024616 | 004767 | 000304 |                          | JSR   | R7,MDFSUB    | ;DO TEST           |
| 5072 | 024622 | 100227 | 177777 |                          | .WORD | 100227,-1    | ;ACO               |
| 5073 | 024626 | 044025 | 025252 |                          | .WORD | 44025,25252  | ;FSRC              |
| 5074 | 024632 | 104061 | 021251 |                          | .WORD | 104061,21251 | ;FRACTIONAL RESULT |
| 5075 | 024636 | 000000 | 000000 |                          | .WORD | 0,0          | ;INTEGER RESULT    |
| 5076 | 024642 | 000000 |        |                          | .WORD | 0            | ;TEST FPS          |
| 5077 | 024644 | 000010 |        |                          | .WORD | 10           | ;RESULT FPS        |
| 5078 |        |        |        |                          |       |              |                    |
| 5079 | 024646 | 005037 | 001042 | ;8/AC<0>FSRC, TRUNCATE   | CLR   | 0#FLAG       | ;NO INTERRUPT      |
| 5080 | 024652 | 004767 | 000250 |                          | JSR   | R7,MDFSUB    | ;DO TEST           |
| 5081 | 024656 | 046252 | 125252 |                          | .WORD | 46252,125252 | ;ACO               |
| 5082 | 024662 | 040300 | 000000 |                          | .WORD | 40300,0      | ;FSRC              |
| 5083 | 024666 | 000000 | 000000 |                          | .WORD | 0,0          | ;FRACTIONAL RESULT |
| 5084 | 024672 | 046377 | 177777 |                          | .WORD | 46377,-1     | ;INTEGER RESULT    |
| 5085 | 024676 | 000053 |        |                          | .WORD | 53           | ;TEST FPS          |
| 5086 | 024700 | 000044 |        |                          | .WORD | 44           | ;RESULT FPS        |
|      |        |        |        | ;9/ROUND INTEGER         |       |              |                    |

```

5087 024702 005037 001042 CLR B#FLAG ;NO INTERRUPT
5088 024706 004767 000214 JSR R7,MDFSUB ;DO TEST
5089 024712 046252 125252 .WORD 46252,125252 ;ACO
5090 024716 040300 000000 .WORD 40300,0 ;FSRC
5091 024722 000000 000000 .WORD 0,0 ;FRACTIONAL RESULT
5092 024726 046377 177777 .WORD 46377,1 ;INTEGER RESULT
5093 024732 000013 .WORD 13 ;TEST FPS
5094 024734 000004 .WORD 4 ;RESULT FPS
5095 ;10/TRUNCATE FRACTION
5096 024736 005037 001042 CLR B#FLAG ;NO INTERRUPT
5097 024742 004767 000160 JSR R7,MDFSUB ;DO TEST
5098 024746 040777 177777 .WORD 40777,-1 ;ACO
5099 024752 040200 000000 .WORD 40200,0 ;FSRC
5100 024756 040177 177770 .WORD 40177,177770 ;FRACTIONAL RESULT
5101 024762 040740 000000 .WORD 40740,0 ;INTEGER RESULT
5102 024766 000000 .WORD 0 ;TEST FPS
5103 024770 000000 .WORD 0 ;RESULT FPS
5104 ;11/ROUND INTEGER
5105 024772 005037 001042 CLR B#FLAG ;NO INTERRUPT
5106 024776 004767 000124 JSR R7,MDFSUB ;DO TEST
5107 025002 000000 000000 .WORD 0,0 ;ACO
5108 025006 000000 000000 .WORD 0,0 ;FSRC
5109 025012 000000 000000 .WORD 0,0 ;FRACTIONAL RESULT
5110 025016 000000 000000 .WORD 0,0 ;INTEGER RESULT
5111 025022 000000 .WORD 0 ;TEST FPS
5112 025024 000004 .WORD 4 ;RESULT FPS
5113 ;12/ROUND FRACTION
5114 025026 005037 001042 CLR B#FLAG ;NO INTERRUPT
5115 025032 004767 000070 JSR R7,MDFSUB ;DO TEST
5116 025036 040225 125252 .WORD 40225,125252 ;ACO
5117 025042 066652 052525 .WORD 66652,52525 ;FSRC
5118 025046 000000 000000 .WORD 0,0 ;FRACTIONAL RESULT
5119 025052 066707 025160 .WORD 66707,25160 ;INTEGER RESULT
5120 025056 007027 .WORD 7027 ;TEST FPS
5121 025060 007004 .WORD 7004 ;RESULT FPS
5122 ;/OVERFLOW
5123 025062 012737 000001 001042 MOV #1,B#FLAG ;INTERRUPT
5124 025070 004767 000032 JSR R7,MDFSUB ;DO TEST
5125 025074 076000 000000 .WORD 76000,0 ;ACO
5126 025100 076000 000000 .WORD 76000,0 ;FSRC
5127 025104 000000 000000 .WORD 0,0 ;FRACTIONAL RESULT
5128 025110 033600 000000 .WORD 33600,0 ;INTEGER RESULT
5129 025114 001000 .WORD 1000 ;TEST FPS
5130 025116 101006 .WORD 101006 ;RESULT FPS
5131 025120 000010 .WORD 10 ;FEC
5132 ;
5133 025122 000167 000310 JMP MOP14
5134 ;
5135 ;*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X
5136 ;*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X*X
5137 ;
5138 ; ACO
5139 ; FSRC
5140 ; FRACTIONAL RESULT
5141 ; INTEGER RESULT
5142 ; FPS BEFORE EXECUTION
    
```

```

5143                                     ; FPS AFTER EXECUTION
5144                                     ; (FEC)
5145                                     ;
5146                                     ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
5147                                     ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
5148                                     ;
5149 025126 012605 MDFSUB: MOV (SP),R5 ; RETURN ADDRESS TO USE AS POINTER
5150 025130 012737 025216 000244 MOV #50,#FPVEC ; REDIRECT TRAP VECTOR
5151 025136 012702 000200 MOV #200,R2 ; SET TO DOUBLE MODE FOR LOAD
5152 025142 170102 LDFPS R2 ; LOAD FPS
5153 025144 172415 LDD (R5),ACO ; LOAD ACO WITH TEST DATA
5154 025146 012701 025426 MOV #MODGAR,R1 ; LOAD KNOWN INTO AC1
5155 025152 172511 LDD (R1),AC1 ;
5156 025154 010501 MOV R5,R1 ; POINT TO FSRC DATA
5157 025156 062701 000004 ADD #4,R1 ;
5158 025162 016502 000020 MOV 20(R5),R2 ; GET TEST FPS
5159 025166 170102 LDFPS R2 ; LOAD TEST FPS
5160                                     ;
5161 025170 171411 ; MODF (R1),ACO ; *TEST INSTRUCTION
5162 025172 170001 1$: SETF ; WAIT FOR POSSIBLE FPA TRAP.
5163                                     ;
5164                                     ; INSTRUCTION DIDNT TRAP
5165 025174 032737 000001 001042 BIT #1,#FLAG ; VERIFY A NO TRAP CONDITION
5166 025202 001426 BEQ 2$ ; BRANCH IF GOOD
5167 025204 104000 ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
5168 025206 000373 .WORD 373 ; UNIQUE ERROR NUMBER
5169 025210 002013 .WORD FPPERR ; ADDRESS OF ERROR MESSAGE
5170                                     ; INSTRUCTION SHOULD HAVE TRAPPED
5171 025212 000167 000042 JMP 2$ ; REJOIN CODE
5172                                     ;
5173                                     ; INSTRUCTION TRAPPED
5174 025216 032737 000001 001042 50$: BIT #1,#FLAG ; SEE IF EXPECTING A TRAP
5175 025224 001005 BNE 51$ ; BRANCH IF EXPECTING A TRAP
5176 025226 104000 ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
5177 025230 000374 .WORD 374 ; UNIQUE ERROR NUMBER
5178 025232 002013 .WORD FPPERR ; ADDRESS OF ERROR MESSAGE
5179                                     ; INSTRUCTION WASNT SUPPOSE TO TRAP
5180 025234 000167 000020 JMP 2$ ; REJOIN CODE
5181 025240 012604 51$: MOV (SP),R4 ; SEE IF PC = INSTRUCTION
5182 025242 005726 TST (SP), ; CLEAN UP STACK
5183 025244 022704 025172 CMP #1,R4 ;
5184 025250 001403 BEQ 2$ ; BRANCH IF GOOD COMPARE
5185 025252 104000 ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
5186 025254 000375 .WORD 375 ; UNIQUE ERROR NUMBER
5187 025256 002013 .WORD FPPERR ; ADDRESS OF ERROR MESSAGE
5188                                     ; PC WAS INCORRECT
5189                                     ;
5190                                     ; COMMON CODE FOR TRAP AND NO TRAP
5191 025260 170203 2$: STFPS R3 ; SAVE FPS
5192 025262 012702 000200 MOV #200,R2 ; SET FPP TO DOUBLE
5193 025266 170102 LDFPS R2 ;
5194 025270 012701 001126 MOV #RECDST,R1 ; POINT TO RECEIVED DATA TABLE
5195                                     ; SAVE FRACTIONAL RESULT
5196 025274 174011 STD ACO,(R1) ; SAVE ACO RESULT
5197 025276 026503 000022 CMP 22(R5),R3 ; VERIFY STATUS
5198 025302 001403 BEQ 3$ ; BRANCH IF GOOD
    
```

Jns

```

5199 025304 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
5200 025306 000376          .WORD      376          ;UNIQUE ERROR NUMBER
5201 025310 002013          .WORD      FPPERR        ;ADDRESS OF ERROR MESSAGE
5202                                     ;BAD FPS
5203 025312 010504          3$:  MOV      R5,R4          ;POINT TO EXPECTED DATA
5204 025314 062704 000010          ADD      #10,R4
5205 025320 004767 154604          4$:  JSR      R7,DATVFR        ;VERIFY DATA
5206 025324 005767 153510          TST      COUNT
5207 025330 001403          BEQ      5$              ;BRANCH IF GOOD
5208 025332 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
5209 025334 000377          .WORD      377          ;UNIQUE ERROR NUMBER
5210 025336 002013          .WORD      FPPERR        ;ADDRESS OF ERROR MESSAGE
5211                                     ;BAD ACO
5212                                     ;SAVE INTEGER RESULT
5213 025340 174111          5$:  STD      AC1,(R1)        ;SAVE AC1 RESULT
5214 025342 010504          MOV      R5,R4          ;POINT TO EXPECTED
5215 025344 062704 000014          ADD      #14,R4
5216 025350 004767 154554          JSR      R7,DATVFR        ;VERIFY DATA
5217 025354 005767 153460          TST      COUNT
5218 025360 001403          BEQ      6$              ;BRANCH IF GOOD
5219 025362 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
5220 025364 000400          .WORD      400          ;UNIQUE ERROR NUMBER
5221 025366 002013          .WORD      FPPERR        ;ADDRESS OF ERROR MESSAGE
5222                                     ;BAD AC1
5223 025370 005737 001042          6$:  TST      B#FLAG        ;SEE IF NEED TO CHECK FEC
5224 025374 001002          BNE      7$              ;BRANCH IF NEED TO CHECK
5225 025376 000165 000024          JMP      24(R5)          ;RETURN FROM TEST
5226 025402 170301          7$:  STST     R1              ;SAVE FEC
5227 025404 016504 000024          MOV      24(R5),R4        ;GET FEC
5228 025410 020401          CMP      R4,R1          ;VERIFY FEC
5229 025412 001403          BEQ      8$              ;BRANCH IF GOOD
5230 025414 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
5231 025416 000401          .WORD      401          ;UNIQUE ERROR NUMBER
5232 025420 002013          .WORD      FPPERR        ;ADDRESS OF ERROR MESSAGE
5233                                     ;BAD FEC
5234 025422 000165 000026          8$:  JMP      26(R5)        ;RETURN FROM TEST
5235                                     ;
5236 025426 177777 177777 177777 MODGAR: .WORD  -1,-1,-1,-1          ;KNOWN DATA FOR AC1
5237 025434 177777
5238 025436
5239
5240 025436
5241
5242
5243
5244 025436
5245 025436 005267 153342          MOP14:
5246                                     MPOOD:
5247 025442 005037 001042          ;*****
5248 025446 004767 001164          ;+TEST 66          TEST MODD
5249 025452 012345 177777 177777          ;*****
5250 025460 177777
5251 025462 000100 000000 000000          TST66:
5252 025470 000000          INC      #TESTN          ;INCREMENT TEST NUMBER
5253 025472 000000 000000 000000          ;1/AC>FSRC=0
5254 025500 00C000          CLR      B#FLAG          ;NO INTERRUPT
5248 025446 004767 001164          JSR      R7,MODSUB        ;DO TEST
5249 025452 012345 177777 177777          .WORD    12345,-1,-1,-1  ;ACO
5251 025462 000100 000000 000000          .WORD    100,0,0,0        ;FSRC
5253 025472 000000 000000 000000          .WORD    0,0,0,0          ;FRACTIONAL RESULT
    
```

|      |        |        |        |        |              |                            |                     |
|------|--------|--------|--------|--------|--------------|----------------------------|---------------------|
| 5255 | 025502 | 000000 | 000000 | 000000 | .WORD        | 0,0,0,0                    | ; INTEGER RESULT    |
| 5256 | 025510 | 000000 |        |        |              |                            |                     |
| 5257 | 025512 | 000200 |        |        | .WORD        | 200                        | ; TEST FPS          |
| 5258 | 025514 | 000204 |        |        | .WORD        | 204                        | ; RESULTANT FPS     |
| 5259 |        |        |        |        |              |                            |                     |
| 5260 | 025516 | 005037 | 001042 |        | ;2/AC<0>FSRC |                            |                     |
| 5261 | 025522 | 004767 | 001110 |        | CLR          | B#FLAG                     | ; NO INTERRUPT      |
| 5262 | 025526 | 000000 | 000000 | 000000 | JSR          | R7,MDSUB                   | ; DO TEST           |
| 5263 | 025534 | 000000 |        |        | .WORD        | 0,0,0,0                    | ;ACO                |
| 5264 | 025536 | 001234 | 177777 | 000000 | .WORD        | 1234, 1,0,0                | ;FSRC               |
| 5265 | 025544 | 000000 |        |        |              |                            |                     |
| 5266 | 025546 | 000000 | 000000 | 000000 | .WORD        | 0,0,0,0                    | ; FRACTIONAL RESULT |
| 5267 | 025554 | 000000 |        |        |              |                            |                     |
| 5268 | 025556 | 000000 | 000000 | 000000 | .WORD        | 0,0,0,0                    | ; INTEGER RESULT    |
| 5269 | 025564 | 000000 |        |        |              |                            |                     |
| 5270 | 025566 | 007717 |        |        | .WORD        | 7717                       | ; TEST FPS          |
| 5271 | 025570 | 007704 |        |        | .WORD        | 7704                       | ; RESULTANT FPS     |
| 5272 |        |        |        |        |              |                            |                     |
| 5273 | 025572 | 005037 | 001042 |        | ;3/AC>FSRC>0 |                            |                     |
| 5274 | 025576 | 004767 | 001034 |        | CLR          | B#FLAG                     | ; NO INTERRUPT      |
| 5275 | 025602 | 056252 | 125252 | 125252 | JSR          | R7,MDSUB                   | ; DO TEST           |
| 5276 | 025610 | 125250 |        |        | .WORD        | 56252,125252,125252,125250 | ;ACO                |
| 5277 | 025612 | 040300 | 000000 | 000000 | .WORD        | 40300,0,0,0                | ;FSRC               |
| 5278 | 025620 | 000000 |        |        |              |                            |                     |
| 5279 | 025622 | 000000 | 000000 | 000000 | .WORD        | 0,0,0,0                    | ; FRACTIONAL RESULT |
| 5280 | 025630 | 000000 |        |        |              |                            |                     |
| 5281 | 025632 | 056377 | 177777 | 177777 | .WORD        | 56377,-1,-1,-4             | ; INTEGER RESULT    |
| 5282 | 025640 | 177774 |        |        |              |                            |                     |
| 5283 | 025642 | 000213 |        |        | .WORD        | 213                        | ; TEST FPS          |
| 5284 | 025644 | 000204 |        |        | .WORD        | 204                        | ; RESULTANT FPS     |
| 5285 |        |        |        |        |              |                            |                     |
| 5286 | 025646 | 005037 | 001042 |        | ;4/AC<0>FSRC |                            |                     |
| 5287 | 025652 | 004767 | 000760 |        | CLR          | B#FLAG                     | ; NO INTERRUPT      |
| 5288 | 025656 | 140240 | 000000 | 000000 | JSR          | R7,MDSUB                   | ; DO TEST           |
| 5289 | 025664 | 000000 |        |        | .WORD        | 140240,0,0,0               | ;ACO                |
| 5290 | 025666 | 063714 | 146314 | 133572 | .WORD        | 63714,146314,133572,167737 | ;FSRC               |
| 5291 | 025674 | 167737 |        |        |              |                            |                     |
| 5292 | 025676 | 000000 | 000000 | 000000 | .WORD        | 0,0,0,0                    | ; FRACTIONAL RESULT |
| 5293 | 025704 | 000000 |        |        |              |                            |                     |
| 5294 | 025706 | 163777 | 177777 | 162531 | .WORD        | 163777,-1,162531,125726    | ; INTEGER RESULT    |
| 5295 | 025714 | 125726 |        |        |              |                            |                     |
| 5296 | 025716 | 000210 |        |        | .WORD        | 210                        | ; TEST FPS          |
| 5297 | 025720 | 000204 |        |        | .WORD        | 204                        | ; RESULTANT FPS     |
| 5298 |        |        |        |        |              |                            |                     |
| 5299 | 025722 | 005037 | 001042 |        | ;5/AC>FSRC>0 |                            |                     |
| 5300 | 025726 | 004767 | 000704 |        | CLR          | B#FLAG                     | ; NO INTERRUPT      |
| 5301 | 025732 | 056200 | 000000 | 000000 | JSR          | R7,MDSUB                   | ; DO TEST           |
| 5302 | 025740 | 000001 |        |        | .WORD        | 56200,0,0,1                | ;ACO                |
| 5303 | 025742 | 040340 | 000000 | 000000 | .WORD        | 40340,0,0,0                | ;FSRC               |
| 5304 | 025750 | 000000 |        |        |              |                            |                     |
| 5305 | 025752 | 000000 | 000000 | 000000 | .WORD        | 0,0,0,0                    | ; FRACTIONAL RESULT |
| 5306 | 025760 | 000000 |        |        |              |                            |                     |
| 5307 | 025762 | 056340 | 000000 | 000000 | .WORD        | 56340,0,0,1                | ; INTEGER RESULT    |
| 5308 | 025770 | 000001 |        |        |              |                            |                     |
| 5309 | 025772 | 000213 |        |        | .WORD        | 213                        | ; TEST FPS          |
| 5310 | 025774 | 000204 |        |        | .WORD        | 204                        | ; RESULTANT FPS     |

```

5311
5312 025776 005037 001042 ;6/TRUNCATE
5313 026002 004767 000630 CLR @#FLAG ;NO INTERRUPT
5314 026006 056252 125252 125252 JSR R7,MDDSUB ;DO TEST
5315 026014 125252 .WORD 56252,125252,125252,125252 ;ACO
5316 026016 040300 000000 000000 .WORD 40300,0,0,0 ;FSRC
5317 026024 000000 .WORD 0,0,0,0 ;FRACTIONAL RESULT
5318 026026 000000 000000 000000 .WORD 56377,-1,-1,1 ;INTEGER RESULT
5319 026034 000000 .WORD 253 ;TEST FPS
5320 026036 056377 177777 177777 .WORD 244 ;RESULT FPS
5321 026044 177777 ;7/TRUNCATE FRACTION
5322 026046 000253 CLR @#FLAG ;NO INTERRUPT
5323 026050 000244 JSR R7,MDDSUB ;DO TEST
5324 .WORD 23252,125252,125252,125252 ;ACO
5325 026052 005037 001042 CLR @#FLAG ;NO INTERRUPT
5326 026056 004767 000554 JSR R7,MDDSUB ;DO TEST
5327 026062 023252 125252 125252 .WORD 23252,125252,125252,125252 ;ACO
5328 026070 125252 .WORD 40300,0,0,0 ;FSRC
5329 026072 040300 000000 000000 .WORD 40300,0,0,0 ;FSRC
5330 026100 000000 .WORD 23377,-1,-1,-1 ;FRACTIONAL RESULT
5331 026102 023377 177777 177777 .WORD 23377,-1,-1,-1 ;FRACTIONAL RESULT
5332 026110 177777 .WORD 0,0,0,0 ;INTEGER RESULT
5333 026112 000000 000000 000000 .WORD 0,0,0,0 ;INTEGER RESULT
5334 026120 000000 .WORD 253 ;TEST FPS
5335 026122 000253 .WORD 240 ;RESULT FPS
5336 026124 000240 ;8/ROUND INTEGER
5337 .WORD 253 ;TEST FPS
5338 026126 005037 001042 CLR @#FLAG ;NO INTERRUPT
5339 026132 004767 000500 JSR R7,MDDSUB ;DO TEST
5340 026136 076600 000000 000000 .WORD 76600,0,0,125252 ;ACO
5341 026144 125252 .WORD 40300,0,0,0 ;FSRC
5342 026146 040300 000000 000000 .WORD 40300,0,0,0 ;FSRC
5343 026154 000000 .WORD 0,0,0,0 ;FRACTIONAL RESULT
5344 026156 000000 000000 000000 .WORD 0,0,0,0 ;FRACTIONAL RESULT
5345 026164 000000 .WORD 76700,0,0,-1 ;INTEGER RESULT
5346 026166 076700 000000 000000 .WORD 76700,0,0,-1 ;INTEGER RESULT
5347 026174 177777 .WORD 200 ;TEST FPS
5348 026176 000200 .WORD 204 ;RESULT FPS
5349 026200 000204 ;9/ROUND THROUGH FRACTION
5350 .WORD 200 ;TEST FPS
5351 026202 005037 001042 CLR @#FLAG ;NO INTERRUPT
5352 026206 004767 000424 JSR R7,MDDSUB ;DO TEST
5353 026212 041525 052525 052525 .WORD 41525,052525,52525,52525 ;ACO
5354 026220 052525 .WORD 40300,0,0,0 ;FSRC
5355 026222 040300 000000 000000 .WORD 40300,0,0,0 ;FSRC
5356 026230 000000 .WORD 40177,-1,-1,177740 ;FRACTIONAL RESULT
5357 026232 040177 177777 177777 .WORD 40177,-1,-1,177740 ;FRACTIONAL RESULT
5358 026240 177740 .WORD 41636,0,0,0 ;INTEGER RESULT
5359 026242 041636 000000 000000 .WORD 41636,0,0,0 ;INTEGER RESULT
5360 026250 000000 .WORD 7700 ;TEST FPS
5361 026252 007700 .WORD 7700 ;RESULT FPS
5362 026254 007700 ;/OVERFLOW, TRAPS ENABLED
5363 .WORD 7700 ;RESULT FPS
5364 026256 012737 000001 001042 MOV @1,@#FLAG ;INTERRUPT
5365 026264 004767 000346 JSR R7,MDDSUB ;DO TEST
5366 026270 177777 177777 177777 .WORD -1,-1,-1,-1 ;ACO
    
```

```

5367 026276 177777
5368 026300 040400 000000 000000 .WORD 40400,0,0,0 ;FSRC
5369 026306 000000
5370 026310 000000 000000 000000 .WORD 0,0,0,0 ;FRACTIONAL RESULT
5371 026316 000000
5372 026320 100177 177777 177777 .WORD 100177,-1,-1,-1 ;INTEGER RESULT
5373 026326 177777
5374 026330 007700 .WORD 7700 ; TEST FPS
5375 026332 107706 .WORD 107706 ;RESULT FPS
5376 026334 000010 .WORD 10 ;FEC
5377 ;/INTEGER CHOPPED TO 56 BITS
5378 026336 005037 001042 CLR #0,0FLAG ;NO INTERRUPT
5379 026342 004767 000270 JSR R7,MODSUB ;DO TEST
5380 026346 056700 000000 000000 .WORD 56700,0,0,-1 ;ACO
5381 026354 177777
5382 026356 044440 177777 177777 .WORD 44440,-1,-1,-1 ;FSRC
5383 026364 177777
5384 026366 000000 000000 000000 .WORD 0,0,0,0 ;FRACTIONAL RESULT
5385 026374 000000
5386 026376 063161 100000 000001 .WORD 63161,100000,1,40775 ;INTEGER RESULT
5387 026404 040775
5388 026406 000200 .WORD 200 ; TEST FPS
5389 026410 000204 .WORD 204 ;RESULT FPS
5390 ;/OVERFLOW, TRAPS DISABLED
5391 026412 012737 000002 001042 MOV #2,#0FLAG ;NO INTERRUPT
5392 026420 004767 000212 JSR R7,MODSUB ;DO TEST
5393 026424 066600 000000 000000 .WORD 66600,0,0,0 ;ACO
5394 026432 000000
5395 026434 066600 000000 000000 .WORD 66600,0,0,0 ;FSRC
5396 026442 000000
5397 026444 000000 000000 000000 .WORD 0,0,0,0 ;FRACTIONAL RESULT
5398 026452 000000
5399 026454 015200 000000 000000 .WORD 15200,0,0,0 ;INTEGER RESULT
5400 026462 000000
5401 026464 047700 .WORD 47700 ; TEST FPS
5402 026466 147706 .WORD 147706 ;RESULT FPS
5403 026470 000010 .WORD 10 ;FEC
5404 ;/UNDERFLOW, TRAPS DISABLED
5405 026472 012737 000002 001042 MOV #2,#0FLAG ;NO INTERRUPT
5406 026500 004767 000132 JSR R7,MODSUB ;DO TEST
5407 026504 100277 000001 000002 .WORD 100277,1,2,-1 ;ACO
5408 026512 177777
5409 026514 100300 000001 000001 .WORD 100300,1,1,1 ;FSRC
5410 026522 000001
5411 026524 000000 000000 000000 .WORD 0,0,0,0 ;FRACTIONAL RESULT
5412 026532 000000
5413 026534 000000 000000 000000 .WORD 0,0,0,0 ;INTEGER RESULT
5414 026542 000000
5415 026544 005200 .WORD 5200 ; TEST FPS
5416 026546 005204 .WORD 5204 ;RESULT FPS
5417 026550 000010 .WORD 10 ;FEC
5418 ;/UNDERFLOW TRAPS ENABLED, UV AS RESULT
5419 026552 012737 000001 001042 MOV #1,#0FLAG ; INTERRUPT
5420 026560 004767 000052 JSR R7,MODSUB ;DO TEST
5421 026564 100277 000001 000002 .WORD 100277,1,2,-1 ;ACO
5422 026572 177777

```

```

5423 026574 100300 000001 000001 .WORD 100300,1,1,1 ;FSRC
5424 026602 000001
5425 026604 040417 040001 077403 .WORD 40417,40001,77403,0 ;FRACTIONAL RESULT
5426 026612 000000
5427 026614 000000 000000 000000 .WORD 0,0,0,0 ;INTEGER RESULT
5428 026622 000000
5429 026624 002200 .WORD 2200 ; TEST FPS
5430 026626 102200 .WORD 102200 ;RESULT FPS
5431 026630 000012 .WORD 12 ;FEC
5432
5433
5434 026632 000167 000300 JMP HOP15 ;JUMP OVER SUBROUTINE
5435 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
5436 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
5437
5438 ; ACO
5439 ; FSRC
5440 ; FRACTIONAL RESULT
5441 ; INTEGER RESULT
5442 ; FPS BEFORE EXECUTION
5443 ; FPS AFTER EXECUTION
5444 ; (FEC)
5445 ;
5446 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
5447 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
5448
5449 026636 012605 MODSUB: MOV (SP),R5 ; RETURN ADDRESS TO USE AS POINTER
5450 026640 012737 026726 000244 MOV #50,#FPVEC ;REDIRECT TRAP VECTOR
5451 026646 012702 000200 MOV #200,R2 ;SET TO DOUBLE MODE FOR LOAD
5452 026652 170102 LDFPS R2 ;LOAD FPS
5453 026654 172415 LDD (R5),ACO ;LOAD ACO WITH TEST DATA
5454 026656 012701 025426 MOV #MODGAR,R1 ;LOAD KNOWN INTO AC1
5455 026662 172511 LDD (R1),AC1 ;
5456 026664 010501 MOV R5,R1 ;POINT TO FSRC DATA
5457 026666 062701 000010 ADD #10,R1
5458 026672 016502 000040 MOV 40(R5),R2 ;GET TEST FPS
5459 026676 170102 LDFPS R2 ;LOAD TEST FPS
5460
5461 026700 171411 ; MODD (R1),ACO ;*TEST INSTRUCTION
5462 026702 170011 1$: SETD ;WAIT FOR POSSIBLE FPA TRAP.
5463
5464 ; INSTRUCTION DIDNT TRAP
5465 026704 032737 000001 001042 BIT #1,#FLAG ;VERIFY A NO TRAP CONDITION
5466 026712 001426 BEQ 2$ ;BRANCH IF GOOD
5467 026714 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
5468 026716 000402 .WORD 402 ;UNIQUE ERROR NUMBER
5469 026720 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
5470 ; INSTRUCTION SHOULD HAVE TRAPPED
5471 026722 000167 000042 JMP 2$ ;REJOIN CODE
5472
5473 ; INSTRUCTION TRAPPED
5474 026726 032737 000001 001042 50$: BIT #1,#FLAG ;SEE IF EXPECTING A TRAP
5475 026734 001005 BNE 51$ ;BRANCH IF EXPECTING A TRAP
5476 026736 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
5477 026740 000403 .WORD 403 ;UNIQUE ERROR NUMBER
5478 026742 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE

```



```
5479
5480 026744 000167 000020
5481 026750 012604
5482 026752 005726
5483 026754 022704 026702
5484 026760 001403
5485 026762 104000
5486 026764 000404
5487 026766 002013
5488
5489
5490
5491 026770 170203
5492 026772 012702 000200
5493 026776 170102
5494 027000 012701 001126
5495
5496 027004 174011
5497 027006 026503 000042
5498 027012 001403
5499 027014 104000
5500 027016 000405
5501 027020 002013
5502
5503 027022 010504
5504 027024 062704 000020
5505 027030 004767 153112
5506 027034 005767 152000
5507 027040 001403
5508 027042 104000
5509 027044 000406
5510 027046 002013
5511
5512
5513 027050 174111
5514 027052 010504
5515 027054 062704 000030
5516 027060 004767 153062
5517 027064 005767 151750
5518 027070 001403
5519 027072 104000
5520 027074 000407
5521 027076 002013
5522
5523 027100 005737 001042
5524 027104 001002
5525 027106 000165 000044
5526 027112 170301
5527 027114 016504 000044
5528 027120 020401
5529 027122 001403
5530 027124 104000
5531 027126 000410
5532 027130 002013
5533
5534 027132 000165 000046
```

510: JMP 21 ;INSTRUCTION WASNT SUPPOSE TO TRAP  
MOV (SP),R4 ;REJOIN CODE  
TST (SP); ;SEE IF PC = INSTRUCTION  
CMP #10,R4 ;CLEAN UP STACK  
BEQ 21 ;  
ERROR ;BRANCH IF GOOD COMPARE  
.WORD 404 ;ALL ERRORS TO TRAP TO EMT VECTOR  
.WORD FPPERR ;UNIQUE ERROR NUMBER  
 ;ADDRESS OF ERROR MESSAGE  
 ;PC WAS INCORRECT

20: ;COMMON CODE FOR TRAP AND NO TRAP  
STFPS R3 ;SAVE FPS  
MOV #200,R2 ;SET FPP TO DOUBLE  
LDFPS R2  
MOV #RECDST,R1 ;POINT TO RECEIVED DATA TABLE  
;SAVE FRACTIONAL RESULT  
STD ACO,(R1) ;SAVE ACO RESULT  
CMP 42(R5),R3 ;VERIFY STATUS  
BEQ 30 ;BRANCH IF GOOD  
ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR  
.WORD 405 ;UNIQUE ERROR NUMBER  
.WORD FPPERR ;ADDRESS OF ERROR MESSAGE

30: ;BAD FPS  
MOV R5,R4 ;POINT TO EXPECTED DATA  
ADD #20,R4  
40: JSR R7,DATVER ;VERIFY DATA  
TST COUNT  
BEQ 50 ;BRANCH IF GOOD  
ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR  
.WORD 406 ;UNIQUE ERROR NUMBER  
.WORD FPPERR ;ADDRESS OF ERROR MESSAGE

50: ;BAD ACO  
;SAVE INTEGER RESULT  
STO AC1,(R1) ;SAVE AC1 RESULT  
MOV R5,R4 ;POINT TO EXPECTED  
ADD #30,R4  
JSR R7,DATVER ;VERIFY DATA  
TST COUNT  
BEQ 60 ;BRANCH IF GOOD  
ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR  
.WORD 407 ;UNIQUE ERROR NUMBER  
.WORD FPPERR ;ADDRESS OF ERROR MESSAGE

60: ;BAD AC1  
TST @FLAG ;SEE IF NEED TO CHECK FEC  
BNE 70 ;BRANCH IF NEED TO CHECK  
JMP 44(R5) ;RETURN FROM TEST

70: ;SAVE FEC  
STST R1 ;GET FEC  
MOV 44(R5),R4 ;VERIFY FEC  
CMP R4,R1 ;BRANCH IF GOOD  
BEQ 80 ;BRANCH IF GOOD  
ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR  
.WORD 410 ;UNIQUE ERROR NUMBER  
.WORD FPPERR ;ADDRESS OF ERROR MESSAGE

80: ;BAD FEC  
JMP 46(R5) ;RETURN FROM TEST

C4

```
5535  
5536 027136      | HOP15:  
5537 027136      | MSFD:  
5538            | |*****  
5539            | |*TEST 67      TEST STCFD  
5540            | |*****  
5541 027136      | TST67:  
5542 027136 005267 151642      | INC      $TESTN      | INCREMENT TEST NUMBER  
5543            | 1/AC=0  
5544 027142 004767 000170      | JSR      R7,SFDSUB      | DO TEST  
5545 027146 000177 000000 000000 | .WORD   0177,0,0,1      | ACO  
5546 027154 000001 000000 000000 | .WORD   0,0,0,0        | RESULT  
5547 027156 000000 000000 000000 | .WORD   0,0,0,0        | RESULT  
5548 027164 000000 000000 000000 | .WORD   47557          | TEST FPS  
5549 027166 047557 000000 000000 | .WORD   47544          | RESULT FPS  
5550 027170 047544 000000 000000 | .WORD   47544          | RESULT FPS  
5551            | 2/AC>0, TRUNCATE  
5552 027172 004767 000140      | JSR      R7,SFDSUB      | DO TEST  
5553 027176 077577 177777 177777 | .WORD   77577,-1,1,1    | ACO  
5554 027204 177777 000000 000000 | .WORD   77577,-1,0,0    | RESULT  
5555 027206 077577 177777 000000 | .WORD   77577,-1,0,0    | RESULT  
5556 027214 000000 000000 000000 | .WORD   7540           | TEST FPS  
5557 027216 007540 000000 000000 | .WORD   7540           | RESULT FPS  
5558 027220 007540 000000 000000 | .WORD   7540           | RESULT FPS  
5559            | 3/AC<0, ROUND  
5560 027222 004767 000110      | JSR      R7,SFDSUB      | DO TEST  
5561 027226 100377 177777 100000 | .WORD   100377,-1,100000,0 | ACO  
5562 027234 000000 000000 000000 | .WORD   100377,-1,0,0    | RESULT  
5563 027236 100377 177777 000000 | .WORD   100377,-1,0,0    | RESULT  
5564 027244 000000 000000 000000 | .WORD   7517           | TEST FPS  
5565 027246 007517 000000 000000 | .WORD   7510           | RESULT FPS  
5566 027250 007510 000000 000000 | .WORD   7510           | RESULT FPS  
5567            | 4/AC=-0  
5568 027252 004767 000060      | JSR      R7,SFDSUB      | DO TEST  
5569 027256 100000 000000 000000 | .WORD   100000,0,0,0    | ACO  
5570 027264 000000 000000 000000 | .WORD   0,0,0,0        | RESULT  
5571 027266 000000 000000 000000 | .WORD   0,0,0,0        | RESULT  
5572 027274 000000 000000 000000 | .WORD   7757           | TEST FPS  
5573 027276 007757 000000 000000 | .WORD   7744           | RESULT FPS  
5574 027300 007744 000000 000000 | .WORD   7744           | RESULT FPS  
5575            | 5/AC<0  
5576 027302 004767 000030      | JSR      R7,SFDSUB      | DO TEST  
5577 027306 125252 125252 125252 | .WORD   125252,125252,125252,125252 | ACO  
5578 027314 125252 000000 000000 | .WORD   125252,125252,0,0 | RESULT  
5579 027316 125252 125252 000000 | .WORD   125252,125252,0,0 | RESULT  
5580 027324 000000 000000 000000 | .WORD   0              | TEST FPS  
5581 027326 000000 000000 000000 | .WORD   10             | RESULT FPS  
5582 027330 000010 000000 000000 | .WORD   10             | RESULT FPS  
5583            |  
5584            |  
5585 027332 000167 000120      | JMP      MOP16          | GET OVER SUBROUTINE  
5586            | |XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX  
5587            | |XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX  
5588            | |STCFD  
5589            | | ACO  
5590            | | RESULT  
5590            | |
```

```

5591          ;          FPS BEFORE EXECUTION
5592          ;          FPS AFTER EXECUTION
5593          ;
5594          ;THERE CAN BE P J TRAPS WITH THE STCFD INSTRUCTION
5595          ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
5596          ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
5597          ;
5598 027336 012605          SFDSUB: MOV      (SP),R5          ; RETURN ADDRESS TO USE AS POINTER
5599 027340 012737 027444 000244 MOV      @50,@FPVEC      ; REDIRECT TRAP VECTOR
5600 027346 012702 000200          MOV      @200,R2        ; SET TO DOUBLE MODE FOR LOAD
5601 027352 170102          LDFPS   R2            ; LOAD FPS
5602 027354 172415          LDD     (R5),ACO        ; LOAD ACO WITH TEST DATA
5603 027356 012701 001126          MOV      @RECDST,R1     ; POINT TO RESULT AREA
5604 027362 016502 000020          MOV      20(R5),R2     ; GET TEST FPS
5605 027366 170102          LDFPS   R2            ; LOAD TEST FPS
5606          ;
5607 027370 176011          40:    STCFD   ACO,(R1)    ; TEST INSTRUCTION
5608          ;
5609          ;INSTRUCTION DIDNT TRAP
5610          ;VERIFY STATUS
5611 027372 170203          2:    STFPS   R3            ; SAVE FPS
5612 027374 016502 000022          MOV      22(R5),R2     ; GET EXPECTED STATUS
5613 027400 020203          CMP     R2,R3          ; VERIFY STATUS
5614 027402 001403          BEQ     3:            ; BRANCH IF GOOD
5615 027404 104000          ERROR          ; ALL ERRORS TO TRAP TO EMT VECTOR
5616 027406 000411          .WORD   411          ; UNIQUE ERROR NUMBER
5617 027410 002013          .WORD   FPPERR       ; ADDRESS OF ERROR MESSAGE
5618          ;
5619 027412 010504          3:    MOV     R5,R4          ; BAD FPS
5620 027414 062704 000010          ADD     @10,R4          ; POINT TO EXPECTED DATA
5621 027420 004767 152522          4:    JSR     R7,DATVER    ; VERIFY DATA
5622 027424 005767 151410          TST    COUNT          ;
5623 027430 001403          BEQ     5:            ; BRANCH IF GOOD
5624 027432 101000          ERROR          ; ALL ERRORS TO TRAP TO EMT VECTOR
5625 027434 000412          .WORD   412          ; UNIQUE ERROR NUMBER
5626 027436 002013          .WORD   FPPERR       ; ADDRESS OF ERROR MESSAGE
5627          ;
5628 027440 000165 000024          5:    JMP     24(R5)      ; BAD ACO
5629          ;INSTRUCTION TRAPPED
5630          ;
5631 027444 104000          50:   ERROR          ; ALL ERRORS TO TRAP TO EMT VECTOR
5632 027446 000413          .WORD   413          ; UNIQUE ERROR NUMBER
5633 027450 002013          .WORD   FPPERR       ; ADDRESS OF ERROR MESSAGE
5634          ;INSTRUCTION WASNT SUPPOSE TO TRAP
5635 027452 000165 000024          JMP     24(R5)      ; RETURN FROM TEST
5636          ;
5637 027456          ;
5638          ;
5639 027456          ;
5640          ;
5641          ;*****
5642          ;TEST 70      TEST STCFD
5643          ;*****
5643 027456          TST70:          ;
5644 027456 005267 151322          INC     @TESTN        ; INCREMENT TEST NUMBER
5645          ;
5646 027462 005037 001042          11/AC=0
5646          CLR     @FLAG          ; NO INTERRUPT
    
```

```

5647 027466 004767 000220 JSR R7,SDFSUB ;DO TEST
5648 027472 000177 000000 000000 .WORD 177,0,0,0 ;ACO
5649 027500 000000 .WORD 0,0 ;RESULT
5650 027502 000000 000000 .WORD 200 ; TEST FPS
5651 027506 000200 .WORD 204 ;RESULT FPS
5652 027510 000204 ;2/AC--0
5653 027512 005037 001042 CLR @#FLAG ;NO INTERRUPT
5654 027516 004767 000170 JSR R7,SDFSUB ;DO TEST
5655 027522 100000 000300 000200 .WORD 100000,300,200,100 ;ACO
5656 027530 000100 .WORD 0,0 ;RESULT
5657 027532 000000 000000 .WORD 7777 ; TEST FPS
5658 027536 007777 .WORD 7744 ;RESULT FPS
5659 027540 007744 ;3/AC>0, TRUNCATE
5660 027542 005037 001042 CLR @#FLAG ;NO INTERRUPT
5661 027546 004767 000140 JSR R7,SDFSUB ;DO TEST
5662 027552 055555 055555 177777 .WORD 5555,5555,1,-1 ;ACO
5663 027560 177777 .WORD 5555,5555 ;RESULT
5664 027562 055555 055555 .WORD 240 ; TEST FPS
5665 027566 000240 .WORD 240 ;RESULT FPS
5666 027570 000240 ;4/AC<0, ROUND TO UNDEFINED VARIABLE
5667 027572 012737 000001 001042 MOV #1,@#FLAG ;INTERRUPT
5668 027600 004767 000106 JSR R7,SDFSUB ;DO TEST
5669 027604 077777 177777 100000 .WORD 7777,-1,100000,0 ;ACO
5670 027612 000000 .WORD 0,0 ;RESULT
5671 027614 000000 000000 .WORD 1200 ; TEST FPS
5672 027620 001200 .WORD 101206 ;RESULT FPS
5673 027622 101206 ;5/AC<0, ROUND
5674 027624 005037 001042 CLR @#FLAG ;NO INTERRUPT
5675 027630 004767 000056 JSR R7,SDFSUB ;DO TEST
5676 027634 125252 125252 125252 .WORD 125252,125252,125252,125252 ;ACO
5677 027642 125252 .WORD 125252,125253 ;RESULT
5678 027644 125252 125253 .WORD 7700 ; TEST FPS
5679 027650 007700 .WORD 7710 ;RESULT FPS
5680 027652 007710 ;6/ROUND TO UV, TRAPS DISABLED
5681 027654 012737 000002 001042 MOV #2,@#FLAG ;INTERRUPT
5682 027662 004767 000024 JSR R7,SDFSUB ;DO TEST
5683 027666 077777 177777 177777 .WORD 7777,-1,1,0 ;ACO
5684 027674 000000 .WORD 0,0 ;RESULT
5685 027676 000000 000000 .WORD 6700 ; TEST FPS
5686 027702 006700 .WORD 6706 ;RESULT FPS
5687 027704 006706 ;
5688 027706 000167 000232 JMP MOP17 ;GET OVER SUBROUTINE
5689 ;
5690 ;
5691 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
5692 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
5693 STCDF
5694 ; ACO
5695 ; RESULT
5696 ;
5697 ;
5698 ;
5699 ;
5700 ;
5701 ;
5702 ;

```

F 9

```

5703                                     ; FPS BEFORE EXECUTION
5704                                     ; FPS AFTER EXECUTION
5705                                     ;
5706                                     ; A TRAP CAN ONLY OCCUR IF ROUNDING CAUSES OVERFLOW
5707                                     ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
5708                                     ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
5709                                     ;
5710 027712 012605 002774 000244 SDFSUB: MOV (SP),R5 ; RETURN ADDRESS TO USE AS POINTER
5711 027714 012737 000200 MOV #508,#FPVEC ; REDIRECT TRAP VECTOR
5712 027722 012702 MOV #200,R2 ; SET TO DOUBLE MODE FOR LOAD
5713 027726 170102 LDFPS R2 ; LOAD FPS
5714 027730 172415 LDD (R5),ACO ; LOAD ACO WITH TEST DATA
5715 027732 012701 001126 MOV @RECDST,R1 ; POINT TO RESULT AREA
5716 027736 016502 000014 MOV 14(R5),R2 ; GET TEST FPS
5717 027742 170102 LDFPS R2 ; LOAD TEST FPS
5718                                     ;
5719 027744 176011 40$: STCDF ACO,(R1) ; *TEST INSTRUCTION
5720 027746 170327 1$: STST (PC); ; WAIT FOR POSSIBLE FPA TRAP.
5721 027750 000000 .WORD 0 ; STORE STATUS HERE.
5722                                     ;
5723                                     ; INSTRUCTION DIDNT TRAP
5724 027752 032737 000001 001042 BIT #1,@FLAG ; VERIFY A NO TRAP CONDITION
5725 027760 001426 BEQ 2$ ; BRANCH IF GOOD
5726 027762 104000 ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
5727 027764 000414 .WORD 414 ; UNIQUE ERROR NUMBER
5728 027766 002013 .WORD FPPERR ; ADDRESS OF ERROR MESSAGE
5729                                     ; INSTRUCTION SHOULD HAVE TRAPPED
5730 027770 000167 000042 JMP 2$ ; REJOIN CODE
5731                                     ;
5732                                     ; INSTRUCTION TRAPPED
5733 027774 032737 000001 001042 50$: BIT #1,@FLAG ; SEE IF EXPECTING A TRAP
5734 030002 001005 BNE 51$ ; BRANCH IF EXPECTING A TRAP
5735 030004 104000 ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
5736 030006 000415 .WORD 415 ; UNIQUE ERROR NUMBER
5737 030010 002013 .WORD FPPERR ; ADDRESS OF ERROR MESSAGE
5738                                     ; INSTRUCTION WASNT SUPPOSE TO TRAP
5739 030012 000167 000020 JMP 2$ ; REJOIN CODE
5740 030016 012604 51$: MOV (SP),R4 ; SEE IF PC = INSTRUCTION
5741 030020 005726 TST (SP); ; CLEAN UP STACK
5742 030022 022704 027746 CMP #1$,R4 ;
5743 030026 001403 BEQ 2$ ; BRANCH IF GOOD COMPARE
5744 030030 104000 ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
5745 030032 000416 .WORD 416 ; UNIQUE ERROR NUMBER
5746 030034 002013 .WORD FPPERR ; ADDRESS OF ERROR MESSAGE
5747                                     ; PC WAS INCORRECT
5748                                     ;
5749                                     ; COMMON CODE FOR TRAP AND NO TRAP
5750                                     ; VERIFY STATUS
5751 030036 170203 000016 2$: STFPS R3 ; SAVE FPS
5752 030040 016502 MOV 16(R5),R2 ; GET EXPECTED STATUS
5753 030044 020203 CMP R2,R3 ; VERIFY STATUS
5754 030046 001403 BEQ 3$ ; BRANCH IF GOOD
5755 030050 104000 ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
5756 030052 000417 .WORD 417 ; UNIQUE ERROR NUMBER
5757 030054 002013 .WORD FPPERR ; ADDRESS OF ERROR MESSAGE
5758                                     ; BAD FPS

```

```

5759 030056 010504          3$:  MOV    R5,R4          ;POINT TO EXPECTED DATA
5760 030060 062704 000010    ADD    #10,R4
5761 030064 004767 152040    4$:  JSR    R7,DATVFR      ;VERIFY DATA
5762 030070 005767 150744    TST    COUNT
5763 030074 001403          BEQ    5$              ;BRANCH IF GOOD
5764 030076 104000          ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
5765 030100 000420          .WORD  420           ;UNIQUE ERROR NUMBER
5766 030102 002013          .WORD  FPPERR        ;ADDRESS OF ERROR MESSAGE
5767                                ;BAD ACO
5768 030104 005737 001042    5$:  TST    @#FLAG        ;SEE IF NEED TO CHECK FEC
5769 030110 001002          BNE    7$              ;BRANCH IF NEED TO CHECK
5770 030112 000165 000020    JMP    20(R5)         ;RETURN FROM TEST
5771                                ;VERIFY FEC
5772 030116 012704 001106    7$:  MOV    @RECFEC,R4    ;POINT TO FEC AREA
5773 030122 170314          STST   (R4)           ;SAVE FEC
5774 030124 021427 000010    CMP    (R4),#10      ;VERIFY FEC FOR OVERFLOW
5775 030130 001403          BEQ    8$              ;BRANCH IF GOOD
5776 030132 104000          ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
5777 030134 000421          .WORD  421           ;UNIQUE ERROR NUMBER
5778 030136 002013          .WORD  FPPERR        ;ADDRESS OF ERROR MESSAGE
5779                                ;BAD FEC
5780 030140 000165 000020    8$:  JMP    20(R5)         ;RETURN FROM TEST
5781                                ;
5782 030144          MOP17:
5783 030144          MSFDI:
5784                                ;
5785                                ;*****
5786                                ;*TEST 71      TEST STCDF - USING ILLEGAL ACCUMULATOR
5787                                ;*****
5787 030144          TST71:
5788 030144 005267 150634          INC    @TESTN         ;INCREMENT TEST NUMBER
5789 030150 012701 040000    MOV    @40000,R1     ;DISABLE INTERRUPTS
5790 030154 170101          LDFPS  R1
5791 030156 176006          STCFD  ACO,AC6      ;*TEST ILLEGAL INSTRUCTION
5792 030160 170202          STFPS  R2
5793 030162 170303          STST   R3
5794 030164 022702 140000    CMP    @140000,R2    ;VERIFY FER SET
5795 030170 001403          BEQ    1$              ;BRANCH IF ERROR RECEIVED
5796 030172 104000          ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
5797 030174 000422          .WORD  422           ;UNIQUE ERROR NUMBER
5798 030176 002013          .WORD  FPPERR        ;ADDRESS OF ERROR MESSAGE
5799                                ;FER BIT NOT SET ON ILLEGAL INST.
5800 030200 022703 000002    1$:  CMP    @2,R3         ;VERIFY FEC = FLOATING OPCDOE ERROR
5801 030204 001403          BEQ    2$              ;BRANCH IF GOOD
5802 030206 104000          ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
5803 030210 000423          .WORD  423           ;UNIQUE ERROR NUMBER
5804 030212 002013          .WORD  FPPERR        ;ADDRESS OF ERROR MESSAGE
5805                                ;FEC INCORRECT
5806 030214          2$:
5807
5808                                ;
5809 030214          MCLRD:
5810                                ;
5811                                ;*****
5812                                ;*TEST 72      TEST CLRD
5813                                ;*****
5813 030214          TST72:
5814 030214 005267 150564          INC    @TESTN         ;INCREMENT TEST NUMBER
    
```

```

5815 030220 012701 001726      MOV      #TAB47,R1      ;POINT TO DATA
5816 030224 012704 000200      MOV      #200,R4       ;SET FPP STATUS TO DOUBLE
5817 030230 170104                LDFPS   R4
5818 030232 172411                LDD     (R1),ACO
5819 030234 012701 001126      MOV      #RECDST,R1    ;POINT TO DATA BUFFER
5820 030240 174011                STD     ACO,(R1)       ;STORE GARBAGE
5821 030242 170411                CLRD   (R1)           ;CLEAR DATA BUFFER
5822 030244 012704 001256      MOV      #TAB6,R4      ;VERIFY BUFFER =0
5823 030250 004767 151672      JSR     R7,DATVER
5824 030254 005767 150560      TST     COUNT
5825 030260 001403                BEQ     1#
5826 030262 104000                ERROR
5827 030264 000424                .WORD  424
5828 030266 002013                .WORD  FPPERR
5829
5830 030270 170202                1#:    STFPS   R2      ;RECDST NOT CLEARED
5831 030272 020227 000204      CMP     R2,#204       ;SAVE STATUS
5832 030276 001403                BEQ     2#           ;VERIFY STATUS
5833 030300 104000                ERROR
5834 030302 000425                .WORD  425
5835 030304 002013                .WORD  FPPERR
5836
5837 030306                2#:
5838
5839
5840 030306                MCLRI:
5841
5842                ;*****
5843                ;*TEST 73      TEST CLRD, ILLEGAL ACCUMULATOR
5844                ;*****
5845                TST73:
5846 030306 005267 150472      INC     #TESTN        ;INCREMENT TEST NUMBER
5847 030312 012704 040200      MOV     #40200,R4    ;DISABLE INTERRUPTS
5848 030316 170104                LDFPS  R4
5849 030320 170406                CLRD   R6
5850 030322 170203                STFPS  R3
5851 030324 170305                STST   R5
5852 030326 022703 140200      CMP     #140200,R3   ;LOAD STATUS
5853 030332 001403                BEQ     1#           ;*TEST INSTRUCTION WITH ILLEGAL ACC
5854 030334 104000                ERROR
5855 030336 000426                .WORD  426
5856 030340 002013                .WORD  FPPERR
5857
5858 030342 022705 000002      1#:    CMP     #2,R5        ;SAVE STATUS
5859 030346 001403                BEQ     2#           ;SAVE FEC
5860 030350 104000                ERROR
5861 030352 000427                .WORD  427
5862 030354 002013                .WORD  FPPERR
5863
5864                2#:
5865
5866 030356                MCLSI:
5867                ;*****
5868                ;*TEST 74      TEST LDFPS, STFPS MODE 1
5869                ;*****
5870 030356                TST74:

```

```

5871 030356 005267 150422          INC      #TESTN          ;INCREMENT TEST NUMBER
5872 030362 012704 001136          MOV      @TSTLOC,R4     ;POINT R4 TO RAM
5873 030366 012714 147757          MOV      @147757,(R4)  ;SETUP EXPECTED STATUS
5874 030372 012701 001116          MOV      @RECST,R1     ;SET BUFFER FOR RECEIVED STATUS
5875 030376 012737 030462 000244  MOV      @108,@FPVEC   ;SETUP TRAP VECTOR
5876 030404 170114                    LDFPS   (R4)           ;*TEST INSTRUCTION
5877 030406 170211                    STFPS   (R1)           ;*TEST INSTRUCTION
5878 030410 020427 001136          CMP      R4,@TSTLOC    ;VERIFY R4
5879 030414 001403                    BEQ     1#             ;BRANCH IF GOOD
5880 030416 104000                    ERROR   1#             ;ALL ERRORS TO TRAP TO EMT VECTOR
5881 030420 000430                    .WORD  430             ;UNIQUE ERROR NUMBER
5882 030422 002013                    .WORD  FPPERR          ;ADDRESS OF ERROR MESSAGE
5883
5884 030424 020127 001116          1# :    CMP      R1,@RECST          ;VERIFY R1
5885 030430 001403                    BEQ     2#             ;BRANCH IF GOOD
5886 030432 104000                    ERROR   2#             ;ALL ERRORS TO TRAP TO EMT VECTOR
5887 030434 000431                    .WORD  431             ;UNIQUE ERROR NUMBER
5888 030436 002013                    .WORD  FPPERR          ;ADDRESS OF ERROR MESSAGE
5889
5890 030440 023727 001116 147757 2# :    CMP      @@RECST,@147757 ;BAD R1
5891 030446 001412                    BEQ     3#             ;VERIFY STATUS
5892 030450 104000                    ERROR   3#             ;BRANCH IF GOOD
5893 030452 000432                    .WORD  432             ;ALL ERRORS TO TRAP TO EMT VECTOR
5894 030454 002013                    .WORD  FPPERR          ;UNIQUE ERROR NUMBER
5895
5896 030456 000167 000012          JMP      3#             ;ADDRESS OF ERROR MESSAGE
5897
5898 030462 012600          10# :    ;UNEXPECTED TRAP
5899 030464 012605          10# :    MOV      (SP),R0          ;SAVE PC
5900 030466 104000          10# :    MOV      (SP),R5          ;SAVE PS
5901 030470 000433                    ERROR   4#             ;ALL ERRORS TO TRAP TO EMT VECTOR
5902 030472 002013                    .WORD  433             ;UNIQUE ERROR NUMBER
5903
5904 030474          3# :    ;UNEXPECTED TRAP
5905
5906
5907 030474          ;UNEXPECTED TRAP
5908
5909          ;UNEXPECTED TRAP
5910
5911 030474          ;UNEXPECTED TRAP
5912 030474 005267 150304          ;UNEXPECTED TRAP
5913 030500 012704 001136          ;UNEXPECTED TRAP
5914 030504 012714 145557          ;UNEXPECTED TRAP
5915 030510 012701 001116          ;UNEXPECTED TRAP
5916 030514 012737 030600 000244  MOV      @108,@FPVEC   ;SETUP TRAP VECTOR
5917 030522 170124                    LDFPS   (R4)           ;*TEST INSTRUCTION
5918 030524 170221                    STFPS   (R1)           ;*TEST INSTRUCTION
5919 030526 020427 001140          CMP      R4,@TSTLOC*2  ;VERIFY R4
5920 030532 001403                    BEQ     1#             ;BRANCH IF GOOD
5921 030534 104000                    ERROR   1#             ;ALL ERRORS TO TRAP TO EMT VECTOR
5922 030536 000434                    .WORD  434             ;UNIQUE ERROR NUMBER
5923 030540 002013                    .WORD  FPPERR          ;ADDRESS OF ERROR MESSAGE
5924
5925 030542 020127 001120          1# :    CMP      R1,@RECST*2          ;VERIFY R1
5926 030546 001403                    BEQ     2#             ;BRANCH IF GOOD

```



```

5927 030550 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
5928 030552 000435          .WORD 435          ;UNIQUE ERROR NUMBER
5929 030554 002013          .WORD FPPERR        ;ADDRESS OF ERROR MESSAGE
5930
5931 030556 023727 001116 145557 21:  CMP 8*RECST,0145557 ;BAD R1 ;VERIFY STATUS
5932 030564 001412          BEQ 31              ;BRANCH F GOOD
5933 030566 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
5934 030570 000436          .WORD 436          ;UNIQUE ERROR NUMBER
5935 030572 002013          .WORD FPPERR        ;ADDRESS OF ERROR MESSAGE
5936
5937 030574 000167 000012          JMP 31              ;BAD STATUS\ ;GET OVER TRAP
5938
5939 030600 012600          ;UNEXPECTED TRAP
101: MOV (SP)+,R0          ;SAVE PC
5940 030602 012605          MOV (SP)+,R5        ;SAVE P5
5941 030604 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
5942 030606 000437          .WORD 437          ;UNIQUE ERROR NUMBER
5943 030610 002013          .WORD FPPERR        ;ADDRESS OF ERROR MESSAGE
5944
5945 030612          31:                ;UNEXPECTED TRAP
5946
5947
5948 030612          MLS3:
5949          ;*****
5950          ;*TEST 76 TEST LDFPS, STFPS MODE 3
5951          ;*****
5952 030612          TST76:
5953 030612 005267 150166          INC 1*TESTN          ;INCREMENT TEST NUMBER
5954 030616 012704 001136          MOV 0*TSTLOC,R4      ;POINT R4 TO RAM
5955 030622 012737 001142 001136          MOV 0*TSTLOC+4,0*TSTLOC ;TSTLOC= DEFERRED ADDRESS
5956 030630 012737 147501 001142          MOV 0147501,0*TSTLOC+4 ;SETUP EXPECTED STATUS
5957 030636 012701 001146          MOV 0*TSTLOC+10,R1   ;R1 POINTS TO TSTLOC+10
5958 030642 012737 001116 001146          MOV 0*RECST,0*TSTLOC+10 ;SET DEFERRED BUFFER FOR RECEIVED STATUS
5959 030650 012737 030734 000244          MOV 0100,0*FPVcC     ;SETUP TRAP VECTOR
5960 030656 170134          LDFPS 0(R4)+         ;*TEST INSTRUCTION
5961 030660 170231          STFPS 0(R1)+         ;*TEST INSTRUCTION
5962 030662 020427 001140          CMP R4,0*TSTLOC+2    ;VERIFY R4
5963 030666 001403          BEQ 11              ;BRANCH IF GOOD
5964 030670 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
5965 030672 000440          .WORD 440          ;UNIQUE ERROR NUMBER
5966 030674 002013          .WORD FPPERR        ;ADDRESS OF ERROR MESSAGE
5967
5968 030676 020127 001150          11:  CMP R1,0*TSTLOC+12    ;VERIFY R1
5969 030702 001403          BEQ 21              ;BRANCH IF GOOD
5970 030704 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
5971 030706 000441          .WORD 441          ;UNIQUE ERROR NUMBER
5972 030710 002013          .WORD FPPERR        ;ADDRESS OF ERROR MESSAGE
5973
5974 030712 023727 001116 147501 21:  CMP 8*RECST,0147501 ;BAD R1 ;VERIFY STATUS
5975 030720 001412          BEQ 31              ;BRANCH F GOOD
5976 030722 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
5977 030724 000442          .WORD 442          ;UNIQUE ERROR NUMBER
5978 030726 002013          .WORD FPPERR        ;ADDRESS OF ERROR MESSAGE
5979
5980 030730 000167 000012          JMP 31              ;BAD STATUS\ ;GET OVER TRAP
5981
5982 030734 012600          ;UNEXPECTED TRAP
101: MOV (SP)+,R0          ;SAVE PC
    
```

```

5983 030736 012605          MOV      (SP)+,R5          ;SAVE PS
5984 030740 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
5985 030742 000443          .WORD      443          ;UNIQUE ERROR NUMBER
5986 030744 002013          .WORD      FPPERR       ;ADDRESS OF ERROR MESSAGE
5987                                     ;UNEXPECTED TRAP
5988 030746                                     3$:
5989
5990
5991 030746                                     MLS4:
5992                                     ;*****
5993                                     ;*TEST 77      TEST LDFPS, STFPS MODE 4
5994                                     ;*****
5995                                     TST77:
5996 030746 005267 150032          INC      #TESTN          ;INCREMENT TEST NUMBER
5997 030752 012704 001140          MOV      #TSTLOC+2,R4   ;POINT R4 TO RAM
5998 030756 012737 147757 001136          MOV      #147757,#TSTLOC ;TSTLOC= STATUS ADDRESS
5999 030764 012701 001120          MOV      #RECST+2,R1   ;SET BUFFER FOR RECEIVED STATUS
6000 030770 012737 031054 000244          MOV      #10,#FPPVEC   ;SETUP TRAP VECTOR
6001 030776 170144          LDFPS   -(R4)          ;*TEST INSTRUCTION
6002 031000 170241          STFPS   -(R1)          ;*TEST INSTRUCTION
6003 031002 020427 001136          CMP      R4,#TSTLOC    ;VERIFY R4
6004 031006 001403          BEQ     1$            ;BRANCH IF GOOD
6005 031010 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6006 031012 000444          .WORD      444          ;UNIQUE ERROR NUMBER
6007 031014 002013          .WORD      FPPERR       ;ADDRESS OF ERROR MESSAGE
6008
6009 031016 020127 001116          1$:  CMP      R1,#RECST    ;VERIFY R1
6010 031022 001403          BEQ     2$            ;BRANCH IF GOOD
6011 031024 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6012 031026 000445          .WORD      445          ;UNIQUE ERROR NUMBER
6013 031030 002013          .WORD      FPPERR       ;ADDRESS OF ERROR MESSAGE
6014
6015 031032 023727 001116 147757 2$:  CMP      #RECST,#147757 ;BAD R1 ;VERIFY STATUS
6016 031040 001412          BEQ     3$            ;BRANCH IF GOOD
6017 031042 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6018 031044 000446          .WORD      446          ;UNIQUE ERROR NUMBER
6019 031046 002013          .WORD      FPPERR       ;ADDRESS OF ERROR MESSAGE
6020                                     ;BAD STATUS\
6021 031050 000167 000012          JMP      3$            ;GET OVER TRAP
6022                                     ;UNEXPECTED TRAP
6023 031054 012600          10$: MOV      (SP)+,R0          ;SAVE PC
6024 031056 012605          MOV      (SP)+,R5          ;SAVE PS
6025 031060 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6026 031062 000447          .WORD      447          ;UNIQUE ERROR NUMBER
6027 031064 002013          .WORD      FPPERR       ;ADDRESS OF ERROR MESSAGE
6028                                     ;UNEXPECTED TRAP
6029 031066                                     3$:
6030
6031
6032 031066                                     MLS5:
6033                                     ;*****
6034                                     ;*TEST 100     TEST LDFPS, STFPS MODE 5
6035                                     ;*****
6036 031066                                     TST100:
6037 031066 005267 147712          INC      #TESTN          ;INCREMENT TEST NUMBER
6038 031072 012704 001140          MOV      #TSTLOC+2,R4   ;POINT R4 TO RAM
    
```

LS

```

6039 031076 012737 001142 001136 MOV    #TSTLOC+4,#TSTLOC ;TSTLOC= DEFERRED ADDRESS
6040 031104 012737 147501 001142 MOV    #147501,#TSTLOC+4 ;SETUP EXPECTED STATUS
6041 031112 012701 001150 MOV    #TSTLOC+12,R1 ;R1 POINTS TO 412
6042 031116 012737 001116 001146 MOV    #RECST,#TSTLOC+10 ;SET DEFERRED BUFFER FOR RECEIVED STATUS
6043 031124 012737 031210 000244 MOV    #10#,#FPVEC ;SETUP TRAP VECTOR
6044 031132 170154 LDFPS  #-(R4) ;*TEST INSTRUCTION
6045 031134 170251 STFPS  #-(R1) ;*TEST INSTRUCTION
6046 031136 020427 001136 CMP    R4,#TSTLOC ;VERIFY R4
6047 031142 001403 BEQ    1# ;BRANCH IF GOOD
6048 031144 104000 ERROR  ;ALL ERRORS TO TRAP TO EMT VECTOR
6049 031146 000450 .WORD 450 ;UNIQUE ERROR NUMBER
6050 031150 002013 .WORD  FPPERR ;ADDRESS OF ERROR MESSAGE
6051
6052 031152 020127 001146 1# : CMP    R1,#TSTLOC+10 ;VERIFY R1
6053 031156 001403 BEQ    2# ;BRANCH IF GOOD
6054 031160 104000 ERROR  ;ALL ERRORS TO TRAP TO EMT VECTOR
6055 031162 000451 .WORD 451 ;UNIQUE ERROR NUMBER
6056 031164 002013 .WORD  FPPERR ;ADDRESS OF ERROR MESSAGE
6057
6058 031166 023727 001116 147501 2# : CMP    #RECST,#147501 ;BAD R1
6059 031174 001412 BEQ    3# ;BRANCH IF GOOD
6060 031176 104000 ERROR  ;ALL ERRORS TO TRAP TO EMT VECTOR
6061 031200 000452 .WORD 452 ;UNIQUE ERROR NUMBER
6062 031202 002013 .WORD  FPPERR ;ADDRESS OF ERROR MESSAGE
6063
6064 031204 000167 000012 JMP    3# ;BAD STATUS\
6065 ;UNEXPECTED TRAP ;GET OVER TRAP
6066 031210 012600 10# : MOV    (SP)+,R0 ;SAVE PC
6067 031212 012605 MOV    (SP)+,R5 ;SAVE PS
6068 031214 104000 ERROR  ;ALL ERRORS TO TRAP TO EMT VECTOR
6069 031216 000453 .WORD 453 ;UNIQUE ERROR NUMBER
6070 031220 002013 .WORD  FPPERR ;ADDRESS OF ERROR MESSAGE
6071
6072 031222 3# : ;UNEXPECTED TRAP
6073
6074
6075 031222
6076
6077
6078
6079 031222
6080 031222 005267 147556
6081 031226 012704 001136
6082 031232 012737 140001 001142
6083 031240 012701 001246
6084 031244 012737 031334 000244
6085 031252 170164 000004
6086 031256 170261 177700
6087 031262 020427 001136
6088 031266 001403
6089 031270 104000
6090 031272 000454
6091 031274 002013
6092
6093 031276 020127 001246 1# : CMP    R1,#TSTLOC+110 ;VERIFY R1
6094 031302 001403 BEQ    2# ;BRANCH IF GOOD
    
```

```

MLS6:
;*****
;*TEST 101 TEST LDFPS, STFPS MODE 6
;*****
TST101:
    
```

119

```

6095 031304 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6096 031306 000455          .WORD      455          ;UNIQUE ERROR NUMBER
6097 031310 002013          .WORD      FPPERR       ;ADDRESS OF ERROR MESSAGE
6098                                     ;BAD R1
6099 031312 023727 001146 140001 2#: CMP      @TSTLOC+10,@140001 ;VERIFY STATUS
6100 031320 001412          BEQ      3#             ;BRANCH F GOOD
6101 031322 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6102 031324 000456          .WORD      456          ;UNIQUE ERROR NUMBER
6103 031326 002013          .WORD      FPPERR       ;ADDRESS OF ERROR MESSAGE
6104                                     ;BAD STATUS\
6105 031330 000167 000012          JMP      3#             ;GET OVER TRAP
6106                                     ;UNEXPECTED TRAP
6107 031334 012600          10#: MOV      (SP)+,R0          ;SAVE PC
6108 031336 012605          MOV      (SP)+,R5          ;SAVE PS
6109 031340 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6110 031342 000457          .WORD      457          ;UNIQUE ERROR NUMBER
6111 031344 002013          .WORD      FPPERR       ;ADDRESS OF ERROR MESSAGE
6112                                     ;UNEXPECTED TRAP
6113 031346          3#:
6114
6115
6116 031346          MLS7:
6117          ;*****
6118          ;*TEST 102      TEST LDFPS, STFPS MODE 7
6119          ;*****
6120          TST102:
6121 031346 005267 147432          INC      #TESTN          ;INCREMENT TEST NUMBER
6122 031352 012704 001236          MOV      @TSTLOC+100,R4   ;POINT R4 TO RAM
6123 031356 012737 001142 001136          MOV      @TSTLOC+4,@TSTLCC ;TSTLOC= DEFERRED ADDRESS
6124 031364 012737 145501 001142          MOV      @145501,@TSTLOC+4 ;SETUP EXPECTED STATUS
6125 031372 012701 001046          MOV      @TSTLOC-70,R1   ;R1 POINTS TO TSTLOC+10
6126 031376 012737 001146 001140          MOV      @TSTLOC+10,@TSTLOC+2 ;
6127 031404 012737 031474 000244          MOV      @10,@FPVEC      ;SETUP TRAP VECTOR
6128 031412 170174 177700          LDFPS   @-100(R4)        ;*TEST INSTRUCTION
6129 031416 170271 000072          STFPS   @72(R1)         ;*TEST INSTRUCTION
6130 031422 020427 001236          CMP      R4,@TSTLOC+100  ;VERIFY R4
6131 031426 001403          BEQ      1#             ;BRANCH IF GOOD
6132 031430 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6133 031432 000460          .WORD      460          ;UNIQUE ERROR NUMBER
6134 031434 002013          .WORD      FPPERR       ;ADDRESS OF ERROR MESSAGE
6135
6136 031436 020127 001046          1#: CMP      R1,@TSTLOC-70 ;VERIFY R1
6137 031442 001403          BEQ      2#             ;BRANCH IF GOOD
6138 031444 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6139 031446 000461          .WORD      461          ;UNIQUE ERROR NUMBER
6140 031450 002013          .WORD      FPPERR       ;ADDRESS OF ERROR MESSAGE
6141                                     ;BAD R1
6142 031452 023727 001146 145501 2#: CMP      @TSTLOC+10,@145501 ;VERIFY STATUS
6143 031460 001412          BEQ      3#             ;BRANCH F GOOD
6144 031462 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
6145 031464 000462          .WORD      462          ;UNIQUE ERROR NUMBER
6146 031466 002013          .WORD      FPPERR       ;ADDRESS OF ERROR MESSAGE
6147                                     ;BAD STATUS\
6148 031470 000167 000012          JMP      3#             ;GET OVER TRAP
6149                                     ;UNEXPECTED TRAP
6150 031474 012600          10#: MOV      (SP)+,R0          ;SAVE PC
    
```

```

6151 031476 012605          MOV      (SP)+,R5          ;SAVE PS
6152 031500 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
6153 031502 000463          .WORD    463             ;UNIQUE ERROR NUMBER
6154 031504 002013          .WORD    FPPERR         ;ADDRESS OF ERROR MESSAGE
6155                                     ;UNEXPECTED TRAP
6156 031506                 3$:
6157
6158
6159 031506                 MLDC2:
6160                                     ;*****
6161                                     ;*TEST 103      TEST LDCLD MODE 27
6162                                     ;*****
6163 031506                 TST103:
6164 031506 005267 147272          INC      #TESTN          ;INCREMENT TEST NUMBER
6165 031512 005001          CLR      R1              ;INIT R1
6166 031514 012704 007700          MOV      #7700,R4        ;FPS=DOUBLE, LONG
6167 031520 170104          LDFPS   R4              ;
6168 031522 012737 031562 000244          MOV      #10#,R0#FPVEC  ;SETUP WILD TRAP
6169 031530 177027          LDCLD  (R7)+,ACO        ;*TEST INSTRUCTION
6170 031532 005201          INC      R1              ;
6171 031534 005201          INC      R1              ;
6172 031536 005201          INC      R1              ;
6173 031540 005201          INC      R1              ;
6174 031542 020127 000003          CMP      R1,#3          ;VERIFY
6175 031546 001412          BEQ     1$              ;BRANCH IF GOOD
6176 031550 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
6177 031552 000464          .WORD    464             ;UNIQUE ERROR NUMBER
6178 031554 002013          .WORD    FPPERR         ;ADDRESS OF ERROR MESSAGE
6179                                     ;INSTRUCTION FAILED
6180 031556 000167 000012          JMP     1$              ;JUMP OVER WILD TRAP
6181 031562 012600          10$:  MOV      (SP)+,R0        ;SAVE PC
6182 031564 012605          MOV      (SP)+,R5        ;SAVE PS
6183 031566 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
6184 031570 000465          .WORD    465             ;UNIQUE ERROR NUMBER
6185 031572 002013          .WORD    FPPERR         ;ADDRESS OF ERROR MESSAGE
6186                                     ;WILD TRAP ON INSTRUCTION
6187 031574 012704 001266          1$:  MOV      #TAB6A,R4        ;POINT TO EXPECTED DATA
6188 031600 012701 001126          MOV      #RECDST,R1      ;POINT TO DATA BUFFER
6189 031604 174011          STD     ACO,(R1)         ;VERIFY DATA
6190 031606 004767 150334          JSR     R7,DATVER        ;
6191 031612 005767 147222          TST     COUNT           ;
6192 031616 001403          BEQ     2$              ;BRANCH IF GOOD DATA
6193 031620 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
6194 031622 000466          .WORD    466             ;UNIQUE ERROR NUMBER
6195 031624 002013          .WORD    FPPERR         ;ADDRESS OF ERROR MESSAGE
6196                                     ;BAD DATA
6197 031626                 2$:
6198
6199
6200
6201 031626                 MLCF:
6202                                     ;*****
6203                                     ;*TEST 104      TEST LDCIF, LDCLF
6204                                     ;*****
6205 031626                 TST104:
6206 031626 005267 147152          INC      #TESTN          ;INCREMENT TEST NUMBER
    
```

|      |        |        |        |               |               |            |         |
|------|--------|--------|--------|---------------|---------------|------------|---------|
| 6207 |        |        |        | 1/INT=0       |               |            |         |
| 6208 | 031632 | 004767 | 000500 | JSR           | R7,LCFSUB     |            | DO TEST |
| 6209 | 031636 | 000000 | 000100 | .WORD         | 0,0           | FSRC       |         |
| 6210 | 031642 | 000000 | 000000 | .WORD         | 0,0           | RESULT     |         |
| 6211 | 031646 | 000000 |        | .WORD         | 0             | TEST FPS   |         |
| 6212 | 031650 | 000004 |        | .WORD         | 4             | RESULT FPS |         |
| 6213 |        |        |        | 2/INT=0,-1    |               |            |         |
| 6214 | 031652 | 004767 | 000460 | JSR           | R7,LCFSUB     |            | DO TEST |
| 6215 | 031656 | 000000 | 177777 | .WORD         | 0,1           | FSRC       |         |
| 6216 | 031662 | 000000 | 000000 | .WORD         | 0,0           | RESULT     |         |
| 6217 | 031666 | 007440 |        | .WORD         | 7440          | TEST FPS   |         |
| 6218 | 031670 | 007444 |        | .WORD         | 7444          | RESULT FPS |         |
| 6219 |        |        |        | 3/LONG=0      |               |            |         |
| 6220 | 031672 | 004767 | 000440 | JSR           | R7,LCFSUB     |            | DO TEST |
| 6221 | 031676 | 000000 | 000000 | .WORD         | 0,0           | FSRC       |         |
| 6222 | 031702 | 000000 | 000000 | .WORD         | 0,0           | RESULT     |         |
| 6223 | 031706 | 000100 |        | .WORD         | 100           | TEST FPS   |         |
| 6224 | 031710 | 000104 |        | .WORD         | 104           | RESULT FPS |         |
| 6225 |        |        |        | 4/INT=40000   |               |            |         |
| 6226 | 031712 | 004767 | 000420 | JSR           | R7,LCFSUB     |            | DO TEST |
| 6227 | 031716 | 040000 | 000000 | .WORD         | 40000,0       | FSRC       |         |
| 6228 | 031722 | 043600 | 000000 | .WORD         | 43600,0       | RESULT     |         |
| 6229 | 031726 | 000017 |        | .WORD         | 17            | TEST FPS   |         |
| 6230 | 031730 | 000000 |        | .WORD         | 0             | RESULT FPS |         |
| 6231 |        |        |        | 5/LONG=1      |               |            |         |
| 6232 | 031732 | 004767 | 000400 | JSR           | R7,LCFSUB     |            | DO TEST |
| 6233 | 031736 | 000000 | 000001 | .WORD         | 0,1           | FSRC       |         |
| 6234 | 031742 | 040200 | 000000 | .WORD         | 40200,0       | RESULT     |         |
| 6235 | 031746 | 000117 |        | .WORD         | 117           | TEST FPS   |         |
| 6236 | 031750 | 000100 |        | .WORD         | 100           | RESULT FPS |         |
| 6237 |        |        |        | 6/INT=PATTERN |               |            |         |
| 6238 | 031752 | 004767 | 000360 | JSR           | R7,LCFSUB     |            | DO TEST |
| 6239 | 031756 | 000252 | 025252 | .WORD         | 252,25252     | FSRC       |         |
| 6240 | 031762 | 042052 | 000000 | .WORD         | 42052,0       | RESULT     |         |
| 6241 | 031766 | 000000 |        | .WORD         | 0             | TEST FPS   |         |
| 6242 | 031770 | 000000 |        | .WORD         | 0             | RESULT FPS |         |
| 6243 |        |        |        | 7/INT=-40000  |               |            |         |
| 6244 | 031772 | 004767 | 000340 | JSR           | R7,LCFSUB     |            | DO TEST |
| 6245 | 031776 | 140000 | 000000 | .WORD         | -40000,0      | FSRC       |         |
| 6246 | 032002 | 143600 | 000000 | .WORD         | 143600,0      | RESULT     |         |
| 6247 | 032006 | 000007 |        | .WORD         | 7             | TEST FPS   |         |
| 6248 | 032010 | 000010 |        | .WORD         | 10            | RESULT FPS |         |
| 6249 |        |        |        | 8/INT=-1      |               |            |         |
| 6250 | 032012 | 004767 | 000320 | JSR           | R7,LCFSUB     |            | DO TEST |
| 6251 | 032016 | 177777 | 000000 | .WORD         | -1,0          | FSRC       |         |
| 6252 | 032022 | 140200 | 000000 | .WORD         | 140200,0      | RESULT     |         |
| 6253 | 032026 | 000007 |        | .WORD         | 7             | TEST FPS   |         |
| 6254 | 032030 | 000010 |        | .WORD         | 10            | RESULT FPS |         |
| 6255 |        |        |        | 9/INT=PATTERN |               |            |         |
| 6256 | 032032 | 004767 | 000300 | JSR           | R7,LCFSUB     |            | DO TEST |
| 6257 | 032036 | 125252 | 125252 | .WORD         | 125252,125252 | FSRC       |         |
| 6258 | 032042 | 143652 | 126000 | .WORD         | 143652,126000 | RESULT     |         |
| 6259 | 032046 | 000007 |        | .WORD         | 7             | TEST FPS   |         |
| 6260 | 032050 | 000010 |        | .WORD         | 10            | RESULT FPS |         |
| 6261 |        |        |        | 10/LONG=40000 |               |            |         |
| 6262 | 032052 | 004767 | 000260 | JSR           | R7,LCFSUB     |            | DO TEST |

|      |        |        |        |                               |               |             |
|------|--------|--------|--------|-------------------------------|---------------|-------------|
| 6263 | 032056 | 040000 | 000000 | .WORD                         | 40000,0       | ;FSRC       |
| 6264 | 032062 | 047600 | 000000 | .WORD                         | 47600,0       | ;RESULT     |
| 6265 | 032066 | 000117 |        | .WORD                         | 117           | ;TEST FPS   |
| 6266 | 032070 | 000100 |        | .WORD                         | 100           | ;RESULT FPS |
| 6267 |        |        |        | ;11/LONG=1                    |               |             |
| 6268 | 032072 | 004767 | 000240 | JSR                           | R7,LCFSUB     | ;DO TEST    |
| 6269 | 032076 | 000000 | 000001 | .WORD                         | 0,1           | ;FSRC       |
| 6270 | 032102 | 040200 | 000000 | .WORD                         | 40200,0       | ;RESULT     |
| 6271 | 032106 | 007557 |        | .WORD                         | 7557          | ;TEST FPS   |
| 6272 | 032110 | 007540 |        | .WORD                         | 7540          | ;RESULT FPS |
| 6273 |        |        |        | ;12/LONG=PATTERN              |               |             |
| 6274 | 032112 | 004767 | 000220 | JSR                           | R7,LCFSUB     | ;DO TEST    |
| 6275 | 032116 | 000000 | 000252 | .WORD                         | 0,252         | ;FSRC       |
| 6276 | 032122 | 042052 | 000000 | .WORD                         | 42052,0       | ;RESULT     |
| 6277 | 032126 | 007557 |        | .WORD                         | 7557          | ;TEST FPS   |
| 6278 | 032130 | 007540 |        | .WORD                         | 7540          | ;RESULT FPS |
| 6279 |        |        |        | ;13/LONG = -40000             |               |             |
| 6280 | 032132 | 004767 | 000200 | JSR                           | R7,LCFSUB     | ;DO TEST    |
| 6281 | 032136 | 140000 | 000000 | .WORD                         | -40000,0      | ;FSRC       |
| 6282 | 032142 | 147600 | 000000 | .WORD                         | 147600,0      | ;RESULT     |
| 6283 | 032146 | 000107 |        | .WORD                         | 107           | ;TEST FPS   |
| 6284 | 032150 | 000110 |        | .WORD                         | 110           | ;RESULT FPS |
| 6285 |        |        |        | ;14/LONG=-1                   |               |             |
| 6286 | 032152 | 004767 | 000160 | JSR                           | R7,LCFSUB     | ;DO TEST    |
| 6287 | 032156 | 177777 | 177777 | .WORD                         | -1,-1         | ;FSRC       |
| 6288 | 032162 | 140200 | 000000 | .WORD                         | 140200,0      | ;RESULT     |
| 6289 | 032166 | 007500 |        | .WORD                         | 7500          | ;TEST FPS   |
| 6290 | 032170 | 007510 |        | .WORD                         | 7510          | ;RESULT FPS |
| 6291 |        |        |        | ;15/LONG=PATTERN              |               |             |
| 6292 | 032172 | 004767 | 000140 | JSR                           | R7,LCFSUB     | ;DO TEST    |
| 6293 | 032176 | 125252 | 125252 | .WORD                         | 125252,125252 | ;FSRC       |
| 6294 | 032202 | 147652 | 125253 | .WORD                         | 147652,125253 | ;RESULT     |
| 6295 | 032206 | 000105 |        | .WORD                         | 105           | ;TEST FPS   |
| 6296 | 032210 | 000110 |        | .WORD                         | 110           | ;RESULT FPS |
| 6297 |        |        |        | ;16/LONG=77777,177500         |               |             |
| 6298 | 032212 | 004767 | 000120 | JSR                           | R7,LCFSUB     | ;DO TEST    |
| 6299 | 032216 | 077777 | 177500 | .WORD                         | 77777,177500  | ;FSRC       |
| 6300 | 032222 | 047777 | 177777 | .WORD                         | 47777,177777  | ;RESULT     |
| 6301 | 032226 | 000117 |        | .WORD                         | 117           | ;TEST FPS   |
| 6302 | 032230 | 000100 |        | .WORD                         | 100           | ;RESULT FPS |
| 6303 |        |        |        | ;17/LONG=40000,100            |               |             |
| 6304 | 032232 | 004767 | 000100 | JSR                           | R7,LCFSUB     | ;DO TEST    |
| 6305 | 032236 | 040000 | 000100 | .WORD                         | 40000,100     | ;FSRC       |
| 6306 | 032242 | 047600 | 000001 | .WORD                         | 47600,1       | ;RESULT     |
| 6307 | 032246 | 007502 |        | .WORD                         | 7502          | ;TEST FPS   |
| 6308 | 032250 | 007500 |        | .WORD                         | 7500          | ;RESULT FPS |
| 6309 |        |        |        | ;18/LONG=40000,100 - TRUNCATE |               |             |
| 6310 | 032252 | 004767 | 000060 | JSR                           | R7,LCFSUB     | ;DO TEST    |
| 6311 | 032256 | 040000 | 000100 | .WORD                         | 40000,100     | ;FSRC       |
| 6312 | 032262 | 047600 | 000000 | .WORD                         | 47600,0       | ;RESULT     |
| 6313 | 032266 | 007557 |        | .WORD                         | 7557          | ;TEST FPS   |
| 6314 | 032270 | 007540 |        | .WORD                         | 7540          | ;RESULT FPS |
| 6315 |        |        |        | ;19/INT= MOST NEGATIVE        |               |             |
| 6316 | 032272 | 004767 | 000040 | JSR                           | R7,LCFSUB     | ;DO TEST    |
| 6317 | 032276 | 100000 | 000000 | .WORD                         | 100000,0      | ;FSRC       |
| 6318 | 032302 | 144000 | 000000 | .WORD                         | 144000,0      | ;RESULT     |

```

6319 032306 000007          .WORD 7          ; TEST FPS
6320 032310 000010          .WORD 10         ; RESULT FPS
6321          ;20/LONG= MOST NEGATIVE
6322 032312 004767 000020    JSR R7,LCFSUB      ;DO TEST
6323 032316 100000 000000    .WORD 10000.0     ;FSRC
6324 032322 150000 000000    .WORD 15000.0     ;RESULT
6325 032326 000107          .WORD 107         ; TEST FPS
6326 032330 000110          .WORD 110         ; RESULT FPS
6327          ;
6328          ;
6329 032332 000167 000126    JMP HOP18          ;GET OVER SUBROUTINE
6330          ;
6331          ;
6332          ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
6333          ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
6334          ;LDCIF, LDCLF
6335          ;
6336          ; FSRC
6337          ; RESULT
6338          ; FPS BEFORE EXECUTION
6339          ; FPS AFTER EXECUTION
6340          ;
6341          ;NO TRAP CAN OCCUR
6342          ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
6343          ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
6344          ;
6345 032336 012602          LCFSUB: MOV (SP),R2 ; RETURN ADDRESS TO USE AS POINTER
6346 032340 012737 032446 000244 MOV #50,#FPVEC ; REDIRECT TRAP VECTOR
6347 032346 012701 001126 MOV @RECDST,R1 ; POINT TO RESULT AREA
6348 032352 016200 000010 MOV 10(R2),R0 ; GET TEST FPS
6349 032356 170100 LDFPS R0 ; LOAD TEST FPS
6350 032360 010204 MOV R2,R4 ; POINT TO TEST DATA
6351          ;
6352 032362 177014 40: LDCIF (R4),AC0 ; *TEST INSTRUCTION (ACCORDING TO MODE)
6353          ;
6354          ; VERIFY STATUS
6355 032364 170203 2: STFPS R3 ; SAVE FPS
6356 032366 012700 000200 MOV #200,R0 ; SET FPP STATUS TO DOUBLE
6357 032372 170100 LDFPS R0 ;
6358 032374 174011 STD AC0,(R1) ; SAVE TEST RESULT INTO RECDST
6359 032376 016200 000012 MOV 12(R2),R0 ; GET EXPECTED STATUS
6360 032402 020003 CMP R0,R3 ; VERIFY STATUS
6361 032404 001403 BEQ 3: ; BRANCH IF GOOD
6362 032406 104000 ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
6363 032410 000467 .WORD 467 ; UNIQUE ERROR NUMBER
6364 032412 002013 .WORD FPPERR ; ADDRESS OF ERROR MESSAGE
6365          ;
6366 032414 010204 3: MOV R2,R4 ;BAD FPS ; POINT TO EXPECTED DATA
6367 032416 062704 000004 ADD #4,R4
6368 032422 004767 147502 4: JSR R7,DATVFR ; VERIFY DATA
6369 032426 005767 146406 TST COUNT
6370 032432 001403 BEQ 5: ; BRANCH IF GOOD
6371 032434 104000 ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
6372 032436 000470 .WORD 470 ; UNIQUE ERROR NUMBER
6373 032440 002013 .WORD FPPERR ; ADDRESS OF ERROR MESSAGE
6374          ;BAD ACO

```



```

6375 032442 000162 000014 54: JMP 14(R2) ;RETURN FROM TEST
6376
6377 ;INSTRUCTION TRAPPED
6378 032446 012600 504: MOV (SP),R0 ;SAVE PC
6379 032450 012605 MOV (SP),R5 ;SAVE PS
6380 032452 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
6381 032454 000471 .WORD 471 ;UNIQUE ERROR NUMBER
6382 032456 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
6383 ;INSTRUCTION WASNT SUPPOSE TO TRAP
6384 032460 000167 177756 JMP 54 ;CONTINUE
6385 032464
6386
6387 032464
6388
6389
6390
6391 032464
6392 032464 005267 146314 HOP18:
6393 1/LONG=0 ;TEST105:
6394 032470 004767 000264 INC #TESTN ;INCREMENT TEST NUMBER
6395 032474 000000 000000 JSR R7,LCDSUB ;DO TEST
6396 032500 000000 000000 000000 .WORD 0,0 ;FSRC
6397 032506 000000 .WORD 0,0,0,0 ;RESULT
6398 032510 007313 .WORD 7313 ;TEST FPS
6399 032512 007304 .WORD 7304 ;RESULT FPS
6400
6401 032514 004767 000240 ;2/INT=0
6402 032520 000000 000001 JSR R7,LCDSUB ;DO TEST
6403 032524 040200 000000 000000 .WORD 0,1 ;FSRC
6404 032532 000000 .WORD 40200,0,0,0 ;RESULT
6405 032534 007757 .WORD 7757 ;TEST FPS
6406 032536 007740 .WORD 7740 ;RESULT FPS
6407
6408 032540 004767 000214 ;3/INT=40000
6409 032544 040000 177777 JSR R7,LCDSUB ;DO TEST
6410 032550 043600 000000 000000 .WORD 40000,-1 ;FSRC
6411 032556 000000 .WORD 43600,0,0,0 ;RESULT
6412 032560 007617 .WORD 7617 ;TEST FPS
6413 032562 007600 .WORD 7600 ;RESULT FPS
6414
6415 032564 004767 000170 ;4/INT=-40000
6416 032570 140000 177777 JSR R7,LCDSUB ;DO TEST
6417 032574 143600 000000 000000 .WORD -40000,-1 ;FSRC
6418 032602 000000 .WORD 143600,0,0,0 ;RESULT
6419 032604 007600 .WORD 7600 ;TEST FPS
6420 032606 007610 .WORD 7610 ;RESULT FPS
6421
6422 032610 004767 000144 ;5/LONG=40000
6423 032614 040000 000000 JSR R7,LCDSUB ;DO TEST
6424 032620 047600 000000 000000 .WORD 40000,0 ;FSRC
6425 032626 000000 .WORD 47600,0,0,0 ;RESULT
6426 032630 007757 .WORD 7757 ;TEST FPS
6427 032632 007740 .WORD 7740 ;RESULT FPS
6428
6429 032634 004767 000120 ;6/LONG=1
6430 032640 000000 000001 JSR R7,LCDSUB ;DO TEST
        .WORD 0,1 ;FSRC
    
```

```

6431 032644 040200 000000 000000 .WORD 40200,0,0,0 ;RESULT
6432 032652 000000
6433 032654 000300 .WORD 300 ;TEST FPS
6434 032656 000300 .WORD 300 ;RESULT FPS
6435 ;7/LONG=-2
6436 032660 004767 000074 JSR R7,LCDSUB ;DO TEST
6437 032664 177777 177776 .WORD -1,-2 ;FSRC
6438 032670 140400 000000 000000 .WORD 140400,0,0,0 ;RESULT
6439 032676 000000
6440 032700 007300 .WORD 7300 ;TEST FPS
6441 032702 007310 .WORD 7310 ;RESULT FPS
6442 ;8/INT=PATTERN
6443 032704 004767 000050 JSR R7,LCDSUB ;DO TEST
6444 032710 123456 176543 .WORD 123456,176543 ;FSRC
6445 032714 143661 122000 000000 .WORD 143661,122000,0,0 ;RESULT
6446 032722 000000
6447 032724 000200 .WORD 200 ;TEST FPS
6448 032726 000210 .WORD 210 ;RESULT FPS
6449 ;9/LONG=PATTERN
6450 032730 004767 000024 JSR R7,LCDSUB ;DO TEST
6451 032734 125252 125252 .WORD 125252,125252 ;FSRC
6452 032740 147652 125252 126000 .WORD 147652,125252,126000,0 ;RESULT
6453 032746 000000
6454 032750 000300 .WORD 300 ;TEST FPS
6455 032752 000310 .WORD 310 ;RESULT FPS
6456 ;
6457 ;
6458 ;
6459 032754 000167 000126 JMP MOP19 ;GET OVER SUBROUTINE
6460 ;
6461 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
6462 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
6463 ;LDCID, LDCLD
6464 ;
6465 ; FSRC
6466 ; RESULT
6467 ; FPS BEFORE EXECUTION
6468 ; FPS AFTER EXECUTION
6469 ;
6470 ;NO TRAP CAN OCCUR
6471 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
6472 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
6473 ;
6474 032760 012602 LCDSUB: MOV (SP)+,R2 ; RETURN ADDRESS TO USE AS POINTER
6475 032762 012737 033070 000244 MOV #50,0FFPVEC ;REDIRECT TRAP VECTOR
6476 032770 012701 001126 MOV @RECDST,R1 ;POINT TO RESULT AREA
6477 032774 016200 000014 MOV 14(R2),R0 ;GET TEST FPS
6478 033000 170100 LDFPS R0 ;LOAD TEST FPS
6479 033002 010204 MOV R2,R4 ;POINT TO TEST DATA
6480 ;
6481 033004 177014 40: LDCID (R4),AC0 ;TEST INSTRUCTION (ACCORDING TO MODE)
6482 ;
6483 ;VERIFY STATUS
6484 033006 170203 2: STFPS R3 ;SAVE FPS
6485 033010 012700 000200 MOV #200,R0 ;SET FPP STATUS TO DOUBLE
6486 033014 17C100 LDFPS R0 ;
    
```

```

6487 033016 174011          STD      ACO,(R1)          ;SAVE TEST RESULT INTO RECDST
6488 033020 016200 000016  MOV      16(R2),R0        ;GET EXPECTED STATUS
6489 033024 020003          CMP      R0,R3           ;VERIFY STATUS
6490 033026 001403          BEQ      3$              ;BRANCH IF GOOD
6491 033030 104000          ERROR                     ;ALL ERRORS TO TRAP TO EMT VECTOR
6492 033032 000472          .WORD   472             ;UNIQUE ERROR NUMBER
6493 033034 002013          .WORD   FPPERR          ;ADDRESS OF ERROR MESSAGE
6494
6495 033036 010204          3$:     MOV      R2,R4      ;BAD FPS ;POINT TO EXPECTED DATA
6496 033040 062704 000004  ADD      #4,R4
6497 033044 004767 147076  4$:     JSR      R7,DATVER ;VERIFY DATA
6498 033050 005767 145764  TST      COUNT
6499 033054 001403          BEQ      5$              ;BRANCH IF GOOD
6500 033056 104000          ERROR                     ;ALL ERRORS TO TRAP TO EMT VECTOR
6501 033060 000473          .WORD   473             ;UNIQUE ERROR NUMBER
6502 033062 002013          .WORD   FPPERR          ;ADDRESS OF ERROR MESSAGE
6503
6504 033064 000162 000020  5$:     JMP      20(R2)      ;BAD ACO ;RETURN FROM TEST
6505
6506          ;INSTRUCTION TRAPPED
6507 033070 012600          50$:   MOV      (SP)+,R0    ;SAVE PC
6508 033072 012605          MOV      (SP)+,R5    ;SAVE PS
6509 033074 104000          ERROR                     ;ALL ERRORS TO TRAP TO EMT VECTOR
6510 033076 000474          .WORD   474             ;UNIQUE ERROR NUMBER
6511 033100 002013          .WORD   FPPERR          ;ADDRESS OF ERROR MESSAGE
6512
6513 033102 000167 177756          JMP      5$              ;INSTRUCTION WASNT SUPPOSE TO TRAP
6514
6515 033106          ;CONTINUE
6516
6517 033106          ;
6518          MOP19:
6519
6520          MLXP:
6521          ;*****
6522          ;*TEST 106 EST LDEXP DOUBLE
6523          ;*****
6524          TST106:
6525          INC      $TESTN          ;INCREMENT TEST NUMBER
6526          ;1/EXP=10 - AC=NEG
6527          CLR      B$FLAG          ;NO INTERRUPTS
6528          JSR      R7,LXPSUB       ;DO TEST
6529          .WORD   123456,67012,25252,171717 ;AC0
6530          .WORD   10 ;EXP
6531          .WORD   142056,67012,25252,171717 ;RESULT
6532          .WORD   7757 ;TEST FPS
6533          .WORD   7750 ;RESULT FPS
6534          ;2/EXP=177 - ACO=POS
6535          CLR      B$FLAG          ;NO INTERRUPTS
6536          JSR      R7,LXPSUB       ;DO TEST
6537          .WORD   23456,70123,100000,1 ;AC0
6538          .WORD   177 ;EXP
6539          .WORD   77656,70123,100000,1 ;RESULT
6540          .WORD   7700 ;TEST FPS
6541          .WORD   7700 ;RESULT FPS
6542
    
```

```

6543                                     ;3/EXP=56
6544 033206 005037 001042                CLR      @#FLAG                ;NO INTERRUPTS
6545 033212 004767 001044                JSR      R7,LXPSUB            ;DO TEST
6546 033216 055555 044444 033333        .WORD   5555,44444,33333,22222 ;ACO
6547 033224 022222
6548 033226 000056                        .WORD   56                    ;EXP
6549 033230 053555 044444 033333        .WORD   53555,44444,33333,22222 ;RESULT
6550 033236 022222
6551 033240 007757                        .WORD   7757                  ; TEST FPS
6552 033242 007740                        .WORD   7740                  ;RESULT FPS
6553                                     ;4/EXP=-151, ACO=UV
6554 033244 005037 001042                CLR      @#FLAG                ;NO INTERRUPTS
6555 033250 004767 001006                JSR      R7,LXPSUB            ;DO TEST
6556 033254 100077 177777 177777        .WORD   100077,-1, 1,-2      ;ACO
6557 033262 177776
6558 033264 177623                        .WORD   -155                  ;EXP
6559 033266 104677 177777 177777        .WORD   104677,-1,-1,-2     ;RESULT
6560 033274 177776
6561 033276 007757                        .WORD   7757                  ; TEST FPS
6562 033300 007750                        .WORD   7750                  ;RESULT FPS
6563                                     ;5/EXP= 177
6564 033302 005037 001042                CLR      @#FLAG                ;NO INTERRUPTS
6565 033306 004767 000750                JSR      R7,LXPSUB            ;DO TEST
6566 033312 000177 177777 177777        .WORD   177,-1,-1,-2        ;ACO
6567 033320 177776
6568 033322 177601                        .WORD   -177                  ;EXP
6569 033324 000377 177777 177777        .WORD   377,-1,-1,-2        ;RESULT
6570 033332 177776
6571 033334 007700                        .WORD   7700                  ; TEST FPS
6572 033336 007700                        .WORD   7700                  ;RESULT FPS
6573                                     ;6/EXP=-200, UNDERFLOW
6574 033340 012737 000001 001042        MOV      #1,@#FLAG            ; INTERRUPTS
6575 033346 004767 000710                JSR      R7,LXPSUB            ;DO TEST
6576 033352 030131 032334 035363        .WORD   30131,32334,35363,73031 ;ACO
6577 033360 073031
6578 033362 177600                        .WORD   -200                  ;EXP
6579 033364 000131 032334 035363        .WORD   131,32334,35363,73031 ;RESULT
6580 033372 073031
6581 033374 007740                        .WORD   7740                  ; TEST FPS
6582 033376 107744                        .WORD   107744                ;RESULT FPS
6583 033400 000012                        .WORD   12                    ;FEC
6584                                     ;7/EXP=LARGEST NEGATIVE
6585 033402 012737 000001 001042        MOV      #1,@#FLAG            ;EXPECT INTERRUPTS
6586 033410 004767 000646                JSR      R7,LXPSUB            ;DO TEST
6587 033414 000000 000123 000456        .WORD   0,123,456,1         ;ACO
6588 033422 000001
6589 033424 100000                        .WORD   100000                ;EXP
6590 033426 040000 000123 000456        .WORD   40000,123,456,1     ;RESULT
6591 033434 000001
6592 033436 002200                        .WORD   2200                  ; TEST FPS
6593 033440 102200                        .WORD   102200                ;RESULT FPS
6594 033442 000012                        .WORD   12                    ;FEC
6595                                     ;8/EXP=-200, NEG. ACO
6596 033444 012737 000001 001042        MOV      #1,@#FLAG            ; INTERRUPTS
6597 033452 004767 000604                JSR      R7,LXPSUB            ;DO TEST
6598 033456 111111 100000 100000        .WORD   111111,100000,100000,-1 ;ACO
    
```

```

6599 033464 177777
6600 033466 177600
6601 033470 100111 100000 100000 .WORD 200 ;EXP
6602 033476 177777 .WORD 100111,100000,100000,1 ;RESULT
6603 033500 002217 .WORD 2217 ; TEST FPS
6604 033502 102214 .WORD 102214 ;RESULT FPS
6605 033504 000012 .WORD 12 ;FEC
6606 ;9/EXP= 1743, FIU=0
6607 033506 012737 000002 001042 MOV #2,B#FLAG ;NO INTERRUPTS
6608 033514 004767 000542 JSR R7,LXPSUB ;DO TEST
6609 033520 123456 012346 012346 .WORD :23456,12346,12346,123 ;ACO
6610 033526 000123
6611 033530 176035 .WORD 1743 ;EXP
6612 033532 000000 000000 000000 .WORD 0,0,0,0 ;RESULT
6613 033540 000000
6614 033542 005700 .WORD 5700 ; TEST FPS
6615 033544 005704 .WORD 5704 ;RESULT FPS
6616 033546 000012 .WORD 12 ;FEC
6617 ;10/EXP = -16616, FID=1
6618 033550 012737 000002 001042 MOV #2,B#FLAG ;NO INTERRUPTS
6619 033556 004767 000500 JSR R7,LXPSUB ;DO TEST
6620 033562 000377 123456 065432 .WORD 377,123456,65432,1 ;ACO
6621 033570 000001
6622 033572 161162 .WORD -16616 ;EXP
6623 033574 074577 123456 065432 .WORD 74577,123456,65432,1 ;RESULT
6624 033602 000001
6625 033604 047700 .WORD 47700 ; TEST FPS
6626 033606 147700 .WORD 147700 ;RESULT FPS
6627 033610 000012 .WORD 12 ;FEC
6628 ;11/EXP=177, ACO=UNDEFINED VARIABLE
6629 033612 005037 001042 CLR B#FLAG ;NO INTERRUPTS
6630 033616 004767 000440 JSR R7,LXPSUB ;DO TEST
6631 033622 100177 177777 177777 .WORD 100177,-1,-1,-1 ;ACO
6632 033630 177777
6633 033632 000177 .WORD 177 ;EXP
6634 033634 177777 177777 177777 .WORD -1,-1,-1,-1 ;RESULT
6635 033642 177777
6636 033644 007700 .WORD 7700 ; TEST FPS
6637 033646 007710 .WORD 7710 ;RESULT FPS
6638 ;12/EXP=150 ACO=POS
6639 033650 005037 001042 CLR B#FLAG ;NO INTERRUPT
6640 033654 004767 000402 JSR R7,LXPSUB ;DO TEST
6641 033660 000200 000100 000200 .WORD 200,100,200,300 ;ACO
6642 033666 000300
6643 033670 000150 .WORD 150 ;EXP
6644 033672 072000 000100 000200 .WORD 72000,100,200,300 ;RESULT
6645 033700 000300
6646 033702 007717 .WORD 7717 ; TEST FPS
6647 033704 007700 .WORD 7700 ;RESULT FPS
6648 ;13/EXP=200, ACO=NEG
6649 033706 012737 000001 001042 MOV #1,B#FLAG
6650 033714 004767 000342 JSR R7,LXPSUB ;DO TEST
6651 033720 177777 177777 177777 .WORD -1,-1,-1,-1 ;ACO
6652 033726 177777
6653 033730 000200 .WORD 200 ;EXP
6654 033732 100177 177777 177777 .WORD 100177,-1,-1,-1 ;RESULT
    
```

J10

```

6655 033740 177777
6656 033742 007705          .WORD 7705          ; TEST FPS
6657 033744 107716          .WORD 107716       ; RESULT FPS
6658 033746 000010          .WORD 10           ; FEC
6659
;14/EXP=400, FID
6660 033750 012737 000002 001042 MOV #2,B#FLAG          ; INTERRUPT
6661 033756 004767 000300 JSR R7,LXPSUB          ; DO TEST
6662 033762 000555 177777 177776 .WORD 555,-1,2,-3     ; ACO
6663 033770 177775
6664 033772 000400          .WORD 400           ; EXP
6665 033774 040155 177777 177776 .WORD 40155,-1,-2,3   ; RESULT
6666 034002 177775
6667 034004 047700          .WORD 47700         ; TEST FPS
6668 034006 147702          .WORD 147702        ; RESULT FPS
6669 034010 000010          .WORD 10            ; FEC
6670
;15/EXP=11011 FIU=0
6671 034012 012737 000000 001042 MOV #0,B#FLAG          ; NO INTERRUPT
6672 034020 004767 000236 JSR R7,LXPSUB          ; DO TEST
6673 034024 177773 177777 177776 .WORD 177773,1,-2,-3 ; ACO
6674 034032 177775
6675 034034 011011          .WORD 11011         ; EXP
6676 034036 000000 000000 000000 .WORD 0,0,0,0         ; RESULT
6677 034044 000000
6678 034046 006700          .WORD 6700          ; TEST FPS
6679 034050 006706          .WORD 6706          ; RESULT FPS
6680
;16/EXP=LARGEST POSITIVE
6681 034052 012737 000001 001042 MOV #1,B#FLAG          ; INTERRUPT
6682 034060 004767 000176 JSR R7,LXPSUB          ; DO TEST
6683 034064 123456 000100 000100 .WORD 123456,100,100,200 ; ACO
6684 034072 000200
6685 034074 077777          .WORD 77777         ; EXP
6686 034076 137656 000100 000100 .WORD 137656,100,100,200 ; RESULT
6687 034104 000200
6688 034106 007740          .WORD 7740          ; TEST FPS
6689 034110 107752          .WORD 107752        ; RESULT FPS
6690 034112 000010          .WORD 10            ; FEC
6691
;17/FLOATING
6692 034114 005037 001042 CLR B#FLAG             ; NO INTERRUPT
6693 034120 004767 000136 JSR R7,LXPSUB          ; DO TEST
6694 034124 123456 023465 000555 .WORD 123456,23465,555,444 ; ACO
6695 034132 000444
6696 034134 000050          .WORD 50            ; EXP
6697 034136 152056 023465 000555 .WORD 152056,23465,555,444 ; RESULT
6698 034144 000444
6699 034146 007500          .WORD 7500          ; TEST FPS
6700 034150 007510          .WORD 7510          ; RESULT FPS
6701
;18/FLOATING UNDERFLOW
6702 034152 012737 000001 001042 MOV #1,B#FLAG          ; INTERRUPT
6703 034160 004767 000076 JSR R7,LXPSUB          ; DO TEST
6704 034164 000333 000444 000555 .WORD 333,444,555,666 ; ACO
6705 034172 000666
6706 034174 177600          .WORD -200          ; EXP
6707 034176 000133 000444 000555 .WORD 133,444,555,666 ; RESULT
6708 034204 000666
6709 034206 007500          .WORD 7500          ; TEST FPS
6710 034210 107504          .WORD 107504        ; RESULT FPS
    
```

```

6711 034212 000012          .WORD 12          ;FEC
6712          ;19/FLOATING OVERFLOW
6713 034214 012737 000001 001042  MOV    #1,0#FLAG ;INTERRUPT
6714 034222 004767 000034          JSR    R7,LXPSUB ;DO TEST
6715 034226 012346 000123 000345  .WORD 12346,123,345,456 ;ACO
6716 034234 000456
6717 034236 000400          .WORD 400          ;EXP
6718 034240 040146 000123 000345  .WORD 40146,123,345,456 ;RESULT
6719 034246 000456
6720 034250 007400          .WORD 7400         ; TEST FPS
6721 034252 107402          .WORD 107402      ;RESUL1 FPS
6722 034254 000010          .WORD 10          ;FEC
6723
6724
6725 034256 000167 000250          JMP    HOP20       ;GET OVER SUBROUTINE
6726          ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
6727          ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
6728          ;LDEXP
6729          ;
6730          ; ACO
6731          ; EXPONENT
6732          ; RESULT
6733          ; FPS BEFORE EXECUTION
6734          ; FPS AFTER EXECUTION
6735          ; (FEC)
6736          ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
6737          ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
6738
6739 034262 012602          LXPSUB: MOV    (SP)+,R2 ; RETURN ADDRESS TO USE AS POINTER
6740 034264 012737 034352 000244  MOV    #50,0#FPVEC ;REDIRECT TRAP VECTOR
6741 034272 012701 001126          MOV    @RECDST,R1 ;POINT TO RESULT AREA
6742 034276 012700 000200          MOV    #200,R0    ;SET FPS TO DOUBLE
6743 034302 170100          LDFPS  R0
6744 034304 010204          MOV    R2,R4     ;POINT TO ACO DATA
6745 034306 172414          LDD    (R4),ACO  ;LOAD ACO
6746 034310 016200 000022          MOV    22(R2),R0 ;GET TEST FPS
6747 034314 170100          LDFPS  R0        ;LOAD TEST FPS
6748 034316 016204 000010          MOV    10(R2),R4 ;POINT TO TEST DATA
6749
6750 034322 176404          40$:  LDEXP  R4,ACO ;*TEST INSTRUCTION (ACCORDING TO MODE)
6751 034324 170327          1$:  STST  (PC)+ ;WAIT FOR POSSIBLE FPA TRAP.
6752 034326 000000          .WORD 0          ;STORE STATUS HERE
6753
6754
6755          ;
6756 034330 032737 000001 001042  ;INSTRUCTION DIDNT TRAP
6757 034336 001426          BIT    #1,0#FLAG ;VERIFY A NO TRAP CONDITION
6758 034340 104000          BEQ    2$        ;BRANCH IF GOOD
6759 034342 000475          ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
6760 034344 002013          .WORD 475       ;UNIQUE ERROR NUMBER
6761          .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
6762 034346 000167 000042          JMP    2$        ;INSTRUCTION SHOULD HAVE TRAPPED
6763          ;REJOIN CODE
6764
6765 034352 032737 000001 001042  ;INSTRUCTION TRAPPED
6766 034360 001005          50$:  BIT    #1,0#FLAG ;SEE IF EXPECTING A TRAP
          BNE    51$ ;BRANCH IF EXPECTING A TRAP
    
```

L10

```
6767 034362 104000          ERROR          ; ALL ERRORS TO TRAP TO EMT VECTOR
6768 034364 000476          .WORD      476          ; UNIQUE ERROR NUMBER
6769 034366 002013          .WORD      FPPERR      ; ADDRESS OF ERROR MESSAGE
6770                                     ; INSTRUCTION WASNT SUPPOSE TO TRAP
6771 034370 000167 000020    JMP        2#          ; REJOIN CODE
6772 034374 012604          MOV        (SP)+,R4    ; SEE IF PC = INSTRUCTION
6773 034376 005726          TST        (SP)+      ; CLEAN UP STACK
6774 034400 022704 034324    CMP        #1#,R4     ;
6775 034404 001403          BEQ        2#          ; BRANCH IF GOOD COMPARE
6776 034406 104000          ERROR          ; ALL ERRORS TO TRAP TO EMT VECTOR
6777 034410 000477          .WORD      477          ; UNIQUE ERROR NUMBER
6778 034412 002013          .WORD      FPPERR      ; ADDRESS OF ERROR MESSAGE
6779                                     ; PC WAS INCORRECT
6780                                     ;
6781                                     ; COMMON CODE FOR TRAP AND NO TRAP
6782                                     ; VERIFY STATUS
6783 034414 170203          2#:        STFPS      R3          ; SAVE FPS
6784 034416 012700 000200    MOV        #200,R0    ; SETUP FPS
6785 034422 170100          LDFPS     R0          ; FPS=200
6786 034424 174011          STD       ACO,(R1)    ; GET RESULT
6787 034426 016200 000024    MOV        24(R2),R0  ; GET EXPECTED STATUS
6788 034432 020003          CMP        R0,R3     ; VERIFY STATUS
6789 034434 001403          BEQ        3#          ; BRANCH IF GOOD
6790 034436 104000          ERROR          ; ALL ERRORS TO TRAP TO EMT VECTOR
6791 034440 000500          .WORD      500        ; UNIQUE ERROR NUMBER
6792 034442 002013          .WORD      FPPERR      ; ADDRESS OF ERROR MESSAGE
6793                                     ; BAD FPS
6794 034444 010204          3#:        MOV        R2,R4    ; POINT TO EXPECTED DATA
6795 034446 062704 000012    ADD        #12,R4
6796 034452 004767 145470    4#:        JSR        R7,DATVER ; VERIFY DATA
6797 034456 005767 144356    TST        COUNT
6798 034462 001403          BEQ        5#          ; BRANCH IF GOOD
6799 034464 104000          ERROR          ; ALL ERRORS TO TRAP TO EMT VECTOR
6800 034466 000501          .WORD      501        ; UNIQUE ERROR NUMBER
6801 034470 002013          .WORD      FPPERR      ; ADDRESS OF ERROR MESSAGE
6802                                     ; BAD ACO
6803 034472 005737 001042    5#:        TST        #FLAG ; SEE IF NEED TO CHECK FEC
6804 034476 001002          BNE       7#          ; BRANCH IF NEED TO CHECK
6805 034500 000162 000026    JMP        26(R2)     ; RETURN FROM TEST
6806                                     ; VERIFY FEC
6807 034504 012704 001106    7#:        MOV        #RECFEC,R4 ; POINT TO FEC AREA
6808 034510 170314          STST      (R4)       ; SAVE FEC
6809 034512 021462 000026    CMP        (R4),26(R2) ; VERIFY FEC FOR OVERFLOW
6810 034516 001403          BEQ        8#          ; BRANCH IF GOOD
6811 034520 104000          ERROR          ; ALL ERRORS TO TRAP TO EMT VECTOR
6812 034522 000502          .WORD      502        ; UNIQUE ERROR NUMBER
6813 034524 002013          .WORD      FPPERR      ; ADDRESS OF ERROR MESSAGE
6814                                     ; BAD FEC
6815 034526 000162 000030    8#:        JMP        30(R2)   ; RETURN FROM TEST
6816                                     ;
6817 034532          HOP20:
6818
6819 034532          MSCD:
6820          ;*****
6821          ;*TEST 107      TEST STCDI, STCDL
6822          ;*****
```



```

6823 034532          TST107:
6824 034532 005267 144246          INC      #TESTN          ;INCREMENT TEST NUMBER
6825          ;1/ACO=0, INT          CLR      @#FLAG          ;NO INTERRUPTS
6826 034536 005037 001042          JSR      R7,SCDSUB        ;DO TEST
6827 034542 004767 000610          .WORD   0177,0,0,0        ;ACO
6828 034546 000177 000000 000000          .WORD   0,-1             ;RESULT
6829 034554 000000          .WORD   7640             ; TEST FPS
6830 034556 000000 177777          .WORD   7644             ;RESULT FPS
6831 034562 007640          ;2/ACO=-0, LONG          CLR      @#FLAG          ;INTERRUPT
6832 034564 007644          JSR      R7,SCDSUB        ;DO TEST
6833          .WORD   100177,-1,-1,-1 ;ACO
6834 034566 005037 001042          .WORD   0,0              ;RESULT
6835 034572 004767 000560          .WORD   7700             ; TEST FPS
6836 034576 100177 177777 177777          .WORD   7704             ;RESULT FPS
6837 034604 177777          ;3/EXP=100, LONG          CLR      @#FLAG          ;NO INTERRUPT
6838 034606 000000 000000          JSR      R7,SCDSUB        ;DO TEST
6839 034612 007700          .WORD   20000,0,0,0      ;ACO
6840 034614 007704          .WORD   0,0              ;RESULT
6841          .WORD   300             ; TEST FPS
6842 034616 005037 001042          .WORD   304             ;RESULT FPS
6843 034622 004767 000530          ;4/EXP=200, BAISED 0, INT, ROUND CLR      @#FLAG          ;INTERRUPT
6844 034626 020000 000000 000000          JSR      R7,SCDSUB        ;DO TEST
6845 034634 000000          .WORD   140177,177777,1,1 ;ACO
6846 034636 000000 000000          .WORD   0,0              ;RESULT
6847 034642 000300          .WORD   7700             ; TEST FPS
6848 034644 000304          .WORD   7704             ;RESULT FPS
6849          ;5/LONG          CLR      @#FLAG          ;INTERRUPT
6850 034646 005037 001042          JSR      R7,SCDSUB        ;DO TEST
6851 034652 004767 000500          .WORD   47667,75757,157737,167773 ;ACO
6852 034656 140177 177777 000001          .WORD   55675,173757    ;RESULT
6853 034664 000001          .WORD   7717             ; TEST FPS
6854 034666 000000 000000          .WORD   7700             ;RESULT FPS
6855 034672 007700          ;6/LONG, EXP=2**32          CLR      @#FLAG          ;NO INTERRUPT
6856 034674 007704          JSR      R7,SCDSUB        ;DO TEST
6857          .WORD   46400,0,0,0      ;ACO
6858 034676 005037 001042          .WORD   1000,0           ;RESULT
6859 034702 004767 000450          .WORD   7700             ; TEST FPS
6860 034706 047667 075757 157737          .WORD   7700             ;RESULT FPS
6861 034714 167773          ;7/LONG, EXP>2**32          MOV      @1,@#FLAG        ;INTERRUPT
6862 034716 055675 173757          JSR      R7,SCDSUB        ;DO TEST
6863 034722 007717          .WORD   77607,0,0,0      ;ACO
6864 034724 007700          .WORD   0,0              ;RESULT
6865          ;8/LONG, EXP>2**32          CLR      @#FLAG          ;NO INTERRUPT
6866 034726 005037 001042          JSR      R7,SCDSUB        ;DO TEST
6867 034732 004767 000420          .WORD   46400,0,0,0      ;ACO
6868 034736 046400 000000 000000          .WORD   1000,0           ;RESULT
6869 034744 000000          .WORD   7700             ; TEST FPS
6870 034746 001000 000000          .WORD   7700             ;RESULT FPS
6871 034752 007700          ;9/LONG, EXP>2**32          MOV      @1,@#FLAG        ;INTERRUPT
6872 034754 007700          JSR      R7,SCDSUB        ;DO TEST
6873          .WORD   77607,0,0,0      ;ACO
6874 034756 012737 000001 001042          .WORD   0,0              ;RESULT
6875 034764 004767 000366          .WORD   0,0              ; TEST FPS
6876 034770 077607 000000 000000          .WORD   0,0              ;RESULT FPS
6877 034776 000000          .WORD   0,0              ;RESULT
6878 035000 000000 000000

```

```

6879 035004 007700 .WORD 7700 ; TEST FPS
6880 035006 107705 .WORD 107705 ; RESULT FPS
6881 ;8/INT, EXP=2**15
6882 035010 005037 001042 CLR @FLAG ;NO INTERRUPTS
6883 035014 004767 000336 JSR R7,SCDSUB ;DO TEST
6884 035020 043200 000000 000000 .WORD 43200,0,0,0 ;ACO
6885 035026 000000
6886 035030 010000 177777 .WORD 10000,-1 ;RESULT
6887 035034 007600 .WORD 7600 ; TEST FPS
6888 035036 007600 .WORD 7600 ;RESULT FPS
6889 ;9/INT, EXP>2**15
6890 035040 012737 000001 001042 MOV #1,@FLAG ; INTERRUPT
6891 035046 004767 000304 JSR R7,SCDSUB ;DO TEST
6892 035052 077777 177777 177777 .WORD 77777,-1,-1,-1 ;ACO
6893 035060 177777
6894 035062 000000 177777 .WORD 0,-1 ;RESULT
6895 035066 007600 .WORD 7600 ; TEST FPS
6896 035070 107605 .WORD 107605 ;RESULT FPS
6897 ;10/INT, EXP>2**15, FID
6898 035072 012737 000000 001042 MOV #0,@FLAG ;NO INTERRUPT
6899 035100 004767 000252 JSR R7,SCDSUB ;DO TEST
6900 035104 043300 000000 000000 .WORD 43300,0,0,0 ;ACO
6901 035112 000000
6902 035114 000000 014000 .WORD 0,14000 ;RESULT
6903 035120 047700 .WORD 47700 ; TEST FPS
6904 035122 047700 .WORD 47700 ;RESULT FPS
6905 ;11/INT, EXP>2**15, FIC=0
6906 035124 012737 000000 001042 MOV #0,@FLAG ;NO INTERRUPT
6907 035132 004767 000220 JSR R7,SCDSUB ;DO TEST
6908 035136 143300 177777 177777 .WORD 143300,-1,-1,-1 ;ACO
6909 035144 177777
6910 035146 177777 163741 .WORD -1,163741 ;RESULT
6911 035152 007300 .WORD 7300 ; TEST FPS
6912 035154 007310 .WORD 7310 ;RESULT FPS
6913 ;12/LONG, EXP>2**32, FID
6914 035156 012737 000002 001042 MOV #2,@FLAG ; INTERRUPT
6915 035164 004767 000166 JSR R7,SCDSUB ;DO TEST
6916 035170 050100 000000 000000 .WORD 50100,0,0,0 ;ACO
6917 035176 000000
6918 035200 000000 000000 .WORD 0,0 ;RESULT
6919 035204 047700 .WORD 47700 ; TEST FPS
6920 035206 147705 .WORD 147705 ;RESULT FPS
6921 ;13/LONG, EXP>2**32, FIC=0
6922 035210 012737 000000 001042 MOV #0,@FLAG ;NO INTERRUPT
6923 035216 004767 000134 JSR R7,SCDSUB ;DO TEST
6924 035222 050377 177777 177777 .WORD 50377,-1,-1,-1 ;ACO
6925 035230 177777
6926 035232 000000 000000 .WORD 0,0 ;RESULT
6927 035236 007300 .WORD 7300 ; TEST FPS
6928 035240 007305 .WORD 7305 ;RESULT FPS
6929 ;14/LONG, EXP<0
6930 035242 005037 001042 CLR @FLAG ;NO INTERRUPTS
6931 035246 004767 000104 JSR R7,SCDSUB ;DO TEST
6932 035252 100200 177777 177777 .WORD 100200,-1,-1,-1 ;ACO
6933 035260 177777
6934 035262 000000 000000 .WORD 0,0 ;RESULT

```

```

6935 035266 007757 .WORD 7757 ; TEST FPS
6936 035270 007744 .WORD 7744 ; RESULT FPS
6937 ;15/INT, EXP<0
6938 035272 005037 001042 CLR @FLAG ;NO INTERRUPTS
6939 035276 004767 000054 JSR R7,SCDSUB ;DO TEST
6940 035302 037700 177777 177777 .WORD 37700,-1,1,-2 ;ACO
6941 035310 177776
6942 035312 000000 177777 .WORD 0,-1 ;RESULT
6943 035316 007600 .WORD 7600 ; TEST FPS
6944 035320 007604 .WORD 7604 ;RESULT FPS
6945 ;16/INT, EXP-10
6946 035322 005037 001042 CLR @FLAG ;NO INTERRUPTS
6947 035326 004767 000024 JSR R7,SCDSUB ;DO TEST
6948 035332 004377 177777 177777 .WORD 4377,1,-1,-1 ;ACO
6949 035340 177777
6950 035342 000000 177777 .WORD 0,-1 ;RESULT
6951 035346 007600 .WORD 7600 ; TEST FPS
6952 035350 007604 .WORD 7604 ;RESULT FPS
6953 ;
6954 ;
6955 035352 000167 000244 JMP MOP21 ;GET OVER SUBROUTINE
6956 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
6957 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
6958 ;STCDI, STCDL, STCFI, STCFL
6959 ;
6960 ; ACO
6961 ; RESULT
6962 ; FPS BEFORE EXECUTION
6963 ; FPS AFTER EXECUTION
6964 ; (FEC)
6965 ;
6966 ;TRAP ON CONVERSION FAILURE
6967 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
6968 ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
6969 ;
6970 035356 012602 SCDSUB: MOV (SP),R2 ; RETURN ADDRESS TO USE AS POINTER
6971 035360 012737 035452 000244 MOV @50,@FPVEC ;REDIRECT TRAP VECTOR
6972 035366 012701 001130 MOV @RECDST-2,R1 ;POINT TO RESULT AREA
6973 035372 012711 177777 MOV @-1,(R1) ;PRELOAD RECEIVE DATA BUFFER
6974 035376 012741 177777 MOV @-1,-(R1) ;
6975 035402 012700 000200 MOV @200,R0 ;SET FPS TO DOUBLE
6976 035406 170100 LDFPS R0 ;
6977 035410 010204 MOV R2,R4 ;POINT TO ACO DATA
6978 035412 172414 LDD (R4),ACO ;LOAD ACO
6979 035414 016200 000014 MOV 14(R2),R0 ;GET TEST FPS
6980 035420 170100 LDFPS R0 ;LOAD TEST FPS
6981 ;
6982 035422 175411 40: STCDI ACO,(R1) ;TEST INSTRUCTION(ACCORDING TO MODE)
6983 035424 170327 18: STST (PC); ;WAIT FOR POSSIBLE FPA TRAP.
6984 035426 000000 .WORD 0 ;STORE STATUS HERE.
6985 ;
6986 ;
6987 ;INSTRUCTION DIDNT TRAP
6988 035430 032737 000001 001042 BIT @1,@FLAG ;VERIFY A NO TRAP CONDITION
6989 035436 001426 BEQ 28 ;BRANCH IF GOOD
6990 035440 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR

```

```

6991 035442 000503 .WORD 503 ;UNIQUE ERROR NUMBER
6992 035444 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
6993 ;INSTRUCTION SHOULD HAVE TRAPPED
6994 035446 000167 000042 JMP 2; ;REJOIN CODE
6995
6996 ;INSTRUCTION TRAPPED
6997 035452 032737 000001 001042 50: BIT #1,#FLAG ;SEE IF EXPECTING A TRAP
6998 035460 001005 BNE 51; ;BRANCH IF EXPECTING A TRAP
6999 035462 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
7000 035464 000504 .WORD 504 ;UNIQUE ERROR NUMBER
7001 035466 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
7002 ;INSTRUCTION WASNT SUPPOSE TO TRAP
7003 035470 000167 000020 JMP 2; ;REJOIN CODE
7004 035474 012604 51: MOV (SP),R4 ;SEE IF PC = INSTRUCTION
7005 035476 005726 TST (SP); ;CLEAN UP STACK
7006 035500 022704 035424 CMP #1,R4 ;
7007 035504 001403 BEQ 2; ;BRANCH IF GOOD COMPARE
7008 035506 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
7009 035510 000505 .WORD 505 ;UNIQUE ERROR NUMBER
7010 035512 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
7011 ;PC WAS INCORRECT
7012
7013 ;COMMON CODE FOR TRAP AND NO TRAP
7014 ;VERIFY STATUS
7015 035514 170203 2: STFPS R3 ;SAVE FPS
7016 035516 016200 000016 MOV 16(R2),R0 ;GET EXPECTED STATUS
7017 035522 020003 CMP R0,R3 ;VERIFY STATUS
7018 035524 001403 BEQ 3; ;BRANCH IF GOOD
7019 035526 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
7020 035530 000506 .WORD 506 ;UNIQUE ERROR NUMBER
7021 035532 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
7022 ;BAD FPS
7023 035534 010204 3: MOV R2,R4 ;POINT TO EXPECTED DATA
7024 035536 062704 000010 ADD #10,R4
7025 035542 004767 144362 4: JSR R7,DATVFR ;VERIFY DATA
7026 035546 005767 143266 TST COUNT
7027 035552 001403 BEQ 5; ;BRANCH IF GOOD
7028 035554 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
7029 035556 000507 .WORD 507 ;UNIQUE ERROR NUMBER
7030 035560 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
7031 ;BAD ACO
7032 035562 005737 001042 5: TST #FLAG ;SEE IF NEED TO CHECK FEC
7033 035566 001002 BNE 7; ;BRANCH IF NEED TO CHECK
7034 035570 000162 000020 JMP 20(R2) ;RETURN FROM TEST
7035 ;VERIFY FEC
7036 035574 012704 001106 7: MOV #RECFEC,R4 ;POINT TO FEC AREA
7037 035600 170314 STST (R4) ;SAVE FEC
7038 035602 021427 000006 CMP (R4),#6 ;VERIFY FEC FOR OVERFLOW
7039 035606 001403 BEQ 8; ;BRANCH IF GOOD
7040 035610 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
7041 035612 000510 .WORD 510 ;UNIQUE ERROR NUMBER
7042 035614 002013 .WORD FPPERR ;ADDRESS OF ERROR MESSAGE
7043 ;BAD FEC
7044 035616 000162 000020 8: JMP 20(R2) ;RETURN FROM TEST
7045
7046 035622 ;
;HOP21:

```

```

047
7048 035622
049
7050
7051
7052 035622
7053 035622 005267 143156
7054
7055 035626 005037 001042
7056 035632 004767 177520
7057 035636 044541 052525 177777
7058 035644 177777
7059 035646 000003 102525
7060 035652 007517
7061 035654 007500
7062
7063 035656 005037 001042
7064 035662 004767 177470
7065 035666 002300 177777 177777
7066 035674 177777
7067 035676 000000 177777
7068 035702 007400
7069 035704 007404
7070
7071 035706 012737 000001 001042
7072 035714 004767 177436
7073 035720 070000 177777 177777
7074 035726 177777
7075 035730 000000 000000
7076 035734 007540
7077 035736 107545
7078
7079 035740 005037 001042
7080 035744 004767 177406
7081 035750 052000 000000 177777
7082 035756 177777
7083 035760 000000 177777
7084 035764 047000
7085 035766 047005
7086
7087
7088
7089 J35770
7090
7091
7092
7093 035770
7094 035770 005267 143010
7095
7096 035774 004767 000154
7097 036000 020000 000000 000000
7098 036006 000000
7099 036010 177700
7100 036012 007740
7101 036014 007750
7102

```

```

MSCF:
*****
*TEST 110 TEST STCFI, STCFL
*****
TST110:
      INC      #TESTN          ;INCREMENT TEST NUMBER
;1/LONG EXP =30
      CLR      @#FLAG          ;NO INTERRUPTS
      JSR      R7,SCDSUB       ;DO TEST
      .WORD   44541,52525, 1, 1 ;ACO
      .WORD   3,102525         ;RESULT
      .WORD   7517             ; TEST FPS
      .WORD   7500             ;RESULT FPS
;2/INT, EXP<0
      CLR      @#FLAG          ;NO INTERRUPTS
      JSR      R7,SCDSUB       ;DO TEST
      .WORD   2300,-1,-1,-1    ;ACO
      .WORD   0,-1             ;RESULT
      .WORD   7400             ; TEST FPS
      .WORD   7404             ;RESULT FPS
;3/LONG, EXP>=2**32
      MOV      @1,@#FLAG       ;INTERRUPT
      JSR      R7,SCDSUB       ;DO TEST
      .WORD   70000,-1,-1,-1   ;ACO
      .WORD   0,0              ;RESULT
      .WORD   7540             ; TEST FPS
      .WORD   107545           ;RESULT FPS
;4/INT,EXP=5, FIC=0, FID=1
      CLR      @#FLAG          ;NO INTERRUPTS
      JSR      R7,SCDSUB       ;DO TEST
      .WORD   52000,0,-1,-1    ;ACO
      .WORD   0,-1             ;RESULT
      .WORD   47000            ; TEST FPS
      .WORD   47005            ;RESULT FPS
;
MSXP:
*****
*TEST 111 TEST STEXP
*****
TST111:
      INC      #TESTN          ;INCREMENT TEST NUMBER
;1/EXP=100
      JSR      R7,SXPSUB       ;DO TEST
      .WORD   20000,0,0,0      ;ACO
      .WORD   -100             ;RESULT
      .WORD   7740             ; TEST FPS
      .WORD   7750             ;RESULT FPS
;2/EXP=201 FLOAT, NEG

```

```

7103 036016 004767 000132          JSR    R7,SXPSUB          ;DO TEST
7104 036022 140377 177777 177777  .WORD  140377, 1, 1,0      ;ACO
7105 036030 000000                    .WORD  1                    ;RESULT
7106 036032 000001                    .WORD  7500                 ; TEST FPS
7107 036034 007500                    .WORD  7500                 ;RESULT FPS
7108 036036 007500                    .WORD  7500                 ;RESULT FPS
7109                                     ;3/EXP=-177
7110 036040 004767 000110          JSR    R7,SXPSUB          ;DO TEST
7111 036044 000177 177777 177777  .WORD  177,-1,-1,-1        ;ACO
7112 036052 177777                    .WORD  177600              ;RESULT
7113 036054 177600                    .WORD  7700                 ; TEST FPS
7114 036056 007700                    .WORD  7710                 ;RESULT FPS
7115 036060 007710                    .WORD  7710                 ;RESULT FPS
7116                                     ;4/EXP=-100
7117 036062 004767 000065          JSR    R7,SXPSUB          ;DO TEST
7118 036066 020000 000000 177777  .WORD  20000,0, 1,-1       ;ACO
7119 036074 177777                    .WORD  -100                 ;RESULT
7120 036076 177700                    .WORD  40200                ; TEST FPS
7121 036100 040200                    .WORD  40210                ;RESULT FPS
7122 036102 040210                    .WORD  40210                ;RESULT FPS
7123                                     ;5/EXP=200
7124 036104 004767 000044          JSR    R7,SXPSUB          ;DO TEST
7125 036110 040000 000000 000000  .WORD  40000,0,0,0         ;ACO
7126 036116 000000                    .WORD  0                     ;RESULT
7127 036120 000000                    .WORD  7700                 ; TEST FPS
7128 036122 007700                    .WORD  7704                 ;RESULT FPS
7129 036124 007704                    .WORD  7704                 ;RESULT FPS
7130                                     ;6/EXP=0
7131 036126 004767 000022          JSR    R7,SXPSUB          ;DO TEST
7132 036132 000177 177777 177777  .WORD  177,-1,-1,-1        ;ACO
7133 036140 177777                    .WORD  177600              ;RESULT
7134 036142 177600                    .WORD  0                     ; TEST FPS
7135 036144 000000                    .WORD  10                    ;RESULT FPS
7136 036146 000010                    .WORD  10                    ;RESULT FPS
7137                                     ;
7138                                     ;
7139 036150 000167 000120          JMP    MOP22              ;GET OVER SUBROUTINE
7140                                     ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
7141                                     ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
7142                                     ;STEXP
7143                                     ;
7144                                     ;      ACO
7145                                     ;      EXPONENT RESULT
7146                                     ;      FPS BEFORE EXECUTION
7147                                     ;      FPS AFTER EXECUTION
7148                                     ;
7149                                     ;NO TRAPS CAN OCCUR
7150                                     ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
7151                                     ;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
7152                                     ;
7152 036154 012602                    SXPSUB: MOV    (SP),R2          ; RETURN ADDRESS TO USE AS POINTER
7153 036156 012737 036256 000244  MOV    #508,#FPVEC        ; REDIRECT TRAP VECTOR
7154 036164 012701 001126          MOV    #RECDST,R1        ; POINT TO RESULT AREA
7155 036170 012700 000200          MOV    #200,R0           ; SET FPS TO DOUBLE
7156 036174 170100                    LDFPS  R0                 ;
7157 036176 010204                    MOV    R2,R4             ; POINT TO ACO DATA
7158 036200 172414                    LDD    (R4),ACO          ; LOAD ACO
    
```

```

7159 036202 016200 000012      MOV      12(R2),R0      ;GET TEST FPS
7160 036206 170100              LDFPS   RO              ;LOAD TEST FPS
7161                               ;
7162 036210 175011      40$:  STEXP  ACO,(R1)      ;*TEST INSTRUCTION(ACCORDING TO MODE)
7163                               ;
7164                               ;VERIFY STATUS
7165 036212 170203      2$:  STFPS   R3              ;SAVE FPS
7166 036214 016200 000014      MOV      14(R2),R0      ;GET EXPECTED STATUS
7167 036220 020003      CMP      RO,R3          ;VERIFY STATUS
7168 036222 001403      BEQ      3$              ;BRANCH IF GOOD
7169 036224 104000      ERROR              ;ALL ERRORS TO TRAP TO EMT VECTOR
7170 036226 000511      .WORD   511            ;UNIQUE ERROR NUMBER
7171 036230 002013      .WORD   FPPERR         ;ADDRESS OF ERROR MESSAGE
7172                               ;BAD FPS
7173 036232 016204 000010      3$:  MOV      10(R2),R4      ;POINT TO EXPECTED EXPONENT
7174 036236 020437 001126      CMP      R4,8@RECDST     ;VERIFY EXPONENT
7175 036242 001403      BEQ      5$              ;BRANCH IF GOOD
7176 036244 104000      ERROR              ;ALL ERRORS TO TRAP TO EMT VECTOR
7177 036246 000512      .WORD   512            ;UNIQUE ERROR NUMBER
7178 036250 002013      .WORD   FPPERR         ;ADDRESS OF ERROR MESSAGE
7179                               ;BAD ACO
7180 036252 000162 000016      5$:  JMP      16(R2)      ;RETURN FROM TEST
7181                               ;
7182                               ;INSTRUCTION TRAPPED
7183 036256 012600      50$: MOV      (SP),R0      ;SAVE PC
7184 036260 012605      MOV      (SP),R5        ;SAVE OLD PS
7185 036262 104000      ERROR              ;ALL ERRORS TO TRAP TO EMT VECTOR
7186 036264 000513      .WORD   513            ;UNIQUE ERROR NUMBER
7187 036266 002013      .WORD   FPPERR         ;ADDRESS OF ERROR MESSAGE
7188                               ;WILD TRAP DURING STEXP
7189 036270 000167 177756      JMP      5$              ;REJOIN CODE
7190                               ;
7191                               ;
7192 036274      HOP22:
7193
7194
    
```

```

7195 .MCALL IDMSG,ENDPAS
7196 .SBTTL END OF PASS ROUTINE
7197
7198 ;*****
7199 ;*INCREMENT THE PASS NUMBER ($PASS)
7200 ;*INDICATE END-OF-PROGRAM AFTER 1 PASSES THRU THE PROGRAM
7201 ;*IF THERES A MONITOR GO TO IT
7202 ;*IF THERE ISN'T JUMP TO RESTART
7203
7204 $EOP:
7205 036274 005767 142506 TST $PASS ;ONLY TYPE MESSAGE AT END OF FIRST PASS
7206 036300 001002 BNE SKIPID ;IF >0 THEN SKIP THE ID MESSAGE
7207 036302 104401 036402 TYPE .MSG1 ;ELSE TYPE THE ID MESSAGE
7208 036306
7209 036306 005267 142474 SKIPID: INC $PASS ;;INCREMENT THE PASS NUMBER
7210 036312 042767 100000 142466 BIC @100000,$PASS ;;DON'T ALLOW A NEG. NUMBER
7211 036320 005327 DEC (PC)+ ;;LOOP?
7212 036322 000001 $EOPCT: .WORD 1
7213 036324 003022 BGT $DOAGN ;;YES
7214 036326 012737 MOV (PC)+,@(PC)+ ;;RESTORE COUNTER
7215 036330 000001 $ENDCT: .WORD 1
7216 036332 036322 $EOPCT
7217 036334 104401 036456 TYPE .MSG2
7218 036340 016746 142442 MOV $PASS,-(SP) ;;SAVE $PASS FOR TYPEOUT
7219 036344 104405 036376 TYPDS ;;GO TYPE--DECIMAL ASCII WITH SIGN
7220 036346 104401 036376 TYPE
7221 036352 013700 000042 $GET42: MOV @42,R0 ;;GET MONITOR ADDRESS
7222 036356 001405 BEQ $DOAGN ;;BRANCH IF NO MONITOR
7223 036360 000005 RESET ;;CLEAR THE WORLD
7224 036362 004710 $ENDAD: JSR PC,(R0) ;;GO TO MONITOR
7225 036364 000240 NOP ;;SAVE ROOM
7226 036366 000240 NOP ;;FOR
7227 036370 000240 NOP ;;ACT11
7228 036372
7229 036372 000137 $DOAGN: JMP @(PC)+ ;;RETURN
7230 036374 002410 $RTNAD: .WORD RESTART
7231 036376 377 377 000 $ENULL: .BYTE -1,-1,0 ;;NULL CHARACTER STRING
7232 036402 .EVEN
7233 036402 005015 055103 042113 MSG1: .ASCIZ <CR><LF>/CZKDL-B-0 KDJ11 FLOATING POINT DIAGNOSTIC,
7234 036410 026514 026502 020060
7235 036416 042113 030512 020061
7236 036424 046106 040517 044524
7237 036432 043516 050040 044517
7238 036440 052116 042040 040511
7239 036446 047107 051517 044524
7240 036454 000103
7241 036456 005015 055103 042113 MSG2: .ASCIZ <CR><LF>/CZKDLB END PASS #/
7242 036464 041114 042440 042116
7243 036472 050040 051501 020123
7244 036500 000043
7245 .EVEN
7246 .SBTTL TYPE ROUTINE
7247
7248 ;*****
7249 ;*ROUTINE TO TYPE ASCIZ MESSAGE. MESSAGE MUST TERMINATE WITH A 0 BYTE.
7250 ;*THE ROUTINE WILL INSERT A NUMBER OF NULL CHARACTERS AFTER A LINE FEED.

```



```

7251 ;*NOTE1:          $NULL CONTAINS THE CHARACTER TO BE USED AS THE FILLER CHARACTER.
7252 ;*NOTE2:          $FILLS CONTAINS THE NUMBER OF FILLER CHARACTERS REQUIRED.
7253 ;*NOTE3:          $FILLC CONTAINS THE CHARACTER TO FILL AFTER.
7254 ;*
7255 ;*CALL:
7256 ;*1) USING A TRAP INSTRUCTION
7257 ;*      TYPE      ,MESADR          ;MESADR IS FIRST ADDRESS OF AN ASCIZ STRING
7258 ;*OR
7259 ;*      TYPE
7260 ;*      MESADR
7261 ;*
7262 ;*
7263 036502 105767 000343 $TYPE: TSTB      $TPFLG          ;IS THERE A TERMINAL?
7264 036506 100002      BPL          1$          ;BR IF YES
7265 036510 000000      HALT          ;HALT HERE IF NO TERMINAL
7266 036512 000430      BR          3$          ;LEAVE
7267 036514 010046      1$: MOV      RO,-(SP)      ;SAVE RO
7268 036516 017600 000002 MOV      @2(SP),RO      ;GET ADDRESS OF ASCIZ STRING
7269 036522 122767 000001 142270 CMPB     @APTENV,$ENV    ;RUNNING IN APT MODE
7270 036530 001011      BNE          62$          ;NO,GO CHECK FOR APT CONSOLE
7271 036532 132767 000100 142261 BITB     @APTSPOOL,$ENVM ;SPOOL MESSAGE TO APT
7272 036540 001405      BEQ          62$          ;NO,GO CHECK FOR CONSOLE
7273 036542 010067 000004 MOV      RO,61$        ;SETUP MESSAGE ADDRESS FOR APT
7274 036546 004767 001034 JSR      PC,$ATY3      ;SPOOL MESSAGE TO APT
7275 036552 000000      .WORD      0          ;MESSAGE ADDRESS
7276 036554 132767 000040 142237 62$: BITB     @APTCSUP,$ENVM ;APT CONSOLE SUPPRESSED
7277 036562 001003      BNE          60$          ;YES,SKIPTYPE OUT
7278 036564 112046      2$: MOVB     (RO),-(SP)    ;PUSH CHARACTER TO BE TYPED ONTO STACK
7279 036566 001005      BNE          4$          ;BR IF IT ISN'T THE TERMINATOR
7280 036570 005726      TST      (SP),        ;IF TERMINATOR POP IT OFF THE STACK
7281 036572 012600      60$: MOV      (SP),RO      ;RESTORE RO
7282 036574 062716 000002 3$: ADD      @2,(SP)      ;ADJUST RETURN PC
7283 036600 000002      RTI
7284 036602 122716 000011 4$: CMPB     @HT,(SP)      ;BRANCH IF <HT>
7285 036606 001430      BEQ          8$          ;
7286 036610 122716 000200 CMPB     @CRLF,(SP)    ;BRANCH IF NOT <CRLF>
7287 036614 001006      BNE          5$          ;
7288 036616 005726      TST      (SP),        ;POP <CR><LF> EQUIV
7289 036620 104401      TYPE          ;TYPE A CR AND LF
7290 036622 002077      $CRLF
7291 036624 105067 000202 CLRB     $CHARCNT      ;CLEAR CHARACTER COUNT
7292 036630 000755      BR          2$          ;GET NEXT CHARACTER
7293 036632 004767 000056 5$: JSR      PC,$TYPEC      ;GO TYPE THIS CHARACTER
7294 036636 126726 000206 6$: CMPB     $FILLC,(SP), ;IS IT TIME FOR FILLER CHARS.?
7295 036642 001350      BNE          2$          ;IF NO GO GET NEXT CHAR.
7296 036644 016746 000176 MOV      $NULL,-(SP)   ;GET # OF FILLER CHARS. NEEDED
7297 ;AND THE NULL CHAR.
7298 036650 105366 000001 7$: DECB     1(SP)        ;DOES A NULL NEED TO BE TYPED?
7299 036654 002770      BLT          6$          ;BR IF NO--GO POP THE NULL OFF OF STACK
7300 036656 004767 000032 JSR      PC,$TYPEC      ;GO TYPE A NULL
7301 036662 105367 000144 DECB     $CHARCNT      ;DO NOT COUNT AS A COUNT
7302 036666 000770      BR          7$          ;LOOP
7303 ;
7304 ;HORIZONTAL TAB PROCESSOR
7305 ;
7306 036670 112716 000040 8$: MOVB     #' ,(SP)      ;REPLACE TAB WITH SPACE
    
```

```

7307 036674 004767 000014 98: JSR PC,%TYPEC ;TYPE A SPACE
7308 036700 132767 000007 000124 BITB %7,%CHARCNT ;BRANCH IF NOT AT
7309 036706 001372 BNE %1 ;TAB STOP
7310 036710 005726 TST (SP); ;POP SPACE OFF STACK
7311 036712 000724 BR %2 ;GET NEXT CHARACTER
7312 036714 %TYPEC:
7313 036714 105777 000116 TSTB %1TKS ;CHAR IN KYBD BUFFER? ;MJ0001
7314 036720 100022 BPL %1 ;BR IF NOT ;MJ0001
7315 036722 017746 000112 MOV %1TKB,-(SP) ;GET CHAR ;MJ0001
7316 036726 042716 177600 BIC %177600,(SP) ;STRIP EXTRANEIOUS BITS ;MJ0001
7317 036732 122716 000023 CMPB %1XOFF,(SP) ;WAS CHAR XOFF ;MJ0001
7318 036736 001012 BNE %102 ;BR IF NOT ;MJ0001
7319 036740 101#:
7320 036740 105777 000072 TSTB %1TKS ;WAIT FOR CHAR ;MJ0001
7321 036744 100375 BPL %101 ;MJ0001
7322 036746 117716 000066 MOVB %1TKB,(SP) ;GET CHAR ;MJ0001
7323 036752 042716 177600 BIC %177600,(SP) ;STRIP IT ;MJ0001
7324 036756 122716 000021 CMPB %1XON,(SP) ;WAS IT XON? ;MJ0001
7325 036762 001366 BNE %101 ;BR IF NOT ;MJ0001
7326 036764 102#:
7327 036764 005726 TST (SP); ;FIX STACK ;MJ0001
7328 036766 10#:
7329 036766 105777 000050 TSTB %1TPS ;WAIT UNTIL PRINTER IS READY ;MJ0001
7330 036772 100375 BPL %101 ;MJ0001
7331 036774 116677 000002 000042 MOVB 2(SP),%1TPB ;LOAD CHAR TO BE TYPED INTO DATA REG.
7332 037002 122766 000015 000002 CMPB %1CR,2(SP) ;IS CHARACTER A CARRIAGE RETURN?
7333 037010 001003 BNE %1 ;BRANCH IF NO
7334 037012 105067 000014 CLR%1 %1CHARCNT ;YES--CLEAR CHARACTER COUNT
7335 037016 000406 BR %1TYPEX ;EXIT
7336 037020 122766 000012 000002 1#: CMPB %1LF,2(SP) ;IS CHARACTER A LINE FEED?
7337 037026 001402 BEQ %1TYPEX ;BRANCH IF YES
7338 037030 105227 INCB (PC); ;COUNT THE CHARACTER
7339 037032 000000 %CHARCNT: %WORD 0 ;CHARACTER COUNT STORAGE
7340 037034 000207 %TYPEX: RTS PC
7341
7342 037036 177560 %TKS: %WORD 177560 ;TTY KDB STATUS ;MJ0001
7343 037040 177562 %TKB: %WORD 177562 ;TTY KDB BUFFER ;MJ0001
7344 037042 177564 %TPS: %WORD 177564 ;TTY PRINTER STATUS REG. ADDRESS
7345 037044 177566 %TPB: %WORD 177566 ;TTY PRINTER BUFFER REG. ADDRESS
7346 037046 000 %NULL: %BYTE 0 ;CONTAINS NULL CHARACTER FOR FILLS
7347 037047 002 %FILLS: %BYTE 2 ;CONTAINS # OF FILLER CHARACTERS REQUIRED
7348 037050 012 %FILLC: %BYTE 12 ;INSERT FILL CHARS. AFTER A "LINE FEED"
7349 037051 000 %TPFLG: %BYTE 0 ;"TERMINAL AVAILABLE" FLAG (BIT<07>=0=YES)
7350 037052 077 %QUES: %ASCII "?" ;QUESTION MARK
7351 037053 012 000 %LF: %ASCII <12> ;LINEFEED
7352 037056 .EVEN
7353 .SBTTL CONVERT BINARY TO DECIMAL AND TYPE ROUTINE
7354
7355 ;*****
7356 ;*THIS ROUTINE IS USED TO CHANGE A 16-BIT BINARY NUMBER TO A 5-DIGIT
7357 ;*SIGNED DECIMAL (ASCII) NUMBER AND TYPE IT. DEPENDING ON WHETHER THE
7358 ;*NUMBER IS POSITIVE OR NEGATIVE A SPACE OR A MINUS SIGN WILL BE TYPED
7359 ;*BEFORE THE FIRST DIGIT OF THE NUMBER. LEADING ZEROS WILL ALWAYS BE
7360 ;*REPLACED WITH SPACES.
7361 ;*CALL:
7362 ;* MOV NUM,-(SP) ;PUT THE BINARY NUMBER ON THE STACK
    
```

011

```

7363          ;*      TYPDS          ;GO TO THE ROUTINE
7364
7365          $TYPDS:
7366 037056 010046      MOV      R0,-(SP)      ;PUSH R0 ON STACK
7367 037060 010146      MOV      R1,-(SP)      ;PUSH R1 ON STACK
7368 037062 010246      MOV      R2,-(SP)      ;PUSH R2 ON STACK
7369 037064 010346      MOV      R3,-(SP)      ;PUSH R3 ON STACK
7370 037066 010546      MOV      R5,-(SP)      ;PUSH R5 ON STACK
7371 037070 012746 020200      MOV      #20200,-(SP) ;SET BLANK SWITCH AND SIGN
7372 037074 016605 000020      MOV      20(SP),R5    ;GET THE INPUT NUMBER
7373 037100 100004      BPL     1#           ;BR IF INPUT IS POS.
7374 037102 005405      NEG     R5           ;MAKE THE BINARY NUMBER POS.
7375 037104 112766 000055 000001      MOVB    #'-,1(SP)    ;MAKE THE ASCII NUMBER NEG.
7376 037112 005000      CLR     R0           ;ZERO THE CONSTANTS INDEX
7377 037114 012703 037272      MOV     #DBLK,R3     ;SETUP THE OUTPUT POINTER
7378 037120 112723 000040      MOVB    #' ,(R3)+    ;SET THE FIRST CHARACTER TO A BLANK
7379 037124 005002      CLR     R2           ;CLEAR THE BCD NUMBER
7380 037126 016001 037262      MOV     $DTBL(R0),R1 ;GET THE CONSTANT
7381 037132 160105      SUB     R1,R5        ;FORM THIS BCD DIGIT
7382 037134 002402      BLT    4#           ;BR IF DONE
7383 037136 005202      INC     R2           ;INCREASE THE BCD DIGIT BY 1
7384 037140 000774      BR     3#           ;
7385 037142 060105      ADD     R1,R5        ;ADD BACK THE CONSTANT
7386 037144 005702      TST    R2           ;CHECK IF BCD DIGIT=0
7387 037146 001002      BNE    5#           ;FALL THROUGH IF 0
7388 037150 105716      TSTB   (SP)         ;STILL DOING LEADING 0'S?
7389 037152 100407      BMI    7#           ;BR IF YES
7390 037154 106316      ASLB   (SP)         ;MSD?
7391 037156 103003      BCC    6#           ;BR IF NO
7392 037160 116663 000001 177777      MOVB    1(SP),-1(R3) ;YES--SET THE SIGN
7393 037166 052702 000060      BIS    #'0,R2       ;MAKE THE BCD DIGIT ASCII
7394 037172 052702 000040      BIS    #' ,R2       ;MAKE IT A SPACE IF NOT ALREADY A DIGIT
7395 037176 110223      MOVB   R2,(R3)+     ;PUT THIS CHARACTER IN THE OUTPUT BUFFER
7396 037200 005720      TST    (R0)+        ;JUST INCREMENTING
7397 037202 020027 000010      CMP    R0,#10       ;CHECK THE TABLE INDEX
7398 037206 002746      BLT    2#           ;GO DO THE NEXT DIGIT
7399 037210 003002      BGT    8#           ;GO TO EXIT
7400 037212 010502      MOV    R5,R2        ;GET THE LSD
7401 037214 000764      BR     6#           ;GO CHANGE TO ASCII
7402 037216 105726      TSTB   (SP)+        ;WAS THE LSD THE FIRST NON-ZERO?
7403 037220 100003      BPL    9#           ;BR IF NO
7404 037222 116663 177777 177776      MOVB    -1(SP),-2(R3);YES--SET THE SIGN FOR TYPING
7405 037230 105013      CLRB   (R3)         ;SET THE TERMINATOR
7406 037232 012605      MOV    (SP)+,R5     ;POP STACK INTO R5
7407 037234 012603      MOV    (SP)+,R3     ;POP STACK INTO R3
7408 037236 012602      MOV    (SP)+,R2     ;POP STACK INTO R2
7409 037240 012601      MOV    (SP)+,R1     ;POP STACK INTO R1
7410 037242 012600      MOV    (SP)+,R0     ;POP STACK INTO R0
7411 037244 104401 037272      TYPE   ,#DBLK       ;NOW TYPE THE NUMBER
7412 037250 016666 000002 000004      MOV    2(SP),4(SP)  ;ADJUST THE STACK
7413 037256 012616      MOV    (SP)+,(SP)   ;
7414 037260 000002      RTI                    ;RETURN TO USER
7415 037262 023420      $DTBL: 10000.
7416 037264 001750      1000.
7417 037266 000144      100.
7418 037270 000012      10.
    
```

```

7419 037272 000004      $DBLK: .BLKW 4
7420                      .SBTTL BINARY TO OCTAL (ASCII) AND TYPE
7421
7422                      ;;*****
7423                      ;*THIS ROUTINE IS USED TO CHANGE A 16-BIT BINARY NUMBER TO A 6-DIGIT
7424                      ;*OCTAL (ASCII) NUMBER AND TYPE IT.
7425                      ;*#TYPOS---ENTER HERE TO SETUP SUPPRESS ZEROS AND NUMBER OF DIGITS TO TYPE
7426                      ;*CALL:
7427                      ;*      MOV      NUM,-(SP)          ;;NUMBER TO BE TYPED
7428                      ;*      TYPOS          ;;CALL FOR TYPEOUT
7429                      ;*      .BYTE   N              ;;N=1 TO 6 FOR NUMBER OF DIGITS TO TYPE
7430                      ;*      .BYTE   M              ;;M=1 OR 0
7431                      ;*
7432                      ;*                      ;;1=TYPE LEADING ZEROS
7433                      ;*                      ;;0=SUPPRESS LEADING ZEROS
7434                      ;*#TYPON---ENTER HERE TO TYPE OUT WITH THE SAME PARAMETERS AS THE LAST
7435                      ;*#TYPOS OR #TYPOC
7436                      ;*CALL:
7437                      ;*      MOV      NUM,-(SP)          ;;NUMBER TO BE TYPED
7438                      ;*      TYPON          ;;CALL FOR TYPEOUT
7439                      ;*
7440                      ;*#TYPOC---ENTER HERE FOR TYPEOUT OF A 16 BIT NUMBER
7441                      ;*CALL:
7442                      ;*      MOV      NUM,-(SP)          ;;NUMBER TO BE TYPED
7443                      ;*      TYPOC          ;;CALL FOR TYPEOUT
7444
7445 037302 017646 000000      #TYPOS: MOV      @ (SP),-(SP)          ;;PICKUP THE MODE
7446 037306 116667 000001 000211  MOVB     1(SP),#OFILL          ;;LOAD ZERO FILL SWITCH
7447 037314 112667 000207      MOVB     (SP)+,#OMODE+1      ;;NUMBER OF DIGITS TO TYPE
7448 037320 062716 000002      ADD      @2,(SP)           ;;ADJUST RETURN ADDRESS
7449 037324 000406      BR      #TYPON
7450 037326 112767 000001 000171 #TYPOC: MOVB     @1,#OFILL          ;;SET THE ZERO FILL SWITCH
7451 037334 112767 000006 000165  MOVB     @6,#OMODE+1      ;;SET FOR SIX(6) DIGITS
7452 037342 112767 000005 000154 #TYPON: MOVB     @5,@CNT          ;;SET THE ITERATION COUNT
7453 037350 010346      MOV      R3,-(SP)         ;;SAVE R3
7454 037352 010446      MOV      R4,-(SP)         ;;SAVE R4
7455 037354 010546      MOV      R5,-(SP)         ;;SAVE R5
7456 037356 116704 000145      MOVB     @OMODE+1,R4      ;;GET THE NUMBER OF DIGITS TO TYPE
7457 037362 005404      NEG      R4
7458 037364 062704 000006      ADD      @6,R4           ;;SUBTRACT IT FOR MAX. ALLOWED
7459 037370 110467 000132      MOVB     R4,#OMODE       ;;SAVE IT FOR USE
7460 037374 116704 000125      MOVB     @OFILL,R4       ;;GET THE ZERO FILL SWITCH
7461 037400 016605 000012      MOV      12(SP),R5       ;;PICKUP THE INPUT NUMBER
7462 037404 005003      CLR      R3              ;;CLEAR THE OUTPUT WORD
7463 037406 006105      1#:    ROL      R5          ;;ROTATE MSB INTO "C"
7464 037410 000404      BR      3#              ;;GO DO MSB
7465 037412 006105      2#:    ROL      R5          ;;FORM THIS DIGIT
7466 037414 006105      ROL      R5
7467 037416 006105      ROL      R5
7468 037420 010503      MOV      R5,R3
7469 037422 006103      3#:    ROL      R3          ;;GET LSR OF THIS DIGIT
7470 037424 105367 000076      DECB     @MODE           ;;TYPE THIS DIGIT?
7471 037430 100016      BPL     ?#              ;;BR IF NO
7472 037432 042703 177770      BIC     ?177770,R3      ;;GET RID OF JUNK
7473 037436 001002      BNE     ?#              ;;TEST FOR 0
7474 037440 005704      TST     R4              ;;SUPPRESS THIS 0?

```

111

```

7475 037442 001403          BEQ      5#           ;;BR IF YES
7476 037444 005204          4#:    INC      R4           ;;DON'T SUPPRESS ANYMORE 0'S
7477 037446 052703 000060  BIS      0'0,R3        ;;MAKE THIS DIGIT ASCII
7478 037452 052703 000040  5#:    BIS      0' ,R3        ;;MAKE ASCII IF NOT ALREADY
7479 037456 110367 000040  MOVVB   R3,8#         ;;SAVE FOR TYPING
7480 037462 104401 037522  TYPE    .8#         ;;GO TYPE THIS DIGIT
7481 037466 105367 000032  7#:    DECB   $OCNT      ;;COUNT BY 1
7482 037472 003347          BGT      2#           ;;BR IF MORE TO DO
7483 037474 002402          BLT      6#           ;;BR IF DONE
7484 037476 005204          INC      R4           ;;INSURE LAST DIGIT ISN'T A BLANK
7485 037500 000744          BR       2#           ;;GO DO THE LAST DIGIT
7486 037502 012605  6#:    MOV     (SP)+,R5      ;;RESTORE R5
7487 037504 012604          MOV     (SP)+,R4      ;;RESTORE R4
7488 037506 012603          MOV     (SP)+,R3      ;;RESTORE R3
7489 037510 016666 000002 000004  MOV     2(SP),4(SP)    ;;SET THE STACK FOR RETURNING
7490 037516 012616          MOV     (SP)+,(SP)
7491 037520 000002          RTI
7492 037522 000          8#:    .BYTE   0           ;;STORAGE FOR ASCII DIGIT
7493 037523 000          .BYTE   0           ;;TERMINATOR FOR TYPE ROUTINE
7494 037524 000          $OCNT:  .BYTE   0           ;;OCTAL DIGIT COUNTER
7495 037525 000          $OFILL: .BYTE   0           ;;ZERO FILL SWITCH
7496 037526 000000          $OMODE: .WORD   0           ;;NUMBER OF DIGITS TO TYPE
7497          .SBTTL TRAP DECODER
7498
7499          ;;*****
7500          ;*THIS ROUTINE WILL PICKUP THE LOWER BYTE OF THE "TRAP" INSTRUCTION
7501          ;*AND USE IT TO INDEX THROUGH THE TRAP TABLE FOR THE STARTING ADDRESS
7502          ;*OF THE DESIRED ROUTINE. THEN USING THE ADDRESS OBTAINED IT WILL
7503          ;*GO TO THAT ROUTINE.
7504
7505 037530 010046          $TRAP: MOV     RO,-(SP)      ;;SAVE RO
7506 037532 016600 000002  MOV     2(SP),RO        ;;GET TRAP ADDRESS
7507 037536 005740          TST     -(RO)          ;;BACKUP BY 2
7508 037540 111000          MOVVB   (RO),RO        ;;GET RIGHT BYTE OF TRAP
7509 037542 006300          ASL     RO             ;;POSITION FOR INDEXING
7510 037544 016300 037564  MOV     $TRPAD(RO),RO   ;;INDEX TO TABLE
7511 037550 000200          RTS     RO             ;;GO TO ROUTINE
7512
7513
7514          ;;THIS IS USE TO HANDLE THE "GETPRI" MACRO
7515
7516 037552 011646          $TRAP2: MOV     (SP),-(SP)  ;;MOVE THE PC DOWN
7517 037554 016666 000004 000002  MOV     4(SP),2(SP)    ;;MOVE THE PSW DOWN
7518 037562 000002          RTI
7519
7520          .MACRO SETTRAP A,B,MSG
7521          ##SET A,B,\<TRAP+$TRP>,\<TRP,<MSG>
7522
7523          .NLIST
7524          $TRP=$TRP+1
7525          .LIST
7526          .ENOM SETTRAP
7527          .MACRO ##SET A,B,C,D,COMNT
7528          .IF EQ $TRP-1
7529          .SBTTL TRAP TABLE
7530
7531          ;*THIS TABLE CONTAINS THE STARTING ADDRESSES OF THE ROUTINES CALLED
    
```

111

```

7531 ;*BY THE "TRAP" INSTRUCTION.
7532 ;
7533 ; ROUTINE
7534 ; -----
7535 ;TRPAD: .WORD $TRAP2
7536 .ENDC
7537 .IIF NDF GNS,.NLIST
7538 A= C
7539 .IIF NDF GNS,.LIST
7540 B ;CALL=A TRAP*D(C) COMNT
7541 .ENDM $$SET
7542 .MACRO TRMTRP
7543 $TERM=-$TRPAD
7544 .ENDM TRMTRP
7545 .SBTTL TRAP TABLE
7546
7547 ;*THIS TABLE CONTAINS THE STARTING ADDRESSES OF THE ROUTINES CALLED
7548 ;*BY THE "TRAP" INSTRUCTION.
7549

```

```

7550 ; ROUTINE
7551 ; -----
7552 ;TRPAD: .WORD $TRAP2
7553 $TYPE ;CALL=TYPE TRAP*1(104401) TTY TYPEOUT ROUTINE
7554 $TYPOC ;CALL=TYPOC TRAP*2(104402) TYPE OCTAL NUMBER (WITH LEADING ZEROS)
7555 $TYPOS ;CALL=TYPOS TRAP*3(104403) TYPE OCTAL NUMBER (NO LEADING ZEROS)
7556 $TYPON ;CALL=TYPON TRAP*4(104404) TYPE OCTAL NUMBER (AS PER LAST CALL)
7557 $TYPDS ;CALL=TYPDS TRAP*5(104405) TYPE DECIMAL NUMBER (WITH SIGN)
7558
7559
7560 .SBTTL APT COMMUNICATIONS ROUTINE
7561

```

```

7562 ;*****
7563 037600 112767 000001 000236 $ATY1: MOVB #1,$FFLG ;TO REPORT FATAL ERROR
7564 037606 112767 000001 000226 $ATY3: MOVB #1,$MFLG ;TO TYPE A MESSAGE
7565 037614 000403 BR $ATYC
7566 037616 112767 000001 000220 $ATY4: MOVB #1,$FFLG ;TO ONLY REPORT FATAL ERROR
7567 037624 $ATYC:
7568 037624 010046 MOV R0,-(SP) ;PUSH R0 ON STACK
7569 037626 010146 MOV R1,-(SP) ;PUSH R1 ON STACK
7570 037630 105767 000206 TSTB $MFLG ;SHOULD TYPE A MESSAGE?
7571 037634 001450 BEQ 5$ ;IF NOT: BR
7572 037636 122767 000001 141154 CMPB #APTENV,$ENV ;OPERATING UNDER APT?
7573 037644 001031 BNE 3$ ;IF NOT: BR
7574 037646 132767 000100 141145 BITB #APTSPOOL,$ENVM ;SHOULD SPOOL MESSAGES?
7575 037654 001425 BEQ 3$ ;IF NOT: BR
7576 037656 017600 000004 MOV #4(SP),R0 ;GET MESSAGE ADDR.
7577 037662 062766 000002 000004 ADD #2,4(SP) ;BUMP RETURN ADDR.
7578 037670 005767 141104 1$: TST $MSGTYPE ;SEE IF DONE W/ LAST XMISSION?
7579 037674 001375 BNE 1$ ;IF NOT: WAIT
7580 037676 010067 141112 MOV R0,$MSGAD ;PUT ADDR IN MAILBOX
7581 037702 105720 2$: TSTB (R0)+ ;FIND END OF MESSAGE
7582 037704 001376 BNE 2$
7583 037706 166700 14110? SUB $MSGAD,R0 ;SUB START OF MESSAGE
7584 037712 006200 ASR R0 ;GET MESSAGE LGTH IN WORDS
7585 037714 010067 141076 MOV R0,$MSGLGT ;PUT LENGTH IN MAILBOX
7586 037720 012767 000004 141052 MOV #4,$MSGTYPE ;TELL APT TO TAKE MSG.

```

```

7587 037726 000413          BR          5$
7588 037730 017667 000004 000016 3$:  MOV      @4(SP),4$      ;;PUT MSG ADDR IN JSR LINKAGE
7589 037736 062766 000002 000004      ADD      @2,4(SP)      ;;BUMP RETURN ADDRESS
7590 037744 016746 140026      MOV      177776,-(SP)  ;;PUSH 177776 ON STACK
7591 037750 004767 176526      JSR      PC,$TYPE     ;;CALL TYPE MACRO
7592 037754 000000          .WORD    0
7593 037756          5$:
7594 037756 105767 000062          10$:  TSTB     $FFLG      ;;SHOULD REPORT FATAL ERROR?
7595 037762 001416          BEQ     12$          ;;IF NOT: BR
7596 037764 005767 141030          TST     $ENV        ;;RUNNING UNDER APT?
7597 037770 001413          BEQ     12$          ;;IF NOT: BR
7598 037772 005767 141002          11$:  TST     $MSGTYPE    ;;FINISHED LAST MESSAGE?
7599 037776 001375          BNE     11$          ;;IF NOT: WAIT
7600 040000 017667 000004 140774  MOV      @4(SP),$FATAL ;;GET ERROR #
7601 040006 062766 000002 000004  ADD      @2,4(SP)      ;;BUMP RETURN ADDR.
7602 040014 005267 140760          INC     $MSGTYPE    ;;TELL APT TO TAKE ERROR
7603 040020 105067 000020          12$:  CLRB    $FFLG      ;;CLEAR FATAL FLAG
7604 040024 105067 000013          CLRB    $LFLG      ;;CLEAR LOG FLAG
7605 040030 105067 000006          CLRB    $MFLG      ;;CLEAR MESSAGE FLAG
7606 040034 012601          MOV     (SP)+,R1     ;;POP STACK INTO R1
7607 040036 012600          MOV     (SP)+,R0     ;;POP STACK INTO R0
7608 040040 000207          RTS     PC          ;;RETURN
7609 040042 000          $MFLG: .BYTE 0      ;;MESSG. FLAG
7610 040043 000          $LFLG: .BYTE 0      ;;LOG FLAG
7611 040044 000          $FFLG: .BYTE 0      ;;FATAL FLAG
7612          040046          .EVEN
7613          000200          APTSIZE=200
7614          000001          APTENV=001
7615          000100          APTSPool=100
7616          000040          APTCSUP=040
7617          ;;*****
7618          ;THIS ROUTINE WILL INCREMENT THE ERROR COUNT AND THEN PASS THE UNIQUE
7619          ;ERROR NUMBER TO THE APT ERROR ROUTINE TO BE REPORTED TO THE APT SYSTEM.
7620
7621 040046 005267 141000          $ERROR: INC     $ERFLG      ;;INCREMENT ERROR FLAG
7622 040052 001775          BEQ     $ERROR      ;;DON'T LET IT GO TO ZERO
7623 040054 005267 140764          INC     ERRCNT      ;;INCREMENT THE ERROR COUNT
7624 040060 021627 001002          CMP     (SP), @1002  ;;IS ERROR FROM VECTOR AREA
7625 040064 101010          BMI     1$          ;;IF YES THEN
7626 040066 012767 007777 000106  MOV      @7777, 3$    ;;REPORT AN UNEXPECTED TRAP
7627 040074 012637 001062          MOV     (SP)+,@$SAVSP1 ;;SAVE UNEXPECTED TRAP DATA
7628 040100 012637 001064          MOV     (SP)+,@$SAVSP2 ;;AND RESTORE SP
7629 040104 000430          BR      2$          ;;ELSE
7630 040106 017667 000000 000066  1$:  MOV      @3(SP), 3$    ;;REPORT UNIQUE ERROR NUMBER TO APT
7631 040114 011667 000072          MOV     (SP),101$    ;;SAVE ERROR PC
7632 040120 062716 000002          ADD     @2,(SP)      ;;GET OVER UNIQUE ERROR NUMBER FOR RETURN
7633 040124 017637 000000 040134  100$: MOV      @3(SP),@102$
7634 040132 104401          TYPE   .ERR1        ;;TYPE ERROR MESSAGE
7635 040134 000000          102$: .WORD    0
7636 040136 062716 000002          ADD     @2,(SP)      ;;GET OVER ERROR MESSAGE
7637 040142 104401 002046          TYPE   .ERR1        ;;
7638 040146 016746 000030          MOV     3$,-(SP)    ;;PUSH UNIQUE ERROR NUMBER ON THE STACK
7639 040152 104402          TPOC   .ERR1        ;;TYPE OCTAL ERROR NUMBER
7640 040154 104401 002062          TYPE   .ERR2        ;;
7641 040160 016746 000026          MOV     101$,-(SP)  ;;PUSH ERROR PC ON THE STACK
7642 040164 104402          TPOC   .ERR2        ;;TYPE THE ERROR PC

```

```
7643 040166 122767 000001 140624 2: CMPB @APTENV, @ENV
7644 040174 001004 BNE 5:
7645 040176 004767 177414 JSR PC, @ATY4
7646 040202 000000 3: .WORD 0
7647 040204 000777 4: BR 4:
7648 040206 000000 5: HALT
7649 040210 000002 RTI
7650 040212 000000 101: .WORD 0
7651 040214 @PATCH::
7652 040214 000010 .BLKW 10
7653 000001 .END
```

```
;CHECK TO MAKE SURE WE'RE IN APT MODE
;IF YES THEN
;GO REPORT ERROR TO APT
;STORAGE FOR ERROR NUMBER
;LOOP HERE AFTER REPORTING ERROR TO APT
;IF NOT APT THEN HALT
;ALLOW RECOVERY FROM HALT
```



|        |   |        |      |       |       |      |      |       |       |
|--------|---|--------|------|-------|-------|------|------|-------|-------|
| ABASE  | = | 000000 | 547  |       |       |      |      |       |       |
| ACDW1  | = | 000000 | 547  |       |       |      |      |       |       |
| ACDW2  | = | 000000 | 547  |       |       |      |      |       |       |
| ACPUOP | = | 000000 | 547  | 562   |       |      |      |       |       |
| ADD7   | = | 003556 | 1083 | 1091  | 1099  | 1107 | 1116 | 1132# |       |
| ADDW0  | = | 000000 | 547  |       |       |      |      |       |       |
| ADDW1  | = | 000000 | 547  |       |       |      |      |       |       |
| ADDW10 | = | 000000 | 547  |       |       |      |      |       |       |
| ADDW11 | = | 000000 | 547  |       |       |      |      |       |       |
| ADDW12 | = | 000000 | 547  |       |       |      |      |       |       |
| ADDW13 | = | 000000 | 547  |       |       |      |      |       |       |
| ADDW14 | = | 000000 | 547  |       |       |      |      |       |       |
| ADDW15 | = | 000000 | 547  |       |       |      |      |       |       |
| ADDW2  | = | 000000 | 547  |       |       |      |      |       |       |
| ADDW3  | = | 000000 | 547  |       |       |      |      |       |       |
| ADDW4  | = | 000000 | 547  |       |       |      |      |       |       |
| ADDW5  | = | 000000 | 547  |       |       |      |      |       |       |
| ADDW6  | = | 000000 | 547  |       |       |      |      |       |       |
| ADDW7  | = | 000000 | 547  |       |       |      |      |       |       |
| ADDW8  | = | 000000 | 547  |       |       |      |      |       |       |
| ADDW9  | = | 000000 | 547  |       |       |      |      |       |       |
| ADEVCT | = | 000000 | 547  | 553   |       |      |      |       |       |
| ADEVH  | = | 000000 | 547  |       |       |      |      |       |       |
| AENV   | = | 000000 | 547  | 558   |       |      |      |       |       |
| AENVH  | = | 000000 | 547  | 559   |       |      |      |       |       |
| AFATAL | = | 000000 | 547  | 550   |       |      |      |       |       |
| ALLCTR | = | 001056 | 589# |       |       |      |      |       |       |
| AMADR1 | = | 000000 | 547  |       |       |      |      |       |       |
| AMADR2 | = | 000000 | 547  |       |       |      |      |       |       |
| AMADR3 | = | 000000 | 547  |       |       |      |      |       |       |
| AMADR4 | = | 000000 | 547  |       |       |      |      |       |       |
| AMAMS1 | = | 000000 | 547  |       |       |      |      |       |       |
| AMAMS2 | = | 000000 | 547  |       |       |      |      |       |       |
| AMAMS3 | = | 000000 | 547  |       |       |      |      |       |       |
| AMAMS4 | = | 000000 | 547  |       |       |      |      |       |       |
| AMSGAD | = | 000000 | 547  | 555   |       |      |      |       |       |
| AMSGLG | = | 000000 | 547  | 556   |       |      |      |       |       |
| AMSGTY | = | 000000 | 547  | 549   |       |      |      |       |       |
| AMTYP1 | = | 000000 | 547  |       |       |      |      |       |       |
| AMTYP2 | = | 000000 | 547  |       |       |      |      |       |       |
| AMTYP3 | = | 000000 | 547  |       |       |      |      |       |       |
| AMTYP4 | = | 000000 | 547  |       |       |      |      |       |       |
| APASS  | = | 000000 | 547  | 552   |       |      |      |       |       |
| APRIOR | = | 000000 | 547  |       |       |      |      |       |       |
| APTCSU | = | 000040 | 7276 | 7616# |       |      |      |       |       |
| APTENV | = | 000001 | 7269 | 7572  | 7614# | 7643 |      |       |       |
| APTSIZ | = | 000200 | 867  | 7613# |       |      |      |       |       |
| APTSPO | = | 000100 | 7271 | 7574  | 7615# |      |      |       |       |
| ASWREG | = | 000000 | 547  | 560   |       |      |      |       |       |
| ATESTN | = | 000000 | 547  | 551   |       |      |      |       |       |
| AUNIT  | = | 000000 | 547  | 554   |       |      |      |       |       |
| AUSMR  | = | 002000 | 466# | 547   | 561   |      |      |       |       |
| AVECT1 | = | 000000 | 547  |       |       |      |      |       |       |
| AVECT2 | = | 000000 | 547  |       |       |      |      |       |       |
| BEVENT | = | 177546 | 458# |       |       |      |      |       |       |
| BFA    | = | 003610 | 1077 | 1085  | 1093  | 1101 | 1110 | 1119  | 1138# |



|         |          |       |       |       |       |       |       |       |       |       |       |       |       |       |
|---------|----------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| CHEK7   | 005136   | 1497# | 1503  |       |       |       |       |       |       |       |       |       |       |       |
| CHK10   | 005404   | 1569  | 1574# |       |       |       |       |       |       |       |       |       |       |       |
| CHK7    | 005150   | 1498  | 1503# |       |       |       |       |       |       |       |       |       |       |       |
| CH10    | 005372   | 1568# | 1574  |       |       |       |       |       |       |       |       |       |       |       |
| CLRD    | ***** U  | 5809  |       |       |       |       |       |       |       |       |       |       |       |       |
| CLRI    | ***** U  | 5840  |       |       |       |       |       |       |       |       |       |       |       |       |
| CPD     | ***** U  | 4039  |       |       |       |       |       |       |       |       |       |       |       |       |
| CMPTN   | 017730   | 4047  | 4056  | 4065  | 4073  | 4095# |       |       |       |       |       |       |       |       |
| COUNT   | 001040   | 581#  | 817*  | 822*  | 823*  | 2919  | 2964  | 3004  | 3040  | 3070  | 3106  | 3144  | 3175  | 3194  |
|         |          | 3211  | 3229  | 3263  | 3282  | 3313  | 3332  | 3357  | 3371  | 3403  | 3415  | 3431  | 3444  | 3476  |
|         |          | 3512  | 3550  | 3575  | 3597  | 3619  | 3651  | 3670  | 3697  | 3711  | 3742  | 3780  | 3805  | 3843  |
|         |          | 3868  | 3906  | 3938  | 3968  | 4006  | 4030  | 4122  | 4361  | 4560  | 4779  | 4987  | 5206  | 5217  |
|         |          | 5506  | 5517  | 5622  | 5762  | 5824  | 6191  | 6369  | 6498  | 6797  | 7026  |       |       |       |
| CPEREG= | 77766    | 455#  |       |       |       |       |       |       |       |       |       |       |       |       |
| CPUTST= | 000001   | 1#    | 166   | 509   | 603   | 756   | 877   | 7233  |       |       |       |       |       |       |
| CR      | 000015   | 194#  | 752   | 756   | 761   | 763   | 766   | 7233  | 7241  | 7332  | 7344  |       |       |       |
| CRLF    | 000200   | 195#  | 7286  | 7344  |       |       |       |       |       |       |       |       |       |       |
| DATRAM= | 000001   | 1#    | 874   |       |       |       |       |       |       |       |       |       |       |       |
| DATVER  | 002146   | 820#  | 2918  | 2963  | 3003  | 3039  | 3069  | 3105  | 3143  | 3174  | 3193  | 3210  | 3228  | 3262  |
|         |          | 3281  | 3312  | 3331  | 3356  | 3370  | 3402  | 3414  | 3430  | 3443  | 3475  | 3511  | 3549  | 3574  |
|         |          | 3596  | 3618  | 3650  | 3669  | 3696  | 3710  | 3741  | 3779  | 3804  | 3842  | 3867  | 3905  | 3937  |
|         |          | 3967  | 4005  | 4029  | 4121  | 4559  | 4986  | 5505  | 5516  | 5621  | 5823  | 6190  | 6497  | 6796  |
| DATVFR  | 002130   | 815#  | 4360  | 4778  | 5205  | 5216  | 5761  | 6368  | 7025  |       |       |       |       |       |
| DAT1    | 002160   | 818   | 823#  | 826   |       |       |       |       |       |       |       |       |       |       |
| DCOUNT  | 001054   | 588#  |       |       |       |       |       |       |       |       |       |       |       |       |
| DDISP   | 177570   | 201#  | 585   | 848   |       |       |       |       |       |       |       |       |       |       |
| DISPLA  | 001050   | 585#  | 848*  | 856*  |       |       |       |       |       |       |       |       |       |       |
| DISPRE  | 000174   | 495#  | 856   |       |       |       |       |       |       |       |       |       |       |       |
| DIVD    | ***** U  | 4381  |       |       |       |       |       |       |       |       |       |       |       |       |
| DIVF    | ***** U  | 4133  |       |       |       |       |       |       |       |       |       |       |       |       |
| DSWR    | 177570   | 200#  | 584   | 847   |       |       |       |       |       |       |       |       |       |       |
| DVDSUB  | 022000   | 4389  | 4401  | 4413  | 4424  | 4435  | 4446  | 4457  | 4468  | 4480  | 4506# |       |       |       |
| DVFSUB  | 021002   | 4141  | 4151  | 4160  | 4168  | 4177  | 4185  | 4193  | 4201  | 4209  | 4217  | 4225  | 4233  | 4241  |
|         |          | 4250  | 4258  | 4267  | 4276  | 4285  | 4307# |       |       |       |       |       |       |       |
| D1      | 004236   | 1275# | 1291  | 1296  |       |       |       |       |       |       |       |       |       |       |
| D2      | 004250   | 1278* | 1279# |       |       |       |       |       |       |       |       |       |       |       |
| D3      | 004252   | 1280# | 1304  |       |       |       |       |       |       |       |       |       |       |       |
| D4      | 004270   | 1288# | 1325  | 1331  |       |       |       |       |       |       |       |       |       |       |
| D5      | 004304   | 1289  | 1292# |       |       |       |       |       |       |       |       |       |       |       |
| D6      | 004314   | 1293  | 1295# |       |       |       |       |       |       |       |       |       |       |       |
| D7      | 004320   | 1294  | 1297# |       |       |       |       |       |       |       |       |       |       |       |
| EMTVEC= | 000030   | 289#  | 836*  | 837*  |       |       |       |       |       |       |       |       |       |       |
| ERR     | 002126   | 794#  |       |       |       |       |       |       |       |       |       |       |       |       |
| ERRCNT  | 001044   | 583#  | 7623* |       |       |       |       |       |       |       |       |       |       |       |
| ERRFP   | 002124   | 793#  |       |       |       |       |       |       |       |       |       |       |       |       |
| ERRMSG  | 001766 G | 752#  |       |       |       |       |       |       |       |       |       |       |       |       |
| ERRNUM= | 000514   | 465#  | 785   | 788#  | 941   | 945#  | 956   | 959#  | 965   | 968#  | 974   | 977#  | 983   | 986#  |
|         |          | 993   | 996#  | 1003  | 1006# | 1079  | 1082# | 1087  | 1090# | 1095  | 1098# | 1103  | 1106# | 1112  |
|         |          | 1115# | 1121  | 1124# | 1175  | 1178# | 1208  | 1211# | 1228  | 1231# | 1236  | 1239# | 1246  | 1249# |
|         |          | 1254  | 1257# | 1284  | 1287# | 1306  | 1309# | 1314  | 1317# | 1326  | 1330# | 1333  | 1337# | 1340  |
|         |          | 1344# | 1364  | 1367# | 1371  | 1374# | 1380  | 1384# | 1404  | 1407# | 1412  | 1415# | 1421  | 1424# |
|         |          | 1429  | 1432# | 1448  | 1452# | 1499  | 1502# | 1506  | 1510# | 1570  | 1573# | 1577  | 1581# | 1616  |
|         |          | 1619# | 1623  | 1626# | 1652  | 1655# | 1658  | 1661# | 1685  | 1688# | 1692  | 1695# | 1699  | 1702# |
|         |          | 1708  | 1712# | 1737  | 1740# | 1745  | 1748# | 1752  | 1755# | 1761  | 1765# | 1791  | 1794# | 1798  |
|         |          | 1801# | 1805  | 1808# | 1813  | 1816# | 1820  | 1823# | 1829  | 1833# | 1858  | 1861# | 1865  | 1868# |
|         |          | 1873  | 1876# | 1880  | 1883# | 1889  | 1893# | 1919  | 1922# | 1925  | 1928# | 1932  | 1935# | 1940  |

|       |       |       |       |       |       |       |       |       |       |       |       |       |
|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| 1943# | 1947  | 1950# | 1956  | 1960# | 1985  | 1988# | 1993  | 1996# | 2001  | 2004# | 2008  | 2011# |
| 2017  | 2021# | 2048  | 2051# | 2055  | 2058# | 2062  | 2065# | 2069  | 2072# | 2076  | 2079# | 2085  |
| 2089# | 2115  | 2118# | 2123  | 2126# | 2130  | 2133# | 2139  | 2143# | 2169  | 2172# | 2176  | 2179# |
| 2185  | 2189# | 2216  | 2219# | 2223  | 2226# | 2229  | 2232# | 2236  | 2239# | 2245  | 2249# | 2273  |
| 2276# | 2281  | 2284# | 2289  | 2292# | 2296  | 2299# | 2316  | 2319# | 2327  | 2330# | 2338  | 2341# |
| 2351  | 2354# | 2362  | 2365# | 2372  | 2375# | 2384  | 2387# | 2437  | 2440# | 2445  | 2448# | 2454  |
| 2457# | 2463  | 2466# | 2472  | 2475# | 2481  | 2484# | 2493  | 2496# | 2545  | 2548# | 2553  | 2556# |
| 2562  | 2565# | 2571  | 2574# | 2580  | 2583# | 2589  | 2592# | 2600  | 2603# | 2650  | 2653# | 2657  |
| 2660# | 2664  | 2667# | 2674  | 2678# | 2705  | 2708# | 2716  | 2719# | 2727  | 2730# | 2738  | 2741# |
| 2792  | 2795# | 2803  | 2806# | 2814  | 2817# | 2825  | 2828# | 2871  | 2874# | 2878  | 2881# | 2884  |
| 2887# | 2906  | 2909# | 2912  | 2915# | 2922  | 2925# | 2945  | 2948# | 2951  | 2954# | 2957  | 2960# |
| 2966  | 2969# | 2992  | 2995# | 2998  | 3001# | 3006  | 3009# | 3028  | 3031# | 3034  | 3037# | 3042  |
| 3045# | 3063  | 3066# | 3072  | 3075# | 3094  | 3097# | 3100  | 3103# | 3108  | 3111# | 3131  | 3134# |
| 3139  | 3142# | 3146  | 3149# | 3168  | 3171# | 3177  | 3180# | 3189  | 3192# | 3196  | 3199# | 3205  |
| 3208# | 3213  | 3216# | 3224  | 3227# | 3231  | 3234# | 3257  | 3260# | 3265  | 3268# | 3276  | 3279# |
| 3284  | 3287# | 3308  | 3311# | 3315  | 3318# | 3326  | 3329# | 3334  | 3337# | 3359  | 3362# | 3373  |
| 3376# | 3397  | 3400# | 3405  | 3408# | 3417  | 3420# | 3433  | 3436# | 3446  | 3449# | 3470  | 3473# |
| 3478  | 3481# | 3489  | 3492# | 3498  | 3501# | 3505  | 3508# | 3514  | 3517# | 3527  | 3530# | 3536  |
| 3539# | 3543  | 3546# | 3552  | 3555# | 3569  | 3572# | 3577  | 3580# | 3591  | 3594# | 3599  | 3602# |
| 3613  | 3616# | 3621  | 3624# | 3645  | 3648# | 3653  | 3656# | 3664  | 3667# | 3672  | 3675# | 3699  |
| 3702# | 3713  | 3716# | 3736  | 3739# | 3744  | 3747# | 3757  | 3760# | 3766  | 3769# | 3773  | 3776# |
| 3782  | 3785# | 3799  | 3802# | 3807  | 3810# | 3820  | 3823# | 3829  | 3832# | 3836  | 3839# | 3845  |
| 3848# | 3862  | 3865# | 3870  | 3873# | 3883  | 3886# | 3894  | 3897# | 3900  | 3903# | 3908  | 3911# |
| 3932  | 3935# | 3940  | 3943# | 3953  | 3956# | 3962  | 3965# | 3970  | 3973# | 3984  | 3987# | 4000  |
| 4003# | 4008  | 4011# | 4024  | 4027# | 4032  | 4035# | 4112  | 4115# | 4124  | 4127# | 4323  | 4326# |
| 4332  | 4335# | 4341  | 4344# | 4354  | 4357# | 4363  | 4366# | 4374  | 4377# | 4522  | 4525# | 4531  |
| 4534# | 4540  | 4543# | 4553  | 4556# | 4562  | 4565# | 4573  | 4576# | 4741  | 4744# | 4750  | 4753# |
| 4759  | 4762# | 4772  | 4775# | 4781  | 4784# | 4793  | 4796# | 4949  | 4952# | 4958  | 4961# | 4967  |
| 4970# | 4980  | 4983# | 4989  | 4992# | 5001  | 5004# | 5167  | 5170# | 5176  | 5179# | 5185  | 5188# |
| 5199  | 5202# | 5208  | 5211# | 5219  | 5222# | 5230  | 5233# | 5467  | 5470# | 5476  | 5479# | 5485  |
| 5488# | 5499  | 5502# | 5508  | 5511# | 5519  | 5522# | 5530  | 5533# | 5615  | 5618# | 5624  | 5627# |
| 5630  | 5634# | 5726  | 5729# | 5735  | 5738# | 5744  | 5747# | 5755  | 5758# | 5764  | 5767# | 5776  |
| 5779# | 5796  | 5799# | 5802  | 5805# | 5826  | 5829# | 5833  | 5836# | 5853  | 5856# | 5859  | 5862# |
| 5880  | 5883# | 5886  | 5889# | 5892  | 5895# | 5900  | 5903# | 5921  | 5924# | 5927  | 5930# | 5933  |
| 5936# | 5941  | 5944# | 5964  | 5967# | 5970  | 5973# | 5976  | 5979# | 5984  | 5987# | 6005  | 6008# |
| 6011  | 6014# | 6017  | 6020# | 6025  | 6028# | 6048  | 6051# | 6054  | 6057# | 6060  | 6063# | 6068  |
| 6071# | 6089  | 6092# | 6095  | 6098# | 6101  | 6104# | 6109  | 6112# | 6132  | 6135# | 6138  | 6141# |
| 6144  | 6147# | 6152  | 6155# | 6176  | 6179# | 6183  | 6186# | 6193  | 6196# | 6362  | 6365# | 6371  |
| 6374# | 6380  | 6383# | 6491  | 6494# | 6500  | 6503# | 6509  | 6512# | 6758  | 6761# | 6767  | 6770# |
| 6776  | 6779# | 6790  | 6793# | 6799  | 6802# | 6811  | 6814# | 6990  | 6993# | 6999  | 7002# | 7008  |
| 7011# | 7019  | 7022# | 7028  | 7031# | 7040  | 7043# | 7169  | 7172# | 7176  | 7179# | 7185  | 7188# |

ERRTN = 000000  
 ERRVEC = 000004  
 ERR1 002046  
 ERR2 002062  
 EXPDAT 001034  
 FACU = \*\*\*\*\* U  
 FIN1 003742  
 FIN10 005450  
 FIN11 005560  
 FIN13 006004  
 FIN14 006160  
 FIN15 006400  
 FIN16 006572  
 FIN17 007006  
 FIN2 004044

463#  
 282# 845 846# 857#  
 761# 7637  
 763# 7640  
 579#  
 1040  
 1169 1180#  
 1565 1596#  
 1630 1636#  
 1706 1715#  
 1759 1768#  
 1827 1836#  
 1887 1896#  
 1954 1963#  
 1199 1213#















|         |   |         |      |      |      |      |      |       |       |           |
|---------|---|---------|------|------|------|------|------|-------|-------|-----------|
| STACK   | = | 001000  | 187# | 834  |      |      |      |       |       |           |
| START   |   | 002200  | 492  | 498  | 831# |      |      |       |       |           |
| STBOT   | = | 001000  | 470# |      |      |      |      |       |       |           |
| STKLMT  | = | 177774  | 198# |      |      |      |      |       |       |           |
| SUBT    |   | 003524  | 1064 | 1067 | 1069 | 1071 | 1073 | 1127# |       |           |
| SWR     |   | 001046  | 584# | 847* | 849  | 855* | 869* |       |       |           |
| SWRFG   | = | 000176  | 496# | 855  |      |      |      |       |       |           |
| SW0     | = | 000001  | 251# |      |      |      |      |       |       |           |
| SW00    | = | 000001  | 241# | 251  |      |      |      |       |       |           |
| SW01    | = | 000002  | 240# | 250  |      |      |      |       |       |           |
| SW02    | = | 000004  | 239# | 249  |      |      |      |       |       |           |
| SW03    | = | 000010  | 238# | 248  |      |      |      |       |       |           |
| SW04    | = | 000020  | 237# | 247  |      |      |      |       |       |           |
| SW05    | = | 000040  | 236# | 246  |      |      |      |       |       |           |
| SW06    | = | 000100  | 235# | 245  |      |      |      |       |       |           |
| SW07    | = | 000200  | 234# | 244  |      |      |      |       |       |           |
| SW08    | = | 000400  | 233# | 243  |      |      |      |       |       |           |
| SW09    | = | 001000  | 232# | 242  |      |      |      |       |       |           |
| SW1     | = | 000002  | 250# |      |      |      |      |       |       |           |
| SW10    | = | 002000  | 231# |      |      |      |      |       |       |           |
| SW11    | = | 004000  | 230# |      |      |      |      |       |       |           |
| SW12    | = | 010000  | 229# |      |      |      |      |       |       |           |
| SW13    | = | 020000  | 228# |      |      |      |      |       |       |           |
| SW14    | = | 040000  | 227# |      |      |      |      |       |       |           |
| SW15    | = | 100000  | 226# |      |      |      |      |       |       |           |
| SW2     | = | 000004  | 249# |      |      |      |      |       |       |           |
| SW3     | = | 000010  | 248# |      |      |      |      |       |       |           |
| SW4     | = | 000020  | 247# |      |      |      |      |       |       |           |
| SW5     | = | 000040  | 246# |      |      |      |      |       |       |           |
| SW6     | = | 000100  | 245# |      |      |      |      |       |       |           |
| SW7     | = | 000200  | 244# |      |      |      |      |       |       |           |
| SW8     | = | 000400  | 243# |      |      |      |      |       |       |           |
| SW9     | = | 001000  | 242# |      |      |      |      |       |       |           |
| SXP     | = | ***** U | 7089 |      |      |      |      |       |       |           |
| SXP SUB |   | 036154  | 7096 | 7103 | 7110 | 7117 | 7124 | 7131  | 7152# |           |
| TAB1    |   | 001176  | 610# | 2898 | 2910 | 2916 | 3020 | 3038  | 3086  | 3104 3299 |
| TAB10   |   | 001326  | 652# | 3390 | 3429 |      |      |       |       |           |
| TAB11   |   | 001336  | 656# | 3388 |      |      |      |       |       |           |
| TAB11A  |   | 001346  | 660# | 3401 |      |      |      |       |       |           |
| TAB12   |   | 001356  | 662# | 3409 |      |      |      |       |       |           |
| TAB13   |   | 001366  | 664# |      |      |      |      |       |       |           |
| TAB13B  |   | 001376  | 668# | 3412 |      |      |      |       |       |           |
| TAB14   |   | 001406  | 670# | 3422 | 3657 |      |      |       |       |           |
| TAB15   |   | 001416  | 674# | 3423 |      |      |      |       |       |           |
| TAB16   |   | 001426  | 678# | 3437 | 3948 |      |      |       |       |           |
| TAB17   |   | 001436  | 682# | 3442 |      |      |      |       |       |           |
| TAB18   |   | 001446  | 685# | 3330 |      |      |      |       |       |           |
| TAB2    |   | 001206  | 614# | 2936 | 2961 | 3055 | 3246 |       |       |           |
| TAB21   |   | 001456  | 689# | 3462 | 3483 | 3520 | 3637 |       |       |           |
| TAB22   |   | 001466  | 691# | 3474 |      |      |      |       |       |           |
| TAB23   |   | 001476  | 693# | 3484 | 3519 |      |      |       |       |           |
| TAB24   |   | 001506  | 695# | 3510 | 3548 |      |      |       |       |           |
| TAB25   |   | 001516  | 697# | 3558 | 3582 |      |      |       |       |           |
| TAB26   |   | 001526  | 699# | 3557 | 3583 |      |      |       |       |           |
| TAB27   |   | 001536  | 701# | 3573 | 3595 |      |      |       |       |           |
| TAB28   |   | 001546  | 703# | 3605 |      |      |      |       |       |           |





|        |        |       |       |       |
|--------|--------|-------|-------|-------|
| TST21  | 006572 | 19020 |       |       |
| TST22  | 007006 | 19690 |       |       |
| TST23  | 007206 | 20300 |       |       |
| TST24  | 007430 | 20970 |       |       |
| TST25  | 007616 | 21520 |       |       |
| TST26  | 007754 | 21970 |       |       |
| TST27  | 010156 | 22580 |       |       |
| TST3   | 003650 | 11560 |       |       |
| TST30  | 010320 | 23060 |       |       |
| TST31  | 010720 | 24210 |       |       |
| TST32  | 011264 | 25290 |       |       |
| TST33  | 011632 | 26360 |       |       |
| TST34  | 011774 | 26870 |       |       |
| TST35  | 012270 | 27740 |       |       |
| TST36  | 012566 | 28610 |       |       |
| TST37  | 012656 | 28950 |       |       |
| TST4   | 003742 | 11860 |       |       |
| TST40  | 012764 | 29320 |       |       |
| TST41  | 013124 | 29760 |       |       |
| TST42  | 013250 | 30160 |       |       |
| TST43  | 013360 | 30520 |       |       |
| TST44  | 013460 | 30820 |       |       |
| TST45  | 013566 | 31180 |       |       |
| TST46  | 013700 | 31560 |       |       |
| TST47  | 014164 | 32420 |       |       |
| TST5   | 004044 | 12190 |       |       |
| TST50  | 014342 | 32950 |       |       |
| TST51  | 014510 | 33450 |       |       |
| TST52  | 014634 | 33840 |       |       |
| TST53  | 015104 | 34580 |       |       |
| TST54  | 015720 | 36330 |       |       |
| TST55  | 016066 | 36830 |       |       |
| TST56  | 016212 | 37230 |       |       |
| TST57  | 017120 | 39190 |       |       |
| TST6   | 004164 | 12650 |       |       |
| TST60  | 017542 | 40430 |       |       |
| TST61  | 020056 | 41370 |       |       |
| TST62  | 021244 | 43850 |       |       |
| TST63  | 022242 | 45840 |       |       |
| TST64  | 023304 | 48030 |       |       |
| TST65  | 024336 | 50110 |       |       |
| TST66  | 025436 | 52440 |       |       |
| TST67  | 027136 | 55410 |       |       |
| TST7   | 004444 | 13520 |       |       |
| TST70  | 027456 | 56430 |       |       |
| TST71  | 030144 | 57870 |       |       |
| TST72  | 030214 | 58130 |       |       |
| TST73  | 030306 | 58440 |       |       |
| TST74  | 030356 | 58700 |       |       |
| TST75  | 030474 | 59110 |       |       |
| TST76  | 030612 | 59520 |       |       |
| TST77  | 030746 | 59950 |       |       |
| TS1001 | 005420 | 1538  | 1550  | 15840 |
| TS1002 | 005430 | 1540  | 1547  | 15880 |
| TS1004 | 005440 | 1558  | 15920 |       |
| TS1101 | 005550 | 1607  | 16320 |       |



|                   |       |       |       |       |       |
|-------------------|-------|-------|-------|-------|-------|
| UIPAR1 = 177642   | 332#  |       |       |       |       |
| UIPAR2 = 177644   | 333#  |       |       |       |       |
| UIPAR3 = 177646   | 334#  |       |       |       |       |
| UIPAR4 = 177650   | 335#  |       |       |       |       |
| UIPAR5 = 177652   | 336#  |       |       |       |       |
| UIPAR6 = 177654   | 337#  |       |       |       |       |
| UIPAR7 = 177656   | 339#  |       |       |       |       |
| UIPDR0 = 177600   | 309#  |       |       |       |       |
| UIPDR1 = 177602   | 310#  |       |       |       |       |
| UIPDR2 = 177604   | 311#  |       |       |       |       |
| UIPDR3 = 177606   | 312#  |       |       |       |       |
| UIPDR4 = 177610   | 313#  |       |       |       |       |
| UIPDR5 = 177612   | 314#  |       |       |       |       |
| UIPDR6 = 177614   | 315#  |       |       |       |       |
| UIPDR7 = 177616   | 316#  |       |       |       |       |
| UVAD = ***** U    | 3719  |       |       |       |       |
| WLDTRP 002106     | 783#  | 3789  | 3852  |       |       |
| XBUF = 177566     | 462#  |       |       |       |       |
| XCSR = 177564     | 461#  |       |       |       |       |
| XDF1 = ***** U    | 3380  |       |       |       |       |
| \$APTHD 000204    | 518   | 524#  |       |       |       |
| \$ASTAT = ***** U | 7594  | 7609  |       |       |       |
| \$ATYC 037624     | 7565  | 7567# |       |       |       |
| \$ATY1 037600     | 7563# |       |       |       |       |
| \$ATY3 037606     | 7274  | 7564# |       |       |       |
| \$ATY4 037616     | 7566# | 7645  |       |       |       |
| \$CHARC 037032    | 7291# | 7301# | 7308  | 7334# | 7339# |
| \$CKSWR = ***** U | 7560  |       |       |       |       |
| \$CMTAG = ***** U | 834   | 840   | 842   |       |       |
| \$CPUOP 001026    | 562#  |       |       |       |       |
| \$CRLF 002077     | 766#  | 7290  | 7351  |       |       |
| \$DBLK 037272     | 7377  | 7411  | 7419# |       |       |
| \$DEVCT 001010    | 553#  |       |       |       |       |
| \$DOAGN 036372    | 7213  | 7222  | 7228# |       |       |
| \$DTBL 037262     | 7380  | 7415# |       |       |       |
| \$ENDAD 036362    | 505   | 7224# |       |       |       |
| \$ENDCT 036330    | 841   | 7215# |       |       |       |
| \$ENULL 036376    | 7220  | 7231# |       |       |       |
| \$ENV 001020      | 558#  | 7269  | 7572  | 7596  | 7643  |
| \$ENVH 001021     | 559#  | 867   | 7271  | 7276  | 7574  |
| \$EOP 036274      | 7204# |       |       |       |       |
| \$EOPCT 036322    | 841#  | 7212# | 7216  |       |       |
| \$ERFLG 001052    | 586#  | 842#  | 7621# |       |       |
| \$ERROR 040046    | 836   | 871   | 7621# | 7622  |       |
| \$ETABL 001020    | 557#  |       |       |       |       |
| \$ETEND 001030    | 530   | 569#  |       |       |       |
| \$FATAL 001002    | 550#  | 7600# |       |       |       |
| \$FFLG 040044     | 7563# | 7566# | 7594  | 7603# | 7611# |
| \$FILLC 037050    | 7294  | 7348# |       |       |       |
| \$FILLS 037047    | 7347# |       |       |       |       |
| \$GET42 036352    | 7221# |       |       |       |       |
| \$GTSWR = ***** U | 7559  |       |       |       |       |
| \$HD = 000003     | 175   | 176   |       |       |       |
| \$HIBTS 000204    | 525#  |       |       |       |       |
| \$LF 037053       | 7351# |       |       |       |       |
| \$LFLG 040043     | 7604# | 7610# |       |       |       |



|         |           |       |       |       |       |       |       |       |       |       |       |       |       |       |
|---------|-----------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| \$MAIL  | 001000    | 526   | 530   | 548#  | 859   | 7269  |       |       |       |       |       |       |       |       |
| \$MBADR | 000206    | 526#  |       |       |       |       |       |       |       |       |       |       |       |       |
| \$MFLG  | 040042    | 7564* | 7570  | 7605* | 7609# |       |       |       |       |       |       |       |       |       |
| \$MSGAD | 001014    | 555#  | 7580* | 7583  |       |       |       |       |       |       |       |       |       |       |
| \$MSGLG | 001016    | 556#  | 7585- |       |       |       |       |       |       |       |       |       |       |       |
| \$MSGTY | 001000    | 549#  | 7578  | 7586* | 7598  | 7602* |       |       |       |       |       |       |       |       |
| \$NULL  | 037046    | 7296  | 7346# |       |       |       |       |       |       |       |       |       |       |       |
| \$NWTST | 000001    | 884#  | 886   | 1041# | 1043  | 1153# | 1183# | 1216# | 1262# | 1349# | 1389# | 1457# | 1528# | 1599# |
|         |           | 1639# | 1666# | 1718# | 1771# | 1839# | 1899# | 1966# | 2027# | 2094# | 2149# | 2194# | 2255# | 2303# |
|         |           | 2418# | 2526# | 2633# | 2684# | 2771# | 2858# | 2892# | 2929# | 2973# | 3013# | 3049# | 3079# | 3115# |
|         |           | 3153# | 3239# | 3292# | 3342# | 3381# | 3455# | 3630# | 3680# | 3720# | 3916# | 4040# | 4134# | 4382# |
|         |           | 4581# | 4800# | 5008# | 5241# | 5538# | 5640# | 5784# | 5810# | 5841# | 5867# | 5908# | 5949# | 5992# |
|         |           | 6033# | 6076# | 6117# | 6160# | 6202# | 6388# | 6518# | 6820# | 7049# | 7090# |       |       |       |
|         |           | 7452* | 7481* | 7494# |       |       |       |       |       |       |       |       |       |       |
| \$OCNT  | 037524    | 7447* | 7451* | 7456  | 7459* | 7470* | 7496# |       |       |       |       |       |       |       |
| \$OMODE | 037526    | 552#  | 840*  | 866*  | 7205  | 7209* | 7210* | 7218  | 7231  |       |       |       |       |       |
| \$PASS  | 001006    | 528#  |       |       |       |       |       |       |       |       |       |       |       |       |
| \$PASTM | 000212    | 7651# |       |       |       |       |       |       |       |       |       |       |       |       |
| \$PATCH | 040214 G  | 7350# |       |       |       |       |       |       |       |       |       |       |       |       |
| \$QUES  | 037052    | 7560  |       |       |       |       |       |       |       |       |       |       |       |       |
| \$RDCHR | = ***** U | 7560  |       |       |       |       |       |       |       |       |       |       |       |       |
| \$RDDEC | = ***** U | 7560  |       |       |       |       |       |       |       |       |       |       |       |       |
| \$RDLIN | = ***** U | 7560  |       |       |       |       |       |       |       |       |       |       |       |       |
| \$RDOCT | = ***** U | 7560  |       |       |       |       |       |       |       |       |       |       |       |       |
| \$RTNAD | 036374    | 7230# |       |       |       |       |       |       |       |       |       |       |       |       |
| \$R2A   | = ***** U | 7560  |       |       |       |       |       |       |       |       |       |       |       |       |
| \$SAVRE | = ***** U | 7560  |       |       |       |       |       |       |       |       |       |       |       |       |
| \$SETUP | = 000126  | 471#  | 835   | 836   | 838   | 840   | 842   | 843   | 7209  |       |       |       |       |       |
| \$STUP  | = 177777  | 471#  |       |       |       |       |       |       |       |       |       |       |       |       |
| \$SVPC  | = 000204  | 503#  | 508   |       |       |       |       |       |       |       |       |       |       |       |
| \$SWR   | = 160000  | 175   | 176#  | 843   | 895   | 1050  | 1158  | 1188  | 1221  | 1267  | 1354  | 1394  | 1462  | 1533  |
|         |           | 1604  | 1644  | 1671  | 1723  | 1776  | 1844  | 1904  | 1971  | 2032  | 2099  | 2154  | 2199  | 2260  |
|         |           | 2308  | 2423  | 2531  | 2638  | 2689  | 2776  | 2863  | 2897  | 2934  | 2978  | 3018  | 3054  | 3084  |
|         |           | 3120  | 3158  | 3244  | 3297  | 3347  | 3386  | 3460  | 3635  | 3685  | 3725  | 3921  | 4045  | 4139  |
|         |           | 4387  | 4586  | 4805  | 5013  | 5246  | 5543  | 5645  | 5789  | 5815  | 5846  | 5872  | 5913  | 5954  |
|         |           | 5997  | 6038  | 6081  | 6122  | 6165  | 6207  | 6393  | 6523  | 6825  | 7054  | 7095  | 7201  | 7209  |
|         |           | 7223  | 7229  | 7231  |       |       |       |       |       |       |       |       |       |       |
| \$SWREG | 001022    | 560#  | 869   |       |       |       |       |       |       |       |       |       |       |       |
| \$TESTN | 001004    | 551#  | 874*  | 894*  | 1049* | 1157* | 1187* | 1220* | 1266* | 1353* | 1393* | 1461* | 1532* | 1603* |
|         |           | 1643* | 1670* | 1722* | 1775* | 1843* | 1903* | 1970* | 2031* | 2098* | 2153* | 2198* | 2259* | 2307* |
|         |           | 2422* | 2530* | 2637* | 2688* | 2775* | 2862* | 2896* | 2933* | 2977* | 3017* | 3053* | 3083* | 3119* |
|         |           | 3157* | 3243* | 3296* | 3346* | 3385* | 3459* | 3634* | 3684* | 3724* | 3920* | 4044* | 4138* | 4386* |
|         |           | 4585* | 4804* | 5012* | 5245* | 5542* | 5644* | 5788* | 5814* | 5845* | 5871* | 5912* | 5953* | 5996* |
|         |           | 6037* | 6080* | 6121* | 6164* | 6206* | 6392* | 6522* | 6824* | 7053* | 7094* |       |       |       |
| \$TKB   | 037040    | 7315  | 7322  | 7343# |       |       |       |       |       |       |       |       |       |       |
| \$TKS   | 037036    | 7313  | 7320  | 7342# |       |       |       |       |       |       |       |       |       |       |
| \$TN    | = 000112  | 175#  | 884   | 895#  | 1041  | 1050# | 1153  | 1158# | 1183  | 1188# | 1216  | 1221# | 1262  | 1267# |
|         |           | 1349  | 1354# | 1389  | 1394# | 1457  | 1462# | 1528  | 1533# | 1599  | 1604# | 163#  | 1644# | 1666  |
|         |           | 1671# | 1718  | 1723# | 1771  | 1776# | 1839  | 1844# | 1899  | 1904# | 1966  | 1971# | 2027  | 2032# |
|         |           | 2094  | 2099# | 2149  | 2154# | 2194  | 2199# | 2255  | 2260# | 2303  | 2308# | 2418  | 2423# | 2526  |
|         |           | 2531# | 2633  | 2638# | 2684  | 2689# | 2771  | 2776# | 2858  | 2863# | 2892  | 2897# | 2929  | 2934# |
|         |           | 2973  | 2978# | 3013  | 3018# | 3049  | 3054# | 3079  | 3084# | 3115  | 3120# | 3153  | 3158# | 3239  |
|         |           | 3244# | 3292  | 3297# | 3342  | 3347# | 3381  | 3386# | 3455  | 3460# | 3630  | 3635# | 3680  | 3685# |
|         |           | 3720  | 3725# | 3916  | 3921# | 4040  | 4045# | 4134  | 4139# | 4382  | 4387# | 4581  | 4586# | 4800  |
|         |           | 4805# | 5008  | 5013# | 5241  | 5246# | 5538  | 5543# | 5640  | 5645# | 5784  | 5789# | 5810  | 5815# |
|         |           | 5841  | 5846# | 5867  | 5872# | 5908  | 5913# | 5949  | 5954# | 5992  | 5997# | 6033  | 6038# | 6076  |
|         |           | 6081# | 6117  | 6122# | 6160  | 6165# | 6202  | 6207# | 6388  | 6393# | 6518  | 6523# | 6820  | 6825# |



|        |       |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
|--------|-------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| BGNMOD | 160#  | 876  |      |      |      |      |      |      |      |      |      |      |      |      |      |
| BGNSUB | 161#  |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| BGNTST | 160#  | 893  | 1048 | 1156 | 1186 | 1219 | 1265 | 1352 | 1392 | 1460 | 1531 | 1602 | 1642 | 1669 | 1721 |
|        |       | 1774 | 1842 | 1902 | 1969 | 2030 | 2097 | 2152 | 2197 | 2258 | 2306 | 2421 | 2529 | 2636 | 2674 |
|        |       | 2861 | 2895 | 2932 | 2976 | 3016 | 3052 | 3082 | 3118 | 3156 | 3242 | 3295 | 3345 | 3384 | 3458 |
|        |       | 3683 | 3723 | 3919 | 4043 | 4137 | 4385 | 4584 | 4803 | 5011 | 5244 | 5541 | 5643 | 5787 | 5813 |
|        |       | 5870 | 5911 | 5952 | 5995 | 6036 | 6079 | 6120 | 6163 | 6205 | 6391 | 6521 | 6823 | 7052 | 7093 |
| CKLOOP | 160#  |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| COMMEN | 294#  |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| DEFPRG | 1#    |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| ENDCOM | 294#  |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| ENDMOD | 160#  | 7194 |      |      |      |      |      |      |      |      |      |      |      |      |      |
| ENDPAS | 7195# | 7217 |      |      |      |      |      |      |      |      |      |      |      |      |      |
| ENDSUB | 161#  |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| ENDTST | 160#  | 1038 | 1150 | 1167 | 1197 | 1258 | 1300 | 1376 | 1435 | 1492 | 1563 | 1627 | 1662 | 1704 | 1757 |
|        |       | 1825 | 1885 | 1952 | 2013 | 2081 | 2135 | 2181 | 2241 | 2299 | 2376 | 2484 | 2592 | 2670 | 2730 |
|        |       | 2889 | 2926 | 2971 | 3011 | 3047 | 3077 | 3113 | 3151 | 3236 | 3289 | 3339 | 3378 | 3452 | 3626 |
|        |       | 3718 | 3913 | 4037 | 4131 | 4293 | 4491 | 4711 | 4918 | 5058 | 5433 | 5584 | 5694 | 5807 | 5838 |
|        |       | 5905 | 5946 | 5989 | 6030 | 6073 | 6114 | 6157 | 6199 | 6328 | 6457 | 6724 | 6954 | 7087 | 7138 |
| ERRDEF | 159#  |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| ERRDF  | 160#  | 785  | 941  | 956  | 965  | 974  | 983  | 993  | 1003 | 1079 | 1087 | 1095 | 1103 | 1112 | 1121 |
|        |       | 1175 | 1208 | 1228 | 1236 | 1246 | 1254 | 1284 | 1306 | 1314 | 1326 | 1333 | 1340 | 1364 | 1371 |
|        |       | 1404 | 1412 | 1421 | 1429 | 1448 | 1499 | 1506 | 1570 | 1577 | 1616 | 1623 | 1652 | 1658 | 1685 |
|        |       | 1699 | 1708 | 1737 | 1745 | 1752 | 1761 | 1791 | 1798 | 1805 | 1813 | 1820 | 1829 | 1858 | 1865 |
|        |       | 1880 | 1889 | 1919 | 1925 | 1932 | 1940 | 1947 | 1956 | 1985 | 1993 | 2001 | 2008 | 2017 | 2048 |
|        |       | 2062 | 2069 | 2076 | 2086 | 2115 | 2123 | 2130 | 2139 | 2169 | 2176 | 2186 | 2216 | 2223 | 2229 |
|        |       | 2245 | 2273 | 2281 | 2289 | 2296 | 2316 | 2327 | 2338 | 2351 | 2362 | 2372 | 2384 | 2437 | 2445 |
|        |       | 2463 | 2472 | 2481 | 2493 | 2545 | 2553 | 2562 | 2571 | 2580 | 2589 | 2600 | 2650 | 2657 | 2664 |
|        |       | 2705 | 2716 | 2727 | 2738 | 2792 | 2803 | 2814 | 2825 | 2871 | 2878 | 2884 | 2906 | 2912 | 2922 |
|        |       | 2951 | 2957 | 2966 | 2992 | 2998 | 3006 | 3028 | 3034 | 3042 | 3063 | 3072 | 3094 | 3100 | 3108 |
|        |       | 3139 | 3146 | 3168 | 3177 | 3189 | 3196 | 3205 | 3213 | 3224 | 3231 | 3257 | 3265 | 3276 | 3284 |
|        |       | 3315 | 3326 | 3334 | 3359 | 3373 | 3397 | 3405 | 3417 | 3433 | 3446 | 3470 | 3478 | 3489 | 3498 |
|        |       | 3514 | 3527 | 3536 | 3543 | 3552 | 3569 | 3577 | 3591 | 3599 | 3613 | 3621 | 3645 | 3653 | 3664 |
|        |       | 3699 | 3713 | 3736 | 3744 | 3757 | 3766 | 3773 | 3782 | 3799 | 3807 | 3820 | 3829 | 3836 | 3845 |
|        |       | 3870 | 3883 | 3894 | 3900 | 3908 | 3932 | 3940 | 3953 | 3962 | 3970 | 3984 | 4000 | 4008 | 4024 |
|        |       | 4112 | 4124 | 4323 | 4332 | 4341 | 4354 | 4363 | 4374 | 4522 | 4531 | 4540 | 4553 | 4562 | 4573 |
|        |       | 4750 | 4759 | 4772 | 4781 | 4793 | 4949 | 4958 | 4967 | 4980 | 4989 | 5001 | 5167 | 5176 | 5185 |
|        |       | 5208 | 5219 | 5230 | 5467 | 5476 | 5485 | 5499 | 5508 | 5519 | 5530 | 5615 | 5624 | 5630 | 5726 |
|        |       | 5744 | 5755 | 5764 | 5776 | 5796 | 5802 | 5826 | 5833 | 5853 | 5859 | 5880 | 5886 | 5892 | 5900 |
|        |       | 5927 | 5933 | 5941 | 5964 | 5970 | 5976 | 5984 | 6005 | 6011 | 6017 | 6025 | 6048 | 6054 | 6060 |
|        |       | 6089 | 6095 | 6101 | 6109 | 6132 | 6138 | 6144 | 6152 | 6176 | 6183 | 6193 | 6362 | 6371 | 6380 |
|        |       | 6500 | 6509 | 6758 | 6767 | 6776 | 6790 | 6799 | 6811 | 6990 | 6999 | 7008 | 7019 | 7028 | 7040 |
|        |       | 7176 | 7185 |      |      |      |      |      |      |      |      |      |      |      |      |
| ERROR  | 188#  | 785  | 942  | 956  | 965  | 974  | 983  | 993  | 1003 | 1079 | 1087 | 1095 | 1103 | 1112 | 1121 |
|        |       | 1175 | 1208 | 1228 | 1236 | 1246 | 1254 | 1284 | 1306 | 1314 | 1327 | 1334 | 1341 | 1364 | 1371 |
|        |       | 1404 | 1412 | 1421 | 1429 | 1449 | 1499 | 1507 | 1570 | 1578 | 1616 | 1623 | 1652 | 1658 | 1685 |
|        |       | 1699 | 1709 | 1737 | 1745 | 1752 | 1762 | 1791 | 1798 | 1805 | 1813 | 1820 | 1830 | 1858 | 1865 |
|        |       | 1880 | 1890 | 1919 | 1925 | 1932 | 1940 | 1947 | 1957 | 1985 | 1993 | 2001 | 2008 | 2018 | 2048 |
|        |       | 2062 | 2069 | 2076 | 2086 | 2115 | 2123 | 2130 | 2140 | 2169 | 2176 | 2186 | 2216 | 2223 | 2229 |
|        |       | 2246 | 2273 | 2281 | 2289 | 2296 | 2316 | 2327 | 2338 | 2351 | 2362 | 2372 | 2384 | 2437 | 2445 |
|        |       | 2463 | 2472 | 2481 | 2493 | 2545 | 2553 | 2562 | 2571 | 2580 | 2589 | 2600 | 2650 | 2657 | 2664 |
|        |       | 2705 | 2716 | 2727 | 2738 | 2792 | 2803 | 2814 | 2825 | 2871 | 2878 | 2884 | 2906 | 2912 | 2922 |
|        |       | 2951 | 2957 | 2966 | 2992 | 2998 | 3006 | 3028 | 3034 | 3042 | 3063 | 3072 | 3094 | 3100 | 3108 |
|        |       | 3139 | 3146 | 3168 | 3177 | 3189 | 3196 | 3205 | 3213 | 3224 | 3231 | 3257 | 3265 | 3276 | 3284 |
|        |       | 3315 | 3326 | 3334 | 3359 | 3373 | 3397 | 3405 | 3417 | 3433 | 3446 | 3470 | 3478 | 3489 | 3498 |
|        |       | 3514 | 3527 | 3536 | 3543 | 3552 | 3569 | 3577 | 3591 | 3599 | 3613 | 3621 | 3645 | 3653 | 3664 |



|          |       |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
|----------|-------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| \$\$NEWT | 294#  | 884  | 1041 | 1153 | 1183 | 1216 | 1262 | 1349 | 1389 | 1457 | 1528 | 1599 | 1639 | 1666 | 1718 |
|          | 1771  | 1839 | 1899 | 1966 | 2027 | 2094 | 2149 | 2194 | 2255 | 2303 | 2418 | 2526 | 2633 | 2684 | 2771 |
|          | 2858  | 2892 | 2929 | 2973 | 3013 | 3049 | 3079 | 3115 | 3153 | 3239 | 3292 | 3342 | 3381 | 3455 | 3630 |
|          | 3680  | 3720 | 3916 | 4040 | 4134 | 4382 | 4581 | 4800 | 5008 | 5241 | 5538 | 5640 | 5784 | 5810 | 5841 |
|          | 5867  | 5908 | 5949 | 5992 | 6033 | 6076 | 6117 | 6160 | 6202 | 6388 | 6518 | 6820 | 7049 | 7090 |      |
| \$\$SET  | 7526# | 7545 | 7554 | 7555 | 7556 | 7557 |      |      |      |      |      |      |      |      |      |
| \$\$SETM | 859#  | 866  |      |      |      |      |      |      |      |      |      |      |      |      |      |
| \$\$SKIP | 294#  |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| .EQUAT   | 159#  | 184  |      |      |      |      |      |      |      |      |      |      |      |      |      |
| .HEADE   | 161#  | 166  |      |      |      |      |      |      |      |      |      |      |      |      |      |
| .KT11    | 159#  | 294  |      |      |      |      |      |      |      |      |      |      |      |      |      |
| .SFTUP   | 161#  | 471  |      |      |      |      |      |      |      |      |      |      |      |      |      |
| .\$ACT1  | 161#  | 499  |      |      |      |      |      |      |      |      |      |      |      |      |      |
| .\$PTB   | 159#  | 544  |      |      |      |      |      |      |      |      |      |      |      |      |      |
| .\$PTH   | 161#  | 509  |      |      |      |      |      |      |      |      |      |      |      |      |      |
| .\$PTY   | 162#  | 7560 |      |      |      |      |      |      |      |      |      |      |      |      |      |
| .\$EOP   | 159#  | 7196 |      |      |      |      |      |      |      |      |      |      |      |      |      |
| .\$ERRO  | 162#  |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| .\$READ  | 162#  |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| .\$TRAP  | 161#  | 7497 |      |      |      |      |      |      |      |      |      |      |      |      |      |
| .\$TYPD  | 160#  | 7353 |      |      |      |      |      |      |      |      |      |      |      |      |      |
| .\$TYPE  | 160#  | 7246 |      |      |      |      |      |      |      |      |      |      |      |      |      |
| .\$TYPO  | 162#  | 7420 |      |      |      |      |      |      |      |      |      |      |      |      |      |
| .\$4OCA  | 159#  | 472  |      |      |      |      |      |      |      |      |      |      |      |      |      |

. ABS. 040234 000

ERRORS DETECTED: 0

CZKDLB/EN:ABS,CZKDLB.SEQ/CRF/DOC/SOL/NL:TOC=SYSMAC.SML/ML,CZKDLB.MAC/ML,KDJ11A.MAC  
 RUN-TIME: 249 141 10 SECONDS  
 RUN TIME RATIO: 539/400=1.3  
 CORE USED: 52K (103 PAGES)

DOCUMENT PAGES: 165