

801

EOF1DXQABESBQ411

00010000

770920 IDENTIFICATION 411

IZHORIDZCDBBSEQ

00010000

770920  
SEQ 0001

PRODUCT CODE: MAINDEC-11-DZCDB-B-D  
PRODUCT NAME: CD11/CD20 CARD READER DIAGNOSTIC  
DATE CREATED: JULY 1977  
MAINTAINER: DIAGNOSTIC GROUP  
AUTHOR: BRUCE BURGESS / ED RYAN

COPYRIGHT (C) 1976, 1977  
DIGITAL EQUIPMENT CORPORATION, MAYNARD, MASS.

THIS SOFTWARE IS FURNISHED UNDER A LICENSE FOR USE ONLY ON A SINGLE  
COMPUTER SYSTEM AND MAY BE COPIED ONLY WITH THE INCLUSION OF THE ABOVE  
COPYRIGHT NOTICE. THIS SOFTWARE, OR ANY OTHER COPIES THEREOF, MAY NOT BE  
PROVIDED OR OTHERWISE MADE AVAILABLE TO ANY OTHER PERSON EXCEPT FOR USE  
ON SUCH SYSTEM AND TO ONE WHO AGREES TO THESE LICENSE TERMS. TITLE TO  
AND OWNERSHIP OF THE SOFTWARE SHALL AT ALL TIMES REMAIN IN DEC.

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE  
AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT  
CORPORATION.

DEC ASSUMES NO RESPONSIBILITY FOR THE USE OR RELIABILITY OF ITS SOFTWARE  
ON EQUIPMENT WHICH IS NOT SUPPLIED BY DEC.

## TABLE OF CONTENTS

SEQ 0002

1.0	GENERAL PROGRAM INFORMATION
1.1	PROGRAM PURPOSE
1.2	SYSTEM REQUIREMENTS HARDWARE REQUIREMENTS SOFTWARE REQUIREMENTS
1.3	RELATED DOCUMENTS AND STANDARDS
1.4	DIAGNOSTIC HIERARCHY PREREQUISITES
1.5	ASSUMPTIONS
2.0	OPERATING INSTRUCTIONS
2.1	LOADING AND STARTING PROCEDURES INSTRUCTION AND DATA RELIABILITY ERROR FUNCTIONS MODELS M1000/M200 ERROR FUNCTIONS MODEL M1200/RS1200 SINGLE SUBTEST LOOP SINGLE DATA PATTERN TEST
2.2	SPECIAL ENVIRONMENTS
2.3	PROGRAM OPTIONS DEFAULT PARAMETERS CONTROL SWITCH SETTINGS STARTING ADDRESSES
2.4	EXECUTION TIMES
3.0	ERROR INFORMATION
3.1	ERROR REPORTING PROCEDURES INPUT HOPPER EMPTY DATA RELIABILITY TESTING GENERAL PROGRAM OPERATION
3.2	ERROR HALTS
4.0	PERFORMANCE AND PROGRESS REPORTS
5.0	DEVICE INFORMATION TABLES STATUS REGISTER (177160) COLUMN COUNT REGISTER (177162) CURRENT ADDRESS REGISTER (177164) DATA BUFFER REGISTER (177166)
6.0	SUB-TEST SUMMARIES
6.1	INSTRUCTION TESTS
6.2	DATA RELIABILITY TEST
6.3	ERROR FUNCTION TESTS FOR M1000/M200/M1200/RS1200
6.4	READING A SINGLE DATA PATTERN
6.5	LOOPING ON A SELECTED TEST
7.0	HISTORY
8.0	FLOW CHARTS
9.0	PROGRAM LISTING

## 1.0 GENERAL PROGRAM INFORMATION

## 1.1 PROGRAM PURPOSE

THIS PROGRAM CAN BE USED WITH EITHER A CD11 OR CD20 CARD READER INTERFACE TO A DOCUMENTATION M1000, M200, M1200 OR AN RS1200 MODEL CARD READER. THE PROGRAM TESTS ALL LOGIC FUNCTIONS OF THE CARD READER AS WELL AS EXERCISING ALPHANUMERIC AND BINARY CODED DATA VIA PUNCHED CARD TEST DECKS. SEPARATE STARTING ADDRESSES ALLOW TESTING OF ERROR FUNCTIONS (E.G. - HOPPER CHECK, STACK CHECK, ETC.) FOR ALL CARD READER MODELS UTILIZING MANUAL TECHNIQUES. TO AID IN DIAGNOSING SPECIAL PATTERNS A SECTION OF THE PROGRAM WILL ALLOW TESTING OF CARD DECKS WITH ALL COLUMNS OF EACH CARD IDENTICALLY PUNCHED.

THE DISTINCTION BETWEEN THE CD11 AND CD20 CARD READER INTERFACES WILL BE DESCRIBED IN SECTION 1.2, PARAGRAPH A.

THE ALPHANUMERIC AND BINARY TEST DECKS TO BE USED WILL BE DESCRIBED IN SECTION 1.2, PARAGRAPH B.

## 1.2 SYSTEM REQUIREMENTS

## A. HARDWARE REQUIREMENTS

A PDP-11 FAMILY COMPUTER WITH EITHER A CD11 OR CD20 CARD READER INTERFACE TO A DOCUMENTATION MODEL CARD READER (MODELS M200, M1000, M1200, RS1200).

## \*\*\*\*\* NOTE \*\*\*\*\*

A MINIMUM OF 12K OF MEMORY IS REQUIRED FOR LOADING & RUNNING THIS DIAGNOSTIC!

1. THE CD20 INTERFACE IS A CD11 INTERFACE WITH ECO #CD-11-00014 INSTALLED. THE CD20 INTERFACE IS USED WITH THE DECSYSTEM 20 SERIES OF COMPUTERS. THE ECO IMPLEMENTS THE FOLLOWING ADDITIONAL SOFTWARE FEATURES INTO THE NORMAL CD11 CARD READER CONTROLLER:
  - A. DURING DATA TRANSFERS IN UNPACKED MODE BITS 15 THRU 12 IN THE DATA REGISTER (177166) HAVE BEEN REDEFINED TO INDICATE MORE THAN ONE BIT SET IN A ZONE (BIT15) AND WHICH ZONE (BITS 14 THRU 12).
  - B. DURING NON-DATA TRANSFERS PERIODS THE DATA REGISTER (177166) IS USED AS A SECOND STATUS REGISTER WITH BIT DEFINITIONS AS FOLLOWS:

BIT	DEFINITION
15	ALWAYS SET IF ECO IS INSTALLED
14	ALWAYS CLEAR IF ECO NOT INSTALLED
14	READ CHECK ! BREAKOUT OF BIT14 OF
13	PICK CHECK ! STATUS REGISTER
12	STACK CHECK ! (177160)

## B SOFTWARE REQUIREMENTS

SEQ 0004

TWO MAIN CARD TEST DECKS ARE REQUIRED BY THIS PROGRAM:

ALPHANUMERIC DECKBINARY DECK

MAINDEC-89-D1B1-C

MAINDEC-89-D1B2-C

IN ADDITION TO SPARE CARDS FOR ERROR FUNCTION TESTING,  
A SPECIAL MIS-REGISTERED CARD IS ALSO REQUIRED(FOR RS1200 ONLY)..

1.3 RELATED DOCUMENTS AND STANDARDS

- A. CD11 ENGINEERING DRAWINGS
- B. PDP11 PERIPHERALS HANDBOOK
- C. PDP11 PROCESSOR HANDBOOK
- D. MAINDEC-11-DZQAC-B1  
SYSMAC.SML DIAGNOSTIC UTILITIES PACKAGE
- E. MAINDEC-11-DZQXA  
'XXDP' USER'S GUIDE
- F. DIAGNOSTIC ENGINEERING STANDARDS AND CONVENTIONS  
PROGRAMMING PRACTICES  
DOC. NO. 175-003-009-00

1.4 DIAGNOSTIC HIERARCHY PREREQUISITES

NONE.

1.5 ASSUMPTIONS

- A. IT IS ASSUMED THAT BOTH CARD TEST DECKS ARE IN THEIR PROPER SEQUENCE. IT IS A GOOD IDEA UPON RECEIVING THE TEST DECKS TO NUMBER THEM IN THE TOP RIGHT CORNER IN THE EVENT THAT THEY ARE ACCIDENTLY DROPPED.
- B. IT IS ASSUMED THAT ECO #CD-11-00014 HAS BEEN INSTALLED WHEN THIS PROGRAM IS BEING RUN ON A DECSYSTEM 20 SERIES COMPUTER.

2.1 LOADING AND STARTING PROCEDURES

THERE ARE FIVE DISTINCT SECTIONS TO THE PROGRAM EACH HAVING ITS OWN STARTING ADDRESS, SWITCH SETTINGS, AND MODES OF OPERATION. THEY ARE AS FOLLOWS:

## A. INSTRUCTION &amp; DATA RELIABILITY

1. LOAD PROGRAM INTO MEMORY. ON A DECSYSTEM 20 SERIES COMPUTER THIS IS ACCOMPLISHED VIA A 'FLOPPY' DISKETTE ON UNIT 0 BY -

1ST- DEPRESSING THE 'FLOPPY' SWITCH (ON FRONT END PANEL) TO LOAD 'RXDP' (FLOPPY MONITOR)

2ND- TYPING 'DZCDB\*' (CARRIAGE RETURN) ON CONSOLE TTY IN RESPONSE TO THE 'RXDP' MONITOR REQUEST FOR INPUT (A DOT.).

WHERE \* = LATEST REV. LETTER OF THE PROGRAM

2. LOAD A TEST DECK (ALPHANUMERIC OR BINARY) INTO THE CARD READER INPUT HOPPER
3. PRESS 'RESET' BUTTON ON THE CARD READER
4. SET A STARTING ADDRESS OF 200 INTO SWITCH REGISTER
5. PRESS 'LOAD ADDRESS'
6. SET SWITCHES FOR MODE OF OPERATION:

'ALPHA' DECK (IMAGE MODE) - SET SW<02>

'ALPHA' DECK (PACK MODE) - SET SW<03>

'BINARY' DECK (IMAGE MODE) - SET SW<02> & SW<04>

'BINARY' DECK (PACK MODE) - SET SW<03> & SW<04>

NOTE: WITH ONLY THE ABOVE SWITCHES SET FOR MODE OF OPERATION THE PROGRAM WILL PASS THRU THE INSTRUCTION PORTION ONLY ONCE (1ST PASS). ON ALL SUBSEQUENT PASSES THE PROGRAM WILL LOOP ON THE DATA RELIABILITY PORTION. TO ALTER THIS APPROACH SET OTHER SWITCHES AS INDICATED UNDER SECTION 2.3.

7. PRESS 'START'
8. WITH ONLY THE SWITCHES SET AS INDICATED UNDER ITEM 6., PASS COMPLETION PRINTOUTS SHOULD APPEAR AS FOLLOWS (AN EXAMPLE):

MAINDEC-11-D2CDB REV.B

ENTERING LOGIC TESTS  
 ENTERING DATA TESTS  
 END PASS #1

\* AT THIS POINT THE INPUT HOPPER SHOULD BE EMPTY \*  
 \* AND THE PROGRAM WILL HANG WAITING, AT WHICH \*  
 \* POINT - \*  
 \* A. RELOAD TEST DECK/S INTO INPUT HOPPER, AND \*  
 \* B. PRESS 'RESET' ON CARD READER \*  
 \* PROGRAM SHOULD RESUME OPERATION WITH, \*

ENTERING DATA TESTS  
 END PASS #2

.  
 ETC.

NOTE: THE FORM OF THE PRINTOUT WILL VARY AS OTHER SWITCHES ARE SET.

- B. ERROR FUNCTIONS FOR CARD READER MODELS M200 OR M1000
  1. LOAD PROGRAM INTO MEMORY AS INDICATED BY SECTION 2.1, PARAGRAPH A., SUBPARAGRAPH 1.
  2. LOAD A FEW SPARE CARDS INTO THE INPUT HOPPER.  
 NOTE: DO NOT LOAD A TEST DECK HERE AS PORTIONS OF ERROR FUNCTION TESTING DESTROYS CARDS!
  3. PRESS 'RESET' BUTTON ON THE CARD READER
  4. SET A STARTING ADDRESS OF 210 INTO SWITCH REGISTER.
  5. PRESS 'LOAD ADDRESS'
  6. SET DESIRED SWITCHES AS INDICATED BY SECTION 2.3

7. PRESS 'START'
8. FOLLOW THE INSTRUCTIONS AS THEY ARE PRINTED OUT  
A FULL PASS OF THIS SECTION SHOULD APPEAR AS FOLLOWS  
(AN EXAMPLE):

ENTERING M1000/M200 ERROR FUNCTION TESTS  
MAINDEC-11-DZCDB REV.B

\* INSTRUCTIONS FOLLOW AND UPON A COMPLETE PASS \*  
\* WILL APPEAR, \*

MAINDEC-11-DZCDB REV.B

ETC.

C. ERROR FUNCTIONS FOR CARD READER MODEL M1200 OR RS1200

EVERYTHING APPLIES AS INDICATED UNDER SECTION 2.1,  
PARAGRAPH B., EXCEPT:

1. START ADDRESS IS 250, AND
2. LEAD-IN MESSAGE UPON EXECUTION IS "ENTERING M1200 ERROR  
FUNCTION TESTS"
3. ANSWER THE QUESTION "M1200 OR RS1200" BY TYPING  
A Y FOR THE RS1200 OR AN N FOR THE M1200.

NOTE: SINCE ONLY THE RS1200 HAS THE CAPABILITY  
TO DETECT A MIS-REGISTERED CARD, ONLY THIS  
MODEL SHOULD ENTER THE MISTERED CARD TEST.

D. SINGLE SUBTEST LOOP

1. LOAD PROGRAM INTO MEMORY AS INDICATED BY SECTION 2.1,  
PARAGRAPH A., SUBPARAGRAPH 1.
2. LOAD A FEW SPARE CARDS INTO THE INPUT HOPPER

NOTE: SINCE ONLY THE INSTRUCTION PORTION OF THE  
PROGRAM IS MEANT TO BE SELECTED UNDER THIS  
PHASE OF OPERATION A CARD TEST DECK MAY BE  
SUBSTITUTED IN PLACE OF THE SPARE CARDS.

3. PRESS 'RESET' BUTTON ON THE CARD READER
4. SET A STARTING ADDRESS OF 220 INTO SWITCH REGISTER
5. PRESS 'LOAD ADDRESS'
6. AT THE 1ST 'HALT':  
LOAD THE STARTING ADDRESS OF THE DESIRED TEST (ADDRESS  
OF 'SCOPE' INSTRUCTION AT BEGINNING OF TEST), THEN  
PRESS 'CONTINUE'.
7. AT THE 2ND 'HALT':  
SET DESIRED SWITCHES AS INDICATED BY SECTION 2.3

I01

(SW<11> MUST NOT BE SET), THEN PRESS 'CONTINUE'  
\*\*\* HOWEVER \*\*\* (SW<14> MUST BE SET... MUST BE SET ...)

SEQ 0008

8. PROGRAM WILL LOOP ON TEST SELECTED



## E. SINGLE DATA PATTERN TEST

1. LOAD PROGRAM INTO MEMORY AS INDICATED BY SECTION 2.1, PARAGRAPH A., SUBPARAGRAPH 1.

2. LOAD A 'PREPARED' DECK INTO THE INPUT HOPPER

NOTE: THE 'PREPARED' DECK CAN CONSIST OF ONE OR MORE CARDS AND HAVE ANY DATA PATTERN BUT THIS PATTERN MUST BE IDENTICAL IN ALL 80 COLUMNS OF EACH AND EVERY CARD MAKING UP THE DECK (E.G. IF COLUMN 1 CONTAINS 1777 SO MUST ALL THE OTHER 79 COLUMNS).

3. PRESS 'RESET' BUTTON ON THE CARD READER

4. SET A STARTING ADDRESS OF 240 INTO SWITCH REGISTER

5. PRESS 'LOAD ADDRESS'

6. PRESS 'START'

7. AT THE 1ST 'HALT'  
SET THE DATA PATTERN SELECTED INTO THE SWITCH REGISTER USING SWS<11 THRU 00>, THEN PRESS 'CONTINUE'

8. AT THE 2ND 'HALT'  
SET DESIRED SWITCHES AS INDICATED BY SECTION 2.3

9. WHEN THE CARD READER RUNS OUT OF CARDS RELOAD THE 'PREPARED' DECK AND PRESS 'RESET' BUTTON ON THE CARD READER

10. THE PROGRAM SHOULD CONTINUE

## 2.2

SPECIAL ENVIRONMENTS

THE PROGRAM DOES HAVE THE CAPABILITY TO BE RUN ON THE ACT-11 MANUFACTURING LINE BUT IS NOT IDEALLY SUITED FOR THIS ENVIRONMENT DUE TO THE PROGRAM'S REQUIREMENT OF LOADING CARD TEST DECKS.

## A. DEFAULT PARAMETERS

<u>LOCATION LABEL</u>	<u>CONTENTS</u>	<u>USE</u>
CDST:	177160	STATUS
CDCC:	177162	COLUMN COUNT
CDBA:	177164	BUS ADDRESS
CDOB:	177166	DATA/(STATUS ON CD20)
INTVEC:	230	INTERRUPT PC
INTVEC+2:	232	INTERRUPT PS

IF THE CD11/CD20 IS EVER CONFIGURED SO THAT THE ABOVE STANDARD ADDRESSES AND VECTORS ARE NOT RELEVANT THEN JUST PATCH THE ABOVE PROGRAM LOCATIONS TO THE CORRECT VALUES BEFORE ATTEMPTING TO EXECUTE THE PROGRAM.

## B. CONTROL SWITCH SETTINGS

<u>SWITCH</u>	<u>USE</u>
SW<15>=1	HALT ON ERROR
SW<15>=0	CONTINUE ON ERROR
SW<14>=1	LOOP ON CURRENT TEST
SW<14>=0	CONTINUE TO NEXT TEST
SW<13>=1	INHIBIT ERROR PRINTOUT
SW<13>=0	PRINT ERROR REPORTS
SW<12>=1	INHIBIT TRACE TRAPPING
SW<12>=0	ALLOW TRACE TRAPPING
SW<11>=1	INHIBIT SUB-TEST ITERATIONS
SW<11>=0	ALLOW SUB-TEST ITERATIONS
SW<07>=1	LOOP ON INSTRUCTION TESTS ONLY
SW<07>=0	NOT APPLICABLE
SW<06>=1	LOOP ON INSTRUCTION & DATA RELIABILITY TEST WHEN CONTINUING FROM ONE CARD TEST DECK TO ANOTHER.
SW<06>=0	INSTRUCTION & DATA RELIABILITY TEST COVERED ON 1ST CARD TEST DECK LOAD. ONLY DATA RELIABILITY TEST COVERED ON ALL SUBSEQUENT CARD TEST DECK LOADS.

L01

SW<05>=1 WHEN MORE THAN ONE CARD TEST DECK IS  
LOADED 'HALT' AT COMPLETION OF EACH DECK.  
NOTE: PRESSING 'CONTINUE' WILL RESUME  
PROGRAM OPERATION AFTER THE 'HALT'.  
SW<05>=0 WHEN MORE THAN ONE CARD TEST DECK IS  
LOADED RUN THE DATA RELIABILITY TEST  
AUTOMATICALLY FROM DECK TO DECK.  
SW<04>=1 INDICATOR FOR BINARY TEST DECK  
SW<04>=0 NOT BINARY TEST DECK  
SW<03>=1 INDICATOR FOR PACK MODE  
SW<03>=0 NOT PACK MODE  
SW<02>=1 INDICATOR FOR IMAGE MODE  
SW<02>=0 NOT IMAGE MODE

SL .

C. STARTING ADDRESSES

<u>ADDRESS</u>	<u>USE</u>
200	INSTRUCTION & DATA RELIABILITY TESTING
210	ERROR FUNCTION TESTING OF CARD READER MODELS M200 OR M1000
220	LOOPING ON A SINGLE INSTRUCTION TEST
240	READING A SINGLE DATA PATTERN CONTINUOUSLY
250	ERROR FUNCTION TESTING OF CARD READER MODEL M1200 OR RS1200

2.4

EXECUTION TIMES

(TO BE DETERMINED)

## ERROR INFORMATION

SEQ 0012

-----  
ERROR REPORTING PROCEDURES  
-----

THREE TYPES OF ERROR REPORTING TECHNIQUES ARE USED AS FOLLOWS:

## A. WHEN INPUT HOPPER GOES EMPTY DURING TESTING

THE FOLLOWING MESSAGE IS TYPED:

CARD READER IS OFF-LINE  
REMEDY THE CONDITION BY RELOADING INPUT HOPPER  
WITH CARD DECK - PRESS 'RESET' BUTTON ON CARD READER  
AND 'CONTINUE' SWITCH ON CPU PANEL

NOTE: ALLOW A FEW SECONDS TO TRANSPIRE BETWEEN PRESSING THE  
'RESET' BUTTON AND THE 'CONTINUE' SWITCH AS IF THIS  
OPERATION IS DONE TOO QUICKLY THE CARD READER WILL  
NOT HAVE HAD A CHANCE TO RESET ITSELF AND THE ABOVE  
REPORT WILL ONLY BE REITERATED

## B. DURING DATA RELIABILITY TESTING

THE FOLLOWING FORMAT IS TYPED WHEN A DATA ERROR OCCURS:

DECK    CARD NUM    CARD COL    SHB    WAS

WHERE: 'DECK' REPRESENTS EITHER 'ALPHA' OR 'BINARY'

'CARD NUM' REPRESENTS WHICH CARD OUT OF THE 80.  
CARDS ON WHICH THE ERROR WAS FOUND. 'CARD NUM'  
VALUE IS PRINTED IN DECIMAL.

'CARD COL' REPRESENTS THE COLUMN ON THE CARD  
(SPECIFIED BY 'CARD NUM') WHICH CONTAINS THE  
ERROR. 'CARD COL' VALUE IS PRINTED IN DECIMAL.

'SHB' REPRESENTS THE ENCODED VALUE THAT SHOULD  
BE INTERPRETED.

'WAS' REPRESENTS THE VALUE THAT WAS INTERPRETED.

## C. GENERAL ERRORS DURING PROGRAM OPERATION

SEQ 0013

THERE ARE SEVEN GENERAL TYPES OF ERROR REPORTS IN USE  
THROUGHOUT THE PROGRAM AS FOLLOWS:

TYPE 1

(PC) (SP) (CDS) (CDD) (PS)

TYPE 2

(PC) (SP) (CDS) (CDD) (CDC) (PS)

TYPE 3

(PC) (SP) (CDS) (CDD) (CDA) (PS)

TYPE 4

(PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)

TYPE 5(PC) (SP) (CDS) (CDD) (CDC)  
WAS (CDA) (CDA) (PS)  
SHBTYPE 6(PC) (SP) (CDS) (CDD) (CDC)  
WAS (CDA) (CDC) (PS)  
SHBTYPE 7(PC) (SP) (CDS) (CDD)  
WAS (CDD) (PS)  
SHB

- WHERE: (PC) REPRESENTS THE PROGRAM COUNTER LOCATION IN THE PROGRAM WHERE THE ERROR OCCURRED.
- (SP) REPRESENTS THE CURRENT POSITION OF THE STACK POINTER (GENERAL PURPOSE REGISTER 6)
- (CDS) REPRESENTS THE CURRENT CONTENTS OF THE CARD READER CONTROL STATUS REGISTER (177160)
- (CDD) REPRESENTS THE CURRENT CONTENTS OF THE DATA BUFFER. INFORMATION IS ONLY VALID DURING DATA TRANSFERS EXCEPT ON THE CD20 CARD READER WHICH USES THE DATA BUFFER REGISTER (177166) AS A 2ND STATUS REGISTER DURING NON-DATA TRANSFER PERIODS. (REFERENCE SECTION 1.2, PARAGRAPH A.)
- (CDC) REPRESENTS THE CURRENT CONTENTS OF THE CARD READER COLUMN COUNT REGISTER (177162)
- (CDA) REPRESENTS THE CURRENT CONTENTS OF THE CARD READER BUS ADDRESS REGISTER (177164)
- (PS) REPRESENTS THE CURRENT CONTENTS OF THE PROCESSOR STATUS REGISTER (177776)
- 'WAS' REPRESENTS THE INCORRECT VALUE FOUND
- 'SHB' REPRESENTS THE CORRECT VALUE THAT SHOULD HAVE BEEN FOUND

3.2 ERROR HALTS  
-----

- A. ALL UNUSED LOCATIONS FROM LOCATION 4 TO LOCATION 776 CONTAINS A +2 HALT SEQUENCE TO CATCH ILLEGAL TRAPS AND INTERRUPTS. LOCATION 0 CONTAINS 0 TO CATCH IMPROPERLY LOADED VECTORS. I.E.,

LOCATION	CONTENTS
-----	-----
0	HALT
4	6
6	HALT
10	12
12	HALT
	:
	ETC.

- B. WHEN SW<15>=1 INDICATING TO HALT ON ERROR
- C. DURING ERROR FUNCTION TESTING OF READ CHECK, WHEN AN INTERRUPT DOES NOT OCCUR AFTER CARDS HAVE BEEN RESTORED TO THE INPUT HOPPER AND THE 'RESET' BUTTON ON THE CARD READER HAS BEEN PRESSED.

- D. IF THERE IS NO TERMINAL TO OUTPUT INFORMATION
- E. DURING A POWER FAILURE IF THE POWER UP SEQUENCE WAS STARTED BEFORE THE POWER DOWN SEQUENCE HAD COMPLETED.

4.0 PERFORMANCE AND PROGRESS REPORTS

-----

NOT APPLICABLE

5.0 DEVICE INFORMATION TABLES

-----

A. STATUS REGISTER (177160) BIT DESIGNATIONS

BIT	DESIGNATION	MODE
0	READ	WRITE
1	DATA PACKING	READ/WRITE
2	HOPPER EMPTY	READ
3	READER TRANSITION TO ON-LINE	READ
4	EXTENDED BUS ADDRESS (BIT16)	READ/WRITE
5	EXTENDED BUS ADDRESS (BIT17)	READ/WRITE
6	INTERRUPT ENABLE	READ/WRITE
7	CONTROLLER READY	READ
8	POWER CLEAR	WRITE
9	NON-EXISTANT MEMORY	READ
10	DATA LATE	READ
11	DATA ERROR	READ
12	OFF-LINE	READ
13	END OF FILE (M1200/RS1200 ONLY)	READ
14	CARD READER ERROR (READ, STACK OR PICK)	READ
15	ERROR	READ

B. COLUMN COUNT REGISTER (177162) BIT DESIGNATIONS

BITS <15:0> CONTAIN THE 2'S COMPLEMENT OF THE NUMBER OF COLUMNS TO BE TRANSFERRED TO MEMORY WHEN CARDS ARE BEING READ. THE CONTENTS OF THIS REGISTER IS INCREMENTED BY 1 EACH TIME A COLUMN TRANSFER OCCURS AND ALL TRANSFERS ARE INHIBITED WHEN THE CONTENTS OF THIS REGISTER IS EQUAL TO 0.

ALL BITS ARE READ/WRITE.

C. CURRENT ADDRESS REGISTER (177164) BIT DESIGNATIONS

BITS <15:0> CONTAIN THE MEMORY ADDRESS INTO WHICH THE NEXT COLUMN OF DATA IS TO BE STORED. THIS REGISTER IS INITIALLY SET TO THE MEMORY LOCATION OF THE 1ST COLUMN TO BE READ. IT THEN INCREMENTS BY 1 FOR TRANSFERS IN PACK MODE; BY 2 FOR TRANSFERS IN NON-PACK MODE. ALL BITS ARE READ/WRITE.

D. DATA BUFFER REGISTER (177166) BIT DESIGNATIONS (READ ONLY)

SEG 0016

1. NON-PACK MODE (CD11/CD20)

BIT	CORRESPONDING CARD IMAGE
11	ZONE 12
10	ZONE 11
9-0	ZONES 0-9, RESPECTIVELY
15	ALWAYS SET (CD20 ONLY)
14	READ CHECK (CD20 ONLY)
13	PICK CHECK (CD20 ONLY)
12	STACK CHECK (CD20 ONLY)

2. PACK MODE (CD11/CD20)

BITS 7 THRU 3 ARE ENCODED AS FOLLOWS:

BIT	CORRESPONDING CARD IMAGE
7	ZONE 12
6	ZONE 11
5	ZONE 0
4	ZONE 9
3	ZONE 8

BITS 2 THRU 0 REPRESENT AN OCTAL CODE ENCODED AS FOLLOWS:

BIT 02	BIT 01	BIT 00	CARD ZONE
0	0	0	ZONES 1-7
0	0	1	ZONE 1
0	1	0	ZONE 2
0	1	1	ZONE 3
1	0	0	ZONE 4
1	0	1	ZONE 5
1	1	0	ZONE 6
1	1	1	ZONE 7

BITS 8 THRU 15 ARE UNUSED.



6.0 SUB-TEST SUMMARIES  
-----

SEQ 0017

6.1 INSTRUCTION TESTS  
-----

INITIALIZATION OF ALL REGISTERS  
 READ/WRITE OF STATUS REGISTER  
 READ/WRITE OF COLUMN COUNT REGISTER  
 READ/WRITE OF BUS ADDRESS REGISTER  
 CONTROLLER READY TO CLEAR BIT00 OF CDS (177:60)  
 'HOPPER EMPTY' (BIT02 OF CDS) TO BE CLEAR AFTER CARD READ  
 INTERRUPT FROM CONTROLLER READY  
 NO INTERRUPT WITH CPU AT LEVEL 7  
 INTERRUPTS ON LEVELS 7 THRU 1  
 NO INTERRUPT WITH INTERRUPT ENABLE SET ONLY  
 SIMULTANEOUS INTERRUPTS AT MORE THAN 1 LEVEL  
 NON-EXISTANT MEMORY DETECTION  
 BYTE LOADING OF COLUMN COUNT REGISTER  
 BYTE LOADING OF BUS ADDRESS REGISTER  
 DATIP LOADING OF COLUMN COUNT REGISTER  
 DATIP LOADING OF BUS ADDRESS REGISTER  
 WORD COUNT OVERFLOW TO 2ND CARD  
 NON-PACK MODE TRANSFER TO ODD ADDRESS

6.2 DATA RELIABILITY TEST  
-----

TESTING IS DONE ON BOTH ALPHANUMERIC AND BINARY (PACKED AND UNPACKED) DATA UTILIZING 80. CARD DECKS.

- A. ALPHANUMERIC  
 REFERENCE THE ALPHANUMERIC TABLE IN THE PROGRAM LISTING (BEGINNING AT THE LABEL 'ALPCD:') FOR THE IMAGE CODES PUNCHED IN THE 80. COLUMNS OF THE 1ST CARD. EACH SUCCESSIVE CARD IN THE DECK USES THE SAME SEQUENCE OF CODES ROTATED ONE COLUMN TO THE LEFT. THE PACKED FORM OF THE IMAGE CODES FOLLOWS THE 'ALPCD:' TABLE.
- B. BINARY  
 REFERENCE THE BINARY TABLE IN THE PROGRAM LISTING, (BEGINNING AT THE LABEL 'BINCD:') FOR THE BINARY CODES PUNCHED IN THE 80. COLUMNS OF THE 1ST CARD. KEEP IN MIND THE ZONE ENCODING DISCUSSED IN SECTION 5, PARAGRAPH D). EACH SUCCESSIVE CARD IN THE DECK USES THE SAME SEQUENCE OF CODES ROTATED ONE COLUMN TO THE LEFT. THE PACKED FORM OF THE BINARY CODES FOLLOWS THE 'BINCD:' TABLE.

F02

ERROR FUNCTION TESTS FOR M1000/M200/M1200/RS1200

SEQ 0018

-----  
DATA LATE  
ERROR AND OFF-LINE BITS  
INTERRUPT ON OFF TO ON-LINE TRANSITION  
INPUT HOPPER EMPTY  
OUTPUT STACKER FULL  
PICK CHECK ERROR  
STACK CHECK ERROR  
END OF FILE AND HOPPER CHECK (M1200/RS1200 ONLY)  
READ CHECK ERROR

INSTRUCTIONS FOR MAKING A MIS-REGISTERED CARD

-----  
CUT A SMALL RECTANGULAR HOLE ABOUT THE SIZE OF A NORMAL  
PUNCHED HOLE IN A BLANK CARD. MAKE SURE THE LEADING  
EDGE OF THE HOLE FALLS IN A POSITION WHICH IS NORMALLY  
CONSIDERED TO BE OUT OF REGISTRATION. (BETWEEN MARKED COLUMNS)

4 READING A SINGLE DATA PATTERN  
-----

SEQ 0019

CHECKING OF CARDS WHICH HAVE ALL COLUMNS IDENTICALLY PUNCHED IS DONE, THUS ALLOWING SPECIFIC TYPES OF DATA FAILURES TO BE MORE EASILY STUDIED. THE PATTERN INPUT FROM THE USER IS STORED AND THEN EACH COLUMN OF EACH CARD IS COMPARED AGAINST IT. IF A DISCREPANCY OCCURS, THE ERROR IS PRINTED OUT, ALONG WITH THE TOTAL NO. OF CARDS READ AS WELL AS THE TOTAL NO. OF DATA ERRORS DISCOVERED UP TO THAT POINT. (NOTE: ALL PRINTOUTS ARE IN OCTAL). WHEN THE INPUT HOPPER BECOMES EMPTY, THE TERMINAL WILL ECHO A 'BELL'. THE PROGRAM WILL THEN WAIT FOR MORE CARDS TO BE LOADED AND THE CARD READER TO BE PUT BACK ON-LINE (I.E. PRESSING 'RESET' BUTTON). (REFERENCE SECTION 2.1, PARAGRAPH E.)

6.5 LOOPING ON A SELECTED TEST  
-----

THIS ALLOWS A SINGLE SUB-TEST TO BE RUN CONTINUOUSLY BY SELECTING THE TEST (INSTRUCTION PORTION ONLY) AND LOADING THE ADDRESS OF THE SCOPE INSTRUCTION AT THE BEGINNING OF THE TEST. (REFERENCE SECTION 2.1, PARAGRAPH D.)

7.0 HISTORY  
-----8.0 FLOW CHARTS  
-----9.0 PROGRAM LISTING  
-----

H02

THIS IS A HISTORY OF THE DEVELOPMENT OF MAINDEC-11-DZCDB

SEQ 0020

PRODUCT CODE: MAINDEC-11-DZCDB-A  
VERSION 000.001

PRODUCT NAME: CD11/CD20 CARD READER DIAGNOSTIC

ORIGINAL RELEASE: MARCH 21 1976

ORIGINAL AUTHOR: BRUCE BURGESS

\*\*\*\*\*

PRODUCT CODE: MAINDEC-11-DZCDB-B  
VERSION 000.002

PRODUCT NAME: CD11/CD20 CARD READER DIAGNOSTIC

DATE RELEASED: MAY 1977

UPDATE AUTHOR: GREG GLEZMAN

UPDATES:

1. ADDED TEST FOR MONITOR PRESENCE.
2. ADDED A HALT TO ALLOW THE OPERATOR TO SET THE SR SWITCHES IN THE CASE OF NO MONITOR.
3. FIXED THE (LOW BYTE) LOAD TESTS FOR THE CDC AND CDA REGISTERS SO THEY FUNCTION WITHOUT ERROR.
4. ADDED A TSET FOR THE RS1200 CARD READER TO TEST FOR A MIS-REGISTERED CARD.
5. ADDED A QUESTION FOR THE OPERATOR TO INFORM THE PROGRAM IF IT IS TESTING AN RS1200 CARD READER.
6. CHANGE THE MESSAGE TO THE OPERATOR PERTAINING TO THE STACK CHECK ERROR TEST. THE CHANGE MAKES THE PROCEDURE

FLOW CHART  
\*\*\*\*\*  
CD11/CD20 CARD READER DIAGNOSTIC  
\*\*\*\*\*

COPYRIGHT 1977  
DIGITAL EQUIPMENT CORPORATION

TABLE OF CONTENTS  
\*\*\*\*\*

PAGE 02	TEST FOR INIT. OF ALL REGISTERS
PAGE 03	TEST READ/WRITE STATUS REGISTER
PAGE 04	TEST READ/WRITE OF COLUMN COUNT REGISTER
PAGE 05	TEST READ/WRITE OF BUS ADDRESS REGISTER
PAGE 06	TEST CONTROLLER READY TO CLEAR BIT0
PAGE 07	TEST BIT 2 TO BE CLEAR AFTER CARD READ
PAGE 08	TEST INTERRUPT FROM CONTROLLER READY
PAGE 09	TEST NO INTERRUPT ON CONTROLLER READY & CPU AT LEVEL 7
PAGE 10	TESTS FOR INTERRUPTS
PAGE 11	TEST FOR INTERRUPTS (CONT'D)
PAGE 12	SIMILTANEOUS INTERRUPTS AT MORE THAN ONE LEVEL
PAGE 13	NON-EXISTIA T MEMORY DETECTION
PAGE 14	BYTE & DAT <sup>T</sup> LOAD OF COLUMN COUNT REGISTER
PAGE 15	WORD COUNT OVERFLOW TO 2ND CARD
PAGE 16	BUS ADDRESS ODD & TRANSFER IN NON-PACK MODE
PAGE 17	DATA RELIABILITY TESTING
PAGE 24	ERROR FUNCTION TESTING OF MODEL M1200
PAGE 40	PROGRAM TO LOOP ON SINGLE DATA PATTERN
PAGE 44	PROGRAM TO LOOP ON TEST

```
*****  
*BEGIN * START ADDRESS = 200  
*****  
I  
*****  
* VECTOR SETUPS AND *  
* HARDWARE/SOFTWARE *  
* "SWR" DETERMINATION *  
*****  
I  
I  
*****  
* INITIALIZE *  
* POINTERS AND *  
* FLAGS *  
*****  
I  
I  
*****  
* TYPE MAINDEC *  
* TITLE AND *  
* REV. LEVEL *  
*****  
I  
I  
*****  
*TST1(02) *
```

\*\*\*\*\*  
\*TST1(01) \*  
\*\*\*\*\*

I

```
*****
**                               **
*CKOFFL(45)*--> **      CKOFFL      **
**                               **
*****
```

I

I

\*\*\*\*\*  
\* SEND OUT AN \*  
\* INITIALIZATION \*  
\* PULSE (RESET) \*  
\*\*\*\*\*

I

I

```
*****
/ REPORT ERROR \ NO / IS BIT7 SET IN \
/   ERROR       \ / STATUS REGISTER? \
\               / \
\               / \
*****
```

I

I

I

```
*****
/ REPORT ERROR \ NO / IS COLUMN COUNT \
/   ERROR       \ / REGISTER          \
\               / \ CLEARED?         \
\               / \
\               / \
*****
```

I

I

I

```
*****
/ REPORT ERROR \ NO / IS BUS ADDRESS \
/   ERROR       \ / REGISTER CLEARED? \
\               / \
\               / \
*****
```

I

I

I

\*\*\*\*\*  
\*TST2(03) \*  
\*\*\*\*\*



CD11/CD20 CARD READER DIAGNOSTIC  
TEST READ/WRITE STATUS REGISTER

\*\*\*\*\*  
\*TST2(02) \*  
\*\*\*\*\*

I

\*\*\*\*\*  
\* SET ALL BITS IN \*  
\* STATUS REGISTER EX- \*  
\* CEPT FOR BITS 0 & 8 \*  
\*\*\*\*\*

I

I

```

*****
/ REPORT ERROR / NO \ ARE ONLY BITS
/-----/-----/ 1, 4, 5, 6 & 7
/-----/-----/ NOW SET?
*****

```

```

*****
I
I
*****
*TST3(04) *
*****

```

```

I YES
I
*****
* CLEAR THE STATUS *
* REGISTER *
*
*****

```

I

I

```

*****
/ REPORT ERROR / NO \ ARE ALL BITS
/-----/-----/ CLEAR IN STATUS
/-----/-----/ REG. EXCEPT FOR 7?
*****

```

```

*****
I

```

```

I YES
I
*****
* SET ALL BITS IN *
* STATUS REGISTER *
*
*****

```

I

I

```

*****
/ REPORT ERROR / NO \ ARE ALL BITS
/-----/-----/ CLEAR IN STATUS
/-----/-----/ REG. EXCEPT FOR 7?
*****

```

```


*****
I


```

```


I YES
I
*****
*TST3(04) *

```

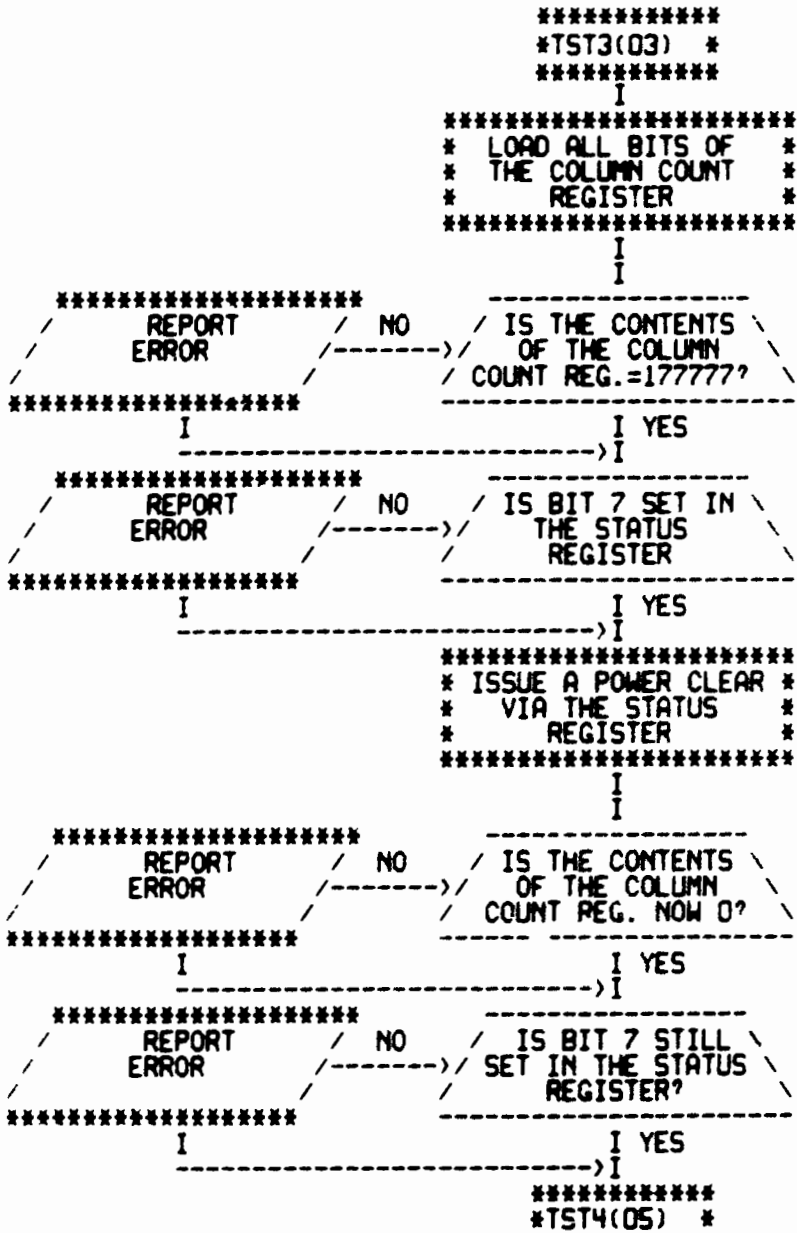

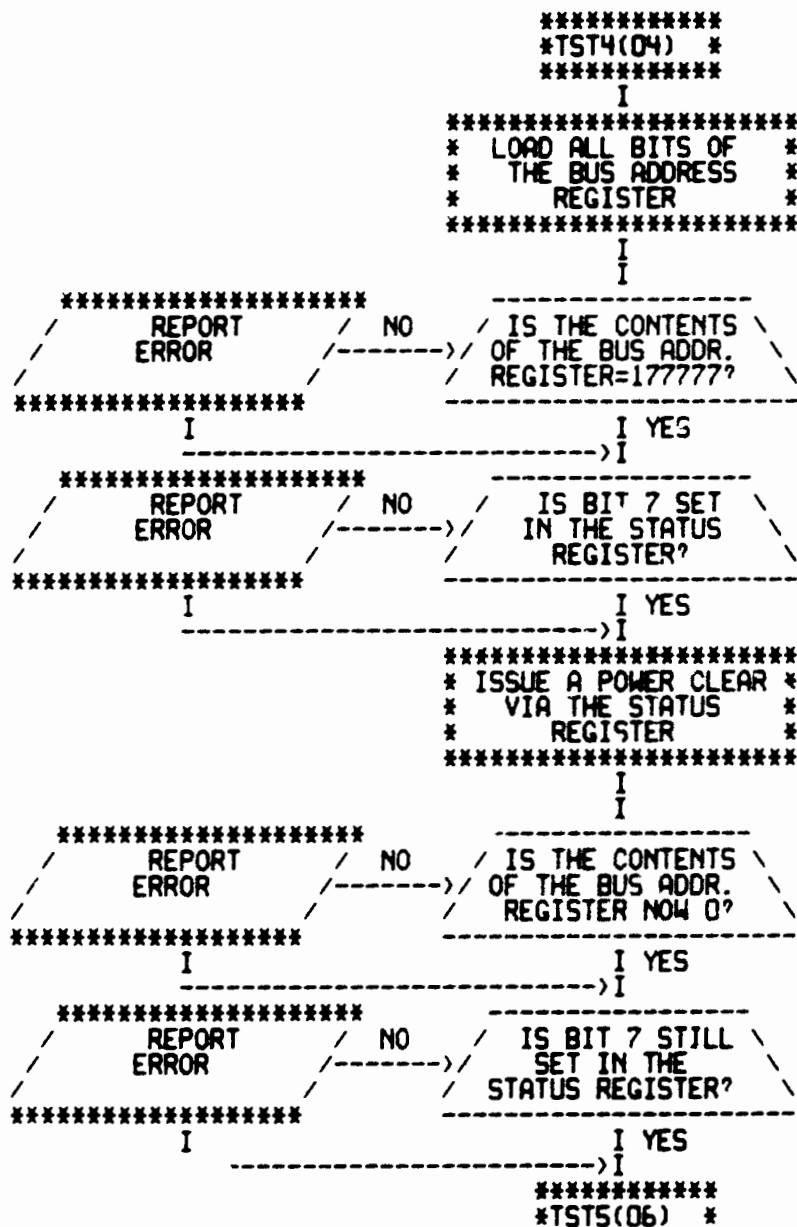

CD11/CD20 CARD READER DIAGNOSTIC  
TEST CONTROLLER READY TO CLEAR BIT0

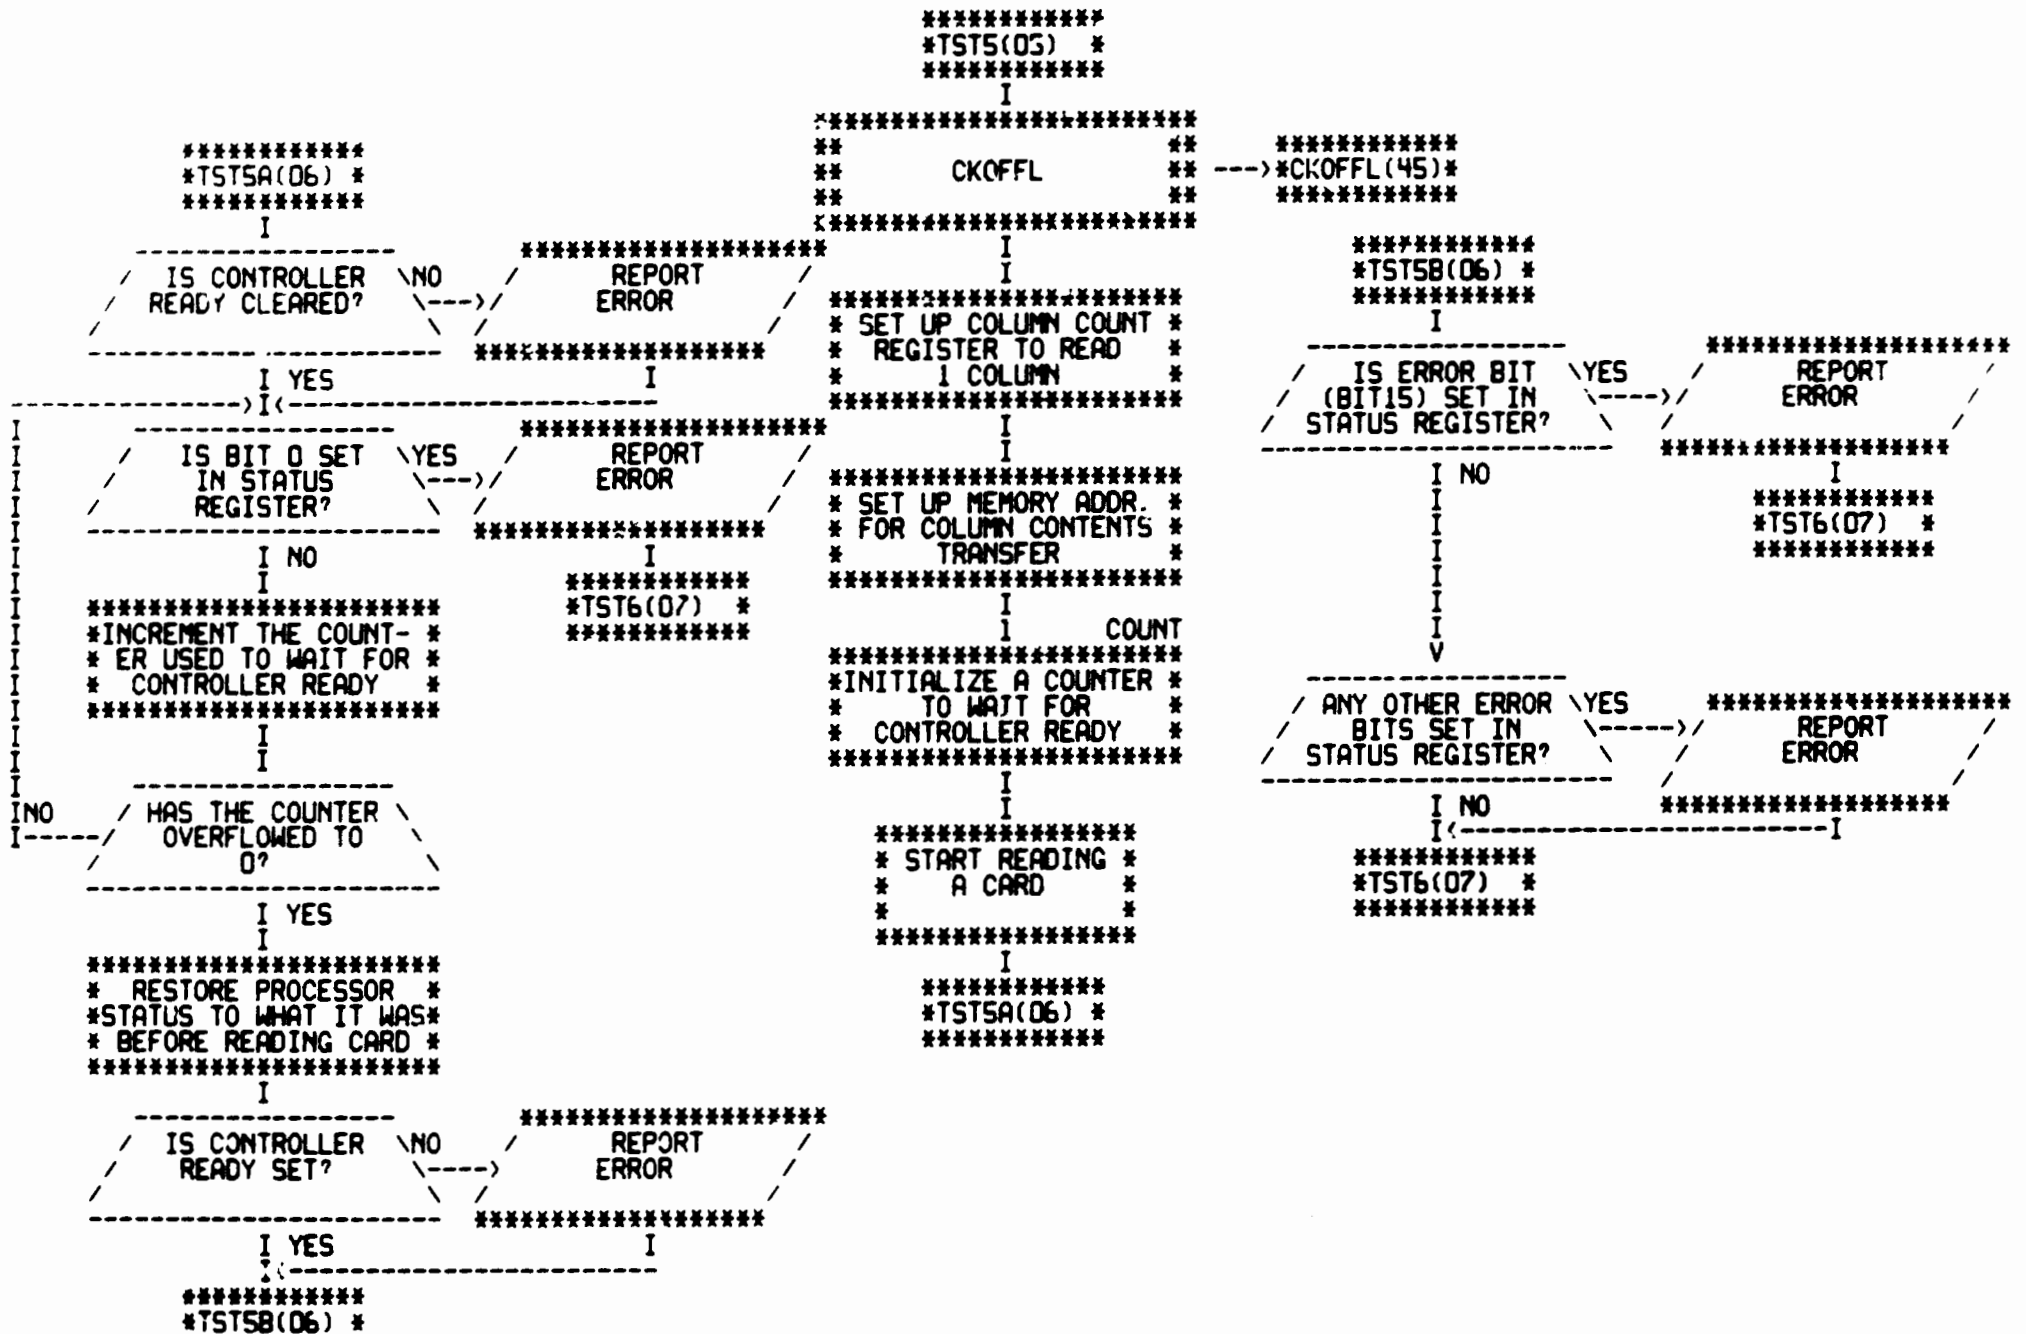



```

*****
*TINT7(08) *
*****
I
-----
/ WAS CONTROLLER \ NO \
/  READY?       \---> \ REPORT
/                   \ /  ERROR
/                   \ /
-----
I YES
I <-----
*****
* RESET STACK *
* POINTER FROM *
* INTERRUPT *
*****
I
-----
/ DID ANY KIND \ YES \
/ OF ERROR SHOW \---> \ REPORT
/ UP?           \ /  ERROR
/                   \ /
-----
I NO
I <-----
*****
* DISABLE *
* INTERRUPTS *
*****
I
-----
I <----- *CONT7 *
*****
*****
* RESET TRAPCATCHER *
* VECTOR LOCATIONS 230 *
* AND 232 *
*****
I
*****
*TST10(09) *
*****

```

```

*****
*TST7(07) *
*****
I
*****
**          **
**   INIT   **-----> *INIT(45) *
**          **
*****
I
*****
* SET RETURN POINT *
* AND PS FOR WHEN AN *
* INTERRUPT OCCURS *
*****
I
*****
* SET CPU TO *
* PRIORITY *
* LEVEL 0 *
*****
I
*****
* SET COLUMN COUNT TO *
* *31(10) AND BUS ADDR. *
* TO "BUFBEQ" *
*****
I
*****
* SET INTERRUPT *
* ENABLE AND *
* READ *
*****
I
*****
* WAIT FOR *
* CONTROLLER *
* READY *
*****
I
-----
/ DID AN INTER- \ NO \
/  RUPT OCCUR? \---> *INTN(08) *
/                   \ /
-----
I YES
*****
*TINT7(08) *

```

```

*****
*INTN(08) *
*****
I
*****
*GIVE CONTROL BACK TO *
* CPU AND DISABLE *
* INTERRUPTS *
*****
I
-----
/ REPORT
/ ERROR
/
-----
I
*****
*CONT7 *
*****

```

```

*****
*TINT10(09)*
*****
      I
*****
      REPORT
      ERROR
*****
      I
*****
* RESET STACK *
* POINTER FROM *
* INTERRUPT *
*****
      I<-----*T10GO *
      I
*****
* DISABLE *
* INTERRUPTS *
*****
      I
*****
* RESET TRAPCATCHER *
* VECTOR LOCATIONS 230 *
* AND 232 *
*****
      I
*****
*TST11(10)*
*****

```

```

*****
*TST10(08)*
*****
      I
*****
**          **
**      INIT          **
**          **
*****
      I
*****
* SET RETURN POINT *
* AND PS FOR WHEN AN *
* INTERRUPT OCCURS *
*****
      I
*****
* SET CPU TO *
* PRIORITY LEVEL *
*      ?      *
*****
      I
*****
* SET COLUMN COUNT TO *
* 6(10) AND BUS ADDR. *
* TO "BUFBEQ" *
*****
      I
*****
* SET INTERRUPT *
* ENABLE AND *
* READ *
*****
      I
*****
* WAIT FOR *
* CONTROLLER *
* READY *
*****
      I
-----
      DID AN \NO
      INTERRUPT \----->*T10GO *
      OCCUR ? \
-----
      I YES
*****
*TINT10(09)*

```

```

*****
*(INT11(10)*
*****
I
-----
/ IS CONTROLLER \ NO
/  READY SET ? \ ----> / REPORT
/                   \ /  ERROR
/                   \ /
-----
I YES
I<-----
*****
*  DISABLE  *
* INTERRUPTS *
*          *
*****
I
*****
* RESET TRAPCATCHER *
*  VECTORS 230 & 232 *
*          *
*****
I
*****
* RESET STACK *
* POINTER FROM *
* INTERRUPT *
*****
I
-----
/ HAVE WE INTER- \ YES
/  RUPTED BEFORE \ /
/  AT ANOTHER   \ /
/  LEVEL?       \ /
-----
I NO
*****
* SET PREVIOUS INTER- *
* RUPT FLAG (INTFLG) & *
* STORE CURRENT LEVEL *
*****
I
*****
* TYPE MSG. INDICATING *
* WHAT THE INTERRUPT *
* LEVEL WAS *
*****
I
*****
* GO TO NEXT *
* TEST *
*          *
*****

```

```

*****
* TST11(09) *
*****
I
*****
** INIT **
*****
I
*****
* SET RETURN POINT *
* AND PS FOR WHEN AN *
* INTERRUPT OCCURS *
*****
I
*****
* SET CPU TO *
* PRIORITY *
* LEVEL 6 *
*****
I
*****
* SET COLUMN COUNT TO *
* 80(10) AND BUS ADDR. *
* TO "BUFBE" *
*****
I
*****
* SET INTERRUPT *
* ENABLE AND *
* REAC *
*****
I
*****
* WAIT FOR *
* CONTROLLER *
* READY *
*****
I
-----
/ DID AN INTER- \ YES
/  RUPT OCCUR? \ ----> * TINT11(10)*
/                   \ *****
-----
I NO
-----
/ IS CONTROLLER \ NO
/  READY SET? \ ---->
/                   \
-----
I YES
*****
* PR70K(10) *
*****

```

```

*****
* PR70K(10) *
*****
I
*****
* GIVE FULL *
* CONTROL BACK *
* TO CPU *
*****
I
*****
* DISABLE *
* INTERRUPTS *
*          *
*****
I
*****
* RESET TRAPCATCHER *
* VECTOR LOCATIONS 230 *
* AND 232 *
*****
I
-----
/ HAVE WE INTER-? \ NO
/  RUPTED BEFORE \ /
/  AT ANOTHER   \ /
/  LEVEL?       \ /
-----
I YES
-----
/ WAS THE OTHER \ YES
/  LEVEL HIGHER? \ /
/                   \ /
/                   \
-----
I NO
I<-----
*****
* GO ON TO NEXT *
* TEST *
*          *
*****
I
-----
/ WAS THE OTHER \ YES
/  LEVEL HIGHER? \ /
/                   \ /
/                   \
-----
I NO
I<-----
*****
* GO ON TO NEXT *
* TEST *
*          *
*****
-----
* HANG IN *
* LOOP *
* WAITING *
*****
-----
* NOTE: TST12, AND TST13 *
* ARE STRUCTURED SIMILARY *
* AND WILL TEST CPU LEVELS *
* 5 AND 4, RESPECTIVELY *
-----

```



```

*-----*
TEST 14 THRU 17 ARE STRUCTURED SIMILARLY

TO THAT SHOWN FOR TEST 11 *TST11(10) *
*****

TESTS 14 THRU 17 COVER CPU LEVELS 3,2,1 AND 0;
THE ONLY DIFFERENCE BEING THAT WE ARE NOW
LOOKING FOR AN INTERRUPT TO OCCUR SINCE THE CPU
LEVELS ARE BELOW THE DEVICE LEVEL OF 4.
*-----*

```

```

*****
*TST20A(11)*
*****
I
-----
/ DID AN INTERRUPT YES * REPORT ERROR *
/ FINALLY OCCUR? \---* NO INTERRUPT *
\ \ * SHOULD OCCUR *
-----
I NO
*****
* GIVE CONTROL *
* BACK TO CPU *
* *
*****
I <-----I
*****
* DISABLE *
* INTERRUPTS *
* *
*****
I
*****
* RESET TRAPCATCHER *
* VECTOR LOCATIONS *
* 230 & 232 *
*****
I
*****
*TST21(12) *
*****

*****
*TST20 *
*****
I
*****
** **
** INIT **----->*INIT(45) *
** **
*****
I
*****
*SET RETURN POINT AND *
* PS FOR WHEN AN *
* INTERRUPT OCCURS *
*****
I
*****
* SET CPU TO *
* PRIORITY LEVEL *
* 0 *
*****
I
*****
* SET COLUMN COUNT TO *
* I(10) AND BUS ADDR. *
* TO "BUFBEQ" *
*****
I
*****
* ENABLE *
* INTERRUPTS *
* *
*****
I
*****
* WAIT AWHILE TO *
* SEE IF AN INTERRUPT *----->*TST20A(11)*
* OCCURS *
*****

```

```

*****
*TINT21(12)*
*****
I
-----
/ DID WE RECEIVE \ YES * RESET STACK * **
A 2ND INTERRUPT \--> * POINTER FROM * **          *----->*INIT(45) *
? * INTERRUPT * **          *****
-----
I NO
*****
* GIVE CONTROL *
* BACK TO CPU *
*
*****
I<-----I
*****
* DISABLE *
* INTERRUPTS *
*
*****
I
*****
* RESTORE TRAPCATCHER *
* VECTOR LOCATIONS 230 *
* AND 232 *
*****
I
*****
*TST22(13) *
*****

*****
*TST21(11) *
*****
I
*****
* SET RETURN POINT *
* AND PS FOR WHEN AN *
* INTERRUPT OCCURS *
*****
I
*****
* SET CPU TO *
* PRIORITY *
* LEVEL 0 *
*****
I
*****
* SET COLUMN COUNT TO *
* 1(10) AND BUS ADDR. *
* TO "BUFBEQ" *
*****
I
*****
* SET INTERRUPT *
* ENABLE AND *
* READ *
*****
I
-----
/ DID AN INTER- \ NO * HANG IN LOOP *
RUPT OCCUR \--> * WAITING *
*
*****
-----
I YES
*****
* RESET STACK *
* POINTER FROM *
* INTERRUPT *
*****
I
*****
* SET RETURN *
* ADDR. FOR NEXT *----->* SET CPU BACK * *****
*POSSIBLE INTER.* * TO PRIORITY *----->*TINT21(12)*
* LEVEL 0 * *****

```

\*\*\*\*\*  
\*TINT22(13)\*  
\*\*\*\*\*

\*\*\*\*\*  
\*TST22(12)\*  
\*\*\*\*\*

\*\*\*\*\*  
\*T22A(13)\*  
\*\*\*\*\*

I  
\*\*\*\*\*  
\* RESTORE TRAPCATCHER \*  
\* VECTOR LOCATIONS 230 \*  
\* & 232 \*  
\*\*\*\*\*

I  
\*\*\*\*\*  
\*\* INIT \*\*  
\*\*\*\*\*

\*\*\*\*\* / ANY OTHER ERROR \ YES \* REPORT \*  
\*\*-->\*INIT(45) \* / BITS SET ? E.G. \->\* ERROR \*  
\*\*\*\*\* / BITS 2,10,11,ETC. \ \* \*\*\*\*\*

I  
-----  
/ IS CONTROLLER \ NO  
READY? \-----> / REPORT  
ERROR \

I  
\*\*\*\*\*  
\*SET RETURN POINT AND \*  
\* PS FOR WHEN AN \*  
\* INTERRUPT OCCURS \*  
\*\*\*\*\*

I NO I  
I<----- I  
-----  
/ DOES BUS ADDR. \ NO \* REPORT \*  
REGISTER CONTENTS \->\* ERROR \*  
=160002 ? \ \* \*\*\*\*\*

I YES I  
I<----- I  
-----  
/ IS ERROR BIT15 \ NO  
SET? \-----> / REPORT  
ERROR \

I  
\*\*\*\*\*  
\* SET CPU TO \*  
\* PRIORITY LEVEL \*  
\* 0 \*  
\*\*\*\*\*

I YES I  
I<----- I  
-----  
/ DOES COLUMN CNT \ NO \* REPORT \*  
REGISTER SHOW 4 \->\* ERROR \*  
COLUMNS LEFT ? \ \* \*\*\*\*\*

I YES I  
I<----- I  
-----  
/ IS NXM BIT09 \ NO  
SET? \-----> / REPORT  
ERROR \

I  
\*\*\*\*\*  
\* SET COLUMN \*  
\* COUNT TO READ \*  
\* 5(10) COLUMNS \*  
\*\*\*\*\*

I YES I  
I<----- I  
-----  
\*\*\*\*\*  
\*TST23(14)\*  
\*\*\*\*\*

I YES I  
I<----- I  
-----  
/ IS EXTENDED \ NO  
MEMORY BIT 17 \-----> / REPORT  
SET? \ ERROR \

I  
\*\*\*\*\*  
\* SET BUS ADDRESS TO \*  
\* NON-EXISTANT MEMORY \*  
\* I.E. LOC. 160000 \*  
\*\*\*\*\*

I YES I  
I<----- I  
-----  
/ IS EXTENDED \ NO  
MEMORY BIT16 \-----> / REPORT  
SET? \ ERROR \

I  
\*\*\*\*\*  
\* SET INTERRUPT \*  
\* ENABLE, READ & \*  
\* EXT. MEM. BITS \*  
\*\*\*\*\*

I YES I  
I<----- I

I  
-----  
/ DID AN \ NO  
INTERRUPT OCCUR? \-----> \* HANG IN LOOP \*  
\* WAITING \*  
\* \*  
\*\*\*\*\*

\*\*\*\*\*  
\*T22A(13)\*  
\*\*\*\*\*

I YES  
\*\*\*\*\*  
\* RESTORE STACK \*  
\* POINTER FROM \*  
\* INTERRUPT \*  
\*\*\*\*\*

I  
\*\*\*\*\*  
\*TINT22(13)\*  
\*\*\*\*\*

```

*****
*TST23(13) *
*****
I
*****
* INITIALIZE *
* COLUMN COUNT *
* REGISTER TO 0 *
*****
I
*****
* LOAD LOWER BYTE OF *
* COLUMN COUNT REG. *
* WITH THE VALUE 252 *
*****
I
-----
/ DID UPPER BYTE \ NO * REPORT *
/ GET LOADED WITH \-->* ERROR *
/ THE VALUE 252 ALSO? \ *
-----
I YES
I<-----
*****
*TST24(14) *
*****

```

```

*****
*TST24(14) *
*****
I
*****
* INITIALIZE *
* COLUMN COUNT *
* REGISTER TO 0 *
*****
I
*****
* LOAD HIGH BYTE OF *
* COLUMN COUNT REG. *
* WITH THE VALUE 252 *
*****
I
-----
/ DID LOWER BYTE \ * REPORT *
/ GET LOADED WITH \-->* ERROR *
/ THE VALUE 252 ALSO? \ *
-----
I<-----
*****
*TST25(14) *
*****

```

```

*****
*TST25(14) *
*****
I
*****
* INITIALIZE *
* COLUMN COUNT *
* REGISTER TO 0 *
*****
I
*****
* LOAD COLUMN COUNT *
* REGISTER WITH 10000 *
* AND NEGATE IT *
*****
I
-----
/ DID CONTENTS OF \ YES * REPORT *
/ COLUMN COUNT REG. \-->* ERROR *
/ CHANGE ? \ *
-----
I NO
I<-----
*****
*TST26 *
*****

```

```

*****
*TST26 *
*****

```

\*-----\*

NOTE: TESTS 26, 27 AND 30 ARE CARBON COPIES OF TESTS 23, 24, AND 25, RESPECTIVELY. ONLY DIFFERENCE BEING THAT TESTS 23 - 25 OPERATE ON COLUMN COUNT REGISTER, AND TESTS 26 - 30 OPERATE ON BUS ADDRESS REGISTER.

```

*****
*TINT31(15)*
*****
I
/-----\
IS CONTROLLER \NO
READY SET?   /-----\
\-----/
I YES
*****
* DISABLE *
* FURTHER *
* INTERRUPTS *
*****
I
*****
* RESTORE TRAPCATCHER *
* VECTOR LOCATIONS 230 *
* AND 232 *
*****
I
*****
* RESET STACK *
* FROM *
* INTERRUPT *
*****
I
/-----\
HERE 2 \NO
CARDS READ? /-----\
\-----/
I
*****
*TST32(16)*
*****


*****
*TST31 *
*****
I
*****
INIT
*****
*****
I
*****
* SET UP RETURN *
* ADDR. AND PS *
* FOR INTERRUPT *
*****
I
*****
* SET PROCESSOR *
* TO LEVEL *
* 0 *
*****
I
*****
* SET COLUMN COUNT TO *
* 81(10) I.E.-WRAP *
* AROUND TO 2ND CARD *
*****
I
*****
* SET A START ADDRESS *
* FOR DUMP OF CARD *
* CONTENTS *
*****
I
*****
* SET INTERRUPT *
* ENABLE AND *
* READ *
*****
I
/-----\
DID WE GET AN \YES
INTERRUPT? /-----\
\-----/
I NO
*****
*TINT31(15)*

*****
*INIT(45)*
*****

*****
*T23G0 *
*****
I
*****
* GIVE CONTROL *
* BACK TO *
* CPU *
*****
I
*****
* DISABLE *
* INTERRUPTS *
*****
I
*****
* RESTORE TRAPCATCHER *
* VECTOR LOCATIONS 230 *
* 8232 *
*****
I
*****
REPORT
ERROR
*****
I
*****
*TST32(16)*
*****

*****
*T31G0 *
*****

```

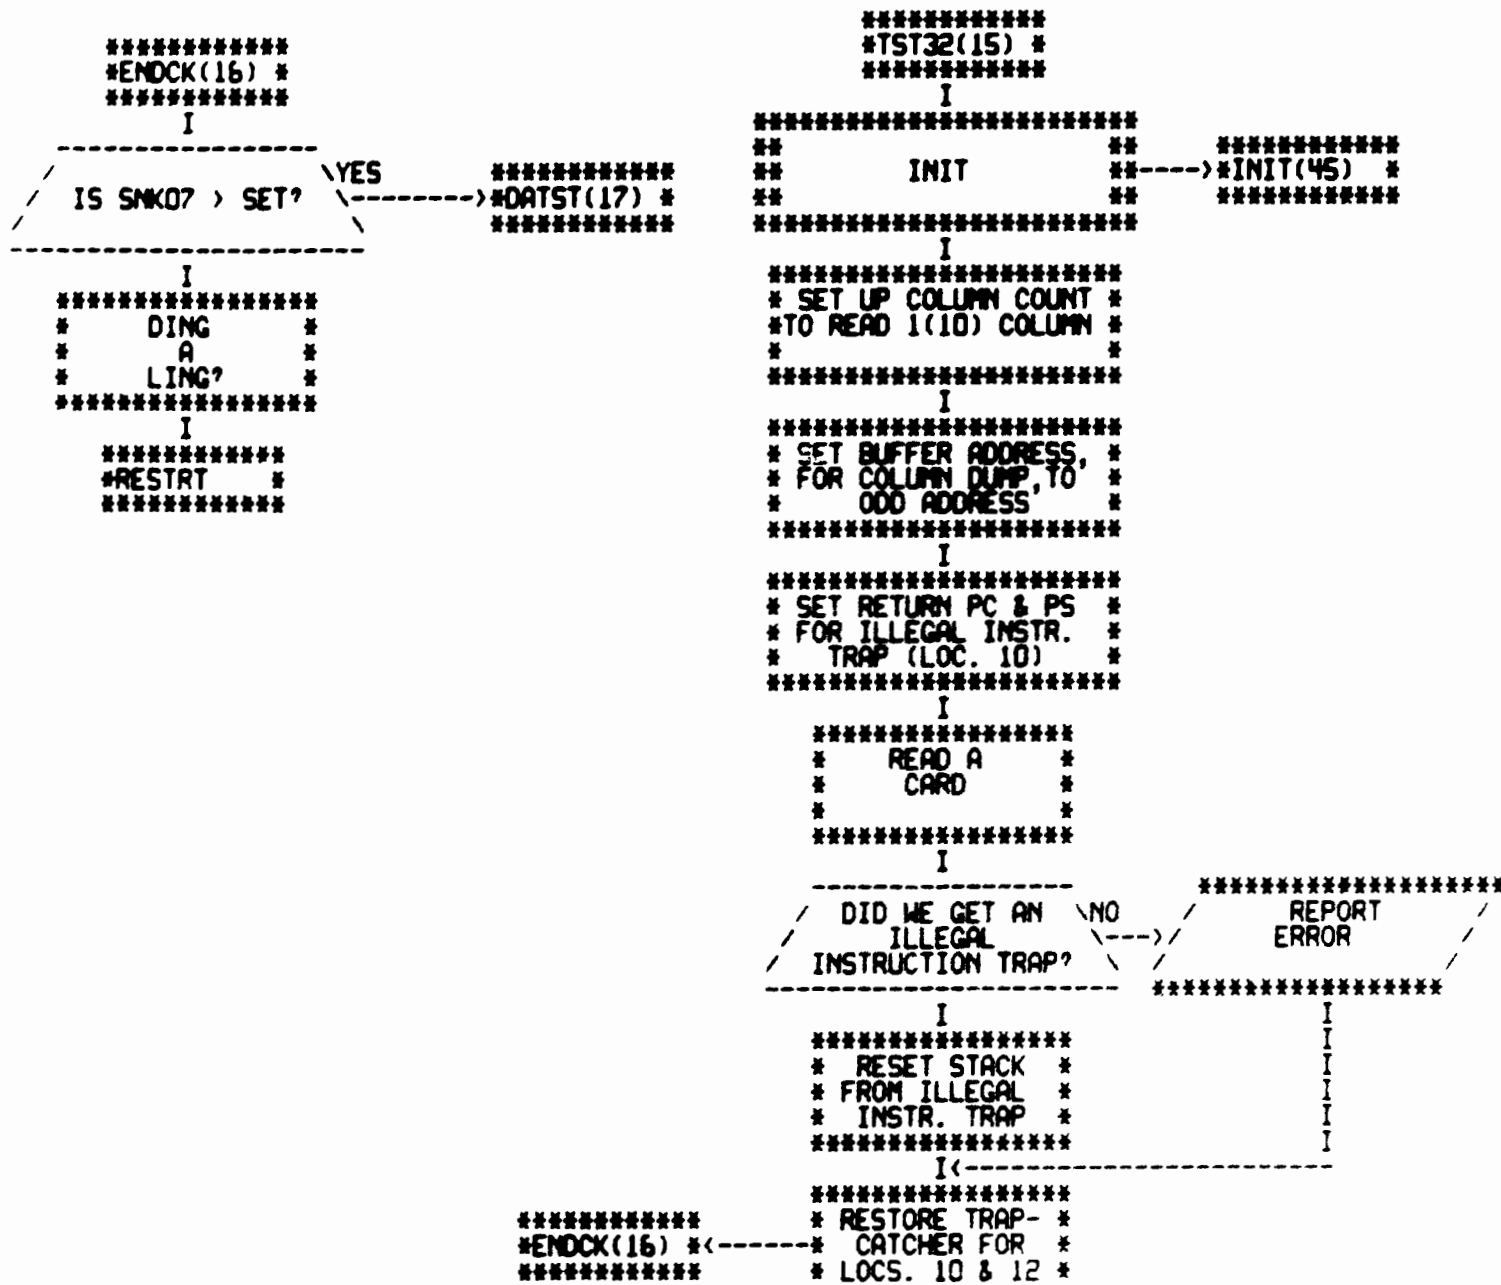

```

*****
*DATST(16) * UNPACKED MODE EXAMPLE
*****
I
*****
/ TYPE LEAD-IN /
/ POSITIONAL /
/ MESSAGES /
*****
I
*****
* INITIALIZE CARD *
* COUNT AND COLUMN *
* COUNT TO ZERO *
*****
I
-----
/ ARE WE TESTING \ YES *
/ A \ -----> * LOAD BINARY DATA *
/ BINARY DECK ? \ * TABLE POINTERS *
-----
I NO I
***** I
* LOAD ALPHANUMERIC * I
* DATA TABLE * I
* POINTERS * I
***** I
I<-----
*****
** ** *****
** INIT **-----> *INIT(45) *
** ** *****
*****
I
*****
* SET UP RETURN ADDR. *
* FOR INTERRUPT *
* SERVICING *
*****
I
*****
* SET CARD *
* SIZE AND WORK- *
* ING OFFSET *
*****
I
*****
*DATST1(18)*

```

\*\*\*\*\*  
\*DATST1(17)\*  
\*\*\*\*\*

I

\*\*\*\*\*  
\*SET COL. COUNT = 80. \*  
\* SET GPR = RO FOR \*  
\* ADDR. SELECTION \*  
\*\*\*\*\*

I

\*\*\*\*\*  
\* ENABLE \*  
\* INTERRUPTS \*  
\*\*\*\*\*

I

-----  
/ DO WE WANT PACK \ NO  
/ MODE? \-----I  
-----

I YES

\*\*\*\*\*  
\* SET UP FOR \* NO / WAS IMAGE MODE \ I  
\* ACCEPTANCE OF \* <----- / SELECTED ALSO? \ I  
\* PACK MODE \* /----- I  
\*\*\*\*\*

I YES

I----->I<-----

\*\*\*\*\*  
\* READ \*  
\* A \*  
\* CARD \*  
\*\*\*\*\*

\*\*\*\*\*  
\*BKGND \*----->I<-----  
\*\*\*\*\*

-----  
/ HAVE WE \ NO  
/ FINISHED READING \-----I  
/ A CARD YET? \ I  
-----

I YES


-----  
/ IS CONTROLLER \ NO / REPORT  
/ READY? \-----> / ERROR  
-----

I YES

I<-----

\*\*\*\*\*NO  
\*ISR(19) \* <----- / HAD WE SELECTED \ YES \*  
\*\*\*\*\* / DATA PACK MODE? \-----> \*PSR \*  
\*\*\*\*\*



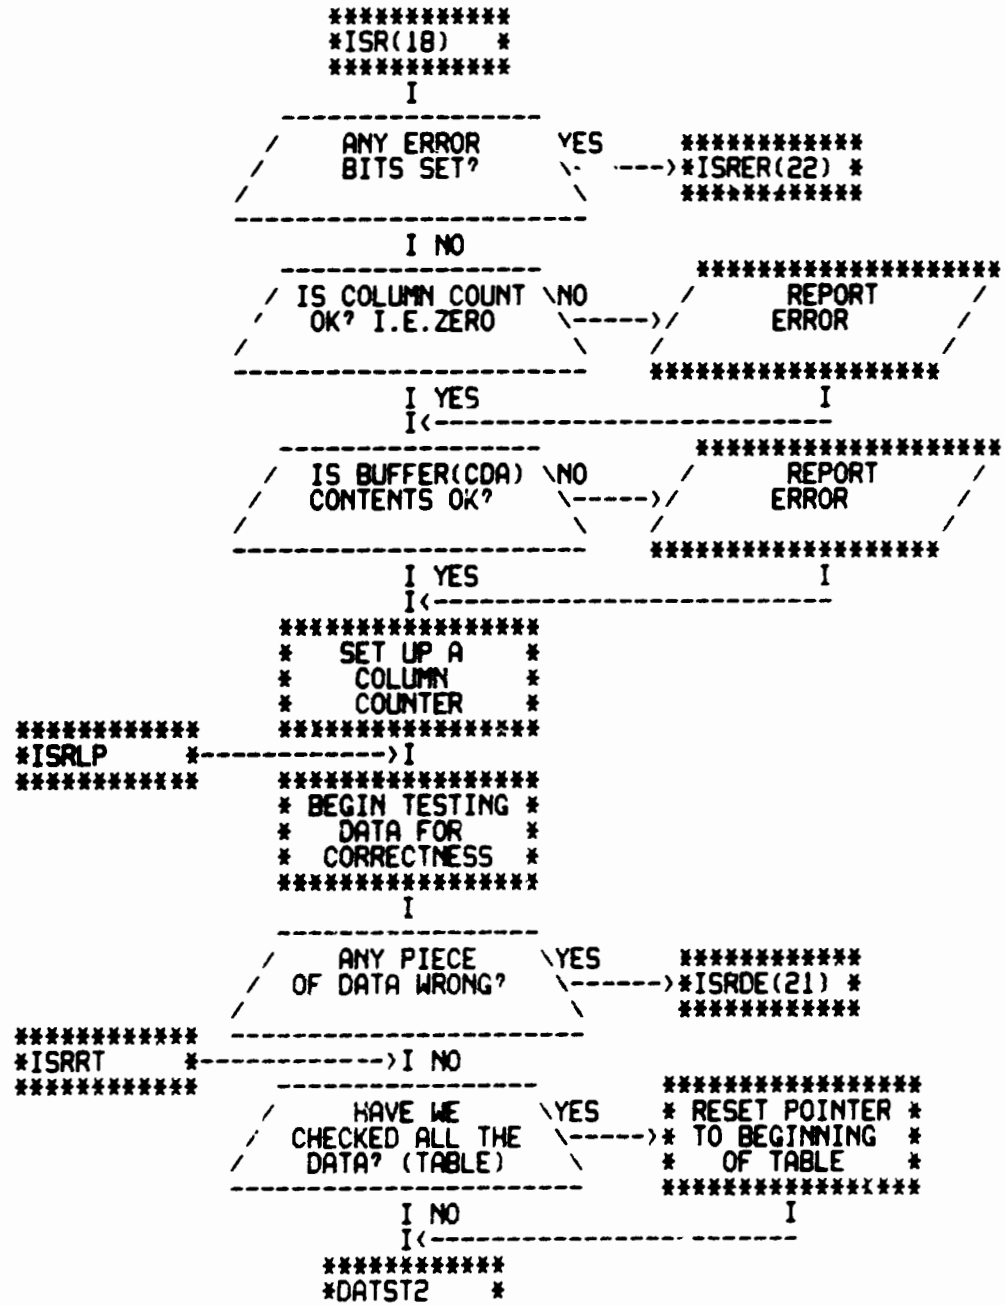

```

*****
*SRETRN(20)*
*****
I
*****
* CALCULATE NEW SIZE *
* OF COLUMNS TO BE *
* READ *
*****
I
*****
* RESET CARD READER *
* BUFFERS AS PER *
* PRESENT POSITION *
*****
I
*****
* READ NEXT *
* CARD *
*****
I
*****
*BKGN0 *
*****

```

```

*****
*DATST2 *
*****
-----
/ HAVE WE REACHED \ YES
THE END OF THE  ----->
MEMORY BUFFER ? \
-----
I NO
*****
* UPDATE *
* COLUMN *
* COUNT *
*****
I
*****
* UPDATE TABLE *
* OFFSET FOR *
* CARD #1 IN DECK*
*****
I
-----
/ HAVE WE LOOKED \ NO
AT LAST COLUMN OF ----->
DECK ? \
-----
I YES
*****
* STEP UP TO *
* NEXT *
* CARD *
*****
I
*****
* UPDATE TABLE *
* POINTER FOR *
* NEXT CARD *
*****
I
*****
*ISRLP *
*****

*****
* STEP UP TO *
* NEXT CARD *
*****
I
-----
IMAGE MODE \ NO
SELECTED ? ----->
-----
I YES
I<-----
*****
*SRETRN(20)*
*****

*****
* SET UP FOR *
* PACKING MODE *
*****
I
*****
*ISRLP *
*****

```

\*\*\*\*\*  
\*ISRDE(19) \*  
\*\*\*\*\*

I

-----		*****	*****
/	IS THIS THE	\ YES	* CALCULATE *
/	FIRST CARD ?	\ ----->	* PRESENT POSIT- * * RESET CARD *
/		\	* ION OF IMPORT. * * COUNTER *
/		\	* ***** * * (CDCNT) *
/		\	* ***** * * *****
	I NO		I
	I<-----		

-----		
/	INHIBIT ERROR	\ YES
/	PR'NTOUT ?	\ -----I
/		\
/		\
	I NO	I


\*\*\*\*\*  
\* TYPE OUT HEADING, \*  
\* DECK, CARD COUNT, & \*  
\* COLUMN NUMBER \*  
\*\*\*\*\*

I  
\*\*\*\*\*  
\* TYPE OUT THE "WAS" \*  
\* AND "SHOULD BE" \*  
\* DATA \*  
\*\*\*\*\*

I<-----

-----		*****
/	HALT	\ YES
/	ON	\ ----->
/	ERROR ?	\
/		\
	I NO	* HALT *
	I<-----	* ***** *

\*\*\*\*\*  
\*ISRRT \*  
\*\*\*\*\*

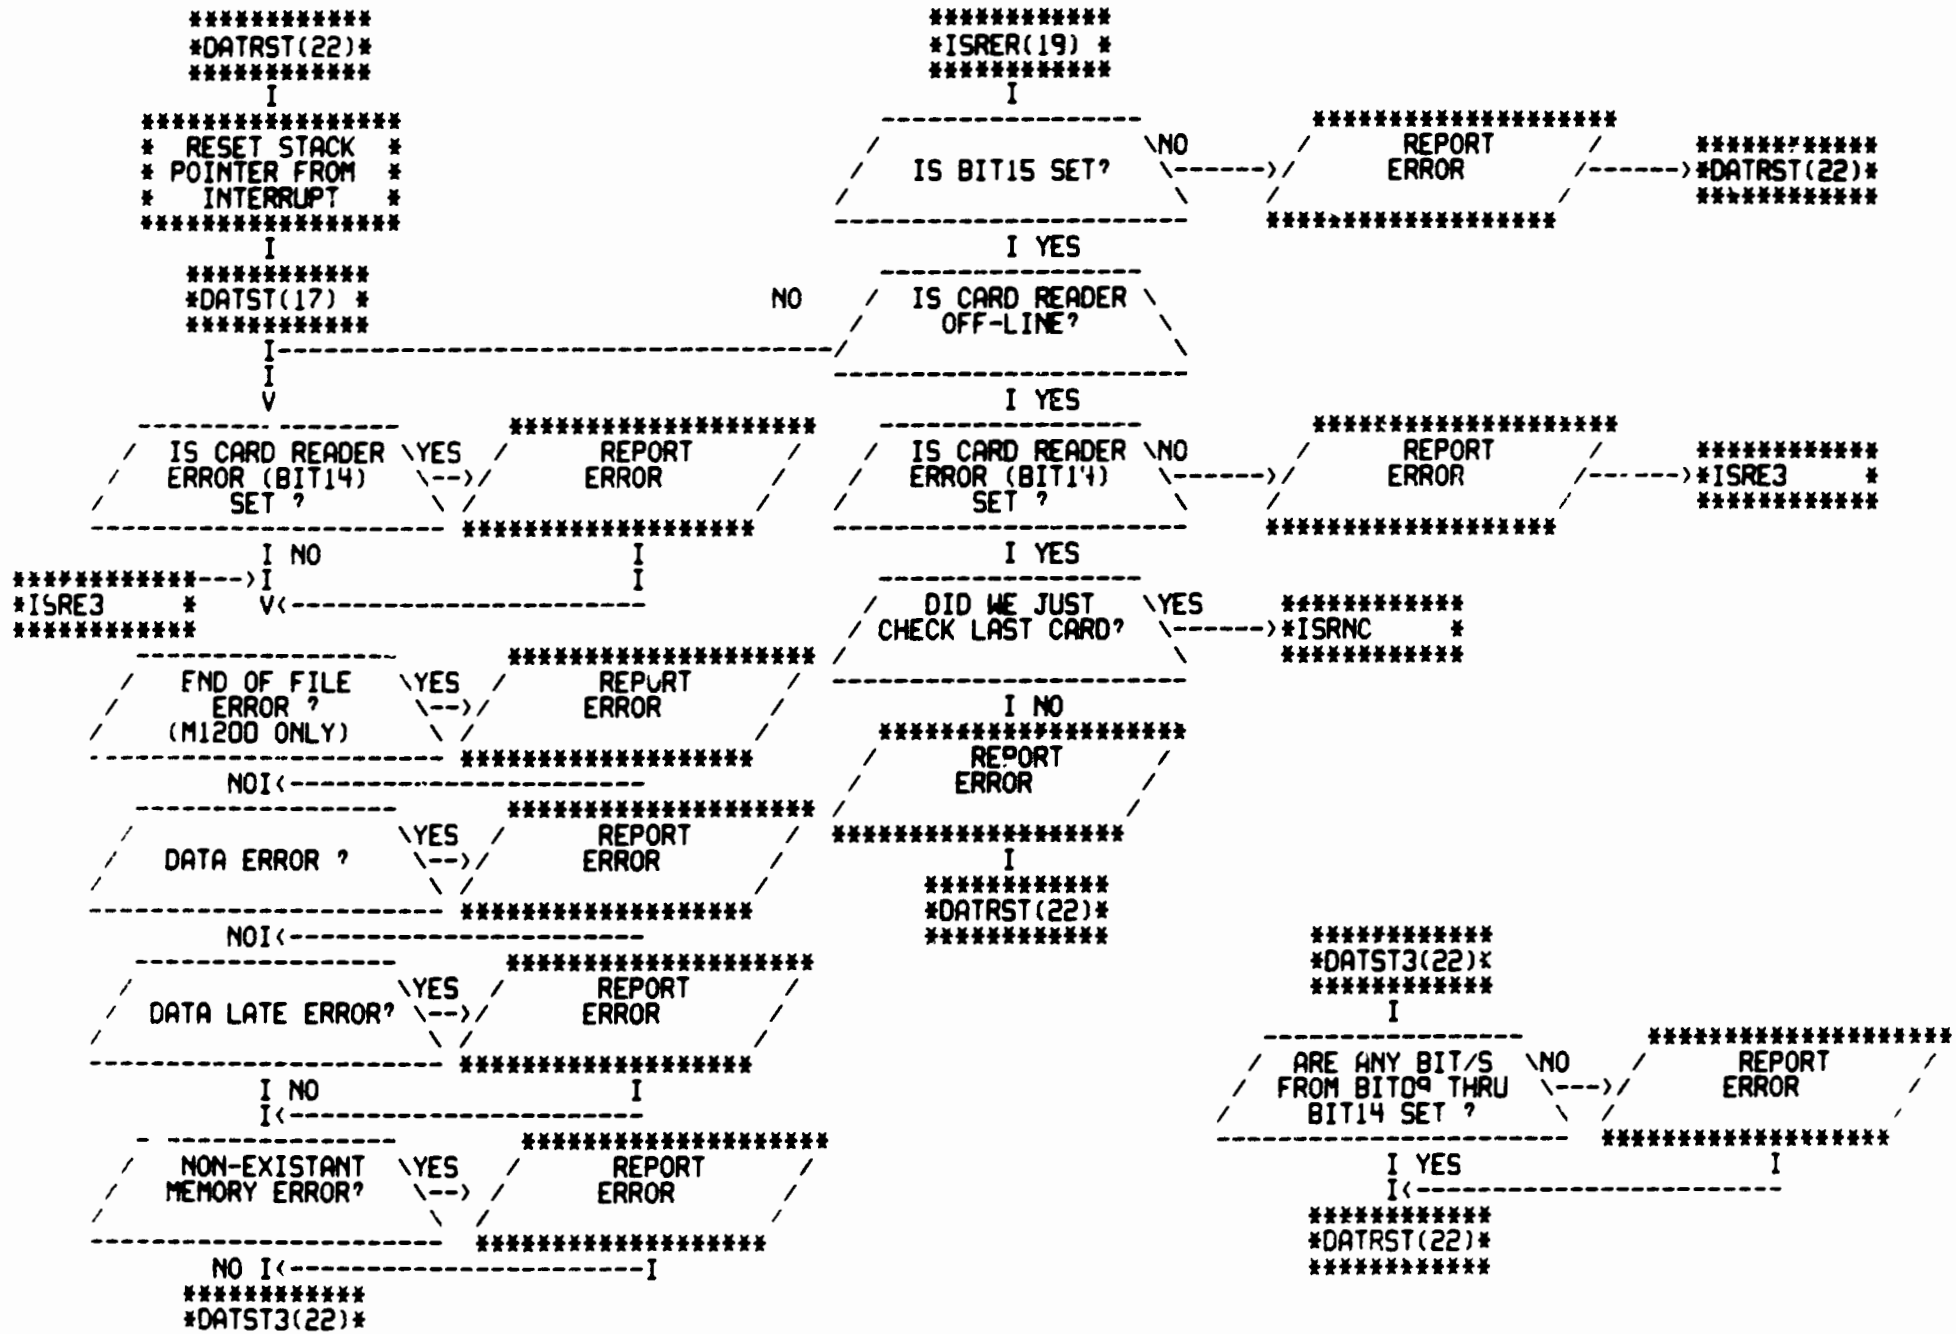


\*-----\*  
DATA RELIABILITY TESTING FOR PACKED MODE WILL


\*\*\*\*\*  
START AT \*DATST(17) \* & BRANCH OFF TO\*PSR \*  
\*\*\*\*\*


WHERE DATA WILL BE HANDLED AS OUTLINED IN

\*\*\*\*\*  
SECTION STARTING AT \*ISR(19) \*WITH ONLY ONE  
\*\*\*\*\*

EXCEPTION: DATA IS HANDLED USING BYTE CONSTRUCTION

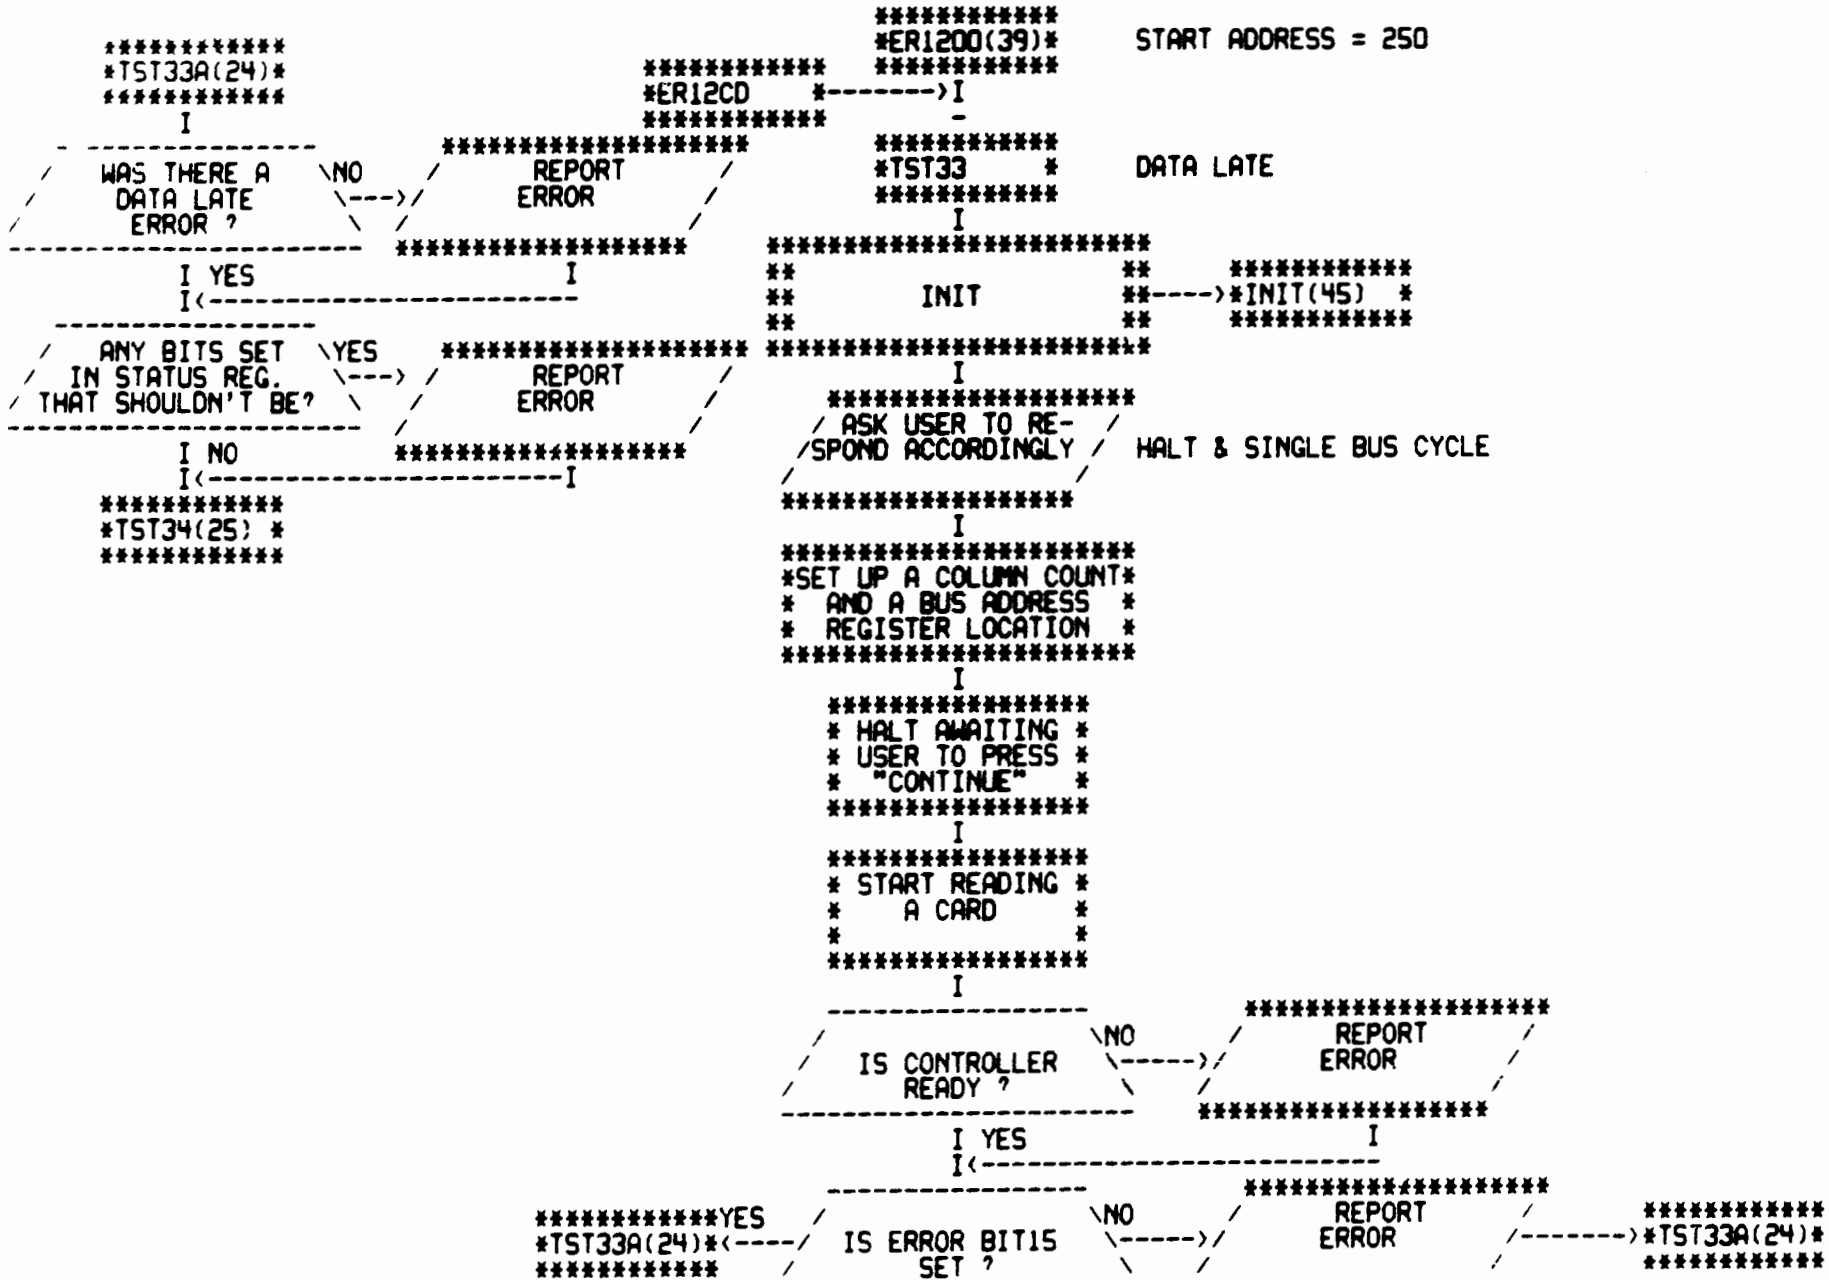

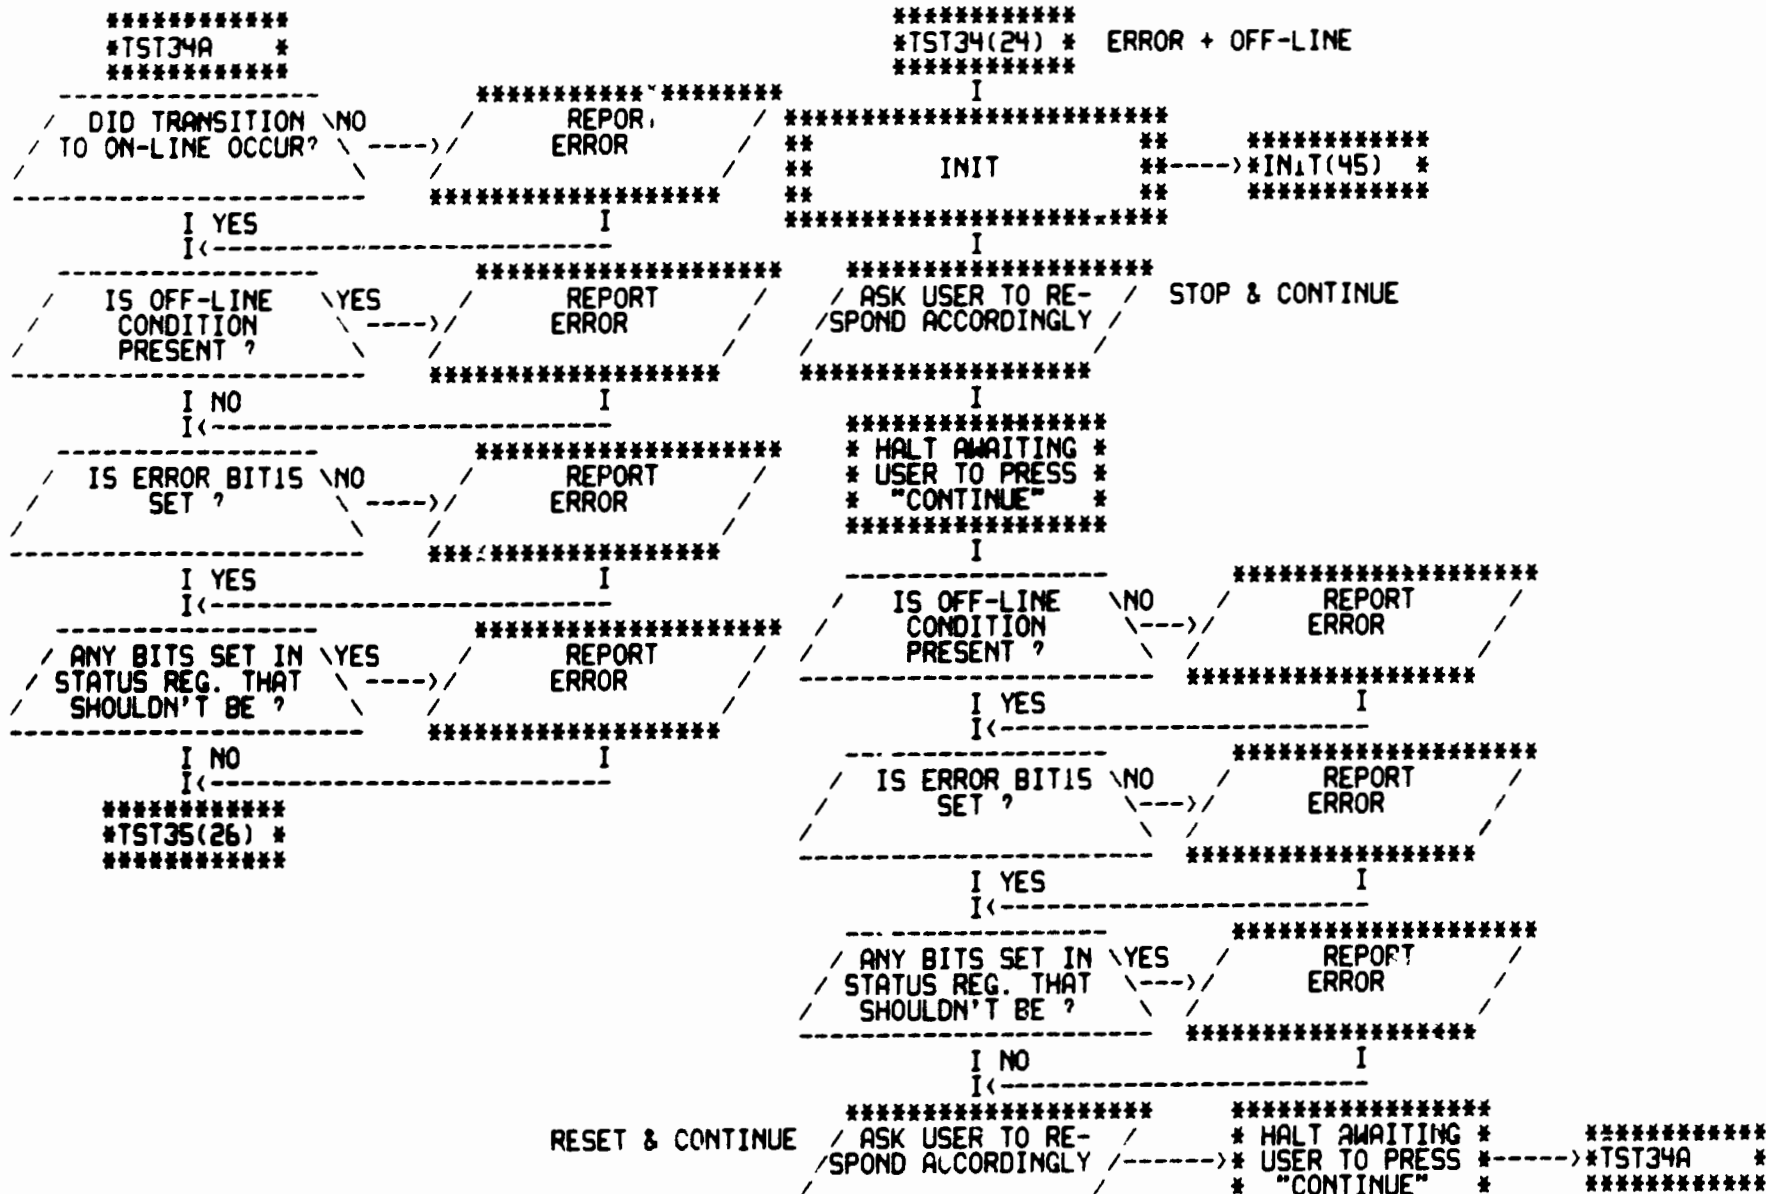


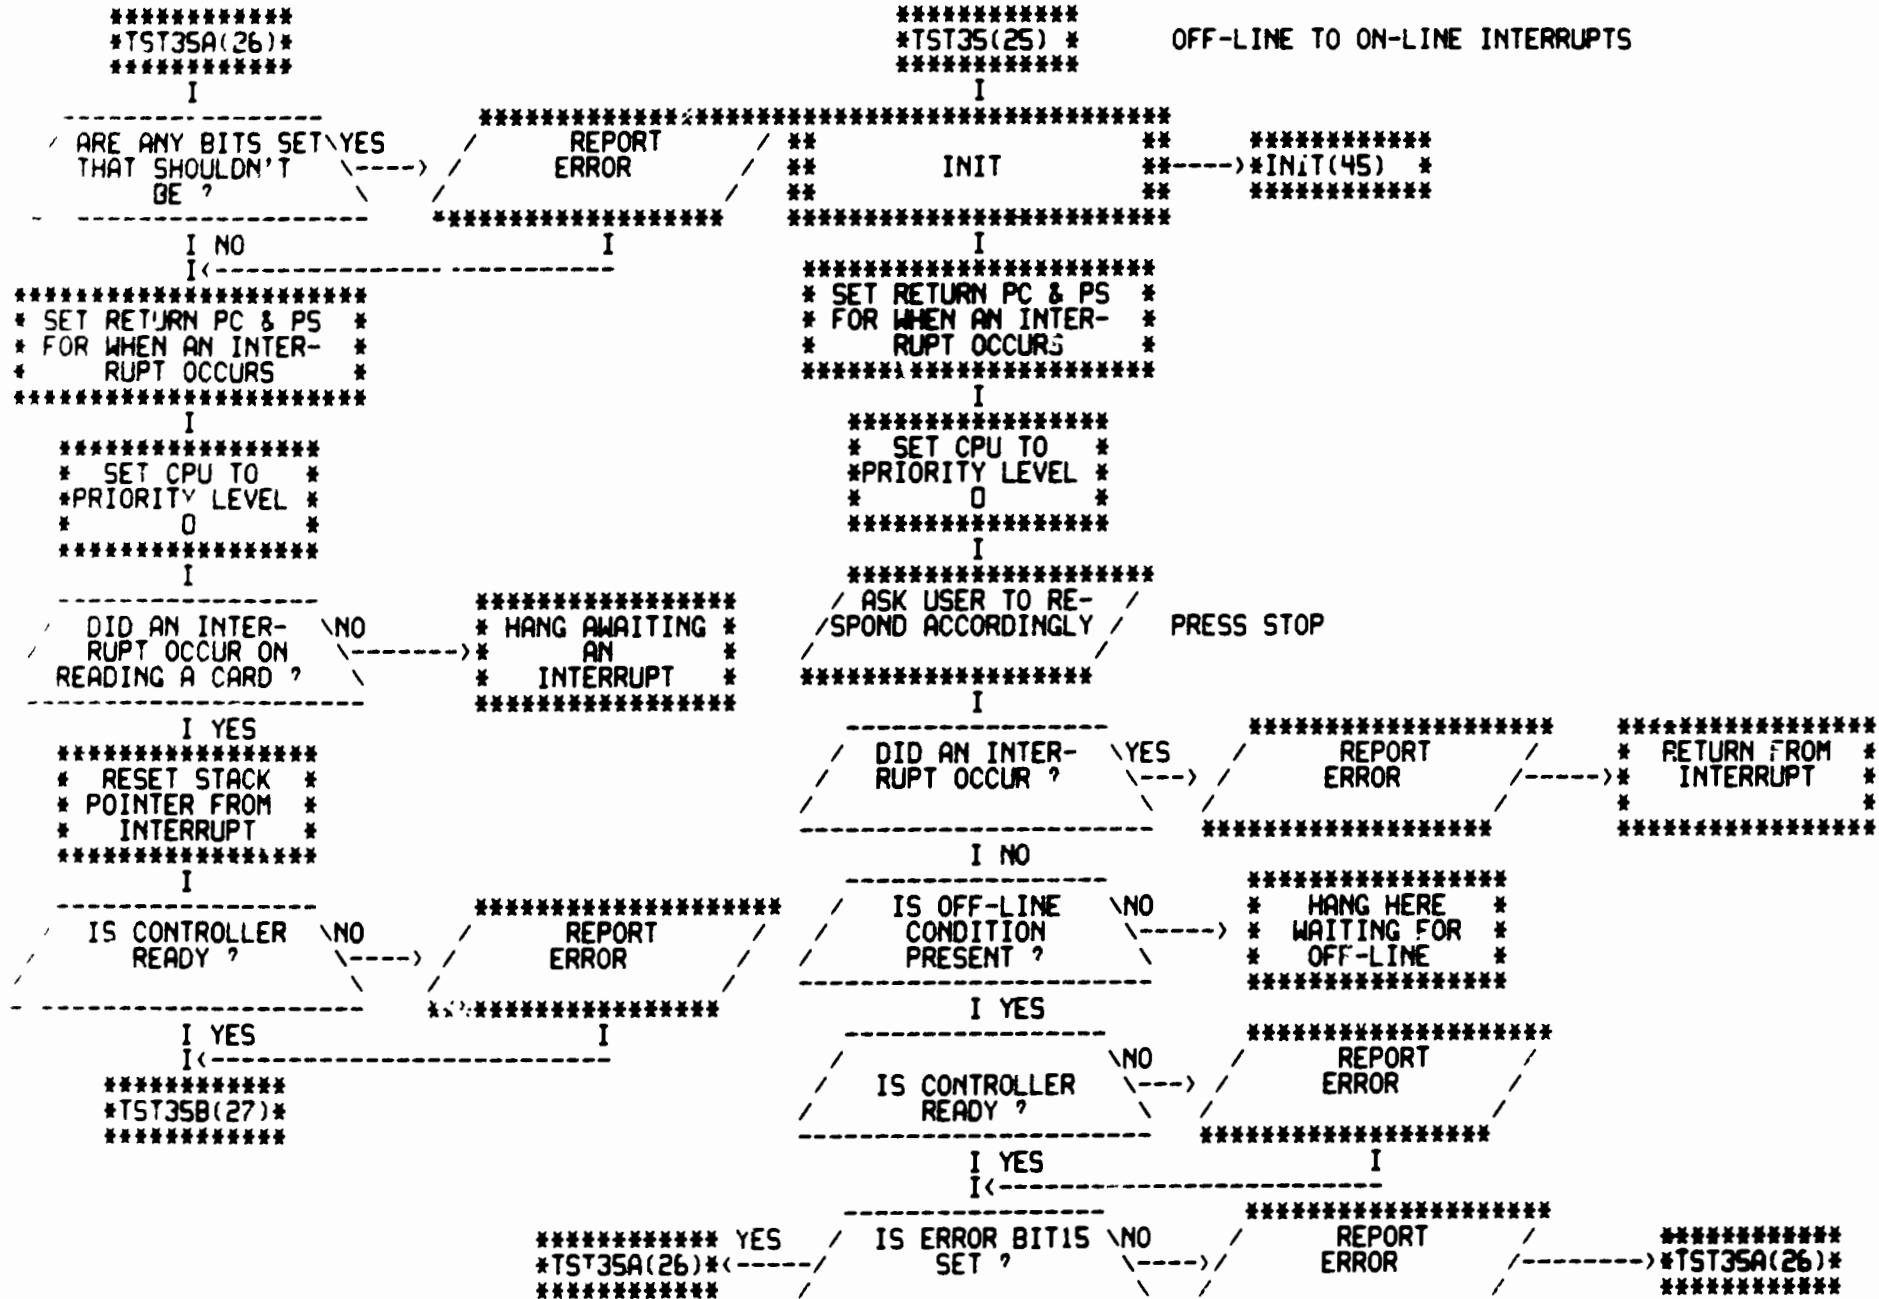




\*\*\*\*\*  
\*TST35C(27)\*  
\*\*\*\*\*

I  
\*\*\*\*\*  
\* RESET STACK \*  
\* POINTER FROM \*  
\* INTERRUPT \*  
\*\*\*\*\*

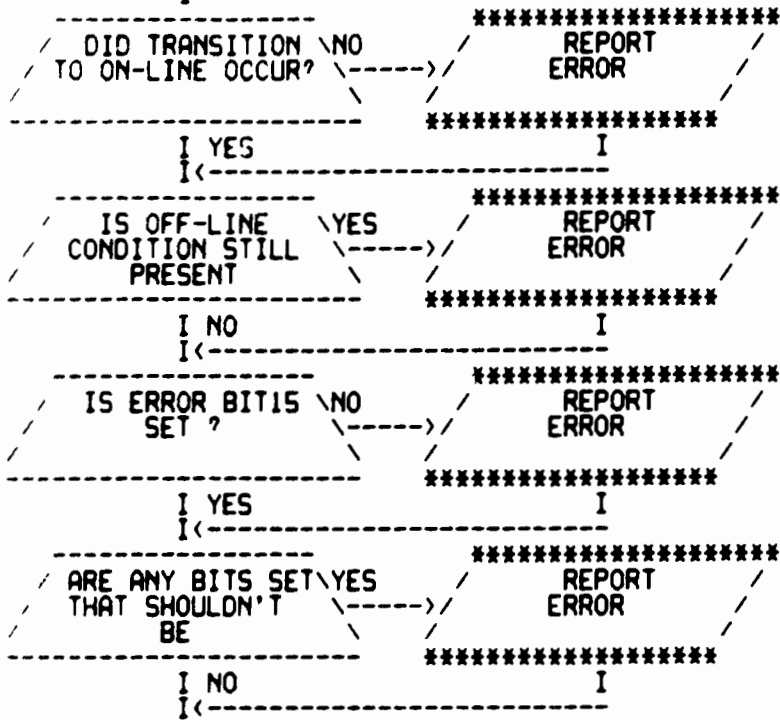

\*\*\*\*\*  
\*TST36(28) \*  
\*\*\*\*\*

\*\*\*\*\*  
\*TST35C(27)\*  
\*\*\*\*\*

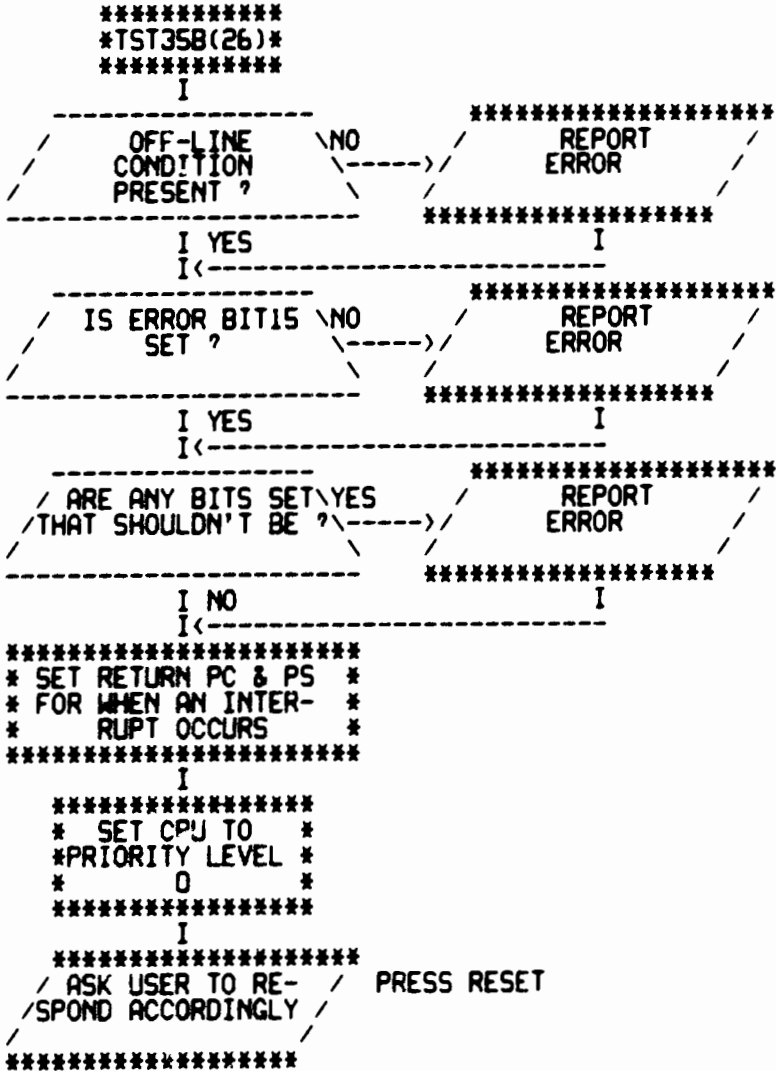

\*\*\*\*\*  
 / ASK USER TO RE- / PRESS RESET  
 SPOND ACCORDINGLY /  
 \*\*\*\*\*  
 I  
 \*\*\*\*\*  
 / DID AN INTER- /  
 RUPT OCCUR ? /  
 \*\*\*\*\*  
 \* HANG AWAITING \*  
 \* INTERRUPT \*  
 \*

```
*****
*TST36A(28)*
*****
I
*****
* SET RETURN PC & PS *
* FOR WHEN AN INTERRUPT *
* OCCURS *
*****
I
*****
* SET CPU TO *
* PRIORITY LEVEL *
* 0 & SET "IE" *
*****
I
*****
/ ASK USER TO RESPOND ACCORDING-
LY /
*****
I
/ DID AN INTERRUPT NO
OCCUR ? \-----> * HANG AWAITING *
* INTERRUPT *
*****
I YES
*****
* RESET STACK *
* POINTER FROM *
* INTERRUPT *
*****
I
*****
* SET RETURN PC & PS *
* FOR WHEN AN INTERRUPT *
* OCCURS *
*****
I
*****
* SET CPU LEVEL *
* TO 0 & INIT. *
* COL.CNT & ADDR. *
*****
I
/ DID AN INTERRUPT NO
OCCUR ON ATTEMPT \-----> * HANG AWAITING *
TO READ A CARD ? \ * INTERRUPT *
*****
I YES
*****
*TST36B(28)*
```

```
*****
*TST36(27)*
*****
I
*****
INIT
*****
/ ASK USER TO RE-
SPOND ACCORDINGLY /
*****
I
*****
* HANG AWAITING *
* USER TO PRESS *
* CONTINUE *
*****
I
/ IS OFF-LINE \ NO
CONDITION PRESENT? \-----> / REPORT
ERROR /
*****
I YES
I<-----
/ IS ERROR BIT15 \ NO
SET ? \-----> / REPORT
ERROR /
*****
I YES
I<-----
/ IS CARD READER \ NO
ERROR BIT14 SET? \-----> / REPORT
ERROR /
*****
I YES
I<-----
/ ANY BITS SET \ YES
THAT SHOULDN'T \-----> / REPORT
BE ? \ ERROR /
*****
I NO
I<-----
*****
*TST36A(28)*
*****
```

```
*****
*TST36B(28)*
*****
I
*****
* RESET STACK *
* POINTER FROM *
* INTERRUPT *
*****
I
/ IS CARD READER \ NO
STATUS = 300 ? \-----> * HANG AWAITING *
* REPORT *
* ERROR *
*****
I YES
I<-----
*****
*TST37(29)*
*****
```

INPUT HOPPER EMPTY

REMOVE CARDS  
& CONTINUE

RESTORE CARDS  
& RESET

```
*****  
*TST37A(29)*  
*****  
I  
*****  
* SET RETURN PC & PS *  
* FOR AN INTERRUPT *  
* OCCURRENCE *  
*****  
I  
*****  
*SET CPU LEVEL= *  
*0 AND SET "IE" *  
* BIT *  
*****  
I  
/ ASK USER TO RE- /  
/ SPOND ACCORDINGLY /  
*****  
I  
/ ASK USER TO RE- /  
/ SPOND ACCORDINGLY /  
*****  
I  
-----  
/ DID INTERRUPT \ NO * HANG AWAITING *  
/ OCCUR ? \-> * INTERRUPT *  
-----  
I YES  
*****  
* RESET STACK *  
* POINTER FROM *  
* INTERRUPT *  
*****  
I  
*****  
* SET RETURN PC & PS *  
* FOR AN INTERRUPT *  
* OCCURRENCE *  
*****  
I  
*****  
* SET CPU LEVEL TO 0 *  
* AND INIT. COL. COUNT *  
* & BUS ADDR. REGS. *  
*****  
I  
-----  
/ DID INTERRUPT \ NO * HANG AWAITING *  
/ OCCUR ON READING \-> * INTERRUPT *  
/ A CARD ? \ * *  
-----  
I YES  
*****  
*TST37B(29)*  
*****
```

```
*****  
*TST37(28) *  
*****  
I  
*****  
** INIT **  
*****  
I  
/ ASK USER TO RE- /  
/ SPOND ACCORDINGLY /  
*****  
I  
*****  
* HALT AWAITING *  
* USER TO PRESS *  
* CONTINUE *  
*****  
I  
-----  
/ IS OFF-LINE \ NO * REPORT *  
/ CONDITION \-> * ERROR *  
/ PRESENT ? \ * *  
-----  
I YES  
I<-----  
-----  
/ IS ERROR BIT15 \ NO * REPORT *  
/ SET ? \-> * ERROR *  
-----  
I YES  
I<-----  
-----  
/ IS CARD READER \ NO * REPORT *  
/ ERROR BIT14 SET? \-> * ERROR *  
-----  
I YES  
I<-----  
-----  
/ ARE ANY EXTRA \ YES * REPORT *  
/ BITS SET THAT \-> * ERROR *  
/ SHOULDN'T BE ? \ * *  
-----  
I NO  
I<-----  
*****  
*TST37A(29)*  
*****
```

OUTPUT STACKER FULL

```
*****  
*TST37B(29)*  
*****  
I  
*****  
* RESET STACK *  
* POINTER FROM *  
* INTERRUPT *  
*****  
I  
-----  
/ IS CONTENTS OF \ NO * REPORT *  
/ STATUS REGISTER \-> * ERROR *  
/ = 300 ? \ * *  
-----  
I YESI<-----  
*****  
*TST40(30) *  
*****
```

PRESSURE ARM  
DOWN & CONTINUE

\*\*\*\*\*  
\*TST40A(30)\*  
\*\*\*\*\*

\*\*\*\*\*  
\*TST40(29) \* PICK CHECK  
\*\*\*\*\*

```

I
-----
/ IS OFF-LINE \ NO
/ CONDITION PRESENT? \-----> / REPORT ERROR /
-----
I YES
I<-----
/ IS ERROR BIT15 \ NO
/ SET ? \-----> / REPORT ERROR /
-----
I YES
I<-----
/ IS CARD READER \ NO
/ ERROR BIT14 SET? \-----> / REPORT ERROR /
-----
I YES
I<-----
/ HAS ECO #14 \ NO
/ BEEN INSTALLED ON \-----> / REPORT ERROR /
/ THIS CARD READER? \-----> *TST40B *
-----
I YES
/ HAS A PICK CHECK \ NO
/ ERROR BEEN \-----> / REPORT ERROR /
/ DETECTED ? \----->
-----
I YES *****
I<-----TST40B <----- I
*****
I
V
/ ARE ANY BITS SET \ YES
/ IN STATUS REGISTER \-----> / REPORT ERROR /
/ THAT SHOULDN'T BE? \----->
-----
I NO
I<-----
*****
*TST40C(31)*
*****

```

```

I
-----
/ ASK USER TO RE- / HOLD CAP UNDER SWITCH
/ SPOND ACCORDINGLY / DOWN & CONTINUE
-----
I
*****
* HALT AWAITING *
* USER TO PRESS *
* CONTINUE *
*****
I
/ IS OFF-LINE \ NO
/ CONDITION NOW \-----> / REPORT ERROR /
/ PRESENT ? \----->
-----
I YES
I<-----
/ DID WE GET A \ NO
/ TRANSITION TO \-----> * WAIT FOR IT *
/ ON-LINE ? \-----> *
-----
I YES
I
/ IS CONTENTS OF \ NO
/ STATUS REGISTER = \-----> / REPORT ERROR /
/ 140210 ? \----->
-----
I YES
I<-----
*****
* SET COLUMN COUNT, *
* BUS ADDR. AND READ *
* A CARD *
*****
I
*****
*TST40A(30)*

```

\*\*\*\*\*  
\*TST400(31)\*  
\*\*\*\*\*

I

-----  
/ DID AN INTERRUPT \ NO \* HANG AWAITING \*  
/ OCCUR ? \ -----> \* INTERRUPT \*  
-----  
\* \*  
\*\*\*\*\*

I YES

\*\*\*\*\*  
\* RESET STACK \*  
\* POINTER FROM \*  
\* INTERRUPT \*  
\*\*\*\*\*

I

-----  
/ IS CONTENTS OF \ NO \* HANG AWAITING \*  
/ STATUS REGISTER = \---> / REPORT \*  
300 ? \ \ ERROR \*  
-----  
\* \*  
\*\*\*\*\*

I YES

I<-----  
\*\*\*\*\*  
\*TST41(32) \*  
\*\*\*\*\*

\*\*\*\*\*  
\*TST40C(30)\*  
\*\*\*\*\*

I

\*\*\*\*\*  
\*SET RETURN TO PC & PS\*  
\* FOR WHEN AN INTER- \*  
\* RUPT OCCURS \*  
\*\*\*\*\*

I

\*\*\*\*\*  
\* SET CPU TO LEVEL 0 \*  
\* AND SET "IE" BIT \*  
\* \*  
\*\*\*\*\*

I

-----  
/ ASK USER TO RE- RESTORE CARDS  
/ SPOND ACCORDINGLY / AND RESET  
-----  
\* \*  
\*\*\*\*\*

I

-----  
/ DID INTERRUPT \ NO \* HANG AWAITING \*  
/ OCCUR ? \ ---> \* INTERRUPT \*  
-----  
\* \*  
\*\*\*\*\*

I

\*\*\*\*\*  
\* RESET STACK \*  
\* POINTER FROM \*  
\* INTERRUPT \*  
\*\*\*\*\*

I

\*\*\*\*\*  
\* SET RETURN PC & PS \*  
\*FOR WHEN AN INTERRUPT\*  
\* OCCURS \*  
\*\*\*\*\*

I

\*\*\*\*\*  
\* SET CPU LEVEL TO 0 \*  
\*AND INIT. COL. COUNT \*  
\* & BUS ADDR. REGS. \*  
\*\*\*\*\*

I

\*\*\*\*\*  
\* READ A \*  
\* CARD \*  
\* \*  
\*\*\*\*\*

I

\*\*\*\*\*  
\*TST40D(31)\*  
\*\*\*\*\*

0011/CL20 CARD READER DIAGNOSTIC  
ERROR FUNCTION TESTING OF MODEL M1200

```

*****
#TST41A(32)*
*****
I
-----
/ IS OFF-LINE \ NO
/ CONDITION PRESENT \ ----> / REPORT
?                               / ERROR
-----
I YES
I <-----
/ IS ERROR BIT15 \ NO
/ SET ?           \ ----> / REPORT
-----
I YES
I <-----
/ IS CARD READER \ NO
/ ERROR BIT14 SET ? \ ----> / REPORT
-----
I YES
I <-----
/ HAS ECO #14 BEEN \ NO
/ INSTALLED ON THIS \ ----> / REPORT
/ CARD READER ?    \ ----> #TST41B *
-----
I YES
/ DID WE DETECT A \ NO
/ STACK CHECK ERROR \ ----> / REPORT
?                               / ERROR
-----
I YES *****
I <----- #TST41B * <-----
*****
-----
/ ARE ANY BITS SET \ YES
/ IN STATUS REGISTER \ ----> / REPORT
/ THAT SHOULDN'T BE ? \ ----> / ERROR
-----
I NO
I <-----
*****
#TST41C(33)*

```

```

*****
#TST41(31) *
*****
I
-----
/ ASK USER TO RES- / BLOCK PHOTOCCELL
/ POND ACCORDINGLY / AND RESET
-----
I
/ HAS OFF-LINE \ NO
/ OCCURRED YET? \ ----> *
-----
I YES *
/ HAS TRANSITION \ NO
/ TO ON-LINE OCCUR- /
/ ED YET ?        \ ----> *
-----
I YES *
/ IS CONTENTS OF \ NO
/ STATUS REGISTER \ ----> / REPORT
/ = 100210 ?     \ ----> / ERROR
-----
I YES
I <-----
*****
* SET UP COL. COUNT & *
* BUS ADDR. REG. THEN *
* READ A CARD         *
*****
I
/ HAS CONTROLLER \ NO
/ READY SET YET ? \ ----> *
-----
I YES *
*****
#TST41A(32)*

```

STACK CHECK

```

*****
#INIT(45) *
*****

```

```

*****
* AWAIT *
* OFF-LINE *
* CONDITION *
*****

```

```

*****
* AWAIT *
* TRANSITION TO *
* ON-LINE *
*****

```

```

*****
REPORT
ERROR
*****

```

```

*****
* WAIT *
* FOR *
* IT *
*****

```

\*\*\*\*\*  
\*TST41D(33)\*  
\*\*\*\*\*

I  
\*\*\*\*\*  
\* READ A \*  
\* CARD \*  
\* \*  
\*\*\*\*\*

I  
-----  
/ DID AN INTERRUPT OCCUR? \ NO \* HANG AWAITING \*  
-----> \* INTERRUPT \*  
-----

I YES  
\*\*\*\*\*  
\* RESET STACK \*  
\* POINTER FROM \*  
\* INTERRUPT \*  
\*\*\*\*\*

I  
-----  
/ IS CONTENTS OF STATUS REGISTER = 300 ? \ NO \* HANG AWAITING \*  
-----> \* REPORT ERROR \*  
-----

I YES  
I<-----  
\*\*\*\*\*  
\*TST42(34) \*  
\*\*\*\*\*

\*\*\*\*\*  
\*TST41C(32)\*  
\*\*\*\*\*

I  
\*\*\*\*\*  
\* SET RETURN PC & PS \*  
\* FOR WHEN AN INTERRUPT \*  
\* OCCURS \*  
\*\*\*\*\*

I  
\*\*\*\*\*  
\* SET CPU TO LEVEL 0 & \*  
\* SET "IE" BIT \*  
\* \*  
\*\*\*\*\*

I  
\*\*\*\*\*  
/ ASK USER TO RESPOND ACCORDINGLY / REMOVE JAMMED CARD  
----- AND RESET  
-----


I  
-----  
/ DID WE GET AN INTERRUPT ? \ NO \* HANG AWAITING \*  
-----> \* INTERRUPT \*  
-----

I YES  
\*\*\*\*\*  
\* RESET STACK \*  
\* POINTER FROM \*  
\* INTERRUPT \*  
\*\*\*\*\*

I  
\*\*\*\*\*  
\* SET RETURN PC & PS \*  
\* FOR WHEN AN INTERRUPT \*  
\* OCCURS \*  
\*\*\*\*\*

I  
\*\*\*\*\*  
\* SET CPU TO LEVEL 0 & \*  
\* INIT. COLUMN COUNT \*  
\* & BUS ADDR. REGS. \*  
\*\*\*\*\*

I  
\*\*\*\*\*  
\*TST41D(33)\*

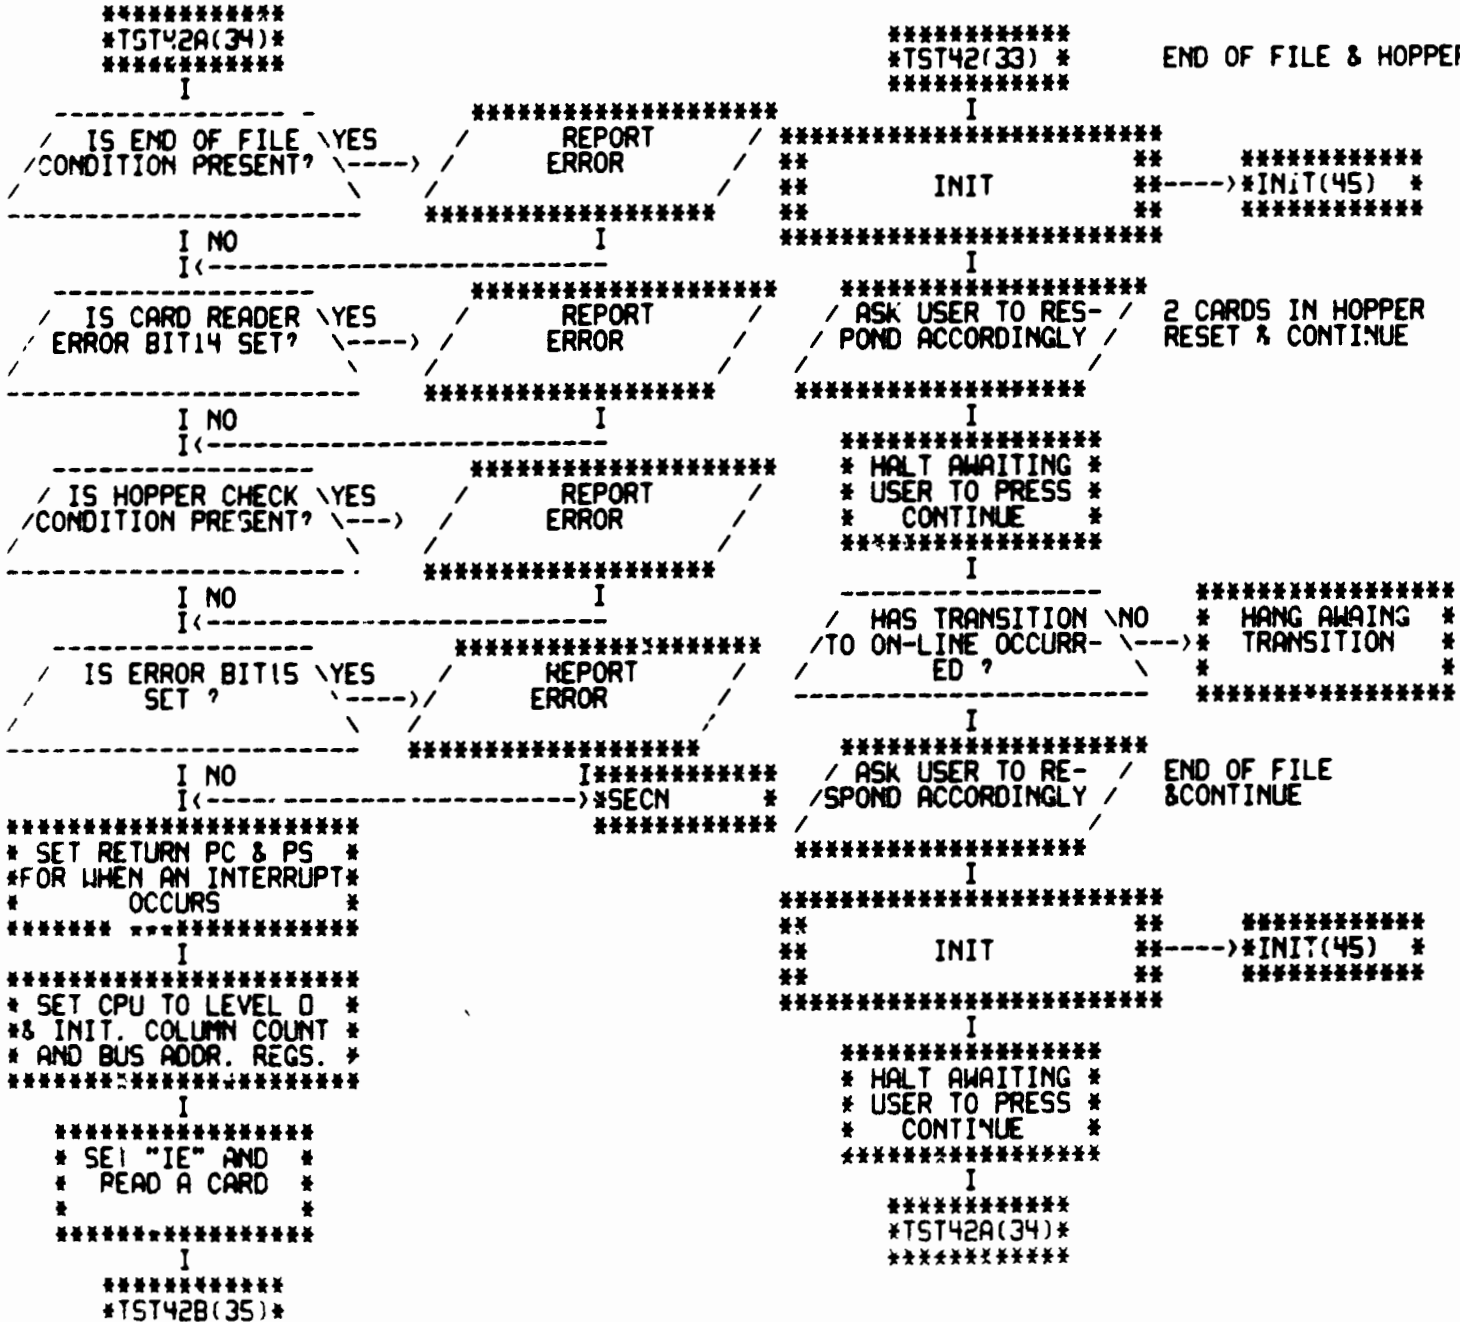



\*\*\*\*\*  
\*TINTIA(35)\*  
\*\*\*\*\*

I  
\*\*\*\*\*  
\* RESET STACK \*  
\* POINTER FROM \*  
\* INTERRUPT \*  
\*\*\*\*\*

I  
-----  
/ IS END OF FILE \ NO  
/ CONDITION PRESENT? \-----> / REPORT  
/ / ERROR /  
-----  
\*\*\*\*\*

I YES

I<-----

I  
-----  
/ IS CARD READER \ NO  
/ ERROR BIT14 SET? \-----> / REPORT  
/ / ERROR /  
-----  
\*\*\*\*\*

I YES

I<-----

I  
-----  
/ IS HOPPER EMPTY \-----> / REPORT  
/ CONDITION PRESENT? \-----> / ERROR /  
-----  
\*\*\*\*\*

I YES

I<-----

I  
-----  
/ IS ERROR BIT15 \ NO  
/ SET? \-----> / REPORT  
/ / ERROR /  
-----  
\*\*\*\*\*

I YES

I<-----

I  
\*\*\*\*\*  
/ ASK USER TO RESP- / RESTORE CARDS  
/ OND ACCORDINGLY / RESET & CONTINUE  
-----  
\*\*\*\*\*

I  
\*\*\*\*\*  
\* HALT AWAITING \*  
\* USER TO PRESS \*  
\* CONTINUE \*  
\*\*\*\*\*

\*\*\*\*\*  
\*TST42C(36)\*  
\*\*\*\*\*

\*\*\*\*\*  
\*TST42B(34)\*  
\*\*\*\*\*

I

-----  
/ DID WE GET AN \ NO \* HANG AWAITING \*  
/ INTEPRUPT? \-----> \* INTERRUPT? \*  
-----  
\*\*\*\*\*

I

\*\*\*\*\*  
\* RESET STACK \*  
\* POINTER FROM \*  
\* INTERRUPT \*  
\*\*\*\*\*

I

I  
-----  
/ IS END OF FILE \ YES  
/ CONDITION PRESENT? \-----> / REPORT  
/ / ERROR /  
-----  
\*\*\*\*\*

I NO

I<-----

I  
-----  
/ IS CARD READER \ YES  
/ ERROR BIT14 SET? \-----> / REPORT  
/ / ERROR /  
-----  
\*\*\*\*\*

I NO

I<-----

I  
-----  
/ IS ERROR BIT15 \ YES  
/ SET? \-----> / REPORT  
/ / ERROR /  
-----  
\*\*\*\*\*

I NO

I<-----


\*\*\*\*\*  
\* SET UP RETURN \*  
\* ADDR. TO TINTIA \*  
\* ON NEXT INTER. \*  
\*\*\*\*\*

I

\*\*\*\*\*  
\*SECN \*  
\*\*\*\*\*

\*\*\*\*\*  
\*TINTIA(35)\*  
\*\*\*\*\*

AN INTERRUPT (2ND) FROM  
"SECN" AREA WILL GO TO  
"TINTIA"

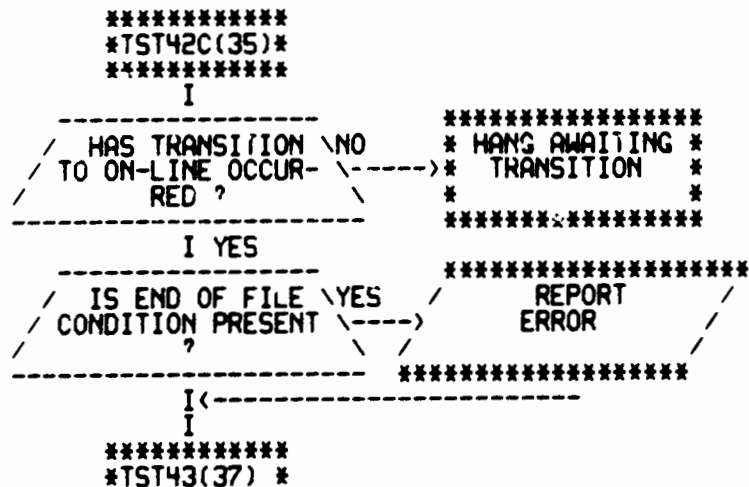

\*\*\*\*\*  
\*TST43A(37)\*  
\*\*\*\*\*

\*\*\*\*\*  
\*TST43(36)\*  
\*\*\*\*\*

READ CHECK

```

I
/ IS CONTROLLER \ NO
/ READY ? \ ----> * WAIT FOR *
/ \ \ * IT *
/ \ \ * *
/ \ \ *****
I YES
/ IS ERROR BIT15 \ NO
/ SET ? \ ----> / REPORT
/ \ \ / ERROR
/ \ \ *****
I YES
I <----- I
/ IS CARD READER \ NO
/ BIT14 SET ? \ ----> / REPORT
/ \ \ / ERROR
/ \ \ *****
I YES
I <----- I
/ IS OFF-LINE \ NO
/ CONDITION PRESENT \ ----> / REPORT
/ \ \ / ERROR
/ \ \ *****
I YES
I <----- I
/ HAS ECO #14 BEEN \ NO
/ INSTALLED ON THIS \ ----> *TST43B *
/ CARD READER ? \ \ *
/ \ \ *****
I YES
/ IS READ CHECK \ NO
/ INDICATOR PRESENT \ ----> / REPORT
/ IN DATA BUFFER ? \ \ / ERROR
/ \ \ *****
I YES ***** I
I <-----*TST43B * I
*****

```

\*\*\*\*\*  
\*TST43C(38)\*  
\*\*\*\*\*

```

I
*****
/ ASK USER TO RES- / RIP CORNER OFF CARD
/ POND ACCORDINGLY / AND RESET
/ \ \ *****
I
/ IS OFF-LINE \ NO
/ CONDITON PRESENT \ ----> * HANG AWAITING *
/ \ \ * OFF-LINE *
/ \ \ * *
/ \ \ *****
I YES
/ HAS TRANSITION \ NO
/ TO ON-LINE OCCUR- \ ----> * WAIT FOR IT *
/ RED ? \ \ *
/ \ \ *****
I YES
/ IS CONTENTS OF \ NO
/ STATUS REGISTER \ ----> / REPORT
/ = 100210 ? \ \ / ERROR
/ \ \ *****
I YES
I <----- I
*****
/ SET UP COLUMN COUNT *
/ AND BUS ADDRESS *
/ REGISTER *
/ *****
I
/ READ A *
/ CARD *
/ *
/ *****
I
*****
*TST43A(37)*

```

\*\*\*\*\*  
\*TST43C(37)\*  
\*\*\*\*\*

I

```
-----
/ ARE ANY EXTRA \ YES / REPORT
/ BITS SET IN "CDS" \----> / ERROR
/ THAT SHOULDN'T BE? \ /
-----
*****
```

I NO

I<-----

\*\*\*\*\*  
\* SET UP RETURN PC & \*  
\* PS FOR WHEN AN INTER-\*  
\* RUPT OCCURS \*  
\*\*\*\*\*

I

\*\*\*\*\*  
\*SET CPU TO LEVEL 0 & \*  
\* ENABLE INTERRUPTS \*  
\* \*  
\*\*\*\*\*

I

```
-----
/ ASK USER TO RESP- / RESTORE CARDS
/ OND ACCORDINGLY / & RESET
-----
*****
```

I

```
-----
/ HAS THE INTER- \ NO / WAIT FOR
/ RUPT OCCURRED? \----> / IT
/ /
-----
*****
```

I YES

\*\*\*\*\*  
\* HALT AWAITING \*  
\* USER TO PRESS \*  
\* CONTINUE \*  
\*\*\*\*\*

I

\*\*\*\*\*  
\* RESET STACK \*  
\* POINTER FROM \*  
\* INTERRUPT \*  
\*\*\*\*\*

I

\*\*\*\*\*  
\*ER12CD \*  
\*\*\*\*\*

J05

CD11/CD20 CARD READER DIAGNOSTIC  
ERROR FUNCTION TESTING OF MODEL M1200

DEC FLO VER 00.12 01-JUL-77 08:45 PAGE 39

SEQ 0061

\*-----\*  
ERROR FUNCTION TESTING OF CARD READER MODELS M1000 OR  
M200 IS IDENTICAL TO THAT OF AN M1200 AS OUTLINED

\*\*\*\*\*  
STARTING AT \*ER1200(24)\* WITH ONLY ONE EXCEPTION:  
\*\*\*\*\*

\*\*\*\*\*  
\*TST42(34) \* IS NOT EXECUTED [START ADDRESS - 210]  
\*\*\*\*\*

```

*****
*SAME1(40) *
*****
I
-----
/ WAS IMAGE MODE \ YES
/ BEEN SELECTED \
/ ALSO ? \
-----
I NO
*****
*SET PACKING MODE IN- *
* DICATOR IN STATUS *
* REGISTER *
*****
I
I<-----*CKREAD *
*****
* INITIALIZE *
* COLUMN COUNT *
* TO ZERO *
*****
I
*****
* SET UP BUFFER ADDR. *
* TO "BUFBEQ" & COLUMN *
* COUNT TO 120(8) COLS.*
*****
I
*****
* START READING *
* A CARD *
* *
*****
I
*****
* UPDATE THE *
* CARD COUNT *
* *
*****
I
-----
/ IS CONTROLLER \ NO
/ READY \
-----
I YES
*****
*SAME2(41) *
*****


```


```

*****
*CKSAME *
*****
I
*****
/ ASK USER TO LOAD /
/ PATTERN INTO SWR /
/ <11:0> /
*****
I
*****
* HALT AWAITING *
* USER TO PRESS *
* "CONTINUE" *
*****
I
*****
*STORE PATTERN SELECT-*
*ED AND MASK OFF BITS *
* 12 THRU 15 *
*****
I
*****
/ ASK USER TO SET /
/ DESIRED SWITCH /
/ REGISTER OPTIONS /
*****
I
*****
* HALT AWAITING *
* USER TO PRESS *
* CONTINUE *
*****
I
*****
*CKSTRT *----->I
*****
** **
** INIT **----->*INIT(45) *
** **
*****
I
*****
* CLEAR CARD COUNT *
* (TOTCRD) & ERROR *
* COUNT (TOTERR) *
*****
I<-----*CKLOOP *
*****
-----
/ HAS PACK MODE \ NO
/ BEEN SELECTED \
-----
I YES
*****
*SAME1(40) *

```

START ADDRESS = 240

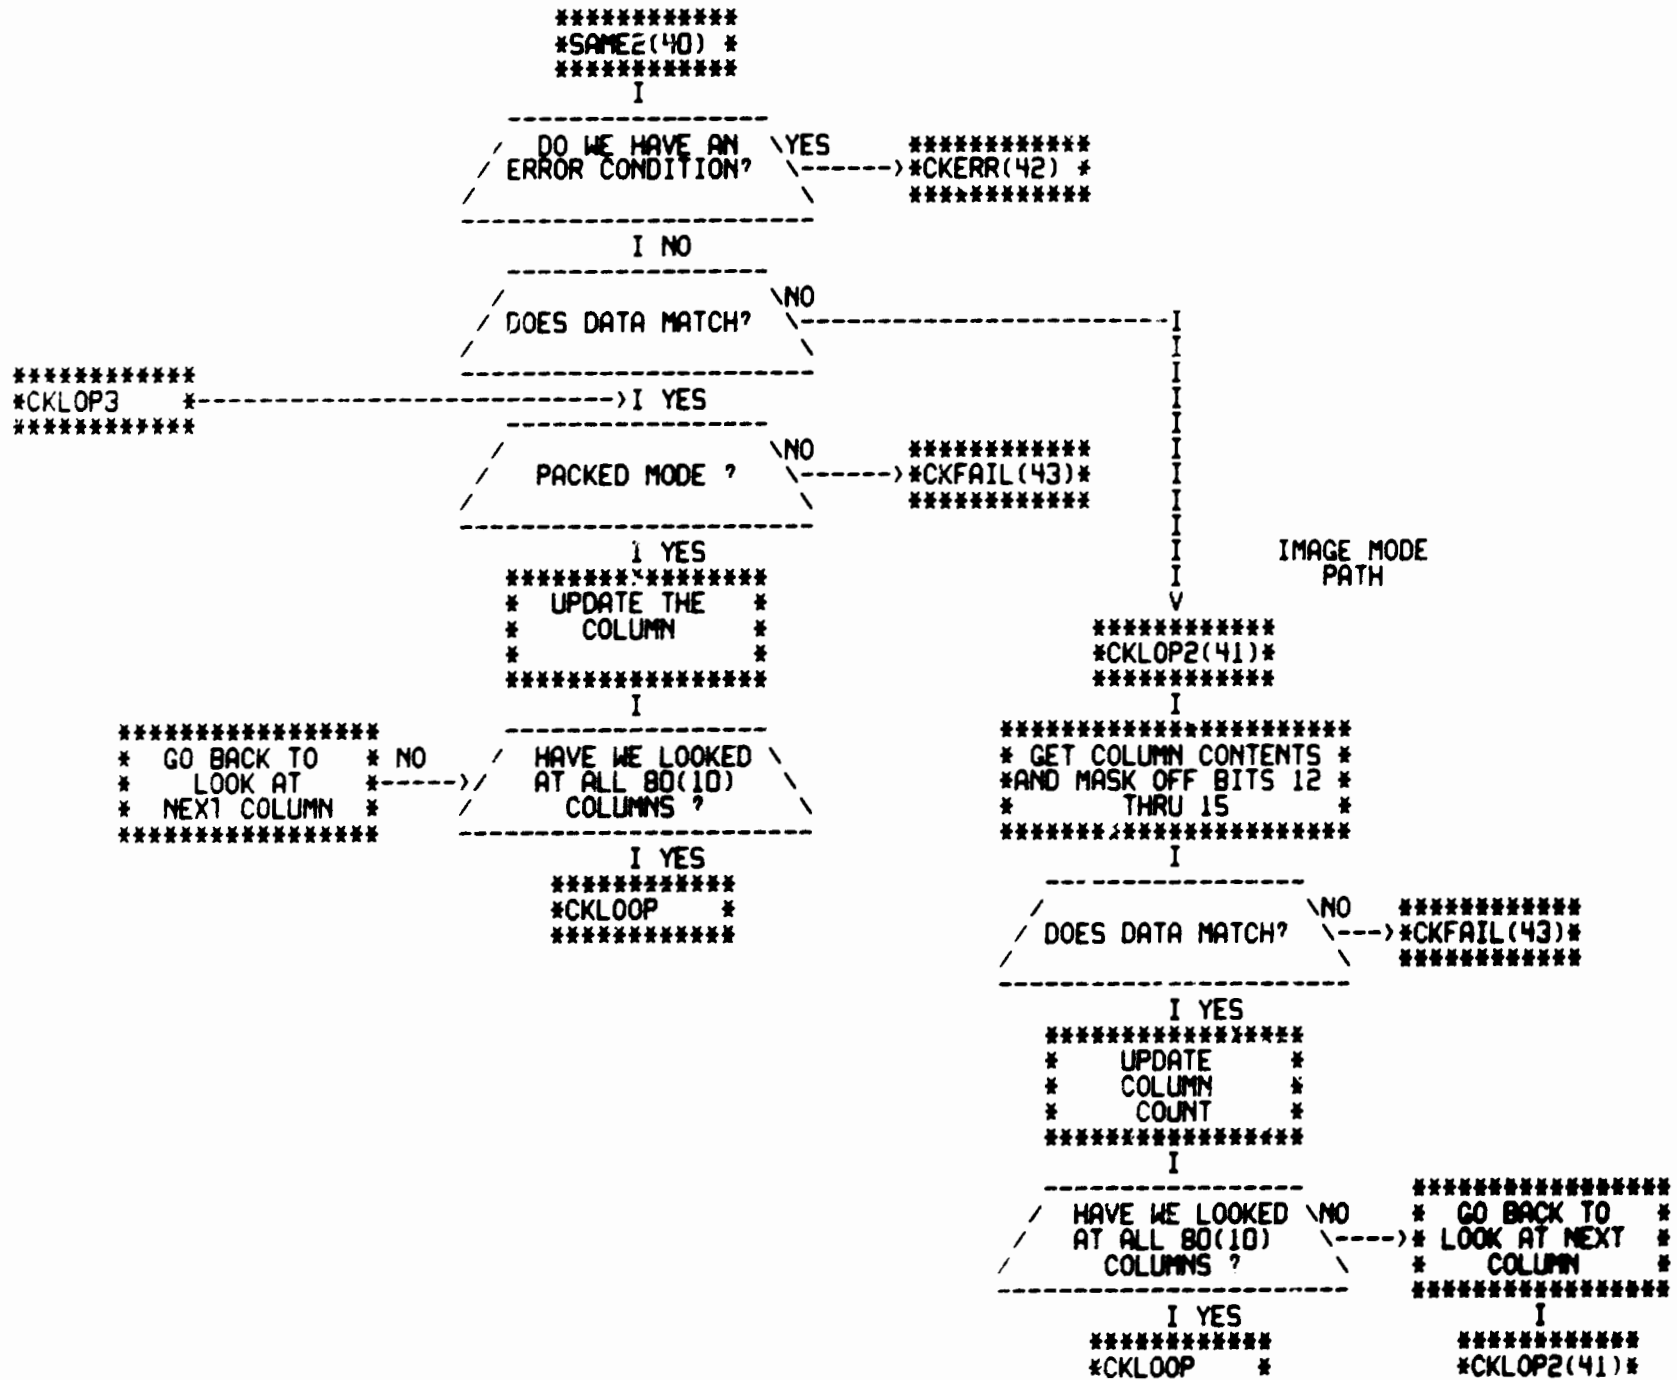

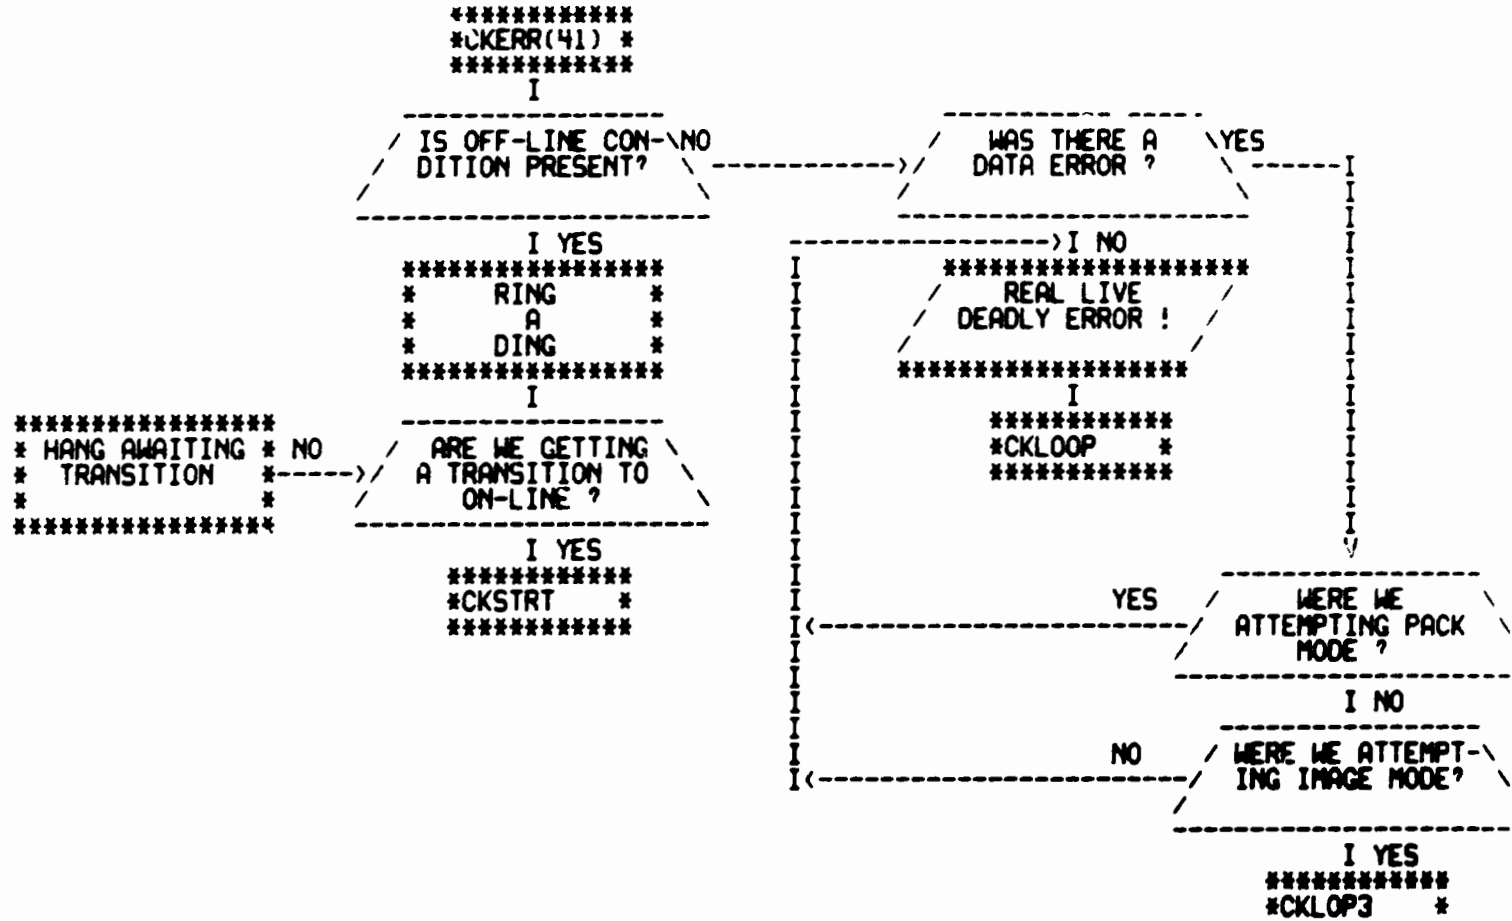



CD11/CD20 CARD READER DIAGNOSTIC  
PROGRAM TO LOOP ON SINGLE DATA PATTERN

```

*****
*FAIL1(43) *
*****
I
-----
/ HALT ON ERROR ? \ YES *
\ -> *          HALT *
\ *          *
\ *          *
-----
I NO
*****
* UPDATE COLUMN *
* COUNT FOR NEXT *
* COLUMN LOOKUP *
*****
I
-----
/ HAVE WE LOOKED \ YES *****
AT ALL 80(10) \ -> *CKLOOP *
COLS. ? \ *
-----
I NO
-----
/ ARE WE DOING \ NO *****
PACKED MODE ? \ -> *CKLOP2(41)*
\ *
-----
I YES
*****
*CKLOP3 *
*****

```

```

*****
*CKFAIL(41)*
*****
I
*****
*UPDATE TOTAL *
*OF ERRORS FOUND*
* (TOTERR) *
*****
I
-----
/ INHIBIT ERROR \ YES *****
PRINTOUT ? \ -> *FAIL1(43) *
\ *
-----
I NO
*****
/ TYPE COLUMN \
HEADINGS \
-----
I
*****
*STEP UP COLUMN *
* COUNT FOR *
* ERROR REPORT *
*****
I
*****
/ TYPE COLUMN IN \
WHICH ERROR WAS \
DETECTED \
-----
I
*****
* DROP COLUMN *
* COUNT BACK TO *
* ORIGINAL VALUE *
*****
I
-----
/ ARE WE DOING \ YES *****
PACKED MODE ? \ -> * TYPE INCORRECT BYTE *
\ * VALUE, CARD NO. & *
\ * TOTAL NO. OF ERRORS *
-----
I NO I
***** I
* TYPE INCORRECT WORD * I
* VALUE, CARD NO. & * I
* TOTAL NO. OF ERRORS * I
***** I
I<-----
*****
*FAIL1(43) *

```

```
*****  
*TESTX * START ADDRESS = 220  
*****  
I  
*****  
/ ASK USER TO LOAD /  
/ "SCOPE" ADDR. OF /  
/ DESIRED TEST /  
*****  
I  
*****  
* HANG AWAITING *  
* USER TO PRESS *  
* CONTINUE *  
* *****  
I  
*****  
* STORE ADDRESS & *  
* CHANGE IT TO ADDR. OF *  
* 1ST INSR. AFTER SCOPE *  
*****  
I  
*****  
/ ASK USER TO SET /  
/ DESIRED SWITCH /  
/ REGISTER OPTIONS /  
*****  
I  
*****  
* HANG AWAITING *  
* USER TO PRESS *  
* CONTINUE *  
* *****  
I  
*****  
* STORE ADDR. LOADED BY *  
* USER IN "SLPADR" TO *  
* BE PICKED UP BY SCOPE *  
*****  
I  
*****  
* JUMP TO TEST *  
* SELECTED ! *  
*****
```

\*\*\*\*\*  
\*CKOFFL(02)\*  
\*\*\*\*\*  
I

\*\*\*\*\*  
\*INIT(08) \*  
\*\*\*\*\*  
I

-----  
/ IS OFF-LINE CON- \ NO  
/ DITION PRESENT ? \

\*\*\*\*\*  
\*RETURN TO WHERE ROU- \* \*\*  
\* TIME "CKOFFL" WAS \* \*\* CKOFFL \*\*\*\*\*  
\* LAST CALLED \* \*\* \*CKOFFL(45)\*  
\*\*\*\*\*

I YES  
\*\*\*\*\*  
/ TELL USER HE IS  
/ OFF-LINE ! PRESS  
/ RESET & CONTINUE /  
\*\*\*\*\*

-----  
/ IS CONTROLLER \ NO  
/ READY ? \

I  
\*\*\*\*\*  
\* HANG AWAITING \*  
\* USER TO PRESS \*  
\* CONTINUE \*  
\*\*\*\*\*

I YES  
\*\*\*\*\*  
\* ISSUE A \*  
\* POWER CLEAR \*  
\* \*  
\*\*\*\*\*

I  
\*\*\*\*\*  
\*CKOFFL(45)\*  
\*\*\*\*\*

-----  
/ IS STATUS REGIS- \ NO  
/ TER NOW ALL \ / REPORT  
/ CLEARED OUT ? \ / ERROR  
-----

I YES  
I  
-----  
\*\*\*\*\*  
\*RETURN TO WHERE ROU- \*  
\* TIME "INIT" WAS LAST \*  
\* CALLED \*  
\*\*\*\*\*



CD11/CD20 CARD READER DIAGNOSTIC  
FLOW CHART CROSS REFERENCE LIST

TST11	09	10	11
TST2	02	03	
TST20	11		
TST20A	11	11	
TST21	11	12	
TST22	12	13	
TST23	13	14	
TST24	14	14	
TST25	14	14	
TST26	14		
TST3	03	03	04
TST31	15		
TST32	15	15	16
TST33	24		
TST33A	24	24	24
TST34	24	25	
TST34A	25	25	
TST35	25	26	
TST35A	26	26	26
TST35B	26	27	
TST35C	27	27	
TST36	27	28	28
TST36A	28	28	
TST36B	28	28	
TST37	28	29	
TST37A	29	29	
TST37B	29	29	
TST4	04	05	
TST40	29	30	
TST40A	30	30	
TST40B	30	30	
TST40C	30	31	
TST40D	31	31	
TST41	31	32	
TST41A	32	32	
TST41B	32	32	
TST41C	32	33	
TST41D	33	33	
TST42	33	34	39
TST42A	34	34	
TST42B	34	35	
TST42C	35	36	
TST43	36	37	
TST43A	37	37	
TST43B	37	37	
TST43C	37	38	
TST5	05	06	
TST5A	06	06	
TST5B	06	06	
TST6	06	06	06
TST6A	07	07	07

CD11/CD20 CARD READER DIAGNOSTIC  
FLOW CHART CROSS REFERENCE LIST

F06

DECALO VER 00.12 01-JUL-77 08:45 PAGE 48

SEQ 0070

07

42	OPERATOR PROCEDURES
137	DEFINITIONS AND VECTOR ASSIGNMENTS
169	BASIC DEFINITIONS
284	TRAP CATCHER
294	STARTING ADDRESS(ES)
299	ACT11 HOOKS
332	COMMON TAGS
412	ERROR POINTER TABLE
865	LOGIC FUNCTION TESTS
942	T1 TEST FOR INIT. OF ALL REGISTERS
981	T2 TEST READ/WRITE OF STATUS REGISTER
1007	T3 TEST READ/WRITE OF COLUMN COUNT REGISTER
1031	T4 TEST READ/WRITE OF BUS ADDRESS REGISTER
1055	T5 TEST CONTROLLER READY TO CLEAR BIT0
1106	T6 TEST BIT2 TO BE CLEAR AFTER CARD READ
1156	T7 TEST INTERRUPT FROM CONTROLLER READY
1227	T10 TEST NO INTERRUPT ON CONTROLLER READY & CPU AT LEVEL 7
1277	T11 TEST FOR AN INTERRUPT ON LEVEL 7
1376	T12 TEST FOR AN INTERRUPT ON LEVEL 6
1475	T13 TEST FOR AN INTERRUPT ON LEVEL 5
1574	T14 TEST FOR AN INTERRUPT ON LEVEL 4
1668	T15 TEST FOR AN INTERRUPT ON LEVEL 3
1767	T16 TEST FOR AN INTERRUPT ON LEVEL 2
1866	T17 TEST FOR AN INTERRUPT ON LEVEL 1
1962	T20 TEST NO INTERRUPT WITH IE SET & REST CLEARED
2017	T21 SIMULTANEOUS INTERRUPTS AT MORE THAN 1 LEVEL
2087	T22 NON-EXISTANT MEMORY DETECTION
2176	T23 EXECUTE DATI,DATOB(LOW BYTE) LOAD ON COLUMN COUNT
2195	T24 EXECUTE DATI,DATOB(HIGH BYTE) LOAD ON COLUMN COUNT
2213	T25 EXECUTE DATI,DATIP ON COLUMN COUNT REGISTER
2231	T26 EXECUTE DATI,DATOB(LOW BYTE) LOAD ON BUS ADDRESS
2250	T27 EXECUTE DATI,DATOB(HIGH BYTE) LOAD ON BUS ADDRESS
2268	T30 EXECUTE DATI,DATIP ON BUS ADDRESS REGISTER
2286	T31 WORD COUNT OVERFLOW TO 2ND CARD
2384	T32 BUS ADDRESS ODD & TRANSFER IN NON-PACK MODE
2429	DATA RELIABILITY TEST
2887	END OF PASS ROUTINE
3005	ERROR +1 FUNCTION TESTS
3099	T33 TEST DATA LATE
3136	T34 TEST ERROR AND OFF LINE BITS
3377	T36 TEST INPUT HOPPER EMPTY
3506	T37 TEST OUTPUT STACKER FULL
3634	T40 TEST PICK CHECK ERROR
3791	T41 TEST STACK CHECK ERROR
3959	T42 TEST 'END OF FILE' AND HOPPER CHECK
4101	T43 TEST READ CHECK ERROR
4246	LOOP ON TEST ROUTINE
4348	IDENTICALLY PUNCHED CARDS TEST
4542	COMMON ROUTINES
4570	ERROR MESSAGE TIMEOUT ROUTINE
4619	ERROR HANDLER ROUTINE
4664	SCOPE HANDLER ROUTINE
4713	TYPE ROUTINE
4787	BINARY TO OCTAL (ASCII) AND TYPE

H06

MAINDEC - 11 - 0ZCDB-B MACY11 27(654) 1-JUL-77 08:39  
DZCDB.P11

SEQ 0072

TABLE OF CONTENTS  
CONVERT BINARY TO DECIMAL AND TYPE ROUTINE  
TRAP DECODER  
TRAP TABLE  
POWER DOWN AND UP ROUTINES  
DATA TABLES

4866  
4935  
4951  
4967  
5017



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41

```
.MLIST MC,MD,CND
.LIST ME
.ENABL ABS,AMA
.MCALL .HEADER,STARS,.SCMTAG,.SCATCH,.SERROR,.SERRTYP,SETPRI
.MCALL .EQUAT,.SETUP,.STYPOCT,.STYPE,.STRAP,.SPOWER,GETPRI
.MCALL NEWTST,.$SCOPE,.$EOP,.$ACT11,.$STYPDEC,COMMENT,ENDCOMMENT
```

176000

\$\$WR=176000

```
.TITLE MAINDEC - 11 - DZCDB-B
;*COPYRIGHT (C) 1977
;*DIGITAL EQUIPMENT CORP.
;*MAYNARD, MASS. 01754
;*
;*PROGRAM BY E. RYAN
;*
;*THIS PROGRAM WAS ASSEMBLED USING THE PDP-11 MAINDEC SYSMAC
;*PACKAGE (MAINDEC-11-DZQAC-B1),AUG 29,1975.
;*
$TN=1
```

000001

```
;COPYRIGHT (C) 1976, 1977
;DIGITAL EQUIPMENT CORPORATION, MAYNARD, MASS.
```

```
;THIS SOFTWARE IS FURNISHED UNDER A LICENSE FOR USE ONLY
;ON A SINGLE COMPUTER SYSTEM AND MAY BE COPIED ONLY WITH
;THE INCLUSION OF THE ABOVE COPYRIGHT NOTICE. THIS
;SOFTWARE, OR ANY OTHER COPIES THEREOF, MAY NOT BE PROVIDED
;OR OTHERWISE MADE AVAILABLSLE TO ANY OTHER PERSON EXCEPT
;FOR USE ON SUCH SYSTEM AND TO ONE WHO AGREES TO THESE
;LICENSE TERMS. TITLE TO AND OWNERSHIP OF THE SOFTWARE SHALL
;AT ALL TIMES REMA:IN IN DEC.
```

```
;THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE
;WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT
;BY DIGITAL EQUIPMENT CORPORATION.
```

```
;DEC ASSUMES NO RESPONSIBILITY FOR THE USE OR RELIABILITY
;OF ITS SOFTWARE ON EQUIPMENT WHICH IS NOT SUPPLIED BY
;DEC.
```

42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95

.SBTTL OPERATOR PROCEDURES

: STARTING ADDRESSES ARE:

200=INSTRUCTION AND DATA TEST FOR THE CD11  
210=ERROR FUNCTION TEST OF CD:1 (M-1000/M-200)  
220=SINGLE TEST LOOP  
240=READ SINGLE DATA PATTERN TEST  
250=ERROR FUNCTION TEST FOR CD11 (M-1200)

: SWITCH REGISTER SETTINGS FOR THE INSTRUCTION AND DATA TEST ARE:

SW02=1 RUN IN DATA IMAGE MODE ONLY  
SW03=1 RUN IN DATA PACKING MODE ONLY (IGNORED IF SW02=1)  
SW04=1 FOR THE BINARY TEST DECK  
SW05=1 TO HALT AT THE END OF A STANDARD 80 CARD TEST DECK. (HITTING CONTINUE WILL START TESTING OF THE NEXT DECK IN ACCORDANCE WITH CURRENT SWR SETTINGS).  
=0 TO CONTINUE FROM ONE DECK TO THE NEXT. AFTER THE LAST DECK IN THE HOPPER IS RUN, THE PROGRAM WAITS FOR THE CARD READER TO COME BACK ON-LINE, AND RUNS THRU A SERIES OF CHECKS OF OFF-LINE AND COMING ON-LINE OPERATIONS OF THE READER. WHEN THE READER IS BACK ON-LINE AND THE CHECKS ARE COMPLETE, THE DATA TEST IS RESUMED.  
SW06=1 TO RUN THE COMBINED INSTRUCTION AND DATA TEST WHEN CONTINUING FROM ONE DECK TO THE NEXT  
=0 TO RUN ONLY THE DATA TEST ON EVERY DECK AFTER THE FIRST  
SW07=1 TO RUN ONLY THE INSTRUCTION TEST CONTINUALLY. SETTING SW06 AND SW07 AT THE END OF A DECK WILL CAUSE THE INSTRUCTION TEST TO BE RUN CONTINUOUSLY FROM THEN ON (NOTE THAT IF SW7 IS SET, THE PROGRAM MAY HANG WHEN THE CARD READER RUNS OUT OF CARDS)  
SW11=1 TO INHIBIT SUBPROGRAM ITERATION (NOTE THAT IF PROGRAM FLOW IS ALLOWED TO ENTER THE DATA SUBTEST WHEN SW11 IS SET, DATA ERRORS WILL OCCUR SINCE THE CARD COUNT WILL BE INCORRECT.)  
SW12=1 TO INHIBIT TRACE TRAPPING  
SW13=1 TO INHIBIT PRINTOUT  
SW14=1 FOR SCOPE LOOP & LOOP ON TEST  
SW15=1 TO HALT ON ERROR

: OPERATING PROCEDURE FOR THE INSTRUCTION AND DATA TEST:

1. LOAD TEST DECK IN CARD READER AND PRESS "START" ON THE CARD READER. IF THE DECK BEING USED IS NOT A STANDARD TEST DECK, ONLY THE INSTRUCTION PORTION OF THE TEST CAN BE RUN. (SW7 MUST BE SET TO ONE TO INDICATE THIS).
2. LOAD SA 200, THEN SET THE SWITCH REGISTER SWITCHES TO THE DESIRED COMBINATION
3. PRESS "START" ON THE CONSOLE
4. NOTE THAT RUNNING THE COMPLETE INSTRUCTION TEST REQUIRES THAT THE INPUT HOPPER MUST RUN OUT OF CARDS

AT THE END OF A TEST DECK AT LEAST ONCE. WHEN THIS OCCURS, THE PROCESSOR SHOULD CONTINUE TO RUN. LOADING A DECK INTO THE INPUT HOPPER AND PRESSING "RESET" ON THE CARD READER SHOULD CAUSE THE BELL TO RING AND THE CARD READER TO RESUME READING CARDS. IF THIS DOES NOT OCCUR, IT IS A FAULT AND SHOULD BE FIXED.

SPECIAL SWITCH REGISTER SETTINGS FOR THE ERROR FUNCTION TEST:  
 SW14=1 TO LOOP THRU THE CURRENT SUBTEST  
 SW15=1 TO HALT ON ERROR

OPERATING PROCEDURE FOR THE ERROR FUNCTION TEST:  
 1. LOAD A FEW SPARE CARDS INTO THE INPUT HOPPER.  
 2. PRESS "RESET" ON THE CARD READER.  
 3. LOAD THE SA, THEN SET THE DESIRED SWITCH OPTIONS.  
 4. PRESS "START" ON THE CONSOLE.  
 5. FOLLOW THE INSTRUCTIONS AS THEY ARE PRINTED OUT.

SINGLE TEST LOOP (SA 220) HALTS TWICE!  
 1ST HALT - LOAD STARTING ADDRESS OF DESIRED TEST (TEST1 TO TEST 22)  
 2ND HALT - SET SWR OPTIONS (BIT 11 MUST = 0)  
 THIS TEST USES TRACE TRAPPING WHERE APPLICABLE IF SW12 IS NOT SET

DESCRIPTION OF SINGLE DATA PATTERN TEST  
 THIS TEST IS DESIGNED TO AID IN THE LOCATION OF DIFFICULT DATA ERROR PROBLEMS AND PERHAPS HELP IN SOME CARD READER ADJUSTMENTS. IT CONTINUOUSLY READS CARDS WHICH HAVE ALL COLUMNS PUNCHED OR MARKED IDENTICALLY, CHECKING THE DATA AGAINST A PATTERN SET UP ON THE SWITCHES INITIALLY. ANY ERRORS ARE PRINTED OUT, ALONG WITH A COUNT OF THE TOTAL NUMBER OF CARDS READ AND THE TOTAL NUMBER OF DATA ERRORS WHICH HAVE OCCURRED SINCE THE TEST WAS STARTED.

OPERATING PROCEDURE FOR SINGLE DATA PATTERN TEST:  
 1. LOAD TEST DECK OF IDENTICAL CARDS IN THE INPUT HOPPER, AND PUT THE CARD READER ON-LINE (I.E. - PRESS "RESET" ON CARD READER).  
 2. LOAD SA 240, THEN PRESS "START" ON THE CONSOLE.  
 3. AT THE INITIAL HALT SET THE CORRECT CARD-IMAGE DATA PATTERN IN SW11-SW00, THEN PRESS CONTINUE  
 4. WHEN THE READER RUNS OUT OF CARDS IT WILL RING THE BELL. RELOADING THE DECK AND PRESSING "RESET" ON THE CARD READER WILL CONTINUE THE TEST.

96  
 97  
 98  
 99  
 100  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108  
 109  
 110  
 111  
 112  
 113  
 114  
 115  
 116  
 117  
 118  
 119  
 120  
 121  
 122  
 123  
 124  
 125  
 126  
 127  
 128  
 129  
 130  
 131  
 132  
 133  
 134  
 135  
 136  
 137

138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167  
168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191

```

*****
:STATUS AND CONTROL REGISTER (COST) BIT DESIGNATIONS
:BIT 0 READ
:BIT 1 DATA PACKING
:BIT 2 HOPPER EMPTY
:BIT 3 READER TRANSITION TO ON LINE
:BIT 4 ADDRESS BIT 16
:BIT 5 ADDRESS BIT 17
:BIT 6 INTERRUPT ENABLE
:BIT 7 CONTROLLER READY
:BIT 8 POWER CLEAR
:BIT 9 NON-EXISTENT MEMORY
:BIT 10 DATA LATE
:BIT 11 DATA ERROR
:BIT 12 OFF-LINE
:BIT 13 END OF FILE (M1200 ONLY)
:BIT 14 CARD READER ERROR
:BIT 15 ERROR
*****

```

.SBTTL BASIC DEFINITIONS

```

: *INITIAL ADDRESS OF THE STACK POINTER *** 1100 ***
001100 STACK= 1100
: .EQUIV EMT,ERROR ;: BASIC DEFINITION OF ERROR CALL
: .EQUIV IOT,SCOPE ;: BASIC DEFINITION OF SCOPE CALL
177776 PS= 177776 ;: PROCESSOR STATUS WORD
: .EQUIV PS,PSW
177774 STKLM= 177774 ;: STACK LIMIT REGISTER
177772 PIRQ= 177772 ;: PROGRAM INTERRUPT REQUEST REGISTER
177570 DSWR= 177570 ;: HARDWARE SWITCH REGISTER
177570 DDISP= 177570 ;: HARDWARE DISPLAY REGISTER

```

```

: *GENERAL PURPOSE REGISTER DEFINITIONS
R0= %0 ;: GENERAL REGISTER
R1= %1 ;: GENERAL REGISTER
R2= %2 ;: GENERAL REGISTER
R3= %3 ;: GENERAL REGISTER
R4= %4 ;: GENERAL REGISTER
R5= %5 ;: GENERAL REGISTER
R6= %6 ;: GENERAL REGISTER
R7= %7 ;: GENERAL REGISTER
: .EQUIV R6,SP ;: STACK POINTER

```

```

192 .EQUIV R7,PC ;;PROGRAM COUNTER
193
194
195 000000
196 000040
197 000100
198 000140
199 000200
200 000240
201 000300
202 000340
203
204
205 100000
206 040000
207 020000
208 010000
209 004000
210 002000
211 001000
212 000400
213 000200
214 000100
215 000040
216 000020
217 000010
218 000004
219 000002
220 000001
221 .EQUIV SW09,SW9
222 .EQUIV SW08,SW8
223 .EQUIV SW07,SW7
224 .EQUIV SW06,SW6
225 .EQUIV SW05,SW5
226 .EQUIV SW04,SW4
227 .EQUIV SW03,SW3
228 .EQUIV SW02,SW2
229 .EQUIV SW01,SW1
230 .EQUIV SW00,SW0
231
232
233 100000
234 040000
235 020000
236 010000
237 004000
238 002000
239 001000
240 000400
241 000200
242 000100
243 000040
244 000020
245 000010
    
```

```

    .EQUIV R7,PC ;;PROGRAM COUNTER
    ;*PRIORITY LEVEL DEFINITIONS
    PR0= 0 ;;PRIORITY LEVEL 0
    PR1= 40 ;;PRIORITY LEVEL 1
    PR2= 100 ;;PRIORITY LEVEL 2
    PR3= 140 ;;PRIORITY LEVEL 3
    PR4= 200 ;;PRIORITY LEVEL 4
    PR5= 240 ;;PRIORITY LEVEL 5
    PR6= 300 ;;PRIORITY LEVEL 6
    PR7= 340 ;;PRIORITY LEVEL 7

    ;**SWITCH REGISTER" SWITCH DEFINITIONS
    SW15= 100000
    SW14= 40000
    SW13= 20000
    SW12= 10000
    SW11= 4000
    SW10= 2000
    SW09= 1000
    SW08= 400
    SW07= 200
    SW06= 100
    SW05= 40
    SW04= 20
    SW03= 10
    SW02= 4
    SW01= 2
    SW00= 1

    ;*DATA BIT DEFINITIONS (BIT00 TO BIT15)
    BIT15= 100000
    BIT14= 40000
    BIT13= 20000
    BIT12= 10000
    BIT11= 4000
    BIT10= 2000
    BIT09= 1000
    BIT08= 400
    BIT07= 200
    BIT06= 100
    BIT05= 40
    BIT04= 20
    BIT03= 10
    
```

```

246          000004          BIT02= 4
247          000002          BIT01= 2
248          000001          BIT00= 1
249          .EQUIV BIT09,BIT9
250          .EQUIV BIT08,BIT8
251          .EQUIV BIT07,BIT7
252          .EQUIV BIT06,BIT6
253          .EQUIV BIT05,BIT5
254          .EQUIV BIT04,BIT4
255          .EQUIV BIT03,BIT3
256          .EQUIV BIT02,BIT2
257          .EQUIV BIT01,BIT1
258          .EQUIV BIT00,BIT0
259
260          ;*BASIC "CPU" TRAP VECTOR ADDRESSES
261          000004          ERRVEC= 4          ;; TIME OUT AND OTHER ERRORS
262          000010          RESVEC= 10         ;; RESERVED AND ILLEGAL INSTRUCTIONS
263          000014          TBITVEC=14        ;; "T" BIT
264          000014          TRTVEC= 14        ;; TRACE TRAP
265          000014          BPTVEC= 14        ;; BREAKPOINT TRAP (BPT)
266          000020          IOTVEC= 20        ;; INPUT/OUTPUT TRAP (IOT) **SCOPE**
267          000024          PWRVEC= 24        ;; POWER FAIL
268          000030          EMTVEC= 30        ;; EMULATOR TRAP (EMT) **ERROR**
269          000034          TRAPVEC=34        ;; "TRAP" TRAP
270          000060          TKVEC= 60         ;; TTY KEYBOARD VECTOR
271          000064          TPVEC= 64         ;; TTY PRINTER VECTOR
272          000240          PIRQVEC=240       ;; PROGRAM INTERRUPT REQUEST VECTOR
273
274          ;SPECIAL EQUATES
275          000000          DUMMY= 0
276          000002          ADINT= %2        ;; CONTAINS ADDRESS OF INTERRUPT VECTOR
277          000003          CDS= %3         ;; CONTAINS ADDRESS OF CARD READER STATUS REGISTER
278          000004          CDC= %4         ;; CONTAINS ADDRESS OF CARD READER COLUMN COUNT
279          000005          CDA= %5         ;; CONTAINS ADDRESS OF CARD READER BUS ADDRESS REG.
280          000005          TTY= %5
281          000360          TRACE= 360
282
283          .SBTTL TRAP CATCHER
284
285          .=0
286          000000
287          ;*ALL UNUSED LOCATIONS FROM 4 - 776 CONTAIN A ".+2,HALT"
288          ;*SEQUENCE TO CATCH ILLEGAL TRAPS AND INTERRUPTS
289          ;*LOCATION 0 CONTAINS 0 TO CATCH IMPROPERLY LOADED VECTORS
290          000174          .=174
291          000174          000000          DISPREG: .WORD 0          ;; SOFTWARE DISPLAY REGISTER
292          000176          000000          SWREG: .WORD 0          ;; SOFTWARE SWITCH REGISTER
293
294          .SBTTL STARTING ADDRESS(ES)
295          000200          000137          002170          JMP @*BEGIN          ;; JUMP TO STARTING ADDRESS OF PROGRAM
296
297          ;*****
298
299          .SBTTL ACT11 HOOKS

```

```

300 ;HOOKS REQUIRED BY ACT11
301 000204 $SVP=. ;SAVE PC
302 000046 .=46
303 000046 $ENDAD ;;1)SET LOC.46 TO ADDRESS OF $ENDAD IN .SEOP
304 000052 .=52
305 000052 .WORD 20000 ;;2)SET LOC.52 TO 20000
306 000204 .=$$VPC ;; RESTORE PC
307
308 000014 .=14
309 000014 .WORD TRTRAP
310 000016 .WORD 340
311
312 ;ADDITIONAL STARTING ADDRESSES
313
314 000210 .=210
315 000210 000137 015642 JMP ERCD11 ;FOR CD11 (M1000/M200) ERROR FUNCTION TESTS
316
317 000220 .=220
318 000220 000137 024100 JMP TESTX ;FOR LOOP WHICH WILL CONTINUALLY RUN
319 ;ANY SINGLE SUBTEST
320
321 000240 .=240
322 000240 000137 024624 JMP CKSAME ;TO READ A SINGLE DATA PATTERN
323 ;CONTINUOUSLY
324
325 000250 .=250
326 000250 000137 015342 JMP ER1200 ;FOR CD11 (M1200) ERROR FUNCTION TEST
327
328
329

```

```

330 ;*****
331
332 .SBTTL COMMON TAGS
333
334 ;*THIS TABLE CONTAINS VARIOUS COMMON STORAGE LOCATIONS
335 ;*USED IN THE PROGRAM.
336
337 001100 .SMTAG: .=1100
338 001100 $PASS: .WORD 0 ;: START OF COMMON TAGS
339 001100 $STNM: .BYTE 0 ;: CONTAINS PASS COUNT
340 001102 000 $SERFLG: .BYTE 0 ;: CONTAINS THE TEST NUMBER
341 001103 000 $SICNT: .WORD 0 ;: CONTAINS ERROR FLAG
342 001104 000000 $SLPADR: .WORD 0 ;: CONTAINS SUBTEST ITERATION COUNT
343 001106 000000 $SLPERR: .WORD 0 ;: CONTAINS SCOPE LOOP ADDRESS
344 001110 000000 $SERTTL: .WORD 0 ;: CONTAINS SCOPE RETURN FOR ERRORS
345 001112 000000 $SITEMB: .BYTE 0 ;: CONTAINS TOTAL ERRORS DETECTED
346 001114 000 $SERMAX: .BYTE 1 ;: CONTAINS ITEM CONTROL BYTE
347 001115 001 $SERRPC: .WORD 0 ;: CONTAINS MAX. ERRORS PER TEST
348 001116 000000 $SGDADR: .WORD 0 ;: CONTAINS PC OF LAST ERROR INSTRUCTION
349 001120 000000 $SBDADR: .WORD 0 ;: CONTAINS ADDRESS OF 'GOOD' DATA
350 001122 000000 $SGDDAT: .WORD 0 ;: CONTAINS ADDRESS OF 'BAD' DATA
351 001124 000000 $SBDDAT: .WORD 0 ;: CONTAINS 'GOOD' DATA
352 001126 000000 .WORD 0 ;: CONTAINS 'BAD' DATA
353 001130 000000 .WORD 0 ;: RESERVED--NOT TO BE USED
354 001132 000000 .WORD 0
355 001134 000000 .WORD 0
356 001136 177570 $SWR: .WORD DSWR ;: ADDRESS OF SWITCH REGISTER
357 001140 177570 $DISPLAY: .WORD DDISP ;: ADDRESS OF DISPLAY REGISTER
358 001142 177560 $TKS: 177560 ;: TTY KBD STATUS
359 001144 177562 $TKB: 177562 ;: TTY KBD BUFFER
360 001146 177564 $STPS: 177564 ;: TTY PRINTER STATUS REG. ADDRESS
361 001150 177566 $STPB: 177566 ;: TTY PRINTER BUFFER REG. ADDRESS
362 001152 000 $NULL: .BYTE 0 ;: CONTAINS NULL CHARACTER FOR FILLS
363 001153 002 $FILLS: .BYTE 2 ;: CONTAINS # OF FILLER CHARACTERS REQUIRED
364 001154 012 $FILLC: .BYTE 12 ;: INSERT FILL CHARS. AFTER A "LINE FEED"
365 001155 000 $STPFLG: .BYTE 0 ;: "TERMINAL AVAILABLE" FLAG (BIT<07>=0=:YES)
366 001156 000000 $REGAD: .WORD 0 ;: CONTAINS THE ADDRESS FROM
367 ;: WHICH ($REGAD) WAS OBTAINED
368 001160 000000 $REG0: .WORD 0 ;: CONTAINS (($REGAD)+0)
369 001162 000000 $REG1: .WORD 0 ;: CONTAINS (($REGAD)+2)
370 001164 000000 $REG2: .WORD 0 ;: CONTAINS (($REGAD)+4)
371 001166 000000 $REG3: .WORD 0 ;: CONTAINS (($REGAD)+6)
372 001170 000000 $REG4: .WORD 0 ;: CONTAINS (($REGAD)+10)
373 001172 000000 $REG5: .WORD 0 ;: CONTAINS (($REGAD)+12)
374 001174 000000 $REG6: .WORD 0 ;: CONTAINS (($REGAD)+14)
375 001176 000000 $REG7: .WORD 0 ;: CONTAINS (($REGAD)+16)
376 001200 000000 $TMP0: .WORD 0 ;: USER DEFINED
377 001202 000000 $TMP1: .WORD 0 ;: USER DEFINED
378 001204 000000 $TMP2: .WORD 0 ;: USER DEFINED
379 001206 000000 $TMP3: .WORD 0 ;: USER DEFINED
380 001210 000000 $TMP4: .WORD 0 ;: USER DEFINED
381 001212 000000 $TMP5: .WORD 0 ;: USER DEFINED
382 001214 000000 $TMP6: .WORD 0 ;: USER DEFINED
383 001216 000000 $TMP7: .WORD 0 ;: USER DEFINED

```



007

MAINDEC - 11 - DZCDB-B MACY:1 27(654) 1-JUL-77 08:39 PAGE 9  
DZCDB.P11 COMMON TAGS

SEQ 0081

384 001220 000000  
385 001222 177607 000377  
386 001226 077  
387 001227 015  
388 001230 000012

\$TIMES: 0  
\$BELL: .ASCIZ <207><377><377>  
\$QUES: .ASCII /?/  
\$CRLF: .ASCII <15>  
\$LF: .ASCIZ <12>  
::MAX. NUMBER OF ITERATIONS  
::CODE FOR BEL'  
::QUESTION MARK  
::CARRIAGE RETURN  
::LINE FEED

```

389 ;*****
390 ;LOAD POINTERS AND GENERAL STORAGE
391 001232 177160 CDST: 177160 ;ADDRESS OF CARD READER STATUS REGISTER #1
392 ;THIS REGISTER'S INFORMATION IS VALID
393 ;DURING DATA TRANSFERS
394 001234 177162 CDCC: 177162 ;ADDRESS OF CARD READER COLUMN COUNT
395 001236 177164 CDBA: 177164 ;ADDRESS OF CARD READER BUS ADDRESS
396 001240 177166 CDOB: 177166 ;ADDRESS OF CARD READER STATUS REGISTER #2
397 ;THIS REGISTER'S INFORMATION IS VALID
398 ;DURING NON-DATA TRANSFER PERIODS
399 001242 000002 TRTRAP: RTI ;RETURN FROM TRACE LOOP
400 001244 000230 INTVC: 230 ;ADDRESS OF CARD READER INTERRUPT VECTOR
401 001246 000232 ;
402 001250 000000 COUNT: 0 ;USED FOR TIMING, ETC.
403 001252 000000 INTFLG: 0 ;CONTAINS LEVEL THAT INTERRUPT IS FOUND AT
404 001254 000000 TRFLG: 0 ;TOGGLED TO SWITCH BETWEEN TRACE TRAPPING AND NORMAL FLO
405 001256 000000 PROC: 0 ;STORES PROCESSOR STATUS WHEN TRACE TRAP MUST BE CLEARED
406 ;IN A SUBTEST
407 001260 000000 ERFLG: 0 ;SET TO ZERO TO OUTPUT DATA ERROR HEADING
408 001262 000000 CKRF: 0 ;FLAG FOR CHECKERBOARD DECK
409 001264 000000 COUNTG: 0 ;USED AS COUNTER IN TESTG
410 001266 000000 CD1000: 0 ;M-1200 OR M-1000/M-200 CARD READER DETECTOR
411
412 .SBTTL ERROR POINTER TABLE
413
414 ;*THIS TABLE CONTAINS THE INFORMATION FOR EACH ERROR THAT CAN OCCUR.
415 ;*THE INFORMATION IS OBTAINED BY USING THE INDEX NUMBER FOUND IN
416 ;*LOCATION $ITEMB. THIS NUMBER INDICATES WHICH ITEM IN THE TABLE IS PERTINENT.
417 ;*NOTE1: IF $ITEMB IS 0 THE ONLY PERTINENT DATA IS ($ERRPC).
418 ;*NOTE2: EACH ITEM IN THE TABLE CONTAINS 4 POINTERS EXPLAINED AS FOLLOWS:
419
420 ;* EM ;;POINTS TO THE ERROR MESSAGE
421 ;* DH ;;POINTS TO THE DATA HEADER
422 ;* DT ;;POINTS TO THE DATA
423 ;* DF ;;POINTS TO THE DATA FORMAT
424
425
426 001270 $ERRTB:
427
428 ;ITEM 1
429
430 001270 036272 EM1 ;STATUS REGISTER (CDS) BIT07 NOT SET BY
431 ;INITIALIZATION PULSE
432 001272 044254 DH1 ;(PC) (SP) (CDS) (CDD) (PS)
433 001274 045236 DT1 ;$ERRPC, $REG6, $TMP0, $TMP1, $REG7
434 001276 000000 0 ;OCTAL VALUES
435
436 ;ITEM 2
437
438 001300 036367 EM2 ;COLUMN COUNT REGISTER (CDC) NOT CLEARED BY
439 ;INITIALIZATION PULSE
440 001302 044322 DH2 ;(PC) (SP) (CDS) (CDD) (CDC) (PS)
441 001304 045252 DT2 ;$ERRPC, $REG6, $TMP0, $TMP1, $TMP2, $REG7
442 001306 000000 0 ;OCTAL VALUES

```

```

443
444
445 ; ITEM 3
446 001310 036470 EM3 ; BUS ADDRESS REGISTER (CDA) NOT CLEARED BY
447 ; INITIALIZATION PULSE
448 001312 044400 DH3 ; (PC) (SP) (CDS) (CDD) (CDA) (PS)
449 001314 045270 DT3 ; $ERRPC, $REG6, $TMP0, $TMP1, $TMP3, $REG7
450 001316 000000 0 ; OCTAL VALUES
451
452 ; ITEM 4
453
454 001320 036570 EM4 ; STATUS REGISTER CONTENTS INCORRECT
455 001322 044254 DH1 ; (PC) (SP) (CDS) (CDD) (PS)
456 001324 045236 DT1 ; $ERRPC, $REG6, $TMP0, $TMP1, $REG7
457 001326 000000 0 ; OCTAL VALUES
458
459 ; ITEM 5
460
461 001330 036633 EM5 ; COLUMN COUNT REGISTER (CDC) NOT ABLE TO
462 ; BE LOADED WITH ALL ONE'S
463 001332 044322 DH2 ; (PC) (SP) (CDS) (CDD) (CDC) (PS)
464 001334 045252 DT2 ; $ERRPC, $REG6, $TMP0, $TMP1, $TMP2, $REG7
465 001336 000000 0 ; OCTAL VALUES
466
467 ; ITEM 6
468
469 001340 036734 EM6 ; COLUMN COUNT REGISTER (CDC) NOT CLEARED
470 ; BY POWER CLEAR
471 001342 044322 DH2 ; (PC) (SP) (CDS) (CDD) (CDC) (PS)
472 001344 045252 DT2 ; $ERRPC, $REG6, $TMP0, $TMP1, $TMP2, $REG7
473 001346 000000 0 ; OCTAL VALUES
474
475 ; ITEM 7
476
477 001350 037024 EM7 ; BUS ADDRESS REGISTER (CDA) NOT ABLE TO BE
478 ; LOADED WITH ALL ONE'S
479 001352 044400 DH3 ; (PC) (SP) (CDS) (CDD) (CDA) (PS)
480 001354 045270 DT3 ; $ERRPC, $REG6, $TMP0, $TMP1, $TMP3, $REG7
481 001356 000000 0 ; OCTAL VALUES
482
483 ; ITEM 10
484
485 001360 037124 EM10 ; BUS ADDRESS REGISTER (CDA) NOT CLEARED
486 ; BY POWER CLEAR
487 001362 044400 DH3 ; (PC) (SP) (CDS) (CDD) (CDA) (PS)
488 001364 045270 DT3 ; $ERRPC, $REG6, $TMP0, $TMP1, $TMP3, $REG7
489 001366 000000 0 ; OCTAL VALUES
490
491 ; ITEM 11
492
493 001370 037213 EM11 ; CONTROLLER READY DIDN'T CLEAR ON
494 ; READING A CARD
495 001372 044254 DH1 ; (PC) (SP) (CDS) (CDD) (PS)
496 001374 045236 DT1 ; $ERRPC, $REG6, $TMP0, $TMP1, $REG7

```

497	001376	000000	0	;OCTAL VALUES
498				
499				
500				;ITEM 12
501	001400	037275	EM12	;CONTROLLER READY DIDN'T CLEAR BIT00
502				;OF STATUS REGISTER (CDS)
503	001402	044254	DH1	; (PC) (SP) (CDS) (CDD) (PS)
504	001404	045236	DT1	;SERRPC, \$REG6, \$TMPO, \$TMP1, \$REG7
505	001406	000000	0	;OCTAL VALUES
506				
507				;ITEM 13
508				
509	001410	037374	EM13	;CONTROLLER DIDN'T SET WITHIN ONE SECOND
510	001412	044254	DH1	; (PC) (SP) (CDS) (CDD) (PS)
511	001414	045236	DT1	;SERRPC, \$REG6, \$TMPO, \$TMP1, \$REG7
512	001416	000000	0	;OCTAL VALUES
513				
514				;ITEM 14
515				
516	001420	037443	EM14	;ERROR (BIT15) SET IN STATUS REGISTER (CDS)
517	001422	044254	DH1	; (PC) (SP) (CDS) (CDD) (PS)
518	001424	045236	DT1	;SERRPC, \$REG6, \$TMPO, \$TMP1, \$REG7
519	001426	000000	0	;OCTAL VALUES
520				
521				;ITEM 15
522				
523	001430	037516	EM15	;BIT/S SET IN STATUS REGISTER (CDS) THAT
524				;SHOULDN'T BE
525	001432	044254	DH1	; (PC) (SP) (CDS) (CDD) (PS)
526	001434	045236	DT1	;SERRPC, \$REG6, \$TMPO, \$TMP1, \$REG7
527	001436	000000	0	;OCTAL VALUES
528				
529				;ITEM 16
530				
531	001440	037613	EM16	; 'BUSY' SET IN STATUS REGISTER (CDS)
532				;SHOULDN'T BE
533	001442	044254	DH1	; (PC) (SP) (CDS) (CDD) (PS)
534	001444	045236	DT1	;SERRPC, \$REG6, \$TMPO, \$TMP1, \$REG7
535	001446	000000	0	;OCTAL VALUES
536				
537				;ITEM 17
538				
539	001450	037677	EM17	;RESTORING CPU STATUS AFTER READING A CARD
540				;CLEARED CONTROLLER READY IN STATUS REGISTER
541	001452	044254	DH1	; (PC) (SP) (CDS) (CDD) (PS)
542	001454	045236	DT1	;SERRPC, \$REG6, \$TMPO, \$TMP1, \$REG7
543	001456	000000	0	;OCTAL VALUES
544				
545				;ITEM 20
546				
547	001460	040026	EM20	;NO INTERRUPT OCCURRED
548	001462	044456	DH4	; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)
549	001464	045306	DT4	;SERRPC, \$REG6, \$TMPO, \$TMP1, \$TMP2, \$TMP3, \$REG7
550	001466	000000	0	;OCTAL VALUES

H07

SEQ 0085

```

551
552
553 ;ITEM 21
554 001470 040054 EM21 ;AN INTERRUPT OCCURRED - SHOULDN'T HAVE
555 001472 044456 DM4 ; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)
556 001474 045306 DT4 ;$ERRPC,$REG6,$TMP0,$TMP1,$TMP2,$TMP3,$REG7
557 001476 000000 0 ;OCTAL VALUES
558
559 ;ITEM 22
560
561 001500 040124 EM22 ; INTERRUPT ALREADY OCCURRED AT A HIGHER LEVEL
562 001502 044456 DM4 ; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)
563 001504 045306 DT4 ;$ERRPC,$REG6,$TMP0,$TMP1,$TMP2,$TMP3,$REG7
564 001506 000000 0 ;OCTAL VALUES
565
566 ;ITEM 23
567
568 001510 040201 EM23 ;CONTROLLER READY NOT SET
569 001512 044456 DM4 ; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)
570 001514 045306 DT4 ;$ERRPC,$REG6,$TMP0,$TMP1,$TMP2,$TMP3,$REG7
571 001516 000000 0 ;OCTAL VALUES
572
573 ;ITEM 24
574
575 001520 040232 EM24 ; INTERRUPT ALREADY OCCURRED AT A LOWER LEVEL
576 001522 044456 DM4 ; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)
577 001524 045306 DT4 ;$ERRPC,$REG6,$TMP0,$TMP1,$TMP2,$TMP3,$REG7
578 001526 000000 0 ;OCTAL VALUES
579
580 ;ITEM 25
581
582 001530 040306 EM25 ;AN INTERRUPT OCCURRED AT TWO DIFFERENT LEVELS
583 001532 044456 DM4 ; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)
584 001534 045306 DT4 ;$ERRPC,$REG6,$TMP0,$TMP1,$TMP2,$TMP3,$REG7
585 001536 000000 0 ;OCTAL VALUES
586
587 ;ITEM 26
588
589 001540 040364 EM26 ;ERROR (BIT15) NOT SET IN STATUS REGISTER
590 ; (CDS) - SHOULD BE
591 001542 044456 DM4 ; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)
592 001544 045306 DT4 ;$ERRPC,$REG6,$TMP0,$TMP1,$TMP2,$TMP3,$REG7
593 001546 000000 0 ;OCTAL VALUES
594
595 ;ITEM 27
596
597 001550 040461 EM27 ;NON-EXISTANT MEMORY (BIT09) NOT SET IN
598 ;STATUS REGISTER (CDS) - SHOULD BE
599 001552 044456 DM4 ; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)
600 001554 045306 DT4 ;$ERRPC,$REG6,$TMP0,$TMP1,$TMP2,$TMP3,$REG7
601 001556 000000 0 ;OCTAL VALUES
602
603 ;ITEM 30
604
  
```

605	001560	040576	EM30	; EXTENDED MEMORY (BIT05) NOT SET IN STATUS
606				; REGISTER (CDS)
607	001562	044456	DH4	; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)
608	001564	045306	DT4	; SERRPC, \$REG6, \$TMP0, \$TMP1, \$TMP2, \$TMP3, \$REG7
609	001566	000000	0	; OCTAL VALUES
610				
611				; ITEM 31
612				
613	001570	040670	EM31	; EXTENDED MEMORY (BIT04) NOT SET IN STATUS
614				; REGISTER (CDS)
615	001572	044456	DH4	; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)
616	001574	045306	DT4	; SERRPC, \$REG6, \$TMP0, \$TMP1, \$TMP2, \$TMP3, \$REG7
617	001576	000000	0	; OCTAL VALUES
618				
619				; ITEM 32
620				
621	001600	037516	EM15	
622	001602	044456	DH4	; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)
623	001604	045306	DT4	; SERRPC, \$REG6, \$TMP0, \$TMP1, \$TMP2, \$TMP3, \$REG7
624	001606	000000	0	; OCTAL VALUES
625				
626				; ITEM 33
627				
628	001610	040762	EM32	; CONTENTS OF BUS ADDRESS REGISTER (CDA)
629				; INCORRECT
630	001612	044544	DH5	; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (CDA) (PS)
631				; WAS SHB
632	001614	045326	DT5	; SERRPC, \$REG6, \$TMP0, \$TMP1, \$TMP2, \$TMP3, \$TMP4, \$REG7
633	001616	000000	0	; OCTAL VALUES
634				
635				; ITEM 34
636				
637	001620	041044	EM33	; CONTENTS OF COLUMN COUNT REGISTER (CDC)
638				; INCORRECT
639	001622	044730	DH6	; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (CDC) (PS)
640				; WAS SHB
641	001624	045326	DT5	; SERRPC, \$REG6, \$TMP0, \$TMP1, \$TMP2, \$TMP3, \$TMP4, \$REG7
642	001626	000000	0	; OCTAL VALUES
643				
644				; ITEM 35
645				
646	001630	041127	EM34	; READER OFF-LINE BUT CARD READER ERROR
647				; (BIT14) NOT SET IN STATUS REGISTER (CDS)
648	001632	044254	DH1	; (PC) (SP) (CDS) (CDD) (PS)
649	001634	045236	DT1	; SERRPC, \$REG6, \$TMP0, \$TMP1, \$REG7
650	001636	000000	0	; OCTAL VALUES
651				
652				; ITEM 36
653				
654	001640	041247	EM35	; NO TRANSITION TO ON-LINE (BIT03) OCCURRED
655				; IN STATUS REGISTER (CDS)
656	001642	044254	DH1	; (PC) (SP) (CDS) (CDD) (PS)
657	001644	045236	DT1	; SERRPC, \$REG6, \$TMP0, \$TMP1, \$REG7
658	001646	000000	0	; OCTAL VALUES

```

659
660
661 ;ITEM 37
662 001650 043627 EM63 ;DISASTEROUS ERROR BUT NO ERROR BITS SET
663 001652 044456 DH4 ; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)
664 001654 045306 DT4 ;SERRPC, $REG6, $TMP0, $TMP1, $TMP2, $TMP3, $REG7
665 001656 000000 0 ;OCTAL VALUES
666
667 ;ITEM 40
668
669 001660 041353 EM36 ;CONTENTS OF STATUS REGISTER #2 (CDD)
670 ;INCORRECT
671 001662 045114 DH7 ; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)
672 ; WAS SHB
673 001664 045350 DT6 ;SERRPC, $REG6, $TMP0, $TMP1, $TMP4, $REG7
674 001666 000000 0 ;OCTAL VALUES
675
676 ;ITEM 41
677
678 001670 041432 EM37 ;NO INTERRUPT WITH PROCESSOR AT LEVEL 0
679 001672 044456 DH4 ; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)
680 001674 045306 DT4 ;SERRPC, $REG6, $TMP0, $TMP1, $TMP2, $TMP3, $REG7
681 001676 000000 0 ;OCTAL VALUES
682
683 ;ITEM 42
684
685 001700 041301 EM40 ;DATA LATE (BIT10) NOT SET IN STATUS
686 ;REGISTER (CDS)
687 001702 044456 DH4 ; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)
688 001704 045306 DT4 ;SERRPC, $REG6, $TMP0, $TMP1, $TMP2, $TMP3, $REG7
689 001706 000000 0 ;OCTAL VALUES
690
691 ;ITEM 43
692
693 001710 041561 EM41 ;OFF-LINE (BIT12) NOT SET IN STATUS
694 ;REGISTER (CDS)
695 001712 044456 DH4 ; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)
696 001714 045306 DT4 ;SERRPC, $REG6, $TMP0, $TMP1, $TMP2, $TMP3, $REG7
697 001716 000000 0 ;OCTAL VALUES
698
699 ;ITEM 44
700
701 001720 041646 EM42 ;OFF-LINE (BIT12) SET IN STATUS REGISTER
702 ;(CDS) - SHOULDN'T BE
703 001722 044456 DH4 ; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)
704 001724 045306 DT4 ;SERRPC, $REG6, $TMP0, $TMP1, $TMP2, $TMP3, $REG7
705 001726 000000 0 ;OCTAL VALUES
706
707 ;ITEM 45
708
709 001730 041743 EM43 ;PICK CHECK (BIT13) NOT SET IN STATUS
710 ;REGISTER #2 (CDD)
711 001732 044456 DH4 ; (PC) (SP) (CDS) (CDD) (CDC) (CDA) (PS)
712 001734 045306 DT4 ;SERRPC, $REG6, $TMP0, $TMP1, $TMP2, $TMP3, $REG7
  
```

713	001736	000000	0	;OCTAL VALUES	
714					
715				;ITEM 46	
716					
717	001740	042032	EM44	;STACK CHECK (BIT12) NOT SET IN STATUS	
718				;REGISTER #2 (CDD)	
719	001742	044456	DH4	; (PC) (SP) (CDS) (CDD) (CDC) (CDA)	(PS)
720	001744	045306	DT4	;SERRPC,\$REG6,\$TMP0,\$TMP1,\$TMP2,\$TMP3,\$REG7	
721	001746	000000	0	;OCTAL VALUES	
722					
723				;ITEM 47	
724					
725	001750	042122	EM45	;END OF FILE (BIT13) SET IN STATUS	
726				;REGISTER (CDS) - SHOULDN'T BE	
727	001752	044456	DH4	; (PC) (SP) (CDS) (CDD) (CDC) (CDA)	(PS)
728	001754	045306	DT4	;SERRPC,\$REG6,\$TMP0,\$TMP1,\$TMP2,\$TMP3,\$REG7	
729	001756	000000	0	;OCTAL VALUES	
730					
731				;ITEM 50	
732					
733	001760	042230	EM46	;READ CHECK (BIT14) SET IN STATUS	
734				;REGISTER (CDS) - SHOULDN'T BE	
735	001762	044456	DH4	; (PC) (SP) (CDS) (CDD) (CDC) (CDA)	(PS)
736	001764	045306	DT4	;SERRPC,\$REG6,\$TMP0,\$TMP1,\$TMP2,\$TMP3,\$REG7	
737	001766	000000	0	;OCTAL VALUES	
738					
739				;ITEM 51	
740					
741	001770	042335	EM47	;HOPPER CHECK (BIT02) SET IN STATUS	
742				;REGISTER (CDS) - SHOULDN'T BE	
743	001772	044456	DH4	; (PC) (SP) (CDS) (CDD) (CDC) (CDA)	(PS)
744	001774	045306	DT4	;SERRPC,\$REG6,\$TMP0,\$TMP1,\$TMP2,\$TMP3,\$REG7	
745	001776	000000	0	;OCTAL VALUES	
746					
747				;ITEM 52	
748					
749	002000	042444	EM50	;END OF FILE (BIT13) OF STATUS REGISTER	
750				; (CDS) NOT SET - SHOULD BE	
751	002002	044456	DH4	; (PC) (SP) (CDS) (CDD) (CDC) (CDA)	(PS)
752	002004	045306	DT4	;SERRPC,\$TMP0,\$TMP1,\$TMP2,\$TMP3,\$REG7	
753	002006	000000	0	;OCTAL VALUES	
754					
755				;ITEM 53	
756					
757	002010	042552	EM51	;READ CHECK (BIT14) OF STATUS REGISTER	
758				; (CDS) NOT SET - SHOULD BE	
759	002012	044456	DH4	; (PC) (SP) (CDS) (CDD) (CDC) (CDA)	(PS)
760	002014	045306	DT4	;SERRPC,\$REG6,\$TMP0,\$TMP1,\$TMP2,\$TMP3,\$REG7	
761	002016	000000	0	;OCTAL VALUES	
762					
763				;ITEM 54	
764					
765	002020	042657	EM52	;HOPPER CHECK (BIT12) OF STATUS REGISTER	
766				;CDS) NOT SET - SHOULD BE	



L07

MINDEC - 11 - DZC08-B MACY11 27(654) 1-JUL-77 08:35 PAGE 17  
 DZC08.P11 ERROR POINTER TABLE

SEQ 0089

767	002022	044456	DH4	;	(PC)	(SP)	(CDS)	(CDD)	(CDC)	(CDA)	(PS)
768	002024	045306	DT4	;	SERRPC,	SREG6,	STMP0,	STMP1,	STMP2,	STMP3,	SREG7
769	002026	000000	0	;	OCTAL VALUES						
770											
771				;	ITEM 55						
772											
773	002030	042766	EMS3	;	END OF FILE (BIT13) OF STATUS REGISTER						
774				;	(CDS) DIDN'T CLEAR WITH TRANSITION						
775				;	TO ON-LINE						
776	002032	044456	DH4	;	(PC)	(SP)	(CDS)	(CDD)	(CDC)	(CDA)	(PS)
777	002034	045306	DT4	;	SERRPC,	SREG6,	STMP0,	STMP1,	STMP2,	STMP3,	SREG7
778	002036	000000	0	;	OCTAL VALUES						
779											
780				;	ITEM 56						
781											
782	002040	043115	EMS4	;	READ CHECK (BIT14) NOT SET IN STATUS						
783				;	REGISTER #2 (CDD)						
784	002042	044456	DH4	;	(PC)	(SP)	(CDS)	(CDD)	(CDC)	(CDA)	(PS)
785	002044	045306	DT4	;	SERRPC,	SREG6,	STMP0,	STMP1,	STMP2,	STMP3,	SREG7
786	002046	000000	0	;	OCTAL VALUES						
787											
788				;	ITEM 57						
789											
790	002050	043204	EMS5	;	CARD READER ERROR BUT NO BOTH CARD						
791	002052	044456	DH4	;	(PC)	(SP)	(CDS)	(CDD)	(CDC)	(CDA)	(PS)
792	002054	045306	DT4	;	SERRPC,	SREG6,	STMP0,	STMP1,	STMP2,	STMP3,	SREG7
793	002056	000000	0	;	OCTAL VALUES						
794											
795				;	ITEM 60						
796											
797	002060	043250	EMS6	;	CARD READER ERROR BUT READER NOT OFF-LINE						
798	002062	044456	DH4	;	(PC)	(SP)	(CDS)	(CDD)	(CDC)	(CDA)	(PS)
799	002064	045306	DT4	;	SERRPC,	SREG6,	STMP0,	STMP1,	STMP2,	STMP3,	SREG7
800	002066	000000	0	;	OCTAL VALUES						
801											
802				;	ITEM 61						
803											
804	002070	043313	EMS7	;	END OF FILE ERROR (BIT13) OF STATUS						
805				;	REGISTER (CDS)						
806	002072	044456	DH4	;	(PC)	(SP)	(CDS)	(CDD)	(CDC)	(CDA)	(PS)
807	002074	045306	DT4	;	SERRPC,	SREG6,	STMP0,	STMP1,	STMP2,	STMP3,	SREG7
808	002076	000000	0	;	OCTAL VALUES						
809											
810				;	ITEM 62						
811											
812	002100	043376	EMS60	;	DATA ERROR (BIT11) OF STATUS REGISTER (CDS)						
813	002102	044456	DH4	;	(PC)	(SP)	(CDS)	(CDD)	(CDC)	(CDA)	(PS)
814	002104	045306	DT4	;	SERRPC,	SREG6,	STMP0,	STMP1,	STMP2,	STMP3,	SREG7
815	002106	000000	0	;	OCTAL VALUES						
816											
817				;	ITEM 63						
818											
819	002110	043452	EMS61	;	DATA LATE ERROR (BIT10) OF STATUS						
820				;	REGISTER (CDS)						



```

865
866
867
868 002170
869 002170 012706 001100 BEGIN:
870 002174 005036 MOV #SCNTAG,R6 ; FIRST LOCATION TO BE CLEARED
871 002176 022706 CLR (R6)+ ; CLEAR MEMORY LOCATION
872 002202 001374 CFP #SBOOAT,R6 ; DONE?
873 002204 012706 001100 BNE .-6 ; LOOP BACK IF NO
874 002210 012737 026326 000020 MOV #STACK SP ; SETUP THE STACK POINTER
875 002216 012737 000340 000022 MOV #SCOPE,#IOTVEC ; IOT VECTOR FOR SCOPE ROUTINE
876 002224 012737 026152 000030 MOV #340,#IOTVEC+2 ; LEVEL 7
877 002232 012737 000340 000032 MOV #ERROR,#EMTVEC ; EMT VECTOR FOR ERROR ROUTINE
878 002240 012737 027374 000034 MOV #340,#EMTVEC+2 ; LEVEL 7
879 002246 012737 000340 000036 MOV #TRAP,#TRAPVEC ; TRAP VECTOR FOR TRAP CALLS
880 002254 012737 027430 000024 MOV #340,#TRAPVEC+2 ; LEVEL 7
881 002262 012737 000340 000026 MOV #SPWRN,#PWVEC ; POWER FAILURE VECTOR
882 002270 013737 014774 014766 MOV #340,#PWVEC+2 ; LEVEL 7
883 002276 005037 001220 SENDCT,SEOPCT ; SETUP END-OF-PROGRAM COUNTER
884 002302 012737 015140 000014 CLR $TIMES ; INITIALIZE NUMBER OF ITERATIONS
885 002310 012737 000340 000016 MOV #SRTN,#TBITVEC ; SET "T" BIT VECTOR TO SRTN
886 002316 012737 000002 01514C MOV #340,#TBITVEC+2 ; LEVEL 7
887 002324 012737 002352 000010 MOV #RTI,SRTN ; SET SRTN TO A RTI
888 002332 005046 CLR #655,#RESVEC ; TRY TO DO A RTT
889 002334 012746 002342 MOV -(SP) ; DUMMY PS
890 002340 000006 RTT #645,-(SP) ; AND PC
891 002342 012737 0C0006 015140 645: MOV #RTT,SRTN ; RTT IS LEGAL--SET SRTN TO A RTT
892 002350 000402 BR 665
893 002352 062706 000010 655: ADD #10,SP ; RTT ILLEGAL--CLEAN OFF THE STACK
894 002356 012737 000012 000010 665: MOV #RESVEC+2,#RESVEC ; RESTORE TRAP CATCHER
895 002364 005037 015146 CLR $TBIT ; CLEAR "T" BIT SWITCH
896 002370 012737 002370 001106 MOV #SLPADR ; INITIALIZE THE LOOP ADDRESS FOR SCOPE
897 002376 013746 000004 MOV #4,-(SP) ; SAVE ERROR VECTOR
898 002402 013746 000006 MOV #6,-(SP)
899 002406 012737 002422 000004 MOV #675,4 ; SET UP TIME OUT VECTOR
900 002414 005777 176516 TST #SWR ; TRY TO REFERENCE HARDWARE SWR
901 002420 000407 BR 685 ; BRANCH IF NO TIMEOUT TRAP OCCURS
902 002422 012737 000176 001136 675: MOV #SWREG,SWR ; POINT TO SOFTWARE SWR
903 002430 012737 000174 001140 MOV #DISPREG,DISPLAY ; POINT TO SOFTWARE DISPLAY REG
904 002436 022626 CMP (SP)+,(SP)+ ; RESTORE STACK
905 002440 012637 000006 685: MOV (SP)+,#6 ; RESTORE ERROR VECTOR
906 002444 012637 000004 MOV (SP)+,#4
907 002450 012737 002170 027576 MOV #BEGIN,RETURN ; SAVE RETURN POINT FOR THIS
908 ; SECTION FOR POWER FAILURE RETURN
909 002456 004737 045366 JSR PC, SETUP ; INITIALIZE POINTERS AND FLAGS
910 002462 005737 000042 TST #42 ; TEST FOR MONITOR
911 002466 001015 BNE HEADIN ; BRANCH IF MONITOR IS IN CONTROL
912 002470 104400 030556 TYPE, STMS ; TYPE MAINDEC TITLE & REV. LEVEL
913 002474 104400 030616 TYPE, STADDR ; TYPE STARTING ADDRESSES MESSAGE
914 002500 104400 030550 TYPE, CRLF-3
915 002504 104400 035463 TYPE, MSG31 ; USER IS TO SET SR SWITCHES
916 002510 104400 031632 TYPE, MSG2 ; HIT CONTINUE
917 002514 000000 HALT
918 002516 104400 030553 TYPE, CRLF
    
```

```

919 002522 104400 031256 HEADIN: TYPE, MLOGIC ;INDICATE "ENTERING LOGIC TESTS"
920 002526 104400 015165 TYPE, SENULL ;TIME TO FINISH ABOVE MESSAGE.
921 002532 000432 BR TST1 ;GO TO INSTRUCTION TESTS
922 002534 005737 001254 RESTRT: TST TRFLG ;CHECK FOR TRACE TRAPPING
923 002540 001012 BNE TRAPX ;IF SET, TRACE TRAP
924 002542 NOTRP:
925 002542 013746 000340 MOV PR7, -(SP) ;; PUT NEW PS ON STACK
926 002546 012746 002554 MOV #64$, -(SP) ;; PUT NEW PC ON STACK
927 002552 000002 RTI ;; POP NEW PC AND PS
928 002554 64$:
929 002554 104400 031256 TYPE, MLOGIC ;INDICATE "ENTERING LOGIC TESTS"
930 002560 104400 015165 TYPE, SENULL ;TIME TO FINISH ABOVE MESSAGE
931 002564 000415 BR TST1 ;GO TO INSTRUCTION TESTS
932 002566 104400 031256 TRAPX: TYPE, MLOGIC ;INDICATE "ENTERING LOGIC TESTS"
933 002572 104400 015165 TYPE, SENULL ;TIME TO FINISH ABOVE MESSAGE
934 002576 032777 010000 176332 BIT #10000, %SWR ;CHECK SW12
935 002604 001356 BNE NOTRP ;BRANCH IF SET TO CLEAR TRACE BIT
936 002606 013746 000360 MOV TRACE, -(SP) ;; PUT NEW PS ON STACK
937 002612 012746 002620 MOV #64$, -(SP) ;; PUT NEW PC ON STACK
938 002616 000002 RTI ;; POP NEW PC AND PS
939 002620 64$:
940
941 ;*****
942 ;#TEST 1 TEST FOR INIT. OF ALL REGISTERS
943 ;*****
944 002620 000004 TST1: SCOPE
945 002622 004737 025772 JSR PC, CKOFFL ;CHECK FOR OFF-LINE SET
946 002626 000005 RESET ;SEND OUT INIT
947 002630 022713 000200 CMP #200, %CDS ;CHECK FOR STATUS REGISTER BIT 7 SET
948 002634 001401 BEQ 1$ ;BRANCH IF OK
949 002636 104001 ERROR +1 ;STATUS REGISTER NOT CORRECTLY INITIALIZED
950
951 002640 005714 1$: TST %CDC ;CHECK FOR COLUMN COUNT CLEARED
952 002642 001401 BEQ 2$ ;BR IF OK
953 002644 104002 ERROR +2 ;COLUMN COUNT NOT CLEARED BY INIT
954
955 002646 005715 2$: TST %CDA ;CHECK FOR BUS ADDRESS CLEARED
956 002650 001401 BEQ 3$ ;BR IF OK
957 002652 104003 ERROR +3 ;BUS ADDRESS NOT CLEARED BY INIT
958
959 002654 005777 176360 3$: TST %CDD8 ;TEST BIT15 OF STATUS REGISTER #2
960 002660 100011 BPL 4$ ;BRANCH IF NOT SET INDICATING
961 ;OLD CD11 CONTROLLER
962 002662 022777 107777 176350 CMP #107777, %CDD8 ;IS CONTENTS OF STATUS REGISTER #2
963 ;CORRECT FOR NO ERRORS?
964 002670 001415 BEQ 5$ ;BRANCH IF OK!
965 002672 012737 107777 001210 MOV #107777, %TMP4 ;CORRECT CONTENTS OF 'CDD' FOR
966 ;ERROR REPORT
967 002700 104040 ERROR +40 ;CONTENTS OF 'CDD8' STATUS REGISTER
968 ;#2 NOT = 107777
969 002702 000410 BR 5$ ;GO TO NEXT TEST
970 002704 022777 007777 176326 4$: CMP #007777, %CDD8 ;WE HAVE AN OLD CD11 CONTROLLER!
971 ;IS CONTENTS OF STATUS REGISTER #2
972 ;CORRECT FOR NO ERRORS?
    
```

```

973 002712 001404          BEQ      5$                ;BRANCH IF OK!
974 002714 012737 007777 001210  MOV     #007777,$TMP4      ;CORRECT CONTENTS OF 'CDB' FOR
975                                     ;ERROR REPORT
976 002722 104040          ERROR +40                ;CONTENTS OF 'CDB' STATUS REGISTER
977                                     ;#2 NOT = 007777
978 002724
979
980
981
982 002724 000004          5$:
983                                     ;*****
984                                     ;*TEST 2      TEST READ/WRITE OF STATUS REGISTER
985                                     ;*****
986
987 002726 052713 177376    TST2:  SCOPE
988 002732 022713 000362    ;ONLY BITS 1,4,5, AND 6 OF THE STATUS REGISTER SHOULD BE
989 002736 001402          ;ABLE TO BE SET TO ONE AND READ BACK AS ONE
990 002740 104004          BIS     #177376,$CDS      ;SET ALL BITS BUT 0 AND 8
991 002742 000413          CMP     #362,$CDS        ;ONLY BITS 1,4,5,6, AND 7 SHOULD BE SET
992                                     BEQ     1$                ;BRANCH IF OK
993                                     ERROR +4                ;STATUS REGISTER DIDN'T CONTAIN 362
994                                     BR      TST3             ;BRANCH AFTER FAILURE
995
996
997
998 002744 005013          1$:  ;CLEARING STATUS REGISTER SHOULD CLEAR BITS 1,4,5, AND 6
999 002746 022713 000200    CLR     $CDS              ;CLEAR BITS 1,4,5, AND 6
1000 002752 001401          CMP     #200,$CDS        ;CHECK FOR ALL BITS CLEAR BUT 7
1001 002754 104004          BEQ     2$                ;BRANCH IF OK
1002                                     ERROR +4                ;STATUS REGISTER DIDN'T CONTAIN 200
1003
1004
1005
1006
1007 002756 012713 177777    2$:  ;SETTING ALL BITS SHOULD DO A POWER CLEAR
1008 002762 022713 000200    MOV     #177777,$CDS     ;SET ALL BITS OF THE STATUS REGISTER
1009 002766 001401          CMP     #200,$CDS        ;CHECK FOR ALL BITS CLEAR BUT 7
1010 002770 104004          BEQ     3$                ;BRANCH IF OK
1011                                     ERROR +4                ;STATUS REGISTER DIDN'T CONTAIN 200
1012
1013
1014
1015
1016
1017 002772 000004          3$:
1018 002774 012714 177777    ;*****
1019 003000 022714 177777    ;*TEST 3      TEST READ/WRITE OF COLUMN COUNT REGISTER
1020 003004 001401          ;*****
1021 003006 104005          TST3:  SCOPE
1022                                     MOV     #177777,$CDC     ;LOAD ALL BITS
1023                                     CMP     #177777,$CDC     ;TEST TO SEE IF IT CAN BE READ
1024                                     BEQ     1$                ;BRANCH IF OK
1025                                     ERROR +5                ;CDB FAILED TO READ/WRITE
1026
1027 003010 022713 000200    1$:  CMP     #200,$CDS        ;CHECK STATUS REG
1028 003014 001401          BEQ     2$                ;BRANCH IF OK
1029 003016 104004          ERROR +4                ;STATUS REG CHANGED
1030
1031
1032 003020 052713 000400    2$:  BIS     #400,$CDS        ;DO A POWER CLEAR
1033 003024 005714          TST     $CDC             ;CHECK FOR COLUMN COUNT CLEARED
1034 003026 001401          BEQ     3$                ;BRANCH IF OK
1035 003030 104006          ERROR +6                ;COLUMN COUNT NOT CLEARED BY POWER CLEAR
1036
1037
1038 003032 022713 000200    3$:  CMP     #200,$CDS        ;CHECK STATUS REG
1039 003036 001401          BEQ     4$                ;BRANCH IF OK
1040 003040 104004          ERROR +4                ;STATUS REG CHANGED
1041
1042
1043
1044
1045
1046 003042          4$:

```

```

1027 ;*****
1028 ;*TEST 4 TEST READ/WRITE OF BUS ADDRESS REGISTER
1029 ;*****
1030 TST4: SCOPE
1031 MOV #177777, @CDA ;LOAD ALL BITS
1032 CMP #177777, @CDA ;TEST TO SEE IF IT CAN BE READ
1033 BEQ 1$ ;BRANCH IF OK
1034 ERROR +7 ;CDBA FAILED TO READ/WRITE
1035
1036 1$: CMP #200, @CDS ;CHECK STATUS REG
1037 BEQ 2$ ;BRANCH IF OK
1038 ERROR +4 ;STATUS REG CHANGED
1039
1040 2$: BIS #400, @CDS ;DO A POWER CLEAR
1041 TST @CDA ;CHECK FOR BUS ADDRESS CLEARED
1042 BEQ 3$ ;BRANCH IF OK
1043 ERROR +10 ;BUS ADDRESS NOT CLEARED BY POWER CLEAR
1044
1045 3$: CMP #200, @CDS ;CHECK STATUS REG
1046 BEQ 4$ ;BRANCH IF OK
1047 ERROR +4 ;STATUS REG CHANGED
1048
1049 4$:
1050 ;*****
1051 ;*TEST 5 TEST CONTROLLER READY TO CLEAR BIT0
1052 ;*****
1053 TST5: SCOPE
1054 ;BIT 0 SHOULD ALWAYS READ AS BEING EQUAL TO ZERO
1055 JSR PC, CKOFFL ;CHECK FOR OFF-LINE SET
1056 MOV #-1, @CDC ;SET UP COLUMN COUNT TO READ 1 COLUMN
1057 MOV #BUFBEQ, @CDA ;SET UP BUS ADDRESS
1058 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS, PROC"
1059 CLR -(SP) ;;
1060 MOV 34, -(SP) ;;SAVE CURRENT TRAP VECTOR
1061 MOV #64$, 34 ;;SETUP NEW TRAP VECTOR
1062 TRAP ;;PUSH OLD PSW AN PC ON STACK
1063 MOV 2(SP), 6(SP) ;;
1064 MOV #65$, 1(SP) ;;REPLACE OLD PC WITH NEW
1065 RTI ;;RESTORE PSW
1066 MOV (SP)+, 34 ;;RESTORE OLD TRAP VECTOR
1067 MOV (SP)+, PROC ;;
1068 MOV PRO, -(SP) ;;PUT NEW PS ON STACK
1069 MOV #66$, -(SP) ;;PUT NEW PC ON STACK
1070 RTI ;;POP NEW PC AND PS
1071 66$:
1072 CLR COUNT ;INITIALIZE COUNTER
1073 INC @CDS ;START READING A CARD
1074 TSTB @CDS ;CHECK FOR CONTROLLER READY CLEARED
1075 BPL LOOPS ;BRANCH IF OK
1076 ERROR +11 ;CONTROLLER READY DIDN'T CLEAR
1077
1078 LOOPS: BIT #1, @CDS ;CHECK BIT 0
1079 BEQ 1$ ;BRANCH IF NOT SET
1080 ERROR +12 ;BIT 0 READ AS A ONE

```

```

1081 003230 000423          BR      TST6      ;BRANCH AFTER FAILURE
1082 003232 005237 001250 1$: INC      COUNT    ;WAIT ABOUT
1083 003236 001370          BNE     LOOPS5
1084 003240 013746 001256  MOV     PROC,-(SP) ;;PUT NEW PS ON STACK
1085 003244 012746 003252  MOV     #64$,-(SP) ;;PUT NEW PC ON STACK
1086 003250 000002          RTI                    ;;POP NEW PC AND PS
1087 003252          64$:
1088 003252 105713          TSTB   @CDS        ;CHECK CONTROLLER READY
1089 003254 100401          BMI   2$          ;CONTINUE IF SET
1090 003256 104013          ERROR +13        ;CONTROLLER READY DIDN'T SET WITHIN 1 SEC
1091 003260 005713 2$: TST     @CDS
1092 003262 100002          BPL   3$
1093 003264 104014          ERROR +14        ;ERROR BIT SET
1094 003266 000404          BR     TST6
1095 003270 03271? 177577 3$: BIT     #177577,@CDS ;CHECK FOR ANY OTHER BITS
1096 003274 001401          BEQ   4$          ;BRANCH IF OK
1097 003276 104015          ERROR +15        ;EXTRA BIT(S) SET
1098
1099 003300          4$:
1100 ;*****
1101 ;*TEST 6 TEST BIT2 TO BE CLEAR AFTER CARD READ
1102 ;*****
1103 003300 000004          TST6: SCOPE
1104 ;IT SHOULD REMAIN NOT SET
1105 ;THIS SHOULD HAPPEN WITHIN ABOUT 1 SECOND
1106 003302 004737 025772          JSR   PC,CKOFF1   ;CHECK FOR OFF-LINE SET
1107 003306 005013          CLR   @CDS        ;INITIALIZE STATUS REGISTER
1108 003310 012714 177754          MOV   #-20,@CDC   ;SET UP COLUMN COUNT TO READ 20 COLUMNS
1109 003314 012715 045442          MOV   #BUFBEG,@CDA ;SET UP BUS ADDRESS
1110 003320 005213          INC   @CDS
1111 003322 032713 000004          BIT   #4,@CDS    ;CHECK HOPPER EMPT'
1112 003326 001401          BEQ   1$
1113 003330 104016          ERROR +16        ;HOPPER EMPTY SET
1114 003332 005037 001250 1$: CLR     COUNT    ;SET UP WAIT COUNTER
1115 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,PROC"
1116 003336 005046          CLR   -(SP)
1117 003340 013746 000034          MOV   34,-(SP)   ;;SAVE CURRENT TRAP VECTOR
1118 003344 012737 003354 000034  MOV   #64$,34    ;;SETUP NEW TRAP VECTOT
1119 003352 104400          TRAP                    ;;PUSH OLD PSW AN PCOM STACK
1120 003354 016666 000002 000006 64$: MOV   2(SP),6(SP) ;;
1121 003362 012716 003370          MOV   #65$,1(SP) ;;REPLACE OLD PC WITH NEW
1122 003366 000002          RTI                    ;;RESTORE PSW
1123 003370 012637 000034 65$: MOV   (SP)+,34    ;;RESTORE OLD TRAF VECTOR
1124 003374 012637 001256          MOV   (SP)+,PROC
1125 003400 013746 000000          MOV   PRO,-(SP)  ;;PUT NEW PS ON STACK
1126 003404 012746 003412          MOV   #66$,-(SP) ;;PUT NEW PC ON STACK
1127 003410 000002          RTI                    ;;POP NEW PC AND PS
1128 003412          66$:
1129 003412 105713          LOOP6A: TSTB   @CDS        ;CHECK READY
1130 003414 100405          BMI   LOOP6B      ;BRANCH IF READY
1131 003416 005337 001250          DEC   COUNT
1132 003422 001373          BNE   LOOP6A
1133 003424 104013          ERROR +13        ;READING A CARD DIDN'T SET READY
1134 003426 000413          BR     TST7

```

```

1135 003430 LOOP6B: MOV PROC,-(SP) ;;PUT NEW PS ON STACK
1136 003430 013746 001256 MOV #64$,-(SP) ;;PUT NEW PC ON STACK
1137 003434 012746 003442 RTI ;;POP NEW PC AND PS
1138 003440 000002
1139 003442 64$:
1140 003442 105713 LOOP6: TSTB QCD5 ;CHECK CONTROLLER READY
1141 003444 100401 BMI DONE6 ;BRANCH IF SET
1142 003446 104017 ERROR +17 ;RESTORING STATUS RESET READY
1143
1144 003450 005713 DONE6: TST QCD5 ;CHECK ERROR BIT 15
1145 003452 100001 BPL 15 ;BRANCH IF OK
1146 003454 104014 ERROR +14 ;ERROR BIT 15 WAS SET
1147
1148 003456 1$:
1149 ;*****
1150 ;*TEST 7 TEST INTERRUPT FROM CONTROLLER READY
1151 ;*****
1152 003456 000004 TST7: SCOPE
1153 003460 004737 025744 JSR PC,INIT ;INITIALIZE
1154 003464 012712 003740 MOV #TINT7,ADINT ;LOAD RETURN POINTER
1155 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
1156 003470 005046 CLR -(SP) ;;
1157 003472 013746 000034 MOV 34,-(SP) ;;SAVE CURRENT TRAP VECTOR
1158 003476 012737 003506 000034 MOV #64$,34 ;;SETUP NEW TRAP VECTOT
1159 003504 104400 TRAP ;;PUSH OLD PSW AN PCON STACK
1160 003506 016666 000002 000006 64$: MOV 2(SP),6(SP) ;;
1161 003514 012716 003522 MOV #65$,15P) ;;REPLACE OLD PC WITH NEW
1162 003520 000002 RTI ;;RESTORE PSW
1163 003522 012637 000034 65$: MOV (SP)+,34 ;;RESTORE OLD TRAP VECTOR
1164 003526 012637 001214 MOV (SP)+,STMP6
1165 003532 052737 000340 001214 BIS #340,STMP6
1166 003540 013746 001214 MOV STMP6,-(SP) ;;PUT NEW PS ON STACK
1167 003544 012746 003552 MOV #66$,-(SP) ;;PUT NEW PC ON STACK
1168 003550 000002 RTI ;;POP NEW PC AND PS
1169 003552 66$:
1170 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
1171 003552 005046 CLR -(SP) ;;
1172 003554 013746 000034 MOV 34,-(SP) ;;SAVE CURRENT TRAP VECTOR
1173 003560 012737 003570 000034 MOV #67$,34 ;;SETUP NEW TRAP VECTOT
1174 003566 104400 TRAP ;;PUSH OLD PSW AN PCON STACK
1175 003570 016666 000002 000006 67$: MOV 2(SP),6(SP) ;;
1176 003576 012716 003604 MOV #68$,15P) ;;REPLACE OLD PC WITH NEW
1177 003602 000002 RTI ;;RESTORE PSW
1178 003604 012637 000034 68$: MOV (SP)+,34 ;;RESTORE OLD TRAP VECTOR
1179 003610 012662 000002 MOV (SP)+,2(ADINT)
1180 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
1181 003614 005046 CLR -(SP) ;;
1182 003616 013746 000034 MOV 34,-(SP) ;;SAVE CURRENT TRAP VECTOR
1183 003622 012737 003632 000034 MOV #69$,34 ;;SETUP NEW TRAP VECTOT
1184 003630 104400 TRAP ;;PUSH OLD PSW AN PCON STACK
1185 003632 016666 000002 000006 69$: MOV 2(SP),6(SP) ;;
1186 003640 012716 003646 MOV #70$,15P) ;;REPLACE OLD PC WITH NEW
1187 003644 000002 RTI ;;RESTORE PSW
1188 003646 012637 000034 70$: MOV (SP)+,34 ;;RESTORE OLD TRAP VECTOR

```



```

1189 003652 012637 001214          MOV      (SP)+,$TMP6
1190 003656 042737 000340 001214          BIC      #340,$TMP6
1191 003664 013746 001214          MOV      $TMP6,-(SP)      ;; PUT NEW PS ON STACK
1192 003670 012746 003676          MOV      #71$,-(SP)      ;; PUT NEW PC ON STACK
1193 003674 000002          RTI      ;; POP NEW PC AND PS
1194 003676          71$:
1195 003676 012714 177741          MOV      #-31,$CDBC      ;; SET UP COLUMN COUNT TO READ 31 COLUMNS
1196 003702 012715 045442          MOV      #BUFBEQ,$CDBA   ;; SET UP BUS ADDRESS
1197 003706 012713 000101          MOV      #101,$CDS      ;; SET INTERRUPT ENABLE AND READ
1198 003712 105713          1$:      TSTB    $CDS      ;; WAIT FOR CONTROLLER READY
1199 003714 100376          BPL     1$
1200          ; THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV 2(ADINT),PS"
1201 003716 016246 000002          MOV      2(ADINT),-(SP)  ;; PUT NEW PS ON STACK
1202 003722 012746 003730          MOV      #72$,-(SP)      ;; PUT NEW PC ON STACK
1203 003726 000002          RTI      ;; POP NEW PC AND PS
1204 003730          72$:
1205 003730 042713 000100          BIC      #100,$CDS      ;; CLEAR INTERRUPT ENABLE
1206 003734 104020          ERROR +20      ;; NO INTERRUPT OCCURRED
1207 003736 070410          BR      CONT7
1208 003740 105713          TINT7: TSTB    $CDS      ;; CHECK CONTROLLER READY
1209 003742 100401          BMI     1$      ;; BRANCH IF SET
1210 003744 104023          ERROR +23      ;; CONTROLLER READY NOT SET
1211 003746 022626          1$:      CMP      (SP)+,(SP)+    ;; RESTORE STACK POINTER
1212 003750 005713          TST     $CDS      ;; MAKE SURE NO ERROR OCCURRED
1213 003752 100001          BPL     2$
1214 003754 104014          FRROR +14      ;; BIT 15 WAS SET
1215 003756 005013          2$:      CLR     $CDS      ;; DISABLE INTERRUPTS
1216 003760 012712 000232          CONT7: MOV     #232,$ADINT   ;; CHANGE INTERRUPT RETURN ADDRESS
1217 003764 005037 000232          CLR     #232      ;; TO CAUSE A HALT IF AN INTERRUPT OCCURS
1218
1219          ;*****
1220          ;*TEST 10 TEST NG INTERRUPT ON CONTROLLER READY & CPU AT LEVEL 7
1221          ;*****
1222 003770 000004          TST10: SCOPE
1223 003772 004737 025744          JSR     PC,INIT      ;; INITIALIZE
1224 003776 012712 004150          MOV     #TINT10,$ADINT ;; SETUP RETURN
1225          ; THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
1226 004002 005046          CLR     -(SP)      ;;
1227 004004 013746 000034          MOV     34,-(SP)    ;; SAVE CURRENT TRAP VECTOR
1228 004010 012737 004020 000034          MOV     #64$,34    ;; SETUP NEW TRAP VECTOT
1229 004016 104400          TRAP   ;; PUSH OLD PSW AN PCON STACK
1230 004020 016666 000002 000006 64$: MOV     2(SP),6(SP)  ;;
1231 004026 012716 004034          MOV     #65$,1$    ;;
1232 004032 000002          RTI     ;; RESTORE PSW
1233 004034 012637 000034          65$: MOV     (SP)+,34    ;; RESTORE OLD TRAP VECTOR
1234 004040 012637 001214          MOV     (SP)+,$TMP6
1235 004044 052737 000340 001214          BIS     #340,$TMP6
1236 004052 013746 001214          MOV     $TMP6,-(SP)  ;; PUT NEW PS ON STACK
1237 004056 012746 004064          MOV     #66$,-(SP)  ;; PUT NEW PC ON STACK
1238 004062 000002          RTI     ;; POP NEW PC AND PS
1239 004064          66$:
1240          ; THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
1241 004064 005046          CLR     -(SP)      ;;
1242 004066 013746 000034          MOV     34,-(SP)    ;; SAVE CURRENT TRAP VECTOR

```

# HOS

MAINDEC - 11 - DZCDB-B  
DZCDB.P11 T10

MACY11 27(654) 1-JUL-77 08:39 PAGE 26  
TEST NO INTERRUPT ON CONTROLLER READY & CPU AT LEVEL 7

SEQ 0098

```

1243 004072 012737 004102 000034      MOV      #67$,34          ;; SETUP NEW TRAP VECTOT
1244 004100 104400      TRAP                                ;; PUSH OLD PSW AN PCOM STACK
1245 004102 016666 000002 000006 67$:      MOV      2(SP),6(SP)      ;;
1246 004110 012716 004116      MOV      #68$, (SP)      ;;
1247 004114 000002      RTI                                ;; RESTORE PSW
1248 004116 012637 000034 68$:      MOV      (SP)+,34        ;; RESTORE OLD TRAP VECTOR
1249 004122 012662 000002      MOV      (SP)+,2(ADINT)
1250 004126 012714 177703      MOV      #-61, @CDC      ; SET UP COLUMN COUNT TO READ 61 COLUMNS
1251 004132 012715 045442      MOV      #BUFBEQ, @CDA   ; SET UP BUS ADDRESS
1252 004136 012713 000101      MOV      #101, @CDS     ; SET INTERRUPT ENABLE AND READ
1253 004142 105713      1$:      TSTB    @CDS            ; WAIT FOR CONTROLLER READY
1254 004144 100376      BPL     1$
1255 004146 000402      BR      T10GO          ; CONTINUE IF NO INTERRUPT OCCURRED
1256 004150 104021      TINT10: ERROR +21      ; AN INTERRUPT OCCURRED
1257 004152 022626      CMP     (SP)+, (SP)+    ; RESTORE STACK POINTER
1258 004154 005013      T10GO:  CLR     @CDS     ; CLEAR INTERRUPT ENABLE
1259 004156 012712 000232      MOV     #232, @ADINT    ; CHANGE INTERRUPT RETURN ADDRESS
1260 004162 005037 000232      CLR     @#232         ; TO CAUSE A HALT IF AN INTERRUPT OCCURS

1261
1262      ; FIND THE LEVEL AT WHICH AN INTERRUPT OCCURS
1263      ; PRINT OUT A MESSAGE STATING THIS LEVEL IF IT IS OTHER THAN THE STANDARD
1264      ; (LEVEL 6) MAKE CERTAIN THAT IT ALWAYS OCCURS AT THIS LEVEL
1265      ; THE MESSAGE STATING THE LEVEL IS PRINTED ONLY ONCE, AND THE PROGRAM MUST
1266      ; BE STARTED OVER AT LOCATION 200 FOR IT TO BE PRINTED AGAIN
1267
1268      ; *****
1269      ; *TEST 11      TEST FOR AN INTERRUPT ON LEVEL 7
1270      ; *****
1271 004166 000004      *TST11: SCOPE
1272 004170 004737 025744      JSR     PC, INIT       ; INITIALIZE
1273 004174 012712 004556      MOV     #TINT11, @ADINT ; SETUP RETURN ADDRESS
1274      ; THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340, PS"
1275 004200 005046      CLR     -(SP)          ;;
1276 004202 013746 000034      MOV     34, -(SP)     ;; SAVE CURRENT TRAP VECTOR
1277 004206 012737 004216 000034      MOV     #64$, 34      ;; SETUP NEW TRAP VECTOT
1278 004214 104400      TRAP                                ;; PUSH OLD PSW AN PCOM STACK
1279 004216 016666 000002 000006 64$:      MOV     2(SP), 6(SP)   ;;
1280 004224 012716 004232      MOV     #65$, (SP)    ;;
1281 004230 000002      RTI                                ;; RESTORE PSW
1282 004232 012637 000034 65$:      MOV     (SP)+, 34     ;; RESTORE OLD TRAP VECTOR
1283 004236 012637 001214      MOV     (SP)+, $TMP6
1284 004242 052737 000340 001214      BIS     #340, $TMP6
1285 004250 013746 001214      MOV     $TMP6, -(SP)   ;; PUT NEW PS ON STACK
1286 004254 012746 004262      MOV     #66$, -(SP)   ;; PUT NEW PC ON STACK
1287 004260 000002      RTI                                ;; POP NEW PC AND PS
1288 004262      66$:
1289      ; THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS, 2(ADINT)"
1290 004262 005046      CLR     -(SP)          ;;
1291 004264 013746 000034      MOV     34, -(SP)     ;; SAVE CURRENT TRAP VECTOR
1292 004270 012737 004300 000034      MOV     #67$, 34      ;; SETUP NEW TRAP VECTOT
1293 004276 104400      TRAP                                ;; PUSH OLD PSW AN PCOM STACK
1294 004300 016666 000002 000006 67$:      MOV     2(SP), 6(SP)   ;;
1295 004306 012716 004314      MOV     #68$, (SP)    ;;
1296 004312 000002      RTI                                ;; RESTORE PSW

```

IOS

MRINDEC - 11 - DZCDB-B  
DZCDB.P11 T11

MACY11 27(654) 1-JUL-77 08:39 PAGE 27  
TEST FOR AN INTERRUPT ON LEVEL 7

SEQ 0099

```

1297 004314 012637 000034      68$: MOV      (SP)+,34          ;;RESTORE OLD TRAP VECTOR
1298 004320 012662 000002      MOV      (SP)+,2(ADINT)
1299      ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
1300 004324 005046      CLR      -(SP)          ;;
1301 004326 013746 000034      MOV      34, -(SP)      ;;SAVE CURRENT TRAP VECTOR
1302 004332 012737 004342 000034      MOV      #69$,34        ;;SETUP NEW TRAP VECTOT
1303 004340 104400      TRAP                                ;;PUSH OLD PSW AN PCOM STACK
1304 004342 016666 000002 000006 69$: MOV      2(SP),6(SP)      ;;
1305 004350 012716 004356      MOV      #70$, (SP)      ;;REPLACE OLD PC WITH NEW
1306 004354 000002      RTI                                ;;RESTORE PSW
1307 004356 012637 000034      MOV      (SP)+,34        ;;RESTORE OLD TRAP VECTOR
1308 004362 012637 001214      MOV      (SP)+,$TMP6
1309 004366 042737 000340 001214      BIC      #340,$TMP6
1310 004374 013746 001214      MOV      $TMP6,-(SP)     ;;PUT NEW PS ON STACK
1311 004400 012746 004406      MOV      #71$,-(SP)     ;;PUT NEW PC ON STACK
1312 004404 000002      RTI                                ;;POP NEW PC AND PS
1313 004406      71$:
1314 004406 005046      CLR      -(SP)          ;;
1315 004410 013746 000034      MOV      34, -(SP)      ;;SAVE CURRENT TRAP VECTOR
1316 004414 012737 004424 000034      MOV      #72$,34        ;;SETUP NEW TRAP VECTOT
1317 004422 104400      TRAP                                ;;PUSH OLD PSW AN PCOM STACK
1318 004424 016666 000002 000006 72$: MOV      2(SP),6(SP)      ;;
1319 004432 012716 004440      MOV      #73$, (SP)      ;;REPLACE OLD PC WITH NEW
1320 004436 000002      RTI                                ;;RESTORE PSW
1321 004440 012637 000034      MOV      (SP)+,34        ;;RESTORE OLD TRAP VECTOR
1322 004444 012637 001214      MOV      (SP)+,$TMP6
1323 004450 052737 000300 001214      BIS      #300,$TMP6
1324 004456 013746 001214      MOV      $TMP6,-(SP)     ;;PUT NEW PS ON STACK
1325 004462 012746 004470      MOV      #74$,-(SP)     ;;PUT NEW PC ON STACK
1326 004466 000002      RTI                                ;;POP NEW PC AND PS
1327 004470      74$:
1328 004470 012714 177660      MOV      #-80, @CDC     ;SET UP COLUMN COUNT TO READ 80 COLUMNS
1329 004474 012715 045442      MOV      #8UFBEG,@CDA   ;SET UP BUS ADDRESS
1330 004500 012713 000101      MOV      #101,@CDS     ;SET INTERRUPT ENABLE AND READ
1331 004504 105713      1$: TSTB    @CDS          ;WAIT FOR CONTROLLER READY
1332 004506 100376      BPL     1$
1333      ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV 2(ADINT),PS"
1334 004510 016246 000002      MOV      2(ADINT),-(SP) ;;PUT NEW PS ON STACK
1335 004514 012746 004522      MOV      #75$,-(SP)     ;;PUT NEW PC ON STACK
1336 004520 000002      RTI                                ;;POP NEW PC AND PS
1337 004522      75$:
1338 004522 005013      CLR      @CDS           ;DISABLE INTERRUPTS
1339 004524 012712 000232      MOV      #232, @ADINT   ;CHANGE INTERRUPT RETURN ADDRESS
1340 004530 005037 000232      CLR      @#232         ;TO CAUSE A HALT IF AN INTERRUPT OCCURS
1341 004534 005737 001252      TST     INTFLG         ;TEST FOR A PREVIOUS INTERRUPT
1342 004540 001441      BEQ     TST12         ;BRANCH IF NONE
1343 004542 023727 001252 100007      CMP     INTFLG, #100007 ;CHECK PREVIOUS LEVEL
1344 004550 100435      BMI     TST12         ;BRANCH IF LOWER
1345 004552 104022      ERROR +22            ;INTERRUPT ALREADY OCCURRED AT LVL 7 OR HIGHER
1346 004554 000433      BR     TST12
1347 004556 105713      TINT11: TSTB    @CDS     ;MAKE SURE CONTROLLER READY IS SET
1348 004560 100401      BMI     1$           ;BRANCH IF SET
1349 004562 104023      ERROR +23            ;CONTROLLER READY WASN'T SET
1350 004564 005013      1$: CLR      @CDS     ;DISABLE FURTHER INTERRUPTS

```

```

1351 004566 012712 000232      MOV      #232,  ADINT  ;CHANGE INTERRUPT RETURN ADDRESS
1352 004572 005037 000232      CLR      #232      ;TO CAUSE A HALT IF AN INTERRUPT OCCURS
1353 004576 022826      CMP      (SP)+      ;RESTORE STACK POINTER
1354 004600 005737 001252      TST      INTFLC     ;CHECK FOR PREVIOUS FLAG
1355 004604 100412      BMI      SET7       ;BRANCH IF FLAG SET
1356 004606 012737 100007 001252      MOV      #100007 INTFLG ;SET FLAG AND LEVEL
1357 004614 104400 031741      TYPE,    MSG4       ;PRINT MESSAGE "THE INTERRUPT LEVEL WAS"
1358 004620 012746 000007      MOV      #7,-(SP)
1359 004624 104402      TYPOS
1360 004626 001      .BYTE   1
1361 004627 000      .BYTE   0
1362 004630 000405      BR       TST12
1363 004632 023727 001252 100007 SET7: CMP  INTFLG, #100007 ;CHECK PREVIOUS LEVEL
1364 004640 100001      BPL      TST12
1365 004642 104024      ERROR +24 ;INTERRUPT ALREADY OCCURRED AT A LOWER LEVEL
1366
;*****
;*TEST 12 TEST FOR AN INTERRUPT ON LEVEL 6
;*****
1367
1368
1369 004644 000004      TST12:  SCOPE
1370 004646 004737 025744      JSR      PC,  INIT   ;INITIALIZE
1371 004652 012712 005234      MOV      #TINT12,ADINT ;SETUP RETURN ADDRESS
1372
;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
1373 004656 005046      CLR      -(SP)      ;;
1374 004660 013746 000034      MOV      34,-(SP)   ;;SAVE CURRENT TRAP VECTOR
1375 004664 012737 004674 000034      MOV      #64$,34   ;;SETUP NEW TRAP VECTOT
1376 004672 104400      TRAP     ;;PUSH OLD PSW AN PCOM STACK
1377 004674 016666 000002 000006 64$:  MOV      2(SP),6(SP) ;;
1378 004702 012716 004710      MOV      #65$, (SP) ;;
1379 004706 000002      RTI     ;;RESTORE PSW
1380 004710 012637 000034 65$:  MOV      (SP)+,34   ;;RESTORE OLD TRAP VECTOT
1381 004714 012637 001214      MOV      (SP)+,$TMP6
1382 004720 052737 000340 001214      BIS      #340,$TMP6
1383 004726 013746 001214      MOV      $TMP6,-(SP) ;;PUT NEW PS ON STACK
1384 004732 012746 004740      MOV      #65$,-(SP) ;;PUT NEW PC ON STACK
1385 004736 000002      RTI     ;; POP NEW PC AND PS
1386 004740 66$:
1387
;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
1388 004740 005046      CLR      -(SP)      ;;
1389 004742 013746 000034      MOV      34,-(SP)   ;;SAVE CURRENT TRAP VECTOR
1390 004746 012737 004756 000034      MOV      #67$,34   ;;SETUP NEW TRAP VECTOT
1391 004754 104400      TRAP     ;;PUSH OLD PSW AN PCOM STACK
1392 004756 016666 000002 000006 67$:  MOV      2(SP),6(SP) ;;
1393 004764 012716 004772      MOV      #68$, (SP) ;;
1394 004770 000002      RTI     ;;RESTORE PSW
1395 004772 012637 000034 68$:  MOV      (SP)+,34   ;;RESTORE OLD TRAP VECTOR
1396 004776 012662 000002      MOV      (SP)+,2(ADINT)
1397
;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
1398 005002 005046      CLR      -(SP)      ;;
1399 005004 013746 000034      MOV      34,-(SP)   ;;SAVE CURRENT TRAP VECTOR
1400 005010 012737 005020 00J34      MOV      #69$,34   ;;SETUP NEW TRAP VECTOT
1401 005016 104400      TRAP     ;;PUSH OLD PSW AN PCOM STACK
1402 005020 016666 000002 000006 69$:  MOV      2(SP),6(SP) ;;
1403 005026 012716 005034      MOV      #70$, (SP) ;;
1404 005032 000002      RTI     ;;RESTORF PSW

```

```

1405 005034 012637 000034      70$:  MOV      (SP)+,34          ;;RESTORE OLD TRAP VECTOR
1406 005040 012637 001214      MOV      (SP)+,$TMP6
1407 005044 04273 000340 001214      BIC      #340,$TMP6
1408 005052 013746 001214      MOV      $TMP6,-(SP)      ;;PUT NEW PS ON STACK
1409 005056 012746 005064      MOV      #71$,-(SP)      ;;PUT NEW PC ON STACK
1410 005062 000002      RTI                          ;; POP NEW PC AND PS
1411 005064      71$:  CLR      -(SP)              ;;
1412 005064 005046      MOV      34,-(SP)          ;;SAVE CURRENT TRAP VECTOR
1413 005066 013746 000034      MOV      #72$,34          ;;SETUP NEW TRAP VECTOT
1414 005072 012737 005102 000034      TRAP                          ;;PUSH OLD FSW AN PCON STACK
1415 005100 104400      72$:  MOV      2(SP),6(SP)      ;;
1416 005102 016666 000002 000006      MOV      #73$, (SP)      ;;REPLACE OLD PC WITH NEW
1417 005110 012716 005116      RTI                          ;;RESTORE PSW
1418 005114 000002      73$:  MOV      (SP)+,34          ;;RESTORE OLD TRAP VECTOR
1419 005116 012637 000034      MOV      (SP)+,$TMP6
1420 005122 012637 001214      MOV      #240,$TMP6
1421 005126 052737 000240 001214      BIS      $TMP6,-(SP)      ;;PUT NEW PS ON STACK
1422 075134 013746 001214      MOV      #74$,-(SP)      ;;PUT NEW PC ON STACK
1423 005140 012746 005146      RTI                          ;; POP NEW PC AND PS
1424 005144 000002      74$:  MOV      #-80, @CDC        ;SET UP COLUMN COUNT TO READ 80 COLUMNS
1425 005146      MOV      #8UFBEG,@CDA      ;SET UP BUS ADDRESS
1426 005146 012714 177660      MOV      #101, @CDS        ;SET INTERRUPT ENABLE AND READ
1427 005152 012715 045442      TSTB     @CDS              ;WAIT FOR CONTROLLER READY
1428 005156 012713 000101      BPL      1$
1429 005162 105713      1$:  ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV 2(ADINT),PS"
1430 005164 100376      MOV      2(ADINT),-(SP)    ;;PUT NEW PS ON STACK
1431      MOV      #75$,-(SP)      ;;PUT NEW PC ON STACK
1432 005166 016246 000002      RTI                          ;; POP NEW PC AND PS
1433 005172 012746 005200      75$:  CLR      @CDS              ;DISABLE INTERRUPTS
1434 005176 000002      MOV      #232, @ADINT     ;CHANGE INTERRUPT RETURN ADDRESS
1435 005200      CLR      @#232           ;TO CAUSE A HALT IF AN INTERRUPT OCCURS
1436 005200 005013      TST     INTFLG           ;TEST FOR A PREVIOUS INTERRUPT
1437 005202 012712 000232      BEQ     TST13           ;BRANCH IF NONE
1438 005206 005037 000232      CMP     INTFLG, #100006 ;CHECK PREVIOUS LEVEL
1439 005212 005737 001252      BMI     TST13           ;BRANCH IF LOWER
1440 005216 001441      ERROR +22              ;INTERRUPT ALREADY OCCURRED AT LVL 6 OR HIGHER
1441 005220 023727 001252 100006      BR      TST13
1442 005226 100435      TINT12: TSTB @CDS        ;MAKE SURE CONTROLLER READY IS SET
1443 005230 104022      BMI     1$              ;BRANCH IF SET
1444 005232 000433      ERROR +23              ;CONTROLLER READY WASN'T SET
1445 005234 125713      1$:  CLR      @CDS              ;DISABLE FURTHER INTERRUPTS
1446 005236 100401      MOV      #232, @ADINT     ;CHANGE INTERRUPT RETURN ADDRESS
1447 005240 104023      CLR      @#232           ;TO CAUSE A HALT IF AN INTERRUPT OCCURS
1448 005242 005013      CMP     (SP)+, (SP)+      ;RESTORE STACK POINTER
1449 005244 012712 000232      TST     INTFLG           ;CHECK FOR PREVIOUS FLAG
1450 005250 005037 000232      BMI     SET6             ;BRANCH IF FLAG SET
1451 005254 022626      MOV     #100006,INTFLG    ;SET FLAG AND LEVEL
1452 005256 005737 001252      TYPE,   MSG4             ;PRINT MESSAGE "THE INTERRUPT LEVEL WAS"
1453 005262 100412      MOV     #6,-(SP)
1454 005264 012737 100006 001252      TYPOS
1455 005272 104400 031711      .BYTE  1
1456 005276 012746 000006
1457 005302 104402
1458 005304 001

```

```

1459 005305 000 .BYTE 0
1460 005306 000405 BR TST13
1461 005310 023727 001252 100006 SET6: CMP INTFLG, #100006 ;CHECK PREVIOUS LEVEL
1462 005316 100001 BPL TST13
1463 005320 104024 ERROR +24 ;INTERRUPT ALREADY OCCURRED AT A LOWER LEVEL
1464 ;*****
1465 ;*TEST 13 TEST FOR AN INTERRUPT ON LEVEL 5
1466 ;*******
1467 005322 000004 (TST13: SCOPE
1468 005324 004737 025744 JSR PC INIT ;INITIALIZE
1469 005330 012712 005712 MOV #TINT13,ADINT ;SETUP RETURN ADDRESS
;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
1470 CLR -(SP) ;;
1471 005334 005046 000034 MOV 34, -(SP) ;;SAVE CURRENT TRAP VECTOR
1472 005336 013746 000034 MOV #64$,34 ;;SETUP NEW TRAP VECTOT
1473 005342 012737 005352 000034 TRAP ;;PUSH OLD PSW AN PCON STACK
1474 005350 104400
1475 005352 016666 000002 000006 64$: MOV 2(SP),6(SP) ;;
1476 005360 012716 005366 MOV #65$, (SP) ;;
;;REPLACE OLD PC WITH NEW
1477 005364 000002 RTI ;;RESTORE PSW
1478 005366 012637 000034 65$: MOV (SP)+,34 ;;RESTORE OLD TRAP VECTOR
1479 005372 012637 001214 MOV (SP)+,$TMP6
1480 005376 052737 000340 001214 BIS #340,$TMP6
1481 005404 013746 001214 MOV $TMP6, -(SP) ;;PUT NEW PS ON STACK
1482 005410 012746 005416 MOV #66$, -(SP) ;;PUT NEW PC ON STACK
1483 005414 000002 RTI ;;POP NEW PC AND PS
1484 005416 66$:
;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
1485 CLR -(SP) ;;
1486 005416 005046 000034 MOV 34, -(SP) ;;SAVE CURRENT TRAP VECTOR
1487 005420 013746 000034 MOV #67$,34 ;;SETUP NEW TRAP VECTOT
1488 005424 012737 005434 000034 TRAP ;;PUSH OLD PSW AN PCON STACK
1489 005432 104400
1490 005434 016666 000002 000006 67$: MOV 2(SP),6(SP) ;;
1491 005442 012716 005450 MOV #68$, (SP) ;;
;;REPLACE OLD PC WITH NEW
1492 005446 000002 RTI ;;RESTORE PSW
1493 005450 012637 000034 68$: MOV (SP)+,34 ;;RESTORE OLD TRAP VECTOR
1494 005454 012662 000002 MOV (SP)+,2(ADINT)
;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
1495 CLR -(SP) ;;
1496 005460 005046 000034 MOV 34, -(SP) ;;SAVE CURRENT TRAP VECTOR
1497 005462 013746 000034 MOV #69$,34 ;;SETUP NEW TRAP VECTOT
1498 005466 012737 005476 000034 TRAP ;;PUSH OLD PSW AN PCON STACK
1499 005474 104400
1500 005476 016666 000002 000006 69$: MOV 2(SP),6(SP) ;;
1501 005504 012716 005512 MOV #70$, (SP) ;;
;;REPLACE OLD PC WITH NEW
1502 005510 000002 RTI ;;RESTORE PSW
1503 005512 012637 000034 70$: MOV (SP)+,34 ;;RESTORE OLD TRAP VECTOR
1504 005516 012637 001214 MOV (SP)+,$TMP6
1505 005522 042737 000340 001214 BIC #340,$TMP6
1506 005530 013746 001214 MOV $TMP6, -(SP) ;;PUT NEW PS ON STACK
1507 005534 012746 005542 MOV #71$, -(SP) ;;PUT NEW PC ON STACK
1508 005540 000002 RTI ;;POP NEW PC AND PS
1509 005542 71$:
1510 005542 005046 CLR -(SP) ;;
1511 005544 013746 000034 MOV 34, -(SP) ;;SAVE CURRENT TRAP VECTOR
1512 005550 012737 005560 000034 MOV #72$,34 ;;SETUP NEW TRAP VECTOT

```

```

1513 005556 104400 TRAP ;: PUSH OLD PSW AN PCOM STACK
1514 005560 016666 000002 000006 72$: MOV 2(SP),5(SP) ;:
1515 005566 012716 005574 MOV #73$, (SP) ;:
1516 005572 000002 RTI ;: RESTORE PSW
1517 005574 012637 000034 73$: MOV (SP)+,34 ;: RESTORE OLD TRAP VECTOR
1518 005600 012637 001214 MOV (SP)+,$TMP6
1519 005604 052737 000200 001214 BIS #200,$TMP6
1520 005612 013746 001214 MOV $TMP6,-(SP) ;: PUT NEW PS ON STACK
1521 005616 012746 005624 MOV #174$,-(SP) ;: PUT NEW PC ON STACK
1522 005622 000002 RTI ;: POP NEW PC AND PS
1523 005624 74$:
1524 005624 012714 177660 MOV #-80,$CDC ;: SET UP COLUMN COUNT TO READ 80 COLUMNS
1525 005630 012715 045442 MOV #BUFBEQ,$CDA ;: SET UP BUS ADDRESS
1526 005634 012713 000101 MOV #101,$CDS ;: SET INTERRUPT ENABLE AND READ
1527 0056 0 105713 1$: TSTB $CDS ;: WAIT FOR CONTROLLER READY
1528 005642 100376 BPL 1$
1529 ; THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV 2(ADINT),PS"
1530 005644 016246 000002 MOV 2(ADINT),-(SP) ;: PUT NEW PS ON STACK
1531 005650 012746 005656 MOV #75$,-(SP) ;: PUT NEW PC ON STACK
1532 005654 000002 RTI ;: POP NEW PC AND PS
1533 005656 75$:
1534 005656 005013 CLR $CDS ;: DISABLE INTERRUPTS
1535 005660 012712 000232 MOV #232,$ADINT ;: CHANGE INTERRUPT RETURN ADDRESS
1536 005664 005037 000232 CLR #232 ;: TO CAUSE A HALT IF AN INTERRUPT OCCURS
1537 005670 005737 001252 TST INTFLG ;: TEST FOR A PREVIOUS INTERRUPT
1538 005674 001441 BEQ TST14 ;: BRANCH IF NONE
1539 005676 023727 001252 100005 CMP INTFLG,#100005 ;: CHECK PREVIOUS LEVEL
1540 005704 100435 BMI TST14 ;: BRANCH IF LOWER
1541 005706 104022 ERROR +22 ; INTERRUPT ALREADY OCCURRED AT LVL 5 OR HIGHER
1542 005710 000433 BR TST14
1543 005712 105713 TINT13: TSTB $CDS ; MAKE SURE CONTROLLER READY IS SET
1544 005714 100401 BMI 1$ ; BRANCH IF SET
1545 005716 104023 ERROR +23 ; CONTROLLER READY WASN'T SET
1546 005720 005013 1$: CLR $CDS ; DISABLE FURTHER INTERRUPTS
1547 005722 012712 000232 MOV #232,$ADINT ; CHANGE INTERRUPT RETURN ADDRESS
1548 005726 005037 000232 CLR #232 ; TO CAUSE A HALT IF AN INTERRUPT OCCURS
1549 005732 022626 CMP (SP)+,(SP)+ ; RESTORE STACK POINTER
1550 005734 005737 001252 TST INTFLG ; CHECK FOR PREVIOUS FLAG
1551 005740 100412 BMI SET5 ; BRANCH IF FLAG SET
1552 005742 012737 100005 001252 MOV #100005,INTFLG ; SET FLAG AND LEVEL
1553 005750 104400 031741 TYPE,MSG4 ; PRINT MESSAGE "THE INTERRUPT LEVEL WAS"
1554 005754 012746 000005 MOV #5,-(SP)
1555 005760 104402 TYPOS
1556 005762 001 .BYTE 1
1557 005763 000 .BYTE 0
1558 005764 000405 BR TST14
1559 005766 023727 001252 100005 SET5: CMP INTFLG,#100005 ; CHECK PREVIOUS LEVEL
1560 005774 100001 BPL TST14
1561 005776 104024 ERROR +24 ; INTERRUPT ALREADY OCCURRED AT A LOWER LEVEL
1562 ;*****
1563 ;*TEST 14 TEST FOR AN INTERRUPT ON LEVEL 4
1564 ;*****
1565 006000 000004 TST14: SCOPE
1566 006002 004737 025744 JSP PC, INIT ; INITIALIZE

```

```

1567 006006 012712 006370      MOV      #TINT14,ADINT      ;SETUP RETURN ADDRESS
1568 006006 012712 006370      ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
1569 006012 005046              CLR      -(SP)              ;;
1570 006014 013746 000034      MOV      34,-(SP)           ;;SAVE CURRENT TRAP VECTOR
1571 006020 012737 006030 000034  MOV      #64$,34           ;;SETUP NEW TRAP VECTOT
1572 006026 104400              TRAP                          ;;PUSH OLD PSW AN PCON STACK
1573 006030 016666 000002 000006 64$:  MOV      2(SP),6(SF)        ;;
1574 006036 012716 006044      MOV      #65$, (SP)         ;;
1575 006042 000002              RTI                          ;;RESTORE PSW
1576 006044 012637 000034 65$:  MOV      (SP)+,34           ;;RESTORE OLD TRAP VECTOR
1577 006050 012637 001214      MOV      (SP)+,$TMP6
1578 006054 052737 000340 001214  BIS      #340,$TMP6
1579 006062 013746 001214      MOV      $TMP6,-(SP)        ;;PUT NEW PS ON STACK
1580 006066 012746 006074      MOV      #66$,-(SP)         ;;PUT NEW PC ON STACK
1581 006072 000002              RTI                          ;;POP NEW PC AND PS
1582 006074              66$:
1583              ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
1584 006074 005046              CLR      -(SP)              ;;
1585 006076 013746 000034      MOV      34,-(SP)           ;;SAVE CURRENT TRAP VECTOR
1586 006102 012737 006112 000034  MOV      #67$,34           ;;SETUP NEW TRAP VECTOT
1587 006110 104400              TRAP                          ;;PUSH OLD PSW AN PCON STACK
1588 006112 016666 000002 000006 67$:  MOV      2(SP),6(SF)        ;;
1589 006120 012716 006126      MOV      #68$, (SP)         ;;
1590 006124 000002              RTI                          ;;RESTORE PSW
1591 006126 012637 000034 68$:  MOV      (SP)+,34           ;;RESTORE OLD TRAP VECTOR
1592 006132 012662 000002      MOV      (SP)+,2(ADINT)
1593              ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
1594 006136 005046              CLR      -(SP)              ;;
1595 006140 013746 000034      MOV      34,-(SP)           ;;SAVE CURRENT TRAP VECTOR
1596 006144 012737 006154 000034  MOV      #69$,34           ;;SETUP NEW TRAP VECTOT
1597 006152 104400              TRAP                          ;;PUSH OLD PSW AN PCON STACK
1598 006154 016666 000002 000006 69$:  MOV      2(SP),6(SF)        ;;
1599 006162 012716 006170      MOV      #70$, (SP)         ;;
1600 006166 000002              RTI                          ;;RESTORE PSW
1601 006170 012637 000034 70$:  MOV      (SP)+,34           ;;RESTORE OLD TRAP VECTOR
1602 006174 012637 001214      MOV      (SP)+,$TMP6
1603 006200 042737 000340 001214  BIC      #340,$TMP6
1604 006206 013746 001214      MOV      $TMP6,-(SP)        ;;PUT NEW PS ON STACK
1605 006212 012746 006220      MOV      #71$,-(SP)         ;;PUT NEW PC ON STACK
1606 006216 000002              RTI                          ;;POP NEW PC AND PS
1607 006220              71$:
1608 006220 005046              CLR      -(SP)              ;;
1609 006222 013746 000034      MOV      34,-(SP)           ;;SAVE CURRENT TRAP VECTOR
1610 006226 012737 006236 000034  MOV      #72$,34           ;;SETUP NEW TRAP VECTOT
1611 006234 104400              TRAP                          ;;PUSH OLD PSW AN PCON STACK
1612 006236 016666 000002 000006 72$:  MOV      2(SP),6(SF)        ;;
1613 006244 012716 006252      MOV      #73$, (SP)         ;;
1614 006250 000002              RTI                          ;;RESTORE PSW
1615 006252 012637 000034 73$:  MOV      (SP)+,34           ;;RESTORE OLD TRAP VECTOR
1616 006256 012637 001214      MOV      (SP)+,$TMP6
1617 006262 052737 000140 001214  BIS      #140,$TMP6
1618 006270 013746 001214      MOV      $TMP6,-(SP)        ;;PUT NEW PS ON STACK
1619 006274 012746 006302      MOV      #74$,-(SP)         ;;PUT NEW PC ON STACK
1620 006300 000002              RTI                          ;;POP NEW PC AND PS

```



```

1621 006302          74$: MOV      #80,  @CDC      ;SET UP COLUMN COUNT TO READ 80 COLUMNS
1622 006302 012714 177660 MOV      @BUFREG, @CDA    ;SET UP BUS ADDRESS
1623 006306 012715 045442 MOV      #101,  @CDS     ;SET INTERRUPT ENABLE AND READ
1624 006312 012713 000101 1$: TSTB   @CDS          ;WAIT FOR CONTROLLER READY
1625 006316 105713          BPL      1$
1626 006320 100376          ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV 2(ADINT),PS"
1627          ;
1628 006322 016246 000002 MOV      2(ADINT)-(SP)  ;;PUT NEW PS ON STACK
1629 006326 012746 006334 MOV      #75$, -(SP)   ;;PUT NEW PC ON STACK
1630 006332 000002          RTI                    ;;POP NEW PC AND PS
1631 006334          75$: CLR      @CDS          ;DISABLE INTERRUPTS
1632 006334 005013          MOV      @232, @ADINT  ;CHANGE INTERRUPT RETURN ADDRESS
1633 006336 012712 000232 CLR      @232          ;TO CAUSE A HALT IF AN INTERRUPT OCCURS
1634 006342 005037 000232 TST      INTFLG       ;TEST FOR A PREVIOUS INTERRUPT
1635 006346 105737 001252 BEQ      TST15        ;BRANCH IF NONE
1636 006352 001433          CMP      INTFLG, #100004 ;CHECK PREVIOUS LEVEL
1637 006354 023727 001252 100004 BMI      TST15        ;BRANCH IF LOWER
1638 006358 100427          ERROR +22          ;INTERRUPT ALREADY OCCURRED AT LVL 4 OR HIGHER
1639 006364 104022          BR      TST15
1640 006366 000425          TINT14: TSTB   @CDS          ;MAKE SURE CONTROLLER READY IS SET
1641 006370 105713          BMI      1$          ;BRANCH IF SET
1642 006372 100401          ERROR +23          ;CONTROLLER READY WASN'T SET
1643 006374 104023          1$: CLR      @CDS          ;DISABLE FURTHER INTERRUPTS
1644 006376 005013          MOV      @232, @ADINT  ;CHANGE INTERRUPT RETURN ADDRESS
1645 006400 012712 000232 CLR      @232          ;TO CAUSE A HALT IF AN INTERRUPT OCCURS
1646 006404 005037 000232 CMP      (SP)+, (SP)+  ;RESTORE STACK POINTER
1647 006410 022626 001252 TST      INTFLG       ;CHECK FOR PREVIOUS FLAG
1648 006412 005737          BMI      SET4        ;BRANCH IF FLAG SET
1649 006416 100404          MOV      #100004, INTFLG ;SET FLAG AND LEVEL
1650 006420 012737 100004 001252 BR      TST15
1651 006426 000405          SET4: CMP     INTFLG, #100004 ;CHECK PREVIOUS LEVEL
1652 006430 023727 001252 100004 BPL      TST15
1653 006436 100001          ERROR +24          ;INTERRUPT ALREADY OCCURRED AT A LOWER LEVEL
1654 006440 104024          ;*****
1655          ;*TEST 15 TEST FOR AN INTERRUPT ON LEVEL 3
1656          ;*****
1657          †TST15: SCOPE
1658 006442 000004          JSR      PC, INIT     ;INITIALIZE
1659 006444 004737 025744 MOV      #TINT15, @ADINT ;SETUP RETURN ADDRESS
1660 006450 012712 007032          ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
1661          ;
1662 006454 005046          CLR      -(SP)       ;;
1663 006456 013746 000034 MOV      34, -(SP)    ;;SAVE CURRENT TRAP VECTOR
1664 006462 012737 006472 000034 MOV      #64$, 34     ;;SETUP NEW TRAP VECTOR
1665 006470 104400          TRAP          ;;PUSH OLD PSW AN PC ON STACK
1666 006472 016666 000002 000006 64$: MOV      2(SP), 6(SP)  ;;
1667 006500 012716 006506          MOV      #65$, (SP)  ;;REPLACE OLD PC WITH NEW
1668 006504 000002          RTI                    ;;RESTORE PSW
1669 006506 012637 000034 65$: MOV      (SP)+, 34     ;;RESTORE OLD TRAP VECTOR
1670 006512 012637 001214          MOV      (SP)+, $TMP6
1671 006516 052737 000340 001214 BIS      #340, $TMP6
1672 006524 013746 001214          MOV      $TMP6, -(SP) ;;PUT NEW PS ON STACK
1673 006530 012746 006536          MOV      #66$, -(SP) ;;PUT NEW PC ON STACK
1674 006534 000002          RTI                    ;;POP NEW PC AND PS

```

```

1675 006536          66$:
1576          : THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
1677 006536 005046 CLR      -(SP)          ;;
1678 006540 013746 000034 MOV      34, -(SP)      ;; SAVE CURRENT TRAP VECTOR
1679 006544 012737 006554 000034 MOV      #67$, 34      ;; SETUP NEW TRAP VECTOT
1680 006552 104400 TRAP          ;; PUSH OLD PSW AN PCOM STACK
1681 006554 016666 000002 000006 67$: MOV      2(SP), 6(SP)  ;;
1682 006562 012716 006570 MOV      #68$, (SP)   ;;
1683 006566 000002          ;; REPLACE OLD PC WITH NEW
1684 006570 012637 000034 68$: MOV      (SP)+, 34      ;; RESTORE PSW
1685 006574 012662 000002 MOV      (SP)+, 2(ADINT) ;; RESTORE OLD TRAP VECTOR
1686          : THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
1687 006600 005046 CLR      -(SP)          ;;
1688 006602 013746 000034 MOV      34, -(SP)      ;; SAVE CURRENT TRAP VECTOR
1689 006606 012737 006616 000034 MOV      #69$, 34      ;; SETUP NEW TRAP VECTOT
1690 006614 104400 TRAP          ;; PUSH OLD PSW AN PCOM STACK
1691 006616 016666 000002 000006 69$: MOV      2(SP), 6(SP)  ;;
1692 006624 012716 006632 MOV      #70$, (SP)   ;;
1693 006630 000002          ;; REPLACE OLD PC WITH NEW
1694 006632 012637 000034 70$: MOV      (SP)+, 34      ;; RESTORE PSW
1695 006636 012637 001214 MOV      (SP)+, $TMP6  ;; RESTORE OLD TRAP VECTOR
1696 006642 042737 000340 001214 BIC      #340, $TMP6
1697 006650 013746 001214 MOV      $TMP6, -(SP)  ;; PUT NEW PS ON STACK
1698 006654 012746 006662 MOV      #71$, -(SP)  ;; PUT NEW PC ON STACK
1699 006660 000002 RTI          ;; POP NEW PC AND PS
1700 006662          71$:
1701 006662 005046 CLR      -(SP)          ;;
1702 006664 013746 000034 MOV      34, -(SP)      ;; SAVE CURRENT TRAP VECTOR
1703 006670 012737 006700 000034 MOV      #72$, 34      ;; SETUP NEW TRAP VECTOT
1704 006676 104400 TRAP          ;; PUSH OLD PSW AN PCOM STACK
1705 006700 016666 000002 000006 72$: MOV      2(SP), 6(SP)  ;;
1706 006706 012716 006714 MOV      #73$, (SP)   ;;
1707 006712 000002          ;; REPLACE OLD PC WITH NEW
1708 006714 012637 000034 73$: MOV      (SP)+, 34      ;; RESTORE PSW
1709 006720 012637 001214 MOV      (SP)+, $TMP6  ;; RESTORE OLD TRAP VECTOR
1710 006724 052737 000100 001214 BIS      #100, $TMP6
1711 006732 013746 001214 MOV      $TMP6, -(SP)  ;; PUT NEW PS ON STACK
1712 006736 012746 006744 MOV      #74$, -(SP)  ;; PUT NEW PC ON STACK
1713 006742 000002 RTI          ;; POP NEW PC AND PS
1714 006744          74$:
1715 006744 012714 177660 MOV      #-80, @CDC    ;; SET UP COLUMN COUNT TO READ 80 COLUMNS
1716 006750 012715 045442 MOV      #BUFBEG, @CDA ;; SET UP BUS ADDRESS
1717 006754 012713 000101 MOV      #101, @CDS   ;; SET INTERRUPT ENABLE AND READ
1718 006760 105713 1$: TSTB    @CDS    ;; WAIT FOR CONTROLLER READY
1719 006762 100376 BPL      1$
1720          : THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV 2(ADINT),PS"
1721 006764 016246 000002 MOV      2(ADINT), -(SP) ;; PUT NEW PS ON STACK
1722 006770 012746 006776 MOV      #75$, -(SP)   ;; PUT NEW PC ON STACK
1723 006774 000002 RTI          ;; POP NEW PC AND PS
1724 006776          75$:
1725 006776 005013 CLR      @CDS          ;; DISABLE INTERRUPTS
1726 007000 012712 000232 MOV      #232, @ADINT  ;; CHANGE INTERRUPT RETURN ADDRESS
1727 007004 005037 000232 CLR      @#232        ;; TO CAUSE A HALT IF AN INTERRUPT OCCURS
1728 007010 005737 001252 TST      INTFLG       ;; TEST FOR A PREVIOUS INTERRUPT
    
```

```

1729 007014 001441 BEQ TST16 ;BRANCH IF NONE
1730 007016 023727 001252 100003 CMP INTFLG, #100003 ;CHECK PREVIOUS LEVEL
1731 007024 100435 BMI TST16 ;BRANCH IF LOWER
1732 007026 104022 ERROR +22 ;INTERRUPT ALREADY OCCURRED AT LVL 3 OR HIGHER
1733 007030 000433 BR TST16
1734 007032 105713 TINT15: TSTB QCD5 ;MAKE SURE CONTROLLER READY IS SET
1735 007034 100401 BMI 15 ;BRANCH IF SET
1736 007036 104023 ERROR +23 ;CONTROLLER READY WASN'T SET
1737 007040 005013 15: CLR QCD5 ;DISABLE FURTHER INTERRUPTS
1738 007042 012712 000232 MOV #232, ADINT ;CHANGE INTERRUPT RETURN ADDRESS
1739 007046 005037 000232 CLR Q#232 ;TO CAUSE A HALT IF AN INTERRUPT OCCURS
1740 007050 022626 CMP (SP)+, (SP)+ ;RESTORE STACK POINTER
1741 007054 005737 001252 TST INTFLG ;CHECK FOR PREVIOUS FLAG
1742 007060 100412 BMI SET3 ;BRANCH IF FLAG SET
1743 007062 012737 100003 001252 MOV #100003, INTFLG ;SET FLAG AND LEVEL
1744 007070 104400 031741 TYPE, MSG4 ;PRINT MESSAGE "THE INTERRUPT LEVEL WAS"
1745 007074 012746 000003 MOV #3, -(SP)
1746 007100 104402 TYPOS
1747 007102 001 .BYTE 1
1748 007103 000 .BYTE 0
1749 007104 000405 BR TST16
1750 007106 023727 001252 100003 SET3: CMP INTFLG, #100003 ;CHECK PREVIOUS LEVEL
1751 007114 100001 BPL TST16
1752 007116 104024 ERROR +24 ;INTERRUPT ALREADY OCCURRED AT A LOWER LEVEL
1753 *****
1754 ;*TEST 16 TEST FOR AN INTERRUPT ON LEVEL 2
1755 *****
1756 007120 000004 TST16: SCOPE
1757 007122 004737 025744 JSR PC, INIT ;INITIALIZE
1758 007126 012712 007510 MOV #TINT16, ADINT ;SETUP RETURN ADDRESS
1759 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340, PS"
1760 007132 005046 CLR -(SP) ;;
1761 007134 013746 000034 MOV 34, -(SP) ;;SAVE CURRENT TRAP VECTOR
1762 007140 012737 007150 000034 MOV #64$, 34 ;;SETUP NEW TRAP VECTOT
1763 007146 104400 TRAP ;;PUSH OLD PSW AN PCON STACK
1764 007150 016666 000002 000006 64$: MOV 2(SP), 6(SP) ;;
1765 007156 012716 007164 MOV #65$, (SP) ;;REPLACE OLD PC WITH NEW
1766 007162 000002 RTI ;;RESTORE PSW
1767 007164 012637 000034 65$: MOV (SP)+, 34 ;;RESTORE OLD TRAP VECTOR
1768 007170 012637 001214 MOV (SP)+, $TMP6
1769 007174 052737 000340 001214 BIS #340, $TMP6
1770 007202 013746 001214 MOV $TMP6, -(SP) ;;PUT NEW PS ON STACK
1771 007206 012746 007214 MOV #66$, -(SP) ;;PUT NEW PC ON STACK
1772 007212 000002 RTI ;;POP NEW PC AND PS
1773 007214 66$:
1774 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS, 2(ADINT)"
1775 007214 005046 CLR -(SP) ;;
1776 007216 013746 000034 MOV 34, -(SP) ;;SAVE CURRENT TRAP VECTOR
1777 007222 012737 007232 000034 MOV #67$, 34 ;;SETUP NEW TRAP VECTOT
1778 007230 104400 TRAP ;;PUSH OLD PSW AN PCON STACK
1779 007232 016666 000002 000006 67$: MOV 2(SP), 6(SP) ;;
1780 007240 012716 007246 MOV #68$, (SP) ;;REPLACE OLD PC WITH NEW
1781 007244 000002 RTI ;;RESTORE PSW
1782 007246 012637 000034 68$: MOV (SP)+, 34 ;;RESTORE OLD TRAP VECTOR

```

```

1783 007252 012662 000002      MOV      (SP)+,2(ADINT)
1784                                ; THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
1785 007256 005046      CLR      -(SP)
1786 007260 013746 000034      MOV      34,-(SP)
1787 007264 012737 007274 000034      MOV      #69$,34
1788 007272 010440      TRAP
1789 007274 016666 000002 000006 69$:  MOV      2(SP),6(SP)
1790 007302 012716 007310      MOV      #70$, (SP)
1791 007306 000002      RTI
1792 007310 012637 000034 70$:  MOV      (SP)+,34
1793 007314 012637 001214      MOV      (SP)+,$TMP6
1794 007320 042737 000340 001214      BIC      #340,$TMP6
1795 007326 013746 001214      MOV      $TMP6,-(SP)
1796 007332 012746 007340      MOV      #71$,-(SP)
1797 007336 000002      RTI
1798 007340 71$:
1799 007340 005046      CLR      -(SP)
1800 007342 013746 000034      MOV      34,-(SP)
1801 007346 012737 007356 000034      MOV      #72$,34
1802 007354 010440      TRAP
1803 007356 016666 000002 000006 72$:  MOV      2(SP),6(SP)
1804 007364 012716 007372      MOV      #73$, (SP)
1805 007370 000002      RTI
1806 007372 012637 000034 73$:  MOV      (SP)+,34
1807 007376 012637 001214      MOV      (SP)+,$TMP6
1808 007402 052737 000040 001214      BIS      #040,$TMP6
1809 007410 013746 001214      MOV      $TMP6,-(SP)
1810 007414 012746 007422      MOV      #74$,-(SP)
1811 007420 000002      RTI
1812 007422 74$:
1813 007422 012714 177660      MOV      #-80, @CDC
1814 007426 012715 045442      MOV      #BUFBE$,@CDA
1815 007432 012713 000101      MOV      #101, @CDS
1816 007436 105713 1$:  TSTB   @CDS
1817 007440 100376      BPL     1$
1818                                ; THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV 2(ADINT),PS"
1819 007442 016246 000002      MOV      2(ADINT),-(SP)
1820 007446 012746 007454      MOV      #75$,-(SP)
1821 007452 000002      RTI
1822 007454 75$:
1823 007454 005013      CLR      @CDS
1824 007456 012712 000232      MOV      #232, @ADINT
1825 007462 005037 000232      CLR      @#232
1826 007466 005737 001252      TST     INTFLG
1827 007472 001441      BEQ     TST17
1828 007474 023727 001252 100002      CMP     INTFLG, #100002
1829 007502 100435      BMI     TST17
1830 007504 104022      ERROR +22
1831 007506 000433      BR     TST17
1832 007510 105713  TINT16: TSTB   @CDS
1833 007512 100401      BMI     1$
1834 007514 104023      ERROR +23
1835 007516 005013 1$:  CLR     @CDS
1836 007520 012712 000232      MOV      #232, @ADINT

```

```

; SAVE CURRENT TRAP VECTOR
; SETUP NEW TRAP VECTOR
; PUSH OLD PSW AN PCUN STACK
;
; REPLACE OLD PC WITH NEW
; RESTORE PSW
; RESTORE OLD TRAP VECTOR
; PUT NEW PS ON STACK
; PUT NEW PC ON STACK
; POP NEW PC AND PS
;
; SAVE CURRENT TRAP VECTOR
; SETUP NEW TRAP VECTOR
; PUSH OLD PSW AN PCUN STACK
;
; REPLACE OLD PC WITH NEW
; RESTORE PSW
; RESTORE OLD TRAP VECTOR
; PUT NEW PS ON STACK
; PUT NEW PC ON STACK
; POP NEW PC AND PS
; SET UP COLUMN COUNT TO READ 80 COLUMNS
; SET UP BUS ADDRESS
; SET INTERRUPT ENABLE AND READ
; WAIT FOR CONTROLLER READY
1$
; PUT NEW PS ON STACK
; PUT NEW PC ON STACK
; POP NEW PC AND PS
; DISABLE INTERRUPTS
; CHANGE INTERRUPT RETURN ADDRESS
; TO CAUSE A HALT IF AN INTERRUPT OCCURS
; TEST FOR A PREVIOUS INTERRUPT
; BRANCH IF NONE
; CHECK PREVIOUS LEVEL
; BRANCH IF LOWER
; INTERRUPT ALREADY OCCURRED AT LVL 2 OR HIGHER
; MAKE SURE CONTROLLER READY IS SET
; BRANCH IF SET
; CONTROLLER READY WASN'T SET
; DISABLE FURTHER INTERRUPTS
; CHANGE INTERRUPT RETURN ADDRESS

```

```

1837 007524 005037 000232 CLR      @#232      ;TO CAUSE A HALT IF AN INTERRUPT OCCURS
1838 007530 022626      CMP      (SP)+    (SP)+ ;RESTORE STACK POINTER
1839 007532 005737 001252 TST      INTFLG    ;CHECK FOR PREVIOUS FLAG
1840 007536 100412      BMI      SET2     ;BRANCH IF FLAG SET
1841 007540 012737 1000J2 001252 MOV      #100002,INTFLG ;SET FLAG AND LEVEL
1842 007546 104400 031741 TYPE,    MSG4      ;PRINT MESSAGE "THE INTERRUPT LEVEL WAS"
1843 007552 012746 000002 MOV      #2,-(SP)
1844 007556 104402      TYPOS
1845 007560 001      .BYTE    1
1846 007561 000      .BYTE    0
1847 007562 000405      BR      TST17
1848 007564 023727 001252 100002 SET2: CMP   INTFLG, #100002 ;CHECK PREVIOUS LEVEL
1849 007572 100001      BPL     TST17
1850 007574 104024      ERROR +24 ;INTERRUPT ALREADY OCCURRED AT A LOWER LEVEL
1851
1852 ;*****
1853 ;*TEST 17 TEST FOR AN INTERRUPT ON LEVEL 1
1854 ;*****
1854 007576 000004      TST17: SCOPE
1855 007600 004737 025744 JSR      PC, INIT ;INITIALIZE
1856 007604 012712 010150 MOV      #TINT17,@ADINT ;SETUP RETURN ADDRESS
1857 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
1858 007610 005046      CLR      -(SP)
1859 007612 013746 000034 MOV      34,-(SP) ;SAVE CURRENT TRAP VECTOR
1860 007616 012737 007626 000034 MOV      #64$,34 ;SETUP NEW TRAP VECTOR
1861 007624 104400      TRAP
1862 007626 016666 000002 000006 64$: MOV     2(SP),6(SP) ;PUSH OLD PSW AND PCON STACK
1863 007634 012716 007642      MOV     #65$, (SP)
1864 007640 000002      RTI
1865 007642 012637 000034 65$: MOV     (SP)+,34 ;REPLACE OLD PC WITH NEW
1866 007646 012637 001214      MOV     (SP)+,$TMP6 ;RESTORE PSW
1867 007652 052737 000340 001214 BIS      #340,$TMP6 ;RESTORE OLD TRAP VECTOR
1868 007660 013746 001214      MOV     $TMP6,-(SP) ;PUT NEW PS ON STACK
1869 007664 012746 007672      MOV     #66$,-(SP) ;PUT NEW PC ON STACK
1870 007670 000002      RTI ;POP NEW PC AND PS
1871 007672      66$:
1872 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
1873 007672 005046      CLR      -(SP)
1874 007674 013746 000034 MOV      34,-(SP) ;SAVE CURRENT TRAP VECTOR
1875 007700 012737 007710 000034 MOV      #67$,34 ;SETUP NEW TRAP VECTOR
1876 007706 104400      TRAP ;PUSH OLD PSW AND PCON STACK
1877 007710 016666 000002 000006 67$: MOV     2(SP),6(SP)
1878 007716 012716 007724      MOV     #68$, (SP)
1879 007722 000002      RTI ;REPLACE OLD PC WITH NEW
1880 007724 012637 000034 68$: MOV     (SP)+,34 ;RESTORE PSW
1881 007730 012662 000002      MOV     (SP)+,2(ADINT) ;RESTORE OLD TRAP VECTOR
1882 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
1883 007734 005046      CLR      -(SP)
1884 007736 013746 000034 MOV      34,-(SP) ;SAVE CURRENT TRAP VECTOR
1885 007742 012737 007752 000034 MOV      #69$,34 ;SETUP NEW TRAP VECTOR
1886 007750 104400      TRAP ;PUSH OLD PSW AND PCON STACK
1887 007752 016666 0J0002 000006 69$: MOV     2(SP),6(SP)
1888 007760 012716 007766      MOV     #70$, (SP)
1889 007764 000002      RTI ;REPLACE OLD PC WITH NEW
1890 007766 012637 000034 70$: MOV     (SP)+,34 ;RESTORE PSW
;RESTORE OLD TRAP VECTOR

```

```

1891 007772 012637 001214      MOV      (SP)+,$TMP6
1892 007776 042737 000340 001214      BIC      #340,$TMP6
1893 010004 013746 001214      MOV      $TMP6,-(SP)      ;; PUT NEW PS ON STACK
1894 010010 012746 010016      MOV      #71$,-(SP)      ;; PUT NEW PC ON STACK
1895 010014 000002      RTI      ;; POP NEW PC AND PS
1896 010016      71$:
1897 010016 005046      CLR      -(SP)      ;;
1898 010020 013746 000034      MOV      34,-(SP)      ;; SAVE CURRENT TRAP VECTOR
1899 010024 012737 010034 000034      MOV      #72$,34      ;; SETUP NEW TRAP VECTOT
1900 010032 104400      TRAP     ;; PUSH OLD PSW AN PCON STACK
1901 010034 016666 000002 000006 72$:      MOV      2(SP),6(SP)      ;;
1902 010042 012716 010050      MOV      #73$, (SP)      ;;
1903 010046 000002      RTI      ;; REPLACE OLD PC WITH NEW
1904 010050 012637 000034      73$:      MOV      (SP)+,34      ;; RESTORE PSW
1905 010054 012637 001214      MOV      (SP)+,$TMP6      ;; RESTORE OLD TRAP VECTOR
1906 010060 052737 000000 001214      BIS      #000,$TMP6
1907 010066 013746 001214      MOV      $TMP6,-(SP)      ;; PUT NEW PS ON STACK
1908 010072 012746 010100      MOV      #74$,-(SP)      ;; PUT NEW PC ON STACK
1909 010076 000002      RTI      ;; POP NEW PC AND PS
1910 010100      74$:
1911 010100 012714 177660      MOV      #-80, @CDC      ;; SET UP COLUMN COUNT TO READ 80 COLUMNS
1912 010104 012715 045442      MOV      #BUFBEG,@CDA      ;; SET UP BUS ADDRESS
1913 010110 012713 000101      MOV      #101,@CDS      ;; SET INTERRUPT ENABLE AND READ
1914 010114 105713      1$:      TSTB    @CDS      ;; WAIT FOR CONTROLLER READY
1915 010116 100376      BPL     1$
1916      ; THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV 2(ADINT),PS"
1917 010120 016246 000002      MOV      2(ADINT),-(SP)      ;; PUT NEW PS ON STACK
1918 010124 012746 010132      MOV      #75$,-(SP)      ;; PUT NEW PC ON STACK
1919 010130 000002      RTI      ;; POP NEW PC AND PS
1920 010132      75$:
1921 010132 005013      CLR      @CDS      ;; DISABLE INTERRUPTS
1922 010134 012712 000232      MOV      #232, @ADINT      ;; CHANGE INTERRUPT RETURN ADDRESS
1923 010140 005037 000232      CLR      @#232      ;; TO CAUSE A HALT IF AN INTERRUPT OCCURS
1924 010144 104041      ERROR +41      ;; NO INTERRUPT WITH PROCESSOR AT LEVEL 0
1925 010146 000433      BR      TST20
1926 010150 105713      TINT17: TSTB    @CDS      ;; MAKE SURE CONTROLLER READY IS SET
1927 010152 100401      BMI     1$      ;; BRANCH IF SET
1928 010154 104023      ERROR +23      ;; CONTROLLER READY WASN'T SET
1929 010156 005013      1$:      CLR      @CDS      ;; DISABLE FURTHER INTERRUPTS
1930 010160 012712 000232      MOV      #232, @ADINT      ;; CHANGE INTERRUPT RETURN ADDRESS
1931 010164 005037 000232      CLR      @#232      ;; TO CAUSE A HALT IF AN INTERRUPT OCCURS
1932 010170 027626      CMP      (SP)+, (SP)+      ;; RESTORE STACK POINTER
1933 010172 005737 001252      TST     INTFLG      ;; CHECK FOR PREVIOUS FLAG
1934 010176 100412      BMI     SET1      ;; BRANCH IF FLAG SET
1935 010200 012737 100001 001252      MOV      #100001,INTFLG      ;; SET FLAG AND LEVEL
1936 010206 104400 031741      TYPE,   MSG4      ;; PRINT MESSAGE "THE INTERRUPT LEVEL WAS"
1937 010212 012746 000001      MOV      #1,-(SP)
1938 010216 104402      TYPOS
1939 010220 001      .BYTE  1
1940 010221 000      .BYTE  0
1941 010222 000405      BR      TST20
1942 010224 023727 001252 100001 SET1: CMP    INTFLG, #100001      ;; CHECK PREVIOUS LEVEL
1943 010232 100001      BPL     TST20
1944 010234 104024      ERROR +24      ;; INTERRUPT ALREADY OCCURRED AT A LOWER LEVEL
    
```

```

1945
1946 ;*****
1947 ;*TEST 20 TEST NO INTERRUPT WITH IE SET & REST CLEARED
1948 ;*****
1949 010236 000004 TST20: SCOPE
1950 010240 004737 025744 JSR PC INIT ;INITIALIZE CSR TO ZERO
1951 010244 012712 010452 MOV #TINT20,ADINT ;SETUP RETURN ADDRESS
;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
1953 010250 005046 CLR -(SP) ;;
1954 010252 013746 000034 MOV 34, -(SP) ;;SAVE CURRENT TRAP VECTOR
1955 010256 012737 010266 000034 MOV #64$,34 ;;SETUP NEW TRAP VECTOT
1956 010264 104400 TRAP ;;PUSH OLD PSW AN PCOM STACK
1957 010266 016666 000002 000006 64$: MOV 2(SP),6(SP) ;;
1958 010274 012716 010302 MOV #65$, (SP) ;;REPLACE OLD PC WITH NEW
1959 010300 000002 RTI ;;RESTORE PSW
1960 010302 012637 000034 55$: MOV (SP)+,34 ;;RESTORE OLD TRAP VECTOR
1961 010306 012637 001214 MOV (SP)+,$TMP6
1962 010312 052737 000340 001214 BIS #340,$TMP6
1963 010320 013746 001214 MOV $TMP6,-(SP) ;;PUT NEW PS ON STACK
1964 010324 012746 010332 MOV #66$,-(SP) ;;PUT NEW PC ON STACK
1965 010330 000002 RTI ;;POP NEW PC AND PS
1966 010332 66$:
;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
1968 010332 005046 CLR -(SP) ;;
1969 010334 013746 000034 MOV 34, -(SP) ;;SAVE CURRENT TRAP VECTOR
1970 010340 012737 010350 000034 MOV #67$,34 ;;SETUP NEW TRAP VECTOT
1971 010346 104400 TRAP ;;PUSH OLD PSW AN PCOM STACK
1972 010350 016666 000002 000006 67$: MOV 2(SP),6(SP) ;;
1973 010356 012716 010364 MOV #68$, (SP) ;;REPLACE OLD PC WITH NEW
1974 010362 000002 RTI ;;RESTORE PSW
1975 010364 012637 000034 68$: MOV (SP)+,34 ;;RESTORE OLD TRAP VECTOR
1976 010370 012662 000002 MOV (SP)+,2(ADINT)
1977 010374 013746 000000 MOV PRO,-(SP) ;;PUT NEW PS ON STACK
1978 010400 012746 010406 MOV #69$,-(SP) ;;PUT NEW PC ON STACK
1979 010404 000002 RTI ;;POP NEW PC AND PS
1980 010406 69$:
1981 010406 012714 177777 MOV #-1, @CDC ;SET UP COLUMN COUNT TO READ 1 COLUMN
1982 010412 012715 045442 MOV #BUFBEQ,@CDA ;SET UP BUS ADDRESS
1983 010416 012713 000100 MOV #100,@CDS ;ENABLE INTERRUPTS
1984 010422 005037 001250 CLR COUNT ;INITIALIZE COUNTER
1985 010426 005237 001250 1$: INC COUNT ;WAIT AWHILE
1986 010432 001375 BNE 1$
;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV 2(ADINT),PS"
1988 010434 016246 000002 MOV 2(ADINT),-(SP) ;;PUT NEW PS ON STACK
1989 010440 012746 010446 MOV #70$,-(SP) ;;PUT NEW PC ON STACK
1990 010444 000002 RTI ;;POP NEW PC AND PS
1991 010446 70$:
1992 010446 005013 CLR @CDS ;DISABLE FURTHER INTERRUPTS
1993 010450 000403 BR CONT20
1994 010452 104021 TINT20: ERROR +21 ;AN INTERRUPT OCCURRED
1995 010454 022626 CMP (SP)+, (SP)+ ;RESTORE STACK
1996 010456 005013 CLR @CDS ;DISABLE FURTHER INTERRUPTS
1997 010460 005037 000232 CONT20: CLR @#232 ;CHANGE INTERRUPT RETURN ADDRESS TO
1998 010464 012712 000232 MOV #232, @ADINT ;CAUSE A HALT IF AN INTERRUPT OCCURS

```

```

1999
2000 ;*****
2001 ;*TEST 21 SIMULTANEOUS INTERRUPTS AT MORE THAN 1 LEVEL
2002 ;*****
2003 †ST21: SCOPE
2004 JSR PC INIT ;INITIALIZE CSR TO ZERO
2005 MOV #TINT21,ADINT ;SETUP RETURN ADDRESS
2006 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
2007 CLR -(SP) ;;
2008 MOV 34, -(SP) ;;SAVE CURRENT TRAP VECTOR
2009 MOV #64$,34 ;;SETUP NEW TRAP VECTOR
2010 TRAP ;;PUSH OLD PSW AN PCON STACK
2011 MOV 2(SP),6(SP) ;;
2012 MOV #65$, (SP) ;;REPLACE OLD PC WITH NEW
2013 RTI ;;RESTORE PSW
2014 MOV (SP)+,34 ;;RESTORE OLD TRAP VECTOR
2015 MOV (SP)+,$TMP6
2016 BIS #340,$TMP6
2017 MOV $TMP6,-(SP) ;;PUT NEW PS ON STACK
2018 MOV #66$,-(SP) ;;PUT NEW PC ON STACK
2019 RTI ;;POP NEW PC AND PS
2020 66$:
2021 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
2022 CLR -(SP) ;;
2023 MOV 34, -(SP) ;;SAVE CURRENT TRAP VECTOR
2024 MOV #67$,34 ;;SETUP NEW TRAP VECTOR
2025 TRAP ;;PUSH OLD PSW AN PCON STACK
2026 MOV 2(SP),6(SP) ;;
2027 MOV #68$, (SP) ;;REPLACE OLD PC WITH NEW
2028 RTI ;;RESTORE PSW
2029 MOV (SP)+,34 ;;RESTORE OLD TRAP VECTOR
2030 MOV (SP)+,2(ADINT)
2031 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
2032 CLR -(SP) ;;
2033 MOV 34, -(SP) ;;SAVE CURRENT TRAP VECTOR
2034 MOV #69$,34 ;;SETUP NEW TRAP VECTOR
2035 TRAP ;;PUSH OLD PSW AN PCON STACK
2036 MOV 2(SP),6(SP) ;;
2037 MOV #70$, (SP) ;;REPLACE OLD PC WITH NEW
2038 RTI ;;RESTORE PSW
2039 MOV (SP)+,34 ;;RESTORE OLD TRAP VECTOR
2040 MOV (SP)+,$TMP6
2041 BIC #340,$TMP6
2042 MOV $TMP6,-(SP) ;;PUT NEW PS ON STACK
2043 MOV #71$,-(SP) ;;PUT NEW PC ON STACK
2044 RTI ;;POP NEW PC AND PS
2045 71$:
2046 MOV #-1, @CDC ;SET UP COLUMN COUNT TO READ 1 COLUMN
2047 MOV #BUFBEQ, @CDA ;SET UP BUS ADDRESS
2048 MOV #101, @CDS ;SET INTERRUPT ENABLE AND READ
2049 BR ;WAIT FOR INTERRUPT
2050 TINT21: CMP (SP)+, (SP)+ ;RESTORE STACK POINTER
2051 MOV #TINA21, @CJINT ;CHANGE RETURN ADDRESS
2052 MOV PRO,-(SP) ;;PUT NEW PS ON STACK

```



```

2053 010740 012746 010746      MOV      #64$, -(SP)      ;; PUT NEW PC ON STACK
2054 010744 000002                RTI                      ;; POP NEW PC AND PS
2055 010746 000240      64$:      NOP                      ;WAIT
2056 010746 000240      ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV 2(ADINT),PS"
2057                                MOV      2(ADINT), -(SP)  ;; PUT NEW PS ON STACK
2058 010750 016246 000002      MOV      #65$, -(SP)  ;; PUT NEW PC ON STACK
2059 010754 012746 010762      RTI                      ;; POP NEW PC AND PS
2060 010760 000002
2061 010762
2062 010762 000402      65$:      BR      CONT21
2063 010764 022626      TINA21:  CMP      (SP)+, (SP)+ ;RESTORE STACK
2064 010766 104025      ERROR +25 ;THE INTERRUPT OCCURRED AT 2 LEVELS
2065 010770 005013      CONT21:  CLR      @CDS ;DISABLE INTERRUPTS
2066 010772 005037 000232      CLR      @#232 ;CHANGE INTERRUPT RETURN ADDRESS TO
2067 010776 012712 000232      MOV      #232, @ADINT ;CAUSE A HALT IF AN INTERRUPT OCCURS
2068
2069 ;*****
2070 ;*TEST 22 NON-EXISTANT MEMORY DETECTION
2071 ;*****
2072 011002 000004      †ST22:  SCOPE
2073 011004 004737 025744      JSR      PC, INIT ;INITIALIZE CSR TO ZERO
2074 011010 012712 011240      MOV      #TINT22, @ADINT ;SETUP RETURN ADDRESS
2075 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
2076 011014 005046      CLR      -(SP)
2077 011016 013746 000034      MOV      34, -(SP) ;SAVE CURRENT TRAP VECTOR
2078 011022 012737 011032 000034      MOV      #64$, 34 ;SETUP NEW TRAP VECTOT
2079 011030 104400      TRAP ;PUSH OLD PSW AN PCOM STACK
2080 011032 016666 000002 000006 64$:  MOV      2(SP), 6(SP)
2081 011040 012716 011046      MOV      #65$, (SP) ;REPLACE OLD PC WITH NEW
2082 011044 000002      RTI ;RESTORE PSW
2083 011046 012637 000034 65$:  MOV      (SP)+, 34 ;RESTORE OLD TRAP VECTOR
2084 011052 012637 001214      MOV      (SP), $TMP6
2085 011056 052737 000340 001214      BIS      #340, $TMP6
2086 011064 013746 001214      MOV      $TMP6, -(SP) ;PUT NEW PS ON STACK
2087 011070 012746 011076      MOV      #66$, -(SP) ;PUT NEW PC ON STACK
2088 011074 000002      RTI ;POP NEW PC AND PS
2089 011076
2090 66$:  ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
2091 011076 005046      CLR      -(SP)
2092 011100 013746 000034      MOV      34, -(SP) ;SAVE CURRENT TRAP VECTOR
2093 011104 012737 011114 000034      MOV      #67$, 34 ;SETUP NEW TRAP VECTOT
2094 011112 104400      TRAP ;PUSH OLD PSW AN PCOM STACK
2095 011114 016666 000002 000006 67$:  MOV      2(SP), 6(SP)
2096 011122 012716 011130      MOV      #68$, (SP) ;REPLACE OLD PC WITH NEW
2097 011126 000002      RTI ;RESTORE PSW
2098 011130 012637 000034 68$:  MOV      (SP)+, 34 ;RESTORE OLD TRAP VECTOR
2099 011134 012662 000002      MOV      (SP)+, 2(ADINT)
2100 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
2101 011140 005046      CLR      -(SP)
2102 011142 013746 000034      MOV      34, -(SP) ;SAVE CURRENT TRAP VECTOR
2103 011146 012737 011156 000034      MOV      #69$, 34 ;SETUP NEW TRAP VECTOT
2104 011154 104400      TRAP ;PUSH OLD PSW AN PCOM STACK
2105 011156 016666 000002 000006 69$:  MOV      2(SP), 6(SP)
2106 011164 012716 011172      MOV      #70$, (SP) ;REPLACE OLD PC WITH NEW

```

```

2107 011170 000002 RTI ;RESTORE PSW
2108 011172 012637 000034 70$: MOV (SP)+,34 ;RESTORE OLD TRAP VECTOR
2109 011176 012637 001214 MOV (SP)+,$TMP6
2110 011202 042737 000340 001214 BIC #340,$TMP6
2111 011210 013746 001214 MOV $TMP6,-(SP) ;PUT NEW PS ON STACK
2112 011214 012746 011222 MOV #71$,-(SP) ;PUT NEW PC ON STACK
2113 011220 000002 RTI ;POP NEW PC AND PS
2114 011222 71$:
2115 011222 012714 177773 MOV #-5,@CDC ;SET UP COLUMN COUNT TO READ 1 COLUMN
2116 011226 012715 160000 MOV #16000,@CDA ;SET UP BUS ADDRESS TO NON-EXISTANT MEMORY
2117 011232 012713 000161 MOV #161,@CDS ;SET INTERRUPT ENABLE AND READ, X MEM BITS SET
2118 011236 000777 BR ;WAIT FOR INTERRUPT
2119 011240 022626 TINT2: CMP (SP)+,(SP)+ ;RESTORE STACK
2120 011242 005037 000232 CLR @#232 ;CHANGE INTERRUPT RETURN ADDRESS TO
2121 011246 012712 000232 MOV #232,@ADINT ;CAUSE A HALT IF AN INTERRUPT OCCURS
2122 011252 105713 TSTB @CDS ;CHECK FOR CONTROLLER READY
2123 011254 100401 BMI 1$ ;BRANCH IF SET OK
2124 011256 104023 ERROR +23 ;CONTROLLER READY DIDN'T SET
2125
2126 011260 005713 1$: TST @CDS ;CHECK FOR ERROR (BIT 15)
2127 011262 100401 BMI 2$ ;BRANCH IF SET OK
2128 011264 104026 ERROR +26 ;ERROR BIT 15 NOT SET
2129
2130 011266 032713 001000 2$: BIT #1000,@CDS ;CHECK FOR NON-EXISTANT MEMORY (BIT 9)
2131 011272 001001 BNE 3$ ;BRANCH IF SET OK
2132 011274 104027 ERROR +27 ;BIT 9 NOT SET
2133
2134 011276 032713 000040 3$: BIT #40,@CDS ;CHECK FOR EXTENDED MEMORY BIT 17 SET
2135 011302 001001 BNE 4$ ;BRANCH IF SET OK
2136 011304 104030 ERROR +30 ;EX-MEM BIT 17 GOT CLEARED
2137
2138 011306 032713 000020 4$: BIT #20,@CDS ;CHECK FOR EX-MEM (BIT 4)
2139 011312 001001 BNE 5$ ;BRANCH IF SET OK
2140 011314 104031 ERROR +31 ;EX-MEM (BIT 4) GOT CLEARED
2141
2142 011316 032713 076417 5$: BIT #076417,@CDS ;CHECK FOR ANY OTHER BITS
2143 011322 001401 BEQ 6$ ;BRANCH IF OK
2144 011324 104032 ERROR +32 ;EXTRA ERROR BITS SET
2145
2146 011326 022715 160002 6$: CMP #160002,@CDA ;CHECK ADDRESS BUFFER
2147 011332 001404 BEQ 7$ ;BRANCH IF OK
2148 011334 012737 160002 001210 MOV #160002,$TMP4 ;CORRECT 'CDA' CONTENTS FOR ERROR REPORT
2149 011342 104033 ERROR +33 ;BUS ADDRESS REG CHANGED
2150
2151 011344 022714 177774 7$: CMP #-4,@CDC ;CHECK COLUMN COUNT REG
2152 011350 001404 BEQ 10$ ;BRANCH IF OK
2153 011352 012737 177774 001210 MOV #-4,$TMP4 ;CORRECT 'CDC' CONTENTS FOR ERROR REPORT
2154 011360 104034 ERROR +34 ;COLUMN COUNT REG CHANGED
2155
2156 10$:
2157 ;*****
2158 ;*TEST 23 EXECUTE DATA, DATOB(LOW BYTE) LOAD ON COLUMN COUNT
2159 ;*****
2160 011362 000004 †ST23: SCOPE

```



```

2215 011472 005115          COM      2CDA
2216 011474 012700 000152  MOV      #152,RO
2217 011500 110015          MOVB    RO,2CDA
2218                                ;ATTEMPT TO LOAD LOWER BYTE
2219 011502 020015          CMP      RO,2CDA
2220                                ;OF BUS ADDRESS REGISTER
2221 011504 001403          BEQ      15
2222 011506 010037 001210  MOV      RO,$TMP4
2223 011512 104033          ERROR +33
2224                                ;DID HIGH BYTE GET LOADED AS
2225                                ;WELL ON A LOW BYTE LOADING?
2226 011514                                ;BRANCH IF YES
2227                                ;STORE GOOD DATA - SHOULD BE
2228                                ;HIGH BYTE NOT LOADED ON A LOW
2229                                ;BYTE LOAD OF BUS ADDRESS REGISTER
2230                                IS:
2231                                ;*****
2232                                ;*TEST 27 EXECUTE DATI,DATOB(HIGH BYTE) LOAD ON BUS ADDRESS
2233                                ;*****
2234 011514 000004          TST27:  SCOPE
2235 011516 005015          CLR      2CDA
2236                                ;CLEAR BUS ADDRESS REGISTER
2237                                ;PRIOR TO BYTE LOADING
2238 011520 012700 125252  MOV      #125252,RO
2239 011524 110065 000001  MOVB    RO,+1(R5)
2240                                ;SET VALUE FOR BYTE LOAD FROM RO
2241                                ;ATTEMPT TO LOAD HIGH BYTE
2242 011530 005715          TST      2CDA
2243                                ;OF BUS ADDRESS REGISTER
2244                                ;DID LOW BYTE GET LOADED AS
2245                                ;WELL ON HIGH BYTE LOADING?
2246 011532 001403          BEQ      15
2247 011534 005037 001210  CLR      $TMP4
2248 011540 104033          ERROR +33
2249                                ;BRANCH IF NO
2250                                ;STORE GOOD DATA - SHOULD BE
2251                                ;LOW BYTE LOADED ON A HIGH
2252                                ;BYTE LOAD OF BUS ADDRESS REGISTER
2253                                IS:
2254                                ;*****
2255                                ;*TEST 30 EXECUTE DATI,DATIP ON BUS ADDRESS REGISTER
2256                                ;*****
2257 011542 000004          TST30:  SCOPE
2258 011544 005015          CLR      2CDA
2259                                ;CLEAR BUS ADDRESS REGISTER
2260                                ;PRIOR TO 'DATIP' PROCESS
2261 011546 012715 100000  MOV      #100000,2CDA
2262                                ;SET A KNOWN VALUE INTO BUS
2263                                ;ADDRESS REGISTER
2264 011552 005415          NEG      2CDA
2265                                ;PERFORM DATIP, ON BUS ADDRESS
2266                                ;REGISTER
2267 011554 022715 100000  CMP      #100000,2CDA
2268 011560 001404          BEQ      15
2269 011562 012737 100000 001210  MOV      #100000,$TMP4
2270 011570 104033          ERROR +33
2271                                ;IS CONTENTS = 100000?
2272                                ;BRANCH IF YES
2273                                ;STORE GOOD DATA - SHOULD BE
2274                                ;CONTENTS OF BUS ADDRESS REGISTER
2275                                ;INCORRECT
2276                                IS:
2277                                ;*****
2278                                ;*TEST 31 WORD COUNT OVERFLOW TO 2ND CARD
2279                                ;*****
2280 011572 000004          TST31:  SCOPE
2281 011574 004737 025744  JSR      PC,INIT
2282 011600 012712 012146  MOV      #TINT31,2ADINT
2283                                ;INITIALIZE
2284                                ;SET UP A RETURN ADDRESS
2285                                ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
2286 011604 005046          CLR      -(SP)
2287                                ;
2288                                ;

```

```

2269 011606 013746 000034      MOV      34,-(SP)      ;;SAVE CURRENT TRAP VECTOR
2270 011612 012737 011622 000034      MOV      #64$,34      ;;SETUP NEW TRAP VECTOT
2271 011620 104400      TRAP                      ;;PUSH OLD PSW AN PCON STACK
2272 011622 016666 000002 000006 64$:      MOV      2(SP),6(SP)  ;;
2273 011630 012716 011636      MOV      #65$, (SP)  ;;
2274 011634 000002      RTI                      ;;RESTORE PSW
2275 011636 012637 000034 65$:      MOV      (SP)+,34      ;;RESTORE OLD TRAP VECTOR
2276 011642 012637 001214      MOV      (SP)+,$TMP6
2277 011646 052737 000340 001214      BIS      #340,$TMP6
2278 011654 013746 001214      MOV      $TMP6,-(SP)  ;;PUT NEW PS ON STACK
2279 011660 012746 011666      MOV      #66$,-(SP)  ;;PUT NEW PC ON STACK
2280 011664 000002      RTI                      ;;POP NEW PC AND PS
2281 011666      66$:
2282      ; THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV FS,2(ADINT)"
2283      CLR      -(SP)
2284 011670 005046 000034      MOV      34,-(SP)      ;;SAVE CURRENT TRAP VECTOR
2285 011674 012737 011704 000034      MOV      #67$,34      ;;SETUP NEW TRAP VECTOT
2286 011702 104400      TRAP                      ;;PUSH OLD PSW AN PCON STACK
2287 011704 016666 000002 000006 67$:      MOV      2(SP),6(SP)  ;;
2288 011712 012716 011720      MOV      #68$, (SP)  ;;
2289 011716 000002      RTI                      ;;RESTORE PSW
2290 011720 012637 000034 68$:      MOV      (SP)+,34      ;;RESTORE OLD TRAP VECTOR
2291 011724 012662 000002      MOV      (SP)+,2(ADINT)
2292      ; THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
2293      CLR      -(SP)
2294 011732 005046 000034      MOV      34,-(SP)      ;;SAVE CURRENT TRAP VECTOR
2295 011736 012737 011746 000034      MOV      #69$,34      ;;SETUP NEW TRAP VECTOT
2296 011744 104400      TRAP                      ;;PUSH OLD PSW AN PCON STACK
2297 011746 016666 000002 000006 69$:      MOV      2(SP),6(SP)  ;;
2298 011754 012716 011762      MOV      #70$, (SP)  ;;
2299 011760 000002      RTI                      ;;RESTORE PSW
2300 011762 012637 000034 70$:      MOV      (SP)+,34      ;;RESTORE OLD TRAP VECTOR
2301 011766 012637 001214      MOV      (SP)+,$TMP6
2302 011772 042737 000340 001214      BIC      #340,$TMP6
2303 012000 013746 001214      MOV      $TMP6,-(SP)  ;;PUT NEW PS ON STACK
2304 012004 012746 012012      MOV      #71$,-(SP)  ;;PUT NEW PC ON STACK
2305 012010 000002      RTI                      ;;POP NEW PC AND PS
2306 012012      71$:
2307 012012 005046      CLR      -(SP)
2308 012014 013746 000034      MOV      34,-(SP)      ;;SAVE CURRENT TRAP VECTOR
2309 012020 012737 012030 000034      MOV      #72$,34      ;;SETUP NEW TRAP VECTOT
2310 012026 104400      TRAP                      ;;PUSH OLD PSW AN PCON STACK
2311 012030 016666 000002 000006 72$:      MOV      2(SP),6(SP)  ;;
2312 012036 012716 012044      MOV      #73$, (SP)  ;;
2313 012042 000002      RTI                      ;;RESTORE PSW
2314 012044 012637 000034 73$:      MOV      (SP)+,34      ;;RESTORE OLD TRAP VECTOR
2315 012050 012637 001214      MOV      (SP)+,$TMP6
2316 012054 052737 000000 001214      BIS      #000,$TMP6
2317 012062 013746 001214      MOV      $TMP6,-(SP)  ;;PUT NEW PS ON STACK
2318 012066 012746 012074      MOV      #74$,-(SP)  ;;PUT NEW PC ON STACK
2319 012072 000002      RTI                      ;;POP NEW PC AND PS
2320 012074      74$:
2321 012074 012714 177657      MOV      #-81.,%CDC      ;;SET COLUMN COUNT TO READ 81. COLUMNS
2322      ; I.E. - WRAP AROUND INTO 2ND CARD

```

```

2323                                     ;AUTOMATICALLY
2324 012100 012715 045442             MOV    #BUFBEG, @CDA      ;SET UP STARTING BUFFER ADDRESS
2325                                     ;FOR DUMP OF CARD/S CONTENTS
2326 012104 012713 000.01             MOV    #101, @CDS      ;SET INTERRUPT ENABLE & READ
2327 012110 105713                    1$:   TSTB   @CDS          ;WE COME HERE AWAITING THE INTERRUPT
2328 012112 100376                    BPL    1$              ;WAIT INTERRUPT
2329                                     ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV 2(ADINT),PS"
2330 012114 016246 000002             MOV    2(ADINT), -(SP) ;PUT NEW PS ON STACK
2331 012120 012746 012126             MOV    #755, -(SP)    ;PUT NEW PC ON STACK
2332 012124 000002                    RTI     ;POP NEW PC AND PS
2333 012126                    75$:
2334                                     ;AND GIVE CONTROL BACK TO THE
2335                                     ;PROCESSOR
2336 012126 005013                    CLR    @CDS           ;DISABLE INTERRUPTS
2337 012130 012712 000232             MOV    #232, @ADINT   ;RESTORE INTERRUPT RETURN ADDRESS
2338 012134 005037 000232             CLR    @#232         ;TO 'HALT' IF AN UNEXPECTED INTERRUPT
2339                                     ;OCCURS
2340 012140 104041                    ERROR +41           ;NO INTERRUPT WITH PROCESSOR AT
2341                                     ;LEVEL 0
2342 012142 000137 012206             JMP    T31END         ;GO TO NEXT TEST
2343 012146 105713                    TINT31: TSTB   @CDS    ;IS CONTROLLER READY SET?
2344 012150 100401                    BMI    1$             ;BRANCH IF YES
2345 012152 104023                    ERROR +23           ;INDICATE CONTROLLER READY NOT SET
2346 012154 005013                    1$:   CLR    @CDS       ;DISABLE FURTHER INTERRUPTS
2347 012156 012712 000232             MOV    #232, @ADINT   ;RESTORE INTERRUPT RETURN ADDRESS
2348 012162 005037 000232             CLR    @#232         ;TO 'HALT' IF AN UNEXPECTED INTERRUPT
2349                                     ;OCCURS
2350 012166 022626                    CMP    (SP)+, (SP)+   ;RESET STACK FROM THE I. INTERRUPT
2351 012170 022715 045704             CMP    #BUFBEG+242, @CDA ;WERE 2 CARDS READ??
2352 012174 001404                    BEQ    T31END        ;BRANCH IF APPARENTLY SO
2353 012176 012737 045704 001210     MOV    #BUFBEG+242, $TMP4 ;STORE GOOD DATA - SHOULD BE
2354 012204 104033                    ERROR +33           ;BUS ADDRESS DOESN'T CORRELATE
2355                                     ;TO HAVING READ 2 CARDS
2356 012206                    T31END:
2357
2358 ;*****
2359 ;*TEST 32      BUS ADDRESS ODD & TRANSFER IN NON-PACK MODE
2360 ;*****
2361 012206 000004                    †ST32: SCOPE
2362 012210 004737 025744             JSR    PC, INIT      ;INITIALIZE
2363 012214 012714 177777             MOV    #-1, @CDC     ;SET COLUMN COUNT TO READ 1 COLUMN
2364 012220 012715 045443             MOV    #BUFBEG+1, @CDA ;SET BUFFER ADDRESS, FOR COLUMN DUMP,
2365                                     ;TO HIGH BYTE OF WORD
2366 012224 012737 012250 000010     MOV    #2$, RESVEC   ;SET RETURN FOR ILLEGAL INSTRUCTION
2367 012232 012737 000340 000012     MOV    #340, RESVEC+2 ;SET PS FOR ILLEGAL INSTRUCTION
2368 012240 005213                    INC    @CDS          ;READ A CARD
2369 012242 105713                    1$:   TSTB   @CDS      ;WAIT FOR CONTROLLER READY
2370 012244 100376                    BPL    1$            ;WAIT TILL DONE!
2371 012246 000402                    BR     3$            ;GO TO NEXT TEST
2372 012250 104070                    2$:   ERROR +70     ;ODD BUS ADDRESS CAUSED A TRAP IN
2373                                     ;NON- PACK MODE
2374 012252 022626                    CMP    (SP)+, (SP)+  ;RESET STACK FROM ILLEGAL INSTRUCTION
2375                                     ;TRAP
2376 012254 012737 000012 000010 3$:  MOV    #12, 10      ;RESTORE TRAPCATCHER AREA FOR

```

```

2377 012262 005037 000012 CLR J#12 ;UNEXPECTED TRAPS TO LOCATION 10
2378 ;CHECK SW7 AND RETURN TO TEST1 IF SET, AFTER RINGING BELL
2379 ;OTHERWISE GO INTO THE DATA TEST
2380 012266 000004 ENDCK: SCOPE
2381 012270 032777 000200 166640 BIT #200,JSWR ;IS SW<07> SET?
2382 012276 001406 BEQ DATST ;BRANCH IF NOT TO DATA TESTING
2383 012300 104400 001222 TYPE, $BELL ;RING-A-DING
2384 012304 005137 001254 COM TRFLG ;TOGGLE TRACE FLAG
2385 012310 000137 002534 JMP RESTRT ;GO BACK TO INSTRUCTION TESTS
2386
2387

```

```

;*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:
;*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:

```

```

;THIS MARKS THE END OF THE INSTRUCTION TESTING
;THIS SECTION REQUIRED 16 CARDS FOR COMPLETION

```

```

;/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:
;/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:*/:

```

2398  
2399  
2400  
2401  
2402  
2403  
2404  
2405  
2406  
2407  
2408  
2409  
2410  
2411  
2412  
2413  
2414  
2415  
2416  
2417  
2418  
2419  
2420  
2421  
2422  
2423  
2424  
2425  
2426  
2427  
2428  
2429  
2430

```

;*****
;DATA RELIABILITY TEST FOR CD11
;*****

```

```

;CHECK SWR FOR TYPE OF DECK BEING TESTED, AND INITIALIZE POINTERS
DATST: TYPE, MDATA ;INDICATE "ENTERING DATA TESTS"
CLR STMP5 ;INITIALIZE TABLE OFFSET FOR CARD #1 OF DECK
CLR CLCNT ;MAKE SURE COLUMN COUNT IS ZERO
CLR CDCNT ;SETUP CARD COUNT TO ENTER DATA TABLE AT BEGINNING
CLR ERFLG ;FLAG SET PREVENTS PRINTING OUT ERROR HEADING
BIT #20,JSWR ;CHECK BIT 4 OF JSWR FOR TYPE OF DECK
BEQ ALP1 ;BRANCH IF NOT SET TO LOAD ALPHANUMERIC POINTERS
MOV #BINCD, TSTART ;BIT 2 SET, LOAD BINARY TABLE POINTERS
MOV #BINEND+2, TEND
MOV #MSG15, DECK
BR CONTD ;BRANCH AROUND ALPHANUMERIC POINTERS
ALP1: MOV #ALPCD, TSTART ;LOAD ALPHANUMERIC TABLE POINTERS
MOV #ALPEND+2, TEND
MOV #MSG14, DECK
CONTD: TST TRFLG ;CHECK TRACE TRAP FLAG
BNE TRP1 ;BRANCH IF FLAG WAS SET
NOTRP1: MOV PR7, -(SP) ;;PUT NEW PS ON STACK
MOV #64$, -(SP) ;;PUT NEW PC ON STACK
RTI ;;POP NEW PC AND PS
64$: BR DCNT1
TRP1: BIT #10000,JSWR ;CHECK SW12 TO INHIBIT TRACE TRAPPING

```

```

2431 012446 001366          BNE    NOTRP1          ;BRANCH IF SET
2432 012450 013746 000360    MOV    TRACE,-(SP)    ;PUT NEW PS ON STACK
2433 012454 012746 012462    MOV    #64$,-(SP)    ;PUT NEW PC ON STACK
2434 012460 000002          RTI                    ;POP NEW PC AND PS
2435 012462
2436 012462 004737 025744    64$: DCNT1: JSR    PC,    INIT ;INITIALIZE CARD READER STATUS REGISTER
2437
2438 ;SET UP INTERRUPT SERVICING, AND START READING
2439 012466 012712 012730    MOV    #SRVC,ADINT  ;SETUP RETURN POINTER
2440 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
2441 012472 005046          CLR    -(SP)          ;
2442 012474 013746 000034    MOV    34,-(SP)      ;SAVE CURRENT TRAP VECTOR
2443 012500 012737 012510 000034    MOV    #64$,34      ;SETUP NEW TRAP VECTOT
2444 012506 104400          TRAP                   ;PUSH OLD PSW AN PCON STACK
2445 012510 016666 000002 000006 64$: MOV    2(SP),6(SP)    ;
2446 012516 012716 012524    MOV    #65$,1(SP)    ;
2447 012522 000002          RTI                    ;;RESTORE PSW
2448 012524 012637 000034    65$: MOV    (SP)+,34  ;;RESTORE OLD TRAP VECTOR
2449 012530 012637 001214    MOV    (SP)+,$TMP6
2450 012534 042737 000340 001214    BIC    #340,$TMP6
2451 012542 013746 001214    MOV    $TMP6,-(SP)   ;PUT NEW PS ON STACK
2452 012546 012746 012554    MOV    #66$,-(SP)   ;PUT NEW PC ON STACK
2453 012552 000002          RTI                    ;POP NEW PC AND PS
2454 012554
2455 66$: ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
2456 012554 005046          CLR    -(SP)          ;
2457 012556 013746 000034    MOV    34,-(SP)      ;SAVE CURRENT TRAP VECTOR
2458 012562 012737 012572 000034    MOV    #67$,34      ;SETUP NEW TRAP VECTOT
2459 012570 104400          TRAP                   ;PUSH OLD PSW AN PCON STACK
2460 012572 016666 000002 000006 67$: MOV    2(SP),6(SP)    ;
2461 012600 012716 012606    MOV    #68$,1(SP)    ;
2462 012604 000002          RTI                    ;;RESTORE PSW
2463 012606 012637 000034    68$: MOV    (SP)+,34  ;;RESTORE OLD TRAP VECTOR
2464 012612 012662 000002    MOV    (SP)+,2(ADINT)
2465 012616 013701 015326    MOV    TSTART,R1     ;SET UP TABLE POINTER
2466 012622 012700 045442    MOV    #BUFBE$,RO    ;SET UP BUFFER POINTER
2467 012626 012737 177660 015314    MOV    #-120,SIZE    ;SET UP "SIZE"
2468 012634 012737 177660 015316    MOV    #-120,OFFSET
2469 012642 013714 015314    MOV    SIZE,ACDC     ;SET UP COLUMN COUNT
2470 012646 010015    MOV    RO,ACDA       ;SET UP ADDRESS REG
2471 012650 012713 000100    MOV    #100,ACDS     ;ENABLE INTERRUPTS
2472 012654 032777 000010 166254    BIT    #10,ASWR      ;CHECK FOR PACK MODE ONLY
2473 012662 001406          BEQ    CDREAD        ;BRANCH IF NOT SET
2474 012664 032777 000004 166244    BIT    #4,ASWR       ;CHECK FOR IMAGE MODE ONLY
2475 012672 001002          BNE    CDREAD        ;BRANCH IF SET
2476 012674 004737 014522    JSR    PC,    PAKSET ;SET UP FOR PACKING MODE
2477 012700 005213    CDREAD: INC    ACDS   ;RFAD
2478 012702 032713 004000    BKGND: BIT    #4000,ACDS ;CHECK FOR DATA ERROR
2479 012706 001775          BEQ    BKGND
2480 012710 011437 015340    BKGND1: MOV    ACDC,DERCNT ;SAVE THE COLUMN COUNT
2481 012714 032713 004000    BKGND1: BIT    #4000,ACDS ;CHECK FOR DATA ERROR
2482 012720 001375          BNE    BKGND1       ;BRANCH IF SET
2483 012722 005037 015340    CLR    DERCNT       ;CLR COLUMN COUNT SAVER
2484 012726 000765          BR

```



```

2485 ;INTERRUPT SERVICE ROUTINE WHICH RUNS DATA RELIABILITY TEST
2486
2487 012730 105713 SRVC: TSTB QCD5 ;CHECK CONTROLLER READY
2488 012732 100401 BMI 1$ ;BRANCH IF SET
2489 012734 104023 ;CONTROLLER READY NOT SET
2490 012736 032713 000002 1$: BIT #2, QCD5 ;CHECK FOR DATA PACK MODE
2491 012742 001402 BEQ ISR ;BRANCH IF IMAGE MODE
2492 012744 000137 013640 JMP PSR ;JUMP TO PACK MODE ROUTINE
2493
2494 012750 032713 177477 ISR: BIT #177477, QCD5 ;CHECK ALL BITS EXCEPT 6 AND 7
2495 012754 001001 BNE 1$ ;BRANCH TO ERROR ROUTINE
2496 012756 000402 BR 2$ ;OTHERWISE, CONTINUE ON
2497 012760 000137 013510 1$: JMP ISRER ;GO TO ERROR ROUTINE
2498 012764 005714 2$: TST QCDC ;CHECK COLUMN COUNT
2499 012766 001403 BEQ 3$ ;BRANCH IF OK
2500 012770 005037 001210 CLR $TMP4 ;CORRECT 'CDC' CONTENTS FOR ERROR REPORT
2501 012774 104034 ERROR +34 ;COLUMN COUNT REGISTER NOT 0
2502
2503 012776 010037 015320 3$: MOV R0, BUFEND
2504 013002 163737 015314 015320 SUB SIZE, BUFEND
2505 013010 163737 015314 015320 SUB SIZE, BUFEND
2506 013016 023715 015320 CMP BUFEND, QCD4
2507 013022 001404 BEQ ISRNC
2508 013024 013737 015320 001210 MOV BUFEND, $TMP4 ;CORRECT 'CDA' CONTENTS FOR ERROR REPORT
2509 013032 104033 ERROR +33
2510
2511 013034 013737 015314 001250 ISRNC: MOV SIZE, COUNT ;SET UP COLUMN COUNTER
2512 013042 005777 166172 ISRLP: TST QCDDB ;ARE WE ON A CARD READER WITH
2513 ;ECO #14 INSTALLED?
2514 013046 100411 BMI 1$ ;BRANCH IF YES
2515 013050 012137 001200 MOV (R1)+, $TMP0 ;GET THE TABLE VALUE
2516 013054 042737 170000 001200 BIC #170000, $TMP0 ;STRIP OFF TOP 4 BITS BEFORE COMPARISON
2517 013062 023720 001200 CMP $TMP0, (R0)+ ;IS VALUE SAME AS DUMPED INTO MEMORY?
2518 013066 001043 BNE ISRDE ;BRANCH IF NOT THE SAME
2519 013070 000402 BR ;OTHERWISE, CONTINUE ON
2520 013072 022021 1$: CMP (R0)+, (R1)+ ;TEST THE DATA
2521 013074 001040 BNE ISRDE ;BRANCH IF DATA ERROR
2522 013076 020137 015330 ISRRT: CMP R1, TEND ;CHECK FOR END OF TABLE
2523 013102 100402 BMI 1$ ;BRANCH IF NO
2524 013104 013701 015326 MOV TSTART, R1 ;MOVE POINTER TO TOP OF TABLE
2525 013110 005237 001250 1$: INC COUNT ;CHECK FOR END OF BUFFER
2526 013114 001415 BEQ ISRBE ;BRANCH IF BUFFER END
2527 013116 005237 015334 INC CLCNT ;KEEP TRACK OF COLUMNS
2528 013122 062737 000002 001212 ADD #2, $TMP5 ;UPDATE TABLE OFFSET FOR CARD #1 OF DECK
2529 013130 023727 015334 000120 CMP CLCNT, #120 ;CHECK FOR END OF CARD
2530 013136 001341 BNE ISRLP ;BRANCH IF NOT END OF CARD
2531 013140 004737 014710 JSR PC, NXCRD ;INC TO NEXT CARD
2532 013144 005721 TST (R1)+ ;UPDATE TABLE POINTER FOR NEXT CARD
2533 013146 000735 BR ISRLP
2534
2535 013150 004737 014710 ISRBE: JSR PC, NXCRD ;GO TO NEXT CARD
2536 013154 005721 ISRNX: TST (R1)+
2537 013156 032777 000004 165752 BIT #4, QSWR ;CHECK FOR IMAGE MODE ONLY
2538 013164 001002 BNE ISRNX1 ;BRANCH IF SET
    
```

2539	013166	004737	014522		JSR	PC	PAKSET		;SET UP FOR PACKING MODE
2540	013172	000137	014436		ISRNX1: JMP	SR&TRN			;CALCULATE "SIZE" AND RETURN
2541									
2542									
2543	013176	005737	015332		: DATA ERROR WAS DETECTED, OUTPUT ERROR PRINTOUT				
2544	013202	001102			ISRDE: TST	CD&NT			;CHECK FOR FIRST CARD
2545	013204	005740			BNE	ISR&2			;BRANCH IF NOT
2546	013206	005237	015332		ISR&1: TST	-(R&)			;SUB 2 FROM POINTER
2547	013212	005777	166022		INC	CD&NT			
2548					TST	&CD&B			;ARE WE ON A CARD READER WITH
2549	013216	100411							;ECO #14 INSTALLED?
2550	013220	012137	001200		BMI	1\$			;BRANCH IF YES
2551	013224	042737	170000	001200	MOV	(R1)+, \$TMP&			;GET THE TABLE VALUE
2552	013232	023720	001200		BIC	#170000, \$TMP&			;STRIP OFF TOP 4 BITS BEFORE COMPARISON
2553	013236	001051			CMP	\$TMP&, (R&)+			;DOES VALUE MATCH THAT DUMPED INTO MEMORY?
2554	013240	000402			BNE	5\$			;BRANCH IF NO
2555	013242	022021			BR	2\$			;OTHERWISE, CONTINUE ON
2556	013244	001046			1\$: CMP	(R&)+, (R1)+			;TEST THE DATA
2557	013246	062701	000042		BNE	6\$			;BRANCH IF NOT THE SAME
2558	013252	020137	015330		2\$: ADD	#42, R1			;ADD THE MAGIC NUMBER
2559	013256	003402			CMP	R1, T&ND			;CHECK FOR RAP AROUND
2560	013260	162701	000240		BLE	3\$			;BRANCH IF NOT
2561	013264	005777	165750		3\$: SUB	#240, R1			;RAP AROUND
2562					TST	&CD&B			;ARE WE ON A CARD READER WITH
2563	013270	100412							;ECO #14 INSTALLED?
2564	013272	011137	001200		BMI	7\$			;BRANCH IF YES
2565	013276	042737	170000	001200	MOV	(R1), \$TMP&			;GET THE TABLE VALUE
2566	013304	026037	000042	001200	BIC	#170000, \$TMP&			;STRIP OFF TOP 4 BITS BEFORE COMPARISON
2567	013312	001014			CMP	42(R&), \$TMP&			;DOES VALUE MATCH FOR A DOUBLE?
2568	013314	000403			BNE	5\$			;BRANCH IF NO
2569	013316	026011	000042		BR	4\$			;OTHERWISE, CONTINUE ON
2570	013322	001010			7\$: CMP	42(R&), (R1)			;CHECK FOR DOUBLE MATCH
2571	013324	162701	000042		BNE	5\$			;BRANCH IF NOT
2572	013330	020137	015326		4\$: SUB	#42, R1			;SUBTRACT THE MAGIC NUMBER
2573	013334	003260			CMP	R1, T&START			;CHECK FOR RAP AROUND
2574	013336	062701	000240		BGT	ISR&T			;BRANCH IF NOT
2575	013342	000655			ADD	#240, R1			;RAP AROUND
2576					BR	ISR&T			;GO CHECK REST OF DATA
2577	013344	162701	000042		5\$: SUB	#42, R1			;SUBTRACT MAGIC NUMBER
2578	013350	020137	015326		CMP	R1, T&START			;CHECK FOR RAP AROUND
2579	013354	003002			BGT	6\$			;BRANCH IF NOT
2580	013356	062701	000240		ADD	#240, R1			;RAP AROUND
2581	013362	020137	015330		6\$: CMP	R1, T&ND			
2582	013366	001306			BNE	ISR&1			
2583	013370	013701	015326		MOV	T&START, R1			;OBTAIN THE 1ST TABLE ENTRY
2584	013374	063701	001212		ADD	\$TMP&, R1			;ADD TABLE OFFSET FOR CARD #1 OF DECK
2585	013400	062701	000002		ADD	#2, R1			;GO AHEAD ONE TABLE POSITION FOR ERROR REPORT
2586	013404	005037	015332		CLR	CD&NT			;RESET CARD COUNTER
2587	013410	032777	020000	165520	ISR&2: BIT	#20000, &SW&			;CK SW13 FOR INHIBIT PRINTOUT
2588	013416	001026			BNE	ISR&E4			;BRANCH IF SET
2589	013420	004737	014554		JSR	PC, TY&HEAD			;TYPE HEADING, DECK, CD&NT, CL&NT
2590	013424	005777	165610		TST	&CD&B			;ARE WE ON A CARD READER WITH
2591									;ECO #14 INSTALLED?
2592	013430	100410			BMI	1\$			;BRANCH IF YES

```

2593 013432 014137 001200      MOV      -(R1),STMPD      ;GET THE TABLE VALUE
2594 013436 042737 170000 001200  BIC      #170000,STMPD   ;STRIP OFF TOP 4 BITS BEFORE PRINTOUT
2595 013444 013746 001200      MOV      STMPD,-(SP)     ;PLACE VALUE ON STACK FOR PRINTOUT
2596 013450 000401                BR        25             ;GO TO PRINT OUT VALUE
2597 013452 014146                15:     MOV      -(R1),-(SP) ;PUSH SHOULD BE DATA ONTO STACK
2598 013454 104402                25:     TYPOS                    ;SYSMAC ROUTINE
2599 013456 006                      .BYTE   6                ;FOR
2600 013457 001                      .BYTE   1                ;ERROR TYPEOUT
2601 013460 104400 030545      TYPE,   SPACE           ;
2602 013464 014046                MOV      -(R0),-(SP)   ;PUSH WAS DATA
2603 013466 104402                TYPOS                    ;ONTO STACK
2604 013470 006                      .BYTE   6                ;FOR
2605 013471 001                      .BYTE   1                ;ERROR TYPEOUT
2606 013472 022021                CMP      (R0)+, (R1)+  ;RESET POINTERS
2607 013474 005777 165436      ISRDE4: TST      @SWR      ;CHECK FOR HALT ON ERROR
2608 013500 100001                BPL     15             ;BRANCH IF HALT ON ERROR NOT SET
2609 013502 000000                HALT                    ;HALT ON ERROR SET
2610 013504 000137 013076      15:     JMP      ISRRT
2611
2612 ;INTERRUPT DUE TO SOME KIND OF ERROR
2613 ;THESE ERRORS ARE DISASTEROUS, THEREFORE THE DATA TEST IS RESTARTED
2614 013510 100402      ISRER: BMI     ISRE1      ;BRANCH ON ERROR BIT 15
2615 013512 104026      ERROR +26              ;ERROR BIT 15 NOT SET
2616 013514 000447      BR        ISRST
2617
2618 013516 032713 010000      ISRE1: BIT     #10000, @CDS ;CHECK FOR OFF-LINE
2619 013522 001414                BEQ     ISRE2
2620 013524 032713 040000      BIT     #40000, @CDS   ;CHECK FOR CARD READER ERROR
2621 013530 001002                BNE     15             ;BRANCH IF SET
2622 013532 104035      ERROR +35              ;OFF-LINE BUT NOT CARD READER ERROR
2623 013534 000413      BR        ISRE3
2624
2625 013536 004737 014650      15:     JSR     PC, LASTCD ;CHECK FOR LAST CARD
2626 013542 002002                BGE     25             ;BRANCH IF BOTH CARD
2627 013544 104057      ERROR +57              ;CARD READER ERROR BUT NOT BOTH CARD
2628 013546 000432      BR        ISRST
2629 013550 000137 013034      25:     JMP     ISRNC      ;IF BOTH CARD - GO HERE!
2630
2631 013554 032713 040000      ISRE2: BIT     #40000, @CDS ;CHECK FOR CARD READER ERROR
2632 013560 001401                BEQ     ISRE3          ;BRANCH IF NOT
2633 013562 104060      ERROR +60              ;CARD READER ERROR BUT NOT OFF LINE
2634
2635 013564 032713 020000      ISRE3: BIT     #20000, @CDS
2636 013570 001401                BEQ     15             ;
2637 013572 104061      ERROR +61              ;END OF FILE ERROR (M1200 ONLY)
2638
2639 013574 032713 004000      15:     BIT     #4000, @CDS
2640 013600 001401                BEQ     25             ;
2641 013602 104062      ERROR +62              ;DATA ERROR
2642
2643 013604 032713 002000      25:     BIT     #2000, @CDS
2644 013610 001401                BEQ     35             ;
2645 013612 104063      ERROR +63              ;DATA LATE ERROR
2646

```

```

2647 013614 032713 001000 35: BIT #1000, @CDS
2648 013620 001401 BEQ 45
2649 013622 104064 ERROR +64 ;NON-EXISTANT MEMORY ERROR
2650 013624 032713 077000 45: BIT #777000, @CDS ;CHECK ALL ERROR BITS
2651 013630 001001 BNE ISRSR ;BRANCH IF AT LEAST ONE
2652 013632 104037 ERROR +37 ;NONE OF THE ERROR BITS SET
2653 013634 000137 015306 ISRSR: JMP DATRST ;RESTART THE ENTIRE DATA TEST
2654
2655 013640 032713 177475 PSR: BIT #177475, @CDS ;CHECK ALL BITS EXCEPT 1,6 AND 7
2656 013644 001402 BEQ 15 ;BRANCH IF OK
2657 013646 000137 014256 JMP PSRER ;OTHERWISE, GO TO REPORT ERROR
2658 013652 005714 15: TST @CDC ;CHECK COLUMN COUNT REG.
2659 013654 001403 BEQ 25 ;BRANCH IF OK
2660 013656 005037 071210 CLR $TMP4 ;CORRECT 'CDC' CONTENTS FOR ERROR REPORT
2661 013662 104034 ERROR +34 ;
2662 013664 010037 015320 25: MOV RO, BUFEND
2663 013670 163737 015314 015320 SUB SIZE, BUFEND
2664 013676 023715 015320 CMP BUFEND, @CDA
2665 013702 001404 BEQ PSRNC
2666 013704 013737 015320 001210 MOV BUFEND, $TMP4 ;CORRECT 'CDA' CONTENTS FOR ERROR REPORT
2667 013712 104033 ERROR +33
2668 013714 013737 015314 001250 PSRNC: MOV SIZE, COUNT ;SET UP COLUMN COUNTER
2669 013722 122021 PSRLP: CMPB (RO)+, (R1)+ ;TEST THE DATA
2670 013724 001052 BNE PSRDE ;BRANCH IF DATA ERROR
2671 013726 020137 015330 PSRRT: CMP RI, TEND ;CHECK FOR END OF TABLE
2672 013732 100402 BMI 15 ;BRANCH IF NOT
2673 013734 013701 015326 MOV TSTART, R1 ;MOVE POINTER TO TOP OF TABLE
2674 013740 005237 001250 15: INC COUNT ;CHECK FOR END OF BUFFER
2675 013744 001415 BEQ PSRBE ;BRANCH IF BUFFER END
2676 013746 005237 015334 INC CLCNT ;KEEP TRACK OF COLUMNS
2677 013752 062737 000001 001210 ADD #1, $TMP4 ;UPDATE TABLE OFFSET FOR CARD #1 OF DECK
2678 013760 023727 015334 000120 CMP CLCNT, #120 ;CHECK FOR END OF CARD
2679 013766 001355 BNE PSRLP ;BRANCH IF NOT END OF CARD
2680 013770 004737 014710 JSR PC, NXCRD ;GO TO NEXT CARD
2681 013774 105721 TSTB (R1)+ ;UPDATE TABLE POINTER FOR NEXT CARD
2682 013776 000751 BR PSRLP
2683
2684 014000 004737 014710 PSRBE: JSR PC, NXCRD ;GO TO NEXT CARD
2685 014004 105721 PSRNX: TSTB (R1)+
2686 014006 032777 000010 165122 BIT #10, @SWR
2687 014014 001014 BNE PSRNX1
2688 014016 162737 000240 015326 SUB #160., TSTART ;MOVE TABLE POINTER TO IMAGE TABLE
2689 014024 162737 000120 015330 SUB #80., TEND
2690 014032 162701 000240 SUB #160., RI ;UPDATE TABLE POINTER
2691 014036 063701 015332 ADD CDCNT, RI ;COMPENSATE FOR BYTES
2692 014042 042713 000002 BIC #2, @CDS ;CLR PACKING MODE BIT
2693 014046 000137 014436 PSRNX1: JMP SRETRN ;CALCULATE "SIZE" AND READ MORE CARDS
2694
2695 ;DATA ERROR WAS DETECTED. OUTPUT ERROR PRINTOUT
2696 014052 005737 015332 PSRDE: TST CDCNT
2697 014056 001051 BNE PSRD2
2698 014060 105740 PSRD1: TSTB -(RO) ;SUB 1 FROM POINTER
2699 014062 005237 015332 INC CDCNT
2700 014066 122021 CMPB (RO)+, (R1)+ ;TEST THE DATA

```

2701	014070	001031		BNE	1\$			;BRANCH IF NOT THE SAME
2702	014072	062701	000021	ADD	#21,	R1		;ADD THE MAGIC NUMBER
2703	014076	020137	015330	CMP	R1,	TEND		;CHECK FOR RAP AROUND
2704	014102	003402		BLE	2\$			;BRANCH IF NOT
2705	014104	162701	000120	SUB	#120,	R1		;RAP AROUND
2706	014110	126011	000021	CMPB	21(RO),	(R1)		;CHECK FOR DOUBLE MATCH
2707	014114	001010		BNE	3\$			;BRANCH IF NOT
2708	014116	162701	000021	SUB	#21,	R1		;SUBTRACT THE MAGIC NUMBER
2709	014122	020137	015326	CMP	R1,	TSTART		;CHECK FOR RAP AROUND
2710	014126	003277		BGT	PSRR1			;BRANCH IF NOT
2711	014130	062701	000120	ADD	#120,	R1		;RAP AROUND
2712	014134	000674		BR	PSRR1			;GO CHECK REST OF DATA
2713								
2714	014136	162701	000021	SUB	#21,	R1		;SUBTRACT MAGIC NUMBER
2715	014142	020137	015326	CMP	R1,	TSTART		;CHECK FOR RAP AROUND
2716	014146	003002		BGT	1\$			;BRANCH IF NOT
2717	014150	062701	000120	ADD	#120	R1		;RAP AROUND
2718	014154	020137	015330	CMP	R1,	TEND		
2719	014160	001337		BNE	PSRD1			
2720	014162	013701	015326	MOV	TSTART,R1			;OBTAIN THE 1ST TABLE ENTRY
2721	014166	063701	00,212	ADD	\$TMP5,R1			;ADD TABLE OFFSET FOR CARD #1 OF DECK
2722	014172	062701	000001	ADD	#1,R1			;GO AHEAD ONE TABLE POSITION FOR ERROR REPORT
2723	014176	005037	015332	CLR	CDCNT			;RESET CARD COUNTER
2724	014202	032777	020000	BIT	#20000,@SWR			;CK SW13 FOR INHIBIT PRINTOUT
2725	014210	001015		BNE	PSRDE3			;BRANCH IF SET
2726	014212	004737	014554	JSR	PC,	TYHEAD		;TYPE HEADING, DECK, CDCNT, CLCNT
2727	014216	104400	030545	TYPE,	SPACE			
2728	014222	114146		MOVB,	-(R1),-(SP)			;PUSH SHOULD BE DATA
2729	014224	104402		TYPOS				;ONTO STACK
2730	014226	003		.BYTE	3			;FOR
2731	014227	000		.BYTE	0			;ERROR TYPEOUT
2732	014230	104400	030542	TYPE,	SPACE-3			
2733	014234	114046		MOVB,	-(RO),-(SP)			;PUSH WAS DATA
2734	014236	104402		TYPOS				;ONTO STACK
2735	014240	003		.BYTE	3			;FOR
2736	014241	000		.BYTE	0			;ERROR TYPEOUT
2737	014242	122021		CMPB	(RO)+,	(R1)+		;RESET POINTERS
2738	014244	005777	164666	PSRDE3: TST	@SWR			;CHECK FOR HALT ON ERROR
2739	014250	100001		BPL	1\$			;BRANCH IF HALT ON ERROR NOT SET
2740	014252	000000		HALT				;HALT ON ERROR SET
2741	014254	000624		1\$: BR	PSRR1			
2742								
2743								; INTERRUPT DUE TO SOME KIND OF ERROR
2744	014256	100402		PSRER: BMI	PSRE1			;BRANCH ON ERROR BIT 15
2745	014260	104026		ERROR +26				;ERRGR BIT 15 NOT SET
2746	014262	000463		BR	PSRST			
2747								
2748	014264	032713	004000	PSRE1: BIT	#4000,	@CDS		
2749	014270	001414		BEQ	PSRE2			;BRANCH IF NOT
2750	014272	032713	000002	BIT	#2,	@CDS		
2751	014276	001001		BNE	1\$			
2752	014300	104065		ERROR +65				
2753	014302	032777	000020	1\$: BIT	#20,	@SWR		
2754	014310	001001	164626	BNE	2\$			;BRANCH IF BINARY DECK

```

2755 014312 104066          ERROR +66
2756 014314 012737 177660 001250 2$: MOV      #-120, COUNT ; ONLY READ ONE CARD
2757 014322 032713 010000          PSRC2: BIT      #10000, ACDS ; CHECK FOR OFF-LINE
2758 014326 001415          BEQ      PSRE3
2759 014330 032713 040000          BIT      #40000, ACDS ; CHECK FOR CARD READER ERROR
2760 014334 001002          BNE     1$ ; BRANCH IF SET
2761 014336 104035          ERROR +35 ; OFF-LINE BUT NOT CARD READER ERROR
2762 014340 000414          BR      PSRE4
2763
2764 014342 004737 014650          1$: JSR     PC, LASTCD ; CHECK FOR LAST CARD
2765 014346 002402          BLT     2$ ; BRANCH IF NOT
2766 014350 000137 013714          JMP     PSRNC ; BRANCH IF BOTH CARD
2767 014354 104057          2$: ERROR +57 ; CARD READER ERROR BUT NOT BOTH CARD
2768 014356 000137 015306          JMP     DATRST ; RESTART THE ENTIRE TEST
2769
2770 014362 032713 040000          PSRE3: BIT      #40000, ACDS ; CHECK FOR CARD READER ERROR
2771 014366 001401          BEQ     PSRE4 ; BRANCH IF NOT
2772 014370 104060          ERROR +60 ; CARD READER ERROR BUT NOT OFF LINE
2773
2774 014372 032713 020000          PSRE4: BIT      #20000, ACDS
2775 014376 001401          BEQ     1$
2776 014400 104061          ERROR +61 ; END OF FILE ERROR (M1200 ONLY)
2777
2778 014402 032713 002000          1$: BIT      #2000, ACDS
2779 014406 001401          BEQ     2$
2780 014410 104063          ERROR +63 ; DATA LATE ERROR
2781
2782 014412 032713 001000          2$: BIT      #1000, ACDS
2783 014416 001401          BEQ     3$
2784 014420 104064          ERROR +64 ; NON-EXISTANT MEMORY ERROR
2785 014422 032713 077000          3$: BIT      #077000, ACDS ; CHECK ALL ERROR BITS
2786 014426 001001          BNE     PSRST ; BRANCH IF AT LEAST ONE
2787 014430 104037          ERROR +37 ; NONE OF THE ERROR BITS SET
2788 014432 000137 013722          PSRST: JMP     PSRLP ; GO CHECK THE DATA
2789
2790          ; RETURN PORTION OF INTERRUPT SERVICE ROUTINE
2791          ; CALCULATES A NEW "SIZE" (NUMBER OF COLUMNS TO BE READ)
2792          ; SETS UP THE CARD READER BUFFERS, AND ISSUES THE READ COMMAND
2793          ; THEN DOES AN RTI TO THE BACKGROUND ROUTINE
2794 014436 063737 015316 015314 SRETRN: ADD     OFFSET, SIZE
2795 014444 100404          BMI     SRETR1
2796 014446 012737 177660 015316          MOV     #-120, OFFSET
2797 014454 000770          BR      SRETRN
2798 014456 032737 001000 015314 SRETR1: BIT     #001000, SIZE
2799 014464 001004          BNE     SRETR4
2800 014466 012737 000120 015316 SKETR3: MOV     #120, OFFSET
2801 014474 000760          BR      SRETRN
2802 014476 004737 014650          SRETR4: JSR     PC, LASTCD ; CHECK FOR MORE THAN 80 CARDS
2803 014502 003371          BGT     SRETR3 ; BRANCH IF GREATER
2804 014504 013714 015314          MOV     SIZE, ACDC ; SET UP COLMN COUNT
2805 014510 012700 045442          MOV     #BUFBEQ, RO ; RESET TABLE POINTER
2806 014514 010015          MOV     RO, ACDA ; SET UP ADDRESS REG
2807 014516 005213          INC     ACDS ; READ
2808 014520 000002          RTI
    
```

```

2809
2810
2811 ;SUBROUTINE TO SET PACKING MODE AND MOVE THE POINTERS FOR THE DATA.
2812 014522 062737 000240 015326 PAKSET: ADD #160., TSTART ;MOVE TABLE POINTER TO PACKED TABLE
2813 014530 062737 000120 015330 ADD #80., TEND
2814 014536 062701 000240 ADD #160., R1 ;UPDATE TABLE POINTER
2815 014542 163701 015332 SUB CDCNT, R1 ;COMPENSATE FOR BYTES
2816 014546 052713 000602 BIS #2, CDCS ;SET PACKING MODE BIT
2817 014552 000207 RTS PC
2818
2819 ;SUBROUTINE TO TYPE HEADING, TYPE OF DECK, CARD COUNT, AND COLUMN COUNT
2820 014554 005737 001260 TYHEAD: TST ERFLG ;CHECK FOR FIRST ERROR
2821 014560 001004 BNE NOHEAD ;BRANCH IF NOT
2822 014562 005237 001260 INC ERFLG ;SET FLAG
2823 014566 104400 033053 TYPE, MSGI3 ;TYPE HEADING FOR DATA ERRORS
2824 014572 104400 NOHEAD: TYPE ;OUTPUT TYPE OF DECK
2825 014574 000000 DECK: DUMMY ;POINTER TO DECK TITLE
2826 014576 104400 030545 TYPE, SPACE
2827 014602 005237 015332 INC CDCNT ;ADJUST CADR COUNT
2828 014604 013746 015332 MOV CDCNT, -(SP)
2829 014612 104404 TYPDS
2830 014614 005337 015332 DEC CDCNT ;READJUST CADR COUNT
2831 014620 104400 030540 TYPE, SPACE-5
2832 014624 005237 015334 INC CLCNT ;ADJUST COLUMN COUNT
2833 014630 013746 015334 MOV CLCNT, -(SP)
2834 014634 104404 TYPDS
2835 014636 005337 015334 DEC CLCNT ;READJUST COLUMN COUNT
2836 014642 104400 030543 TYPE, SPACE-2
2837 014646 000207 RTS PC
2838
2839 ;SUBROUTINE TO CHECK FOR LAST CARD
2840 014650 013737 015314 015322 LASTCD: MOV SIZE, TEMP1
2841 014656 013737 015332 015324 MOV CDCNT, TEMP2
2842 014664 005237 015324 LSTCD1: INC TEMP2
2843 014670 062737 000120 015322 ADD #120, TEMP1
2844 014676 100772 BMI LSTCD1
2845 014700 023727 015324 000120 CMP TEMP2, #80.
2846 014706 000207 RTS PC
2847
2848 ;SUBROUTINE TO KEEP TRACK OF CARDS
2849 014710 005037 015334 NXCRD: CLR CLCNT ;RESET COLUMN COUNT
2850 014714 005037 001212 CLR STMP5
2851 014720 005237 015332 INC CDCNT ;KEEP TRACK OF CARDS
2852 014724 023727 015332 000120 CMP CDCNT, #120 ;CHECK FOR BOTH CARD
2853 014732 002001 BGE $EOP
2854 014734 000207 RTS PC ;RETURN
2855
2856 ;*****
2857
2858 .SBTTL END OF PASS ROUTINE
2859
2860 ;*INCREMENT THE PASS NUMBER ($PASS)
2861 ;*TYPE "END PASS #XXXXX" (WHERE XXXXX IS A DECIMAL NUMBER)
2862

```

```

2863 ;*IF SW12=1 INHIBIT TRACE TRAP
2864 ;*IF THERES A MONITOR GO TO IT
2865 ;*IF THERE ISN'T JUMP TO HOOK1
2866
2867 014736 SEOP: TST (SP)+ ;CORRECT STACK POINTER TO REPLACE 'RTS'
2868 014738 005726 CMP (SP)+,(SP)+ ;CORRECT STACK POINTER TO REPLACE 'RTI'
2869 014740 022626 CLR $STSN# ;ZERO THE TEST NUMBER
2870 014742 005037 001102 CLR $TIMES ;ZERO THE NUMBER OF ITERATIONS
2871 014746 005037 001220 INC $PASS ;INCREMENT THE PASS NUMBER
2872 014752 005237 001100 BIC #10000,$PASS ;DON'T ALLOW A NEG. NUMBER
2873 014756 042737 100000 001100 DEC (PC)+ ;LOOP?
2874 014764 005327
2875 014766 SEOPCT: .WORD 1
2876 014770 003032 BGT $DOAGN ;YES
2877 014772 012737 MOV (PC)+,$(PC)+ ;RESTORE COUNTER
2878 014774 000001 SENDCT: .WORD 1
2879 014776 014766 SEOPCT
2880 015000 104400 015150 TYPE $ENDMG ;TYPE "END PASS #"
2881 015004 013746 001100 MOV $PASS,-(SP) ;SAVE $PASS FOR TYPEOUT
2882 015010 104404 TYPDS ;GO TYPE--DECIMAL ASCII WITH SIGN
2883 015012 104400 015165 TYPE , $ENULL ;TYPE A NULL CHARACTER
2884 015016
2885 015016 013700 000042 $GET42: MOV #42,R0 ;GET MONITOR ADDRESS
2886 015022 001415 BEQ $DOAGN ;BRANCH IF NO MONITOR
2887 015024 000005 RESET ;MONITOR,CLEAR WORLD
2888 015026 005046 CLR -(SP) ;INSURE THE "T" BIT IS CLEAR
2889 015030 012746 015046 MOV $SENDAD,-(SP) ;SETUP FOR AN RTI OR RTT
2890 015034 000441 BR $RTRN ;GO DO AN RTI OR RTT TO LOAD THE PSW
2891 ;WITH A CLEARED "T" BIT
2892
2893 015036 013700 000042 MOV #42,R0 ;GET MONITOR ADDRESS
2894 015042 001405 BEQ $DOAGN ;BRANCH IF NO MONITOR
2895 015044 000005 RESET ;CLEAR THE WORLD
2896 015046 004710 SENDAD: JSR PC,(R0) ;GO TO MONITOR
2897 015050 000240 NOP ;SAVE ROOM
2898 015052 000240 NOP ;FOR
2899 015054 000240 NOP ;ACT11
2900 015056
2901 015056 005046 $DOAGN: CLR -(SP) ;RESERVE A STACK LOC. FOR THE PS
2902 015060 013746 000034 MOV #34,-(SP) ;SETUP THE TRAP VECTOR
2903 015064 012737 015074 000034 MOV #15,#34 ; TO GET THE PS
2904 015072 104400 TRAP
2905 015074 005726 1$: TST (SP)+ ;CLEAN OFF THE USED PC
2906 015076 012666 000002 MOV (SP)+,$(SP) ;SAVE OFF THE PS
2907 015102 012637 000034 MOV (SP)+,$#34 ;RESTORE TRAP VECTOR
2908 015106 042716 000020 BIC #20,(SP) ;CLEAR THE "T" BIT
2909 015112 032777 010000 164016 BIT #BIT12,$SWR ;RUN WITH TRACE TRAP?
2910 015120 001005 BNE 2$ ;BR IF NO
2911 015122 005137 015146 COM $TBIT ;IS IT TIME FOR TRACE TRAP
2912 015126 100402 BMI 2$ ;BR IF NO
2913 015130 052716 000020 BIS #20,(SP) ;SET TRACE TRAP
2914 015134 012746 015142 2$: MOV $SLOOP,-(SP) ;JUMP TO START OF TEST
2915 015140 000002 $RTRN: RTI ;RETURN--THIS IS CHANGED TO
2916 ;AN "RTT" IF "RTT" IS LEGAL

```



```

2917                                     ;; INSTRUCTION
2918 015142 $LOOP:
2919 015142 000137 015170 JMP @#HOOK1 ;; RETURN
2920 015146 000000 $TBIT: 0
2921 015150 005015 047105 020104 $ENDMG: .ASCIZ <15><12>/END PASS #/
2922 015156 040520 051523 U21440
2923 015164 000
2924 015165 377 377 000 $ENULL: .BYTE -1,-1,0 ;; NULL CHARACTER STRING
2925
2926 015170 032777 000040 163740 HOOK1: BIT #40,@SWR ;CHECK @SWR FOR HALT AT END OF DECK
2927 015176 001402 BEQ ONLINE ;CONTINUE IF NOT SET
2928 015200 070000 HALT ;END OF DECK,SMS SET
2929 015202 000427 BR DECKCK
2930
2931 015204 032713 010000 ONLINE: BIT #10000,@CDS ;CHECK FOR OFF-LINE
2932 015210 001424 BEQ DECKCK ;BRANCH IF NOT
2933 015212 005713 TST @CDS ;CHECK FOR ERROR (BIT 15)
2934 015214 100401 BMI 15 ;BRANCH IF SET OK
2935 015216 104026 ERROR +26 ;ERROR BIT 15 NOT SET
2936
2937 015220 032713 040000 1$: BIT #40000,@CDS ;CHECK FOR CARD READER ERROR
2938 015224 001001 BNE 2$ ;BRANCH IF SET OK
2939 015226 104035 ERROR +35 ;OFF-LINE NOT DUE TO CARD READER ERROR
2940
2941 015230 032713 023471 2$: BIT #023471,@CDS ;CHECK FOR EXTRA BITS SET
2942 015234 001401 BEQ 3$ ;BRANCH IF OK
2943 015236 104015 ERROR +15 ;EXTRA ERROR BITS SET
2944
2945 015240 012712 015250 3$: MOV #ONINT,@ADINT ;SET UP INTERRUPT VECTOR
2946 015244 000001 4$: WAIT ;WAIT FOR AN INTERRUPT
2947 015246 000776 BR 4$ ;WAIT ON TRACE TRAPS
2948
2949 015250 032713 000010 ONINT: BIT #10,@CDS ;CHECK FOR TRANSITION TO ON LINE
2950 015254 001001 BNE 1$ ;BRANCH IF SET OK
2951 015256 104036 ERROR +36 ;INTERRUPT BY OTHER THAN BIT 3 SETTING
2952
2953 015260 022626 1$: CMP (SP)+,(SP)+ ;RESTORE THE STACK
2954 ;WHEN CONTINUING FROM ONE DECK TO ANOTHER, CHECK SW6 FOR TYPE
2955 ;OF TESTING TO BE PERFORMED
2956 015262 005137 001254 DECKCK: COM TRFLG ;TOGGLE TRACE FLAG
2957 015266 032777 000100 163642 BIT #100,@SWR ;CHECK SW6
2958 015274 001402 BEQ 1$ ;BRANCH IF NOT SET
2959 015276 000137 002534 JMP RESTR ;RERUN COMBINED INSTRUCTION AND DATA TEST
2960 015302 000137 012314 1$: JMP DATST
2961
2962 015306 022626 DATRST: CMP (SP)+,(SP)+ ;RESTORE THE STACK
2963 015310 000137 012314 JMP DATST ;RESTART DATA TEST
2964
2965 015314 177660 SIZE: -120
2966 015316 177660 OFFSET: -120
2967 015320 000000 BUFEND: 0
2968 015322 000000 TEMP1: 0
2969 015324 000000 TEMP2: 0
2970 015326 000000 TSTART: 0 ;STARTING ADDRESS OF DATA TABLE

```

N10

MAINDEC 11 - DZCDB-B MACY11 27(654) 1-JUL-77 08:39 PAGE 58  
DZCDB.P11 END OF PASS ROUTINE

SEQ 0130

2971 015330 000000  
2972 015332 000000  
2973 015334 000000  
2974 015336 000000  
2975 015340 000000

TEND: 0  
CDCNT: 0  
CLCNT: 0  
PTOFF: 0  
DERCNT: 0

:END ADDRESS OF DATA TABLE  
:NUMBER OF CARD BEING READ  
:NUMBER OF COLUMN BEING CHECKED  
:OFFSET TO POINTER FOR DATA PRINTOUT  
:DATA ERROR COLUMN COUNT

```

2976
2977          :SETUP FOR ERROR FUNCTION TEST
2978          ER1200:
2979 015342    012706 001100    MOV    #SCMTAG,R6    ; FIRST LOCATION TO BE CLEARED
2980 015346    005026          CLR    (R6)+         ; CLEAR MEMORY LOCATION
2981 015350    022706 001126    CMP    #SBDDAT,R6   ; DONE?
2982 015354    001374          BNE    -6           ; LOOP BACK IF NO
2983 015356    012706 001100    MOV    #STACK,SP    ; SETUP THE STACK POINTER
2984 015362    012737 026326 000020  MOV    #SCOPE,#IOTVEC ; IOT VECTOR FOR SCOPE ROUTINE
2985 015370    012737 000340 000022  MOV    #340,#IOTVEC+2 ; LEVEL 7
2986 015376    012737 026152 000030  MOV    #ERROR,#EMTVEC ; EMT VECTOR FOR ERROR ROUTINE
2987 015404    012737 000340 000032  MOV    #340,#EMTVEC+2 ; LEVEL 7
2988 015412    012737 027374 000034  MOV    #TRAP,#TRAPVEC ; TRAP VECTOR FOR TRAP CALLS
2989 015420    012737 000340 000036  MOV    #340,#TRAPVEC+2 ; LEVEL 7
2990 015426    012737 027430 000024  MOV    #SPWRN,#PWVEC  ; POWER FAILURE VECTOR
2991 015434    012737 000340 000026  MOV    #340,#PWVEC+2  ; LEVEL 7
2992 015442    013737 014774 014766  MOV    SENDCT,SEOPCT ; SETUP END-OF-PROGRAM COUNTER
2993 015450    005037 001220          CLR    $TIMES        ; INITIALIZE NUMBER OF ITERATIONS
2994 015454    012737 015140 000014  MOV    #SRTN,#TBITVEC ; SET "T" BIT VECTOR TO SRTN
2995 015462    012737 000340 000016  MOV    #340,#TBITVEC+2 ; LEVEL 7
2996 015470    012737 000002 015140  MOV    #RTI,SRTN     ; SET SRTN TO A RTI
2997 015476    012737 015524 000010  MOV    #655,#RESVEC  ; TRY TO DO A RTT
2998 015504    005046          CLR    -(SP)        ; DUMMY PS
2999 015506    012746 015514          MOV    #645,-(SP)   ; AND PC
3000 015512    000006          RTT                ; TRY THE RTT
3001 015514    012737 000006 015140 64$: MOV    #RTI,SRTN    ; RTT IS LEGAL--SET SRTN TO A RTT
3002 015522    000402          BR                ;
3003 015524    062706 000010          ADD    #10,SP       ; RTT ILLEGAL--CLEAN OFF THE STACK
3004 015530    012737 000012 000010 65$: MOV    #RESVEC+2,#RESVEC ; RESTORE TRAP CATCHER
3005 015536    005037 015146          CLR    $TBIT        ; CLEAR "T" BIT SWITCH
3006 015542    012737 015542 001106  MOV    #,$LPADR     ; INITIALIZE THE LOOP ADDRESS FOR SCOPE
3007 015550    013746 000004          MOV    #4,-(SP)    ; SAVE ERROR VECTOR
3008 015554    013746 000006          MOV    #6,-(SP)
3009 015560    012737 015574 000004          MOV    #67$,#4     ; SET UP TIME OUT VECTOR
3010 015566    005777 163344          TST    #SWR         ; TRY TO REFERENCE HARDWARE SWR
3011 015572    000407          BR                ; BRANCH IF NO TIMEOUT TRAP OCCURS
3012 015574    012737 000176 001136 67$: MOV    #SWREG,SWR   ; POINT TO SOFTWARE SWR
3013 015602    012737 000174 001140  MOV    #DISPREG,DISPLAY ; POINT TO SOFTWARE DISPLAY REG
3014 015610    022626          CMP    (SP)+,(SP)+ ; RESTORE STACK
3015 015612    012637 000006 68$: MOV    (SP)+,#6    ; RESTORE ERROR VECTOR
3016 015616    012637 000004          MOV    (SP)+,#4
3017 015622    104400 030550          TYPE, CRLF-3       ; MOVE MESSAGE UP ON TTY
3018 015626    104400 031333          TYPE, M1200E      ; INDICATE "ENTERING ERROR FUNCTION
3019                                     ; TESTING OF AN M-1200"
3020 015632    005037 001266          CLR    CD1000      ; CARD READER IS M-1200
3021 015636    000137 016134          JMP    ER1200
3022 015642          ERCD11:
3023 015642    012706 001100    MOV    #SCMTAG,R6    ; FIRST LOCATION TO BE CLEARED
3024 015646    005026          CLR    (R6)+         ; CLEAR MEMORY LOCATION
3025 015650    022706 001126    CMP    #SBDDAT,R6   ; DONE?
3026 015654    001374          BNE    -6           ; LOOP BACK IF NO
3027 015656    012706 001100    MOV    #STACK,SP    ; SETUP THE STACK POINTER
3028 015662    012737 026326 000020  MOV    #SCOPE,#IOTVEC ; IOT VECTOR FOR SCOPE ROUTINE
3029 015670    012737 000340 000022  MOV    #340,#IOTVEC+2 ; LEVEL 7

```



```

3084 016200 012714 177701      MOV      #-77,  @CDC      ;SET UP COLUMN COUNT
3085 016204 012715 045442      MOV      @BUFBEQ,@CDA    ;SET UP BUS ADDRESS
3086 016210 000000      HALT                               ;
3087 016212 005213      INC      @CDS              ;START READING
3088 016214 105713      TSTB    @CDS              ;CHECK FOR CONTROLLER READY
3089 016216 001001      BNE     1$                ;BRANCH IF SET OK
3090 016220 104023      ERROR  +23                ;CONTROLLER READY FAILED TO SET
3091
3092 016222 005713      1$:  TST      @CDS          ;CHECK FOR ERROR ( BIT 15)
3093 016224 001001      BNE     2$                ;BRANCH IF SET OK
3094 016226 104026      ERROR  +26                ;ERROR BIT 15 NOT SET
3095
3096 016230 032713 002000      2$:  BIT      @2000, @CDS  ;CHECK FOR DATA LATE ERROR (BIT 10)
3097 016234 001001      BNE     3$                ;BRANCH IF SET OK
3098 016236 104042      ERROR  +42                ;DATA LATE BIT 10 NOT SET
3099
3100 016240 032713 075577      3$:  BIT      @075577,@CDS ;CHECK FOR ANY OTHER BITS
3101 016244 001401      BEQ     4$                ;BRANCH IF OK
3102 016246 104004      ERROR  +4                 ;EXTRA BITS SET IN STATUS WORD
3103
3104 016250
3105 ;*****
3106 ;*TEST 34 TEST ERROR AND OFF LINE BITS
3107 ;*****
3108 016250 000004      †ST34: SCOPE
3109 ;THE CARD READER GOING OFF-LINE SHOULD SET ERROR (BIT 15)
3110 ;AND OFF-LINE (BIT 12)
3111 ;GOING BACK ON LINE SHOULD SET "TRANSITION TO ON-LINE" (BIT 3)
3112 016252 004737 025744      JSR     PC_INIT          ;INITIALIZE STATUS REGISTER
3113 016256 104400 035675      TYPE,  MSG33            ;TST34 OFF-LINE TEST
3114 016262 104400 031706      TYPE,  MSG3             ;"PRESS CARD READER 'STOP'"
3115 016266 104400 031632      TYPE,  MSG2             ;"THEN HIT 'CONTINUE' ON THE CONSOLE"
3116 016272 104400 030550      TYPE,  CRLF-3           ;MOVE MESSAGE UP ON TTY
3117 016276 000000      HALT
3118 016300 032713 010000      BIT     @10000,@CDS     ;CHECK BIT 12
3119 016304 001001      BNE     1$                ;BRANCH IF SET
3120 016306 104043      ERROR  +43                ;OFF-LINE (BIT 12) WASN'T SET
3121
3122 016310 005713      1$:  TST      @CDS          ;CHECK BIT 15
3123 016312 100401      BNE     2$                ;BRANCH IF SET
3124 016314 104026      ERROR  +26                ;ERROR (BIT 15) WASN'T SET
3125
3126 016316 031327 067577      2$:  BIT      @CDS, @067577 ;CHECK FOR EXTRA BITS
3127 016322 001401      BEQ     3$                ;BRANCH IF OK
3128 016324 104015      ERROR  +15                ;STATUS WORD ERROR
3129
3130 016326 104400 031576      3$:  TYPE,  MSG1           ;"PRESS CARD READER 'RESET'";
3131 016332 104400 031632      TYPE,  MSG2           ;"THEN HIT 'CONTINUE' ON THE CONSOLE"
3132 016336 104400 030550      TYPE,  CRLF-3           ;MOVE MESSAGE UP ON TTY
3133 016342 000000      HALT
3134
3135 016344 032713 000010      BIT     @10, @CDS       ;CHECK FOR TRANSITION TO ON-LINE(BIT 3)
3136 016350 001001      BNE     4$                ;BRANCH IF SET OK
3137 016352 104036      ERROR  +36                ;TRANSITION TO ON-LINE FAILED TO SET

```

```

3138
3139 016354 032713 010000 4$: BIT #10000, @CDS ;CHECK FOR OFF-LINE
3140 016360 001401 ;BEQ 5$ ;BRANCH IF OK
3141 016362 104044 ;ERROR +44 ;OFF-LINE STILL SET
3142
3143 016364 005713 5$: TST @CDS ;CHECK ERROR (BIT 15)
3144 016366 100401 ;BMI 6$ ;BRANCH IF STILL SET
3145 016370 104026 ;ERROR +26 ;ERROR BIT 15 CLEARED
3146
3147 016372 032713 077567 6$: BIT #077567, @CDS ;CHECK FOR EXTRA BITS
3148 016376 001401 ;BEQ 7$ ;BRANCH IF OK
3149 016400 104015 ;ERROR +15 ;EXTRA STATUS BITS SET
3150
3151 016402 7$:
3152 *****
3153 016402 000004 †ST35: SCOPE
3154 ;TRYING TO READ WHEN CARD READER IS OFF-LINE SHOULD CAUSE AN INTERRUPT
3155 ;CHECK THAT AN INTERRUPT OCCURS WHEN THE CARD READER COMES ON LINE
3156 016404 004737 025744 JSR PC INIT ;INITIALIZE STATUS REGISTER
3157 016410 012712 016652 MOV #TINTC, @ADINT ;LOAD RETURN POINTER
3158 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
3159 016414 005046 CLR -(SP) ;;
3160 016416 013746 000034 MOV 34, -(SP) ;;SAVE CURRENT TRAP VECTOR
3161 016422 012737 016432 000034 MOV #64$, 34 ;;SETUP NEW TRAP VECTOR
3162 016430 104400 TRAP ;;PUSH OLD PSW AN PCON STACK
3163 016432 016666 000002 000006 64$: MOV 2(SP), 6(SP) ;;
3164 016440 012716 016446 MOV #65$, (SP) ;;REPLACE OLD PC WITH NEW
3165 016444 000002 RTI ;;RESTORE PSW
3166 016446 012637 000034 65$: MOV (SP)+, 34 ;;RESTORE OLD TRAP VECTOR
3167 016452 012637 001214 MOV (SP)+, $TMP6
3168 016456 052737 000340 001214 BIS #340, $TMP6
3169 016464 013746 001214 MOV $TMP6, -(SP) ;;PUT NEW PS ON STACK
3170 016470 012746 016476 MOV #66$, -(SP) ;;PUT NEW PC ON STACK
3171 016474 000002 RTI ;;POP NEW PC AND PS
3172 016476 66$:
3173 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(@DINT)"
3174 016476 005046 CLR -(SP) ;;
3175 016500 013746 000034 MOV 34, -(SP) ;;SAVE CURRENT TRAP VECTOR
3176 016504 012737 016514 000034 MOV #67$, 34 ;;SETUP NEW TRAP VECTOR
3177 016512 104400 TRAP ;;PUSH OLD PSW AN PCON STACK
3178 016514 016666 000002 000006 67$: MOV 2(SP), 6(SP) ;;
3179 016522 012716 016530 MOV #68$, (SP) ;;REPLACE OLD PC WITH NEW
3180 016526 000002 RTI ;;RESTORE PSW
3181 016530 012637 000034 68$: MOV (SP)+, 34 ;;RESTORE OLD TRAP VECTOR
3182 016534 012662 000002 MOV (SP)+, 2(@DINT)
3183 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
3184 016540 005046 CLR -(SP) ;;
3185 016542 013746 000034 MOV 34, -(SP) ;;SAVE CURRENT TRAP VECTOR
3186 016546 012737 016556 000034 MOV #69$, 34 ;;SETUP NEW TRAP VECTOR
3187 016554 104400 TRAP ;;PUSH OLD PSW AN PCON STACK
3188 016556 016666 000002 000006 69$: MOV 2(SP), 6(SP) ;;
3189 016564 012716 016572 MOV #70$, (SP) ;;REPLACE OLD PC WITH NEW
3190 016570 000002 RTI ;;RESTORE PSW
3191 016572 012637 000034 70$: MOV (SP)+, 34 ;;RESTORE OLD TRAP VECTOR

```

```

3192 016576 012637 001214      MOV      (SP)+,$TMP6
3193 016602 042737 000340 001214      BIC      #340,$TMP6
3194 016610 013746 001214      MOV      $TMP6,-(SP)      ;; PUT NEW PS ON STACK
3195 016614 012746 016622      MOV      #715,-(SP)      ;; PUT NEW PC ON STACK
3196 016620 000002      RTI      ;; POP NEW PC AND PS
3197 016622      71$:
3198 016622 012713 000100      MOV      #100,ACDS      ;; SET INTERRUPT ENABLE
3199 016626 104400 035724      TYPE,   MSG34          ;; TST35 SPECIAL INT. COND. TEST
3200 016632 104400 031706      TYPE,   MSG3          ;; "PRESS CARD READER 'STOP'"
3201 016636 104400 030550      TYPE,   CRLF-3        ;; MOVE MESSAGE UP ON TTY
3202 016642 032713 010000      TLOPC:  BIT      #10000,ACDS  ;; WAIT FOR OFF-LINE TO SET
3203 016646 001775      BEQ     TLOPC
3204 016650 000402      BR      CONTC        ;; SKIP INTERRUPT HANDLER
3205
3206 016652 104021      TINTC:  ERROR +21      ;; 'STOP' SHOULDN'T CAUSE AN INTERRUPT
3207 016654 000002      RTI      ;; RETURN FROM THE INTERRUPT
3208
3209 016656 105713      CONTC:  TSTB   ACDS      ;; CHECK CONTROLLER READY BIT 7
3210 016660 100401      BMI     1$          ;; BRANCH IF OK
3211 016662 104023      ERROR +23          ;; CU READY DIDN'T SET YET
3212
3213 016664 005713      1$:     TST     ACDS      ;; CHECK ERROR BIT
3214 016666 100401      BMI     2$          ;; BRANCH IF SET
3215 016670 104026      ERROR +26          ;; ERROR (BIT 15) NOT SET
3216
3217 016672 032713 067477      2$:     BIT     #067477,ACDS  ;; CHECK FOR EXTRA BITS
3218 016676 001401      BEQ     3$          ;; BRANCH IF OK
3219 016700 104004      ERROR +4          ;; STATUS WORD ERROR
3220
3221 016702 012712 017120      3$:     MOV     #TINTCA,ADINT  ;; LOAD RETURN POINTER
3222      : THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
3223 016706 005046      CLR     -(SP)      ;;
3224 016710 013746 000034      MOV     34,-(SP)   ;; SAVE CURRENT TRAP VECTOR
3225 016714 012737 016724 000034      MOV     #64$,34   ;; SETUP NEW TRAP VECTOR
3226 016722 104400      TRAP    ;; PUSH OLD PSW AN PCOM STACK
3227 016724 016666 000002 000006 64$:     MOV     2(SP),6(SP)  ;;
3228 016732 012716 016740      MOV     #65$,1(SP)  ;;
3229 016736 000002      RTI     ;; REPLACE OLD PC WITH NEW
3230 016740 012637 000034      65$:     MOV     (SP)+,34   ;; RESTORE PSW
3231 016744 012637 001214      MOV     (SP)+,$TMP6  ;; RESTORE OLD TRAP VECTOR
3232 016750 052737 000340 001214      BIS     #340,$TMP6
3233 016756 013746 001214      MOV     $TMP6,-(SP)  ;; PUT NEW PS ON STACK
3234 016762 012746 016770      MOV     #66$,-(SP)  ;; PUT NEW PC ON STACK
3235 016766 000002      RTI     ;; POP NEW PC AND PS
3236 016770      66$:
3237      : THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
3238 016770 005046      CLR     -(SP)      ;;
3239 016772 013746 000034      MOV     34,-(SP)   ;; SAVE CURRENT TRAP VECTOR
3240 016776 012737 017006 000034      MOV     #67$,34   ;; SETUP NEW TRAP VECTOR
3241 017004 104400      TRAP    ;; PUSH OLD PSW AN PCOM STACK
3242 017006 016666 000002 000006 67$:     MOV     2(SP),6(SP)  ;;
3243 017014 012716 017022      MOV     #68$,1(SP)  ;;
3244 017020 000002      RTI     ;; REPLACE OLD PC WITH NEW
3245 017022 012637 000034      68$:     MOV     (SP)+,34   ;; RESTORE PSW
3245      ;; RESTORE OLD TRAP VECTOR
    
```

```

3246 017026 012662 000002      MOV      (SP)+,2(ADINT)
3247      ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
3248 017032 005046      CLR      -(SP)
3249 017034 013746 000034      MOV      34,-(SP)
3250 017040 012737 017050 000034      MOV      #69$,34
3251 017046 104400      TRAP
3252 017050 016666 000002 000006 69$:      MOV      2(SP),6(SP)
3253 017056 012716 017064      MOV      #70$, (SP)
3254 017062 000002      RTI
3255 017064 012537 000034 70$:      MOV      (SP)+,34
3256 017070 012637 001214      MOV      (SP)+,$TMP6
3257 017074 042737 000340 001214      BIC      #340,$TMP6
3258 017102 013746 001214      MOV      $TMP6,-(SP)
3259 017106 012746 017114      MOV      #71$,-(SP)
3260 017112 000002      RTI
3261 017114      71$:
3262 017114 005213      INC      @CDS
3263 017116 000777      BR
3264      ;TRY TO READ A CARD
3265 017120 022626      TINTCA: CMP      (SP)+, (SP)+
3266 017122 105713      TSTB     @CDS
3267 017124 100401      BMI     15
3268 017126 104023      ERROR +23
3269      ;RESTORE THE STACK
3270 017130 032713 010000 15:      BIT      #10000, @CDS
3271 017134 001001      BNE     25
3272 017136 104043      ERROR +43
3273      ;CHECK FOR OFF-LINE BIT 12
3274 017140 005713 25:      TST      @CDS
3275 017142 100401      BMI     35
3276 017144 104026      ERROR +26
3277      ;BRANCH IF SET
3278 017146 032713 067477 35:      BIT      #067477,@CDS
3279 017152 001401      BEQ     45
3280 017154 104004      ERROR +4
3281      ;CHECK FOR EXTRA BITS
3282 017156 012712 017402 45:      MOV      #TINTCB,@ADINT
3283      ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
3284 017162 005046      CLR      -(SP)
3285 017164 013746 000034      MOV      34,-(SP)
3286 017170 012737 017200 000034      MOV      #64$,34
3287 017176 104400      TRAP
3288 017200 016666 000002 000006 64$:      MOV      2(SP),6(SP)
3289 017206 012716 017214      MOV      #65$, (SP)
3290 017212 000002      RTI
3291 017214 012637 000034 65$:      MOV      (SP)+,34
3292 017220 012637 001214      MOV      (SP)+,$TMP6
3293 017224 052737 000340 001214      BIS      #340,$TMP6
3294 017232 013746 001214      MOV      $TMP6,-(SP)
3295 017236 012746 017244      MOV      #66$,-(SP)
3296 017242 000002      RTI
3297 017244      66$:
3298      ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
3299 017244 005046      CLR      -(SP)

```



```

3300 017246 013746 000034          MOV    34, -(SP)          ;; SAVE CURRENT TRAP VECTOR
3301 017252 012737 017262 000034    MOV    #67$, 34         ;; SETUP NEW TRAP VECTOT
3302 017260 104400                TRAP                          ;; PUSH OLD PSW AN PCON STACK
3303 017262 016666 000002 000006 67$:  MOV    2(SP), 6(SP)      ;;
3304 017270 012716 017276          MOV    #68$, (SP)       ;;
3305 017274 000002                RTI                          ;; RESTORE PSW
3306 017276 012637 000034          MOV    (SP)+, 34        ;; RESTORE OLD TRAP VECTOR
3307 017302 012662 000002          MOV    (SP)+, 2(ADINT)
3308                                ; THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340, PS"
3309 017306 005046                CLR    -(SP)            ;;
3310 017310 013746 000034          MOV    34, -(SP)       ;; SAVE CURRENT TRAP VECTOR
3311 017314 012737 017324 000034    MOV    #69$, 34         ;; SETUP NEW TRAP VECTOT
3312 017322 104400                TRAP                          ;; PUSH OL' PSW AN PCON STACK
3313 017324 016666 000002 000006 69$:  MOV    2(SP), 6(SP)      ;;
3314 017332 012716 017340          MOV    #70$, (SP)       ;;
3315 017336 000002                RTI                          ;; RESTORE PSW
3316 017340 012637 000034          MOV    (SP)+, 34        ;; RESTORE OLD TRAP VECTOR
3317 017344 012637 001214          MCV    (SP)+, $TMP6
3318 017350 042737 000340 001214    BIC    #340, $TMP6
3319 017356 013746 001214          MOV    $TMP6, -(SP)     ;; PUT NEW PS ON STACK
3320 017362 012746 017370          MOV    #71$, -(SP)     ;; PUT NEW PC ON STACK
3321 017366 000002                RTI                          ;; POP NEW PC AND PS
3322 017370                71$:
3323 017370 104400 031576          TYPE,  MSG1             ; "PRESS CARD READER 'RESET'"
3324 017374 104400 030550          TYPE,  CRLF-3          ; MOVE MESSAGE UP ON TTY
3325 017400 000777                BR      .                ; WAIT FOR THE INTERRUPT
3326
3327 017402 022626                TINTCB: CMP    (SP)+, (SP)+ ;; RESTORE THE STACK
3328 017404 032713 000010          BIT    #10,  @CDS      ;; CHECK FOR TRANSITION TO ON-LINE(BIT 3)
3329 017410 001031                BNE    1$              ;; BRANCH IF SET OK
3330 017412 104036                ERROR +36              ; TRANSITION TO ON-LINE FAILED TO SET
3331
3332 017414 032713 010000          1$:  BIT    #10000, @CDS  ;; CHECK FOR OFF-LINE
3333 017420 001401                BEQ    2$              ;; BRANCH IF OK
3334 017422 104044                ERROR +44              ; OFF-LINE STILL SET
3335
3336 017424 005713                2$:  TST    @CDS           ;; CHECK ERROR (BIT 15)
3337 017426 100401                BMI    3$              ;; BRANCH IF STILL SET
3338 017430 104026                ERROR +26              ; ERROR BIT 15 CLEARED
3339
3340 017432 032713 077467          3$:  BIT    #077467, @CDS  ;; CHECK FOR EXTRA BITS
3341 017436 001401                BEQ    4$              ;; BRANCH IF OK
3342 017440 104015                ERROR +15              ; EXTRA STATUS BITS SET
3343
3344 017442                4$:
3345                ; *****
3346                ; *TEST 36      TEST INPUT HOPPER EMPTY
3347                ; *****
3348 017442 000004          †TST36: SCOPE
3349                ; INPUT HOPPER EMPTY SHOULD SET SPECIAL CONDITION
3350                ; CHECK THAT INTERRUPTS OCCUR WHEN THE CARD READER COMES ON LINE
3351 017444 004737 025744          JSR    PC, INIT        ; INITIALIZE STATUS REGISTER
3352 017450 104400 035765          TYPE,  MSG35           ; TST36 HOPPER EMPTY TEST
3353 017454 104400 031774          TYPE,  MSG5            ; "REMOVE ALL CARDS FROM THE INPUT HOPPER"

```

```

3354 017460 104400 031632 TYPE, MSG2 ;"THEN HIT 'CONTINUE' ON THE CONSOLE"
3355 017464 104400 030550 TYPE, CRLF-3 ;MOVE MESSAGE UP ON TTY
3356 017470 000000 HALT
3357 017472 032713 010000 BIT #10000,ACDS ;CHECK BIT12
3358 017476 001001 BNE 15 ;BRANCH IF SET
3359 017500 104043 ERROR +43 ;OFF-LINE (BIT 12) WASN'T SET
3360
3361 017502 005713 15: TST ACDS ;CHECK ERROR BIT
3362 017504 100401 BMI 25 ;BRANCH IF SET
3363 017506 104026 ERROR +26 ;ERROR (BIT 15) NOT SET
3364
3365 017510 032713 040000 25: BIT #40000, ACDS ;CHECK FOR CARD READER ERROR
3366 017514 001001 BNE 35 ;BRANCH IF SET
3367 017516 104035 ERROR +35 ;CARD READER ERROR BIT 14 NOT SET
3368
3369 017520 032713 027573 35: BIT #027573,ACDS ;CHECK FOR EXTRA BITS
3370 017524 001401 BEQ 45 ;BRANCH IF OK
3371 017526 104015 ERROR +15 ;STATUS WORD ERROR
3372
3373 017530 012712 017764 45: MOV #TINTD,ADINT ;LOAD RETURN POINTER
3374 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
3375 017534 005046 CLR -(SP) ;;
3376 017536 013746 000034 MOV 34,-(SP) ;;SAVE CURRENT TRAP VECTOR
3377 017542 012737 017552 000034 MOV #64$,34 ;;SETUP NEW TRAP VECTOR
3378 017550 104400 TRAP ;;PUSH OLD PSW AN PCON STACK
3379 017552 016666 000002 000006 64$: MOV 2(SP),6(SP) ;;
3380 017560 012716 017566 MOV #65$,1(SP) ;;REPLACE OLD PC WITH NEW
3381 017564 000002 RTI ;;RESTORE PSW
3382 017566 012637 000034 65$: MOV (SP)+,34 ;;RESTORE OLD TRAP VECTOR
3383 017572 012637 001214 MOV (SP)+,$TMP6
3384 017576 052737 000340 001214 BIS #340,$TMP6
3385 017604 013746 001214 MOV $TMP6,-(SP) ;;PUT NEW PS ON STACK
3386 017610 012746 017616 MOV #66$,-(SP) ;;PUT NEW PC ON STACK
3387 017614 000002 RTI ;;POP NEW PC AND PS
3388 017616 66$:
3389 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
3390 017616 005046 CLR -(SP) ;;
3391 017620 013746 000034 MOV 34,-(SP) ;;SAVE CURRENT TRAP VECTOR
3392 017624 012737 017634 000034 MOV #67$,34 ;;SETUP NEW TRAP VECTOR
3393 017632 104400 TRAP ;;PUSH OLD PSW AN PCON STACK
3394 017634 016666 000002 000006 67$: MOV 2(SP),6(SP) ;;
3395 017642 012716 017650 MOV #68$,1(SP) ;;REPLACE OLD PC WITH NEW
3396 017646 000002 RTI ;;RESTORE PSW
3397 017650 012637 000034 68$: MOV (SP)+,34 ;;RESTORE OLD TRAP VECTOR
3398 017654 012662 000002 MOV (SP)+,2(ADINT)
3399 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,FS"
3400 017660 005046 CLR -(SP) ;;
3401 017662 013746 000034 MOV 34,-(SP) ;;SAVE CURRENT TRAP VECTOR
3402 017666 012737 017676 000034 MOV #69$,34 ;;SETUP NEW TRAP VECTOR
3403 017674 104400 TRAP ;;PUSH OLD PSW AN PCON STACK
3404 017676 016666 000002 000006 69$: MOV 2(SP),6(SP) ;;
3405 017704 012716 017712 MOV #70$,1(SP) ;;REPLACE OLD PC WITH NEW
3406 017710 000002 RTI ;;RESTORE PSW
3407 017712 012637 000034 70$: MOV (SP)+,34 ;;RESTORE OLD TRAP VECTOR
    
```

```

3408 017716 012637 001214      MOV      (SP)+,$TMP6
3409 017722 042737 000C40 001214      BIC      #340,$TMP6
3410 017730 013746 001214      MOV      $TMP6,-(SP)      ;; PUT NEW PS ON STACK
3411 017734 012746 017742      MOV      #71$,-(SP)      ;; PUT NEW PC ON STACK
3412 017740 000002                          RTI      ;; POP NEW PC AND PS
3413 017742                          71$:
3414 017742 012713 000100      MOV      #100, 2CDS      ;; SET INTERRUPT ENABLE
3415 017746 104400 032045      TYPE,   MSG6            ;; "RESTORE CARDS TO THE INPUT HOPPER"
3416 017752 104400 031576      TYPE,   MSG1            ;; "PRESS CARD READER 'RESET'"
3417 017756 104400 030550      TYPE,   CRLF-3         ;; MOVE MESSAGE UP ON TTY
3418 017762 000777      BR      .              ;; WAIT FOR THE INTERRUPT
3419
3420 017764 022626                          TINTD:  CMP      (SP)+,(SP)+      ;; RESTORE THE STACK
3421 017766 012712 020214      MOV      #TINTDA,2ADINT  ;; LOAD RETURN POINTER
3422                          : THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
3423 017772 005046      CLR      -(SP)          ;;
3424 017774 013746 000034      MOV      34,-(SP)       ;; SAVE CURRENT TRAP VECTOR
3425 020000 012737 020010 000034      MOV      #64$,34        ;; SETUP NEW TRAP VECTOR
3426 020006 104400      TRAP                          ;; PUSH OLD PSW AN PC ON STACK
3427 020010 016666 000002 0J0006 64$:      MOV      2(SP),6(SP)     ;;
3428 020016 012716 020024      MOV      #65$, (SP)     ;;
3429 020022 000002                          RTI      ;; RESTORE PSW
3430 020024 012637 000034 65$:      MOV      (SP)+,34        ;; RESTORE OLD TRAP VECTOR
3431 020030 012637 001214      MOV      (SP)+,$TMP6
3432 020034 052737 000340 001214      BIS      #340,$TMP6
3433 020042 013746 001214      MOV      $TMP6,-(SP)    ;; PUT NEW PS ON STACK
3434 020046 012746 020054      MOV      #66$,-(SP)    ;; PUT NEW PC ON STACK
3435 020052 000002                          RTI      ;; POP NEW PC AND PS
3436 020054                          66$:
3437                          : THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
3438 020054 005046      CLR      -(SP)          ;;
3439 020056 013746 000034      MOV      34,-(SP)       ;; SAVE CURRENT TRAP VECTOR
3440 020062 012737 020072 000034      MOV      #67$,34        ;; SETUP NEW TRAP VECTOR
3441 020070 104400      TRAP                          ;; PUSH OLD PSW AN PC ON STACK
3442 020072 016666 000002 000006 67$:      MOV      2(SP),6(SP)     ;;
3443 020100 012716 020106      MOV      #68$, (SP)     ;;
3444 020104 000002                          RTI      ;; RESTORE PSW
3445 020106 012637 000034 68$:      MOV      (SP)+,34        ;; RESTORE OLD TRAP VECTOR
3446 020112 012662 000002      MOV      (SP)+,2(ADINT)
3447                          : THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
3448 020116 005046      CLR      -(SP)          ;;
3449 020120 013746 000034      MOV      34,-(SP)       ;; SAVE CURRENT TRAP VECTOR
3450 020124 012737 020134 000034      MOV      #69$,34        ;; SETUP NEW TRAP VECTOR
3451 020132 104400      TRAP                          ;; PUSH OLD PSW AN PC ON STACK
3452 020134 016666 000002 000006 69$:      MOV      2(SP),6(SP)     ;;
3453 020142 012716 020150      MOV      #70$, (SP)     ;;
3454 020146 000002                          RTI      ;; RESTORE PSW
3455 020150 012637 000034 70$:      MOV      (SP)+,34        ;; RESTORE OLD TRAP VECTOR
3456 020154 012637 001214      MOV      (SP)+,$TMP6
3457 020160 042737 000340 001214      BIC      #340,$TMP6
3458 020166 013746 001214      MOV      $TMP6,-(SP)    ;; PUT NEW PS ON STACK
3459 020172 012746 020200      MOV      #71$,-(SP)    ;; PUT NEW PC ON STACK
3460 020176 000002                          RTI      ;; POP NEW PC AND PS
3461 020200                          71$:
    
```

```

3462 020200 012714 177701      MOV    #-77,  ACDC    ;SET UP COLUMN COUNT
3463 020204 012715 045442      MOV    #BUFBEG, ACDA  ;SET UP BUS ADDRESS
3464 020210 005213              INC    ACDS           ;START READING
3465 020212 000777              BR     .              ;WAIT FOR AN INTERRUPT
3466
3467 020214 022626              TINTDA: CMP   (SP)+, (SP)+ ;RESTORE THE STACK
3468 020216 022713 000300      CMP    #000300, ACDS  ;CHECK THE CARD READER STATUS
3469 020222 001471              BEQ    1$             ;BRANCH IF OK
3470 020224 104004              ERROR +4              ;CARD READER STATUS ERROR
3471
3472 020226              1$:
3473 ;*****
3474 ;*TEST 37      TEST OUTPUT STACKER FULL
3475 ;*****
3476 020226 000004      TST37: SCOPE
3477 ;OUTPUT STACKER FULL SHOULD SET BITS 15, 14, 12, 7
3478 020230 004737 025744      JSR    PC INIT       ;INITIALIZE STATUS REGISTER
3479 020234 104400 036020      TYPE,  MSG36         ;TST37 STACKER FULL TEST
3480 020240 104400 032111      TYPE,  MSG7          ;"PULL OUTPUT STACKER PRESSURE ARM
3481 ;"ALL THE WAY DOWN"
3482 020244 104400 031632      TYPE,  MSG2          ;"THEN HIT 'CONTINUE' ON THE CONSOLE"
3483 020250 104400 030550      TYPE,  CRLF-3        ;MOVE MESSAGE UP ON TTY
3484 020254 000000              HALT
3485 020256 032713 010000      BIT    #10000, ACDS  ;CHECK OFF-LINE BIT 12
3486 020262 001001              BNE    1$             ;BRANCH IF SET
3487 020264 104043              ERROR +43            ;OFF-LINE (BIT 12) WASN'T SET
3488
3489 020266 005713              1$:  TST    ACDS         ;CHECK ERROR BIT 15
3490 020270 100401              BMI    2$             ;BRANCH IF SET
3491 020272 104026              ERROR +26            ;ERROR BIT 15 NOT SET
3492
3493 020274 032713 040000      2$:  BIT    #40000, ACDS ;CHECK FOR CARD READER ERPOP
3494 020300 001001              BNE    3$             ;BRANCH IF SET
3495 020302 104035              ERROR +35            ;CARD READER ERROR BIT 14 NOT SET
3496
3497 020304 032713 027577      3$:  BIT    #027577, ACDS ;CHECK FOR EXTRA BITS
3498 020310 001401              BEQ    4$             ;BRANCH IF OK
3499 020312 104015              ERROR +15            ;STATUS WORD ERROR
3500
3501 020314 012712 020544      4$:  MOV    #TINTE, ADINT ;LOAD RETURN POINTER
3502 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340, PS"
3503 020320 005046              CLR    -(SP)          ;
3504 020322 013746 000034      MOV    34, -(SP)     ;SAVE CURRENT TRAP VECTOR
3505 020326 012737 020336 000034  MOV    #64$, 34      ;SETUP NEW TRAP VECTOT
3506 020334 104400              TRAP
3507 020336 016666 000002 000006 64$: MOV    2(SP), 6(SP)  ;
3508 020344 012716 020352      MOV    #65$, (SP)   ;
3509 020350 000002              RTI                  ;;RESTORE PSW
3510 020352 012637 000034      65$: MOV    (SP)+, 34  ;;REPLACE OLD PC WITH NEW
3511 020356 012637 001214      MOV    (SP)+, $TMP6 ;;RESTORE OLD TRAP VECTOR
3512 020362 052737 000340 001214  BIS    #340, $TMP6
3513 020370 013746 001214      MOV    $TMP6, -(SP) ;;PUT NEW PS ON STACK
3514 020374 012746 020402      MOV    #66$, -(SP) ;;PUT NEW PC ON STACK
3515 020400 000002              RTI                  ;;POP NEW PC AND PS

```

```

3516 020402          66$:
3517          : THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
3518 020402 005046 CLR      -(SP)          ;;
3519 020404 013746 000034 MOV     34,-(SP)        ;; SAVE CURRENT TRAP VECTOR
3520 020410 012737 020420 000034 MOV     #67$,34        ;; SETUP NEW TRAP VECTOT
3521 020416 104400 TRAP          ;; PUSH OLD PSW AN PCON STACK
3522 020420 016666 000002 000006 67$: MOV     2(SP),6(SP)      ;;
3523 020426 012716 020434 MOV     #68$, (SP)      ;; REPLACE OLD PC WITH NEW
3524 020432 000002 RTI          ;; RESTORE PSW
3525 020434 012637 000034 68$: MOV     (SP)+,34          ;; RESTORE OLD TRAP VECTOR
3526 020440 012662 000002 MOV     (SP)+,2(ADINT)
3527          : THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
3528 020444 005046 CLR      -(SP)          ;;
3529 020446 013746 000034 MOV     34,-(SP)        ;; SAVE CURRENT TRAP VECTOR
3530 020452 012737 020462 000034 MOV     #69$,34        ;; SETUP NEW TRAP VECTOT
3531 020460 104400 TRAP          ;; PUSH OLD PSW AN PCON STACK
3532 020462 016666 000002 000006 69$: MOV     2(SP),6(SP)      ;;
3533 020470 012716 020476 MOV     #70$, (SP)      ;; REPLACE OLD PC WITH NEW
3534 020474 000002 RTI          ;; RESTORE PSW
3535 020476 012637 000034 70$: MOV     (SP)+,34          ;; RESTORE OLD TRAP VECTOR
3536 020502 012637 001214 MOV     (SP)+,$TMP6
3537 020506 042737 000340 001214 BIC     #340,$TMP6
3538 020514 013746 001214 MOV     $TMP6,-(SP)      ;; PUT NEW PS ON STACK
3539 020520 012746 020526 MOV     #71$,-(SP)      ;; PUT NEW PC ON STACK
3540          RTI          ;; POP NEW PC AND PS
3541 020526          71$:
3542 020526 012713 000100 MOV     #100, 2CDS      ;; SET INTERRUPT ENABLE
3543 020532 104400 031576 TYPE,   MSG1          ;; "PRESS CARD READER 'RESET'"
3544 020536 104400 030550 TYPE,   CRLF-3       ;; MOVE MESSAGE UP ON TTY
3545 020542 000777 BR          ;; WAIT FOR THE INTERRUPT
3546
3547 020544 022626 TINTEN: CMP     (SP)+, (SP)+      ;; RESTORE THE STACK
3548 020546 012712 020774 MOV     #TINTEN,2ADINT  ;; LOAD RETURN POINTER
3549          : THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
3550 020552 005046 CLR      -(SP)          ;;
3551 020554 013746 000034 MOV     34,-(SP)        ;; SAVE CURRENT TRAP VECTOR
3552 020560 012737 020570 000034 MOV     #64$,34        ;; SETUP NEW TRAP VECTOT
3553 020566 104400 TRAP          ;; PUSH OLD PSW AN PCON STACK
3554 020570 016666 000002 000006 64$: MOV     2(SP),6(SP)      ;;
3555 020576 012716 020604 MOV     #65$, (SP)      ;; REPLACE OLD PC WITH NEW
3556 020602 000002 RTI          ;; RESTORE PSW
3557 020604 012637 000034 65$: MOV     (SP)+,34          ;; RESTORE OLD TRAP VECTOR
3558 020610 012637 001214 MOV     (SP)+,$TMP6
3559 020614 052737 000340 001214 BIS     #340,$TMP6
3560 020622 013746 001214 MOV     $TMP6,-(SP)      ;; PUT NEW PS ON STACK
3561 020626 012746 020634 MOV     #66$,-(SP)      ;; PUT NEW PC ON STACK
3562 020632 000002 RTI          ;; POP NEW PC AND PS
3563 020634          66$:
3564          : THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
3565 020634 005046 CLR      -(SP)          ;;
3566 020636 013746 000034 MOV     34,-(SP)        ;; SAVE CURRENT TRAP VECTOR
3567 020642 012737 020652 000034 MOV     #67$,34        ;; SETUP NEW TRAP VECTOT
3568 020650 104400 TRAP          ;; PUSH OLD PSW AN PCON STACK
3569 020652 016666 000002 000006 67$: MOV     2(SP),6(SP)      ;;

```

```

3570 020660 012716 020666      MOV      #68$, (SP)          ;;REPLACE OLD PC WITH NEW
3571 020664 000002              RTI                      ;;RESTORE PSW
3572 020666 012637 000034      68$:  MOV      (SP)+, 34          ;;RESTORE OLD TRAP VECTOR
3573 020672 012662 000002      MOV      (SP)+, 2(ADINT)
3574              ; THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340, PS"
3575 020676 005046              CLR      -(SP)
3576 020700 013746 000034      MOV      34, -(SP)          ;;SAVE CURRENT TRAP VECTOR
3577 020704 012737 020714 000034      MOV      #69$, 34          ;;SETUP NEW TRAP VECTOT
3578 020712 104400              TRAP
3579 020714 016666 000002 000006 69$:  MOV      2(SP), 6(SP)          ;;PUSH OLD PSW AN PCON STACK
3580 020722 012716 020730      MOV      #70$, (SP)
3581 020726 000002              RTI                      ;;REPLACE OLD PC WITH NEW
3582 020730 012637 000034      70$:  MOV      (SP)+, 34          ;;RESTORE PSW
3583 020734 012637 001214      MOV      (SP)+, $TMP6          ;;RESTORE OLD TRAP VECTOR
3584 020740 042737 000340 001214      BIC      #340, $TMP6
3585 020746 013746 001214      MOV      $TMP6, -(SP)          ;;PUT NEW PS ON STACK
3586 020752 012746 020760      MOV      #71$, -(SP)          ;;PUT NEW PC ON STACK
3587 020756 000002              RTI                      ;;POP NEW PC AND PS
3588 020760
3589 020760 012714 177701      MOV      #-77, @CDC          ;;SET UP COLUMN COUNT
3590 020764 012715 045442      MOV      #BUFBEG, @CDA       ;;SET UP BUS ADDRESS
3591 020770 005213              INC      @CDS                ;;START READING
3592 020772 000777              BR
3593
3594 020774 022626              TINTER: CMP      (SP)+, (SP)+  ;;RESTORE THE STACK
3595 020776 022713 000300      CMP      #000300, @CDS       ;;CHECK THE CARD READER STATUS
3596 021002 001401              BEQ      15                  ;;BRANCH IF OK
3597 021004 104004              ERROR +4                    ;;CARD READER STATUS ERROR
3598
3599 021006
3600
3601
3602
3603 021006 000004      15:
3604
3605
3606
3607
3608
3609 021010 004737 025744      ;*****
3610 021014 104400 036053      ;*TEST 40 TEST PICK CHECK ERROR
3611 021020 104400 031774      ;*****
3612 021024 104400 031632      ;*****
3613 021030 104400 032270      ;*****
3614
3615 021034 104400 031576      TST40: SCOPE
3616 021040 104400 030550      ;A PICK CHECK ERROR SHOULD SET BIT 15, BIT 14, AND BIT 12
3617 021044 000000              ;THIS ERROR OCCURS WHEN THE FEED MECHANISM FAILS TO DELIVER A CARD TO
3618 021046 032713 010000      ;THE READ STATION WITHIN 400 MS.
3619 021052 001001              ;CAN ALSO BE FORCED BY FOLDING A CARD IN HALF
3620 021054 104043              ;AND PLACING IT INTO CARD READER 'INPUT HOPPER'
3621
3622 021056 032713 000010      JSR      PC, INIT
3623 021062 001775              TYPE,    MSG37              ;TST40 PICK CHECK TEST
3624
3625
3626
3627
3628
3629
3630
3631
3632
3633
3634
3635
3636
3637
3638
3639
3640
3641
3642
3643
3644
3645
3646
3647
3648
3649
3650
3651
3652
3653
3654
3655
3656
3657
3658
3659
3660
3661
3662
3663
3664
3665
3666
3667
3668
3669
3670
3671
3672
3673
3674
3675
3676
3677
3678
3679
3680
3681
3682
3683
3684
3685
3686
3687
3688
3689
3690
3691
3692
3693
3694
3695
3696
3697
3698
3699
3700
3701
3702
3703
3704
3705
3706
3707
3708
3709
3710
3711
3712
3713
3714
3715
3716
3717
3718
3719
3720
3721
3722
3723
3724
3725
3726
3727
3728
3729
3730
3731
3732
3733
3734
3735
3736
3737
3738
3739
3740
3741
3742
3743
3744
3745
3746
3747
3748
3749
3750
3751
3752
3753
3754
3755
3756
3757
3758
3759
3760
3761
3762
3763
3764
3765
3766
3767
3768
3769
3770
3771
3772
3773
3774
3775
3776
3777
3778
3779
3780
3781
3782
3783
3784
3785
3786
3787
3788
3789
3790
3791
3792
3793
3794
3795
3796
3797
3798
3799
3800
3801
3802
3803
3804
3805
3806
3807
3808
3809
3810
3811
3812
3813
3814
3815
3816
3817
3818
3819
3820
3821
3822
3823
3824
3825
3826
3827
3828
3829
3830
3831
3832
3833
3834
3835
3836
3837
3838
3839
3840
3841
3842
3843
3844
3845
3846
3847
3848
3849
3850
3851
3852
3853
3854
3855
3856
3857
3858
3859
3860
3861
3862
3863
3864
3865
3866
3867
3868
3869
3870
3871
3872
3873
3874
3875
3876
3877
3878
3879
3880
3881
3882
3883
3884
3885
3886
3887
3888
3889
3890
3891
3892
3893
3894
3895
3896
3897
3898
3899
3900
3901
3902
3903
3904
3905
3906
3907
3908
3909
3910
3911
3912
3913
3914
3915
3916
3917
3918
3919
3920
3921
3922
3923
3924
3925
3926
3927
3928
3929
3930
3931
3932
3933
3934
3935
3936
3937
3938
3939
3940
3941
3942
3943
3944
3945
3946
3947
3948
3949
3950
3951
3952
3953
3954
3955
3956
3957
3958
3959
3960
3961
3962
3963
3964
3965
3966
3967
3968
3969
3970
3971
3972
3973
3974
3975
3976
3977
3978
3979
3980
3981
3982
3983
3984
3985
3986
3987
3988
3989
3990
3991
3992
3993
3994
3995
3996
3997
3998
3999
4000

```

3624	021064	022713	140210			CMP	#140210, @CDS	;CHECK FOR CORRECT STATUS BITS
3625	021070	001401				BEQ	25	;BRANCH IF OK
3626	021072	104004				ERROR	+"	;STATUS NOT EQUAL TO 140210
3627								
3628	021074	012714	17770:	25:		MOV	#-77, @CDC	;SET UP COLUMN COUNT
3629	021100	012715	045442			MOV	#BUFBEQ, @CDA	;SET UP BUS ADDRESS
3630	021104	005213				INC	@CDS	;READ
3631	021106	105713		35:		TSTD	@CDS	;CHECK CONTROLLER READY
3632	021110	100376				BPL	35	;WAIT FOR CONTROLLER READY
3633	021112	032713	010000			BIT	#10000, @CDS	;CHECK BIT12
3634	021116	001001				BNE	45	;BRANCH IF SET
3635	021120	104043				ERROR	+43	;OFF-LINE (BIT 12) WASN'T SET
3636								
3637	021122	005713		45:		TST	@CDS	;CHECK SPECIAL CONDITION BIT
3638	021124	100401				BMI	55	;BRANCH IF SET
3639	021126	104026				ERROR	+26	;SPECIAL CONDITION NOT SET
3640								
3641	021130	032713	040000	55:		BIT	#40000, @CDS	;CHECK FOR CARD READER ERROR
3642	021134	001001				BNE	65	;BRANCH IF SET
3643	021136	104035				ERROR	+35	;CARD READER ERROR BIT 14 NOT SET
3644								
3645	021140	005777	160074	65:		TST	@C008	;TEST BIT15 OF STATUS REGISTER #2
3646	021144	100005				BPL	75	;BRANCH IF NOT SET INDICATING
3647								;OLD CD11 CONTROLLER
3648	021146	032777	020000	160064		BIT	#20000, @C008	;IS PICK CHECK INDICATOR SET?
3649	021154	001001				BNE	75	;BRANCH IF SET
3650	021156	104045				ERROR	+45	;PICK CHECK BIT13 NOT SET
3651								
3652	021160	031327	027577	75:		BIT	@CDS, #027577	;CHECK FOR EXTRA BITS
3653	021164	001401				BEQ	105	;BRANCH IF OK
3654	021166	104015				ERROR	+15	;STATUS WORD ERROR
3655								
3656	021170	012712	021424	105:		MOV	#TINTF, @ADINT	;LOAD RETURN POINTER
3657								;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340, PS"
3658	021174	005046				CLR	-(SP)	;;
3659	021176	013746	000034			MOV	34, -(SP)	;; SAVE CURRENT TRAP VECTOR
3660	021202	012737	021212	000034		MOV	#645, 34	;; SETUP NEW TRAP VECTOR
3661	021210	104400				TRAP		;; PUSH OLD PSW AN PC ON STACK
3662	021212	016666	000002	000006	645:	MOV	2(SP), 6(SP)	;;
3663	021220	012716	021226			MOV	#655, (SP)	;; REPLACE OLD PC WITH NEW
3664	021224	000002				RTI		;; RESTORE PSW
3665	021226	012637	000034	655:		MOV	(SP)+, 34	;; RESTORE OLD TRAP VECTOR
3666	021232	012637	001214			MOV	(SP)+, \$TMP6	
3667	021236	052737	000340	001214		BIS	#340, \$TMP6	
3668	021244	013746	001214			MOV	\$TMP6, -(SP)	;; PUT NEW PS ON STACK
3669	021250	012746	021256			MOV	#665, -(SP)	;; PUT NEW PC ON STACK
3670	021254	000002				RTI		;; POP NEW PC AND PS
3671	021256			665:				
3672								;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS, 2(@ADINT)"
3673	021256	005046				CLR	-(SP)	;;
3674	021260	013746	000034			MOV	34, -(SP)	;; SAVE CURRENT TRAP VECTOR
3675	021264	012737	021274	000034		MOV	#675, 34	;; SETUP NEW TRAP VECTOR
3676	021272	104400				TRAP		;; PUSH OLD PSW AN PC ON STACK
3677	021274	016666	000002	000006	675:	MOV	2(SP), 6(SP)	;;

3678	021302	012716	021310		MOV	#68\$, (SP)	;; REPLACE OLD PC WITH NEW
3679	021306	000002			RTI		;; RESTORE PSW
3680	021310	012637	000034	68\$:	MOV	(SP)+, 34	;; RESTORE OLD TRAP VECTOR
3681	021314	012662	000002		MOV	(SP)+, 2(ADINT)	
3682					: THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340, PS"		
3683	021320	005046			CLR	-(SP)	;;
3684	021322	013746	000034		MOV	34, -(SP)	;; SAVE CURRENT TRAP VECTOR
3685	021326	012737	021336	000034	MOV	#69\$, 34	;; SETUP NEW TRAP VECTOR
3686	021334	044400			TRAP		;; PUSH OLD PSW AN PCON STACK
3687	021336	016666	000002	000006	69\$:	MOV	2(SP), 6(SP)
3688	021344	012716	021352		MOV	#70\$, (SP)	;; REPLACE OLD PC WITH NEW
3689	021350	000002			RTI		;; RESTORE PSW
3690	021352	012637	000034	70\$:	MOV	(SP)+, 34	;; RESTORE OLD TRAP VECTOR
3691	021356	012637	001214		MOV	(SP)+, \$TMP6	
3692	021362	012737	000340	001214	BIC	#340, \$TMP6	
3693	021370	013746	001214		MOV	\$TMP6, -(SP)	;; PUT NEW PS ON STACK
3694	021374	012746	021402		MOV	#71\$, -(SP)	;; PUT NEW PC ON STACK
3695	021400	000002			RTI		;; POP NEW PC AND PS
3696	021402			71\$:			
3697	021402	012713	000100		MOV	#100, JCD5	;; SET INTERRUPT ENABLE
3698	021406	104400	032045		TYPE,	MSG6	;; "RESTORE CARDS TO THE INPUT HOPPER"
3699	021412	104400	031576		TYPE,	MSG1	;; "PRESS CARD READER 'RESET'"
3700	021416	104400	030550		TYPE,	CRLF-3	;; MOVE MESSAGE UP ON TTY
3701	021422	000777			BR	.	;; WAIT FOR THE INTERRUPT
3702							
3703	021424	022626		TINTF:	CMP	(SP)+, (SP)+	;; RESTORE THE STACK
3704	021426	012712	021654		MOV	#TINTFA, JADINT	;; LOAD RETURN POINTER
3705					: THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340, PS"		
3706	021432	005046			CLR	-(SP)	;;
3707	021434	013746	000034		MOV	34, -(SP)	;; SAVE CURRENT TRAP VECTOR
3708	021440	012737	021450	000034	MOV	#64\$, 34	;; SETUP NEW TRAP VECTOR
3709	021446	104400			TRAP		;; PUSH OLD PSW AN PCON STACK
3710	021450	016666	000002	000006	64\$:	MOV	2(SP), 6(SP)
3711	021456	012716	021464		MOV	#65\$, (SP)	;; REPLACE OLD PC WITH NEW
3712	021462	000002			RTI		;; RESTORE PSW
3713	021464	012637	000034	65\$:	MOV	(SP)+, 34	;; RESTORE OLD TRAP VECTOR
3714	021470	012637	001214		MOV	(SP)+, \$TMP6	
3715	021474	052737	000340	001214	BIS	#340, \$TMP6	
3716	021502	013746	001214		MOV	\$TMP6, -(SP)	;; PUT NEW PS ON STACK
3717	021506	012746	021514		MOV	#66\$, -(SP)	;; PUT NEW PC ON STACK
3718	021512	000002			RTI		;; POP NEW PC AND PS
3719	021514			66\$:			
3720					: THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS, 2(ADINT)"		
3721	021514	005046			CLR	-(SP)	;;
3722	021516	013746	000034		MOV	34, -(SP)	;; SAVE CURRENT TRAP VECTOR
3723	021522	012737	021532	000034	MOV	#67\$, 34	;; SETUP NEW TRAP VECTOR
3724	021530	104400			TRAP		;; PUSH OLD PSW AN PCON STACK
3725	021532	016666	000002	000006	67\$:	MOV	2(SP), 6(SP)
3726	021540	012716	021546		MOV	#68\$, (SP)	;; REPLACE OLD PC WITH NEW
3727	021544	000002			RTI		;; RESTORE PSW
3728	021546	012637	000034	68\$:	MOV	(SP)+, 34	;; RESTORE OLD TRAP VECTOR
3729	021552	012662	000002		MOV	(SP)+, 2(ADINT)	
3730					: THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340, PS"		
3731	021556	005046			CLR	-(SP)	;;



```

3732 021560 013746 000034          MOV      34, -(SP)          ;; SAVE CURRENT TRAP VECTOR
3733 021564 012737 021574 000034      MOV      #69$, 34          ;; SETUP NEW TRAP VECTOT
3734 021572 104400          TRAP                                ;; PUSH OLD PSW AN PCON STACK
3735 021574 016666 000002 000006 69$:  MOV      2(SP), 6(SP)      ;;
3736 021602 012716 021610          MOV      #70$, (SP)       ;;
3737 021606 000002          RTI                                ;; RESTORE PSW
3738 021610 012637 000034          MOV      (SP)+, 34        ;; RESTORE OLD TRAP VECTOR
3739 021614 012637 001214          MOV      (SP)+, $TMP6
3740 021620 042737 000340 001214      BIC      #340, $TMP6
3741 021626 013746 001214          MOV      $TMP6, -(SP)     ;; PUT NEW PS ON STACK
3742 021632 012746 021640          MOV      #71$, -(SP)     ;; PUT NEW PC ON STACK
3743 021636 000002          RTI                                ;; POP NEW PC AND PS
3744 021640          71$:
3745 021640 012714 177701          MOV      #-77, @CDC       ;; SET UP COLUMN COUNT
3746 021644 012715 045442          MOV      #BUF$BEG, @CDA  ;; SET UP BUS ADDRESS
3747 021650 005213          INC      @CDS             ;; START READING
3748 021652 000777          BR      .                ;; WAIT FOR AN INTERRUPT
3749
3750 021654 022626          TINTFA: CMP      (SP)+, (SP)+  ;; RESTORE THE STACK
3751 021656 022713 000300      CMP      #000370, @CDS    ;; CHECK THE CARD READER STATUS
3752 021662 001401          BEQ      1$              ;; BRANCH IF OK
3753 021664 104004          ERROR +4                ;; CARD READER STATUS ERROR
3754
3755 021666          1$:
3756          ;*****
3757          ;*TEST 41 TEST STACK CHECK ERROR
3758          ;*****
3759 021666 000004      TST41: SCOPE
3760          ; A STACK CHECK ERROR SHOULD SET BIT 15, BIT 14, AND BIT 12
3761          ; THIS ERROR OCCURS WHEN THE FEED MECHANISM FAILS TO DELIVER A CARD TO
3762          ; THE READ STATION
3763 021670 004737 025744          JSR      PC INIT
3764 021674 104400 036104          TYPE,   MSG38
3765 021700 104400 031706          TYPE,   MSG3
3766 021704 104400 032362          TYPE,   MSG9
3767
3768          ; TST41 STACK ERROR TEST
3769          ; "PRESS CARD READER 'STOP'"
3770          ; "SLIDE A CARD FROM THE OUTPUT HOPPER ABOUT
3771          ; HALF AN INCH BACK INTO THE READ HEAD
3772          ; BLOCKING THE PHOTO CELL
3773          ; NOTE: SOME CARD READER MODELS MAY HAVE
3774          ; A LARGE ROLLER BLOCKING ACCESS TO THE PHOTOCCELL
3775          ; IN WHICH CASE, THE PHOTOCCELL CAN BE
3776          ; BLOCKED BY TEARING OFF A PIECE OF CARD
3777          ; AND SLIPPING IT IN FRONT OF THE PHOTOCCELL
3778          ; "PRESS CARD READER 'RESET'"
3779          ; MOVE MESSAGE UP ON TTY
3780          ; CHECK FOR OF LINE
3781          ; WAIT FOR OFF-LINE
3782          ; CHECK FOR "TRANSITION TO ON LINE"
3783          ; WAIT FOR IT
3784          ; CHECK FOR CORRECT STATUS BITS
3785          ; BRANCH IF OK
3786          ; STATUS NOT EQUAL TO 100210
3787
3788          TLOPG: BIT      #10000, @CDS
3789          BEQ      TLOPG
3790          TLOPGA: BIT     #10, @CDS
3791          BEQ      TLOPGA
3792          CMP      #100210, @CDS
3793          BEQ      1$
3794          ERROR +4
3795
3796          1$:
3797          MOV      #-77, @CDC       ;; SET UP COLUMN COUNT
3798          MOV      #BUF$BEG, @CDA  ;; SET UP BUS ADDRESS

```

```

3786 021754 005213          INC      @CDS      ;READ
3787 021756 105713          TLOPGB: TSTB     @CDS      ;CHECK CONTROLLER READY
3788 021760 100376          BPL      TLOPGB     ;WAIT FOR CONTROLLER READY
3789 021762 032713 010000    BIT      #10000,@CDS ;CHECK BIT12
3790 021766 001001          BNE      15         ;BRANCH IF SET
3791 021770 104043          ERROR +43         ;OFF-LINE (BIT 12) WASN'T SET
3792
3793 021772 005713          15:      TST      @CDS      ;CHECK SPECIAL CONDITION BIT
3794 021774 100401          BMI      25         ;BRANCH IF SET
3795 021776 104026          ERROR +26         ;SPECIAL CONDITION NOT SET
3796
3797 022000 032713 040000    25:      BIT      #40000, @CDS ;CHECK FOR CARD READER ERROR
3798 022004 001001          BNE      35         ;BRANCH IF SET
3799 022006 104035          ERROR +35         ;CARD READER ERROR BIT 14 NOT SET
3800
3801 022010 005777 157224    35:      TST      @CDDDB    ;TEST BIT15 OF STATUS REGISTER #2
3802 022014 100005          BPL      45         ;BRANCH IF NOT SET INDICATING
3803                          ;OLD CD11 CONTROLLER
3804 022016 032777 010000 157214    BIT      #10000,@CDDDB ;IS STACK CHECK INDICATOR SET?
3805 022024 001001          BNE      45         ;BRANCH IF SET
3806 022026 104046          ERROR +46         ;STACK CHECK BIT12 NOT SET
3807
3808 022030 032713 027577    45:      BIT      #027577,@CDS ;CHECK FOR EXTRA BITS
3809 022034 001401          BEQ      55         ;BRANCH IF OK
3810 022036 104015          ERROR +15         ;STATUS WORD ERROR
3811
3812 022040 012712 022270    55:      MOV      #TINTG, @ADINT ;LOAD RETURN POINTER
3813                          ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
3814 022044 005046          CLR      -(SP)      ;;
3815 022046 013746 000034    MOV      34, -(SP)   ;;SAVE CURRENT TRAP VECTOR
3816 022052 012737 022062 000034    MOV      #64$, 34   ;;SETUP NEW TRAP VECTOR
3817 022060 104400          TRAP      ;;PUSH OLD PSW AN PCON STACK
3818 022062 016666 000002 000006 64$:    MOV      2(SP), 6(SP) ;;
3819 022070 012716 022076          MOV      #65$, (SP) ;;REPLACE OLD PC WITH NEW
3820 022074 000002          RTI      ;;RESTORE PSW
3821 022076 012637 000034    65$:    MOV      (SP)+, 34  ;;RESTORE OLD TRAP VECTOR
3822 022102 012637 001214    MOV      (SP)+, $TMP6
3823 022106 052737 000340 001214    BIS      #340, $TMP6
3824 022114 013746 001214    MOV      $TMP6, -(SP) ;;PUT NEW PS ON STACK
3825 022120 012746 022126    MOV      #66$, -(SP) ;;PUT NEW PC ON STACK
3826 022124 000002          RTI      ;;POP NEW PC AND PS
3827 022126
3828 66$:
3829 022126 005046          ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
3830 022130 013746 000034    CLR      -(SP)      ;;
3831 022134 012737 022144 000034    MOV      34, -(SP)   ;;SAVE CURRENT TRAP VECTOR
3832 022142 104400          MOV      #67$, 34   ;;SETUP NEW TRAP VECTOR
3833 022144 016666 000002 000006 67$:    TRAP      ;;PUSH OLD PSW AN PCON STACK
3834 022152 012716 022160    MOV      2(SP), 6(SP) ;;
3835 022156 000002          MOV      #68$, (SP) ;;REPLACE OLD PC WITH NEW
3836 022160 012637 000034    68$:    RTI      ;;RESTORE PSW
3837 022164 012662 000002    MOV      (SP)+, 34  ;;RESTORE OLD TRAP VECTOR
3838          MOV      (SP)+, 2(ADINT)
3839 022170 005046          ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
          CLR      -(SP)      ;;

```

E1E

```

3840 022172 013746 000034      MOV      34, -(SP)      ;; SAVE CURRENT TRAP VECTOR
3841 022176 012737 022206 000034      MOV      #69$, 34      ;; SETUP NEW TRAP VECTOT
3842 022204 104400      TRAP                      ;; PUSH OLD PSW AN PCON STACK
3843 022206 016666 000002 000006 69$:      MOV      2(SP), 6(SP)  ;;
3844 022214 012716 022222      MOV      #70$, (SP)    ;;
3845 022220 000002      RTI                      ;; REPLACE OLD PC WITH NEW
3846 022222 012637 000034      MOV      (SP)+, 34     ;; RESTORE PSW
3847 022226 012637 001214      MOV      (SP)+, $TMP6  ;; RESTORE OLD TRAP VECTOR
3848 022232 042737 000340 001214      BIC      #340, $TMP6
3849 022240 013746 001214      MOV      $TMP6, -(SP)  ;; PUT NEW PS ON STACK
3850 022244 012746 022252      MOV      #71$, -(SP)  ;; PUT NEW PC ON STACK
3851 022250 000002      RTI                      ;; POP NEW PC AND PS
3852 022252
3853 022252 012713 000100      MOV      #100, ACDS    ;; SET INTERRUPT ENABLE
3854 022256 104400 031576      TYPE,   MSG1          ;; "PRESS CARD READER 'RESET'"
3855 022262 104400 030550      TYPE,   CALF-3       ;; MOVE MESSAGE UP ON TTY
3856 022266 000777      BR      .              ;; WAIT FOR THE INTERRUPT
3857
3858 022270 022626      TINTG:  CMP      (SP)+, (SP)+  ;; RESTORE THE STACK
3859 022272 012712 022520      MOV      #TINTGA, ADINT ;; LOAD RETURN POINTER
3860      : THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340, PS"
3861 022276 005046      CLR      -(SP)        ;;
3862 022300 013746 000034      MOV      34, -(SP)    ;; SAVE CURRENT TRAP VECTOR
3863 022304 012737 022314 000034      MOV      #64$, 34     ;; SETUP NEW TRAP VECTOT
3864 022312 104400      TRAP                      ;; PUSH OLD PSW AN PCON STACK
3865 022314 016666 000002 000006 64$:      MOV      2(SP), 6(SP)  ;;
3866 022322 012716 022330      MOV      #65$, (SP)   ;;
3867 022326 000002      RTI                      ;; REPLACE OLD PC WITH NEW
3868 022330 012637 000034      MOV      (SP)+, 34     ;; RESTORE PSW
3869 022334 012637 001214      MOV      (SP)+, $TMP6  ;; RESTORE OLD TRAP VECTOR
3870 022340 052737 000340 001214      BIS      #340, $TMP6
3871 022346 013746 001214      MOV      $TMP6, -(SP)  ;; PUT NEW PS ON STACK
3872 022352 012746 022360      MOV      #66$, -(SP)  ;; PUT NEW PC ON STACK
3873 022356 000002      RTI                      ;; POP NEW PC AND PS
3874 022360
3875      : THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS, 2(ADINT)"
3876 022360 005046      CLR      -(SP)        ;;
3877 022362 013746 000034      MOV      34, -(SP)    ;; SAVE CURRENT TRAP VECTOR
3878 022366 012737 022376 000034      MOV      #67$, 34     ;; SETUP NEW TRAP VECTOT
3879 022374 104400      TRAP                      ;; PUSH OLD PSW AN PCON STACK
3880 022376 016666 000002 000006 67$:      MOV      2(SP), 6(SP)  ;;
3881 022404 012716 022412      MOV      #68$, (SP)   ;;
3882 022410 000002      RTI                      ;; REPLACE OLD PC WITH NEW
3883 022412 012637 000034      MOV      (SP)+, 34     ;; RESTORE PSW
3884 022416 012662 000002      MOV      (SP)+, 2(ADINT) ;; RESTORE OLD TRAP VECTOR
3885      : THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340, PS"
3886 022422 005046      CLR      -(SP)        ;;
3887 022424 013746 000034      MOV      34, -(SP)    ;; SAVE CURRENT TRAP VECTOR
3888 022430 012737 022440 000034      MOV      #69$, 34     ;; SETUP NEW TRAP VECTOT
3889 022436 104400      TRAP                      ;; PUSH OLD PSW AN PCON STACK
3890 022440 016666 000002 000006 69$:      MOV      2(SP), 6(SP)  ;;
3891 022446 012716 022454      MOV      #70$, (SP)   ;;
3892 022452 000002      RTI                      ;; REPLACE OLD PC WITH NEW
3893 022454 012637 000034      MOV      (SP)+, 34     ;; RESTORE PSW
3894      : RESTORE OLD TRAP VECTOR

```

```

3894 022460 012637 001214      MOV      (SP)+,$TMP6
3895 022464 042737 000340 001214      BIC      #340,$TMP6
3896 022472 013.46 001214      MOV      $TMP6,-(SP)      ;;PUT NEW PS ON STACK
3897 022476 012746 022504      MOV      #71$,-(SP)      ;;PUT NEW PC ON STACK
3898 022502 000002      RTI                          ;;POP NEW PC AND PS
3899 022504
71$:
3900 022504 012714 177701      MOV      #-77,@CDC        ;SET UP COLUMN COUNT
3901 022510 012715 045442      MOV      #BUFBEQ,@CDA     ;SET UP BUS ADDRESS
3902 022514 005213      INC      @CDS             ;START READING
3903 022516 000777      BR                          ;WAIT FOR AN INTERRUPT
3904
3905 022520 022626      TINTGA: CMP      (SP)+,(SP)+ ;RESTORE THE STACK
3906 022522 022713 000300      CMP      #000300,@CDS     ;CHECK THE CARD READER STATUS
3907 022526 001401      BEQ      1$              ;BRANCH IF OK
3908 022530 104004      ERROR +4                ;CARD READER STATUS ERROR
3909
3910 022532
1$:
3911      ;ON M-1000/M-200 BIT 13 IS ALWAYS CLEARED
3912      ;ON M-1200 IF END OF FILE BUTTON IS PRESSED WITH INPUT
3913      ;HOPPER LOADED THEN WHEN INPUT HOPPER BECOMES EMPTY
3914      ;HOPPER CHECK INDICATOR LIGHT COMES ON AND BITS
3915      ;13 14 AND 15 ARE SET
3916
3917
3918 022532 005737 001266      TST      CD1000          ;IS READER M1000/M200?
3919 022536 001402      BEQ      TSTM12          ;BRANCH IF READER IS M-1200
3920 022540 000137 023256      JMP      TSTM10          ;OUT OF THIS TEST IF M1000/M200
3921
3922 022544
TSTM12:
3923      ;*****
3924      ;*TEST 42 TEST 'END OF FILE' AND HOPPER CHECK
3925      ;*****
3926 022544 000004      TST42: SCOPE
3927 022546 004737 025744      JSR      PC,INIT
3928 022552 104400 036140      TYPE,MSG39
3929 022556 104400 033506      TYPE,MSG20
3930 022562 104400 031576      TYPE,MSG1
3931 022566 104400 031632      TYPE,MSG2
3932 022572 104400 030550      TYPE,CRLF-3
3933 022576 000000      HALT
3934
3935 022600 032713 000010      1$: BIT      #10,@CDS     ;CHECK FOR TRANSITION TO ON LINE
3936 022604 001775      BEQ      1$              ;WAIT FOR IT
3937 022606 104400 033552      TYPE,MSG21
3938 022612 104400 031632      TYPE,MSG2
3939 022616 104400 030550      TYPE,CRLF-3
3940 022622 004737 025744      JSR      PC,INIT
3941 022626 000000      HALT
3942
3943
3944 022630 032713 020000      BIT      #20000,@CDS     ;CHECK BIT 13
3945 022634 001401      BEQ      2$              ;BRANCH IF NOT SET
3946 022636 104047      ERROR +47                ;EOF SET FROM BEGINNING
3947
    
```

```

3948
3949 022640 032713 040000      2$: BIT      #40000, @CDS ;CHECK BIT 14
3950 022644 001401              BEQ      3$ ;BRANCH IF NOT SET
3951 022646 104050              ERROR +50 ;READER CHECK ERROR SET FROM BEGINNING
3952
3953
3954 022650 032713 000004      3$: BIT      #4, @CDS ;CHECK BIT 2
3955 022654 001401              BEQ      4$ ;BRANCH IF NOT SET
3956 022656 104051              ERROR +51 ;HOPPER CHECK SET FROM BEGINNING
3957
3958 022660 005713              4$: TST      @CDS ;CHECK ERROR BIT
3959 022662 100001              BPL      5$ ;BRANCH IF NOT SET
3960 022664 104014              ERROR +14 ;ERROR SET FROM BEGINNING
3961
3962
3963
3964
3965 022666 012712 023120      5$: MOV      #TINTI, @ADINT ;LOAD RETURN POINTER
3966 022672              SECN:
3967 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
3968 022672 005046              CLR      -(SP) ;
3969 022674 013746 000034      MOV      34, -(SP) ;SAVE CURRENT TRAP VECTOR
3970 022700 012737 022710 000034  MOV      #64$, 34 ;SETUP NEW TRAP VECTOT
3971 022706 104400              TRAP ;
3972 022710 016666 000002 000006 64$: MOV      2(SP), 6(SP) ;
3973 022716 012716 022724      MOV      #65$, (SP) ;
3974 022722 000002              RTI ;RESTORE PSW
3975 022724 012637 000034      MOV      (SP)+, 34 ;RESTORE OLD TRAP VECTOR
3976 022730 012637 001214      MOV      (SP)+, $TMP6
3977 022734 052737 000340 001214  BIS      #340, $TMP6
3978 022742 013746 001214      MOV      $TMP6, -(SP) ;PUT NEW PS ON STACK
3979 022746 012746 022754      MOV      #66$, -(SP) ;PUT NEW PC ON STACK
3980 022752 000002              RTI ;POP NEW PC AND PS
3981 022754              66$:
3982 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
3983 022754 005046              CLR      -(SP) ;
3984 022756 013746 000034      MOV      34, -(SP) ;SAVE CURRENT TRAP VECTOR
3985 022762 012737 022772 000034  MOV      #67$, 34 ;SETUP NEW TRAP VECTOT
3986 022770 104400              TRAP ;
3987 022772 016666 000002 000006 67$: MOV      2(SP), 6(SP) ;
3988 023000 012716 023006      MOV      #68$, (SP) ;
3989 023004 000002              RTI ;RESTORE PSW
3990 023006 012637 000034      MOV      (SP)+, 34 ;RESTORE OLD TRAP VECTOR
3991 023012 012662 000002      MOV      (SP)+, 2(ADINT)
3992 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
3993 023016 005046              CLR      -(SP) ;
3994 023020 013746 000034      MOV      34, -(SP) ;SAVE CURRENT TRAP VECTOR
3995 023024 012737 023034 000034  MOV      #69$, 34 ;SETUP NEW TRAP VECTOT
3996 023032 104400              TRAP ;
3997 023034 016666 000002 000006 69$: MOV      2(SP), 6(SP) ;
3998 023042 012716 023050      MOV      #70$, (SP) ;
3999 023046 000002              RTI ;RESTORE PSW
4000 023050 012637 000034      MOV      (SP)+, 34 ;RESTORE OLD TRAP VECTOR
4001 023054 012637 001214      MOV      (SP)+, $TMP6

```

4002	023063	042737	000340	001214	BIC	#340, \$TMP6		
4003	023066	013746	001214		MOV	\$TMP6, -(SP)	;; PUT NEW PS ON STACK	
4004	023072	012746	023100		MOV	#71\$, -(SP)	;; PUT NEW PC ON STACK	
4005	023076	000002			RTI		;; POP NEW PC AND PS	
4006	023100							
4007	023100	012713	000103		71\$: MOV	#100, @CDS	; SET INTERRUPT ENABLE	
4008	023104	012714	177701		MOV	#-77, @CDC	; SET UP COLUMN COUNT	
4009	023110	012715	045442		MOV	#BUFBEG, @CDA	; SET UP BUS ADDRESS	
4010	023114	005213			INC	@CDS	; START READER	
4011	023116	000777			BR	.	; WAIT FOR AN INTERRUPT	
4012								
4013								
4014	023120	022626			TINTI: CMP	(SP)+, (SP)+	; RESTORE THE STACK	
4015								
4016	023122	032713	020000		BIT	#20000, @CDS	; CHECK BIT 13	
4017	023126	001401			BEQ	1\$	; BRANCH IF NOT SET	
4018	023130	104047			ERROR	+47	; EOF SET AT END OF ONE CARD	
4019								
4020	023132	032713	040000		1\$: BIT	#40000, @CDS	; CHECK BIT 14	
4021	023136	001401			BEQ	2\$	; BRANCH IF NOT SET	
4022	023140	104050			ERROR	+50	; READER CHECK ERROR SET AT END OF ONE CARD	
4023								
4024	023142	005713			2\$: TST	@CDS	; CHECK ERROR BIT	
4025	023144	100001			BPL	3\$	; BRANCH IF NOT SET	
4026	023146	104014			ERROR	+14	; ERROR SET AT END OF ONE CARD	
4027								
4028	023150	012712	023156		3\$: MOV	#TINTIA, @ADINT	; LOAD RETURN POINTER	
4029	023154	000646			BR	SECN	; READ SECOND CARD	
4030	023156	022626			TINTIA: CMP	(SP)+, (SP)+	; RESTORE THE STACK	
4031								
4032	023160	032713	020000		BIT	#20000, @CDS	; CHECK BIT 13	
4033	023164	001001			BNE	1\$	; BRANCH IF SET	
4034	023166	104052			ERROR	+52	; EOF NOT SET AT END OF FILE	
4035								
4036	023170	032713	040000		1\$: BIT	#40000, @CDS	; CHECK BIT 14	
4037	023174	001001			BNE	2\$	; BRANCH IF SET	
4038	023176	104053			ERROR	+53	; READER CHECK NOT SET AT END OF FILE	
4039								
4040	023200	032713	000004		2\$: BIT	#4, @CDS	; CHECK BIT 2	
4041	023204	001001			BNE	3\$	; BRANCH IF SET	
4042	023206	104054			ERROR	+54	; HOPPER CHECK NOT SET WHEN HOPPER EMPTY	
4043								
4044								
4045	023210	005713			3\$: TST	@CDS	; CHECK ERROR BIT	
4046	023212	100401			BMI	4\$	; BRANCH IF SET	
4047	023214	104026			ERROR	+26	; ERROR BIT NOT SET AT END OF FILE	
4048								
4049	023216	104400	032045		4\$: TYPE,	MSG6	; "RESTORE CARDS TO THE INPUT HOPPER"	
4050	023222	104400	031576		TYPE,	MSG1	; "PRESS CARD READER 'RESET'"	
4051	023226	104400	031632		TYPE,	MSG2	; "THEN HIT CONTINUE ON THE CONSOLE"	
4052	023232	104400	030350		TYPE,	CRLF-3	; MOVE MESSAGE UP ON TTY	
4053	023236	000000			HALT			
4054								
4055	023240	032713	000010		5\$: BIT	#10, @CDS	; CHECK TRANSITION TO ON LINE	

```

4056 023244 001775          BEQ      5$          ;WAIT FOR IT
4057
4058
4059 023246 032713 020000    BIT      #20000, @CDS ;CHECK BIT 13
4060 023252 001401          BEQ      TSTM10       ;BRANCH IF NOT SET
4061 023254 104055          ERROR +55           ;EOF DIDN'T CLEAR BY TRANSITION TO ON LINE
4062
4063 023256          TSTM10:
4064          ;*****
4065          ;*TEST 43      TEST READ CHECK ERROR
4066          ;*****
4067 023256 000004    TST43: SCOPE
4068          ;A READ CHECK ERROR SHOULD SET BIT 15, BIT 14, AND BIT 12
4069          ;THIS ERROR OCCURS WHEN THE READ ELECTRONICS IN THE CARD
4070          ;READER DISAGREES WITH THE NORMAL UNPUNCHED AREA OF THE CARD
4071 023260 004737 025744    JSR      PC, INIT
4072 023264 104400 036174    TYPE,   MSG40       ;TST43 DARK-LIGHT CHECK
4073 023270 104400 032706    TYPE,   MSG12       ;"PLACE SPECIAL DARK LIGHT CHECK CARD ONLY
4074          ;AT THE FRONT OF THE INPUT STACK"
4075 023274 104400 031576    TYPE,   MSG1
4076 023300 104400 030550    TYPE,   CALF-3
4077 023304 032713 010000    TLOPH: BIT      #10000, @CDS ;CHECK FOR OF LINE
4078 023310 001775          BEQ      TLOPH       ;WAIT FOR OFF-LINE
4079 023312 032713 000010    TLOPHA: BIT      #10, @CDS  ;CHECK FOR "TRANSITION TO ON LINE"
4080 023316 001775          BEQ      TLOPHA      ;WAIT FOR IT
4081 023320 022713 140210    CMP     #140210, @CDS ;CHECK FOR CORRECT STATUS BITS
4082 023324 001401          BEQ      1$          ;BRANCH IF OK
4083 023326 104004          ERROR +4           ;STATUS NOT EQUAL TO 140210
4084
4085 023330 012714 177701    1$:     MOV     #-77, @CDC ;SET UP COLUMN COUNT
4086 023334 012715 045442    MOV     #BUFBEG, @CDA ;SET UP BUS ADDRESS
4087 023340 005213          INC     @CDS         ;READ
4088 023342 105713          TLOPHB: TSTB    @CDS   ;CHECK CONTROLLER READY
4089 023344 100376          @PL    TLOPHB       ;WAIT FOR CONTROLLER READY
4090 023346 032713 010000    BIT     #10000, @CDS ;CHECK BIT12
4091 023352 001001          BNE     1$          ;BRANCH IF SET
4092 023354 104043          ERROR +43         ;OFF-LINE (BIT 12) WASN'T SET
4093
4094 023356 005713          1$:     TST     @CDS   ;CHECK SPECIAL CONDITION BIT
4095 023360 100401          BMI     2$          ;BRANCH IF SET
4096 023362 104026          ERROR +26         ;SPECIAL CONDITION NOT SET
4097
4098 023364 032713 040000    2$:     BIT     #40000, @CDS ;CHECK FOR CARD READER ERROR
4099 023370 001001          BNE     3$          ;BRANCH IF SET
4100 023372 104053          ERROR +53         ;CARD READER ERROR BIT 14 NOT SET
4101
4102 023374 005777 155640    3$:     TST     @CDD8   ;TEST BIT15 OF STATUS REGISTER #2
4103 023400 100005          EPL     4$          ;BRANCH IF NOT SET INDICATING
4104          ;OLD CD11 CONTROLLER
4105 023402 032777 040000 155630 BIT     #40000, @CDD8 ;IS READ CHECK INDICATOR SET?
4106 023410 001001          BNE     4$          ;BRANCH IF SET
4107 023412 104056          ERROR +56         ;READ CHECK BIT14 NOT SET
4108
4109 023414 032713 027577    4$:     BIT     #027577, @CDS ;CHECK FOR EXTRA BITS

```

```

4110 023420 001401 BEQ AGAIN ;BRANCH IF OK
4111 023422 104015 ERROR +15 ;STATUS WORD ERROR
4112 023424 104400 035373 AGAIN: TYPE, MSG30 ;IS CARD READER RS-1200
4113 023430 105777 155506 WAITA: TSTB @STKS ;TEST TTY FOR READY
4114 023434 100375 BPL WAITA ;IF NOT READY WAIT
4115 023436 117737 155502 001202 MOVB @STKB,$STMP1 ;MOVE CHARACTER IN
4116 023444 105777 155476 WAITB: TSTB @STPS ;TEST TTY FOR DONE
4117 023450 100375 BPL WAITB ;WAIT IF NOT READY
4118 023452 113777 001202 155470 MOVB $STMP1,@STPB ;ECHO CHARACTER
4119 023460 042737 177600 001202 BIC #177600,$STMP1 ;CLEAN JUNK OFF BYTE
4120 023466 104400 030550 TYPE, CRLF-3
4121 023472 123727 001202 000116 CMPB $STMP1,#116 ;TEST FOR N
4122 023500 001452 BEQ BYPASS ;SKIP TEST IF NO
4123 023502 123727 001202 000131 CMPB $STMP1,#131 ;TEST FOR Y
4124 023510 001403 BEQ 5$ ;BRANCH IF YES
4125 023512 104400 032570 TYPE, MSG10 ;WRONG RESPONSE TRY AGAIN
4126 023516 000742 BR AGAIN ;CHARACTER WAS NOT Y OR N
4127 ;REPEAT QUESTION AGAIN
4128
4129 023520 104400 036226 5$: TYPE, MSG41 ;TST43A MIS-REGISTERED CARD TEST
4130 023524 104400 034745 TYPE, MSG26 ;TEST FOR VISUAL VERIFICATION OF
4131 ;READ CHECK LIGHT
4132 023530 104400 030553 TYPE, CRLF
4133 023534 104400 035064 TYPE, MSG27 ;PLACE CARD INTO HOPPER
4134 023540 104400 031576 TYPE, MSG1
4135 023544 104400 030550 TYPE, CRLF-3
4136
4137 023550 032713 010000 TLOPHC: JIT #10000,@CDS ;WAIT FOR OFF-LINE
4138 023554 001775 BEQ TLOPHC ;WAIT FOR OFF-LINE
4139 023556 032713 000010 TLOPHC: BIT #10,@CDS ;CHECK FOR TRANSITION TO ON LINE
4140 023562 001775 BEQ TLOPHD
4141 023564 022713 140210 CMP #140210,@CDS ;CHECK FOR CORRECT STATUS BITS
4142 023570 001401 BEQ 1$ ;BRANCH IF OK
4143 023572 104004 ERROR +4 ;STATUS NOT EQUAL 140210
4144
4145 023574 012714 177701 1$: MOV #-77,@CDC ;SET UP COLUMN COUNT
4146 023600 012715 045442 MOV #BUFBEG,@CDA ;SET UP BUS ADDRESS
4147 023604 005213 INC @CDS
4148
4149 023606 105713 TLOPHE: TSTB @CDS
4150 023610 100376 BPL TLOPHE
4151 023612 032713 010000 BIT #10000,@CDS
4152 023616 001001 BNE 1$
4153 023620 104043 ERROR +43
4154
4155 023622 104400 035236 1$: TYPE,MSG28 ;CHECK READ CHECK LIGHT
4156 023626 012712 024064 BYPASS: MOV #TINTH,@ADINT ;LOAD RETURN POINTER
4157 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #340,PS"
4158 023632 005046 CLR -(SP) ;;
4159 023634 013746 000034 MOV 34,-(SP) ;;SAVE CURRENT TRAP VECTOR
4160 023640 012737 023650 000034 MOV #64$,$34 ;;SETUP NEW TRAP VECTOT
4161 023646 104400 TRAP ;;PUSH OLD PSW AN PLOW STACK
4162 023650 016666 000002 000006 64$: MOV 2(SP),6(SP) ;;
4163 023656 012716 023664 MOV #65$,(SP) ;;REPLACE OLD PC WITH NEW
    
```



```

4164 023662 000002 RTI ;;RESTORE PSW
4165 023664 012637 000034 65$: MOV (SP)+,34 ;;RESTORE OLD TRAP VECTOR
4166 023670 012637 001214 MOV (SP)+,$TMP6
4167 023674 052737 00034C 001214 BIS #34,$TMP6
4168 023702 013746 001214 MOV $TMP6,-(SP) ;;PUT NEW PS ON STACK
4169 023706 012746 023714 MOV #66$,-(SP) ;;PUT NEW PC ON STACK
4170 023712 000002 RTI ;;POP NEW PC AND PS
4171 023714 66$:
4172 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "MOV PS,2(ADINT)"
4173 023714 005046 CLR -(SP) ;;
4174 023716 013745 000034 MOV 34,-(SP) ;;SAVE CURRENT TRAP VECTOR
4175 023722 012737 023732 000034 MOV #67$,34 ;;SETUP NEW TRAP VECTOR
4176 023730 104400 TRAP ;;PUSH OLD PSW AN PCON STACK
4177 023732 016666 000002 000006 67$: MOV 2(SP),6(SP) ;;
4178 023740 012716 023746 MOV #68$,1(SP) ;;REPLACE OLD PC WITH NEW
4179 023744 000002 RTI ;;RESTORE PSW
4180 023746 012637 000034 68$: MOV (SP)+,34 ;;RESTORE OLD TRAP VECTOR
4181 023752 012652 000002 MOV (SP)+,2(ADINT)
4182 ;THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #340,PS"
4183 023756 005046 CLR -(SP) ;;
4184 023760 013746 000034 MOV 34,-(SP) ;;SAVE CURRENT TRAP VECTOR
4185 023764 012737 023774 000034 MOV #69$,34 ;;SETUP NEW TRAP VECTOR
4186 023772 104400 TRAP ;;PUSH OLD PSW AN PCON STACK
4187 023774 016666 000002 000006 69$: MOV 2(SP),6(SP) ;;
4188 024002 012716 024010 MOV #70$,1(SP) ;;REPLACE OLD PC WITH NEW
4189 024006 000002 RTI ;;RESTORE PSW
4190 024010 012637 000034 70$: MOV (SP)+,34 ;;RESTORE OLD TRAP VECTOR
4191 024014 012637 001214 MOV (SP)+,$TMP6
4192 024020 042737 000340 001214 BIC #340,$TMP6
4193 024026 013746 001214 MOV $TMP6,-(SP) ;;PUT NEW PS ON STACK
4194 024032 012746 024040 MOV #71$,-(SP) ;;PUT NEW PC ON STACK
4195 024036 000002 RTI ;;POP NEW PC AND PS
4196 024040 71$:
4197 024040 012713 000100 MOV #100, @CDS ;SET INTERRUPT ENABLE
4198 024044 104400 037045 TYPE, MSG6 ;"RESTORE CARDS TO THE INPUT HOPPER"
4199 024050 104400 035306 TYPE, MSG29 ;"PRESS CARD READER 'RESET'"
4200 024054 104400 030550 TYPE, CRLF-3 ;MOVE MESSAGE UP ON TTY
4201 024060 000777 BR . ;WAIT FOR AN INTERRUPT
4202 024062 000000 HALT
4203 024064 022626 TINTH: CMP (SP)+, (SP)+ ;RESTORE THE STACK
4204 024066 000004 SCOPE
4205 024070 104400 001222 TYPE, $BELL ;RING-A-DING
4206 024074 000137 016134 JMP ER12CD ;LOOP BACK TO THE BEGINNING

```

```

*****
ROUTINE TO LOOP THRU A SINGLE INSTRUCTION TEST OR ERROR FUNCTION TEST
NOTE THAT SW11 MUST BE DOWN AFTER 2ND HALT
NOTE THAT SW<14> MUST BE SET.....MUST BE SET.....MUST BE SET.....
*****
TESTX:
4215 024100 MOV #SCMTAG,R6 ;;FIRST LOCATION TO BE CLEARED
4216 024100 012706 001100 CLR (R6)+ ;;CLEAR MEMORY LOCATION
4217 024104 005026

```

4218	024106	022706	001126			CMP	#\$BDDAT,R6	::	DONE?
4219	024112	001374				BNE	.-6	::	LOOP BACK IF NO
4220	024114	012706	001100			MOV	#\$STACK,SP	::	SETUP THE STACK POINTER
4221	024120	012737	026326	000020		MOV	#\$SCOPE,2#\$IOTVEC	::	IOT VECTOR FOR SCOPE ROUTINE
4222	024126	012737	000340	000022		MOV	#\$340,2#\$IOTVEC+2	::	LEVEL 7
4223	024134	012737	026152	000030		MOV	#\$ERROR,2#\$ENTVEC	::	ENT VECTOR FOR ERROR ROUTINE
4224	024142	012737	000340	000032		MOV	#\$340,2#\$ENTVEC+2	::	LEVEL 7
4225	024150	012737	027374	000034		MOV	#\$STRAP,2#\$TRAPVEC	::	TRAP VECTOR FOR TRAP CALLS
4226	024156	012737	000340	000036		MOV	#\$340,2#\$TRAPVEC+2	::	LEVEL 7
4227	024164	012737	027430	000024		MOV	#\$SPWRON,2#\$PWAVEC	::	POWER FAILURE VECTOR
4228	024172	012737	000340	000026		MOV	#\$340,2#\$PWAVEC+2	::	LEVEL 7
4229	024200	013737	014774	014766		MOV	#\$ENDCT,SEOPCT	::	SETUP END-OF-PROGRAM COUNTER
4230	024206	005037	001220			CLR	#\$TIMES	::	INITIALIZE NUMBER OF ITERATIONS
4231	024212	012737	015140	000014		MOV	#\$SRTN,2#\$TBITVEC	::	SET "T" BIT VECTOR TO SRTN
4232	024220	012737	000340	000016		MOV	#\$340,2#\$TBITVEC+2	::	LEVEL 7
4233	024226	012737	000002	015140		MOV	#\$RTI,SRTN	::	SET SRTN TO A RTI
4234	024234	012737	024262	000010		MOV	#\$655,2#\$RESVEC	::	TRY TO DO A RTT
4235	024242	005046				CLR	-(SP)	::	DUMMY PS
4236	024244	012746	024252			MOV	#\$645,-(SP)	::	AND PC
4237	024250	000006				RTT		::	TRY THE RTT
4238	024252	012737	000006	015140	64\$:	MOV	#\$RTT,SRTN	::	RTT IS LEGAL--SET SRTN TO A RTT
4239	024260	000402				BR	66\$	::	
4240	024262	062706	000010		65\$:	ADD	#\$10,SP	::	RTT ILLEGAL--CLEAN OFF THE STACK
4241	024266	012737	000012	000010	66\$:	MOV	#\$RESVEC+2,2#\$RESVEC	::	RESTORE TRAP CATCHER
4242	024274	005037	015146			CLR	#\$TBIT	::	CLEAR "T" BIT SWITCH
4243	024300	012737	024300	001106		MOV	#\$SLPADR	::	INITIALIZE THE LOOP ADDRESS FOR SCOPE
4244	024306	013746	000004			MOV	2#\$4,-(SP)	::	SAVE ERROR VECTOR
4245	024312	013746	000006			MOV	2#\$6,-(SP)	::	
4246	024316	012737	024332	000004		MOV	#\$67\$,4	::	SET UP TIME OUT VECTOR
4247	024324	005777	154606			TST	2\$SWR	::	TRY TO REFERENCE HARDWARE SWR
4248	024330	000407				BR	68\$	::	BRANCH IF NO TIMEOUT TRAP OCCURS
4249	024332	012737	000176	001136	67\$:	MOV	#\$SWREG,SWR	::	POINT TO SOFTWARE SWR
4250	024340	012737	000174	001140		MOV	#\$DISPREG,DISPLAY	::	POINT TO SOFTWARE DISPLAY REG
4251	024346	022626				CMP	(SP)+,(SP)+	::	RESTORE STACK
4252	024350	012637	000006		68\$:	MOV	(SP)+,2#\$6	::	RESTORE ERROR VECTOR
4253	024354	012637	000004			MOV	(SP)+,2#\$4	::	
4254	024360	004737	045366			JSR	PC,SETUP	::	SETUP POINTERS AND FLAGS
4255	024364	104400	034223			TYPE,	MSG23	::	ASK USER TO LOAD ADDRESS OF DESIRED
4256								::	TEST INTO SWITCH REGISTER, THEN
4257								::	PRESS CONTINUE
4258	024370	000000				HALT		::	WAIT FOR STARTING ADDRESS
4259	024372	017737	154540	024622		MOV	2\$SWR,RETRNX	::	STORE STARTING ADDRESS
4260	024400	062737	000002	024622		ADD	2\$RETRNX	::	CHANGE TO FIRST ADDRESS AFTER SCOPE INSTRUCTION
4261	024406	104400	034472			TYPE,	MSG24	::	ASK USER TO SET SWITCH REGISTER
4262								::	OPTIONS, THEN PRESS CONTINUE
4263	024412	000000				HALT		::	SET SWR OPTIONS (BIT 11 MUST = 0)
4264	024414	032777	010000	154514		BIT	#\$10000,2\$SWR	::	CHECK SW12
4265	024422	001432				BEG	1\$	::	BRANCH IF NOT SET
4266								::	THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIC #20,PS"
4267	024424	005046				CLR	-(SP)	::	
4268	024426	013746	000034			MOV	34,-(SP)	::	SAVE CURRENT TRAP VECTOR
4269	024432	012737	024442	000034		MOV	#\$69\$,34	::	SETUP NEW TRAP VECTOT
4270	024440	104400				TRAP		::	PUSH OLD PSW AN PCON STACK
4271	024442	016666	000002	000006	69\$:	MOV	2(SP),6(SP)	::	

```

4272 024450 012716 024456      MOV      #70$, (SP)          ;; REPLACE OLD PC WITH NEW
4273 024454 000002                RTI                       ;; RESTORE PSW
4274 024456 012637 000034      70$:  MOV      (SP)+, 34          ;; RESTORE OLD TRAP VECTOR
4275 024462 012637 001214      MOV      (SP)+, STMP6
4276 024466 042737 000020 001214      BIC      #20, STMP6
4277 024471 013746 001214      MOV      STMP6, -(SP)      ;; PUT NEW FS ON STACK
4278 024500 012746 024506      MCV      #71$, -(SP)      ;; PUT NEW PC ON STACK
4279 024504 000002                RTI                       ;; POP NEW PC AND PS
4280 024506                71$:  BR        2$          ; SKIP NEXT INSTRUCTION
4281 024506 000431                1$:
4282 024510                ; THE FOLLOWING REPRESENTS THE EQUIVALENT OF "BIS #20, PS"
4283                CLR      -(SP)
4284 024510 005046                MOV      34, -(SP)      ;; SAVE CURRENT TRAP VECTOR
4285 024512 013746 000034      MOV      #72$, 34        ;; SETUP NEW TRAP VECTOR
4286 024516 012737 024526 070034      TRAP
4287 024524 104400                ;; PUSH OLD PSW AN PC ON STACK
4288 024526 016666 000002 000006 72$:  MOV      2(SP), 6(SP)
4289 024534 012716 024542      MOV      #73$, (SP)      ;;
4290 024540 000002                RTI                       ;; REPLACE OLD PC WITH NEW
4291 024542 012637 000034      73$:  MOV      (SP)+, 34          ;; RESTORE PSW
4292 024546 012637 001214      MOV      (SP)+, STMP6      ;; RESTORE OLD TRAP VECTOR
4293 024552 052737 000020 001214      BIS      #20, STMP6
4294 024560 013746 001214      MOV      STMP6, -(SP)      ;; PUT NEW PS ON STACK
4295 024564 012746 024572      MOV      #74$, -(SP)      ;; PUT NEW PC ON STACK
4296 024570 000002                RTI                       ;; POP NEW PC AND PS
4297 024572                74$:
4298 024572 012737 024600 027576 2$:  MOV      #XLOOP, RETURN   ; SAVE RETURN POINT FOR THIS SECTION
4299                ; FOR POWER FAILURE RETURN
4300 024600 104400 030556      XLOOP: TYPE, STMES
4301 024604 104400 031454      TYPE, MLOOP
4302                ; TYPE MAINDEC TITLE & REV. LEVEL
4303 024610 013737 024622 001106      MOV      RETRNX, $LPADR   ; INDICATE "ENTERING A LOOP ON TEST
4304                ; SELECTED BY THE USER"
4305 024616 000177 000000      JMP      @RETRNX         ; STORE 1ST ADDRESS OF TEST FOR LOOPING
4306 024622 000000      RETRNX: 0                ; $LPADR WILL BE PICKED UP BY 'SCOPE'
4307                ; JUMP TO TEST SELECTED

```

```

*****
; ROUTINE TO CHECK CARDS WHICH HAVE ALL COLUMNS IDENTICALLY PUNCHED.
; THIS ROUTINE ALLOWS SPECIFIC TYPES OF DATA FAILURES TO BE STUDIED
; EASILY. THE ROUTINE HALTS ONCE AT THE START. SET THE CORRECT CARD
; IMAGE PATTERN IN SW11-SW00, THEN HIT CONTINUE (AFTER THE DECK IS
; LOADED AND CARD READER IS ON-LINE). THE PATTERN IS STORED, AND THEN
; EACH COLUMN OF EACH CARD IS READ TWICE AND COMPARED WITH IT. IF A
; DISCREPANCY OCCURS, THE ERROR IS PRINTED OUT ALONG WITH THE TOTAL
; NUMBER OF CARDS READ AND THE TOTAL NUMBER OF DATA ERRORS DISCOVERED
; UP TO THAT POINT (ALL PRINTOUTS ARE IN OCTAL). WHEN THE INPUT HOPPER
; IS EMPTY, THE ROUTINE RINGS THE BELL AND WAITS FOR MORE CARDS TO BE
; LOADED AND THE CARD READER TO BE PUT BACK ON-LINE.
; SW15=1 CAUSES A HALT AFTER AN ERROR, AND SW13=1 INHIBITS ERROR PRINTOUTS.
*****

```

```

4325 024624      CKSAME:

```

4326	024624	012706	001100			MOV	#\$CMTAG,R6	;; FIRST LOCATION TO BE CLEARED
4327	024630	005026				CLR	(R6)+	;; CLEAR MEMORY LOCATION
4328	024632	022706	001126			CMP	#\$SDOAT,R6	;; DONE?
4329	024636	001374				BNE	.-6	;; LOOP BACK IF NO
4330	024640	012706	001100			MOV	#\$STACK,SP	;; SETUP THE STACK POINTER
4331	024644	012737	026326	000020		MOV	#\$SCOPE,@#IOTVEC	;; IOT VECTOR FOR SCOPE ROUTINE
4332	024652	012737	000340	000022		MOV	#340,@#IOTVEC+2	;; LEVEL 7
4333	024660	012737	026152	000030		MOV	#\$ERROR,@#EMTVEC	;; EMT VECTOR FOR ERROR ROUTINE
4334	024666	012737	000340	000032		MOV	#340,@#EMTVEC+2	;; LEVEL 7
4335	024674	012737	027374	000034		MOV	#\$TRAP,@#TRAPVEC	;; TRAP VECTOR FOR TRAP CALLS
4336	024702	012737	000340	000036		MOV	#340,@#TRAPVEC+2	;; LEVEL 7
4337	024710	012737	027430	000024		MOV	#\$PWRON,@#PWRVEC	;; POWER FAILURE VECTOR
4338	024716	012737	000340	000026		MOV	#340,@#PWRVEC+2	;; LEVEL 7
4339	024724	013737	014774	014766		MOV	SENDCT,SEOPCT	;; SETUP END-OF-PROGRAM COUNTER
4340	024732	005037	001220			CLR	STIMES	;; INITIALIZE NUMBER OF ITERATIONS
4341	024736	012737	015140	000014		MOV	#\$SRTN,@#TBITVEC	;; SET "T" BIT VECTOR TO SRTN
4342	024744	012737	000340	000016		MOV	#340,@#TBITVEC+2	;; LEVEL 7
4343	024752	012737	000002	015140		MOV	#\$RTI,SRTN	;; SET SRTN TO A RTI
4344	024760	012737	025006	000010		MOV	#\$65S,@#RESVEC	;; TRY TO DO A RTT
4345	024766	005046				CLR	-(SP)	;; DUMMY PS
4346	024770	012746	024776			MOV	#\$64S,-(SP)	;; AND PC
4347	024774	000006				RTT		;; TRY THE RTT
4348	024776	012737	000006	015140	64S:	MOV	#\$RTT,SRTN	;; RTT IS LEGAL--SET SRTN TO A RTT
4349	025004	000402				BR	66S	;; RTT ILLEGAL--CLEAN OFF THE STACK
4350	025006	062706	000010		65S:	ADD	#\$10,SP	;; RESTORE TRAP CATCHER
4351	025012	012737	000012	000010	66S:	MOV	#\$RESVEC+2,@#RESVEC	;; RESTORE TRAP CATCHER
4352	025020	005037	015146			CLR	STBIT	;; CLEAR "T" BIT SWITCH
4353	025024	012737	025024	001106		MOV	#\$, \$LPADR	;; INITIALIZE THE LOOP ADDRESS FOR SCOPE
4354	025032	013746	000004			MOV	@#4,-(SP)	;; SAVE ERROR VECTOR
4355	025036	013746	000006			MOV	@#6,-(SP)	
4356	025042	012737	025056	000004		MOV	#\$67S,4	;; SET UP TIME OUT VECTOR
4357	025050	005777	154062			TST	#\$SWR	;; TRY TO REFERENCE HARDWARE SWR
4358	025054	000407				BR	68S	;; BRANCH IF NO TIMEOUT TRAP OCCURS
4359	025056	012737	000176	001136	67S:	MOV	#\$SWREG,SWR	;; POINT TO SOFTWARE SWR
4360	025064	012737	000174	001140		MOV	#\$DISPREG,DISPLAY	;; POINT TO SOFTWARE DISPLAY REG
4361	025072	022626				CMP	(SP)+,(SP)+	;; RESTORE STACK
4362	025074	012637	000006		68S:	MOV	(SP)+,@#6	;; RESTORE ERROR VECTOR
4363	025100	012637	000004			MOV	(SP)+,@#4	
4364	025104	012737	024624	027576		MOV	#\$CKSAME,RETURN	;; SAVE RETURN POINT FOR THIS SECTION
4365								;; FOR POWER FAILURE ROUTINE
4366	025112	104400	030556			TYPE,	STMES	;; TYPE MAINDEC TITLE & REV. LEVEL
4367	025116	104400	031527			TYPE,	MPATS	;; INDICATE "ENTERING SINGLE DATA
4368								;; PATTERN TESTING"
4369	025122	004737	045366			JSR	PC,SETUP	;; INITIALIZE POINTERS
4370	025126	104400	034574			TYPE,	MSG25	;; ASK USER TO LOAD PATTERN VALUE INTO
4371								;; SWITCH REGISTER SWS<11:0>, THEN
4372								;; PRESS CONTINUE
4373	025132	000000				HALT		;; WAIT FOR CARD IMAGE PATTERN
4374	025134	017737	153776	025736		MOV	#\$SWR,CARDIM	;; STORE PATTERN
4375	025142	042737	170000	025736		BIC	#\$170000,CARDIM	;; CLEAR UPPER BITS OF PATTERN
4376	025150	013737	025736	025740		MOV	CARDIM,CDPKO	
4377	025156	005037	025742			CLR	DERFLG	
4378	025162	006037	025740			ROR	CDPKO	
4379	025166	106137	025741			ROLB	CDPK1	



4434	025454	032713	010000		CKERR:	BIT	#10000,DCDS		;CHECK FOR OFFLINE
4435	025460	001406				BEQ	CKERR1		;BRANCH IF NOT
4436	025462	104400	001222			TYPE,	\$BELL		;RING-A-DING
4437	025466	032713	000010		CKERR3:	BIT	#10,DCDS		;CHECK TRANSITION TO ON-LINE
4438	025472	001775				BEQ	CKERR3		;BRANCH IF OFF-LINE
4439	025474	000666				BR	CKSTR1		;START OVER
4440									
4441	025476	032713	004000		CKERR1:	BIT	#4000,DCDS		;CHECK FOR DATA ERROR
4442	025502	001407				BEQ	CKERR2		
4443	025504	005737	025742			TST	DERFLG		
4444	025510	100004				BFL	CKERR2		
4445	025512	122737	000001	025742		CMPB	#1,DERFLG		
4446	025520	003323				BGT	CKLOP3		;BRANCH IF LEGIT
4447	025522	104062			CKERR2:	ERROR	+62		;REAL, LIVE ERROR.
4448	025524	000662				BR	CKLOOP		
4449									
4450	025526	005237	025732		CKFAIL:	INC	TOTERR		;COUNT ERRORS
4451	025532	032777	020000	153376		BIT	#20000,DSWR		;CHECK FOR INHIBITING PRINTOUT
4452	025540	001052				BNE	CKERROR		;BRANCH AROUND PRINTOUT IF SET
4453	025542	005737	001260			TST	ERFLG		;TEST FLAG TO PRINT HEADING
4454	025546	001004				BNE	CKNOHD		;BRANCH IF ALREADY DONE
4455	025550	005237	001260			INC	ERFLG		;PRINT HEADING ONCE ONLY
4456	025554	104400	033442			TYPE,	MSG19		;OUTPUT HEADING
4457	025560	104400	030553		CKNOHD:	TYPE,	CRLF		;OUTPUT CARRIAGE RETURN, LINEFEED
4458	025564	005237	015334			INC	CLCNT		;STEP UP COLUMN COUNT FOR ERROR REPORT
4459	025570	013746	015334			MOV	CLCNT,-(SP)		;PRINT THE COLUMN OF THE CARD
4460	025574	104404				TYPDS			;ON WHICH AN ERROR WAS DETECTED
4461	025576	104400	030545			TYPE,	SPACE		
4462	025602	005337	015334			DEC	CLCNT		;DROP COLUMN COUNT BACK AFTER REPORTING
4463	025606	005737	025742			TST	DERFLG		
4464	025612	100007				BPL	CKNOPK		
4465	025614	104400	030545			TYPE,	SPACE		
4466	025620	114046				MOVB,	-(RD),-(SP)		;PRINT THE INCORRECT VALUE
4467	025622	104402				TYPOS			;THAT WAS READ FROM THE
4468	025624	003				.BYTE	3		;COLUMN INDICATED ABOVE
4469	025625	000				.BYTE	0		; (PACKED MODE)
4470	025626	105720				TSTB	(RD)+		;CORRECT MEMORY LOCATION AFTER PRINTOUT
4471	025630	000404				BR	CKOVR1		
4472	025632	014046			CKNOPK:	MOV	-(RD),-(SP)		;PRINT THE INCORRECT VALUE THAT
4473	025634	104402				TYPOS			;WAS READ FROM THE COLUMN
4474	025636	006				.BYTE	6		;INDICATED ABOVE
4475	025637	001				.BYTE	1		; (IMAGE MODE)
4476	025640	005720				TST	(RD)+		;CORRECT THE MEMORY LOCATION AFTER PRINTOUT
4477	025642	104400	030545		CKOVR1:	TYPE,	SPACE		
4478	025646	013746	025734			MOV	?OTCRD,-(SP)		;PRINT THE CARD NUMBER ON WHICH
4479	025652	104404				TYPDS			;THE ERROR WAS FOUND
4480	025654	104400	030545			TYPE,	SPACE		
4481	025660	013746	025732			MOV	TOTERR,-(SP)		;PRINT THE TOTAL NUMBER OF ERRORS
4482	025664	104404				TYPDS			;ACCUMULATED TO NOW
4483	025666	005777	153244		CKERRORP:	TST	DSWR		;CHECK SW15 TO HALT ON ERROR
4484	025672	100001				BPL	15		;BRANCH IF NOT SET
4485	025674	000000				HALT			;HALT ON ERROR
4486	025676	005237	015334		15:	INC	CLCNT		;STEP UP COLUMN COUNT TO BE CORRECT FOR
4487									;NEXT POSSIBLE COLUMN TO BE CHECKED

4488	025702	023727	015334	000120		CMP	CLCNT, #120	; HAVE WE FINISHED A CARD?
4489	025710	001002				BNE	25	; BRANCH IF NO
4490	025712	000137	025272			JMP	CKLOOP	; OTHERWISE, GO TO SET UP FOR NEXT CARD
4491	025716	032777	000004	153212	25:	BIT	#4, 25WR	; ARE WE DOING PACKED MODE?
4492	025724	001233				BNE	CKLOP2	; BRANCH IF NOT
4493	025726	000137	025370			JMP	CKLOP3	; OTHERWISE, CONTINUE CHECKING COLUMNS
4494								; IN PACKED MODE
4495								
4496	025732	000000				TOTERR:	0	
4497	025734	000000				TOTCRD:	0	
4498	025736	000000				CARDIN:	0	
4499	025740	000				CDPK0:	.BYTE 0	
4500	025741	000				CDPK1:	.BYTE 0	
4501	025742	000000				DERFLG:	0	

```

4502 ;ISSUE MESSAGE IF CARD READER IS OFF-LINE
4503 ;WAIT FOR BUSY TO CLEAR IN CASE CARD READER IS STILL READING A CARD
4504 ;INITIALIZE STATUS REGISTER AND USE ERROR HALT IF IT DOESN'T CLEAR PROPERLY
4505 ;NOTE THAT PROGRAM WILL HANG HERE IF BUSY REMAINS SET
4506
4507 025744 094737 025772 INIT: JSR PC CKOFFL ;SEE IF OFF-LINE BIT IS SET
4508 025750 105713 1$: TSTB @CDS ;WAIT FOR CONTROLLER READY, IN CASE
4509 025752 100376 BPL 1$ ;A CARD IS STILL BEING READ
4510 025754 012713 000400 MOV #400, @CDS ;INITIALIZE THE CARD READER
4511 025760 022713 000200 CMP #200, @CDS ;MAKE SURE INITIALIZATION OK
4512 025764 001401 BEQ 2$ ;BRANCH IF ALL BITS ZERO
4513 025766 104067 ERROR +67 ;NOT ALL BITS OF STATUS REGISTER ARE ZERO
4514 025770 000207 2$: RTS PC ;RETURN
4515
4516 ;SUBROUTINE TO CHECK FOR BIT 12 (OFF-LINE) BEING SET IN CARD
4517 ;READER CSR, AND PRINT OUT A MESSAGE IF IT IS
4518 025772 032713 010000 CKOFFL: BIT #10000, @CDS ;CHECK BIT 12
4519 025776 001001 BNE 1$ ;BRANCH IF SET
4520 026000 000207 RTS PC ;RETURN IF NOT SET
4521 026002 104400 033410 1$: TYPE, MSG18 ;"CARD READER OFF-LINE"
4522 026006 104400 033175 TYPE, MSG17 ;"REMEDY THE CONDITION ... ETC."
4523 026012 000000 HALT ;WAIT FOR CONTINUE
4524 026014 000766 BR CKOFFL ;CHECK AGAIN
4525
4526 ;*****
4527
4528 .SBTTL. ERROR MESSAGE TIMEOUT ROUTINE
4529
4530 ;*THIS ROUTINE USES THE "ITEM CONTROL BYTE" ($ITEMB) TO DETERMINE WHICH
4531 ;*ERROR IS TO BE REPORTED. IT THEN OBTAINS, FROM THE "ERROR TABLE" ($ERRTB),
4532 ;*AND REPORTS THE APPROPRIATE INFORMATION CONCERNING THE ERROR.
4533
4534 $ERRTYP:
4535 026016 104400 001227 TYPE $CRLF ;;"CARRIAGE RETURN" & "LINE FEED"
4536 026016 010045 MOV RO, -(SP) ;;SAVE RC
4537 026022 005000 CLR RO ;;PICKUP THE ITEM INDEX
4538 026024 005000 BISB @#$ITEMB, RO
4539 026026 153700 001114 BNE 1$ ;;IF ITEM NUMBER IS ZERO, JUST
4540 026032 001004 ;;TYPE THE PC OF THE ERROR
4541 ;;SAVE $ERRPC FOR TIMEOUT
4542 026034 013746 001116 MOV $ERRPC, -(SP) ;;ERROR ADDRESS
4543 ;;GO TYPE--OCTAL ASCII(ALL DIGITS)
4544 026040 104401 TYPOC ;;GET OUT
4545 026042 000426 BR 6$ ;;ADJUST THE INDEX SO THAT IT WILL
4546 026044 005300 1$: DEC RO ;; WORK FOR THE ERROR TABLE
4547 026046 006300 ASL RO
4548 026050 006300 ASL RO
4549 026052 006300 ASL RO
4550 026054 062700 001270 ADD #$ERRTB, RO ;;FORM TABLE POINTER
4551 026060 012037 026070 MOV (RO)+, 2$ ;;PICKUP "ERROR MESSAGE" POINTER
4552 026064 001404 BEQ 3$ ;;SKIP TIMEOUT IF NO POINTER
4553 026066 104400 TYPE ;;TYPE THE "ERROR MESSAGE"
4554 026070 000000 2$: .WORD 0 ;;"ERROR MESSAGE" POINTER GOES HERE
4555 026072 104400 001227 TYPE , $CRLF ;;"CARRIAGE RETURN" & "LINE FEED"
    
```



```

4556 026076 012037 026106      3$:  MOV      (RO)+,4$      ;; PICKUP "DATA HEADER" POINTER
4557 026102 001404                BEQ      5$              ;; SKIP TYPEOUT IF 0
4558 026104 104400                TYPE                    ;; TYPE THE "DATA HEADER"
4559 026106 000900      4$:  .WORD    0              ;; "DATA HEADER" POINTER GOES HERE
4560 026110 104400 001227      TYPE      SCRLF          ;; "CARRIAGE RETURN" & "LINE FEED"
4561 026114 011000      5$:  MOV      (RO),RO        ;; PICKUP "DATA TABLE" POINTER
4562 026116 001004                BNE      7$              ;; GO TYPE THE DATA
4563 026120 012600      6$:  MOV      (SP)+,RO      ;; RESTORE RO
4564 026122 104400 001227      TYPE      SCRLF          ;; "CARRIAGE RETURN" & "LINE FEED"
4565 026126 000207                RTS       PC              ;; RETURN
4566 026130                7$:  MOV      @ (RO)+,-(SP)  ;; SAVE @ (RO)+ FOR TYPEOUT
4567 026130 013046                TYPOC                    ;; GO TYPE--OCTAL ASCII(ALL DIGITS)
4568 026132 104401                TST      (RO)            ;; IS THERE ANOTHER NUMBER?
4569 026134 005710                BEQ      6$              ;; BR IF NO
4570 026136 001770                TYPE      8$              ;; TYPE TWO(2) SPACES
4571 026140 104400 026146                BR       7$              ;; LOOP
4572 026144 000771                8$:  .ASCIZ  / /              ;; TWO(2) SPACES
4573 026146 020040 000                .EVEN
4574                026152
4575
4576                ;*****
4577
4578                .SBTTL  ERROR HANDLER ROUTINE
4579
4580                ;*THIS ROUTINE WILL INCREMENT THE ERROR FLAG AND THE ERROR COUNT.
4581                ;*SAVE THE ERROR ITEM NUMBER AND THE ADDRESS OF THE ERROR CALL
4582                ;*AND GO TO $ERRTYP ON ERROR
4583                ;*THE SWITCH OPTIONS PROVIDED BY THIS ROUTINE ARE:
4584                ;*SW15=1      HALT ON ERROR
4585                ;*SW13=1      INHIBIT ERROR TYPEOUTS
4586                ;*SW10=1     BELL ON ERROR
4587                ;*CALL
4588                ;*      ERROR      N      ;; ERROR=EMT AND N=ERROR ITEM NUMBER
4589
4590                $ERROR:
4591 026152 010637 001174                MOV      SP,$REG6        ;; STACK POINTER POSITION
4592 026156 016637 000002 001176      MOV      2(SP),$REG7     ;; CONTENTS OF 'PSW'
4593 026164 011337 001200                MOV      @CDS,$STMP0     ;; CONTENTS OF DEVICE 'CDS'
4594 026170 017737 153044 001202      MOV      @CDD,$STMP1     ;; CONTENTS OF DEVICE 'CDD'
4595 026176 011437 001204                MOV      @CDC,$STMP2     ;; CONTENTS OF DEVICE 'CDC'
4596 026202 011537 001206                MOV      @CDA,$STMP3     ;; CONTENTS OF DEVICE 'CDA'
4597 026206 105237 001103      7$:  INCB     $ERFLG        ;; SET THE ERROR FLAG
4598 026212 001775                BEQ      7$              ;; DON'T LET THE FLAG GO TO ZERO
4599 026214 013777 001102 152716      MOV      $STYNM,@DISPLAY ;; DISPLAY TEST NUMBER AND ERROR FLAG
4600 026222 032777 002000 152706      BIT      #BIT10,@SWR     ;; BELL ON ERROR?
4601 026230 001402                BEQ      1$              ;; NO - SKIP
4602 026232 104400 001222                TYPE      $BELL          ;; RING BELL
4603 026236 005237 001112      1$:  INC      $ERTTL        ;; COUNT THE NUMBER OF ERRORS
4604 026242 011637 001116                MOV      (SP),$ERRPC     ;; GET ADDRESS OF ERROR INSTRUCTION
4605 026246 162737 000002 001116      SUB      #2,$ERRPC
4606 026254 117737 152636 001114      MOVB    @ $ERRPC,$ITEMB ;; STRIP AND SAVE THE ERROR ITEM CODE
4607 026262 032777 020000 152646      BIT      #BIT13,@SWR     ;; SKIP TYPEOUT IF SET
4608 026270 001004                BNE      20$             ;; SKIP TYPEOUTS
4609 026272 004737 02601E                JSR      PC,$ERRTYP     ;; GO TO USER ERROR ROUTINE
    
```

```

4610 026276 104400 001227          TYPE      ,SCLRF
4611 026302
4612 026302 005777 152630          20$:      TST      @SWR      ;; HALT ON ERROR
4613 026306 100006          2$:      BPL      3$      ;; SKIP IF CONTINUE
4614 026310 000000          HALT      ;; HALT ON ERROR!
4615 026312 022737 015046 000042          CMP      @SENDAD,@#42  ;; ACT-11 AUTO-ACCEPT?
4616 026320 001001          BNE      3$      ;; BRANCH IF NO
4617 026322 000000          HALT      ;; YES
4618 026324
4619 026324 000002          3$:      RTI      ;; RETURN
4620
4621 ;*****
4622
4623 .SBTTL SCOPE HANDLER ROUTINE
4624
4625 ;*THIS ROUTINE CONTROLS THE LOOPING OF SUBTESTS. IT WILL INCREMENT
4626 ;*AND LOAD THE TEST NUMBER($STNM) INTO THE DISPLAY REG. (DISPLAY<7:C>)
4627 ;*AND LOAD THE ERROR FLAG ($ERFLG) INTO DISPLAY<15:08>
4628 ;*THE SWITCH OPTIONS PROVIDED BY THIS ROUTINE ARE:
4629 ;*SW14=1      LOOP ON TEST
4630 ;*SW11=1      INHIBIT ITERATIONS
4631 ;*CALL
4632 ;*      SCOPE      ;;SCOPE=IOT
4633
4634 026326          $$SCOPE:
4635 026326 032777 040000 152602          1$:      BIT      @BIT14,@SWR      ;; LOOP ON PRESENT TEST?
4636 026334 001055          BNE      $OVER      ;; YES IF SW14=1
4637 ;*****START OF CODE FOR THE XOR TESTER*****
4638 026336 000416          $XTSTR: BR      6$      ;; IF RUNNING ON THE "XOR" TESTER CHANGE
4639 ; THIS INSTRUCTION TO A "NOP" (NOP=240)
4640 026340 013746 000004          MOV      @ERRVEC,-(SP)  ;; SAVE THE CONTENTS OF THE ERROR VECTOR
4641 026344 012737 026364 000004          MOV      @$$,@ERRVEC  ;; SET FOR TIMEOUT
4642 026352 005737 177060          TST      @#177060    ;; TIME OUT ON XOR?
4643 026356 012637 000004          MOV      (SP)+,@ERRVEC  ;; RESTORE THE ERROR VECTOR
4644 026362 000436          BR      $$VLAD      ;; GO TO THE NEXT TEST
4645 026364 022626          5$:      CMP      (SP)+,(SP)+  ;; CLEAR THE STACK AFTER A TIME OUT
4646 026366 012637 000004          MOV      (SP)+,@ERRVEC  ;; RESTORE THE ERROR VECTOR
4647 026372 000436          BR      $OVER      ;; LOOP ON THE PRESENT TEST
4648 026374
4649 026374 105737 001103          6$; ;*****END OF CODE FOR THE XOR TESTER*****
4650 026400 001404          2$:      TSTB     $ERFLG    ;; HAS AN ERROR OCCURRED?
4651 026402 105037 001103          BEQ      3$      ;; BR IF NO
4652 026406 005037 001220          4$:      CLRB     $ERFLG    ;; ZERO THE ERROR FLAG
4653 026412 032777 004000 152516          3$:      CLR      $TIMES    ;; CLEAR THE NUMBER OF ITERATIONS TO MAKE
4654 026420 001011          BIT      @BIT11,@SWR  ;; INHIBIT ITERATIONS?
4655 026422 005737 001100          BNE      1$      ;; BR IF YES
4656 026426 001406          TST      $PASS      ;; IF FIRST PASS OF PROGRAM
4657 026430 005237 001104          BEQ      1$      ;; INHIBIT ITERATIONS
4658 026434 023737 001220 001104          INC      $ICNT      ;; INCREMENT ITERATION COUNT
4659 026442 002012          CMP      $TIMES,$ICNT  ;; CHECK THE NUMBER OF ITERATIONS MADE
4660 026444 012737 000001 001104 1$:      BGE      $OVER      ;; BR IF MORE ITERATION REQUIRED
4661 026452 013737 026504 001220          MOV      #1,$ICNT    ;; REINITIALIZE THE ITERATION COUNTER
4662 026460 105237 001102          MOV      $MXCNT,$TIMES  ;; SET NUMBER OF ITERATIONS TO DO
4663 026464 011637 001106          $$VLAD: INCB     $STNM    ;; COUNT TEST NUMBERS
          MOV      (SP), $LPADR  ;; SAVE SCOPE LOOP ADDRESS

```

```

4664 026470 013777 001102 152442 $OVER:  MOV  $STNM, @DISPLAY ;; DISPLAY TEST NUMBER
4665 026476 013716 001106          MOV  $LPHDR, (SP)  ;; FUDGE RETURN ADDRESS
4666 026502 000002                RTI                ;; FIXES PS
4667 026504 000001                $MXCNT: 1          ;; MAX. NUMBER OF ITERATIONS
4668                                     ;*****
4669                                     ;*****
4670                                     ;*****
4671                                     ;*****
4672                                     ;*****
4673                                     ;*****
4674                                     ;*****
4675                                     ;*****
4676                                     ;*****
4677                                     ;*****
4678                                     ;*****
4679                                     ;*****
4680                                     ;*****
4681                                     ;*****
4682                                     ;*****
4683                                     ;*****
4684                                     ;*****
4685                                     ;*****
4686                                     ;*****
4687 026506 105737 001155          $TYPE:  TSTB  $TPFLG      ;; IS THERE A TERMINAL?
4688 026512 100002                BPL      1$           ;; BR IF YES
4689 026514 000000                HALT                    ;; HALT HERE IF NO TERMINAL
4690 026516 000407                BR      3$           ;; LEAVE
4691 026520 010046                1$:  MOV    RO, -(SP)  ;; SAVE RO
4692 026522 017600 000002        MOV    @2(SP), RO    ;; GET ADDRESS OF ASCIZ STRING
4693 026526 112046                2$:  MOVB   (RO)+, -(SP) ;; PUSH CHARACTER TO BE TYPED ONTO STACK
4694 026530 001005                BNE    4$           ;; BR IF IT ISN'T THE TERMINATOR
4695 026532 005726                TST    (SP)+        ;; IF TERMINATOR POP IT OFF THE STACK
4696 026534 012600                50$:  MOV    (SP)+, RO  ;; RESTORE RO
4697 026536 062716 000002        3$:  ADD    #2, (SP)   ;; ADJUST RETURN PC
4698 026542 000002                RTI                    ;; RETURN
4699 026544 122716 000011        4$:  CMPB   #THT, (SP) ;; BRANCH IF <HT>
4700 026550 001426                BEQ    8$           ;;
4701 026552 122716 000200        CMPB   #TCRLF, (SP) ;; BRANCH IF NOT <CRLF>
4702 026556 001004                BNE    5$           ;;
4703 026560 005726                TST    (SP)+        ;; POP <CR><LF> EQUIV
4704 026562 104400                TYPE                    ;; TYPE A CR AND LF
4705 026564 001227                $CRLF
4706 026566 000757                BR      2$           ;; GET NEXT CHARACTER
4707 026570 004737 026652        5$:  JSR    PC, $TYPEC  ;; GO TYPE THIS CHARACTER
4708 026574 123726 001154        6$:  CMPB   $FILLC, (SP)+ ;; IS IT TIME FOR FILLER CHARS.?
4709 026600 001352                BNE    2$           ;; IF NO GO GET NEXT CHAR.
4710 026602 013746 001152        MOV    $NULL, -(SP) ;; GET # OF FILLER CHARS. NEEDED
4711                                     ;; AND THE NULL CHAR.
4712 026606 105366 000001        7$:  DECB   1(SP)      ;; DOES A NULL NEED TO BE TYPED?
4713 026612 002770                BLT    6$           ;; BR IF NO--GO POP THE NULL OFF OF STACK
4714 026614 004737 026652        JSR    PC, $TYPEC  ;; GO TYPE A NULL
4715 026620 105337 026716        DECB   $CHARCNT     ;; DO NOT COUNT AS A COUNT
4716 026624 000770                BR      7$         ;; LOOP
4717

```

```

4718 ;HCRIZONTAL TAB PROCESSOR
4719
4720 026626 112716 000040 85: MOVB #40,(SP) ;;REPLACE TAB WITH SPACE
4721 026632 004737 026652 95: JSR PC,$TYPEC ;;TYPE A SPACE
4722 026636 132737 000007 026715 BITB #7,$CHARCNT ;;BRANCH IF NOT AT
4723 026644 001372 BNE 95 ;;TAB STOP
4724 026646 005726 TST (SP)+ ;;POP SPACE OFF STACK
4725 026650 000726 BR 25 ;;GET NEXT CHARACTER
4726 026652 105777 152270 $TYPEC: TSTB $STPS ;;WAIT UNTIL PRINTER IS READY
4727 026656 100375 BPL $TYPEC
4728 026660 116677 000002 152262 MOVB 2(SP),$STPB ;;LOAD CHAR TO BE TYPED INTO DATA REG.
4729 026666 122766 000015 000002 CMF3 #15,2(SP) ;;BRANCH IF
4730 026674 001003 BNE 15 ;;NOT <CR>
4731 026676 105037 026716 CLR B $CHARCNT
4732 026702 000406 BR $TYPEX ;;EXIT
4733 026704 122766 000012 000002 15: CMPB #12,2(SP) ;;BRANCH IF
4734 026712 002002 BGE $TYPEX ;;<LF>
4735 026714 105227 INCB (PC)+ ;;INC SPACE
4736 026716 000000 $CHARCNT: .WORD 0 ;;COUNT
4737 026720 000207 $TYPEX: RTS PC
4738 ;; EQUATES
4739 000011 TAT=11
4740 000200 TCRLF=200
4741
4742
4743 ;*****
4744
4745 .SBTTL BINARY TO OCTAL (ASCII) AND TYPE
4746
4747 ;*THIS ROUTINE IS USED TO CHANGE A 16-BIT BINARY NUMBER TO A 6-DIGIT
4748 ;*OCTAL (ASCII) NUMBER AND TYPE IT.
4749 ;*$TYPOS---ENTER HERE TO SETUP SUPPRESS ZEROS AND NUMBER OF DIGITS TO TYPE
4750 ;*CALL:
4751 ;* MOV NUM,-(SP) ;;NUMBER TO BE TYPED
4752 ;* TYPOS ;;CALL FOR TYPEOUT
4753 ;* .BYTE N ;;N=1 TO 6 FOR NUMBER OF DIGITS TO TYPE
4754 ;* .BYTE M ;;M=1 OR 0
4755 ;* ;;1=TYPE LEADING ZEROS
4756 ;* ;;0=SUPPRESS LEADING ZEROS
4757 ;*
4758 ;*$TYPON----ENTER HERE TO TYPE OUT WITH THE SAME PARAMETERS AS THE LAST
4759 ;*$TYPOS OR $TYPOC
4760 ;*CALL:
4761 ;* MOV NUM,-(SP) ;;NUMBER TO BE TYPED
4762 ;* TYPON ;;CALL FOR TYPEOUT
4763 ;*
4764 ;*$TYPOC---ENTER HERE FOR TYPEOUT OF A 16 BIT NUMBER
4765 ;*CALL:
4766 ;* MOV NUM,-(SP) ;;NUMBER TO BE TYPED
4767 ;* TYPOC ;;CALL FOR TYPEOUT
4768 ;*
4769 026722 017646 000000 $TYPOS: MOV 3(SP),-(SP) ;;PICKUP THE MODE
4770 026726 116637 000001 027145 MOVB 1(SP),$OFILL ;;LOAD ZERO FILL SWITCH
4771 026734 112637 027147 MOVB (SP)+,$MODE+1 ;;NUMBER OF DIGITS TO TYPE
    
```

```

4772 026740 062716 0000C2      ADD      #2,(SP)      ;;ADJUST RETURN ADDRESS
4773 026744 000406      BR      $TYPON
4774 026746 112737 000001 027145 $TYPOC: MOVB  #1,$OFILL      ;;SET THE ZERO FILL SWITCH
4775 026754 112737 000006 027147 MOVB  #6,$SOMODE+1  ;;SET FOR SIX(6) DIGITS
4776 026762 112737 000005 027144 $TYPON: MOVB  #5,$OCNT      ;;SET THE ITERATION COUNT
4777 026770 010346      MOV      R3,-(SP)    ;;SAVE R3
4778 026772 010446      MOV      R4,-(SP)    ;;SAVE R4
4779 026774 010546      MOV      R5,-(SP)    ;;SAVE R5
4780 026776 113704 027147 MOVB  $OMODF+1,R4    ;;GET THE NUMBER OF DIGITS TO TYPE
4781 027002 005404      NEG      R4
4782 027004 062704 000006      ADD      #6,R4      ;;SUBTRACT IT FOR MAX. ALLOWED
4783 027010 110437 027146 MOVB  R4,$OMODE      ;;SAVE IT FOR USE
4784 027014 113704 027145 MOVDB $OFILL,R4      ;;GET THE ZERO FILL SWITCH
4785 027020 016605 000012      MOV      12(SP),R5   ;;PICKUP THE INPUT NUMBER
4786 027024 005003      CLR      R3          ;;CLEAR THE OUTPUT WORD
4787 027026 006105      1$:    ROL      R5      ;;ROTATE MSB INTO "C"
4788 027030 000404      BR      3$
4789 027032 006105      2$:    ROL      R5      ;;GO DO MSB
4790 027034 006105      ROL      R5          ;;FORM THIS DIGIT
4791 027036 006105      ROL      R5
4792 027040 010503      MOV      R5,R3
4793 027042 006103      3$:    ROL      R3      ;;GET LSB OF THIS DIGIT
4794 027044 105337 027146 DECB  $OMODE      ;;TYPE THIS DIGIT?
4795 027050 100016      BPL      7$
4796 027052 042703 177770 BIC  #177770,R3    ;;BR IF NO
4797 027056 001002      BNE      4$
4798 027060 005704      TST      R4          ;;GET RID OF JUNK
4799 027062 001403      BEQ      5$          ;;TEST FOR 0
4800 027064 005204      4$:    INC      R4          ;;SUPPRESS THIS 0'
4801 027066 052703 000060      BIS      #'0,R3     ;;BR IF YES
4802 027072 052703 000040      5$:    BIS      #' ,R3     ;;DON'T SUPPRESS ANYMORE 0'S
4803 027076 110337 027142 MOVB  R3,$S        ;;MAKE THIS DIGIT ASCII
4804 027102 104400 027142 TYPE  #8$          ;;MAKE ASCII IF NOT ALREADY
4805 027106 105337 027144 7$:    DECB  $OCNT      ;;SAVE FOR TYPING
4806 027112 003347      3GT     2$          ;;GO TYPE THIS DIGIT
4807 027114 002402      BLT     6$          ;;COUNT BY 1
4808 027116 005204      INC     R4          ;;BR IF MORE TO DO
4809 027120 000744      BR     2$          ;;BR IF DONE
4810 027122 012605      6$:    MOV     (SP)+,R5  ;;INSURE LAST DIGIT ISN'T A BLANK
4811 027124 012604      MOV     (SP)+,R4      ;;GO DO THE LAST DIGIT
4812 027126 012603      MOV     (SP)+,R3      ;;RESTORE R5
4813 027130 016665 000002 000004 MOV  2(SP),4(SP)    ;;RESTORE R4
4814 027136 012616      MOV     (SP)+,(SP)    ;;RESTORE R3
4815 027140 000002      RTI                    ;;RESTORE R3
4816 027142 000      8$:    .BYTE 0      ;;SET THE STACK FOR RETURNING
4817 027143 000      .BYTE 0      ;;RETURN
4818 027144 000      $OCNT: .BYTE 0  ;;STORAGE FOR ASCII DIGIT
4819 027145 000      $OFILL: .BYTE 0  ;;TERMINATOR FOR TYPE ROUTINE
4820 027146 000000      $OMODE: .WORD 0  ;;OCTAL DIGIT COUNTER

```

\*\*\*\*\*

.SBTTL CONVERT BINARY TO DECIMAL AND TYPE ROUTINE

4821  
4822  
4823  
4824  
4825

```

4826 ;*THIS ROUTINE IS USED TO CHANGE A 16-BIT BINARY NUMBER TO A 5-DIGIT
4827 ;*SIGNED DECIMAL (ASCII) NUMBER AND TYPE IT. DEPENDING ON WHETHER THE
4828 ;*NUMBER IS POSITIVE OR NEGATIVE A SPACE OR A MINUS SIGN WILL BE TYPED
4829 ;*BEFORE THE FIRST DIGIT OF THE NUMBER. LEADING ZEROS WILL ALWAYS BE
4830 ;*REPLACED WITH SPACES.
4831 ;*CALL:
4832 ;*      MOV      NUM,-(SP)      ;;PUT THE BINARY NUMBER ON THE STACK
4833 ;*      TYPDS                    ;;GO TO THE ROUTINE
4834
4835 $TYPDS:
4836      MOV      R0,-(SP)      ;;PUSH R0 ON STACK
4837      MOV      R1,-(SP)      ;;PUSH R1 ON STACK
4838      MOV      R2,-(SP)      ;;PUSH R2 ON STACK
4839      MOV      R3,-(SP)      ;;PUSH R3 ON STACK
4840      MOV      R5,-(SP)      ;;PUSH R5 ON STACK
4841      MOV      #20200,-(SP)   ;;SET BLANK SWITCH AND SIGN
4842      MOV      20(SP),R5     ;;GET THE INPUT NUMBER
4843      RPL      R5           ;;BR IF INPUT IS POS.
4844      NEG      R5           ;;MAKE THE BINARY NUMBER POS.
4845      MOVB    #'-,1(SP)     ;;MAKE THE ASCII NUMBER NEG.
4846      CLP     R0           ;;ZERO THE CONSTANTS INDEX
4847      MOV     #SDBLK,R3     ;;SETUP THE OUTPUT POINTER
4848      MOVB    #'',(R3)+    ;;SET THE FIRST CHARACTER TO A BLANK
4849      CLR     R2           ;;CLEAR THE BCD NUMBER
4850      MOV     $DTBL(R0),R1  ;;GET THE CONSTANT
4851      SUB     R1,R5        ;;FORM THIS BCD DIGIT
4852      BLT    R5           ;;BR IF DONE
4853      INC     R2          ;;INCREASE THE BCD DIGIT BY 1
4854      BR     R2
4855      ADD     R1,R5        ;;ADD BACK THE CONSTANT
4856      TST    R2          ;;CHECK IF BCD DIGIT=0
4857      BNE   R5           ;;FALL THROUGH IF 0
4858      TSTB   (SP)        ;;STILL DOING LEADING 0'S?
4859      BMI   R5           ;;BR IF YES
4860      ASLB   (SP)        ;;MSD?
4861      BCC   R5           ;;BR IF NO
4862      MOVB   1(SP),-1(R3)  ;;YES--SET THE SIGN
4863      BIS    #'0,R2       ;;MAKE THE BCD DIGIT ASCII
4864      BIS    #' ,R2       ;;MAKE IT A SPACE IF NOT ALREADY A DIGIT
4865      MOVB   R2,(R3)+    ;;PUT THIS CHARACTER IN THE OUTPUT BUFFER
4866      TST    (R0)+       ;;JUST INCREMENTING
4867      CMP    R0,#10      ;;CHECK THE TABLE INDEX
4868      BLT    R2          ;;GO DO THE NEXT DIGIT
4869      BGT    R5          ;;GO TO EXIT
4870      MOV    R5,R2       ;;GET THE LSD
4871      BR     R5          ;;GO CHANGE TO ASCII
4872      TSTB   (SP)+       ;;WAS THE LSD THE FIRST NON-ZERO?
4873      SPL    R5          ;;BR IF NO
4874      MOVB   -1(SP),-2(R3) ;;YES--SET THE SIGN FOR TYPING
4875      CLRB   (R3)        ;;SET THE TERMINATOR
4876      MOV    (SP)+,R5    ;;POP STACK INTO R5
4877      MOV    (SP)+,R3    ;;POP STACK INTO R3
4878      MOV    (SP)+,R2    ;;POP STACK INTO R2
4879      MOV    (SP)+,R1    ;;POP STACK INTO R1

```

```

4880 027334 012600          MOV      (SP)+,RO      ;; POP STACK INTO RO
4881 027336 104400 027364   TYPE      $DBLK        ;; NOW TYPE THE NUMBER
4882 027342 016666 000002 000004   MOV      2(SP),4(SP)  ;; ADJUST THE STACK
4883 027350 012616          MOV      (SP)+,(SP)
4884 027352 000002          RTI                    ;; RETURN TO USER
4885 027354 023420          $OTBL: 10000.
4886 027356 001750          1000.
4887 027360 000144          100.
4888 027362 000012          10.
4889 027364 000004          $DBLK: .BLKW 4
4890
4891 ;*****
4892 .SBTTL TRAP DECODER
4893
4894 ;*THIS ROUTINE WILL PICKUP THE LOWER BYTE OF THE "TRAP" INSTRUCTION
4895 ;*AND USE IT TO INDEX THROUGH THE TRAP TABLE FOR THE STARTING ADDRESS
4896 ;*OF THE DESIRED ROUTINE. THEN USING THE ADDRESS OBTAINED IT WILL
4897 ;*GO TO THAT ROUTINE.
4898
4899 $TRAP: MOV      RO,-(SP)      ;; SAVE RO
4900 027374 010046 000002   MOV      2(SP),RO      ;; GET TRAP ADDRESS
4901 027376 016600          TST      -(RO)         ;; BACKUP BY 2
4902 027402 005740          MOVB    (PO),RO       ;; GET RIGHT BYTE OF TRAP
4903 027404 111000          ASL     RO            ;; POSITION FOR INDEXING
4904 027406 006300          MOV     $TRPAD(RO),RO  ;; INDEX TO TABLE
4905 027410 016000 027416   RTS     RO            ;; GO TO ROUTINE
4906 027414 000200
4907
4908 .SBTTL TRAP TABLE
4909
4910 ;*THIS TABLE CONTAINS THE STARTING ADDRESSES OF THE ROUTINES CALLED
4911 ;*BY THE "TRAP" INSTRUCTION.
4912
4913 ; ROUTINE
4914 ; -----
4915 $TRPAD:
4916 027416          $TYPE  ;;CALL=TYPE      TRAP+0(104400)  TTY TYPEOUT ROUTINE
4917 027416 026506   $TYPOC ;;CALL=TYPOC     TRAP+1(104401)  TYPE OCTAL NUMBER (WITH LEADING ZEROS)
4918 027420 026746   $TYPOS  ;;CALL=TYPOS     TRAP+2(104402)  TYPE OCTAL NUMBER (NO LEADING ZEROS)
4919 027422 026722   $TYPON  ;;CALL=TYPON     TRAP+3(104403)  TYPE OCTAL NUMBER (AS PER LAST CALL)
4920 027424 026762   $TYPDS  ;;CALL=TYPOS     TRAP+4(104404)  TYPE DECIMAL NUMBER (WITH SIGN)
4921 027426 027150
4922
4923 ;*****
4924 .SBTTL POWER DOWN AND UP ROUTINES
4925
4926 :POWER DOWN ROUTINE
4927 $PWRDN: MOV     #SILLUP,2#PWRVEC ;; SET FOR FAST UP
4928 027430 012737 027564 000024 000026   MOV     #340,2#PWRVEC+2 ;; PRIO:7
4929 027436 012737 000340 000026   MOV     RO,-(SP)      ;; PUSH RO ON STACK
4930 027444 010046          MOV     R1,-(SP)     ;; PUSH R1 ON STACK
4931 027446 010146          MOV     R2,-(SP)     ;; PUSH R2 ON STACK
4932 027450 010246          MOV     R3,-(SP)     ;; PUSH R3 ON STACK
4933 027452 010346

```

```

4934 027454 010446          MOV    R4,-(SP)      ;; PUSH R4 ON STACK
4935 027456 010546          MOV    R5,-(SP)      ;; PUSH R5 ON STACK
4936 027460 010637 027570        MOV    SP,$$SAVR6    ;; SAVE SP
4937 027464 012737 027476 000024  MOV    #SPWRUP,2#PWRVEC ;; SET UP VECTOR
4938 027472 000000          HALT
4939 027474 000776          BR     -2           ;; HANG UP
4940
4941          .POWER UP ROUTINE
4942 027476 013706 027570        $PWRUP: MOV    $$SAVR6,SP    ;; GET SP
4943 027502 005037 027570        CLR    $$SAVR6      ;; WAIT LOOP FOR THE TTY
4944 027504 005237 027570        1$:   INC    $$SAVR6    ;; WAIT FOR THE INC
4945 027512 001375          BNE    1$           ;; OF WORD
4946 027514 012605          MOV    (SP)+,R5     ;; POP STACK INTO R5
4947 027516 012604          MOV    (SP)+,R4     ;; POP STACK INTO R4
4948 027520 012603          MOV    (SP)+,R3     ;; POP STACK INTO R3
4949 027522 012602          MOV    (SP)+,R2     ;; POP STACK INTO R2
4950 027524 012601          MOV    (SP)+,R1     ;; POP STACK INTO R1
4951 027526 012600          MOV    (SP)+,R0     ;; POP STACK INTO R0
4952 027530 012737 027430 000024  MOV    #SPWRDN,2#PWRVEC ;; SET UP THE POWER DOWN VECTOR
4953 027536 012737 000340 000026  MOV    #340,2#PWRVEC+2 ;; PWRD:7
4954 027544 104400          TYPE          ;; REPORT THE POWER FAILURE
4955 027546 031124          $PWRMG: .WORD    POWMES    ;; POWER FAIL MESSAGE POINTER
4956 027550 012716          MOV    (PC)+,(SP)   ;; RESTART AT DISPATCH
4957 027552 027572          $PWRAD: .WORD    DISPATCH    ;; RESTART ADDRESS
4958 027554 042766 000020 000002  BIC    #20,2(SP)    ;; CLEAR +- BIT
4959 027562 000002          RTI
4960 027564 000000          $ILLUP: HALT
4961 027566 000776          BR     -2           ;; THE POWER UP SEQUENCE WAS STARTED
4962 027570 000000          $$SAVR6: 0         ;; BEFORE THE POWER DOWN WAS COMPLETE
4963
4964 027572 000177 000000          DISPATCH: JMP     $RETURN    ;; PUT THE SP HERE
4965
4966          .POWER UP SEQUENCE WAS STARTED
4967 027576 000000          RETURN: .WORD    0     ;; BEING RUN BEFORE POWER FAILURE
4968
4969          OCCURRED
4970          THIS LOCATION HOLDS THE STARTING
4971          ADDRESS OF THE SECTION BEING RUN
4972          BEFORE THE POWER FAILURE OCCURRED
4973          EITHER:
4974          BEGIN:
4975          ERCD12:
4976          XLOOP:
4977          CKSAME:
    
```





5029 027740 000000  
 5030 027742 010400  
 5031 027744 020200  
 5032 027746 030100  
 5033 027750 040040  
 5034 027752 050020  
 5035 027754 060010  
 5036 027756 070004  
 5037 027760 000002  
 5038 027762 000001  
 5039 027764 020202  
 5040 027766 030102  
 5041 027770 040042  
 5042 027772 050022  
 5043 027774 060012  
 5044 027776 070006  
 5045 030000 004000  
 5046 030002 014400  
 5047 030004 024200  
 5048 030006 034100  
 5049 030010 044040  
 5050 030012 054020  
 5051 030014 064010  
 5052 030016 074004  
 5053 030020 004002  
 5054 030022 004001  
 5055 030024 024202  
 5056 030026 034102  
 5057 030030 044042  
 5058 030032 054022  
 5059 030034 064012  
 5060 030036 074006  
 5061  
 5062  
 5063  
 5064  
 5065 030040 200  
 5066 030041 201  
 5067 030042 202  
 5068 030043 203  
 5069 030044 204  
 5070 030045 205  
 5071 030046 206  
 5072 030047 207  
 5073 030050 210  
 5074 030051 220  
 5075 030052 212  
 5076 030053 213  
 5077 030054 214  
 5078 030055 215  
 5079 030056 216  
 5080 030057 217  
 5081 030060 100  
 5082 030061 101

0000  
 10400  
 20200  
 30100  
 40040  
 50020  
 60010  
 70004  
 0002  
 0001  
 20202  
 30102  
 40042  
 50022  
 60012  
 70006  
 4000  
 14400  
 24200  
 34100  
 44040  
 54020  
 64010  
 74004  
 4002  
 4001  
 24202  
 34102  
 44042  
 54022  
 64012  
 74006  
 ALPEND: 74006

..49  
 :50  
 :51  
 :52  
 :53  
 :54  
 :55  
 :56  
 :57  
 :58  
 :59  
 :60  
 :61  
 :62  
 :63  
 :64  
 :65  
 :66  
 :67  
 :68  
 :69  
 :70  
 :71  
 :72  
 :73  
 :74  
 :75  
 :76  
 :77  
 :78  
 :79  
 :80

SPACE  
 I  
 J  
 K  
 L  
 M  
 N  
 O  
 P  
 Q  
 R  
 S  
 T  
 U  
 V  
 W  
 X  
 Y  
 Z  
 .  
 ,  
 -  
 =  
 >  
 ?  
 @  
 #  
 \$  
 %  
 ^  
 \_  
 `  
 {  
 |  
 }  
 ~  
 !  
 "

BLANK  
 I  
 J  
 K  
 L  
 M  
 N  
 O  
 P  
 Q  
 R  
 S  
 T  
 U  
 V  
 W  
 X  
 Y  
 Z  
 .  
 ,  
 -  
 =  
 >  
 ?  
 @  
 #  
 \$  
 %  
 ^  
 \_  
 `  
 {  
 |  
 }  
 ~  
 !  
 "

:ALPHANUMERIC DECK DATA TABLE  
 :THE VALUE IS THE ENCODED FORM OF THE DATA

	ALPCDP:	.BYTE	COLUMN	ASCII	PUNCH
		200	1	&	12
		201	2	A	12
		202	3	B	12
		203	4	C	12
		204	5	D	12
		205	6	E	12
		206	7	F	12
		207	8	G	12
		210	9	H	12
		220	10	I	12
		212	11	J	12
		213	12	.	12
		214	13	,	12
		215	14	-	12
		216	15	=	12
		217	16	>	12
		100	17	!	11
		101	18	"	11



D14

5137	030150	210
5138	030151	220
5139	030152	212
5140	030153	213
5141	030154	214
5142	030155	215
5143	030156	216
5144	030157	217

.BYTE	210	:73	H	12	8
.BYTE	220	:74	T	12	9
.BYTE	212	:75	T	12	8
.BYTE	213	:76	.	12	8
.BYTE	214	:77	.	12	8
.BYTE	215	:78	.	12	8
.BYTE	216	:79	+	12	8
.BYTE	217	:80	!	12	8

ALPENP: .BYTE 217  
;BINARY DECK DATA TABLE

5145		
5146		
5147		
5148	030160	000000
5149	030162	000001
5150	030164	000002
5151	030166	070004
5152	030170	60010
5153	030172	50020
5154	030174	40040
5155	030176	30100
5156	030200	20200
5157	030202	010400
5158	030204	001000
5159	030206	002000
5160	030210	004000
5161	030212	171111
5162	030214	172222
5163	030216	173333
5164	030220	174444
5165	030222	175555
5166	030224	176666
5167	030226	177777
5168	030230	061010
5169	030232	161212
5170	030234	171313
5171	030236	171414
5172	030240	171515
5173	030242	171616
5174	030244	171717
5175	030246	052020
5176	030250	172121
5177	030252	172323
5178	030254	172424
5179	030256	172525
5180	030260	172626
5181	030262	172727
5182	030264	173030
5183	030266	173131
5184	030270	173232
5185	030272	173434
5186	030274	173535
5187	030276	173636
5188	030300	173737
5189	030302	044040
5190	030304	174141

BINCD:	0	COLUMN	PUNCH
	1	:1	BLANK
	2	:2	
	70004	:3	
	60010	:4	
	50020	:5	
	40040	:6	
	30100	:7	
	20200	:8	
	010400	:9	
	001000	:10	
	002000	:11	
	004000	:12	
	171111	:13	
	172222	:14	
	173333	:15	
	174444	:16	
	175555	:17	
	176666	:18	
	177777	:19	
	061010	:20	
	161212	:21	
	171313	:22	
	171414	:23	
	171515	:24	
	171616	:25	
	171717	:26	
	052020	:27	
	172121	:28	
	172323	:29	
	172424	:30	
	172525	:31	
	172626	:32	
	172727	:33	
	173030	:34	
	173131	:35	
	173232	:36	
	173434	:37	
	173535	:38	
	173636	:39	
	173737	:40	
	044040	:41	
	174141	:42	
		:43	

5191	030306	164242	164242	44
5192	030310	174343	174343	45
5193	030312	174545	174545	46
5194	030314	174646	174646	47
5195	030316	174747	174747	48
5196	030320	165050	165050	49
5197	030322	175151	175151	50
5198	030324	165252	165252	51
5199	030326	175353	175353	52
5200	030330	175454	175454	53
5201	030332	175656	175656	54
5202	030334	175757	175757	55
5203	030336	156060	156060	56
5204	030340	176161	176161	57
5205	030342	176262	176262	58
5206	030344	176363	176363	59
5207	030346	176464	176464	60
5208	030350	176565	176565	61
5209	030352	176767	176767	62
5210	030354	177070	177070	63
5211	030356	177171	177171	64
5212	030360	177272	177272	65
5213	030362	177373	177373	66
5214	030364	177474	177474	67
5215	030366	177575	177575	68
5216	030370	177676	177676	69
5217	030372	030101	30101	70
5218	030374	020202	20202	71
5219	030376	130303	130303	72
5220	030400	170404	170404	73
5221	030402	170505	170505	74
5222	030404	170606	170606	75
5223	030406	170707	170707	76
5224	030410	163210	163210	77
5225	030412	170123	170123	78
5226	030414	177654	177654	79
5227	030416	174567	174567	80

BINEND:

: BINARY DECK DATA TABLE  
: THE VALUE IS THE ENCODED VALUE, WHICH ORS THE OCTAL REPRESENTATION OF  
: ROWS ONE THRU SEVEN

5233	030420	000
5234	030421	020
5235	030422	010
5236	030423	007
5237	030424	006
5238	030425	005
5239	030426	004
5240	030427	003
5241	030430	002
5242	030431	001
5243	030432	040
5244	030433	100

BINCDP:	.BYTE		COLUMN	ASCII	PUNCH
	.BYTE	0	:1	SPACE	BLANK
	.BYTE	20	:2	9	9
	.BYTE	10	:3	8	8
	.BYTE	7	:4	7	7
	.BYTE	6	:5	6	6
	.BYTE	5	:6	5	5
	.BYTE	4	:7	4	4
	.BYTE	3	:8	3	3
	.BYTE	2	:9	2	2
	.BYTE	1	:10	1	1
	.BYTE	40	:11	0	0
	.BYTE	100	:12	-	11

5245	030434	200	.BYTE	200	:13		
5246	030435	067	.BYTE	67	:14		
5247	030436	117	.BYTE	117	:15		
5248	030437	177	.BYTE	177	:16		
5249	030440	207	.BYTE	207	:17		
5250	030441	267	.BYTE	267	:18		
5251	030442	317	.BYTE	317	:19		
5252	030443	377	.BYTE	377	:20		
5253	030444	046	.BYTE	46	:21		
5254	030445	056	.BYTE	56	:22		
5255	030446	077	.BYTE	77	:23		
5256	030447	047	.BYTE	47	:24		
5257	030450	067	.BYTE	67	:25		
5258	030451	057	.BYTE	57	:26		
5259	030452	077	.BYTE	77	:27		
5260	030453	105	.BYTE	105	:28		
5261	030454	127	.BYTE	127	:29		
5262	030455	137	.BYTE	137	:30		
5263	030456	107	.BYTE	107	:31		
5264	030457	127	.BYTE	127	:32		
5265	030460	117	.BYTE	117	:33		
5266	030461	137	.BYTE	137	:34		
5267	030462	147	.BYTE	147	:35		
5268	030463	167	.BYTE	167	:36		
5269	030464	157	.BYTE	157	:37		
5270	030465	147	.BYTE	147	:38		
5271	030466	167	.BYTE	167	:39		
5272	030467	157	.BYTE	157	:40		
5273	030470	177	.BYTE	177	:41		
5274	030471	204	.BYTE	204	:42		
5275	030472	227	.BYTE	227	:43		
5276	030473	216	.BYTE	216	:44		
5277	030474	237	.BYTE	237	:45		
5278	030475	227	.BYTE	227	:46		
5279	030476	217	.BYTE	217	:47		
5280	030477	237	.BYTE	237	:48		
5281	030500	246	.BYTE	246	:49		
5282	030501	267	.BYTE	267	:50		
5283	030502	256	.BYTE	256	:51		
5284	030503	277	.BYTE	277	:52		
5285	030504	247	.BYTE	247	:53		
5286	030505	257	.BYTE	257	:54		
5287	030506	277	.BYTE	277	:55		
5288	030507	305	.BYTE	305	:56		
5289	030510	327	.BYTE	327	:57		
5290	030511	317	.BYTE	317	:58		
5291	030512	337	.BYTE	337	:59		
5292	030513	307	.BYTE	307	:60		
5293	030514	327	.BYTE	327	:61		
5294	030515	337	.BYTE	337	:62		
5295	030516	347	.BYTE	347	:63		
5296	030517	367	.BYTE	367	:64		
5297	030520	357	.BYTE	357	:65		
5298	030521	377	.BYTE	377	:66		

8 12

5299	030522	347			.BYTE	347	:67
5300	030523	367			.BYTE	367	:68
5301	030524	357			.BYTE	357	:69
5302	030525	023			.BYTE	23	:70
5303	030526	012			.BYTE	12	:71
5304	030527	033			.BYTE	33	:72
5305	030530	007			.BYTE	7	:73
5306	030531	027			.BYTE	27	:74
5307	030532	017			.BYTE	17	:75
5308	030533	037			.BYTE	37	:76
5309	030534	146			.BYTE	146	:77
5310	030535	037			.BYTE	37	:78
5311	030536	347			.BYTE	347	:79
5312	030537	237			.BYTE	237	:80
5313							
5314	030540	020040	020040	040	ASCII	/ / /	
5315	030545	040	000040		SPACE:	.ASCIZ / / /	
5316	030550	005012	012			.ASCIZ <12><12><12>	
5317	030553	015	000012		CRLF:	.ASCIZ <15><12>	
5318							
5319	030556	005015	046412	044501	STMES:	.ASCIZ <15><12><12>"MAINDEC-11-DZCDB REV. B"	<15><12>
5320	030564	042116	041505	030455			
5321	030572	026461	055104	042103			
5322	030600	020102	020040	051040			
5323	030606	053105	020056	006502			
5324	030614	000012					
5325							
5326	030616	005015	052123	051101	STADDR:	.ASCII <15><12>"STARTING ADDRESSES ARE:"	
5327	030624	044524	043516	040440			
5328	030632	042104	042522	051523			
5329	030640	051505	040440	042522			
5330	030646	072					
5331	030647	015	031012	030060		.ASCII <15><12>"200 = INSTRUCTION AND DATA TEST"	
5332	030654	036440	044440	051516			
5333	030662	051124	041525	044524			
5334	030670	047117	040440	042116			
5335	030676	042040	052101	020101			
5336	030704	042524	052123				
5337	030710	005015	030462	020060		.ASCII <15><12>"210 = ERROR FUNCTION TEST (M-1000/M-200)"	
5338	030716	020075	051105	047522			
5339	030724	020122	052506	041516			
5340	030732	044524	047117	052040			
5341	030740	051505	020124	046450			
5342	030746	030455	030060	027460			
5343	030754	026515	030062	024460			
5344	030762	005015	031062	020060		.ASCII <15><12>"220 = SINGLE TEST LOOP"	
5345	030770	020075	044523	043516			
5346	030776	042514	052040	051505			
5347	031004	020124	047514	050117			
5348	031012	005015	032062	020060		.ASCII <15><12>"240 = READ SINGLE DATA PATTERN TEST"	
5349	031020	020075	042522	042101			
5350	031026	051440	047111	046107			
5351	031034	020105	040504	040524			
5352	031042	050040	052101	042524			

5353	031050	047122	052040	051505	
5354	031056	124			
5355	031057	015	031012	030065	.ASCIZ <15><12>"250 = ERROR FUNCTION TEST (M-1200)"
5356	031064	036440	042440	051122	
5357	031072	051117	043040	047125	
5358	031100	052103	047511	020116	
5359	031106	042524	052123	024040	
5360	031114	026515	031061	030060	
5361	031122	000051			
5362					
5363	031124	005015	050012	053517	POWME: .ASCII <15><12><12>"POWER FAILURE OCCURRED - WILL ATTEMPT TO"
5364	031132	051105	043040	044501	
5365	031140	052514	042522	047440	
5366	031146	041503	051125	042522	
5367	031154	020104	020055	044527	
5368	031162	046114	040440	052124	
5369	031170	046505	052120	052040	
5370	031176	117			
5371	031177	015	051012	051505	.ASCIZ <15><12>"RESTART SECTION OF PROGRAM FORMERLY IN USE"<15><12>
5372	031204	040524	052122	051440	
5373	031212	041505	044524	047117	
5374	031220	047440	020106	051120	
5375	031226	043517	040522	020115	
5376	031234	047506	046522	051105	
5377	031242	054514	044440	020116	
5378	031250	051525	006505	000012	
5379					
5380	031256	005015	047105	042524	MLOGIC: .ASCIZ <15><12>"ENTERING LOGIC TESTS"
5381	031264	044522	043516	046040	
5382	031272	043517	041511	052040	
5383	031300	051505	051524	000	
5384					
5385	031305	015	042412	052116	MDATA: .ASCIZ <15><12>"ENTERING DATA TESTS"
5386	031312	051105	047111	020107	
5387	031320	040504	040524	052040	
5388	031326	051505	051524	000	
5389					
5390	031333	015	042412	052116	M1200E: .ASCIZ <15><12>"ENTERING M1200 ERROR FUNCTION TESTS"
5391	031340	051105	047111	020107	
5392	031346	030515	030062	020060	
5393	031354	051105	047522	020122	
5394	031362	052506	041516	044524	
5395	031370	047117	052040	051505	
5396	031376	051524	000		
5397					
5398	031401	015	042412	052116	M1000E: .ASCIZ <15><12>"ENTERING M1000/M200 ERROR FUNCTION TESTS"
5399	031406	051105	047111	020107	
5400	031414	030515	030060	027460	
5401	031422	031115	030060	042440	
5402	031430	051122	051117	043040	
5403	031436	047125	052103	047511	
5404	031444	020116	042524	052123	
5405	031452	000123			
5406					



MAINDEC - 11 - DZCOB-B MACY11 27(654) 1-JUL-77 08:39 PAGE 105  
 DZCOB.P11 DATA TABLES

SEQ 0177

5407	031454	005015	047105	042524	ML00P: .ASCIZ <15><12>"ENTERING A LOOP ON TEST SELECTED BY USER"
5408	031462	044522	043516	040440	
5409	031470	046040	047517	020120	
5410	031476	047117	052040	051505	
5411	031504	020124	042523	042514	
5412	031512	052103	042105	041040	
5413	031520	020131	051525	051105	
5414	031526	000			
5415					
5416	031527	015	042412	052116	MPATS: .ASCIZ <15><12>"ENTERING SINGLE DATA PATTERN TESTING"
5417	031534	051105	047111	020107	
5418	031542	044523	043516	042514	
5419	031550	042040	052101	020101	
5420	031556	040520	052124	051105	
5421	031564	020116	042524	052123	
5422	031572	047111	000107		
5423					
5424	031576	005015	051120	051505	MSG1: .ASCIZ <15><12>/PRESS CARD READER 'RESET'/'
5425	031604	020123	040503	042122	
5426	031612	051040	040505	042504	
5427	031620	020122	051047	051505	
5428	031626	052105	000047		
5429	031632	005015	044124	047105	MSG2: .ASCIZ <15><12>/THEN CONTINUE DIAGNOSTIC FROM CPU CONSOLE/'
5430	031640	041440	047117	044524	
5431	031646	052516	020105	044504	
5432	031654	043501	047516	052123	
5433	031662	041511	043040	047522	
5434	031670	020115	050103	020125	
5435	031676	047503	051516	046117	
5436	031704	000105			
5437	031706	005015	051120	051505	MSG3: .ASCIZ <15><12>/PRESS CARD READER 'STOP'/'
5438	031714	020123	040503	042122	
5439	031722	051040	040505	042504	
5440	031730	020122	051447	047524	
5441	031736	023520	000		
5442	031741	015	052012	042510	MSG4: .ASCIZ <15><12>/THE INTERRUPT LEVEL WAS /
5443	031746	044440	052116	051105	
5444	031754	052522	052120	046040	
5445	031762	053105	046105	053440	
5446	031770	051501	000040		
5447	031774	005015	042522	047515	MSG5: .ASCIZ <15><12>/REMOVE ALL CARDS FROM THE INPUT HOPPER/'
5448	032002	042526	040440	046114	
5449	032010	041440	051101	051504	
5450	032016	043040	047522	020115	
5451	032024	044124	020105	047111	
5452	032032	052520	020124	047510	
5453	032040	050120	051105	000	
5454	032045	015	051012	051505	MSG6: .ASCIZ <15><12>/RESTORE CARDS TO THE INPUT HOPPER/'
5455	032052	047524	042522	041440	
5456	032060	051101	051504	052040	
5457	032066	020117	044124	020105	
5458	032074	047111	052520	020124	
5459	032102	047510	050120	051105	
5460	032110	000			

5461	032111	015	030412	020056	MSG7:	ASCII	<15><12>/1. PULL OUTPUT STACKER PRESSURE ARM DOWN /
5462	032116	052520	046114	047440			
5463	032124	052125	052520	020124			
5464	032132	052123	041501	042513			
5465	032140	020122	051120	051505			
5466	032146	052523	042522	040440			
5467	032154	046522	042040	053517			
5468	032162	020118					
5469	032164	005015	047125	044524	.ASCII	<15><12>/UNTIL HOPPER CHECK LIGHT COMES ON/	
5470	032172	020114	047510	050120			
5471	032200	051105	041440	042510			
5472	032206	045503	046040	043511			
5473	032214	052110	041440	046517			
5474	032222	051505	047440	116	.ASCIZ	<15><12><12>/2. RELEASE STACKER PRESS. ARM/	
5475	032227	015	005012	027062			
5476	032234	051040	046105	040505			
5477	032242	042523	051440	040524			
5478	032250	045503	051105	050040			
5479	032256	042522	051523	020056			
5480	032264	051101	000115				
5481	032270	005015	044012	046117	MSG8:	.ASCII	<15><12><12>/HOLD DOWN THE SWITCH UNDER THE CAP OF THE INPUT /
5482	032276	020104	047504	047127			
5483	032304	052040	042510	051440			
5484	032312	044527	041524	020110			
5485	032320	047125	042504	020122			
5486	032326	044124	020105	040503			
5487	032334	020120	043117	052040			
5488	032342	042510	044440	050116			
5489	032350	052125	040				
5490	032353	110	050117	042520	.ASCIZ	/HOPPER/	
5491	032360	000122					
5492	032362	005015	042524	051101	MSG9:	.ASCII	<15><12>/TEAR OFF A PIECE OF CARD AND SLIP IT IN/
5493	032370	047440	043106	040440			
5494	032376	050040	042511	042503			
5495	032404	047440	020106	040503			
5496	032412	042122	040440	042116			
5497	032420	051440	044514	020120			
5498	032426	052111	044440	116			
5499	032433	015	043012	047522	.ASCII	<15><12>/FRONT OF THE PHOTOCCELL/	
5500	032440	052116	047440	020106			
5501	032446	044124	020105	044120			
5502	032454	052117	041517	046105			
5503	032462	114					
5504	032463	015	012		.ASCII	<15><12>	
5505	032465	015	041412	052501	.ASCII	<15><12>/CAUTION:MOVE YOUR FINGERS AWAY FROM THIS /	
5506	032472	044524	047117	046472			
5507	032500	053117	020105	047531			
5508	032506	051125	043040	047111			
5509	032514	042507	051522	040440			
5510	032522	040527	020131	051106			
5511	032530	046517	052040	044510			
5512	032536	020123					
5513	032540	051101	040505	041040	.ASCIZ	/AREA BEFORE CONTINUING!//	
5514	032546	043105	051117	020105			

5515	032554	047503	052116	047111	
5516	032563	044523	043516	000041	
5517	032570	005015	020412	020441	MSG10: .ASCIZ <15><12><12>/!!! WRONG RESPONSE TRY AGAIN !!!/
5518	032576	053440	047522	043516	
5519	032604	051040	051505	047520	
5520	032612	051516	020105	051124	
5521	032620	020131	043501	044501	
5522	032626	020116	020441	000041	
5523	032634	005015	047510	042114	MSG11: .ASCIZ <15><12>/HOLD THE OUTPUT STACKER GATE OPEN. THEN/
5524	032642	052040	042510	047440	
5525	032650	052125	052520	020124	
5526	032656	052123	041501	042513	
5527	032664	020122	040507	042524	
5528	032672	047440	042520	027116	
5529	032700	052040	042510	000116	
5530	032706	005015	042040	051101	MSG12: .ASCII <15><12>/ DARK-LIGHT CHECK /
5531	032714	026513	044514	044107	
5532	032722	020124	044103	041505	
5533	032730	020113			
5534	032732	005015	027111	027105	.ASCII <15><12>/I.E. - TEAR A CORNER OFF A CARD AND PLACE IT/
5535	032740	026440	052040	040505	
5536	032746	020122	020101	047503	
5537	032754	047122	051105	047440	
5538	032762	043105	040440	041440	
5539	032770	051101	020104	047101	
5540	032776	020104	046120	041501	
5541	033004	020105	052111		
5542	033010	005015	052101	052040	.ASCIZ <15><12> /AT THE BOTTOM OF THE INPUT STACK/
5543	033016	042510	041040	052117	
5544	033024	047524	020115	043117	
5545	033032	052040	042510	044440	
5546	033040	050116	052125	051440	
5547	033046	040524	045503	000	
5548	033053	015	042012	041505	MSG13: .ASCIZ <15><12>/DECK CARD NUM CARD COL SHB WAS/
5549	033060	020113	020040	020040	
5550	033066	040503	042122	047040	
5551	033074	046525	020040	020040	
5552	033102	041440	051101	020104	
5553	033110	047503	020114	020040	
5554	033116	044123	020102	020040	
5555	033124	020040	040527	000123	
5556	033132	005015	046101	044120	MSG14: .ASCIZ <15><12>/ALPHA /
5557	033140	020101	000		
5558	033143	015	041012	047111	MSG15: .ASCIZ <15><12>/BINARY/
5559	033150	051101	000131		
5560	033154	005015	044502	020124	MSG16: .ASCIZ <15><12>/BIT 15 WAS SET/
5561	033162	032461	053440	051501	
5562	033170	051440	052105	000	
5563	033175	015	051012	046505	MSG17: .ASCII <15><12>/REMEDY THE CONDITION BY RELOADING INPUT HOPPER/
5564	033202	042105	020131	044124	
5565	033210	020105	047503	042116	
5566	033216	052111	047511	020116	
5567	033224	054502	051040	046105	
5568	033232	040517	044504	043516	

5569	033240	044440	050116	052125	
5570	033246	044040	050117	042520	
5571	033254	122			
5572	033255	015	053412	052111	.ASCII <15><12>/WITH CARD DECK - PRESS 'RESET' BUTTON/
5573	033262	020110	040503	042122	
5574	033270	042040	041505	020113	
5575	033276	020055	051120	051505	
5576	033304	020123	051047	051505	
5577	033312	052105	020047	052502	
5578	033320	052124	047117		
5579	033324	005015	047117	041440	.ASCIZ <15><12>/ON CARD READER AND 'CONTINUE' SWITCH ON CPU PANEL/
5580	033332	051101	020104	042522	
5581	033340	042101	051105	040440	
5582	033346	042116	023440	047503	
5583	033354	052116	047111	042525	
5584	033362	020047	053523	052111	
5585	033370	044103	047440	020116	
5586	033376	050103	020125	040520	
5587	033404	042516	000114		
5588	033410	005015	040503	042122	MSG18: .ASCIZ <15><12>/CARD READER IS OFF-LINE/
5589	033416	051040	040505	042504	
5590	033424	020122	051511	047440	
5591	033432	043106	046055	047111	
5592	033440	000105			
5593	033442	005015	020040	041440	MSG19: .ASCIZ <15><12>/ COL. WAS CARD NUM. ERRORS/
5594	033450	046117	020056	020040	
5595	033456	040527	020123	020040	
5596	033464	040503	042122	047040	
5597	033472	046525	020056	042440	
5598	033500	051122	051117	000123	
5599	033506	005015	052520	020124	MSG20: .ASCIZ <15><12>/PUT ANY TWO CARDS IN INPUT HOPPER/
5600	033514	047101	020131	053524	
5601	033522	020117	040503	042122	
5602	033530	020123	047111	044440	
5603	033536	050116	052125	044040	
5604	033544	050117	042520	000122	
5605	033552	005015	051120	051505	MSG21: .ASCIZ <15><12>/PRESS END OF FILE BUTTON/
5606	033560	020123	047105	020104	
5607	033566	043117	043040	046111	
5608	033574	020105	052502	052124	
5609	033602	047117	000		
5610	033605	015	030412	020056	MSG22: .ASCII <15><12>/1. PUT 'HALT'SW. DOWN AND PRESS/
5611	033612	052520	020124	044047	
5612	033620	046101	023524	053523	
5613	033626	020056	047504	047127	
5614	033634	040440	042116	050040	
5615	033642	042522	051523		
5616	033646	005015	020040	041440	.ASCII <15><12>/ CONTINUE ON THE CONSOLE UNTIL/
5617	033654	047117	044524	052516	
5618	033662	020105	047117	052040	
5619	033670	042510	041440	047117	
5620	033676	047523	042514	052440	
5621	033704	052116	046111		
5622	033710	005015	020040	047440	.ASCII <15><12>/ ONE OR MORE CARDS ARE READ./

5623	033716	042516	047440	020122
5624	033720	047516	042522	041440
5625	033724	051101	051504	040440
5626	033740	042522	051040	040505
5627	033746	027104		
5628	033750	005015	020040	024040
5629	033756	047506	020122	044124
5630	033764	020105	030461	031457
5631	033772	020064	051120	051505
5632	034000	020123	046110	027524
5633	034006	051523	051	
5634	034011	015	005012	027062
5635	034016	052040	042510	020116
5636	034024	042522	052123	051117
5637	034032	020105	040510	052114
5638	034040	051440	027127	052040
5639	034047	020117	047516	046522
5640	034054	046101	050040	051517
5641	034062	052111	047511	116
5642	034067	015	020012	020040
5643	034074	047101	020104	047503
5644	034102	052116	047111	042525
5645	034110	042040	040511	047107
5646	034116	051517	044524	020103
5647	034124	051106	046517	041440
5648	034132	052520	041440	047117
5649	034140	047523	042514	
5650	034144	005015	020040	024040
5651	034152	030461	031457	020064
5652	034160	051122	051505	020123
5653	034166	047103	051124	020114
5654	034174	020046	047503	052116
5655	034202	051440	046511	046125
5656	034210	040524	042516	052517
5657	034216	046123	024531	000
5658				
5659	034223	015	046012	040517
5660	034230	020104	044124	020105
5661	034236	042101	051104	051505
5662	034244	020123	043117	052040
5663	034252	042510	042040	051505
5664	034260	051111	042105	052040
5665	034266	051505	020124	047111
5666	034274	047524	052040	042510
5667	034302	005015	053523	052111
5668	034310	044103	051040	043505
5669	034316	051511	042524	020122
5670	034324	020055	027111	027105
5671	034332	052040	042510	040440
5672	034340	042104	042522	051523
5673	034346	047440	020106	044124
5674	034354	020105	041523	050117
5675	034362	105		
5676	034363	015	044412	051516

.ASCII <15><12>" (FOR THE 11/34 PRESS HLT/SS)"

.ASCII <15><12><12>/2. THEN RESTORE HALT SW. TO NORMAL POSITION/

.ASCII <15><12>/ AND CONTINUE DIAGNOSTIC FROM CPU CONSOLE/

.ASCIZ <15><12>" (11/34 PRESS CNTRL & CONT SIMULTANEOUSLY)"

MSG23: .ASCII <15><12>"LOAD THE ADDRESS OF THE DESIRED TEST INTO THE"

.ASCII <15><12>"SWITCH REGISTER - I.E. THE ADDRESS OF THE SCOPE"

.ASCII <15><12>"INSTRUCTION AT THE BEGINNING OF THE TEST"

5677	034370	051121	041525	044524	
5678	034376	047117	040440	020124	
5679	034404	044124	020105	042502	
5680	034412	044507	047116	047111	
5681	034420	020107	043117	052040	
5682	034426	042510	052040	051505	
5683	034434	124			
5684	034435	015	052012	042510	.ASCIZ <15><12>"THEN PRESS CONTINUE SWITCH"
5685	034442	020116	051120	051505	
5686	034450	020123	047503	052116	
5687	034456	047111	042525	051440	
5688	034464	044527	041524	000110	
5689					
5690	034472	005015	042523	020124	MSG24: .ASCII <15><12>"SET DESIRED SWITCH REGISTER OPTIONS"
5691	034500	042504	044523	042522	
5692	034506	020104	053523	052111	
5693	034514	044103	051040	043505	
5694	034522	051511	042524	020122	
5695	034530	050117	044524	047117	
5696	034536	123			
5697	034537	015	052012	042510	.ASCIZ <15><12>"THEN PRESS CONTINUE SWITCH"
5698	034544	020116	051120	051505	
5699	034552	020123	047503	052116	
5700	034560	047111	042525	051440	
5701	034566	044527	041524	000110	
5702					
5703	034574	005015	047514	042101	MSG25: .ASCII <15><12>"LOAD DESIRED PATTERN VALUE INTO THE SWITCH"
5704	034602	042040	051505	051111	
5705	034610	042105	050040	052101	
5706	034616	042524	047122	053040	
5707	034624	046101	042525	044440	
5708	034632	052116	020117	044124	
5709	034640	020105	053523	052111	
5710	034646	044103			
5711	034650	005015	042522	044507	.ASCII <15><12>"REGISTER - I.E. INTO SWS<11:0>"
5712	034656	052123	051105	026440	
5713	034664	044440	042456	020056	
5714	034672	047111	047524	051440	
5715	034700	051527	030474	035061	
5716	034706	037060			
5717	034710	005015	044124	047105	.ASCIZ <15><12>"THEN PRESS CONTINUE SWITCH"
5718	034716	050040	042522	051523	
5719	034724	041440	047117	044524	
5720	034732	052516	020105	053523	
5721	034740	052111	044103	000	
5722					
5723	034745	015	052012	044510	MSG26: .ASCII <15><12>"/THIS TEST VERIFIES THE ABILITY OF THE/
5724	034752	020123	042524	052123	
5725	034760	053040	051105	043111	
5726	034766	042511	020123	044124	
5727	034774	020105	041101	046111	
5728	035002	052111	020131	043117	
5729	035010	052040	042510		
5730	035014	005015	051522	031061	.ASCIZ <15><12>"/RS1200 TO DETECT MIS-REGISTERED CARDS/

5731	035022	030060	052040	020117
5732	035030	042504	042524	052103
5733	035036	046440	051511	051055
5734	035044	043505	051511	042524
5735	035052	042522	020104	040503
5736	035060	042122	000123	
5737				
5738	035064	005015	040515	042513
5739	035072	040440	042116	052040
5740	035100	042510	020116	046120
5741	035106	041501	020105	020101
5742	035114	050123	041505	040511
5743	035122	020114	040503	042122
5744	035130	044440	052116	020117
5745	035136	044124	020105	047111
5746	035144	052520	124	
5747	035147	015	044012	050117
5748	035154	042520	027122	020040
5749	035162	042522	042506	020122
5750	035170	047524	051440	041505
5751	035176	044524	047117	033040
5752	035204	031456	047440	020106
5753	035212	044514	052123	047111
5754	035220	020107	047506	020122
5755	035226	042504	040524	046111
5756	035234	000123		
5757				
5758	035236	005015	051042	040505
5759	035244	020104	044103	041505
5760	035252	020113	044514	044107
5761	035260	021124	051440	047510
5762	035266	046125	020104	042502
5763	035274	041040	044514	045516
5764	035302	047111	000107	
5765				
5766	035306	005015	051120	051505
5767	035314	020123	051042	051505
5768	035322	052105	020042	047524
5769	035330	051040	050105	040505
5770	035336	020124	051105	047522
5771	035344	122		
5772	035345	015	043012	047125
5773	035352	052103	047511	020116
5774	035360	042524	052123	040440
5775	035366	040507	047111	000
5776	035373	015	044412	020123
5777	035400	044124	020105	040503
5778	035406	042122	051040	040505
5779	035414	042504	020122	047125
5780	035422	042504	122	
5781	035425	015	052012	051505
5782	035432	020124	047515	042504
5783	035440	020114	051522	030455
5784	035446	030062	037460	054450

MSG27: .ASCII &lt;15&gt;&lt;12&gt;/MAKE AND THEN PLACE A SPECIAL CARD INTO THE INPUT.

.ASCIZ &lt;15&gt;&lt;12&gt;/HOPPER. REFER TO SECTION 6.3 OF LISTING FOR DETAILS/

MSG28: .ASCIZ &lt;15&gt;&lt;12&gt;/"READ CHECK LIGHT" SHOULD BE BLINKING/

MSG29: .ASCII &lt;15&gt;&lt;12&gt;/PRESS "RESET" TO REPEAT ERROR/

.ASCIZ &lt;15&gt;&lt;12&gt;/FUNCTION TEST AGAIN/

MSG30: .ASCII &lt;15&gt;&lt;12&gt;/IS THE CARD READER UNDER/

.ASCIZ &lt;15&gt;&lt;12&gt;/TEST MODEL RS-1700?(Y OR N)/

5785	035454	047440	020122	024516	
5786	035462	000			
5787	035463	015	040412	020124	MSG31: .ASCII <15><12>/AT THIS TIME SET THE APPROPRIATE/
5788	035470	044124	051511	052040	
5789	035476	046511	020105	042523	
5790	035504	020124	044124	020105	
5791	035512	050101	051120	050117	
5792	035520	044522	052101	105	
5793	035525	015	051412	044527	.ASCII <15><12>/SWITCHES ON THE SR. (REFER TO THE/
5794	035532	041524	042510	020123	
5795	035540	047117	052040	042510	
5796	035546	051440	027122	024040	
5797	035554	042522	042506	020122	
5798	035562	047524	052040	042510	
5799	035570	005015	047504	052503	.ASCIIZ <15><12>/DOCUMENTATION ON SWITCH REGISTER SETTINGS/
5800	035576	042515	052116	052101	
5801	035604	047511	020116	047117	
5802	035612	051440	044527	041524	
5803	035620	020110	042522	044507	
5804	035626	052123	051105	051440	
5805	035634	052105	044524	043516	
5806	035642	024523	000		
5807	035645	015	052012	052123	MSG32: .ASCIIZ <15><12>/TST33 DATA LATE TEST/
5808	035652	031463	020040	040504	
5809	035660	040524	046040	052101	
5810	035666	020105	042524	052123	
5811	035674	000			
5812	035675	015	052012	052123	MSG33: .ASCIIZ <15><12>/TST34 OFF-LINE TEST/
5813	035702	032063	020040	043117	
5814	035710	026506	044514	042516	
5815	035716	052040	051505	000124	
5816	035724	005015	051524	031524	MSG34: .ASCIIZ <15><12>/TST35 SPECIAL INT. COND. TEST/
5817	035732	020065	051440	042520	
5818	035740	044503	046101	044440	
5819	035746	052116	020056	047503	
5820	035754	042116	020056	042524	
5821	035762	052123	000		
5822	035765	015	052012	052123	MSG35: .ASCIIZ <15><12>/TST36 HOPPER EMPTY TEST/
5823	035772	033063	020040	047510	
5824	036000	050120	051105	042440	
5825	036006	050115	054524	052040	
5826	036014	051505	000124		
5827	036020	005015	051524	031524	MSG36: .ASCIIZ <15><12>/TST37 STACKER FULL TEST/
5828	036026	020067	051440	040524	
5829	036034	045503	051105	043040	
5830	036042	046125	020114	042524	
5831	036050	052123	000		
5832	036053	015	052012	052123	MSG37: .ASCIIZ <15><12>/TST40 PICK CHECK TEST/
5833	036060	030064	020040	044520	
5834	036066	045503	041440	042510	
5835	036074	045503	052040	051505	
5836	036102	000124			
5837	036104	005015	051524	032124	MSG38: .ASCIIZ <15><12>/TST41 STACKER ERROR TEST/
5838	036112	020061	051440	040524	



5839	036120	045503	051105	042440	
5840	036126	051122	051117	052040	
5841	036134	051505	000124		
5842	036140	005015	051524	032124	MSG39: .ASCIZ <15><12>/TST42 EOF & HOPPER CHECK/
5843	036146	020062	042440	043117	
5844	036154	023040	044040	050117	
5845	036162	042520	020122	044103	
5846	036170	041505	000113		
5847	036174	005015	051524	032124	MSG40: .ASCIZ <15><12>/TST43 DARK-LIGHT CHECK/
5848	036202	020063	042040	051101	
5849	036210	026513	044514	044107	
5850	036216	020124	044103	041505	
5851	036224	000113			
5852	036226	005015	051524	032124	MSG41: .ASCIZ <15><12>/TST43A MIS-REGISTERED CARD TEST/
5853	036234	040463	020040	044515	
5854	036242	026523	042522	044507	
5855	036250	052123	051105	042105	
5856	036256	041440	051101	020104	
5857	036264	042524	052123	000	
5858					
5859	036272				.EVEN
5860					
5861					;ERROR ITEMS MESSAGE TABLE
5862					
5863	036272	052123	052101	051525	EM1: .ASCII "STATUS REGISTER (CDS) BIT07 NOT SET BY"
5864	036300	051040	043505	051511	
5865	036306	042524	020122	041450	
5866	036314	051504	020051	044502	
5867	036322	030124	020067	047516	
5868	036330	020124	042523	020124	
5869	036336	054502			
5870	036340	005015	047111	052111	.ASCIZ <15><12>"INITIALIZATION PULSE"
5871	036346	040511	044514	040532	
5872	036354	044524	047117	050040	
5873	036362	046125	042523	000	
5874					
5875	036367	103	046117	046525	EM2: .ASCII "COLUMN COUNT REGISTER (CDC) NOT CLEARED BY"
5876	036374	020116	047503	047125	
5877	036402	020124	042522	044507	
5878	036410	052123	051105	024040	
5879	036416	042103	024503	047040	
5880	036424	052117	041440	042514	
5881	036432	051101	042105	041040	
5882	036440	131			
5883	036441	015	044412	044516	.ASCIZ <15><12>"INITIALIZATION PULSE"
5884	036446	044524	046101	055111	
5885	036454	052101	047511	020116	
5886	036462	052520	051514	000105	
5887					
5888	036470	052502	020123	042101	EM3: .ASCII "BUS ADDRESS REGISTER (CDA) NOT CLEARED BY"
5889	036476	051104	051505	020123	
5890	036504	042522	044507	052123	
5891	036512	051105	024040	042103	
5892	036520	024501	047040	052117	

5893	036526	041440	042514	051101		
5894	036534	042105	041040	131		
5895	036541	015	044412	044516	.ASCIZ	<15><12>"INITIALIZATION PULSE"
5896	036546	044524	046101	055111		
5897	036554	052101	047511	020116		
5898	036562	052520	051514	000105		
5899						
5900	036570	052123	052101	051525	EM4:	.ASCIZ "STATUS REGISTER CONTENTS INCORRECT"
5901	036576	051040	043505	051511		
5902	036604	042524	020122	047503		
5903	036612	052116	047105	051524		
5904	036620	044440	041516	051117		
5905	036626	042522	052103	000		
5906						
5907	036633	103	046117	046525	EM5:	.ASCII "COLUMN COUNT REGISTER (CDC) NOT ABLE TO"
5908	036640	020116	047503	047125		
5909	036646	020124	042522	044507		
5910	036654	052123	051105	024040		
5911	036662	042103	024503	047040		
5912	036670	052117	040440	046102		
5913	036676	020105	047524			
5914	036702	005015	042502	046040	.ASCIZ	<15><12>"BE LOADED WITH ALL ONES"
5915	036710	040517	042504	020104		
5916	036716	044527	044124	040440		
5917	036724	046114	047440	042516		
5918	036732	000123				
5919						
5920	036734	047503	052514	047115	EM6:	.ASCII "COLUMN COUNT REGISTER (CDC) NOT CLEARED"
5921	036742	041440	052517	052116		
5922	036750	051040	043505	051511		
5923	036756	042524	020122	041450		
5924	036764	041504	020051	047516		
5925	036772	020124	046103	040505		
5926	037000	042522	104			
5927	037003	015	041012	020131	.ASCIZ	<15><12>"BY POWER CLEAR"
5928	037010	047520	042527	020122		
5929	037016	046103	040505	000122		
5930						
5931	037024	052502	020123	042101	EM7:	.ASCII "BUS ADDRESS REGISTER (CDA) NOT ABLE TO BE"
5932	037032	051104	051505	020123		
5933	037040	042522	044507	052123		
5934	037046	051105	024040	042103		
5935	037054	024501	047040	052117		
5936	037062	040440	046102	020135		
5937	037070	047524	041040	105		
5938	037075	015	046012	040517	.ASCIZ	<15><12>"LOADED WITH ALL ONES"
5939	037102	042504	020104	044527		
5940	037110	044124	040440	046114		
5941	037116	047440	042516	000123		
5942						
5943	037124	052502	020123	042101	EM10:	.ASCII "BUS ADDRESS REGISTER (CDA) NOT CLEARED"
5944	037132	051104	051505	020123		
5945	037140	042522	044507	052123		
5946	037146	051105	024040	042103		

5947	037154	024501	047040	052117	
5948	037162	041440	042514	051101	
5949	037170	042105			
5950	037172	005015	054502	050040	.ASCIZ <15><12>"BY POWER CLEAR"
5951	037200	053517	051105	041440	
5952	037206	042514	051101	000	
5953					
5954	037213	103	047117	051124	EM11: .ASCII "CONTROLLER READY DID NOT CLEAR ON"
5955	037220	046117	042514	020122	
5956	037226	042522	042101	020131	
5957	037234	044504	020104	047516	
5958	037242	020124	046103	040505	
5959	037250	020122	047117		
5960	037254	005015	042522	042101	.ASCIZ <15><12>"READING A CARD"
5961	037262	047111	020107	020101	
5962	037270	040503	042122	000	
5963					
5964	037275	103	047117	051124	EM12: .ASCII "CONTROLLER READY DID NOT CLEAR BIT00"
5965	037302	046117	042514	020122	
5966	037310	042522	042101	020131	
5967	037316	044504	020104	047516	
5968	037324	020124	046103	040505	
5969	037332	020122	044502	030124	
5970	037340	060			
5971	037341	015	047412	020106	.ASCIZ <15><12>"OF STATUS REGISTER (CDS)"
5972	037346	052123	052101	051525	
5973	037354	051040	043505	051511	
5974	037362	042524	020122	041450	
5975	037370	051504	000051		
5976					
5977	037374	047503	052116	047522	EM13: .ASCIZ "CONTROLLER DID NOT SET WITHIN 1 SECOND"
5978	037402	046114	051105	042040	
5979	037410	042111	047040	052117	
5980	037416	051440	052105	053440	
5981	037424	052111	044510	020116	
5982	037432	020061	042523	047503	
5983	037440	042116	000		
5984					
5985	037443	105	051122	051117	EM14: .ASCIZ "ERROR (BIT15) SET IN STATUS REGISTER (CDS)"
5986	037450	024040	044502	030524	
5987	037456	024465	051440	052105	
5988	037464	044440	020116	052123	
5989	037472	052101	051525	051040	
5990	037500	043505	051511	042524	
5991	037506	020122	041450	051504	
5992	037514	000051			
5993					
5994	037516	044502	020124	051117	EM15: .ASCII "BIT OR BITS SET IN STATUS REGISTER (CDS) THAT"
5995	037524	041040	052111	020123	
5996	037532	042523	020124	047111	
5997	037540	051440	040524	052524	
5998	037546	020123	042522	044507	
5999	037554	052123	051105	024040	
6000	037562	042103	024523	052040	

6001	037570	040510	124			
6002	037573	015	051412	047510	.ASCIZ	<15><12>"SHOULD NOT BE"
6003	037600	046125	020104	047516		
6004	037606	020124	042502	000		
6005						
6006	037613	102	051525	020131	EM16:	.ASCII "BUSY SET IN STATUS REGISTER (CDS)"
6007	037620	042523	020124	047111		
6008	037626	051440	040524	052524		
6009	037634	020123	042522	044507		
6010	037642	052123	051105	024040		
6011	037650	042103	024523			
6012	037654	005015	052111	051440	.ASCIZ	<15><12>"IT SHOULD NOT BE"
6013	037662	047510	046125	020104		
6014	037670	047516	020124	042502		
6015	037676	000				
6016						
6017	037677	122	051505	047524	EM17:	.ASCII "RESTORING CPU STATUS AFTER READING A CARD"
6018	037704	044522	043516	041440		
6019	037712	052520	051440	040524		
6020	037720	052524	020123	043101		
6021	037726	042524	020122	042522		
6022	037734	042101	047111	020107		
6023	037742	020101	040503	042122		
6024	037750	005015	046103	040505	.ASCIZ	<15><12>"CLEARED CONTROLLER READY IN STATUS REGISTER"
6025	037756	042522	020104	047503		
6026	037764	052116	047522	046114		
6027	037772	051105	051040	040505		
6028	040000	054504	044440	020116		
6029	040006	052123	052101	051525		
6030	040014	051040	043505	051511		
6031	040022	042524	000122			
6032						
6033	040026	047516	044440	052116	EM20:	.ASCIZ "NO INTERRUPT OCCURRED"
6034	040034	051105	052522	052120		
6035	040042	047440	041503	051125		
6036	040050	042522	000104			
6037						
6038	040054	047101	044440	052116	EM21:	.ASCIZ "AN INTERRUPT OCCURRED - SHOULD NOT HAVE"
6039	040062	051105	052522	052120		
6040	040070	047440	041503	051125		
6041	040076	042522	020104	020055		
6042	040104	044123	052517	042114		
6043	040112	047040	052117	044040		
6044	040120	053101	000105			
6045						
6046	040124	047111	042524	051122	EM22:	.ASCIZ "INTERRUPT ALREADY OCCURRED AT A HIGHER LEVEL"
6047	040132	050125	020124	046101		
6048	040140	042522	042101	020131		
6049	040146	041517	052503	051122		
6050	040154	042105	040440	020124		
6051	040162	020101	044510	044107		
6052	040170	051105	046040	053105		
6053	040176	046105	000			
6054						

6055	040201	103	047117	051124	EM23:	.ASCIZ	"CONTROLLER READY NOT SET"
6056	040206	046117	042514	020122			
6057	040214	042522	042101	020131			
6058	040222	047516	020124	042523			
6059	040230	000124					
6060							
6061	040232	047111	042524	051122	EM24:	.ASCIZ	"INTERRUPT ALREADY OCCURRED AT A LOWER LEVEL"
6062	040240	050125	020124	046101			
6063	040246	042522	042101	020131			
6064	040254	041517	052503	051122			
6065	040262	042105	040440	020124			
6066	040270	020101	047514	042527			
6067	040276	020122	042514	042526			
6068	040304	000114					
6069							
6070	040306	047101	044440	052116	EM25:	.ASCIZ	"AN INTERRUPT OCCURRED AT TWO DIFFERENT LEVELS"
6071	040314	051105	052522	052120			
6072	040322	047440	041503	051125			
6073	040330	042522	020104	052101			
6074	040336	052040	047527	042040			
6075	040344	043111	042506	042522			
6076	040352	052116	046040	053105			
6077	040360	046105	000123				
6078							
6079	040364	051105	047522	020122	EM26:	.ASCII	"ERROR (BIT15) NOT SET IN STATUS REGISTER (CDS)"
6080	040372	041050	052111	032461			
6081	040400	020051	047516	020124			
6082	040406	042523	020124	047111			
6083	040414	051440	040524	052524			
6084	040422	020123	042522	044507			
6085	040430	052123	051105	024040			
6086	040436	042103	024523				
6087	040442	005015	052111	051440		.ASCIZ	<15><12>"IT SHOULD BE"
6088	040450	047510	046125	020104			
6089	040456	042502	000				
6090							
6091	040461	116	047117	042455	EM27:	.ASCII	"NON-EXISTANT MEMORY (BIT09) NOT SET IN"
6092	040466	044530	052123	047101			
6093	040474	020124	042515	047515			
6094	040502	054522	024040	044502			
6095	040510	030124	024471	047040			
6096	040516	052117	051440	052105			
6097	040524	044440	116				
6098	040527	015	051412	040524		.ASCIZ	<15><12>"STATUS REGISTER (CDS) - IT SHOULD BE"
6099	040534	052524	020123	042522			
6100	040542	044507	052123	051105			
6101	040550	024040	042103	024523			
6102	040556	026440	044440	020124			
6103	040564	044123	052517	042114			
6104	040572	041040	000105				
6105							
6106	040576	054105	042524	042116	EM30:	.ASCII	"EXTENDED MEMORY (BIT05) NOT SET IS STATUS"
6107	040604	042105	046440	046505			
6108	040612	051117	020131	041050			

6109	040620	052111	032460	020051	
6110	040626	047516	020124	042523	
6111	040634	020124	051511	051440	
6112	040642	040524	052524	123	
6113	040647	015	051012	043505	.ASCIZ <15><12>"REGISTER (CDS)"
6114	040654	051511	042524	020122	
6115	040662	041450	051504	000051	
6116					
6117	040670	054105	042524	042116	EM31: .ASCII "EXTENDED MEMORY (BIT04) NOT SET IN STATUS"
6118	040676	042105	046440	046505	
6119	040704	051117	020131	041050	
6120	040712	052111	032060	020051	
6121	040720	047516	020124	042523	
6122	040726	020124	047111	051440	
6123	040734	040524	052524	123	
6124	040741	015	051012	043505	.ASCIZ <15><12>"REGISTER (CDS)"
6125	040746	051511	042524	020122	
6126	040754	041450	051504	000051	
6127					
6128	040762	047503	052116	047105	EM32: .ASCII "CONTENTS OF BUS ADDRESS REGISTER (COA)"
6129	040770	051524	047440	020106	
6130	040776	052502	020123	042101	
6131	041004	051104	051505	020123	
6132	041012	042522	044507	052123	
6133	041020	051105	024040	042103	
6134	041026	024501			
6135	041030	005015	047111	047503	.ASCIZ <15><12>"INCORRECT"
6136	041036	051122	041505	000124	
6137					
6138	041044	047503	052116	047105	EM33: .ASCII "CONTENTS OF COLUMN COUNT REGISTER (CDC)"
6139	041052	051524	047440	020106	
6140	041060	047503	052514	047115	
6141	041066	041440	052517	052116	
6142	041074	051040	043505	051511	
6143	041102	042524	020122	041450	
6144	041110	041504	051		
6145	041113	015	044412	041516	.ASCIZ <15><12>"INCORRECT"
6146	041120	051117	042522	052103	
6147	041126	000			
6148					
6149	041127	122	040505	042504	EM34: .ASCII "READER OFF-LINE BUT CARD READER ERROR"
6150	041134	020122	043117	026506	
6151	041142	044514	042516	041040	
6152	041150	052125	041440	051101	
6153	041156	020104	042522	042101	
6154	041164	051105	042440	051122	
6155	041172	051117			
6156	041174	005015	041050	052111	.ASCIZ <15><12>"(BIT14) NOT SET IN STATUS REGISTER (CDS)"
6157	041202	032061	020051	047516	
6158	041210	020124	042523	020124	
6159	041216	047111	051440	040524	
6160	041224	052524	020123	042522	
6161	041232	044507	052123	051105	
6162	041240	024040	042103	024523	

6163	041246	000				
6164						
6165	041247	116	020117	051124	EM35:	.ASCII "NO TRANSITION TO ON-LINE (BIT03) OCCURRED"
6166	041254	047101	044523	044524		
6167	041262	047117	052040	020117		
6168	041270	047117	046055	047111		
6169	041276	020105	041050	052111		
6170	041304	031460	020051	041517		
6171	041312	052503	051122	042105		
6172	041320	005015	047111	051440		.ASCIZ <15><12>"IN STATUS REGISTER (CDS)"
6173	041326	040524	052524	020123		
6174	041334	042522	044507	052123		
6175	041342	051105	024040	042103		
6176	041350	024523	000			
6177						
6178	041353	103	047117	042524	EM36:	.ASCIZ "CONTENTS OF STATUS REGISTER #2 (CDD) INCORRECT"
6179	041360	052116	020123	043117		
6180	041366	051440	040524	052524		
6181	041374	020123	042522	044507		
6182	041402	052123	051105	021440		
6183	041410	020062	041450	042104		
6184	041416	020051	047111	047503		
6185	041424	051122	041505	000124		
6186						
6187	041432	047516	044440	052116	EM37:	.ASCIZ "NO INTERRUPT WITH PROCESSOR AT LEVEL 0"
6188	041440	051105	052522	052120		
6189	041446	053440	052111	020110		
6190	041454	051120	041517	051505		
6191	041462	047523	020122	052101		
6192	041470	044040	053105	046105		
6193	041476	030040	000			
6194						
6195	041500	104	052101	020101	EM40:	.ASCIZ "DATA LATE (BIT10) NOT SET IN STATUS REGISTER (CDS)"
6196	041506	040514	042524	024040		
6197	041514	044502	030524	024460		
6198	041522	047040	052117	051440		
6199	041530	052105	044440	020116		
6200	041536	052123	052101	051525		
6201	041544	051040	043505	051511		
6202	041552	042524	020122	041450		
6203	041560	051504	000051			
6204						
6205	041564	043117	026506	044514	EM41:	.ASCIZ "OFF-LINE (BIT12) NOT SET IN STATUS REGISTER (CDS)"
6206	041572	042516	024040	044502		
6207	041600	030524	024462	047040		
6208	041606	052117	051440	052105		
6209	041614	044440	020116	052123		
6210	041622	052101	051525	051040		
6211	041630	043505	051511	042524		
6212	041536	020122	041450	051504		
6213	041644	000051				
6214						
6215	041646	043117	026506	044514	EM42:	.ASCII "OFF-LINE (BIT12) SET IN STATUS REGISTER"
6216	041654	042516	024040	044502		

6217	041662	030524	024462	051440
6218	041670	052105	044440	020116
6219	041676	052123	052101	051525
6220	041704	051040	043505	051511
6221	041712	042524	122	
6222	041715	015	020012	020055
6223	041722	052111	051440	047510
6224	041730	046125	020104	047516
6225	041736	020124	042502	000
6226				
6227	041743	120	041511	020113
6228	041750	044103	041505	020113
6229	041756	041050	052111	031461
6230	041764	020051	047516	020124
6231	041772	042523	020124	047111
6232	042000	051440	040524	052524
6233	042006	020123	042522	044507
6234	042014	052123	051105	021440
6235	042022	020062	041450	042104
6236	042030	000051		
6237				
6238	042032	052123	041501	020113
6239	042040	044103	041505	020113
6240	042046	041050	052111	031061
6241	042054	020051	047516	020124
6242	042062	042523	020124	047111
6243	042070	051440	040524	052524
6244	042076	020123	042522	044507
6245	042104	052123	051105	021440
6246	042112	020062	041450	042104
6247	042120	000051		
6248				
6249	042122	047105	020104	043117
6250	042130	043040	046111	020105
6251	042136	041050	052111	031461
6252	042144	020051	042523	020124
6253	042152	047111	051440	040524
6254	042160	052524	020123	042522
6255	042166	044507	052123	051105
6256	042174	024040	042103	024523
6257	042202	005015	026440	044440
6258	042210	020124	044123	052517
6259	042216	042114	047040	052117
6260	042224	041040	000105	
6261				
6262	042230	042522	042101	041440
6263	042236	042510	045503	024040
6264	042244	044502	030524	024464
6265	042252	051440	052105	044440
6266	042260	020116	052123	052101
6267	042266	051525	051040	043505
6268	042274	051511	042524	020122
6269	042302	041450	051504	051
6270	042307	015	020012	020055

.ASCIZ <15><12>" - IT SHOULD NOT BE"

EM43: .ASCIZ "PICK CHECK (BIT13) NOT SET IN STATUS REGISTER #2 (CDD)"

EM44: .ASCIZ "STACK CHECK (BIT12) NOT SET IN STATUS REGISTER #2 (CDD)"

EM45: .ASCII "END OF FILE (BIT13) SET IN STATUS REGISTER (CDS)"

.ASCIZ <15><12>" - IT SHOULD NOT BE"

EM46: .ASCII "READ CHECK (BIT14) SET IN STATUS REGISTER (CDS)"

.ASCIZ <15><12>" - IT SHOULD NOT BE"



6271	042314	052111	051440	047510	
6272	042322	046125	020104	047516	
6273	042330	020124	042502	000	
6274					
6275	042335	110	050117	042520	EM47: .ASCII "HOPPER CHECK (BIT02) SET IN STATUS REGISTER (CDS)"
6276	042342	020122	044103	041505	
6277	042350	020113	041050	052111	
6278	042356	031060	020051	042523	
6279	042364	020124	047111	051440	
6280	042372	040524	052524	020123	
6281	042400	042522	044507	052123	
6282	042406	051105	024040	042103	
6283	042414	024523			
6284	042416	005015	026440	044440	.ASCIZ <15><12>" - IT SHOULD NOT BE"
6285	042424	020124	044123	052517	
6286	042432	042114	047040	052117	
6287	042440	041040	000105		
6288					
6289	042444	047105	020104	043117	EM50: .ASCII "END OF FILE (BIT13) OF STATUS REGISTER (CDS) NOT SET"
6290	042452	043040	046111	020105	
6291	042460	041050	052111	031461	
6292	042466	020051	043117	051440	
6293	042474	040524	052524	020123	
6294	042502	042522	044507	052123	
6295	042510	051105	024040	042103	
6296	042516	024523	047040	052117	
6297	042524	051440	052105		
6298	042530	005015	026440	044440	.ASCIZ <15><12>" - IT SHOULD BE"
6299	042536	020124	044123	052517	
6300	042544	042114	041040	000105	
6301					
6302	042552	042522	042101	041440	EM51: .ASCII "READ CHECK (BIT14) OF STATUS REGISTER (CDS) NOT SET"
6303	042560	042510	045503	024040	
6304	042566	044502	030524	024464	
6305	042574	047440	020106	052123	
6306	042602	052101	051525	051040	
6307	042610	043505	051511	042524	
6308	042616	020122	041450	051504	
6309	042624	020051	047516	020124	
6310	042632	042523	124		
6311	042635	015	020012	020055	.ASCIZ <15><12>" - IT SHOULD BE"
6312	042642	052111	051440	047510	
6313	042650	046125	020104	042502	
6314	042656	000			
6315					
6316	042657	110	050117	042520	EM52: .ASCII "HOPPER CHECK (BIT12) OF STATUS REGISTER (CDS) NOT SET"
6317	042664	020122	044103	041505	
6318	042672	020113	041050	052111	
6319	042700	031061	020051	043117	
6320	042706	051440	040524	052524	
6321	042714	020123	042522	044507	
6322	042722	052123	051105	024040	
6323	042730	042103	024523	047040	
6324	042736	052117	051440	052105	

6325	042744	005015	026440	044440		.ASCIZ <15><12>" - IT SHOULD BE"
6326	042752	020124	044123	052517		
6327	042760	042114	041040	000105		
6328						
6329	042766	047105	020104	043117	EM53:	.ASCII "END OF FILE (BIT13) OF STATUS REGISTER (CDS) DID NOT"
6330	042774	043040	046111	020105		
6331	043002	041050	052111	031461		
6332	043010	020051	043117	051440		
6333	043016	040524	052524	020123		
6334	043024	042522	044507	052123		
6335	043032	051105	024040	042103		
6336	043040	024523	042040	042111		
6337	043046	047040	052117			
6338	043052	005015	046103	040505		.ASCIZ <15><12>"CLEAR WITH TRANSITION TO ON-LINE"
6339	043060	020122	044527	044124		
6340	043066	052040	040522	051516		
6341	043074	052111	047511	020116		
6342	043102	047524	047440	026516		
6343	043110	044514	042516	000		
6344						
6345	043115	122	040505	020104	EM54:	.ASCIZ "READ CHECK (BIT14) NOT SET IN STATUS REGISTER #2 (CDD)"
6346	043122	044103	041505	020113		
6347	043130	041050	052111	032061		
6348	043136	020051	047516	020124		
6349	043144	042523	020124	047111		
6350	043152	051440	040524	052524		
6351	043160	020123	042522	044507		
6352	043166	052123	051105	021440		
6353	043174	020062	041450	042104		
6354	043202	000051				
6355						
6356	043204	040503	042122	051040	EM55:	.ASCIZ "CARD READER ERROR BUT NOT BOTH CARD"
6357	043212	040505	042504	020122		
6358	043220	051105	047522	020122		
6359	043226	052502	020124	047516		
6360	043234	020124	030070	044124		
6361	043242	041440	051101	000104		
6362						
6363	043250	040503	042122	051040	EM56:	.ASCIZ "CARD READER ERROR BUT NOT OFF-LINE"
6364	043256	040505	042504	020122		
6365	043264	051105	047522	020122		
6366	043272	052502	020124	047516		
6367	043300	020124	043117	026506		
6368	043306	044514	042516	000		
6369						
6370	043313	105	042116	047440	EM57:	.ASCIZ "END OF FILE (BIT13) ERROR OF STATUS REGISTER (CDS)"
6371	043320	020106	044506	042514		
6372	043326	024040	044502	030524		
6373	043334	024463	042440	051122		
6374	043342	051117	047440	020106		
6375	043350	052123	052101	051525		
6376	043356	051040	043505	051511		
6377	043364	042524	020122	041450		
6378	043372	051504	000051			

6379									
6380	043376	040504	040524	042440	EM60:	.ASCIZ	"DATA ERROR (BIT11) OF STATUS REGISTER (CDS)"		
6381	043404	051122	051117	024040					
6382	043412	044502	030524	024461					
6383	043420	047440	020106	052123					
6384	043428	052101	051525	051040					
6385	043436	043504	051511	042524					
6386	043442	020122	041450	051504					
6387	043450	000051							
6388									
6389	043452	040504	040524	046040	EM61:	.ASCIZ	"DATA LATE (BIT11) ERROR OF STATUS REGISTER (CDS)"		
6390	043460	052101	020105	041050					
6391	043466	052111	030461	020051					
6392	043474	051105	047522	020122					
6393	043502	043117	051440	040524					
6394	043510	052524	020123	042522					
6395	043516	044507	052123	051105					
6396	043524	024040	042103	024523					
6397	043532	000							
6398									
6399	043533	116	047117	042455	EM62:	.ASCII	"NON-EXISTANT MEMORY (BIT09) ERROR OF STATUS"		
6400	043540	044530	052123	047101					
6401	043546	020124	042515	047515					
6402	043554	054522	024040	044502					
6403	043562	030124	024471	042440					
6404	043570	051122	051117	047440					
6405	043576	020106	052123	052101					
6406	043604	051525							
6407	043606	005015	042522	044507		.ASCIZ	<15><12>"REGISTER (CDS)"		
6408	043614	052123	051105	024040					
6409	043622	042103	024523	000					
6410									
6411	043627	104	051511	051501	EM63:	.ASCIZ	"DISASTEROUS ERROR BUT NO ERROR BITS SET"		
6412	043634	042524	047522	051525					
6413	043642	042440	051122	051117					
6414	043650	041040	052125	047040					
6415	043656	020117	051105	047522					
6416	043664	020122	044502	051524					
6417	043672	051440	052105	000					
6418									
6419									
6420	043677	104	052101	020101	EM64:	.ASCII	"DATA PACKING (BIT01) OF STATUS REGISTER (CDS)"		
6421	043704	040520	045503	047111					
6422	043712	020107	041050	052111					
6423	043720	030460	020051	043117					
6424	043726	051440	040524	052524					
6425	043734	020123	042522	044507					
6426	043742	052123	051105	024040					
6427	043750	042103	024523						
6428	043754	005015	047516	020124		.ASCIZ	<15><12>"NOT SET - IT SHOULD BE"		
6429	043762	042523	020124	020055					
6430	043770	052111	051440	047510					
6431	043776	046125	020104	042502					
6432	044004	000							

6433	044005	123	047510	046125	EM65:	.ASCII	"SHOULD BE ADDRESSING BINARY DECK"
6434	044012	020104	042502	040440			
6435	044020	047104	042522	051523			
6436	044026	047111	020107	044502			
6437	044034	040516	054522	042040			
6438	044042	041505	113				
6439	044045	015	050012	047522	.ASCIZ	<15><12>	"PROGRAM DOES NOT AGREE"
6440	044052	051107	046501	042040			
6441	044060	042517	020123	047516			
6442	044066	020124	043501	042522			
6443	044074	000105					
6444							
6445	044076	047503	052116	047105	EM66:	.ASCII	"CONTENTS OF STATUS REGISTER (CDS) INCORRECT"
6446	044104	051524	047440	020106			
6447	044112	052123	052101	051525			
6448	044120	051040	043505	051511			
6449	044126	042524	020122	041450			
6450	044134	051504	020051	047111			
6451	044142	047503	051122	041505			
6452	044150	124					
6453	044151	015	020012	020055	.ASCIZ	<15><12>	" - SHOULD BE ZERO"
6454	044156	044123	052517	042114			
6455	044164	041040	020105	042532			
6456	044172	047522	000				
6457							
6458	044175	117	042104	041040	EM67:	.ASCIZ	"ODD BUS ADDRESS CAUSED A TRAP IN NON-PACK MODE"
6459	044202	051525	040440	042104			
6460	044210	042522	051523	041440			
6461	044216	052501	042523	020104			
6462	044224	020101	051124	050101			
6463	044232	044440	020116	047516			
6464	044240	026516	040520	045503			
6465	044246	046440	042117	000105			
6466							
6467							
6468							
6469	044254	024040	041520	020051	DH1:	.ASCIZ	" (PC) (SP) (CDS) (CDD) (PS)"
6470	044262	020040	024040	050123			
6471	044270	020051	020040	041450			
6472	044276	051504	020051	020040			
6473	044304	041450	042104	020051			
6474	044312	020040	024040	051520			
6475	044320	000051					
6476	044322	024040	041520	020051	DH2:	.ASCIZ	" (PC) (SP) (CDS) (CDD) (CDC) (PS)"
6477	044330	020040	024040	050123			
6478	044336	020051	020040	041450			
6479	044344	051504	020051	020040			
6480	044352	041450	042104	020051			
6481	044360	020040	041450	041504			
6482	044366	020051	020040	024040			
6483	044374	051520	000051				
6484	044400	024040	041520	020051	DH3:	.ASCIZ	" (PC) (SP) (CDS) (CDD) (CDA) (PS)"
6485	044406	020040	024040	050123			
6486	044414	020051	020040	041450			

;ERROR ITEMS HEADER TABLE





```

6580
6581 ;*****
6582 ;SUBROUTINE TO INITIALIZE CSR AND DBR POINTERS
6583 ;*****
6584
6585 045366 013703 001232 SETUP: MOV CDST,CDS ;SET UP STATUS REGISTER POINTER
6586 045372 013704 001234 MOV CDCC,CDC ;SET UP COLUMN COUNT REGISTER POINTER
6587 045376 013705 001236 MOV CDBA,CDA ;SET UP BUS ADDRESS REGISTER POINTER
6588 045402 013702 001244 MOV INTVC,ADINT ;LOAD ADDRESS OF INTERRUPT VECTOR
6589 045406 013712 001246 MOV INTVC+2,(ADINT) ;SET UP CARD READER TRAP VECTOR
6590 045412 005077 133630 CLR @INTVC+2 ;TO HALT
6591 045416 005037 001252 CLR INTFLG ;INITIALIZE INTERRUPT FLAG
6592 045422 005037 001254 CLR TRFLG ;INITIALIZE TRACE FLAG
6593 045426 013746 000340 MOV PR7,-(SP) ;;PUT NEW PS ON STACK
6594 045432 012746 045440 MOV @64$,-(SP) ;;PLT NEW PC ON STACK
6595 045436 000002 RTI ;; POP NEW PC AND PS
6596 045440
6597 045440 000207 64$: RTS PC ;RETURN TO MAINLINE CODE
6598
6599 ;*****

```

;\*\*\*\*\*

;\*\*\*\*\*

;  
;  
;  
;  
;

;THIS MARKS THE BEGINNING OF THE MEMORY BUFFER AREA WHERE THE  
;CONTENTS OF THE CARD COLUMNS ARE DUMPED ON READ CYCLES

```

6612 ;*****
6613 ;*****
6614 ;*****
6615 ;*****
6616
6617
6618 045442 000000 BUFBEG: 0
6619 000001 .END

```









EM16	037613	531	6006#					
EM17	037677	539	6017#					
EM2	036367	438	5875#					
EM20	040026	547	6033#					
EM21	040054	554	6038#					
EM22	040124	561	6046#					
EM23	040201	568	6055#					
EM24	040232	575	6061#					
EM25	040306	582	6070#					
EM26	040364	589	6079#					
EM27	040461	597	6091#					
EM3	036470	446	5888#					
EM30	040576	505	6106#					
EM31	040670	613	6117#					
EM32	040762	628	6128#					
EM33	041044	637	6138#					
EM34	041127	646	6149#					
EM35	041247	654	6165#					
EM36	041353	669	6178#					
EM37	041432	678	6187#					
EM4	036570	454	5900#					
EM40	041501	685	6195#					
EM41	041564	693	6205#					
EM42	041646	701	6215#					
EM43	041743	709	6227#					
EM44	042032	717	6238#					
EM45	042122	725	6249#					
EM46	042230	733	6262#					
EM47	042335	741	6275#					
EM5	036633	461	5907#					
EM50	042444	749	6289#					
EM51	042552	757	6302#					
EM52	042657	765	6316#					
EM53	042766	773	6329#					
EM54	043115	782	6345#					
EM55	043204	790	6356#					
EM56	043250	797	6363#					
EM57	043313	804	6370#					
EM6	036734	469	5920#					
EM60	043376	812	6380#					
EM61	043452	819	6389#					
EM62	043533	827	6399#					
EM63	043627	662	6411#					
EM64	043677	835	6419#					
EM65	044005	843	6433#					
EM66	044076	851	6445#					
EM67	044175	859	6458#					
EM7	037024	477	5931#					
EMOCK	012266	2380#						
ERCD11	015642	315	3022#					
ERCD12	016146	3064	3067#					
ERFLG	001260	407#	2412#	2820	2822*	4398*	4453	4455*
ERRVEC=	000004	261#	4640	4641*	4643*	4646*		
ER12CD	016134	3021	3064#	4206				







SIZE	015314	2467*	2469	2504	2505	2511	2663	2668	2794*	2798	2804	2840	2965*	936*
SP	=%000006	191*	873*	898*	899*	893*	897*	898*	904	905	906	925*	926*	936*
		937*	1059*	1060*	1063*	1064*	1066	1067*	1068*	1069*	1084*	1085*	1116*	1117*
		1120*	1121*	1123	1124	1125*	1126*	1136*	1137*	1156*	1157*	1160*	1161*	1163
		1164	1166*	1167*	1171*	1172*	1175*	1176*	1178	1179	1181*	1182*	1185*	1186*
		1188	1189	1191*	1192*	1201*	1202*	1211	1226*	1227*	1230*	1231*	1233	1234
		1236*	1237*	1241*	1242*	1245*	1246*	1248	1249	1257	1275*	1276*	1279*	1280*
		1282	1283	1285*	1286*	1290*	1291*	1294*	1295*	1297	1298	1300*	1301*	1304*
		1305*	1307	1308	1310*	1311*	1314*	1315*	1318*	1319*	1321	1322	1324*	1325*
		1334*	1335*	1353	1358*	1373*	1374*	1377*	1378*	1380	1381	1383*	1384*	1388*
		1389*	1392*	1393*	1395	1396	1398*	1399*	1402*	1403*	1405	1406	1408*	1409*
		1412*	1413*	1416*	1417*	1419	1420	1422*	1423*	1432*	1433*	1451	1456*	1471*
		1472*	1475*	1476*	1478	1479	1481*	1482*	1486*	1487*	1490*	1491*	1493	1494
		1496*	1497*	1500*	1501*	1503	1504	1506*	1507*	1510*	1511*	1514*	1515*	1517
		1518	1520*	1521*	1530*	1531*	1549	1554*	1569*	1570*	1573*	1574*	1576	1577
		1579*	1580*	1584*	1585*	1588*	1589*	1591	1592	1594*	1595*	1598*	1599*	1601
		1602	1604*	1605*	1608*	1609*	1612*	1613*	1615	1616	1618*	1619*	1628*	1629*
		1647	1662*	1663*	1666*	1667*	1669	1670	1672*	1673*	1677*	1678*	1681*	1682*
		1684	1685	1687*	1688*	1691*	1692*	1694	1695	1697*	1698*	1701*	1702*	1705*
		1706*	1708	1709	1711*	1712*	1721*	1722*	1740	1745*	1760*	1761*	1764*	1765*
		1767	1768	1770*	1771*	1775*	1776*	1779*	1780*	1782	1783	1785*	1786*	1789*
		1790*	1792	1793	1795*	1796*	1799*	1800*	1803*	1804*	1806	1807	1809*	1810*
		1819*	1820*	1838	1843*	1858*	1859*	1862*	1863*	1865	1866	1868*	1869*	1873*
		1874*	1877*	1878*	1880	1881	1883*	1884*	1887*	1888*	1890	1891	1893*	1894*
		1897*	1898*	1901*	1902*	1904	1905	1907*	1908*	1917*	1918*	1932	1937*	1953*
		1954*	1957*	1958*	1960	1961	1963*	1964*	1968*	1969*	1972*	1973*	1975	1976
		1977*	1978*	1988*	1989*	1995	2007*	2008*	2011*	2012*	2014	2015	2017*	2018*
		2022*	2023*	2026*	2027*	2029	2030	2032*	2033*	2036*	2037*	2039	2040	2042*
		2043*	2050	2052*	2053*	2058*	2059*	2063	2076*	2077*	2080*	2081*	2083	2084
		2086*	2087*	2091*	2092*	2095*	2096*	2098	2099	2101*	2102*	2105*	2106*	2108
		2109	2111*	2112*	2119	2268*	2269*	2272*	2273*	2275	2276	2278*	2279*	2283*
		2284*	2287*	2288*	2290	2291	2293*	2294*	2297*	2298*	2300	2301	2303*	2304*
		2307*	2308*	2311*	2312*	2314	2315	2317*	2318*	2330*	2331*	2350	2374	2425*
		2426*	2432*	2433*	2441*	2442*	2445*	2446*	2448	2449	2451*	2452*	2456*	2457*
		2460*	2461*	2463	2464	2595*	2597*	2602*	2728*	2733*	2828*	2833*	2868	3369
		2801*	2888*	2889*	2901*	2902*	2905	2906*	2907	2908*	2913*	2914*	2953	2962
		2983*	2998*	2999*	3003*	3007*	3008*	3014	3015	3016	3027*	3042*	3043*	3047*
		3051*	3052*	3058	3059	3060	3159*	3160*	3173*	3164*	3166	3167	3169*	3170*
		3174*	3175*	3178*	3179*	3181	3182	3184*	3185*	3188*	3189*	3191	3192	3194*
		3195*	3223*	3224*	3227*	3228*	3230	3231	3233*	3234*	3238*	3239*	3242*	3243*
		3245	3246	3248*	3249*	3252*	3253*	3255	3256	3258*	3259*	3265	3284*	3285*
		3288*	3289*	3291	3292	3294*	3295*	3299*	3300*	3303*	3304*	3306	3307	3309*
		3310*	3313*	3314*	3316	3317	3319*	3320*	3327	3375*	3376*	3379*	3380*	3382
		3383	3385*	3386*	3390*	3391*	3394*	3395*	3397	3398	3400*	3401*	3404*	3405*
		3407	3408	3410*	3411*	3420	3423*	3424*	3427*	3428*	3430	3431	3433*	3434*
		3438*	3439*	3442*	3443*	3445	3446	3448*	3449*	3452*	3453*	3455	3456	3458*
		3459*	3467	3503*	3504*	3507*	3508*	3510	3511	3513*	3514*	3518*	3519*	3522*
		3523*	3525	3526	3528*	3529*	3532*	3533*	3535	3536	3538*	3539*	3547	3550*
		3551*	3554*	3555*	3557	3558	3560*	3561*	3565*	3566*	3569*	3570*	3572	3573
		3575*	3576*	3579*	3580*	3582	3583	3585*	3585*	3594	3658*	3659*	3662*	3663*
		3665	3666	3668*	3669*	3673*	3674*	3677*	3678*	3680	3681	3683*	3684*	3687*
		3688*	3690	3691	3693*	3694*	3703	3706*	3707*	3710*	3711*	3713	3714	3716*
		3717*	3721*	3722*	3725*	3726*	3728	3729	3731*	3732*	3735*	3736*	3738	3739
		3741*	3742*	3750	3814*	3815*	3818*	3819*	3821	3822	3824*	3825*	3829*	3830*





SW7 = 000200	223#												
SW8 = 000400	222#												
SW9 = 001000	221#												
TBITVE = 000014	263#	884*	885*	2994*	2995*	3038*	3039*	4231*	4232*	4341*	4342*		
TCRLF = 000200	4701	4740#											
TEMP1 015322	2840*	2843#	2968#										
TEMP2 015324	2841*	2842#	2845	2969#									
TEND 015330	2416*	2420*	2522	2558	2581	2671	2689*	2703	2718	2813*	2971#		
TESTX 024100	318	4215#											
THT = 000011	4699	4739#											
TIMA21 010764	2051	2063#											
TINTC 016652	3157	3206#											
TINTCA 017120	3221	3265#											
TINTCB 017402	3282	3327#											
TINTD 017764	3373	3420#											
TINTDA 020214	3421	3467#											
TINTE 020544	3501	3547#											
TINTEA 020774	3548	3594#											
TINTF 021424	3656	3703#											
TINTFA 021654	3704	3750#											
TINTG 022270	3812	3858#											
TINTGA 022520	3859	3905#											
TINTH 024064	4156	4203#											
TINTI 023120	3965	4014#											
TINTIA 023156	4028	4030#											
TINT10 004150	1224	1256#											
TINT11 004556	1273	1347#											
TINT12 005234	1371	1445#											
TINT13 005712	1469	1543#											
TINT14 006370	1567	1641#											
TINT15 007032	1660	1734#											
TINT16 007510	1758	1832#											
TINT17 010150	1856	1926#											
TINT20 010452	1951	1994#											
TINT21 010726	2005	2050#											
TINT22 011240	2074	2119#											
TINT31 012146	2266	2343#											
TINT7 003740	1154	1208#											
TKVEC = 000060	270#												
TLOPC 016642	3202#	3203											
TLOPG 021720	3776#	3777											
TLOPGA 021726	3778#	3779											
TLOPG8 021756	3787#	3788											
TLOPH 023304	4077#	4078											
TLOPHA 023312	4079#	4080											
TLOPHB 023342	4088#	4089											
TLOPHC 023550	4137#	4138											
TLOPHD 023556	4139#	4140											
TLOPHE 023606	4149#	4150											
TOTCRD 025734	4396*	4411*	4478	4497#									
TOTERR 025732	4397*	4450*	4481	4496#									
TPVEC = 000064	271#												
TRACE = 000360	281#	936	2432										
TRAPVE = 000034	269#	878*	879*	2988*	2989*	3032*	3033*	4225*	4226*	4335*	4336*		

TRAPX	002566	923	932#																
TRFLG	001254	404#	922	2384*	2422	2956*	6592*												
TRP1	012440	2423	2430#																
TRTRAP	001242	309	399#																
TRTVEC=	000014	264#																	
TSTART	015326	2415*	2419*	2465	2524	2572	2578	2583	2673	2688*	2709	2715	2720	2812*					
		2970#																	
TSTM10	023256	3920	4060	4063#															
TSTM12	022544	3919	3922#																
TST1	002620	921	931	944#															
TST10	003770	1222#																	
TST11	004166	1271#																	
TST12	004644	1342	1344	1346	1362	1364	1369#												
TST13	005322	1440	1442	1444	1460	1462	1467#												
TST14	006000	1538	1540	1542	1558	1560	1565#												
TST15	006442	1636	1638	1640	1651	1653	1658#												
TST16	007120	1729	1731	1733	1749	1751	1756#												
TST17	007576	1827	1829	1831	1847	1849	1854#												
TST2	002724	982#																	
TST20	010236	1925	1941	1943	1949#														
TST21	010470	2003#																	
TST22	011002	2072#																	
TST23	011362	2160#																	
TST24	011410	2178#																	
TST25	011436	2195#																	
TST26	011466	2212#																	
TST27	011514	2230#																	
TST3	002772	989	1007#																
TST30	011542	2247#																	
TST31	011572	2264#																	
TST32	012206	2361#																	
TST33	016152	3072#																	
TST34	016250	3108#																	
TST35	016402	3153#																	
TST36	017442	3348#																	
TST37	020226	3476#																	
TST4	003042	1030#																	
TST40	021006	3603#																	
TST41	021666	3759#																	
TST42	022544	3926#																	
TST43	023256	4067#																	
TST5	003112	1053#																	
TST6	003300	1081	1094	1103#															
TST7	003456	1134	1152#																
TTY =%	000005	280#																	
TYHEAD	014554	2589	2726	2820#															
TYPOS =	104404	2829	2834	2882	4460	4479	4482	4921#											
TYPE =	104400	912	913	914	915	916	918	919	920	929	930	932	933	1357					
		1455	1553	1744	1842	1936	2383	2408	2601	2727	2732	2823	2824	2826					
		2831	2836	2880	2883	3017	3018	3061	3067	3076	3077	3078	3083	3113					
		3114	3115	3116	3130	3131	3132	3199	3200	3201	3323	3324	3352	3353					
		3354	3355	3415	3416	3417	3479	3480	3482	3483	3543	3544	3610	3611					
		3612	3613	3615	3616	3698	3699	3700	3764	3765	3766	3774	3775	3854					
		3855	3928	3929	3930	3931	3932	3937	3938	3939	4049	4050	4051	4052					



\$NULL	001152	362#	4710	4742																
\$NWTST=	000001	941#	979#	1004#	1027#	1050#	1100#	1149#	1219#	1269#	1366#	1464#	1562#	1655#						
		1753#	1851#	1946#	2000#	2069#	2157#	2175#	2192#	2209#	2227#	2244#	2261#	2358#						
\$OCNT	027144	3069#	3105#	3152#	3345#	3473#	3600#	3756#	3923#	4064#										
\$OMODE	027146	4776*	4805*	4818#																
\$OVER	026470	4771*	4775*	4780	4783*	4794*	4820#													
\$PASS	001100	4636	4647	4659	4664#															
\$PWRAO	027552	339#	2872*	2873*	2881	2920	4655	4668												
\$PWROD	027430	4957#																		
\$PWRMG	027546	880	2990	3034	4227	4337	4928#	4952												
\$PWRRP	027476	4955#																		
\$QJES	001226	4937	4942#																	
\$ROCHR=	*****	386#	4620	4742																
\$RODEC=	*****	4922																		
\$ROLIN=	*****	4922																		
\$RODOCT=	*****	4922																		
\$REGAO	001156	366#																		
\$REGO	001160	368#																		
\$REG1	001162	369#																		
\$REG2	001164	370#																		
\$REG3	001166	371#																		
\$REG4	001170	372#																		
\$REG5	001172	373#																		
\$REG6	001174	374#	4591*	6562	6564	6567	6570	6573	6576											
\$REG7	001176	375#	4592*	6562	6564	6567	6570	6573	6576											
\$RTRN	015140	884	886*	891#	2890	2915#	2994	2996*	3001*	3038	3040*	3045*	4231	4233*						
		4238*	4341	4343*	4348*															
\$R2A =	*****	4922																		
\$SAVRE=	*****	4922																		
\$SAVR6	027570	4936*	4942	4943*	4944*	4962#														
\$SCOPE	026326	874	2984	3028	4221	4331	4634#													
\$SETUP=	000037	328#	874	876	878	880	882	883	884	896	2870	2984	2986	2988						
		2990	2992	2993	2994	3006	3028	3030	3032	3034	3036	3037	3038	3050						
		4221	4223	4225	4227	4229	4230	4231	4243	4331	4333	4335	4337	4339						
		4340	4341	4353	4615															
\$STUP =	177777	328#																		
\$SVLAD	026460	4644	4662#																	
\$SVPC =	000204	301#	306																	
\$SWR =	176000	8#	20	384	385	883	884	896	897	945	983	1008	1031	1054						
		1104	1153	1223	1272	1370	1468	1566	1659	1757	1855	1950	2004	2073						
		2161	2179	2196	2213	2231	2248	2265	2362	2863	2871	2885	2901	2920						
		2993	2994	3006	3007	3037	3038	3050	3051	3073	3109	3154	3349	3477						
		3604	3760	3927	4068	4230	4231	4243	4244	4340	4341	4353	4354	4583						
		4584	4585	4586	4587	4600	4607	4612	4618	4620	4628	4629	4630	4631						
		4635	4647	4649	4650	4651	4652	4653	4664	4667	4958									
\$SWRMK=	000000	4631																		
\$TBIT	015146	895*	2911*	2920#	3005*	3049*	4242*	4352*												
\$TIMES	001220	384#	883*	2871*	2993*	3037*	4230*	4340*	4652*	4658	4561*	4667								
\$TKB	001144	359#	4115																	
\$TKS	001142	358#	4113																	
\$TMP0	001200	376#	2515*	2516*	2517	2550*	2551*	2552	2564*	2565*	2566	2593*	2594*	2595						
		4424*	4425*	4427	4593*	6562	6564	6567	6570	6573	6576									
\$TMP1	001202	377#	4115*	4118	4119*	4121	4123	4594*	6562	6564	6567	6570	6573	6576						







ADD	893	2528	2557	2574	2580	2584	2585	2677	2691	2702	2711	2717	2721	2722	2794
ASL	2812	2813	2814	2843	3003	3047	4240	4260	4350	4550	4697	4772	4782	4855	
ASLB	4547	4548	4549	4904											
BCC	4860														
BEQ	4387	4861													
	948	952	956	964	973	987	594	1000	1010	1014	1019	1023	1033	1037	1042
	1046	1079	1096	1112	1342	1440	1538	1636	1729	1827	2143	2147	2152	2169	2186
	2203	2221	2238	2255	2352	2382	2414	2473	2479	2491	2499	2507	2526	2619	2632
	2636	2640	2644	2648	2656	2659	2665	2675	2749	2758	2771	2775	2779	2783	2886
	2894	2927	2932	2942	2958	3101	3127	3140	3148	3203	3218	3279	3333	3341	3370
	3469	3498	3596	3623	3625	3653	3752	3777	3779	3781	3809	3907	3919	3936	3945
	3950	3955	4017	4021	4056	4060	4078	4080	4082	4110	4122	4124	4138	4140	4142
	4265	4401	4435	4438	4442	4512	4552	4557	4570	4598	4601	4650	4656	4700	4799
BGE	2626	2853	4659	4734											
BG	2573	2579	2710	2716	2803	2876	4446	4806	4869						
BIC	1190	1205	1309	1407	1505	1603	1696	1794	1892	2041	2110	2302	2450	2516	2551
	2565	2594	2692	2873	2908	3193	3257	3318	3409	3457	3537	3584	3692	3740	3848
	3895	4002	4119	4192	4276	4375	4425	4796	4958						
BIS	985	1017	1040	1165	1235	1284	1323	1382	1421	1480	1519	1578	1617	1671	1710
	1769	1808	1867	1906	1962	2016	2085	2277	2316	2816	2913	3168	3232	3293	3384
	3432	3512	3559	3667	3715	3823	3870	3977	4167	4293	4404	4801	4802	4863	4864
BISB	4389	4539													
BIT	934	1078	1095	1111	2130	2134	2138	2142	2381	2413	2430	2472	2474	2478	2481
	2490	2494	2537	2587	2618	2620	2631	2635	2639	2643	2647	2650	2655	2686	2724
	2748	2750	2753	2757	2759	2770	2774	2778	2782	2785	2798	2909	2926	2931	2937
	2941	2949	2957	3096	3100	3118	3126	3135	3139	3147	3202	3217	3270	3278	3328
	3332	3340	3357	3365	3369	3485	3493	3497	3618	3622	3633	3641	3648	3652	3776
	3778	3789	3797	3804	3808	3935	3944	3949	3954	4016	4020	4032	4036	4040	4055
	4059	4077	4079	4090	4098	4105	4109	4137	4139	4151	4264	4400	4402	4434	4437
	4441	4451	4491	4518	4600	4607	4635	4653							
BITB	4722														
BLE	2559	2704													
BLT	2765	4713	4807	4852	4868										
BMI	1089	1130	1141	1209	1344	1348	1355	1442	1446	1453	1540	1544	1551	1638	1642
	1649	1731	1735	1742	1829	1833	1840	1927	1934	2123	2127	2344	2488	2514	2523
	2549	2563	2592	2614	2672	2744	2795	2844	2912	2934	3123	3144	3210	3214	3267
	3275	3337	3362	3490	3638	3794	4046	4095	4415	4859					
BNE	872	911	923	935	1083	1132	1986	2131	2135	2139	2423	2431	2475	2482	2495
	2518	2521	2530	2538	2544	2553	2556	2567	2570	2582	2588	2621	2651	2670	2679
	2687	2697	2701	2707	2719	2725	2751	2754	2760	2786	2799	2821	2910	2938	2950
	2982	3026	3089	3093	3097	3119	3136	3271	3329	3358	3366	3486	3494	3619	3634
	3642	3649	3790	3798	3805	4033	4037	4041	4091	4099	4106	4152	4219	4329	4391
	4403	4419	4422	4428	4431	4452	4454	4489	4492	4519	4540	4562	4608	4616	4636
	4654	4694	4702	4709	4723	4730	4797	4857	4945						
BPL	960	1075	1092	1145	1199	1213	1254	1332	1364	1430	1462	1528	1560	1626	1653
	1719	1751	1817	1849	1915	1943	2328	2370	2608	2739	3632	3646	3788	3802	3959
	4025	4089	4103	4114	4117	4150	4413	4417	4444	4464	4484	4509	4613	4688	4727
	4795	4843	4873												
BR	892	901	921	931	969	989	1081	1094	1134	1207	1255	1346	1362	1444	1460
	1542	1558	1640	1651	1733	1749	1831	1847	1925	1941	1993	2049	2062	2118	2371
	2418	2429	2484	2496	2519	2533	2554	2568	2575	2596	2616	2623	2628	2682	2712
	2741	2746	2762	2797	2801	2890	2929	2947	3002	3011	3046	3055	3204	3263	3325
	3418	3465	3545	3592	3701	3748	3856	3903	4011	4029	4126	4201	4239	4248	4281
	4349	4358	4423	4432	4439	4448	4471	4524	4545	4572	4638	4644	4647	4690	4706



CLR	4716	4725	4732	4773	4788	4809	4854	4871	4939	4961						
	870	883	888	895	992	1059	1072	1107	1114	1116	1156	1171	1181	1215	1217	
	1226	1241	1258	1260	1275	1290	1300	1314	1338	1340	1350	1352	1373	1388	1398	
	1412	1436	1438	1448	1450	1471	1486	1496	1510	1534	1536	1546	1548	1569	1584	
	1594	1608	1632	1634	1644	1646	1662	1677	1687	1701	1725	1727	1737	1739	1760	
	1775	1785	1799	1823	1825	1835	1837	1858	1873	1883	1897	1921	1923	1929	1931	
	1953	1968	1984	1992	1996	1997	2007	2022	2032	2065	2066	2076	2091	2101	2120	
	2161	2179	2187	2196	2213	2231	2239	2248	2268	2283	2293	2307	2336	2338	2346	
	2348	2377	2409	2410	2411	2412	2441	2456	2483	2500	2586	2660	2723	2849	2850	
	2870	2871	2888	2901	2980	2993	2998	3005	3020	3024	3037	3042	3049	3159	3174	
	3184	3223	3238	3248	3284	3299	3309	3375	3390	3400	3423	3438	3448	3503	3518	
	3528	3550	3565	3575	3658	3673	3683	3706	3721	3731	3814	3829	3839	3861	3876	
	3886	3968	3983	3993	4158	4173	4183	4217	4230	4235	4242	4267	4284	4327	4340	
	4345	4352	4377	4396	4397	4398	4406	4538	4652	4786	4846	4849	4943	6590	6591	
	6592															
CLRB	4399	4651	4731	4875												
CMP	871	904	947	962	970	986	993	999	1009	1013	1022	1032	1036	1045	1211	
	1257	1343	1353	1363	1441	1451	1461	1539	1549	1559	1637	1647	1652	1730	1740	
	1750	1828	1838	1848	1932	1942	1995	2050	2063	2119	2146	2151	2167	2202	2219	
	2254	2350	2351	2374	2506	2517	2520	2522	2529	2552	2555	2558	2566	2569	2572	
	2578	2581	2606	2664	2671	2678	2703	2709	2715	2718	2845	2852	2869	2953	2962	
	2981	3014	3025	3056	3265	3327	3420	3467	3468	3547	3594	3595	3624	3703	3750	
	3751	3780	3858	3905	3906	4014	4030	4081	4141	4203	4218	4251	4328	4361	4421	
	4427	4430	4488	4511	4615	4645	4658	4867								
CMPB	2669	2700	2706	2737	4121	4123	4418	4445	4699	4701	4708	4729	4733			
COM	2163	2215	2384	2911	2956											
COMB	4405															
DEC	1131	2830	2835	2874	4390	4462	4546									
DEC8	4712	4715	4794	4805												
EMT	173															
HALT	290	917	2609	2740	2928	3086	3117	3133	3356	3484	3617	3933	3941	4053	4202	
	4258	4263	4373	4394	4485	4523	4614	4617	4689	4938	4960					
INC	1073	1082	1110	1985	2368	2477	2525	2527	2546	2674	2676	2699	2807	2822	2827	
	2832	2842	2851	2872	3087	3262	3464	3591	3630	3747	3786	3902	4000	4087	4147	
	4388	4410	4411	4420	4429	4450	4455	4458	4486	4603	4657	4800	4808	4853	4944	
INCB	4597	4662	4735													
IOT	174															
JMP	295	315	318	322	326	2342	2385	2492	2497	2540	2610	2629	2653	2657	2693	
	2766	2768	2788	2919	2959	2960	2963	3021	3920	4206	4305	4490	4493	4964		
JSR	909	945	1055	1106	1153	1223	1272	1370	1468	1566	1659	1757	1855	1950	2004	
	2073	2265	2362	2436	2476	2531	2535	2539	2589	2625	2680	2684	2726	2764	2802	
	2896	3066	3075	3112	3156	3351	3478	3609	3763	3927	3940	4071	4254	4369	4395	
	4507	4609	4707	4714	4721											
MOV	869	873	874	875	876	877	878	879	880	881	882	884	885	886	887	
	889	891	894	896	897	898	899	902	903	905	906	907	925	926	936	
	937	965	974	998	1008	1031	1056	1057	1060	1061	1063	1064	1066	1067	1068	
	1069	1084	1085	1108	1109	1117	1118	1120	1121	1123	1124	1125	1126	1136	1137	
	1154	1157	1158	1160	1161	1163	1164	1166	1167	1172	1173	1175	1176	1178	1179	
	1182	1183	1185	1186	1188	1189	1191	1192	1195	1196	1197	1201	1202	1216	1224	
	1227	1228	1230	1231	1233	1234	1236	1237	1242	1243	1245	1246	1248	1249	1250	
	1251	1252	1259	1273	1276	1277	1279	1280	1282	1283	1285	1286	1291	1292	1294	
	1295	1297	1298	1301	1302	1304	1305	1307	1308	1310	1311	1315	1316	1318	1319	
	1321	1322	1324	1325	1328	1329	1330	1334	1335	1339	1351	1356	1358	1371	1374	
	1375	1377	1378	1380	1381	1383	1384	1389	1390	1392	1393	1395	1396	1399	1400	

1402	1403	1405	1406	1408	1409	1413	1414	1416	1417	1419	1420	1422	1423	1426
1427	1428	1432	1433	1437	1449	1454	1456	1469	1472	1473	1475	1476	1479	1479
1481	1482	1487	1488	1490	1491	1493	1494	1497	1498	1500	1501	1503	1504	1506
1507	1511	1512	1514	1515	1517	1518	1520	1521	1524	1525	1526	1530	1531	1535
1547	1552	1554	1567	1570	1571	1573	1574	1576	1577	1574	1580	1585	1586	1588
1589	1591	1592	1595	1596	1598	1599	1601	1602	1604	1605	1609	1610	1612	1613
1615	1616	1618	1619	1622	1623	1624	1628	1629	1633	1645	1650	1660	1663	1664
1666	1667	1669	1670	1672	1673	1678	1679	1681	1682	1684	1685	1688	1689	1691
1692	1694	1695	1697	1698	1702	1703	1705	1706	1708	1709	1711	1712	1715	1716
1717	1721	1722	1726	1738	1743	1745	1758	1761	1762	1764	1765	1767	1768	1770
1771	1776	1777	1779	1780	1782	1783	1786	1787	1789	1790	1792	1793	1795	1796
1800	1801	1803	1804	1806	1807	1809	1810	1813	1814	1815	1819	1820	1824	1836
1841	1843	1856	1859	1860	1862	1863	1865	1866	1868	1869	1874	1875	1877	1878
1880	1881	1884	1885	1887	1888	1890	1891	1893	1894	1898	1899	1901	1902	1904
1905	1907	1908	1911	1912	1913	1917	1918	1922	1930	1935	1937	1951	1954	1955
1957	1958	1960	1961	1963	1964	1969	1970	1972	1973	1975	1976	1977	1978	1981
1982	1983	1988	1989	1998	2005	2008	2009	2011	2012	2014	2015	2017	2018	2023
2024	2026	2027	2029	2030	2033	2034	2036	2037	2039	2040	2042	2043	2046	2047
2048	2051	2052	2053	2058	2059	2067	2074	2077	2078	2080	2081	2083	2084	2086
2087	2092	2093	2095	2096	2098	2099	2102	2103	2105	2106	2108	2109	2111	2112
2115	2116	2117	2121	2148	2153	2164	2170	2181	2198	2204	2216	2222	2233	2250
2256	2266	2269	2270	2272	2273	2275	2276	2278	2279	2284	2285	2287	2288	2290
2291	2294	2295	2297	2298	2300	2301	2303	2304	2308	2309	2311	2312	2314	2315
2317	2318	2321	2324	2326	2330	2331	2337	2347	2353	2363	2364	2366	2367	2376
2415	2416	2417	2419	2420	2421	2425	2426	2432	2433	2439	2442	2443	2445	2446
2448	2449	2451	2452	2457	2458	2460	2461	2463	2464	2465	2466	2467	2468	2469
2470	2471	2480	2503	2508	2511	2515	2524	2550	2564	2583	2593	2595	2597	2602
2662	2666	2668	2673	2720	2756	2796	2800	2804	2805	2806	2828	2833	2840	2841
2877	2881	2885	2889	2893	2902	2903	2906	2907	2914	2945	2979	2983	2984	2985
2986	2987	2988	2989	2990	2991	2992	2994	2995	2996	2997	2999	2983	2984	2985
3007	3008	3009	3012	3013	3015	3016	3023	3027	3028	3029	3030	3031	3032	3033
3034	3035	3036	3038	3039	3040	3041	3043	3045	3048	3050	3051	3052	3053	3056
3057	3059	3060	3063	3064	3084	3085	3157	3160	3161	3163	3164	3166	3167	3169
3170	3175	3176	3178	3179	3181	3182	3185	3186	3188	3189	3191	3192	3194	3195
3198	3221	3224	3225	3227	3228	3230	3231	3233	3234	3239	3240	3242	3243	3245
3246	3249	3250	3252	3253	3255	3256	3258	3259	3282	3285	3286	3288	3289	3291
3292	3294	3295	3300	3301	3303	3304	3306	3307	3310	3311	3313	3314	3316	3317
3319	3320	3373	3376	3377	3379	3380	3382	3383	3385	3386	3391	3392	3394	3395
3397	3398	3401	3402	3404	3405	3407	3408	3410	3411	3414	3421	3424	3425	3427
3428	3430	3431	3433	3434	3439	3440	3442	3443	3445	3446	3449	3450	3452	3453
3455	3456	3458	3459	3462	3463	3501	3504	3505	3507	3508	3510	3511	3513	3514
3519	3520	3522	3523	3525	3526	3529	3530	3532	3533	3535	3536	3538	3539	3542
3548	3551	3552	3554	3555	3557	3558	3560	3561	3566	3567	3569	3570	3572	3573
3576	3577	3579	3580	3582	3583	3585	3586	3589	3590	3628	3629	3656	3659	3660
3662	3663	3665	3666	3668	3669	3674	3675	3677	3678	3680	3681	3684	3685	3687
3688	3690	3691	3693	3694	3697	3704	3707	3708	3710	3711	3713	3714	3716	3717
3722	3723	3725	3726	3728	3729	3732	3733	3735	3736	3738	3739	3741	3742	3745
3746	3784	3785	3812	3815	3816	3818	3819	3821	3822	3824	3825	3830	3831	3833
3834	3836	3837	3840	3841	3843	3844	3846	3847	3849	3850	3853	3859	3862	3863
3865	3866	3868	3869	3871	3872	3877	3878	3880	3881	3883	3884	3887	3888	3890
3891	3893	3894	3896	3897	3900	3901	3965	3969	3970	3972	3973	3975	3976	3978
3979	3984	3985	3987	3988	3990	3991	3994	3995	3997	3998	4000	4001	4003	4004
4007	4008	4009	4028	4085	4086	4145	4146	4156	4159	4160	4162	4163	4165	4166
4168	4169	4174	4175	4177	4178	4180	4181	4184	4185	4187	4188	4190	4191	4193



DZCDB.P11 CROSS REFERENCE TABLE

SEQ 0220

WAIT	2946														
.ASCII	386	387	5314	5316	5326	5331	5337	5344	5348	5363	5461	5469	5481	5492	5499
	5504	5505	5530	5534	5563	5572	5610	5616	5622	5628	5634	5642	5659	5667	5676
	5690	5703	5711	5723	5738	5766	5776	5787	5793	5863	5875	5888	5907	5920	5931
	5943	5954	5964	5994	6006	6017	6079	6091	6106	6117	6128	6138	6149	6165	6215
	6249	6262	6275	6289	6302	6316	6329	6399	6419	6433	6445	6501	6522	6543	
.ASCIZ	385	388	2921	4573	5315	5317	5319	5355	5371	5380	5385	5390	5398	5407	5416
	5424	5429	5437	5442	5447	5454	5475	5490	5513	5517	5523	5542	5548	5556	5558
	5560	5579	5588	5593	5599	5605	5650	5684	5697	5717	5730	5747	5758	5772	5781
	5799	5807	5812	5816	5822	5827	5832	5837	5842	5847	5852	5870	5883	5895	5900
	5914	5927	5938	5950	5960	5971	5977	5985	6002	6012	6024	6033	6038	6046	6055
	6061	6070	6087	6098	6113	6124	6135	6145	6156	6172	6178	6187	6195	6205	6222
	6227	6238	6257	6270	6284	6298	6311	6325	6338	6345	6356	6363	6370	6380	6389
	6407	6411	6427	6439	6453	6458	6469	6476	6484	6492	6512	6533	6551		
.BLKW	4889														
.BYTE	340	341	346	347	362	363	364	365	1360	1361	1458	1459	1556	1557	1747
	1748	1845	1846	1939	1940	2599	2600	2604	2505	2730	2731	2735	2736	2924	4468
	4469	4474	4475	4499	4500	4816	4817	4818	4819	5065	5066	5067	5068	5069	5070
	5071	5072	5073	5074	5075	5076	5077	5078	5079	5080	5081	5082	5083	5084	5085
	5086	5087	5088	5089	5090	5091	5092	5093	5094	5095	5096	5097	5098	5099	5100
	5101	5102	5103	5104	5105	5106	5107	5108	5109	5110	5111	5112	5113	5114	5115
	5116	5117	5118	5119	5120	5121	5122	5123	5124	5125	5126	5127	5128	5129	5130
	5131	5132	5133	5134	5135	5136	5137	5138	5139	5140	5141	5142	5143	5144	5233
	5234	5235	5236	5237	5238	5239	5240	5241	5242	5243	5244	5245	5246	5247	5248
	5249	5250	5251	5252	5253	5254	5255	5256	5257	5258	5259	5260	5261	5262	5263
	5264	5265	5266	5267	5268	5269	5270	5271	5272	5273	5274	5275	5276	5277	5278
	5279	5280	5281	5282	5283	5284	5285	5286	5287	5288	5289	5290	5291	5292	5293
	5294	5295	5296	5297	5298	5299	5300	5301	5302	5303	5304	5305	5306	5307	5308
	5309	5310	5311	5312											
.ENABL	3														
.END	6619														
.ENDC	15	140	158	173	259	273	296	298	304	306	328	331	338	340	366
	376	384	385	386	390	411	873	874	876	878	880	882	883	884	896
	897	907	942	943	944	945	980	981	982	983	1005	1006	1007	1008	1028
	1029	1030	1031	1051	1052	1053	1054	1101	1102	1103	1104	1150	1151	1152	1153
	1220	1221	1222	1223	1269	1270	1271	1272	1346	1362	1367	1368	1369	1370	1444
	1460	1465	1466	1467	1468	1542	1558	1563	1564	1565	1566	1640	1651	1656	1657
	1658	1659	1733	1749	1754	1755	1756	1757	1831	1847	1852	1853	1854	1855	1924
	1925	1941	1947	1948	1949	1950	2001	2002	2003	2004	2070	2071	2072	2073	2158
	2159	2160	2161	2176	2177	2178	2179	2193	2194	2195	2196	2210	2211	2212	2213
	2228	2229	2230	2231	2245	2246	2247	2248	2262	2263	2264	2265	2359	2360	2361
	2362	2391	2397	2858	2861	2862	2863	2864	2866	2870	2876	2879	2880	2884	2892
	2919	2920	2921	2924	2925	2983	2984	2986	2988	2990	2992	2993	2994	3006	3007
	3017	3027	3028	3030	3032	3034	3036	3037	3038	3050	3051	3061	3070	3071	3072
	3073	3106	3107	3108	3109	3153	3154	3346	3347	3348	3349	3474	3475	3476	3477
	3601	3602	3603	3604	3757	3758	3759	3760	3924	3925	3926	3927	4065	4066	4067
	4068	4220	4221	4223	4225	4227	4229	4230	4231	4243	4244	4254	4330	4331	4333
	4335	4337	4339	4340	4341	4353	4354	4364	4528	4546	4575	4577	4583	4597	4604
	4609	4610	4611	4612	4618	4619	4620	4622	4628	4631	4635	4637	4648	4649	4651
	4653	4657	4662	4663	4664	4667	4668	4670	4693	4744	4823	4892	4901	4904	4917
	4918	4919	4920	4921	4922	4924	4936	4946	4956	4958	4959	4963	6582	6584	6600
	6601	6602	6603	6604	6605	6611	6613	6615	6617						
.EQUIV	173	174	176	191	192	221	222	223	224	225	226	227	228	229	230
	249	250	251	252	253	254	255	256	257	258					

.EVEN	4574	5859	6558												
.IF	11	139	157	171	231	259	293	297	302	304	328	330	337	339	366
	376	384	385	389	390	869	873	874	876	878	880	882	883	884	896
	907	941	943	945	979	981	983	1004	1006	1008	1027	1029	1031	1050	1052
	1054	1100	1102	1104	1149	1151	1153	1219	1221	1223	1268	1270	1272	1366	1368
	1370	1464	1466	1468	1562	1564	1566	1655	1657	1659	1753	1755	1757	1851	1853
	1855	1946	1948	1950	2000	2002	2004	2069	2071	2073	2157	2159	2161	2175	2177
	2179	2192	2194	2196	2209	2211	2213	2227	2229	2231	2244	2246	2248	2261	2263
	2265	2358	2360	2362	2389	2395	2857	2861	2862	2863	2865	2866	2868	2875	2878
	2880	2884	2885	2901	2919	2920	2921	2979	2983	2984	2986	2988	2990	2992	2993
	2994	3006	3017	3023	3027	3028	3030	3032	3034	3036	3037	3038	3050	3061	3069
	3071	3073	3105	3107	3109	3152	3154	3345	3347	3349	3473	3475	3477	3600	3602
	3604	3756	3758	3760	3923	3925	3927	4064	4066	4068	4216	4220	4221	4223	4225
	4227	4229	4230	4231	4243	4254	4326	4330	4331	4333	4335	4337	4339	4340	4341
	4353	4364	4527	4545	4561	4576	4582	4591	4600	4607	4609	4610	4612	4615	4618
	4619	4620	4621	4627	4631	4635	4647	4649	4650	4651	4653	4655	4663	4664	4666
	4667	4668	4669	4693	4743	4822	4891	4900	4904	4908	4918	4919	4920	4921	4922
	4923	4936	4946	4954	4956	4958	4963	6581	6583	6599	6601	6603	6605	6611	6612
	6613	6614	6615	6616											
.IFEQ	1346	1444	1542	1640	1733	1831	1924								
.IFF	140	158	171	298	304	331	337	339	366	390	873	942	943	944	945
	980	981	982	983	1005	1006	1007	1008	1028	1029	1030	1031	1051	1052	1053
	1054	1101	1102	1103	1104	1150	1151	1152	1153	1220	1221	1222	1223	1269	1270
	1271	1272	1367	1368	1369	1370	1465	1466	1467	1468	1563	1564	1565	1566	1568
	1657	1658	1659	1754	1755	1756	1757	1852	1853	1854	1855	1947	1948	1949	1950
	2001	2002	2003	2004	2070	2071	2072	2073	2158	2159	2160	2161	2176	2177	2178
	2179	2193	2194	2195	2196	2210	2211	2212	2213	2228	2229	2230	2231	2245	2246
	2247	2248	2262	2263	2264	2265	2359	2360	2361	2362	2858	2865	2868	2876	2879
	2920	2983	3027	3070	3071	3072	3073	3106	3107	3108	3109	3153	3154	3346	3347
	3348	3349	3474	3475	3476	3477	3601	3602	3603	3604	3757	3758	3759	3760	3924
	3925	3926	3927	4065	4066	4067	4068	4220	4330	4528	4546	4575	4577	4582	4600
	4618	4619	4620	4622	4647	4649	4651	4667	4670	4744	4823	4892	4901	4924	4954
	6582	6584	6600	6602	6604	6613	6615	6617							
.IFNE	1341	1357	1439	1455	1537	1553	1635	1651	1728	1744	1826	1842	1924	1936	
.IFT	4610	4653													
.IFTF	4609	4651													
.IIF	10	15	20	21	290	389	874	876	882	883	884	896	897	2862	2870
	2871	2882	2920	2925	2984	2986	2992	2993	2994	3006	3007	3028	3030	3036	3037
	3038	3050	3051	4221	4223	4229	4230	4231	4243	4244	4331	4333	4339	4340	4341
	4353	4354	4543	4568	4583	4584	4585	4586	4587	4615	4620	4628	4629	4630	4631
	4652	4664	4667	4668	4742	4917	4918	4919	4920	4921					
.IRP	328	390	941	979	1004	1027	1050	1100	1149	1219	1268	1366	1464	1562	1655
	1753	1851	1946	2000	2069	2157	2175	2192	2209	2227	2244	2261	2358	2868	3069
	3105	3152	3345	3473	3600	3756	3923	4064	4591	4836	4876	4930	4946		
.LIST	2	138	159	273	290	328	366	368	369	370	371	372	373	374	375
	376	377	378	379	380	381	382	383	384	865	897	941	945	979	983
	1004	1008	1027	1031	1050	1054	1100	1104	1149	1153	1219	1223	1268	1272	1366
	1370	1464	1468	1562	1566	1655	1659	1753	1757	1851	1855	1946	1950	2000	2004
	2069	2073	2157	2161	2175	2179	2192	2196	2209	2213	2227	2231	2244	2248	2261
	2265	2358	2362	2388	2398	2402	2870	2976	3007	3051	3069	3073	3105	3109	3152
	3154	3345	3349	3473	3477	3600	3604	3756	3760	3923	3927	4064	4068	4208	4244
	4309	4354	4502	4615	4631	4908	4917	4918	4919	4920	4921	4922	4975	6600	6602
	6604	6612	6614	6616											
.MACRO	160	161	162	163	164	165	166	167	329	330	884	1268	2856	2994	3038

	4231	4341	4526	4908															
.MCALL	4	5	6	273	897	3007	3051	4244	4354										
.MLIST	1	138	159	273	290	328	366	368	369	370	371	372	373	374	375				
	376	377	378	379	380	381	382	383	384	865	897	941	945	979	983				
	1004	1008	1027	1031	1050	1054	1100	1104	1149	1153	1219	1223	1268	1272	1366				
	1370	1464	1468	1562	1566	1655	1659	1753	1757	1851	1855	1946	1950	2000	2004				
	2069	2073	2157	2161	2175	2179	2192	2196	2209	2213	2227	2231	2244	2248	2261				
	2265	2358	2362	2388	2398	2402	2870	2976	3007	3051	3069	3073	3105	3109	3152				
	3154	3345	3349	3473	3477	3600	3604	3756	3760	3923	3927	4064	4068	4208	4244				
	4309	4354	4502	4615	4631	4908	4917	4918	4919	4920	4921	4922	4975	6600	6602				
	6604	6612	6614	6616															
.PAGE	42	330	389																
.REPT	290	368	376	2389	2395														
.SBTTL	43	138	169	284	294	299	332	412	865	941	979	1004	1027	1050	1100				
	1149	1219	1268	1366	1464	1562	1655	1753	1851	1946	2000	2069	2157	2175	2192				
	2209	2227	2244	2261	2358	2402	2859	2976	3069	3105	3345	3473	3600	3756	3923				
	4064	4208	4309	4502	4529	4578	4623	4671	4745	4824	4893	4909	4925	4975					
.TITLE	10																		
.WORD	290	291	292	305	309	310	339	342	343	344	375	348	349	350	351				
	352	353	354	355	356	357	366	368	369	370	371	372	373	374	375				
	376	377	378	379	380	381	382	383	2875	2878	4554	4559	4736	4820	4955				
	4957	4967																	

ERRORS DETECTED: 0

002

MAINDEC - 11 - DZCDB-B MACY11 27(654) 1-JUL-77 08:39 PAGE 151  
DZCDB.P11

SEQ 0223

\*DZCDB,DZCDB/CRF/SOL=DZCDB.P11  
RUN-TIME: 27 25 4 SECONDS  
CORE USED: 20K

EOF1DZCDBBSEQ

00010000

770920

PDP10 411