
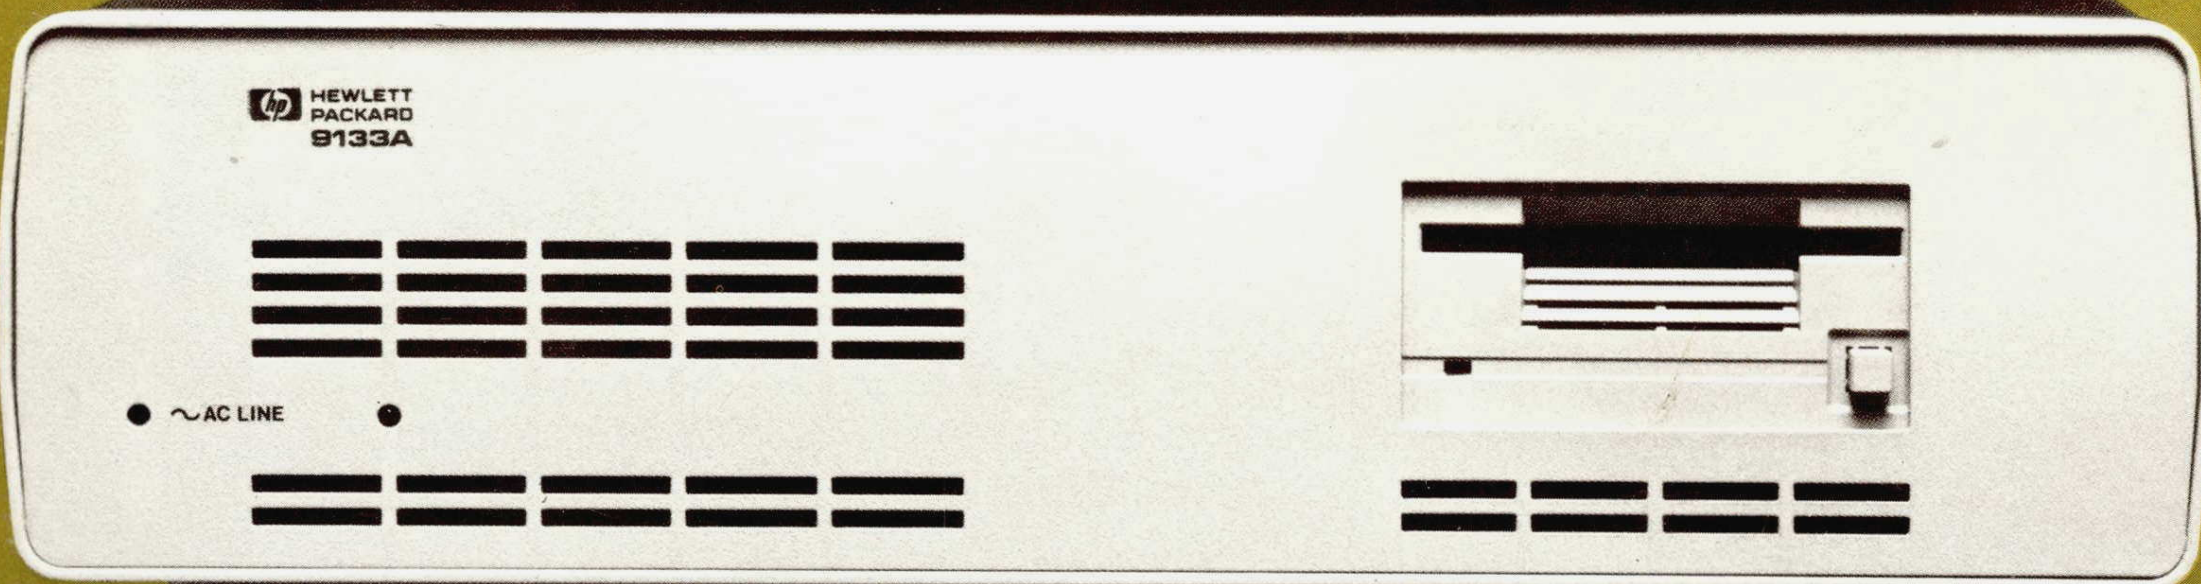


HP 9133A/B, 9134A/B, and 9135A Disc Memory User's Manual

 HEWLETT
PACKARD

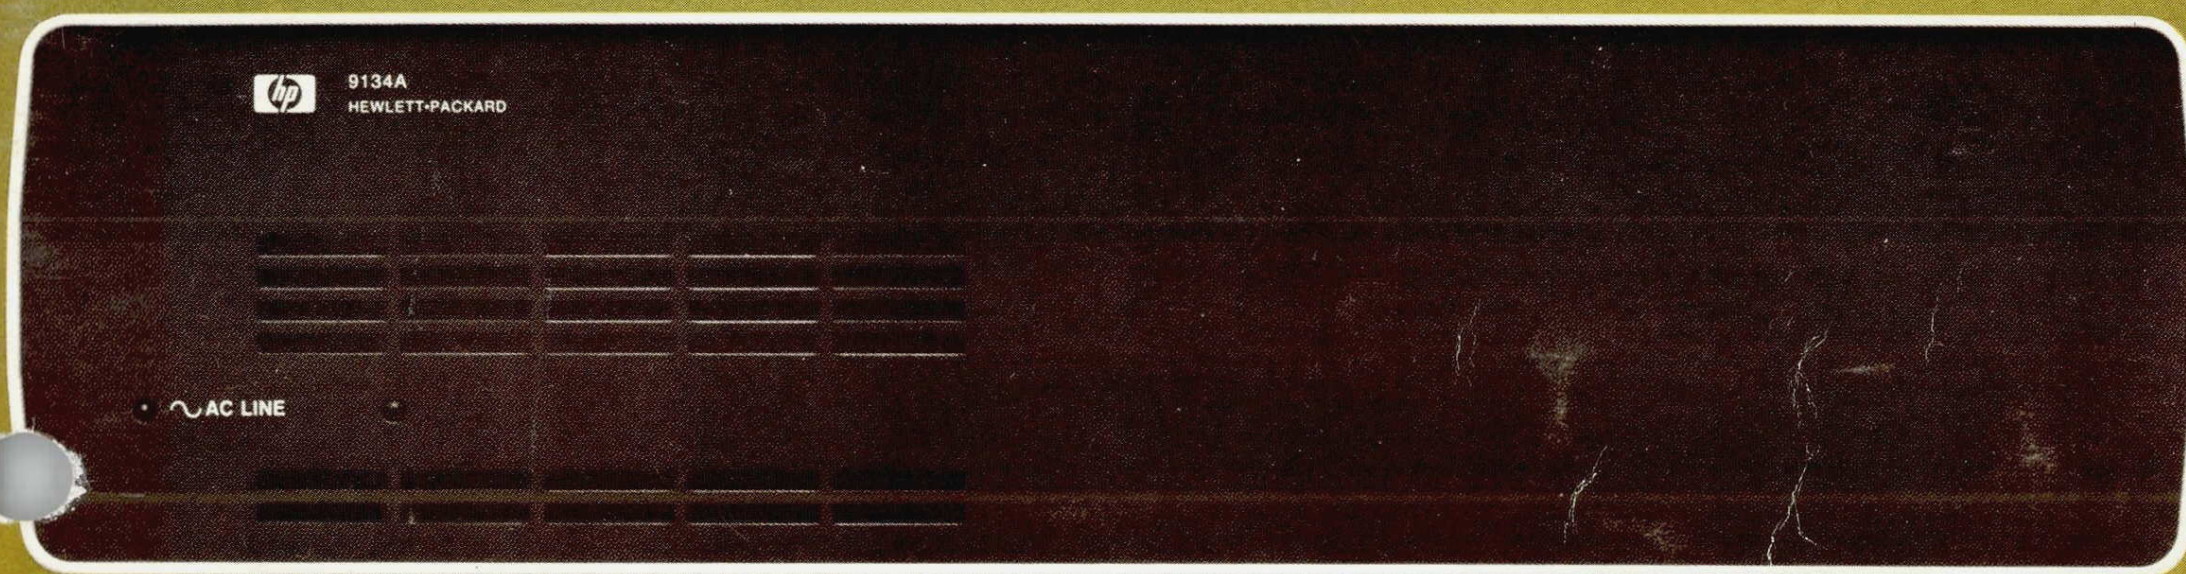

Federal Communications Commission
Radio Frequency Interference Statement
U.S.A. Only

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient the receiving antenna
- relocate the computer with respect to the receiver
- move the computer away from the receiver
- plug the computer into a different outlet so that computer and receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful:

"How to Identify and Resolve Radio-TV
Interference Problems".

This booklet is available from the U.S. Government Printing Office, Washington, DC 20402, Stock No. 004-000-00345-4.

Warranty Statement

Hewlett-Packard products are warranted against defects in materials and workmanship. For Hewlett-Packard Desktop Computer Division products sold in the U.S.A. and Canada, this warranty applies for ninety (90) days from date of delivery. * Hewlett-Packard will, at its option, repair or replace equipment which proves to be defective during the warranty period.

ALL REPAIRS TO BE DONE UNDER WARRANTY MUST BE RETURNED TO HP.

Buyer shall prepay shipping charges for products returned to HP for warranty service and HP shall pay for return of the products to Buyer. However, Buyer shall pay for all shipping charges, duties and taxes for products returned to HP from another country.

Repairs necessitated by misused of the equipment, or by hardware, software, or interfacing not provided by Hewlett-Packard are not covered by this warranty.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OR MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HEWLETT-PACKARD SHALL NOT BE LIABLE FOR CONSEQUENTIAL DAMAGES.

*For other countries, contact your local Sales and Service Office to determine warranty terms.

HP 9133A/B, 9134A/B, and 9135A Disc Memory User's Manual



Table of Contents

Chapter 1: General Description

Introduction	1
Technical Specifications	2

Chapter 2: Installation

Equipment Supplied	3
Unpacking Your Disc Memory	3
Configuring Power	4
Setting the Line Voltage Select Switches	4
Fuses	4
Power Cords	5
Interfacing the Disc Memory to Your System	5
Selecting the Device Address	5
HP-IB Interface Restrictions	7

Chapter 3: Basic Operation

HP 9133A/B Basic Operation	10
3 1/2-inch Flexible Disc Usage and Handling	10
3 1/2-inch Flexible Disc Description and Write Protection	13
Inserting and Removing the 3 1/2-inch Flexible Disc	14
Media Wear Indication	15
9133A/B Controls and Indicators	16
Applying Power to the 9133A/B	17
3 1/2-inch Flexible Disc Structure	17
Data Errors	17
Selftest	17
HP 9134A/B Basic Operation	19
9134A/B Controls and Indicators	19
Applying Power to the 9134A/B	20
HP 9135A Basic Operation	21
5 1/4-inch Flexible Disc Usage and Handling	21
5 1/4-inch Flexible Disc Write Protection	25
Inserting and Removing the 5 1/4-inch Flexible Disc	26
Controls and Indicators	27
Applying Power to the 9135A	28

Chapter 4: Maintenance and Service

Maintenance	29
Service	29
Warranty	29
Cleaning the Case	30

Table of Contents

Appendix A: Helpful Hints

Introduction	31
Series 100	31
Series 200	31
The Winchester Drive	31

Figures

1-1 HP 9133A/B, HP 9134A/B, and HP 9135A Disc Memories	1
2-1 Line Voltage Select Switches	4
2-2 Available Power Cords	5
2-3 Device Address Switch Setting	6
2-4 HP-IB Interface Cables	7
2-5 Interface Connection	8
3-1 3 1/2-inch Flexible Disc Head/Media Contaminants	11
3-2 The 3 1/2-inch Flexible Disc	14
3-3 3 1/2-inch Flexible Disc Write Protection	14
3-4 3 1/2-inch Flexible Disc Insertion	15
3-5 9133A/B Controls and Indicators	16
3-6 9134A/B Controls and Indicators	19
3-7 5 1/4-inch Flexible Disc Head/Media Contaminants	22
3-8 Defective 5 1/4-inch Flexible Disc	25
3-9 5 1/4-inch Flexible Disc Write Protection	25
3-10 5 1/4-inch Flexible Disc Insertion	26
3-11 5 1/4-inch Flexible Disc Structure	27
3-12 9135A Controls and Indicators	27
A-1 Winchester Drive With and Without Option 010	32

Tables

2-1 Fuses	4
-----------------	---

Chapter 1

General Description

- Introduction
- Technical Specifications

Introduction

The HP 9133A/B, 9134A/B, and 9135A disc memories (Figure 1-1) are random access data storage devices. The 9133A contains a 4.6 Mbyte, 5 1/4-inch Winchester disc drive and a 3 1/2-inch flexible disc drive. The 9134A contains a 4.6 Mbyte, 5 1/4-inch Winchester drive only, and the 9135A contains a 4.6 Mbyte, 5 1/4-inch Winchester drive and a 5 1/4-inch flexible disc drive.

The Winchester drive, found in the 9133A, 9134A and 9135A disc memories, has been designed to emulate an HP 9895A 8-inch flexible disc drive master with three slave drives (1.15 Mbytes per drive). The 3 1/2-inch flexible disc drive in the 9133A is a 9121S, and the 5 1/4-inch flexible disc drive in the 9135A is an 82902M. Thus, HP computers that support the 9895A, 9121S and 82902M flexible disc drives can operate the 9133A, 9134A, and 9135A.


A 10 Mbyte Winchester drive is installed in the 9133B and 9134B disc memory products. The 9133B contains the same 3 1/2-inch flexible disc drive as the 9133A. The 10 Mbyte Winchester drive is only available in the single volume version.

Option 010 on all three devices consists of a modification to the Winchester controller printed circuit assembly which causes the Winchester drive to appear as one large 4.8 Mbyte volume. The Winchester with option 010 responds to most of the commands used on the 9895A flexible disc drive.


Refer to the Helpful Hints section at the back of this Manual for additional information on using the disc memory with your mainframe. For more information, refer to your Mass Storage Manual for programming information for the HP 9121S, 82902M and 9895A flexible disc drives.



HP 9133A/B

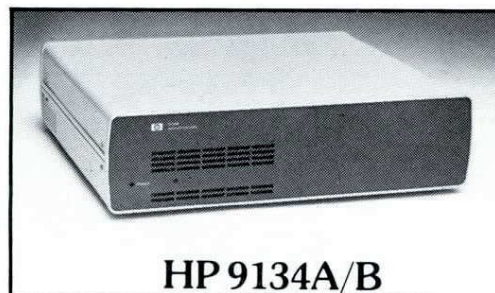

HP 9134A/B

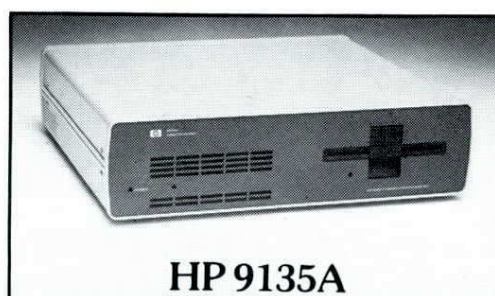

HP 9135A

Figure 1-1. HP 9133A/B, HP 9134A/B, and HP 9135A Disc Memories

Technical Specifications

Listed below are the physical, electrical, and environmental specifications for the HP 9133A/B, 9134A/B and 9135A disc memories.

Unit Specifications

Power Requirements	9133A/B	9134A/B	9135A
Source (selected by rear panel switch)	100 Vac \pm 10% 120 Vac \pm 10% 220 Vac \pm 10% 240 Vac \pm 10%	100 Vac \pm 10% 120 Vac \pm 10% 220 Vac \pm 10% 240 Vac \pm 10%	100 Vac \pm 10% 120 Vac \pm 10% 220 Vac \pm 10% 240 Vac \pm 10%
Line Frequency (\pm 2%)	48-66 Hz	48-66 Hz	48-66 Hz
Power Consumption (max)	140W	140W	140W
Environmental Range			
Operating Temperature	10° to 40° C (50° to 140° F)	10° to 40° C (50° to 140° F)	10° to 40° C (50° to 140° F)
Storage Temperature	-40° to 60° C (-40° to 140° F)	-40° to 60° C (-40° to 140° F)	-40° to 60° C (-40° to 140° F)
Operating Humidity (non-condensing) 25.5° C max wet bulb temperature	20% to 80%	8% to 80%	20% to 80%
Storage Humidity (non-condensing)	5% to 95%	5% to 95%	5% to 95%
Operating Altitude	0 to 4572m 0 to 15000 ft	0 to 4572m 0 to 15000 ft	0 to 4572m 0 to 15000 ft
Size/Weight			
Height	130mm (5.1 in)	130mm (5.1 in)	130mm (5.1 in)
Width	424mm (16.7 in)	424mm (16.7 in)	424mm (16.7 in)
Depth	475mm (18.7 in)	475mm (18.7 in)	475mm (18.7 in)
Net Weight	14.5 kg (32 lbs)	13.4 kg (29.5 lbs)	15.5 kg (34.1 lbs)
Shipping Weight	17.6 kg (38.9 lbs)	16.8 kg (37 lbs)	18.6 kg (41 lbs)

Drive Specifications

Technical	3 1/2" Flexible Disc	5 1/4" Flexible Discs	5 Mbyte Winchester	10 Mbyte Winchester
	9133A/B	9135A	9134A,9135A 9133A/B	9133B,9134B
Formatted Capacity:			4.6M	9.68M
Bytes per Unit	270K	270K	4.8M (Opt. 010)	9.68M
Bytes per Sector	256	256	256	256
Sectors per Track	16	16	30 (31 for Opt. 010)	31
Tracks per Surface	66	33	150 (152 for Opt. 010)	305
Tracks per Inch	135/in	48/in	255/in	345
Recording Format	dbl density	dbl density	-----	-----
Max Sustained Transfer Rate*	17.8 kb/sec	6.8 kb/sec	50 kb/sec	50 kb/sec
Average Access Time	415 msec (on) 1415 msec (off)	187 msec (on) 435 msec (off)	168 msec**	90 msec
Rotational Speed	600 rpm	300 rpm	3600 rpm	3600 rpm
Media Part Number (10 pack)	HP 92191A	HP 92190A	-----	-----

* Mainframe dependent

** 60 msec within 1 volume

NOTE

The flexible disc drives in the 9133A/B and 9135A disc memories are designed for operation in a typical office environment. Use of the equipment in an environment containing dust, dirt, or corrosive substances will cause the flexible disc drive and media life to be drastically reduced.

Chapter 2

Installation

- **Equipment Supplied**
- **Unpacking Your Disc Memory**
- **Configuring Power**
- **Interfacing the Disc Memory to Your System**

Equipment Supplied

Please check to insure that you have received all of the standard equipment. If any items are incorrect or missing, please contact the dealer from whom you purchased the unit.

Description	Quantity	Voltage Range	HP Part Number
Power Cable	1		Dependent on location
Operator's Manual	1		09133-90000
Fuse	1	100 & 120Vac 2.5 Amp	2110-0083
	1	220 & 240Vac 1.5 Amp	2110-0043
Flexible Disc Media (with 9135A only)	1		9164-0128

A package of ten 3 1/2-inch discs can be ordered for your 9133A/B using the 92191A product number.

A package of ten 5 1/4-inch discs can be ordered for your 9135A using the 92190A product number.

Unpacking Your Disc Memory

Your disc memory was carefully inspected before shipment. Remove the unit from the shipping carton and carefully inspect the unit for any physical damage that may have occurred during shipment. If you find any damage, you should immediately notify your dealer and file a claim with any carriers involved.

CAUTION

THE DISC MEMORY IS A PRECISION INSTRUMENT. MECHANICAL SHOCK CAN MISALIGN THE READ/WRITE HEADS, RESULTING IN READ ERRORS AND/OR DAMAGED DISCS WHETHER THE DISC IS OPERATING OR NOT.

If the disc memory is moved, be careful when picking it up and setting it down.

Carefully repack the disc memory in the original shipping carton before transporting it to another site.

CAUTION

EVIDENCE OF EXCESSIVE MECHANICAL SHOCK WILL VOID
THE WARRANTY.

Configuring Power

The following information should be used to configure your disc memory device power for proper operation in your area.

Setting the Line Voltage Select Switches

The voltage select switches on the rear panel must be set to the nominal line voltage for the area in which it is operating. Figure 2-1 shows the setting of the voltage select switches for the various line voltages.

CAUTION

ALWAYS TURN OFF THE AC POWER SWITCH BEFORE
CHANGING THE VOLTAGE SELECT SWITCHES.

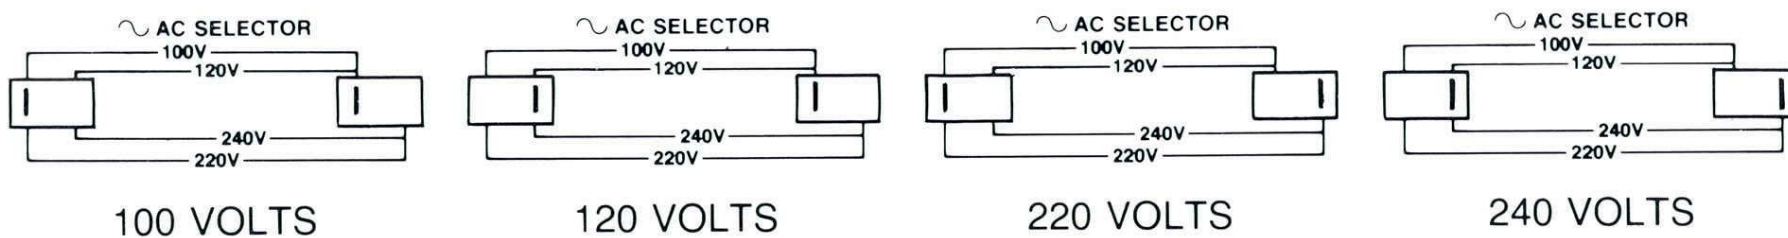


Figure 2-1. Line Voltage Select Switches

Fuses

A different fuse is required for each of the two voltage ranges of 110-120 and 220-240 Vac. Table 2-1 gives the correct fuse ratings and fuse part numbers.

Table 2-1. Fuses

Voltage Range	Fuse Rating	HP Part Number
100 & 120Vac	2.5V 250 Vac Normal Blow	2110-0083
220 & 240Vac	1.5V 250 VAC Normal Blow	2110-0043


WARNING

ALWAYS DISCONNECT THE DISC MEMORY FROM THE
AC SOURCE BEFORE CHANGING FUSES.

Power Cords

Power cords supplied by HP have polarities matched to the power input socket on the equipment (Figure 2-2).

- * L = Line or active conductor (also called "live" or "hot")
- * N = Neutral or identified conductor
- * E = Earth or safety ground

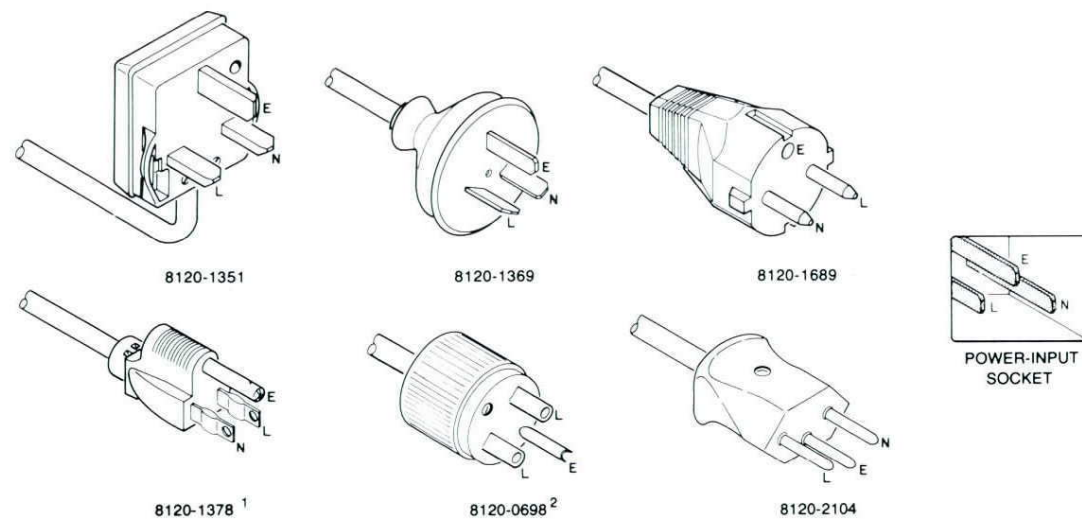

¹UL and CSA approved for use in the United States of America and Canada with equipment set for either 100 or 120 Vac operation.

²UL and CSA approved for use in the United States of America and Canada with equipment set for either 200 or 240 Vac operation.

Figure 2-2. Available Power Cords

WARNING

IF IT IS NECESSARY TO REPLACE THE POWER CORD, THE REPLACEMENT CORD MUST HAVE THE SAME POLARITY AS THE ORIGINAL. OTHERWISE, A SAFETY HAZARD MIGHT EXIST IF AN INTERNAL FAILURE OCCURS.

The cord packaged with the equipment depends upon where the equipment is to be delivered.

Interfacing the Disc Memory to Your System

The disc memory is connected to the computer via the Hewlett-Packard Interface Bus (HP-IB). The device address switches are set prior to connecting the interface cable.

Selecting the Device Address

Each device in an HP-IB system must be set to a unique device address. The 9134A/B disc memory contains one device, and the 9133A/B and 9135A disc memories contain two devices. A device address switch is provided for each device. See Figure 2-3 for switch locations.

Prior to setting the device address switches, turn the disc memory ~AC line switches OFF.

The switches can be set to any one of eight device addresses, ranging from decimal 0 through 7. Refer to Figure 2-3 to set these switches to the desired device address.

Switch Segments

Address	X	4	2	1	
0	X	UP	UP	UP	(Factory setting for Winchester)
1	X	UP	UP	DOWN	
2	X	UP	DOWN	UP	(Factory setting for flexible disc)
3	X	UP	DOWN	DOWN	
4	X	DOWN	UP	UP	
5	X	DOWN	UP	DOWN	
6	X	DOWN	DOWN	UP	
7	X	DOWN	DOWN	DOWN	

X = Not used

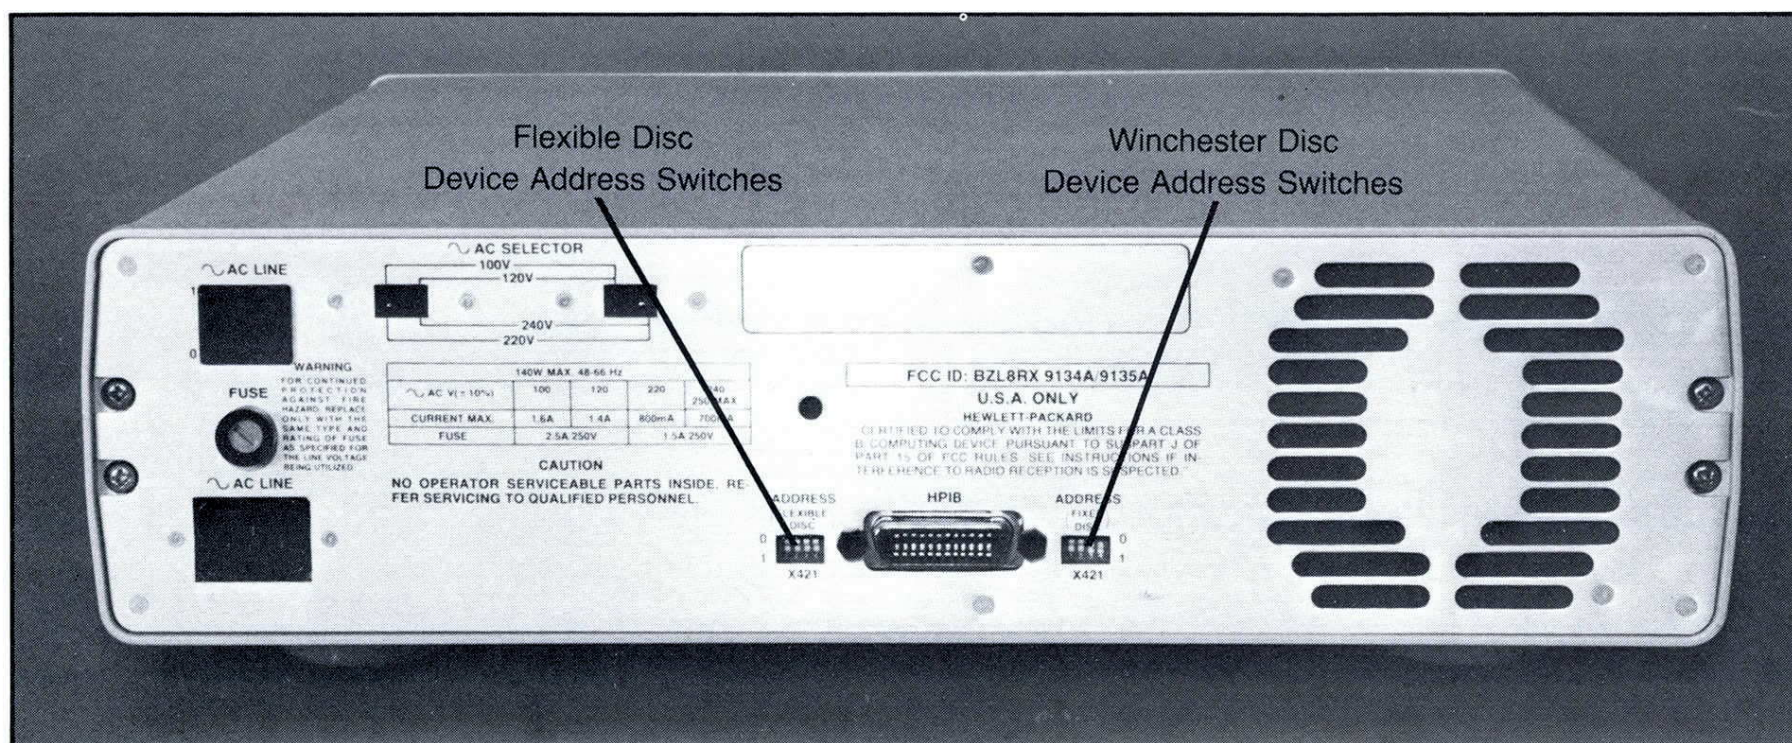
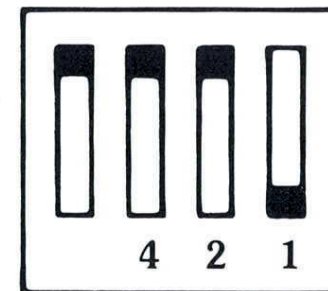


Figure 2-3. Device Address Switch Setting

CAUTION

ALWAYS SET THE AC LINE SWITCHES TO "OFF" (0) FOR THE COMPUTER AND THE DISC DRIVES WHEN INSERTING OR REMOVING THE INTERFACE CABLES. USE ONLY CABLES DESIGNED BY HEWLETT-PACKARD SPECIFICALLY FOR YOUR EQUIPMENT. FAILURE TO DO SO COULD DAMAGE THE DISC DRIVE OR THE CONTROLLING COMPUTER.

Refer to Figure 2-4 for a list of the HP-IB interface cables used with HP computers.

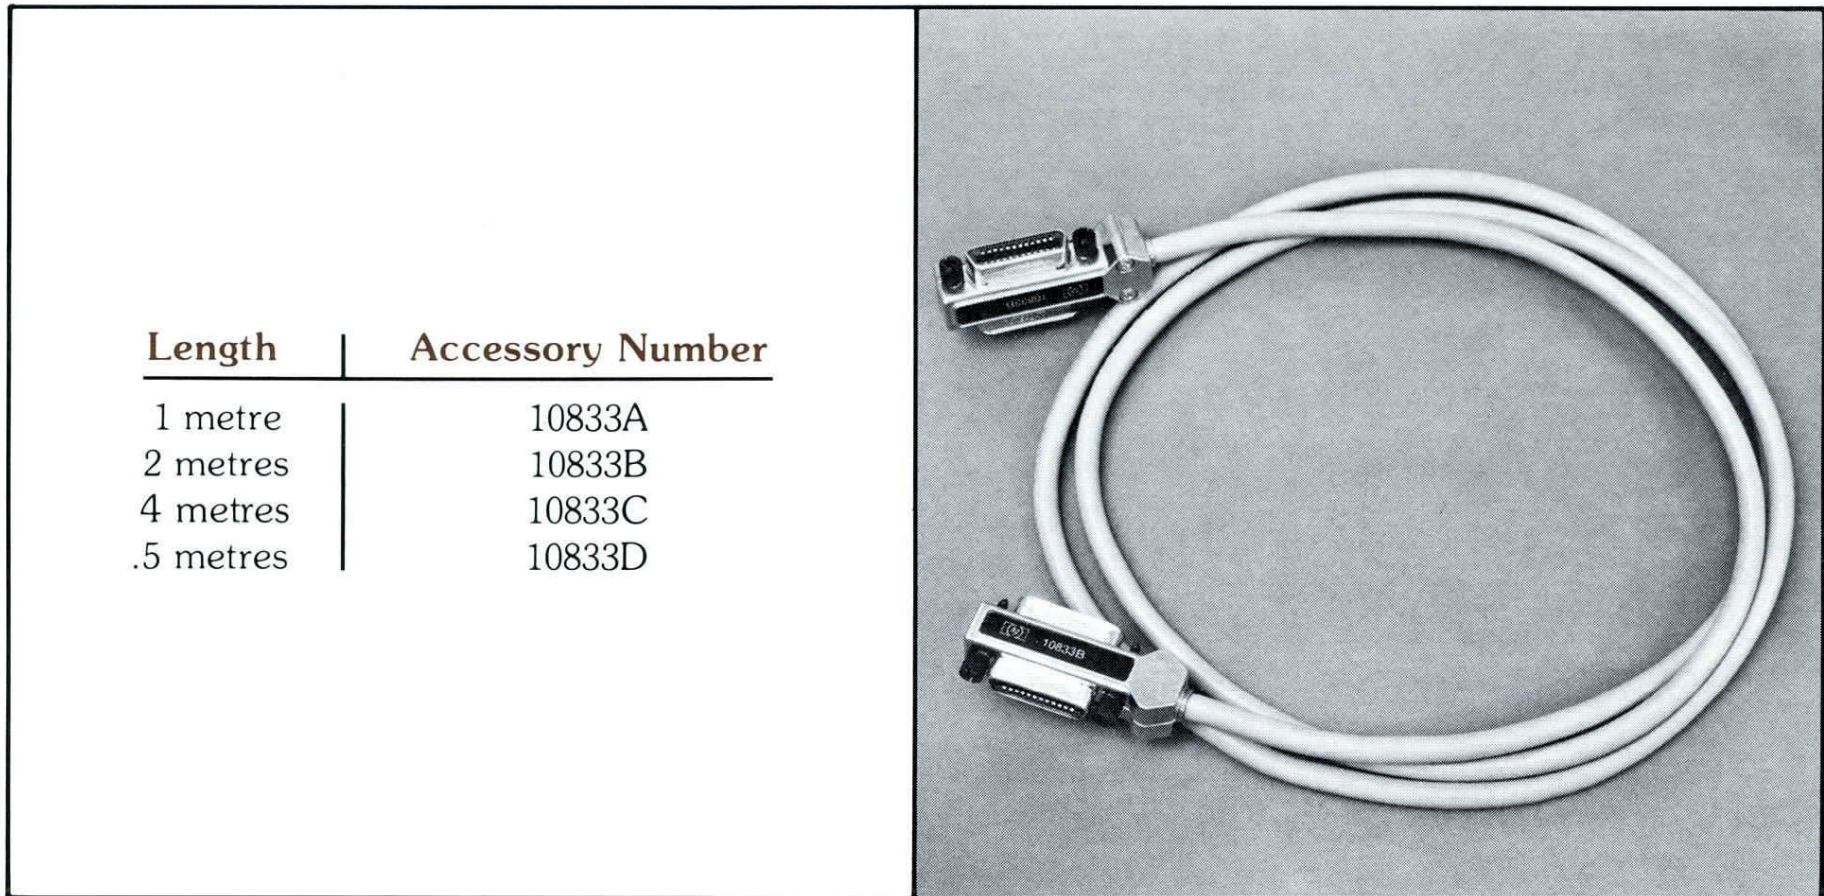


Figure 2-4. HP-IB Interface Cables

HP-IB Interface Restrictions

1. All the ~AC line switches must be turned "OFF" when connecting (and disconnecting) devices to your system.
2. The total length of cable permitted in one bus system must be less than or equal to two metres times the number of devices connected together (the interface card is counted as one device).
3. The total length of the cable must not exceed 20 metres. For example, a system containing six devices can be connected together with cables that have a total length less than or equal to 12 metres (six devices \times 2m/device = 12 metres). The individual lengths of cable can be distributed in any manner desired as long as the total length does not exceed the allowed maximum. If more than 10 devices are to be connected together, cables shorter than two metres must be used between some of the devices to keep the total cable length less than 20 metres.
4. The maximum number of devices that can be connected together in one bus system is 15. There are no restrictions to the way cables may be connected together; however, it is recommended that no more than four piggyback connectors be stacked together on one device. The resulting structure could exert enough force on the connector mounting to damage it.

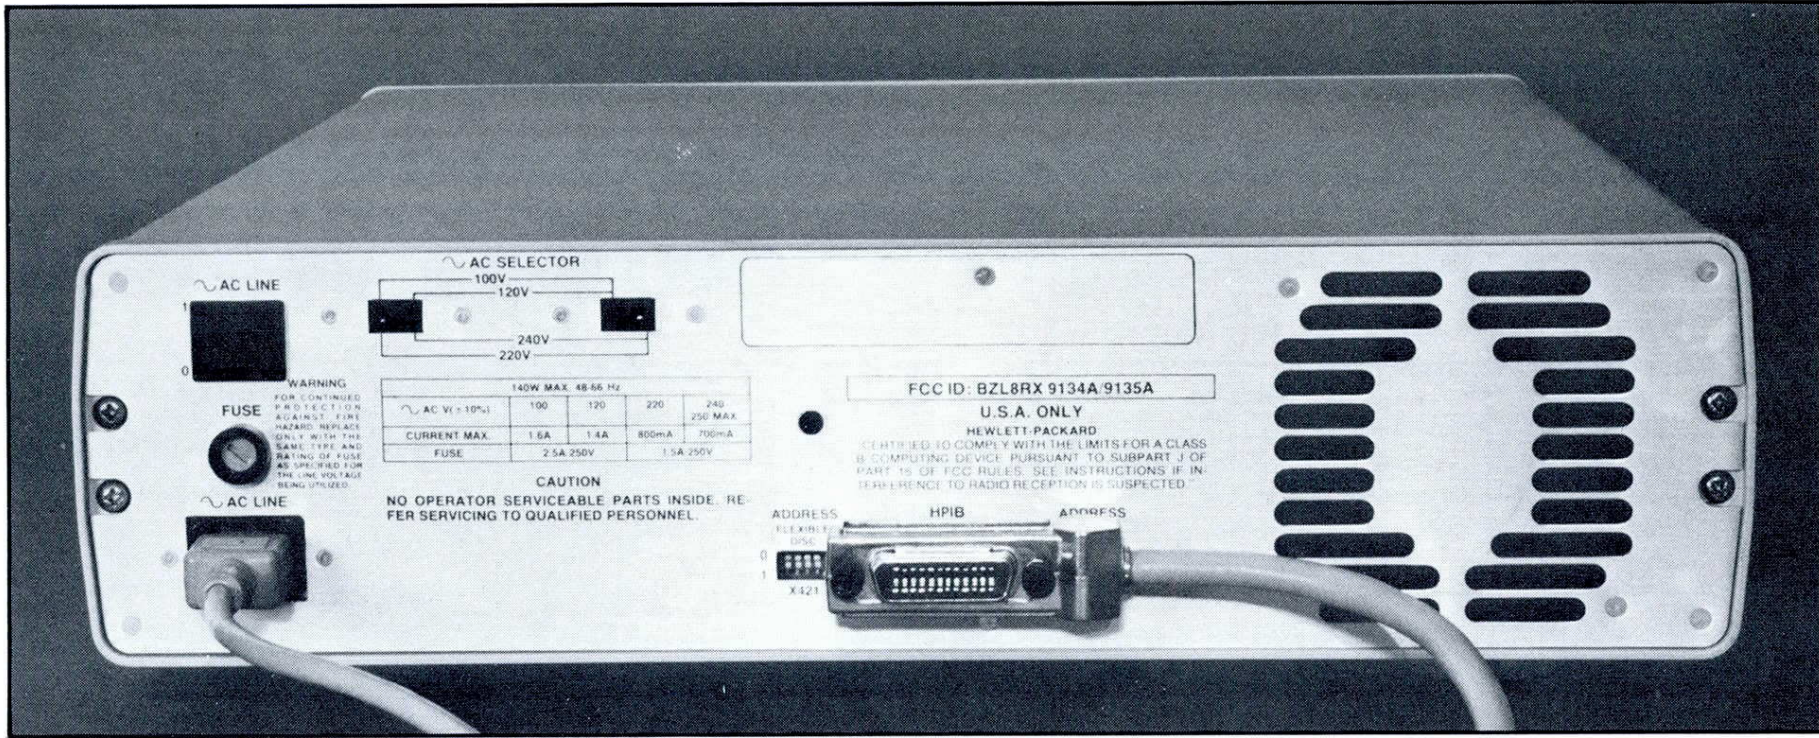


Figure 2-5. Interface Connection

Chapter 3

Basic Operation

HP 9133A/B Basic Operation

- 3 1/2-inch Flexible Disc Usage and Handling
- 3 1/2-inch Flexible Disc Description and Write Protection
- Inserting and Removing the 3 1/2-inch Flexible Disc
- Media Wear Indication
- 9133A/B Controls and Indicators
- Applying Power to the 9133A/B
- Selftest Procedures

HP 9134A/B Basic Operation

- 9134A/B Controls and Indicators
- Applying Power to the 9134A/B

HP 9135A Basic Operation

- 5 1/4-inch Flexible Disc Usage and Handling
- 5 1/4-inch Flexible Disc Write Protection
- Inserting and Removing the 5 1/4-inch Flexible Disc
- Controls and Indicators
- Applying Power to the 9135A

HP 9133A/B Basic Operation

3 1/2-inch Flexible Disc Usage and Handling
 3 1/2-inch Flexible Disc Description and Write Protection
 Inserting and Removing the 3 1/2-inch Flexible Disc
 Media Wear Indication
 9133A/B Controls and Indicators
 Applying Power to the 9133A/B
 Selftest Procedures

CAUTION

KEEP THE FRONT AND BACK OF THE DISC MEMORY FREE FROM OBSTRUCTIONS TO AVOID RESTRICTING THE AIR FLOW. FAILURE TO DO SO COULD CAUSE THE UNIT TO OVERHEAT AND RESULT IN DAMAGE TO THE DISC MEMORY.

3 1/2-inch Flexible Disc Usage and Handling

Flexible Disc Media

The removable storage medium used in the HP 9133A/B is a flexible mylar disc coated with a thin layer of magnetic oxide. The disc is enclosed in a protective plastic jacket with a slot for head access to the recording surface. Only the lower side of the flexible disc is used for data storage. The lower side refers to the lower side of the disc as it resides in the drive.

Each flexible disc must be initialized before it can be used for data storage. The initialization procedure marks each disc sector, checks for defective tracks, and establishes file directories.

Refer to your computer programming or mass storage manual for the correct initialization procedure.

CAUTION

DISC DRIVE PERFORMANCE AND RELIABILITY ARE DEPENDENT ON THE TYPE OF MEDIA USED. DISC DRIVE SPECIFICATIONS CAN BE ASSURED ONLY WHEN USING HP MEDIA. THE USE OF IMPROPER MEDIA CAN RESULT IN PREMATURE DISC FAILURE OR DAMAGE TO THE DISC DRIVE.

ON SOME DISC PRODUCTS HP MAY QUALIFY OTHER NON-HP MEDIA. WHEN TESTED, THIS MEDIA MET HP SPECIFICATIONS. HOWEVER, HP DOES NOT WARRANT OR SUPPORT THIS MEDIA AND CANNOT CONTROL CHANGES IN ITS SPECIFICATIONS OR QUALITY. THE SELECTION AND USE OF SUCH PRODUCTS IS THE CUSTOMER'S RESPONSIBILITY. HP RESERVED THE RIGHT TO EXCLUDE FROM WARRANTY AND MAINTENANCE AGREEMENT COVERAGE ANY REPAIRS WHICH HP REASONABLY DETERMINES OR BELIEVES WERE CAUSED BY THE USE OF MEDIA NOT DISTRIBUTED BY HP. HP WILL UPON REQUEST PROVIDE SUCH REPAIRS ON A TIME AND MATERIAL BASIS.

WARRANTY AND MAINTENANCE AGREEMENT COVERAGE OF REPAIRS NOT CAUSED BY THE USE OF NON-HP MEDIA IS UNAFFECTED.

Operating Cleanliness

The read/write head must maintain contact with the disc during read and write operations. Figure 3-1 shows various types of contaminants and their size relationships. A contaminant particle hard enough and of the right size may scratch the media oxide coating or the head surface. Even if not hard enough to scratch, it may be large enough to lift the head from the surface, causing data errors or damage to the media.

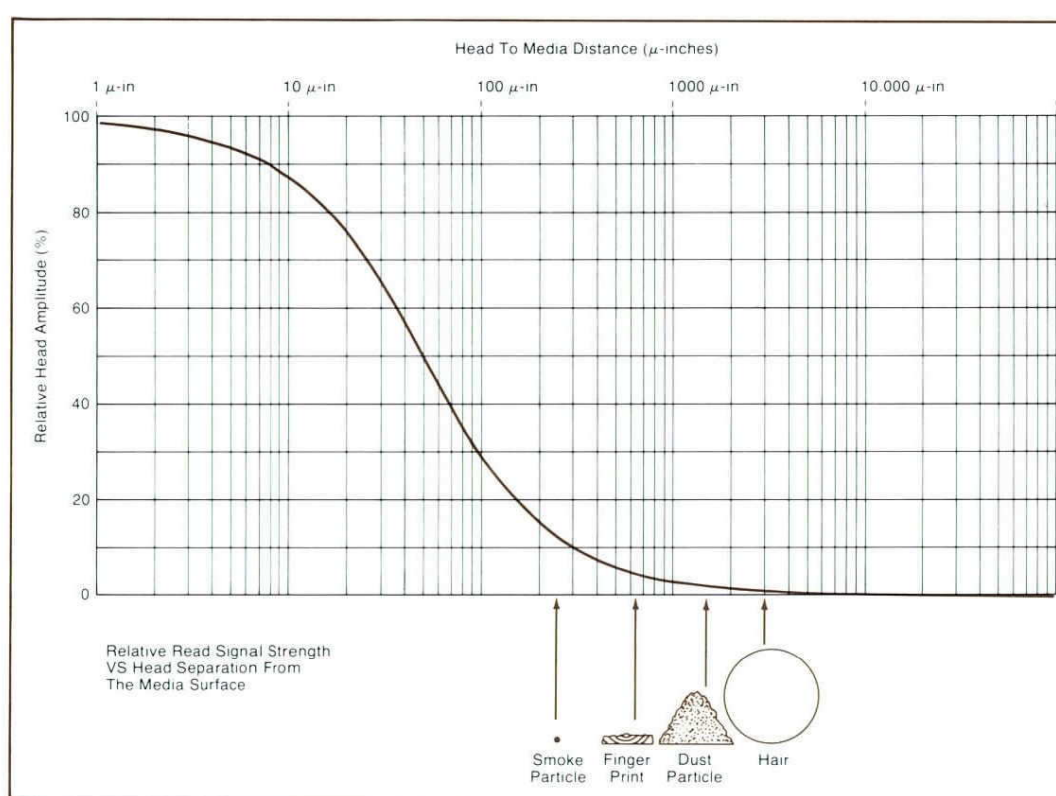


Figure 3-1. 3 1/2-inch Flexible Disc Head/Media Contaminants

Handling Flexible Disc Media

The flexible disc is basically maintenance free, but it is delicate and **MUST BE HANDLED CAREFULLY**. Remember, the disc contains your valuable data and programs, and should be treated accordingly. A good rule of thumb is to treat your disc as you would a valuable record album. Here are some specific Do's and Don'ts to avoid loss of data or damage to your discs.

EVEN A LITTLE CARELESSNESS IN DISC HANDLING CAN DRAMATICALLY REDUCE THE LIFE OF THE DISC.


Do

Back Up Discs Frequently

There is always a chance of losing data when mass storage devices are accessed. There are many causes in any computer system—a programming bug, operator error, power failure,

or hardware failure. In the case of flexible discs, media failure from contamination or wearout is possible. **YOUR BEST PROTECTION AGAINST DATA LOSS IS FREQUENT BACKUP OF YOUR FILES.**

Slide The Disc Guard Over The Head Window When Not In Use

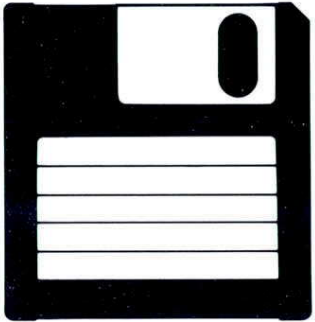


This is the single most important thing to remember about handling your disc because it prolongs disc life by protecting it from dust and scratches. **NEVER ATTEMPT TO BLOW DUST FROM THE DISC SURFACE.** Between uses discs should be stored upright in a dust-free container. The box in which the discs are shipped, or a similar container, is a good choice.

Operate Your System In A Clean Environment



Airborne contaminants and particles accidentally dropped onto the disc will cause your disc to wear out prematurely and may cause unreliable data storage and retrieval operations. Some of the most common contaminants are **DUST, SMOKE, ASHES, ERASER CRUMBS, and BREADCRUMBS.** Chemical vapors may also cause premature wear-out. **NEVER ATTEMPT TO BLOW SMALL PARTICLES FROM THE DISC SURFACE.**

Maintain Proper Temperature And Humidity

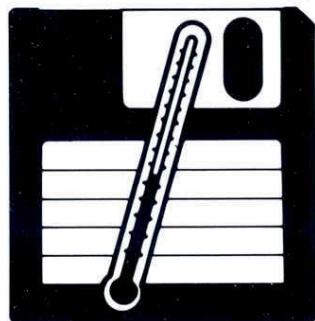


The proper operating range is 10°C (50°F) to 40°C (104°F) and 20% to 80% relative humidity. While temperature is usually easy to control, it may be necessary to make special provisions to keep the humidity in the proper range. Although the disc will continue to operate outside the normal humidity range, it will wear out more quickly and will have a higher error rate.

Avoid Magnetic Fields



The data is stored on the disc magnetically and can be erased by an external magnetic field. Avoid placing a disc near power transformers, magnets or large disc memories or motors.

Remove From Drive When Not In Use

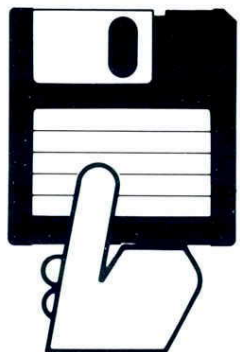

Remove the disc completely from the drive when access is not needed for an extended period of time.

Use A Felt Tip Pen To Label Your Disc



Use a soft felt tip pen to label your disc, and be careful to write only in the label area.

Replace Discs Frequently

Although discs are designed to provide many hours of useful life, they will eventually wear out. The life of a disc is VERY dependent on how carefully it is handled and how much it is used.

The following guidelines refer to head/media contact time or the time the disc access light on the front panel is lit. The terms used here (normally and heavily) also refer to the head load pad replacement requirements in the Maintenance section of Chapter 4. A disc used normally (disc access light is lit less than 20 minutes a day) should last half a year. A disc that is used heavily (disc access light lit more than 2 hours a day) should not be expected to last more than 2 months. Discs should be replaced whenever they begin to show signs of circular marring. See the following section titled "Media Wear Indication."

Don't

Do Not Touch The Surface Of The Disc



The thickness of a fingerprint is enough to lift the head off the disc and cause errors. The oils in a fingerprint will also collect dust which can cause a disc to wear out sooner than normal.

Do Not Bend Or Fold The Disc



The disc is flexible but will not operate if it is creased. Using ball point pens, rubber bands, paper clips, etc. can crease the disc.

Do Not Try To Clean A Disc

The inside surface of the disc jacket is covered with a special material that cleans the disc as it rotates. Any other method of cleaning may cause solvent damage to the media or scratch the disc, causing loss of data. If a disc becomes dirty or scratched, immediately transfer the data to a new disc and dispose of the old disc.

3 1/2-inch Flexible Disc Description and Write Protection

The 3 1/2-inch flexible disc is enclosed in a rigid plastic shell for extra protection and reduced disc-to-case friction (see Figure 3-2). A metal centering hub ensures rapid and accurate positioning when the disc is inserted in the drive. The disc guard which slides back and forth across the front of the disc protects the recording surface from foreign object contamination.

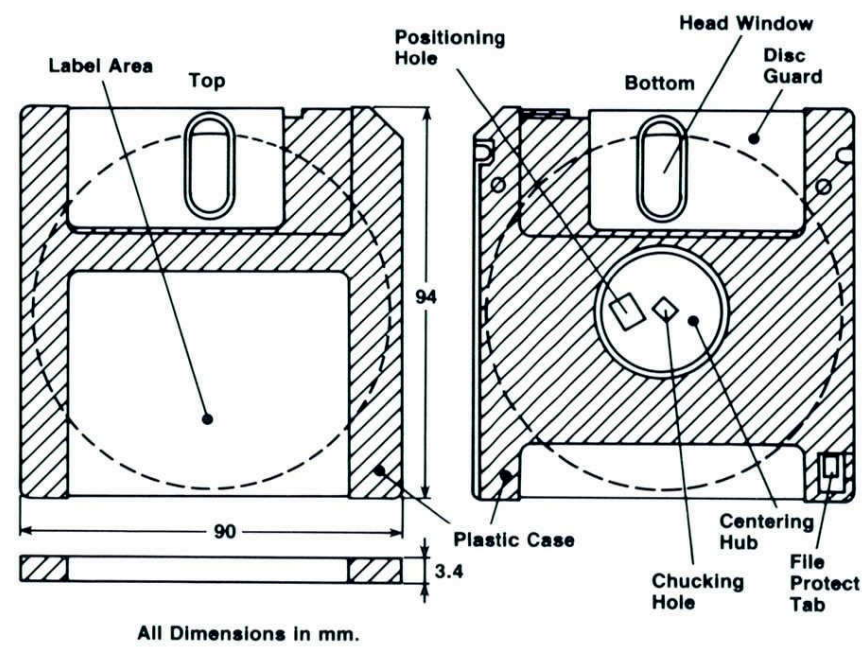


Figure 3-2. The 3 1/2-inch Flexible Disc

The micro-flexible disc is write unprotected when you receive it. To prepare the disc for write protected operation, do the following (see Figure 3-3):

1. Break off the write protect tab.
2. Align the protrusion on the tab with the slot in the disc
3. Depress the tab into the groove – tab should fit snugly.

Write protection is accomplished by sliding the tab away from the center of the disc.

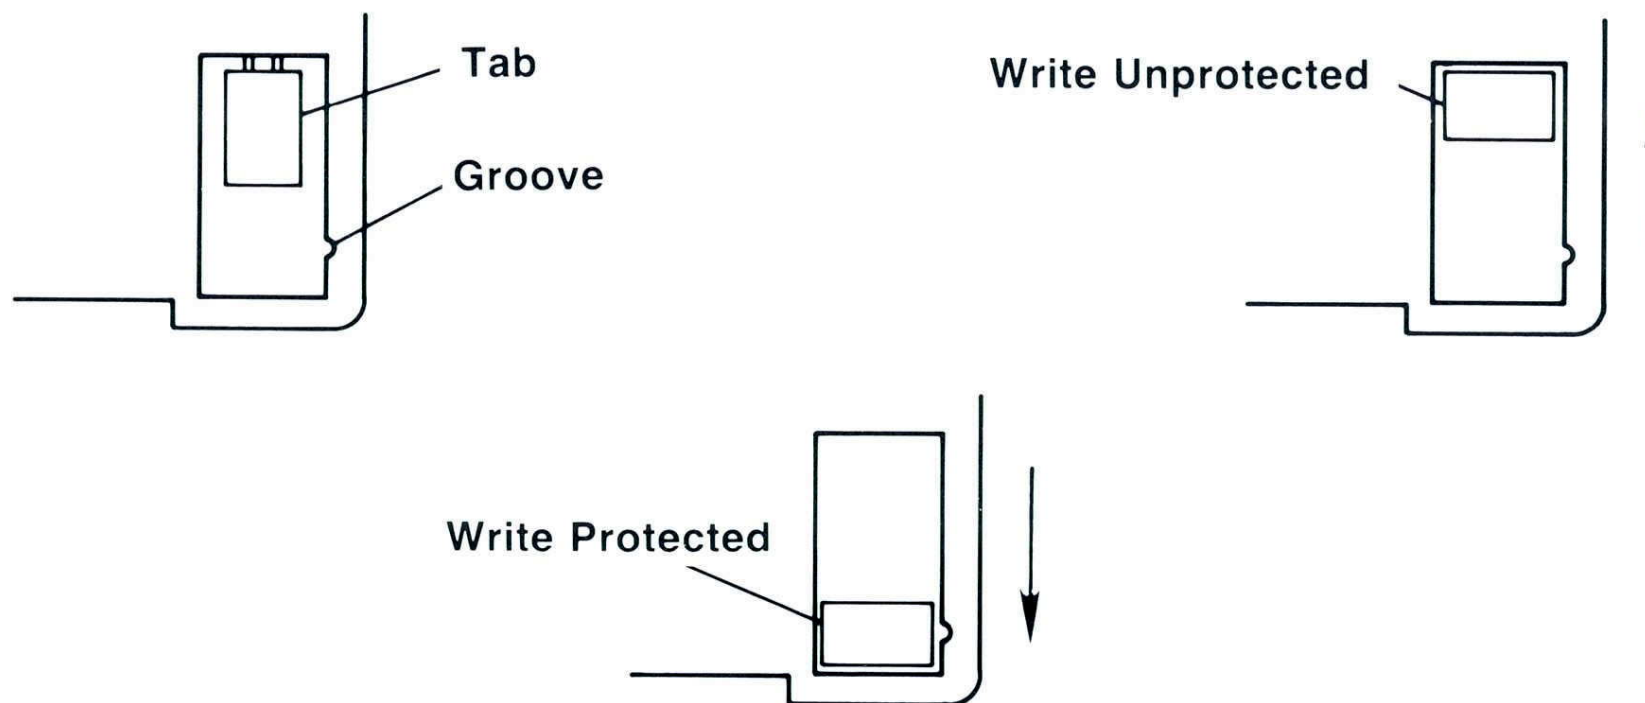


Figure 3-3. 3 1/2-inch Flexible Disc Write Protection

Inserting and Removing the 3 1/2-inch Flexible Disc

1. The disc can be inserted into the drive with or without power applied.
2. Slide the disc guard away from the head window exposing the disc surface. Insert the exposed head window first with the metal centering hub down. Carefully slide the disc into the drive until you feel it contact the rear of the drive.

Continue pressing the disc until it is pulled down into the drive.

3. Remove the disc by depressing the disc eject button and pulling the disc straight out. Always slide the disc guard over the head window immediately after removing the disc from the drive.

Refer to Figure 3-4 for proper insertion of the flexible disc.

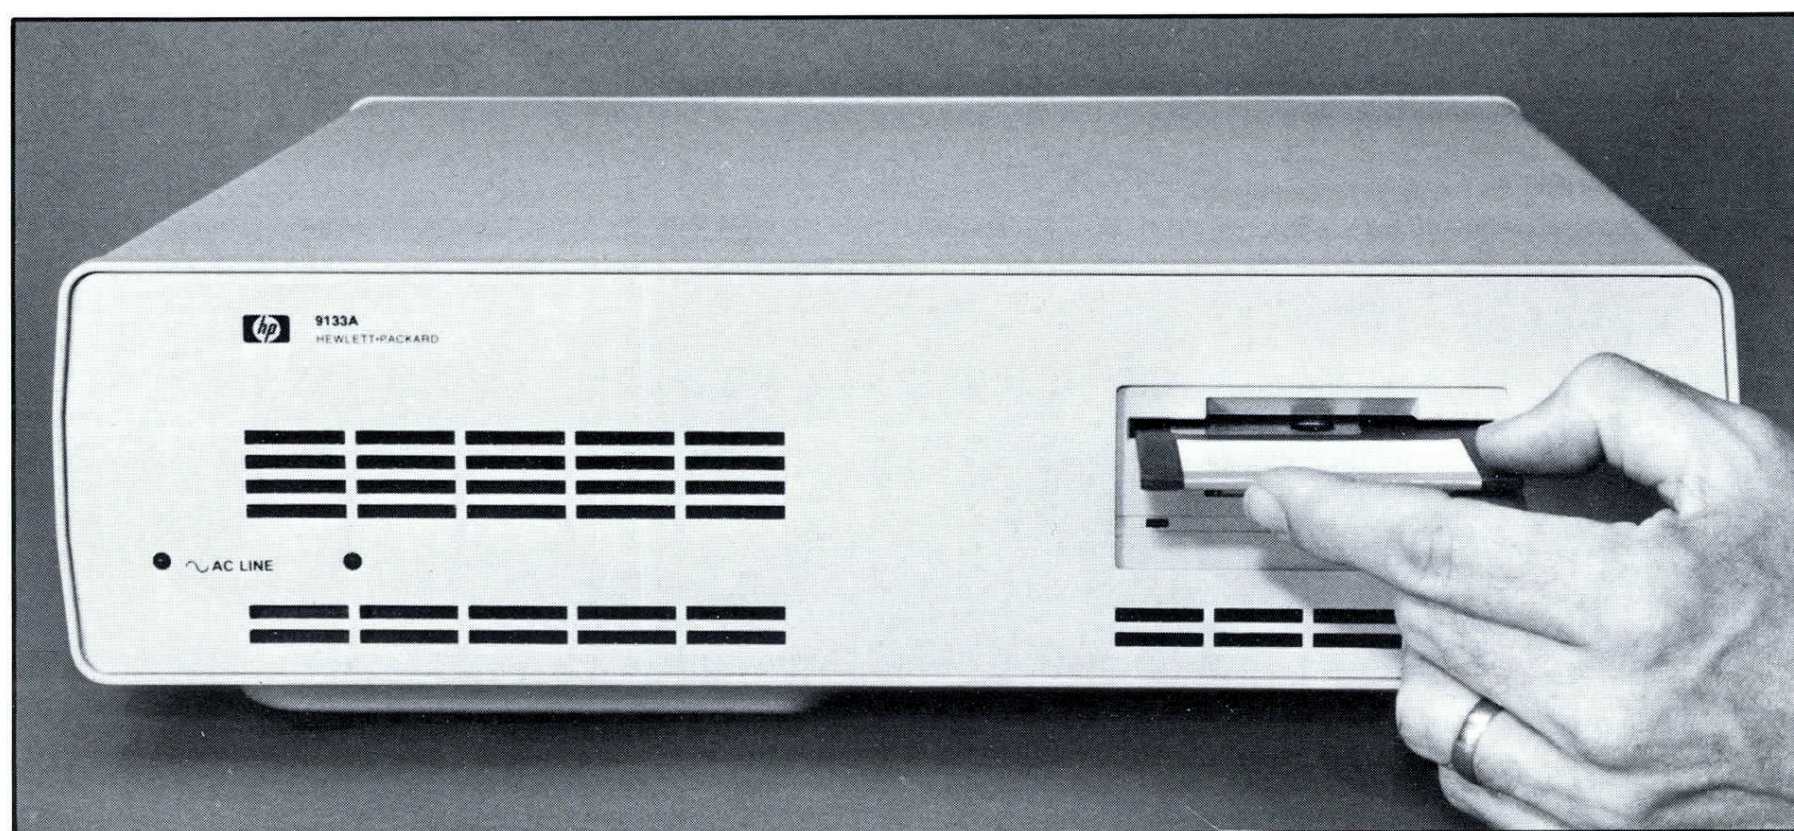


Figure 3-4. 3 1/2-inch Flexible Disc Insertion

NOTE

There is no write protect capability on the Winchester drive. Caution must be used to avoid writing over data stored on the Winchester disc.

Media Wear Indication

As the flexible disc becomes worn, the friction between the disc and the read/write head increases. Because the same read/write head accesses the data from all your discs, it is very important that this friction be kept to a minimum level. To insure the long wear life of the read/write head, you should make the following check each time you insert a disc into your drive.

Checking for wear is a simple visual inspection of the disc surface before you insert the disc into the drive. When viewing the disc surface you should look for any signs of circular marring. This is done by sliding open the disc guard revealing the disc surface. If you see any sign of circular marring on either side of the exposed surface, the disc should be immediately copied and discarded. Circular marring generally occurs first on the upper (label side) surface of the disc. This may indicate load pad wear.

Compare a new (never used) disc to a disc you have used for a few hours. There should be no visible difference.

An internal test has been implemented and provides you with an upper limit indication for disc use. When a disc reaches a finite limit, the head loaded indicator (disc access light) blinks on and off. This indication is continued until you remove the disc or until the host sends a command to the drive. The drive accepts and performs the command from the host, after which it resumes the disc "worn out" indication. At this time the data on the disc should be copied to a new disc and the old disc discarded. Continued use of the old disc after the initial wear indication will result in eventual automatic write protection of the disc by the drive controller.

Viewing the disc in the above manner prior to inserting the disc into the drive and taking the appropriate action when you receive the wearout indication will insure the long life of the read/write head.

9133A/B Controls and Indicators

The indicators are located on the front panel. The indicators, as shown in Figure 3-5, are a disc access light for the Winchester drive and the head load indicator for the 3 1/2-inch flexible disc drive. The Winchester drive access light is illuminated whenever the disc is accessed for data storage or retrieval and momentarily when the drive is powered-up. The flexible disc drive access light lights up whenever the head is loaded or when the drive is selected.

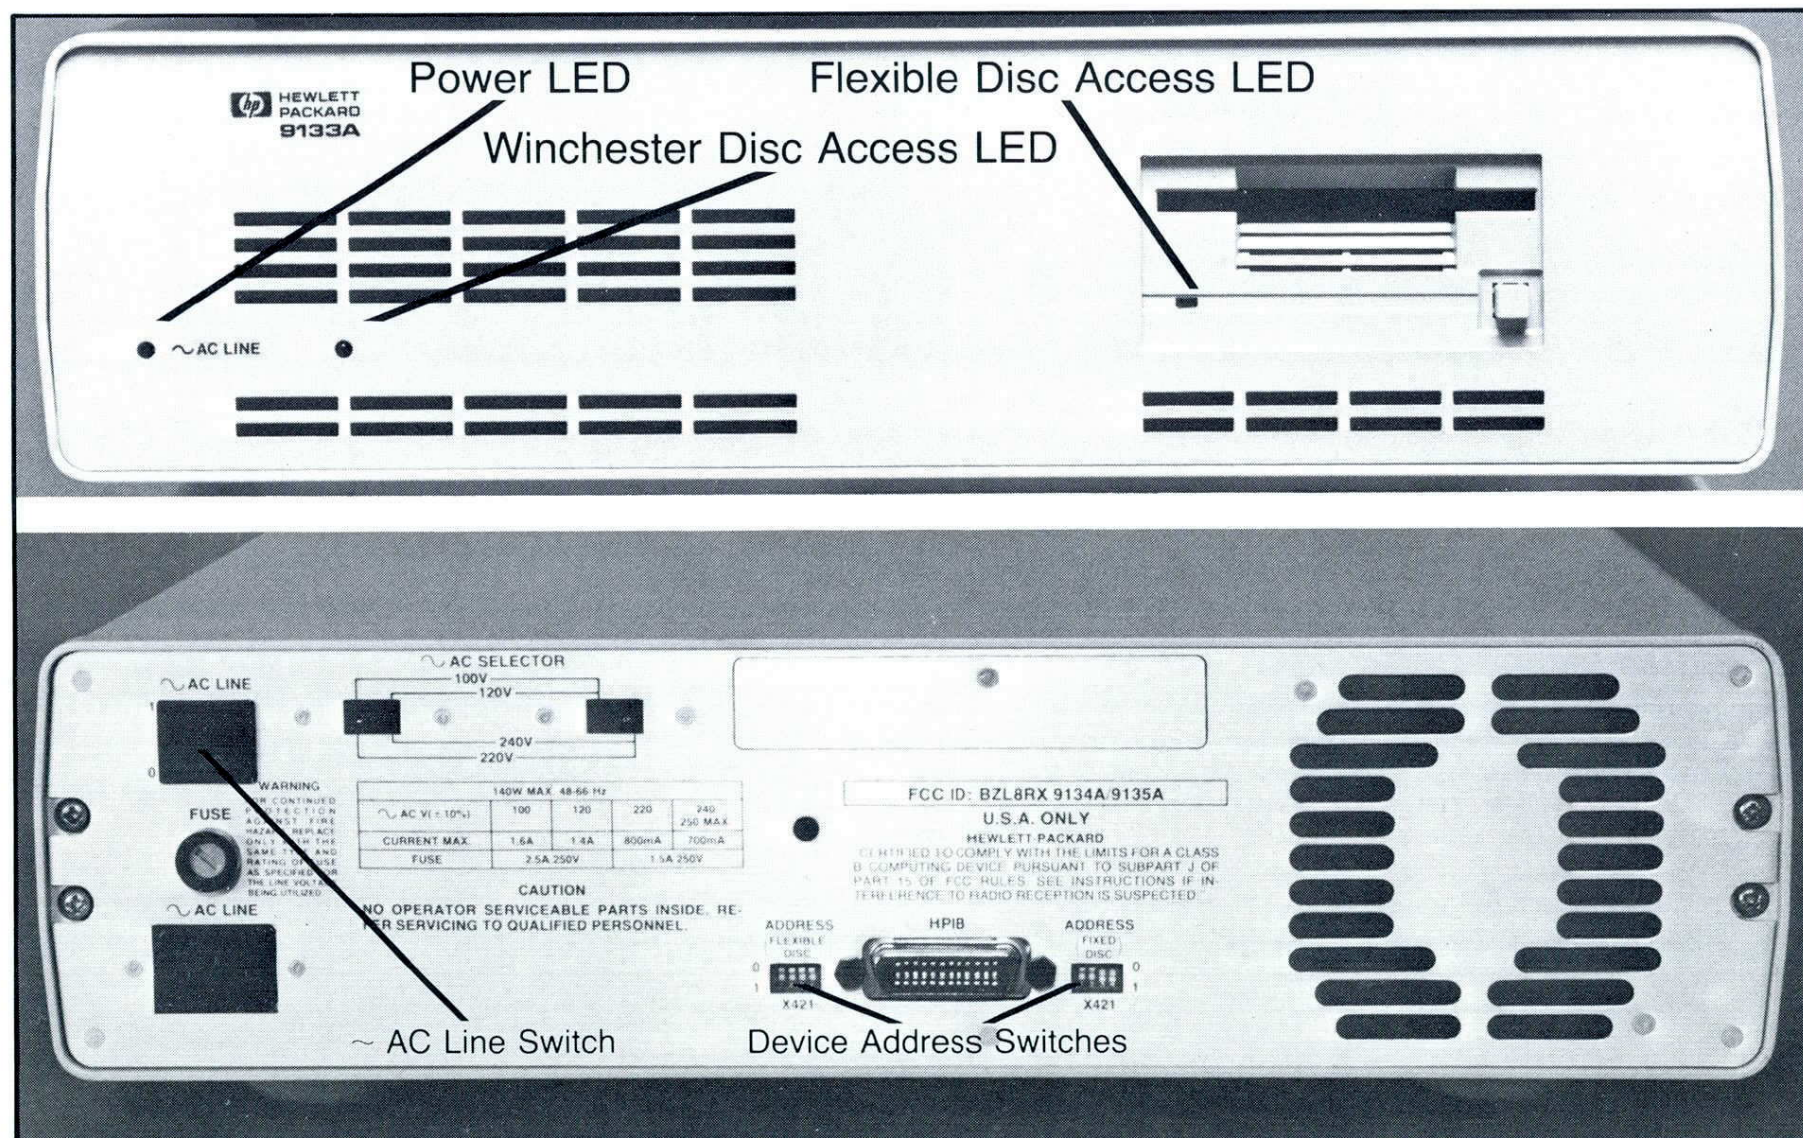


Figure 3-5. 9133A/B Controls and Indicators

CAUTION

THE FLEXIBLE DISC ACCESS LIGHT ON THE FRONT OF THE DRIVE INDICATES USAGE OF THAT DRIVE. DO NOT DEPRESS THE DISC EJECT BUTTON WHEN THE ACTIVITY LIGHT IS ON.

Applying Power to the 9133A/B

Before turning the disc memory power on, be sure to perform all the procedures in Chapter 2.

Locate the AC line switch on the rear panel and set it to the "ON" or "1" position. The disc drive requires about 20 seconds after the application of power before it is ready for operation. See the section titled "Selftest" in this chapter for the power-on selftest indication.

3 1/2-inch Flexible Disc Structure

The surface of the flexible disc is coated with ferromagnetic iron oxide. Data is stored in the form of binary digits represented by magnetic flux reversals on the disc. Information is stored and retrieved by the disc unit's head which comes in contact with the disc's lower surface.

Information is stored in 70 concentric tracks on the lower side of the disc. The tracks are numbered 0 through 69. Each track is divided into 16 physical records (sectors), numbered 0 through 15. Each record contains 256 bytes (characters) of information. There is an important difference between a physical record and a logical record. A physical record is the smallest accessible unit of data on the disc. It is always the same size (256 bytes). A logical record is one that you define when you create a data file. Data files are variable and depend on the type and quantity of data you are storing.

Some of the space on each disc is reserved for the directory. The space reserved depends on the controlling computer and the number of records in the file directory.

Data Errors

Two error conditions cause the selftest indicator to come on and stay on until the condition disappears. These conditions are a command sequence-error over the HP-IB (from the host controller) and a data error from the disc. Whenever these conditions occur it is best to retry the last operation. If a retry is successful, the error and error indication are cleared. If the condition remains after several retries, contact your dealer or sales office for assistance.

Selftest

There are three selftest modes on the flexible disc within the 9133A/B: power-on, remote, and service selftests. The service selftests are not included in this document.

The self test light is visible through a hole in the rear of the 9133A/B. See Figure 3-5 for the location of this light.

The power-on test exercises the RAM and the flexible disc controller chip (FDC). Power-on also calculates a checksum for the ROM. If the RAM or ROM tests fail, the processor goes no further, waiting for service. If the 9133A/B passes the RAM and ROM tests, but fails the FDC

test, the flexible disc controller processor continues to initialize the system and allows the host to talk to it, if possible. If all the power-on selftests are passed, the self test light flashes five times to indicate a successful power-on condition.

The remote selftest is initiated by the host with the proper HP-IB passed command. Results of the test are available over the HP-IB with this test. See the INITIATE SELFTEST command description in the Service Manual for more details. If the drive contains a disc that is not write protected, the following tests are performed: RAM, ROM, FDC, motor speed, format, and read verify test is executed. The RAM test reads and writes checkerboard patterns into the RAM. The ROM test calculates a checksum for the ROM and compares that to a precalculated value. The FDC test reads and writes to selected registers on the chip. The motor speed test measures the index period and compares it to the drive specification. The format test formats the discs in the drive. No testing of the interface to the host occurs.

WARNING

ALL DATA ON THE DISC IS DESTROYED AND IS UNRECOVERABLE WHEN PERFORMING THE REMOTE SELFTEST.

The read test verifies the written data and the error checking of this data on the discs. If all the other tests are passed successfully, the self test light flashes ten times. If any test fails, no flashing occurs.

If the disc inserted into the drive is write protected, the format test is skipped. If all the other tests are passed successfully, the self test light flashes ten times. If no disc is inserted into the drive, then motor speed, format, and read tests are skipped. If the other tests are passed, the self test light flashes ten times.

After the remote selftest, the drive is reset and the flexible disc drive appears, to the host, to have just been powered-on.

HP 9134A/B Basic Operation

9134A/B Controls and Indicators
Applying Power to the 9134A/B

NOTE

There is no write protect capability on the Winchester drive. Caution must be used to avoid writing over data stored on the Winchester disc.

CAUTION

KEEP THE FRONT AND BACK OF THE UNIT FREE FROM OBSTRUCTIONS TO AVOID RESTRICTING THE AIR FLOW. FAILURE TO DO SO COULD CAUSE THE UNIT TO OVERHEAT AND RESULT IN DAMAGE TO THE DISC MEMORY.

HP 9134A/B Controls and Indicators

The indicators are located on the front panel. The indicators, as shown in Figure 3-6, are the power-on light, and the Winchester disc drive access light. The disc access light is illuminated whenever the disc is accessed for data storage or retrieval.

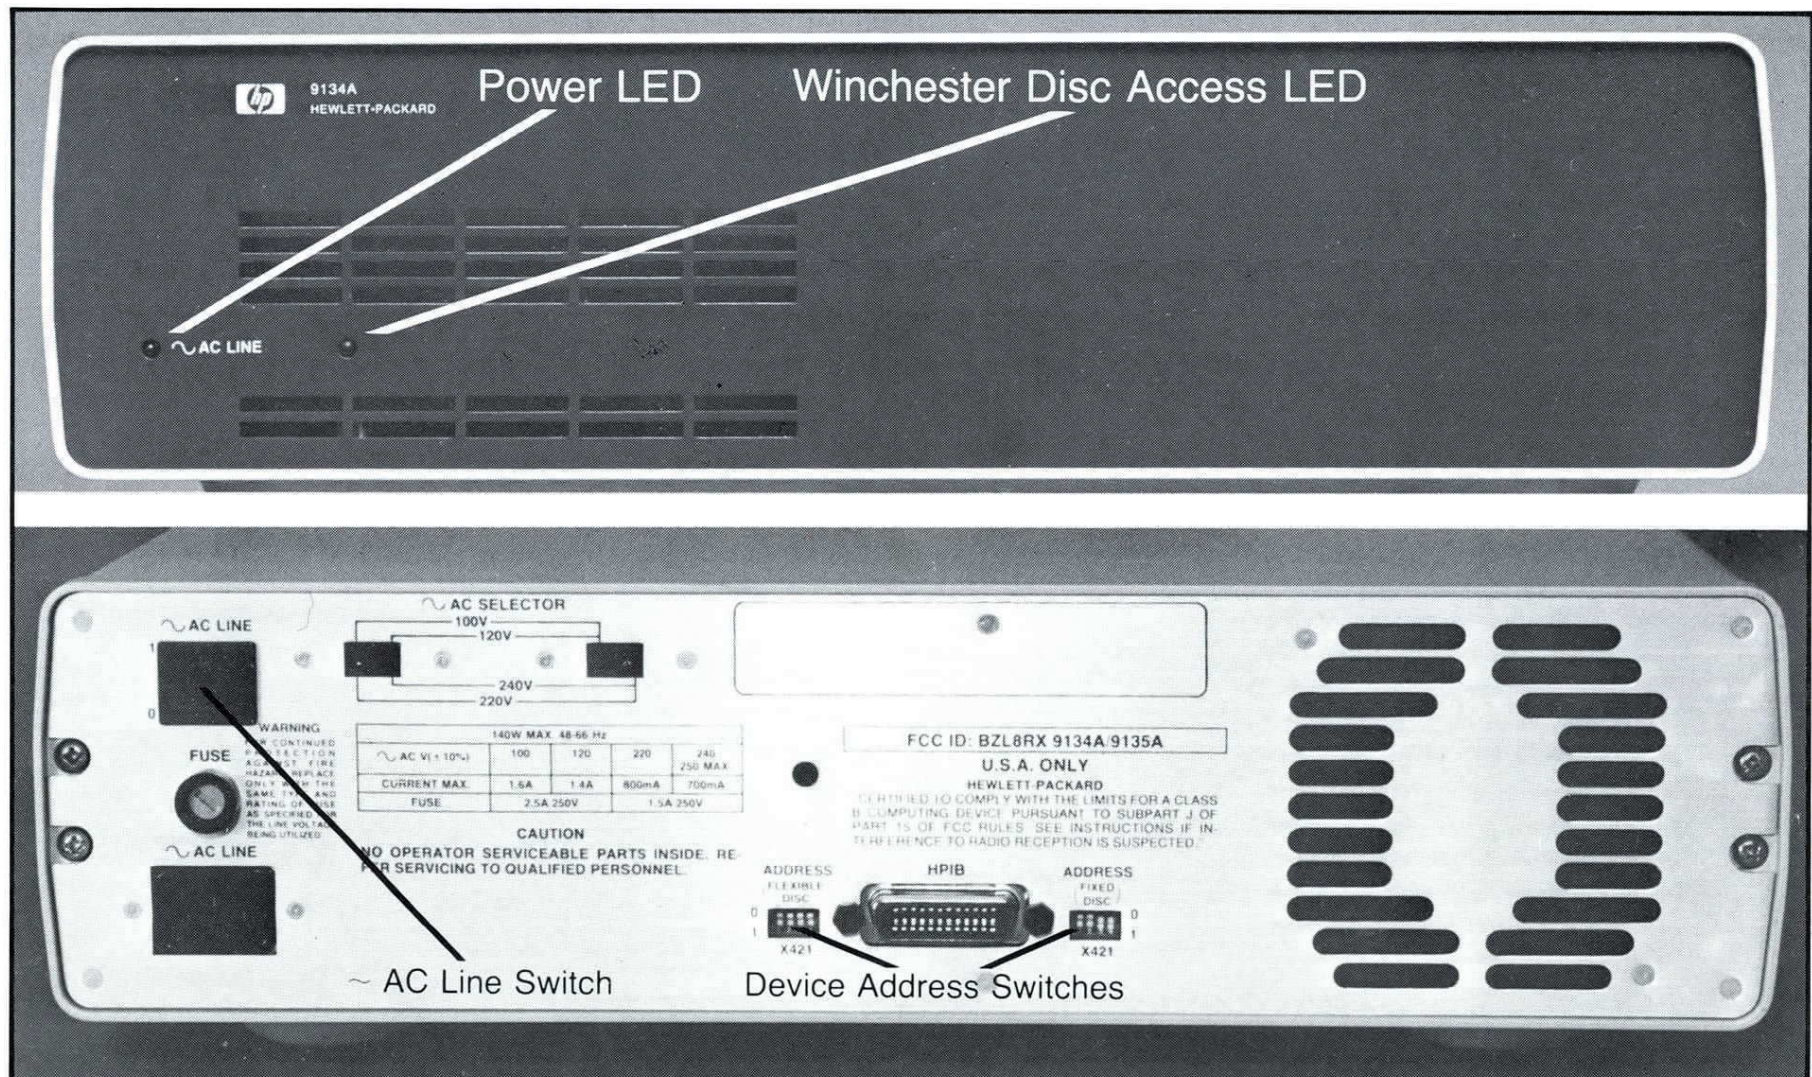


Figure 3-6. 9134A/B Controls and Indicators

Applying Power to the 9134A/B

Before turning the disc memory on, be sure to perform all the procedures in Chapter 2. Locate the ~AC line switch on the rear panel and set it to the "ON" or "1" position. The Winchester disc drive requires about 20 seconds after the application of power before it is ready for operation.

HP 9135A Basic Operation

5 1/4-inch Flexible Disc Usage and Handling
 5 1/4-inch Write Protection
 Inserting and Removing the 5 1/4-inch Flexible Disc
 9135A Controls and Indicators
 Applying Power to the 9135A

CAUTION

KEEP THE FRONT AND BACK OF THE UNIT FREE FROM OBSTRUCTIONS TO AVOID RESTRICTING THE AIR FLOW. FAILURE TO DO SO COULD CAUSE THE UNIT TO OVERHEAT AND RESULT IN DAMAGE TO THE DISC MEMORY.

5 1/4-inch Flexible Disc Usage and Handling

Flexible Disc Media

The removable storage medium used in the HP 9135A is a flexible mylar disc coated with a thin layer of ferromagnetic oxide. The disc is enclosed in a protective plastic jacket with a slot for head access.

Up to 270 Kbytes of data can be stored on each disc. Since some storage is used for a directory, the exact amount available for user storage depends upon the controller and the number of files stored. Refer to the appropriate mainframe mass storage programming or reference manual for details.

Each flexible disc must be initialized before it can be used for data storage. The initialization procedure marks each disc sector, checks for defective tracks, and may establish file directories. Refer to the mainframe programming or reference manual for the correct initialization procedure.

CAUTION

DISC DRIVE PERFORMANCE AND RELIABILITY ARE DEPENDENT ON THE TYPE OF MEDIA USED. DISC DRIVE SPECIFICATIONS CAN BE ASSURED ONLY WHEN USING HP MEDIA. THE USE OF IMPROPER MEDIA CAN RESULT IN PREMATURE DISC FAILURE OR DAMAGE TO THE DISC DRIVE.

ON SOME DISC PRODUCTS HP MAY QUALIFY OTHER NON-HP MEDIA. WHEN TESTED, THIS MEDIA MET HP SPECIFICATIONS. HOWEVER, HP DOES NOT WARRANT OR SUPPORT THIS MEDIA AND CANNOT CONTROL CHANGES IN ITS SPECIFICATIONS OR QUALITY. THE SELECTION AND USE OF SUCH PRODUCTS IS THE CUSTOMER'S RESPONSIBILITY. HP RESERVED THE RIGHT TO EXCLUDE FROM WARRANTY AND MAINTENANCE AGREEMENT COVERAGE ANY REPAIRS WHICH HP REASONABLY DETERMINES OR BELIEVES WERE CAUSED BY THE USE OF MEDIA NOT PROVIDED BY HP. HP WILL UPON REQUEST PROVIDE SUCH REPAIRS ON A TIME AND MATERIAL BASIS.

WARRANTY AND MAINTENANCE AGREEMENT COVERAGE OF REPAIRS NOT CAUSED BY THE USE OF NON-HP MEDIA IS UNAFFECTED.

HP offers a package of ten 5 1/4-inch flexible discs for the HP 9135A (HP part number 92190A). Contact your dealer or nearest HP sales office for instructions on how to order this package.

Operating Cleanliness

The read/write heads must maintain contact with the disc during read and write operations. Figure 3-7 shows various types of contaminants and their size relationships. A contaminant particle hard enough and of the right size may scratch the media oxide coating or the head surface. Even if not hard enough to scratch, it may be large enough to lift the head from the surface, causing data errors or damage to the media.

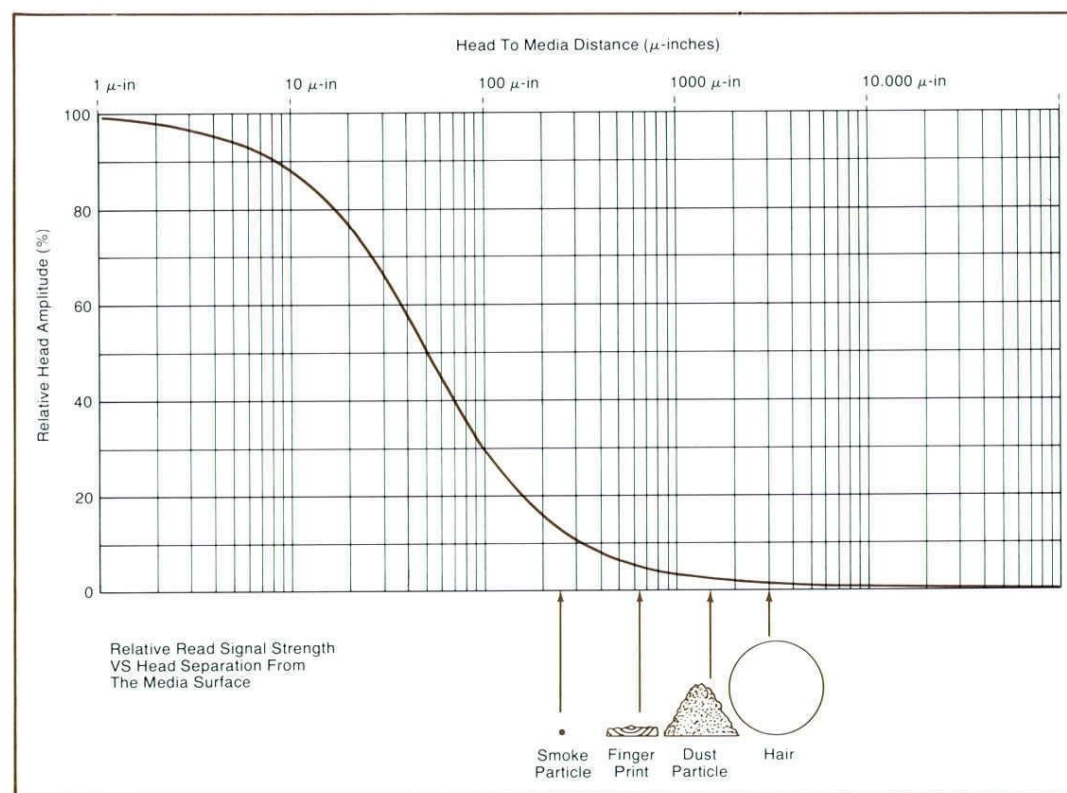


Figure 3-7. 5 1/4-inch Flexible Disc Head/Media Contaminants

Handling Flexible Disc Media

The flexible disc is basically maintenance free, but it is delicate and **MUST BE HANDLED CAREFULLY**. Remember, the disc contains your valuable data and programs and should be treated accordingly. A good rule of thumb is to treat your disc as you would a valuable record album. Here are some specific Do's and Don'ts to avoid loss of data or damage to your discs.


EVEN A LITTLE CARELESSNESS IN DISC HANDLING CAN DRAMATICALLY REDUCE THE LIFE OF THE DISC.

Do

Back Up Discs Frequently


There is always a chance of losing data when mass storage devices are accessed. There are many causes in any computer system—a programming bug, operator error, power failure, or hardware failure. In the case of flexible discs, another mode is possible—media failure from contamination or wearout. **YOUR BEST PROTECTION AGAINST DATA LOSS IS FREQUENT BACKUP OF YOUR FILES.**

Return Disc To Storage Envelope When Not In Use

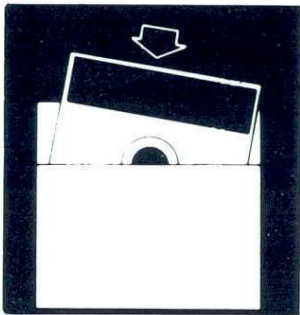


This is the single most important thing to remember about handling your disc because it prolongs disc life by protecting it from dust and scratches. Between uses discs should be stored upright in a dust-free container. The box in which the discs are shipped, or a similar container, is a good choice.

Operate Your System In A Clean Environment

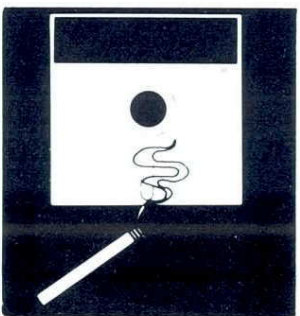

Airborne contaminants and particles accidentally dropped onto the disc will cause your disc to wear out prematurely and may cause unreliable data storage and retrieval operations. Some of the most common contaminants are **DUST, SMOKE, ASHES, ERASER CRUMBS, and BREADCRUMBS**. Chemical vapors may also cause premature wearout.

Maintain Proper Temperature And Humidity

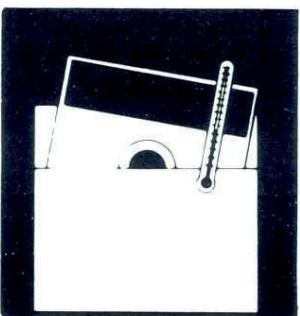


The proper operating range is 10°C (50°F) to 40°C (104°F) and 20% to 80% relative humidity. While temperature is usually easy to control, it may be necessary to make special provisions to keep the humidity in the proper range. Although the disc will continue to operate outside the normal humidity range, it will wear out more quickly and will have a higher error rate.

Avoid Magnetic Fields




The data is stored on the disc magnetically and can be erased by an external magnetic field. Avoid placing a disc near power transformers, magnets or large disc memories.

Remove Disc From Drive When Not In Use

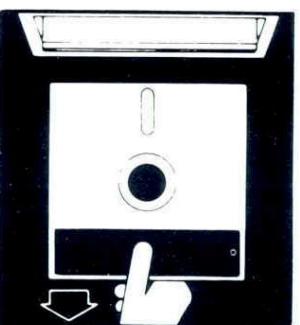

Remove the disc completely from the drive when access is not needed for an extended period of time.

Use A Felt Tip Pen To Label Your Disc

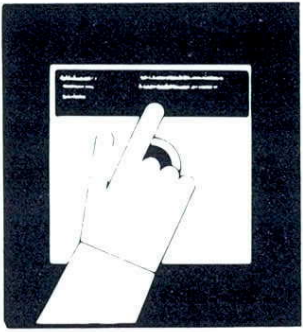


Use a soft felt tip pen to label your disc, and be careful to write only in the label area. Avoid the exposed media while labeling the disc. If possible, write on the large labels provided BEFORE applying them to the disc.

Replace Discs Frequently

Although discs are designed to provide several million revolutions of useful life, they will eventually wear out. The life of a disc is VERY dependent on how carefully it is handled and how much it is used. A disc used sparingly (less than 20 minutes a day) should last over a year. A disc that is used heavily (more than 2 hours a day) should not be expected to last more than 3 months. Discs should be replaced every three months for a heavily used disc or at least once a year, even for lightly used discs. If you ever see visible signs of abrasion on the disc, do an immediate backup and discard the worn disc.


Don't

Do Not Touch The Surface Of The Disc

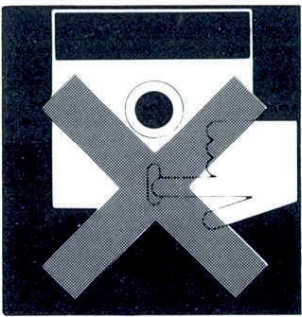

The thickness of a fingerprint is enough to lift the head off the disc and cause errors. The oils in a fingerprint will also collect dust which can cause a disc to wear out sooner than it normally would.

Do Not Bend Or Fold The Disc

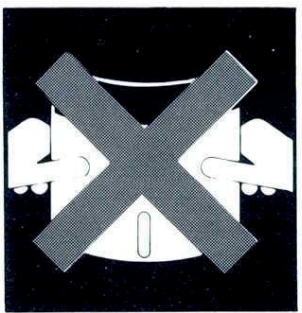

The disc is flexible but will not operate if it is creased. Using ball point pens, rubber bands, paper clips, etc. can crease the disc.

Do Not Try To Clean A Disc

The inside surface of the disc jacket is covered with a special material that cleans the disc as it rotates. Any other method of cleaning may cause solvent damage to the media or scratch the disc, causing loss of data. If a disc becomes dirty or scratched, immediately transfer the data to a new disc and dispose of the old disc.

NOTE

If you ever destroy media (if it looks anything like the photo in Figure 3-8, stop using the drive until it can be serviced. This is extremely important, as continued use of the drive may destroy more media. You should clean the drive heads immediately or call the nearest HP sales and service office (see the list in the back of this manual for the nearest office).

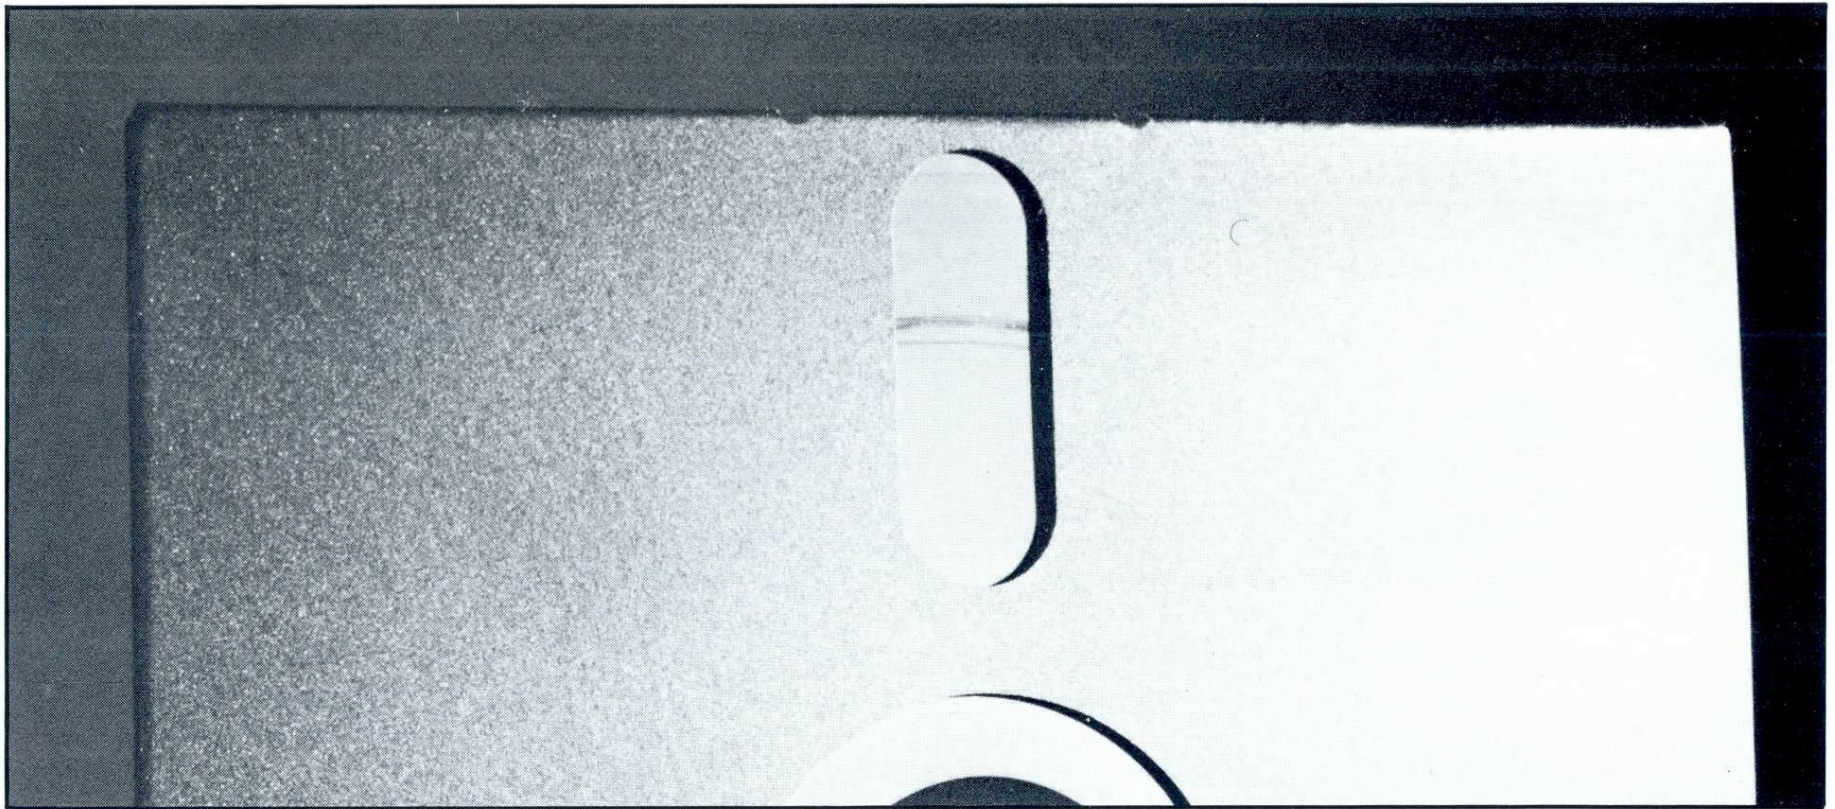


Figure 3-8. Defective 5 1/4-inch Flexible Disc

Write Protection

Data and programs stored on flexible discs can be protected from being written over (Figure 3-9). The disc is “write protected” by covering the write protect slot with a write protect tab (provided with the discs). This prevents you from writing any information on the disc. The disc can, however, be read normally. To write on a protected disc, remove the write protect tab from the write protect slot. Remember, fingerprints can be disastrous to your data, so do not touch the surface of the disc.

NOTE

There is no write protect capability on the Winchester drive. Caution must be used to avoid writing over data stored on the Winchester disc.

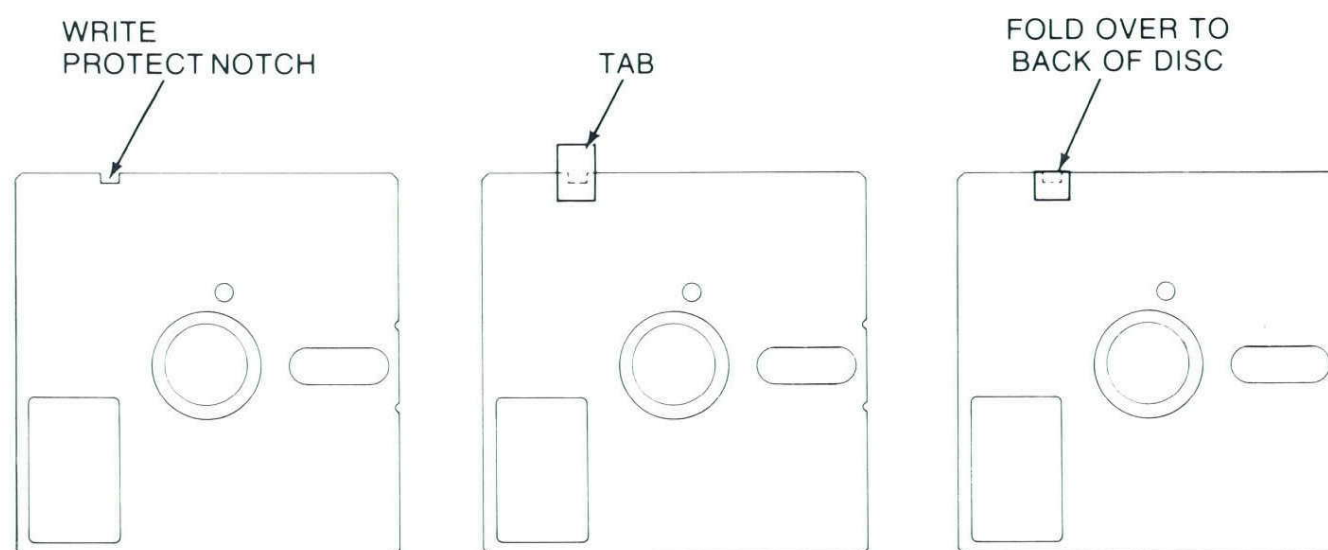


Figure 3-9. 5 1/4-inch Flexible Disc Write Protection

Inserting and Removing the 5 1/4-inch Flexible Disc

Refer to Figure 3-10 for proper insertion of the flexible disc in the HP 9135A.

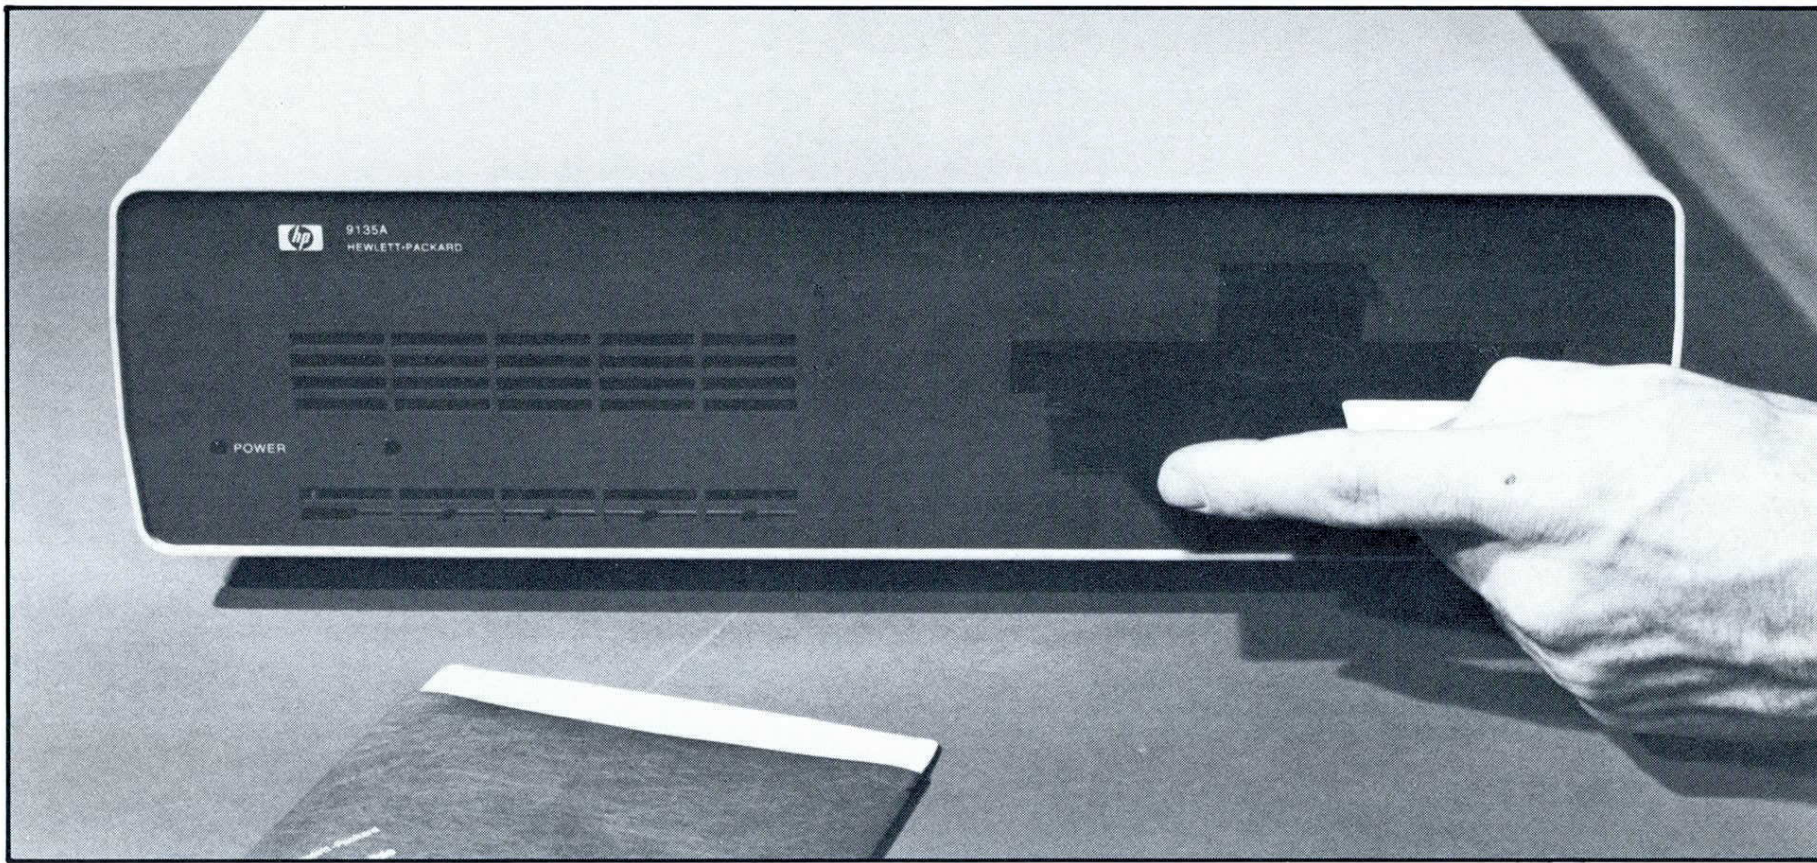


Figure 3-10. 5 1/4-inch Flexible Disc Insertion

To insert and remove flexible discs, perform these steps:

1. Open the door of the drive by pulling up on the drive latch.
2. Remove the disc from its protective envelope and carefully slide it into the drive until you feel it bottom out against the rear of the drive.
3. Close the door by pressing down on the drive latch. Never force the drive latch, as the media can be latched off center within the protective jacket. The disc can be installed with power on without harming the disc.
4. Remove the disc by pulling up on the drive latch and pulling straight out. Always store discs in their protective envelopes to ensure prolonged disc life.

5 1/4-inch Flexible Disc Structure

The surface of the flexible disc is coated with ferromagnetic oxide. Data is stored in the form of binary digits represented by magnetic flux reversals on the disc. Information is stored and retrieved by the disc unit's heads that come in contact with the disc's upper and lower surface.

Information is stored in 35 concentric tracks on each side of the disc (Figure 3-11). The tracks are numbered 0 through 34. Each track is divided into 16 physical records (sectors) numbered 0 through 15. Each record contains 256 bytes (characters) of information. There is an important difference between a physical record and a logical record. A physical record is the smallest accessible unit of data on the disc. It is always the same size (256 bytes). A logical record is one that you define when you create a data file. Its size is variable and depends on the type of data you are storing.

Some of the space on each disc is reserved for the directory. The amount reserved depends on the controlling computer and the number of records in the file directory.

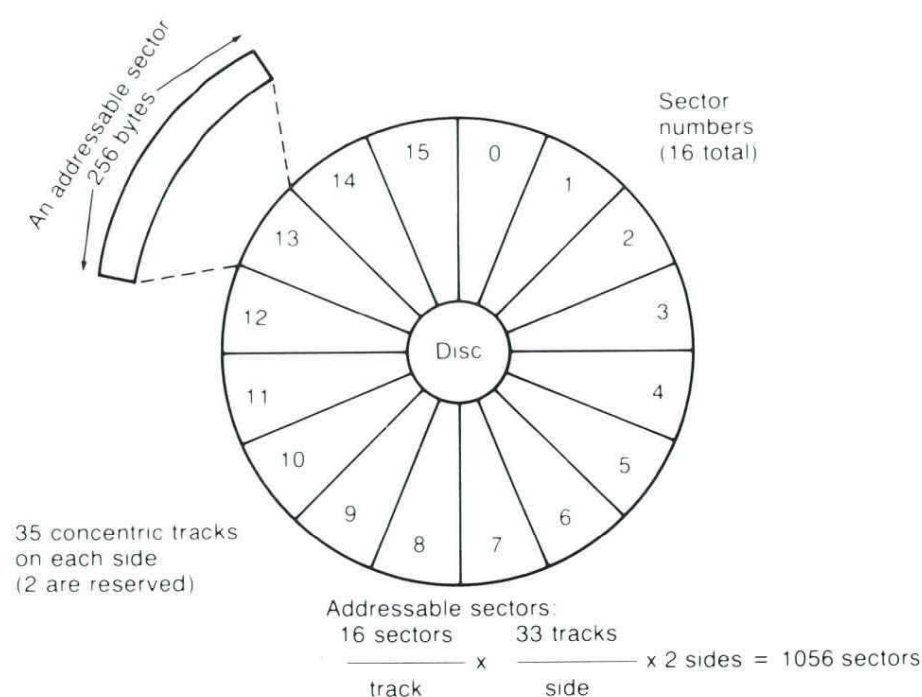


Figure 3-11. 5 1/4-inch Flexible Disc Structure

Controls and Indicators

The indicators are located on the front panel. The indicators, as shown in Figure 3-12, are the power-on light, the Winchester disc drive access light, and flexible disc access light. The disc access lights are illuminated whenever the disc is accessed for data storage or retrieval.

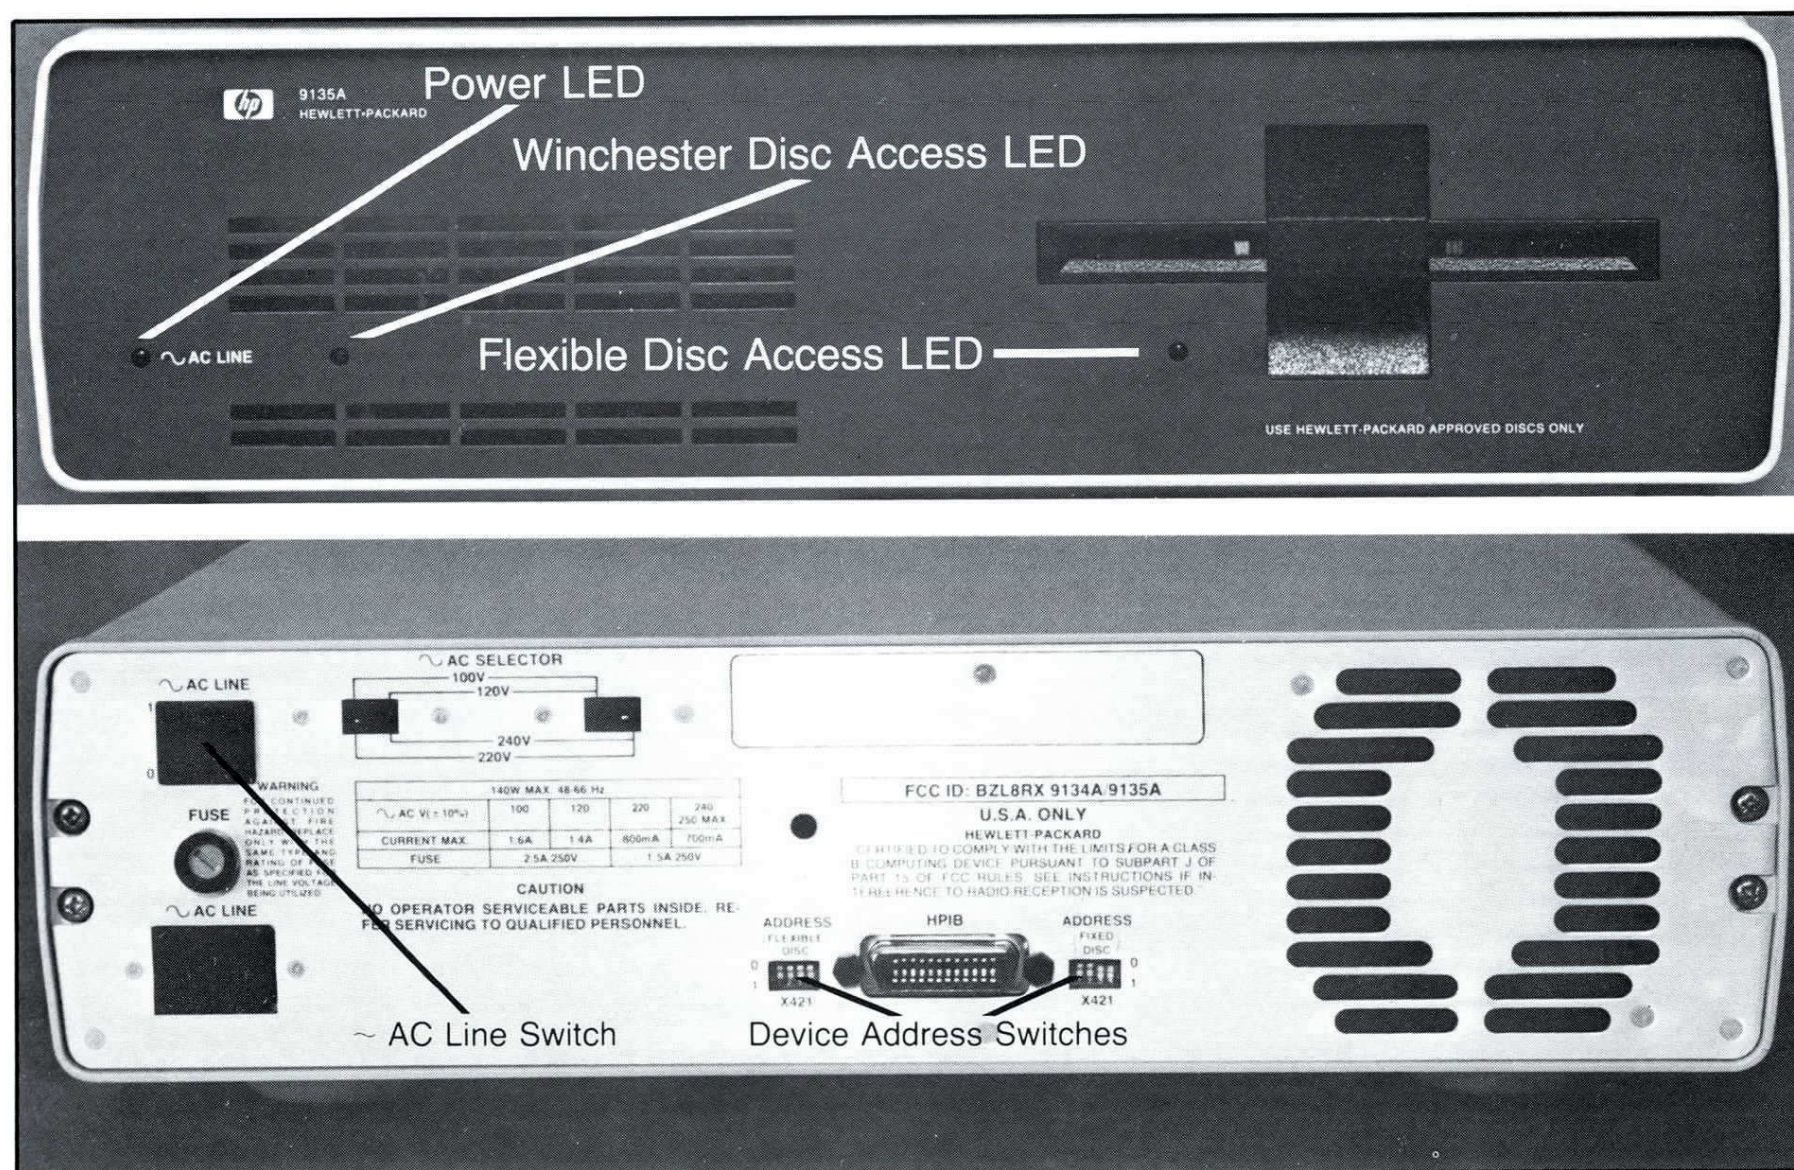


Figure 3-12. 9135A Controls and Indicators

Applying Power

Before turning the disc memory on, be sure to perform all the procedures in Chapter 2. Locate the ~AC line switch on the rear panel and set it to the "On" or "1" position. The Winchester disc drive requires about 20 seconds after the application of power before it is ready for operation.

Chapter 4

Maintenance and Service

- **Maintenance**
- **Service**
- **Warranty**
- **Cleaning the Case**

Maintenance

The disc memories in this family of products do not require regular maintenance.

9133A/B – The load pad on the 3 1/2-inch flexible disc drive will wear out over a period of time and must be replaced. Replacing this pad is a complicated process and should only be attempted by a trained service person.

The maintenance schedule for the load pad depends on the use of the drive. The interval for a drive in normal use is 5 years. A heavily-used drive should have its head load pad replaced every 1 to 2 years. Refer to the section titled “Replace Discs Frequently” for determining your drive usage.

9135A – In the event that media is destroyed in the 5 1/4-inch disc drive, a head cleaning kit is available for removing any debris remaining on the disc drive heads. The part number is 92193A.

The performance and life of the flexible disc heads and the flexible disc media depend directly on how carefully they are handled. Be sure to follow the disc care and handling guidelines presented in Chapter 3 and the environmental restrictions presented in the Specifications Table in Chapter 1.

Service

There are no operator serviceable parts in this family of discs. If you suspect that your disc memory is malfunctioning, call the HP sales office or dealer from which you purchased the unit.

Warranty

The complete warranty statement for the U.S. and Canada is included inside the front cover of this manual. For other countries, contact your local HP sales office or dealer from which you purchased your unit to determine warranty terms.

If you have questions concerning the warranty, please contact an authorized dealer or the HP sales and service office nearest you (see the back of this manual for nearest office).

Cleaning the Case

The disc memory case has been painted with a long-lasting, non-toxic, water-based paint. This paint will preserve the appearance of the unit for many years. To clean the case, use the following instructions to insure that you maintain the quality finish. If the case finish becomes damaged, consult the nearest HP sales and service office for touch-up paints that are available.



CAUTION

CHEMICAL SPRAY-ON CLEANERS USED FOR APPLIANCES AND OTHER HOUSEHOLD AND INDUSTRIAL APPLICATIONS MAY DAMAGE THE CASE FINISH. DO NOT USE CLEANERS THAT CONTAIN AMMONIA, BENZENES, CHLORIDES, OR ABRASIVES.



Dampen a clean, soft, lint-free cloth in a solution of clean water and mild soap. Wipe the soiled areas of the case, ensuring that no cleaning solution gets inside the unit. For cleaning more heavily soiled areas, a solution of 80% clean water and 20% isopropyl alcohol may be used. Wipe the areas that had cleaning solution applied with another clean, soft, lint-free cloth. A non-abrasive eraser may be used to remove pen and pencil marks.

Appendix A

Helpful Hints

Introduction

The following information is provided to help you avoid possible problems when operating the 9133A/B with Series 100 and 200 mainframes. Refer to your mass storage programming or reference manual for more information on the use of the disc memory with your mainframe.

Series 100

In the event that the error "CANNOT IDENTIFY ADDRESS 0" should appear on your Series 100 display, press the "LOAD OPS SYS" softkey (F6) to clear the error. This error will most likely occur on the power-up cycle of the system.

Series 200

(With Basic Operating System 2.1 or greater)

When entering the MSUS (Mass Storage Unit Specifier) on your Series 200 mainframe, specify "HP 9121" rather than "HP 82901" for optimum performance of the 3 1/2-inch flexible disc. When the MSUS is entered, the interleave is automatically set to 4 for the HP 82901, and set to 2 for the HP 9121.

Basic Operating Systems (prior to Basic 2.1) previously supplied with the 9826 and 9836 mainframes, when used with the series 200 mainframe, may not allow you to access the 3 1/2-inch flexible disc drive using the HP 9121 MSUS. The MSUS "HP 82901" will have to be used in these instances.


The Winchester Drive

The Winchester disc drive in the 9133A, 9134A and 9135A emulates a 9895A 8-inch flexible disc drive master and three 8-inch slave drives, each with 1.15 Mbytes of data storage capacity. All references to the 9895A in your mainframe mass storage manuals apply to the Winchester drive.

Option 010 of the 9133A, 9134A, and 9135A provides you with one large 4.8 Mbyte volume. The Winchester drive configured as one volume responds to the same commands as the four-volume version.

NOTE

Be aware that not all operating systems developed for your mainframe will support option 010 of the Winchester drive.

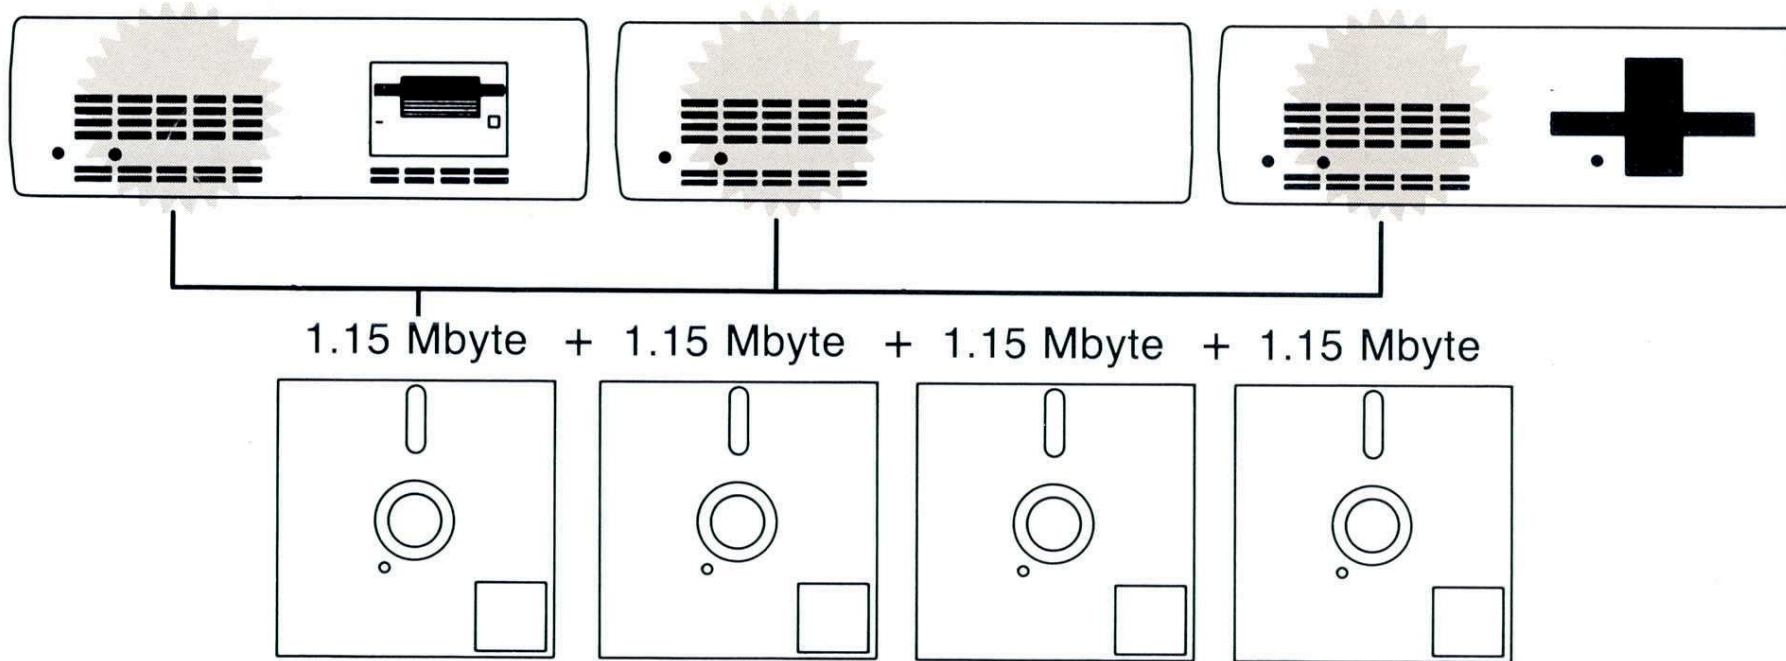

OR
One large 4.8 Mbyte Volume w/Option 010
OR
One large 10 Mbyte Volume (B versions)
Figure A-1. Winchester with and without Option 010

SALES & SUPPORT OFFICES

Arranged alphabetically by country



Product Line Sales/Support Key

Key	Product Line
A	Analytical
CM	Components
C	Computer Systems
CP	Computer Systems Primary Service Responsible Office (SRO)
CS	Computer Systems Secondary SRO
E	Electronic Instruments & Measurement Systems
M	Medical Products
MP	Medical Products Primary SRO
MS	Medical Products Secondary SRO
P	Consumer Calculators
.	Sales only for specific product line
..	Support only for specific product line

IMPORTANT: These symbols designate general product line capability. They do not insure sales or support availability for all products within a line, at all locations. Contact your local sales office for information regarding locations where HP support is available for specific products.

HP distributors are printed in italics.

ANGOLA

Telectra
Empresa Tecnica de Equipamentos
Electricos, S.A.R.L.
R. Barbosa Rodrigues, 41.-I. DT.
Caixa Postal 6487
LUANDA
Tel: 355 15,355 16
A*,E,M,P

ARGENTINA

Hewlett-Packard Argentina S.A.
Avda Santa Fe 2035
Martinez 1640 **BUENOS AIRES**
Tel: 798-6086, 792-1293
Cable: HEWPACKARG
A,E,CP,P

Biotron S.A.C.I.y.M
Avenida Paseo Colon 221
9 Piso
1399 BUENOS AIRES
Tel: 30-4846, 30-1851, 30-8384,
34-9356, 34-0460, 34-4551
Telex: (33)17595 BIONAR
Cable: BIOTRON Argentina
M

Fate S.A. Electronica
Bartolomeu Mitre 833
1036 BUENOS AIRES
Tel: 74-41011, 74-49277,
74-43459
Telex: 18137, 22754
P

AUSTRALIA

Australia Capital Territory
Hewlett-Packard Australia Pty.Ltd.
121 Wollongong Street
FYSHWICK, A.C.T. 2609
Tel: 804-244
Telex: 62650
Cable: HEWPARD Canberra
A*,CM,CS,E,MS,P

New South Wales
Hewlett-Packard Australia Pty.Ltd.
17-23 Talavera Road
NORTH RYDE, N.S.W. 2113
P.O. Box 308
Tel: 887-1611
Telex: 21561
Cable: HEWPARD Sydney
A,CM,CP,E,MS,P

Queensland

Hewlett-Packard Australia Pty.Ltd.
5th Floor
Teachers Union Building
495-499 Boundary Street
SPRING HILL, Queensland 4000
Tel: 229-1544
Telex: 42133
Cable: HEWPARD Brisbane
A,CM,CS,E,MS,P

South Australia

Hewlett-Packard Australia Pty.Ltd.
153 Greenhill Road
PARKSIDE, S.A. 5063
Tel: 272-5911
Telex: 82536
Cable: HEWPARD Adelaide
A*,CM,CS,E,MS,P

Victoria

Hewlett-Packard Australia Pty.Ltd.
31-41 Joseph Street
BLACKBURN, Victoria 3130
Tel: 89-6351
Telex: 31-024
Cable: HEWPARD Melbourne
A,CM,CP,E,MS,P

Western Australia

Hewlett-Packard Australia Pty.Ltd.
141 Stirling Highway
NEDLANDS, W.A. 6009
Tel: 386-5455
Telex: 93859
Cable: HEWPARD Perth
A,CM,CS,E,MS,P

AUSTRIA

Hewlett-Packard Ges.m.b.h.
Veraufsbuero Graz
Grottenhofstrasse 94
A-8052 GRAZ
Tel: 21-5-66
Telex: 32375
CM,C*,E*
Hewlett-Packard Ges.m.b.h.
Wehlstrasse 29
P.O. Box 7
A-1205 VIENNA
Tel: (222) 35-16-210
Telex: 135823/135066
A,CM,CP,E,MS,P

BAHRAIN

Green Salon
P.O. Box 557
BAHRAIN
Tel: 5503
Telex: 88419
P

Wael Pharmacy
P.O. Box 648
BAHRAIN
Tel: 54886, 56123
Telex: 8550 WAEL GJ
M

BANGLADESH

The General Electric Co. of
Bangladesh Ltd.
Magnet House 72
Dilkusha Commercial Area
MOTIJHELL, Dacca 2
Tel: 252415, 252419
Telex: 734
Cable: GECDAC Dacca
A,E,M

BELGIUM

Hewlett-Packard Belgium S.A./N.V.
Boulevard de la Woluwe 100
Woluwedal
B-1200 BRUSSELS
Tel: (02) 762-32-00
Telex: 23-494 B
A,CM,CP,E,MP,P

BRAZIL

Hewlett-Packard do Brasil I.e.C.
Ltda.
Alameda Rio Negro, 750
ALPHAVILLE 06400 Barueri SP
Tel: 421-1311
Telex: 011 23602 HPBR-BR
Cable: HEWPACK Sao Paulo
A,CM,CP,E,MS
Hewlett-Packard do Brasil I.e.C.
Ltda.
Rua Padre Chagas, 32
90000-PORTO ALEGRE-RS
Tel: 22-2998, 22-5621
Cable: HEWPACK Porto Alegre
A*,CM,E,MS,P*
Hewlett-Packard do Brasil I.e.C.
Ltda.
Avenida Epitacio Pessoa, 4664
20000 RIO DE JANEIRO-RJ
Tel: 286-0237
Telex: 021-21905 HPBR-BR
Cable: HEWPACK Rio de Janeiro
A,CM,E,MS,P*

BURUNDI

Typomeca S.P.R.L.
B.P. 553
BUJUMBURA
Tel: 2659
P

CANADA

Alberta
Hewlett-Packard (Canada) Ltd.
210, 7220 Fisher Street S.W.
CALGARY, Alberta T2H 2H8
Tel: (403) 253-2713
Telex: 610-821-6141
A,CM,CP,E*,MS,P*
Hewlett-Packard (Canada) Ltd.
11620A-168th Street
EDMONTON, Alberta T5M 3T9
Tel: (403) 452-3670
Telex: 610-831-2431
A,CM,CP,E,MS,P*

British Columbia

Hewlett-Packard (Canada) Ltd.
10691 Shellbridge Way
RICHMOND, British Columbia V6X
2W7
Tel: (604) 270-2277
Telex: 610-922-5059
A,CM,CP,E*,MS,P*

Manitoba

Hewlett-Packard (Canada) Ltd.
380-550 Century Street
Saint James
WINNIPEG, Manitoba R3H 0L8
Tel: (204) 786-6701
Telex: 610-671-3531
A,CM,CS,E,MS,P*

Nova Scotia

Hewlett-Packard (Canada) Ltd.
P.O. Box 931
900 Windmill Road
DARTMOUTH, Nova Scotia B2Y 3Z6
Tel: (902) 469-7820
Telex: 610-271-4482
CM,CP,E*,MS,P*

Ontario

Hewlett-Packard (Canada) Ltd.
552 Newbold Street
LONDON, Ontario N6E 2S5
Tel: (519) 686-9181
Telex: 610-352-1201
A,CM,CS,E*,MS,P*
Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
Telex: 610-492-4246
A,CM,CP,E,MP,P
Hewlett-Packard (Canada) Ltd.
1020 Morrison Drive
OTTAWA, Ontario K2H 8K7
Tel: (613) 820-6483
Telex: 610-563-1636
A,CM,CP,E*,MS,P*

Quebec

Hewlett-Packard (Canada) Ltd.
275 Hymus Boulevard
POINTE-CLAIRE, Quebec H9R 1G7
Tel: (514) 697-4232
Telex: 610-422-3022
A,CM,CP,E,MP,P*

CHILE

Jorge Calcagni y Cia. Ltda.
Arturo Burhle 065
Casilla 16475
Correo 9, SANTIAGO
Tel: 220222
Telex: JCALCAGNI
A,E,M,P
Olympia (Chile) Ltd.
Rodrico de Araya 1045
Casilla 256-V
SANTIAGO 21
Tel: 25-50-44
Telex: 40-565
P

COLOMBIA

Instrumentacion
H. A. Langebaek & Kier S.A.
Carrera 7 No. 48-75
BOGOTA 2, DE
Apartado Aereo 6287
BOGOTA 1 D.E.
Tel: 269-8877
Telex: 44400
Cable: AARIS Bogota
A,E,M,P
Instrumentacion
H.A. Langebaek & Kier S.A.
Edif. Camacol, Local 105
Carrera 63 NO. 49-A-31
Apartado 54098
MEDELLIN
Tel: 304475
A,E,M,P

COSTA RICA

Cientifica Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159
SAN JOSE
Tel: 24-38-20, 24-08-19
Telex: 2367 GALGUR CR
Cable: GALGUR
A,E,M,P

CYPRUS

Kryponics
19 Gregorios Xenopoulos Street
P.O. Box 1152
NICOSIA
Tel: 45628, 45629
Telex: 3018
E,M,P

CZECHOSLOVAKIA

Vyojova a Provozni Zakladna
Vyzkumnych Ustavu v Bechovicich
CSSR-25097 BECHOVICE U PRAHY
Tel: 89-9341
Telex: 12133
P*
Hewlett-Packard
Obchodni Zastupitelstvi v CSSR
Pisemny styk
Post. schranka 27
CS 118 01 PRAHA 011
Tel: 66-296
Telex: 121353 1HC
A*,C*,E*,M*,P*

DENMARK

Hewlett-Packard A/S
Datavej 52
DK-3460 BIRKEROD
Tel: (02) 81-66-40
Telex: 37409 hpas dk
A,CM,CP,E,MS,P
Hewlett-Packard A/S
Navervej 1
DK-8600 SILKEBORG
Tel: (06) 82-71-66
Telex: 37409 hpas dk
CM,CS,E

ECUADOR

CYEDE Cia. Ltda.
P.O. Box 6423 CCI
Avenida Eloy Alfaro 1749
QUITO
Tel: 450-975, 243-052
Telex: 2548 CYEDE ED
Cable: CYEDE-Quito
A,E,P

Hospitalar S.A.

Casilla 3590
Robles 625
QUITO
Tel: 545-250, 545-122
Cable: HOSPITALAR-Quito
M

EGYPT

Samitro
Sami Amin Trading Office
18 Abdel Aziz Gawish
ABDINE-CAIRO
Tel: 24-932
P
International Engineering Associates
24 Hussein Hegazi Street
Kasr-el-Aini
CAIRO
Tel: 23-829
Telex: 93830
E,M



SALES & SUPPORT OFFICES

Arranged alphabetically by country

EL SALVADOR

IPESA
Boulevard de los Heroes
Edificio Sarah 1148
SAN SALVADOR
Tel: 252787
A*,C,E,M,P

ETHIOPIA

Abdella Abdulmalik
P.O. Box 2635
ADDIS ABABA
Tel: 11-93-40
A,E,M

FINLAND

Hewlett-Packard Oy
Revontulentie 7
SF-02100 **ESPOO** 10
Tel: (90) 455-0211
Telex: 121563 hewpa sf
A,CM,CP,E,MS,P

FRANCE

Hewlett-Packard France
Le Ligoures
Bureau de Vente de
Aix-en-Provence
Place Romee de Villeneuve
F-13090 **AIX-EN-PROVENCE**
Tel: (42) 59-41-02
Telex: 410770F
A,CM,CS,E,MS,P*

Hewlett-Packard France
Bureau de Vente de Lyon
Chemin des Mouilles
Boite Postale No. 162
F-69130 **ECULLY** Cedex
Tel: (78) 33-81-25
Telex: 310617F
A,CM,CP,E,MP

Hewlett-Packard France
Immeuble France Evry
Tour Lorraine
Boulevard de France
F-91035 **EVRY** Cedex
Tel: (60) 77-96-60
Telex: 692315F
CM,E

Hewlett-Packard France
Batiment Ampere
Rue de la Commune de Paris
Boite Postale 300
F-95153 **LE BLANC MESNIL**
Tel: (01) 865-44-52
Telex: 211032F
CM,CP,E,MS

Hewlett-Packard France
Avenue du President JF Kennedy
F-33700 **MERIGNAC**
Tel: (56) 34-00-84
Telex: 550105F
CM,CP,E,MS

Hewlett-Packard France
32 Rue Lothaire
F-57000 **METZ**
Tel: (87) 65-53-50
CM,CS

Hewlett-Packard France
Avenue des Tropiques
Zone d'activites de Courtaboeuf
Boite Postale 6
F-91401 **ORSAY** Cedex
Tel: (1) 907-78-25
Telex: 600048F
A,CM,CP,E,MP,P

Hewlett-Packard France
15 Boulevard De L'Amiral Bruix
F-75016 **PARIS**
Tel: (01) 502-12-20
Telex: 613663F
CM,CP,MS,P

Hewlett-Packard France
2 Allee de la Bourgonette
F-35100 **RENNES**
Tel: (99) 51-42-44
Telex: 740912F
CM,CS,E,MS,P*

Hewlett-Packard France
4 Rue Thomas Mann
F-67033 **STRASSBOURG** Cedex
Tel: (88) 28-56-46
Telex: 890141F
CM,CS,E,MS,P*

Hewlett-Packard France
20 Chemin de la Cepiere
31081 **TOULOUSE** Cedex
Tel: (61) 40-11-12
Telex: 531639F
A,CM,CS,E,P*

Hewlett-Packard France
Bureau de Vente de Lille
Immeuble Pericentre
Rue Van Gogh
F-59650 **VILLENEUVE D'ASO**
Tel: (20) 91-41-25
Telex: 160124F
CM,CS,E,MS,P*

GERMAN FEDERAL REPUBLIC

Hewlett-Packard GmbH
Technisches Buro Berlin
Keithstrasse 2-4
D-1000 **BERLIN** 30
Tel: (030) 24-90-86
Telex: 018 3405 hpbln d
CM,CS,E,P

Hewlett-Packard GmbH
Technisches Buro Boblingen
Herrenberger Strasse 110
D-7030 **BOBLINGEN**
Tel: (07031) 667-1
Telex: 07265739 bbn
A,CM,CP,E,MP,P

Hewlett-Packard GmbH
Technisches Buro Dusseldorf
Emanuel-Leutze-Strasse 1
D-4000 **DUSSELDORF**
Tel: (0211) 5971-1
Telex: 085/86 533 hpdd d
A,CM,CP,E,MS,P

Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Berner Strasse 117
Postfach 560 140
D-6000 **FRANKFURT** 56
Tel: (0611) 50-04-1
Telex: (841) 04 13249 hpffm d
A,CM,CP,E,MP,P

Hewlett-Packard GmbH
Technisches Buro Hamburg
Kapstadtring 5
D-2000 **HAMBURG** 60
Tel: (040) 63804-1
Telex: 021 63 032 hphh d
A,CM,CP,E,MS,P

Hewlett-Packard GmbH
Technisches Buro Hannover
Am Grossmarkt 6
D-3000 **HANNOVER** 91
Tel: (0511) 46-60-01
Telex: 092 3259
A,CM,CS,E,MS,P

Hewlett-Packard GmbH
Technisches Buro Nurnberg
Neumeyerstrasse 90
D-8500 **NURNBERG**
Tel: (0911) 56-30-83
Telex: 0623 860
CM,CS,E,MS,P

Hewlett-Packard GmbH
Technisches Buro Munchen
Eschenstrasse 5
D-8021 **TAUFKIRCHEN**
Tel: (089) 6117-1
Telex: 0524985
A,CM,CP,E,MS,P

GREAT BRITAIN

Hewlett-Packard Ltd.
Trafalgar House
Navigation Road

ALTRINCHAM
Cheshire WA14 1NU
Tel: (061) 928-6422
Telex: 668068
A,CM,CP,E*,MS

Hewlett-Packard Ltd.
Lorrilleaux Bolton Premises
Morely Road, Staplehill
BRISTOL BS16 4QT
Tel: (0272) 570743
CM,CS,MS

Hewlett-Packard Ltd.
14 Wesley Street
CASTLEFORD
Yorkshire WF10 1AE
Tel: (0977) 550016
Telex: 5557355
CM,CP

Hewlett-Packard Ltd.
9 Savoy Street
LONDON WC2R OBA
Tel: 013797700
CM,CP

Hewlett-Packard Ltd.
Fourier House
257-263 High Street
LONDON COLNEY, St. Albans
Herts., AL2 1HA
Tel: (0727) 24400
Telex: 1-89527 16
CM,CP,E,MS

Hewlett-Packard Ltd.
Tradax House, St. Mary's Walk
MAIDENHEAD
Berkshire, SL6 1ST
Tel: (0628) 39151
CM,CP

Hewlett-Packard Ltd.
308/314 Kings Road
READING, Berkshire
Tel: 61022
Telex: 84-80-68
A,CM,E*,MS

Hewlett-Packard Ltd.
Quadrangle
106-118 Station Road
REDHILL, Surrey RH1 IPS
Tel: (0737) 68655
A,CM,CP,E,MS,P

Hewlett-Packard Ltd.
Westminster House
190 Stratford Road
SHIRLEY, SOLIHULL
West Midlands B90-3BJ
Tel: (021) 7458800
Telex: 339105
CM,CP,MS

Hewlett-Packard Ltd.
King Street Lane
WINNERSH, Wokingham
Berkshire RG11 5AR
Tel: (0734) 784774
Telex: HEWPIE WINNERSH 847178
A,CM,E,MP,P

GREECE

Kostas Karayannis
8 Omirou Street
ATHENS 133
Tel: 32-30-303, 32-37-371
Telex: 21 59 62 RKAR GR
E,M,P

"Plaiso"
G. Gerados
24 Stournara Street
ATHENS
Tel: 36-11-160
Telex: 21 9492
P

GUAM

Guam Medical Supply, Inc.
Jay Ese Bldg., Room 210
P.O. Box 8947
TAMUNING 96911
Tel: 6464513
Cable: EARMED Guam
M,P

GUATEMALA

IPESA
Avenida Reforma 3-48
Zona 9
GUATEMALA CITY
Tel: 316627, 314786, 664715
Telex: 4192 Teltro Gu
A,C,E,M,P

HONG KONG

Hewlett-Packard Hong Kong, Ltd.
Room 105, Austin Center
1st Floor
21 Austin Avenue
TST P.O. Box 98524
KOWLOON, Hong Kong
Tel: 3-721143/8
Telex: 36678 HEWPA HX
Cable: PASIALTO Hong Kong
E,CP,P

Hewlett-Packard Hong Kong, Ltd.
11th Floor, Four Seas Building
212 Nathan Road
P.O. Box 795
KOWLOON, Hong Kong
Tel: 3697446
Telex: 36678 HEWPA HX
Cable: HEWPACK Hong Kong
E,CP,P

Schmidt & Co. (Hong Kong) Ltd.
Wing On Centre, 28th Floor
Connaught Road, C.
HONG KONG
Tel: 5-455644
Telex: 74766 SCHMX HX
A,M

ICELAND

Elding Trading Company Inc.
Hafnarholi-Tryggvagotu
P.O. Box 895
IS-REYKJAVIK
Tel: 1-58-20, 1-63-03
M

INDIA

Blue Star Ltd.
Bhavdeep
Stadium Road
AHMEDABAD 380 014
Tel: 42932
Telex: 012-234
Cable: BLUEFROST
E

Blue Star Ltd.
11 Magarath Road
BANGALORE 560 025
Tel: 55668
Telex: 0845-430
Cable: BLUESTAR
A,CM,C,E

Blue Star Ltd.
Band Box House
Prabhadevi
BOMBAY 400 025
Tel: 45-73-01
Telex: 011-3751
Cable: BLUESTAR
A,M

Blue Star Ltd.
Sahas
414/2 Vir Savarkar Marg
Prabhadevi
BOMBAY 400 025
Tel: 46 65 55
Telex: 011-4093
Cable: FROSTBLUE
A,CM,C,E,M

Blue Star Ltd.
7 Hare Street
CALCUTTA 700 001
Tel: 12-01-31
Telex: 021-7655
Cable: BLUESTAR
A,M

Blue Star Ltd.
Meenakshi Mandiram
XXXXV/1379-2 Mahatma Gandhi
Road
COCHIN 682-016
Tel: 32069
Telex: 085-514
Cable: BLUESTAR
A*

Blue Star Ltd.
133 Kodambakkam High Road
MADRAS 600 034
Tel: 82057
Telex: 041-379
Cable: BLUESTAR
A,M

Blue Star Ltd.
Bhandari House, 7th/8th Floors
91 Nehru Place
NEW DELHI 110 024
Tel: 682547, 682970
Telex: 031-2463
Cable: BLUESTAR
A,CM,C,E,M

Blue Star Ltd.
1-1-117/1 Sarojini Devi Road
SECUNDERABAD 500 033
Tel: 70126
Telex: 0155-459
Cable: BLUESTAR
A,E

Blue Star Ltd.
T.C. 7/603 Poornima
Maruthankuzhi
TRIVANDRUM 695 013
Tel: 65799
Telex: 0884-259
Cable: BLUESTAR
E

SALES & SUPPORT OFFICES

Arranged alphabetically by country

3



INDONESIA

BERCA Indonesia P.T.
P.O.Box 496/Jkt.
JL. Abdul Muis 62
JAKARTA
Tel: 373009
Telex: 46748 BERSAL IA
Cable: BERSAL
A,E,M,P
BERCA Indonesia P.T.
J.L. Jimento 23
SURABAYA
Tel: 42027
Telex: 31146 BERSAL S.D.
Cable: BERCACON
A*,E,M,P

IRAQ

Hewlett-Packard Trading S.A.
Mansoor City 9B/3/7
BAGHDAD
Tel: 5514973
Telex: 2455 HEPAIRAQ 1k
CP

IRELAND

Hewlett-Packard Ltd.
Kestrel House
Clanwilliam Place
Lower Mount Street
DUBLIN 2, Eire
Tel: 680424, 680426
Telex: 30439
A,E,P*
Hewlett-Packard Ltd.
2C Avongberg Ind. Est.
Long Mile Road
DUBLIN 12, Eire
Tel: 514322, 514224
Telex: 30439
A*,CP,E,MS,P*
Cardiac Services Ltd.
Kilmore Road
Artane
DUBLIN 5, Eire
Tel: (0J) 315820
M

ISRAEL

Electronics & Engineering Div.
Motorola Israel Ltd.
16 Kremenetski Street
P.O. Box 25016
TEL-AVIV
Tel: 338973
Telex: 33569
Cable: BASTEL Tel-Aviv
A,CM,C,E,M,P

ITALY

Hewlett-Packard Italiana S.p.A.
Via Martin Luther King, 38/III
I-40132 **BOLOGNA**
Tel: (051) 402394
Telex: 511630
CM,CS,E,MS
Hewlett-Packard Italiana S.p.A.
Via G. Di Vittorio 9
I-20063 **CERNUSCO SUL NAVIGLIO**
Tel: (2) 903691
Telex: 334632
A,CM,CP,E,MP,P
Hewlett-Packard Italiana S.p.A.
Via Nuova san Rocco A
Capadimonte, 62A
I-80135 **NAPOLI**
Tel: (081) 7413544
A,CM,CS,E

Hewlett-Packard Italiana S.p.A.
Via Turazza 14
I-35100 **PADOVA**
Tel: (49) 664888
Telex: 430315
A,CM,CS,E,MS
Hewlett-Packard Italiana S.p.A.
Via G. Armellini 10
I-00143 **ROMA**
Tel: (06) 546961
Telex: 610514
A,CM,CS,E,MS,P*
Hewlett-Packard Italiana S.p.A.
Corso Giovanni Lanza 94
I-10133 **TORINO**
Tel: (011) 682245, 659308
Telex: 221079
CM,CS,E

JAPAN

Yokogawa-Hewlett-Packard Ltd.
Inoue Building
1348-3, Asahi-cho
ATSUGI, Kanagawa 243
Tel: (0462) 24-0451
CM,C*,E
Yokogawa-Hewlett-Packard Ltd.
Kumagaya Ashai Building
4 Tusukuba, 3-chome
KUMAGAYA, Saitama 360
Tel: (0485) 24-6563
CM,CS,E
Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Building
4-73, San-no-maru, 1-chome
MITO, Ibaragi 310
Tel: (0292) 25-7470
CM,CS,E
Yokogawa-Hewlett-Packard Ltd.
Sunimoto Seimei Bldg.
11-2 Shimo-sasajima-cho
Nakamura-ku
NAGOYA, Aichi 450
Tel: (052) 581-1850
CM,CS,E,MS
Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg., 4TH FLOOR
54-20 Nishinakajima, 5-chome
Yodogawa-ku, Osaka-shi
OSAKA, 532
Tel: (06) 304-6021
Telex: 523-3624 YHPOSA
A,CM,CP,E,MP,P*

Yokogawa-Hewlett-Packard Ltd.
29-21 Takaido-Higashi 3-chome
Suginami-ku **TOKYO 168**
Tel: (03) 331-6111
Telex: 232-2024 YHPTOK
Cable: YUHPMARKET TOK23 724
A,CM,CP,E,MP,P*
Yokogawa-Hewlett-Packard Ltd.
Tanigawa Building
2-24-1 Tsuruya-cho
Kanagawa-ku
YOKOHAMA, Kanagawa 221
Tel: (045) 312-1252
Telex: 382-3204 YHP YOK
CM,CS,E

JORDAN

Mouasher Cousins Company
P.O. Box 1387
AMMAN
Tel: 21456, 24907, 39907
Telex: 21456 SABCO JO
E,M,P

KENYA

International Aeradio (E.A.) Ltd.
P.O. Box 95221
MOMBASA
M
ADCOM Ltd., Inc.
City House, Wabera Street
P.O. Box 30635
NAIROBI
Tel: 331955
Telex: 22639
A*,E,M
International Aeradio (E.A.) Ltd
P.O. Box 19012
Nairobi Airport
NAIROBI
Tel: 336055, 336056
Telex: 22201, 22301
M

KOREA

Samsung Electronics
C.P.O. 2775
SEOUL
Tel: 8334311, 8330002, 8330006
Telex: SAMSAN 27364
A,C,E,M,P

KUWAIT

Al-Khalidya Trading & Contracting
P.O. Box 830 Safat
KUWAIT
Tel: 42-4910, 41-1726
Telex: 2481 Areeg kt
A,E,M
Photo & Cine Equipment
P.O. Box 270 Safat
KUWAIT
Tel: 42-2846, 42-3801
Telex: 2247 Matin
P

LUXEMBOURG

Hewlett-Packard Belgium S.A./N.V.
Boulevard de la Woluwe 100
Woluwedal
B-1200 **BRUSSELS**
Belgium
Tel: 762/32/00
Telex: 23-494 paloben bru
A,CP,E,MP,P

MALAYSIA

Hewlett-Packard Sales (Malaysia)
Sdn. Bhd.
Suite 2.21/2.22
Bangunan Angkasa Raya
Jalan Ampang
KUALA LUMPUR
Tel: 483544
Telex: MA31011
A,CP,E,MP,P*
Protel Engineering
P.O. Box 1917
Lot 319, Satok Road
Kuching, **SARAWAK**
Tel: 53544
Telex: MA 70904 PROMAL
Cable: PROTELENG
A,E,M

MEXICO

Hewlett-Packard Mexicana, S.A. de
C.V.
Av. Periferico Sur No. 6501
Tepepan, Xochimilco
MEXICO CITY 23, D.F.
Tel: (905) 676-4600
Telex: 017-74-507
A,CP,E,MS,P

Hewlett-Packard Mexicana, S.A. de
C.V.
Rio Volga #600 Colonia del Valle
MONTERREY, N.L.
Tel: 78-42-93, 78-42-40, 78-42-41
Telex: 038-410
CS

MOROCCO

Dolbeau
81 rue Karatchi
CASABLANCA
Tel: 3041-82, 3068-38
Telex: 23051, 22822
E
Gerep
2 rue d'Agadir
Boite Postale 156
CASABLANCA
Tel: 272093, 272095
Telex: 23 739
P

MOZAMBIQUE

A.N. Goncalves Ltd.
162, 1° Apt. 14 Av. D. Luis
Caixa Postal 107
MAPUTO
Tel: 27091, 27114
Telex: 6-203 NEGON Mo
Cable: NEGON
A,E,M,P

NETHERLANDS

Hewlett-Packard Nederland B.V.
Van Heuven Goedhartlaan 121
NL1181KK **AMSTELVEEN**
Tel: (20) 47-20-21
Telex: 13 216
A,CM,CP,E,MP,P
Hewlett-Packard Nederland B.V.
Bongerd 2
NL2906 VK **CAPELLE A/D IJssel**
Tel: (10) 51-64-44
Telex: 21261 hepac nl
A,CM,CP

NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.
169 Manukau Road
P.O. Box 26-189
Epsom, **AUCKLAND**
Tel: 68-7159
Cable: HEWPACK Auckland
CM,CS,E,P*
Northrop Instruments & Systems Ltd.
Eden House, 44 Khyber Pass Road
P.O. Box 9682
Newmarket, **AUCKLAND**
Tel: 794-091
A,M
Northrop Instruments & Systems Ltd.
Terrace House, 4 Oxford Terrace
P.O. Box 8388
CHRISTCHURCH
Tel: 64-165
A,M
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
P.O. Box 9443
Kilbirnie, **WELLINGTON 3**
Tel: 877-199
Cable: HEWPACK Wellington
CM,CP,E,P

Northrop Instruments & Systems Ltd.
Sturdee House
85-87 Ghuznee Street
P.O. Box 2406
WELLINGTON
Tel: 850-091
Telex: NZ 31296
A,M

NIGERIA

The Electronics Instrumentations Ltd.
N6B/770 Oyo Road
Oluseun House
P.M.B. 5402
IBADAN
Tel: 461577
Telex: 31231 TEIL NG
A,E,M,P
The Electronics Instrumentations Ltd.
144 Agege Motor Road, Mushin
P.O. Box 6645
Mushin, **LAGOS**
A,E,M,P

NORTHERN IRELAND

Cardiac Services Company
95A Finaghy Road South
BELFAST BT 10 OBY
Tel: (0232) 625-566
Telex: 747626
M

NORWAY

Hewlett-Packard Norge A/S
Nygaardsgaten 114
P.O. Box 4210
N-5013 Nygaardsgaten, **BERGEN**
Tel: (05) 21-97-33
Telex: 16621 hpnas n
CM,CS,E
Hewlett-Packard Norge A/S
Oestendalen 18
P.O. Box 34
N-1345 **OESTERAAS**
Tel: (02) 17-11-80
Telex: 16621 hpnas n
A*,CM,CP,E,MS,P

OMAN

Khimji Ramdas
P.O. Box 19
MUSCAT
Tel: 72-22-17, 72-22-25
Telex: 3289 BROKER MB MUSCAT
P

PAKISTAN

Mushko & Company Ltd.
10, Bazar Road
Sector G-6/4
ISLAMABAD
Tel: 28624
Cable: FEMUS Rawalpindi
A,E,M,P
Mushko & Company Ltd.
Oosman Chambers
Abdullah Haroon Road
KARACHI 0302
Tel: 511027, 512927
Telex: 2894 MUSHKO PK
Cable: COOPERATOR Karachi
A,E,M,P*



SALES & SUPPORT OFFICES

Arranged alphabetically by country

PANAMA

Electronico Balboa, S.A.
Apartado 4929
Panama 5
Calle Samuel Lewis
Edificio "Alfa" No. 2
CIUDAD DE PANAMA
Tel: 64-2700
Telex: 3480380
Cable: ELECTRON Panama
A,E,M,P
Foto Internacional, S.A.
P.O. Box 2068
Free Zone of Colon
COLON 3
Tel: 45-2333
Telex: 3485126
Cable: IMPORT COLON/Panama
P

PERU

Compania Electro Medica S.A.
Los Flamencos 145, San Isidro
Casilla 1030
LIMA I
Tel: 41-4325
Telex: Pub. Booth 25424 SISIDRO
Cable: ELMED Lima
A,E,M,P

PHILIPPINES

The Online Advanced Systems
Corporation
Rico House, Amorsolo Cor. Herrera
Street
Legaspi Village, Makati
P.O. Box 1510
Metro **MANILA**
Tel: 85-35-81, 85-34-91, 85-32-21
Telex: 3274 ONLINE
A,C,E,M
Electronic Specialists and
Proponents Inc.
690-B Epifanio de los Santos
Avenue
Cubao, **QUEZON CITY**
P.O. Box 2649 Manila
Tel: 98-96-81, 98-96-82, 98-96-83
Telex: 742-40287
Cable: ESPINC MANILA
P

POLAND

Buro Informacji Technicznej
Hewlett-Packard
Ul Stawki 2, 6P
PL00-950 **WARSZAWA**
Tel: 39-59-62, 39-67-43
Telex: 81 24 53
A,C*,E*,M*,P*

PORTUGAL

Telectra-Empresa Tecnica de
Equipamentos Electricos S.a.r.l.
Rua Rodrigo da Fonseca 103
P.O. Box 2531
P-LISBON 1
Tel: (19) 68-60-72
Telex: 12598
A,C,E,P
Mundinter
Intercambio Mundial de Comercio
S.a.r.l.
P.O. Box 2761
Avenida Antonio Augusto de Aguiar
138
P-LISBON
Tel: (19) 53-21-31, 53-21-37
Telex: 16691 munter p
M

PUERTO RICO

Hewlett-Packard Puerto Rico
Calle 272
#203 Urb. Country Club
RIO PIEDRAS, Puerto Rico 00924
Tel: (809) 762-7255
Telex: 345 0514
A,CP

QATAR

Business Communications Quatar
P.O. Box 3656
DOHA
Tel: 5851
Telex: 4454
P
Nasser Trading & Contracting
P.O. Box 1563
DOHA
Tel: 22170
Telex: 4439 NASSER
M

RHODESIA

Field Technical Sales
45 Kelvin Road North
P.O. Box 3548
SALISBURY
Tel: 705231
Telex: RH 4122
A,E,M,P

ROMANIA

Hewlett-Packard Reprezentanta
Boulevard Nicolae Balcescu 16
BUCURESTI
Tel: 130725
Telex: 10440
C*,E*

SAUDI ARABIA

Modern Electronic Establishment
P.O. Box 193
AL-KHOBAR
Tel: 44-678, 44-813
Telex: 670136
Cable: ELECTA AL-KHOBAR
C,E,M,P
Modern Electronic Establishment
P.O. Box 1228, Baghdadiyah Street
JEDDAH
Tel: 27-798
Telex: 401035
Cable: ELECTA JEDDAH
C,E,M,P
Modern Electronic Establishment
P.O. Box 2728
RIYADH
Tel: 62-596, 66-232
Telex: 202049
C,E,M,P

SCOTLAND

Hewlett-Packard Ltd.
Royal Bank Buildings
Swan Street
BRECHIN, Angus, Scotland
Tel: 3101, 3102
CM,CS
Hewlett-Packard Ltd.
SOUTH QUEENSFERRY
West Lothian, EH30 9TG
GB-Scotland
Tel: (031) 3311000
Telex: 72682
CM,CP,E,MS

SINGAPORE

Hewlett-Packard Singapore (Pte.)
Ltd.
6th Floor, Inchcape House
450-452 Alexandra Road
SINGAPORE 0511
P. O. Box 58 Alexandra Post Office
Singapore 9115
Tel: 631788
Telex: HPSGSO RS 32409
Cable: HEWPACK, Singapore
A,CP,E,MS,P

SOUTH AFRICA

Hewlett-Packard South Africa (Pty.)
Ltd.
Pine Park Center
Forest Drive, Pinelands
CAPE PROVINCE, 7405
P.O. Box 120
Howard Place
CAPE PROVINCE 7450
Tel: 53-7955, 53-7956, 53-7957,
53-7958, 53-7959
Telex: 57-0006
A,CM,CS,E,MS,P

Hewlett-Packard South Africa (Pty.)
Ltd.
P.O. Box 37066
Overport
DURBAN 4067
Tel: 28-4178, 28-4179, 28-4110
CM,CS

Hewlett-Packard South Africa (Pty.)
Ltd.
Hewlett-Packard Centre
Daphne Street
Private Bag Wendywood
SANDTON 2144
Tel: 802-5111
Telex: 84782
Cable: HEWPACK Johannesburg
A,CM,CP,E,MS,P

SPAIN

Hewlett-Packard Espanola S.A.
c/Entenza 312
E-BARCELONA 29
Tel: (3) 322-24-51, 321-73-54
Telex: 52603 hpbe e
A,CM,CP,E,MS,P

Hewlett-Packard Espanola S.A.
c/San Vicente s/n
Edificio Albia II, 7°B
E-BILBAO 1
Tel: 423-82-06, 423-83-06
A,CM,E,MS

Hewlett-Packard Espanola S.A.
Calle Jerez 3
E-MADRID 16
Tel: (1) 458-2600
Telex: 23515 hpe
A,CM,E,MP,P

Hewlett-Packard Espanola S.A.
Colonia Mirasierra
Edificio Juban
c/o Costa Brava 13
E-MADRID 34
Tel: (1) 734-8061, 734-1162
CM,CP

Hewlett-Packard Espanola S.A.
Av Ramon y Cajal 1
Edificio Sevilla 1, Planta 9
E-SEVILLA 5
Tel: (954) 64-44-54, 64-44-58
A,CM,CS,MS,P

Hewlett-Packard Espanola S.A.
C/Ramon Gordillo 1 (Entlo.)
E-VALENCIA 10
Tel: (96) 361-1354
CM,CS,P

SRI LANKA

Metropolitan Agencies Ltd.
209/9 Union Place
COLOMBO 2
Tel: 35947
Telex: 1377METROLTD CE
Cable: METROLTD
A,E,M,P

SUDAN

Radison Trade
P.O. Box 921
KHARTOUM
Tel: 44048
Telex: 375
A,E,M

SURINAM

Surtel Radio Holland N.V.
Grote Hofstr. 3-5
P.O. Box 155
PARAMARIBO
Tel: 72118, 77880
Cable: Surtel
E,M

SWEDEN

Hewlett-Packard Sverige AB
Enighetsvagen 3
S-16120 **BROMMA**
Tel: (08) 730-0550
Telex: (854) 10721 MESSAGES
Cable: MEASUREMENTS
A,CM,CP,E,MS,P

Hewlett-Packard Sverige AB
Sunnanvagen 14K
S-22226 **LUND**
Tel: (46) 13-69-79
CM,CS

Hewlett-Packard Sverige AB
Vastra Vintergatan 9
S-70344 **OREBRO**
Tel: (019) 14-07-20
CM,CS

Hewlett-Packard Sverige AB
Frotallsgatan 30
S-42132 **VASTRA-FROLUNDA**
Tel: (031) 49-09-50
Telex: 854 10721
CM,CS,E,P

SWITZERLAND

Hewlett-Packard (Schweiz) AG
Clarastrasse 12
CH-4058 BASEL
Tel: (061) 33-59-20
A,CM

Hewlett-Packard (Schweiz) AG
Bahnhofstrasse 44
3018 **BERN**
Tel: (031) 56-24-22
CM

Hewlett-Packard (Schweiz) AG
47 Avenue Blanc
CH-1202 GENEVA
Tel: (022) 32-30-05, 32-48-00
CM,CP

Hewlett-Packard (Schweiz) AG
29 Chemin Chateau Bloc
CH-1219 LE LIGNON-GENEVA
Tel: (022) 96-03-22
Telex: 27333 hpag ch
Cable: HEWPACKAG Geneva
A,CM,E,MS,P

Hewlett-Packard (Schweiz) AG
Zurcherstrasse 20
P.O. Box 307
CH-8952 SCHLIEREN-Zurich
Tel: (01) 730-5240, 730-1821
Telex: 53933 hpag ch
Cable: HPAG CH
A,CM,CP,E,MS,P

SYRIA

General Electronic Inc.
Nuri Basha-Ahnaf Ebn Kays Street
P.O. Box 5781
DAMASCUS
Tel: 33-24-87
Telex: 11215 ITIKAL
Cable: ELECTROBOR DAMASCUS
E

Sawah & Co.
Place Azme
Boite Postale 2308
DAMASCUS
Tel: 16-367, 19-697, 14-268
Telex: 11304 SATACO SY
Cable: SAWAH, DAMASCUS
M

Suleiman Hilal El Mlawi
P.O. Box 2528
Mamoun Bitar Street, 56-58
DAMASCUS
Tel: 11-46-63
Telex: 11270
Cable: HILAL DAMASCUS
M

TAIWAN

Hewlett-Packard Far East Ltd.
Kaohsiung Branch
68-2, Chung Cheng 3rd Road
Shin Shin, Chu
KAOHSIUNG
Tel: 241-2318, 261-3253
CS,E,MS,P
Hewlett-Packard Far East Ltd.
Taiwan Branch
Bank Tower, 5th Floor
205 Tun Hwa North Road
TAIPEI
Tel: 751-0404
Cable: HEWPACK Taipei
A*,CP,E,MS,P
San Kwang Instruments Co., Ltd.
20 Yung Sui Road

TAIPEI
Tel: 361-5446, 361-5447,
361-5448, 361-5449
Telex: 22894 SANKWANG
Cable: SANKWANG Taipei
A

TANZANIA

International Aeradio (E.A.) Ltd.
P.O. Box 861
DAR ES SALAAM
Tel: 21251
Telex: 41030
M

THAILAND

UNIMESA Co. Ltd.
Elcom Research Building
2538 Sukhumvit Ave.
Bangchak, **BANGKOK**
Tel: 393-2387, 393-0338
Telex: TH81160, 82938, 81038
Cable: UNIMESA Bangkok
A,E,M
Bangkok Business Equipment Ltd.
5/5-6 Dejo Road
BANGKOK
Tel: 234-8670, 234-8671,
234-8672, 234-8673
Cable: BUSIQUIPT Bangkok
P

TRINIDAD & TOBAGO

CARTEL
Caribbean Telecoms Ltd.
P.O. Box 732
50/A Jerningham Avenue
PORT-OF-SPAIN
Tel: 62 4214, 62 4213
A,E,M,P

SALES & SUPPORT OFFICES

Arranged alphabetically by country

5



TUNISIA

Tunisie Electronique
31 Avenue de la Liberte
TUNIS

Tel: 280-144

E,P

Corema

1 ter. Av. de Carthage

TUNIS

Tel: 253-821

Telex: 12319 CABAM TN

M

TURKEY

Teknim Company Ltd.

Riza Sah Pehlivi

Caddesi No. 7

Kavaklidere, ANKARA

Tel: 275800

Telex: 42155

E

UNITED ARAB EMIRATES

Emilac Ltd.

P.O. Box 2711

ABU DHABI

Tel: 331370, 331371

E,M,P

Emilac Ltd.

P.O. Box 1641

SHARJAH

Tel: 354121, 354123

Telex: 68136

E,M,P

UNITED KINGDOM

see: GREAT BRITAIN

NORTHERN IRELAND

SCOTLAND

UNITED STATES OF AMERICA

Alabama

Hewlett-Packard Co.
700 Century Park South
Suite 128

BIRMINGHAM, AL 35226

Tel: (205) 822-6802

CM,CS,MP

Hewlett-Packard Co.

P.O. Box 4207

8290 Whitesburg Drive, S.E.

HUNTSVILLE, AL 35802

Tel: (205) 881-4591

CM,CP,E,M*

Alaska

Hewlett-Packard Co.

1577 "C" Street, Suite 252

ANCHORAGE, AK 99510

Tel: (206) 454-3971

CM,CS**

Arizona

Hewlett-Packard Co.

2336 East Magnolia Street

PHOENIX, AZ 85034

Tel: (602) 273-8000

A,CM,CP,E,MS

Hewlett-Packard Co.

2424 East Aragon Road

TUCSON, AZ 85706

Tel: (602) 889-4661

CM,CS,E,MS**

Arkansas

Hewlett-Packard Co.

P.O. Box 5646

Brady Station

LITTLE ROCK, AR 72215

Tel: (501) 376-1844

CM,MS

California

Hewlett-Packard Co.

7621 Canoga Avenue

CANOGA PARK, CA 91304

Tel: (213) 702-8300

A,CM,CP,E,P

Hewlett-Packard Co.

1579 W. Shaw Avenue

FRESNO, CA 93771

Tel: (209) 224-0582

CM,MS

Hewlett-Packard Co.

1430 East Orangethorpe

FULLERTON, CA 92631

Tel: (714) 870-1000

CM,CP,E,MP

Hewlett-Packard Co.

5400 W. Rosecrans Boulevard

LOS ANGELES, CA 90260

Tel: (213) 970-7500

CM,CP,MP

Hewlett-Packard Co.

3939 Lankersham Blvd.

NORTH HOLLYWOOD, CA 91604

Tel: (213) 877-1282

regional headquarters

Hewlett-Packard Co.

3200 Hillview Avenue

PALO ALTO, CA 94304

Tel: (415) 857-8000

CM,CP,E

Hewlett-Packard Co.

646 W. North Market Boulevard

SACRAMENTO, CA 95834

Tel: (916) 929-7222

A*,CM,CS,E,MS

Hewlett-Packard Co.

9606 Aero Drive

P.O. Box 23333

SAN DIEGO, CA 92123

Tel: (714) 279-3200

CM,CP,E,MP

Hewlett-Packard Co.

363 Brookhollow Drive

SANTA ANA, CA 92705

Tel: (714) 641-0977

A,CM,C*,E

Hewlett-Packard Co.

3003 Scott Boulevard

SANTA CLARA, CA 95050

Tel: (408) 988-7000

A,CM,CP,E,MP

Hewlett-Packard Co.

454 Carlton Court

SO. SAN FRANCISCO, CA 94080

Tel: (415) 877-0772

CM,CP

Colorado

Hewlett-Packard Co.

5600 DTC Parkway

ENGLEWOOD, CO 80110

Tel: (303) 771-3455

A,CM,CP,E,MS

Connecticut

Hewlett-Packard Co.

47 Barnes Industrial Road South

P.O. Box 5007

WALLINGFORD, CT 06492

Tel: (203) 265-7801

A,CM,CP,E,MS

Florida

Hewlett-Packard Co.

P.O. Box 24210

2727 N.W. 62nd Street

FORT LAUDERDALE, FL 33309

Tel: (305) 973-2600

CM,CP,E,MP

Hewlett-Packard Co.

4080 Woodcock Drive, #132

Brownell Building

JACKSONVILLE, FL 32207

Tel: (904) 398-0663

CM,C*,E*,MS**

Hewlett-Packard Co.

P.O. Box 13910

6177 Lake Ellenor Drive

ORLANDO, FL 32809

Tel: (305) 859-2900

A,CM,CP,E,MS

Hewlett-Packard Co.

P.O. Box 12826

Suite 5, Building 1

Office Park North

PENSACOLA, FL 32575

Tel: (904) 476-8422

A,CM,MS

Hewlett-Packard Co.

110 South Hoover, Suite 120

TAMPA, FL 33609

Tel: (813) 872-0900

A*,CM,CS,E*,M*

Georgia

Hewlett-Packard Co.

P.O. Box 105005

450 Interstate N. Parkway

ATLANTA, GA 30339

Tel: (404) 955-1500

Telex: 810-766-4890

A,CM,CP,E,MP

Hewlett-Packard Co.

Executive Park Suite 306

P.O. Box 816

AUGUSTA, GA 30903

Tel: (404) 736-0592

CM,MS

Hewlett-Packard Co.

P.O. Box 2103

1172 N. Davis Drive

WARNER ROBINS, GA 31098

Tel: (912) 922-0449

CM,E

Hawaii

Hewlett-Packard Co.

2875 South King Street

HONOLULU, HI 96826

Tel: (808) 955-4455

A,CM,CS,E,MS

Idaho

Hewlett-Packard Co.

11311 Chinden Boulevard

BOISE, ID 83707

Tel: (208) 376-6000

CM,CS,M*

Illinois

Hewlett-Packard Co.

211 Prospect Road

BLOOMINGTON, IL 61701

Tel: (309) 663-0383

CM,CS,MS**

Hewlett-Packard Co.

1100 31st Street

DOWNERS GROVE, IL 60515

Tel: (312) 960-5760

CM,CP

Hewlett-Packard Co.

5201 Tollview Drive

ROLLING MEADOWS, IL 60008

Tel: (312) 255-9800

A,CM,CP,E,MP

Indiana

Hewlett-Packard Co.

P.O. Box 50807

7301 No. Shadeland Avenue

INDIANAPOLIS, IN 46250

Tel: (317) 842-1000

A,CM,CS,E,MS

Iowa

Hewlett-Packard Co.

5815 S.W. 5th Street

DES MOINES, IA 50315

Tel: (515) 243-5876

CM,MS**

Hewlett-Packard Co.

2415 Heinz Road

IOWA CITY, IA 52240

Tel: (319) 351-1020

CM,CS,E*,MS

Kansas

Hewlett-Packard Co.

514 South Westview

DERBY, KA 67037

Tel: (316) 265-5200

CM,CS

Kentucky

Hewlett-Packard Co.

10170 Linn Station Rd., Suite 525

Atkinson Square

LOUISVILLE, KY 40223

Tel: (502) 426-0100

A,CM,CS,MS

Louisiana

Hewlett-Packard Co.

P.O. Box 1449

3229 Williams Boulevard

KENNER, LA 70062

Tel: (504) 443-6201

A,CM,CS,E,MS

Maryland

Hewlett-Packard Co.

7121 Standard Drive

HANOVER, MD 21076

Tel: (301) 796-7700

A,CM,CP,E,MS

Hewlett-Packard Co.

2 Choke Cherry Road

ROCKVILLE, MD 20850

Tel: (301) 948-6370

A,CM,CP,E,MP

Massachusetts

Hewlett-Packard Co.

32 Hartwell Avenue

LEXINGTON, MA 02173

Tel: (617) 861-8960

A,CM,CP,E,MP

Michigan

Hewlett-Packard Co.

23855 Research Drive

FARMINGTON HILLS, MI 48024

Tel: (313) 476-6400

A,CM,CP,E,MP

Hewlett-Packard Co.

4326 Cascade Road S.E.

GRAND RAPIDS, MI 49506

Tel: (616) 957-1970

CM,CS,MS

Minnesota

Hewlett-Packard Co.

2025 W. Larpenteur Ave.

ST. PAUL, MN 55113

Tel: (612) 644-1100

A,CM,CP,E,MP

Mississippi

Hewlett-Packard Co.

322 N. Mart Plaza

JACKSON, MS 39206

Tel: (601) 982-9



SALES & SUPPORT OFFICES

Arranged alphabetically by country

North Carolina

Hewlett-Packard Co.
5605 Roanne Way
GREENSBORO, NC 27409
Tel: (919) 852-1800
A,CM,CP,E,MS

Ohio

Hewlett-Packard Co.
9920 Carver Road
CINCINNATI, OH 45242
Tel: (513) 891-9870
CM,CP,MS

Hewlett-Packard Co.
16500 Sprague Road
CLEVELAND, OH 44130
Tel: (216) 243-7300
Telex: 810-423-9430
A,CM,CP,E,MS

Hewlett-Packard Co.
962 Crupper Ave.
COLUMBUS, OH 43229
Tel: (614) 432-1041
CM,CP,E*

Hewlett-Packard Co.
330 Progress Rd.
DAYTON, OH 45449
Tel: (513) 859-8202
A,CM,CP,E*,MS

Oklahoma

Hewlett-Packard Co.
P.O. Box 32008
6301 N. Meridan Avenue
OKLAHOMA CITY, OK 73122
Tel: (405) 721-0200
A*,CM,CP,E*,MS

Hewlett-Packard Co.
Suite 121
9920 E. 42nd Street
TULSA, OK 74145
Tel: (918) 665-3300
A*,CM,CS,M*

Oregon

Hewlett-Packard Co.
9255 Pioneer Court
WILSONVILLE, OR 97070
Tel: (503) 682-8000
A,CM,CP,E*,MS

Pennsylvania

Hewlett-Packard Co.
Crystal Brook Professional Building
Route 35
EATONTOWN, PA 07724
Tel: (201) 542-1384
A*,CM,C*,E*,P*

Hewlett-Packard Co.
1021 8th Avenue
King of Prussia Industrial Park
KING OF PRUSSIA, PA 19406
Tel: (215) 265-7000
Telex: 510-660-2670
A,CM,CP,E,MP

Hewlett-Packard Co.
111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400
A,CM,CP,E,MP

South Carolina

Hewlett-Packard Co.
P.O. Box 6442
694 1-1 N. Trenholm Road
COLUMBIA, SC 29260
Tel: (803) 782-6493
CM,CS,E,MS

Tennessee

Hewlett-Packard Co.
8906 Kingston Pike
KNOXVILLE, TN 37919
Tel: (615) 691-2371
A*,CM,MS

Hewlett-Packard Co.
3070 Directors Row
Directors Square
MEMPHIS, TN 38131
Tel: (901) 346-8370
A,CM,CS,MS

Hewlett-Packard Co.
Suite 103
478 Craighead Street
NASHVILLE, TN 37204
Tel: (615) 383-9130
CM,MS**

Texas

Hewlett-Packard Co.
Suite 310W
7800 Shoal creek Blvd.
AUSTIN, TX 78757
Tel: (512) 459-3143
CM,E

Hewlett-Packard Co.
Suite C110
4171 North Mesa
EL PASO, TX 79902
Tel: (915) 533-3555
CM,CS,E*,MS**

Hewlett-Packard Co.
5020 Mark IV Parkway
FORT WORTH, TX 76106
Tel: (817) 625-6361
CM,C*

Hewlett-Packard Co.
10535 Harwin Street
HOUSTON, TX 77036
Tel: (713) 776-6400
A,CM,CP,E,MP

Hewlett-Packard Co.
P.O. Box 1270
930 E. Campbell Rd.
RICHARDSON, TX 75081
Tel: (214) 231-6101
A,CM,CP,E,MP

Hewlett-Packard Co.
205 Billy Mitchell Road
SAN ANTONIO, TX 78226
Tel: (512) 434-8241
CM,CS,E,MS

Utah

Hewlett-Packard Co.
3550 W. 2100 South Street
SALT LAKE CITY, UT 84119
Tel: (801) 974-1700
A,CM,CP,E,MS

Virginia

Hewlett-Packard Co.
P.O. Box 9669
2914 Hungary Spring Road
RICHMOND, VA 23228
Tel: (804) 285-3431
A,CM,CP,E,MS

Hewlett-Packard Co.
3110 Peters Creek Road, N.W.
ROANOKE, VA 24015
Tel: (703) 922-7000
CM,CS,E**

Hewlett-Packard Co.
5700 Thurston Avenue
VIRGINIA BEACH, VA 23455
Tel: (804) 460-2471
CM,CS,MS

Washington

Hewlett-Packard Co.
Bellefield Office Park
1203 114th Ave. S.E.
BELLEVUE, WA 98004
Tel: (206) 454-3971
A,CM,CP,E,MP

Hewlett-Packard Co.
Suite A-1
708 North Argonne Road
SPOKANE, WA 99206
Tel: (509) 535-0864
CM,CS

West Virginia

Hewlett-Packard Co.
4604 MacCorkle Ave., S.E.
CHARLESTON, WV 25304
Tel: (304) 925-0492
A,CM,MS

Wisconsin

Hewlett-Packard Co.
150 S. Sunny Slope Road
BROOKFIELD, WI 53005
Tel: (414) 784-8800
A,CM,CS,E*,MP

URUGUAY

Pablo Ferrando S.A.C. e.l.
Avenida Italia 2877
Casilla de Correo 370
MONTEVIDEO
Tel: 40-3102
Telex: 901 Public Booth Para Pablo
Ferrando 919520
Cable: RADIUM Montevideo
A,E,M

Guillermo Kraft del Uruguay S.A.
Avda. Libertador Brig. Gral.
Lavalleja 2083
MONTEVIDEO
Tel: 23 45 88, 23 48 08, 20 88 30
P

VENEZUELA

Hewlett-Packard de Venezuela C.A.
P. O. Box 50933
3a Transversal Los Ruices Norte
Edificio Segre 2Y3
CARACAS 1071
Tel: 239-4133
Telex: 25146 HEWPACK
Cable: HEWPACK Caracas
A,CP,E,MS,P

YUGOSLAVIA

Iskra Commerce, n. sol. o.
Zastopstvo Hewlett-Packard
Obilicev Venac 26
YU 11000 BEOGRAD
Tel: 636955
Telex: 11530
C*,E*,M*,P*

Iskra Commerce, n. sol. o.
Zastopstvo Hewlett-Packard
Miklosiceva 38/VII
YU-61000 LJUBLJANA
Tel: 321674, 315870
Telex: 31300
C*,E*,M*,P*

ZAMBIA

R.J. Tilbury (Zambia) Ltd.
P.O. Box 2792
LUSAKA
Tel: 81243
A,E,M,P

FOR COUNTRIES AND AREAS NOT LISTED:

CANADA

Ontario

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
Telex: 610-492-4246

EASTERN USA

New Jersey

Hewlett-Packard Co.
W120 Century Road
PARAMUS, NJ 07652
Tel: (201) 265-5000

MIDWESTERN USA

Illinois

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800

SOUTHERN USA

Georgia

Hewlett-Packard Co.
P.O. Box 105005
450 Interstate N. Parkway
ATLANTA, GA 30339
Tel: (404) 955-1500
Telex: 810-766-4890

WESTERN USA

California

Hewlett-Packard Co.
3939 Lankersham Blvd.
NORTH HOLLYWOOD, CA 91604
Tel: (213) 877-1282

EAST EUROPEAN AREAS

AUSTRIA

Hewlett-Packard Ges.m.b.h.
Wehlstrasse 29
P.O. Box 7
A-1205 VIENNA, Austria
Tel: (222) 35-16-20
Telex: 135823/135066

EUROPEAN AREAS

SWITZERLAND

Hewlett-Packard S.A.
7 Rue du Bois-du-Lan
CH-1217 MEYRIN 2, Switzerland
Tel: (022) 98-96-51
Telex: 27835 hpse
Cable: HEWPACKSA Geneve

MEDITERRANEAN AND MIDDLE EAST AREAS

GREECE

Hewlett-Packard S.A.
Mediterranean & Middle East
Operations
35 Kolokatroni St.
Platia Kefallariou
GR-Kifissia, ATHENS, Greece
Tel: 808-0359, 808-0429
Telex: 21-6588
Cable: HEWPACKSA Athens

OTHER AREAS

Hewlett-Packard Co.
ICON Headquarters
3495 Deer Creek Road
PALO ALTO, CA 94304
U.S.A.
Tel: (415) 857-2824
TWX: 910-373-1267
Telex: 034-8300; 034-8493
Cable: HEWPACK





**HEWLETT
PACKARD**