

1740A OSCILLOSCOPE

**OPERATING
AND SERVICE
MANUAL**

HEWLETT  PACKARD

COLORADO SPRINGS DIVISION

CERTIFICATION

Hewlett-Packard Company certifies that this instrument met its published specifications at the time of shipment from the factory. Hewlett-Packard Company further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY AND ASSISTANCE

This Hewlett-Packard product is warranted against defects in materials and workmanship for a period of one year from the date of shipment. The cathode-ray tube (CRT) in the instrument and any replacement CRT purchased from HP are also warranted against electrical failure for a period of one year from the date of shipment from Colorado Springs. **BROKEN TUBES AND TUBES WITH PHOSPHOR OR MESH BURNS, HOWEVER, ARE NOT INCLUDED UNDER THIS WARRANTY.** Hewlett-Packard will, at its option, repair or replace products which prove to be defective during the warranty period provided they are returned to Hewlett-Packard, and provided the preventive maintenance procedures in this manual are followed. Repairs necessitated by misuse of the product are not covered by this warranty. **NO OTHER WARRANTIES ARE EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HEWLETT-PACKARD IS NOT LIABLE FOR CONSEQUENTIAL DAMAGES.**

Service contracts or customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.



OPERATING AND SERVICE MANUAL

MODEL 1740A OSCILLOSCOPE

(Including Options 001, 090, 101, 102, 900, 901,
902, and 903)

SERIAL NUMBERS

This manual applies directly to instruments with serial numbers prefixed 1632A.

With changes described in Section VII, this manual also applies to instruments with serial numbers prefixed 1522A through 1616A.

For additional important information about serial numbers, see INSTRUMENT AND MANUAL IDENTIFICATION in Section I.

HEWLETT-PACKARD COMPANY/COLORADO SPRINGS DIVISION
1900 GARDEN OF THE GODS ROAD, COLORADO SPRINGS, COLORADO, U.S.A.

Manual Part Number 01740-90909
Microfiche Part Number 01740-90809

PRINTED: AUGUST 1976

SAFETY SUMMARY

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.

GROUND THE INSTRUMENT.

To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument is equipped with a three-conductor ac power cable. The power cable must either be plugged into an approved three-contact electrical outlet or used with a three-contact to two-contact adapter with the grounding wire (green) firmly connected to an electrical ground (safety ground) at the power outlet. The power jack and mating plug of the power cable meet International Electrotechnical Commission (IEC) safety standards.

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE.

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

KEEP AWAY FROM LIVE CIRCUITS.

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power and discharge circuits before touching them.

DO NOT SERVICE OR ADJUST ALONE.

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

USE CAUTION WHEN EXPOSING OR HANDLING THE CRT.

Breakage of the Cathode-ray Tube (CRT) causes a high-velocity scattering of glass fragments (implosion). To prevent CRT implosion, avoid rough handling or jarring of the instrument. Handling of the CRT shall be done only by qualified maintenance personnel using approved safety mask and gloves.

DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT.

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the instrument. Return the instrument to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

DANGEROUS PROCEDURE WARNINGS.

Warnings, such as the example below, precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.

WARNING

**Dangerous voltages, capable of causing death, are present in this instrument.
Use extreme caution when handling, testing, and adjusting.**

TABLE OF CONTENTS

Section	Page	Section	Page
I GENERAL INFORMATION	1-1	4-33. Preamplifier Stage	4-2
1-1. Introduction	1-1	4-41. Preamplifier Controls	4-4
1-5. Specifications	1-1	4-53. Delay Line Assembly	4-5
1-8. Accessories Supplied	1-1	4-54. Vertical Output Amplifier	4-5
1-10. Accessories Available	1-1	4-56. Horizontal Section	4-5
1-12. Options	1-1	4-57. Main Trigger Circuitry	4-5
1-14. Instrument and Manual Identification	1-1	4-64. Main Sweep and Integrator	4-6
II INSTALLATION	2-1	4-69. Delayed Trigger Operation	4-7
2-1. Introduction	2-1	4-70. Delayed Sweep	4-7
2-3. Initial Inspection	2-1	4-71. Horizontal Display Switch Assembly	4-7
2-5. Power Cords and Receptacles	2-1	4-76. Horizontal Preamplifier	4-7
2-7. Power Requirements	2-1	4-79. Horizontal Output	4-8
2-10. Repacking for Shipment	2-1	4-80. Gate Amplifier Assembly	4-8
III OPERATION	3-1	4-88. High-voltage Power Supply	4-8
3-1. Introduction	3-1	4-96. Low-voltage Power Supply	4-9
3-3. Turn-on Procedure	3-1	4-98. ±15-volt Supplies	4-9
3-5. Operator Checks	3-1	4-101. +5-volt Supply	4-9
3-12. Trigger Selection Table	3-2	4-102. +120-volt and +43-volt Power Supplies	4-9
3-13. Obtaining Basic Displays	3-2	4-105. Floodgun Filament Voltage	4-10
3-15. Normal Sweep Display	3-2	4-106. Line Frequency	4-10
3-16. Magnified Sweep Display	3-3	4-107. Option 101	4-10
3-17. Delayed Sweep Display	3-3	V PERFORMANCE TESTS AND ADJUSTMENTS	5-1
3-18. Mixed Sweep Display	3-3	5-1. Introduction	5-1
3-19. X-Y Display	3-4	5-3. Recommended Test Equipment	5-1
3-20. Single Sweep Operation	3-4	5-5. Test Record	5-1
3-23. Single Sweep Using Trigger View	3-4	5-7. Performance Tests	5-1
IV PRINCIPLES OF OPERATION	4-1	5-9. Initial Control Settings	5-1
4-1. Introduction	4-1	5-11. Performance Test Procedures	5-1
4-3. Vertical Section Block Diagram	4-1	5-12. Bandwidth	5-1
4-4. Input Attenuators	4-1	5-15. Common Mode Rejection Ratio	5-3
4-5. Vertical Preamplifier	4-1	5-17. Triggering	5-4
4-6. Delay Line	4-1	5-22. Sweep Time Accuracy	5-5
4-7. Vertical Output Amplifier	4-1	5-24. Differential Time Accuracy	5-6
4-8. Horizontal Section Block Diagram	4-1	5-26. Delay Jitter	5-6
4-9. Trigger Circuit	4-1	5-28. Rise Time	5-7
4-11. Sweep and Integrator Circuit	4-1	5-30. Z-axis Blanking	5-7
4-13. Holdoff Circuit	4-1	5-32. Deflection Factor	5-7
4-14. Horizontal Preamplifier	4-1	5-34. Calibrator	5-8
4-15. Horizontal Output	4-1	5-36. Adjustments	5-8
4-16. Gate Circuitry	4-1	5-40. Low-voltage Power Supply Adjustment	5-8
4-18. High-voltage Power Supply	4-2	5-41. Intensity Limit Adjustment	5-9
4-22. Low-voltage Power Supply	4-2	5-42. Astigmatism and Focus Adjustment	5-9
4-25. Circuit Details	4-2	5-43. Gate Response Adjustment	5-9
4-27. Attenuator Assemblies	4-2	5-44. Floodgun Grid Adjustment	5-9
4-28. General Information	4-2	5-45. Trace Align and Y-axis Align Adjustments	5-9
4-29. Input	4-2	5-46. Trace Align and Y-axis Align Adjustments - OPTION 101	5-9
4-30. Attenuator Stages	4-2	5-47. Calibrator Amplitude Adjustment	5-9
4-31. Vertical Section	4-2	5-48. Trigger Sensitivity Adjustment	5-10
4-32. General Information	4-2	5-49. Sync Zero Adjustment	5-10

TABLE OF CONTENTS (Cont'd)

Section		Page	Section		Page
5-50.	Trigger View Balance Adjustment	5-10	8-14.	CRT Removal and Replacement ..	8-2
5-51.	Delay Start Adjustment	5-11	8-15.	HV Power Supply Assembly Removal and Replacement	8-3
5-52.	Horizontal Amplifier Gain Adjustments	5-11	8-16.	HV Multiplier Assembly Removal and Replacement	8-3
5-53.	X10 Amplifier Balance Adjustment	5-11	8-17.	LV Power Supply Assembly Removal and Replacement	8-3
5-54.	Horizontal Linearity Adjustment	5-11	8-18.	Gate Amplifier Assembly Removal and Replacement	8-4
5-55.	Preliminary Main Sweep Calibration	5-12	8-19.	Vertical Output Amplifier Assembly Removal and Replacement	8-4
5-56.	Delayed Sweep Adjustment	5-12	8-21.	Vertical Preamplifier Assembly A3, Delay Line Assembly A4, and Vertical Control Switching Assembly A13 Removal and Replacement	8-6
5-57.	Main Sweep Fine Adjustment	5-12	8-25.	Horizontal Output Assembly Removal and Replacement	8-7
5-58.	Vertical Amplifier Balance Adjustment	5-13	8-26.	Horizontal Sweep Assembly Removal and Replacement	8-7
5-59.	Position and Sync Balance Adjustment	5-13	8-27.	Delayed Trigger Assembly Removal and Replacement	8-7
5-60.	Input Capacitance and Attenuator Compensation Adjustments	5-14	8-28.	Circuit Board Repairs	8-7
5-61.	Vertical Gain Adjustment	5-14	8-30.	Board Connections	8-7
5-62.	Pulse Response Adjustment	5-14	8-31.	Soldering	8-7
5-63.	X-Y Gain Adjustment	5-15	8-32.	Integrated Circuit Removal and Replacement	8-8
VI	REPLACEABLE PARTS	6-1	8-33.	Troubleshooting	8-8
6-1.	Introduction	6-1	8-36.	Initial Troubleshooting Procedure	8-8
6-3.	Ordering Information	6-1	8-37.	Dc Voltages and Waveforms	8-8
VII	MANUAL CHANGES	7-1	8-38.	Trouble Diagnosis	8-8
7-1.	Introduction	7-1	8-39.	LV Power Supply	8-9
7-3.	Manual Changes	7-1	8-41.	HV Power Supply	8-9
VIII	SCHEMATICS AND TROUBLESHOOTING	8-1	8-47.	Gate Amplifier	8-9
8-1.	Introduction	8-1	8-48.	Vertical Section	8-10
8-3.	Preventive Maintenance	8-1	8-51.	Horizontal Output Amplifier ...	8-10
8-4.	Cleaning	8-1	8-52.	Time Base	8-10
8-6.	Switch Maintenance	8-1			
8-12.	Removal and Replacement	8-2			

LIST OF ILLUSTRATIONS

Figure	Title	Page	Figure	Title	Page
2-1.	Types of Power Source Receptacles and Applicable Input Power Cable Part Numbers	2-1	4-1.	Vertical and Horizontal Block Diagram	4-3
2-2.	Line Voltage Selection Switch Settings	2-1	4-2.	LVPS, HVPS, and Gate Amplifier Block Diagram	4-4
3-1.	Controls and Connectors	3-0	4-3.	Gate Schmitt Simplified Block Diagram	4-7
3-2.	Probe Compensation	3-2	4-4.	Timing Relationship of the Gate and Sweep Waveforms	4-7
3-3.	Normal Display	3-3	4-5.	Gate Control Simplified Block Diagram	4-8
3-4.	Magnified Display	3-3			
3-5.	Normal Display with Intensified Area ..	3-3	5-1.	Bandwidth Test Setup	5-3
3-6.	Delayed Sweep Display	3-3	5-2.	CMRR Test Setup	5-3
3-7.	Normal Display with Intensified Area ..	3-4	5-3.	External Triggering Test Setup	5-4
3-8.	Mixed Sweep Display	3-4	5-4.	Pulse Response Adjustments	5-15

LIST OF ILLUSTRATIONS (Cont'd)

Figure	Title	Page	Figure	Title	Page
5-5.	Adjustment Locations	5-23	8-11.	Service Information, High-voltage Power Supply Assembly A15	8-14
6-1.	Chassis Parts and Board Assembly Identification	6-1	8-12.	Service Information, Gate Amplifier Assembly A12	8-16
7-1.	Replacement for Component Locator in Figure 8-16	7-2	8-13.	Service Information, Vertical Preamplifier Assembly A3	8-18
7-2.	Replacement for Component Locator in Figure 8-17	7-3	8-14.	Service Information, Vertical Output Assembly A5	8-20
7-3.	Replacement for Component Locator in Figure 8-19	7-4	8-15.	Service Information, Vertical Control Switching Assembly A13 and Vertical Preamplifier Assembly A3	8-22
7-4.	Replacement for Component Locator in Figure 8-10	7-6	8-16.	Service Information, Main Trigger, P/O Assembly A7	8-24
7-5.	Changes to Schematic 1	7-7	8-17.	Service Information, Main Sweep Assembly A8	8-26
7-6.	Rear-panel Changes	7-7	8-18.	Service Information, Delayed Trigger Assembly A10 and Horizontal Sweep Assembly A7	8-28
8-1.	Switch Extender Shaft Removal	8-1	8-19.	Service Information, Delayed Sweep Assembly A9	8-30
8-2.	CRT Removal	8-2	8-20.	Service Information, Horizontal Output Assembly A11 and Horizontal Sweep Assembly A7	8-32
8-3.	Low-voltage Power Supply Removal	8-4	8-21.	Service Information, Gate Schmitt, P/O Assembly A7	8-34
8-4.	Gate Amplifier Assembly Removal	8-5	8-22.	Service Information, Interface Assembly A14	8-37
8-5.	Vertical Output Amplifier Removal	8-5	8-23.	Service Information, OPTION 101 Interface Assembly A14	8-38
8-6.	A5A1 Removal	8-5	8-24.	Interconnection Diagram	8-40
8-7.	A3A1 Removal	8-7			
8-8.	Location of A7 Attaching Screws	8-7			
8-9.	Semiconductor Terminal Identification	8-8			
8-10.	Service Information, Low-voltage Power Supply Assembly A16	8-12			

LIST OF TABLES

Table	Title	Page	Table	Title	Page
1-1.	Specifications	1-2	5-8.	Main Sweep Fine Adjustment	5-13
1-2.	General Information	1-4	5-9.	Condensed Adjustment Procedure	5-16
3-1.	Display and Trigger Selection Table	3-2	6-1.	Abbreviations for Replaceable Parts List	6-1
5-1.	Recommended Test Equipment	5-2	6-2.	Replaceable Parts	6-3
5-2.	Main TIME/DIV Accuracy	5-5	6-3.	List of Manufacturer Codes	6-21
5-3.	Delayed TIME/DIV Accuracy	5-6	7-1.	Manual Changes	7-1
5-4.	Deflection Factor Accuracy	5-8	8-1.	Troubleshooting Sequence	8-9
5-5.	Low-voltage Supply Limits	5-8	8-2.	Time Base Troubleshooting	8-10
5-6.	Preliminary Main Sweep Calibration	5-12	8-3.	Schematic Notes	8-11
5-7.	Delayed Sweep Calibration Adjustments	5-12			

SECTION I

GENERAL INFORMATION

1-1. INTRODUCTION.

1-2. The Hewlett-Packard Model 1740A is a dual-channel, 100-MHz, delayed sweep oscilloscope designed for general-purpose bench or field use. The dual-channel vertical deflection system has 12 calibrated deflection factors from 5 mV/div to 20 V/div. Input impedance is selectable (50 ohms or 1 megohm) to meet various measurement requirements. The horizontal deflection system has calibrated sweep rates from 2 s/div to 0.05 μ s/div and delayed sweep rates from 20 ms/div to 0.05 μ s/div. A 10X magnifier expands all sweeps by a factor of 10 and extends the fastest sweep to 5 ns/div. In alternate or chop modes, the trigger-view control feature will display three signals: channel A, channel B, and trigger signal. This allows correlation of the time between the trigger signal and the channel A and channel B signals. With the A VS B control, an X-Y mode of operation is possible. The channel A input (Y-axis) is plotted versus the channel B input (X-axis).

1-3. This manual contains installation and operating instructions, as well as maintenance information for the Model 1740A. Instrument specifications and procedures for verifying proper operation are included. Procedures are also included for adjusting the instrument to its performance specifications. Schematic diagrams, the theory of operation, and troubleshooting information are provided for use in maintaining the instrument.

1-4. This section of the manual contains the performance specifications for the Model 1740A, and a list of the options available. It also lists the accessories supplied with the Model 1740A and other accessories that are available. Instrument and manual identification information are also included.

1-5. SPECIFICATIONS.

1-6. Table 1-1 is a complete list of the Model 1740A critical specifications that are controlled by tolerances. Table 1-2 contains general information that describes operating characteristics of the Model 1740A.

1-7. Any change in the specifications due to manufacturing, design, or traceability to the U.S. National Bureau of Standards will be listed on a manual change sheet included with this manual. The manual and manual change sheet supersede all previous information concerning specifications of the 1740A.

1-8. ACCESSORIES SUPPLIED.

1-9. The following accessories are supplied with the 1740A:

- One Blue Light Filter, HP Part No. 01740-02701
- One Front-panel Cover, HP Part No. 5040-0516
- One Accessory Storage Pouch, HP Part No. 1540-0292
- Two 10:1 Divider Probes, HP Model No. 10006D

1-10. ACCESSORIES AVAILABLE.

1-11. The following accessories are available for the 1740A:

- Model 10002A 50:1 Divider Probe
- Model 10004D 10:1 Divider Probe
- Model 10007B 1:1 Divider Probe
- Model 10020A Resistive Divider Probe Kit (Division ratios of 1:1, 5:1, 10:1, 20:1, 50:1, and 100:1)
- Model 10173A: RFI Metal Mesh Contrast Screen
- Model 10140A: Collapsible Viewing Hood
- Model 197A: Oscilloscope Camera (Requires a Model 10376A Adapter for mounting on 1740A)
- Models 1001A, 1002A, and 1114A: Testmobiles (All accept the Model 1740A and provide mobile stands for the oscilloscope)

1-12. OPTIONS.

1-13. The options listed below extend the usefulness of the Model 1740A.

OPTION 001. Option 001 replaces the standard detachable power cord with a captive power cord. There are two standard options available that install a special CRT in the standard instrument. The only difference between the optional CRT and the standard CRT is the phosphor used in the CRT. Option 007 uses P7 phosphor and Option 011 uses P11 phosphor.

OPTION 090. This option omits the two Model 10006D divider probes normally supplied as accessories. Other probes listed under Accessories Available, which are more suitable, may be specified.

OPTION 101. Option 101 is designed for optimum performance with the HP Model 1607A Logic State Analyzer to provide both digital logical state and analog electrical analysis. (Refer to Section IV for circuit details and Section VI for a list of replaceable parts in Option 101.)

OPTION 102. Option 102 is Option 101 with an additional special adapter plate (HP Part No. 5061-1213). The special adapter plate is used to attach the 1740A and 1607A instruments together as a single unit.

OPTIONS 900 - 903. Options 900 through 903 are special cord options. The connector configurations are shown in Section II of this manual.

1-14. INSTRUMENT AND MANUAL IDENTIFICATION.

1-15. Instrument identification by serial number is located on the rear panel. Hewlett-Packard uses a two-section serial number consisting of a four-digit prefix and a five-digit suffix, separated by a letter

designating the country in which the instrument was manufactured. (A = U.S.A.; G = West Germany; J = Japan; U = Unit Kingdom.)

1-16. This manual applies to instruments with a serial prefix number as shown on the title page. If changes have been made in the instrument since this manual was printed, a "Manual Changes" supplement supplied with the manual will define these changes. Be sure to record these changes in your manual. Backdating information in Section VII adapts the manual to instruments with serial numbers lower than that shown on the title page. Part numbers for the manual and the microfiche copy of the manual are also shown on the title page.

Table 1-1. Specifications

VERTICAL DISPLAY MODES

Channel A; channel B; channels A and B displayed alternately on successive sweeps (ALT); channels A and B displayed by switching between channels at an approximate 250 kHz rate with blanking during switching (CHOP); channel A plus channel B (algebraic addition); and trigger view.

VERTICAL AMPLIFIERS (2)

Bandwidth and Rise Time at all deflection factors from 0°C to +55°C.

BANDWIDTH: 3 dB down from 6 div reference signal.

DC-Coupled: dc to 100 MHz in both 50Ω and 1 MΩ input modes.

AC-Coupled: approx 10 Hz to 100 MHz; 1 Hz with 10:1 divider probes.

BANDWIDTH LIMIT: limits upper bandwidth to approx 20 MHz.

RISE TIME: ≤3.5 ns, measured from 10% to 90% points of a 6 div input step.

DEFLECTION FACTOR

Ranges: 5 mV/div to 20 V/div (12 calibrated positions) in 1, 2, 5 sequence, accurate within 3%.

Vernier: continuously variable between all ranges, extends maximum deflection factor to at least 50 V/div. UNCAL light indicates when vernier is not in the CAL position.

POLARITY: channel B may be inverted, front panel pushbutton.

DELAY LINE: input signals are delayed sufficiently to view leading edge of input pulse without advanced trigger.

INPUT COUPLING: selectable AC or DC, 50Ω (dc), or ground. Ground position disconnects input connector and grounds amplifier input.

INPUT RC (selectable)

AC or DC: 1 MΩ ±2% shunted by approx 20 pF.

50 Ohm: 50Ω ±3%; SWR ≤1.4 at 100 MHz on all ranges.

MAXIMUM INPUT

AC or DC: 250 V (dc + peak ac) or 500 V p-p at 1 kHz or less.

50 Ohm: 5 V rms.

A+B OPERATION

Amplifier: bandwidth and deflection factors are un-

changed; channel B may be inverted for A—B operation.

Differential (A—B) Common Mode: CMRR is at least 20 dB from dc to 20 MHz. Common mode signal amplitude equivalent to 8 divisions with one vernier adjusted for optimum rejection.

VERTICAL MAGNIFICATION (X5)

BANDWIDTH: 3 dB down from 8 div reference signal.

DC-Coupled: dc to approx 40 MHz.

AC-Coupled: approx 10 Hz to 40 MHz.

RISE TIME: ≤9 ns (measured from 10% to 90% points of 8 div input step).

DEFLECTION FACTOR: increases sensitivity of each deflection factor setting by a factor of 5 with a maximum sensitivity of 1 mV on channels A and B.

TRIGGER SOURCE

Selectable from channel A, channel B, composite, or line frequency.

CHANNEL A: all display modes triggered by channel A signal.

CHANNEL B: all display modes triggered by channel B signal.

COMPOSITE: all display modes triggered by displayed signal except in Chop. In Chop mode, trigger signal is derived from channel A.

LINE FREQUENCY: trigger signal is derived from power line frequency.

TRIGGER VIEW

Display internal or external trigger signal in Alternate or Chop mode, channel A, channel B, and the trigger signals are displayed. In channel A or B mode, Trigger View overrides that channel. Internal trigger signal amplitude approximates vertical signal amplitude. Ext trigger signal deflection factor is approx 100 mV/div or 1 V/div in EXT ×10. Triggering point is approx center screen. With identically timed signals to a vertical input and the Ext trigger input, trigger signal delay is 2.5 ns ±1 ns.

HORIZONTAL DISPLAY MODES

Main, main intensified, mixed, delayed, mag X10, and A vs. B.

Table 1-1. Specifications (Cont'd)

<p>MAIN AND DELAYED TIME BASES</p> <p>RANGES</p> <p>Main: 50 ns/div to 2 s/div (24 ranges) in 1, 2, 5 sequence.</p> <p>Delayed: 50 ns/div to 20 ms/div (18 ranges) in 1, 2, 5 sequence.</p> <p>Accuracy</p> <table border="1"> <thead> <tr> <th rowspan="2">Sweep Time/Div</th> <th colspan="2">*Accuracy</th> <th rowspan="2">Temp Range</th> </tr> <tr> <th>X1</th> <th>X10</th> </tr> </thead> <tbody> <tr> <td rowspan="3">50 ns to 20 ms</td> <td>±3%</td> <td>±4%</td> <td>0°C to +15°C</td> </tr> <tr> <td>±2%</td> <td>±3%</td> <td>+15°C to +35°C</td> </tr> <tr> <td>±3%</td> <td>±4%</td> <td>+35°C to +55°C</td> </tr> </tbody> </table> <p>*Add 1% for 50 ms to 2 s ranges.</p> <p>MAIN SWEEP VERNIER: continuously variable between all ranges, extends slowest sweep to at least 5 s/div. UNCAL light indicates when vernier is not in CAL position.</p> <p>MAGNIFIER (X10): expands all sweeps by a factor of 10, extends fastest sweep to 5 ns/div.</p> <p>CALIBRATED SWEEP DELAY</p> <p>DELAY TIME RANGE: 0.5 to 10 X Main Time/Div settings of 100 ns to 2 s (minimum delay 150 ns).</p> <p>DIFFERENTIAL TIME MEASUREMENT ACCURACY</p> <table border="1"> <thead> <tr> <th>Main Time Base Setting</th> <th>*Accuracy (+15°C to +35°C)</th> </tr> </thead> <tbody> <tr> <td>100 ns/div to 20 ms/div</td> <td>±(0.5% + 0.1% of full scale)</td> </tr> <tr> <td>50 ms/div to 2 s/div</td> <td>±(1% + 0.1% of full scale)</td> </tr> </tbody> </table> <p>*Add 1% for temperatures from 0°C to +15°C and +35°C to +55°C.</p> <p>DELAY JITTER: <0.002% (1 part in 50 000) of maximum delay in each step from +15°C to +35°C; <0.005% (1 part in 20 000) from 0°C to +15°C and +35°C to +55°C.</p> <p>TRIGGERING</p> <p>MAIN SWEEP</p> <p>Normal: Sweep is triggered by internal or external signal.</p> <p>Automatic: bright baseline displayed in absence of input signal. Triggering is same as Normal above 40 Hz.</p> <p>Single: sweep occurs once with same triggering as Normal; reset pushbutton arms sweep and lights indicator.</p> <p>DELAYED SWEEP (SWEEP AFTER DELAY)</p> <p>Auto: delayed sweep automatically starts at end of delay.</p> <p>Trig: delayed sweep is armed and triggerable at end of delay period.</p> <p>INTERNAL: dc to 25 MHz on signals causing 0.3 divisions or more vertical deflection, increasing to 1 division of vertical deflection at 100 MHz in all display modes (required signal level is increased by 2 when in Chop mode and by 5 when X5 vertical magnifier is used). Triggering on Line frequency is also selectable.</p> <p>EXTERNAL: dc to 50 MHz on signals of 50 mV p-p or more increasing to 100 mV p-p at 100 MHz (required signal level is increased by 2 when in Chop mode).</p> <p>EXTERNAL INPUT RC: approx 1 MΩ shunted by approx 20 pF.</p> <p>MAXIMUM EXTERNAL INPUT: 250 V (dc + peak ac) or 500 V p-p ac at 1 kHz or less.</p> <p>LEVEL and SLOPE</p> <p>Internal: at any point on the positive or negative slope of the displayed waveform.</p> <p>External: continuously variable from +1.5 V to -1.5 V on either slope of the trigger signal, +15 V to -15 V in divide by 10 mode (÷10).</p> <p>COUPLING: AC, DC, Main LF REJ, or Main HF REJ.</p> <p>AC: attenuates signals below approx 20 Hz.</p> <p>LF Reject (Main Sweep): attenuates signals below approx 4 kHz.</p> <p>HF Reject (Main Sweep): attenuates signals above approx 4 kHz.</p> <p>TRIGGER HOLDOFF (Main Sweep): increases sweep holdoff time in all ranges.</p> <p>CALIBRATED MIXED TIME BASE</p> <p>Dual time base in which the main time base drives the first portion of sweep and the delayed time base completes the sweep at the faster delayed sweep. Also operates in single sweep mode. Accuracy, add 2% to main time base accuracy.</p> <p>A vs. B OPERATION</p> <p>BANDWIDTH</p> <p>Channel A (Y-axis): same as channel A.</p> <p>Channel B (X-axis): dc to 5 MHz.</p> <p>DEFLECTION FACTOR: 5 mV/div to 20 V/div (12 calibrated positions) in 1, 2, 5 sequence.</p> <p>PHASE DIFFERENCE BETWEEN CHANNELS: <3°, dc to 100 kHz.</p>				Sweep Time/Div	*Accuracy		Temp Range	X1	X10	50 ns to 20 ms	±3%	±4%	0°C to +15°C	±2%	±3%	+15°C to +35°C	±3%	±4%	+35°C to +55°C	Main Time Base Setting	*Accuracy (+15°C to +35°C)	100 ns/div to 20 ms/div	±(0.5% + 0.1% of full scale)	50 ms/div to 2 s/div	±(1% + 0.1% of full scale)
Sweep Time/Div	*Accuracy		Temp Range																						
	X1	X10																							
50 ns to 20 ms	±3%	±4%	0°C to +15°C																						
	±2%	±3%	+15°C to +35°C																						
	±3%	±4%	+35°C to +55°C																						
Main Time Base Setting	*Accuracy (+15°C to +35°C)																								
100 ns/div to 20 ms/div	±(0.5% + 0.1% of full scale)																								
50 ms/div to 2 s/div	±(1% + 0.1% of full scale)																								

Table 1-2. General Information

CATHODE-RAY TUBE AND CONTROLS

TYPE: Hewlett-Packard, 12.7 cm (5 in.) rectangular CRT, post accelerator, approx 15 kV accelerating potential, aluminized P31 phosphor.

GRATICULE: 8 X 10 div (1 div = 1 cm) internal, non-parallax graticule with 0.2 subdivision markings on major horizontal and vertical axes and markings for rise time measurements. Internal floodgun graticule illumination.

BEAM FINDER: returns trace to CRT screen regardless of setting of horizontal, vertical, or intensity controls.

Z-AXIS INPUT (INTENSITY MODULATION): +4 V, ≥ 50 ns width pulse blanks trace of any intensity, usable to ≤ 10 MHz for normal intensity. Input R, 1 k Ω $\pm 10\%$. Maximum input ± 20 V (dc + peak ac).

REAR PANEL CONTROLS: astigmatism and trace align.

GENERAL

REAR PANEL OUTPUTS: main and delayed gates, 0 V to $>+2.5$ V capable of supplying approx 5 mA.

AMPLITUDE CALIBRATOR (0°C to +55°C)

Output Voltage	1 V p-p into ≥ 1 M Ω 0.1 V p-p into 50 Ω	$\pm 1\%$
Rise Time	≤ 0.1 μ s	
Frequency	approx 1.4 kHz	

POWER: 100, 120, 220, 240 Vac, $\pm 10\%$; 48 to 440 Hz; 100 VA max.

WEIGHT: net, 13 kg (28.6 lb); shipping, 15.7 kg (34.6 lb).

OPERATING ENVIRONMENT

Temperature: 0°C to +55°C.

Humidity: to 95% relative humidity at +40°C.



Altitude: to 4600 m (15 000 ft).

Vibration: vibrated in three planes for 15 min. each with 0.254 mm (0.010 in.) excursion, 10 to 55 Hz.

DIMENSIONS: see outline drawing.

NOTES:

1. DIMENSIONS ARE FOR GENERAL INFORMATION ONLY. IF DIMENSIONS ARE REQUIRED FOR BUILDING SPECIAL INCLOSURES, CONTACT YOUR HP FIELD ENGINEER.
2. DIMENSIONS ARE IN MILLIMETERS AND (INCHES).

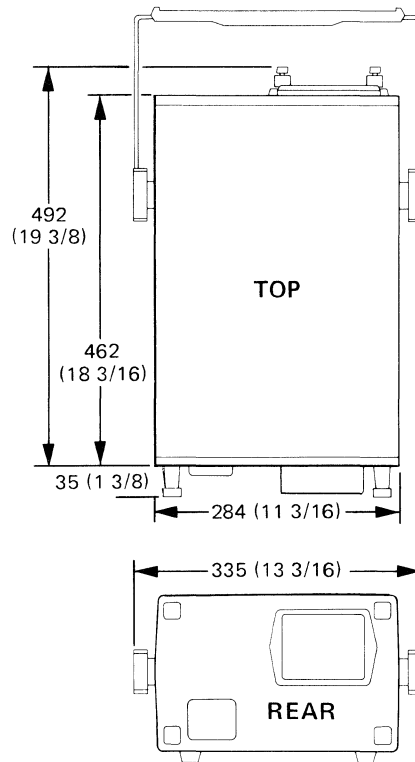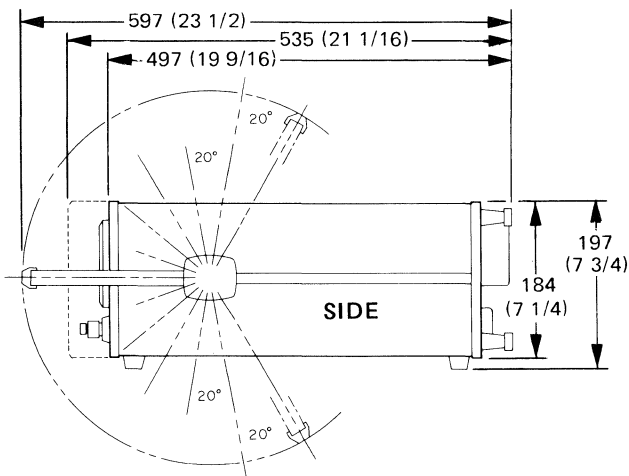

SECTION II INSTALLATION

2-1. INTRODUCTION.

2-2. This section contains information and instructions necessary for installing and interfacing the Model 1740A Oscilloscope. Included are initial inspection procedures, power and grounding requirements, installation instructions, and procedures for re-packaging the instrument for shipment.

2-3. INITIAL INSPECTION.

2-4. This instrument was carefully inspected both mechanically and electrically before shipment. It should be free of marks or scratches and in perfect electrical order upon receipt. To confirm this, the instrument should be inspected for physical damage incurred in transit. If the instrument was damaged in transit, file a claim with the carrier. Check for supplied accessories (listed in Section I) and test the electrical performance of the instrument using the performance test procedures outlined in Section V. If there is damage or deficiency, see the warranty in the front of this manual.



Read the Safety Summary at the front of the manual before installing or operating the instrument.

2-5. POWER CORDS AND RECEPTACLES.

2-6. Figure 2-1 illustrates the standard configuration used for HP power cords. The HP part number directly above each drawing is the part number for an instrument power cord equipped with a connector of that configuration. If the appropriate power cord is not included with the instrument, notify the nearest HP Sales and Service Office and a replacement cord will be provided.

STD-002-07-76





HP POWER CABLE PART NUMBERS			
8120-1692	8120-0696	8120-1703	8120-1521
Option 902	Option 901	Option 900	Option 903
			
INPUT POWER RECEPTACLE TYPES			

Figure 2-1. Types of Power Source Receptacles and Applicable Input Power Cable Part Numbers

2-7. POWER REQUIREMENTS.


2-8. The 1740A can be operated from any power source supplying 100 V, 120 V, 220 V, or 240 V ($\pm 10\%$), single phase, 48 to 440 Hz. Power dissipation is 100 VA maximum.

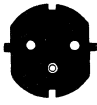

Instrument damage may result if line-voltage selection switch is not correctly set for the input power source.

2-9. The instrument is normally set at the factory for 120-volt operation. To operate the instrument from any other ac power source, proceed as follows:

- a. Verify that Model 1740A power cable is not connected to any input power source.
- b. Stand instrument on rear legs. Use a blade-type screwdriver to position line-voltage selection switch through opening in bottom cover. (Figure 2-2 shows switches set for 120-V operation.)
- c. For 220-V or 240-V inputs, replace fuse F1 with 0.5 A slow-blow fuse supplied with instrument.
- d. Connect input power cable to power source.

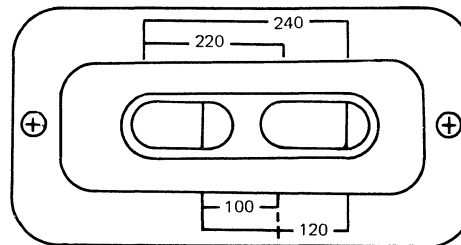

1740A-200-07-76

Figure 2-2. Line Voltage Selection Switch Settings

2-10. REPACKING FOR SHIPMENT.

2-11. If the instrument is to be shipped to a Hewlett-Packard Sales/Service Office for service or repair, attach a tag showing owner (with address), complete instrument serial number, and a description of the service required.

2-12. Use the original shipping carton and packing material. If the original packing material is not available, the Hewlett-Packard Sales/Service Office will provide information and recommendations on materials to be used.

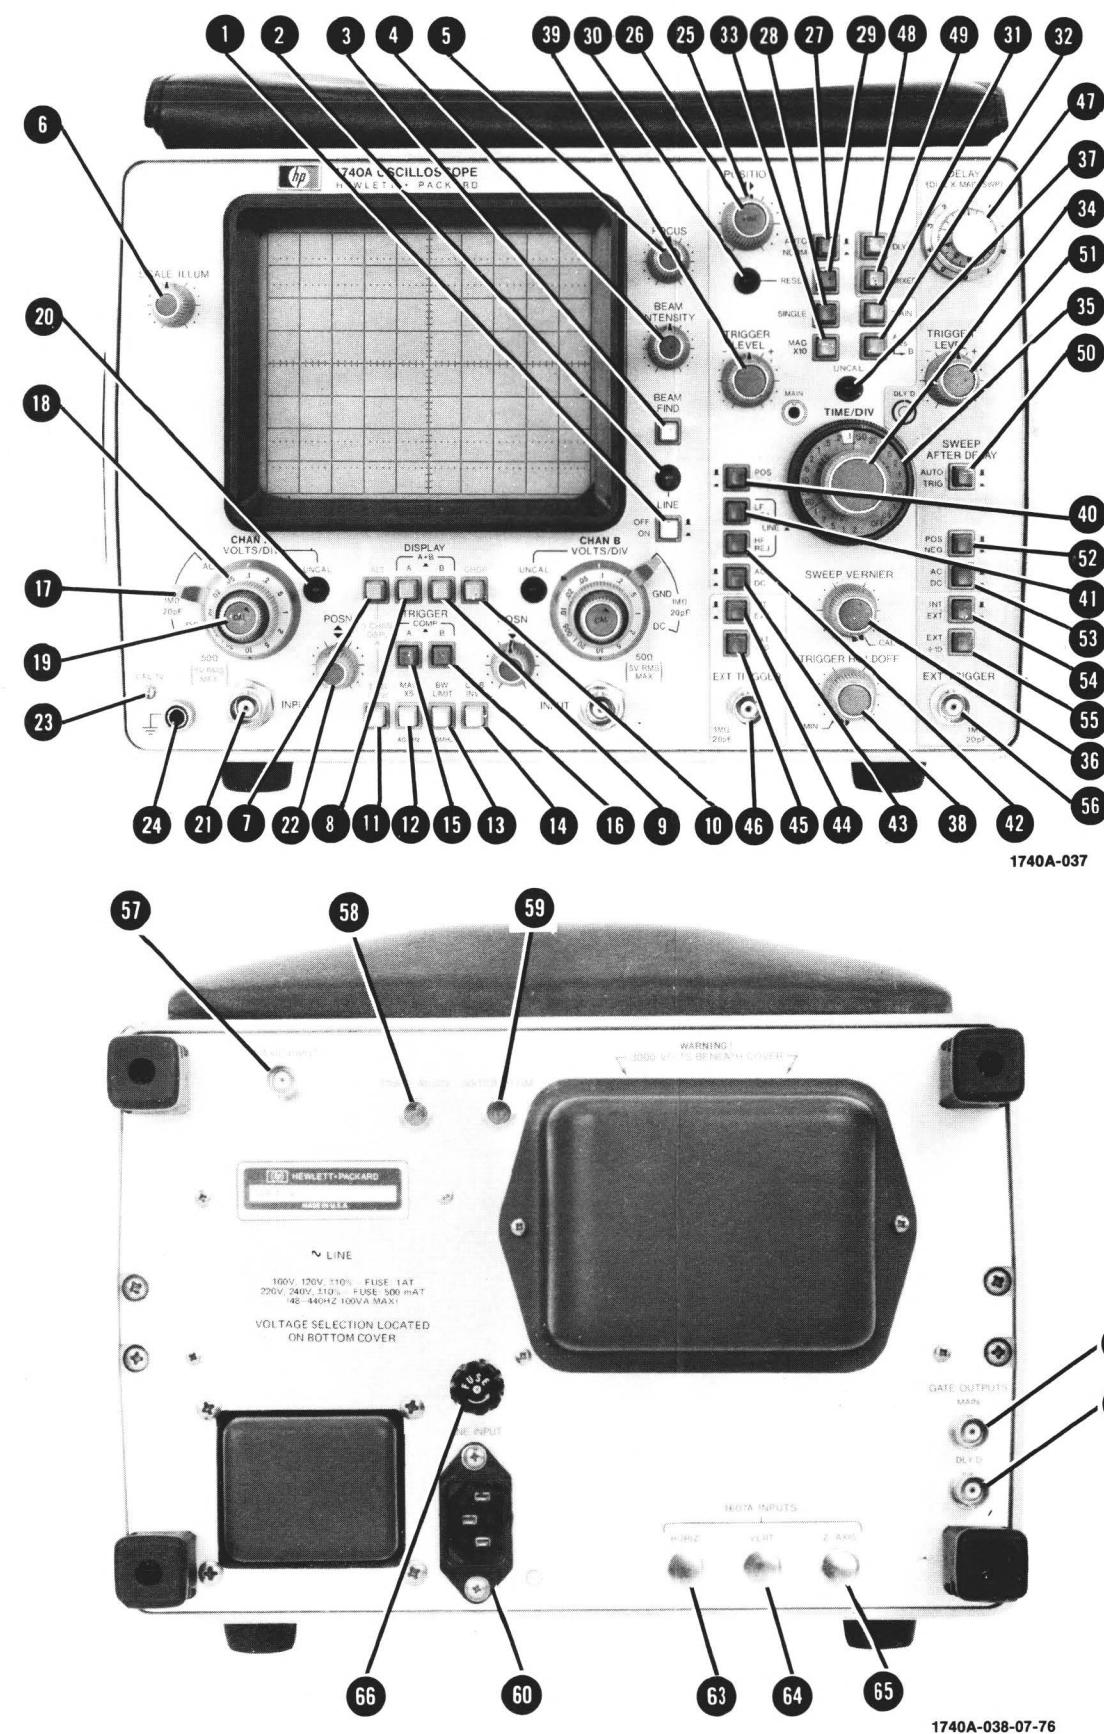


Figure 3-1.
Controls and Connectors
3-0

- 1 **LINE.** Switch turns instrument power on and off.
- 2 **LINE INDICATOR.** Indicator lights when the instrument power is on.
- 3 **BEAM FIND.** Pressing this pushbutton increases the intensity and compresses the display within the viewing area.
- 4 **BEAM INTENSITY.** Controls the brightness of the CRT display.
- 5 **FOCUS.** Adjusts the writing beam for the sharpest trace. Always keep this display focused to prevent damaging the CRT internally.
- 6 **SCALE ILLUM.** Adjust the CRT background illumination for good contrast between the background and the graticule.
- 7 **ALT.** Channel A and B signals are displayed alternately on consecutive sweeps.
- 8 **Channel A.** Displays the channel A input signal.
- 9 **Channel B.** Displays the channel B input signal.
- 8 & 9 **A+B.** Pressing both channel A 8 and channel B 9 displays the algebraic sum of the channel A and channel B input signals. If the channel B display is inverted (press CH B INVT 14), an A minus B display results.
- 10 **CHOP.** Channel A and B signals are displayed simultaneously by switching between channels at a 250-kHz rate.
- 11 **TRIG VIEW.** Displays the selected internal or external trigger signal at a fixed sensitivity of approximately 100 mV/div or 1 V/div with EXT \div 10 45. TRIGGER LEVEL 39 positions the display vertically. Center screen indicates the trigger threshold level with respect to the trigger signal. If ALT 7 or CHOP 10 is selected, three signals are displayed: channel A, the selected trigger signal (at center screen), and channel B.
- 12 **MAG X5.** Magnifies the vertical presentation five times, and increases the maximum sensitivity to 1 mV/div. The bandwidth is decreased to 40 MHz.
- 13 **BW LIMIT.** Reduces the bandwidth of channel A and channel B to approximately 20 MHz.
- 14 **CH B INVT.** Inverts the polarity of the channel B signal. In A+B 8 & 9 mode, pressing CH B INVT 14 results in an A minus B display.
- 15 **TRIGGER A.** Selects a sample of the channel A signal as the trigger signal when INT/EXT 44 is in INT.
- 16 **TRIGGER B.** When in INT, a sample of the channel B signal is selected as the trigger signal.
- 15 & 16 **COMP.** When the display mode is set to channel A, channel B, ALT, or A+B, the sweep is triggered by the displayed signal. When in CHOP, the sweep is triggered by the channel A signal only.
- 17 **AC.** Selects the input coupling and impedance for the vertical amplifiers. In the AC position the dc component of the input signal is blocked. The lower 3-dB limit is approximately 10 Hz.
- 18 **GND.** The input signal is disconnected from the amplifier, and the amplifier input is grounded.
- 19 **DC.** All elements of the input signal are passed to the vertical amplifier. The input impedance is approximately 1 megohm shunted by 20 pF.
- 20 **50 Ω .** The input signal is dc coupled, and the input impedance is 50 Ω . Pull the lever forward and down to select this position. Do not apply more than 5 V rms to the input connector.
- 21 **VOLTS/DIV.** Selects the vertical deflection factor in a 1, 2, 5 sequence from 0.005 V/div to 20 V/div, accurate within 3% with vernier 19 in the CAL position.
- 22 **Vernier.** Provides continuous control of the deflection factor between calibrated VOLTS/DIV ranges. Vernier range is at least 2.5 to 1.
- 23 **UNCAL.** Lights when the vernier control is out of detent position to indicate VOLTS/DIV is uncalibrated.
- 24 **INPUT.** BNC connector to apply external signals to the channel A (Y) and channel B (X) amplifier. Impedance and coupling are selectable by 17. Do not apply more than 250 V (dc + peak ac) or more than 500 V p-p ac at 1 kHz or less.
- 25 **POSN.** Controls the vertical position of the display.
- 26 **CAL 1 V.** Provides a 1-V peak-to-peak (within 1%) square-wave voltage signal recurring at an approximate rate of 1.4 kHz (100 mV peak-to-peak when terminated in 50 Ω).
- 27 **GROUND POST.** Convenient chassis ground connector. Useful to ensure a common ground with equipment under test.
- 25 & 26 **POSITION.** Coarse 25 and FINE 26 adjustments position the display horizontally.
- 27 **AUTO/NORM.** AUTO sweep mode (pushbutton out). A free running sweep provides a bright display in the absence of a trigger signal. NORM sweep mode (pushbutton in) requires an internal or external signal to generate a sweep and must be used if the input frequency is less than 40 Hz.
- 28 **SINGLE.** Sweep occurs once with the same triggering as in NORM. After each sweep, the trigger circuit must be manually RESET 29.
- 29 **RESET.** Momentary pushbutton that arms the trigger circuit in the single-sweep mode. After pressing RESET 29, the sweep can be triggered by an internal or external trigger signal or by rotating the TRIGGER LEVEL control 36 through zero.
- 30 **Reset Lamp.** When lit, indicates the trigger circuit is armed. Lamp goes off at the end of the sweep and remains off until the trigger circuit is again armed by pressing the reset button.
- 31 **MAIN.** Selects main sweep for horizontal display. Sweep rate and triggering are selected by the main-sweep controls 25 - 34, and 36 - 38.
- 32 **A VS B.** Selects an X-Y mode of operation with channel A input (Y-axis) plotted versus channel B input (X-axis). Vertical positioning is adjusted by channel A POSN 22, and horizontal positioning is adjusted by POSITION 25 and FINE 26.
- 33 **OPTION 101.** Deletes the A VS B function and adds logic state display. When the Model 1740A is connected to a HP Model 1607A Logic State Analyzer, pressing STATE DSPL 32 displays a 16-word table of 16-bit words.
- 34 **MAG X10.** Magnifies the horizontal display 10 times, and expands the fastest sweep time to 5 ns/div, maintaining a sweep accuracy within 3% at room temperature.
- 35 **MAIN TIME/DIV.** The inner knob controls the main-sweep rate, which is indicated by the numbers displayed in the knob skirt opening. Sweep accuracy is within 2% (unmagnified) at room temperatures.
- 36 **DLY'D TIME/DIV.** The outer rotating section selects the delayed-sweep rate, which is indicated by the marker on the outer knob. Sweep accuracy is the same as with MAIN TIME/DIV. An interlock is incorporated so the delayed sweep is always faster than the main sweep. When rotated out of the off position in the MAIN mode 31, a portion of the main sweep is intensified indicating the length and delay position of the delayed sweep with respect to the main sweep.
- 37 **SWEEP VERNIER.** Provides continuous adjustment of main sweep TIME/DIV between calibrated positions, extending the slowest sweep to 5 s/div.
- 38 **UNCAL.** Lights when SWEEP VERNIER 36 is out of the CAL detent position, and indicates that the sweep is not calibrated.
- 39 **TRIGGER HOLDOFF.** Increases the time between sweeps and aids triggering on complex displays such as digital words.
- 39 & 51 **TRIGGER LEVEL.** Selects the voltage level on the input trigger signal where the sweep is triggered. With external trigger signals, the trigger level is continuously variable from +1.5 V to -1.5 V on either slope of the input trigger signal; +15 V to -15 V in EXT \div 10 45 mode. With internal trigger signals, the trigger level selects any point on the vertical waveform displayed.
- 40 & 52 **POS/NEG.** Two-position pushbutton switch that selects the slope of the (EXT 44 or INT 44) trigger signal used to start the sweep.
- 41 **LF REJ.** Attenuates internal or external trigger signals below approximately 4 kHz. This is useful to condition high-frequency signals for best synchronization by eliminating unwanted high-frequency signals such as power line interference.
- 42 **HF REJ.** Attenuates internal or external trigger signals above approximately 4 kHz. This is useful to condition low-frequency signals for best synchronization by eliminating unwanted high-frequency signals such as RF.
- 41 & 42 **LINE.** Selecting both LF REJ 41 and HF REJ 42 removes all EXT 44 input or INT 44 displayed signals from the trigger circuit and applies a power-line frequency signal for triggering.
- 43 & 53 **AC/DC.** Selects ac or dc coupling of the input (EXT 44 or 54) or displayed (INT 44 or 54) signal to the trigger circuit. The DC position must be selected for signals below approximately 20 Hz.
- 44 & 54 **INT/EXT.** INT selects a sample of the internal vertical signal chosen by the TRIGGER source 15 or 16, while EXT selects the signal at the EXT TRIGGER 46 or 56 input for application to the main trigger circuit.
- 45 & 55 **EXT \div 10.** Attenuates EXT TRIGGER 46 or 56 input signal by a factor of 10.
- 46 & 56 **EXT TRIGGER.** BNC connector for external trigger input. Input impedance is approximately one megohm shunted by approximately 20 pF. Do not apply more than 250 V (dc + peak ac) or 500 V p-p ac at 1 kHz or less.
- 47 **DELAY.** The DELAY control provides a variable delay time from 0.5 to 10X the MAIN TIME/DIV settings of 100 ns to 2 s.
- 48 **DLY'D.** Selects delayed sweep for horizontal display.
- 49 **MIXED.** Selects main and delayed sweeps for the horizontal display. The first portion of the sweep is at the main sweep rate, and the second portion of the sweep (starting point chosen by DELAY 47) is at the delayed-sweep rate.
- 50 **SWEEP AFTER DELAY AUTO/TRIG.** Selects the method of starting the delayed-sweep when in main intensified, delayed, or mixed mode operation. In AUTO, delayed sweep starts immediately after the delay interval, which is the product of the DELAY 47 dial reading (div) and the main TIME/DIV 34 reading. In TRIG, the delayed-trigger circuit is armed after the delay interval and delayed sweep must be triggered by either an internal or external trigger signal.
- 51 **Z-AXIS INPUT.** BNC connector for intensity modulation of the CRT display. A +4-volt, \geq 50-ns width pulse blanks a trace of any intensity. Do not apply more than \pm 20 V (dc + peak ac).
- 52 **TRACE ALIGN.** Screwdriver adjustment to align the horizontal trace with the graticule.
- 53 **ASTIGMATISM.** Screwdriver adjustment used in conjunction with FOCUS 5 to achieve a clean, sharp spot or trace. Adjustment is easier with a stationary spot.
- 54 **LINE INPUT.** Connector for the power cord.
- 55 **MAIN GATE OUTPUT.** Provides a rectangular output of approximately +2.5 V coincident with the main gate.
- 56 **DLY'D GATE OUTPUT.** Provides a rectangular output of approximately +2.5 V coincident with the delayed gate.
- 57 - 65 **1607A INPUTS.** Option 101 only.
- 61 **HORIZ.** X-axis input from HP Model 1607A.
- 62 **VERT.** Y-axis input from HP Model 1607A.
- 63 **Z-AXIS.** Intensity input from HP Model 1607A.
- 64 **FUSE.** 1 A 250 V SLO-BLO for 100-V or 120-V operation. 0.5 A 250 V SLO-BLO for 220-V or 240-V operation.

SECTION III

OPERATION

3-1. INTRODUCTION.

3-2. This section provides general operating instructions for Model 1740A. Front- and rear-panel controls and connectors are identified and described in figure 3-1. An initial turn-on procedure, operators calibration, trigger selection table, and procedures for obtaining basic displays are also included. The index numbers after control and connector names in the text are keyed to figure 3-1.

3-3. TURN-ON PROCEDURE.

WARNING

Before turning on the oscilloscope, read the safety summary located at the front of this manual.

3-4. To turn on the Model 1740A, perform the following steps:

- a. Turn all control knobs to the 12 o'clock position except verniers 19 and SWEEP VERNIER 36 should be in CAL position; TRIGGER HOLDOFF 38 on MIN. MAIN TIME/DIV 34 fully clockwise.
- b. Verify pushbuttons out except A 8, A 15, and MAIN 31
- c. Press LINE switch 1; LINE indicator 2 should light. After CRT warm up, a free-running trace should be observed near center screen.
- d. Increase (or decrease) BEAM INTENSITY 4 to comfortable viewing level, and adjust FOCUS 5 as necessary for sharpest trace.

3-5. OPERATOR CHECKS.

3-6. A few checks and adjustments may be required to verify that the Model 1740A is operating properly. If the oscilloscope is moved from one electromagnetic environment to another, the trace alignment control may need adjustment to align the horizontal trace with the graticule. Astigmatism and focus controls may need adjustment to obtain the sharpest display. Probe compensation may be required, since total input resistance and capacitance can vary slightly from one oscilloscope to another.

3-7. Adjust trace alignment as follows:

- a. Obtain a display as described in the turn-on procedure.
- b. With vertical POSN control 22, align trace with center graticule line.
- c. With a screwdriver, adjust TRACE ALIGN 58 (on rear panel) for best trace alignment with graticule line.

3-8. Adjust astigmatism and focus as follows:

- a. Select A VS B 32 and lower BEAM INTENSITY 4 to a low level.
- b. Position spot near center of CRT with POSN 22 and POSITION 25 controls.
- c. Adjust FOCUS 5 and ASTIGMATISM 59 (on rear panel) for the smallest round spot.

3-9. Perform probe compensation adjustment as follows:

- a. Connect probe to be compensated to appropriate vertical INPUT connector 21 and the CAL 1 V output 23.
- b. Set VOLTS/DIV 18 to 0.1, MAIN TIME/DIV 34 to 0.2 mSEC, and input coupling 17 to DC.
- c. Adjust main TRIGGER LEVEL 39 for a stable display of the calibrator square-wave voltage. Display should have flat tops. Any distortion in presentation is caused by incorrect probe compensation.
- d. If overshoot or undershoot is present, turn screwdriver adjustment in probe for a flat-top presentation (see figure 3-2).

3-10. Perform vertical accuracy check as follows:

- a. Set controls to positions indicated in turn-on procedure.
- b. Apply CAL 1 V 23 signal to channel A INPUT 21 connector using a BNC to banana plug adapter and a test lead with alligator clips.
- c. Adjust channel A VOLTS/DIV 18 to 0.2 V/div and MAIN TIME/DIV 34 to 0.2 mSEC/div. Square-

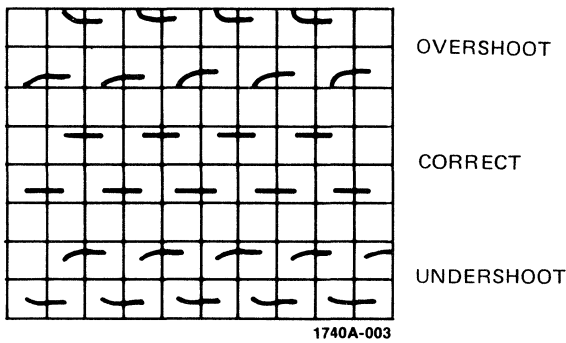


Figure 3-2. Probe Compensation

wave amplitude should be five major divisions within 4%. For complete calibration check, refer to Section V.

3-11. Perform timing accuracy check as follows:

- a. Apply an accurate calibration signal (such as from HP Model 226A Time-mark Generator) to the channel A INPUT **21** connector.
- b. Set controls to the positions indicated in the turn-on procedure except for MAIN TIME/DIV which should be adjusted to 0.5 μ SEC/div.
- c. Set marker on graticule line at far left with horizontal position control. Markers should line up ap-

proximately with each graticule line across the CRT. The marker on the far right-hand side should be within 2 mm of the graticule line.

3-12. TRIGGER SELECTION TABLE.

Table 3-1 will aid in determining the best trigger mode for various signal conditions.

3-13. OBTAINING BASIC DISPLAYS.

3-14. These procedures will aid the operator in becoming familiar with the operation of the Model 1740A so commonly used displays can be obtained. Before performing the procedures, complete the turn-on procedure and adjust the following controls:

- Channel A TRIGGER..... A **15**
- Channel A coupling..... DC **17**
- Channel A VOLTS/DIV **18** 0.05
- MAIN TIME/DIV **34** 0.5 mSEC
- DELAY **47** fully CCW

3-15. NORMAL SWEEP DISPLAY.

- a. Connect a Model 10006D probe to channel A INPUT **21** connector, CAL 1 V **23** output, and ground post **24**.

Table 3-1. Display and Trigger Selection Table

SIGNAL CONDITIONS	DISPLAY MODE	TRIGGER SELECTION			
		A	B	COMP	EXT
I. Single Signals Applied to Channel A or B	A or B	OK	or OK	OK	OK ¹
	ALT ⁵ or CHOP ⁵	OK	or OK	NG	OK ¹
II. Time Related Signals Applied to Channels A & B	ALT	<input type="checkbox"/> OK ²	<input type="checkbox"/> OK ²	NG ³	<input type="checkbox"/> OK ²
	CHOP	<input type="checkbox"/> OK ²	<input type="checkbox"/> OK ²	NG ⁴	<input type="checkbox"/> OK ²
	A+B (A-B)	OK	OK	<input type="checkbox"/> OK ⁶	OK
III. Nontime Related Signals Applied to Channels A & B	ALT	NG	NG	<input type="checkbox"/> OK	NG

¹ Assume time related signal applied.
² Time relation displayed.
³ No time relation displayed.
⁴ If COMP is selected in CHOP, switching overrides and selects A.
⁵ Signal is only displayed on one channel.

⁶ Triggers on algebraic sum or difference of signals.
 OK Useable trigger mode.
 OK Good trigger mode.
 OK Best trigger mode.
 NG Unuseable trigger mode.

b. Adjust POSN 22 to align base of square wave on the center graticule line, and adjust TRIGGER LEVEL 39 for a stable display. A square wave with an amplitude of two divisions and approximately five to nine positive-going pulses will be displayed.

3-16. MAGNIFIED SWEEP DISPLAY.

a. Perform paragraph 3-15 to obtain Normal Sweep Display.

b. Adjust horizontal POSITION 25 to place waveform portion to be magnified on CRT center graticule (see figure 3-3).

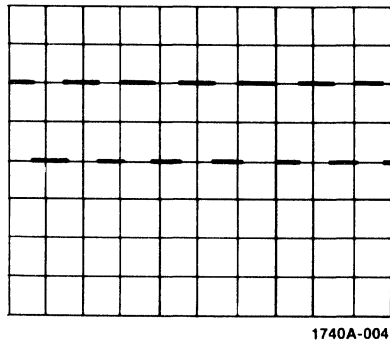


Figure 3-3. Normal Display

c. Press MAG X10 33 and adjust horizontal FINE 26 for precise placement of magnified display (see figure 3-4).

3-17. DELAYED SWEEP DISPLAY.

a. Perform paragraph 3-15 to obtain Normal Sweep Display.

b. Adjust delayed TIME/DIV 35 for 50 μSEC/div, and observe intensified portion of square wave. Set BEAM INTENSITY 4 control to a comfortable viewing level.

c. Set SWEEP AFTER DELAY to AUTO and turn DELAY 47 clockwise until intensified portion of

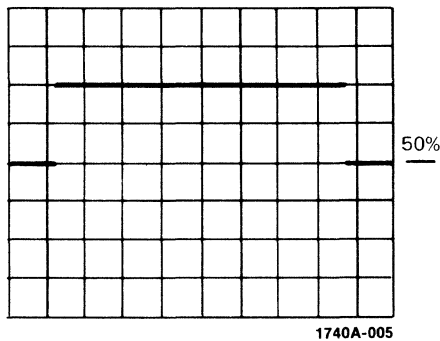


Figure 3-4. Magnified Display

trace is over trace area to be investigated. This is demonstrated in figure 3-5.

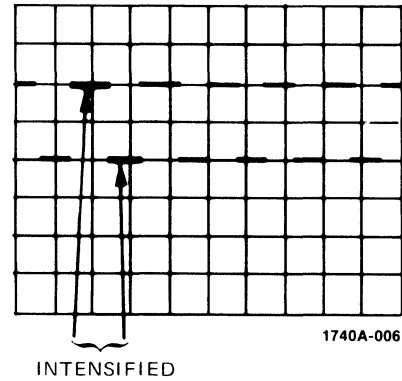


Figure 3-5. Normal Display with Intensified Area

d. Press DLY'D 48 and note that intensified portion of trace is now displayed across entire CRT (see figure 3-6).

e. DELAY 47 control may be adjusted to view other pulses in the pulse train.

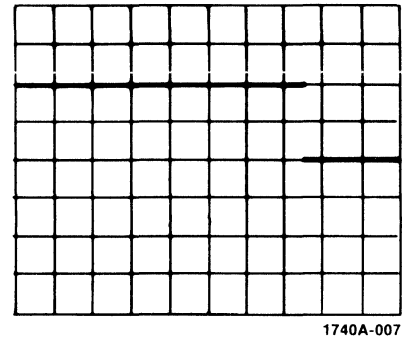


Figure 3-6. Delayed Sweep Display


3-18. MIXED SWEEP DISPLAY.

a. Perform paragraph 3-15 to obtain Normal Sweep Display.

b. Adjust delayed TIME/DIV 35 for 50 μSEC and note intensified portion of square wave. Set BEAM INTENSITY 4 to comfortable viewing level.

c. Turn DELAY 47 clockwise until part of waveform in second half of CRT is intensified (see figure 3-7).

d. Press MIXED 49 and observe that first portion of the display is at main TIME/DIV 34 sweep rate and second portion is at delayed TIME/DIV 35 sweep rate (see figure 3-8). The transition point from main sweep to delayed sweep can be varied by adjusting DELAY control 47.

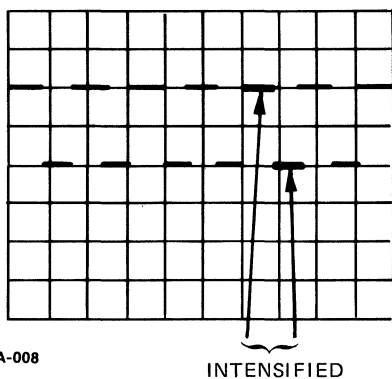


1740A-008

Figure 3-7. Normal Display with Intensified Area

3-19. X-Y DISPLAY.

a. Press A VS B **32**. BEAM INTENSITY **4** may need to be decreased. Apply vertical (Y-axis) signal to channel A INPUT **21** connector and horizontal (X-axis) signal to channel B INPUT connector. Channel A POSN **22** adjusts vertical positioning; POSITION **25** adjust horizontal positioning. Adjust channel A and B VOLTS/DIV **18** controls as required.

b. If display is not visible, press BEAM FIND **3** and adjust channel A and B VOLT/DIV controls until display is compressed vertically. Center compressed display with POSN **22** and POSITION **25**

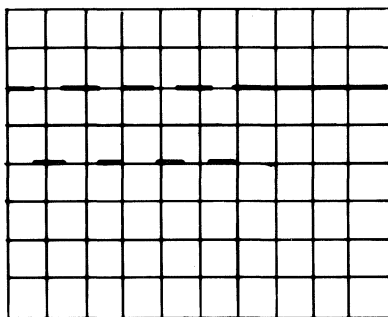

1740A-009

Figure 3-8. Mixed Sweep Display

controls. Release BEAM FIND, and adjust FOCUS **5** for a sharp display.

3-20. SINGLE SWEEP OPERATION.

3-21. Single sweep mode is often used to photograph single occurrence events. To use this mode, proceed as follows:

- a. Select SINGLE **28** sweep mode.
- b. Set AUTO/NORM to NORM **27**.
- c. Set all trigger processing controls to desired settings; for example, INT/EXT **44**, slope **40**, and TRIGGER LEVEL **39**.
- d. Depress RESET **29** pushbutton; the red RESET **30** lamp will light.

3-22. The sweep circuitry is now armed; as soon as a trigger signal is received that meets the preset requirements (slope, coupling, level, etc.), the time base will generate one sweep. As soon as the sweep ends, the RESET **30** lamp will extinguish and the time base must be reset again.

3-23. SINGLE SWEEP USING TRIGGER VIEW.

3-24. To use the trigger view feature in single sweep, perform the following steps:

- a. Press TRIG VIEW **11**. This turns off both vertical channels; however, trigger view circuitry will not be activated until a certain transition occurs at the end of the sweep.
- b. To activate trigger view, press RESET **29** and rotate TRIGGER LEVEL **39** from one extreme to the other or engage AUTO **27** and press RESET, then disengage AUTO.

3-25. After one sweep has been manually generated, the necessary transition will have occurred and trigger view mode will operate in a normal manner.

SECTION IV

PRINCIPLES OF OPERATION

4-1. INTRODUCTION.

4-2. This section contains functional descriptions keyed to simplified block diagrams. The block diagrams are drawn for function and do not show circuit details. Schematics and an interconnection diagram are located in Section VIII.

4-3. VERTICAL SECTION BLOCK DIAGRAM. (Figure 4-1.)

4-4. INPUT ATTENUATORS. The attenuators have two functions: (1) they select the type of input coupling (50 Ω , DC, GND, or AC), and (2) they determine the vertical deflection factor (5 mV/div to 20 V/div) as selected by the front-panel VOLTS/DIV switches. Only contact strips and their actuating cams are contained in the attenuator assemblies. The major part of each attenuator is on the preamplifier substrate. The only passive attenuation is a X100 section preceding the discrete, dual-FET impedance converter in each channel.

4-5. VERTICAL PREAMPLIFIER. The preamplifier substrate (A3A1) performs the necessary control functions for both channels A and B, including six de-actuated ranges of attenuation per channel. Along with the X100 section, this configuration provides 12 calibrated levels of vertical sensitivity, ranging from 5 mV/div to 20 V/div. Peripheral circuitry includes control logic for the preamplifier substrate and a trigger-view amplifier, which routes signals from the external trigger input through the delay line and output amplifier.

4-6. DELAY LINE. The purpose of this assembly is to delay the vertical signal approximately 100 nano-seconds. This allows the sweep to trigger before the vertical signal reaches the CRT plates.

4-7. VERTICAL OUTPUT AMPLIFIER. The vertical output amplifier provides drive to the CRT vertical deflection plates.

4-8. HORIZONTAL SECTION BLOCK DIAGRAM. (Figure 4-1.)

4-9. TRIGGER CIRCUIT. The internal sync amplifier provides the signal for synchronization to the vertical signal. The set and trigger gates drive a current switch that starts the sweep. In the main AUTO mode, the bright-line auto circuit detects any absence of trigger signal and forces the main sweep to operate.

4-10. In delayed sweep, the main sweep and the DELAY potentiometer drive the delay comparator. When the comparator conducts, it enables the set and trigger gates for delayed sweep. In the AUTO SWEEP AFTER DELAY mode, the delayed sweep starts when the comparator conducts. In TRIG SWEEP AFTER DELAY, the delayed sweep will not conduct unless a trigger signal occurs after the trigger gates are enabled.

4-11. SWEEP AND INTEGRATOR CIRCUITS. The main and delayed sweep circuits initiate horizontal sweeps by the trigger signal applied to their inputs. Miller integrators produce the horizontal sweep ramps; their slopes are controlled by the front-panel TIME/DIV switches. The outputs from the Miller integrators are applied through the horizontal display mode switches to the horizontal preamplifier.

4-12. The horizontal sweep is also compared to a reference voltage by a ramp comparator that drives the reset circuit. The reset and holdoff circuits control the timing sequence of the sweep ramp.

4-13. HOLDOFF CIRCUIT. The holdoff circuit establishes a time interval at the end of the sweep that disables the trigger generator. The trigger generator is armed at the end of holdoff and is ready for the next trigger signal. The duration of holdoff is controlled by the TIME/DIV setting and the TRIGGER HOLD-OFF control.

4-14. HORIZONTAL PREAMPLIFIER. The horizontal preamplifier provides amplification for the sweep ramp. The horizontal POSITION control establishes a reference level for the horizontal sweep. Trace magnification (X10) is also accomplished in this stage. When the BEAM FIND switch is pressed, the emitter current in the output stage of the preamplifier is reduced and the horizontal output stage cannot drive the beam beyond the viewing area of the CRT.

4-15. HORIZONTAL OUTPUT. The horizontal output stage provides drive to the CRT horizontal deflection plates.

4-16. GATE CIRCUITRY. (Figure 4-2.)

4-17. The gate amplifier assembly contains the circuitry necessary to control brightness of the CRT display. An intensity control circuit is used for brightening or blanking the CRT when necessary. BEAM FIND, and BEAM INTENSITY controls are part of the gate amplifier assembly.

4-18. HIGH-VOLTAGE POWER SUPPLY. (Figure 4-2.)

4-19. The high-voltage power supply consists of a high-voltage oscillator, a high voltage transformer, and a rectifying circuit. The high-voltage oscillator produces cathode, grid, and focus voltages for the CRT. A secondary winding on the high-voltage transformer provides voltage for the CRT cathode heater.

4-20. The rectified CRT cathode voltage is sampled and fed back to the high-voltage oscillator. Changes in cathode voltage are fed back to the high-voltage oscillator, causing the amplitude of its oscillation to change. The change corrects the rectified cathode voltage returning it to the normal operating value.

4-21. The unrectified cathode voltage in the secondary of the high-voltage transformer is applied to a multiplier assembly where it is multiplied four times. The multiplier output is connected to the CRT post-accelerator.

4-22. LOW-VOLTAGE POWER SUPPLY. (Figure 4-2.)

4-23. The low-voltage power supply operates from an ac power source. The ac line is applied to the input power circuit (100-, 120-, 220-, or 240-Vac operation is selectable). The input power circuit contains the ac line protection fuse. The ac input is applied to a step-down power transformer.

4-24. Secondary outputs from the power transformer are applied to rectifiers and voltage regulator circuits, which convert input ac power to usable dc outputs of different voltage levels.

4-25. CIRCUIT DETAILS.

4-26. The following paragraphs provide a detailed explanation of individual circuits in the Model 1740A. Circuits that are identical for both channels are explained for channel A only.

4-27. ATTENUATOR ASSEMBLIES. (Schematic 4.)

4-28. **GENERAL INFORMATION.** The channel A attenuator is a cam-actuated switch assembly. Only contact strips and their actuating cams are contained in the switch assembly. The contacts short appropriate pads on the preamplifier circuit board and only the first five (A1S1A-E), controlling the input coupling modes (AC, GND, DC, and 50 Ω) and the X100 discrete attenuator, carry signal currents. The second five contacts (A1S1F-J) switch dc control voltages to the preamplifier substrate (A3A1) that switch attenuation on the substrate.

4-29. **INPUT.** The input signal applied to channel A INPUT connector J6 is routed through appropriate

contacts A1S1A-E. With input coupling in the AC position (A1S1B closed; A1S1A, C open), the input signal is applied through capacitor A3C1 to the 1-megohm input section in the preamplifier. The value of A3C1 is such that signals below 10 Hz will be attenuated. In GND position (A1S1C closed; A1S1A, B open) the input signal is disconnected and the attenuator input is grounded through A3R1. In DC position (A1S1A, B closed; A1S1C open) a straight-through connection applies the input signal directly to the high impedance circuit of the attenuator. When input coupling is in the 50 Ω position (A1S1A-C closed), the input signal is terminated in 50 ohms.

4-30. **ATTENUATOR STAGES.** The VOLTS/DIV switch activates various combinations of switch closures (A1S1D-J) to obtain the 12 calibrated ranges of vertical sensitivity from 5 mV/div to 20 V/div. The input attenuator has a X1 and a X100 position, and preamplifier substrate A3A1 has a X1 and X10 attenuator section followed by a second section providing a X1, X2, X4 attenuation sequence that repeats four times through the 12 ranges of vertical sensitivity. In the 5 mV/div VOLTS/DIV position, the input attenuator is in the X1 position and both attenuator sections in A3A1 are set to X1 attenuation. In the 10 mV/div and 20 mV/div positions, the second attenuator section in A3A1 steps to the X2 and X4 attenuation ranges respectively. In the 50 mV/div position, the second attenuator section reverts back to the initial X1 attenuation range, but the X10 attenuator in the first section of A3A1 is activated. For 100 mV/div and 200 mV/div, the second attenuator section again steps to the X2 and X4 attenuation ranges. The input attenuator is next switched to the X100 position for the remaining six ranges from 0.5 V/div to 20 V/div, and the sequence described for X1 input attenuation is repeated.

4-31. VERTICAL SECTION. (Schematics 4, 5, and 6.)

4-32. **GENERAL INFORMATION.** Signal conditioning is accomplished primarily by two substrates: preamplifier substrate (A3A1) and vertical output amplifier substrate (A5A1). The preamplifier substrate provides two pairs of differential outputs: the main vertical signal driving the delay line and the internal sync signal. The vertical output amplifier substrate provides the drive capability for the CRT vertical deflection plates.

4-33. **PREAMPLIFIER STAGE.** Since channels A and B are almost identical, only channel A will be described in detail. Where channel B differs from channel A, the difference will be discussed.

4-34. The input signal from the 1-megohm input section is applied to a high-to-low impedance converter stage consisting of a dual field-effect transistor (FET) A3Q2 connected in a source follower configuration. The second half of the FET, A3Q2B, provides a current bias for the source of A3Q2A. Because they

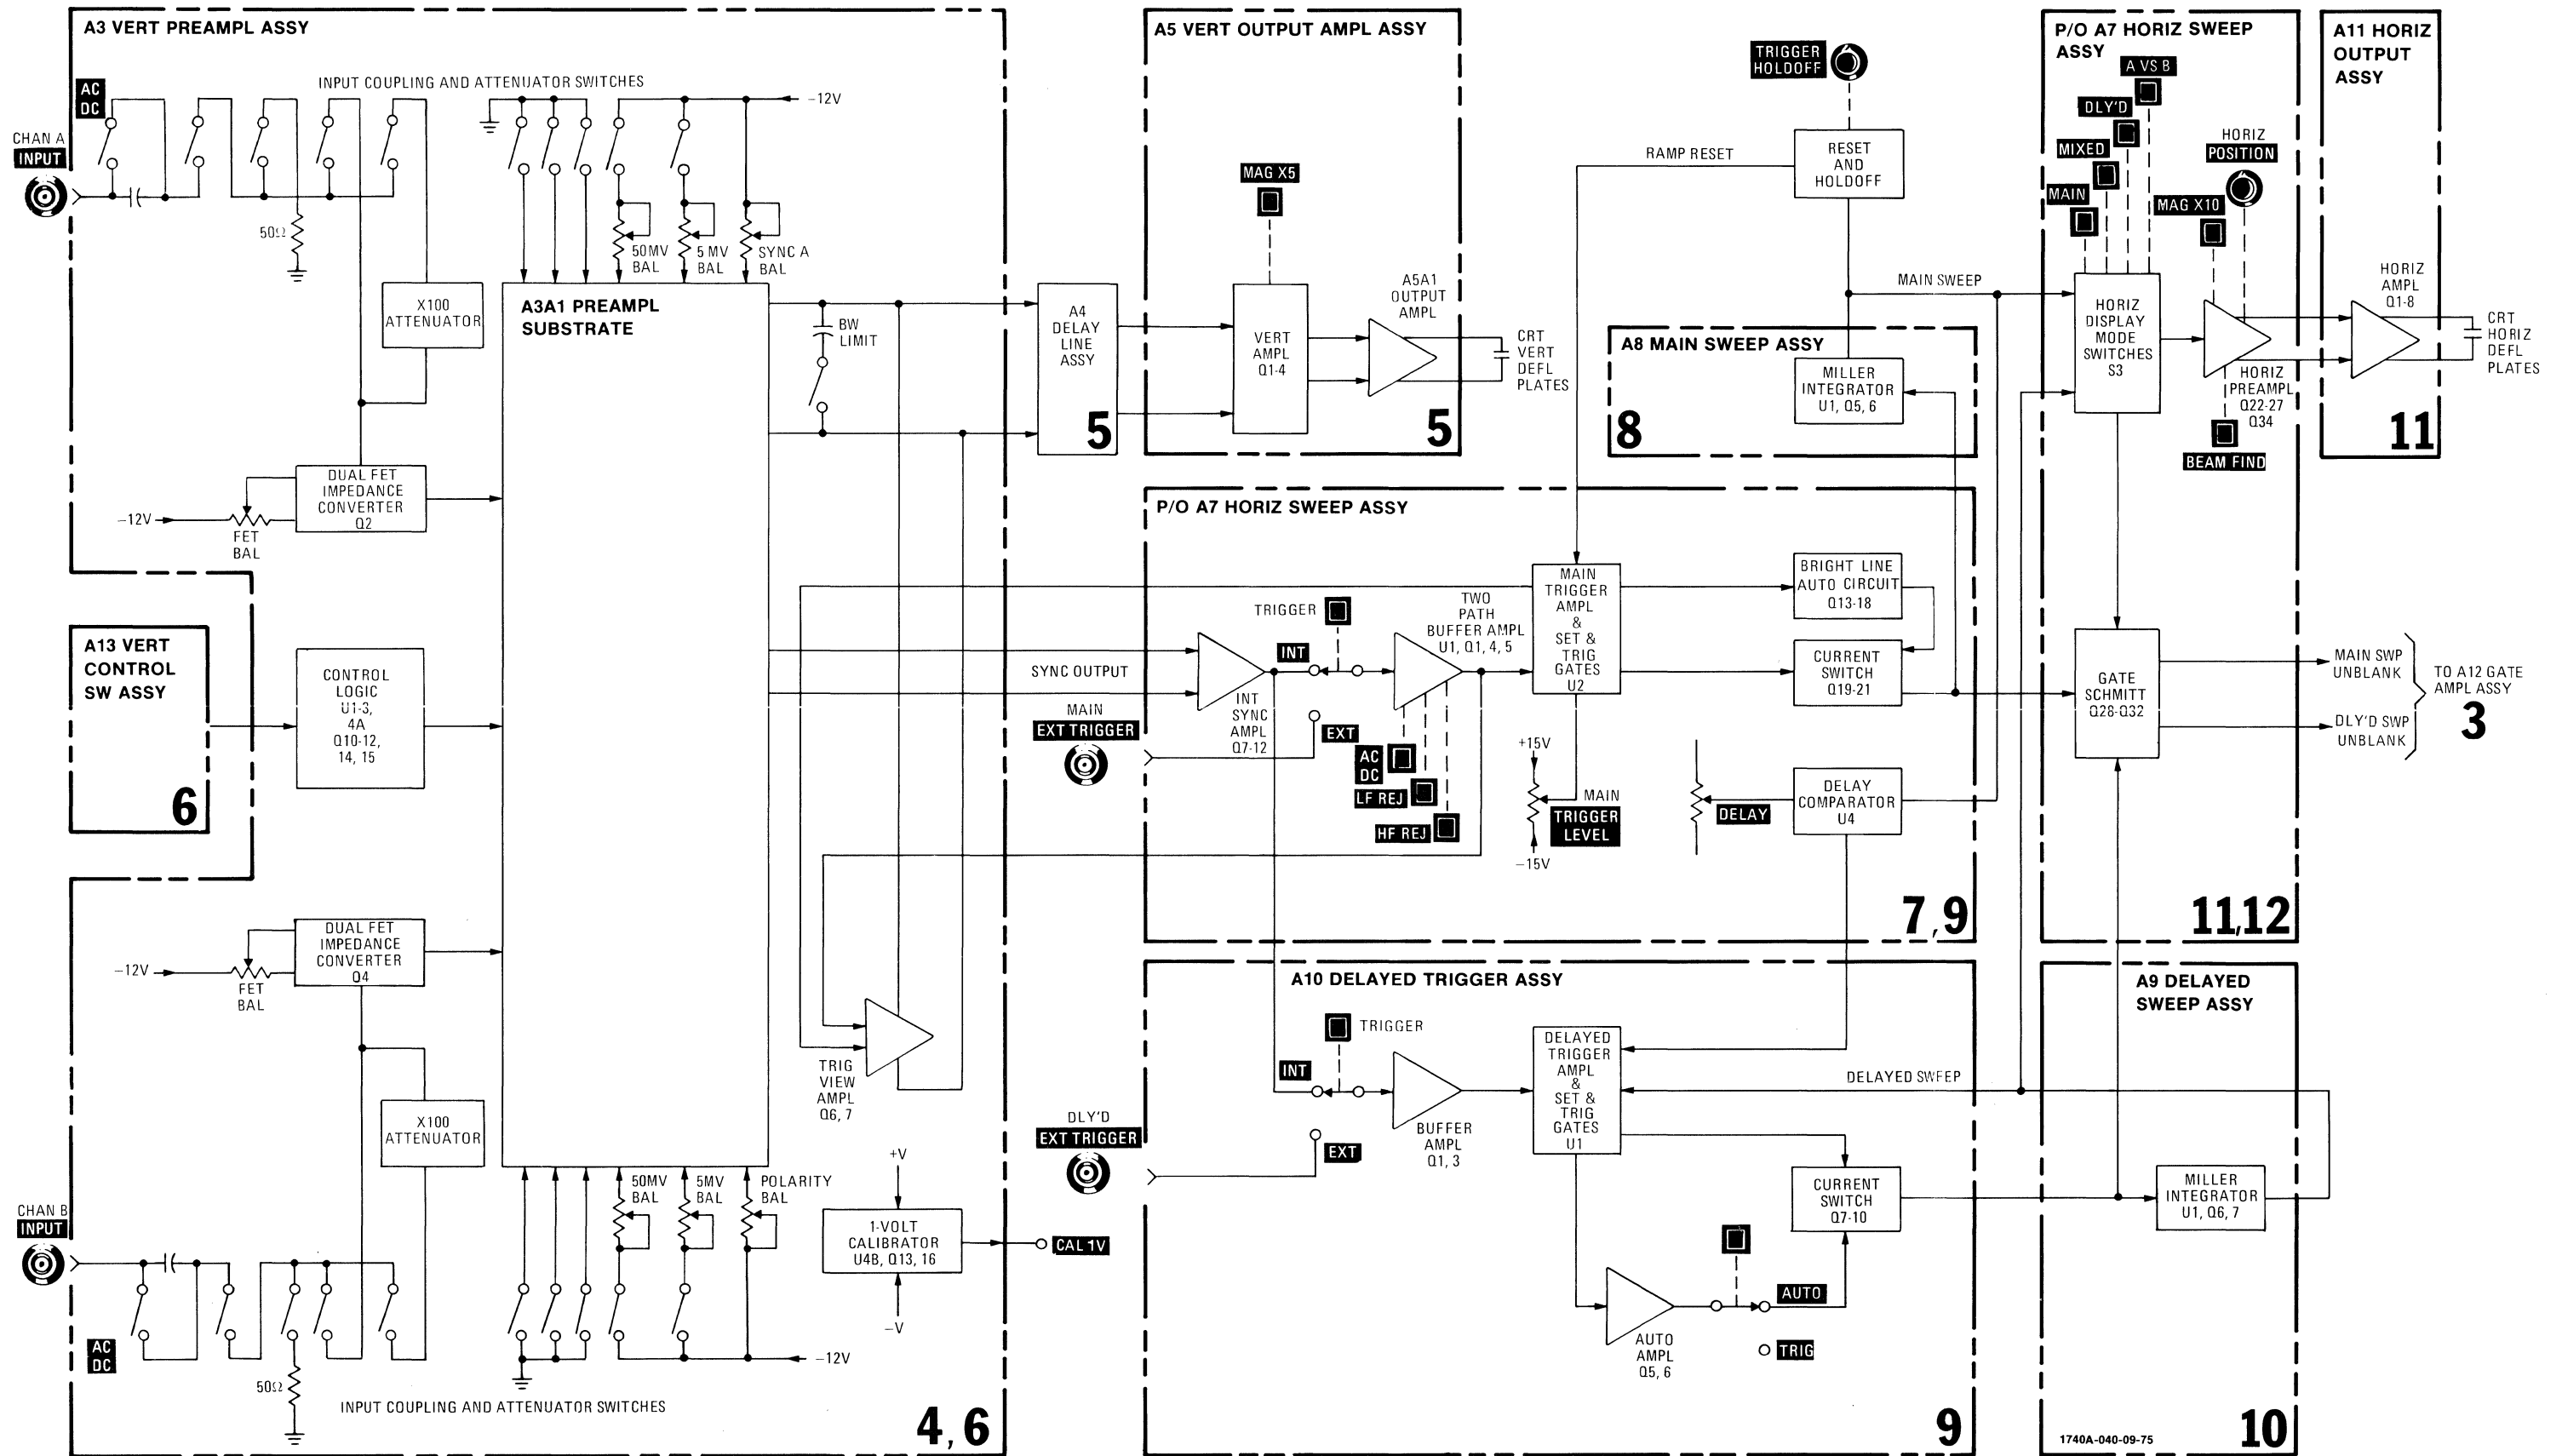


Figure 4-1. Vertical and Horizontal Block Diagram 4-3

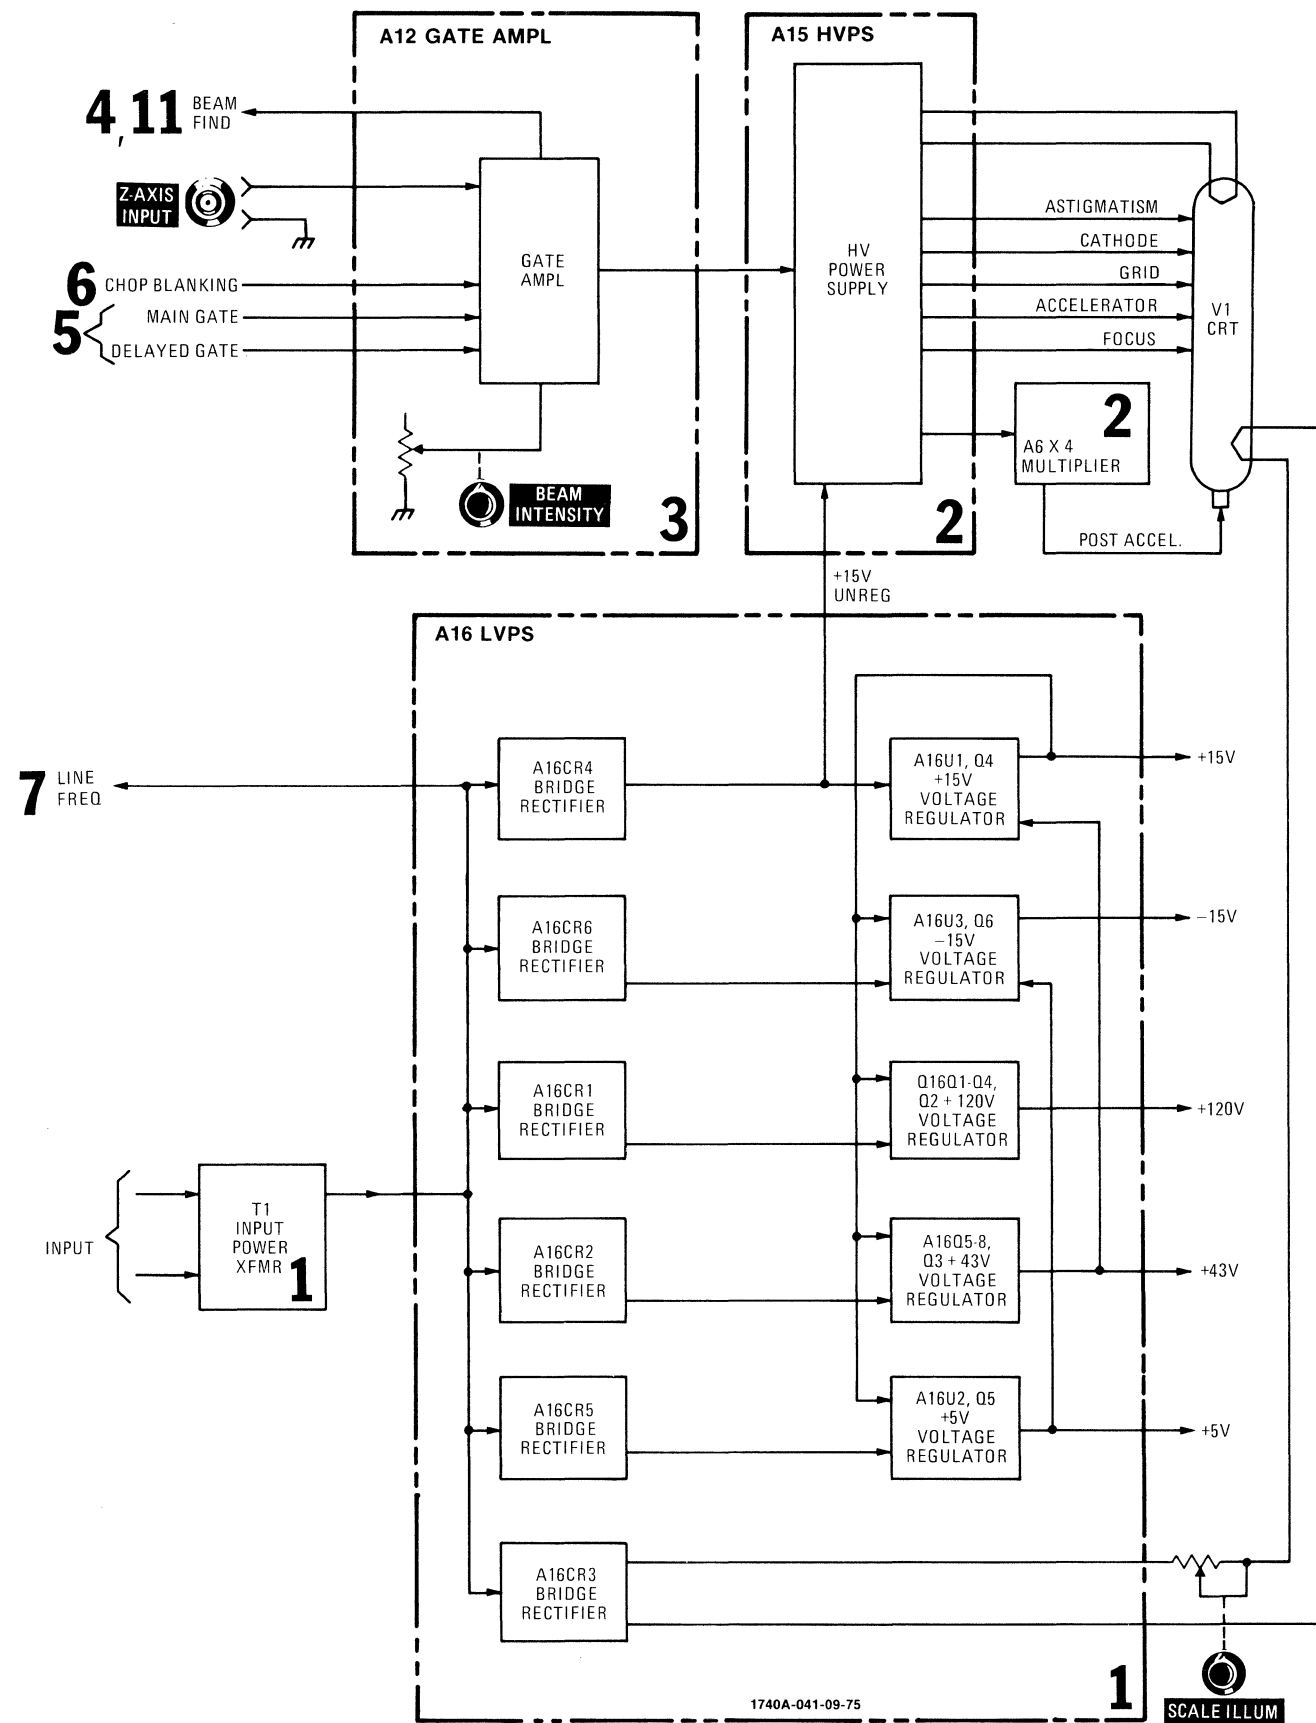


Figure 4-2. LVPS, HVPS, and Gate Amplifier Block Diagram

are a matched pair, the current changes due to temperature variation track. Therefore, the source voltage of A3Q2A will not vary substantially with temperature. The FET balance adjustment, A3R11, ensures a zero-volt input to pin 10 of A3A1, the channel A input.

4-35. The preamplifier substrate contains 31 thick-film resistors and three monolithic chips: channel A and B preamplifiers and a delay-line driver amplifier. Each of the preamplifier chips consists of 27 transistors, 23 diodes, and 34 monolithic resistors. These chips perform the conventional control functions of signal polarity, gain vernier, channel switching, and sync extraction; in addition, they control six ranges of vertical sensitivity. The gain chip is a four-transistor differential shunt-feedback amplifier that provides a current gain of eight and directly drives the balanced delay line.

4-36. The output of A3A1 is connected to delay line A4. The bandwidth limit circuit shunts the delay line input, and by switching the appropriate capacitance across the line limits the frequency response to approximately 20 MHz. Trigger view amplifier, A3Q6/A3Q7, also at the input of the delay line, routes signals from the external trigger input or from the vertical internal sync line through the delay line and Vertical Output Amplifier Assembly A5. In channel A or B DISPLAY, TRIG VIEW switch A3S1A replaces the main channel display with the triggering waveform. In ALT or CHOP, channel A, channel B, and the trigger signal are displayed.

4-37. When BEAM FIND switch A12S1 (schematic 3) is pressed, current is applied through A3CR4, A3CR5, A3CR6, and A3CR7 lowering sensitivity at the input to the delay line enough to return the trace to the viewing area of the CRT.

4-38. Each channel has a vertical POSN control (A3R61 and A3R36) operated from the front panel. Vertical positioning of the viewed display is accomplished in the appropriate preamplifier chip in A3A1 by differentially varying the bias current in the main signal path. This results in shifting the differential dc level of the vertical output plates and causes the trace on the CRT to move up or down.

4-39. The display of an input signal applied to channel B can be inverted by front-panel CH B INVT switch A3S1D. This function is accomplished by the channel B preamplifier chip in A3A1.

4-40. With front-panel vernier controls A1R1 and A2R1 out of the CAL position, the gain of each channel is continuously variable over at least a 2.5:1 range. These resistors control current ratios determining the gain of analog multiplier sections in each channel. The circuitry is contained on preamplifier chips in A3A1. Channel B has a vernier interface circuit, A3Q21, that allows A2R1 to control channel B gain in both normal and A VS B operation.

4-41. **PREAMPLIFIER CONTROLS.** (Schematic 6.) Vertical Control Switching Assembly A13 controls operation of substrate A3A1 on the vertical preamplifier as described in the following paragraphs.

4-42. **Channel A Display.** The channel A input signal is selected for display by pressing DISPLAY A switch A13S2B. Engaging A13S2B grounds the preset input (pin 4) of A3U2A, forcing Q high (pin 5). This state along with a high Q output (pin 5) from A3U4A Forces NAND gate A3U3C low (pin 8), which turns channel A on at pin 1 of A3A1. A voltage of 2.7 V at test point 7 indicates channel A is on; 4.7 V indicates channel A is off.

4-43. **Channel B Display.** The channel B input signal is selected for display by pressing DISPLAY B switch A13S2C. Engaging A13S2C grounds the clear input (pin 1) of A3U2A, forcing \bar{Q} high (pin 6). This state is inverted by A3U3A (pin 3) to turn channel B on at pin 20 of A3A1. A voltage of 2.7 V at test point 5 indicates channel B is on; 4.7 V indicates channel B is off.

4-44. **Channel A+B Display.** To algebraically display input signals applied to both channels, DISPLAY switches A13S2B and A13S2C are pressed simultaneously; preset (pin 4) and clear (pin 1) inputs of A3U2A are grounded, forcing Q (pin 5) and \bar{Q} (pin 6) outputs high. These states are inverted by A3U3A and A3U3C to force both channels on (2.7 V at test points 5 and 7).

4-45. **ALT Mode Display.** When ALT mode is selected by DISPLAY switch A13S2A, alternate control pulses correlated to the horizontal sweep are routed through the saturated transistor switch A3Q10 and emitter follower A3Q12 to the clock input (pin 3) of A3U2A. As A3U2A is switched by successive sweeps, channels A and B are turned on alternately.

4-46. **CHOP Mode Display.** When CHOP mode is selected by DISPLAY switch A13S1C, channels A and B are alternately switched on as they were for ALT display by A3U2A, except in CHOP mode the clock signal for A3U2A comes from chop oscillator A3U1B-D through saturated transistor switch A3Q11 and emitter follower A3Q12. The chop oscillator runs continuously at 500 kHz; therefore, a single channel cycles on and off at 250 kHz.

4-47. **TRIG VIEW Mode Display.** If either channel A or channel B display is chosen, pressing the TRIG VIEW switch A3S1A forces a low state on one input of NAND gates A3U3A and A3U3C. This condition ensures that both channels are off (4.7 V on test points 5 and 7). The Q output of A3U4A (pin 6) is forced high by a low input. This state switches on transistors A3Q8 and A3Q9, thereby turning on trigger view amplifier, A3Q6/A3Q7.

4-48. If ALT or CHOP modes are chosen, forced low states are removed from the inputs of A3U3A and

A3U3C and a divide by three counter, formed by A3U2A, A3U4A, and A3U3C, is switched by either the chop oscillator or alternate control line. In this manner, channel A, channel B, and the trigger signal are alternately switched on.

4-49. Channel A Sync Circuit. Vertical Control Switching Assembly A13 contains the sync control switches necessary for selective internal triggering.

4-50. Engaging TRIGGER A sync switch A13S1A grounds the preset input of A3U2B (pin 10), forcing Q high (pin 9). This state is inverted by A3U3D, placing a logic "0" on the channel A preamplifier sync control line (test point 8) through emitter follower A3Q14 to pin 13 on A3A1. Zero volts at test point 8 indicates sync A is on; 4.2 V indicates sync A is off.

4-51. Channel B Sync Circuit. Engaging the TRIGGER B Sync Switch, A13S1B, forces the clear input of A3U2B (pin 13) low causing \overline{Q} (pin 8) to go high. This state is inverted by A3U3B, placing a low on the channel B preamplifier sync control line (test point 6) through emitter follower A3Q15 to pin 32 on A3A1. Zero volts at test point 6 indicates sync B is on; 4.2 V indicates sync B is off.

4-52. Composite Trigger Circuit. When composite trigger is selected, channel A and B sync switches, A13S1A and A13S1B, are pressed simultaneously. In A+B display mode low states appear on both clear (pin 13) and preset (pin 10) inputs of A3U2B forcing both Q (pin 9) and \overline{Q} (pin 8) to their high states. This condition forces the sync control lines low through A3U3D, A3Q14, A3U3B, and A3Q15 to pins 13 and 32 on A3A1. With both sync paths on, the display is triggered by A+B. If channel B is inverted, sync B is also inverted. In ALT display mode, engaging A13S1A and A13S1B simultaneously removes preset and clear overrides from A3U2B and allows this flip-flop to switch from the alternate control signal generated in the horizontal section. This triggers channel A from the channel A signal and channel B from the channel B signal. If trigger view is also selected, triggering will change to channel A only. This is accomplished by grounding one input of A3U1A (pin 1). In CHOP mode, engaging A13S1A and A13S1B selects sync A only as the internal trigger source. Once again, pin 1 of A3U1A is grounded.

4-53. DELAY LINE ASSEMBLY. The output of preamplifier substrate A3A1 is applied to delay line assembly A4. The delay line has a differential impedance of approximately 180 ohms and provides a time delay of 100 nanoseconds which allows the internal sync signal to trigger the time base and start the horizontal sweep. Without the insertion of this time delay in the signal path, the sweep would start after the signal reached the vertical deflection plates of the CRT, and the leading edge of fast rise time signals would not be displayed.

4-54. VERTICAL OUTPUT AMPLIFIER. (Schematic 5.)

Vertical output assembly A5 consists of a vertical amplifier and output amplifier substrate A5A1. Vertical amplifier A5Q1/A5Q3, terminates the differential delay line assembly A4 and translates the common-mode bias level to ground for the output amplifier substrate. A X5 magnifier, A5Q2 and A5Q4, increases the vertical gain by a factor of five, but with the bandwidth limited to approximately 40 MHz. Engaging MAG X5 switch A3S1B turns off A5Q2 and A5Q4 (normally saturated). This increases system gain by a factor of five and complementary circuitry on the preamplifier simultaneously diminishes position range by the same factor to maintain a consistent position control range.

4-55. Substrate A5A1 contains nine thick-film resistors, one high-frequency monolithic chip, and two discrete transistor chips. It provides drive capability for the CRT vertical deflection plates and has a differential voltage gain in excess of 100. High frequency adjustments A5R24, A5R20, A5R19, and A5R22 control the shape of the pulse response.

4-56. HORIZONTAL SECTION.

4-57. MAIN TRIGGER CIRCUITRY. (Schematic 7.) The internal sync signal developed on vertical preamplifier A3 is connected to the base of A7Q9 and A7Q10 through a cable. Shunt feedback stage A7Q11 drives emitter followers A7Q7, A7Q8, and A7Q12. The output of A7Q12 goes to display switch A7S3D and is used in the A VS B display mode. Transistor A7Q7 provides internal sync drive for main sweep, and A7Q8 provides internal sync drive for delayed sweep. When EXT trigger mode is selected, the input is from EXT TRIGGER connector J1 of the front panel. This signal is applied to INT/EXT switch A7S2E through EXT \div 10 switch A7S2F. When A7S2F is engaged, the external trigger signal is reduced by a factor of 10.

4-58. The sync signal (external or internal) is applied to a two-path amplifier. The high-frequency path through A7Q4 and A7Q5, passes frequencies above 4 kHz. The low-frequency path through A7U1, passes all frequencies below 4 kHz. Both the high- and low-frequency cutoffs are determined by A7R5 and A7C6. With the LF REJ switch A7S2B engaged, the input to A7U1 is disconnected and only the high-frequency path is enabled. With HF REJ switch A7S2C engaged, A7Q4 is biased off and only the low-frequency path is enabled. When AC/DC switch A7S2D is in its AC position, the dc component of the trigger signal is blocked. When both HF REJ and LF REJ are engaged, a line frequency signal from the power supply is applied to A7U1. The outputs of the two-path amplifier are summed at the base of A7Q1 and the emitter of A7Q1 drives the signal input (pin 14) of A7U2.

4-59. The trigger level signal is applied to the level input (pin 11) of A7U2 through A7Q6. Integrated circuit A7U2 contains a differential amplifier and three dual-input Schmitt triggers. The first Schmitt trigger

determines the end of sweep and disables the other two Schmitt triggers until the end of the holdoff period. At the end of holdoff, the holdoff comparator develops a reset signal that is applied to the first Schmitt trigger. This arms the second Schmitt trigger. The second Schmitt trigger conducts when the input trigger signal crosses the trigger level threshold. This arms the third Schmitt trigger that conducts when the input signal recrosses the trigger level threshold.

4-60. The input sensitivity on which A7U2 generates a trigger signal is controlled by A7R20 and input sync signal slope is controlled by main slope switch A7S2A. A7S2A applies a ground to pin 16 for positive-slope triggering and +5 V for negative-slope triggering.

4-61. The output of A7U2 (pin 1) is applied to a three-transistor current switch (A7Q19, A7Q20, and A7Q21). When AUTO/NORM switch A7S1A is in NORM, the base of A7Q21 stays at +5 V and A7Q21 stays off. The bases of A7Q19 and A7Q20 are differentially driven from A7U2. The collector of A7Q19 going low starts the sweep. The complementary signal at the collector of A7Q20 enables the gate Schmitt (schematic 12) and turns the gate on. Current switch A7Q13/A7Q14 drives the RESET light and the bright-line auto circuit.

4-62. The bright-line auto circuit consists of A7Q15, A7Q16, A7Q17, and A7Q18. When the AUTO/NORM switch is in NORM, no bias is applied to the emitters of A7Q15, A7Q16, and A7Q17, and the bright-line auto circuit is inoperative. In the AUTO position, a bias is applied to these transistors and the bright-line auto circuit is activated. As long as the trigger circuit is being switched at a rate above 40 Hz, A7C13 will stay high and A7Q17 will remain off. When the trigger signal is lost, A7C13 discharges and A7Q17 turns on. As long as the trigger signal is absent, the bright-line auto circuit loop operates as follows. When A7Q17 turns on, A7Q21 turns on and main sweep starts. When the sweep reaches +11 volts, the reset Schmitt trigger on A7U2 conducts forcing pin 6 low. This turns on A7Q14 and A7Q15; A7Q17 and A7Q21 turn off and the sweep resets. The sweep stays reset until the end of holdoff. At the end of holdoff, pin 6 of A7U2 goes high, A7Q15 turns off and A7Q17 turns on starting another sweep. This completes the cycle and sweep continues in this mode until a trigger signal is present.

4-63. For single-sweep operation, SINGLE switch A7S1C is engaged. The SINGLE mode overrides the AUTO switch and also applies a bias signal of +4.7 volts to pin 5 of A7U2. This bias on pin 5 prevents the input Schmitt of A7U2 from resetting at the end of holdoff, and no trigger signal can be developed. The Schmitt does not reset until the RESET switch, A7S1B, is pressed. Capacitor A7C14 is at ground potential and pressing RESET momentarily pulls pin 5 of A7U2 low and resets the input Schmitt. A trigger signal can now be developed.

4-64. MAIN SWEEP AND INTEGRATOR. (Schematics 7, 8, and 9.) The main integrator, in conjunction with the sweep time controls, generates the main sweep. The Miller integrator circuit is comprised of current source A8Q13, source follower A8Q5, common-emitter stage A8Q6, and the integrating capacitor between the gate of A8Q5 and the collector of A8Q6. In the reset condition, current for A8Q13 is supplied through A8Q3. The main-sweep output stays at +1 volt. When a trigger signal is received, the base of A8Q1 goes low and A8Q1 turns on. This turns A8Q3 off. Current in A8Q13 is now supplied through the integrating capacitor resulting in a linear ramp at the collector of A8Q6. This ramp drives emitter followers A8Q8, A8Q9, and A8Q10. When the ramp reaches +11 volts, the emitter of A8Q10 is at +5 volts and A7U2 is set. This turns off A8Q1. With A8Q1 off, current from A8R7 flows through A8Q3 and discharges the selected integrating capacitor. When the voltage level at the base of A8Q4 falls to the voltage applied at the base of A8Q2, both A8Q2 and A8Q4 are conducting and the sum of the currents at the gate of A8Q5 is zero. This is the reset condition for the ramp.


4-65. The output of constant-current source A8Q13 is controlled by operational amplifier A8U1. Different reference voltages are developed for different ranges on TIME/DIV switch A8S1. The reference voltage is applied to A8U1 (pin 3). When different ranges are selected on the TIME/DIV switch, values of the ramp capacitor, integrating resistor, and reference voltage are changed. This changes the ramp slope for various sweep speeds. The ramp slope can be varied for any sweep speed by SWEEP VERNIER potentiometer R8.

4-66. The emitter of A8Q9 drives a particular holdoff capacitor (A8C13 through A8C18) depending on the position of TIME/DIV switch A8S1. At the end of the sweep, the holdoff capacitor is discharged through A8R40 and TRIGGER HOLDOFF potentiometer R9. When the voltage at the base of A8Q11 decays to +0.7 volts, A8Q12 turns on and the reset line to A7U2 (pin 4) goes low. This resets A7U2 so it can accept another trigger.

4-67. The positive-going ramp of the main sweep is also applied to pin 9 of delay comparator A7U4, which controls arming of the delayed sweep. DELAY potentiometer R6 establishes a reference voltage that is applied to buffer amplifier A7U3. The output of A7U3 drives pin 6 of A7U4. When the main sweep ramp voltage slightly exceeds the level established by R6, the comparator changes states. Its output arms the delayed-trigger circuit. When the delayed sweep switch is in the off position, A7U4 is inhibited at pin 13 and no delayed sweep can be generated.


4-68. The gate Schmitt circuit (see figure 4-3 and schematic 12) provides Gate Amplifier Assembly A12 with the proper input for each display mode. Gate Schmitt A7Q28 - A7Q32 is controlled by horizontal mode switch A7S3. It is set by the first positive control

pulse and resets on the first negative control pulse. In main sweep operation, the gate follows the main sweep. In delayed operation, the gate follows the delayed sweep. In mixed operation, the gate is started by the main sweep and terminated by the end of delayed sweep. Figure 4-4 shows the timing relationship of the gate and sweep waveforms.

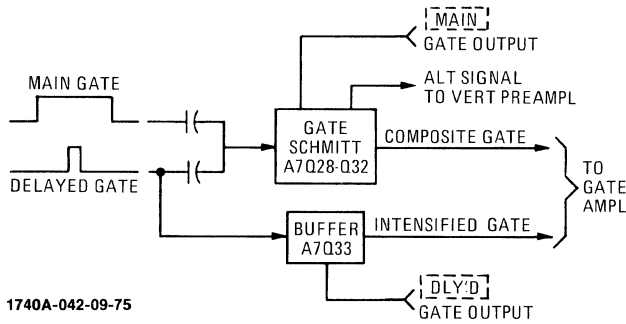

1740A-042-09-75

Figure 4-3. Gate Schmitt Simplified Block Diagram

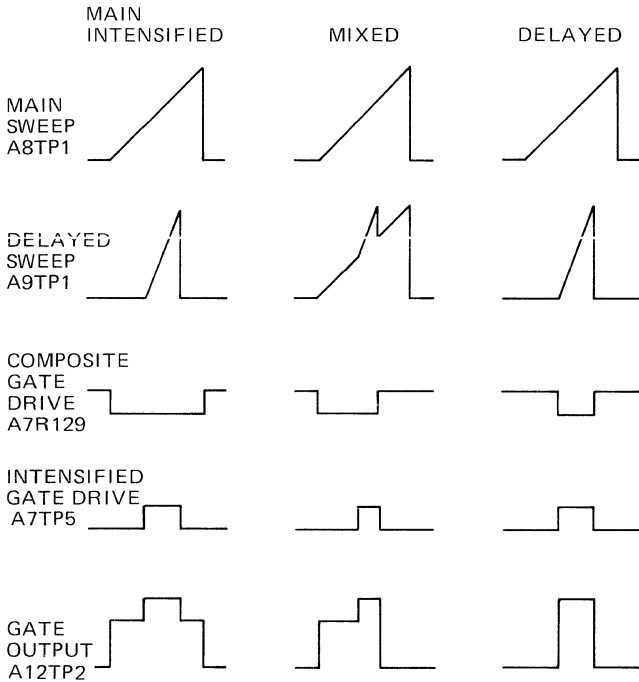

1740A-043-07-76

Figure 4-4. Timing Relationship of the Gate and Sweep Waveforms

4-69. DELAYED TRIGGER OPERATION. (Schematic 9.)

Delayed trigger operation is similar to main trigger operation. The sync input to delayed trigger integrated circuit A10U1 is supplied through an impedance converter consisting of an FET matched pair (A10Q1 and emitter follower A10Q3). Delayed sweep is started by a negative-going pulse at the collector of A10Q10. When SWEEP AFTER DELAY switch A10S1D is in AUTO position, this will occur as soon as A10U1 is armed at pin 5 by a negative-going pulse from delay comparator A7U4. In TRIG position, the negative-going transition from the delay comparator does not

immediately cause delayed sweep to start. It arms A10U1 and a delayed trigger will be formed if a sync pulse occurs during the main sweep time.

4-70. DELAYED SWEEP. (Schematic 10). The operation of delayed sweep is similar to that of main sweep. One major difference is the delayed sweep reset level applied to the base of A9Q1. In the delayed mode of operation, this level is fixed at 1 volt, but in the mixed sweep mode of operation this reference is connected to the main sweep ramp. Output of the delayed integrator (TP1) follows the main sweep ramp until the delayed sweep start signal at the base of A9Q3 goes low. When this sweep start signal goes low, the delayed integrator no longer follows the reset level, but ramps up at a slope determined by the selected integrating capacitor and selected current source resistor.

4-71. HORIZONTAL DISPLAY SWITCH ASSEMBLY A7S3. (Schematics 7, 11, and 12.)

The four switches in this assembly select the modes of horizontal display: delayed sweep, mixed sweep, main sweep, and A VS B display.

4-72. Delayed Sweep. The DLY'D sweep switch A7S3A performs two functions. When engaged, it reverse biases diode A7CR7 and prevents the main gate signal from driving the gate Schmitt. A7S3A also routes the delayed sweep ramp to the horizontal preamplifier.

4-73. Mixed Sweep. MIXED sweep switch A7S3B also performs two functions. When engaged, A7S3B applies the main sweep ramp as the reset reference to the delayed sweep integrator circuit. A7S3B also routes the delayed sweep ramp to the horizontal preamplifier.

4-74. Main Sweep. MAIN sweep switch A7S3C routes the main sweep ramp to the horizontal preamplifier.

4-75. A VS B Control. The A VS B switch A7S3D performs several functions. It sends a control signal to the vertical preamplifier which is used to select channel A vertical display and channel B sync. It biases the gate Schmitt to turn the gate on and forces the main trigger circuit to the single-shot mode. It also connects the sync amplifier output to the horizontal preamplifier.

4-76. HORIZONTAL PREAMPLIFIER. (Schematic 11.)

The horizontal preamplifier converts the single-ended sweep or A VS B signal to a differential signal suitable for driving the horizontal output amplifier. The preamplifier provides sweep gain adjustment, sweep magnification adjustment (MAG X10), horizontal position, beam find control, and X10 magnification centering.

4-77. Transistor A7Q22 is a shunt feedback stage that level shifts the sweep ramp and drives differential

amplifier A7Q23/A7Q27. Transistor A7Q26 is a shunt feedback stage that is used to temperature compensate A7Q22. Horizontal POSITION control R11 drives this stage. When MAG X10 switch A7S1D is engaged, current from mag-center potentiometer A7R105 also drives this stage. Current source transistor A7Q24 provides bias for shunt feedback stage A7Q22. Current source transistors A7Q25 and A7Q34 provide bias for the differential amplifier. The X1 sweep speed is calibrated by emitter resistor A7R93. MAG X10 control is calibrated by A7R117.

4-78. When BEAM FIND switch A12S1 is engaged, voltage at the bases of A7Q25 and A7Q34 is lowered. This decreases the amount of current available to the output stage and prevents it from driving the trace off screen.

4-79. HORIZONTAL OUTPUT. (Schematic 11.) The horizontal output is a differential shunt feedback amplifier. Current required by A7Q23 is supplied through A11R4. This determines the voltage driving one horizontal plate through A11R7. Current required by A7Q27 is supplied through A11R23 which determines the voltage driving the other horizontal plate through A11R21. Transistors A11Q1, A11Q2, A11Q5, and A11Q6 are emitter followers that provide a high impedance for each side of the output amplifier. High-speed linearity is controlled by a lag network at the input of each amplifier. Resistor A11R10 controls one side and A11R15 the other side. Each side of the output amplifier can swing from approximately +8 volts to +110 volts.

4-80. GATE AMPLIFIER ASSEMBLY A12. (Schematic 3.)

4-81. The gate amplifier assembly controls trace intensity on the CRT. Gate preamplifier A12U1 sums all the desired functions necessary for control of trace intensity (see figure 4-5 for a simplified block diagram of the gate circuit).

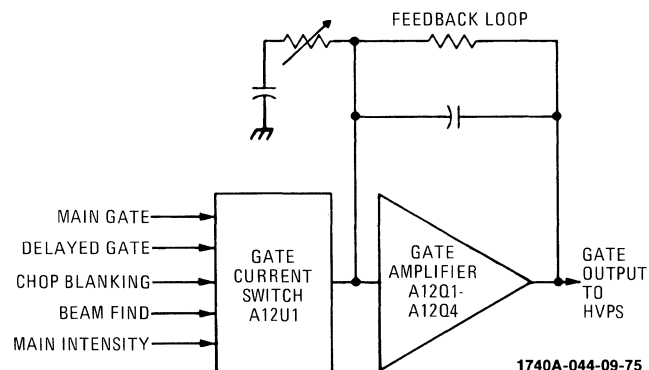


Figure 4-5. Gate Control Simplified Block Diagram

4-82. Front-panel BEAM INTENSITY control A12R3 establishes the level of current supplied to current

switch A12U1Q1/A12U1Q2. Output of the current switch is applied to a gate amplifier circuit consisting of A12Q1 through A12Q4. Intensity adjustment A15R2 on the high-voltage power supply establishes the minimum cut-off level for the CRT.

4-83. The main gate signal is applied to the base of A12U1Q1 controlling its operation. When the main gate signal is low, A12U1Q1 turns off and A12U1Q2 conducts. With A12U1Q2 conducting, the CRT is unblanked. The same applies for the delayed gate signal which is applied to the base of A12U1Q5. When the delayed gate signal is high, A12U1Q5 conducts, unblanking the CRT.

4-84. Chop blanking is accomplished through A12U1Q3. When CHOP mode of operation is selected, the chop blanking signal applied to the base of A12U1Q3 turns it on and off. The alternating action of A12U1Q3 turns A12U1Q2 on and off. This results in the blanking and unblanking of the CRT at the chop blanking repetition rate (≈ 250 kHz).

4-85. A Z-axis signal of +4 V, pulse width ≥ 50 nanoseconds, dc to ≤ 10 MHz will blank the CRT trace of normal intensity. A Z-axis signal of +5 V (dc + pk ac) will blank the CRT trace regardless of intensity setting.

4-86. When BEAM FIND switch A12S1 is engaged, the setting of BEAM INTENSITY control A12R3 is added to a fixed voltage and supplied through the gate amplifier to the CRT. This causes intensification of the CRT trace.

4-87. The gate amplifier output is a shunt feedback stage consisting of A12Q1 through A12Q4. Transistors A12Q1 and A12Q3 are emitter followers with A12Q1 providing the ac signal path. Network A12R13/A12C8 provides the feedback path.

4-88. HIGH-VOLTAGE POWER SUPPLY. (Schematic 2.)

4-89. The high-voltage power supply contains an oscillator and a rectifying circuit. When the instrument is turned on, +15 volts (unregulated) is applied to pin 3 of A15U1 causing the output to go high, turning on Q1. As Q1 conducts through the primary winding of A15T1 (pins 3 and 4), positive feedback to the base of Q1 occurs through another winding on the transformer (pins 1 and 2). The circuit oscillates at a rate determined by the inherent distributed inductance and capacitance of the transformer. The magnitude of the oscillations, and consequently the output of the power supply, is controlled by the voltage at the output of differential amplifier A15U1.

4-90. The voltage reference from the +15 V supply is established at the junction of A15R22 and A15R23. This reference voltage is applied to the inverting input of amplifier A15U1. A sample of the rectified cathode voltage is also applied to the junction of

A15R22 and A15R23 through A15R13/C8. Any change in cathode voltage is amplified by A15U1. The change is coupled through the primary winding on A15T1 to the base of Q1 and causes the amplitude of its oscillations to change. The change is in such a direction as to correct the original change in the rectified cathode voltage. Diode A15CR1 protects the oscillator transistor base from excess reverse voltage.

4-91. The CRT cathode and grid voltages are developed in the secondary of high-voltage transformer A15T1. The cathode voltage is rectified and filtered before application to the cathode of the CRT. It is also used as a feedback control to the high-voltage oscillator, as a reference for the CRT filament winding, the grid bias supply, and for the focus voltage divider network. The cathode voltage will vary between -2970 V to -3030 V, depending on component tolerances of A15R13 and A15R22 and is not adjustable.

4-92. The CRT grid voltage is supplied by a voltage tap (pin 5) on the secondary winding of A15T1. The voltage is developed and applied through a series RC network (A15C2/A15R3) to diodes that clamp the voltage swing between that established by intensity control A15R2 and the gate dc levels. The peak-to-peak voltage swing is rectified and applied to the CRT grid with reference to the cathode voltage. This controls brightness of the trace.

4-93. The unrectified cathode voltage in the secondary of A15T1 is applied to multiplier assembly A6 where the voltage is multiplied four times. Output of the multiplier (approximately 13 kV) is applied to the post-accelerator connector on the CRT.

4-94. Another secondary winding of transformer A15T1 furnishes the filament voltage for the CRT. This winding is referenced to the rectified cathode voltage through A15R14.

4-95. Transistors A15Q1 and A15Q2 sense the +120 V supply and if it is not above 100 volts, the high-voltage oscillator will not run. This protects the CRT from high-intensity burns.

4-96. LOW-VOLTAGE POWER SUPPLY. (Schematic 1.)

4-97. The low-voltage power supply provides regulated +5 V, +15 V, +43 V, +120 V, and -15 V for operation of the various circuits in the instrument. All low voltage supplies are referenced to the +15 V supply for regulation purposes.

4-98. ± 15 -VOLT SUPPLIES. One of the secondary windings on input power transformer T1 is connected to bridge rectifier A16CR4. The rectified voltage (nominally +21 Vdc) is maintained at +15 volts by integrated circuit A16U1 and series regulator transis-

tor Q4. Regulator A16U1 contains a temperature compensation reference circuit (pin 4) and a differential amplifier with a Darlington output. The reference circuit is connected to the noninverting input of the differential amplifier (pin 3) through A16R23. The +15-volt output is attenuated through A16R25-R27. The wiper of A16R26 is connected to the inverting input of the differential amplifier. The Darlington output (pin 6) drives the base of series transistor Q4. A16R26 is adjusted to compensate for variations of the reference voltage so that with an output of +15 volts from the supply, the inverting and noninverting input voltages are equal.

4-99. The IC regulation includes an output current limiting circuit consisting of an NPN transistor whose collector is connected to the differential amplifier and first base of the Darlington pair (within the IC). The emitter and base connections for the NPN transistor are pins 10 and 6 on A16U1. When load current through A16R24 produces a sufficient voltage drop, the NPN transistor conducts, pulling the input to the Darlington pair toward the emitter potential of Q4. This limits the output current.

4-100. The -15 -volt supply, consisting of A16U3 and Q6, operates identically as the +15-volt supply except that the noninverting input to A16U3 (pin 3) is the sum of the +15 V and -15 V outputs (nominally zero volts).

4-101. +5-VOLT SUPPLY. The +5-volt regulator A16U2 functions identically to that of the +15 V regulator except that the reference voltage is provided by the output of the +15-volt supply and attenuated by A16R28 and A16R29.

4-102. +120-VOLT AND +43-VOLT POWER SUPPLIES. The +120-volt and +43-volt power supplies function identically; therefore, only the +120-volt supply will be discussed.

4-103. The ac input voltage from power transformer T1 is applied to bridge rectifier A16CR1. The dc output from the rectifier is filtered by A16C3. A +15-volt reference is applied through A16R1 to the base of A16Q1 which is part of differential amplifier A16Q1/Q2. The base of A16Q2 is connected to a voltage divider network across the output circuit. If the output falls below +120 V, the base of A16Q2 becomes less positive and A16Q2 conducts harder. A16Q2 is direct-coupled to Darlington pair A16Q4 and Q2. When A16Q2 current increases, conduction through A16Q4 and Q2 increases. This results in an increase in output voltage. When the output voltage reaches +120 volts, A16Q2 current reduces and equilibrium is reached. Transistor A16Q3 and resistor A16R2 form a current limiting circuit. As the current requirements increase towards the limit of the supply capability, the voltage drop across A16R2 is applied to the base of A16Q3 which conducts and limits the current drain from the Darlington pair.

4-104. The +43-volt power supply functions identically as the +120-volt supply. The Darlington pair consists of A16Q8 and Q3, and the current limiting circuit consists of A16Q7 and A16R10.

4-105. FLOODGUN FILAMENT VOLTAGE. Floodgun filament voltage is developed in a secondary winding of ac power transformer T1. The ac input voltage is rectified by A16CR3 and filtered by A16C7. The rectified voltage is applied through SCALE ILLUM potentiometer R12, (schematic 3) and dropping resistor A16R19 (schematic 1) to the floodgun filaments of the CRT. Potentiometer A16R20 adjusts the floodgun pattern.

4-106. LINE FREQUENCY. (Schematic 1.) The line frequency sync signal is developed in the same secondary winding of ac input power transformer T1 that is used for the +120-volt supply. The signal is applied through A16R40 to HF REJ switch A7S2C on assembly A7 (see schematic 7).

4-107. OPTION 101. (Schematic 14.)

4-108. Option 101 provides the capability of using the Model 1740A to present logic state display information from a logic state analyzer such as the HP Model 1607A. State display inputs are provided by input BNC connectors J8, J9, and J10 on the rear panel of the Model 1740A. With Option 101, the A VS B horizontal display mode is omitted and replaced by the state display mode pushbutton.

4-109. Option 101 incorporates the following changes to the standard Model 1740A:

a. The standard Interface Assembly A14 is replaced with Option 101 State Display Interface Assembly A14. Three wires from this assembly to the rear panel provide the inputs from the logic state analyzer. Two wires from A14 are soldered to the option inputs on Horizontal Sweep Assembly A7 (see schematic 11). Two more wires from A14 are soldered to Vertical Preamplifier Assembly A3 (see schematic 4).

b. Four diodes, A7CR17-A7CR20 are added to assembly A7.

c. Two resistors, A3R142 and A3R143, are added to assembly A3, and A3CR25 is moved to a new position on A3 (see schematic 4). Components A3C77, A3CR28, A3CR29, A3Q21, A3R139, and A3R140, which are associated with A VS B vernier control, are omitted from assembly A3 for Option 101.

4-110. When the STATE DSPL button is engaged, switch A7S3D (labeled A—B on schematics) performs the following functions. The main sweep is forced to single sweep. The horizontal preamplifier is disabled. Channels A and B of the vertical preamplifier are shut off. The trigger view amplifier is turned on. The gate Schmitt on assembly A7 is forced on, and control of the gate is from the rear panel Z-axis input J8.

4-111. Option 101 circuits on assembly A14 operate as follows. The gate is blanked by a positive signal on the rear-panel, Z-axis input from the Model 1607A Logic State Analyzer. When the state display mode is selected, the line labeled A—B control on the interface board is forced to ground, turning A14Q1 off. When the Z-axis input goes positive, the cathode of A14CR4, which drives the chop blanking line, goes positive and blanks the gate.

4-112. Differential amplifier A14Q4/A14Q5 amplifies the horizontal input from J10 on the rear panel and drives Horizontal Output Assembly A11 through diodes A7CR19 and A7CR20. The A—B ground level signal on the anodes of A14CR7 and A14CR8 back bias the diodes and permit the differential amplifier, A14Q4 and A14Q5, to drive the output stage.

4-113. Differential amplifier A14Q2/A14Q3 amplifies the vertical input from J10 on the rear panel. The A—B ground level signal turns off A14CR5 and A14CR6 and enables this differential amplifier. The collectors of A14Q2 and A14Q3 drive A3R142 and A3R143. The trigger view amplifier is enabled in this mode and the vertical state display signal drives the delay line through the trigger view amplifier. Gain and position of the vertical and horizontal sections are controlled from the logic state analyzer.

SECTION V

PERFORMANCE TESTS AND ADJUSTMENTS

5-1. INTRODUCTION.

5-2. This section contains performance tests and adjustment procedures for the Model 1740A Oscilloscope. The performance tests determine whether your instrument is operating within its published specifications. The adjustment procedures are provided to help you maintain your instrument within specification limits.

5-3. RECOMMENDED TEST EQUIPMENT.

5-4. Test equipment required for the performance tests and adjustment procedures is listed in table 5-1. Any equipment that satisfies the critical specifications given in the table may be substituted for the recommended model.

5-5. TEST RECORD.

5-6. A Performance Test Record is provided at the end of this section for the purpose of recording the results of the Performance Tests. This record lists all of the tested specifications and their acceptable limits. This record can be removed from the manual and retained as a permanent record of the incoming inspection or routine maintenance performed on the instrument. This record may be reproduced for your use without special permission.

5-7. PERFORMANCE TESTS.

5-8. Use the following test procedures to determine whether your instrument is operating within its published specifications. The test limits given in the accuracy tests and on the performance test record compare the instrument to the published specifications. The performance of the instrument should be tested upon receipt, and at regular intervals determined by your accuracy requirements. If the 1740A fails to meet one or more of its specifications, refer to the Adjustment Procedures, paragraph 5-36. The 1740A and test equipment should be operated at normal line voltage, with the 1740A line selector switch set to the correct positions for corresponding input line voltage.

5-9. INITIAL CONTROL SETTINGS.

5-10. The control settings listed below must be used for each performance check and adjustment procedure. Exceptions to these settings will be noted as they occur. After completing a check or adjustment, return the Model 1740A controls to the following settings:

CONTROL	SETTING
All Pushbuttons	
(except as noted below).....	out position
VOLTS/DIV (Channels A and B)1
CAL (Channels A and B) ..	detent (full cw)
Coupling (Channels A and B)	DC
POSN (Channels A and B)	midrange
DISPLAY.....	A
TRIGGER	A
FOCUS	best trace
BEAM INTENSITY	10 - 11 o'clock
LINE	ON
POSITION	midrange
TRIGGER LEVEL	
(Main and Delayed)	3 o'clock
Sweep Mode	MAIN
DELAY	fully CCW
MAIN TIME/DIV1 mSEC
DLY'D TIME/DIV	OFF
SWEEP VERNIER	CAL
TRIGGER HOLDOFF	MIN

5-11. PERFORMANCE TEST PROCEDURES.

5-12. **BANDWIDTH.** 3 dB down from an 6-division reference signal; dc to 100 MHz, dc coupled; and 10 Hz to 100 MHz, ac coupled. In the vertical MAG X5 mode, bandwidth is reduced to 40 MHz.

5-13. A signal generator is used to provide the reference signal. An rf voltmeter is used to monitor the signal level at the input connector to verify that the signal amplitude remains constant.

Equipment Required:

- Signal Generator
- RF Voltmeter
- BNC Cable (48 inch)
- BNC Tee
- Adapter (GR874 to Male BNC)
- Adapter (GR874 to Female BNC)

5-14. Perform bandwidth test as follows:

a. Connect signal generator and rf voltmeter as shown in figure 5-1.

b. Set Model 1740A controls as follows:

Coupling (both channels).....	50Ω
Channel A VOLTS/DIV	0.01
MAIN TIME/DIV	1 μSEC

Table 5-1. Recommended Test Equipment

Instrument Type	Recommended Model	Required Characteristics	Required For
Digital Voltmeter	HP Model 3465A	Accuracy: 0.1%	A
Oscilloscope	HP Model 1707B	Bandwidth: 50 MHz 10:1 divider probe	A
Oscillator	HP Model 204C	1 kHz to 500 kHz, 1 V p-p	A
Signal Generator	HP Model 3200B	100 MHz, 30 mV p-p	P, A
Time-mark Generator	HP Model 226A	Time Marks 2 s to 5 ns	P, A
LCR Meter	HP Model 4332A	20 pF range	A
Square-wave Generator	HP Model 211B	10-kHz square wave 3 V pk	A
Fast-rise Pulse Generator		Rise time: less than 500 ps 50-ohm output Variable amplitude Overshoot less than 3%	P, A
DC Standard	HP Model 740B	40 mV to 160 V Accuracy: 0.1%	P, A
RF Voltmeter	HP Model 3406A with 11063A 50-ohm Tee		P
Adapter	HP Part No. 1251-2277	Male banana jack to female BNC adapter	P, A
Adapter (3)	HP Part No. 1250-0850	GR874 to female BNC	P, A
48-inch BNC Cable	HP Model 10503A	50-ohm, BNC male to BNC male, approximately 48 inches long	P, A
9-inch BNC Cables (2)	HP Model 10502A	50-ohm, BNC male to BNC male, approximately 9 inches long (must be equal length)	P, A
Power Divider	General Radio Model 874-TPD	50 ohms at all connections	P, A
BNC Tee	HP Part No. 1250-0781	1 male, 2 female	A
Adapter	HP Part No. 1250-1264	Female banana jack to male BNC adapter	P
Adapter	HP Part No. 1250-0849	GR874 to male BNC	P

Table 5-1. Recommended Test Equipment (Cont'd)

Instrument Type	Recommended Model	Required Characteristics	Required For
Feedthrough Termination	HP Model 10100C	50-ohm, male BNC at one end, female BNC at other end	P
Test Lead		Alligator to male banana or alligator to alligator, approximately 12 inches long	A

Note: P = Performance Tests, A= Adjustment Procedure.

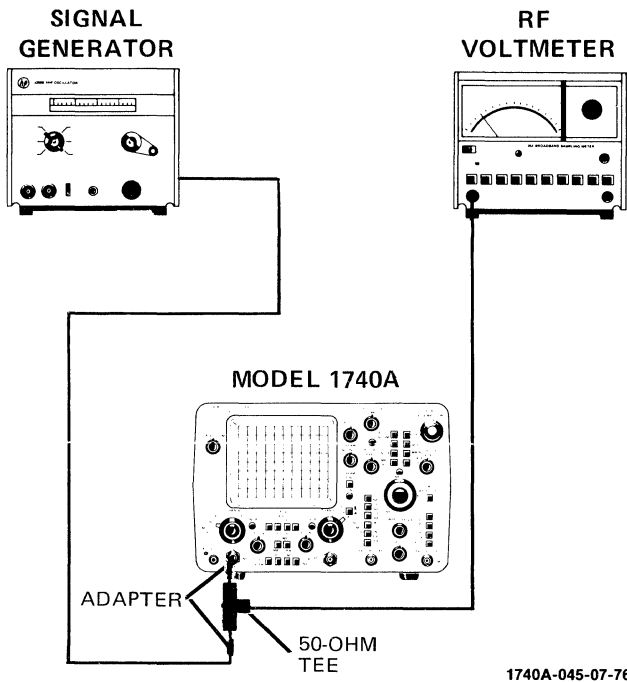


Figure 5-1. Bandwidth Test Setup

- c. Set signal generator frequency for approximately 10 MHz with exactly 6 divisions of vertical deflection on oscilloscope.
- d. Note rf voltmeter indication.
- e. Set signal generator frequency to 100 MHz.
- f. Adjust signal generator amplitude to obtain same indication as in step d. Amplitude of display should be equal to or greater than 4.24 divisions.
- g. Set Model 1740A controls as follows:

DISPLAY.....	B
TRIGGER	B
- h. Connect signal generator to channel B INPUT and repeat steps b through f for channel B.

- i. Disconnect equipment and return Model 1740A controls to initial settings.

5-15. COMMON MODE REJECTION RATIO (CMRR). CMRR is at least 20 dB from dc to 20 MHz. Common mode signal amplitude is equivalent to 8 cm with one vernier adjusted for optimum rejection. Identical signals are applied to both channels with channel B operated in the inverted mode. The displayed signal is the common mode signal.

Equipment Required:

- Signal Generator
- 50-ohm, 44-inch BNC Cable
- Two 50-ohm, 9-inch BNC Cables
- Three GR874 to Female BNC Adapters
- 50-ohm Power Divider

5-16. Perform CMRR test as follows:

- a. Connect equipment as shown in figure 5-2.

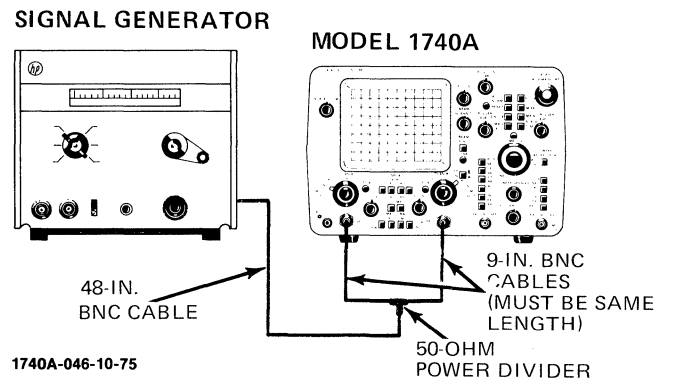


Figure 5-2. CMRR Test Setup

- b. Set Model 1740A controls as follows:

VOLTS/DIV (both channels).....	.1
DISPLAY.....	A
MAIN TIME/DIV	1 μSEC
Coupling (both channels).....	50Ω

- c. Set signal generator controls to observe a 20-MHz signal, 8 divisions in amplitude.
- d. Set Model 1740A controls as follows:

CH B INVT.....	engaged
DISPLAY.....	A + B
- e. Adjust either channel vernier (whichever is most effective) to achieve minimum deflection.
- f. Deflection should be less than 0.8 division (20 dB).
- g. Return Model 1740A controls to initial settings and disconnect equipment.

5-17. TRIGGERING.

5-18. Internal Triggering. DC to 25 MHz on signals causing 0.3 division vertical deflection increasing to 1 division at 100 MHz. The output of a signal generator is applied to the vertical input to check internal triggering.

Equipment Required:

- Signal Generator
- 50-ohm, 48-inch BNC Cable

5-19. Perform the internal triggering check as follows:

- a. Connect signal generator to channel A INPUT.
- b. Set signal generator controls to obtain a 25-MHz signal with 0.3-division amplitude.
- c. Set Model 1740A controls as follows:

Channel A Coupling.....	50Ω
MAIN TIME/DIV.....	.05 μSEC
- d. Adjust main TRIGGER LEVEL to obtain stable display. Stable display confirms proper triggering.
- e. Change signal generator controls to obtain a 1-division signal at 100 MHz.

f. Readjust main TRIGGER LEVEL to obtain stable display. Stable display confirms proper triggering.

g. Change Model 1740A controls as follows:

- | | |
|------------------------|----------|
| MAIN TIME/DIV..... | .1 μSEC |
| DELAYED TIME/DIV..... | .05 μSEC |
| SWEEP AFTER DELAY..... | TRIG |
| Sweep Display..... | DLY'D |

h. Adjust delayed TRIGGER LEVEL to obtain stable display (slight readjustment of main TRIGGER LEVEL may be required).

i. Change signal generator output to 0.3-division amplitude at 25 MHz.

j. Readjust delayed TRIGGER LEVEL (and main TRIGGER LEVEL if necessary) to obtain stable display.

k. Return Model 1740A controls to initial settings.

5-20. External Triggering. DC to 50 MHz on signals 50 mV p-p, increasing to 100 mV p-p at 100 MHz. The output of a signal generator is split using a power divider, and equal amplitude signals are applied to both channel A and the main EXT TRIGGER INPUT to check external triggering.

Equipment Required:

- Signal Generator
- 50-ohm, 48-inch BNC Cable
- Two 50-ohm, 9-inch BNC Cables
- Three GR874 to Female BNC Adapters
- 50-ohm Feed through Termination
- 50-ohm Power Divider

5-21. Perform external triggering test as follows:

a. Connect equipment as shown in figure 5-3.

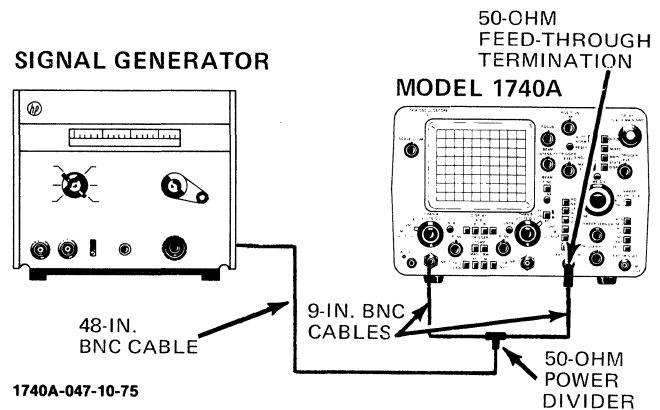


Figure 5-3. External Triggering Test Setup

b. Set Model 1740A controls as follows:

- | | |
|--------------------------|---------|
| Channel A VOLTS/DIV..... | .05 |
| Channel A Coupling..... | 50Ω |
| MAIN TIME/DIV..... | .1 μSEC |
| MAG X10..... | engaged |
| Main INT/EXT..... | EXT |

c. Set signal generator controls to obtain a 50-MHz, 50-mV p-p signal (1 division).

d. Adjust main TRIGGER LEVEL to obtain stable display.

e. Set signal generator controls to obtain a 100-MHz, 100-mV p-p signal (2 divisions).

- f. Adjust main TRIGGER LEVEL to obtain stable triggering.
- g. Set Model 1740A controls as follows:
 - Main INT/EXT INT
 - Delayed INT/EXT EXT
 - SWEEP AFTER DELAY TRIG
 - Delayed TIME/DIV05 μ SEC
 - Sweep Display DLY'D
- h. Disconnect signal from main EXT TRIGGER and reconnect to delayed EXT TRIGGER input.
- i. Adjust delayed TRIGGER LEVEL to obtain stable display (main TRIGGER LEVEL may also require adjustment).
- j. Set signal generator controls to obtain a 50-MHz, 50-mV p-p signal.
- k. Adjust TRIGGER LEVEL(S) as necessary to obtain stable triggering.
- l. Return Model 1740A controls to initial settings and disconnect equipment.

5-22. SWEEP TIME ACCURACY. (+15°C to +35°C) $\pm 2\%$ in unmagnified mode and $\pm 3\%$ in MAG X10 mode. Refer to table 1-1 for other variations in ambient temperatures. In 50 ms to 2 s ranges, add 1% error.

Equipment Required:

- Time-mark Generator
- 50-ohm, 48-inch BNC Cable

5-23. Perform sweep time accuracy test as follows:

- a. Connect time-mark generator to channel A INPUT.
- b. Set time-mark generator and main TIME/DIV controls as shown in table 5-2 and check accuracy as indicated.
- c. Change Model 1740A sweep display to DLY'D.
- d. Set main and delayed TIME/DIV controls as indicated in table 5-3 and check accuracy. It may be necessary to make a minor adjustment of DELAY control to align markers with graticule lines.
- e. Return Model 1740A controls to initial settings.

Table 5-2. Main TIME/DIV Accuracy

Main TIME/DIV Setting	Time-mark Generator Settings	Accuracy	
		X1	X10
.05 μ SEC	50 nSEC	1 mark/div $\pm 2\%$	$\pm 3\%$
.1 μ SEC	.1 μ SEC	1 mark/div $\pm 2\%$	$\pm 3\%$
.2 μ SEC	.2 μ SEC	1 mark/div $\pm 2\%$	$\pm 3\%$
.5 μ SEC	.5 μ SEC	1 mark/div $\pm 2\%$	$\pm 3\%$
1 μ SEC	1 μ SEC	1 mark/div $\pm 2\%$	$\pm 3\%$
2 μ SEC	2 μ SEC	1 mark/div $\pm 2\%$	$\pm 3\%$
5 μ SEC	5 μ SEC	1 mark/div $\pm 2\%$	$\pm 3\%$
10 μ SEC	10 μ SEC	1 mark/div $\pm 2\%$	$\pm 3\%$
20 μ SEC	20 μ SEC	1 mark/div $\pm 2\%$	$\pm 3\%$
50 μ SEC	50 μ SEC	1 mark/div $\pm 2\%$	$\pm 3\%$
.1 mSEC	.1 mSEC	1 mark/div $\pm 2\%$	$\pm 3\%$
.2 mSEC	.2 mSEC	1 mark/div $\pm 2\%$	$\pm 3\%$
.5 mSEC	.5 mSEC	1 mark/div $\pm 2\%$	$\pm 3\%$
1 mSEC	1 mSEC	1 mark/div $\pm 2\%$	$\pm 3\%$
2 mSEC	2 mSEC	1 mark/div $\pm 2\%$	$\pm 3\%$
5 mSEC	5 mSEC	1 mark/div $\pm 2\%$	$\pm 3\%$
10 mSEC	10 mSEC	1 mark/div $\pm 2\%$	$\pm 3\%$
20 mSEC	20 mSEC	1 mark/div $\pm 2\%$	$\pm 3\%$
50 mSEC	50 mSEC	1 mark/div $\pm 3\%$	$\pm 4\%$
.1 SEC	.1 SEC	1 mark/div $\pm 3\%$	$\pm 4\%$
.2 SEC	.2 SEC	1 mark/div $\pm 3\%$	$\pm 4\%$
.5 SEC	.5 SEC	1 mark/div $\pm 3\%$	$\pm 4\%$
1 SEC	1 SEC	1 mark/div $\pm 3\%$	$\pm 4\%$
2 SEC	2 SEC	1 mark/div $\pm 3\%$	$\pm 4\%$

Table 5-3. Delayed TIME/DIV Accuracy

Main TIME/DIV Settings	Delayed TIME/DIV Settings	Time-mark Generator Settings	Accuracy	
			X1	X10
.1 μSEC	.05 μSEC	50 nSEC	1 mark/div ±2%	1 mark/div ±3%
.2 μSEC	.1 μSEC	.1 μSEC	1 mark/div ±2%	1 mark/div ±3%
.5 μSEC	.2 μSEC	.2 μSEC	1 mark/div ±2%	1 mark/div ±3%
1 μSEC	.5 μSEC	.5 μSEC	1 mark/div ±2%	1 mark/div ±3%
2 μSEC	1 μSEC	1 μSEC	1 mark/div ±2%	1 mark/div ±3%
5 μSEC	2 μSEC	2 μSEC	1 mark/div ±2%	1 mark/div ±3%
10 μSEC	5 μSEC	5 μSEC	1 mark/div ±2%	1 mark/div ±3%
20 μSEC	10 μSEC	10 μSEC	1 mark/div ±2%	1 mark/div ±3%
50 μSEC	20 μSEC	20 μSEC	1 mark/div ±2%	1 mark/div ±3%
.1 mSEC	50 μSEC	50 μSEC	1 mark/div ±2%	1 mark/div ±2%
.2 mSEC	.1 mSEC	.1 mSEC	1 mark/div ±2%	1 mark/div ±3%
.5 mSEC	.2 mSEC	.2 mSEC	1 mark/div ±2%	1 mark/div ±3%
1 mSEC	.5 mSEC	.5 mSEC	1 mark/div ±2%	1 mark/div ±3%
2 mSEC	1 mSEC	1 mSEC	1 mark/div ±2%	1 mark/div ±3%
5 mSEC	2 mSEC	2 mSEC	1 mark/div ±2%	1 mark/div ±3%
10 mSEC	5 mSEC	5 mSEC	1 mark/div ±2%	1 mark/div ±3%
20 mSEC	10 mSEC	10 mSEC	1 mark/div ±2%	1 mark/div ±3%
50 mSEC	20 mSEC	20 mSEC	1 mark/div ±2%	1 mark/div ±3%

5-24. DIFFERENTIAL TIME ACCURACY. Main time base: 100 nSEC/div to 20 mSEC/div, ±(0.5% of measurement + 0.1% of full scale) at ambient temperature of +15°C to +35°C. Refer to table 1-1 for complete specifications. A time-mark generator is used in delayed sweep mode to check accuracy.

Equipment Required:

- Time-mark Generator
- 50-ohm, 48-inch BNC Cable

5-25. Perform differential time accuracy test as follows:

- a. Connect time-mark generator to Channel A INPUT.
- b. Set Model 1740A controls as follows:
 - Main TIME/DIV 1 mSEC
 - Delayed TIME/DIV 10 μSEC
 - Channel A Coupling 50Ω
- c. Set time-mark generator for 1 mSEC marker.
- d. Adjust DELAY dial to intensify second time marker from left.
- e. Set sweep display to DLY'D.
- f. Adjust DELAY dial to place visible time markers exactly on center vertical graticule line.
- g. Record DELAY dial reading _____.
- h. Set sweep display to MAIN.

i. Adjust DELAY dial to intensity 10th time marker from left.

j. Set sweep display to DLY'D.

k. Adjust DELAY dial to place visible time marker exactly on center vertical graticule line.

l. Record DELAY dial reading _____.

m. Subtract DELAY dial reading obtained in step g from reading in step l, difference obtained should be 8 ±0.05.

n. Return Model 1740A controls to initial settings.

5-26. DELAY JITTER. <0.002% (1 part in 50 000) of maximum delay in each step from +15°C to +35°C. Delay jitter is checked by expanding the sweep by 50 000 and visually monitoring the jitter.

Equipment Required:

- Time-mark Generator
- 50-ohm, 48-inch BNC Cable

5-27. Perform delay jitter test as follows:

a. Connect time-mark generator to channel A INPUT (1 mSEC markers).

b. Set Model 1740A controls as follows:

- Main TIME/DIV 1 mSEC
- Delayed TIME/DIV2 μSEC
- Channel A VOLTS/DIV5
- Channel A Coupling 50Ω

- c. Adjust DELAY dial to position intensified portion of sweep on 11th time marker.
- d. Set sweep display to DLY'D, and observe horizontal axis jitter on time marker. Jitter should be less than 1 division (corresponds to 1:50 000).
- e. Return Model 1740A to initial settings and disconnect equipment.

5-28. RISE TIME. ≤ 3.5 ns, measured from 10% to 90% points of a 6-division input step, and ≤ 9 ns in X5 vertical magnification mode. A fast-rise pulse generator is applied to the vertical input; display rise time is then checked to see if it is less than 3.5 ns.

Equipment Required:

Fast-rise pulse generator
 Adapter: GR874 to male BNC

5-29. Perform rise time test as follows:

- a. Connect fast-rise pulse generator to channel A INPUT.
- b. Set channel A VOLTS/DIV and pulse generator controls to obtain 6 divisions of vertical deflection.
- c. Using channel A POSN control, center 6-division display on CRT.
- d. Set Model 1740A controls as follows:

MAIN TIME/DIV05 μ SEC
 MAG X10 engaged
 Channel A Coupling 50 Ω

- e. Adjust horizontal POSITION as necessary to measure rise time between 10% and 90% points (inner set of dots across CRT face). Rise time should be equal to or less than 3.5 ns.

NOTE

If the fast-rise pulse generator has a rise time slower than the recommended 500 ps, the observed rise time will be slower also. To compensate for pulse generator rise time, use the following formula:

$$T_r(\text{observed}) = \sqrt{T_r^2(\text{oscilloscope}) + T_r^2(\text{pulse generator})}$$

or

$$T_r(\text{oscilloscope}) = \sqrt{T_r^2(\text{observed}) - T_r^2(\text{pulse generator})}$$

For example, a pulse generator with a 2 ns rise time would cause a properly operating oscilloscope with a rise time of 3.5 ns to display a rise time of 4.03 ns.

$$T_r(\text{observed}) = \sqrt{3.5^2 + 2^2} = 4.03 \text{ ns}$$

- f. Depress vertical MAG X5 switch.
- g. Reset channel A VOLTS/DIV and pulse generator controls to obtain an 8-division display.
- h. Center display on CRT. Rise time should be equal to or less than 9 ns.
- i. Connect the fast-rise pulse generator to channel B input and repeat steps b through h for channel B.
- j. Return Model 1740A controls to initial settings and disconnect equipment.

5-30. Z-AXIS BLANKING. +4V, ≥ 50 -ns wide pulse blanks trace of any intensity, usable to 10 MHz for normal intensity. +4 V signal is applied to the Z-axis input and the CRT is monitored to verify blanking.

Equipment Required:

Dc Standard
 50-ohm, 48-inch BNC Cable
 Adapter: male banana jack to female BNC

5-31. Perform blanking test as follows:

- a. Connect voltmeter calibrator to Z-AXIS INPUT on rear panel.
- b. Set voltmeter for +4 Vdc.
- c. Verify that the free-running baseline is blanked, regardless of INTENSITY setting.

5-32. DEFLECTION FACTOR. Accuracy $\pm 3\%$ on all ranges. A voltmeter calibrator or dc power supply is connected to the vertical inputs and deflection is checked on all ranges.

Equipment Required:

Dc Standard
 50-ohm, 48-inch BNC Cable
 Adapter: male banana jack to female BNC

5-33. Perform deflection factor test as follows:

- a. Connect dc standard to channel A INPUT.
- b. Set channel A VOLTS/DIV control and dc standard as indicated in table 5-4. Deflection should be 8 divisions $\pm 3\%$ for each checkpoint.
- c. Change DISPLAY to B and repeat step b for channel B.
- d. Return Model 1740A controls to initial settings.

Table 5-4. Deflection Factor Accuracy

VOLTS/DIV Settings	Dc Standard Settings
20	160 V
10	80 V
5	40 V
2	16 V
1	8 V
.5	4 V
.2	1.6 V
.1	.8 V
.05	.4 V
.02	.16 V
.01	.08 V
.005	.04 V

5-34. CALIBRATOR. Amplitude: 1 V p-p into 1 megohm, $\pm 1.0\%$; 0.1 V into 50 ohms with $< 0.1 \mu s$ rise time. Calibrator amplitude is checked against a known dc standard. Rise time is measured directly on CRT.

Equipment Required:

Dc Standard
 Adapter: male banana jack to female BNC
 50-ohm, 48-inch BNC Cable
 Test lead
 Adapter: female banana jack to male BNC

5-35. Perform calibrator test as follows:

- a. Set Channel A VOLTS/DIV to .2.
- b. Connect dc standard to channel A INPUT.
- c. Set dc standard for a +1 V output and carefully note vertical deflection.
- d. Disconnect dc standard and connect CAL 1V output to channel A INPUT using test lead and adapter. Deflection should be within $\pm 1.0\%$ of that noted in step c.
- e. Set channel A VOLTS/DIV to .02 and coupling to 50 ohms. Set MAIN TIME/DIV control to $.05 \mu SEC$ and measure rise time. Rise time should be less than $0.1 \mu s$.
- f. Disconnect equipment and return controls to initial settings.

5-36. ADJUSTMENTS.

5-37. The following paragraphs provide adjustment procedures to return the Model 1740A to peak operating condition when repairs are required. In addition to complete step-by-step procedures, a condensed adjustment procedure is included (table 5-9) for the convenience of technicians who have sufficient experience with the Model 1740A. For best results, adjustments should be performed at room temperature and in the sequence provided, since several adjustments are directly related to preceding adjustments. Adjustment location photographs are provided on a foldout page at the rear of this section. Schematics, troubleshooting information, and other service data are provided in Section VIII.

5-38. Although this instrument has been designed in accordance with international safety standards, this manual contains information and warnings which must be followed to ensure safe operation and to retain the instrument in safe condition. Service and adjustments should be performed only by qualified service personnel.

WARNING

Read the Safety Summary at the front of this manual before performing adjustment procedures.

NOTE

See figure 5-5 for adjustment locations.

5-39. Remove top and bottom covers from Model 1740A, set controls to initial settings, apply power, and allow fifteen minutes for instrument warmup.

5-40. LOW VOLTAGE POWER SUPPLY ADJUSTMENT.**Equipment Required:**

Digital Voltmeter

- a. Connect digital voltmeter between A16TP4 and ground test point, A16TP3.
- b. Adjust A16R26, +15 V Adj., for +15 Vdc ± 10 mV.
- c. If desired, check other voltages as indicated in table 5-5. Supplies should remain within ripple specifications at both high- and low-line conditions.
- d. Disconnect equipment.

Table 5-5. Low-voltage Supply Limits

VOLTAGE	TEST POINT	LIMITS	RIPPLE
-15 V	A16TP1	± 300 mV	< 10 mV
+5 V	A16TP2	± 100 mV	< 5 mV
+15 V	A16TP4	previously set to $< \pm 10$ mV	< 10 mV
+43 V	A16TP5	$\pm .8$ V	< 5 mV
+122 V	A16TP6	± 6 V	< 20 mV

5-41. INTENSITY LIMIT ADJUSTMENT.

- a. Set Model 1740A controls as follows:

DLY'D TIME/DIV 10 μ SEC
 BEAM INTENSITY minimum (CCW)

- b. Adjust A15R2, intensity limit adj. until intensified portion of sweep is just extinguished.
- c. Return controls to initial settings.

5-42. ASTIGMATISM AND FOCUS ADJUSTMENT.

- a. Set Model 1740A controls as follows:

MAIN TIME/DIV 1 SEC
 SWEEP VERNIER fully CCW
 BEAM INTENSITY barely visible spot

- b. While spot slowly moves across CRT, adjust FOCUS on front panel and ASTIGMATISM on rear panel for smallest and best-defined spot.
- c. Return controls to initial settings.

5-43. GATE RESPONSE ADJUSTMENT.**Equipment Required:**

Monitor Oscilloscope (HP Model 1707B with 10:1 divider probe)

- a. Using 10:1 divider probe and monitor oscilloscope, monitor gate output at A12TP1.
- b. Vary BEAM INTENSITY to set gate amplitude to 25 V peak.
- c. Set Model 1740A MAIN TIME/DIV to .5 μ SEC.
- d. Adjust A12R12 and A12C11, gate comp adj., for best response, \leq 3% overshoot.
- e. Disconnect equipment and return Model 1740A controls to initial settings.

5-44. FLOODGUN GRID ADJUSTMENT.

- a. Set SCALE ILLUM fully CW.
- b. Adjust A16R20, F.G. adj., for maximum brightness with uniform illumination.
- c. Decrease SCALE ILLUM and verify that CRT remains evenly illuminated.

5-45. TRACE ALIGN AND Y-AXIS ALIGN ADJUSTMENT. (Omit this paragraph for Option 101 instruments and proceed to paragraph 5-46.)**Equipment Required:**

Oscillator

- a. Obtain horizontal baseline.
- b. Adjust TRACE ALIGN on rear panel to make horizontal trace exactly parallel with the CRT graticule lines.
- c. Set display mode to A VS B.
- d. Connect oscillator to channel A INPUT.
- e. Adjust oscillator for approximately 1-kHz signal with 8 divisions of vertical deflection.
- f. Adjust A12R16, Y-align, so that vertical trace is parallel with the vertical graticule line.
- g. Disconnect equipment and return Model 1740A controls to initial settings.

5-46. TRACE ALIGN AND Y-AXIS ALIGN ADJUSTMENTS. (Option 101 instruments only.)**Equipment Required:**

Oscillator

- a. Obtain horizontal baseline.
- b. Adjust TRACE ALIGN on rear panel until horizontal trace is exactly parallel with the CRT graticule lines.
- c. Set main TIME/DIV to 1 mSEC.
- d. Connect oscillator to channel A INPUT.
- e. Adjust oscillator for approximately 500-kHz signal with 8 divisions of vertical deflection.
- f. With horizontal POSITION, place left side of raster at center screen.
- g. Adjust A12R16, Y-align, until left side of raster is parallel to vertical graticule lines.
- h. Disconnect equipment and return Model 1740A controls to initial settings.

5-47. CALIBRATOR AMPLITUDE ADJUSTMENT.**Equipment Required:**

Digital Voltmeter

- a. Connect digital voltmeter between CAL 1 V output and ground.
- b. Adjust A3R116, calibrator amp., for an indication of 0.500 V \pm 5 mV. Since the calibrator signal is a symmetrical square wave, by adjusting the amplitude for 0.5 V average value, the peak value of the calibrator pulse will be 1 V \pm 10 mV.

- c. Disconnect equipment.

5-48. TRIGGER SENSITIVITY ADJUSTMENT.

Equipment Required:

Oscillator
BNC Tee
Adapter, male banana to female BNC
50-ohm feedthrough termination
Two 50-ohm, 48-in. BNC Cables

- a. Set Model 1740A controls as follows:
- | | |
|-----------------------------|---------|
| VOLTS/DIV (channel A) | .005 |
| Coupling (channel A) | 50 ohms |
| Main INT/EXT | EXT |
- b. Connect oscillator to both channel A INPUT and main EXT TRIGGER input, using adapter and BNC Tee. Terminate the EXT TRIGGER input with the 50-ohm feedthrough termination.
- c. Set oscillator to obtain a 50-kHz, 15-mV p-p sine wave (3 div).
- d. Set main AUTO/NORM to NORM.
- e. Adjust main trig. sens. A7R20 fully CW.
- f. Slowly rotate main TRIGGER LEVEL from one extreme to the other. Note that one sweep occurs for each direction of rotation.
- g. While rotating TRIGGER LEVEL, slowly adjust main trig. sens. A7R20 CCW until sweep occurs for only one direction of rotation of TRIGGER LEVEL.
- h. Set main AUTO/NORM to AUTO.
- i. Increase oscillator amplitude to 20 mV p-p (4 div).
- j. Set main AUTO/NORM to NORM.
- k. Rotate main TRIGGER LEVEL. A sweep should occur for each direction of rotation.
- l. Change Model 1740A controls as follows:
- | | |
|------------------------|---------|
| Main AUTO/NORM | AUTO |
| Sweep mode | DLY'D |
| Main TIME/DIV | .1 mSEC |
| Delayed TIME/DIV | 50 μSEC |
| Main INT/EXT | INT |
| Delayed INT/EXT | EXT |
- m. Disconnect oscillator from main EXT TRIGGER and connect to delayed EXT TRIGGER.
- n. Set oscillator for a 50-kHz, 15-mV p-p sine wave.
- o. Set SWEEP AFTER DELAY to TRIG.
- p. Adjust delayed trig. sens. A10R9 fully cw.
- q. While rotating delayed TRIGGER LEVEL from one extreme to the other, adjust A10R9 CCW until sweep occurs for only one direction of rotation or not at all.
- r. Set SWEEP AFTER DELAY to AUTO.
- s. Increase oscillator output to 20 mV p-p.
- t. Set SWEEP AFTER DELAY to TRIG.
- u. Rotate delayed TRIGGER LEVEL. A sweep should occur for each direction of rotation.
- v. Disconnect equipment and return controls to initial settings.

5-49. SYNC ZERO ADJUSTMENT.

Equipment Required:

Oscillator

- a. Connect oscillator to channel A INPUT.
- b. Set oscillator controls to obtain a 1-kHz sine wave at approximately six divisions.
- c. Adjust main TRIGGER LEVEL for a stable display.
- d. Change main trigger coupling between AC and DC and note shift in trigger point.
- e. Adjust A7R41, sync zero, until no shift occurs.
- f. Disconnect equipment and return Model 1740A controls to initial settings.

5-50. TRIGGER VIEW BALANCE ADJUSTMENT.

Equipment Required:

Oscillator

- a. Set Model 1740A controls as follows:
- | | |
|----------------------|-----------|
| TRIGGER VIEW | depressed |
| Main AUTO/NORM | NORM |
| Main INT/EXT | EXT |
- b. Connect oscillator to main EXT TRIGGER input.
- c. Set oscillator for approximately 100-mV p-p, 10-kHz sine wave.

d. Adjust main TRIGGER LEVEL for stable display.

e. Decrease oscillator amplitude to lowest amplitude where stable triggering can be maintained.

f. Adjust A3R86, trig. view bal., until trigger view display is centered on middle horizontal graticule line.

g. Disconnect equipment and return Model 1740A controls to initial settings.

5-51. DELAY START ADJUSTMENT.

Equipment Required: None.

a. Set Model 1740A controls as follows:

MAIN TIME/DIV1 mSEC
DLY'D TIME/DIV05 μSEC
DELAY2

b. Set horizontal POSITION control so that sweep starts exactly on the far left graticule line.

c. Adjust A7R169, delay start, until intensified marker is 2 mm after sweep start point.

d. Return Model 1740A controls to initial settings.

5-52. HORIZONTAL AMPLIFIER GAIN ADJUSTMENTS.

Equipment Required:

Time-mark Generator

a. Set Model 1740A controls as follows:

Channel A Coupling	50Ω
Channel A VOLTS/DIV5
DLY'D TIME/DIV05 μSEC
DELAY	1.00

b. Adjust horizontal POSITION control until intensified dot is exactly on second vertical graticule line.

NOTE

A slight reduction in intensity may be helpful.

c. Set DELAY control to 9.00 position.

d. Adjust A7R93, X1 gain, until intensified dot is on 10th vertical graticule line from left.

e. Set DELAY control to 1.00 position.

f. Repeat steps b through e until intensified dot is on second vertical graticule line when DELAY control is a 1.00 position and is on 10th vertical graticule line from left when DELAY control is at 9.00 position.

g. Connect time-mark generator to channel A INPUT connector.

h. Set time-mark generator for .5 μSEC time markers.

i. Set MAIN TIME/DIV to .5 μSEC.

j. Using horizontal POSITION control, align time markers with vertical graticule lines.

k. On main sweep assembly, A8, adjust .05 - 2 μSEC, A8R43, for exactly one time marker per division.

l. Set HORIZ DISPLAY control to MAG X10.

m. Using horizontal POSITION control, align one time marker with first left vertical graticule line.

n. On horizontal sweep assembly, A7, adjust A7R117, X10 gain, until one time marker coincides with first left vertical graticule line and one time marker coincides with last right vertical graticule line.

o. Disconnect equipment and return Model 1740A controls to initial settings.

5-53. X10 AMPLIFIER BALANCE ADJUSTMENT.

Equipment Required:

Time-mark Generator

a. Set Model 1740A controls as follows:

Coupling (channel A)	50Ω
VOLTS/DIV (channel A)5
MAIN TIME/DIV	1 μSEC

b. Connect time-mark generator to channel A INPUT connector.

c. Set time-mark generator for 5 μSEC time markers and observe three time marks.

d. Using horizontal POSITION control, center middle time marker on CRT screen.

e. Engage MAG X10 switch and adjust A7R105, mag. center, to center time mark.

f. Disconnect equipment and return Model 1740A controls to initial settings.

5-54. HORIZONTAL LINEARITY ADJUSTMENT.

Equipment Required:

Time-mark Generator

a. Connect time-mark generator to channel A INPUT.

b. Set Model 1740A controls as follows:

Coupling (channel A)	50Ω
VOLTS/DIV2
MAIN TIME/DIV05 μSEC
MAG X10	engaged

c. Set time-mark generator for 10 ns markers.

d. Starting with A11R10 and A11R15, linearity adj. fully CW, adjust for best overall linearity in the center 8 divisions of unmagnified sweep (center 80 divisions of magnified sweep).

e. Disconnect equipment and return Model 1740A controls to initial settings.

5-55. PRELIMINARY MAIN SWEEP CALIBRATION.

Equipment Required:

Time-mark Generator

a. Set MAIN TIME/DIV and time-mark generator as indicated in table 5-6 and make adjustments to obtain one marker/division.

Table 5-6. Preliminary Main Sweep Calibration

MAIN TIME/DIV Settings	Time-mark Generator Settings	Adjust
1 μSEC	1 μs	A8R43
10 μSEC	10 μs	A8R12
1 mSEC	1 ms	A8R13
50 mSEC	50 ms	A8R14

5-56. DELAYED SWEEP ADJUSTMENT.

Equipment Required:

Time-mark Generator

a. Connect time-mark generator to channel A INPUT.

b. Set Model 1740A controls as follows:

Coupling (channel A) 50Ω
 VOLTS/DIV5
 Sweep Mode DLY'D

c. Set time-mark generator, MAIN TIME/DIV, and DLY'D TIME/DIV as indicated in table 5-7 and make necessary adjustments. If necessary, compromise so that all ranges controlled by a particular adjustment are in specified tolerance.

d. Disconnect equipment and return Model 1740A controls to initial settings.

5-57. MAIN SWEEP FINE ADJUSTMENTS. These adjustments utilize the accuracy of the DELAY dial to calibrate main sweep more accurately than is possible using the visual method (paragraph 5-54). These adjustments must be accomplished if the differential time accuracy specification is to be met.

Equipment Required:

Time-mark Generator

a. Connect time-mark generator to channel A INPUT connector.

b. Set Model 1740A front-panel controls as follows:

Coupling (channel A) 50Ω
 VOLTS/DIV (channel A)5
 MAIN TIME/DIV5 μSEC
 DLY'D TIME/DIV05 μSEC
 Horiz. Display DLY'D
 AUTO/NORM NORM

Table 5-7. Delayed Sweep Calibration Adjustments

MAIN TIME/DIV Settings	DLY'D TIME/DIV Settings	Time-mark Generator Settings	Adjust	Tolerance
.1 μSEC	.05 μSEC	50 ns	A9R28	±2%
.2 μSEC	.1 μSEC	.1 μs		
.5 μSEC	.2 μSEC	.2 μs		
1 μSEC	.5 μSEC	.5 μs		
2 μSEC	1 μSEC	1 μs		
5 μSEC	2 μSEC	2 μs		
10 μSEC	5 μSEC	5 μs	A9R10	±2%
20 μSEC	10 μSEC	10 μs		
50 μSEC	20 μSEC	20 μs		
.1 mSEC	50 μSEC	50 μs		
.2 mSEC	.1 mSEC	.1 mSEC		
.5 mSEC	.2 mSEC	.2 mSEC		
1 mSEC	.5 mSEC	.5 mSEC	A9R11	±2%
2 mSEC	1 mSEC	1 mSEC		
5 mSEC	2 mSEC	2 mSEC		
10 mSEC	5 mSEC	5 mSEC		
20 mSEC	10 mSEC	10 mSEC		
50 mSEC	20 mSEC	20 mSEC		

- c. Set time-mark generator for .5 μ s markers.
- d. Set DELAY potentiometer to 1.00 position.
- e. Using channel A POSN control, center vertically time-mark display on CRT.
- f. Using horizontal POSITION control, set leading edge of time mark to center CRT graticule line.
- g. Set DELAY potentiometer to 9.00 position.
- h. Adjusting .05 - 2 μ SEC, A8R43, set leading edge of time marker to center CRT graticule line.
- i. Repeat steps d through h until leading edge of time marker can be set to center CRT graticule line with DELAY dial set at 9.00.
- j. This completes step 1 in table 5-8. Complete remaining steps in table by repeating above procedure for each step.

k. Disconnect equipment and return Model 1740A controls to initial settings.

5-58. VERTICAL AMPLIFIER BALANCE ADJUSTMENT.

Equipment Required:

Digital Voltmeter

- a. Set channel A and B coupling to 50 Ω and VOLTS/DIV (channels A and B) to .05.
- b. Connect digital voltmeter to A3TP9.
- c. Adjust A3R11, channel A FET balance, for 0 V \pm 0.5 mV.
- d. Change DISPLAY to B.
- e. Connect digital voltmeter to A3TP10.
- f. Adjust A3R31, channel B FET balance, for 0 V \pm 0.5 mV.
- g. Disconnect voltmeter.
- h. Change DISPLAY to A.
- i. Set channel A and B VOLTS/DIV switches to .005.

j. While changing channel A VOLTS/DIV between .005, .01, and .02, adjust A3R18, channel A 5-mV balance, for minimum trace shift between these three ranges.

k. Rotate channel A VOLTS/DIV between .005 and .05 and adjust A3R19, channel A 50-mV balance, for minimum trace shift between these two ranges.

l. Change DISPLAY to B.

m. Rotate channel B VOLTS/DIV between .005, .01, and .02, and adjust A3R77, channel B 5-mV balance, for minimum trace shift between these three ranges.

n. Rotate channel B VOLTS/DIV between .005 and .05 and adjust A3R76, channel B 50-mV balance, for minimum trace shift between these two ranges.

o. While switching CH B INVT selector between its engaged and disengaged position, adjust A3R90, polarity balance, until trace shift is minimal. If A3R90 is changed, recheck steps m and n for correct balance. If additional adjustments are made for m and n, recheck adjustment of A3R90 as described above.

p. Return controls to initial settings.

5-59. POSITION AND SYNC BALANCE ADJUSTMENT.

Equipment Required:

Oscillator
BNC Tee

a. Set Model 1740A controls as follows:

DISPLAY..... B
POSN (channel B) 12 o'clock

b. Switch between normal and MAG X5 and adjust A3R32, channel B posn for minimum trace shift.

c. Change Model 1740A controls as follows:

DISPLAY..... ALT
TRIGGER COMP
VOLTS/DIV (both channels)..... .01

Table 5-8. Main Sweep Fine Adjustment

Step	Time-mark Generator Setting	MAIN TIME/DIV Setting	DLY'D TIME/DIV Setting	Adjust
1	.5 μ s	.5 μ SEC	.05 μ SEC	A8R43
2	10 μ s	10 μ SEC	1 μ SEC	A8R12
3	1 ms	1 mSEC	.1 mSEC	A8R13
4	50 ms	50 mSEC	5 mSEC	A8R14

d. Connect a 10-kHz sine wave to both channels. Cables between BNC tee and input connectors should be of equal length.

e. Adjust oscillator for 0.5 divisions of vertical deflection.

f. Adjust sync A bal. A3R79 until both channels trigger stably and are in phase. If A3R79 is changed, recheck steps j and k in paragraph 5-57 for correct balance. If additional adjustments are made for j and k, recheck adjustment of A3R79 as described above.

g. Disconnect oscillator.

h. Return Model 1740A controls to initial settings.

i. Switch between normal and MAG X5 and adjust A3R58, channel A POSN, for minimum trace shift.

j. Disengage MAG X5.

5-60. INPUT CAPACITANCE AND ATTENUATOR COMPENSATION ADJUSTMENTS.

Equipment Required:

Square-wave Generator
LCR Meter

a. Connect square-wave generator to channel A INPUT.

b. Set Model 1740A controls as follows:

Coupling (channel A) 50Ω
VOLTS/DIV (channel A)5
MAIN TIME/DIV 20 μSEC

c. Set square-wave generator controls to obtain a 3-V peak, 5-kHz square wave.

d. Adjust A3C2, .5 volt comp., with insulated adjusting tool for best square-wave response.

e. Disconnect square-wave generator.

f. Set Model 1740A controls as follows:

VOLTS/DIV (both channels)2
Coupling (channel A) DC

g. Connect LCR Meter to channel A INPUT and observe reading (19.5 to 21.5 pF).

h. Set channel A VOLTS/DIV to .5.

i. Adjust A3C4, channel A input cap., to obtain same reading as noted on .2 range (step g).

j. Disconnect LCR meter.

k. Change DISPLAY to B and repeat steps a through j for channel B, adjusting A3C17, channel B .5 V input comp., and A3C19, channel B .5 V cap.

l. Disconnect equipment and return Model 1740A controls to initial settings.

5-61. VERTICAL GAIN ADJUSTMENT.

Equipment Required:

Test Lead

a. Connect CAL 1 V output to channel A INPUT using test lead and adapter.

b. Set Model 1740A controls and adjustments as follows:

VOLTS/DIV (both channels)2
A3R49, channel A gain fully CW
A3R46, channel B gain fully CW

c. Note signal amplitude of channel A.

d. Change DISPLAY and TRIGGER to B and change CAL signal from A to B input.

e. If channel B amplitude is larger than channel A, turn A3R46, channel B gain, CCW until channel gains are equal. If channel A is larger than channel B, turn A3R49, channel A gain, CCW until gains are equal.

f. Adjust A3R65, overall gain, to display exactly 5 divisions vertically.

g. Disconnect equipment and return Model 1740A controls to initial settings.

5-62. PULSE RESPONSE ADJUSTMENT.

Equipment Required:

Fast-rise Pulse Generator

a. Connect fast-rise pulse generator to channel A INPUT.

b. Set Model 1740A controls as follows:

Coupling (both channels) 50Ω
MAIN TIME/DIV05 μSEC
A5R19 fully CCW
A5R20 fully CCW
A5R22 fully CCW
A5R24 fully CCW

c. Set channel A VOLTS/DIV and pulse generator controls as necessary to obtain a 6-division display. If possible, make adjustments on the .01 VOLTS/DIV ranges.

d. Adjust A5R24, HF No. 1, CW to partially smooth front edge perturbation. Adjust A5R20, HF No. 2, CW to speed up front edge (see figure 5-4).

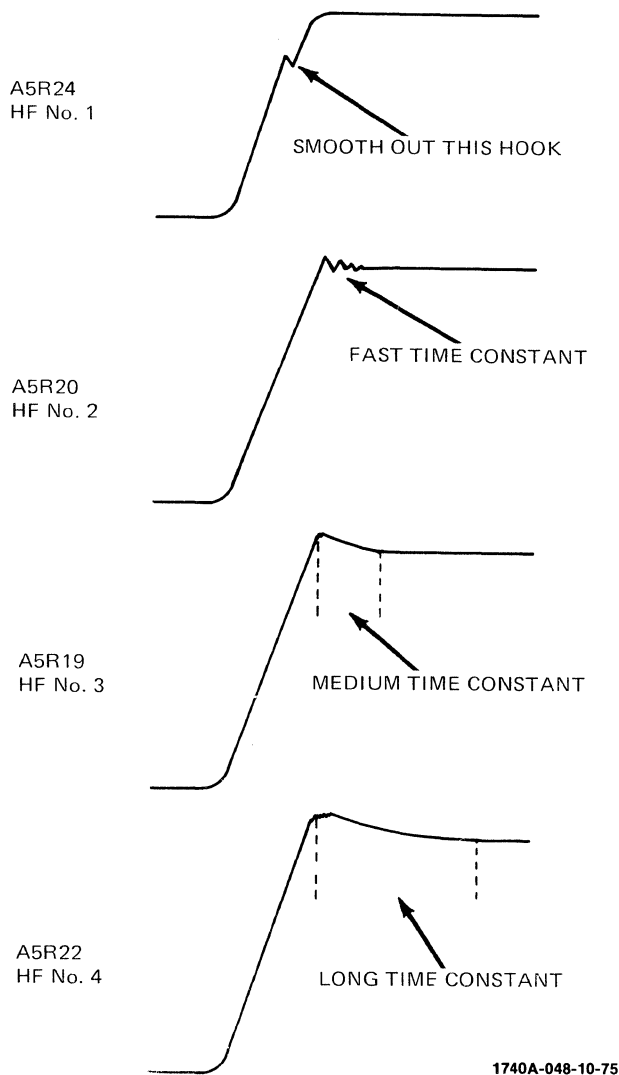


Figure 5-4. Pulse Response Adjustments

e. Alternately adjust A5R24 and A5R20 to set leading edge of pulse to most resemble its known characteristics.

NOTE

If pulse generator being used is specified for 3% overshoot, do not set adjustments for less than 3% since this is effectively detuning the vertical amplifier bandwidth.

f. Adjust A5R19, HF No. 3, for flattest pulse top (medium time constant).

g. Adjust A5R22, HF No. 4 for flattest pulse top (long time constant).

h. Check adjustment again since some interaction occurs (steps d through g).

i. Change DISPLAY to B.

j. Connect the fast-rise pulse generator to channel B INPUT.

k. Adjust A3R22, channel B HF adj., to make the channel B display as similar as possible to the channel A display.

l. Disconnect equipment and return Model 1740A controls to initial settings.

NOTE

Check bandwidth (paragraph 5-12) after making response adjustments. If bandwidth is low or marginal, adjust A5R24, HF No. 1, slightly CW to speed up response; then adjust A5R20, HF No. 2, slightly CW to optimize pulse response again.

5-63. X-Y GAIN ADJUSTMENT. (Not required on Option 101 instruments.)

Equipment Required:

- Oscillator
- Power Divider

a. Connect oscillator to both channels, using a 50-ohm power divider, two 9-inch 50-ohm cables, and a 48-inch 50-ohm cable.

b. Adjust oscillator and channel A VOLTS/DIV for exactly 6 divisions of vertical deflection. Oscillator should be set for a low frequency (<1 kHz).

c. Change sweep mode to A VS B.

d. With channel B VOLTS/DIV set to same setting as channel A, adjust A7R97, A-B cal., for exactly 6 divisions of horizontal deflection.

e. Disconnect equipment and return Model 1740A controls to initial settings.

Table 5-9. Condensed Adjustment Procedure

Adjustment	Procedure
+15 V Adj., A16R26	+15 Vdc \pm 10 mV.
Intensity Limit Adj., A15R2	<ol style="list-style-type: none"> 1. Set main sweep to .1 mSEC. 2. Set delayed sweep to 10 μSEC. 3. Adjust so that intensified sweep is just extinguished with BEAM INTENSITY at minimum.
Gate Comp Adj., A12R12 and A12C11	<ol style="list-style-type: none"> 1. Set BEAM INTENSITY to midrange. 2. Adjust for fastest rise time with <3% overshoot. Observe trace or adjust for even intensity, particularly at left edge. Check for less than 1 division of baseline loss at fastest sweep speed.
F. G. Adj., A16R20	Adjust for uniform illumination at all settings of SCALE ILLUM.
TRACE ALIGN (rear panel) and Y-align (A12R16)	<ol style="list-style-type: none"> 1. Perform TRACE ALIGN first. 2. Apply 10-kHz sine wave to channel B while in A VS B mode. 3. Adjust for perpendicular line.
Calibrator Amp., A3R116	Adjust for 1 V peak \pm 10 mV.
Main Trig. Sens. Adj., A7R20 Delayed Trig. Sens. Adj., A10R86	Adjust so both main and delayed trigger circuit recognize a 10-MHz 30 mV sine wave.
Sync Zero, A7R41	<ol style="list-style-type: none"> 1. Apply 1-kHz sine wave. 2. Adjust for no shift in trigger point while switching time base to AC/DC coupling.
Trig. View Bal., A3R86	<ol style="list-style-type: none"> 1. Apply small sine wave to main EXT TRIGGER. 2. Select TRIG VIEW mode. 3. Adjust to position the triggered display to center screen.
HORIZ Amp Gain X1 Gain A7R93	<ol style="list-style-type: none"> 1. Turn Delayed Sweep to .05 μSEC to obtain intensified dot on main sweep. 2. Set DELAY to 1.00 and position intensity spot to 2nd graticule line.
Delay Start Adj. A7R169	With MAIN TIME/DIV set to .1 mSEC, DLY'D TIME/DIV set to .05 μ SEC, and DELAY to .2, set intensified spot 2 mm after sweep start point.

Table 5-9. Condensed Adjustment Procedure (Cont'd)

Adjustment	Procedure															
.05 - 2 μ SEC A8R43 X10 Gain A7R117	3. Set DELAY to 9.00. Adjust A7R93 to position bright spot to 10th line. 4. Set for 1 marker/div. 5. Set for 1 marker/10 div.															
HORIZ Amp Balance Mag Center A7R105	1. Set so that display at center screen remains at center screen when MAG X10 is used.															
HORIZONTAL LINEARITY A11R10 A11R15	1. Adjust on .05 μ SEC range, using MAG X10, observing a 10-ns sine wave.															
PRELIMINARY MAIN SWEEP CAL A8R43 A8R12 A8R13 A8R14	1. 1 μ SEC range 2. 10 μ SEC range 3. 1 mSEC range 4. 50 mSEC range															
DELAYED SWEEP CAL A9R28 A9R10 A9R11	1. .5 μ SEC range 2. 5 μ SEC range 3. .5 mSEC range															
MAIN SWEEP FINE ADJ A8R43 A8R12 A8R13 A8R14	Use DELAY dial at setting of 1.00 and 9.00 to adjust main sweep. <table border="0" style="width: 100%; text-align: center;"> <tr> <td style="width: 30%;"></td> <td style="width: 35%;">Main Sweep and Time Mark</td> <td style="width: 35%;">Delayed Sweep</td> </tr> <tr> <td>A8R43</td> <td>.5 μSEC</td> <td>.05 μSEC</td> </tr> <tr> <td>A8R12</td> <td>10 μSEC</td> <td>1 μSEC</td> </tr> <tr> <td>A8R13</td> <td>1 mSEC</td> <td>.1 mSEC</td> </tr> <tr> <td>A8R14</td> <td>50 mSEC</td> <td>5 mSEC</td> </tr> </table>		Main Sweep and Time Mark	Delayed Sweep	A8R43	.5 μ SEC	.05 μ SEC	A8R12	10 μ SEC	1 μ SEC	A8R13	1 mSEC	.1 mSEC	A8R14	50 mSEC	5 mSEC
	Main Sweep and Time Mark	Delayed Sweep														
A8R43	.5 μ SEC	.05 μ SEC														
A8R12	10 μ SEC	1 μ SEC														
A8R13	1 mSEC	.1 mSEC														
A8R14	50 mSEC	5 mSEC														
Vertical Amplifier Balance A3R11 A3R31	1. Connect DVM to A3TP9 and adjust A FET balance for 0 V \pm .5 mV. Adjust on 50 mV range. 2. Connect DVM to A3TP10 and adjust B FET balance for 0 V \pm .5 mV. Adjust on 50 mV range.															

Table 5-9. Condensed Adjustment Procedure (Cont'd)


Adjustment	Procedure
Vertical Amplifier Balance (Cont'd) A3R18 A3R19 A3R77 A3R76 A3R90	<ol style="list-style-type: none"> 3. Switch channel A VOLTS/DIV between .005 and .02 and adjust 5-mV balance for minimum trace shift. 4. Switch channel A VOLTS/DIV between .005 and .05 and adjust 50-mV balance for minimum trace shift. 5. Switch channel B VOLTS/DIV between .005 and .02 and adjust 5-mV balance for minimum trace shift. 6. Switch channel B VOLTS/DIV between .005 and .05, and adjust 50-mV balance for minimum trace shift. 7. Engage/disengage CH B INVT and adjust for minimum trace shift. Readjust A3R77 and A3R76 if necessary.
Position and Sync Balance A3R32 A3R79 A3R58	<ol style="list-style-type: none"> 1. Select B DISPLAY; switch between normal and MAG X5, and adjust channel B POSN for minimum trace shift. 2. Apply 10-kHz sine wave to both channels. Select ALT mode and COMP TRIGGER, and adjust sync A balance for stable triggering and minimum phase shift. Readjust A3R18 and A3R19 if necessary. 3. Select A DISPLAY; switch between normal and MAG X5, and adjust channel A position for minimum trace shift.
Input C and Attenuator Compensation (Channel A) A3C2 A3C4	<ol style="list-style-type: none"> 1. Apply 10-kHz square wave, and adjust .5 V comp for best response. 2. Adjust .5 V input cap to make .5 VOLTS/DIV range match reading on .2 range (19.5 to 21.5 pF).
Input C and Attenuator Compensation (Channel B) A3C17	<ol style="list-style-type: none"> 1. Apply 10-kHz square wave, and adjust .5 V comp for best response.

Table 5-9. Condensed Adjustment Procedure (Cont'd)

Adjustment	Procedure
Input C and Attenuator Compensation (Cont'd) A3C19	2. Adjust .5 V input cap to make .5 VOLTS/ DIV range match reading on .2 range (19.5 to 21.5 pF).
Gain A3R49 A3R46 A3R65	1. Channel A fine gain. 2. Channel B fine gain. 3. Composite gain.
Pulse Response A5R24 A5R20 A5R19 A5R22 A3R22	1. Short time constant. 2. Short time constant 3. Medium time constant. 4. Long time constant. 5. Adjust to make channel B most resemble channel A.
X-Y Gain (Not applicable to Option 101) A7R97	Adjust for same gain on X-axis as on Y-axis.

PERFORMANCE TEST RECORD (Cont'd)
MODEL 1740A

Test	Specification	Measured	
		X1	X10
Sweep Time Accuracy (at room Temperature) (Cont'd)			
DLY'D			
.05 μ SEC	$\pm 2\%$, $\pm 3\%$ in X10	_____	_____
.1 μ SEC	$\pm 2\%$, $\pm 3\%$ in X10	_____	_____
.2 μ SEC	$\pm 2\%$, $\pm 3\%$ in X10	_____	_____
.5 μ SEC	$\pm 2\%$, $\pm 3\%$ in X10	_____	_____
1 μ SEC	$\pm 2\%$, $\pm 3\%$ in X10	_____	_____
2 μ SEC	$\pm 2\%$, $\pm 3\%$ in X10	_____	_____
5 μ SEC	$\pm 2\%$, $\pm 3\%$ in X10	_____	_____
10 μ SEC	$\pm 2\%$, $\pm 3\%$ in X10	_____	_____
20 μ SEC	$\pm 2\%$, $\pm 3\%$ in X10	_____	_____
50 μ SEC	$\pm 2\%$, $\pm 3\%$ in X10	_____	_____
.1 mSEC	$\pm 2\%$, $\pm 3\%$ in X10	_____	_____
.2 mSEC	$\pm 2\%$, $\pm 3\%$ in X10	_____	_____
.5 mSEC	$\pm 2\%$, $\pm 3\%$ in X10	_____	_____
1 mSEC	$\pm 2\%$, $\pm 3\%$ in X10	_____	_____
2 mSEC	$\pm 2\%$, $\pm 3\%$ in X10	_____	_____
5 mSEC	$\pm 2\%$, $\pm 3\%$ in X10	_____	_____
10 mSEC	$\pm 2\%$, $\pm 3\%$ in X10	_____	_____
20 mSEC	$\pm 2\%$, $\pm 3\%$ in X10	_____	_____
DIFFERENTIAL TIME ACCURACY			
Dial 8.00	± 0.05	_____	_____
DELAY JITTER			
<1:50 000	1 div	_____	_____
RISE TIME			
Ch A	≤ 3.5 nSEC	_____	_____
Ch A MAG X5	≤ 9 nSEC	_____	_____
Ch B	≤ 3.5 nSEC	_____	_____
Ch B MAG X5	≤ 9 nSEC	_____	_____
Z-AXIS BLANKING			
+4 V blanking		_____	_____
DEFLECTION FACTOR			
	$\pm 3\%$ all ranges	CH A	CH B
	20 V/div	_____	_____
	10 V/div	_____	_____
	5 V/div	_____	_____
	2 V/div	_____	_____
	1 V/div	_____	_____
	.5 V/div	_____	_____
	.2 V/div	_____	_____
	.1 V/div	_____	_____
	.05 V/div	_____	_____
	.02 V/div	_____	_____
	.01 V/div	_____	_____
	.005 V/div	_____	_____
CALIBRATOR			
Amplitude (1 V)	$\pm 1.0\%$	_____	_____
Rise Time (T_r)	$\leq 1 \mu$ SEC	_____	_____

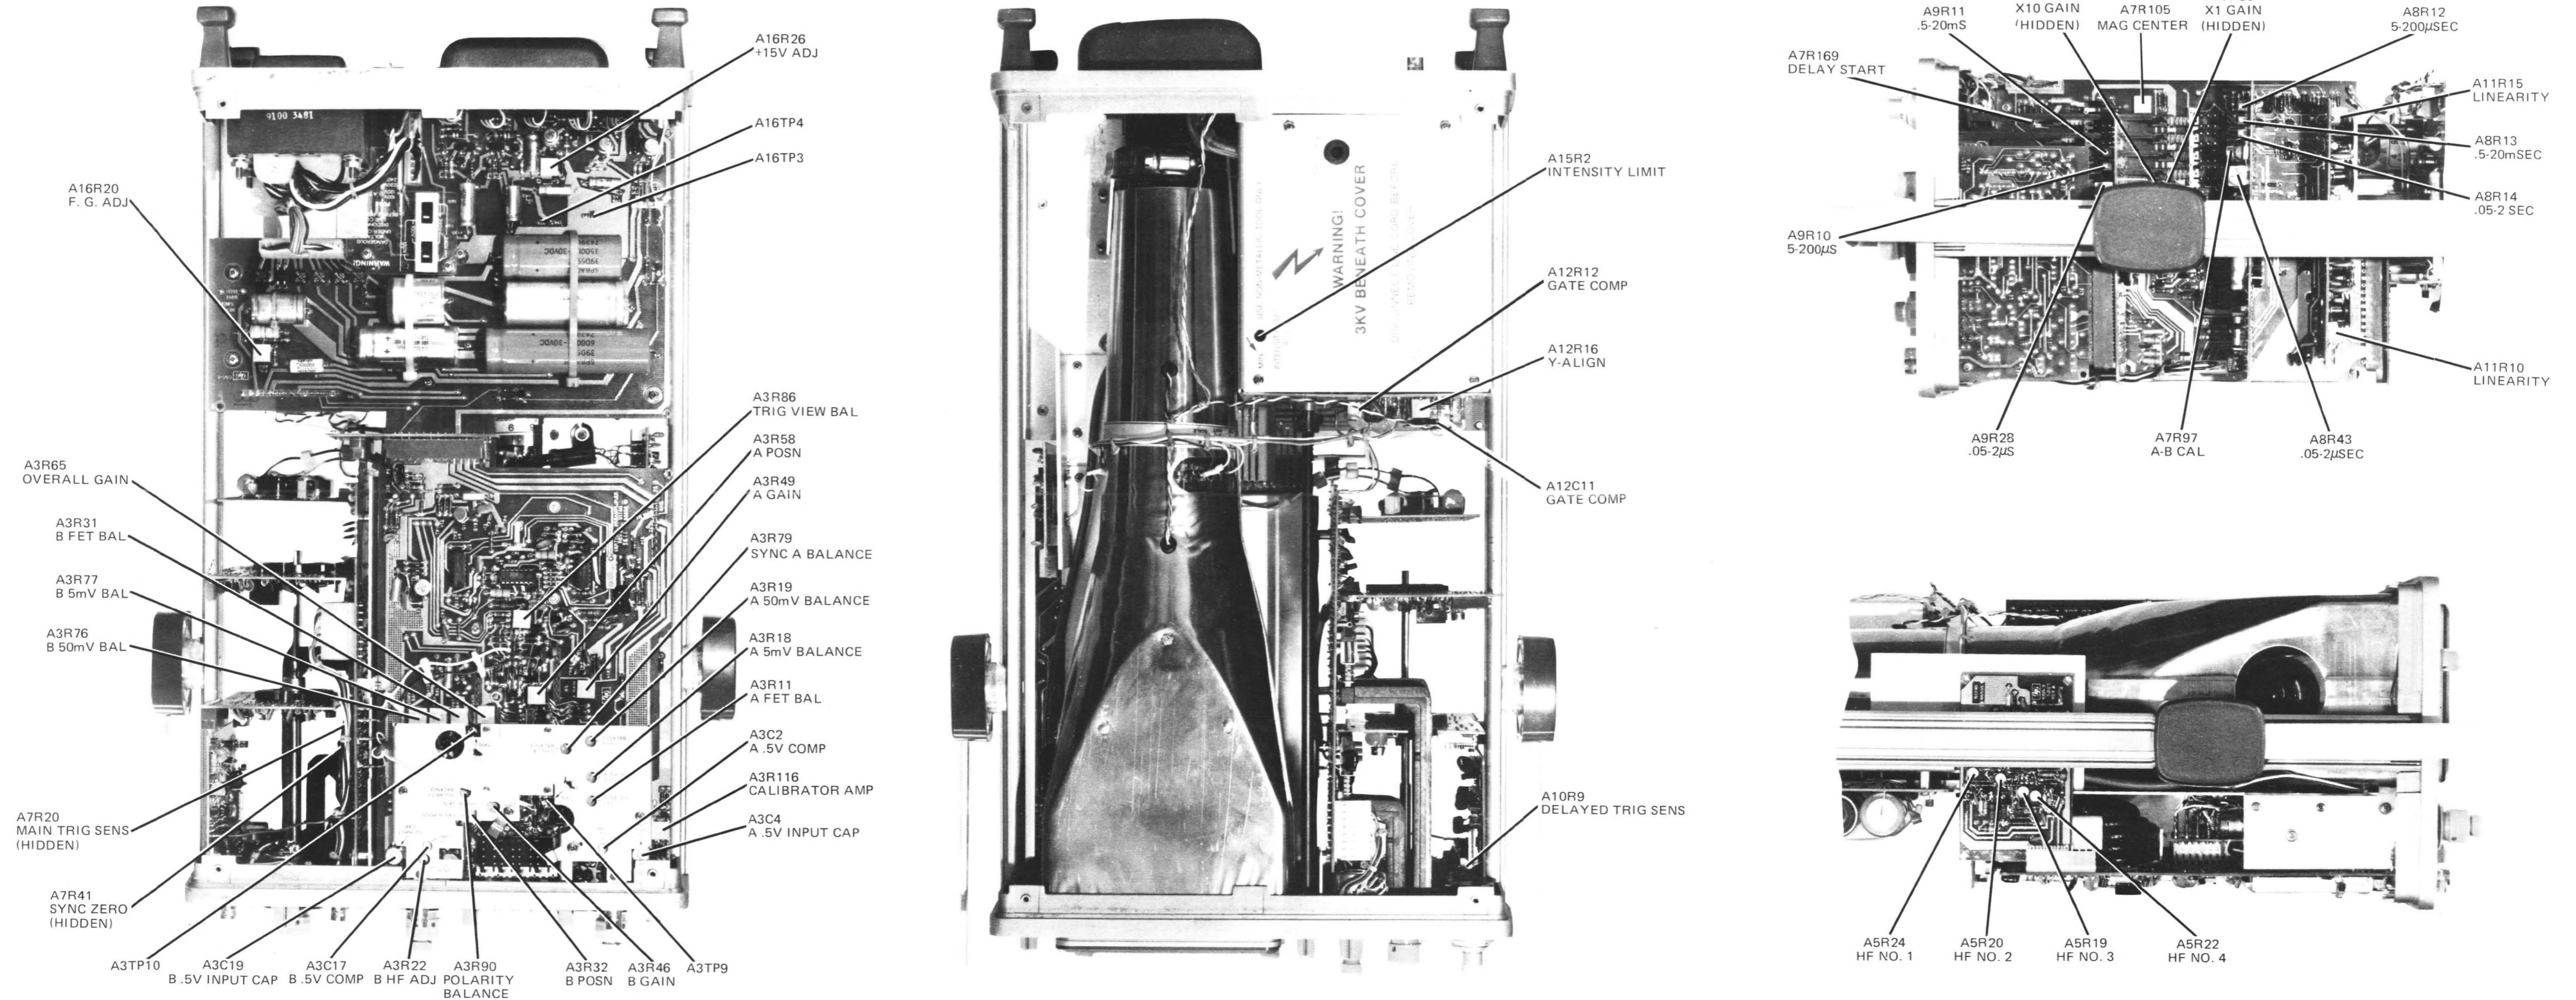

1740A-049-07-76

Figure 5-5.
Adjustment Locations
5-23 (5-24 blank)

**SECTION VI
REPLACEABLE PARTS**

6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. The abbreviations used in the parts list are described in table 6-1. Table 6-2 lists the parts in alphanumeric order by reference designation and includes the manufacturer and manufacturer's part number. Table 6-3 contains the list of manufacturers' codes.

6-3. ORDERING INFORMATION.

6-4. To obtain replacement parts from Hewlett-Packard, address order or inquiry to the nearest Hewlett-Packard Sales/Service Office and supply the following information:



- a. Instrument model and serial number.
- b. HP part number of item(s).
- c. Quantity of part(s) desired.
- d. Reference designation of part(s).

6-5. To order a part not listed in the table, provide the following information:

- a. Instrument model and serial number.
- b. Description of the part, including function and location in the instrument.
- c. Quantity desired.

Table 6-1. Abbreviations for Replaceable Parts List

A	AMPERE(S)	H	HENRY(IES)	NPN	NEGATIVE-POSITIVE-NEGATIVE	RWV	REVERSE WORKING VOLTAGE
ASSY	ASSEMBLY	HG	MERCURY	NSR	NOT SEPARATELY REPLACEABLE	S-B	SLOW-BLOW SILICON CONTROLLED RECTIFIER
BD	BOARD(S)	HP	HEWLETT-PACKARD	OBD	ORDER BY DESCRIPTION	SE	SELENIUM
BH	BINDER HEAD	HZ	HERTZ	OH	OVAL HEAD	SECT	SECTION(S)
BP	BANDPASS	IF	INTERMEDIATE FREQ.	OX	OXIDE	SI	SILICON
C	CENTI (10 ⁻²)	IMPG	IMPREGNATED	P	PEAK	SIL	SILVER
CAR	CARBON	INCD	INCANDESCENT	PC	PRINTED (ETCHED) CIRCUIT(S)	SL	SLIDE
CCW	COUNTERCLOCKWISE	INCL	INCLUDE(S)	PF	PICOFARADS	SP	SINGLE POLE
CER	CERAMIC	INS	INSULATION(ED)	PHL	PHILLIPS	SPL	SPECIAL
CMO	CABINET MOUNT ONLY	INT	INTERNAL	PIV	PEAK INVERSE VOLTAGE(S)	ST	SINGLE THROW
COAX	COAXIAL	K	KILO (10 ³)	POT	POTENTIOMETER(S)	STD	STANDARD
COEF	COEFFICIENT	KG	KILOGRAM	POS	POSITION(S)	TA	TANTALUM
COMP	COMPOSITION	LB	POUND(S)	P/P	PEAK-TO-PEAK	TD	TIME DELAY
CONN	CONNECTOR(S)	LH	LEFT HAND	PRGM	PROGRAM	TFL	TEFLON
CRT	CATHODE-RAY TUBE	LIN	LINEAR TAPER	PS	POLYSTYRENE	TGL	TOGGLE
CW	CLOCKWISE	LOG	LOGARITHMIC TAPER	PWV	PEAK WORKING VOLTAGE	THYR	THYRISTOR
D	DECI (10 ⁻¹)	LPF	LOW-PASS FILTER(S)	RECT	RECTIFIER(S)	TI	TITANIUM
DEPC	DEPOSITED CARBON	LVR	LEVER	RF	RADIO FREQUENCY INTERFERENCE	TNLDIO	TUNNEL DIODE(S)
DP	DOUBLE POLE	M	MILLI (10 ⁻³)	RFI	RADIO FREQUENCY INTERFERENCE	TOL	TOLERANCE
DT	DOUBLE THROW	MEG	MEGA (10 ⁶)	RH	ROUND HEAD	TRIM	TRIMMER
ELECT	ELECTROLYTIC	MET FILM	METAL FILM	OR	OR	U	MICRO (10 ⁻⁶)
ENCAP	ENCAPSULATED	MET OX	METAL OXIDE	RECT	RECTIFIER(S)	V	VOLTS
EXT	EXTERNAL	MFR	MANUFACTURER	RFI	RADIO FREQUENCY INTERFERENCE	VAR	VARIABLE
F	FARAD(S)	MINAT	MINIATURE	RMS	ROOT MEAN SQUARE	VDCW	DC WORKING VOLT(S)
FET	FIELD-EFFECT TRANSISTOR(S)	MOM	MOMENTARY	RMO	RACK MOUNT ONLY	W	WATT(S)
FH	FLAT HEAD	MTG	MOUNTING	RMS	ROOT MEAN SQUARE	W/	WITH
FIL H	FILLISTER HEAD	MY	MYLAR	RH	ROUND HEAD	WIV	WORKING INVERSE VOLTAGE
FXD	FIXED	N	NANO (10 ⁻⁹)	RFI	RADIO FREQUENCY INTERFERENCE	W/O	WITHOUT
G	GIGA (10 ⁹)	N/C	NORMALLY CLOSED	RH	ROUND HEAD	WW	WIREWOUND
GE	GERMANIUM	NE	NEON	OR	OR		
GL	GLASS	N/O	NORMALLY OPEN	RFI	RADIO FREQUENCY INTERFERENCE		
GRD	GROUNDED	NOP	NEGATIVE POSITIVE ZERO (ZERO TEMPERATURE COEFFICIENT)	RMO	RACK MOUNT ONLY		

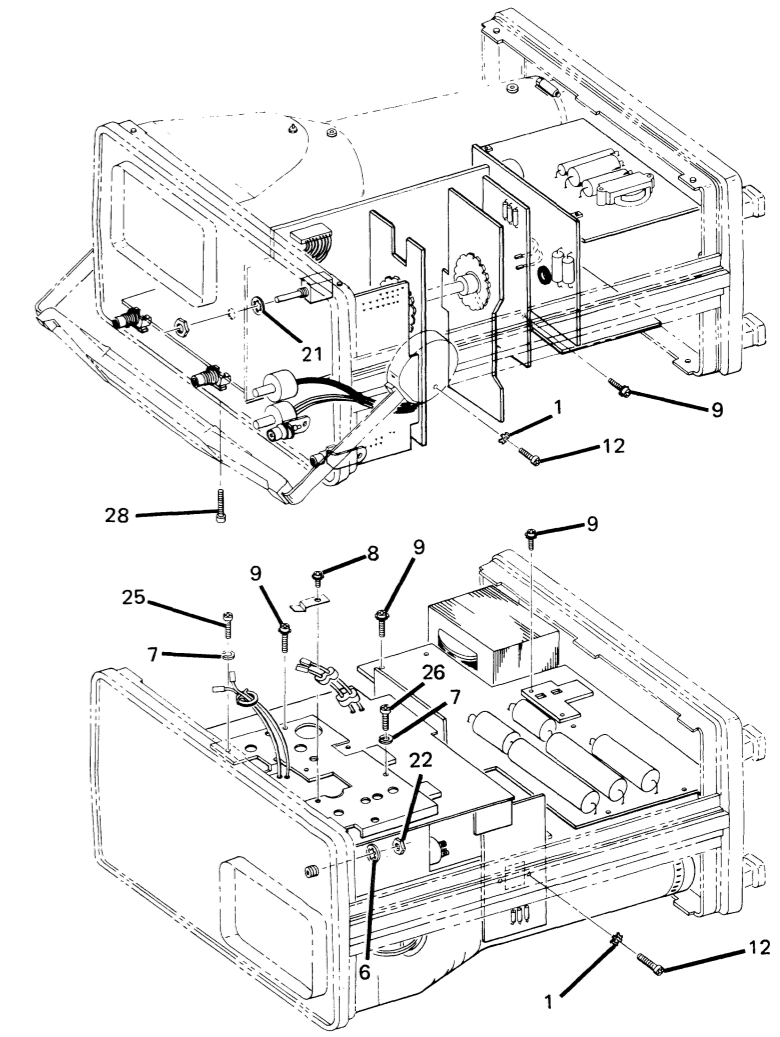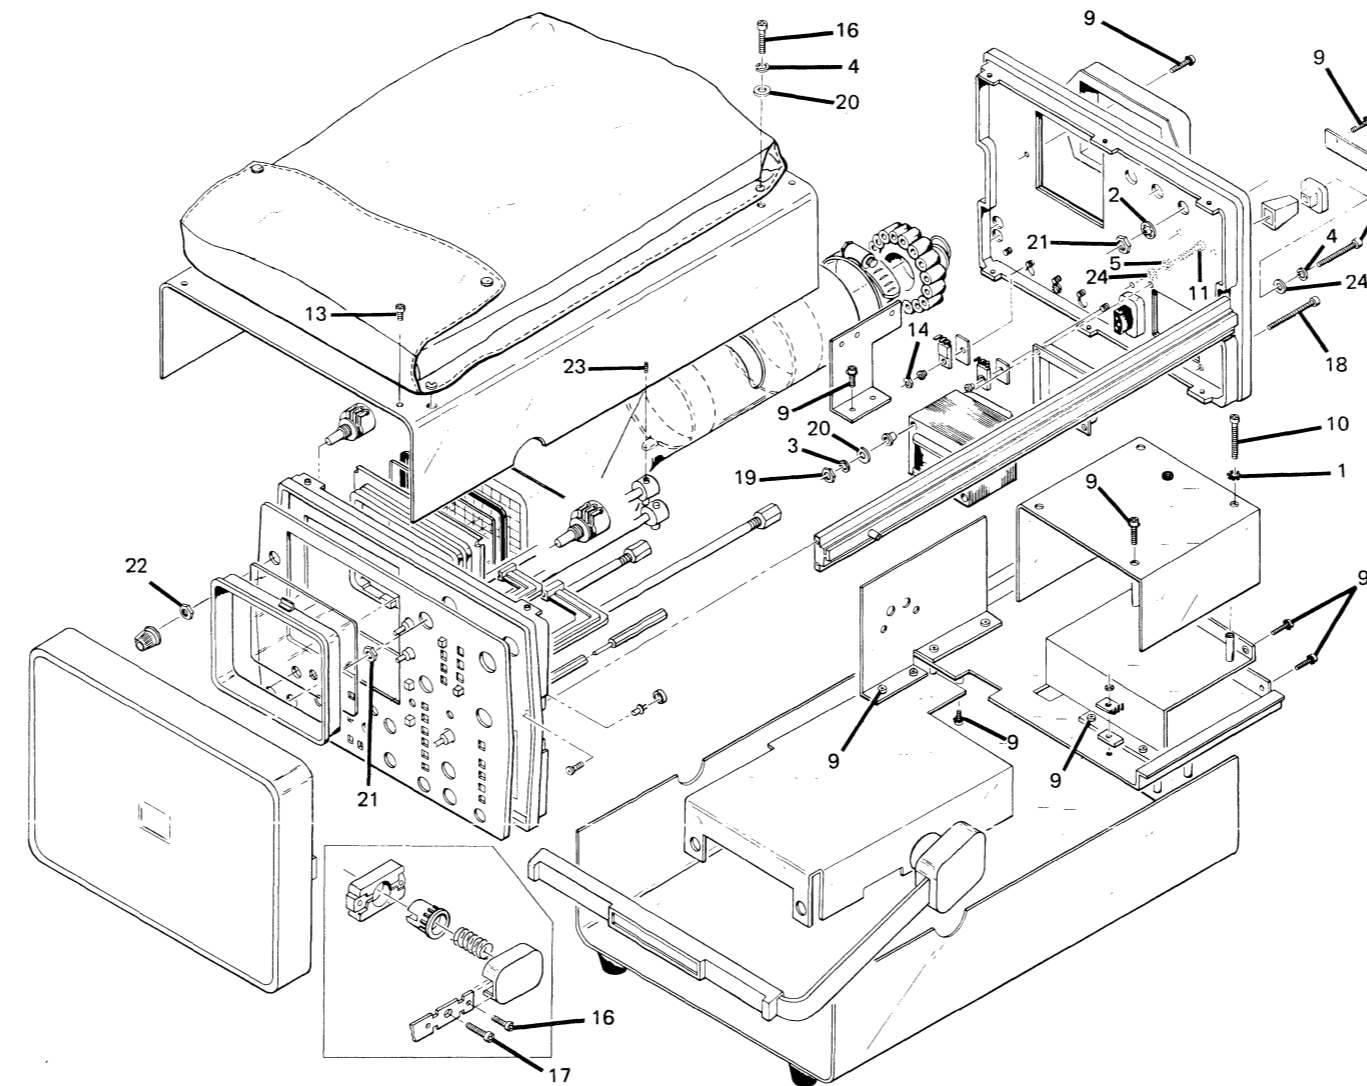

ITEM	DESCRIPTION	QTY	HP PART NO.	ITEM	DESCRIPTION	QTY	HP PART NO.
1	STAR WASHER	11	2190-0005	15	NO. 6-32 x 1.5 MACHINE SCREW	4	2360-0135
2	3/8 LOCKWASHER	13	2190-0016	16	NO. 6-32 x .375 MACHINE SCREW	9	2360-0197
3	NO. 8 HELICAL LOCKWASHER	4	2190-0017	17	NO. 8-32 x .750 MACHINE SCREW	2	2510-0111
4	NO. 6 HELICAL LOCKWASHER	8	2190-0018	18	NO. 8-32 x 2.25 MACHINE SCREW	4	2510-0135
5	NO. 4 HELICAL LOCKWASHER	9	2190-0019	19	NO. 8-32 x .125 THK NUT	4	2580-0004
6	1/4 LOCKWASHER (INTERNAL)	1	2190-0084	20	NO. 8 FLAT WASHER	10	3050-0071
7	NO. 2 HELICAL LOCKWASHER	6	2190-0112	21	3/8-32 NUT	15	2950-0043
8	NO. 4-40 x .250 MACHINE SCREW	4	2200-0103	22	1/4-32 NUT	2	2950-0072
9	NO. 4-40 x .312 MACHINE SCREW	44	2200-0105	23	NO. 4-40 x .188 SET SCREW	4	3030-0196
10	NO. 4-40 x 1.25 MACHINE SCREW	2	2200-0123	24	NO. 6 FLAT WASHER	11	3050-0010
11	NO. 4-40 x .375 MACHINE SCREW	8	2200-0143	25	NO. 2-56 x 3/16	2	0520-0127
12	NO. 4-40 x .625 MACHINE SCREW	3	2200-0149	26	NO. 2-56 x 5/8	4	0520-0136
13	NO. 4-40 x .250 MACHINE SCREW (BLACK)	8	2200-0762	27	NO. 2-28 x .500 TAPPING SCREW (HOLDS ATTENUATORS TO BOARD)	8	0624-0306
14	NO. 4-40 x .093 THK NUT	11	2260-0002	28	NO. 4-20 x 1.000 TAPPING SCREW	4	0624-0313

Figure 6-1. Chassis Parts and Board Assy Identification. (Sheet 1 of 2)

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
CHASSIS PARTS					
A1	01740-63401		ATTENUATOR ASSY, CHANNEL A	28480	01740-63401
A2	01740-63402		ATTENUATOR ASSY, CHANNEL B	28480	01740-63402
A3	01740-66515		VERTICAL PREAMPLIFIER ASSY	28480	01740-66515
A3 OPTION 101	01740-66517		VERTICAL PREAMPLIFIER ASSY - OPTION 101 ONLY	28480	01740-66517
A4	01740-61611		DELAY LINE ASSY	28480	01740-61611
A5	01740-66505		VERTICAL OUTPUT ASSY	28480	01740-66505
A6	0960-0429		HV MULTIPLIER ASSY	28480	0960-0429
A7	01740-66524		HORIZONTAL SWEEP ASSY	28480	01740-66524
A7 OPTION 101	01740-66525		HORIZONTAL SWEEP ASSY	28480	01740-66525
A8	01740-66523		MAIN SWEEP ASSY	28480	01740-66523
A9	01740-66522		DELAYED SWEEP ASSY	28480	01740-66522
A10	01740-66508		DELAYED TRIGGER ASSY	28480	01740-66508
A11	01740-66521		HORIZONTAL OUTPUT ASSY	28480	01740-66521
A12	01740-66503		GATE AMPLIFIER ASSY	28480	01740-66503
A13	01740-66516		VERTICAL CONTROL SWITCHING ASSY	28480	01740-66516
A14	01740-66504		INTERFACE ASSY	28480	01740-66504
A14 OPTION 101	01740-66514		INTERFACE ASSY-OPTION 101 ONLY	28480	01740-66514
A15	01740-66502		HV POWER SUPPLY ASSY	28480	01740-66502
A16	01740-66529		LV POWER SUPPLY ASSY	28480	01740-66529
DS1	1990-0524	1	LED-VISIBLE	28480	1990-0524
DS2	1990-0324	4	LED-VISIBLE	28480	1990-0324
DS3	1990-0324		LED-VISIBLE	28480	1990-0324
DS4	1990-0324		LED-VISIBLE	28480	1990-0324
DS5	1990-0324		LED-VISIBLE	28480	1990-0324
E1	0340-0511	1	INSULATOR-XSTR PWR TRANSISTOR .125-ID	13103	43-77-2
E2	1510-0038	1	BINDING POST-SGL 1/4-32 THD STUD	28480	1510-0038
F1	2110-0007	1	FUSE 1A 250V SLO-BLO 1.25X .25 UL	71400	MDL-1
F1	2110-0202	1	FUSE .5A 250V SLO-BLO 1.25X .25 UL	71400	MDL-V2
J1	1250-0118	8	CONNECTOR-RF BNC FEM SGL HOLE FR	9D949	31-2221-1022
J2	1250-0118		CONNECTOR-RF BNC FEM SGL HOLE FR	9D949	31-2221-1022
J3	1250-0118		CONNECTOR-RF BNC FEM SGL HOLE FR	9D949	31-2221-1022
J4	1250-0118		CONNECTOR-RF BNC FEM SGL HOLE FR	9D949	31-2221-1022
J5	1250-0118		CONNECTOR-RF BNC FEM SGL HOLE FR	9D949	31-2221-1022
J6	1250-0524	2	CONNECTOR	28480	1250-0524
J7	1250-0524		CONNECTOR	28480	1250-0524
J8	1250-0118		CONNECTOR-RF BNC FEM SGL HOLE FR (USED IN OPTION 101 ONLY)	9D949	31-2221-1022
J9	1250-0118		CONNECTOR-RF BNC FEM SGL HOLE FR (USED IN OPTION 101 ONLY)	9D949	31-2221-1022
J10	1250-0118		CONNECTOR-RF BNC FEM SGL HOLE FR (USED IN OPTION 101 ONLY)	9D949	31-2221-1022
L1	5060-0435	1	COIL:ALIGNMENT Z AXIS	28480	5060-0435
L2	00180-65601	1	COIL	28480	00180-65601
L3	9170-0016	3	CORE SHIELDING BEAD	02114	56-590-65A1/3B
L4	9170-0016		CORE SHIELDING BEAD	02114	56-590-65A1/3B
L5	9170-0016		CORE SHIELDING BEAD	02114	56-590-65A1/3B
MP1	0370-0603	1	PUSHBUTTON-SQUARE, MINT GRAY	28480	0370-0603
MP2	0370-0671	1	KNOB	28480	0370-0671
MP3	0370-0963	1	KNOB-CONC-RND .5 IN JGK SGI-DECAL	28480	0370-0963
MP4	0370-1005	1	KNOB-BASE-PTR .375 IN JGK SGI-DECAL	28480	0370-1005
MP5	0370-1099	1	KNOB-BASE-PTR .5 IN JGK SGI-DECAL	28480	0370-1099
MP6	0370-1100	1	KNOB-BASE-CONC PTR .5 IN JGK	28480	0370-1100
MP7	0370-2626	1	KNOB	28480	0370-2626
MP8	0370-2630	1	KNOB	28480	0370-2630
MP9	0370-2783	1	KNOB: VOLTS/DIV	28480	0370-2783
MP10	1460-0604	1	SPRING-CPRSN .95-OD 1.185-LG MUW	28480	1460-0604
MP11	4324-0086	1	SHOCK MOUNT(CRT) BLACK	00000	0BD
MP12	1540-0292	1	CASE-ACCESSORY PVC 10.5LG 1.5WD 13.5DP	28480	1540-0292
MP13	5020-8733	1	GEAR, HUB HANDLE	28480	5020-8733
MP14	5020-8734	1	RING, HANDLE	28480	5020-8734
MP15	5020-8744	1	SPACER-DIAL CHAN A	28480	5020-8744
MP16	5020-8745	1	SPACER-DIAL CHAN B	28480	5020-8745
MP17	5040-0421	1	INSULATOR COVER:POTENTIOMETER	28480	5040-0421
MP18	5040-0511	1	CAP, TRIM	28480	5040-0511
MP19	5040-0515	1	ASSY, HANDLE	28480	5040-0515
MP20	01740-64101	1	COVER, PANEL	28480	01740-64101
MP21	5040-0521	1	BEZEL, CRT	28480	5040-0521
MP22	5040-7829	1	FOOT	28480	5040-7829
MP23			NOT ASSIGNED		
MP24	5040-7023	1	PUSH ROD	28480	5040-7023
MP25	5040-7598	1	LEVER, COUPLING	28480	5040-7598
MP26			NOT ASSIGNED		
MP27	5040-7705	4	EXTENDER-PUSHBUTTON	28480	5040-7705
MP28	5040-7706	4	EXTENDER-PUSHBUTTON	28480	5040-7706
MP29	5040-7755	1	EXTENDER-PUSHBUTTON	28480	5040-7755

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
MP30	5040-7756	1	EXTENDER-PUSHBUTTON	28480	5040-7756
MP31	00180-01218	2	BRACKET-COIL	28480	00180-01218
MP32	6960-0001	1	PLUG-HOLE FL-HD .375-DIA STL	57771	D-3005-LCS
MP33	01701-04108	1	COVER-CRT	28480	01701-04108
MP34	01710-04103	1	COVER-TRANSFORMER	28480	01710-04103
MP35	01720-22501	1	RING-ANTIRUN	28480	01720-22501
MP36	01720-23705	1	SHAFT-DELAYED SWEEP	28480	01720-23705
MP37	01740-20601	1	SHIELD-CRT SAFETY	28480	01740-20601
MP38	01720-63703	1	SHAFT ASSY, MAIN SWEEP	28480	01720-63703
MP39	01720-67403	1	KNOB, DELAYED TIME/DIV	28480	01720-67403
MP40	01720-67405	2	KNOB-VERNIER	28480	01720-67405
MP41	01740-00101	1	DECK, MAIN	28480	01740-00101
MP42	01740-00102	1	DECK, FRONT	28480	01740-00102
MP43	01740-00202	1	PANEL, FRONT	28480	01740-00202
MP44	01740-00205	1	PANEL, REAR	28480	01740-00205
MP45	01740-00601	1	SHIELD, PREAMPLIFIER	28480	01740-00601
MP46	01740-00602	1	SHIELD, CAL	28480	01740-00602
MP47	01740-01201	1	BRACKET, DELAYED TRIGGER	28480	01740-01201
MP48	01740-01202	1	BRACKET, HV	28480	01740-01202
MP49	01740-01203	1	BRACKET, VERTICAL OUTPUT	28480	01740-01203
MP50	01740-01204	1	BRACKET, HORIZONTAL SWEEP	28480	01740-01204
MP51	01740-01209	1	BRACKET, HORIZONTAL TOP	28480	01740-01209
MP52	01740-01212	1	BRACKET, BNC	28480	01740-01212
MP53	01740-02701	1	FILTER, CONTRAST	28480	01740-02701
MP54	01740-04101	1	COVER, HV	28480	01740-04101
MP55	01740-04102	1	COVER, TOP	28480	01740-04102
MP56	01740-04108	1	COVER, BOTTOM	28480	01740-04108
MP57	01740-04109	1	COVER, LINE VOLTAGE (ON A16)	28480	01740-04109
MP58			NOT ASSIGNED		
MP59	01740-20501	1	FRAME, FRONT	28480	01740-20501
MP60	01740-20507	1	FRAME, REAR	28480	01740-20507
MP61	01740-20503	1	HEAT SINK, PREAMPLIFIER	28480	01740-20503
MP62	01740-23701	1	RAIL, SIDE	28480	01740-23701
MP63	01740-24702	1	SUPPORT, CRT CAMERA	28480	01740-24702
MP64	01740-43901	1	SHAFT, EXTENSION	28480	01740-43901
MP65	01740-60601	1	SHIELD ASSY, CRT	28480	01740-60601
MP66	01740-67402	1	KNOB, MAIN TIME/DIV	28480	01740-67402
MP67	01830-23201	1	COUPLER, SWITCH EXTENSION	28480	01830-23201
MP68	0510-0541	3	COLLAR SHAFT	28480	0510-0541
MP69	1410-0094	1	BUSHING, PANEL	28480	1410-0094
MP70	0370-2862	1	PUSHBUTTON-WHITE	28480	0370-2862
MP71			NOT ASSIGNED		
MP72	1140-0036	1	DIAL, DELAY	12697	461
MP73	1400-0665	1	BEZEL-LED	28480	1400-0665
MP74			NOT ASSIGNED		
MP75	0370-0684	1	PUSHBUTTON-GOLD (USED IN OPTION 101 ONLY)	28480	0370-0684
MP76	5040-5952	1	FLOATING CORE	28480	5040-5952
MP77	3050-0481	1	WASHER	28480	3050-0481
MP78	3050-0791	1	WASHER-SHOULDER	28480	3050-0791
MP79	0624-0279	1	SCREW: SPECIAL	28480	0624-0279
MP80	3050-0655	1	WASHER	28480	3050-0655
MP81	01740-24701	1	SPACER	28480	01740-24701
MP82	2190-0910	1	DOME WASHER	28480	2190-0910
MP83	2950-0035	1	NUT-CONNECTOR	28480	2950-0035
MP84 (OPTION 101)	01720-03201	2	ADAPTER-POWER CORD	28480	01720-03201
P1	1251-2357	1	CONNECTOR-AC PWR HP-9 MALE FLG MTG	28480	1251-2357
Q1	1854-0433	1	TRANSISTOR NPN SI PD=90W FT=2MHZ	28480	1854-0433
Q2	1854-0573	1	TRANSISTOR NPN SI PD=30W FT=10MHZ	28480	1854-0573
Q3	1854-0370	4	TRANSISTOR NPN 2N5294 SI PD=1.8W	02735	2N5294
Q4	1854-0370		TRANSISTOR NPN 2N5294 SI PD=1.8W	02735	2N5294
Q5	1854-0370		TRANSISTOR NPN 2N5294 SI PD=1.8W	02735	2N5294
Q6	1854-0370		TRANSISTOR NPN 2N5294 SI PD=1.8W	02735	2N5294
R1	0684-4711	1	RESISTOR 470 10% .25W FC TC=-400/+600 (USED IN OPTION 101 ONLY)	01121	CB4711
R2			NOT ASSIGNED		
R3	0683-4705	2	RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
R4	0683-4705		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
R5	0683-1505		RESISTOR 15 5% .25W FC TC=-400/+500	01121	CB1505
R6	2100-1443	1	RESISTOR-VAR PREC WW 10-TRN 50K 3%	28480	2100-1443
R7	0684-1021	1	RESISTOR 1K 10% .25W FC TC=-400/+600	01121	CB1021
R8	2100-0657	1	RESISTOR-VAR W/SW 100K 30% LIN	28480	2100-0657
R9	2100-3397	1	RESISTOR-VAR W/SW 200K 20% 10CW SPST-NC	28480	2100-3397
R10	0683-1505		RESISTOR 15 5% .25W FC TC=-400/+500	01121	CB1505
R11	2100-3014	1	RESISTOR-VAR DUAL 20K-20%-CC 20K-20%-C	28480	2100-3014
R12	2100-3471	1	RESISTOR-VAR 100 OHM 20% C	11236	551
T1	9100-3499	1	TRANSFORMER-POWER	28480	9100-3499
V1	5083-3552	1	CRT:P31 ALIGNMENT	28480	5083-3552
W1	8120-1521	1	CABLE ASSY 3-COND 18-AWG	28480	8120-1521
W1(OPTION 101)	8120-1202	1	CABLE ASSY-POWER 7.5 FT.	28480	8120-1202
W2	01740-61602	1	CABLE ASSY, SYNC	28480	01740-61602
W3	01740-61621	1	CABLE ASSY, FRONT PANEL	28480	01740-61621
W4	01740-61603	1	CABLE ASSY, HORIZONTAL OUTPUT	28480	01740-61603
W5	01740-61601	1	CABLE ASSY, CRT (INCLUDES XV1)	28480	01740-61601
W6	01740-61609	1	CABLE ASSY, TRIGGER VIEW	28480	01740-61609
W7	01740-61622	1	CABLE ASSY-HORIZ POS/D	28480	01740-61622
W8	01740-61623	1	CABLE ASSY-CRT/SCALE	28480	01740-61623
XF1	1400-0084	1	FUSEHOLDER-EXTRACTION POST TYPE	75915	342014

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1	01740-63401	1	ATTENUATOR ASSEMBLY, CHANNEL A	28480	01740-63401
A1R1	2100-3551	2	RESISTOR-VAR W/SW 100 10% LIN SPST-NO	28480	2100-3551
A2	01740-63402	1	ATTENUATOR ASSEMBLY, CHANNEL B	28480	01740-63402
A2R1	2100-3551		RESISTOR-VAR W/SW 100 10% LIN SPST-NO	28480	2100-3551
A3	01740-66515	1	BOARD ASSY, VERTICAL PREAMPLIFIER	28480	01740-66515
A3 OPTION 101	01740-66517	1	(DOES NOT INCLUDE A3A1) BOARD ASSEMBLY, VERTICAL PREAMPLIFIER (USES SAME PARTS AS 01740-66515 EXCEPT WHERE NOTED)	28480	01740-66517
A3A1	5081-3030	1	ASSEMBLY, SUBSTRATE (NOT SUPPLIED WITH A3, ORDER SEPARATELY)	28480	5081-3030
A3C1	0160-4204	2	CAPACITOR-FXD .033UF +-10% 500WVDC CER	72982	8131-M500-W5R-333K
A3C2	0121-0060	4	CAPACITOR-V TRMR-CER 2/8PF 350V PC-MTG	0086S	304322 2/8PF NPO
A3C3	0150-0021	3	CAPACITOR-FXD .47PF +-5% 500WVDC TI DIOX	95121	TYPE QC
A3C4	0121-0060		CAPACITOR-V TRMR-CER 2/8PF 350V PC-MTG	0086S	304322 2/8PF NPO
A3C5	0160-2150	1	CAPACITOR-FXD 33PF +-5% 300WVDC MICA	28480	0160-2150
A3C6	0160-3448	3	CAPACITOR-FXD 1000PF +-10% 1000WVDC CER	28480	0160-3448
A3C7	0160-3799	3	CAPACITOR-FXD +-10% 100WVDC CER 18 PF	28480	0160-3799
A3C8	0160-3451	26	CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C9	0180-2255	13	C:FXD TA ELECT 22 UF 20% 20VDCW	72982	301-000-COHO-829C
A3C10	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C11	0180-0648	2	CAPACITOR-FXD 0.1UF 35WVDC	28480	0180-0648
A3C12	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C13	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C14	0160-4204		CAPACITOR-FXD .033UF +-10% 500WVDC CER	72982	8131-M500-W5R-333K
A3C15	0160-3567	2	CAPACITOR-FXD 10PF +-5% 100WVDC CER	28480	0160-3567
A3C16	0160-3448		CAPACITOR-FXD 1000PF +-10% 1000WVDC CER	28480	0160-3448
A3C17	0121-0060		CAPACITOR-V TRMR-CER 2/8PF 350V PC-MTG	0086S	304322 2/8PF NPO
A3C18	0150-0021		CAPACITOR-FXD .47PF +-5% 500WVDC TI DIOX	95121	TYPE QC
A3C19	0121-0060		CAPACITOR-V TRMR-CER 2/8PF 350V PC-MTG	0086S	304322 2/8PF NPO
A3C20	0160-2198	4	CAPACITOR-FXD 20PF +-5% 300WVDC MICA	28480	0160-2198
A3C21	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C22	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C23	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C24	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C25	0180-0648		CAPACITOR-FXD 0.1UF 35WVDC	28480	0180-0648
A3C26	0160-3443	4	CAPACITOR-FXD .1UF +-80-20% 50WVDC CER	28480	0160-3443
A3C27	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C28	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C29	0180-2255		C:FXD TA ELECT 22 UF 20% 20VDCW	72982	301-000-COHO-829C
A3C30	0160-3443		CAPACITOR-FXD .1UF +-80-20% 50WVDC CER	28480	0160-3443
A3C31	0160-3567	3	CAPACITOR-FXD 10PF +-5% 100WVDC CER	28480	0160-3567
A3C32	0160-3470		CAPACITOR-FXD .01UF +-80-20% 50WVDC CER	28480	0160-3470
A3C33	0180-2255		C:FXD TA ELECT 22 UF 20% 20VDCW	72982	301-000-COHO-829C
A3C34	0180-2255		C:FXD TA ELECT 22 UF 20% 20VDCW	72982	301-000-COHO-829C
A3C35	0180-2255		C:FXD TA ELECT 22 UF 20% 20VDCW	72982	301-000-COHO-829C
A3C36	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C37	0160-4324	2	CAPACITOR-FXD 220PF +-10% 50WVDC CER	6F364	TYPE 100-100-X7R-221K
A3C38	0160-4324		CAPACITOR-FXD 220PF +-10% 50WVDC CER	6F364	TYPE 100-100-X7R-221K
A3C39	0150-0061	1	CAPACITOR-FXD 20PF +-10% 100WVDC CER	28480	0150-0061
A3C40	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C41	0180-2255		C:FXD TA ELECT 22 UF 20% 20VDCW	72982	301-000-COHO-829C
A3C42	0180-2255		C:FXD TA ELECT 22 UF 20% 20VDCW	72982	301-000-COHO-829C
A3C43	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C44	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C45	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C46	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C47	0160-2217	1	CAPACITOR-FXD 910PF +-5% 300WVDC MICA	28480	0160-2217
A3C48	0180-0228	4	CAPACITOR-FXD 22UF +-10% 15VDC TA-SOLID	56289	150D226X9015B2
A3C49	0160-2207	1	CAPACITOR-FXD 300PF +-5% 300WVDC MICA	28480	0160-2207
A3C50	0180-2255		C:FXD TA ELECT 22 UF 20% 20VDCW	72982	301-000-COHO-829C
A3C51	0160-0820	4	CAPACITOR-FXD .05UF +-80-20% 25WVDC CER	28480	0160-0820
A3C52	0180-2255		C:FXD TA ELECT 22 UF 20% 20VDCW	72982	301-000-COHO-829C
A3C53	0160-3466	3	CAPACITOR-FXD 100PF +-10% 100WVDC CER	28480	0160-3466
A3C54	0160-3466		CAPACITOR-FXD 100PF +-10% 100WVDC CER	28480	0160-3466
A3C55	0160-3466		CAPACITOR-FXD 100PF +-10% 100WVDC CER	28480	0160-3466
A3C56	0160-0820		CAPACITOR-FXD .05UF +-80-20% 25WVDC CER	28480	0160-0820
A3C57	0180-0228		CAPACITOR-FXD 22UF +-10% 15VDC TA-SOLID	56289	150D226X9015B2
A3C58	0180-2255		C:FXD TA ELECT 22 UF 20% 20VDCW	72982	301-000-COHO-829C
A3C59	0160-0820		CAPACITOR-FXD .05UF +-80-20% 25WVDC CER	28480	0160-0820
A3C60	0180-0228		CAPACITOR-FXD 22UF +-10% 15VDC TA-SOLID	56289	150D226X9015B2
A3C61	0160-0820		CAPACITOR-FXD .05UF +-80-20% 25WVDC CER	28480	0160-0820
A3C62	0180-0228		CAPACITOR-FXD 22UF +-10% 15VDC TA-SOLID	56289	150D226X9015B2
A3C63	0180-2255		C:FXD TA ELECT 22 UF 20% 20VDCW	72982	301-000-COHO-829C
A3C64	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C65	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C66	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C67	0160-3448		CAPACITOR-FXD 1000PF +-10% 1000WVDC CER	28480	0160-3448
A3C68	0160-3451		CAPACITOR-FXD .01UF +-80-20% 100WVDC CER	28480	0160-3451
A3C69	0160-3470		CAPACITOR-FXD .01UF +-80-20% 50WVDC CER	28480	0160-3470

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A3C70	0160-3470		CAPACITOR-FXD .01UF +80-20% 50WVDC CER	28480	0160-3470
A3C71	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A3C72	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A3C73	0140-0192	3	CAPACITOR-FXD 68PF +-5% 300WVDC MICA	72136	DM15E680J0300WV1CR
A3C74	0150-0031	1	CAPACITOR-FXD 2PF +-5% 500WVDC TI DIOX	95121	TYPE QC
A3C75	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A3C76	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A3C77	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER (NOT USED IN OPTION 101)	28480	0160-3451
A3C78	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A3CR1	1901-0040	16	DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR2			NOT ASSIGNED		
A3CR3			NOT ASSIGNED		
A3CR4	1901-0047	8	DIODE-SWITCHING 20V 75NA 10NS	28480	1901-0047
A3CR5	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR6	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR7	1901-0047		DIODE-SWITCHING 20V 75NA 10NS	28480	1901-0047
A3CR8	1901-0047		DIODE-SWITCHING 20V 75NA 10NS	28480	1901-0047
A3CR9	1901-0047		DIODE-SWITCHING 20V 75NA 10NS	28480	1901-0047
A3CR10			NOT ASSIGNED		
A3CR11	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR12	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR13	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR14	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR15	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR16	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR17	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR18	1910-0016	1	DIODE-SWITCHING 60V 60MA 1NS	28480	1910-0016
A3CR19	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR20	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR21	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR22			NOT ASSIGNED		
A3CR23	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR24			NOT ASSIGNED		
A3CR25	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR26	1901-0045	2	DIODE-PWR RECT 100V 750NA DO-29	28480	1901-0045
A3CR27	1901-0045		DIODE PWR RECT 100V 750NA DO-29	28480	1901-0045
A3CR28	1906-0042		DIODE-MULT (NOT USED IN OPTION 101)	28480	1906-0042
A3CR29			NOT ASSIGNED		
A3L1	9100-0670	2	INDUCTOR	28480	9100-0670
A3L2	9100-0670		INDUCTOR	28480	9100-0670
A3L3	9100-2264	2	COIL-FXD MOLDED RF CHOKE 6.8UH 10%	24226	10/681
A3L4	9100-2264		COIL-FXD MOLDED RF CHOKE 6.8UH 10%	24226	10/681
A3L5	9100-1650	2	COIL-FXD MOLDED RF CHOKE 680UH 5%	24226	19/683
A3L6	9100-1650		COIL-FXD MOLDED RF CHOKE 680UH 5%	24226	19/683
A3L7	9170-0029	1	CORE-SHIELDING BEAD	02114	56-590-65A2/4A
A3MP1	01740-00603	1	SHIELD-RESISTOR	28480	01740-00603
A3P2	1251-3750	3	CONNECTOR 10-PIN M POST TYPE	27264	08-65-1101
A3P3	1251-3904	2	CONNECTOR POST TYPE	28480	1251-3904
A3P4	1251-3904		CONNECTOR POST TYPE	28480	1251-3904
A3Q1	1853-0380	5	TRANSISTOR PNP SI TO-92 PD=350MW	28480	1853-0380
A3Q2	1855-0217	2	TRANSISTOR JFET DUAL N-CHAN D-MODE SI	28480	1855-0217
A3Q3	1853-0380		TRANSISTOR PNP SI TO-92 PD=350MW	28480	1853-0380
A3Q4	1855-0217		TRANSISTOR JFET DUAL N-CHAN D-MODE SI	28480	1855-0217
A3Q5	1854-0092	11	TRANSISTOR NPN SI PD=200MW FT=600MHZ	28480	1854-0092
A3Q6	1854-0628	2	TRANSISTOR NPN SI TO-92 PD=625MW	04713	MPS-H17
A3Q7	1854-0628		TRANSISTOR NPN SI TO-92 PD=625MW	04713	MPS-H17
A3Q8	1854-0215	19	TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A3Q9	1853-0036	23	TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A3Q10	1854-0092		TRANSISTOR NPN SI PD=200MW FT=600MHZ	28480	1854-0092
A3Q11	1854-0215		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A3Q12	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A3Q13	1855-0367	1	TRANSISTOR-UJT P ON N	28480	1855-0367
A3Q14	1854-0071	14	TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A3Q15	1854-0071		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A3Q16	1853-0015	3	TRANSISTOR PNP SI PD=200MW FT=500MHZ	28480	1853-0015
A3Q17	1853-0006	1	TRANSISTOR PNP 2N3134 SI TO-5 PD=600MW	04713	2N3134
A3Q18	1854-0071		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A3Q19	1854-0213	1	TRANSISTOR NPN 2N2538 SI TO-5 PD=800MW	28480	1854-0213
A3Q20	1853-0086	1	TRANSISTOR PNP SI PD=310MW FT=40MHZ	28480	1853-0086
A3Q21	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ (NOT USED IN OPTION 101)	28480	1853-0036
A3R1	0698-8648	2	RESISTOR 50 2% .5W MO TC=0+-150	28480	0698-8648
A3R2	0698-7206	1	RESISTOR 56.2 2% .05W F TC=0+-100	24546	C3-1/8-T00-56R2-G
A3R3	0698-8622	4	RESISTOR 990K 5% .12WF	28480	0698-8622
A3R4	0698-3329	3	RESISTOR 10K .5% .125W F TC=0+-100	03888	PME55-1/8-T0-1002-D
A3R5	0698-8622		RESISTOR 990K 5% .12WF	28480	0698-8622
A3R6	0675-1011	2	RESISTOR 100 10% .125W CC TC=0+882	01121	BB 1011

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A3R7	0698-7214	1	RESISTOR 121 2% .05W F TC=0+-100 (FACTORY SELECTED VALUE)	24546	C3-1/8-T0-121R-G
A3R8	0687-2241	2	RESISTOR 220K 10% .5W CC TC=0+882	01121	EB2241
A3R9	0757-0401	10	RESISTOR 100 1% .125W	24546	C4-1/8-T0-101-F
A3R10	0698-3157	4	RESISTOR 19.6K 1% .125W F TC=0+-100	16299	C4-1/8-T0-1962-F
A3R11	2100-0568	7	RESISTOR-VAR TRMR 100 OHM 10% C TOP ADJ	73138	72PR100
A3R12	0684-1001	2	RESISTOR 10 10% .25W CC	01121	CB1001
A3R13	0683-0475	2	RESISTOR 4.7 5% .25W FC TC=-400/+500	01121	CB47G5
A3R14	0757-0394	4	RESISTOR 51.1 1% .12W F	24546	C4-1/8-T0-51R1-F
A3R15	0698-7926	2	RESISTOR 470 10% .125W CC TC=0+-882	01121	BB4711
A3R16	0757-0394		RESISTOR 51.1 1% .12W F	24546	C4-1/8-T0-51R1-F
A3R17	0698-3157		RESISTOR 19.6K 1% .125W F TC=+-100	16299	C4-1/8-T0-1962-F
A3R18	2100-3531	2	RESISTOR-VAR TRMR 250 OHM 10% C	73138	72-177-0
A3R19	2100-3531		RESISTOR-VAR TRMR 250 OHM 10%	73138	72-177-0
A3R20	0757-3438	2	RESISTOR 147 1% .125W F	28480	0757-3438
A3R21	0698-8648		RESISTOR 50 2% .5W MO TC=0+-150	28480	0698-8648
A3R22	2100-2061	1	RESISTOR-TRMR 200 10% C TOP-ADJ 1-TURN	30983	ET50W201
A3R23	0698-8622		RESISTOR 990K 5% .12W F	28480	0698-8622
A3R24	0698-3329		RESISTOR 10K .5% .125W F TC=0+-100	03888	PME55-1/8-T0-1002-D
A3R25	0698-8622		RESISTOR 990K 5% .12W F	28480	0698-8622
A3R26	0687-2241		RESISTOR 220K 10% .5W CC TC=0+882	01121	EB2241
A3R27	0675-1011		RESISTOR 100 10% .125W CC TC=0+882	01121	BB1011
A3R28	0698-7216	1	RESISTOR 147 2% .05W F TC=0+-100 (FACTORY SELECTED VALUE)	24546	C3-1/8-T0-147R-G
A3R29	0757-0401		RESISTOR 100 1% .125W F	24546	C4-1/8-T0-101-F
A3R30	0698-3157		RESISTOR 19.6K 1% .125W F TC=0+-100	16299	C4-1/8-T0-1962-F
A3R31	2100-0568		RESISTOR-VAR TRMR 100 OHM 10% C TOP ADJ	73138	72PR100
A3R32	2100-3212	2	RESISTOR-VAR TRMR 200 OHM 10% C	73138	72-PR200
A3R33	0698-0082	3	RESISTOR 464 1% .125W F TC=0+-100	16299	C4-1/8-T0-4640-F
A3R34	0698-3495	2	RESISTOR 866 1% .125W F	16299	C4-1/8-T0-866R-F
A3R35	0757-0403		RESISTOR 121 1% .125W F TC=0+-100	24546	C4-1/8-T0-121R-F
A3R36	2100-3433	2	RESISTOR-VAR CONTROL CC 250 10% LIN	01121	70M1G040R251U
A3R37	0698-0082		RESISTOR 464 1% .125W F TC=0+-100	16299	C4-1/8-T0-4640-F
A3R38	0757-1098	2	RESISTOR 945 1% .125W F TC=0+-100	24546	C4-1/8-T0-945R-F
A3R39	0684-1001		RESISTOR 10 10% .25 CC	01121	CB1001
A3R40	0757-0394		RESISTOR 51.1 1% .125W F	24546	C4-1/8-T0-51R1-F
A3R41	0757-0284	2	RESISTOR 150 1% .125W F	24546	C4-1/8-T0-151-F
A3R42	0757-0398	2	RESISTOR 75 1% .125W F	24546	75RO-F
A3R43	0698-7926		RESISTOR 470 10% .125W CC TC=0+-882	01121	BB4711
A3R44	0684-0271	3	RESISTOR 2.7 10% .25W CC	01121	CB27G1
A3R45	0757-0433	14	RESISTOR 3.32K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3321-F
A3R46	2100-0554	4	RESISTOR-VAR TRMR 500 OHM 10% C TOP ADJ	73138	72PR500
A3R47	0757-0394		RESISTOR 51.1 1% .125W F	24546	C4-1/8-T0-51R1-F
A3R48	0698-3157		RESISTOR 19.6K 1% .125W F TC=0+-100	16299	C4-1/8-T0-1962-F
A3R49	2100-0554		RESISTOR-VAR TRMR 500 OHM 10% C TOP ADJ	73138	72PR500
A3R50	0757-0398		RESISTOR 75 1% .125W F	24546	75RO-F
A3R51	0757-0284		RESISTOR 150 1% .125W F	24546	C4-1/8-T0-151-F
A3R52	0684-0271		RESISTOR 2.7 10% .25W CC	01121	CB27G1
A3R53	0757-0433		RESISTOR 3.32K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3321-F
A3R54	0698-7216	2	RESISTOR 147 2% .05W F	24546	C3-1/8-T0-147R-G
A3R55	0698-7216		RESISTOR 147 2% .05W F	24546	C3-1/8-T0-147R-G
A3R56	0757-1098		RESISTOR 945 1% .125W F TC=0+-100	24546	C4-1/8-T0-945R-F
A3R57	0698-3495		RESISTOR 866 1% .125W F	16299	C4-1/8-T0-866R-F
A3R58	2100-3212		RESISTOR-VAR TRMR 200 OHM 10% C	32997	3389P-1-201
A3R59	0698-7228	2	RESISTOR 464 2% .05W F TC=0+-100	24546	C3-1/8-T0-464R-G
A3R60	0698-7228		RESISTOR 464 2% .05W F TC=0+-100	24546	C3-1/8-T0-464R-G
A3R61	2100-3433		RESISTOR-VAR CONTROL CC 250 10% LIN	01121	70M1G040R251U
A3R62	0757-0403		RESISTOR 121 1% .125W F TC=0+-100	24546	C4-1/8-T0-121R-F
A3R63	0757-0411	6	RESISTOR 332 1% .125W F TC=0+-100	24546	C4-1/8-T0-332R-F
A3R64	0757-0401		RESISTOR 100 1% .125W F TUBULAR	24546	C4-1/8-T0-101-F
A3R65	2100-0567	2	RESISTOR-VAR TRMR 2K OHM 10% C TOP ADJ	73138	72PR2K
A3R66	0757-0401		RESISTOR 100 1% .125W F TUBULAR	24546	C4-1/8-T0-101-F
A3R67	0698-3455	2	RESISTOR 261K 1% .125W F TC=0+-100	16299	C4-1/8-T0-2613-F
A3R68	0684-4721	2	RESISTOR 4.7K 10% .25W CC	01121	CB4721
A3R69	0684-1031	9	RESISTOR 10K 10% .25W CC	01121	CB1031
A3R70	0757-0462	2	RESISTOR 75K 1% .125W F TC=0+-100	24546	C4-1/8-T0-7502-F
A3R71	0684-4721		RESISTOR 4.7K 10% .25W CC	01121	CB4721
A3R72	0698-3161	3	RESISTOR 38.3K 1% .125W F TC=0+-100	16299	C4-1/8-T0-3832-F
A3R73	0684-1031		RESISTOR 10K 10% .25W CC	01121	CB1031
A3R74	0757-0739	1	RESISTOR 2K 1% .25W F (FACTORY SELECTED VALUE)	24546	C5-1/8-T0-2001-F
A3R75	0698-3161		RESISTOR 38.3K 1% .125W F TC=0+-100	16299	C4-1/8-T0-3832-F
A3R76	2100-3531		RESISTOR-VAR TRMR 250 OHM 10% C	73138	72-177-0
A3R77	2100-3531		RESISTOR-VAR TRMR 250 OHM 10% C	73138	72-177-0
A3R78	0757-3438		RESISTOR 147 1% .125W F	24546	C4-1/8-T0-121R-F
A3R79	2100-3212		RESISTOR-VAR TRMR 200 OHM 10% C TOP ADJ	73138	72PR200
A3R80	0757-0290	2	RESISTOR 6.19K 1% .125W F	19701	MF4C1/8-T0-6191-F
A3R81	0757-0417	2	RESISTOR 562 1% .125W F TC=0+-100	24546	C4-1/8-T0-562R-F

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A3R82	0757-0443	3	RESISTOR 11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1102-F
A3R83	0698-4037	3	RESISTOR 46.4 1% .125W F TC=0+-100	16299	C4-1/8-T0-46R4-F
A3R84	0757-0317	1	RESISTOR 1.33K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1331-F
A3R85	0698-4037		RESISTOR 46.4 1% .125W F TC=0+-100	16299	C4-1/8-T0-46R4-F
A3R86	2100-0567		RESISTOR-VAR TRMR 2K OHM 10% C TOP ADJ	73138	72PR2K
A3R87	0757-0433		RESISTOR 3.32K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3321-F
A3R88	0757-0280	5	RESISTOR 1K 1% .125W F	24546	C4-1/8-T0-1001-F
A3R89	0757-1094	3	RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A3R90	2100-3212		RESISTOR-VAR TRMR 200 OHM 10% C TOP ADJ	73138	72PR200
A3R91	0684-1031		RESISTOR 10K 10% .25W CC	01121	CB1031
A3R92	0684-1031		RESISTOR 10K 10% .25W CC	01121	CB1031
A3R93	0698-3161		RESISTOR 38.3K 1% .125W F TC=0+-100	16299	C4-1/8-T0-3832-F
A3R94	0684-3321		RESISTOR 3.3K 10% .25W CC	01121	CB3321
A3R95	0684-1031		RESISTOR 10K 10% .25W CC	01121	CB1031
A3R96	0757-1094		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A3R97	0684-1031		RESISTOR 10K 10% .25W CC	01121	CB1031
A3R98	0684-1031		RESISTOR 10K 10% .25W CC	01121	CB1031
A3R99	0698-0082		RESISTOR 464 1% .125W F TC=0+-100	16299	C4-1/8-T0-4640-F
A3R100	0698-3455		RESISTOR 261K 1% .125W F TC=0+-100	16299	C4-1/8-T0-2613-F
A3R101	0757-0401		RESISTOR 100 1% .125W F	24546	C4-1/8-T0-101-F
A3R102	0684-1031		RESISTOR 10K 10% .25W CC	01121	CB1031
A3R103	0757-0433		RESISTOR 3.32K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3321-F
A3R104	0757-0442		RESISTOR 10K 1% .125W F	24546	C4-1/8-T0-1002-F
A3R105	0684-3321		RESISTOR 3.3K 10% .25W CC	01121	CB3321
A3R106	0757-0283	3	RESISTOR 2K 1% .125W F	24546	C4-1/8-T0-2001-F
A3R107	0684-3321		RESISTOR 3.3K 10% .25W CC	01121	CB3321
A3R108	0684-1031		RESISTOR 10K 10% .25W CC	01121	CB1031
A3R109	0757-0280		RESISTOR 1K 1% .125W F	24546	C4-1/8-T0-1001-F
A3R110	0757-0274	2	RESISTOR 1.21K 1% .125W F	24546	C4-1/8-T0-1213-F
A3R111	0757-0280		RESISTOR 1K 1% .125W F	24546	C4-1/8-T0-1001-F
A3R112	0757-0274		RESISTOR 1.21K 1% .125W F	24546	C4-1/8-T0-1213-F
A3R113	0684-3321		RESISTOR 3.3K 10% .25W CC	01121	CB3321
A3R114	0757-0290		RESISTOR 6.19K 1% .125W F	19701	MF4C1/8-T0-6191-F
A3R115	0757-0274		RESISTOR 1.21K 1% .125W F	24546	C4-1/8-T0-1213-F
A3R116	2100-0554		RESISTOR-VAR TRMR 500 OHM 10% C TOP ADJ	73138	72PR500
A3R117	0757-0283		RESISTOR 2K 1% .125W F	24546	C4-1/8-T0-2001-F
A3R118	0757-0417		RESISTOR 562 1% .125W F TC=0+-100	24546	C4-1/8-T0-562R-F
A3R119	0757-0280		RESISTOR 1K 1% .125W F	24546	C4-1/8-T0-1001-F
A3R120	0698-3150	3	RESISTOR 2.37K 1% .125W F TC=0+-100	16299	C4-1/8-T0-2371-F
A3R121	0757-0442		RESISTOR 10K 1% .125W F	24546	C4-1/8-T0-1002-F
A3R122	0757-0280		RESISTOR 1K 1% .125W F	24546	C4-1/8-T0-1001-F
A3R123	0757-0462		RESISTOR 75K 1% .125W F	24546	C4-1/8-T0-7502-F
A3R124	0757-0442	2	RESISTOR 10K 1% .125W F	24546	C4-1/8-T0-1002-F
A3R125	0698-7096		RESISTOR 10 10% .125W CC TC=0+-588	01121	BB1001
A3R126	0698-7229	2	RESISTOR 511 2% .05W F TC=0+-100	24546	C3-1/8-T0-511R-G
A3R127	0698-7096		RESISTOR 10 10% .125W CC TC=0+-588	01121	BB1001
A3R128	0698-7229		RESISTOR 511 2% .05W F TC=0+-100	24546	C3-1/8-T0-511R-G
A3R129	0757-0433		RESISTOR 3.32K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3321-F
A3R130	0757-0442		RESISTOR 10K 1% .125W F	24546	C4-1/8-T0-1002-F
A3R131	0757-0411		RESISTOR 332 1% .125W F TC=0+-100	24546	C4-1/8-T0-332R-F
A3R132	0698-4037		RESISTOR 46.4 1% .125W F TC=0+-100	16299	C4-1/8-T0-46R4-F
A3R133	0757-0433		RESISTOR 3.32K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3321-F
A3R134	0757-1094		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A3R136	0757-0453	4	RESISTOR 30.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3012-F
A3R137	0684-0271		RESISTOR 2.7 10% .25W F CC	01121	CB27G1
A3R138	0757-0453		RESISTOR 30.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3012-F
A3R139	0757-0416	1	RESISTOR 511 1% .125W F	24546	C4-1/8-T0-511R-F
A3R140	0757-0453		RESISTOR 30.1K 1% .125W F (NOT USED IN OPTION 101)	24546	C4-1/8-T0-3012-F
A3R141	0757-0411		RESISTOR 332 1% .125W F TC=0+-100	24546	C4-1/8-T0-332R-F
A3R142	0698-7238	2	RESISTOR 1.21K 2% .05W F TC=0+-100 (USED IN OPTION 101 ONLY)	24546	C3-1/8-T0-1211-G
A3R143	0698-7238		RESISTOR 1.21K 2% .05W F TC=0+-100 (USED IN OPTION 101 ONLY)	24546	C3-1/8-T0-1211-G
A3R144	0757-0440	1	RESISTOR 7500 1% .125W F	24546	C4-1/8-T0-7501-F
A3RT1	0837-0035	2	THERMISTOR NEG TC 5K DISC	28480	0837-0035
A3RT2	0837-0035		THERMISTOR NEG TC 5K DISC	28480	0837-0035
A3S1	3101-1905	1	SWITCH-PB 4STA .394 IN-CTRS .45A 115 VAC	28480	3101-1905
A3U1	1820-1518	1	IC DM74L 00N GATE	27014	DM74L00N
A3U2	1820-0596	2	IC DM74L 74N FLIP-FLOP	27014	DM74L74N
A3U3	1820-0585	1	IC DM74L 03N GATE	27014	DM74L03N
A3U4	1820-0596		IC DM74L 74N FLIP-FLOP	27014	DM74L74N
A3VR1	1902-3082	2	DIODE-ZNR 4.64V 5% DO-7 PD=.4W TC=-.023%	04713	SZ10939-86
A3VR2	1902-3234	1	DIODE-ZNR 19.6V 5% DO-7 PD=.4W TC=+.073%	04713	SZ10939-266
A3VR3	1902-0072	1	DIODE-ZNR 7.87V 2% DO-7 PD=.4W TC=+.051%	04713	SZ10939-153
A3VR4	1902-3137	1	DIODE-ZNR 8.06V 2% DO-7 PD=.4W TC=+.052%	04713	SZ10939-156
A3VR5	1902-0441	1	DIODE-ZENER 5.11V 5% 0.4W MAX PD (NOT USED IN OPTION 101)	04713	SZ10939-98
A3W1	01740-61617	1	CABLE ASSEMBLY, COAX	28480	01740-61617
A3XU1	1200-0474	8	SOCKET; ELEC; IC 14-CONT DIP SLDR TERM	28480	1200-0474
A3XU2	1200-0474		SOCKET; ELEC; 14-CONT DIP SLDR TERM	28480	1200-0474
A3XU3	1200-0474		SOCKET; ELEC; IC 14-CONT DIP SLDR TERM	28480	1200-0474

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A3XU4	1200-0474		SOCKET; ELEC; IC 14-CONT DIP SLDR TERM	28480	1200-0474
A4	01740-61611	1	CABLE ASSEMBLY, DELAY LINE	28480	01740-61611
A5	01740-66505	1	BOARD ASSEMBLY, VERTICAL OUTPUT (DOES NOT INCLUDE A5A1)	28480	01740-66505
A5A1	5081-3032	1	ASSY, SUBSTRATE (NOT SUPPLIED W/A5, ORDER SEPARATELY)	28480	5081-3032
A5C1	0150-0029	1	CAPACITOR-FXD 1PF +-10% 500WVDC TI DIOX	95121	TYPE QC
A5C2	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A5C3	0160-3652	1	CAPACITOR-FXD 4.7PF +5-4.7PF 200WVDC (FACTORY SELECTED VALUE)	28480	0160-3652
A5C4	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A5C5	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A5C6	0180-2255		C:FXD TA ELECT 22UF 20% 20VDCW	72982	301-000-C0H0-829C
A5C7	0180-2255		C:FXD TA ELECT 22UF 20% 20VDCW	72982	301-000-C0H0-829C
A5C8	0160-3650	1	CAPACITOR-FXD .018UF +-10% 50WVDC CER	28480	0160-3650
A5C9	0160-3799		CAPACITOR-FXD 18PF +-10% 100WVDC CER	28480	0160-3799
A5C10	0160-3569	2	CAPACITOR-FXD 27PF +-5% 100WVDC CER	28480	0160-3569
A5C11	0160-3651	1	CAPACITOR-FXD 68PF +-10% 200WVDC CER	28480	0160-3651
A5C12	0160-3694	1	CAPACITOR-FXD 330PF +-10% 100WVDC CER	28480	0160-3694
A5C13	0180-0230	4	CAPACITOR-FXD; 1UF +-20% 50VDC TA-SOLID	56289	150D105X0050A2
A5C14	0160-3799		CAPACITOR-FXD; 18PF +-10% 100WVDC CER	28480	0160-3799
A5C15	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A5C16	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A5C17	0160-3848	1	CAPACITOR-FXD 3.3PF +-5PF 100WVDC CER	28480	0160-3848
ASL1	9100-2598	2	COIL-FXD MOLDED RF CHOKE .075UH 10%	06560	10150-14
ASL2	9100-2258	3	COIL-FXD MOLDED RF CHOKE 1.2UH 10%	24226	10/121
ASL3	9100-2258		COIL-FXD MOLDED RF CHOKE 1.2UH 10%	24226	10/121
ASL4	9100-2598		COIL-FXD MOLDED RF CHOKE .075UH 10%	06560	10150-14
ASL5	9100-2250	2	COIL-FXD MOLDED RF CHOKE .18UH 10%	24226	10/180
ASL6	9100-2250		COIL-FXD MOLDED RF CHOKE .18UH 10%	24226	10/180
ASL7	9100-2252	2	COIL-FXD MOLDED RF CHOKE .27UH 10%	24226	10/270
ASL8	9100-2252		COIL-FXD MOLDED RF CHOKE .27UH 10%	24226	10/270
ASL9	9100-2258		COIL-FXD MOLDED RF CHOKE 1.2UH 10%	24226	10/121
ASMP1	01740-20506	1	HEAT SINK, V OUTPUT	28480	01740-20506
ASQ1	1853-0354	8	TRANSISTOR PNP SI T0-92 PD=350MW	28480	1853-0354
ASQ2	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
ASQ3	1853-0354		TRANSISTOR PNP SI T0-92 PD=350MW	28480	1853-0354
ASQ4	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
ASR1	0698-4399	2	RESISTOR 88.7 1% .125W F TC=0+-100	16299	C4-1/8-T0-88R7-F
ASR2	0757-0734	2	RESISTOR 1.21K 1% .25W F TC=0+-100	24546	C5-1/4-T0-1211-F
ASR3	0757-0719	1	RESISTOR 221 1% .25W F TC=0+-100	24546	C5-1/4-T0-221R-F
ASR4	0757-0734		RESISTOR 1.21K 1% .25W F TC=0+-100	24546	C5-1/4-T0-1211-F
ASR5	0698-4399		RESISTOR 88.7 1% .125W F TC=0+-100	16299	C4-1/8-T0-88R7-F
ASR6	0698-7028	1	RESISTOR 27 10% .125W CC TC=0+588	01121	BB2701
ASR7	0684-1011	13	RESISTOR 100 10% .25W CC	01121	CB1011
ASR8	0757-0200	3	RESISTOR 5.62K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5621-F
ASR9	0698-0083	2	RESISTOR 1.96K 1% .125W F TC=0+-100	16299	C4-1/8-T0-1961-F
ASR10	0684-1001		RESISTOR 10 10% .25W CC	01121	CB1001
ASR11	0757-0200		RESISTOR 5.62K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5621-F
ASR12	0684-1001		RESISTOR 10 10% .25W CC	01121	CB1001
ASR13	0698-0083		RESISTOR 1.96K 1% .125W F TC=0+-100	16299	C4-1/8-T0-1961-F
ASR14	0757-0399	3	RESISTOR 82.5 1% .125W F TC=0+-100	24546	C4-1/8-T0-82R5-F
ASR15	0698-7386	2	RESISTOR 490.9 .5% .125W F TC=0+-50	19701	MF4C1/8-T2-490R9-D
ASR16	0698-7386		RESISTOR 490.9 .5% .125W F TC=0+-50	19701	MF4C1/8-T2-490R9-D
ASR17	0757-0399		RESISTOR 82.5 1% .125W F TC=0+-100	24546	C4-1/8-T0-82R5-F
ASR18	0757-0288	2	RESISTOR 9.09K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-9091-F
ASR19	2100-2216	2	RESISTOR-TRMR 5K 10% C TOP-ADJ 1-TURN	30983	ET50W502
ASR20	2100-1788	3	RESISTOR-TRMR 500 10% C TOP-ADJ 1-TURN	30983	ET50W501
ASR21	0757-0401	1	RESISTOR 100 1% .125W F TC=0+-100 (FACTORY SELECTED VALUE)	24546	C4-1/8-T0-101-F
ASR22	2100-2216		RESISTOR-TRMR 5K 10% C TOP-ADJ 1-TURN	30983	ET50W502
ASR23	0698-7252	1	RESISTOR 4.64K 2% .05W F TC=0+-100	24546	C3-1/8-T0-4641-G
ASR24	2100-1986		RESISTOR-TRMR 1K 10% C	28480	2100-1986
ASR25	0757-0416	1	RESISTOR 511 1% .125W F	24546	C4-1/8-T0-511R-F
ASR26	0757-0720	1	RESISTOR 243 1% .25W F TC=0+-100	24546	C5-1/4-T0-243R-F
ASVR1	1902-3082		DIODE-ZNR 4.64V 5% D0.7 PD=-4W TC= -.023%	04713	SZ10939-86
ASXA3	1251-3903	1	CONNECTOR 6PIN F POST TYPE	27264	09-52-3061
A6	0960-0429	1	ASSY, HV MULTIPLIER (NON-REPAIRABLE)	28480	0960-0429
A7	01740-66524	1	BOARD ASSY, HORIZONTAL SWEEP	28480	01740-66524
A7 OPTION 101	01740-66525	1	BOARD ASSY, HORIZONTAL SWEEP (USES SAME PARTS AS 01740-66524 EXCEPT WHERE NOTED)	28480	01740-66525
A7C1	0160-3569		CAPACITOR-FXD 27PF +-5% 100WVDC CER	28480	0160-3569
A7C2	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C3	0140-0202	1	CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A7C4	0150-0070	2	CAPACITOR-FXD .02UF +-20% 500WVDC CER	28480	0150-0070
A7C5	0140-0196	2	CAPACITOR-FXD 150PF +-5% 300WVDC MICA	72136	DM15F151J0300WV1CR
A7C6	0160-3318	1	CAPACITOR-FXD .047UF +-10% 100WVDC CER	28480	0160-3318
A7C7	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C8	0150-0021		CAPACITOR-FXD .47PF +-5% 500WVDC TI DIOX	95121	TYPE QC
A7C9	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A7C10	0140-0193	2	CAPACITOR-FXD 82PF +-5% 300WVDC MICA	72136	DM15E82J0300WV1CR
A7C11	0160-3443		CAPACITOR-FXD .1UF +80-20% 50WVDC CER	28480	0160-3443
A7C12	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C13	0160-4442		CAPACITOR-FXD .15UF +80-20%	28480	0160-4442
A7C14	0160-2204	4	CAPACITOR-FXD 100PF +-5% 300WVDC MICA	28480	0160-2204
A7C15	0180-0374	1	CAPACITOR-FXD 10UF +-10% 20VDC TA-SOLID	56289	150D106X9020B2
A7C16	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C17	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C18	0180-0058	2	CAPACITOR-FXD 50UF +75-10% 25VDC AL	56289	30D506G025CC2
A7C19	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C20	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C21	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C22	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C23	0180-1746	2	CAPACITOR-FXD 15UF +-10% 20VDC TA-SOLID	56289	150D156X9020B2
A7C24	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C25	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C26	0180-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C27	0180-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C28	0180-0106	1	CAPACITOR-FXD 60UF +-20% 6VDC TA-SOLID	56289	150D606X0006B2
A7C29	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C30	0160-3451	1	CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C31	0180-0229		CAPACITOR-FXD 33UF +-10% 10VDC TA-SOLID	56289	150D336X9010B2
A7C32	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C33	0180-1746		CAPACITOR-FXD 15UF +-10% 20VDC TA-SOLID	56289	150D156X9020B2
A7C34	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C35	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C36	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C37	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C38	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C39	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C40	0160-2198		CAPACITOR-FXD 20PF +-5% 300WVDC MICA	28480	0160-2198
A7C41	0160-2198		CAPACITOR-FXD 20PF +-5% 300WVDC MICA	28480	0160-2198
A7C42	0160-2197	1	CAPACITOR-FXD 10PF +-5% 300WVDC MICA	28480	0160-2197
A7C43			NOT ASSIGNED		
A7C44	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C45	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C46	0140-0204	1	CAPACITOR-FXD 47PF +-5% 500WVDC MICA	72136	DM15E47J0500WV1CR
A7C47	0160-2204		CAPACITOR-FXD 100PF +-5% 300WVDC MICA	28480	0160-2204
A7C48	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A7C49	0140-0193		CAPACITOR-FXD 82PF +-5% 300WVDC MICA	72136	DM15E82J0300WV1CR
A7CR1	1901-0376	1	DIODE-GEN PRP 35V 50NA D0-7	28480	1901-0376
A7CR2	1901-0040		DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A7CR3	1901-0040		DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A7CR4	1901-0040		DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A7CR5	1901-0513	1	DIODE-MULT	28480	1901-0513
A7CR6	1901-0040		DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A7CR7	1901-0040		DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A7CR8	1901-0040		DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A7CR9	1901-0040		DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A7CR10	1901-0040		DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A7CR11	1901-0040		DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A7CR12	1901-0040		DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A7CR13	1901-0040		DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A7CR14			NOT ASSIGNED		
A7CR15	1910-0016	2	DIODE-GE 60V 60NA 1US D0-7	28480	1910-0016
A7CR16	1901-0040		DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A7CR17	1901-0047		DIODE-SWITCHING 20V 75NA 10NS CR17-20 (USED IN OPTION 101 ONLY)	28480	1901-0047
A7CR18	1901-0047		DIODE-SWITCHING 20V 75NA 10NS	28480	1901-0047
A7CR19	1901-0047		DIODE-SWITCHING 20V 75NA 10NS	28480	1901-0047
A7CR20	1901-0047		DIODE-SWITCHING 20V 75NA 10NS	28480	1901-0047
A7CR21	1901-0040		DIODE-SWITCHING 2NS 30V 50MA	28480	1901-0040
A7CR22	1901-0040		DIODE-SWITCHING 2NS 30V 50MA	28480	1901-0040
A7CR23	1901-0040		DIODE-SWITCHING 2NS 30V 50MA	28480	1901-0040
A7CR24	1910-0016	1	DIODE-GE 60V 60NA 10S D0-7	28480	1910-0016
A7L1	9140-0105	7	COIL-FXD MOLDED RF CHOKE 8.2UH 10%	24226	15/821
A7L2	9140-0096	3	COIL-FXD MOLDED RF CHOKE 1UH 10%	24226	15/101
A7L3	9100-1613		COIL-FXD MOLDED RF CHOKE .47UH 20%	24226	15/470
A7L4	9140-0096		COIL-FXD MOLDED RF CHOKE 1UH 10%	24226	15/101
A7L5	9140-0105		COIL-FXD MOLDED RF CHOKE 8.2UH 10%	24226	15/821
A7L6	9140-0096		COIL-FXD MOLDED RF CHOKE 1UH 10%	24226	15/101
A7L7	9100-1613		COIL-FXD MOLDED RF CHOKE .47UH 20%	24226	15/470
A7L8	9170-0029	4	CORE-SHIELDING BEAD	02114	56-590-65A2/4A
A7L9	9170-0029		CORE-SHIELDING BEAD	02114	56-590-65A2/4A
A7L10	9170-0029		CORE-SHIELDING BEAD	02114	56-590-65A2/4A
A7P1			NSR		
A7P2	1251-3901	2	CONNECTOR 15-PIN M POST TYPE	27264	09-65-1151
A7P3	1251-3750		CONNECTOR 10-PIN M POST TYPE	27264	09-65-1101
A7P4	1251-4238		CONNECTOR 9-PIN M POST TYPE	28480	1251-4238
A7P5	1251-3071		CONNECTOR 8-PIN M POST TYPE	27264	09-56-1081(2183-8A)
A7Q1	1854-0215		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A7Q2	1854-0092		TRANSISTOR NPN SI PD=200MW FT=600MHZ	28480	1854-0092

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A7Q3	1854-0092	3	TRANSISTOR NPN SI PD=200MW FT=600MHZ	28480	1854-0092
A7Q4	1855-0081		TRANSISTOR J-FET 2N5245 N-CHAN D-MODE SI	01295	2N5245
A7Q5	1854-0092		TRANSISTOR NPN SI PD=200MW FT=600MHZ	28480	1854-0092
A7Q6	1854-0215		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A7Q7	1853-0380		TRANSISTOR PNP SI T0-92 PD=350MW	28480	1853-0380
A7Q8	1853-0380	3	TRANSISTOR PNP SI T0-92 PD=350MW	28480	1853-0380
A7Q9	1853-0354		TRANSISTOR PNP SI T0-92 PD=350MW	28480	1853-0354
A7Q10	1853-0354		TRANSISTOR PNP SI T0-92 PD=350MW	28480	1853-0354
A7Q11	1853-0354		TRANSISTOR PNP SI T0-92 PD=350MW	28480	1853-0354
A7Q12	1853-0380		TRANSISTOR PNP SI T0-92 PD=350MW	28480	1853-0380
A7Q13	1853-0036	3	TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A7Q14	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A7Q15	1854-0071		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A7Q16	1854-0691		TRANSISTOR NPN SI T0-92 PD=350MW	28480	1854-0691
A7Q17	1854-0071		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A7Q18	1854-0071	3	TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A7Q19	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A7Q20	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A7Q21	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A7Q22	1853-0015		TRANSISTOR PNP SI PD=200MW FT=500MHZ	28480	1853-0015
A7Q23	1854-0215	3	TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A7Q24	1854-0092		TRANSISTOR NPN SI PD=200MW FT=600MHZ	28480	1854-0092
A7Q25	1854-0092		TRANSISTOR NPN SI PD=200MW FT=600MHZ	28480	1854-0092
A7Q26	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A7Q27	1854-0215		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A7Q28	1854-0215	3	TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A7Q29	1854-0092		TRANSISTOR NPN SI PD=200MW FT=600MHZ	28480	1854-0092
A7Q30	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A7Q31	1854-0215		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A7Q32	1854-0215		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A7Q33	1854-0215	3	TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A7Q34	1854-0092		TRANSISTOR NPN SI PD=200MW FT=600MHZ	28480	1854-0092
A7R1	0698-3263		RESISTOR 500K 1% .125W F TC=0+/-100	91637	MFF-1/8-T-1
A7R2	0698-3263		RESISTOR 500K 1% .125W F TC=0+/-100	91637	MFF-1/8-T-1
A7R3	0757-0476		RESISTOR 301K 1% .125W F TC=0+/-100	24546	C4-1/8-T0-3013-F
A7R4	0757-0486	2	RESISTOR 750K 1% .125W F TC=0+/-100	24546	NA4
A7R5	0757-0421		RESISTOR 825 1% .125W F	24546	C4-1/8-T0-825R-F
A7R6	0757-0283	3	RESISTOR 2K 1% .125W F	24546	C4-1/8-T0-2001-F
A7R7	0757-0418		RESISTOR 619 1% .125W F	24546	C4-1/8-T0-619R-F
A7R8	0684-4721		RESISTOR 4.7K 10% .25W CC	01121	CB4721
A7R9	0684-2711		RESISTOR 270 10% .25W FC TC=-400/+600	01121	CB2711
A7R10	0684-1061	3	RESISTOR 10M 10% .25W CC	01121	CB1061
A7R11	0698-3263		RESISTOR 500K 1% .125W F TC=0+/-100	91637	MFF-1/8-T-1
A7R12	0683-1505		RESISTOR 15 5% .25W FC TC=-400/+500	01121	CB1505
A7R13	0757-0486		RESISTOR 750K 1% .125W F TC=0+/-100	24546	NA4
A7R14	0684-6811		RESISTOR 680 10% .25W FC TC=-400/+600	01121	CB6811
A7R15	0684-6811	5	RESISTOR 680 10% .25W FC TC=-400/+600	01121	CB6811
A7R16	0684-4721		RESISTOR 4.7K 10% .25W CC	01121	CB4721
A7R17	0684-4721		RESISTOR 4.7K 10% .25W CC	01121	CB4721
A7R18	0684-1011		RESISTOR 100 10% .25W CC	01121	CB1011
A7R19	0684-2711	3	RESISTOR 270 10% .25W FC TC=-400/+600	01121	CB2711
A7R20	2100-3351		RESISTOR-VAR TRMR 500 OHM 10% C SIDE ADJ	73138	72XR500
A7R21	2100-3434		RESISTOR-VAR CONTROL CC 50K 10% LIN	01121	70M4N048P503U
A7R22	0757-0433	6	RESISTOR 3.32K 1% .125W F TC=0+/-100	24546	C4-1/8-T0-3321-F
A7R23	0698-3446		RESISTOR 383 1% .125W F TC=0+/-100	16299	C4-1/8-T0-383R-F
A7R24	0684-4721	5	RESISTOR 4.7K 10% .25W CC	01121	CB4721
A7R25	0684-1011		RESISTOR 100 10% .25W CC	01121	CB1011
A7R26	0698-3433		RESISTOR 28.7 1% .125W F TC=0+/-100	03888	PME55-1/8-T0-28R7-F
A7R27	0698-3433		RESISTOR 28.7 1% .125W F TC=0+/-100	03888	PME55-1/8-T0-28R7-F
A7R28	0757-0427		RESISTOR 1.5K 1% .125W F TC=0+/-100	24546	C4-1/8-T0-1501-F
A7R29	0757-0281	1	RESISTOR 2.74K 1% .125W F TC=0+/-100	24546	C4-1/8-T0-2741-F
A7R30	0757-0466		RESISTOR 110K 1% .125W F TC=0+/-100	24546	C4-1/8-T0-1103-F
A7R31	0757-0488	4	RESISTOR 909K 1% .125W F TC=0+/-100	24546	NA4
A7R32	0684-4701		RESISTOR 47 10% .25W CC	01121	CB4701
A7R33	0684-2701		RESISTOR 27 10% .25W FC TC=-400/+500	01121	CB2701
A7R34	0757-0433	2	RESISTOR 3.32K 1% .125W F TC=0+/-100	24546	C4-1/8-T0-3321-F
A7R35	0757-0433		RESISTOR 3.32K 1% .125W F TC=0+/-100	24546	C4-1/8-T0-3321-F
A7R36	0757-0410		RESISTOR 301 1% .125W F	24546	C4-1/8-T0-301R-F
A7R37	0757-0466		RESISTOR 4.75K 1% .25W F TC=0+/-100	24546	C5-1/4-T0-4751-F
A7R38	0757-0416		RESISTOR 511 1% .125W F	24546	C4-1/8-T0-511R-F
A7R39	0757-0416	1	RESISTOR 511 1% .125W F	24546	C4-1/8-T0-511R-F
A7R40	0757-0440		RESISTOR 7.5K 1% .125W F TC=0+/-100	24546	C4-1/8-T0-7501-F
A7R41	2100-3351		RESISTOR-VAR TRMR 500 OHM 10% C SIDE ADJ	73138	72XR500
A7R42	0757-0280		RESISTOR 1K 1% .125W F	24546	C4-1/8-T0-1001-F
A7R43	0684-1511		RESISTOR 150 10% .25W FC TC=-400/+600	01121	CB1511
A7R44	0684-1001	3	RESISTOR 10 10% .25 CC	01121	CB1001
A7R45	0757-0281		RESISTOR 2.74K 1% .125W F	24546	C4-1/8-T0-2741-F
A7R46	0757-0401		RESISTOR 100 1% .125W F	24546	C4-1/8-T0-101-F
A7R47	0684-4701		RESISTOR 47 10% .25W CC	01121	CB4701
A7R48	0684-1521		RESISTOR 1.5K 10% .25W CC	01121	CB1521

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A7R49	0757-0399		RESISTOR 82.5 1% .125W F TC=0+—100	24546	C4-1/8-T0-82R5-F
A7R50	0757-0284		RESISTOR 150 1% .125W F	24546	C4-1/8-T0-151-F
A7R51	0757-0284		RESISTOR 150 1% .125W F	24546	C4-1/8-T0-151-F
A7R52	0684-0271		RESISTOR 2.7 10% .25W CC	01121	CB27G1
A7R53	0757-0408		RESISTOR 243 1% .125W F	24546	C4-1/8-T0-243R-F
A7R54	0757-0435		RESISTOR 3.92K 1% .125W F	24546	C4-1/8-T0-3921-F
A7R55	0757-0416		RESISTOR 511 1% .125W F	24546	C4-1/8-T0-511R-F
A7R56	0757-0442		RESISTOR 10K 1% .125W F	24546	C4-1/8-T0-1002-F
A7R57	0698-3446		RESISTOR 383 1% .125W F TC=0+—100	16299	C4-1/8-T0-383R-F
A7R58	0757-0421		RESISTOR 825 1% .125W F	24546	C4-1/8-T0-825R-F
A7R59	0684-4711		RESISTOR 470 10% .25W CC	01121	CB4711
A7R60	0757-0412	2	RESISTOR 365 1% .125W F TC=0+—100	24546	C4-1/8-T0-365R-F
A7R61	0757-0422	2	RESISTOR 909 1% .125W F TC=0+—100	24546	C4-1/8-T0-909R-F
A7R62	0757-0406	1	RESISTOR 182 1% .125W F TC=0+—100	24546	C4-1/8-T0-182R-F
A7R63	0757-0434	6	RESISTOR 3.65K 1% .125W F TC=0+—100	24546	C4-1/8-T0-3651-F
A7R64	0757-0447	1	RESISTOR 16.2K 1% .125W F TC=0+—100	24546	C4-1/8-T0-1622-F
A7R65	0698-7926		RESISTOR 470 10% .125W CC	01121	BB4711
A7R66	0698-7926		RESISTOR 470 10% .125W CC	01121	BB4711
A7R67	0757-0427		RESISTOR 1.5K 1% .125W F TC=0+—100	24546	C4-1/8-T0-1501-F
A7R68	0698-7926		RESISTOR 470 10% .125W CC	01121	BB4711
A7R69	0757-0415	2	RESISTOR 475 1% .125W F TC=0+—100	24546	C4-1/8-T0-475R-F
A7R70	0757-0407		RESISTOR 200 1% .125W F	24546	C4-1/8-T0-201-F
A7R71	0757-0439	7	RESISTOR 6.81K 1% .125W F TC=0+—100	24546	C4-1/8-T0-6811-F
A7R72	0684-1221		RESISTOR 1.2K 10% .25W CC	01121	CB1221
A7R73	0684-2221		RESISTOR 2.2K 10% .25W CC	01121	CB2221
A7R74	0684-6821		RESISTOR 6.8K 10% .25W CC	01121	CB6821
A7R75	0757-0415		RESISTOR 475 1% .125W F TC=0+—100	24546	C4-1/8-T0-475R-F
A7R76	0757-0124	2	RESISTOR 39.2K 1% .125W F TC=0+—100	24546	C5-1/4-T0-3922-F
A7R77	0757-0448	1	RESISTOR 18.2K 1% .125W F TC=0+—100	24546	C4-1/8-T0-1822-F
A7R78	0757-0437		RESISTOR 4.75K 1% .125W F	24546	C4-1/8-T0-4751
A7R79	0757-0401		RESISTOR 100 1% .125W F	24546	C4-1/8-T0-101-F
A7R80	0757-0401		RESISTOR 100 1% .125W F	24546	C4-1/8-T0-101-F
A7R81	0757-0409	1	RESISTOR 274 1% .125W F TC=0+—100	24546	C4-1/8-T0-274R-F
A7R82	0757-0401		RESISTOR 100 1% .125W F	24546	C4-1/8-T0-101-F
A7R83	0757-0407		RESISTOR 200 1% .125W F	24546	C4-1/8-T0-201-F
A7R84	0757-0407		RESISTOR 200 1% .125W F	24546	C4-1/8-T0-201-F
A7R85	0757-0435		RESISTOR 3.92K 1% .125W F	24546	C4-1/8-T0-3921-F
A7R86	0757-0439		RESISTOR 6.81K 1% .125W F TC=0+—100	24546	C4-1/8-T0-6811-F
A7R87	0757-0280		RESISTOR 1K 1% .125W F	24546	C4-1/8-T0-1001-F
A7R88	0757-0290		RESISTOR 6.19K 1% .125W F	19701	MF4C1/8-T0-6191-F
A7R89	0757-0412		RESISTOR 365 1% .125W F TC=0+—100	24546	C4-1/8-T0-365R-F
A7R90	0698-0085	2	RESISTOR 2.61K 1% .125W F TC=0+—100	16299	C4-1/8-T0-2611-F
A7R91	0757-0407		RESISTOR 200 1% .125W F	24546	C4-1/8-T0-201-F
A7R92	0698-3433		RESISTOR 28.7 1% .125W F TC=0+—100	03888	PME55-1/8-T0-28R7-F
A7R93	2100-3211	1	RESISTOR-VAR TRMR 1K OHM 10% C TOP ADJ	73138	72PR1K
A7R94	0757-0438	4	RESISTOR 5.11K 1% .125W F	24546	C4-1/8-T0-5111-F
A7R95	0757-0444	2	RESISTOR 12.1K 1% .125W F TC=0+—100	24546	C4-1/8-T0-1212-F
A7R96	0757-0430	2	RESISTOR 2.21K 1% .125W F	24546	C4-1/8-T0-2211-F
A7R97	2100-3350		RESISTOR-VAR TRMR 200 10% C SIDE ADJ	73138	72XR201
A7R98	0757-0410		RESISTOR 301 1% .125W F	24546	C4-1/8-T0-301R-F
A7R99	0757-0283		RESISTOR 2K 1% .125W F	24546	C4-1/8-T0-2001-F
A7R100	0757-0404	1	RESISTOR 130 1% .125W F TC=0+—100	24546	C4-1/8-T0-131-F
A7R101	0757-0418		RESISTOR 619 1% .125W F	24546	C4-1/8-T0-619R-F
A7R102	0698-3446		RESISTOR 383 1% .125W F TC=0+—100	16299	C4-1/8-T0-383R-F
A7R103	0698-3155	2	RESISTOR 4.64K 1% .125W F TC=0+—100	16299	C4-1/8-T0-4641-F
A7R104	0684-3311	3	RESISTOR 330 10% .25W CC	01121	CB3311
A7R105	2100-3253	3	RESISTOR-VAR TRMR 50K OHM 10% C TOP ADJ	73138	72PR50K
A7R106	0757-0416		RESISTOR 511 1% .125W F	24546	C4-1/8-T0-511R-F
A7R107	0757-0457	3	RESISTOR 47.5K 1% .125W F TC=0+—100	24546	C4-1/8-T0-4752-F
A7R108	0757-0437		RESISTOR 4.75K 1% .125W F	24546	C4-1/8-T0-4751-F
A7R109	0684-1021	5	RESISTOR 1K 10% .25W CC	01121	CB1021
A7R110	0684-2221		RESISTOR 2.2K 10% .25W CC	01121	CB2221
A7R111	0757-0474	1	RESISTOR 243K 1% .125W F TC=0+—100	24546	C4-1/8-T0-2433-F
A7R112	0757-0444		RESISTOR 12.1K 1% .125W F TC=0+—100	24546	C4-1/8-T0-1212-F
A7R113	0698-3158	2	RESISTOR 23.7K 1% .125W F TC=0+—100	16299	C4-1/8-T0-2372-F
A7R114	0757-0280		RESISTOR 1K 1% .125W F	24546	C4-1/8-T0-1001-F
A7R115	0757-0401		RESISTOR 100 1% .125W F	24546	C4-1/8-T0-101-F
A7R116			NOT ASSIGNED		
A7R117	2100-0568		RESISTOR-VAR TRMR 100 OHM 10% C TOP ADJ	73138	72PR100
A7R118	0684-1001		RESISTOR 10 10% .25W CC	01121	CB1001
A7R119	0684-1001		RESISTOR 10 10% .25W CC	01121	CB1001
A7R120	0684-1001		RESISTOR 10 10% .25W CC	01121	CB1001
A7R121	0684-1001		RESISTOR 10 10% .25W CC	01121	CB1001
A7R122	0684-1001		RESISTOR 10 10% .25W CC	01121	CB1001
A7R123	0684-1001		RESISTOR 10 10% .25W CC	01121	CB1001
A7R124	0684-1001		RESISTOR 10 10% .25W CC	01121	CB1001
A7R125	0684-1021		RESISTOR 1K 10% .25W CC	01121	CB1021
A7R126	0684-4711		RESISTOR 470 10% .25W CC	01121	CB4711
A7R127	0684-4721		RESISTOR 4.7K 10% .25W CC	01121	CB4721
A7R128	0684-1021		RESISTOR 1K 10% .25W CC	01121	CB1021

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A7R129	0698-3446		RESISTOR 383 1% .125W F TC=0+-100	16299	C4-1/8-T0-383R-F
A7R130	0757-0435		RESISTOR 3.92K 1% .125W F	24546	C4-1/8-T0-3921-F
A7R131	0698-3446		RESISTOR 383 1% .125W F TC=0+-100	16299	C4-1/8-T0-383R-F
A7R132	0698-3446		RESISTOR 383 1% .125W F TC=0+-100	16299	C4-1/8-T0-383R-F
A7R133	0757-0434		RESISTOR 3.65K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3651-F
A7R134	0757-0289	1	RESISTOR 13.3K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-1332-F
A7R135	0757-0427		RESISTOR 1.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1501-F
A7R136	0757-0408	4	RESISTOR 243 1% .125W F TC=0+-100	24546	C4-1/8-T0-243R-F
A7R137	0757-0280		RESISTOR 1K 1% .125W F	24546	C4-1/8-T0-1001-F
A7R138	0684-4721		RESISTOR 4.7K 10% .25W CC	01121	CB4721
A7R139	0684-1021		RESISTOR 1K 10% .25W CC	01121	CB1021
A7R140	0757-0438		RESISTOR 5.1K 1% .125W F	24546	C4-1/8-T0-5111-F
A7R141	0757-0290		RESISTOR 6.19K 1% .125W F	19701	MF4C1/8-T0-6191-F
A7R142	0684-4721		RESISTOR 4.7K 10% .25W CC	01121	CB4721
A7R143	0684-4721		RESISTOR 4.7K 10% .25W CC	01121	CB4721
A7R144	0684-4711		RESISTOR 470 10% .25W CC	01121	CB4711
A7R145	0757-0416		RESISTOR 511 1% .125W F	24546	C4-1/8-T0-511R-F
A7R146	5081-7476		RESISTOR-0757-0416 PF .40	28480	5081-7476
A7R147	0757-0439		RESISTOR 6.81K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6811-F
A7R148	0757-0419	1	RESISTOR 681 1% .125W F TC=0+-100	24546	C4-1/8-T0-681R-F
A7R149	0684-1021		RESISTOR 1K 10% .25W CC	01121	CB1021
A7R150	0757-0391	1	RESISTOR 39.2 1% .125W F TC=0+-100	24546	C4-1/8-T0-39R2-F
A7R151	0684-1011		RESISTOR 100 10% .25W CC	01121	CB1011
A7R152	0757-0466		RESISTOR 110K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1103-F
A7R153	0684-4701		RESISTOR 47 10% .25W CC	01121	CB4701
A7R154	0684-4711		RESISTOR 470 10% .25W CC	01121	CB4711
A7R155	0757-0283		RESISTOR 2K 1% .125W F	24546	C4-1/8-T0-2001-F
A7R156	0684-2701		RESISTOR 27 10% .25W FC TC=-400/+500	01121	CB2701
A7R157	0684-1811		RESISTOR 180 10% .25W CC	01121	CB1811
A7R158	0684-1001		RESISTOR 10 10% .25W CC	01121	CB1001
A7R159	0757-0442		RESISTOR 10K 1% .125W F	24546	C4-1/8-T0-1002-F
A7R160	0757-0428	3	RESISTOR 1.62K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1621-F
A7R161	0684-1511		RESISTOR 150 10% .25W FC TC=-400/+600	01121	CB1511
A7R162	0757-0416		RESISTOR 511 1% .125W F	24546	C4-1/8-T0-511R-F
A7R163	0684-1511		RESISTOR 150 10% .25W FC TC=-400/+600	01121	CB1511
A7R164	0684-3311		RESISTOR 330 10% .25W CC	01121	CB3311
A7R165	0757-0465		RESISTOR 100K 1% .125W F	24546	C4-1/8-T0-1003-F
A7R166	0757-0433		RESISTOR 3.32K 1% .125W F	24546	C4-1/8-T0-3321-F
A7R167	0757-0465		RESISTOR 100K 1% .125W F	24546	C4-1/8-T0-1003-F
A7R168	0757-0433		RESISTOR 3.32K 1% .125W F	24546	C4-1/8-T0-3321-F
A7R169	2100-0567		RESISTOR-VAR TRMR 2K 10% C	73138	72PR2K
A7S1	3101-1906	1	SWITCH-PB 4STA DPDT .394 IN-CTRS .45A	28480	3101-1906
A7S2	3101-1909	1	SWITCH-PB 6STA DPDT P.P .394 IN-CTRS	28480	3101-1909
A7S3	3101-1907	2	SWITCH-PB 4STA INTLH .394 IN-CTRS .45A	28480	3101-1907
A7U1	1826-0045	3	IC AMPL	28480	1826-0045
A7U2	5081-3019	2	INTEGRATED CIRCUIT, SEALED PACKAGE	28480	5081-3019
A7U3	1826-0045		IC AMPL	28480	1826-0045
A7U4	1821-0001	2	IC CA3046 XSTR ARRAY	02735	CA3046
A7W1	01740-61605	1	CABLE ASSEMBLY, GATE DRIVER	28480	01740-61605
A7XA9	1251-0588	1	CONNECTOR 12-PIIN F POST TYPE	27264	09-52-3121
A7XU1	1200-0763	4	SOCKET-IC 8-CONT DIP-SLDR-TERMS	0080A	A8SG
A7XU2	1200-0438	1	SOCKET-IC 16-CONT DIP-SLDR-TERMS	00779	583529-1
A7XU3	1200-0763		SOCKET-IC 8-CONT DIP-SLDR-TERMS	0080A	A8SG
A7XU4	1200-0441	2	SOCKET-IC 14-CONT DIP-SLDR-TERMS	00779	583527-1
A8	01740-66523	1	BOARD ASSY, MAIN SWEEP	28480	01740-66523
A8C1	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A8C2	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A8C3	0180-0197	9	CAPACITOR-FXD 2.2UF +-10% 20VDC TA	56289	150D225X9020A2
A8C4	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A8C5	0140-0218	2	CAPACITOR-FXD 160PF +-2% 300WVDC MICA	72136	DM15F161G0300WV1CR
A8C6	0160-2204	1	CAPACITOR-FXD 100 PF 5% 300WVDC MICA	28480	0160-2204
A8C7			NOT ASSIGNED		
A8C8	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A8C9	0160-3226	2	CAPACITOR-FXD .01UF +-10% 400WVDC MET	28480	0160-3226
A8C10	0160-3726	2	CAPACITOR-FXD 1UF +-10% 40WVDC MET POLY C	28480	0160-3726
A8C11	0180-0481	1	CAPACITOR-FXD 100UF +-10% 20VDC TA-WET	28480	0180-0481
A8C12	0140-0190	1	CAPACITOR-FXD 39PF +-5% 300WVDC MICA	72136	DM15E390J0300WV1CR
A8C13	0140-0207	1	CAPACITOR-FXD 330 PF +-5% 500WVDC MICA	72136	DM15F331J0500WV1CR
A8C14	0160-0155	1	CAPACITOR-FXD 3300 PF +-10% 200WVDC POLY E	56289	292P33292
A8C15	0160-0194	1	CAPACITOR-FXD .015UF +-10% 200WVDC POLY E	56289	292P15392
A8C16	0180-2079	1	CAPACITOR-FXD .39UF +-10% 35VDC TA	56289	150D394X9035A2
A8C17	0180-1745	1	CAPACITOR-FXD 1.5UF +-10% 20VDC TA	56289	150D155X9020A2
A8C18	0180-2111		CAPACITOR-FXD 33UF +-10% 35 VDC TA-SOLID	56289	150D336X9035A2
A8C19	0180-0197		CAPACITOR-FXD 2.2UF +-10% 20VDC TA	56289	150D225X9020A2
A8C20	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A8C21	0180-0197		CAPACITOR-FXD 2.2UF +-10% 20VDC TA	56289	150D225X9020A2
A8C22	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A8C23			NOT ASSIGNED		

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A8CR1	1901-0040		DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A8CR2	1901-0040		DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A8CR3	1901-0040		DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A8CR4	1901-0040		DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A8L1	9140-0105		COIL-FXD MOLDED RF CHOKE 8.2UH 10%	24226	15/821
A8L2	9170-0029		CORE-SHIELDING BEAD	02114	56-590-65A2/4A
A8Q1	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A8Q2	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A8Q3	1853-0244		TRANSISTOR PNP SI PD=310MW FT=500MHZ	28480	1853-0244
A8Q4	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A8Q5	1855-0081		TRANSISTOR J-FET 2N5245 N-CHAN D-MODE SI	01295	2N5245
A8Q6	1854-0019		TRANSISTOR NPN SI T0-18 PD=360MW	28480	1854-0019
A8Q7	1853-0354		TRANSISTOR PNP SI T0-92 PD=350MW	28480	1853-0354
A8Q8	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A8Q9	1854-0071		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A8Q10	1854-0215		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A8Q11	1854-0071		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A8Q12	1854-0071		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A8Q13	1854-0691		TRANSISTOR NPN SI T0-92 PD=350MW	28480	1854-0691
A8R1	0684-3901		RESISTOR 39 10% .25W CC	01121	CB3901
A8R2	0698-3151		RESISTOR 2.87K 1% .125W F TC=0+-100	16299	C4-1/8-T0-2871-F
A8R3	0757-0407		RESISTOR 200 1% .125W F	24546	C4-1/8-T0-201-F
A8R4	0684-3901		RESISTOR 39 10% .25W CC	01121	CB3901
A8R5	0757-0411		RESISTOR 332 1% .125W F TC=0+-100	24546	C4-1/8-T0-332R-F
A8R6	0684-8201		RESISTOR 82 10% .25W FC TC=-400/+500	01121	CB8201
A8R7	0757-0428		RESISTOR 1.62K 1% .125W F	24546	C4-1/8-T0-1621-F
A8R8	0684-1011		RESISTOR 100 10% .25W CC	01121	CB1011
A8R9	0684-2251		RESISTOR 2.2M 10% .25W FC TC=-900/+1100	01121	CB2251
A8R10			NOT ASSIGNED		
A8R11			NOT ASSIGNED		
A8R12	2100-3056		RESISTOR-TRMR 5K 10% C SIDE-ADJ 17-TURN	32997	3006P-1-502
A8R13	2100-3056		RESISTOR-TRMR 5K 10% C SIDE-ADJ 17-TURN	32997	3006P-1-502
A8R14	2100-3056		RESISTOR-TRMR 5K 10% C SIDE-ADJ 17-TURN	32997	3006P-1-502
A8R15	0757-0434		RESISTOR 3.65K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3651-F
A8R16	0757-0440		RESISTOR 7.5K 1% .125W F	24546	C4-1/8-T0-7501-F
A8R17	0698-6450		RESISTOR 2.5K .1% .125W F TC=0+-50	24546	NC55
A8R18	0698-5449		RESISTOR 5K .1% .125W F TC=0+-50	19701	MF4C1/8-T2-5001-B
A8R19	0698-4157		RESISTOR 10K .1% .125W F TC=0+-50	24546	NC55
A8R20	0698-6942		RESISTOR 25K .1% .125W F TC=0+-50	24546	NC55
A8R21	0698-5450		RESISTOR 50K .1% .125W F TC=0+-50	19701	MF4C1/8-T2-5002-B
A8R22	0698-4158		RESISTOR 100K .1% .125W F TC=0+-50	24546	NC55
A8R23	0684-1021		RESISTOR 1K 10% .25W CC	01121	CB1021
A8R24	0757-0284		RESISTOR 150 1% .125W F	24546	C4-1/8-T0-151-F
A8R25			NOT ASSIGNED		
A8R26	0684-1011		RESISTOR 100 10% .25W CC	01121	CB1011
A8R27	0684-1031		RESISTOR 10K 10% .25W CC	01121	CB1031
A8R28	0684-3321		RESISTOR 3.3K 10% .25W CC	01121	CB3321
A8R29	0684-1011		RESISTOR 100 10% .25W CC	01121	CB1021
A8R30	0757-0284		RESISTOR 150 1% .125W F	24546	C4-1/8-T0-151-F
A8R31	0757-0416		RESISTOR 511 1% .125W F	24546	C4-1/8-T0-511R-F
A8R32	0757-1093		RESISTOR 3K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3001-F
A8R33	0698-3150		RESISTOR 2.37K 1% .125W F TC=0+-100	16299	C4-1/8-T0-2371-F
A8R34	0757-0283		RESISTOR 2K 1% .125W F	24546	C4-1/8-T0-2001-F
A8R35	0684-3311		RESISTOR 330 10% .25W CC	01121	CB3311
A8R36	0684-3901		RESISTOR 39 10% .25W CC	01121	CB3901
A8R37	0684-6821		RESISTOR 6.8K 10% .25W CC	01121	CB6821
A8R38	0757-0439		RESISTOR 6.81K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6811-F
A8R39	0757-0420		RESISTOR 750 1% .125W F	24546	C4-1/8-T0-751-F
A8R40	0757-0454		RESISTOR 33.2K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3322-F
A8R41	0684-0271		RESISTOR 2.7 1% .25W CC	01121	CB27G1
A8R42	0684-0271		RESISTOR 2.7 10% .25W CC	01121	CB27G1
A8R43	2100-3056		RESISTOR-VAR TRMR 5K 10% C SIDE ADJ	32997	3006P-1-502
A8S1MP1	01740-61901		SWITCH ASSY, ROTARY M	28480	01740-61901
A8S1MP2	01740-61902		SWITCH ASSY, ROTARY F	28480	01740-61902
A8S1MP3	01840-22502		ROLLER, DETENT	28480	01840-22502
A8S1MP4	1460-1148		SPRING: TORSION	00000	0BD
A8U1	1826-0086		IC AMPL	04713	MC1776CG
A8XA7	1251-0589		CONNECTOR 10-PIN F POST TYPE	27264	09-52-3101
A8XU1	1200-0475		SOCKET	22526	75060-005
A9	01740-66522		BOARD ASSY, DELAYED SWEEP	28480	01740-66522
A9C1	0160-2250		CAPACITOR-FXD 5.1PF +- .25PF 500WVDC CER	28480	0160-2250
A9C2	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A9C3	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A9C4	0160-2204		CAPACITOR-FXD 100PF +-5% 300WVDC	28480	0160-2204
A9C5			NOT ASSIGNED		
A9C6	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A9C7	0140-0218	1	CAPACITOR-FXD 160PF +-2% 300WVDC MICA	72136	DM15F161G0300WV1CR
A9C8	0160-3226		CAPACITOR-FXD .01UF +-10% 400WVDC MET	28480	0160-3226
A9C9	0160-3726		CAPACITOR-FXD 1UF +-10% 40WVDC MET POLYC	28480	0160-3726
A9C10	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A9C11	0180-2148		CAPACITOR-FXD .47UF +-20% 50VDC TA	56289	150D474X0050A2
A9C12			NOT ASSIGNED		
A9C13			NOT ASSIGNED		
A9C14	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A9C15	0180-0197		CAPACITOR-FXD 2.2UF +-10% 20VDC TA	56289	150D225X9020A2
A9CR1	1901-0040		DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A9CR2	5081-7535		DIODE- 1901-0040 PF .30	28480	5081-7535
A9L1	9140-0105	1	COIL-FXD MOLDED RF CHOKE 8.2UH 10%	24226	15/821
A9P1	1251-3072		CONNECTOR 12-PIN M POST TYPE	27264	09-56-1121
A9Q1	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A9Q2	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A9Q3	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A9Q4	1853-0244		TRANSISTOR PNP SI PD=310MW FT=500MHZ	28480	1853-0244
A9Q5	1854-0691		TRANSISTOR NPN SI T0-92 PD=350MW	28480	1854-0691
A9Q6	1855-0081		TRANSISTOR J-FET 2N5245 N-CHAN D-MODE SI	01295	2N5245
A9Q7	1854-0019		TRANSISTOR NPN SI T0-18 PD=360MW	28480	1854-0019
A9R1	0684-1021		RESISTOR- 1K 10% .25W CC	01121	CB1021
A9R2	0757-0284	1	RESISTOR 150 1% .125W F	24546	C4-1/8-T0-151-F
A9R3	0757-0834		RESISTOR 5.62K 1% .5W F TC=0+-100	19701	MF7C1/2-T0-5621-F
A9R4	0684-1011		RESISTOR 100 10% .25W CC	01121	CB1011
A9R5	0757-0193	1	RESISTOR 3.32K 1% .5W F TC=0+-100	19701	MF7C1/2-T0-3321-F
A9R6	0757-0442		RESISTOR 10K 1% .125W F	24546	C4-1/8-T0-1002-F
A9R7	0757-0280		RESISTOR 1K 1% .125W F	24546	C4-1/8-T0-1002-F
A9R8			NOT ASSIGNED		
A9R9			NOT ASSIGNED		
A9R10	2100-3056		RESISTOR-TRMR 5K 10% C SIDE-ADJ 17-TURN	32997	3006P-1-502
A9R11	2100-3056		RESISTOR-TRMR 5K 10% C SIDE-ADJ 17-TURN	32997	3006P-1-502
A9R12	0757-0433		RESISTOR 3.32K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3321-F
A9R13	0757-0440		RESISTOR 7.5K 1% .125W F	24546	C4-1/8-T0-7501-F
A9R14	0698-6450		RESISTOR 2.5K .1% .125W F TC=0+-50	24546	NC55
A9R15	0698-5449		RESISTOR 5K .1% .125W F TC=0+-50	19701	MF4C1/8-T2-5001-B
A9R16	0698-4157		RESISTOR 10K 1% .125W F TC=0+-50	24546	NC55
A9R17	0698-6942		RESISTOR 25K .1% .125W F TC=0+-50	24546	NC55
A9R18	0698-5450		RESISTOR 50K .1% .125W F TC=0+-50	19701	MF4C1/8-T2-5002-B
A9R19	0698-4158		RESISTOR 100K .1% .125W F TC=0+-50	24546	NC55
A9R20	0757-0284		RESISTOR 150 1% .125W F	24546	C4-1/8-T0-151-F
A9R21	0683-0475	1	RESISTOR 4.7 5% .25W FC TC=-400/+500	01121	CB47G5
A9R22	0684-1011		RESISTOR 100 10% .25W CC	01121	CB1011
A9R23	0684-1031		RESISTOR 10K 10% .25W CC	01121	CB1031
A9R24	0757-0400		RESISTOR 90.9 1% .125W F TC=0+-100	24546	C4-1/8-T0-90R9-F
A9R25	0684-1001		RESISTOR 10 10% .25W CC	01121	CB1001
A9R26			NOT ASSIGNED		
A9R27	0683-0275	1	RESISTOR 2.7 5% .25W FC TC=-400/+500	01121	CB27G5
A9R28	2100-3056		RESISTOR-VAR TRMR 5K 10% C SIDE ADJ	32997	3006P-1-502
A9S1MP1	01740-61903	1	SWITCH ASSY, ROTARY M	28480	01740-61903
A9S1MP2	01740-61904	1	SWITCH ASSY, ROTARY F	28480	01740-61904
A9S1MP3	01840-22502	1	ROLLER, DETENT	28480	01840-22502
A9S1MP4	1460-1148		SPRING: TORSION	00000	OBD
A9U1	1826-0045		IC AMPL	28480	1826-0045
A9XA10	1251-3352	3	CONNECTOR-PC EDGE 12-CONT/ROW 1-ROW	26742	91-6912-0702-00
A9XU1	1200-0475		SOCKET	22526	75060-005
A10	01740-66508	1	BOARD ASSY, DELAYED TRIGGER	28480	01740-66508
A10C1	0150-0070		CAPACITOR-FXD .02UF +-20% 500WVDC CER	28480	0150-0070
A10C2	0160-2204		CAPACITOR-FXD 100PF +-5% 300WVDC MICA	28480	0160-2204
A10C3	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A10C4	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A10C5			NOT ASSIGNED		
A10C6	0160-2204		CAPACITOR-FXD 100PF +-5% 300WVDC MICA	28480	0160-2204
A10C7	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A10C8	0180-0197		CAPACITOR-FXD 2.2UF +-10% 20VDC TA	56289	150D225X9020A2
A10C9	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A10C10	0180-0197		CAPACITOR-FXD 2.2UF +-10% 20VDC TA	56289	150D225X9020A2
A10C11	0160-3451	2	CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A10C12	0180-0197		CAPACITOR-FXD 2.2UF +-10% 20VDC TA	56289	150D225X9020A2
A10C13	0150-0048		CAPACITOR-FXD .22PF +-5% 500WVDC TI DIOX	95121	TYPE QC
A10C14	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A10CR1	1901-0040		DIODE SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A10CR2	1901-0040		DIODE SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A10CR3	1901-0040		DIODE SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A10CR4	1901-0040		DIODE SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A10CR5			NOT ASSIGNED		
A10CR6	1901-0040		DIODE SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A10CR7	1901-0040		DIODE SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A10CR8	1910-0016		DIODE-GE 60V 60NA 1US D0-7	28480	1920-0016
A10L1	9140-0105		COIL-FXD MOLDED RF CHOKE 8.2UH 10%	24226	15/821
A10P1			NSR		
A10Q1	1855-0202	1	TRANSISTOR-JFET DUAL N-CHAN D-MODE SI	17856	E421
A10Q2			NOT ASSIGNED		
A10Q3	1854-0215		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A10Q4	1854-0215		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A10Q5	1854-0092		TRANSISTOR NPN SI PD=200MW FT=600MHZ	28480	1854-0092
A10Q6	1854-0092		TRANSISTOR NPN SI PD=200MW FT=600MHZ	28480	1854-0092
A10Q7	1854-0071		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A10O8	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A10O9	1854-0071		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A10O10	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A10R1	0757-0465		RESISTOR 100K 1% .125W F	24546	C4-1/8-T0-1003-F
A10R2	0757-0488		RESISTOR 909K 1% .125W F TC=0+-100	24546	NA4
A10R3	0684-3901		RESISTOR 39 10% .25W CC	01121	CB3901
A10R4	0684-3901		RESISTOR 39 10% .25W CC	01121	CB3901
A10R5	0757-0407		RESISTOR 200 1% .125W F	24546	C4-1/8-T0-201-F
A10R6	0684-6811		RESISTOR 680 10% .25W F TC=-400/+600	01121	CB6811
A10R7	0757-0407		RESISTOR 200 1% .125W F	24546	C4-1/8-T0-201-F
A10R8	0684-4721		RESISTOR 4.7K 10% .25W CC	01121	CB4721
A10R9	2100-3351		RESISTOR-VAR TRMR 500 OHM 10% C SIDE ADJ	73138	72XR500
A10R10	2100-3434		RESISTOR-VAR CONTROL CC 50K 10% LIN	01121	70M4N048P503U
A10R11	0757-0283	3	RESISTOR 2K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2001-F
A10R12			NOT ASSIGNED		
A10R13	0757-0408		RESISTOR 243 1% .125W F TC=0+-100	24546	C4-1/8-T0-243R-F
A10R14	0684-4721		RESISTOR 4.7K 10% .25W CC	01121	CB4721
A10R15	0757-0427		RESISTOR 1.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1501-F
A10R16	0698-3433		RESISTOR 28.7 1% .125W F TC=0+-100	03888	PME55-1/8-T0-2BR7-F
A10R17	0698-3433		RESISTOR 28.7 1% .125W F TC=0+-100	03888	PME55-1/8-T0-2BR7-F
A10R18	0698-3152		RESISTOR 3.48K 1% .125W F	16299	C4-1/8-T0-3481-F
A10R19	0757-0438		RESISTOR 5.11K 1% .125W F	24546	C4-1/8-T0-5111-F
A10R20	0684-1531	1	RESISTOR 15K 10% .25W F TC=-400/+800	01121	CB1531
A10R21	5081-7482		RESISTOR -0757-0420 PF .40	28480	5081-7482
A10R22	0757-0443		RESISTOR 11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1102-F
A10R23	0757-0420		RESISTOR 750 1% .125W F	24546	C4-1/8-T0-751-F
A10R24	0757-0438		RESISTOR 5.11K 1% .125W F	24546	C4-1/8-T0-5111-F
A10R25	0684-6811		RESISTOR 680 10% .25W F TC=-400/+600	01121	CB6811
A10R26	0684-6811		RESISTOR 680 10% .25W F TC=-400/+600	01121	CB6811
A10R27	0757-0200		RESISTOR 5.62K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5621-F
A10R28	0757-0420		RESISTOR 750 1% .125W F	24546	C4-1/8-T0-751-F
A10R29	0757-0418		RESISTOR 619 1% .125W F	24546	C4-1/8-T0-619R-F
A10R30	0757-0433		RESISTOR 3.32K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3321-F
A10R31	0757-0443		RESISTOR 11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1102-F
A10R32	0757-0420		RESISTOR 750 1% .125W F	24546	C4-1/8-T0-751-F
A10R33	0684-1001		RESISTOR 10 10% .25W CC	01121	CB1001
A10R34	0684-1001		RESISTOR 10 10% .25W CC	01121	CB1001
A10R35	0684-3901		RESISTOR 39 10% .25W CC	01121	CB3901
A10R36	0698-0085		RESISTOR 2.61K 1% .125W F TC=0+-100	16299	C4-1/8-T0-2611-F
A10R37	0757-0488		RESISTOR 909K 1% .125W F TC=0+-100	24546	NA4
A10R38	0757-0465		RESISTOR 100K 1% .125W F	24546	C4-1/8-T0-1003-F
A10R39	0684-1011	3	RESISTOR 100 10% .25W F TC=-400/+500	01121	CB1011
A10R40	0684-1011		RESISTOR 100 10% .25W F TC=-400/+500	01121	CB1011
A10R41	0757-0428		RESISTOR 1.62K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1621-F
A10S1	3101-1904	1	SWITCH-PB 6STA .394 IN-CTRS .45A 115VAC	28480	3101-1904
A10U1	5081-3019		INTEGRATED CIRCUIT, SEALED PACKAGE	28480	5081-3019
A10VR1	1902-3082	1	DIODE-ZENER 4.64V PD=.4W	04713	SZ10939-86
A11	01740-66521	1	BOARD ASSY, HORIZONTAL OUTPUT	28480	01740-66521
A11C1	0160-3451	1	CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A11C2	0160-3451	1	CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A11C3	0160-3665	7	CAPACITOR-FXD .01UF +80-20% 500WVDC CER	28480	0160-3665
A11C4	0160-3502	1	CAPACITOR-FXD .3PF +-5% 500WVDC TI DIOX	95121	TYPE QC
A11C5	0160-3665		CAPACITOR-FXD .01UF +80-20% 500WVDC CER	28480	0160-3665
A11C6	0140-0192		CAPACITOR-FXD 68PF +-5% 300WVDC MICA	72136	DM15E680J0300WV1CR
A11C7	0160-3665		CAPACITOR-FXD .01UF +80-20% 500WVDC CER	28480	0160-3665
A11C8	0160-3665		CAPACITOR-FXD .01UF +80-20% 500WVDC CER	28480	0160-3665
A11C9	0140-0192		CAPACITOR-FXD 68PF +-5% 300WVDC MICA	72136	DM15E680J0300WV1CR
A11C10	0160-3665		CAPACITOR-FXD .01UF +80-20% 500WVDC CER	28480	0160-3665
A11C11	0160-3665		CAPACITOR-FXD .01UF +80-20% 500WVDC CER	28480	0160-3665
A11C12	0160-3665		CAPACITOR-FXD .01UF +80-20% 500WVDC CER	28480	0160-3665
A11C13	0160-3502		CAPACITOR-FXD .30PF +-5% 500WVDC	95121	TYPE QC
A11C14	0140-0192		CAPACITOR-FXD 68PF +-5% 300WVDC	72136	DM15E680J0300WV1CR
A11L1	9170-0029		CORE-SHIELDING BEAD	02114	56-590-65A2/4A
A11L2	9170-0029		CORE-SHIELDING BEAD	02114	56-590-65A2/4A
A11MP1	1205-0095	6	HEAT-DISSIPATOR SGL T0 5/T0 39 PKG	28480	1205-0095
A11Q1	1854-0019		TRANSISTOR NPN SI T0-18 PD=360MW	28480	1854-0019
A11Q2	1853-0354		TRANSISTOR PNP SI T0-92 PD=350MW	28480	1853-0354

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A11Q3	1854-0419	1	TRANSISTOR NPN SI T0-39 PD=1W FT=200MHZ	28480	1854-0419
A11Q4	1853-0038	1	TRANSISTOR PNP SI T0-39 PD=1W FT=100MHZ	28480	1853-0038
A11Q5	1853-0354	1	TRANSISTOR PNP SI T0-92 PD=350MW	28480	1853-0354
A11Q6	1854-0019	1	TRANSISTOR NPN SI T0-18 PD=360MW	28480	1854-0019
A11Q7	1853-0232	2	TRANSISTOR PNP SI T0-39 PD=1W FT=200MHZ	28480	1853-0232
A11Q8	1854-0523	1	TRANSISTOR NPN SI T0-39 PD=1W FT=150MHZ	28480	1854-0523
A11R1	0684-1001	1	RESISTOR 10 10% .25W CC	01121	CB1001
A11R2	0684-1011	1	RESISTOR 100 10% .25W CC	01121	CB1011
A11R3	0684-1001	1	RESISTOR 10 10% .25W CC	01121	CB1001
A11R4	0757-0845	4	RESISTOR 18.2K 1% .5W F TC=0+-100	19701	MF7C1/2-T0-1822-F
A11R5	0684-4721	1	RESISTOR 4.7K 10% .25W CC	01121	CB4721
A11R6	0683-0685	2	RESISTOR 6.8 5% .25W FC	01121	CB68G5
A11R7	0684-3901	1	RESISTOR 39 10% .25W CC	01121	CB3901
A11R8	0683-6835	2	RESISTOR 68K 5% .25W FC TC=-400/+800	01121	CB6835
A11R9	0757-0407	2	RESISTOR 200 1% .125W F TC=0+-100	24546	C4-1/8-T0-201-F
A11R10	2100-3273	3	RESISTOR-VAR TRMR 2K OHM 10% C SIDE ADJ	73138	72XR2K
A11R11	0757-0768	2	RESISTOR 47.5K 1% .25W F	24546	C5-1/4-T0-4752-F
A11R12	0757-0283	1	RESISTOR 2K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2001-F
A11R13	0757-0411	1	RESISTOR 332 1% .125W F TC=0+-100	24546	C4-1/8-T0-332R-F
A11R14	0683-6835	1	RESISTOR 68K 5% .25W FC TC=-400/+800	01121	CB6835
A11R15	2100-3273	1	RESISTOR-VAR TRMR 2K OHM 10% C SIDE ADJ	73138	72XR2K
A11R16	0757-0407	1	RESISTOR 200 1% .125W F TC=0+-100	24546	C4-1/8-T0-201-F
A11R17	0757-0768	1	RESISTOR 47.5K 1% .25W F	24546	C5-1/4-T0-4752-F
A11R18	0757-0283	1	RESISTOR 2K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2001-F
A11R19	0757-0411	1	RESISTOR 332 1% .125W F TC=0+-100	24546	C4-1/8-T0-332R-F
A11R20	0683-0685	1	RESISTOR 6.8 5% .25W FC	01121	CB68G5
A11R21	0684-3901	1	RESISTOR 39 10% .25W CC	01121	CB3901
A11R22	0684-4721	1	RESISTOR 4.7K 10% .25W CC	01121	CB4721
A11R23	0757-0845	1	RESISTOR 18.2K 1% .5W F TC=0+-100	19701	MF7C1/2-T0-1822-F
A11R24	0683-1825	1	RESISTOR 1.8K 5% .25W FC TC=-400/+700	01121	CB1825
A11R25	0757-0845	1	RESISTOR 18.2K 1% .5W F TC=0+-100	19701	MF7C1/2-T0-1822-F
A11R26	0757-0845	1	RESISTOR 18.2K 1% .5W F TC=0+-100	19701	MF7C1/2-T0-1822-F
A11XA7	1251-0649	2	CONNECTOR 15-PIN F POST TYPE	27264	09-52-3151
A12	01740-66503	1	BOARD ASSY, GATE AMPLIFIER	28480	01740-66503
A12C1	0180-0230	1	CAPACITOR-FXD 1UF +-20% 50VDC TA-SOLID	56289	150D105X0050A2
A12C2	0160-0165	3	CAPACITOR-FXD .056UF +-10% 200WVDC POLYE	56289	292P56392
A12C3	0160-3665	1	CAPACITOR-FXD .01UF +-20% 500WVDC CER	28480	0160-3665
A12C4	0160-3665	1	CAPACITOR-FXD .01UF +-20% 500WVDC CER	28480	0160-3665
A12C5	0160-0165	1	CAPACITOR-FXD .056UF +-10% 200WVDC POLYE	56289	292P56392
A12CC	0160-3452	1	CAPACITOR-FXD .02UF +-20% 100WVDC CER	28480	0160-3452
A12C7	0140-0196	1	CAPACITOR-FXD 150PF +-5% 300WVDC MICA	72136	DM15F151J0300WV1CR
A12C8			NOT ASSIGNED		
A12C9	0160-3452	1	CAPACITOR-FXD .02UF +-20% 100WVDC CER	28480	0160-3452
A12C10	0160-3452	1	CAPACITOR-FXD .02UF +-20% 100WVDC CER	28480	0160-3452
A12C11	0121-0478	1	CAPACITOR-VAR TE 0.25-1.5 PF	28480	0121-0478
A12CR1	1901-0040	1	DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A12CR2	1901-0040	1	DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A12CR3	1901-0040	1	DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A12MP1	1205-0095	1	HEAT-DISSIPATOR SGL T0-5/T0-39 PKG	28480	1205-0095
A12MP2	01801-01206	2	BRACKET, ANGLE	28480	01801-01206
A12P1	1251-3319	1	CONNECTOR 10-PIN M POST TYPE	27264	09-64-1101(A2402-10A)
A12Q1	1853-0015	1	TRANSISTOR PNP SI PD=200MW FT=500MHZ	28480	1853-0015
A12Q2	1853-0232	1	TRANSISTOR PNP SI T0-39 PD=1W FT=200MHZ	28480	1853-0232
A12Q3	1854-0215	1	TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A12Q4	1854-0271	1	TRANSISTOR NPN SI T0-39 PD=1W FT=150MHZ	28480	1854-0271
A12R1	0684-1231	2	RESISTOR 12K 10% .25W FC TC=-400/+800	01121	CB1231
A12R2	0757-0422	1	RESISTOR 909 1% .125W F TC=0+-100	24546	C4-1/8-T0-909R-F
A12R3	2100-3423	1	RESISTOR-VAR CONTROL CC 10K 20% LIN	28480	2100-3423
A12R4	0698-3152	1	RESISTOR 3.48K 1% .125W F TC=0+-100	16299	C4-1/8-T0-3481-F
A12R5	0698-3159	1	RESISTOR 26.1K 1% .125W F TC=0+-100	16299	C4-1/8-T0-2612-F
A12R6	0698-3158	1	RESISTOR 23.7K 1% .125W F TC=0+-100	16299	C4-1/8-T0-2372-F
A12R7	0757-0124	1	RESISTOR 39.2K 1% .125W F TC=0+-100	24546	C5-1/4-T0-3922-F
A12R8	0757-0440	1	RESISTOR 7.5K 1% .125W F	24546	C4-1/8-T0-7501-F
A12R9	0757-0737	1	RESISTOR 1.82K 1% .25W F TC=0+-100	24546	C5-1/4-T0-1821-F
A12R10	0698-3646	1	RESISTOR 12K 5% 2W MO TC=0+-200	16299	FP42-2-T00-1202-J
A12R11	0757-0435	1	RESISTOR 3.92K 1% .125W F	24546	C4-1/8-T0-3921-F
A12R12	2100-3273	1	RESISTOR-VAR TRMR 2K OHM 10% C SIDE ADJ	73138	72XR2K
A12R13	0757-0843	1	RESISTOR 15K 1% .5W F TC=0+-100	19701	MF7C1/2-T0-1502-F
A12R14	0687-1211	1	RESISTOR 120 10% .5W CC TC=0+529	01121	EB1211
A12R15	0684-1021	1	RESISTOR 1K 10% .25W CC	01121	CB1021
A12R16	2100-3353	1	RESISTOR-VAR TRMR 20K OHM 10% C SIDE ADJ	73138	72XR20K
A12R17	0684-1021	1	RESISTOR 1K 10% .25W CC	01121	CB1021
A12R18	0684-4731	1	RESISTOR 47K 10% .25W CC	01121	CB4731
A12R19	0684-3931	2	RESISTOR 39K 10% .25W FC TC=-400/+800	01121	CB3931
A12R20	0684-3331	1	RESISTOR 33K 10% .25W CC	01121	CB3331
A12R21	0684-2211	1	RESISTOR 220 10% .25W FC TC=-400/+600	01121	CB2211
A12R22	2100-3424	1	RESISTOR, VAR 5M 30% CC	28480	2100-3424
A12S1	3101-1767	1	SWITCH-PB DPDT MOM 1A 300VAC	28480	3101-1767
A12U1	1821-0001	1	IC CA3046 XSTR ARRAY	02735	CA3046
A12VR1	1902-0025	2	DIODE-ZNR 10V 5% D0-7 PD=.4W TC=+.06%	04713	SZ 10939-182
A12VR2	1902-3345	1	DIODE-ZNR 51.1V 5% D0-7 PD=.4W TC=+.081%	04713	SZ 10939-386

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A12XA16	1251-0649		CONNECTOR 15-PIN F POST TYPE	27264	09-52-3151
A12XU1	1200-0441		SOCKET-IC 14-CONT DIP-SLDR-TERMS	00779	583527-1
A13	01740-66516	1	BOARD ASSY, VERTICAL CONTROL SWITCHING	28480	01740-66516
A13R1	0757-0282	2	RESISTOR 221 1% .125W F	07716	CEA-993
A13R2	0757-0282		RESISTOR 221 1% .125W F	07716	CEA-993
A13S1	3101-1908	1	SWITCH-PB 2STA 4PDT INTLH .394 IN-CTRS	28480	3101-1908
A13S2	3101-1907		SWITCH-PB 4STA INTLH .394 IN-CTRS .45A	28480	3101-1907
A13XA3P3	1251-3900	2	CONNECTOR 8-PIN F POST TYPE	27264	09-52-3083
A13XA3P4	1251-3900		CONNECTOR 8-PIN F POST TYPE	27264	09-52-3083
A14	01740-66504	1	BOARD ASSY, INTERFACE	28480	01740-66504
A14 OPTION 101	01740-66514	1	BOARD ASSY, INTERFACE; OPTION 101 STATE DISPLAY	28480	01740-66514
A14XA3	1251-0477		CONNECTOR-PC EDGE 12-CONT/ROW 1-ROW	9D949	143-012-07-109
A14XA7	1251-0213	2	CONNECTOR-PC EDGE 15-CONT/ROW 1-ROW	9D949	143-015-07-109
A14XA16	1251-3852	2	CONNECTOR 15-PIN F POST TYPE	27264	09-52-3153
A14C1	0140-0200	1	CAPACITOR-FXD 390PF +-5% 300WVDC MICA	72136	DM15F391J0300WV1CR
A14C2	0140-0178	1	CAPACITOR-FXD 560PF +-2% 300WVDC MICA	72136	DM15F561G0300WV1CR
A14CR1	1901-0040		DIODE-SWITCHING 30V 50NA 2NS D0-35	28480	1901-0040
A14CR2	1901-0040		DIODE-SWITCHING 30V 50NA 2NS D0-35	28480	1901-0040
A14CR3	1901-0040		DIODE-SWITCHING 30V 50NA 2NS D0-35	28480	1901-0040
A14CR4	1901-0040		DIODE-SWITCHING 30V 50NA 2NS D0-35	28480	1901-0040
A14CR5	1901-0040		DIODE-SWITCHING 30V 50NA 2NS D0-35	28480	1901-0040
A14CR6	1901-0040		DIODE-SWITCHING 30V 50NA 2NS D0-35	28480	1901-0040
A14CR7	1901-0040		DIODE-SWITCHING 30V 50NA 2NS D0-35	28480	1901-0040
A14CR8	1901-0040		DIODE-SWITCHING 30V 50NA 2NS D0-35	28480	1901-0040
A14Q1	1854-0215		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A14Q2	1854-0215		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A14Q3	1854-0215		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A14Q4	1854-0215		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A14Q5	1854-0215		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS 3611
A14R1	0698-3155		RESISTOR 4.64K 1% .125W F TC=0+-100	16299	C4-1/8-T0-4641-F
A14R2	0684-1031	1	RESISTOR 10K 10% .25W FC TC=-400/+700	01121	CB1031
A14R3	0757-0290	1	RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-6191-F
A14R4	0757-0280	4	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A14R5	0757-0394	2	RESISTOR 51.1 1% .125W F TC=0+-100	24546	C4-1/8-T0-51R1-F
A14R6	0757-0394		RESISTOR 51.1 1% .125W F TC=0+-100	24546	C4-1/8-T0-51R1-F
A14R7	0757-0280		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A14R8	0757-0433		RESISTOR 3.32K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3321-F
A14R9	0757-0278	1	RESISTOR 1.78K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1781-F
A14R10	0684-1011		RESISTOR 100 10% .25W FC TC=-400/+500	01121	CB1011
A14R11	0757-0280		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A14R12	0757-0439		RESISTOR 6.81K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6811-F
A14R13	0757-0408		RESISTOR 243 1% .125W F TC=0+-100	24546	C4-1/8-T0-243R-F
A14R14	0757-0434		RESISTOR 3.65K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3651-F
A14R15	0757-0408		RESISTOR 243 1% .125W F TC=0+-100	24546	C4-1/8-T0-243R-F
A14R16	0757-0280		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A14R17	0757-0439		RESISTOR 6.81K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6811-F
A14R18	0757-0433		RESISTOR 3.32K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3321-F
A14XA3	1251-0477		CONNECTOR-PC EDGE 12-CONT/ROW 1-ROW	9D949	143-012-07-109
A14XA7	1251-0213		CONNECTOR-PC EDGE 15-CONT/ROW 1-ROW	9D949	143-015-07-109
A14XA16	1251-3852		CONNECTOR 15-PIN F POST TYPE	27264	09-52-3153
A15	01740-66502	1	BOARD ASSY, HV POWER SUPPLY	28480	01740-66502
A15C1	0180-1794	1	CAPACITOR-FXD 22UF +-10% 35VDC TA-SOLID	56289	150D226X9035R2
A15C2	0160-2264	1	CAPACITOR-FXD 20PF +-5% 500WVDC CER	28480	0160-2264
A15C3	0180-0269	1	CAPACITOR-FXD 1UF +-75-10% 150VDC AL	56289	30D105G150BA2
A15C4	0160-0684	2	CAPACITOR-FXD 1000PF +-20% 4000WVDC MET	84411	HEW337
A15C5	0160-4051	1	CAPACITOR-FXD .01UF +-20% 4000WVDC MET	84411	HEW 337
A15C6	0160-0544	1	CAPACITOR-FXD .022UF +-20% 4000WVDC MET	84411	HEW 337
A15C7	0160-0584	1	CAPACITOR-FXD .068UF +-20% 4000WVDC MET	56289	430P683040
A15C8	0160-0684	1	CAPACITOR-FXD 1000PF +-20% 4000WVDC MET	84411	HEW 337
A15C9	0160-4079	1	CAPACITOR-FXD 1500PF +-20% 4000WVDC MET	28480	0160-4079
A15C10	0180-0197		CAPACITOR-FXD 2.2UF +-10% 20VDC TA	56289	150D225X9020A2
A15C11	0180-0197		CAPACITOR-FXD 2.2UF +-10% 20VDC TA	56289	150D225X9020A2
A15C12	0170-0040		CAPACITOR-FXD .047UF +-10% 200WVDC POLYE	56289	292P47392
A15C13	0160-3443		CAPACITOR-FXD 1UF +-80-20% 50WVDC POLYE	28480	0160-3443
A15C14	0160-0165		CAPACITOR-FXD .056UF +-10% 200WVDC POLYE	56289	292P56392
A15C15	0180-0230		CAPACITOR-FXD 1UF +-20% 50VDC TA-SOLID	56289	150D105X0050A2
A15C16	0160-0168		CAPACITOR-FXD .1UF +-10% 200WVDC POLYE	56289	292P10492
A15C17	0180-0230		CAPACITOR-FXD 1UF +-20% 50VDC TA-SOLID	56289	150D105X0050A2
A15CR1	1901-0028	6	DIODE-PWR RECT 400V 750NA D0-29	04713	SR1358-9
A15CR2	1901-0028		DIODE-PWR RECT 400V 750NA D0-29	04713	SR1358-9
A15CR3	1901-0028		DIODE-PWR RECT 400V 750NA D0-29	04713	SR1358-9
A15CR4	1901-0028		DIODE-PWR RECT 400V 750NA D0-29	04713	SR1358-9
A15CR5	1901-0028		DIODE-PWR RECT 400V 750NA D0-29	04713	SR1358-9
A15CR6	1901-0028		DIODE-PWR RECT 400V 750NA D0-29	04713	SR1358-9
A15CR7	1901-0683	1	DIODE-HV RECT 10KV 5NA 25ONS	28480	1901-0683

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A15DS1	2140-0013	2	LAMP-GLOW T-2 BULB 57V	74276	NE23A
A15DS2	2140-0013		LAMP-GLOW T-2 BULB 57V	74276	NE23A
A15E1	2110-0269	4	FUSEHOLDER, CLIP TYPE .25 FUSE	91506	6008-32CN
A15F1	2110-0007	2	FUSE 1A 250V SLO-BLO 1.25X.25UL	71400	MDL-1
A15L1	9140-0171	1	COIL-FXD MOLDED RF CHOKE 40UH 10%	06560	10608-1
A15L2	9140-0210	1	COIL-FXD MOLDED RF CHOKE 100UH 5%	24226	15/103
A15L3	9140-0129	1	COIL-FXD MOLDED RF CHOKE 220UH 5%	24226	15/223
A15MP1	5040-0402	1	MOUNT: TRANSFORMER	28480	5040-0402
A15MP2	5040-0430	1	MOUNT: TRANSFORMER	28480	5040-0430
A15Q1	1854-0071		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A15Q2	1853-0066	1	TRANSISTOR PNP SI T0-92 PD=200MW	28480	1853-0066
A15R1	0684-1021		RESISTOR 1K 10% .25W CC	01121	CB1021
A15R2	2100-3253		RESISTOR-VAR TRMR 50K OHM 10% C TOP ADJ	73138	72PR50K
A15R3	0757-0485	1	RESISTOR 681K 1% .125W F TC=0+/-100	24546	NA4
A15R4	0684-1031		RESISTOR 10K 10% .25W CC	01121	CB1031
A15R5	0684-2221		RESISTOR 2.2K 10% .25W CC	01121	CB2221
A15R6	0684-2221		RESISTOR 2.2K 10% .25W CC	01121	CB2221
A15R7	0698-0061	1	RESISTOR 55.5 1% .25W F TC=0+/-100	91637	CMF-1/4-T1-55R5-F
A15R8	0684-2221		RESISTOR 2.2K 10% .25W CC	01121	CB2221
A15R9	0684-4721		RESISTOR 4.7K 10% .25W CC	01121	CB4721
A15R10	0683-1065	1	RESISTOR 10M 5% .25W FC TC=-900/+1100	01121	CB1065
A15R11	0687-1531	1	RESISTOR 15K 10% .5W CC TC=0+765	01121	EB1531
A15R12	0687-3301	1	RESISTOR 33 10% .5W CC TC=0+412	01121	EB3301
A15R13	0698-8018	1	RESISTOR 30M 1% 3W CP TC=0+/-100	03888	PVC175-3-T0-3004-F
A15R14	0684-6831	1	RESISTOR 68K 10% .25W FC TC=-400/+800	01121	CB6831
A15R15	0698-5353	1	RESISTOR 8.25M 5% 1W CF TC=-360/-700	28480	0698-5353
A15R16	0698-6580	1	RESISTOR 16.25M 5% 1W CF TC=-360/-700	28480	0698-6580
A15R17	0687-1011	1	RESISTOR 100 10% .5W CC TC=0+529	01121	EB1011
A15R18	0687-5611	1	RESISTOR 560 10% .5W CC TC=0+529	01121	EB5611
A15R19			NOT ASSIGNED		
A15R20	0683-2265	1	RESISTOR 22M 5% .25W FC TC=-900/+1200	01121	CB2265
A15R21	0757-0488		RESISTOR 909K 1% .125W F TC=0+/-100	24546	NA4
A15R22	0757-0469	1	RESISTOR 150K 1% .125W F TC=0+/-100	24546	C4-1/8-T0-1503-F
A15R23	0684-1041		RESISTOR 100K 10% .25W CC	01121	CB1041
A15R24	0684-1041		RESISTOR 100K 10% .25W CC	01121	CB1041
A15R25	0684-3931		RESISTOR 39K 10% .25W FC TC=-400/+800	01121	CB3931
A15R26	2100-3355	1	RESISTOR-VAR TRMR 100K OHM 10% C SIDE ADJ	73138	72XR100K
A15R27	2100-3207	1	RESISTOR-TRMR 5K 10% C SIDE-ADJ 1-TURN	32997	86X-1-502
A15R28	0684-1011		RESISTOR 100 10% .25W CC	01121	CB1011
A15R29	0757-0914	1	RESISTOR 390 2% .125W F TC=0+/-100	24546	C4-1/8-T0-391-G
A15R30	0684-4721	1	RESISTOR 4.7K 10% .25W FC TC=-400/+700	01121	CB4721
A15R31	0757-0453		RESISTOR 30.1K 1% .125W F TC=0+/-100	24546	C4-1/8-T0-3012-F
A15R32	0757-0471	1	RESISTOR 182K 1% .125W F TC=0+/-100	24546	C4-1/8-T0-1823-F
A15T1	01740-61101	1	TRANSFORMER ASSY, H.V.	28480	01740-61101
A15U1	1826-0167	1	IC CA3094AT SWITCH	02735	CA3094AT
A15VR1	1902-3256	1	DIODE-ZNR 23.7V 5% D0-7 PD=.4W TC=+.076%	04713	SZ 10939-290
A15XA12	1251-0589		CONNECTOR 10-PIN F POST TYPE	27264	09-52-3101
A16	01740-66529	1	BOARD ASSY, LV POWER SUPPLY	28480	01740-66529
A16C1	0140-0208	1	CAPACITOR-FXD 680PF +/-5% 300WVDC MICA	72136	DM15F681J0300WV1CR
A16C2	0160-0168		CAPACITOR-FXD .1UF +/-10% 200WVDC POLYE	56289	292P10492
A16C3	0180-1827	1	CAPACITOR-FXD 50UF +50-10% 25VDC AL	56289	39D506F250JE4
A16C4	0180-0089	1	CAPACITOR-FXD 10UF +50-10% 150VDC AL	56289	30D106F150D2
A16C5	0180-1886	1	CAPACITOR-FXD 500UF +75-10% 75VDC AL	56289	39D507G075HL4
A16C6	0180-0091	1	CAPACITOR-FXD 10UF +50-10% 100VDC AL	56289	30D106F100DC2
A16C7	0180-2500	1	CAPACITOR-FXD 1500UF +50-10% 16VDC AL	28480	0180-2500
A16C8	0180-0583	1	CAPACITOR-FXD 6000UF +75-10% 30VDC AL	28480	0180-0583
A16C9	0160-2211	3	CAPACITOR-FXD 510PF +/-5% 300WVDC MICA	28480	0160-2211
A16C10	0180-0059	2	CAPACITOR-FXD 10UF +75-10% 25VDC AL	56289	30D106G025BB2
A16C11	0180-0443	1	CAPACITOR-FXD 5300UF +75-10% 15VDC AL	28480	0180-0443
A16C12	0160-2211		CAPACITOR-FXD 510PF +/-5% 300WVDC MICA	28480	0160-2211
A16C13	0180-0341	1	CAPACITOR-FXD 25UF +75-10% 12VDC AL	56289	30D256G012BB2
A16C14	0180-0576	1	CAPACITOR-FXD 3500UF +75-10% 30VDC AL	56289	39D596
A16C15	0160-2211		CAPACITOR-FXD 510PF +/-5% 300WVDC MICA	28480	0160-2211
A16C16	0180-0059		CAPACITOR-FXD 10UF +75-10% 25VDC AL	56289	30D106G025BB2
A16C17	0180-0039	1	CAPACITOR-FXD 100UF +75-10% 12VDC AL	56289	30D107G012CC2
A16C18	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A16C19	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A16C20	0180-0106		CAPACITOR-FXD 60UF +/-20% 6VDC TA SOLID	56289	150D606X0006B2
A16CR1	1906-0006	5	DIODE-MULT FULL WAVE BRIDGE RECTIFIER	28480	1906-0006
A16CR2	1906-0006		DIODE-MULT FULL WAVE BRIDGE RECTIFIER	28480	1906-0006
A16CR3	1906-0006		DIODE-MULT FULL WAVE BRIDGE RECTIFIER	28480	1906-0006
A16CR4	1906-0048	1	DIODE-FULL WAVE BRIDGE 100V 5A	83701	PE10
A16CR5	1906-0006		DIODE-MULT FULL WAVE BRIDGE RECTIFIER	28480	1906-0006
A16CR6	1906-0006		DIODE-MULT FULL WAVE BRIDGE RECTIFIER	28480	1906-0006
A16CR7	1901-0040		DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A16E1	2110-0269		FUSEHOLDER, CLIP TYPE .25 FUSE	91506	6008-32CN
A16P1	1251-3902	1	CONNECTOR 12-PIN M POST TYPE	27264	09-65-1121
A16P2	1251-3401	1	CONNECTOR 15-PIN M POST TYPE	27264	09-65-1151
A16P3	1251-3901		CONNECTOR 15-PIN M POST TYPE	27264	09-65-1151
A16P4	1251-3750		CONNECTOR 10-PIN M POST TYPE	27264	09-65-1101
A16Q1	1853-0336	2	TRANSISTOR PNP SI PD=625MW FT=50MHZ	04713	MPSA92

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A16Q2	1853-0336		TRANSISTOR PNP SI PD=625MW FT=50MHZ	04713	MPSA92
A16Q3	1854-0215		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611
A16Q4	1854-0575	1	TRANSISTOR NPN SI PD=625MW FT=50MHZ	04713	MPS-A42
A16Q5	1853-0080	2	TRANSISTOR PNP SI PD=300MW FT=30MHZ	28480	1853-0080
A16Q6	1853-0080	2	TRANSISTOR PNP SI PD=300MW FT=30MHZ	28480	1853-0080
A16Q7	1854-0215		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611
A16Q8	1854-0358	1	TRANSISTOR NPN SI PD=310MW FT=60MHZ	28480	1854-0358
A16Q9	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A16Q10	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	24880	1853-0036
A16Q11	1853-0049		TRANSISTOR PNP SI CHIP PD=310MW	28480	1853-0049
A16Q12	1853-0084		TRANSISTOR PNP 2N4918 SI PD=30W FT=3MHZ	28480	1853-0084
A16R1	0757-0454		RESISTOR 33.2K 1% .125W F	24546	C4-1/8-T0-3322-F
A16R2	0699-0003	1	RESISTOR 8.2 10% .5W CC TC=0+412	01121	EB82G1
A16R3	0684-1241		RESISTOR 120K 10% .25W F C TC=-800/900	01121	CB1241
A16R4	0684-1031		RESISTOR 10K 10% .25W CC	01121	CB1031
A16R5	0698-3455		RESISTOR 261K 1% .125W F	16299	C4-1/8-T0-2613-F
A16R6	0698-4495		RESISTOR 37.4K 1% .125W F	24546	C4-1/8-T0-3742-F
A16R7	0684-1021		RESISTOR 1K 10% .25W CC	01121	CB1021
A16R8	0684-1041		RESISTOR 100K 10% .25W CC	01121	CB1041
A16R9	0757-0431		RESISTOR 2.43K 1% .125W F	24546	C4-1/8-T0-2431-F
A16R10	0811-1668	2	RESISTOR 1.5 5% 2W PW TC=0+-400	75042	BWH2-1R5-J
A16R11	0684-1231		RESISTOR 12K 10% .25W FC TC=-400/+800	01121	CB1231
A16R12	0684-1031		RESISTOR 10K 10% .25W CC	01121	CB1031
A16R13	0757-0450	1	RESISTOR 22.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2212-F
A16R14	0698-5437	1	RESISTOR 12K .1% .125W F TC=0+-50	24546	NC55
A16R15	0684-1021		RESISTOR 1K 10% .25W CC	01121	CB1021
A16R16	0684-4731		RESISTOR 47K 10% .25W CC	01121	CB4731
A16R17			NOT ASSIGNED		
A16R18			NOT ASSIGNED		
A16R19			NOT ASSIGNED		
A16R20	2100-3253		RESISTOR-VAR TRMR 50K OHM 10% C TOP ADJ	73138	72PR50K
A16R21	0684-8231	1	RESISTOR 82K 10% .25W FC TC=-400/+800	01121	CB8231
A16R22	0687-4721	1	RESISTOR 4.7K 10% .5W CC TC=0+647	01121	EB4721
A16R23	0757-0428		RESISTOR 1.62K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1621-F
A16R24	0811-1668		RESISTOR 1.5 5% 2W PW TC=0+-400	75042	BWH2-1R5-J
A16R25	0757-0433		RESISTOR 3.32K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3321-F
A16R26	2100-0554		RESISTOR-VAR TRMR 500 OHM 10% C TOP ADJ	73138	72PR500
A16R27	0757-1093		RESISTOR 3K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3001-F
A16R28	0698-3329		RESISTOR 10K .5% .125W F TC=0+-100	03888	PME55-1/8-T0-1002-D
A16R29	0698-5579	3	RESISTOR 5K .5% .125W F TC=0+-100	24546	C4-1/8-T0-5001-D
A16R30	0811-1666	1	RESISTOR 1 5% 2W PW TC=0+-800	75042	BWH2-1R0-J
A16R31	0684-3321		RESISTOR 3.3K 10% .25W CC	01121	CB3321
A16R32	0698-5579		RESISTOR 5K .5% .125W F TC=0+-100	24546	C4-1/8-T0-5001-D
A16R33	0698-5579		RESISTOR 5K .5% .125W F TC=0+-100	24546	C4-1/8-T0-5001-D
A16R34	0757-0431		RESISTOR 47K 10% .25W CC	01121	CB4731
A16R35	0811-1667		RESISTOR 1.2 5% 2W PW TC=0+-400	75042	BWH2-1R2-J
A16R36	0683-4715	2	RESISTOR 470 5% .25W FC TC=-400/+600	01121	CB4715
A16R37	0684-1011		RESISTOR 100 10% .25W CC	01121	CB1011
A16R38	0683-4715		RESISTOR 470 5% .25W FC TC=-400/+600	01121	CB4715
A16R39	0684-1011		RESISTOR 100 10% .25W CC	01121	CB1011
A16R40	0684-1041		RESISTOR 100K 10% .25W CC	01121	CB1041
A16R41	0757-0457		RESISTOR 47.5K 1% .125W F	24546	C4-1/8-T0-4752-F
A16R42	0684-1811		RESISTOR 180 10% .25W FC TC=-400/+600	01121	CB1811
A16R43	0757-0001		RESISTOR 13.3 1% .5W F TC=0+-100	19701	MFC-1/2-T0-13R3-F
A16S1	3101-0555	1	SWITCH-PB DPDT ALTN 4A 250VAC	28480	3101-0555
A16S2	3101-1914	1	SWITCH-SL 2-DPDT-NS STD 1.5A 250VAC PC	28480	3101-1914
A16U1	1820-0196	3	IC RGLTR	07263	723HC
A16U2	1820-0196		IC RGLTR	07263	723HC
A16U3	1820-0196		IC RGLTR	07263	723HC
A16VR1	1902-3048	1	DIODE-ZNR 3.48V 5% D0-7 PD=4W TC=-.058%	04713	SZ 10939-50
A16VR2	1902-0025		DIODE-ZNR 10V 5% D0-7 PD=4W TC=+.06%	04713	SZ 10939-182
A16VR3	1902-3036		DIODE-ZNR 3.16V 5% .4W MAX PD	04713	SZ 10939-38
A16VR4	1902-3082		DIODE-ZNR 4.64V 5% .4W MAX PD	04713	SZ 10939-86
A16XU1	1200-0475		SOCKET	22526	75060-005
A16XU2	1200-0475		SOCKET	22526	75060-005
A16XU3	1200-0475		SOCKET	22526	75060-005

See introduction to this section for ordering information

Table 6-3. List of Manufacturer Codes

MFR NO.	MANUFACTURER NAME	ADDRESS	ZIP CODE
00000	U.S.A. COMMON	ANY SUPPLIER OF USA	
00779	AMP INC	HARRISBURG PA	17105
0080A	ASSMAWN		
0086S	STETTNER-TRUSH INC	CAZENOVIA NY	13035
01121	ALLEN BRADLEY CO	MILWAUKEE WI	53212
01295	TEXAS INSTR INC SEMICOND CMPNT DIV	DALLAS TX	75231
02114	FERROXCUBE CORP	SAUGERTIES NY	12477
02735	RCA CORP SOLID STATE DIV	SOMMERSVILLE NJ	08876
03888	PYROFILM CORP	WHIPPANY NJ	07981
04713	MOTOROLA SEMICONDUCTOR PRODUCTS	PHOENIX AZ	85008
06560	AIRCO SPEER ELEK DIV AIR RDCN CO	NOGALES AZ	85621
07263	FAIRCHILD SEMICONDUCTOR DIV	MOUNTAIN VIEW CA	94040
11236	CTS OF BERNE INC	BERNE IN	46711
12697	CLAROSTAT MFG CO INC	DOVER NH	03820
13103	THERMALLOY CO	DALLAS TX	75247
16299	CORNING GL WK ELEC CMPNT DIV	RALEIGH NC	27604
17856	SILICONIX INC	SANTA CLARA CA	95050
19701	MEPCO/ELECTRA CORP	MINERAL WELLS TX	76067
24226	GOWANDA ELECTRONICS CORP	GOWANDA NY	14070
24546	CORNING GLASS WORKS (BRADFORD)	BRADFORD PA	16701
27014	NATIONAL SEMICONDUCTOR CORP	SANTA CLARA CA	95051
27264	MOLEX PRODUCTS CO	DOWNERS GROVE IL	60515
28480	HEWLETT-PACKARD CO CORPORATE HQ	PALO ALTO CA	94304
30983	MEPCO/ELECTRA CORP	SAN DIEGO CA	92121
32997	BOURNS INC TRIMPOT PROD DIV	RIVERSIDE CA	92507
56289	SPRAGUE ELECTRIC CO	NORTH ADAMS MA	01247
57771	STIMPSON EDWIN B CO INC	BROOKLYN NY	11205
6F364	CENTRE ENGINEERING INC	STATE COLLEGE PA	16801
71400	BUSSMAN MFG DIV OF MCGRAW-EDISON CO	ST LOUIS MO	63017
71785	TRW ELEK COMPONENTS CINCH DIV	ELK GROVE VILLAGE IL	60007
72136	ELECTRO MOTIVE MFG CO INC	WILLIAMTIC CT	06226
72982	ERIE TECHNOLOGICAL PRODUCTS INC	ERIE PA	16512
73138	BECKMAN INSTRUMENTS INC HELIPOT DIV	FULLERTON CA	92634
74276	SIGNALITE INC	NEPTUNE NJ	07753
74970	JOHNSON E F CO	WASECA MN	56093
75042	TRW INC PHILADELPHIA DIV	PHILADELPHIA PA	19108
84411	TRW CAPACITOR DIV	OGALLALA NE	69153
9D949	AMPHENOL SALES DIV OF BUNKER-RAMO	HAZELWOOD MO	63042
91506	AUGAT INC	ATTLEBORO MA	02703
91637	DALE ELECTRONICS INC	COLUMBUS NE	68601
95121	QUALITY COMPONENTS INC	ST MARYS PA	15857

See introduction to this section for ordering information

SECTION VII MANUAL CHANGES

7-1. INTRODUCTION.

7-2. This section contains information required to backdate or update this manual for a specific instrument. Descriptions of special and standard options are also provided in this section.

7-3. MANUAL CHANGES.

7-4. This manual applies directly to instruments having the same serial prefix shown on the manual title page. If the serial prefix of your instrument is not the same as the one on the title page, find your serial prefix in table 7-1 and make all changes to the manual that are listed for that serial prefix. When making changes listed in table 7-1, make the change with the highest number first. For example, if backdating changes 1, 2, and 3 are required for your serial prefix, do change 3 first, then change 2, and finally change 1. If the serial prefix of your instrument is not listed either on the title page or in table 7-1, refer to the enclosed MANUAL CHANGES sheet for updating information. Also, if a MANUAL CHANGES sheet is supplied, make all indicated ERRATA corrections.

Table 7-1. Manual Changes

Serial Prefix	Make Changes
1522A	7-4, 2, 1
1526A	7-2
1533A	7-3
1541A	7-4
1551A	7-5
1612A	7, 6
1616A	7

CHANGE 1


Table 6-2,

- A7 Option 101: Change to HP Part No. 01740-66518; BOARD ASSY:HORIZONTAL SWEEP; Mfr Code 28480; Mfr Part No. 01740-66518.
- A7C39: Change to HP Part No. 0160-2198; CAPACITOR-FXD 20 PF +—5% 300 WVDC MICA; Mfr Code 28480; Mfr Part No. 0160-2198.
- Delete: A7C49.
- A7L3 and A7L7: Change to HP Part No. 9140-0105; COIL-FXD MOLDED RF CHOKE 8.2 UH 10%; Mfr Code 24226; Mfr Part No. 15/821.
- A7R155: Change to HP Part No. 0684-1021; RESISTOR 1K 10% .25W CC TUBULAR; Mfr Code 01121; Mfr Part No. CB1021.

- Schematic 7,
Delete: A7C49.
- Figure 8-16,
Replace component locator in figure 8-16 with figure 7-1.
- Schematic 12,
Move A7C39 from present position, and insert between base of A7Q30 and ground. Change value to 20 pF.
- Change A7L3 and A7L7 to 8.2 μ H.
- Change A7R155 to 1K.

CHANGE 2


- Paragraph 5-51k and 5-56h; tables 5-6, 5-8, and 5-9,
Change A8R43 to A8C7.
- Table 5-7 and 5-9,
Change A9R28 to A9C5.
- Figure 5-5,
Change A8R43 to A8C7 and A9R28 to A9C5.
- Table 6-2,
Add: A3C79; HP Part No. 0150-0021; CAPACITOR-FXD .47 PF \pm 5% 500 WVDC TI DIOX; Mfr Code 95121, Mfr Part No. Type QC.
- A3R54 and A3R55: Change to HP Part No. 0757-0284; RESISTOR 150 1% .12 WF TUBULAR; Mfr Code 24546; Mfr Part No. C4-1/8-T0-151F.
- A8: Change to HP Part No. 01740-66510; BOARD ASSY, MAIN SWEEP; Mfr Code 28480; Mfr Part No. 01740-66510.
- A8C6: Change to HP Part No. 0160-3987; CAPACITOR-FXD 86 PF +—2% 500 WVDC MICA; Mfr Code 28480; Mfr Part No. 0160-3987.
- Add: A8C7; HP Part No. 0121-0434; CAPACITOR-V TRMR-AIR 2-19.3 PF 350 V; Mfr Code 74970; Mfr Part No. 189-0507-125.
- A8C13: Change to HP Part No. 0140-0149; CAPACITOR-FXD 470 PF +—5% 300 WVDC MICA; Mfr Code 72136; Mfr Part No. DM15F471J0300WV1CR.
- A8C14: Change to HP Part No. 0160-0157; CAPACITOR-FXD 4700 PF +—10% 200 WVDC POLYE; Mfr Code 56289; Mfr Part No. 292P47292.
- A8C15: Change to HP Part No. 0170-0040; CAPACITOR-FXD .047 UF +—10% 200 WVDC; Mfr Code 56289; Mfr Part No. 292P47392.
- A8C16: Change to HP Part No. 0180-0376; CAPACITOR-FXD .47 UF +—10% 35 VDC TA; Mfr Code 56289; Mfr Part No. 150D474X9035A2.
- A8C17: Change to HP Part No. 0180-0100; CAPACITOR-FXD 4.7 UF +—10% 35 VDC TA; Mfr Code 56289; Mfr Part No. 150D475X9035B2.
- A8C18: Change to HP Part No. 0180-0058; CAPACITOR-FXD 50 UF +—10% 25 VDC AL; Mfr Code 56289; Mfr Part No. 30D506G025CC2.

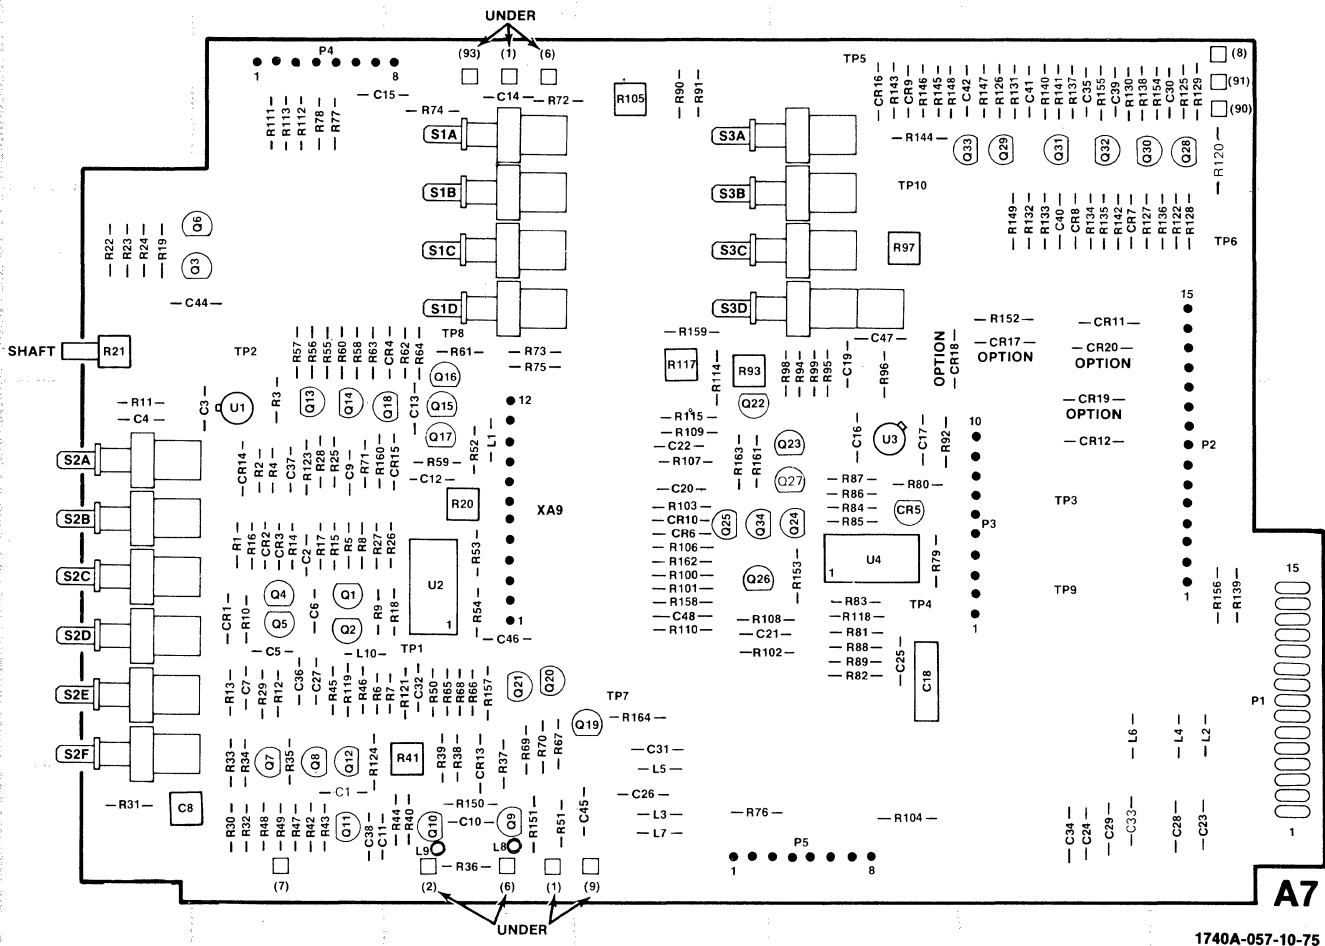

1740A-057-10-75

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	B-5	C40	F-2	P2	G-3	R2	B-3	R40	C-5	R78	B-1	R117	D-2	R155	F-1
C2	B-3	C41	F-1	P3	F-3	R3	B-3	R41	C-4	R79	E-3	R118	E-4	R156	G-4
C3	B-3	C42	F-1	P4	B-1	R4	B-3	R42	B-5	R80	E-3	R119	B-4	R157	C-4
C4	A-3	C44	B-2	P5	E-5	R5	B-3	R43	B-5	R81	E-4	R120	G-1	R158	D-4
C5	B-4	C45	D-5	Q1	B-4	R6	C-4	R44	C-5	R82	E-4	R121	C-4	R159	D-2
C6	B-4	C46	C-4	Q2	B-4	R7	C-4	R45	B-4	R83	E-4	R122	G-2	R160	B-3
C7	B-4	C47	E-2	Q3	B-2	R8	B-3	R46	B-4	R84	E-3	R123	B-3	R161	D-3
C8	A-1	C48	D-4	Q4	B-4	R9	C-4	R47	B-5	R85	E-3	R124	B-4	R162	D-3
C9	B-3	CR1	B-4	Q5	B-4	R10	B-4	R48	B-5	R86	E-3	R125	G-1	R163	D-3
C10	C-5	CR2	B-3	Q6	B-2	R11	A-3	R49	B-5	R87	E-3	R126	F-1	R164	D-4
C11	B-5	CR3	B-3	Q7	B-4	R12	B-4	R50	C-4	R88	E-4	R127	F-2	S1A	C-1
C12	C-3	CR4	C-2	Q8	B-4	R13	B-4	R51	C-5	R89	E-4	R128	G-2	S1B	C-2
C13	C-3	CR5	E-3	Q9	C-5	R14	B-3	R52	C-3	R90	D-1	R129	G-1	S1C	C-2
C14	C-1	CR6	D-3	Q10	C-5	R15	B-3	R53	C-3	R91	D-1	R130	F-1	S1D	C-2
C15	C-1	CR7	F-2	Q11	B-5	R16	B-3	R54	C-4	R92	E-3	R131	F-1	S2A	A-3
C16	E-3	CR8	F-2	Q12	B-4	R17	B-3	R55	B-2	R93	D-2	R132	F-2	S2B	A-3
C17	E-3	CR9	E-1	Q13	B-3	R18	C-4	R56	B-2	R94	E-2	R133	F-2	S2C	A-4
C18	E-4	CR10	D-3	Q14	B-3	R19	A-2	R57	B-2	R95	E-2	R134	F-2	S2D	A-4
C19	E-2	CR11	F-2	Q15	C-3	R20	C-3	R58	B-2	R96	E-2	R135	F-2	S2E	A-4
C20	D-3	CR12	F-3	Q16	C-2	R21	A-2	R59	C-3	R97	E-2	R136	G-2	S2F	A-4
C21	D-4	CR13	C-4	Q17	C-3	R22	A-2	R60	B-2	R98	E-2	R137	F-1	S3A	D-1
C22	D-3	CR14	B-3	Q18	C-3	R23	A-2	R61	C-2	R99	E-2	R138	F-1	S3B	D-2
C23	G-5	CR15	C-3	Q19	D-4	R24	A-2	R62	C-2	R100	D-4	R139	G-4	S3C	D-2
C24	F-5	CR16	E-1	Q20	C-4	R25	B-3	R63	B-2	R101	D-4	R140	F-1	S3D	D-2
C25	E-4	CR17	F-2	Q21	C-4	R26	C-3	R64	C-2	R102	D-4	R141	F-1	TP1	C-4
C26	D-5	CR18	E-2	Q22	D-3	R27	C-3	R65	C-4	R103	D-3	R142	F-2	TP2	B-2
C27	B-4	CR19	F-3	Q23	E-3	R28	B-3	R66	C-4	R104	E-5	R143	E-1	TP3	F-3
C28	G-5	CR20	F-2	Q24	E-3	R29	B-4	R67	C-4	R105	D-1	R144	E-1	TP4	E-4
C29	F-5	L1	C-3	Q25	D-3	R30	B-5	R68	C-4	R106	D-3	R145	E-1	TP5	E-1
C30	G-1	L2	G-4	Q26	D-4	R31	A-5	R69	C-4	R107	D-3	R146	E-1	TP7	D-4
C31	D-4	L3	D-5	Q27	E-3	R32	B-5	R70	C-4	R108	D-4	R147	F-1	TP8	C-2
C32	C-4	L4	G-4	Q28	G-1	R33	B-4	R71	B-3	R109	D-3	R148	E-1	TP9	F-4
C33	F-5	L5	D-5	Q29	F-1	R34	B-4	R72	C-1	R110	D-4	R149	F-2	TP10	E-1
C34	F-5	L6	F-4	Q30	F-1	R35	B-4	R73	D-2	R111	B-1	R150	C-5	U1	B-3
C35	F-1	L7	D-5	Q31	F-1	R36	C-5	R74	C-1	R112	B-1	R151	C-5	U2	C-4
C36	B-4	L8	C-5	Q32	F-1	R37	C-4	R75	D-2	R113	B-1	R152	F-2	U3	E-3
C37	B-3	L9	C-5	Q33	F-1	R38	C-4	R76	D-5	R114	D-2	R153	E-4	U4	E-3
C38	B-5	L10	B-4	Q34	D-3	R39	C-4	R77	B-1	R115	D-3	R154	G-1	XA9	C-3
C39	F-1	P1	G-4	R1	B-3										

Figure 7-1. Replacement for Component Locator in Figure 8-16

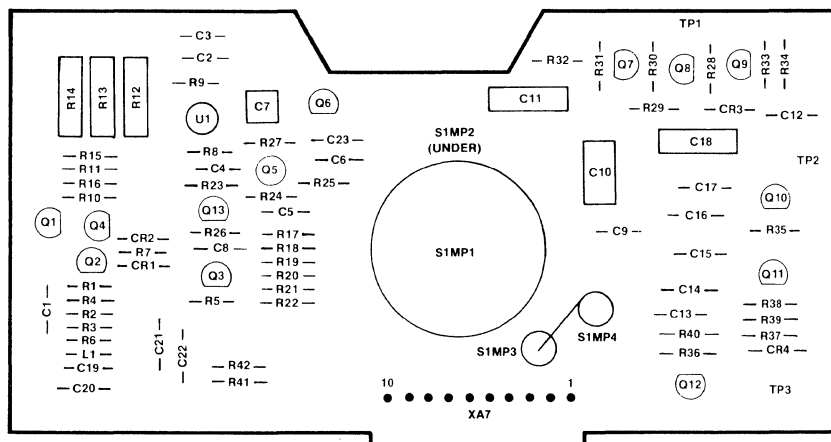

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	A 2	Q3	B 2	R21	B 2
C2	B 1	Q4	A 2	R22	B 2
C3	B 1	Q5	B 2	R23	B 2
C4	B 2	Q6	B 1	R24	B 2
C5	B 2	Q7	D 1	R25	B 2
C6	B 2	Q8	D 1	R26	B 2
C7	B 1	Q9	E 1	R27	B 1
C8	B 2	Q10	E 2	R28	D 1
C9	D 2	Q11	E 2	R29	D 1
C10	D 2	Q12	D 3	R30	D 1
C11	C 1	Q13	B 2	R31	D 1
C12	E 1	R1	A 2	R32	D 1
C13	D 2	R2	A 2	R33	E 1
C14	D 2	R3	A 2	R34	E 1
C15	D 2	R4	A 2	R35	E 2
C16	D 2	R5	B 2	R36	D 3
C17	D 2	R6	A 3	R37	E 2
C18	D 2	R7	A 2	R38	E 2
C19	A 3	R8	B 2	R39	E 2
C20	A 3	R9	B 1	R40	D 2
C21	B 3	R10	A 2	R41	B 3
C22	B 3	R11	A 2	R42	B 3
C23	B 2	R12	A 1	SIMP1	C 2
CR1	A 2	R13	A 1	SIMP2	C 2
CR2	A 2	R14	A 1	SIMP3	D 3
CR3	E 1	R15	A 2	SIMP4	D 2
CR4	E 3	R16	A 2	TP1	D 1
L1	A 3	R17	B 2	TP2	E 2
Q1	A 2	R18	B 2	TP3	E 3
Q2	A 2	R19	B 2	U1	B 1
		R20	B 2	XA7	C 3

A8

1740A-059-10-75

Figure 7-2. Replacement for Component Locator in Figure 8-17

A8R7: Change to HP Part No. 0757-0429; RESISTOR 1.82K 1% .125 WF; Mfr Code 24546; Mfr Part No. C4-1/8-T0-1821-F.

Add: A8R10 and A8R11; HP Part No. 0757-0431; RESISTOR 2.43K 1% .12 WF; Mfr Code 24546; Mfr Part No. C4-1/8-T0-2431-F.

A8R25: Change to HP Part No. 0684-6801; RESISTOR 68 ohm 10% .25 WF; Mfr Code 01121; Mfr Part No. CB5801.

Delete: A8R43.

A9: Change to HP Part No. 01740-66509; BOARD ASSY, DELAYED SWEEP; Mfr Code 28480; Mfr Part No. 01740-66509.

A9C4: Change to HP Part No. 0140-0193; CAPACITOR-FXD 82 PF +5% 300 WVDC MICA; Mfr Code 72136; Mfr Part No. DM15E820J0300WV1CR.

Add: A9C5; HP Part No. 0121-0434; CAPACITOR-V TRMR-AIR 2-19.3 PF 350 V; Mfr Code 74970; Mfr Part No. 189-0507-125.


Add: A9R8 and A9R9; HP Part No. 0757-0431; RESISTOR 2.43K 1% .12 WF; Mfr Code 24546; Mfr Part No. C4-1/8-T0-2431-F.

Delete: A9R28.

Figure 8-13, Component Locator,

Add: A3C79 between A3R54 and A3R55.

Schematic 4,

Add: A3C79 between point  and junction of A3C11 and A3L3.

Change: A3R54 and A3R55 to 150 ohms.

Figure 8-17,

Replace component locator in figure 8-17 with figure 7-2.

Schematic 8,

Change: A8C6 to 86 PF.

Add: A8C7 2.0 - 19.3 PF capacitor, .05 - 2 μSEC, in parallel with A8C6.

Change: A8C13 to 470 PF.

Change: A8C14 to 4700 PF.

Change: A8C15 to 0.047 UF.

Change: A8C16 to 0.47 UF.

Change: A8C17 to 4.7 UF.

Change: A8C18 to 50 UF.

Change: A8R7 to 1.82K.

Add: A8R10 2.43K in series with A8R11 2.43K to replace A8R43. The junction of A8R10 and A8R11 is connected to the same contact on A8S1 as the wiper of A8R43.

Change: A8R25 to 68 ohms.

Figure 8-19,

Replace component locator in figure 8-19 with figure 7-3.

Schematic 10,

Change: A9C4 to 82 PF.

Add: A9C5 2.0 - 19.3 PF capacitor, .05 - 2 μSEC, in parallel with A9C4.

Add: A9R8 2.43K in series with A9R9 2.43K to replace A9R28. The junction of A9R8 and A9R9 is connected to the same contact on A8S1 as the wiper of A9R28.

CHANGE 3


Table 6-2,

A7: Change to HP Part No. 01740-66519; BOARD ASSY:HORIZONTAL SWEEP; Mfr Code 28480; Mfr Part No. 01740-66519.

A7 Option 101: Change to HP Part No. 01740-66520; BOARD ASSY:HORIZONTAL SWEEP; Mfr Code 28480; Mfr Part No. 01740-66520.

Add: A7CR14; HP Part No. 1901-0376; DIODE-GEN PRP 35 V MAX VRM 50 MA; Mfr Code 28480; Mfr Part No. 1901-0376.

Delete: A7CR21, A7CR22, A7CR23, A7R165, A7R166, A7R167, and A7R168.

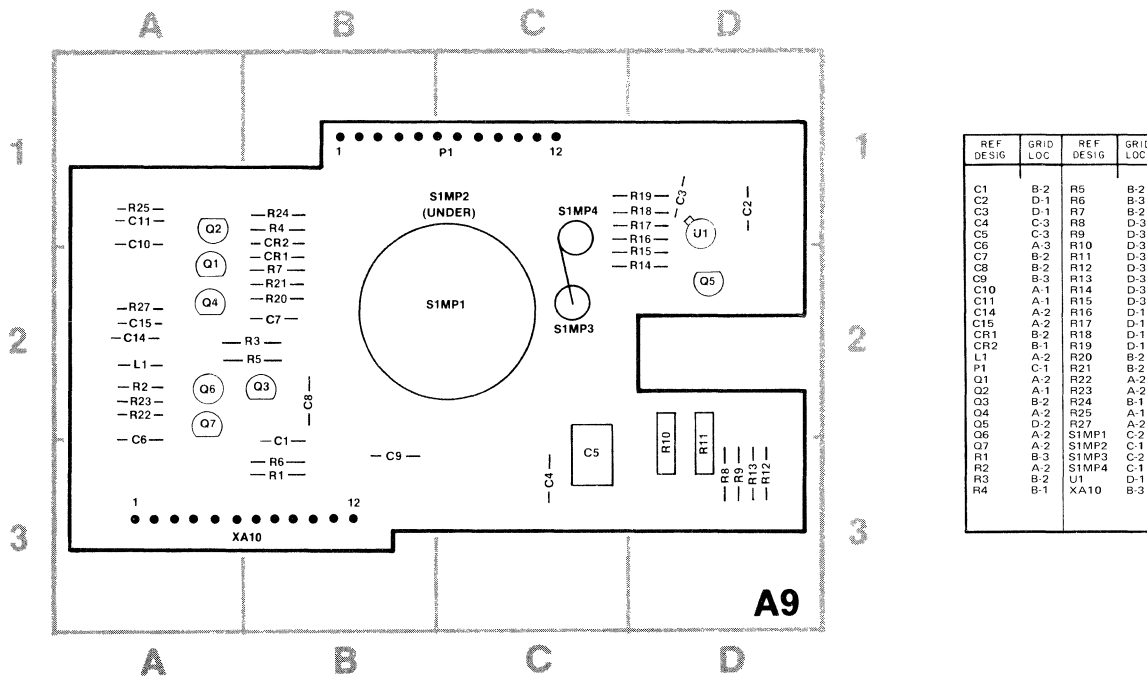

1740A-058-10-75

Figure 7-3. Replacement for Component Locator in Figure 8-19

A7P4: Change to HP Part No. 1251-3071; CONNECTOR 8-PIN POST TYPE; Mfr Code 27264; Mfr Part No. 09-56-1081 (2183-8A).

A7R65, A7R66, and A7R68: Change to HP Part No. 0684-4711; RESISTOR 470 ohms 10% .25 W CC; Mfr Code 01121; Mfr Part No. CB4711.

A7R74: Change to HP Part No. 0684-8221; RESISTOR 8.2K 10% .25W CC; Mfr Code 01121; Mfr Part No. CB8221.

A7R97: Change to HP Part No. 2100-1788; RESISTOR-TRMR 500 10% C TOP-ADJ 1-TURN; Mfr Code 30983; Mfr Part No. ET50W501.

Schematic 7,

Add: A7CR14 between pins 3 and 4 of A7U1 (cathode to pin 3).

Delete: A7CR21, A7CR22, and A7CR23.

Delete: Pin 1 on A7P4, Change pin 2 to pin 1, and show cathode of DS4 to chassis ground through (0) wire.

Change: A7R74 to 8.2K.

Delete: A7R97, A7R165, A7R166, A7R167, and A7R168.

Figure 8-16,

Replace component locator in figure 8-16 with figure 7-1, and add A7C49 between A7R53 and A7XA9. Add following note to figure 7-1: "Option 101: BOARD NUMBER CHANGES TO 01740-66520 AND CR17-20 ARE ADDED." Change board number from 66518 to 66519.

Schematic 9,

Change: Pin 7 to 6, pin 8 to 7, and pin 9 to 8 on A7P4.

Schematic 11,

Add: A7R97 500 ohm variable resistor, A VS B CAL, between A7C47 and A7R98.

Change: Pin 6 to 5, pin 5 to 4, pin 4 to 3, and pin 3 to 2 on A7P4.

CHANGE 4

Table 6-2,

A11C13: Change to HP Part No. 0150-0048, CAPACITOR-FXD .22 PF +—5% 500WVDC TI DIOX, Mfr Code 95121, Mfr Part No. Type QC.

Delete: A11C14.

A11R6: Change to HP Part No. 0683-0395, RESISTOR 3.9 5% .25W CC, Mfr Code 01121, Mfr Part No. CB39G5.

A11R11: Change to HP Part No. 0757-0457, RESISTOR 47.5K 1% .125WF TC=0+—100, Mfr Code 24546, Mfr Part No. C4-1/8-T0-4752-F.

A11R17: Change to HP Part No. 0757-0457, RESISTOR 47.5K 1% .125WF TC=0+—100, Mfr Code 24546, Mfr Part No. C4-1/8-T0-4752-F.

A11R20: Change to HP Part No. 0683-0395, RESISTOR 3.9 5% .25W FC TC=—400/+500, Mfr Code 01121, Mfr Part No. CB39G5.

Schematic 11,

A11C13: Change value to 0.22 PF.

Delete: A11C14.

A11R6: Change value to 3.9 ohms.

A11R20: Change value to 3.9 ohms.

CHANGE 5

Table 6-2,

A5MP1: Change HP Part No. and Mfr Part No. to 01740-20504.

CHANGE 6

Table 6-2,

W8: Change HP Part No. and Mfr Part No. to 01740-61612.

A16: Change HP Part No. and Mfr Part No. to 01740-66501.

Delete: A16C20, A16Q11, and A16Q12.

Add: A16R17, HP Part No. 0684-1021, RESISTOR 1K 10% .25W CC, Mfr Code 01121, Mfr Part No. CB1021.

Add: A16R18, HP Part No. 0684-1021, RESISTOR 1K 10% .25W CC, Mfr Code 01121, Mfr Part No. CB1021.

Add: A16R19, HP Part No. 0764-0033, RESISTOR 33 5% 2W MO TC=0+—200, Mfr Code 24546, Mfr Part No. FP42-Z-T00-3302-J.

Delete: A16R41, A16R42, A16R43, A16VR3, and A16VR4.

Figure 8-10,

Replace figure 8-10 with figure 7-4.

Schematic 1,

Make changes shown in figure 7-5.

CHANGE 7

Paragraph 2-9,

Replace existing paragraph with the following paragraph and delete figure 2-2.

2-9. The instrument is normally set at the factory for 120-volt operation. To operate the instrument from any other ac power source, proceed as follows:

a. Verify that Model 1740A power cable is not connected to any input power source.

b. Remove bottom cover from the Model 1740A.

c. On Low-voltage Power Supply A16, set Line Selector Switch A16S2, to required positions for input ac power source.

d. For 220-V inputs, replace fuse A16F1 with 0.5 A slow-blow fuse supplied with instrument.

e. Replace bottom cover.

f. Connect Model 1740A input power cable to input power source.

g. After changing the line voltage selection switch setting, remove Line-voltage Plate if applicable and reinstall it so proper line voltage is visible.

Figure 3-1,

Replace rear-panel photo with figure 7-6 and delete item 66, FUSE.

Table 6-2,

Delete F1, HP Part No. 2110-0007, and F1, HP Part No. 2110-0202.

MP44: Change HP Part No. and Mfr Part No. to 01740-00204.

MP56: Change HP Part No. and Mfr Part No. to 01740-04103.

MP57: Change HP Part No. and Mfr Part No. to 01740-04104.

MP60: Change HP Part No. and Mfr Part No. to 01740-20502.

Delete: A7CR24 and A7R169.

A7R78: Change to HP Part No. 0757-0439, RESISTOR 6.81K 1% .125WF, Mfr Code 24546, Mfr Part No. C4-1/8-T0-6811-F.

Add: A16E1, HP Part No. 2110-0269, FUSE HOLDER, CLIP TYPE .25 FUSE, Mfr Code 91506, Mfr Part No. 6008-32CN.

Add: A16F1, HP Part No. 2110-0007, FUSE 1A 250 V SLO-BLO 1.25 x .25 UL, Mfr Code 71400, Mfr Part No. MDL-1.

Add: A16F1, HP Part No. 2110-0202, FUSE .5A 250 V SLO-BLO 1.25 x .25 UL, Mfr Code 71400, Mfr Part No. MDL-1/2.


Figure 5-5,

Delete adjustment A7R169, DELAY START.

Figure 6-1,

Delete: F1 and XF1.

Add: MP58 as shown below.

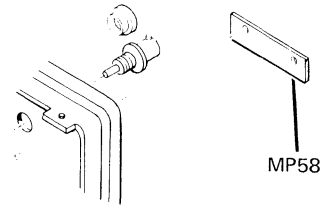

Schematic 1,

Change line input as shown below.


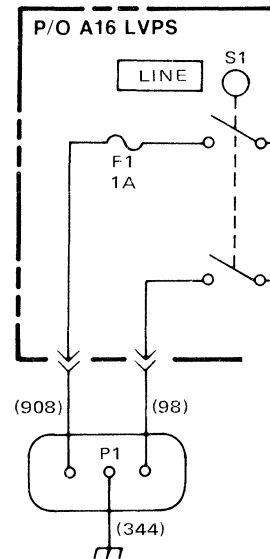


Figure 8-10,

Add A16F1 (location E-4) directly below A16S1.

Schematic 7,


Delete A7CR24 and change SINGLE switch wiring as shown below.

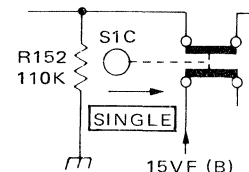

Schematic 9,

Delete: A7R169.


Change A7R78 to 6810 ohms and show connection to ground.

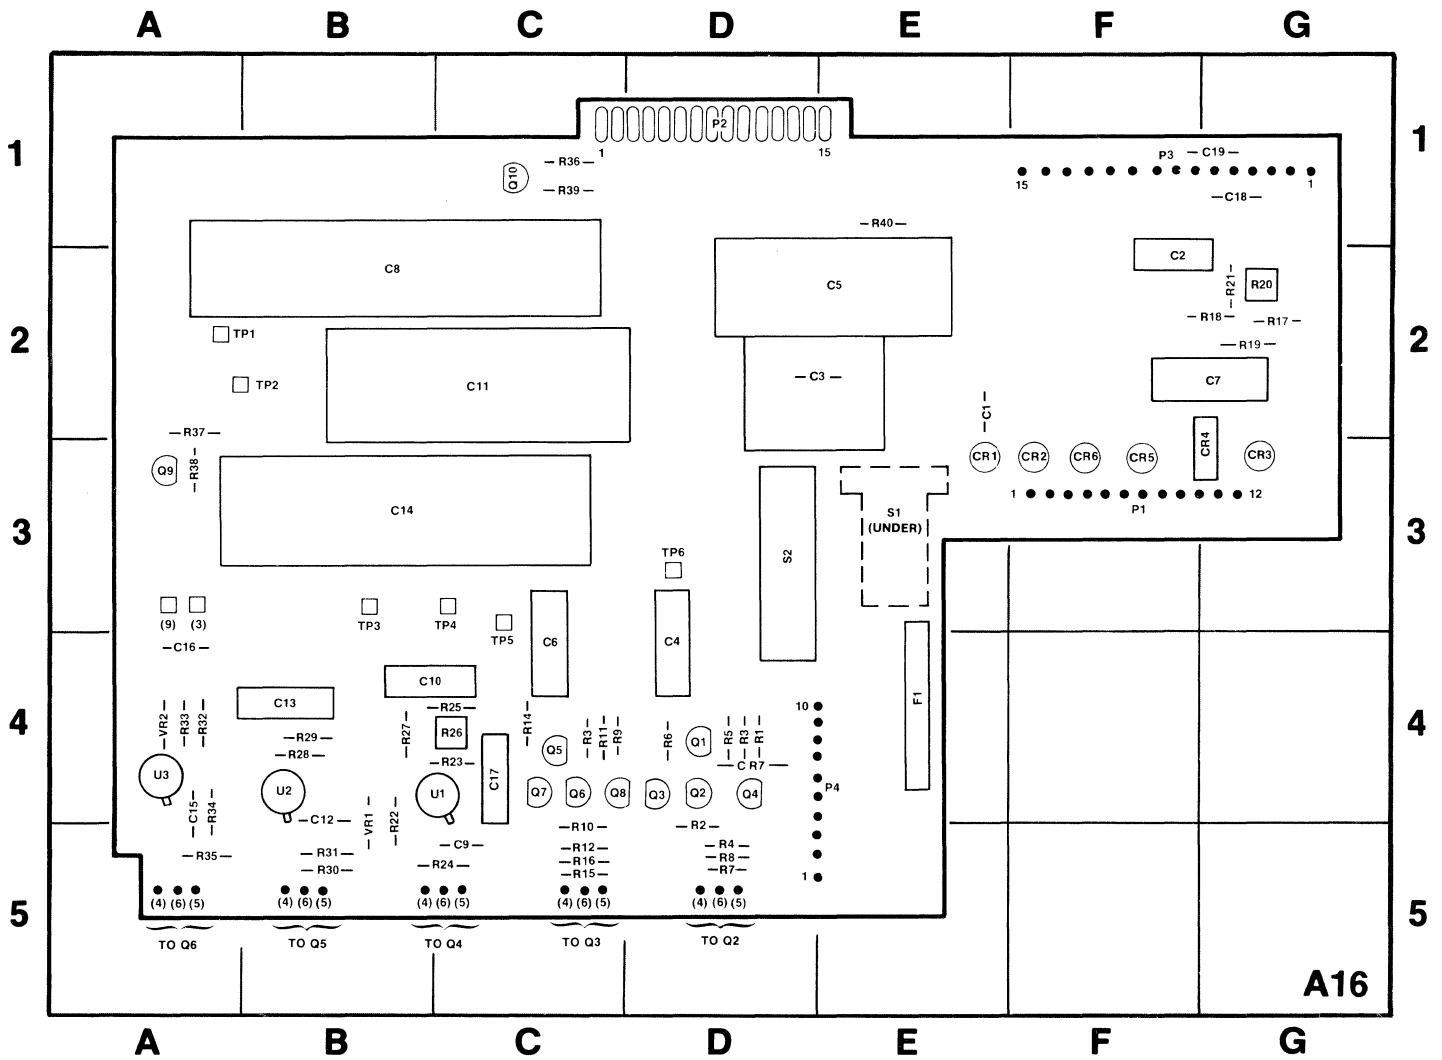

1740A-068-07-76


REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	E-2	C15	A-4	P1	F-3	Q10	C-1	R13	C-4	R26	C-4	R40	C-1
C2	F-2	C16	A-4	P2	D-1	R1	D-4	R14	C-4	R27	C-4	S1	E-3
C3	E-2	C17	C-4	P3	F-1	R2	D-4	R15	C-5	R28	B-4	S2	D-3
C4	D-3	C18	G-1	P4	E-4	R3	D-4	R16	C-5	R29	B-4	TP1	A-2
C5	E-2	C19	G-1	Q1	D-4	R4	D-5	R17	G-2	R30	B-5	TP2	B-2
C6	C-3	CR1	E-3	Q2	D-4	R5	D-4	R18	G-2	R31	B-5	TP3	B-3
C7	G-2	CR2	F-3	Q3	D-4	R6	D-4	R19	G-2	R32	A-4	TP4	C-3
C8	B-2	CR3	G-3	Q4	D-4	R7	D-5	R20	G-2	R33	A-4	TP5	C-3
C9	C-5	CR4	G-3	Q5	C-4	R8	D-5	R21	G-2	R34	A-4	TP6	D-3
C10	C-4	CR5	F-3	Q6	C-4	R9	D-4	R22	B-5	R35	A-5	U1	C-4
C11	C-2	CR6	F-3	Q7	C-4	R10	C-5	R23	C-4	R36	C-1	U2	B-4
C12	B-4	CR7	D-4	Q8	D-4	R11	C-4	R24	C-5	R37	A-2	U3	A-4
C13	B-4	F1	E-4	Q9	A-3	R12	C-5	R25	C-4	R38	A-3	VR1	B-5
C14	B-3											VR2	A-4

Figure 7-4. Replacement for Component Locator in Figure 8-10

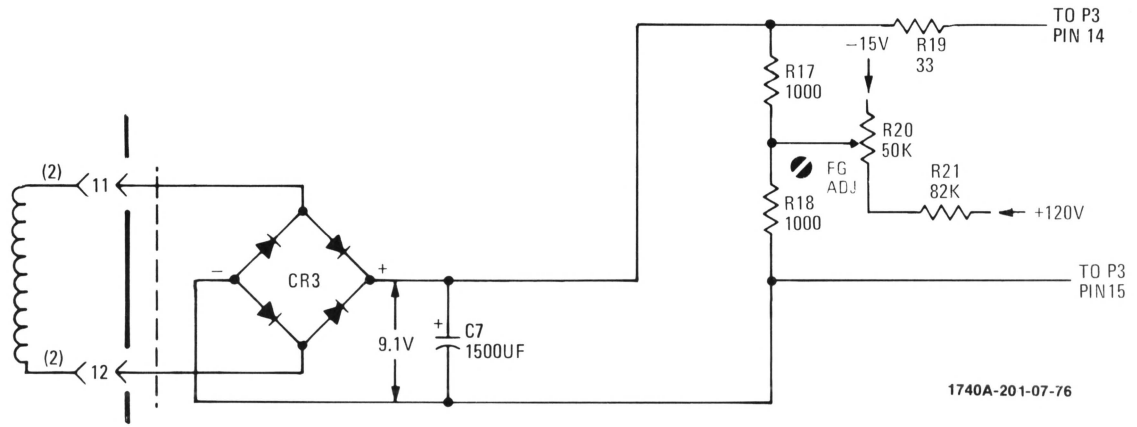

1740A-201-07-76

Figure 7-5. Changes to Schematic 1

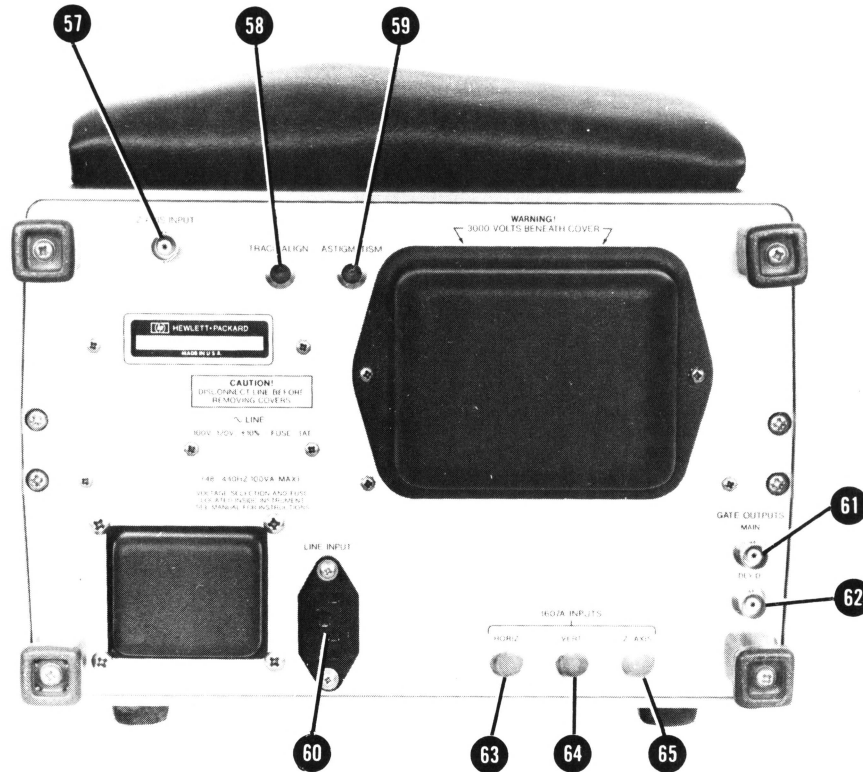

1740A-203-07-76

Figure 7-6. Rear-panel Changes

SECTION VIII

SCHEMATICS AND TROUBLESHOOTING

8-1. INTRODUCTION.

8-2. This section contains schematics, troubleshooting data, repair information, and component-identification illustrations. An interconnection diagram is also provided.

8-3. PREVENTIVE MAINTENANCE.

8-4. CLEANING. Painted surfaces can be cleaned with a commercial, spray-type window cleaner or with a mild soap and water solution.



Avoid the use of chemical cleaning agents which might damage the plastics used in this instrument. Recommended cleaning agents are isopropyl alcohol, kelite (1 part kelite, 20 parts water), or a solution of 1% mild detergent and 99% water.

8-5. Corroded spots are best removed with soap and water. Stubborn residues can be removed with a fine abrasive. Protect such areas from further corrosion with an application of silicone resin such as GE DRI-FILM 88.

8-6. SWITCH MAINTENANCE. The pushbutton switches in this instrument were designed for long, trouble-free service. If one of these switches should become defective, replacement rather than repair is recommended.

8-7. Rotary switches can easily be serviced after removal from the instrument. For example, to remove the TIME/DIV switch, the TIME/DIV switch shaft must also be removed. Refer to the paragraphs on repair in this section for disassembly instructions.

8-8. Conventional rotary switches are serviced by cleaning the contacts with a degreaser such as M-180 FREON TF DEGREASER. Contact surfaces should be lubricated with a lubricant comparable to LUBRIPLATE FML produced by the Fiske Brothers Refining Company. LUBRIPLATE FML is available from the Hewlett-Packard Company (HP Part No. 6040-0305).

8-9. To service the rotary switches on assemblies A8 and A9, proceed as follows:

a. Remove TIME/DIV knob and shaft (refer to paragraph 8-24).

b. Remove plug-in assembly (A8 or A9) from assembly A7.

c. Note orientation of slot in rotor section of switch.

d. Remove metal retainer ring from rotor switch and separate two sections.

e. Check contact area on etched circuit board. If contact area shows excessive wear, replace circuit board.

f. Check contact on both rotor sections. If contacts show excessive wear, replace rotor section.


g. Clean and lubricate contacts on etched circuit board and rotors as described in paragraph 8-8.

h. Place rotor sections on etched circuit board and reinstall retainer ring.

i. Position slotted portion of open rotor section as noted in step c.

j. Reinstall assembly in instrument.

k. Reinstall TIME/DIV shaft and knob assembly.

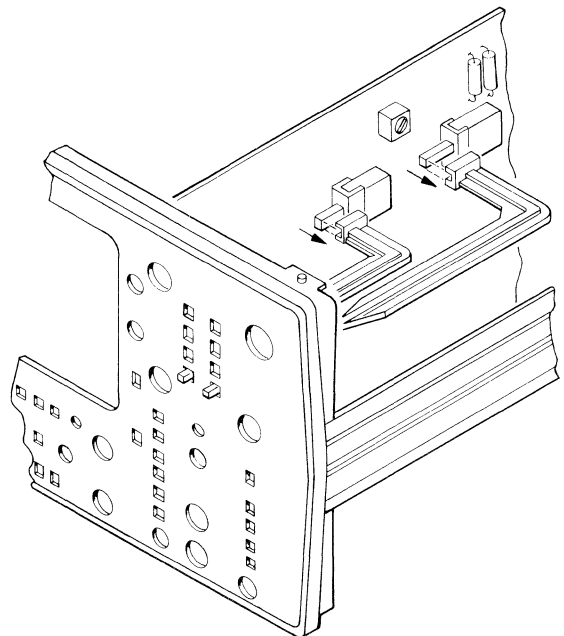

1740A-060-10-75

Figure 8-1. Switch Extender Shaft Removal

8-10. Switches in the vertical attenuators require no lubrication, cleaning, or maintenance.

8-11. To remove the horizontal right-angle switch extender shafts, depress the switch connected to the extender shaft to be removed. While supporting switch shaft with finger, gently pull extender shaft away from circuit board (90° from the switch axis). To reinstall, reverse removal procedure (see figure 8-1).

8-12. REMOVAL AND REPLACEMENT.

8-13. Instructions for removing major assemblies are contained in the following paragraphs. Instructions for repairing circuit board assemblies are provided in paragraph 8-28. A replaceable parts list is provided in Section VI.

8-14. CRT REMOVAL AND REPLACEMENT. To remove and replace the CRT, see figures 6-1 and 8-2, and proceed as follows:

WARNING

To prevent personal injury, wear a face mask or goggles when handling the CRT. Wear protective gloves and handle the CRT carefully.

- a. Disconnect line cord and remove top and bottom covers from instrument.
- b. Disconnect the post-accelerator lead and immediately discharge lead to ground.

WARNING

Failure to discharge high voltage can result in severe electrical shock to personnel and damage to the instrument.

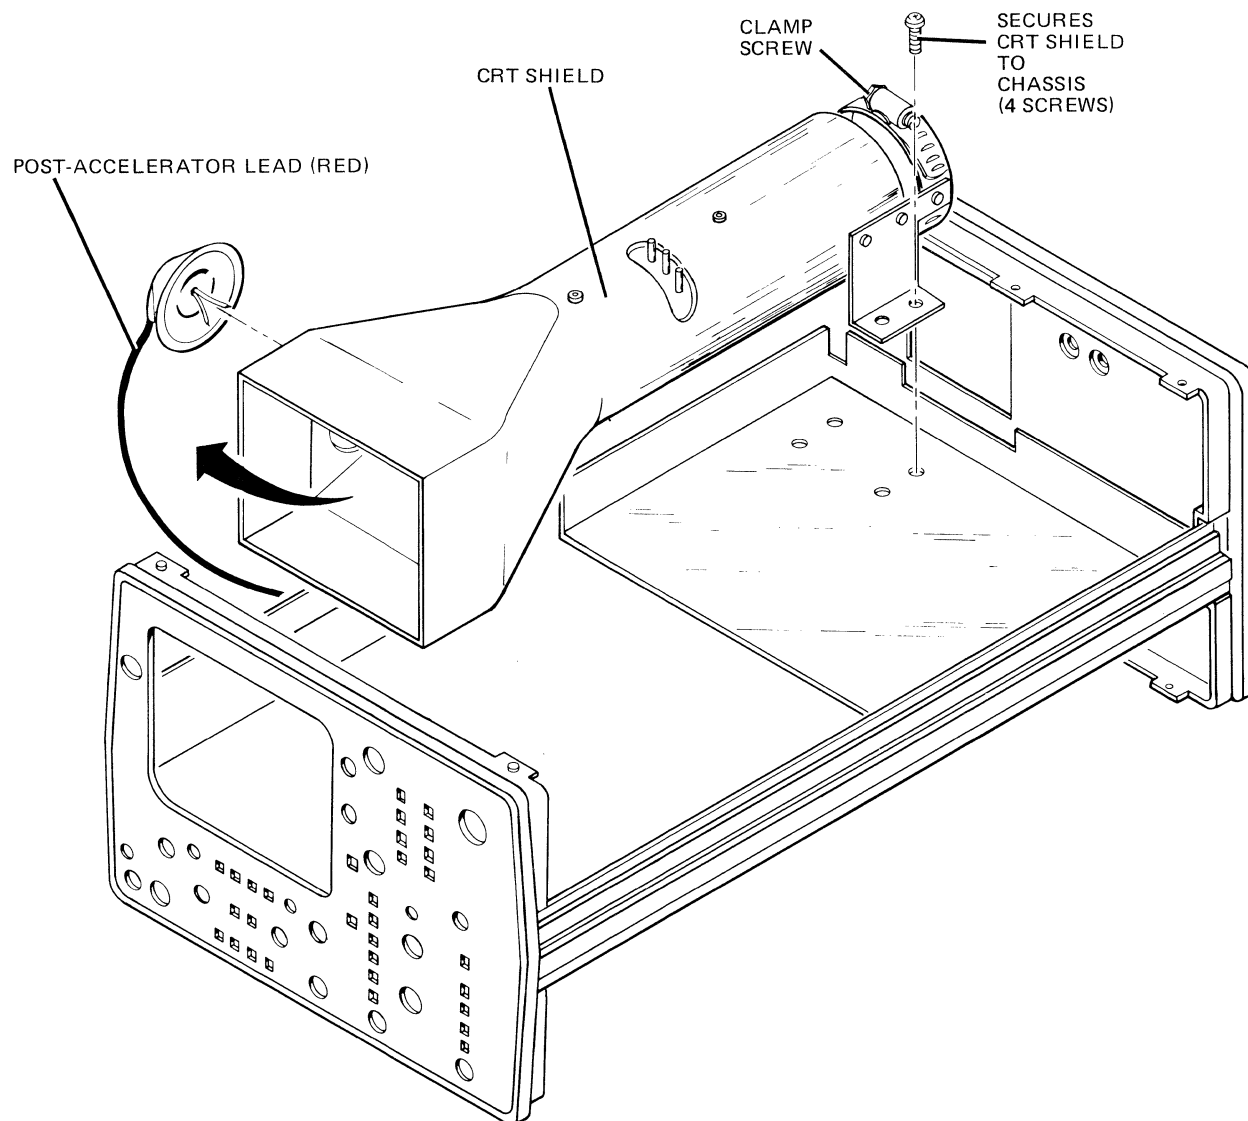


Figure 8-2. CRT Removal

1740A-061-10-75

- c. Remove rear-panel CRT socket cover (MP33); then disconnect socket.
- d. Remove HVPS cover (MP54).
- e. Disconnect (956) and (957) wires from rear of HV Power Supply Assembly A15.
- f. Disconnect all neck-pin leads.
- g. Disconnect seven CRT cable wires from top of gate amplifier A12, and lay this cable to outside of instrument.
- h. Remove four screws (two per side) that secure rear of CRT shield (MP65) to chassis.
- i. Gently move CRT and shield about two inches toward rear of instrument.
- j. Tilt shield up and gently lift CRT and shield out of the instrument.
- k. Loosen clamp screw at rear of shield and remove CRT from shield.



When removing or installing CRT, be careful not to bend CRT neck pins.

- l. To reinstall CRT, reverse removal procedure; however, do not tighten clamp screw until after shield is secured with four screws and CRT is positioned against front mount. The shield does not have to press completely onto front mount.

8-15. HIGH-VOLTAGE POWER SUPPLY ASSEMBLY REMOVAL AND REPLACEMENT. To remove High-voltage Power Supply Assembly A15, see figure 6-1 and proceed as follows:

- a. Remove HV cover (MP54).
- b. Discharge high voltage by shorting test point A15TP1 to chassis.



Failure to discharge high voltage can result in severe electrical shock to personnel and damage to the instrument.

- c. Disconnect two (6) wires and one (2) wire on FOCUS potentiometer A12R22 from A15.
- d. Disconnect (956) and (957) wires from rear of A15.

- e. Remove CRT socket cover (MP33).
- f. Disconnect CRT socket.
- g. Remove plug to HV oscillator, Q1. Note plug orientation (wires remain parallel from board to device).
- h. Disconnect Gate Amplifier Assembly A12 from Low-voltage Power Supply Assembly A16.
- i. Disconnect A15 from A12.

WARNING

When performing next step, discharge high voltage by holding insulated part of wires and touching the two leads together.

- j. Lift A15 and disconnect the (0) wire and the large wire from HV Multiplier Assembly A6.
- k. Remove A15.
- l. To reinstall A15, reverse removal procedure; remembering to again short (0) wire and large wire from HV multiplier as in step j.

8-16. HV MULTIPLIER ASSEMBLY REMOVAL AND REPLACEMENT. To remove HV Multiplier Assembly A6, see figure 6-1 and proceed as follows:

- a. Disconnect post-accelerator lead from CRT and immediately discharge lead to ground.

WARNING

Failure to discharge high voltage can result in severe electrical shock to personnel and damage to the instrument.

- b. Remove High-voltage Power Supply Assembly A15 (see paragraph 8-15).
- c. Remove bracket over A6 (two screws to chassis and two screws to rear panel).
- d. Lift bracket off large wire to A6.
- e. Disconnect post-accelerator lead cable clamp.
- f. Remove two screws securing A6 to chassis and remove A6.
- g. To reinstall A6, reverse removal procedure.

8-17. LOW-VOLTAGE POWER SUPPLY ASSEMBLY REMOVAL AND REPLACEMENT. To remove Low-voltage Power Supply Assembly A16, see figures 6-1 and 8-3 and proceed as follows:

NOTE

Removal of A16 is not necessary unless it must be replaced; all work can be performed with A16 in place except for repair or replacement of line selection and on-off switches.

- a. Remove Interface Assembly A14.
- b. Disconnect gate output wires (9) and (3).
- c. Disconnect two plugs to power transformer.
- d. Remove line cover (MP57) by removing two screws.
- e. Disconnect ac input leads (90) and (908).
- f. Disconnect five plugs to series regulators (Q2-6).
- g. Remove five screws holding A16 to chassis.
- h. Disconnect plug to Gate Amplifier Assembly A12.

i. Carefully lift A16 and move toward front of instrument. LINE switch shaft will protrude through front panel.

j. Unscrew LINE switch shaft and extract it.

k. Remove button from shaft; A16 can now be removed.

l. To reinstall A16, reverse removal procedure, except after A16 is secured in place, screw LINE switch shaft into switch (switch must be in "out" position) until slot is halfway through bezel, then press button onto shaft (refer to paragraph 8-18, figure 8-4).

8-18. GATE AMPLIFIER ASSEMBLY REMOVAL AND REPLACEMENT. To remove Gate Amplifier Assembly A12, see figures 6-1 and 8-4 and proceed as follows:

a. Remove HVPS cover (MP54).

b. Disconnect nine wires on component side of A12.

c. Disconnect two (6) wires and one (2) wire from FOCUS potentiometer to A15 (HVPS).

d. Disconnect (9) Z-axis wire on rear of A12.

e. Remove FOCUS and INTENSITY shafts from potentiometers using small hex wrench (Allen 050).

f. Disconnect A12 from A16 (LVPS).

g. Disconnect A12 from A15 (HVPS).

h. Remove BEAM FIND shaft by pushing A12 forward so that button clears front panel and unscrew shaft.

i. Remove button from shaft.

j. Remove A12.


k. To reinstall A12, reverse the removal procedure, except install BEAM FIND shaft and adjust so slot is halfway through bezel after HVPS cover (MP54) is secured; then install button.

8-19. VERTICAL OUTPUT AMPLIFIER ASSEMBLY REMOVAL AND REPLACEMENT. To remove Vertical Output Amplifier Assembly A5, see figure 8-5 and proceed as follows:

a. Disconnect delay line wires (4), (6), and (0) from back of A5.

b. Disconnect CRT leads (3) and (9).

c. Disconnect plug to Vertical Preamplifier Assembly A3 (push down gently on A3).

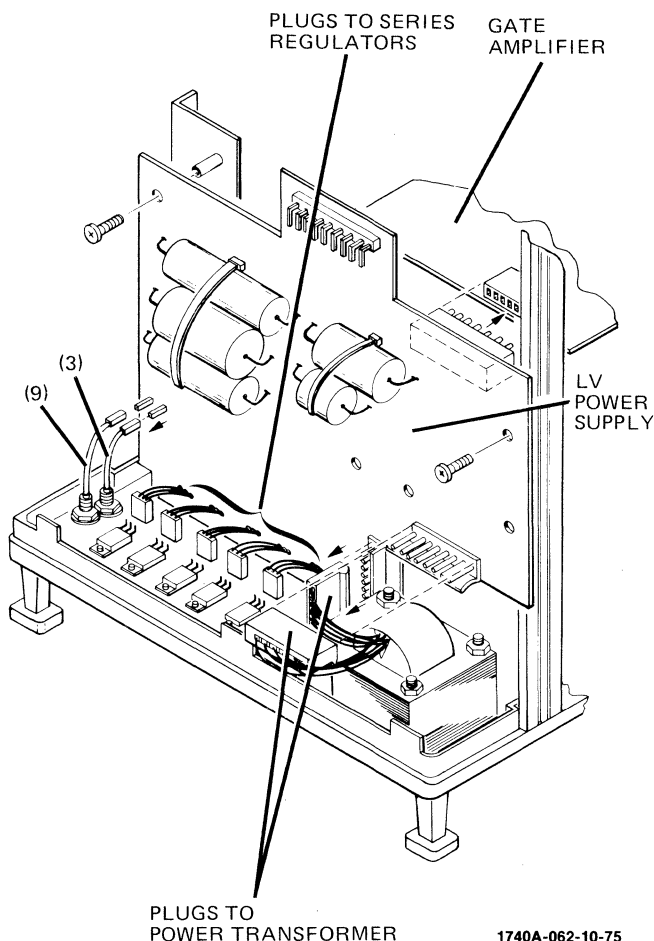

1740A-062-10-75

Figure 8-3. LV Power Supply Removal

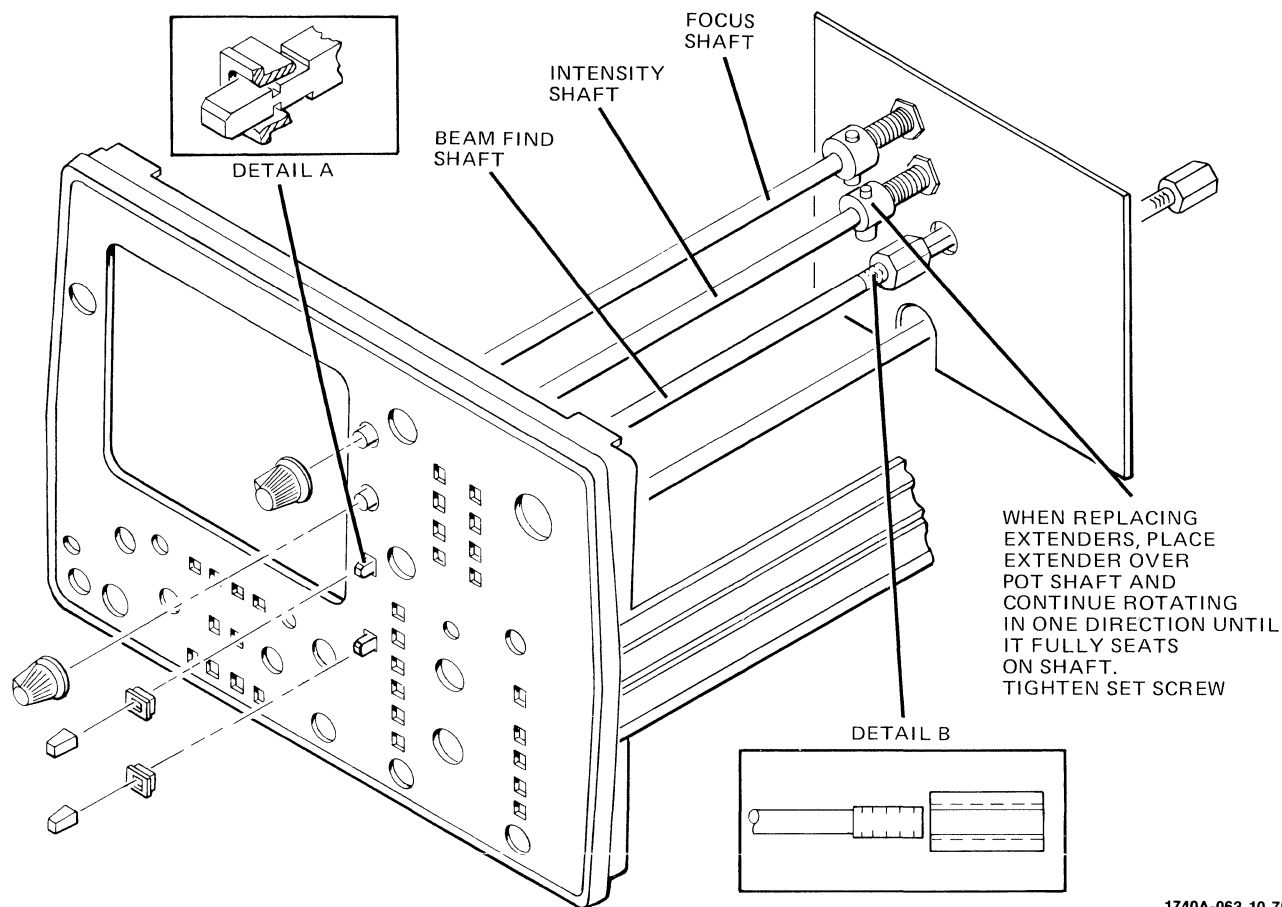


Figure 8-4. Gate Amplifier Assembly Removal

- d. Remove four screws that hold A5 and bracket to chassis, and remove assembly.
- e. Remove two screws holding A5 to bracket and heat sink, and remove board.
- f. To reinstall A5, reverse removal procedure.

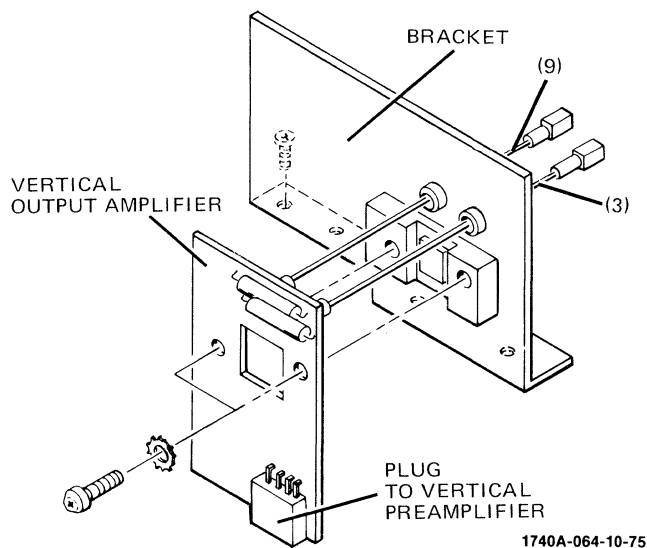


Figure 8-5. Vertical Output Amplifier Removal

8-20. Vertical Output Amplifier IC A5A1 Removal and Replacement. To remove A5A1, see figure 8-6 and proceed as follows:

- a. Remove Vertical Output Amplifier A5 as described in paragraph 8-19.
- b. A5A1 can be removed from heat sink. (Heat sink can remain on bracket or be removed.)
- c. To reinstall A5A1, reverse the removal procedure, being certain to note orientation of parts as shown in figure 8-6.

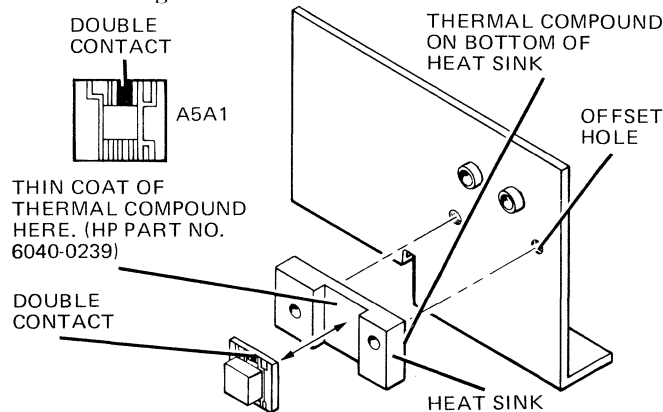


Figure 8-6. A5A1 Removal

8-21. VERTICAL PREAMPLIFIER ASSEMBLY A3, DELAY LINE ASSEMBLY A4, AND VERTICAL CONTROL SWITCHING ASSEMBLY A13 REMOVAL AND REPLACEMENT. To remove A3, A4, and A13 Assemblies, proceed as follows:

- a. Disconnect Interface Assembly A14.
- b. Remove channel A and B POS, vernier, coupling, and VOLTS/DIV knobs.
- c. Remove nuts and washers from both input BNC connectors.
- d. Disconnect (9) wire from calibrator output.
- e. Disconnect delay line wires (4), (6), and (0) from rear of Vertical Output Amplifier A5.
- f. Remove delay line clamp screw from chassis.
- g. Disconnect twin leads (3, 4) and (1, 9) at Horizontal Sweep Assembly A7.
- h. Remove channel A attenuator shield by removing three screws.
- i. Remove screw that connects Horizontal Sweep Assembly A7, shield, and A3 together. This screw is close to point where (1, 9) twin lead attaches to A7.
- j. Disconnect plug to A5.
- k. Carefully tilt A3 outward and extract toward rear.
- l. Disconnect vernier UNCAL light cable (95), (96), and two (0) wires.
- m. To reinstall, reverse removal procedure.

8-22. Vertical Control Switching Assembly A13 Removal and Replacement. To remove A13 assembly, proceed as follows:

- a. Remove A3 assembly as described in paragraph 8-21.
- b. Disconnect wires (4) and (9) from channel A and B vernier potentiometers (total of four wires).
- c. Disconnect wires (3), (93), (913), (7), and (8) from front of A13.
- d. Remove screw on component side of A3 that screws into standoff on A13 near delay line.
- e. Disconnect two plugs to Vertical Preamplifier Assembly A3.
- f. To reinstall A13, reverse removal procedure.

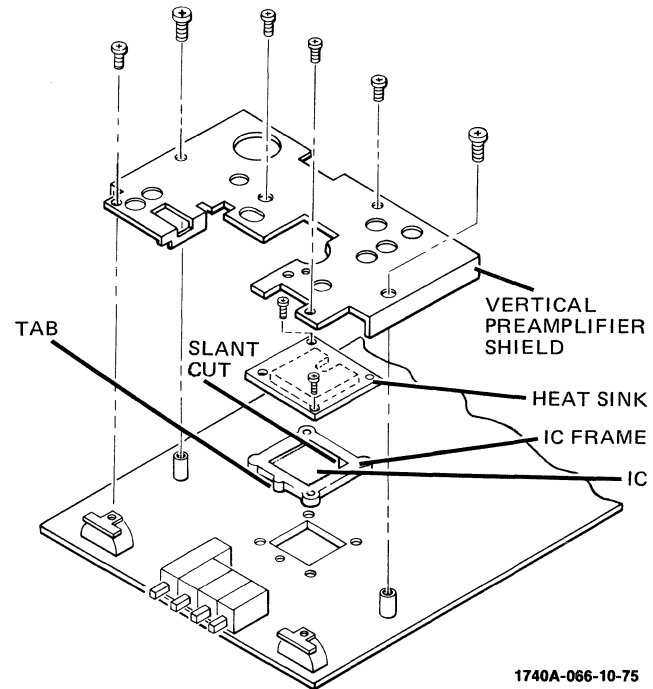


Figure 8-7. A3A1 Removal

8-23. Vertical Preamplifier IC A3A1 Removal and Replacement. To remove assembly A3A1, see figure 8-7 and proceed as follows:

- a. Disconnect twin lead (2, 6).
- b. Remove six screws that hold vertical preamplifier shield (MP45) to vertical preamplifier A3, and remove shield.
- c. Remove two remaining screws that hold heat sink (MP61) to A3.
- d. Lift heat sink off IC frame (MP26).
- e. Lift IC frame and IC off A3.
- f. To reinstall IC, reverse removal procedure; be certain that orientation of parts is as shown in figure 8-7.

8-24. MAIN SWEEP ASSEMBLY AND DELAYED SWEEP ASSEMBLY REMOVAL AND REPLACEMENT. To remove Main Sweep Assembly A8 and Delayed Sweep Assembly A9, proceed as follows:

- a. Loosen hex screws on the three shaft collars.
- b. Set MAIN TIME/DIV to 1 μ SEC and DLY'D TIME/DIV to OFF.
- c. Sweep time shaft can now be removed.

d. Remove A8 by pulling from socket.

e. Remove A9 by gently rocking board toward rear of instrument to disconnect it from the two connectors.

8-25. HORIZONTAL OUTPUT ASSEMBLY REMOVAL AND REPLACEMENT. To remove Horizontal Output Assembly A11, proceed as follows:

a. Disconnect (2) and (9) wires from A11.

b. Remove A11 from connector by first pulling top of A11 away from Horizontal Sweep Assembly A7 and then pulling bottom of A11.

c. To reinstall A11, reverse the removal procedure.

8-26. HORIZONTAL SWEEP ASSEMBLY REMOVAL AND REPLACEMENT. To remove Horizontal Sweep Assembly A7, proceed as follows:

a. Remove assemblies A8 and A9 (paragraph 8-24).

b. Remove assembly A11 as explained in paragraph 8-25.

c. Unsolder resistor from main EXT TRIGGER BNC connector J1.

d. Remove two cable connector plugs.

e. Remove twin leads (3, 4) and (1, 9).

f. Remove main TRIGGER LEVEL knob and nut from potentiometer.

g. Remove Interface Assembly A14.

h. Remove four screws holding A7 to sheet metal (figure 8-8).

i. Remove A7 by pulling it toward rear and tilting away from sheet metal deck. Save lockwasher on trigger level potentiometer for reinstallation.

j. To reinstall, reverse the removal procedure, except install four screws (step h) without tightening them until nut on TRIGGER LEVEL potentiometer (step f) is tightened. Lockwasher must be in place on TRIGGER LEVEL potentiometer before inserting in panel.

8-27. DELAYED TRIGGER ASSEMBLY REMOVAL AND REPLACEMENT. To remove the Delayed Trigger Assembly A10, proceed as follows:

a. Remove Delayed Sweep Assembly A9 (paragraph 8-24).

b. Unsolder resistor from delayed EXT TRIGGER BNC connector.

c. Remove delayed TRIGGER LEVEL knob and nut underneath.

d. Remove screw from A10 (corner next to delayed EXT TRIGGER BNC connector).

e. Gently pull A10 to rear and remove from instrument. Save lockwasher on TRIGGER LEVEL potentiometer for reinstallation.

f. To reinstall A10, reverse removal procedure; lockwasher must be in place on TRIGGER LEVEL potentiometer before inserting it in front panel.

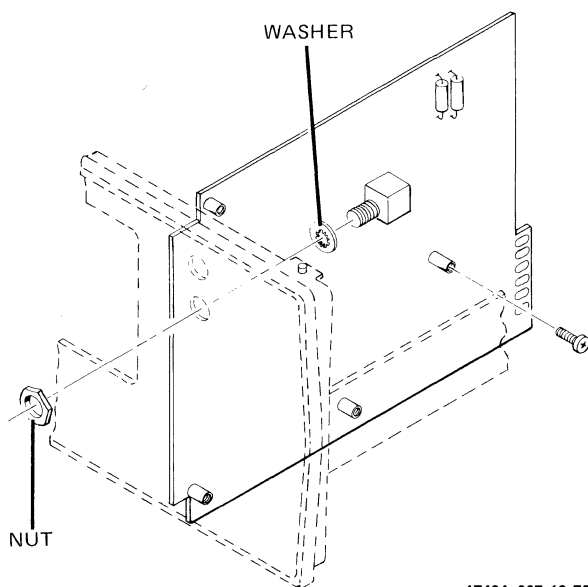


Figure 8-8. Location of A7 Attaching Screws

8-28. CIRCUIT BOARD REPAIRS.

8-29. The following paragraphs provide information for repairing etched circuit boards.

8-30. BOARD CONNECTIONS. Square-pin connectors are identified on circuit boards by color code of connecting wire or by the signal name. Each connector pin on plugs and jacks are identified by either a numeral of a letter; letters G, I, O, and Q are not used.

8-31. SOLDERING. All the etched circuit boards have plated-through component holes. This allows soldered-in components to be removed or replaced from either side of the board. When removing or replacing a semiconductor, use long-nosed pliers as a heat sink between the device and the soldering iron. See figure 8-9 for more information on semiconductors. HP Service Note M-20E contains additional information for repair of etched circuit boards.

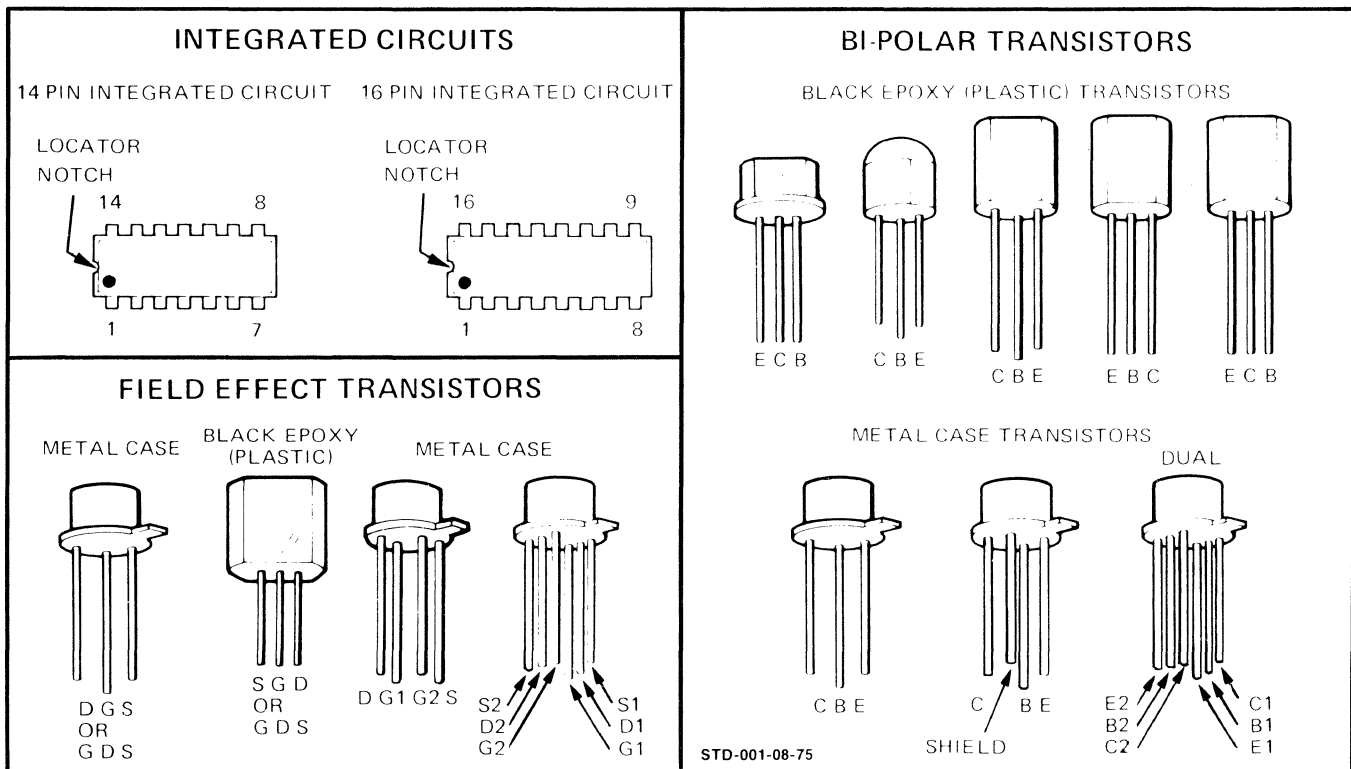


Figure 8-9. Semiconductor Terminal Identification

8-32. INTEGRATED CIRCUIT REMOVAL AND REPLACEMENT. The integrated circuits (IC's) in this instrument are plug-in types. Remove a plug-in integrated circuit with a straight pull away from the board. When replacing an integrated circuit, note the mark or notch used for pin number identification (see figure 8-9).

CAUTION

Unless an integrated circuit has definitely failed, be careful to prevent damage when removing or replacing it.

8-33. TROUBLESHOOTING.

WARNING

Read the Safety Summary at the front of this manual before troubleshooting the instrument.

8-34. Two important prerequisites for successful troubleshooting are: (1) understanding how the instrument is designed to operate and (2) knowing the correct use of front-panel controls. Improper control settings or circuit connections can cause apparent malfunctions. Read Section III for an explanation of controls, connectors, and general operating considerations. Read Section IV for circuit theory and principles of operation.

8-35. If trouble is suspected, visually inspect the instrument. Look for loose or burned components that

may suggest a source of trouble. Verify that all circuit board connections are making good contact and are not shorting to an adjacent circuit. If no obvious trouble is found, check power supply voltages in the instrument; also check the external power source.

8-36. INITIAL TROUBLESHOOTING PROCEDURE.

Before troubleshooting the Model 1740A in detail, try to perform the adjustment procedures listed in Section V of this manual. Some apparent malfunctions may be corrected by these adjustments, or failure to obtain a correct adjustment will often reveal the source of trouble.

8-37. DC VOLTAGES AND WAVEFORMS.

Dc voltages, waveforms, and conditions for making these measurements are given on or adjacent to the schematics. Since conditions for making the measurements may differ from one circuit to another, always check the specific conditions listed for each schematic.

8-38. TROUBLE DIAGNOSIS.

By the use of front-panel controls, note as many symptoms of the malfunction as possible. From these symptoms it can usually be determined which section (vertical, horizontal, power supplies, or high voltage) is malfunctioning. But even if the problem is in the vertical or horizontal section, it is still good practice to check the low-voltage power supplies, since an out-of-tolerance supply can affect the operation of other circuits. Table 8-1 lists the sequence of checks that should be used when troubleshooting.

Table 8-1. Troubleshooting Sequence

CHECK	COMMENT
1. LVPS	All other functions rely on LVPS for proper operation.
2. CRT & HVPS	All high voltages and CRT must function to obtain a display.
3. GATE AMPLIFIER	CRT must be unblanked to display signal.
4. VERTICAL SECTION	After obtaining a visible beam, begin checking deflection circuitry.
5. HORIZONTAL OUTPUT AMPLIFIER	To distinguish between time base and horizontal output amplifier problems, apply signal to channel B (in A VS B mode); if deflection occurs, horizontal output amplifier is operating properly.
6. SWEEP	After checking horizontal output amplifier, check ramp generating circuitry (in AUTO mode). When auto sweep is operating properly, check trigger circuit.

8-39. LOW-VOLTAGE POWER SUPPLY. All voltages: +5 V, +43 V, +120 V, -15 V, and the high voltage are referenced to the +15 V supply, so it must be made operational first. The supplies are current-limiting type, so any excessive loading from the vertical, horizontal, etc., will cause the supply to read 20 to 30% low.

8-40. To quickly check if an external load is causing Low-voltage Power Supply A16 to current-limit and read low, remove Interface Assembly A14 that connects the power supply to Vertical Preamplifier A3 and Horizontal Sweep Assembly A7. If the supplies return to normal, then an external short is definitely loading the supply. Assembly A3 can be flexed upward, so A14 can be connected between assemblies A16 and A7. This will help determine if the problem is on A3 or A7. It is also possible to disconnect the Gate Amplifier A12 and HV Power Supply A15, from assembly A16 by disconnecting A15 from the bottom of A16.

8-41. HIGH-VOLTAGE POWER SUPPLY AND CRT. To troubleshoot HV Power Supply A15, remove the HV cover and reinstall the two screws closest to the rear of the instrument. This provides the necessary ground connections for assembly A15.



Use extreme care when working on an active high-voltage power supply.

8-42. The high-voltage oscillator, collector, and base waveform measurements are accessible directly on assembly A15, as well as control grid and cathode voltages. A high voltage disable circuit turns off the oscillator if the +120 V supply drops to less than +100 V.

This protects the CRT from high beam current and burns.

8-43. If grid and cathode voltages are present on A15, verify that voltages are present at the CRT socket; a faulty socket or wire can cause an open circuit.



When measuring high voltages, always use a 1000:1 probe with an impedance of 100 MΩ or greater.

8-44. Common CRT problems consists of open filaments, grid-cathode shorts (uncontrollable beam), and "hollow cathodes", sometimes referred to as "double-peaking". Hollow cathodes can be detected by increasing intensity. As the intensity knob is rotated clockwise, the beam will get brighter, up to a point; beyond this point it will decrease in brilliance and may defocus.

8-45. If the high voltage is low, and low voltages are correct, check for a faulty high-voltage transformer, leaky capacitors, or resistors that may have changed in value (typical problem with extremely large resistors - 30 MΩ, etc.).

8-46. Faulty high-voltage multipliers usually cause the display to be of low intensity and out of focus. Multipliers can sometimes be checked by measuring the output with a high-voltage probe.

8-47. GATE AMPLIFIER. Malfunctions in Gate Amplifier Assembly A12 will usually be transistor failures in output driver stages. At high intensity levels, these transistors are sometimes operating at fairly high voltages and are therefore subject to failure.

8-48. VERTICAL SECTION. Problems in the vertical amplifier may show up as a variety of symptoms. Low gain problems may be located by applying an input signal and monitoring it through the various stages (refer to waveforms adjacent to schematics). Attenuator problems may be either on the attenuator itself or within the vertical preamplifier substrate A3A1.

8-49. Problems can be isolated to either substrate A3A1 or to Vertical Output Assembly A5 by pressing TRIG VIEW on the front panel while applying a known signal to the main EXT TRIGGER input. If it is displayed properly (approximately 100 mV/div), this indicates that assembly A5 is operating properly and the problem is in substrate A3A1.

8-50. Bandwidth, rise time, or pulse response problems can be caused by dirty CRT neck pins or by a faulty delay line. However, they are most likely caused by defective amplifiers or improper adjustment.


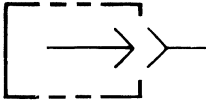

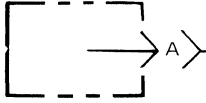

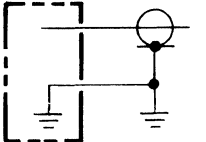

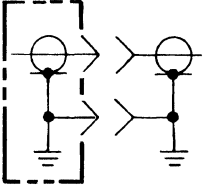











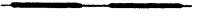




8-51. HORIZONTAL OUTPUT AMPLIFIER. If no horizontal deflection can be obtained under normal sweep conditions, the problem may be either in the time base or Horizontal Output Assembly A11. To quickly determine which is at fault, put the oscilloscope in the A VS B mode and connect a 1-kHz sine wave to the channel B input. If horizontal deflection is present, the horizontal amplifier (and sync amplifier) are operating properly and the problem is in the time base. If no horizontal deflection occurs, then assembly A11 is probably defective.


8-52. TIME BASE. Troubleshooting the time base can be difficult since it is a closed loop circuit and waveforms may be nonexistent in any part of the loop. Table 8-2 will help analyze problems under a no-sweep condition. Select main sweep, set the main TIME/DIV control to .1 mSEC, and put all other time base push-buttons in the out position. This puts the time base in an auto sweep mode. Set INTENSITY to approximately midrange and set FOCUS fully CCW.

Table 8-2. Time Base Troubleshooting

INDICATION	PROBLEM CAUSE
Is baseline present?	YES - Check input circuitry (HF/LF amplifiers or sync amplifier) NO - Proceed to next step
RESET Lamp OFF Beam OFF Beam position left (Using BEAM FIND)	Check reset/holdoff circuitry
RESET Lamp OFF Beam OFF Beam position right (Using BEAM FIND)	Check Miller integrator and associated circuitry
RESET Lamp OFF Beam ON	With RESET lamp OFF, beam should NEVER be ON. Check gate amplifier circuitry and CRT for grid-cathode short; then return to time base troubleshooting
RESET Lamp ON Beam OFF	With RESET lamp ON, beam should also be ON. Check gate amplifier and HVPS; then return to time base to repair second problem.
RESET Lamp ON Beam ON (Left side)	Check Miller integrator and associated circuitry
RESET Lamp ON Beam ON (Right side)	Check sweep reset circuitry

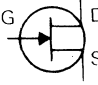Table 8-3. Schematic Notes

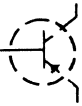REFER TO ANSI Y 32.2 AND Y32.14 FOR SCHEMATIC SYMBOLS NOT LISTED IN THIS TABLE.			
	ETCHED CIRCUIT BOARD		SINGLE-PIN CONNECTOR ON BOARD
	ASSEMBLY		PIN OF A PLUG-IN BOARD (WITH LETTER OR NUMBER)
	ETCHED CIRCUIT BOARD ON ASSEMBLY		COAXIAL CABLE CONNECTED DIRECTLY TO BOARD
	FRONT-PANEL MARKING		COAXIAL CABLE CONNECTED TO SNAP-ON JACK
	REAR-PANEL MARKING		
	MAIN SIGNAL PATH		
	PRIMARY FEEDBACK PATH		
	SECONDARY FEEDBACK PATH		
	FRONT-PANEL CONTROL		BREAKDOWN DIODE (VOLTAGE REGULATOR)
	TEST POINT (TP WITH NUMBER)		LIGHT EMITTING DIODE (LED)
	SCREWDRIVER ADJUSTMENT		TUNNEL DIODE
	WAVEFORM TEST POINT (WITH NUMBER)		FIELD-EFFECT TRANSISTOR (N-TYPE BASE)
	COMMON ELECTRICAL POINT (WITH LETTER); NOT NECESSARILY GROUND		
	SIGNAL REFERENCE		CIRCUITS OR COMPONENTS DRAWN WITH DASHED LINES (PHANTOM) SHOW FUNCTION ONLY AND ARE NOT INTENDED TO BE COMPLETE. THE CIRCUIT OR COMPONENT IS SHOWN IN DETAIL ON ANOTHER SCHEMATIC.
	SCHEMATIC REFERENCE		
			(925) WIRE COLORS ARE GIVEN BY NUMBERS IN PARENTHESIS USING THE RESISTOR COLOR CODE (925) IS WHT-RED-GRN 0 - BLACK 5 - GREEN 1 - BROWN 6 - BLUE 2 - RED 7 - VIOLET 3 - ORANGE 8 - GRAY 4 - YELLOW 9 - WHITE
			* OPTIMUM VALUE SELECTED AT FACTORY, TYPICAL VALUE SHOWN; PART MAY HAVE BEEN OMITTED.
			UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS, CAPACITANCE IN PICOFARADS AND INDUCTANCE IN MICROHENRIES
CW	CLOCKWISE END OF VARIABLE RESISTOR	VF (A)	V - VOLTAGE F - FILTERED
NC	NO CONNECTION		
P/O	PART OF		(A) - FILTER SOURCE

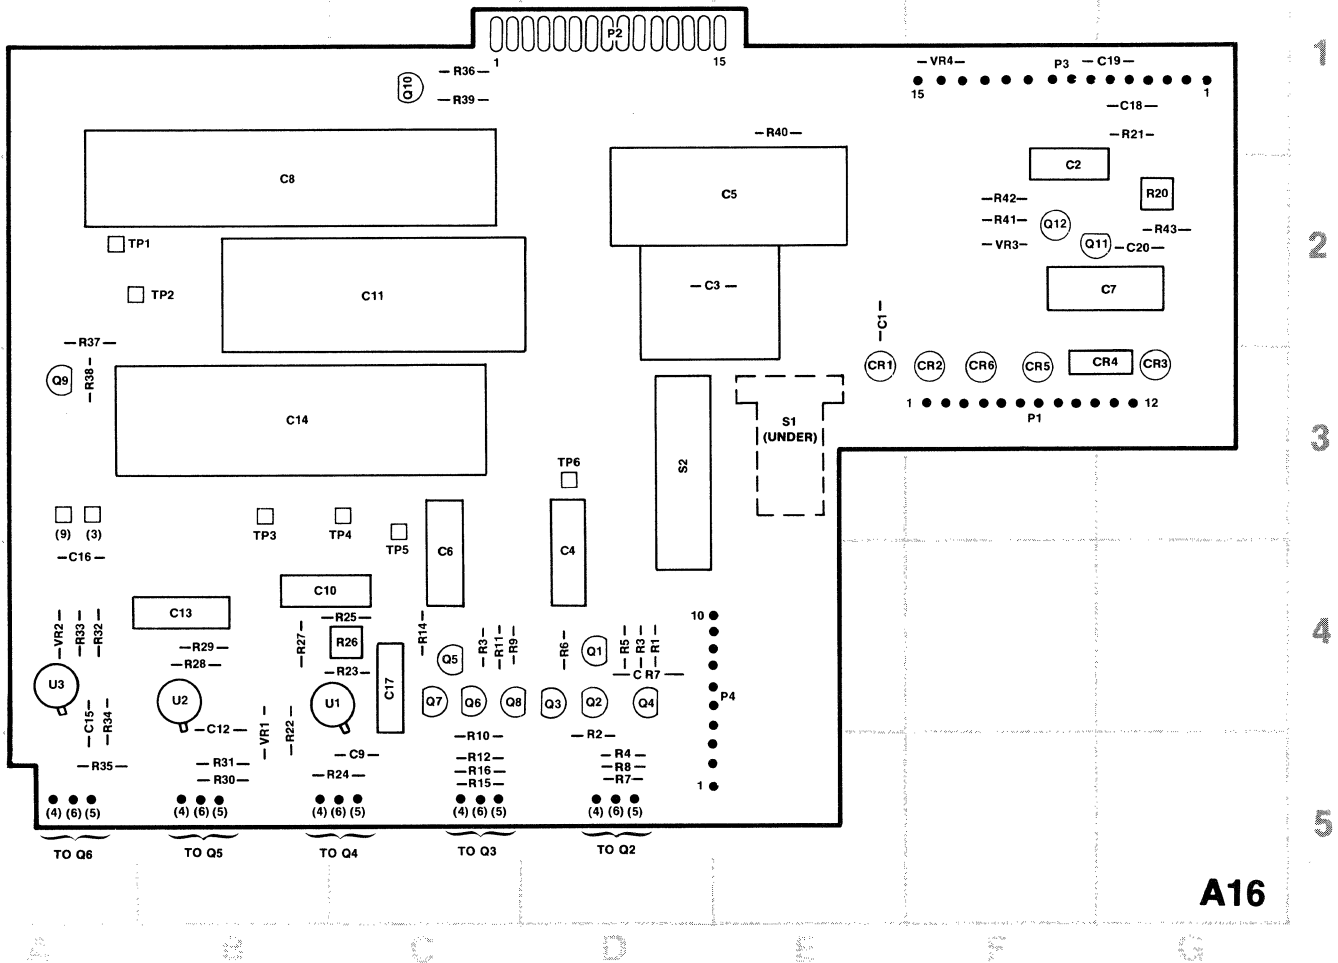


A16

1740A-069-01-07-76


REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	E-2	C14	B-3	P1	F-3	Q11	F-2	R13	C-4	R30	B-5	S2	D-3
C2	F-2	C15	A-4	P2	D-1	Q12	F-2	R14	C-4	R31	B-5	TP1	A-2
C3	E-2	C16	A-4	P3	F-1	R1	D-4	R15	C-5	R32	A-4	TP2	B-2
C4	D-3	C17	C-4	P4	E-4	R2	D-4	R16	C-5	R33	A-4	TP3	B-3
C5	E-2	C18	G-1	Q1	D-4	R3	D-4	R20	G-2	R34	A-4	TP4	C-3
C6	C-3	C19	G-1	Q2	D-4	R4	D-5	R21	G-1	R35	A-5	TP5	C-3
C7	G-2	C20	G-2	Q3	D-4	R5	D-4	R22	B-5	R36	C-1	TP6	D-3
C8	B-2	CR1	E-3	Q4	D-4	R6	D-4	R23	C-4	R37	A-2	U1	C-4
C9	C-5	CR2	F-3	Q5	C-4	R7	D-5	R24	C-5	R38	A-3	U2	B-4
C10	C-4	CR3	G-3	Q6	C-4	R8	D-5	R25	C-4	R40	C-1	U3	A-4
C11	C-2	CR4	G-3	Q7	C-4	R9	D-4	R26	C-4	R41	F-2	VR1	B-5
C12	B-4	CR5	F-3	Q8	D-4	R10	C-5	R27	C-4	R42	F-2	VR2	A-4
C13	B-4	CR6	F-3	Q9	A-3	R11	C-4	R28	B-4	R43	G-2	VR3	F-2
		CR7	D-4	Q10	C-1	R12	C-5	R29	B-4	S1	E-3	VR4	F-1

Figure 8-10. Service Information, Low-voltage Power Supply Assembly A16 (Sheet 1 of 2)

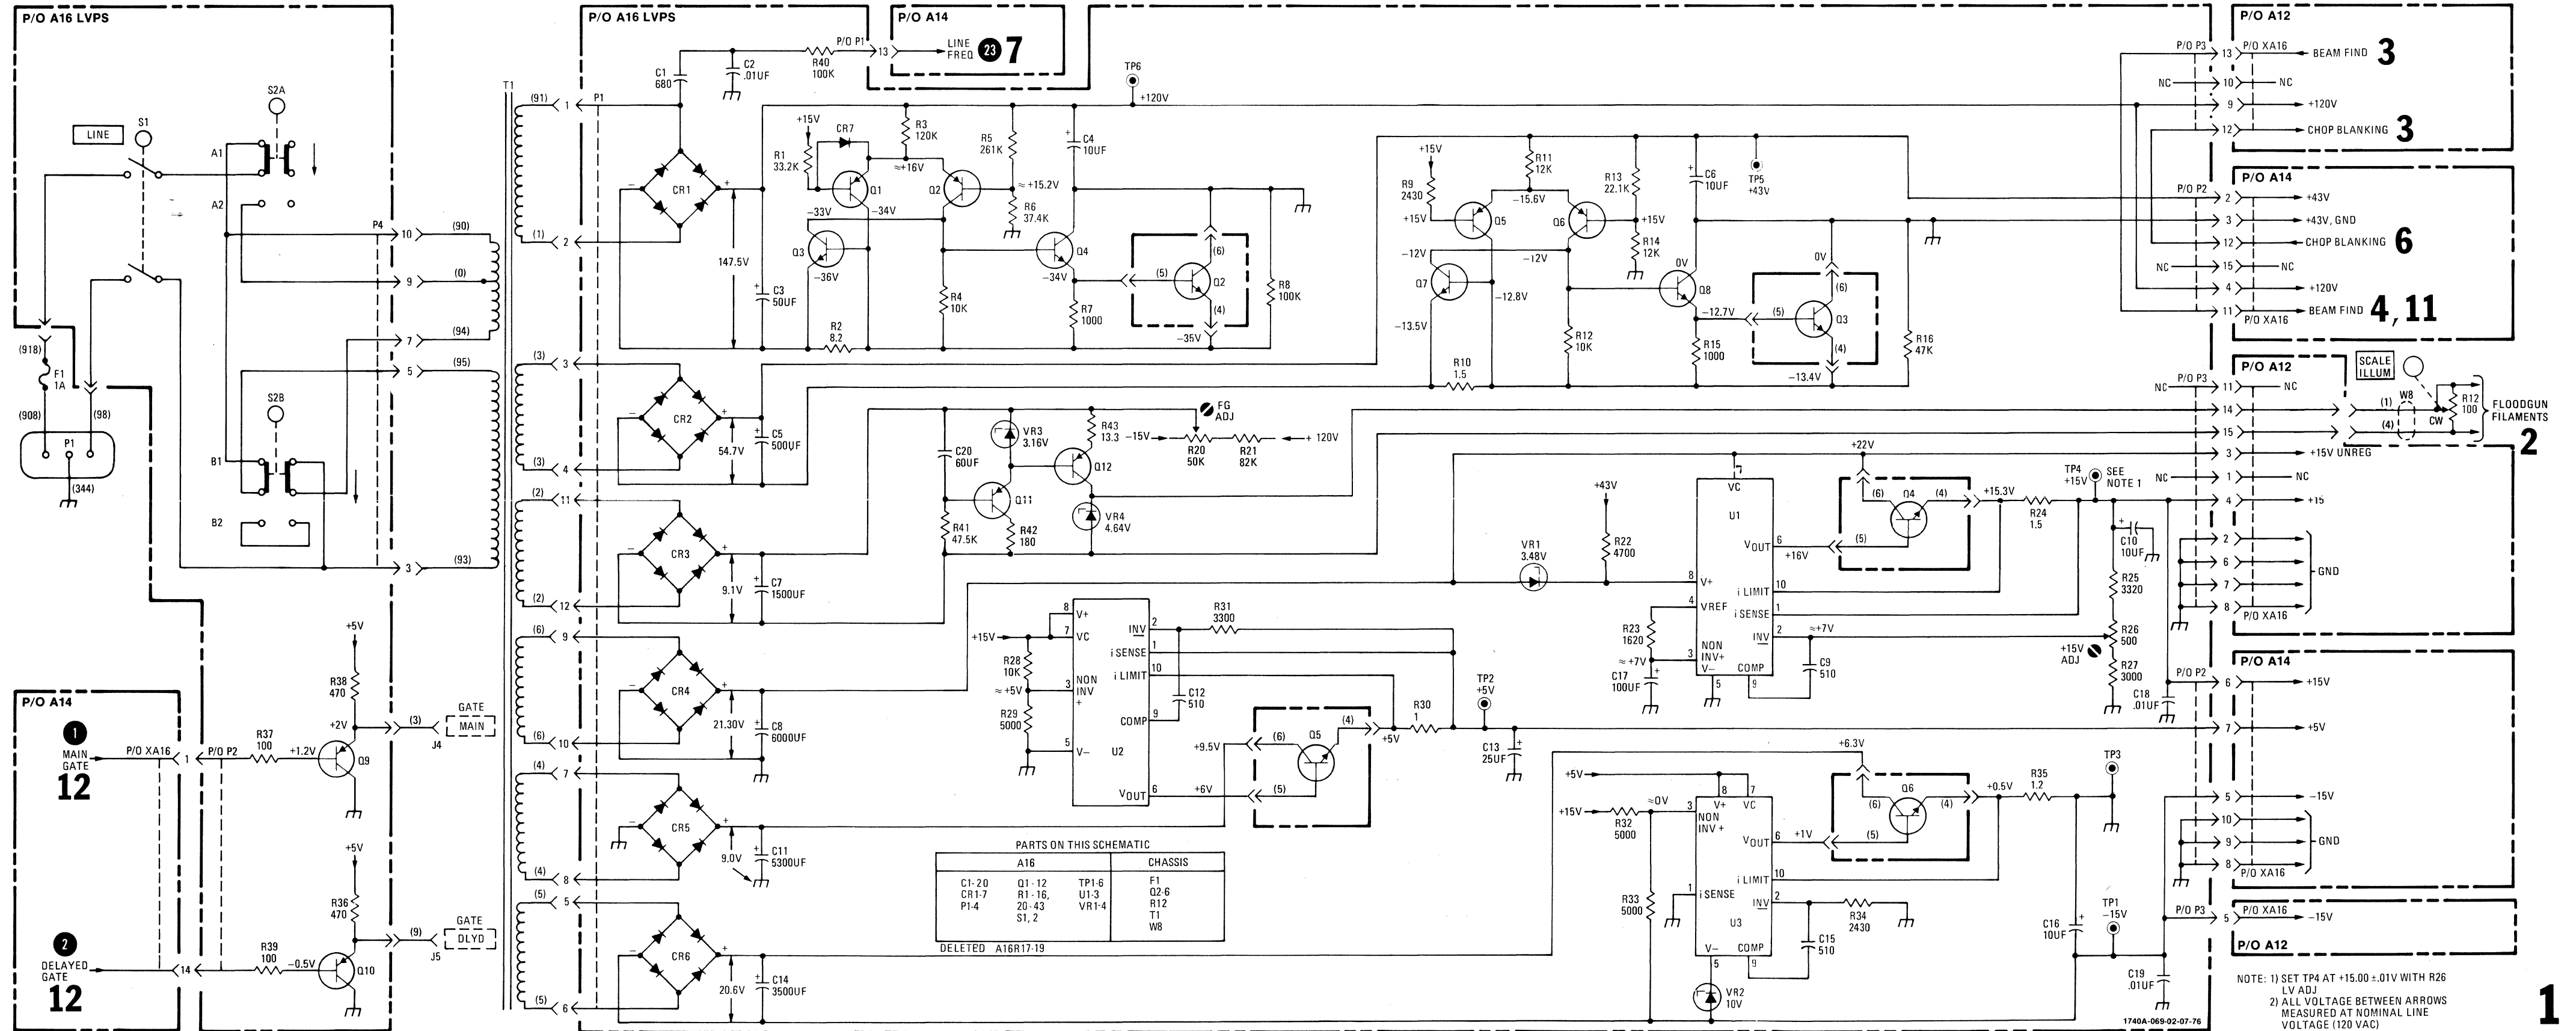

NOTE: 1) SET TP4 AT +15.00 ± 0.01V WITH R26 LV ADJ
 2) ALL VOLTAGE BETWEEN ARROWS MEASURED AT NOMINAL LINE VOLTAGE (120 VAC)

Figure 8-10. Service Information, Low-voltage Power Supply Assembly A16 (Sheet 2 of 2) 8-13

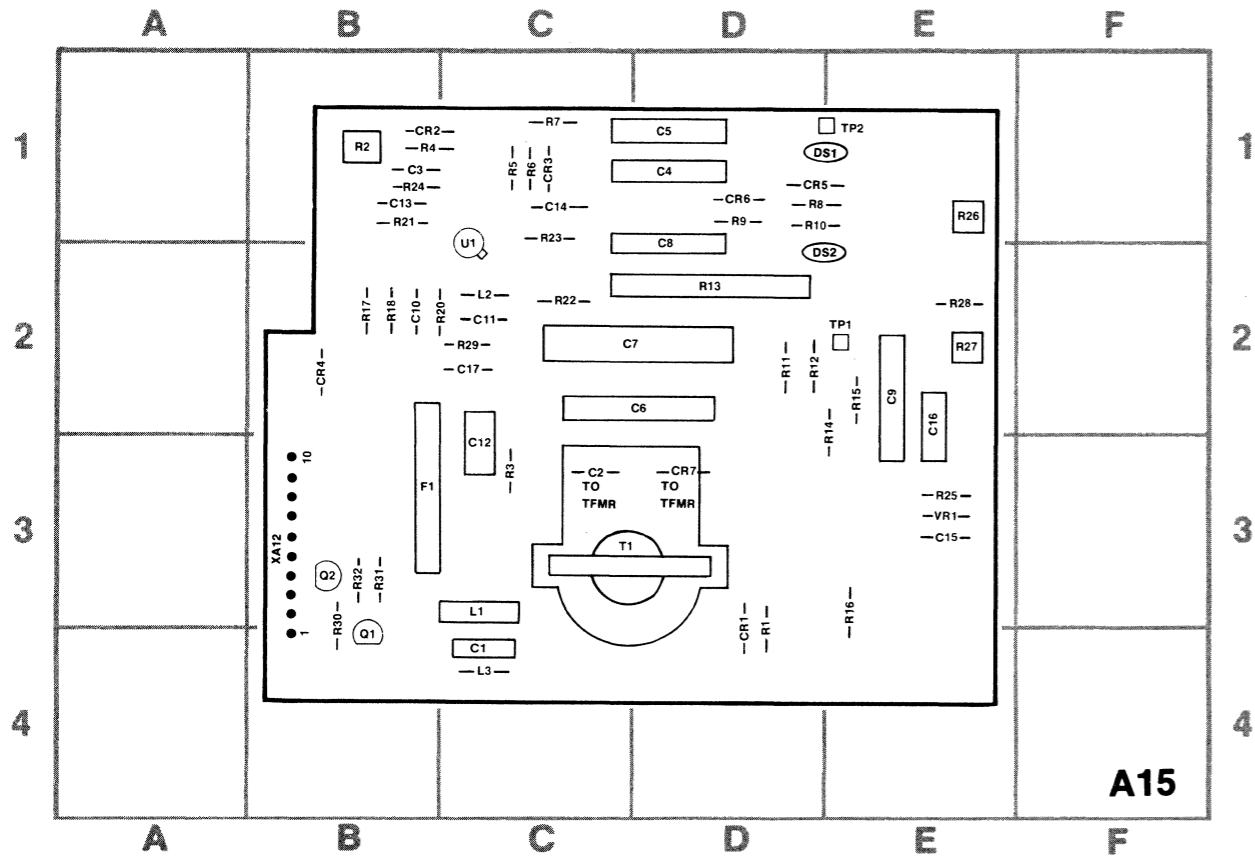

1740A-070-10-75

**DC VOLTAGE MEASUREMENT CONDITIONS
SCHEMATIC 2**


1. Set front-panel controls in accordance with initial control settings in Section V.
2. All voltages are referenced to chassis ground. All indications are nominal and 15% variations from those indicated should be considered normal.

WARNING

Voltages in the HIGH VOLTAGE Area are dangerous to life. Use extreme care in making measurements and observe precautions listed in the SAFETY SUMMARY at the front of this manual.

**WAVEFORM MEASUREMENT CONDITIONS
SCHEMATIC 2**

1. Set front-panel controls in accordance with initial control settings in Section V.
2. Set monitor oscilloscope TIME/DIV and VOLTS/DIV controls as indicated under waveform(s).

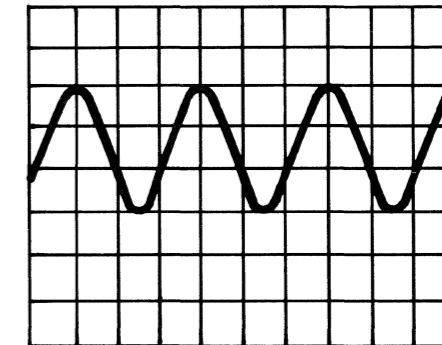

10 V/DIV
10 μSEC/DIV

1740A-071-01-10-75

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	C-4	C11	C-2	CR4	B-2	Q1	B-4	R9	D-1	R20	B-2	R30	B-3
C2	C-3	C12	C-3	CR5	D-1	Q2	B-3	R10	D-1	R21	B-1	R31	B-3
C3	B-1	C13	B-1	CR6	D-1	R1	D-4	R11	D-2	R22	C-2	R32	B-3
C4	D-1	C14	C-1	CR7	D-3	R2	B-1	R12	D-2	R23	C-1	T1	C-3
C5	D-1	C15	E-3	DS1	E-1	R3	C-3	R13	D-2	R24	B-1	TP1	E-2
C6	D-2	C16	E-2	DS2	D-2	R4	B-1	R14	E-2	R25	E-3	TP2	E-1
C7	D-2	C17	C-2	F1	B-3	R5	C-1	R15	E-2	R26	E-1	U1	C-2
C8	D-2	CR1	D-4	L1	C-3	R6	C-1	R16	E-3	R27	E-2	VR1	E-3
C9	E-2	CR2	B-1	L2	C-2	R7	C-1	R17	B-2	R28	E-2	XA12	B-3
C10	B-2	CR3	C-1	L3	C-4	R8	D-1	R18	B-2	R29	C-2		

Figure 8-11. Service Information, High-voltage Power Supply Assembly A15 (Sheet 1 of 2)

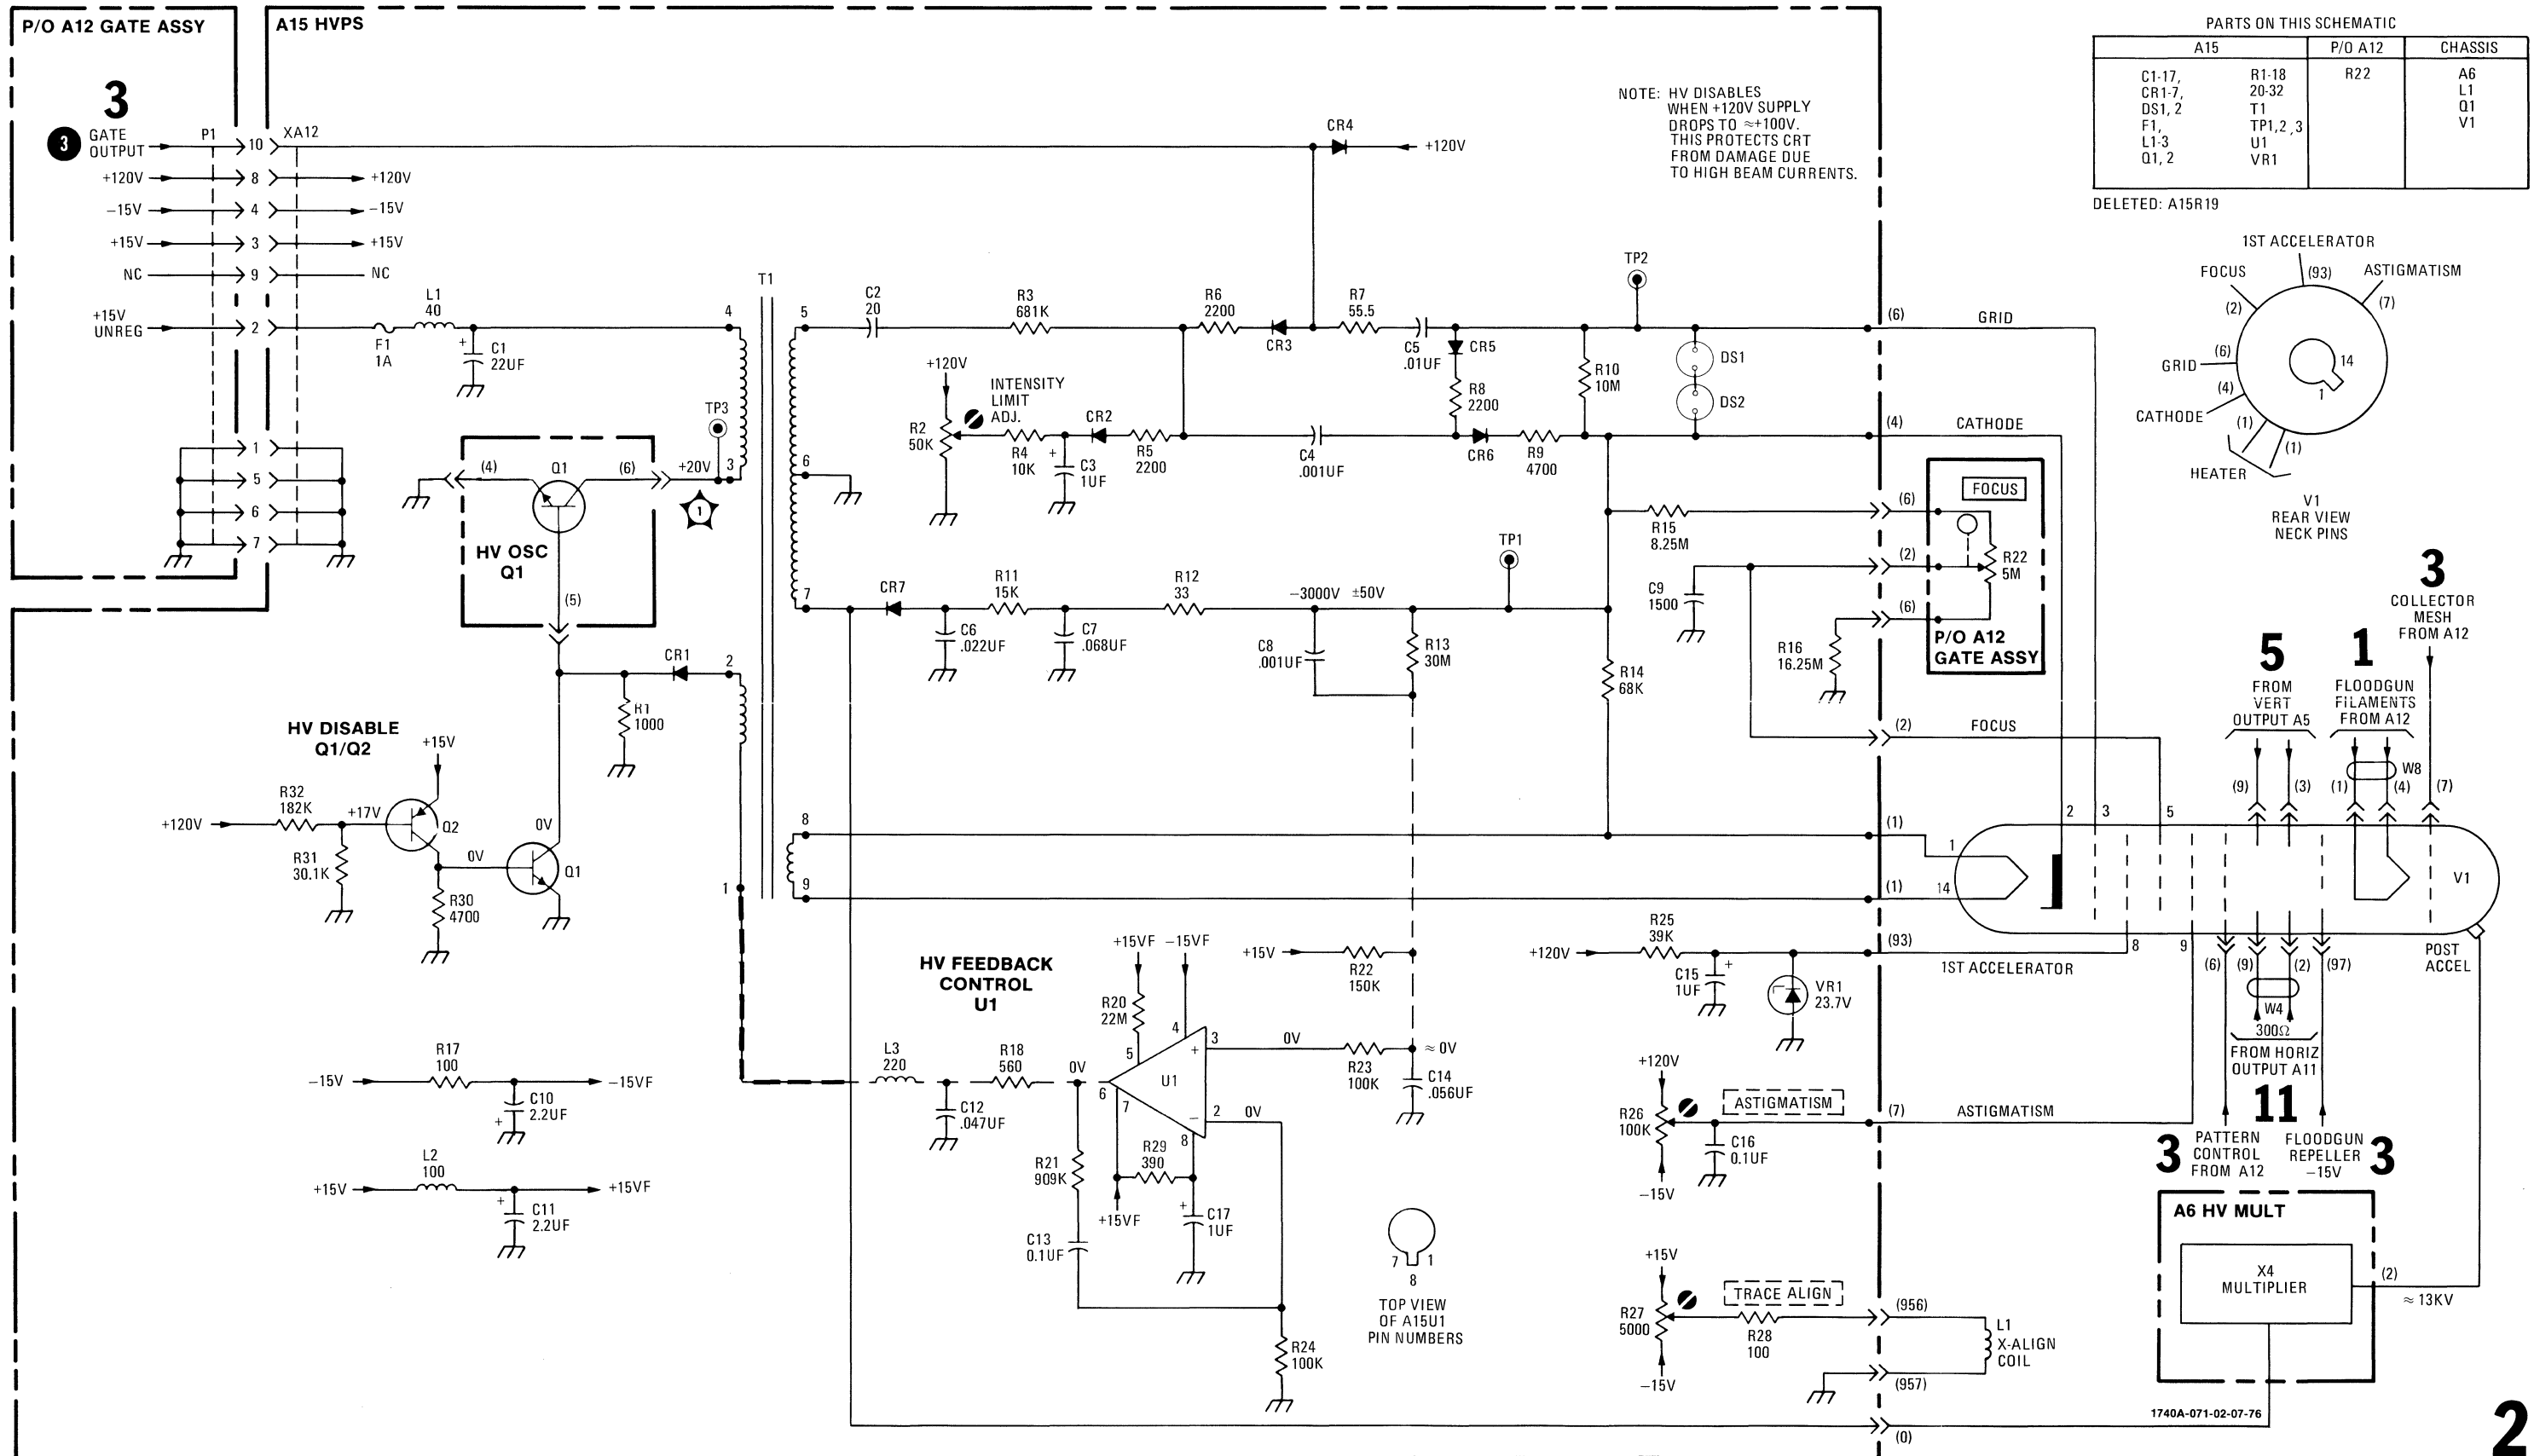


Figure 8-11.
Service Information, High-voltage Power Supply Assembly A15 (Sheet 2 of 2)
8-15

**DC VOLTAGE MEASUREMENT CONDITIONS
SCHEMATIC 3**


1. Set front-panel controls in accordance with initial control settings in Section V.
2. All voltages are referenced to chassis ground. All indications are nominal and 15% variation from those indicated should be considered normal.

**WAVEFORM MEASUREMENT CONDITIONS
SCHEMATIC 3**

1. Set front-panel controls in accordance with initial control settings in Section V, except as follows:

Coupling (channel A) 50Ω
 TIME/DIV (delayed) 1 μSEC
 DELAY 5.00
 Horiz display MAIN
 TRIGGER LEVEL (main) stable display

2. Set monitor oscilloscope TIME/DIV and VOLTS/DIV controls as indicated under waveform(s).
3. Connect HP Model 211B Square-wave Generator 50-ohm output to Model 1740A channel A INPUT connector.
4. Adjust square-wave generator output for 6 divisions of signal amplitude (.6 Vpk) at 5 kHz.

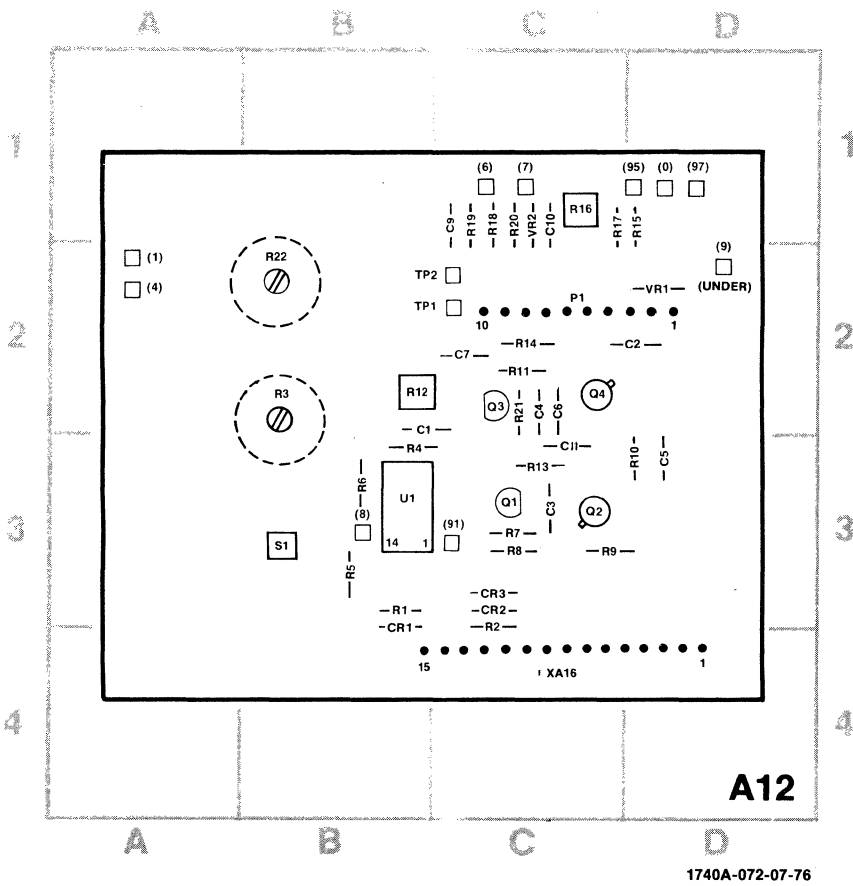

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	B-2	CR1	B-4	R3	B-2	R13	C-3	S1	B-3
C2	D-2	CR2	C-3	R4	B-3	R14	C-2	TP1	C-2
C3	C-3	CR3	C-3	R5	B-3	R15	D-1	TP2	C-2
C4	C-2	P1	C-2	R6	B-3	R16	C-1	U1	B-3
C5	D-3	Q1	C-3	R7	C-3	R17	C-1	VR1	D-2
C6	C-2	Q2	C-3	R8	C-3	R18	C-1	VR2	C-1
C7	C-2	Q3	C-2	R9	C-3	R19	C-1	XA16	C-4
C9	C-1	Q4	C-2	R10	D-3	R20	C-1		
C10	C-1	R1	B-3	R11	C-2	R21	C-2		
C11	C-3	R2	C-3	R12	B-2	R22	B-2		





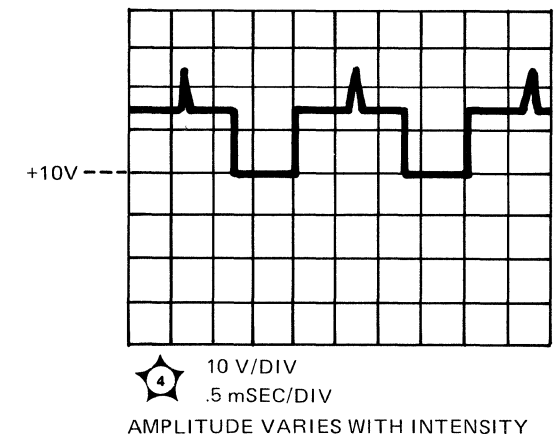


Figure 8-12. Service Information, Gate Amplifier Assembly A12 (Sheet 1 of 2)

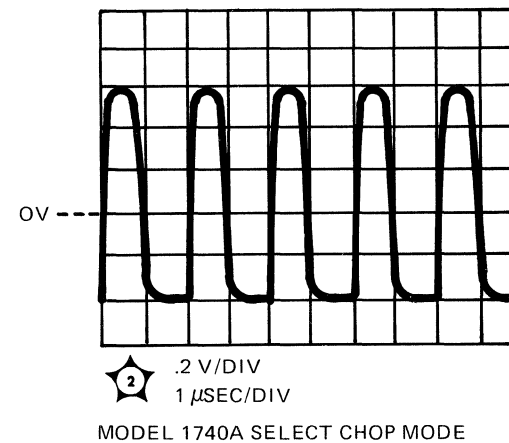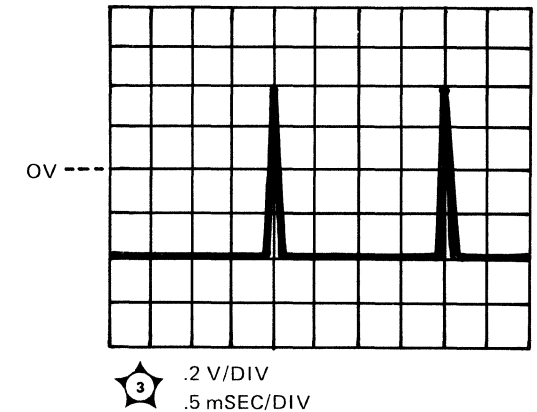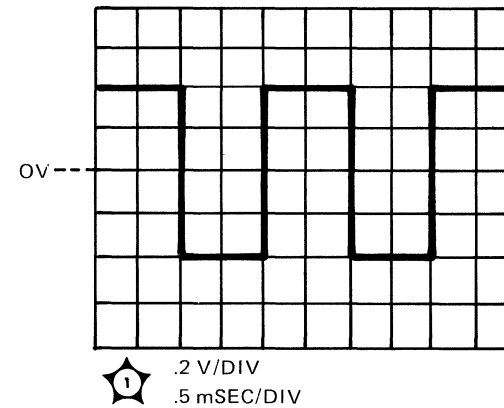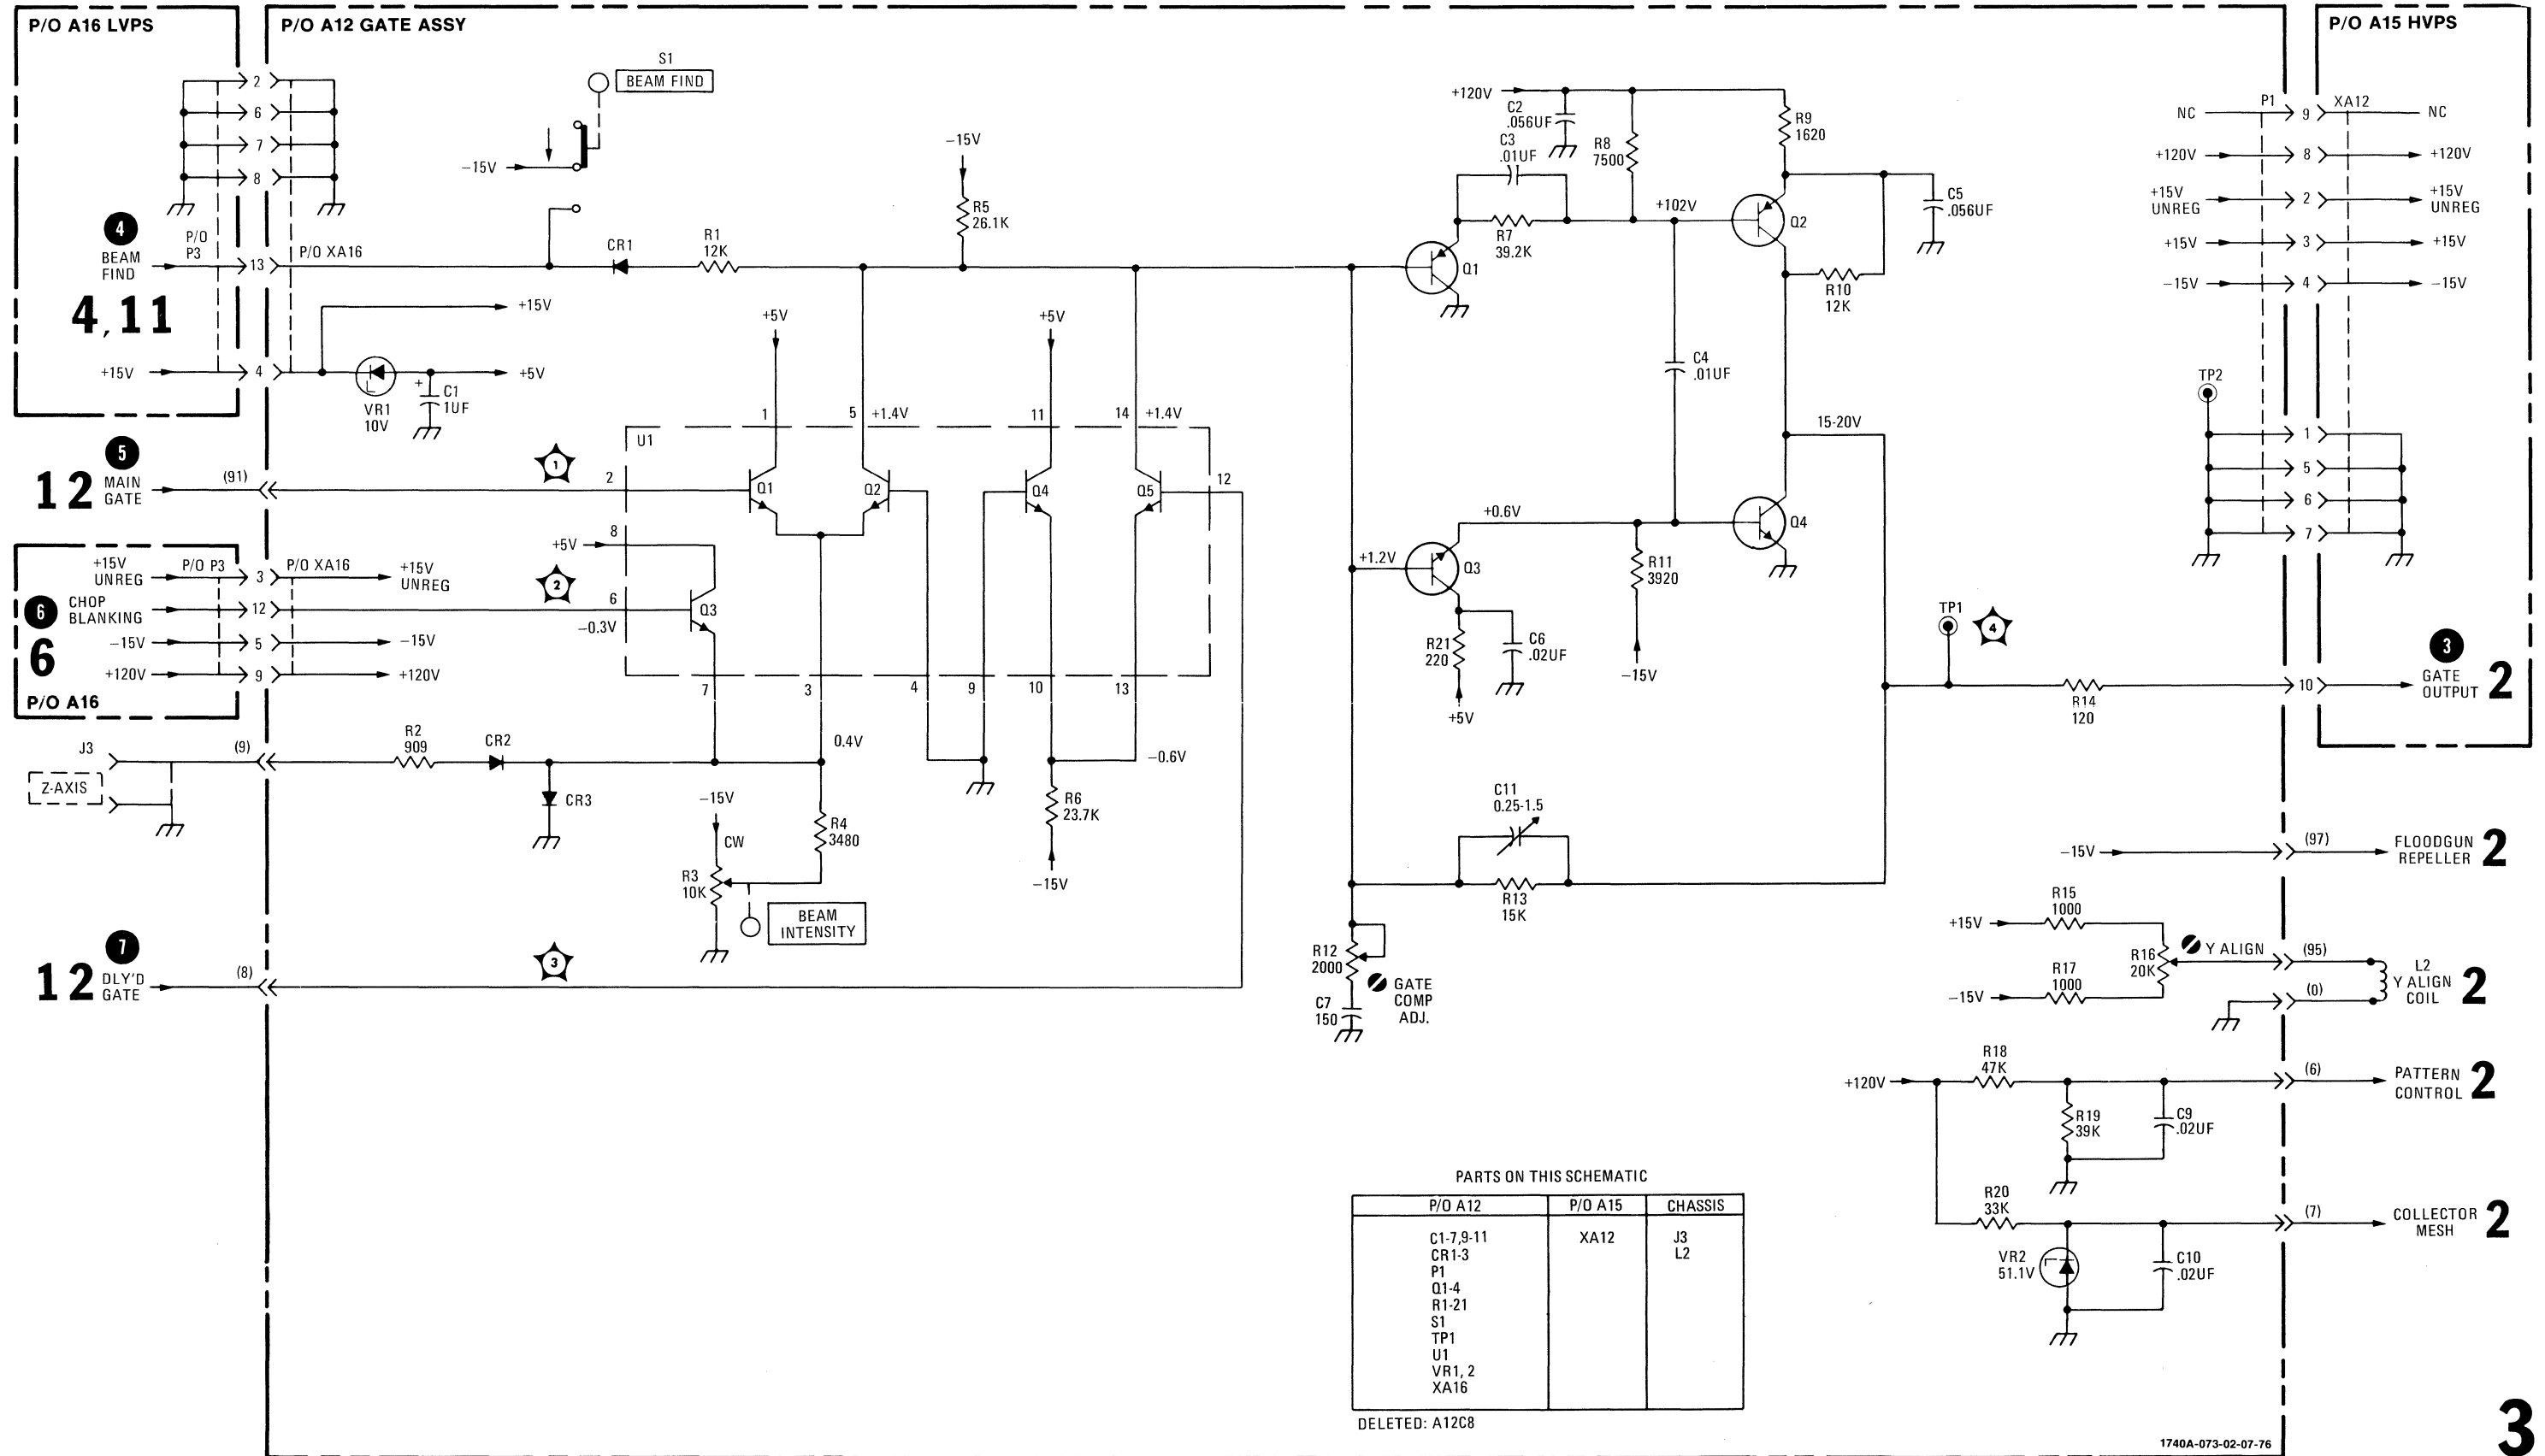

PARTS ON THIS SCHEMATIC

P/O A12	P/O A15	CHASSIS
C1-7,9-11		
CR1-3		
P1	XA12	J3
Q1-4		L2
R1-21		
S1		
TP1		
U1		
VR1, 2		
XA16		

DELETED: A12C8

1740A-073-02-07-76


Figure 8-12.
Service Information, Gate Amplifier Assembly A12 (Sheet 2 of 2)
8-17

**DC VOLTAGE MEASUREMENT CONDITIONS
SCHEMATIC 4**

1. Set front-panel controls in accordance with initial control settings in Section V.
2. All voltages are referenced to chassis ground. All indications are nominal and 15% variation from those indicated should be considered normal.

**WAVEFORM MEASUREMENT CONDITIONS
SCHEMATIC 4**


1. Set front-panel controls in accordance with initial control settings in Section V, except as follows:
 Coupling (channel A) 50Ω
 TRIGGER LEVEL (main) stable display
2. Set monitor oscilloscope TIME/DIV and VOLTS/DIV controls as indicated under waveform(s).
3. Connect HP Model 211B Square-wave Generator 50-ohm output to Model 1740A channel A INPUT connector.
4. Adjust square-wave generator output for 6 divisions of signal amplitude (.6 V) at 5 kHz.

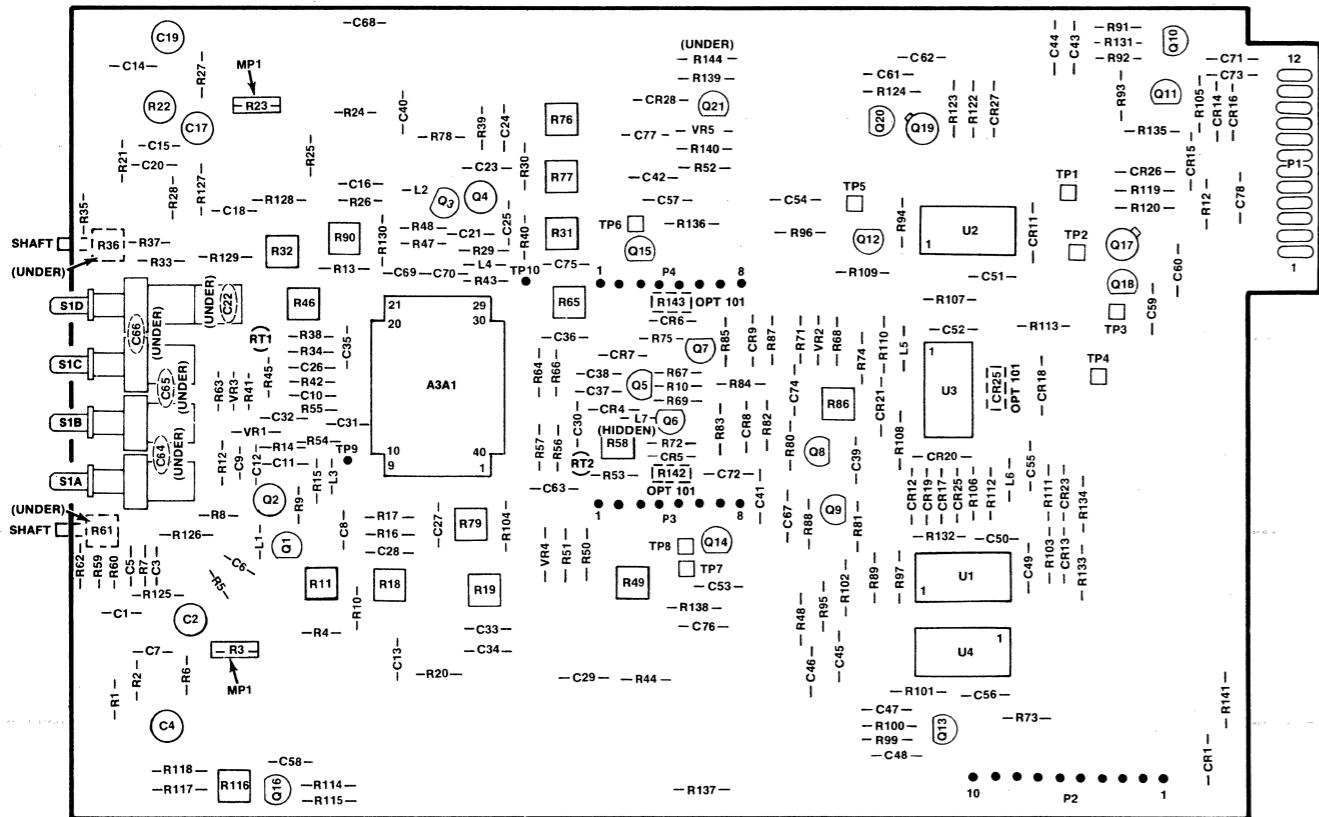


A3

1740A-074-07-76

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
A3A1	C-3	C38	D-3	C76	D-4	Q2	B-3	R19	C-4	R57	C-3	R95	E-4	R133	F-4
C1	A-4	C39	E-3	C77	D-1	Q3	C-2	R20	C-4	R58	D-3	R96	E-2	R134	F-3
C2	A-4	C40	C-1	C78	G-2	Q4	C-2	R21	A-2	R59	A-4	R97	E-4	R135	G-1
C3	A-4	C41	D-3	CR1	G-5	Q5	D-3	R22	A-1	R60	A-4	R98	E-4	R136	D-2
C4	A-5	C42	D-2	CR4	D-3	Q6	D-3	R23	B-1	R61	A-3	R99	E-5	R137	D-5
C5	A-4	C43	F-1	CR5	D-3	Q7	D-3	R24	B-1	R62	A-4	R100	E-5	R138	D-4
C6	B-4	C44	F-1	CR6	D-2	Q8	E-3	R25	B-2	R63	B-3	R101	E-4	R139	D-1
C7	A-4	C45	E-4	CR7	D-3	Q9	E-3	R26	B-2	R64	C-3	R102	E-4	R140	D-2
C8	B-3	C46	E-4	CR8	D-3	Q10	G-1	R27	B-1	R65	D-2	R103	F-4	R141	G-4
C9	B-3	C47	E-4	CR9	D-3	Q11	G-1	R28	A-2	R66	C-3	R104	C-3	R142	D-3
C10	B-3	C48	E-5	CR11	F-2	Q12	E-2	R29	C-2	R67	D-3	R105	G-1	R143	D-2
C11	B-3	C49	F-4	CR12	E-3	Q13	E-5	R30	C-2	R68	E-3	R106	F-3	R144	D-1
C12	B-3	C50	F-4	CR13	F-4	Q14	D-4	R31	D-2	R69	D-3	R107	F-2	RT1	B-2
C13	C-4	C51	F-2	CR14	G-1	Q15	D-2	R32	B-2	R70	D-3	R108	E-3	RT2	D-3
C14	A-1	C52	F-2	CR15	G-2	Q16	B-5	R33	A-2	R71	E-3	R109	E-3	S1A	A-3
C15	A11	C53	D-4	CR16	G-1	Q17	F-2	R34	B-3	R72	D-3	R110	E-3	S1B	A-3
C16	B-2	C54	E-2	CR17	F-3	Q18	F-2	R35	A-2	R73	F-4	R111	F-3	S1C	A-3
C17	B-1	C55	F-3	CR18	F-3	Q19	E-1	R36	A-2	R74	E-3	R112	F-3	S1D	A-2
C18	B-2	C56	F-4	CR19	E-3	Q20	E-1	R37	A-2	R75	D-2	R113	F-2	TP1	F-2
C19	A-1	C57	D-2	CR20	E-3	Q21	D-1	R38	B-2	R76	C-1	R114	B-5	TP2	F-2
C20	A-2	C58	B-5	CR21	E-3	R1	A-4	R39	C-1	R77	D-2	R115	B-5	TP3	F-2
C21	C-2	C59	E-2	CR23	F-3	R2	A-4	R40	C-2	R78	C-1	R116	B-5	TP4	F-3
C22	B-2	C60	E-2	CR25	F-3	R3	B-4	R41	B-3	R79	C-3	R117	A-5	TP5	E-2
C23	C-2	C61	E-1	CR26	G-3	R4	B-4	R42	B-3	R80	E-3	R118	A-5	TP6	D-2
C24	C-1	C62	E-1	CR27	F-1	R5	B-4	R43	C-2	R81	E-3	R119	G-2	TP7	D-4
C25	C-2	C63	C-3	CR28	D-1	R6	A-4	R44	D-4	R82	E-3	R120	G-2	TP8	D-4
C26	B-3	C64	A-3	L1	B-4	R7	A-4	R45	B-3	R83	D-3	R121	G-2	TP9	B-3
C27	C-3	C65	A-3	L2	C-2	R8	B-3	R46	B-2	R84	D-3	R122	F-1	TP10	C-2
C28	C-4	C66	A-2	L3	B-3	R9	B-3	R47	C-2	R85	D-3	R123	F-1	U1	F-4
C29	D-4	C67	E-3	L4	C-2	R10	D-3	R48	C-2	R86	E-3	R124	E-1	U2	F-2
C30	D-3	C68	B-1	L5	E-3	R11	B-4	R49	D-4	R87	E-3	R125	A-4	U3	F-3
C31	B-3	C69	C-2	L6	F-3	R12	B-3	R50	D-4	R88	E-3	R126	A-3	U4	F-4
C32	B-3	C70	C-2	L7	D-3	R13	B-2	R51	D-4	R89	E-4	R127	B-2	VR1	F-4
C33	C-4	C71	G-1	P1	G-2	R14	B-3	R52	D-2	R90	B-2	R128	B-2	VR2	E-3
C34	C-4	C72	D-3	P2	F-5	R15	B-3	R53	D-3	R91	F-1	R129	B-2	VR3	B-3
C35	B-3	C73	G-1	P3	D-3	R16	C-3	R54	B-3	R92	F-1	R130	C-2	VR4	C-4
C36	D-2	C74	E-3	P4	D-2	R17	C-3	R55	B-3	R93	F-1	R131	F-1	VR5	D-1
C37	D-3	C75	C-2	Q1	B-4	R18	C-4	R56	C-3	R94	E-2	R132	E-4		

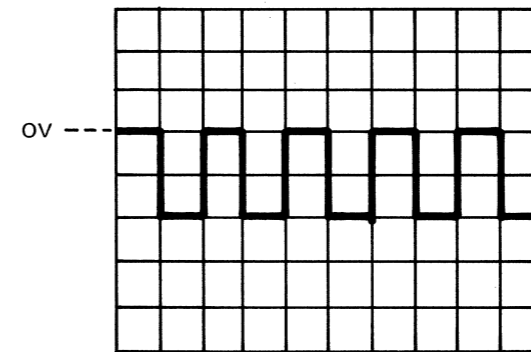

1 2 .5 V/DIV
.1 mSEC/DIV

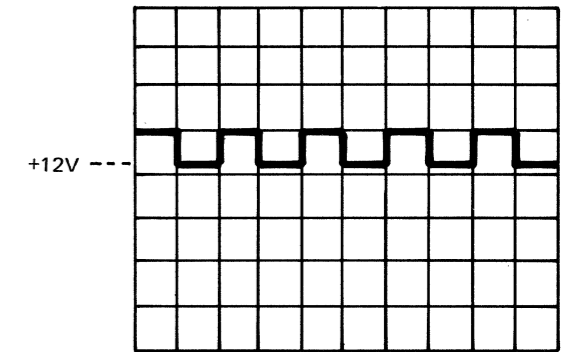

4 5 V/DIV
.1 mSEC
DEPRESS TRIG VIEW


NOTE:

1. OPTION 101: BD. NO. CHANGES TO 01740-66517 AND THE FOLLOWING COMPONENTS ARE DELETED: C77, CR28, 29, Q21, R139 AND R140.

R142 AND R143 ARE ADDED, AND CR25 IS MOVED TO OPT 101 POSITION.

2. P2 PIN NUMBERS DO NOT AGREE WITH MARKING ON CIRCUIT BD.

C22, C64, C65 AND C66 ARE LOADED ON BACK.

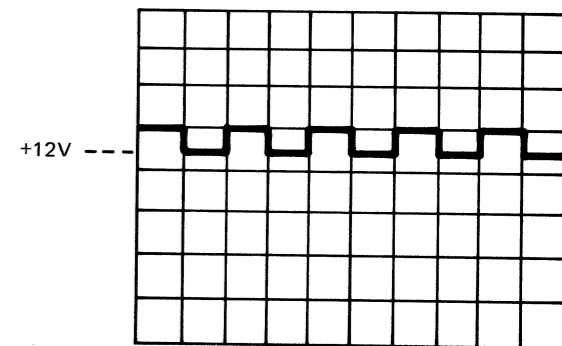

3 .5 V/DIV
.1 mSEC/DIV

1740A-075-01-10-75

Figure 8-13. Service Information, Vertical Preamplifier Assembly A3 (Sheet 1 of 2)


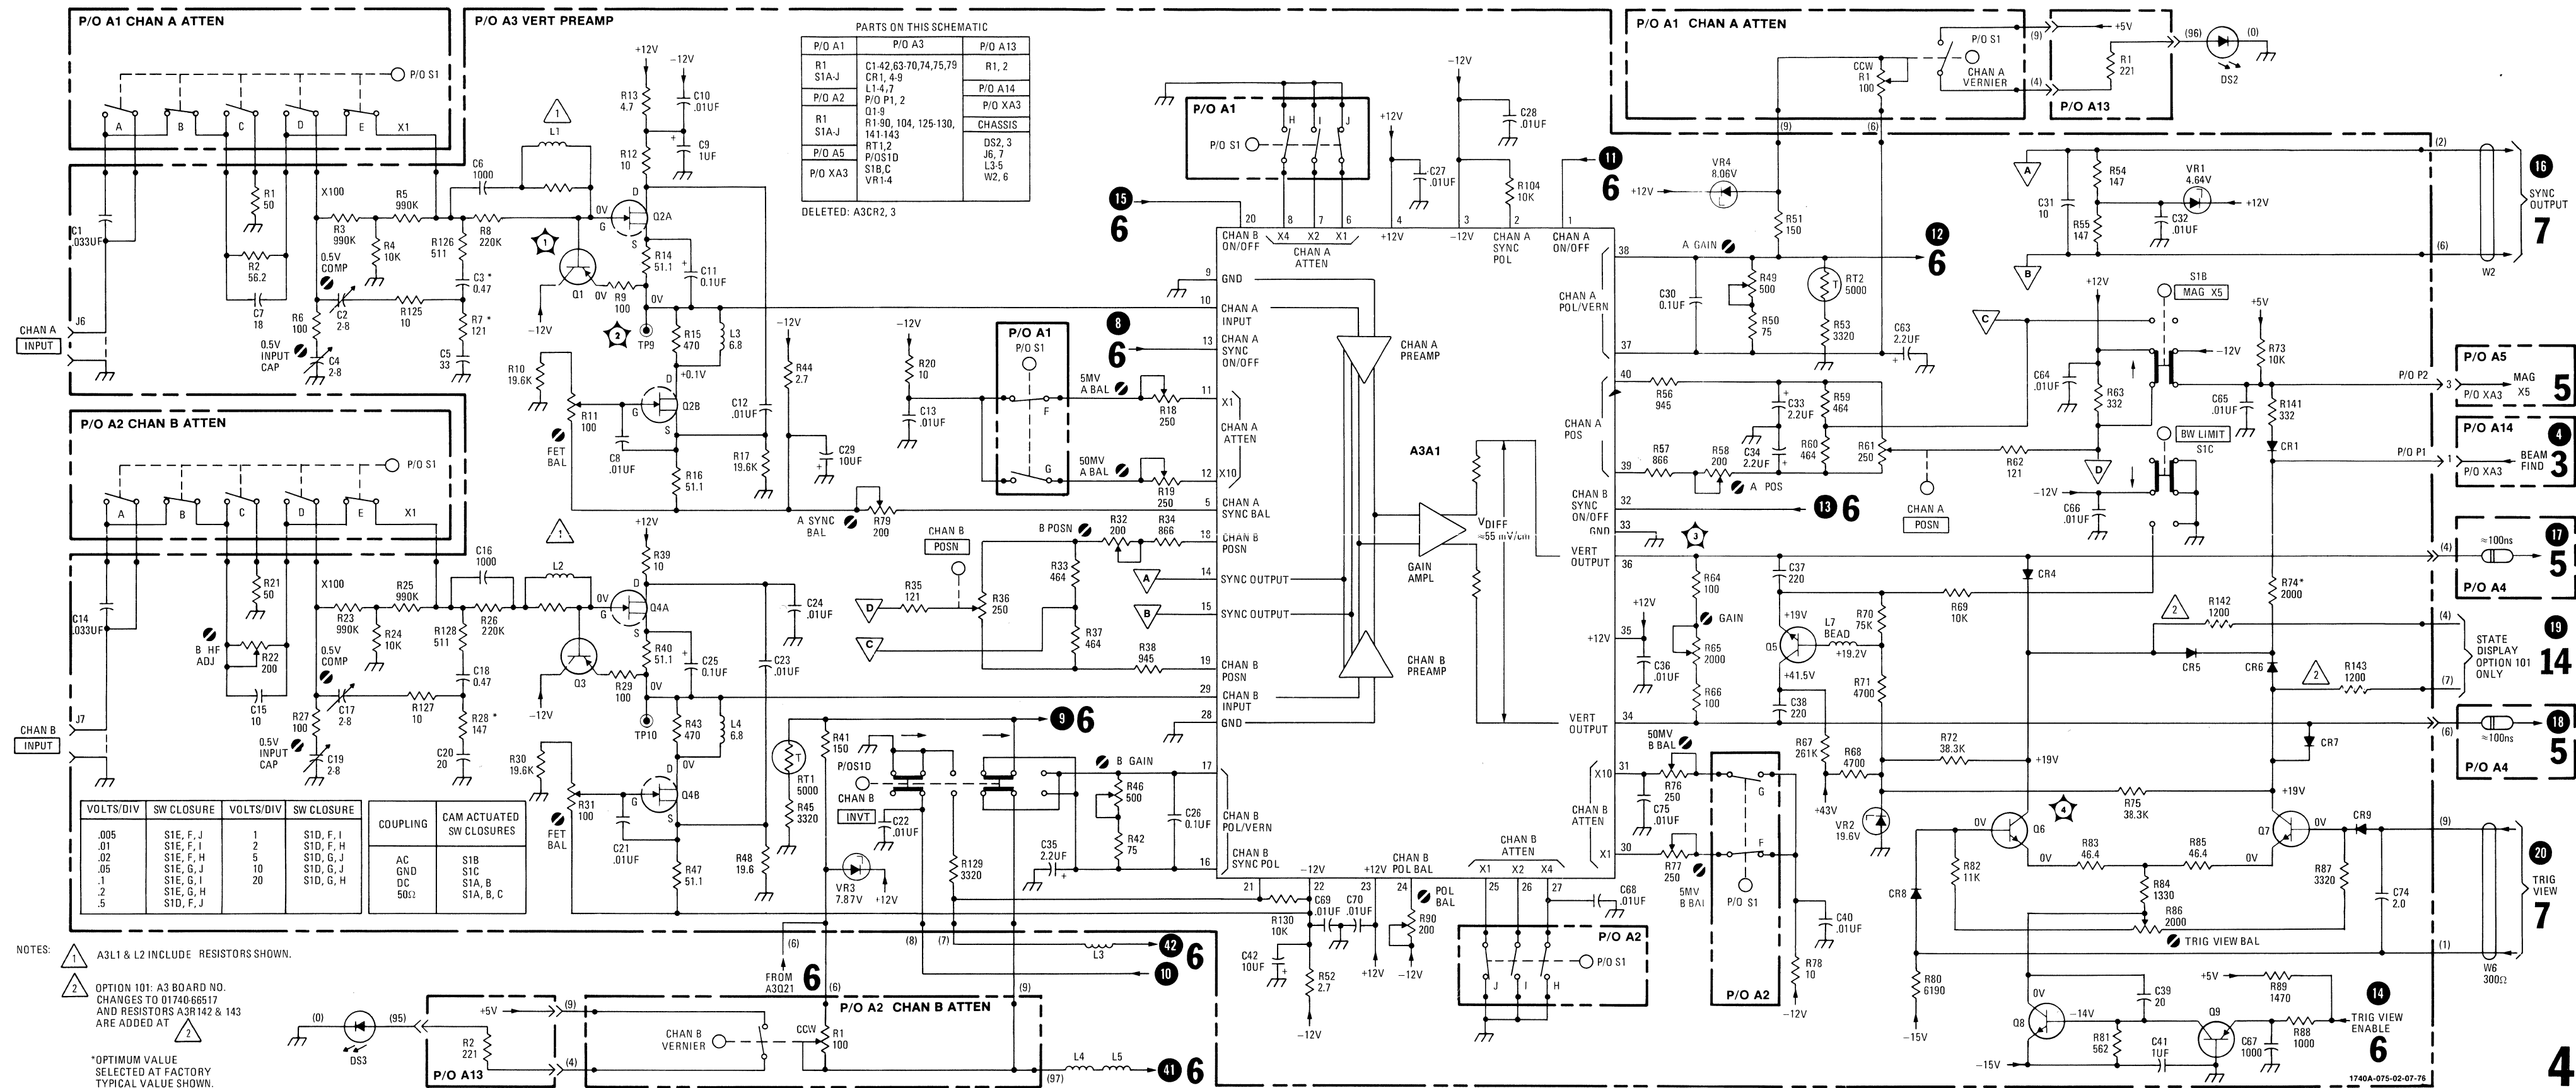


Figure 8-13. Service Information, Vertical Preamp Assembly A3 (Sheet 2 of 2) 8-19

**DC VOLTAGE MEASUREMENT CONDITIONS
SCHEMATIC 5**

1. Set front-panel controls in accordance with initial control settings in Section V.
2. All voltages are referenced to chassis ground. All indications are nominal and 15% variation from those indicated should be considered normal.



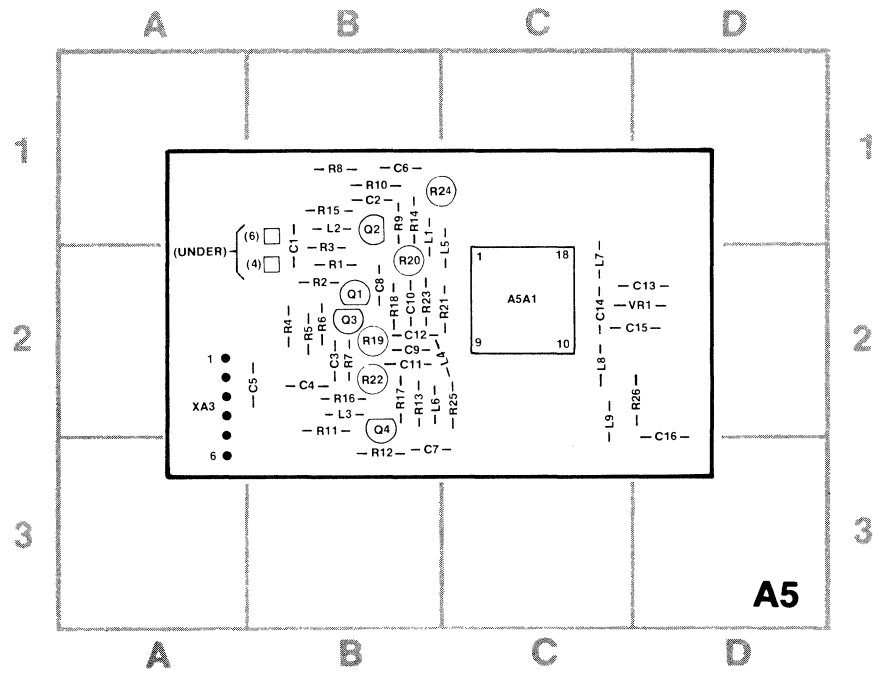


1740A-076-10-75

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
A5A1	C-2	C10	B-2	L4	C-2	R1	B-2	R11	B-2	R21	C-2
C1	B-1	C11	B-2	L5	C-2	R2	B-2	R12	B-3	R22	B-2
C2	B-1	C12	B-2	L6	B-2	R3	B-2	R13	B-2	R23	B-2
C3	B-2	C13	D-2	L7	C-2	R4	B-2	R14	B-1	R24	B-1
C4	B-2	C14	C-2	L8	C-2	R5	B-2	R15	B-1	R25	C-2
C5	B-2	C15	D-2	L9	C-2	R6	B-2	R16	B-2	R26	D-2
C6	B-1	C16	D-2	Q1	B-2	R7	B-2	R17	B-2	VR1	D-2
C7	B-3	L1	B-1	Q2	B-1	R8	B-1	R18	B-2	XA3	A-2
C8	B-2	L2	B-1	Q3	B-2	R9	B-1	R19	B-2		
C9	B-2	L3	B-2	Q4	B-2	R10	B-1	R20	B-2		

**WAVEFORM MEASUREMENT CONDITIONS
SCHEMATIC 5**


1. Set front-panel controls in accordance with initial control settings in Section V, except as follows:
Coupling (channel A) 50Ω
2. Set monitor oscilloscope TIME/DIV and VOLTS/DIV controls as indicated under waveform(s).
3. Connect HP Model 211B Square-wave Generator 50-ohm output to Model 1740A channel A INPUT connector.
4. Adjust square-wave generator output for 6 divisions of signal amplitude (.6 V) at 5 kHz.

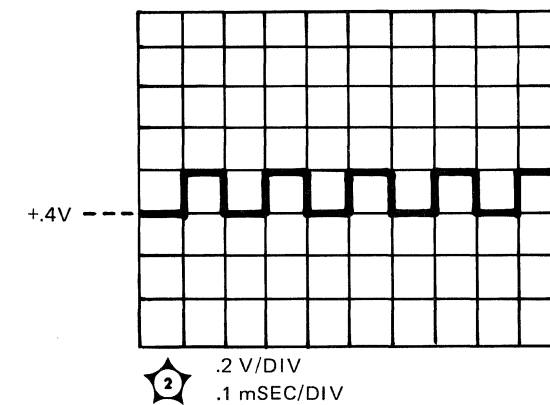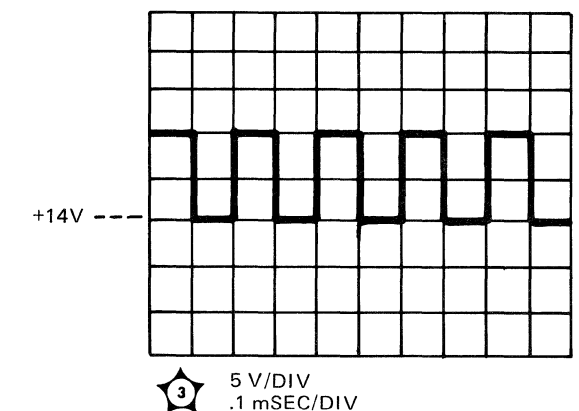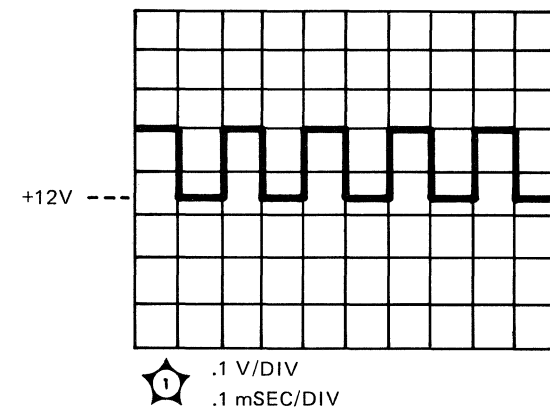

1740A-077-01-10-75

Figure 8-14. Service Information, Vertical Output Assembly A5 (Sheet 1 of 2)

A5 VERTICAL OUTPUT

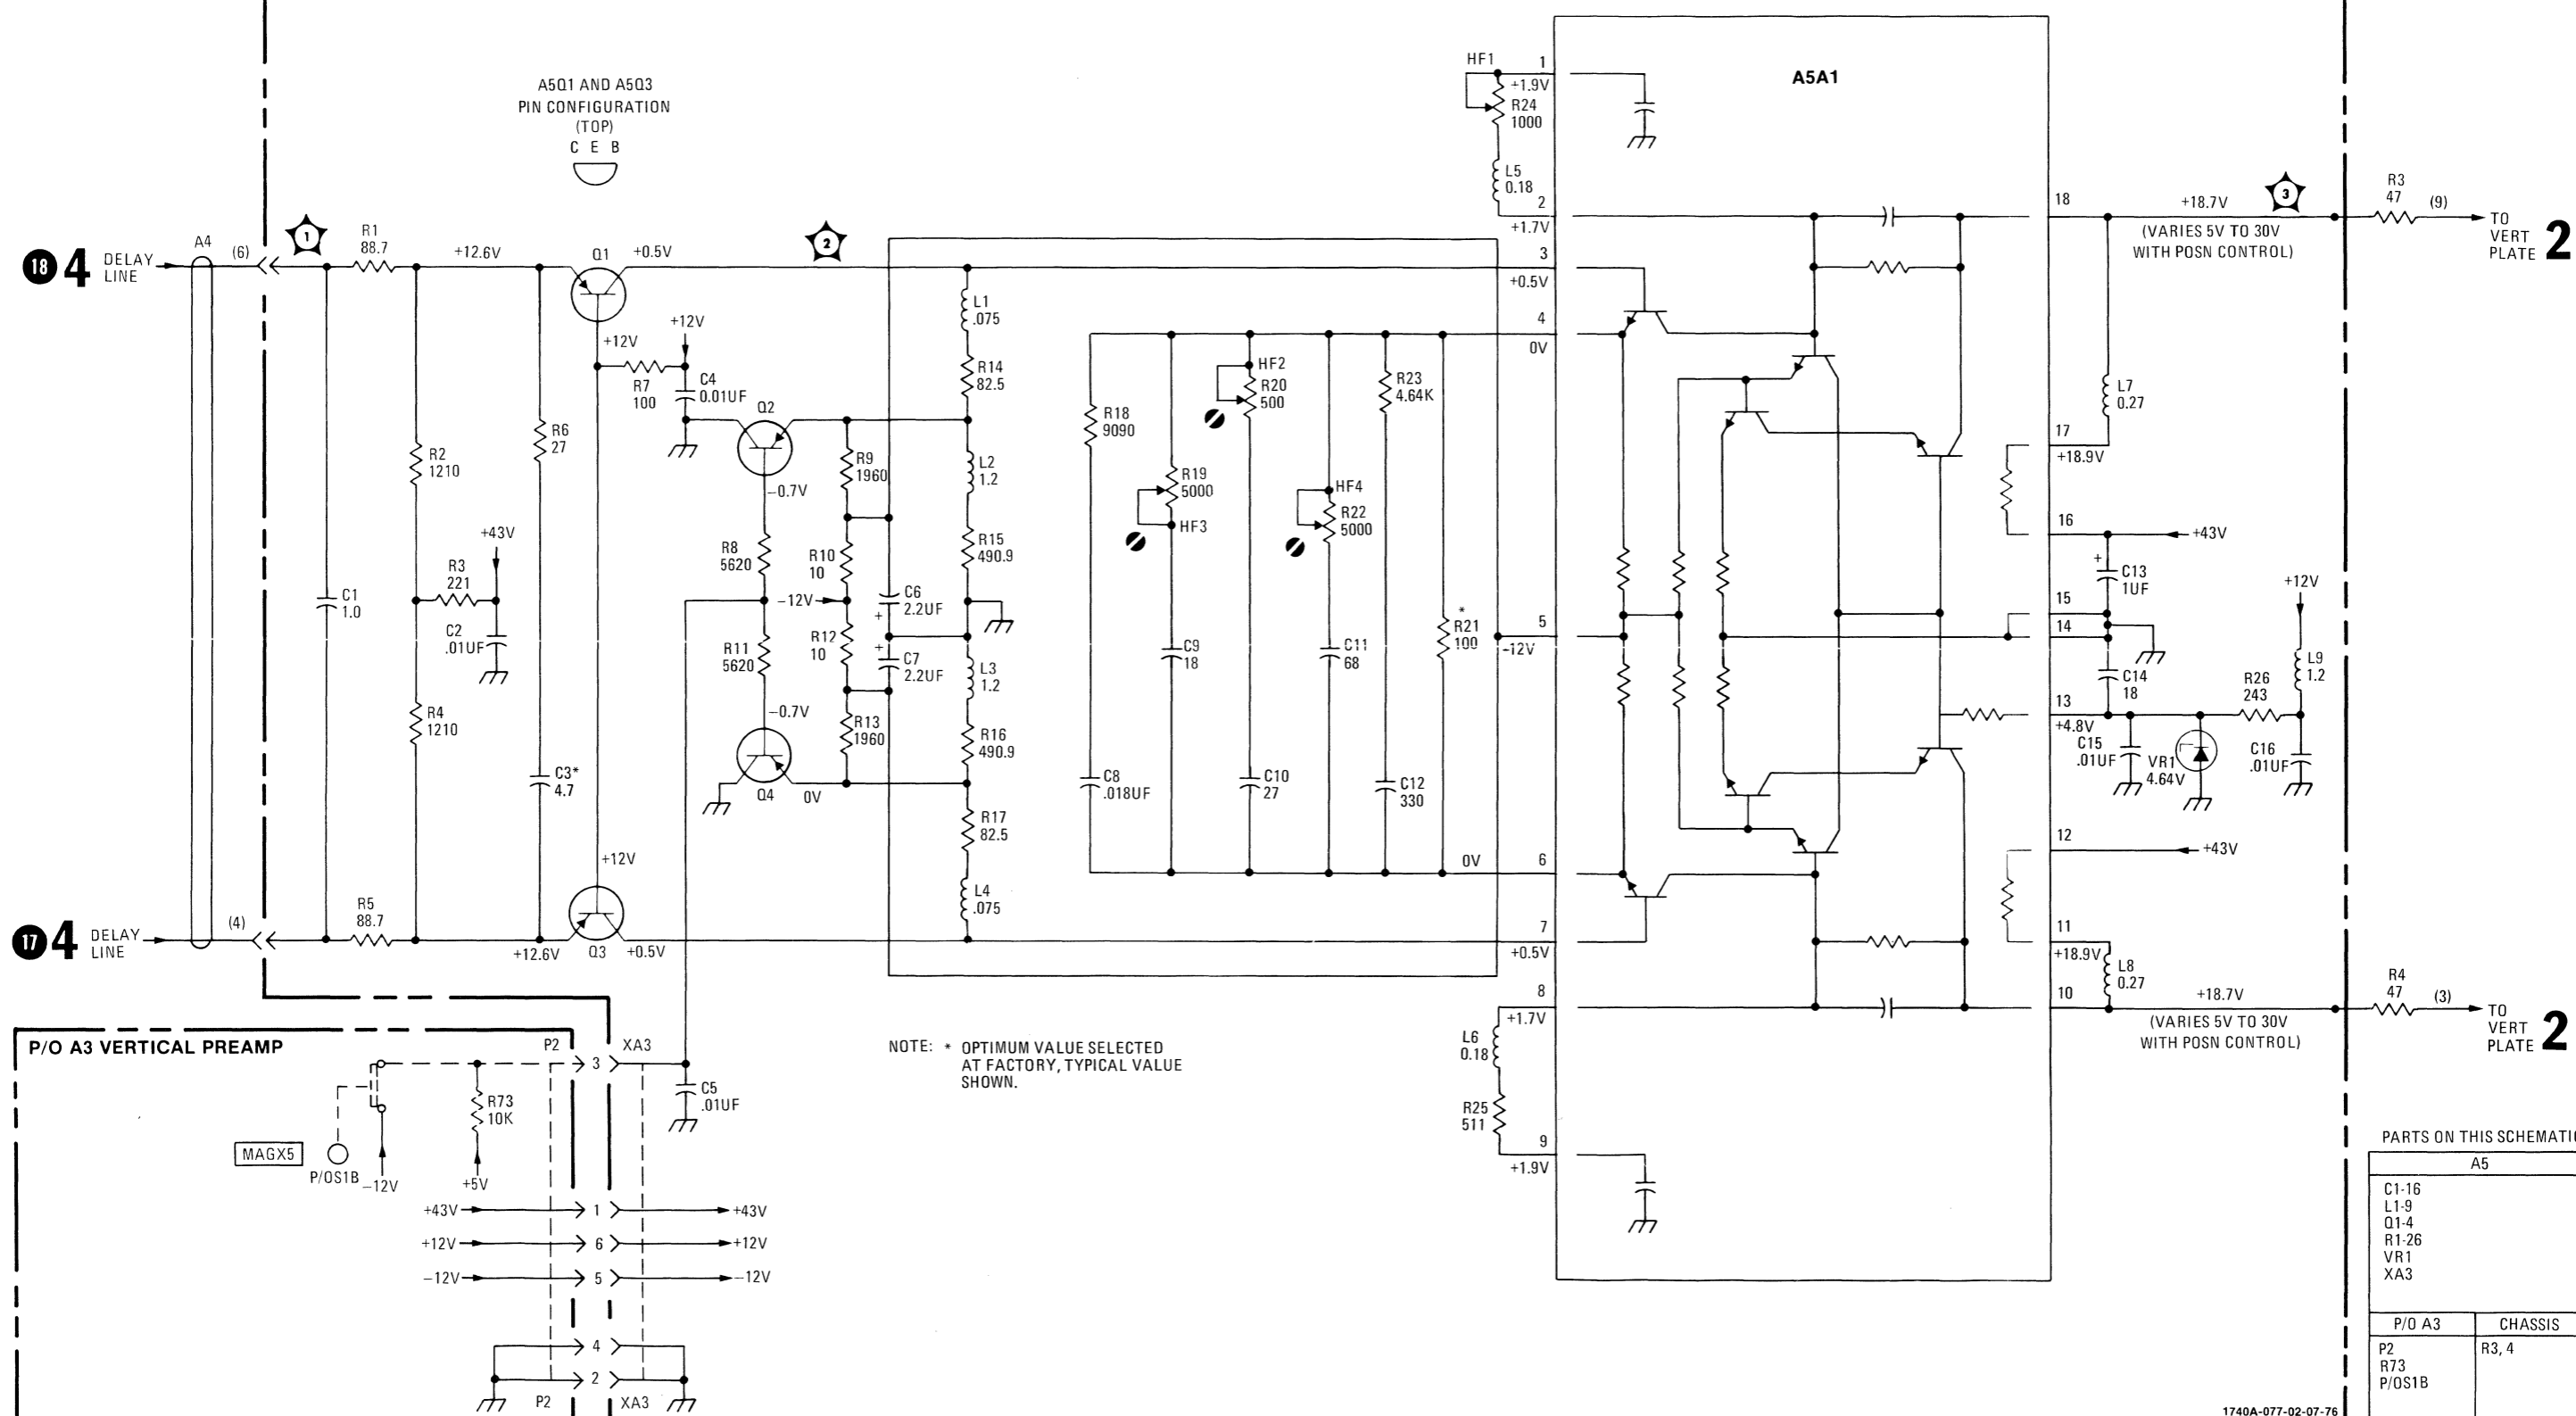

PARTS ON THIS SCHEMATIC

A5	
C1-16	
L1-9	
Q1-4	
R1-26	
VR1	
XA3	
P/O A3	CHASSIS
P2	R3, 4
R73	
P/OS1B	

1740A-077-02-07-76

5

Figure 8-14.
Service Information, Vertical Output Assembly A5 (Sheet 2 of 2)
8-21


**DC VOLTAGE MEASUREMENT CONDITIONS
SCHEMATIC 6**

1. Set front-panel controls in accordance with initial control settings in Section V.
2. All voltages are referenced to chassis ground. All indications are nominal and 15% variation from those indicated should be considered normal.





**WAVEFORM MEASUREMENT CONDITIONS
SCHEMATIC 6**

1. Set front-panel controls in accordance with initial control settings in Section V, except as follows:

Coupling (channel A)	50Ω
TRIGGER LEVEL (main)	stable display
DISPLAY	ALT
TRIG VIEW	engaged
2. Set monitor oscilloscope TIME/DIV and VOLTS/DIV controls as indicated under waveform(s).
3. Connect HP Model 211B Square-wave Generator 50-ohm output to Model 1740A channel A INPUT connector.
4. Adjust square-wave generator output for 6 divisions of signal amplitude (.6V) at 5 kHz.

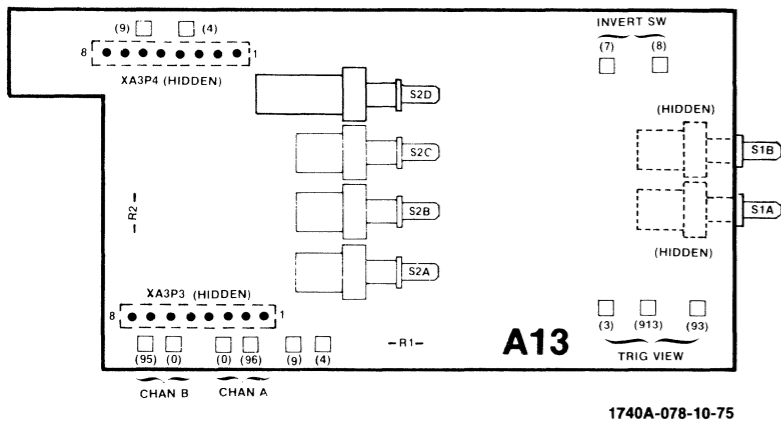

NOTE
See Figure 8-13
for Assembly A3
Component Identification

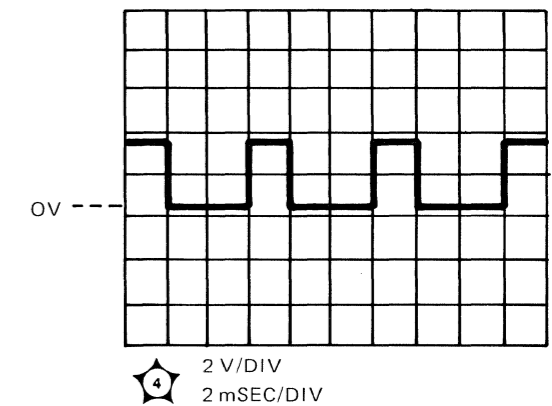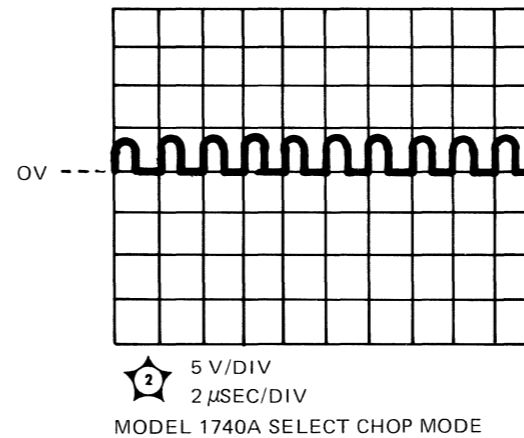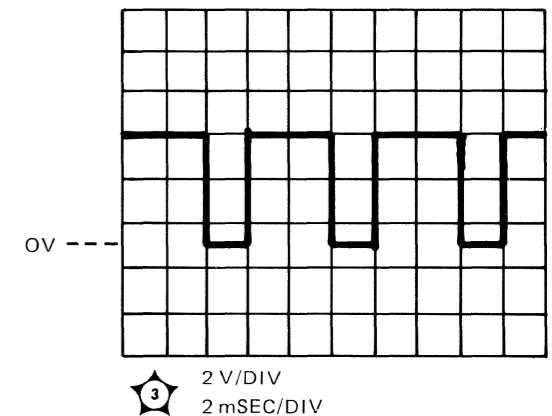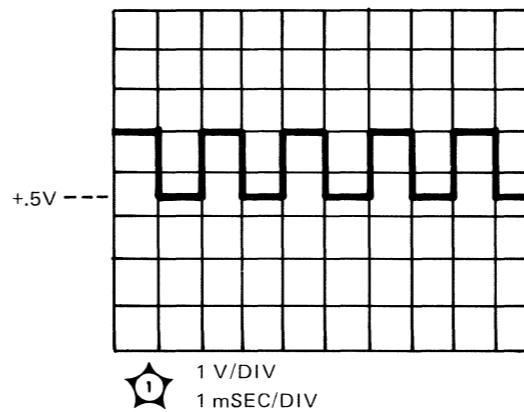

1740A-079-01-10-75

Figure 8-15. Service Information, Vertical Control Switching Assembly A13 and Vertical Preamplifier Assembly A3 (Sheet 1 of 2)


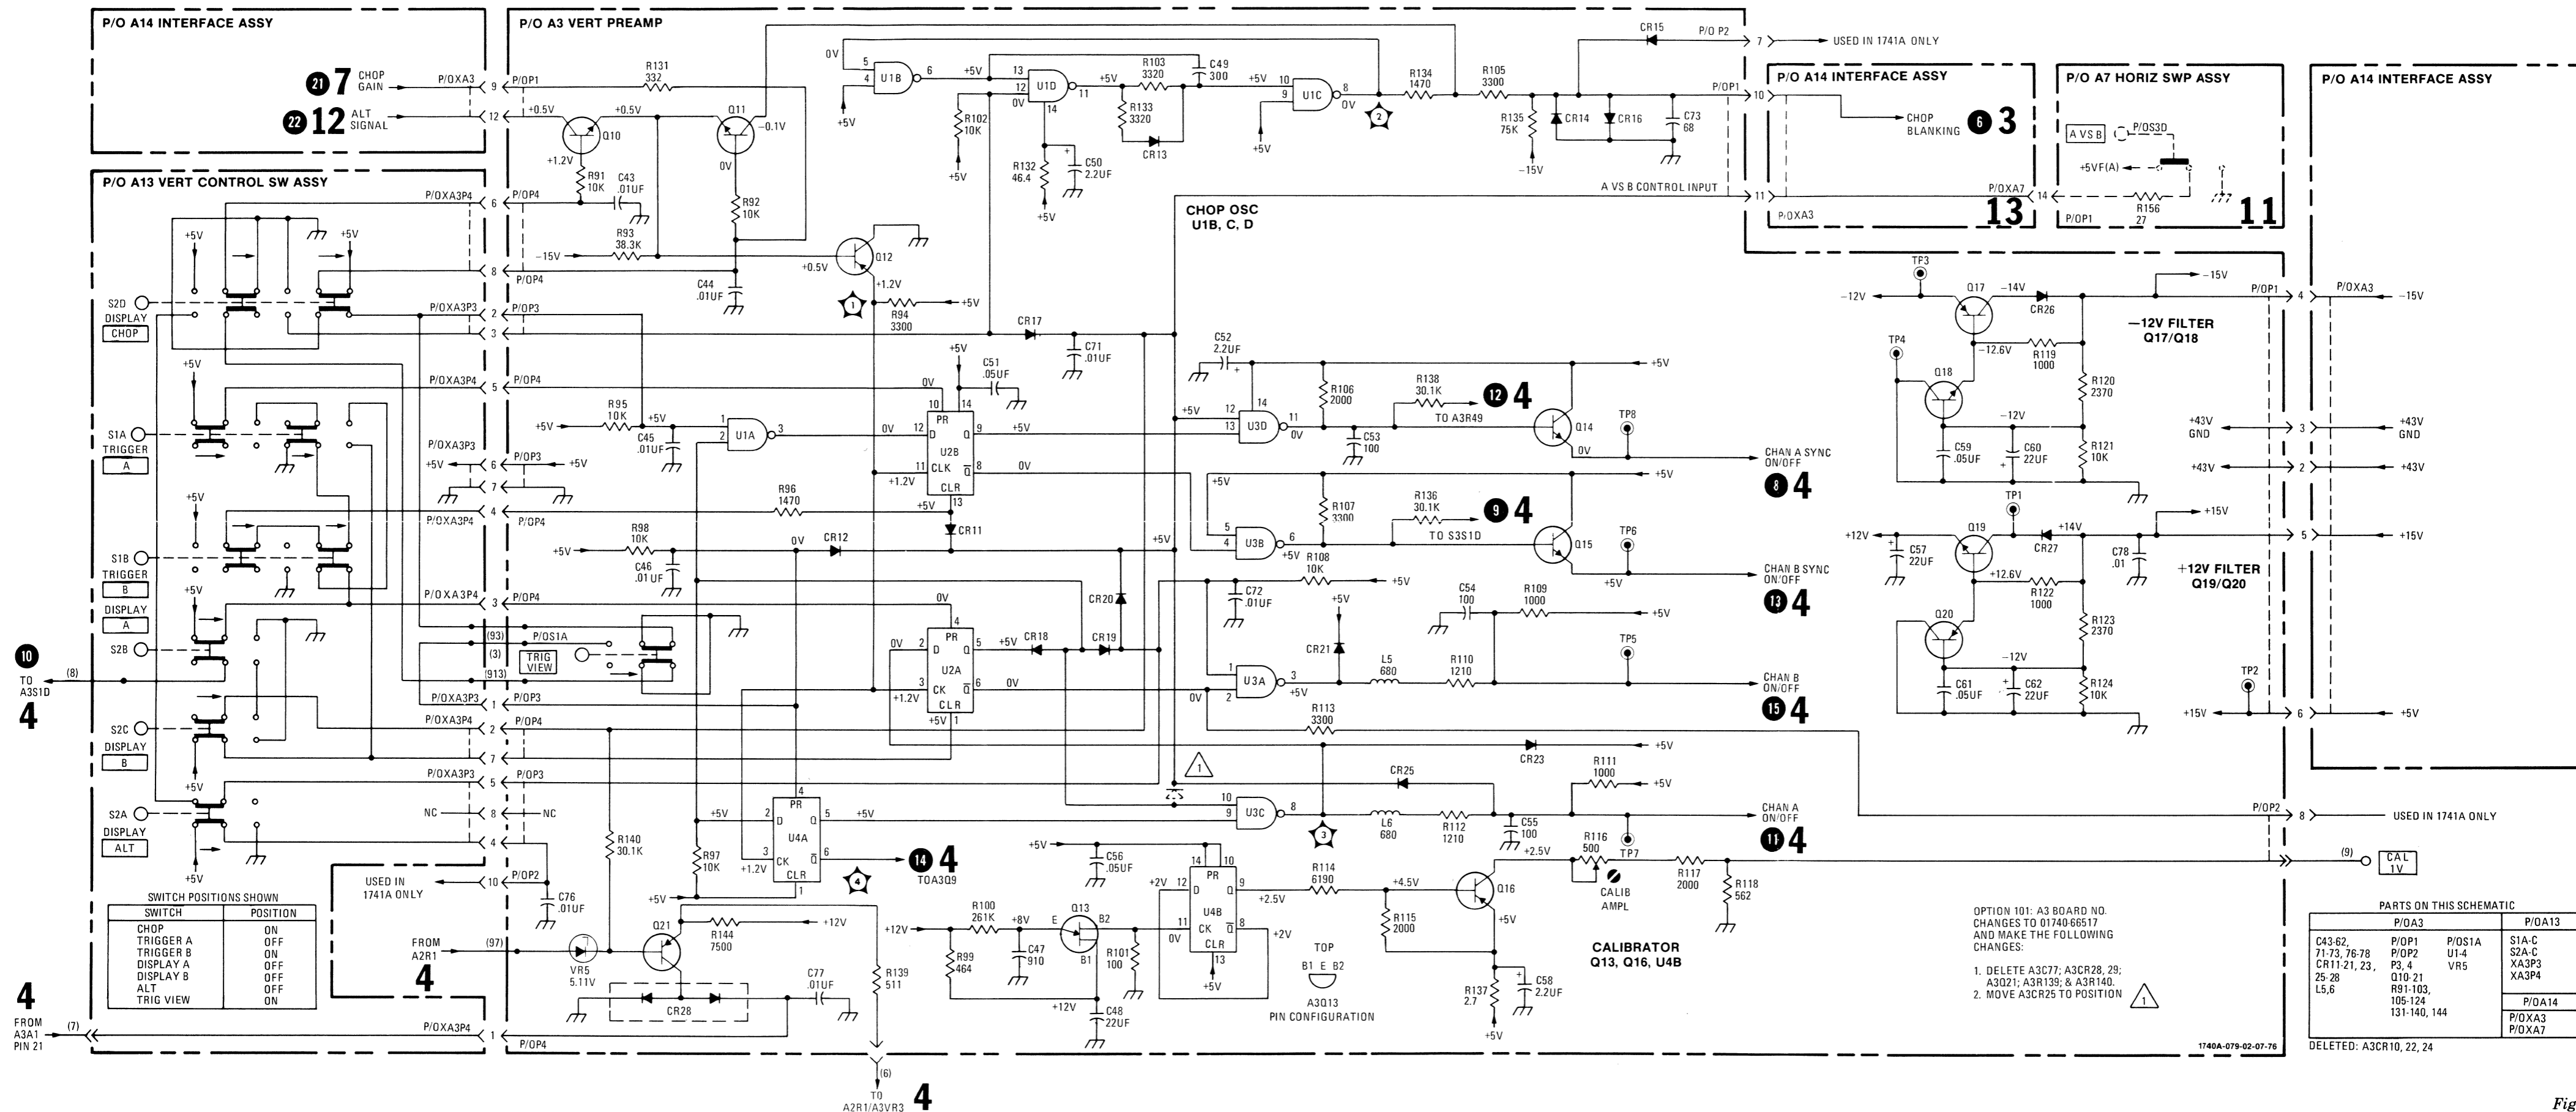


Figure 8-15. Service Information, Vertical Control Switching Assembly A13 and Vertical Preamplifier Assembly A3 (Sheet 2 of 2) 8-23

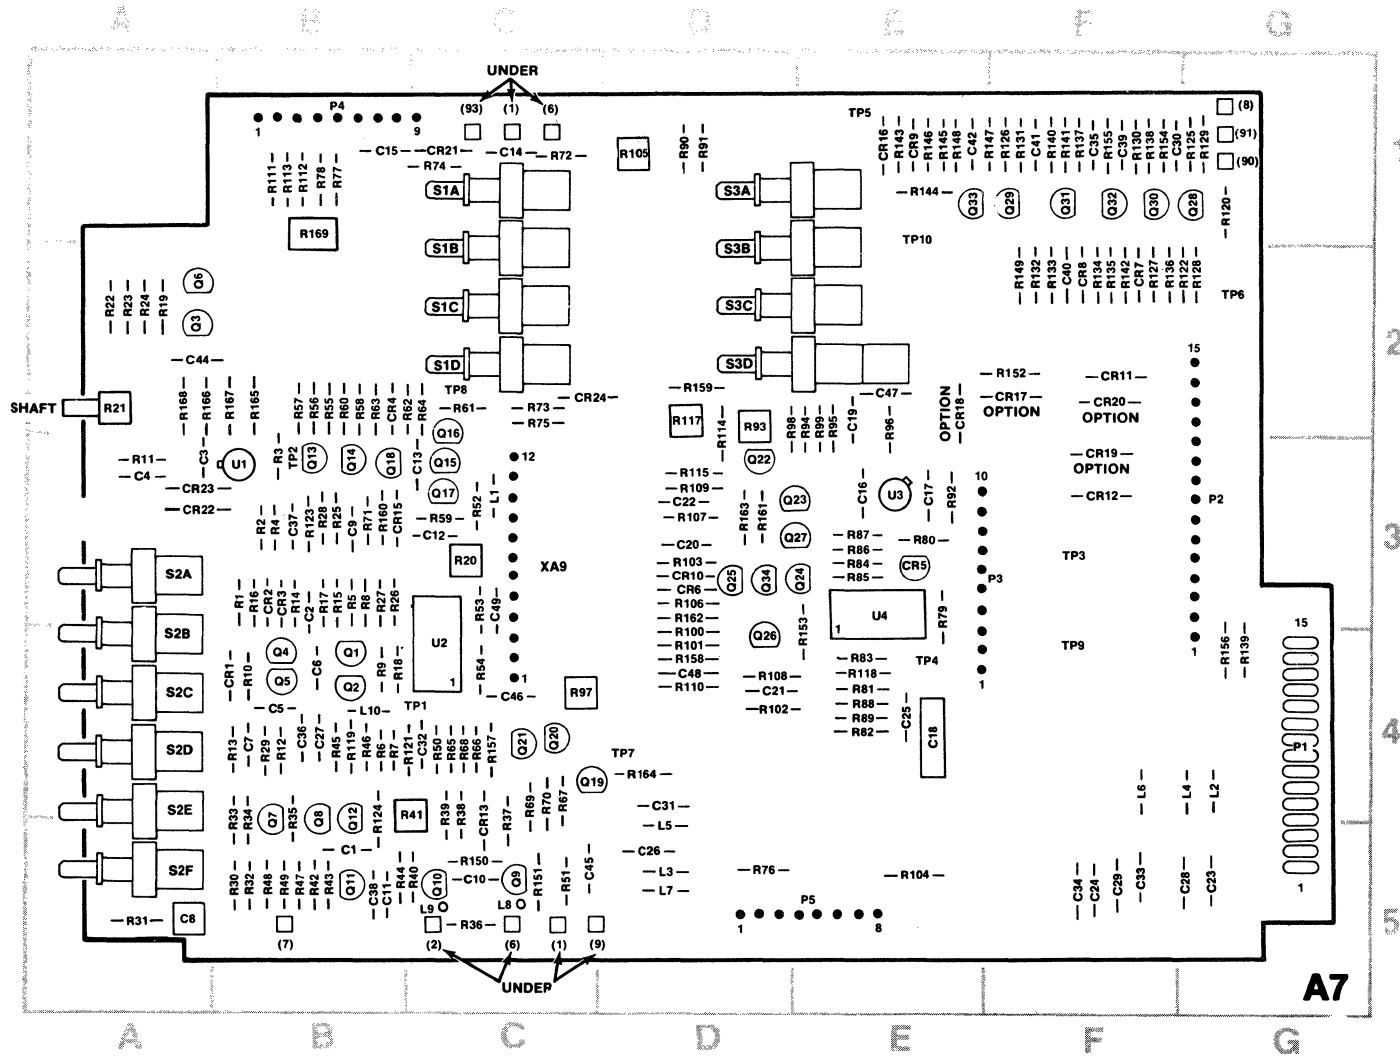





1740A-080-07-76

**DC VOLTAGE MEASUREMENT CONDITIONS
SCHEMATIC 7**

1. Set front-panel controls in accordance with initial control settings in Section V.
2. All voltages are referenced to chassis ground. All indications are nominal and 15% variation from those indicated should be considered normal.

**WAVEFORM MEASUREMENT CONDITIONS
SCHEMATIC 7**

1. Set front-panel controls in accordance with initial control settings in Section V, except as follows:
 - Coupling (channel A) 50Ω
 - TRIGGER LEVEL (main) stable display
2. Set monitor oscilloscope TIME/DIV and VOLTS/DIV controls as indicated under waveform(s).
3. Connect HP Model 211B Square-wave Generator 50-ohm output to Model 1740A channel A INPUT connector.
4. Adjust square-wave generator output for 6 divisions of signal amplitude (.6 V) at 5 kHz.

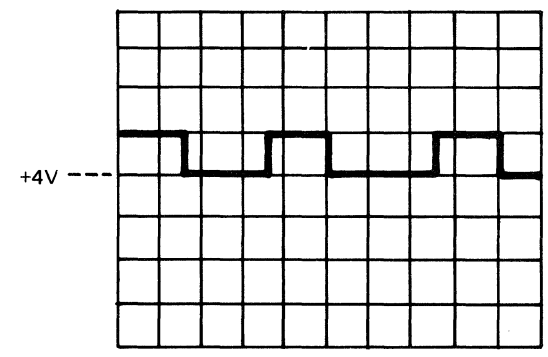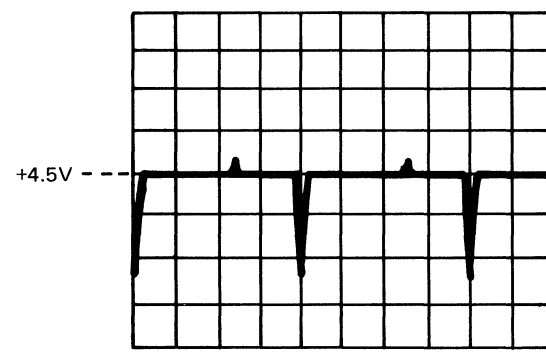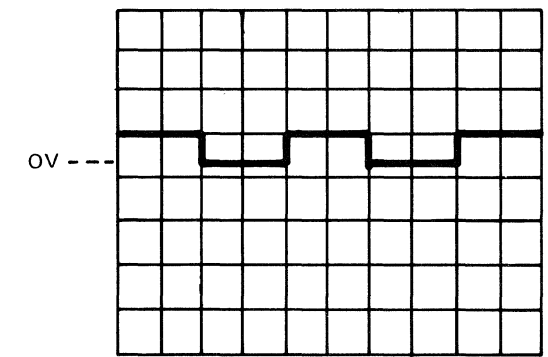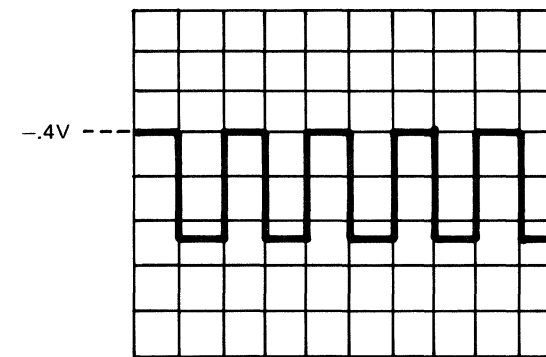

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	B-5	C41	F-1	L20	B-4	R1	R-2	R41	C-4	R80	E-3	R120	G-1	R159	D-2
C2	B-3	C42	E-1	P2	B-3	R2	B-3	R42	B-3	R81	E-4	R121	C-4	R160	B-3
C3	C-3	C43	A-2	P3	F-3	R3	B-3	R43	B-5	R82	E-4	R122	F-2	R161	D-3
C4	B-3	C44	C-5	P4	B-1	R4	B-3	R44	B-5	R83	E-4	R123	B-3	R162	D-3
C5	B-4	C45	C-4	P5	C-4	R5	B-3	R45	B-3	R84	B-4	R124	B-4	R163	D-3
C6	B-4	C46	E-2	Q1	B-4	R6	B-4	R46	B-4	R85	E-3	R125	G-1	R164	D-4
C7	B-4	C47	D-4	Q2	B-4	R7	B-4	R47	B-5	R86	E-3	R126	F-1	R165	B-2
C8	A-5	C48	C-3	Q3	A-2	R8	B-3	R48	B-5	R87	E-3	R127	F-2	R166	A-2
C9	B-3	C49	B-4	Q4	B-4	R9	B-4	R49	B-5	R88	E-4	R128	F-2	R167	B-2
C10	C-5	CR1	B-3	Q5	B-4	R10	B-4	R50	C-4	R89	E-4	R129	G-1	R168	A-2
C11	B-5	CR2	B-3	Q6	A-2	R11	A-3	R51	C-5	R90	D-1	R130	F-1	R169	B-1
C12	C-3	CR3	B-2	Q7	B-5	R12	B-4	R52	C-3	R91	D-1	R131	F-1	S1A	C-1
C13	C-3	CR4	B-2	Q8	B-5	R13	B-4	R53	C-3	R92	E-3	R132	F-2	S1B	C-2
C14	C-1	CR5	E-3	Q9	C-5	R14	B-3	R54	C-4	R93	D-2	R133	F-2	S1C	C-2
C15	B-1	CR6	F-2	Q10	C-5	R15	B-3	R55	B-2	R94	E-2	R134	F-2	S1D	C-2
C16	E-3	CR7	F-2	Q11	B-5	R16	B-3	R56	B-2	R95	E-2	R135	F-2	S2A	A-3
C17	E-3	CR8	E-1	Q12	B-5	R17	B-3	R57	B-2	R96	E-2	R136	F-2	S2B	A-4
C18	E-4	CR9	D-3	Q13	B-3	R18	B-4	R58	B-2	R97	C-4	R137	F-1	S2C	A-4
C19	E-2	CR10	F-2	Q14	B-3	R19	A-2	R59	C-3	R98	D-2	R138	F-1	S2D	A-4
C20	D-3	CR11	F-3	Q15	C-3	R20	C-3	R60	B-2	R99	E-2	R139	G-4	S2E	A-4
C21	D-4	CR12	B-4	Q16	E-3	R21	A-2	R61	C-2	R100	D-4	R140	F-1	S2F	A-5
C22	G-5	CR13	C-4	Q17	C-3	R22	A-2	R62	C-2	R101	D-4	R141	F-1	S3A	D-1
C23	G-5	CR14	E-1	Q18	B-3	R23	A-2	R63	B-2	R102	D-4	R142	F-2	S3B	D-2
C24	F-5	CR15	F-2	Q19	C-4	R24	A-2	R64	C-2	R103	D-3	R143	E-1	S3C	D-2
C25	E-4	CR16	E-2	Q20	C-4	R25	B-3	R65	C-4	R104	E-5	R144	E-1	S3D	D-2
C26	D-5	CR17	F-3	Q21	C-4	R26	B-3	R66	C-4	R105	D-1	R145	E-1	TP1	C-4
C27	B-4	CR18	F-2	Q22	D-3	R27	B-3	R67	C-4	R106	D-3	R146	E-1	TP2	B-3
C28	G-5	CR19	C-1	Q23	E-3	R28	B-3	R68	C-4	R107	D-3	R147	E-1	TP3	F-3
C29	F-5	CR20	A-3	Q24	E-3	R29	B-4	R69	C-4	R108	D-4	R148	E-1	TP4	E-4
C30	F-1	CR21	A-3	Q25	F-3	R30	B-3	R70	C-4	R109	D-3	R149	F-1	TP5	E-1
C31	F-1	CR22	C-3	Q26	D-4	R31	A-5	R71	B-3	R110	D-4	R150	C-5	TP6	G-2
C32	C-4	L1	C-3	Q27	E-3	R32	B-5	R72	C-1	R111	B-1	R151	C-5	TP7	D-4
C33	F-5	L2	G-4	Q28	G-1	R33	B-5	R73	C-2	R112	B-1	R152	F-2	TP8	C-2
C34	F-5	L3	D-5	Q29	F-1	R34	B-5	R74	C-1	R113	B-1	R153	E-4	TP9	F-4
C35	F-1	L4	G-4	Q30	F-1	R35	B-5	R75	C-2	R114	D-2	R154	F-1	TP10	E-1
C36	B-4	L5	D-5	Q31	F-1	R36	C-5	R76	D-5	R115	D-3	R155	F-1	U1	B-3
C37	B-3	L6	F-4	Q32	F-1	R37	C-4	R77	B-1	R116	D-2	R156	G-4	U2	C-4
C38	B-5	L7	D-5	Q33	F-1	R38	C-4	R78	B-1	R117	D-2	R157	C-4	U3	E-3
C39	F-1	L8	C-5	Q34	D-3	R39	C-4	R79	E-3	R118	B-4	R158	D-4	U4	E-3
C40	F-2	L9	C-5	R1	B-3	R40	C-5			R119	B-4	R158	D-4	XA9	C-3

1740A-081-01-10-75


Figure 8-16. Service Information, Main Trigger, P/O Assembly A7 (Sheet 1 of 2)

**DC VOLTAGE MEASUREMENT CONDITIONS
SCHEMATIC 8**

- Set front-panel controls in accordance with initial control settings in Section V, except as follows:
 - Main TRIGGER LEVEL fully cw
 - AUTO/NORM NORM
 - SINGLE engaged
 - RESET light should be off
- All voltages are referenced to chassis ground. All indications are nominal and 15% variation from those indicated should be considered normal.


**WAVEFORM MEASUREMENT CONDITIONS
SCHEMATIC 8**

- Set front-panel controls in accordance with initial control settings in Section V, except as follows:
 - Coupling (channel A) 50Ω
 - TRIGGER LEVEL (main) stable display
- Set monitor oscilloscope TIME/DIV and VOLTS/DIV controls as indicated under waveform(s).
- Connect HP Model 211B Square-wave Generator 50-ohm output to Model 1740A channel A INPUT connector.
- Adjust square-wave generator output for 6 divisions of signal amplitude (.6 V) at 5 kHz.

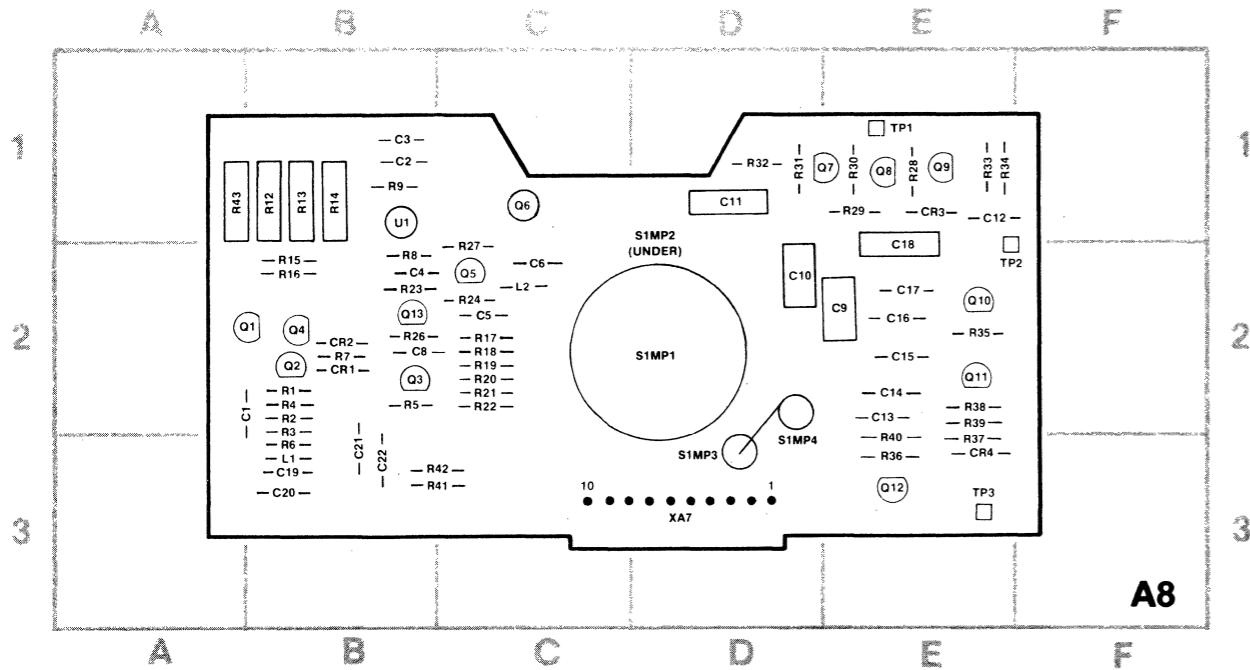


1740A-082-07-76


REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	A-2	C17	E-2	Q4	B-2	R5	B-2	R22	C-2	R38	E-2
C2	B-1	C18	E-2	Q5	C-2	R6	B-3	R23	B-2	R39	E-2
C3	B-1	C19	B-3	Q6	C-1	R7	B-2	R24	C-2	R40	E-2
C4	B-2	C20	B-3	Q7	E-1	R8	B-2	R26	B-2	R41	B-3
C5	C-2	C21	B-3	Q8	E-1	R9	B-1	R27	C-2	R42	B-3
C6	C-2	C22	B-3	Q9	E-1	R12	B-1	R28	E-1	R43	A-1
C8	B-2	CR1	B-2	Q9	E-1	R13	B-1	R29	E-1	S1MP1	D-2
C9	E-2	CR2	B-2	Q10	E-2	R14	B-1	R30	E-1	S1MP2	D-1
C10	D-2	CR3	E-1	Q11	E-2	R15	B-2	R31	D-1	S1MP3	D-3
C11	D-1	CR4	E-3	Q12	E-3	R16	B-2	R32	D-1	S1MP4	D-3
C12	E-1	L1	B-3	Q13	B-2	R17	C-2	R33	E-1	TP1	E-1
C13	E-2	L2	C-2	R1	B-2	R18	C-2	R34	E-1	TP2	E-2
C14	E-2	Q1	B-2	R2	B-2	R19	C-2	R35	E-2	TP3	E-3
C15	E-2	Q2	B-2	R3	B-2	R20	C-2	R36	E-3	U1	B-1
C16	E-2	Q3	B-2	R4	B-2	R21	C-2	R37	E-3	XA7	D-3

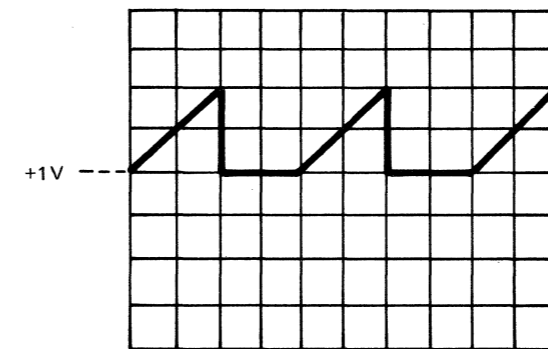

1 5 V/DIV
.5 mSEC/DIV

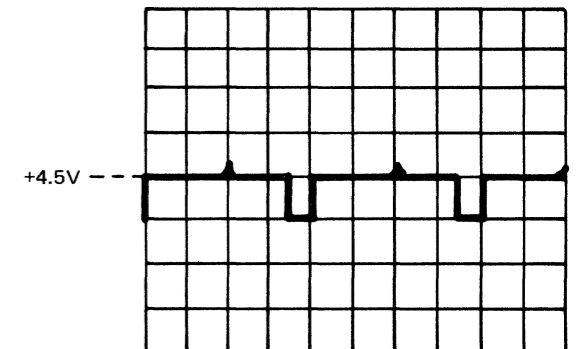

3 1 V/DIV
.5 mSEC/DIV

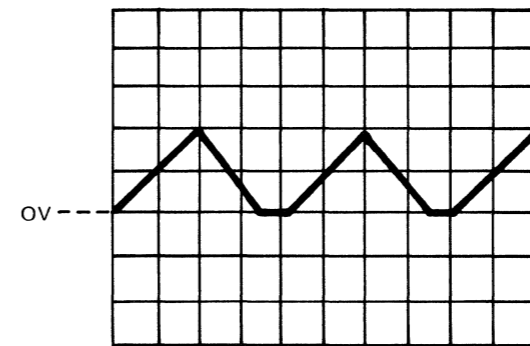


2 5 V/DIV
.5 mSEC

NOTE: WAVEFORMS ARE TIME RELATED

Figure 8-17. Service Information, Main Sweep Assembly A8 (Sheet 1 of 2)

1740A-083-01-10-75

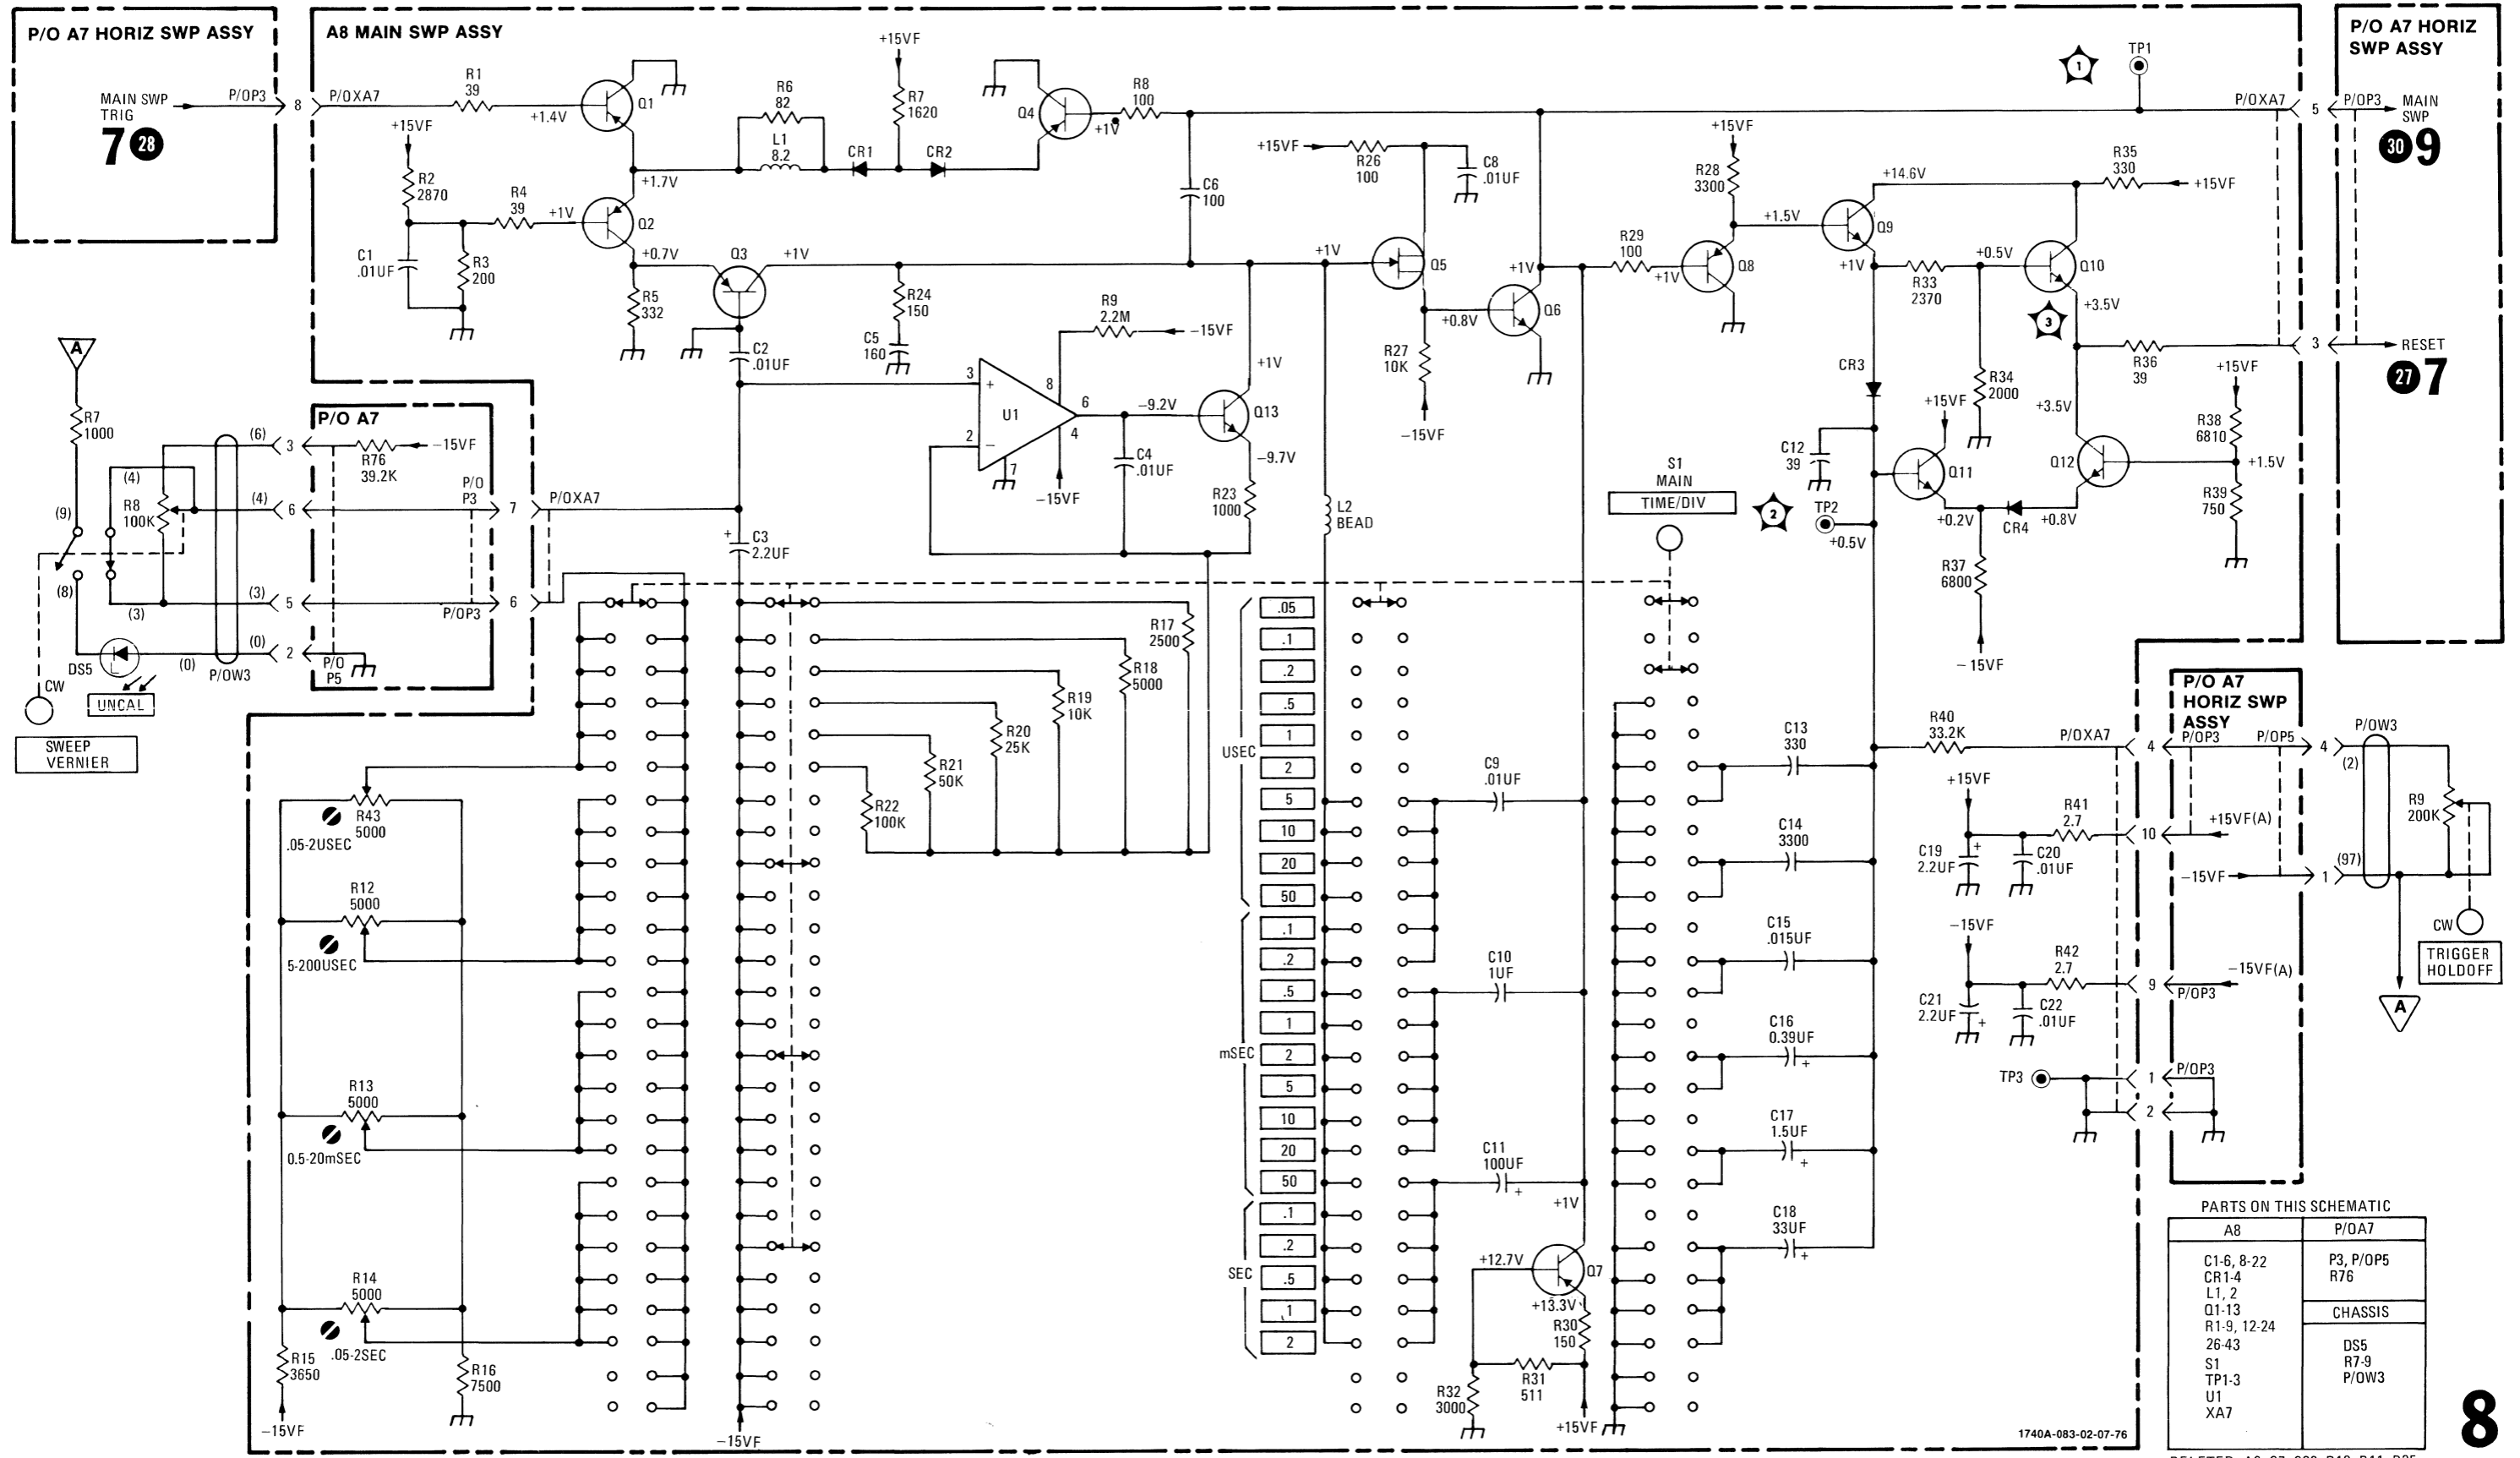

PARTS ON THIS SCHEMATIC

A8	P/OA7
C1-6, 8-22	P3, P/OP5
CR1-4	R76
L1, 2	CHASSIS
Q1-13	
R1-9, 12-24	
26-43	DS5
S1	R7-9
TP1-3	P/OW3
U1	
XA7	

DELETED: A8, C7, C23, R10, R11, R25


Figure 8-17.
Service Information, Main Sweep Assembly A8 (Sheet 2 of 2)
8-27

**DC VOLTAGE MEASUREMENT CONDITIONS
SCHEMATIC 9**

- Set front-panel controls in accordance with initial control settings in Section V, except as follows:
 DLY'D TIME/DIV 50 μ SEC
- All voltages are referenced to chassis ground. All indications are nominal and 15% variation from those indicated should be considered normal.


**WAVEFORM MEASUREMENT CONDITIONS
SCHEMATIC 9**

- Set front-panel controls in accordance with initial control settings in Section V, except as follows:
 Coupling (channel A) 50 Ω
 DLY'D TIME/DIV 10 μ SEC
 DELAY 5.00
 Horiz display MAIN
 TRIGGER LEVEL (main) stable display
- Set monitor oscilloscope TIME/DIV and VOLTS/DIV controls as indicated under waveform(s).
- Connect HP Model 211B Square-wave Generator 50-ohm output to Model 1740A channel A INPUT connector.
- Adjust square-wave generator output for 6 divisions of signal amplitude (.6 V) at 5 kHz.

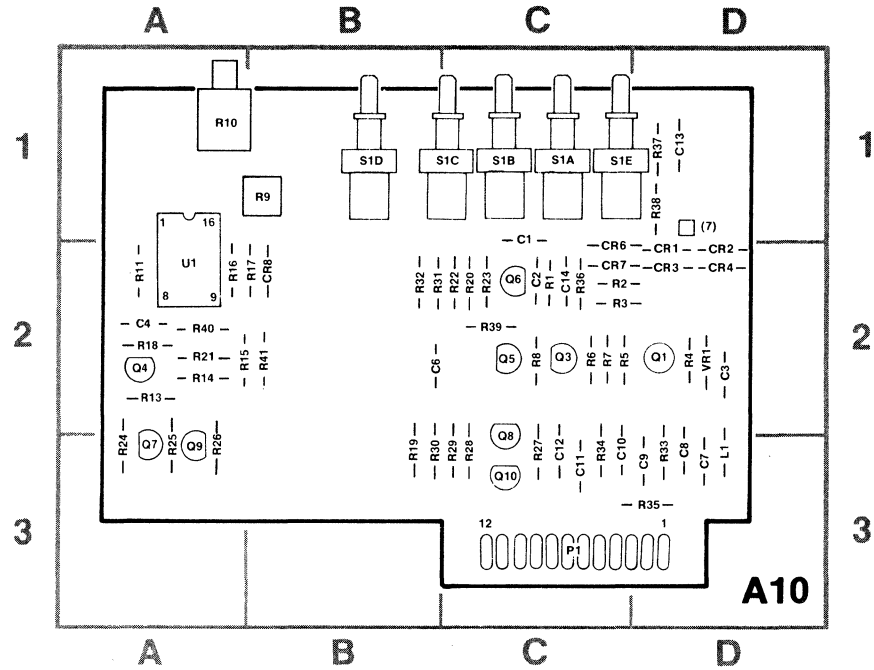


1740A-084-07-76


REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	C-1	C14	C-2	Q3	C-2	R4	D-2	R16	A-2	R27	C-3	R38	D-1
C2	C-2	CR1	D-2	Q4	A-2	R5	D-2	R17	B-2	R28	C-3	R39	C-2
C3	D-2	CR2	D-2	Q5	C-2	R6	C-2	R18	A-2	R29	C-3	R40	A-2
C4	A-2	CR3	D-2	Q6	C-2	R7	C-2	R19	B-3	R30	C-3	R41	B-2
C6	B-2	CR4	D-2	Q7	A-3	R8	C-2	R20	C-2	R31	C-2	S1A	C-1
C7	D-3	CR6	C-2	Q8	C-2	R9	B-1	R21	A-2	R32	B-2	S1B	C-1
C8	D-3	CR7	C-2	Q9	A-3	R10	A-1	R22	C-2	R33	D-3	S1C	C-1
C9	D-3	CR8	B-2	Q10	C-3	R11	A-2	R23	C-2	R34	C-3	S1D	B-1
C10	D-3	L1	D-3	R1	C-2	R13	A-2	R24	A-3	R35	D-3	S1E	C-1
C11	C-3	P1	C-3	R2	C-2	R14	A-2	R25	A-3	R36	C-2	U1	A-2
C12	C-3	Q1	D-2	R3	C-2	R15	B-2	R26	A-3	R37	D-1	VR1	D-2
C13	D-1												

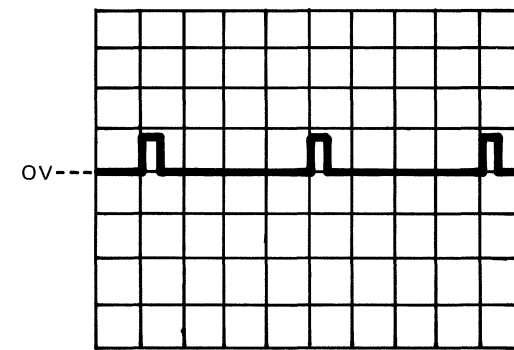

1 5 V/DIV
.5 mSEC/DIV

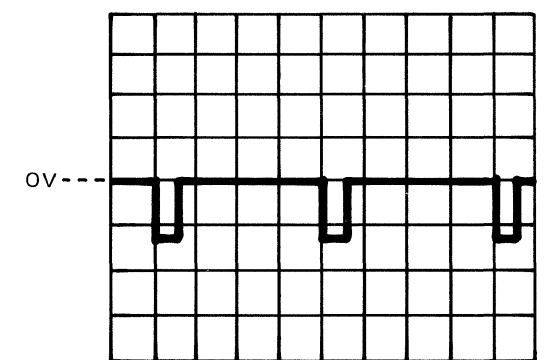

3 2 V/DIV
.5 mSEC/DIV

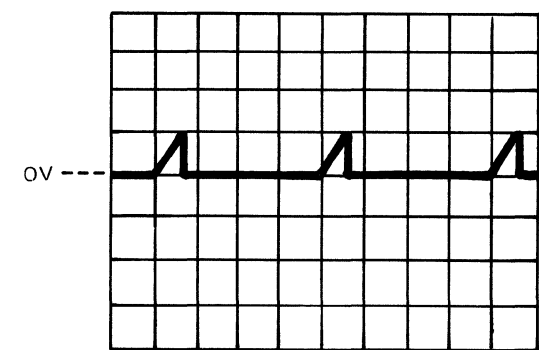

2 5 V/DIV
.5 mSEC/DIV

1740A-085-01-10-75


Figure 8-18. Service Information, Delayed Trigger Assembly A10 and Horizontal Sweep Assembly A7 (Sheet 1 of 2)

**DC VOLTAGE MEASUREMENT CONDITIONS
SCHEMATIC 10**

- Set front-panel controls in accordance with initial control settings in Section V, except as follows:
 - DLY'D TIME/DIV 50 μ SEC
 - AUTO/NORM NORM
 - SINGLE engaged
 - Both TRIGGER LEVELS fully cw
 - RESET light should be off
- All voltages are referenced to chassis ground. All indications are nominal and 15% variation from those indicated should be considered normal.


**WAVEFORM MEASUREMENT CONDITIONS
SCHEMATIC 10**

- Set front-panel controls in accordance with initial control settings in Section V, except as follows:
 - Coupling (channel A) 50 Ω
 - DLY'D TIME/DIV 10 μ SEC
 - DELAY 5.00
 - Horiz display MAIN
 - TRIGGER LEVEL (main) stable display
- Set monitor oscilloscope TIME/DIV and VOLTS/DIV controls as indicated under waveform(s).
- Connect HP Model 211B Square-wave Generator 50-ohm output to Model 1740A channel A INPUT connector.
- Adjust square-wave generator output for 6 divisions of signal amplitude (.6 V) at 5 kHz.

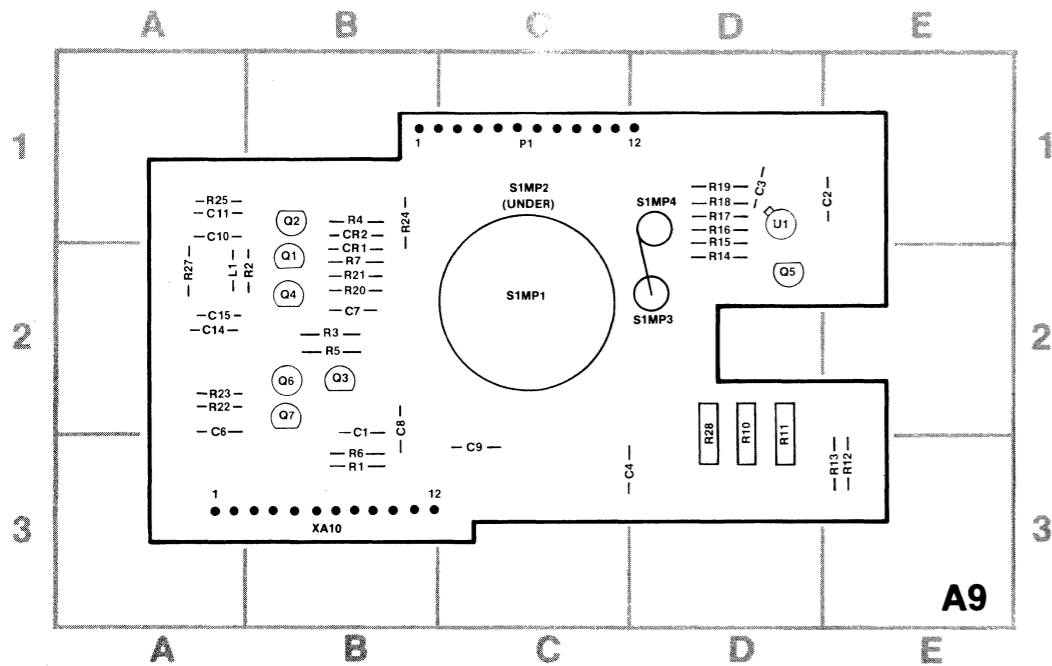


1740A-086-10-75

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	B-2	C15	A-2	Q7	B-2	R13	E-3	R24	B-1
C2	E-1	CR1	B-2	R1	B-3	R14	D-2	R25	A-1
C3	D-1	CR2	B-1	R2	B-2	R15	D-1	R27	A-2
C4	C-3	L1	A-2	R3	B-2	R16	D-1	R28	D-2
C6	A-2	P1	C-1	R4	B-1	R17	D-1	S1MP1	C-2
C7	B-2	Q1	B-2	R5	B-2	R18	D-1	S1MP2	C-1
C8	B-2	Q2	B-1	R6	B-3	R19	D-1	S1MP3	D-2
C9	C-3	Q3	B-2	R7	B-2	R20	B-2	S1MP4	D-1
C10	A-1	Q4	B-2	R10	D-2	R21	B-2	U1	D-1
C11	A-1	Q5	D-2	R11	D-2	R22	A-2	XA10	B-3
C14	A-2	Q6	B-2	R12	E-3	R23	A-1		

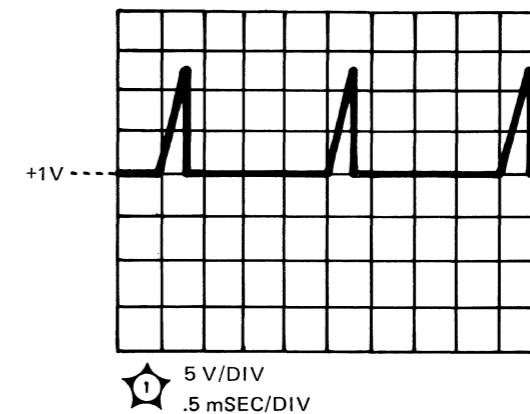

1740A-087-01-10-75

Figure 8-19. Service Information, Delayed Sweep Assembly A9 (Sheet 1 of 2)

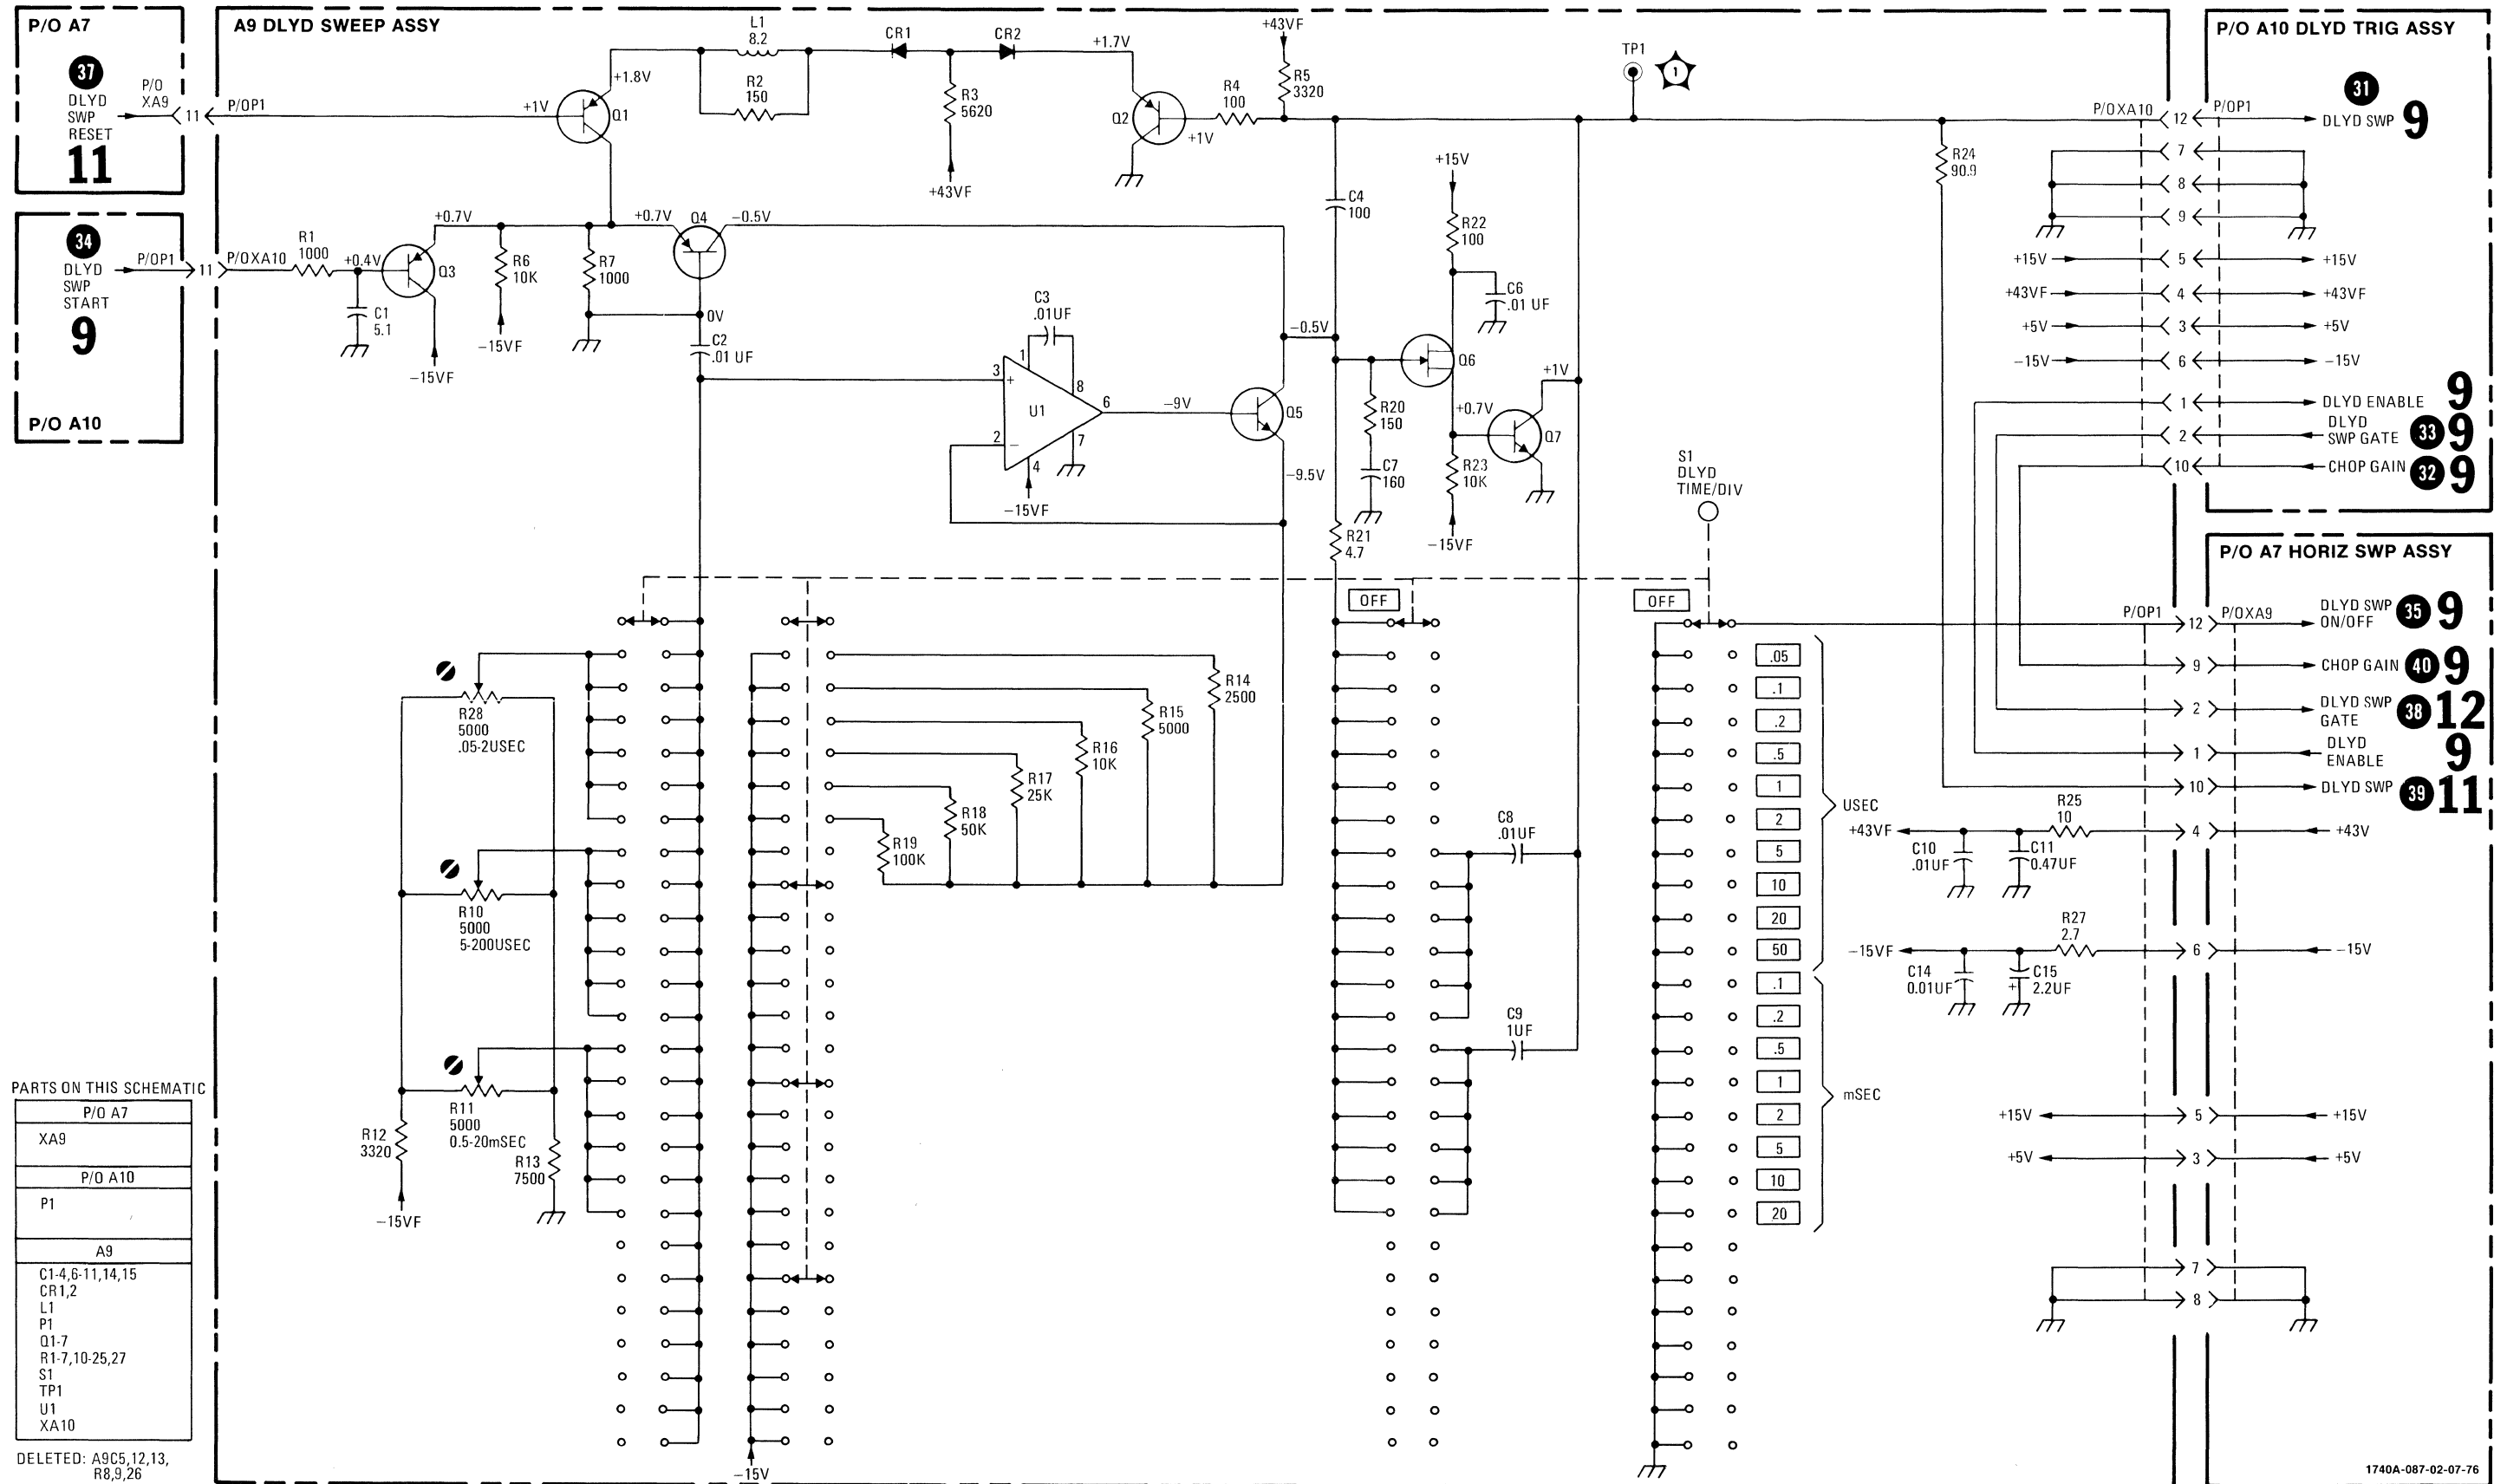

PARTS ON THIS SCHEMATIC


P/O A7	
XA9	
P/O A10	
P1	
A9	
C1-4,6-11,14,15	
CR1,2	
L1	
P1	
Q1-7	
R1-7,10-25,27	
S1	
TP1	
U1	
XA10	

DELETED: A9C5,12,13, R8,9,26

10

Figure 8-19. Service Information, Delayed Sweep Assembly A9 (Sheet 2 of 2) 8-31

NOTE
See Figure 8-16
for Assembly A7
Component Identification

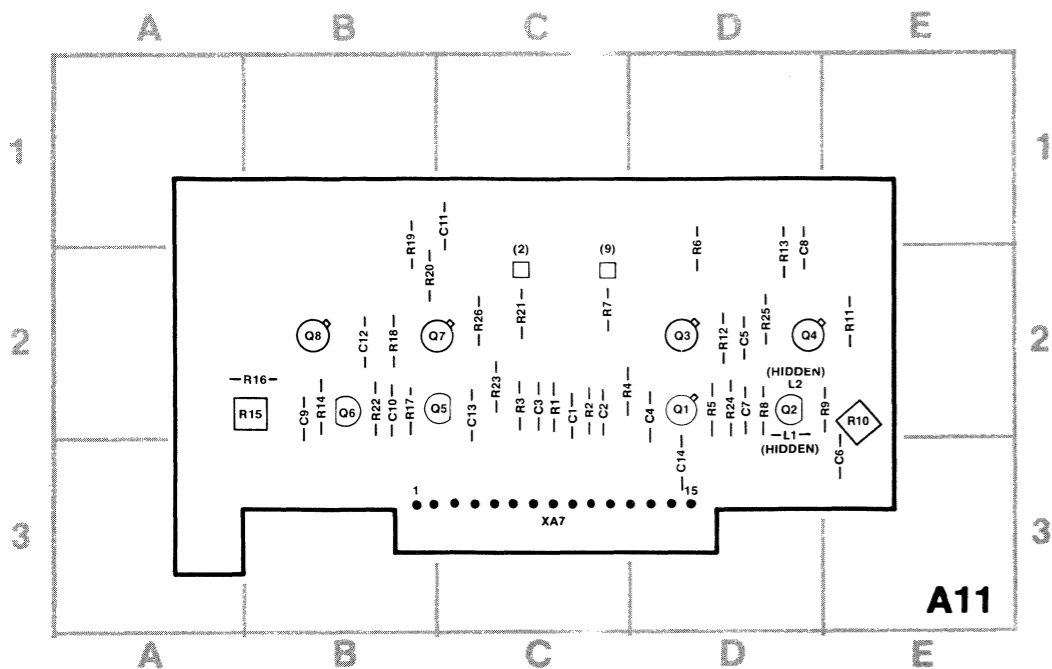

1740A-088-07-76


REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	C-2	C12	B-2	Q6	B-2	R8	D-2	R18	B-2
C2	C-2	C13	C-2	Q7	C-2	R9	E-2	R19	B-2
C3	C-2	C14	D-3	Q8	B-2	R10	E-2	R20	B-2
C4	D-2	L1	D-3	R1	C-2	R11	E-2	R21	C-2
C5	D-2	L2	D-2	R2	C-2	R12	D-2	R22	B-2
C6	D-2	Q1	D-2	R3	C-2	R13	D-2	R23	C-2
C7	D-2	Q2	D-2	R4	C-2	R14	B-2	R24	D-2
C8	D-2	Q3	D-2	R5	D-2	R15	B-2	R25	D-2
C9	B-2	Q4	D-2	R6	D-2	R16	B-2	R26	C-2
C10	B-2	Q5	C-2	R7	C-2	R17	B-2	XA7	C-3
C11	C-1								

**DC VOLTAGE MEASUREMENT CONDITIONS
SCHEMATIC 11**


- Set front-panel controls in accordance with initial control settings in Section V, except as follows:
Sweep mode A vs B
Spot centered on CRT.
BEAM INTENSITY barely visible spot
- All voltages are referenced to chassis ground. All indications are nominal and 15% variation from those indicated should be considered normal.

**WAVEFORM MEASUREMENT CONDITIONS
SCHEMATIC 11**


- Set front-panel controls in accordance with initial control settings Section V, except as follows:
Coupling (channel A) 50Ω
TRIGGER LEVEL (main) stable display
- Set monitor oscilloscope TIME/DIV and VOLTS/DIV controls as indicated under waveform(s).
- Connect HP Model 211B Square-wave Generator 50-ohm output to Model 1740A channel A INPUT connector.
- Adjust square-wave generator output for 6 divisions of signal amplitude (.6 V) at 5 kHz.

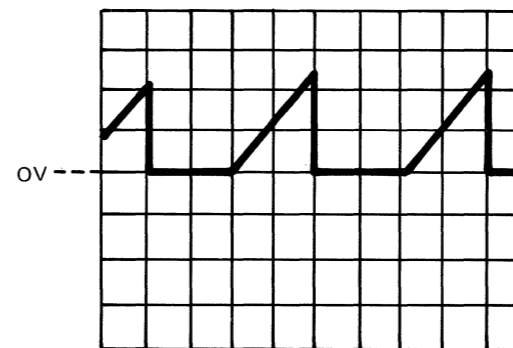

1 5 V/DIV
.5 mSEC/DIV

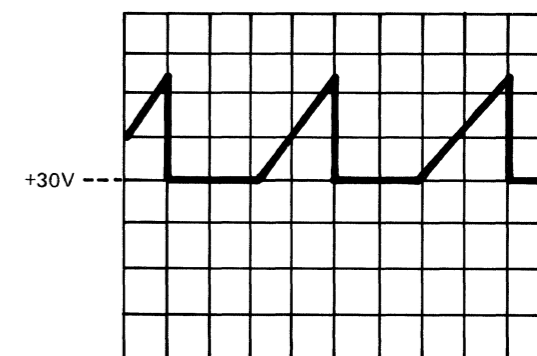

3 20 V/DIV
.5 mSEC/DIV

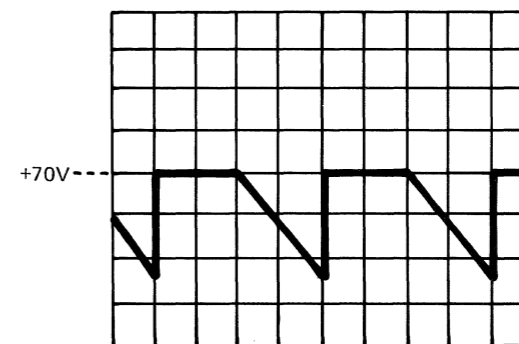

2 20 V/DIV
.5 mSEC/DIV

1740A-089-01-10-75

Figure 8-20. Service Information, Horizontal Output Assembly A11 and Horizontal Sweep Assembly A7 (Sheet 1 of 2)

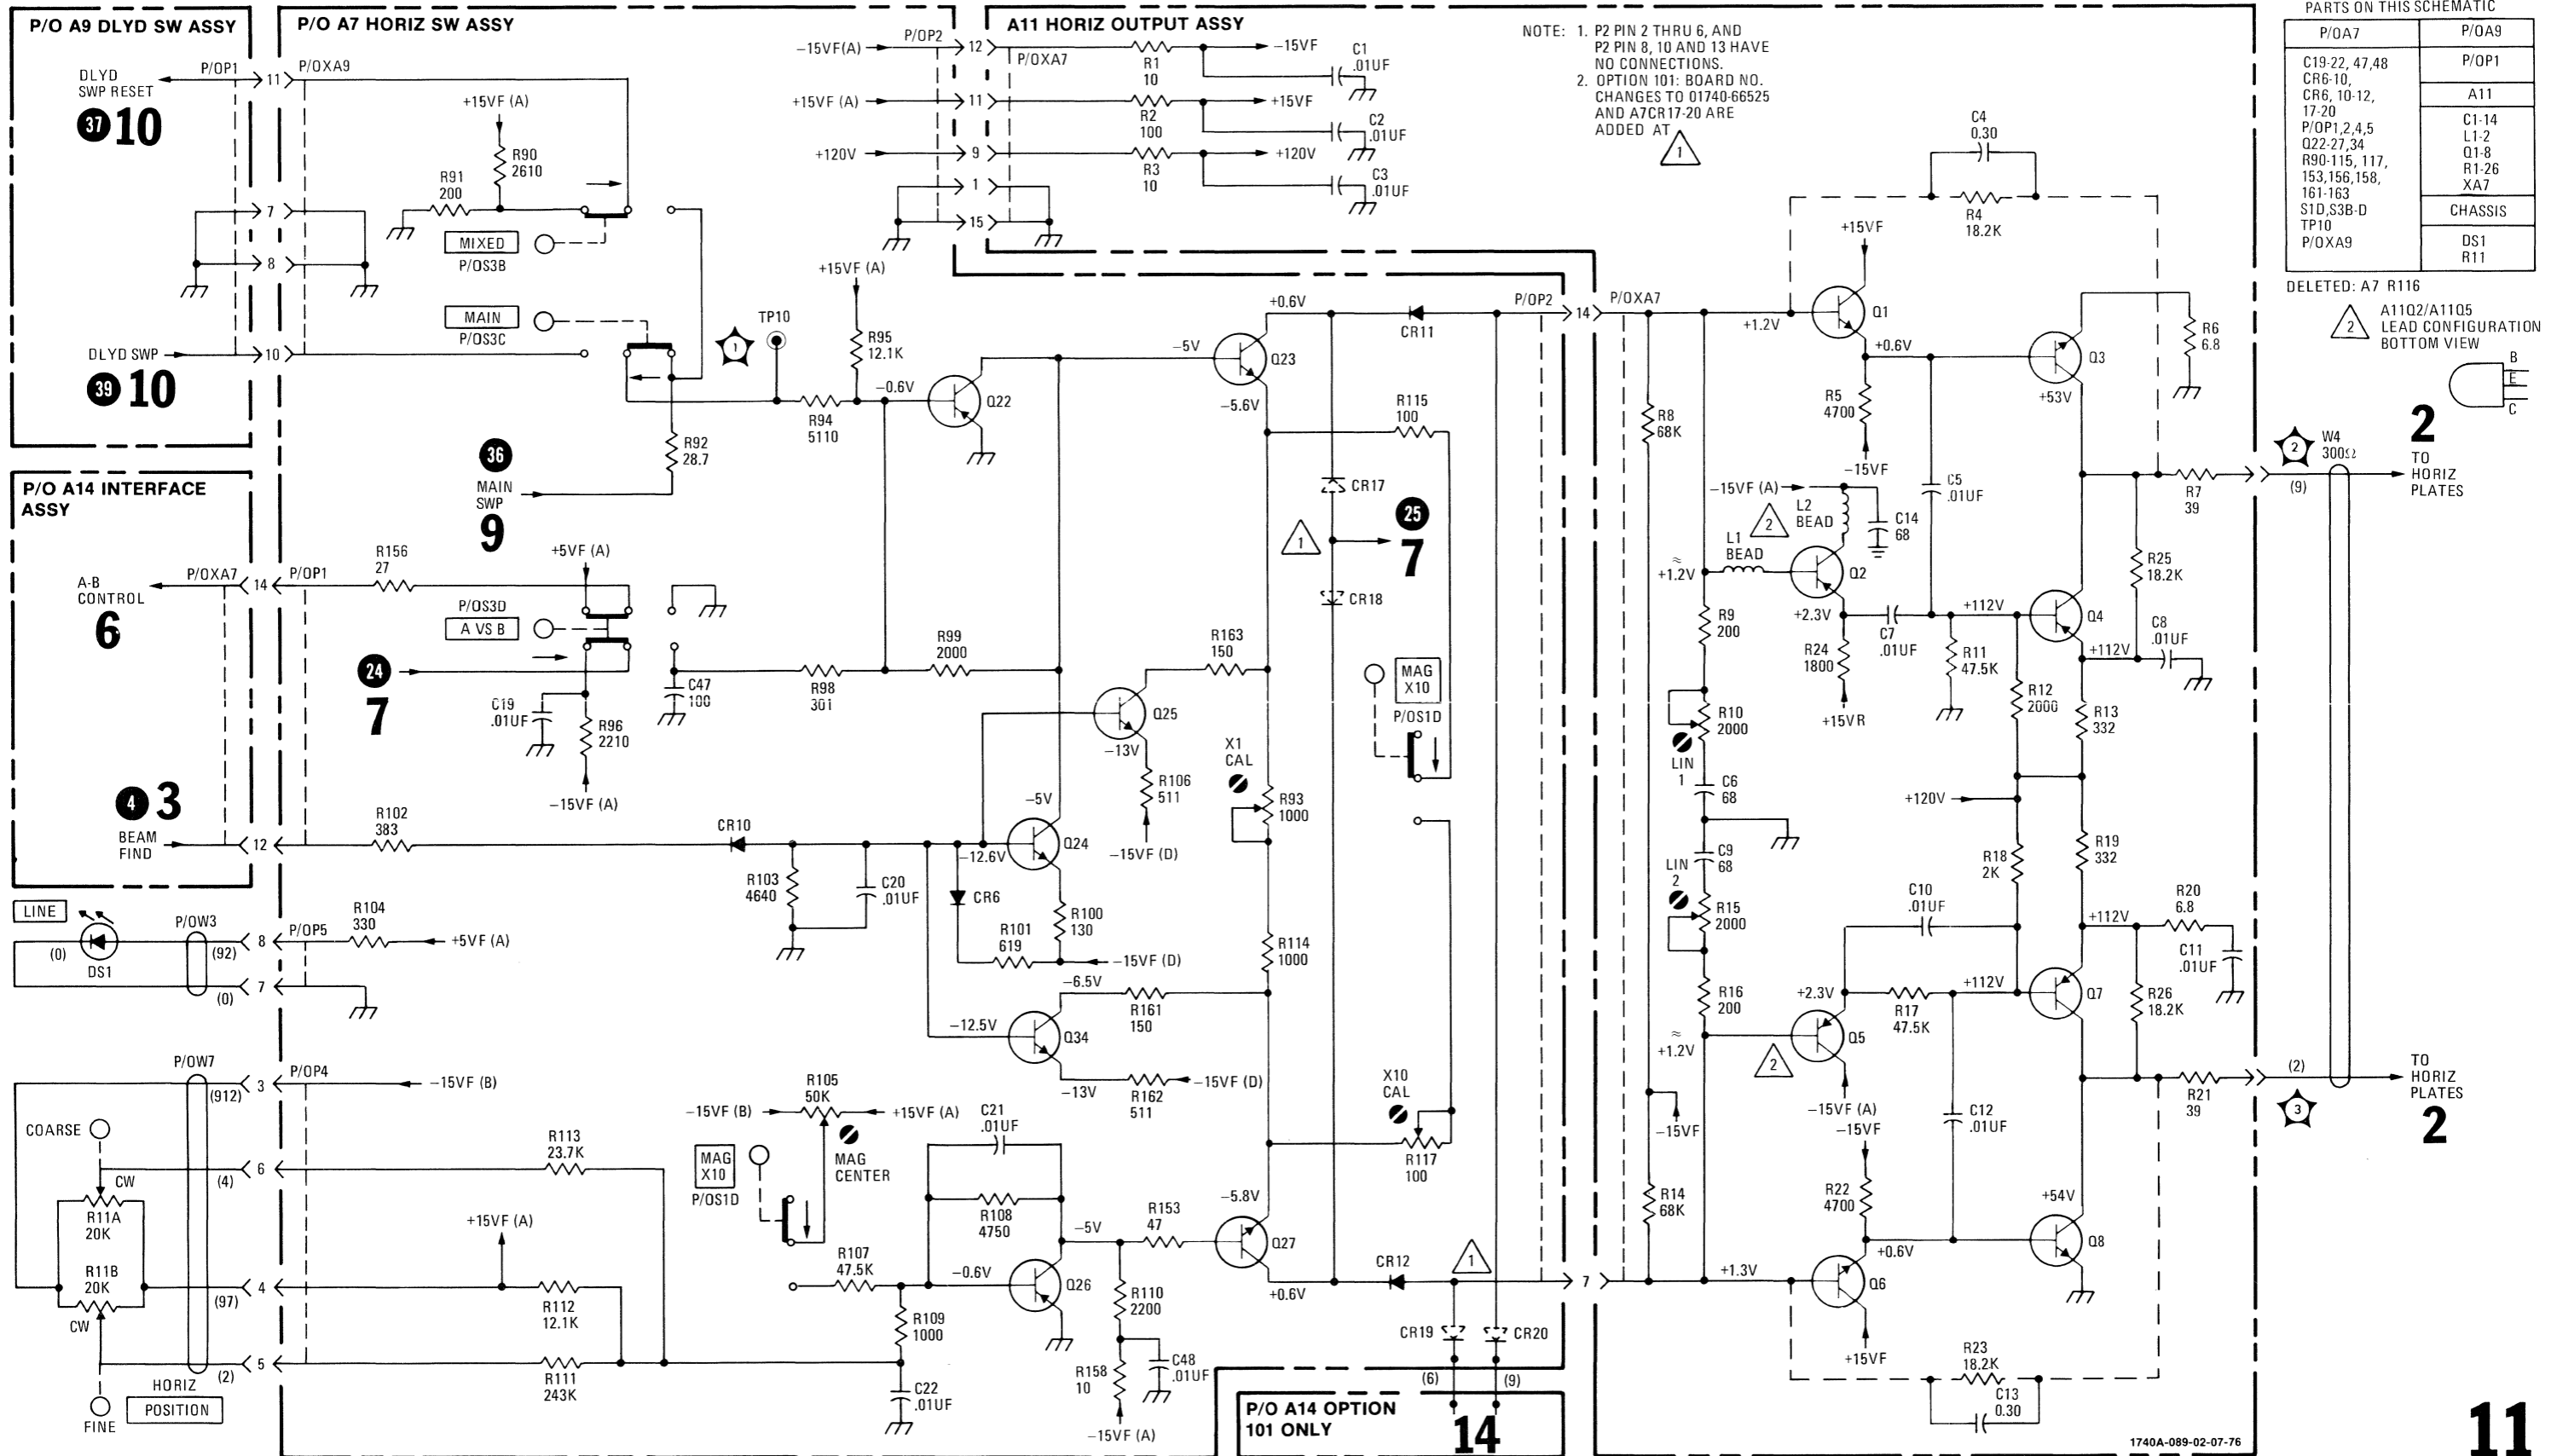


Figure 8-20. Service Information, Horizontal Output Assembly A11 and Horizontal Sweep Assembly A7 (Sheet 2 of 2) 8-33

**DC VOLTAGE MEASUREMENT CONDITIONS
SCHEMATIC 12**

1. Set front-panel controls in accordance with initial control settings in Section V, except as follows:

Sweep mode A VS B
 BEAM INTENSITY barely visible spot
 Spot centered on CRT.


2. All voltages are referenced to chassis ground. All indications are nominal and 15% variation from those indicated should be considered normal.

**WAVEFORM MEASUREMENT CONDITIONS
SCHEMATIC 12**

1. Set front-panel controls in accordance with initial control settings in Section V, except as follows:


Coupling (channel A) 50Ω
 TRIGGER LEVEL (main) stable display

2. Set monitor oscilloscope TIME/DIV and VOLTS/DIV controls as indicated under waveform(s).
3. Connect HP Model 211B Square-wave Generator 50-ohm output to Model 1740A channel A INPUT connector.
4. Adjust square-wave generator output for 6 divisions of signal amplitude (.6 V) at 5 kHz.

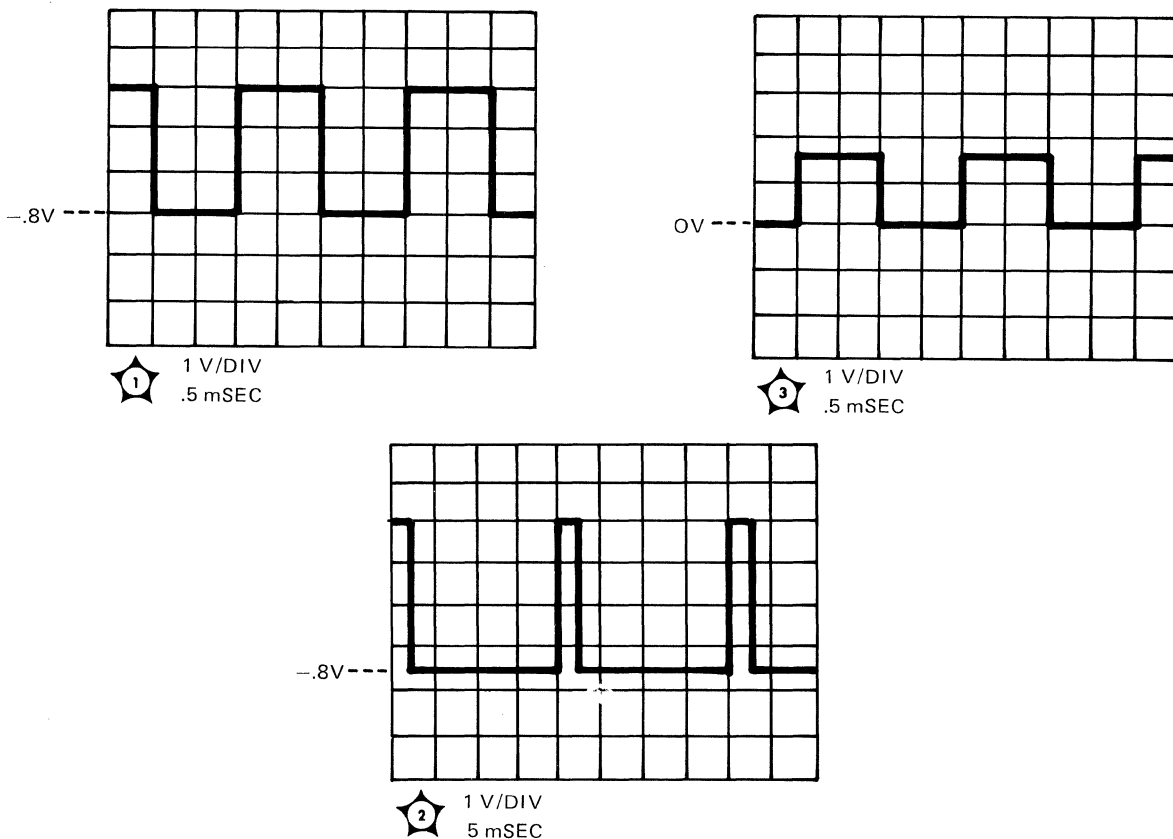

1740A-090-01-10-75

Figure 8-21. Service Information, Gate Schmitt, P/O Assembly A7 (Sheet 1 of 2)

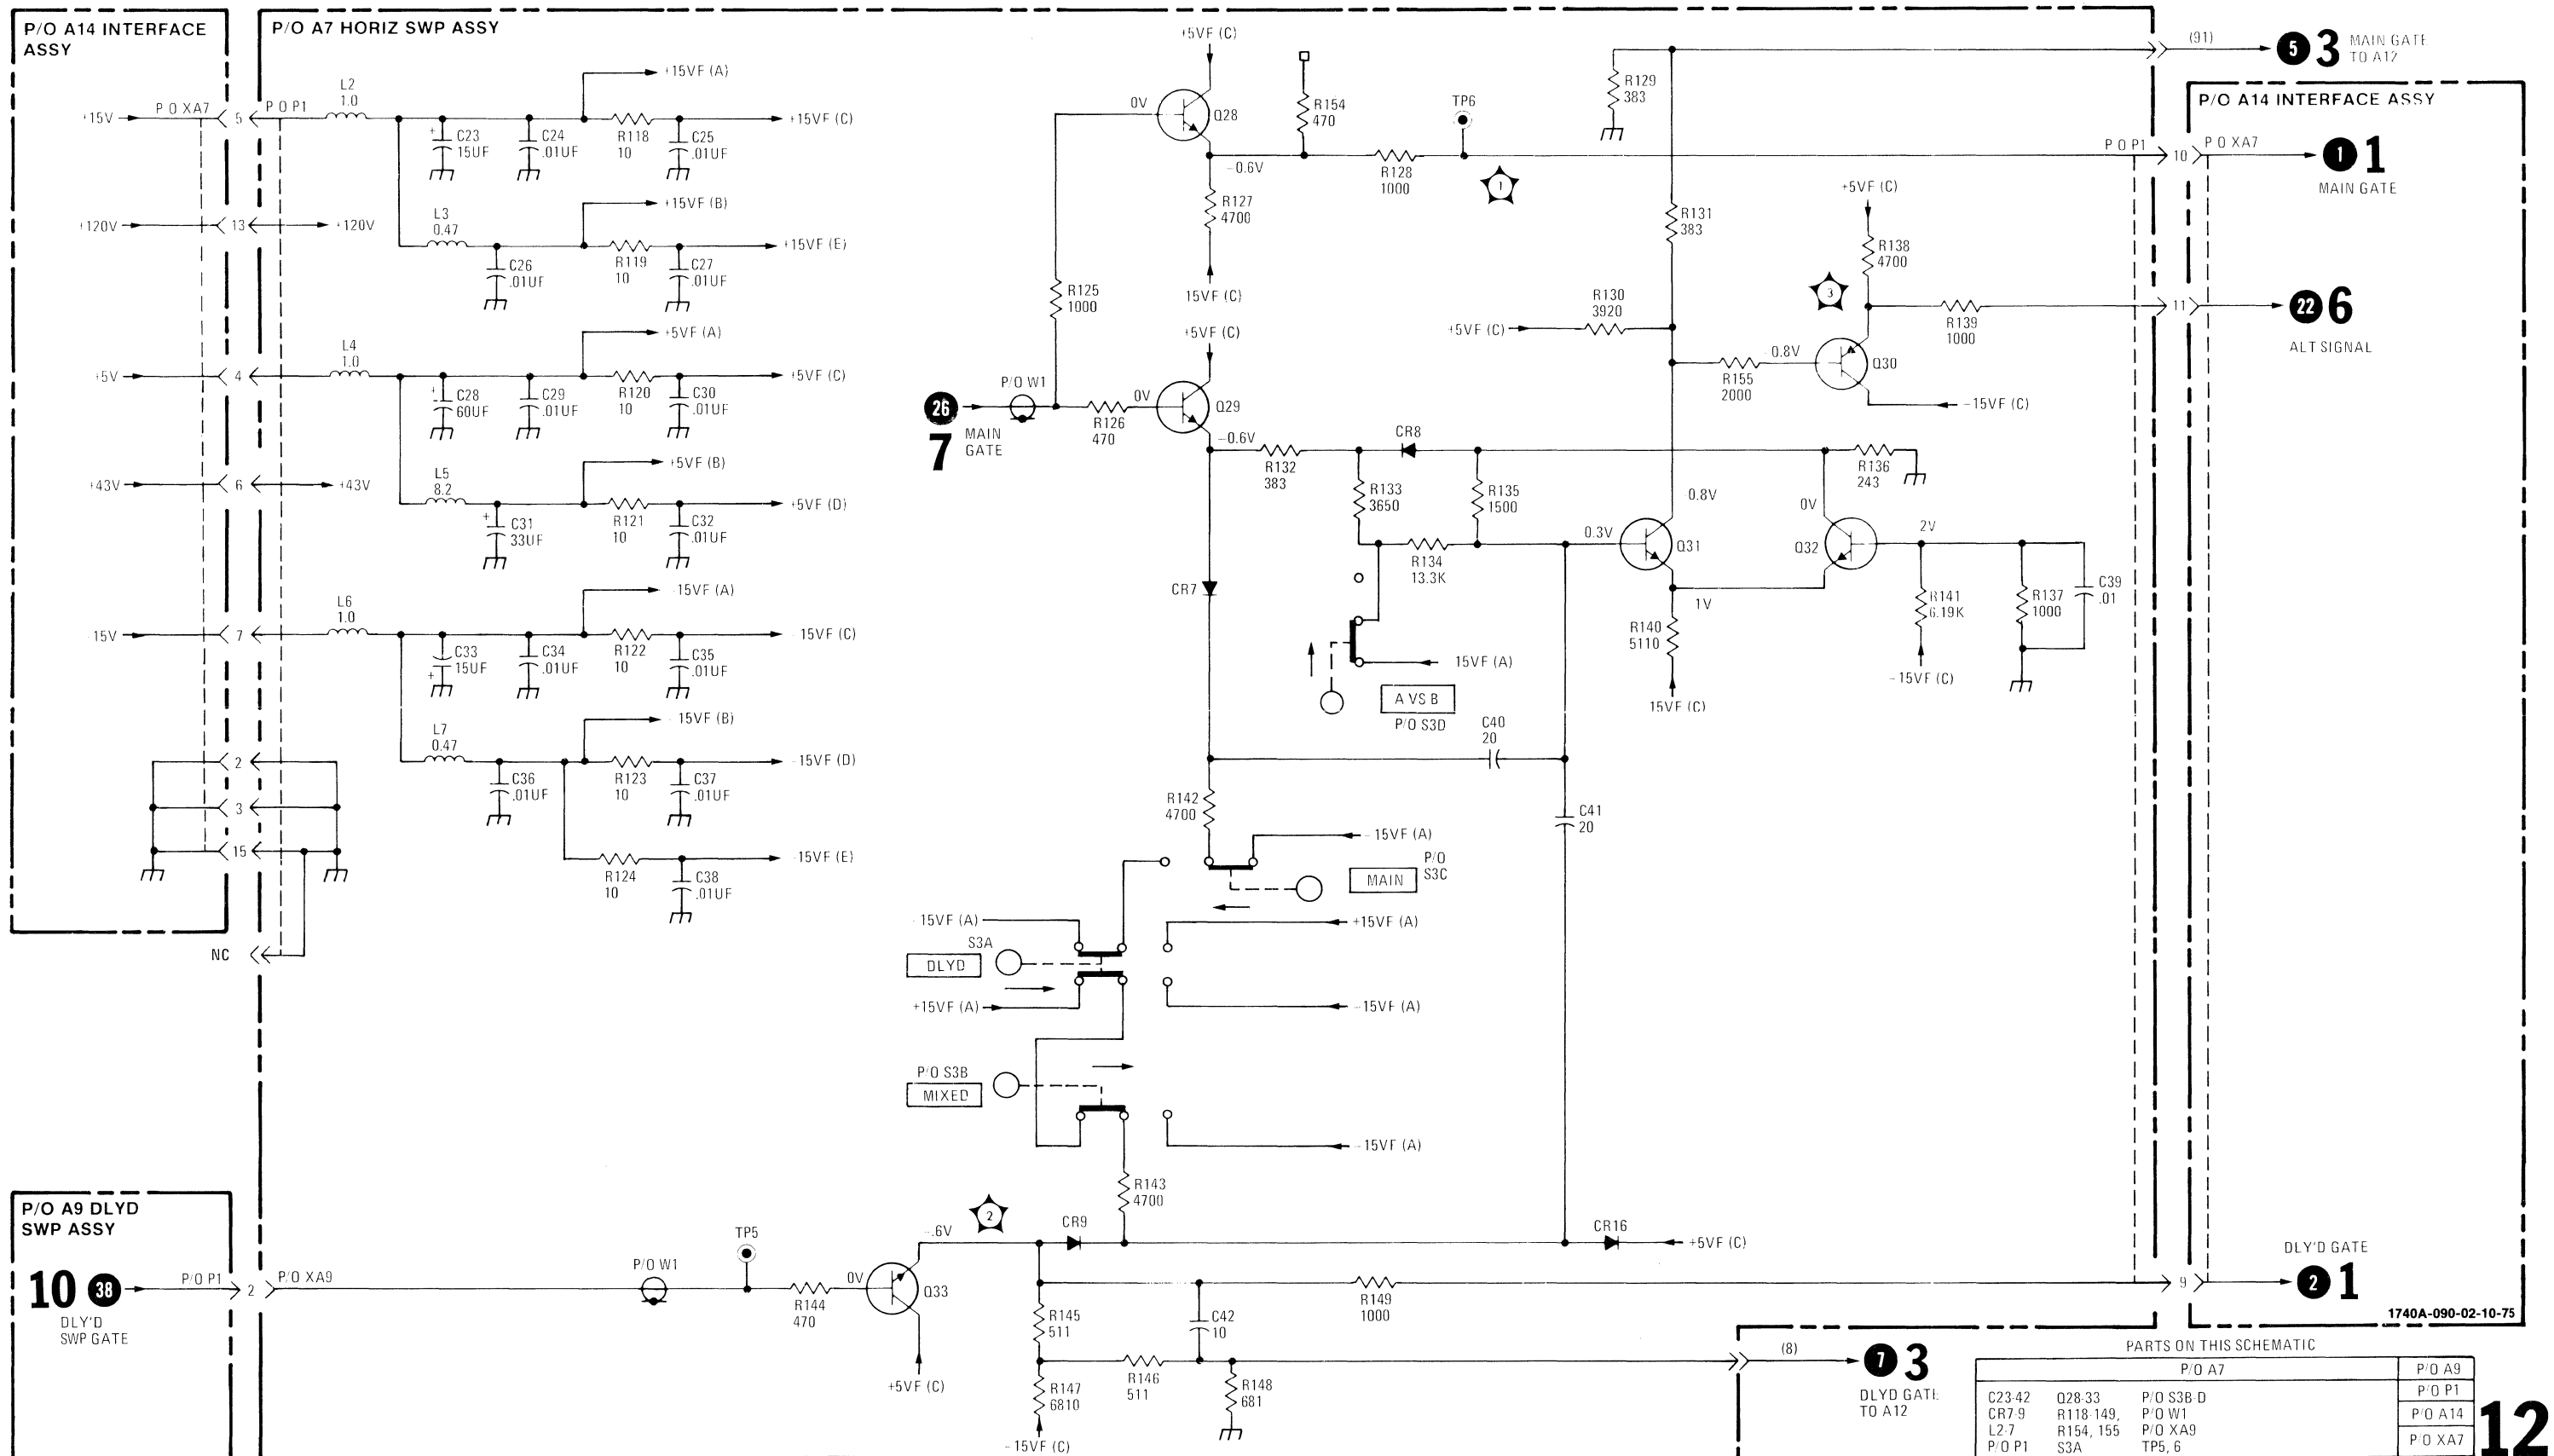


PARTS ON THIS SCHEMATIC

P/O A7		P/O A9
C23-42	Q28-33	P/O S3B-D
CR7-9	R118-149,	P/O W1
L2-7	R154, 155	P/O XA9
P/O P1	S3A	TP5, 6
		P/O A14
		P/O XA7

12

Figure 8-21.
Service Information, Gate Schmitt, P/O Assembly A7 (Sheet 2 of 2)
8-35/(36 blank)

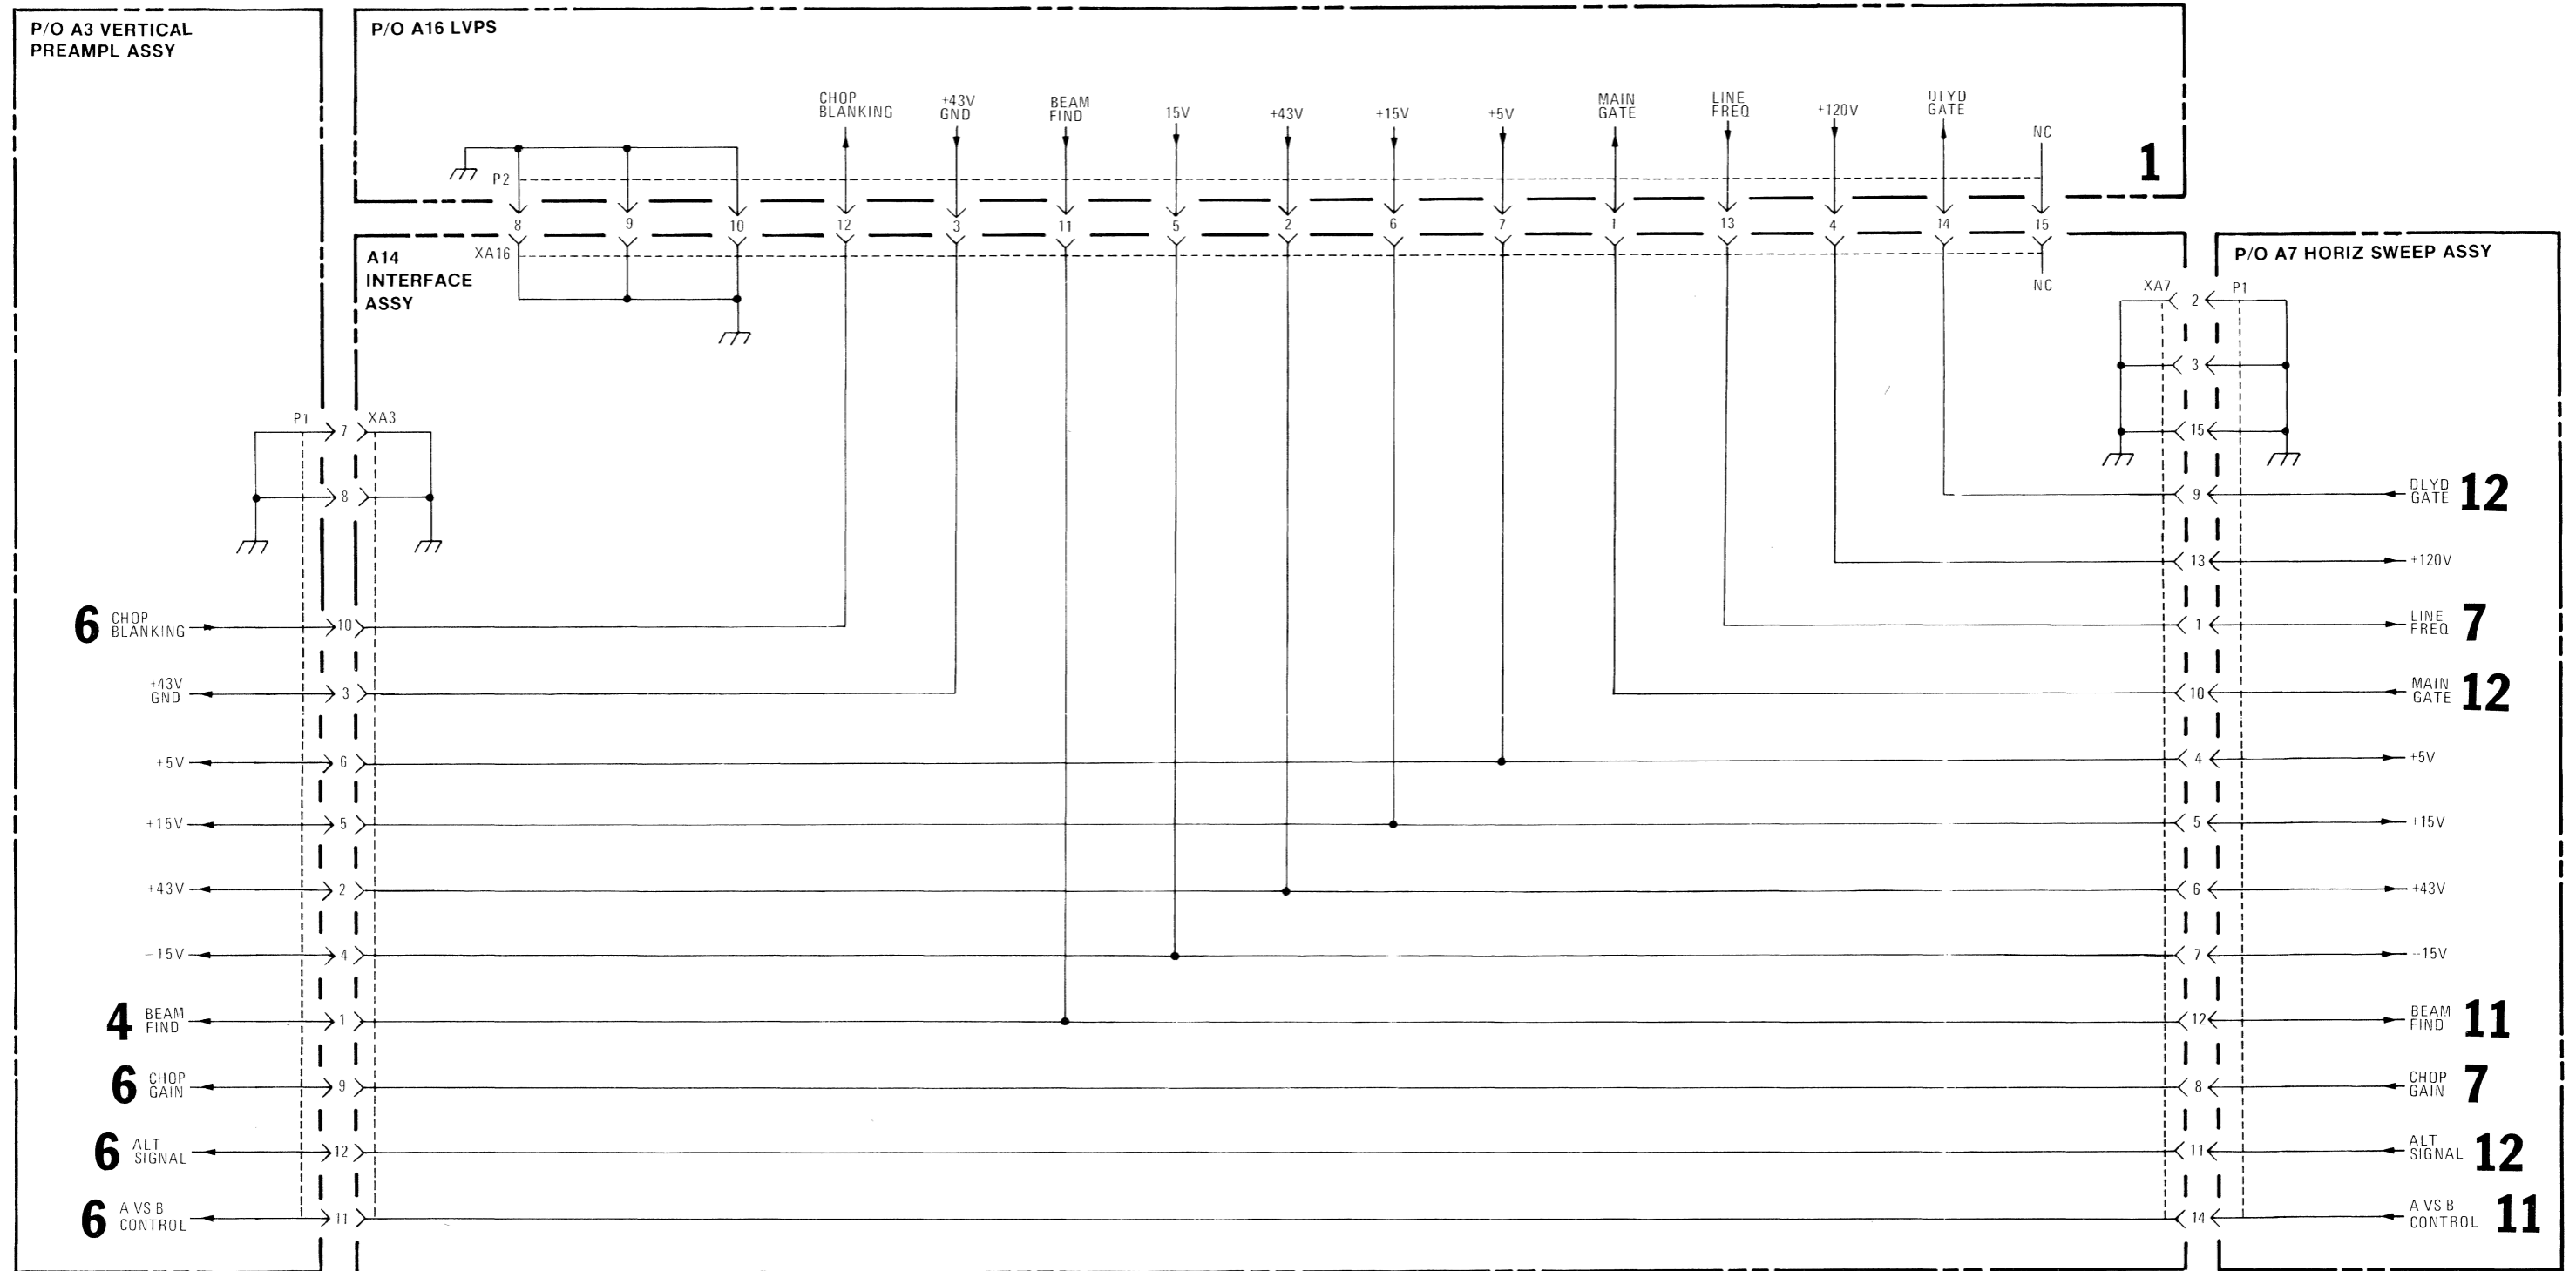


PARTS ON THIS SCHEMATIC

P/O A3	P/O A7	A14	P/O A16
P1	P1	XA3 XA7 XA16	P2

1740A-091-10-75

13


Figure 8-22.
Service Information, Interface Assembly A14
8-37

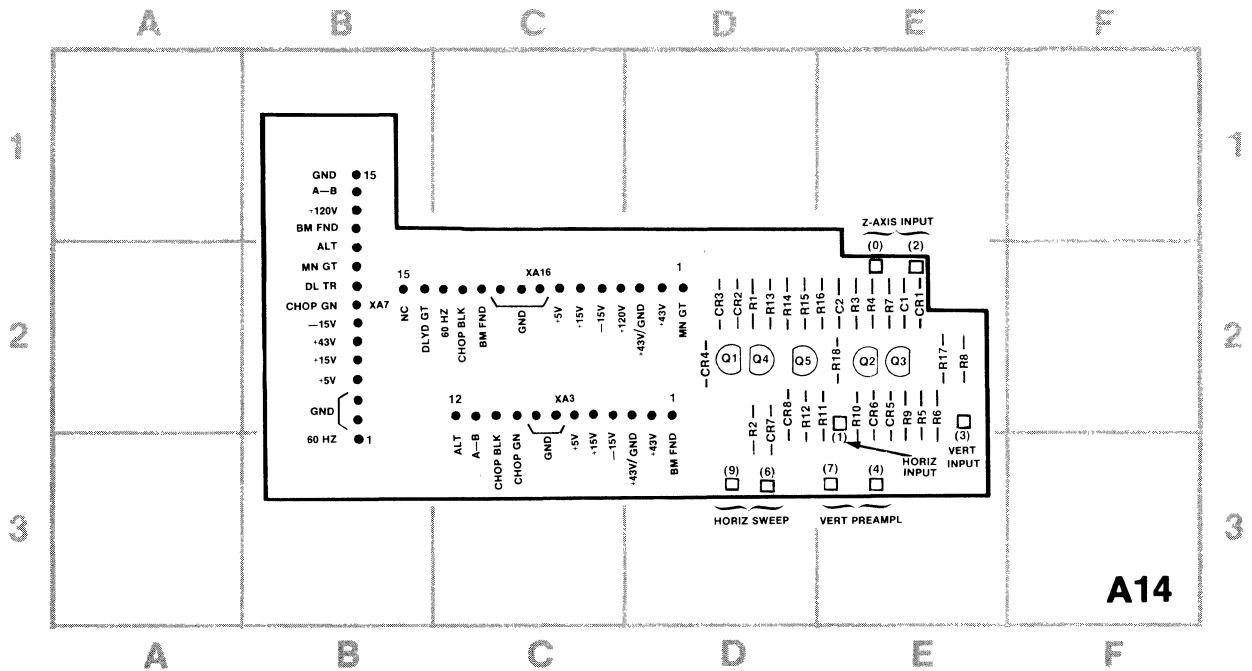

1740A-092-10-75

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	E-2	CR5	E-2	Q3	E-2	R4	E-2	R10	E-2	R16	E-2
C2	E-2	CR7	D-3	Q4	D-2	R5	E-2	R11	E-2	R17	E-2
CR1	E-2	CR8	D-2	Q5	D-2	R6	E-2	R12	D-2	R18	E-2
CR2	D-2	CR8	D-2	R1	D-2	R7	E-2	R13	D-2	XA3	C-2
CR3	D-2	Q1	D-2	R2	D-3	R8	E-2	R14	D-2	XA7	B-2
CR4	D-2	Q2	E-2	R3	E-2	R9	E-2	R15	D-2	XA16	C-2

Figure 8-23. Service Information, Option 101 Interface Assembly A14 / Sheet 1 of 2

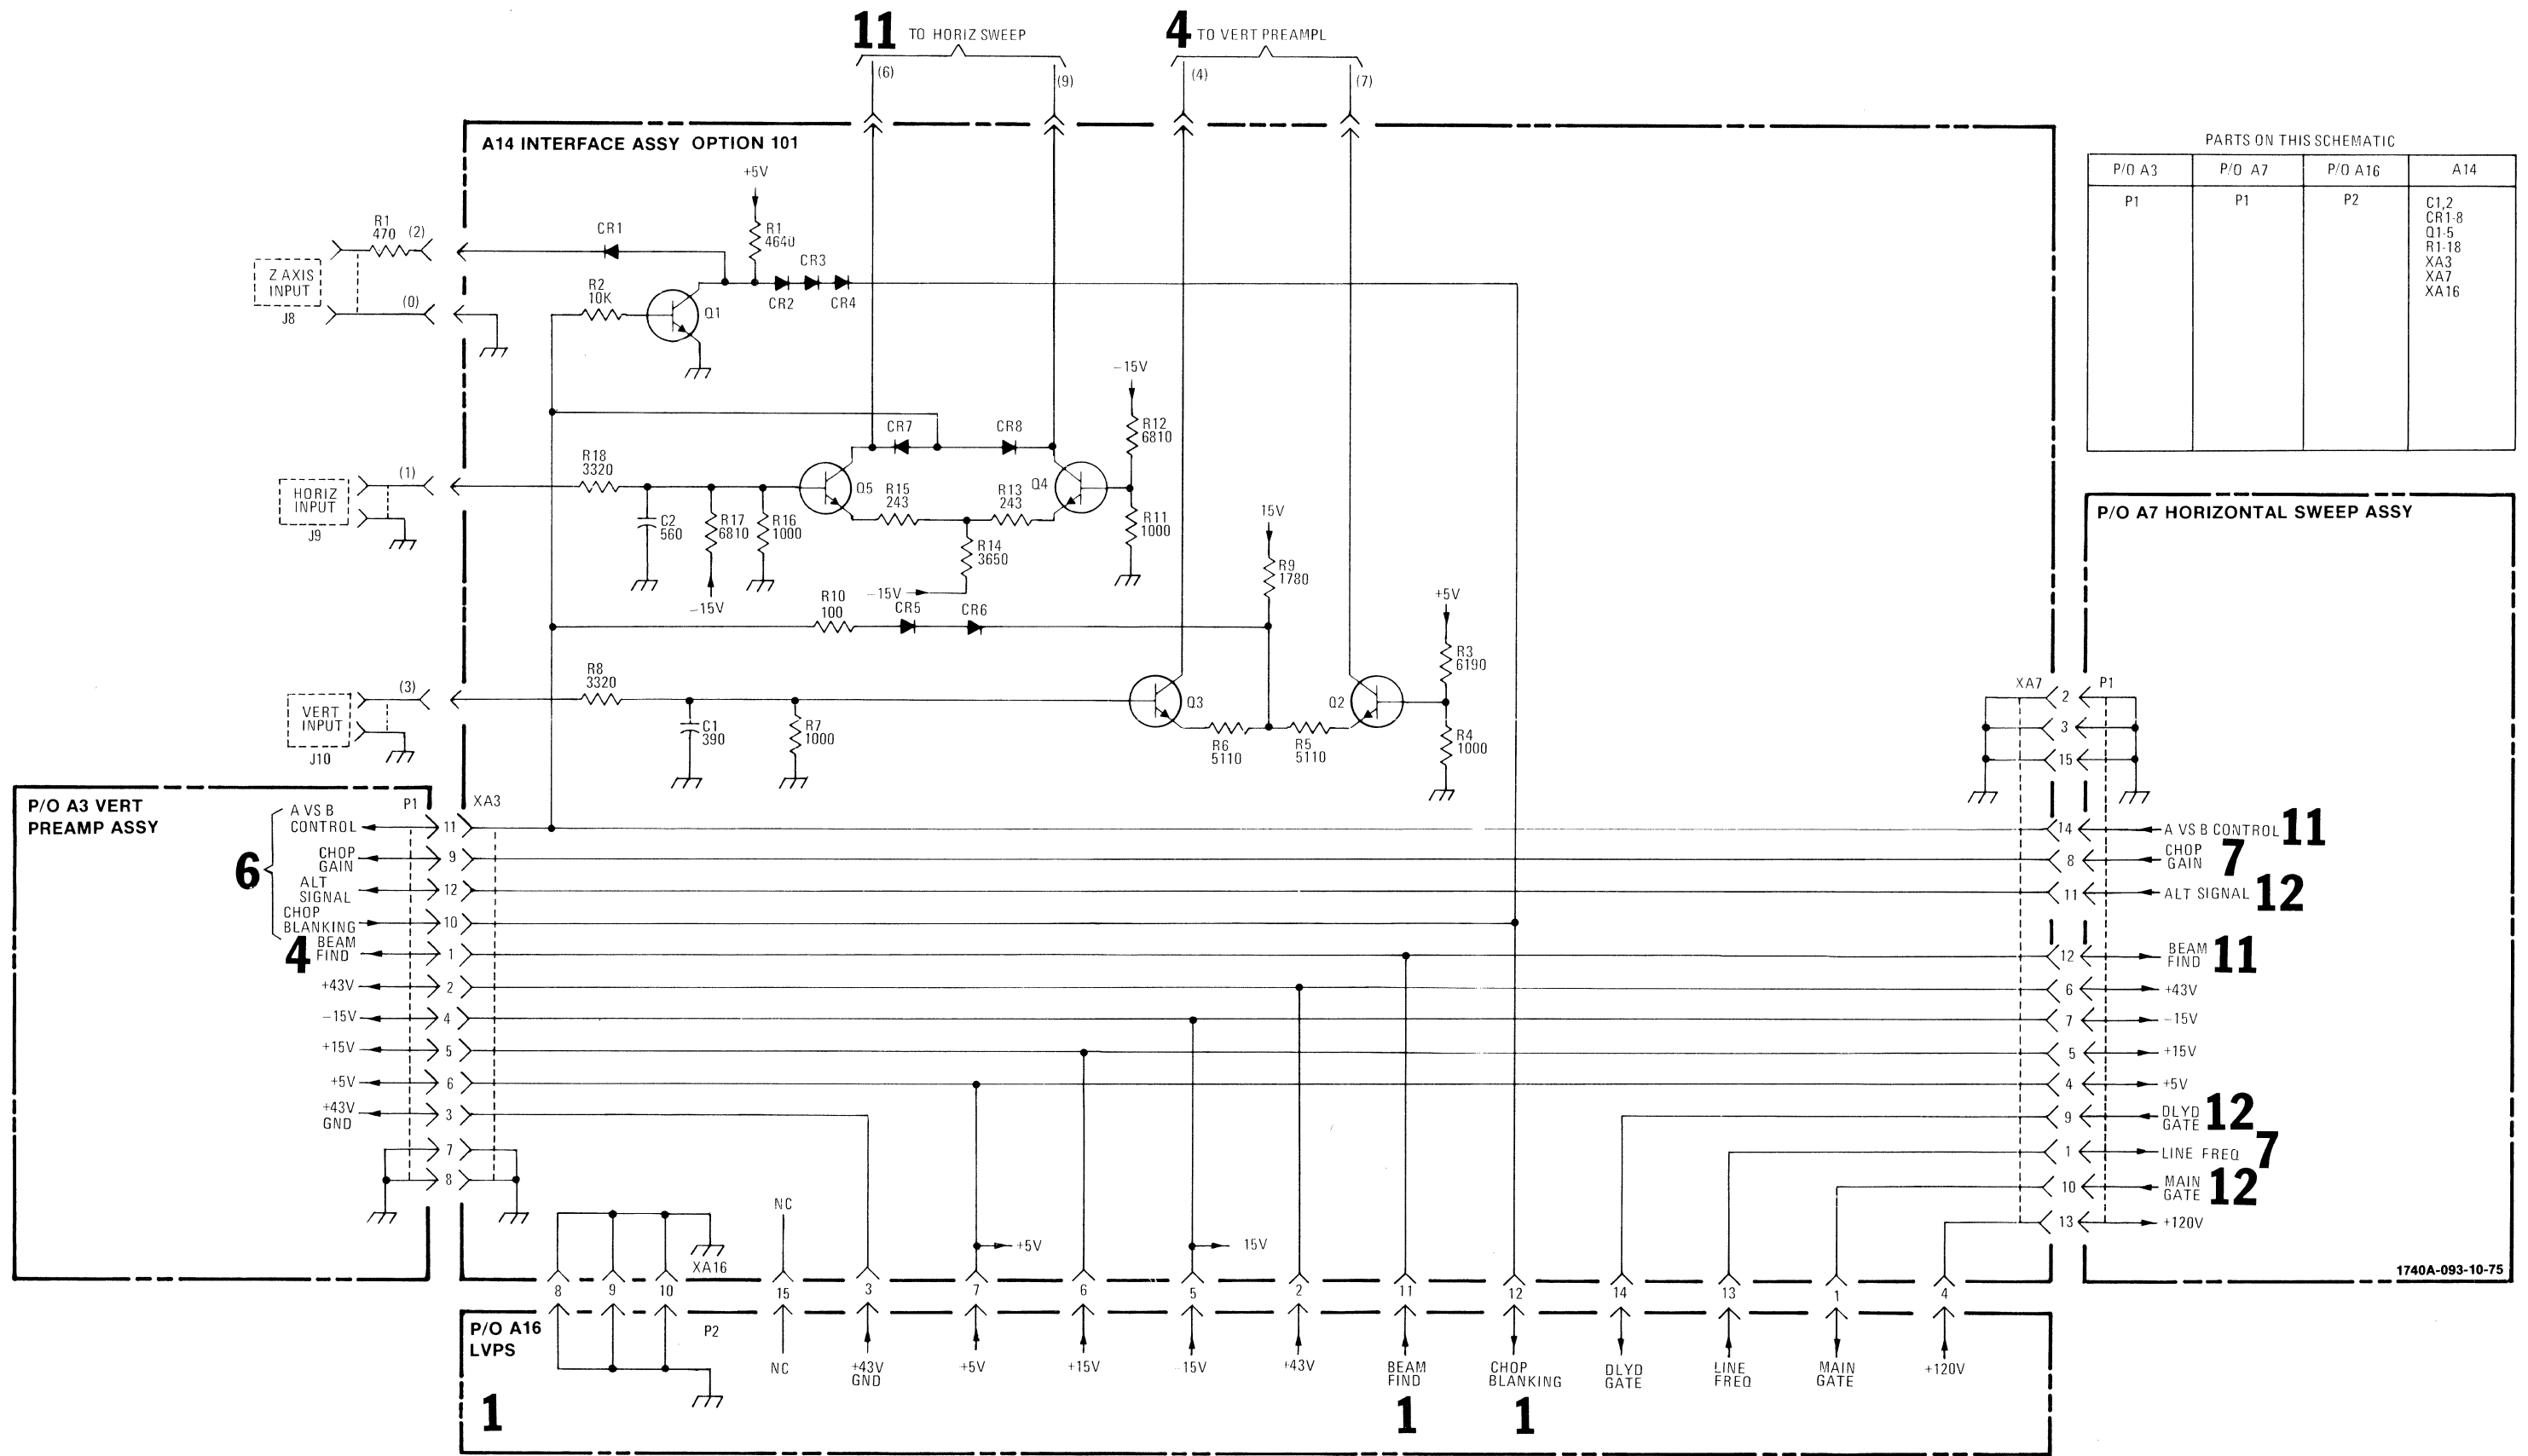

PARTS ON THIS SCHEMATIC

P/O A3	P/O A7	P/O A16	A14
P1	P1	P2	C1,2 CR1-8 Q1-5 R1-18 XA3 XA7 XA16

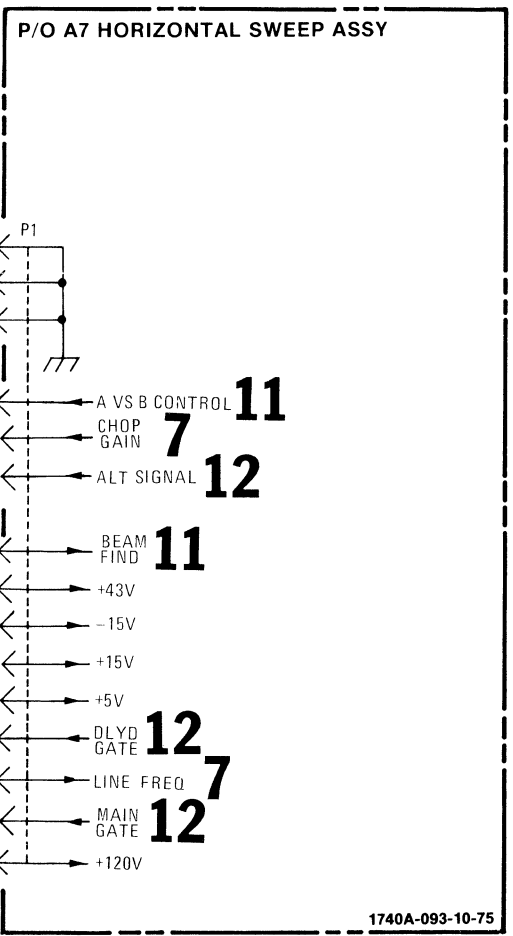


Figure 8-23.
Information, Option 101 Interface Assembly A14 (Sheet 2 of 2)
8-39

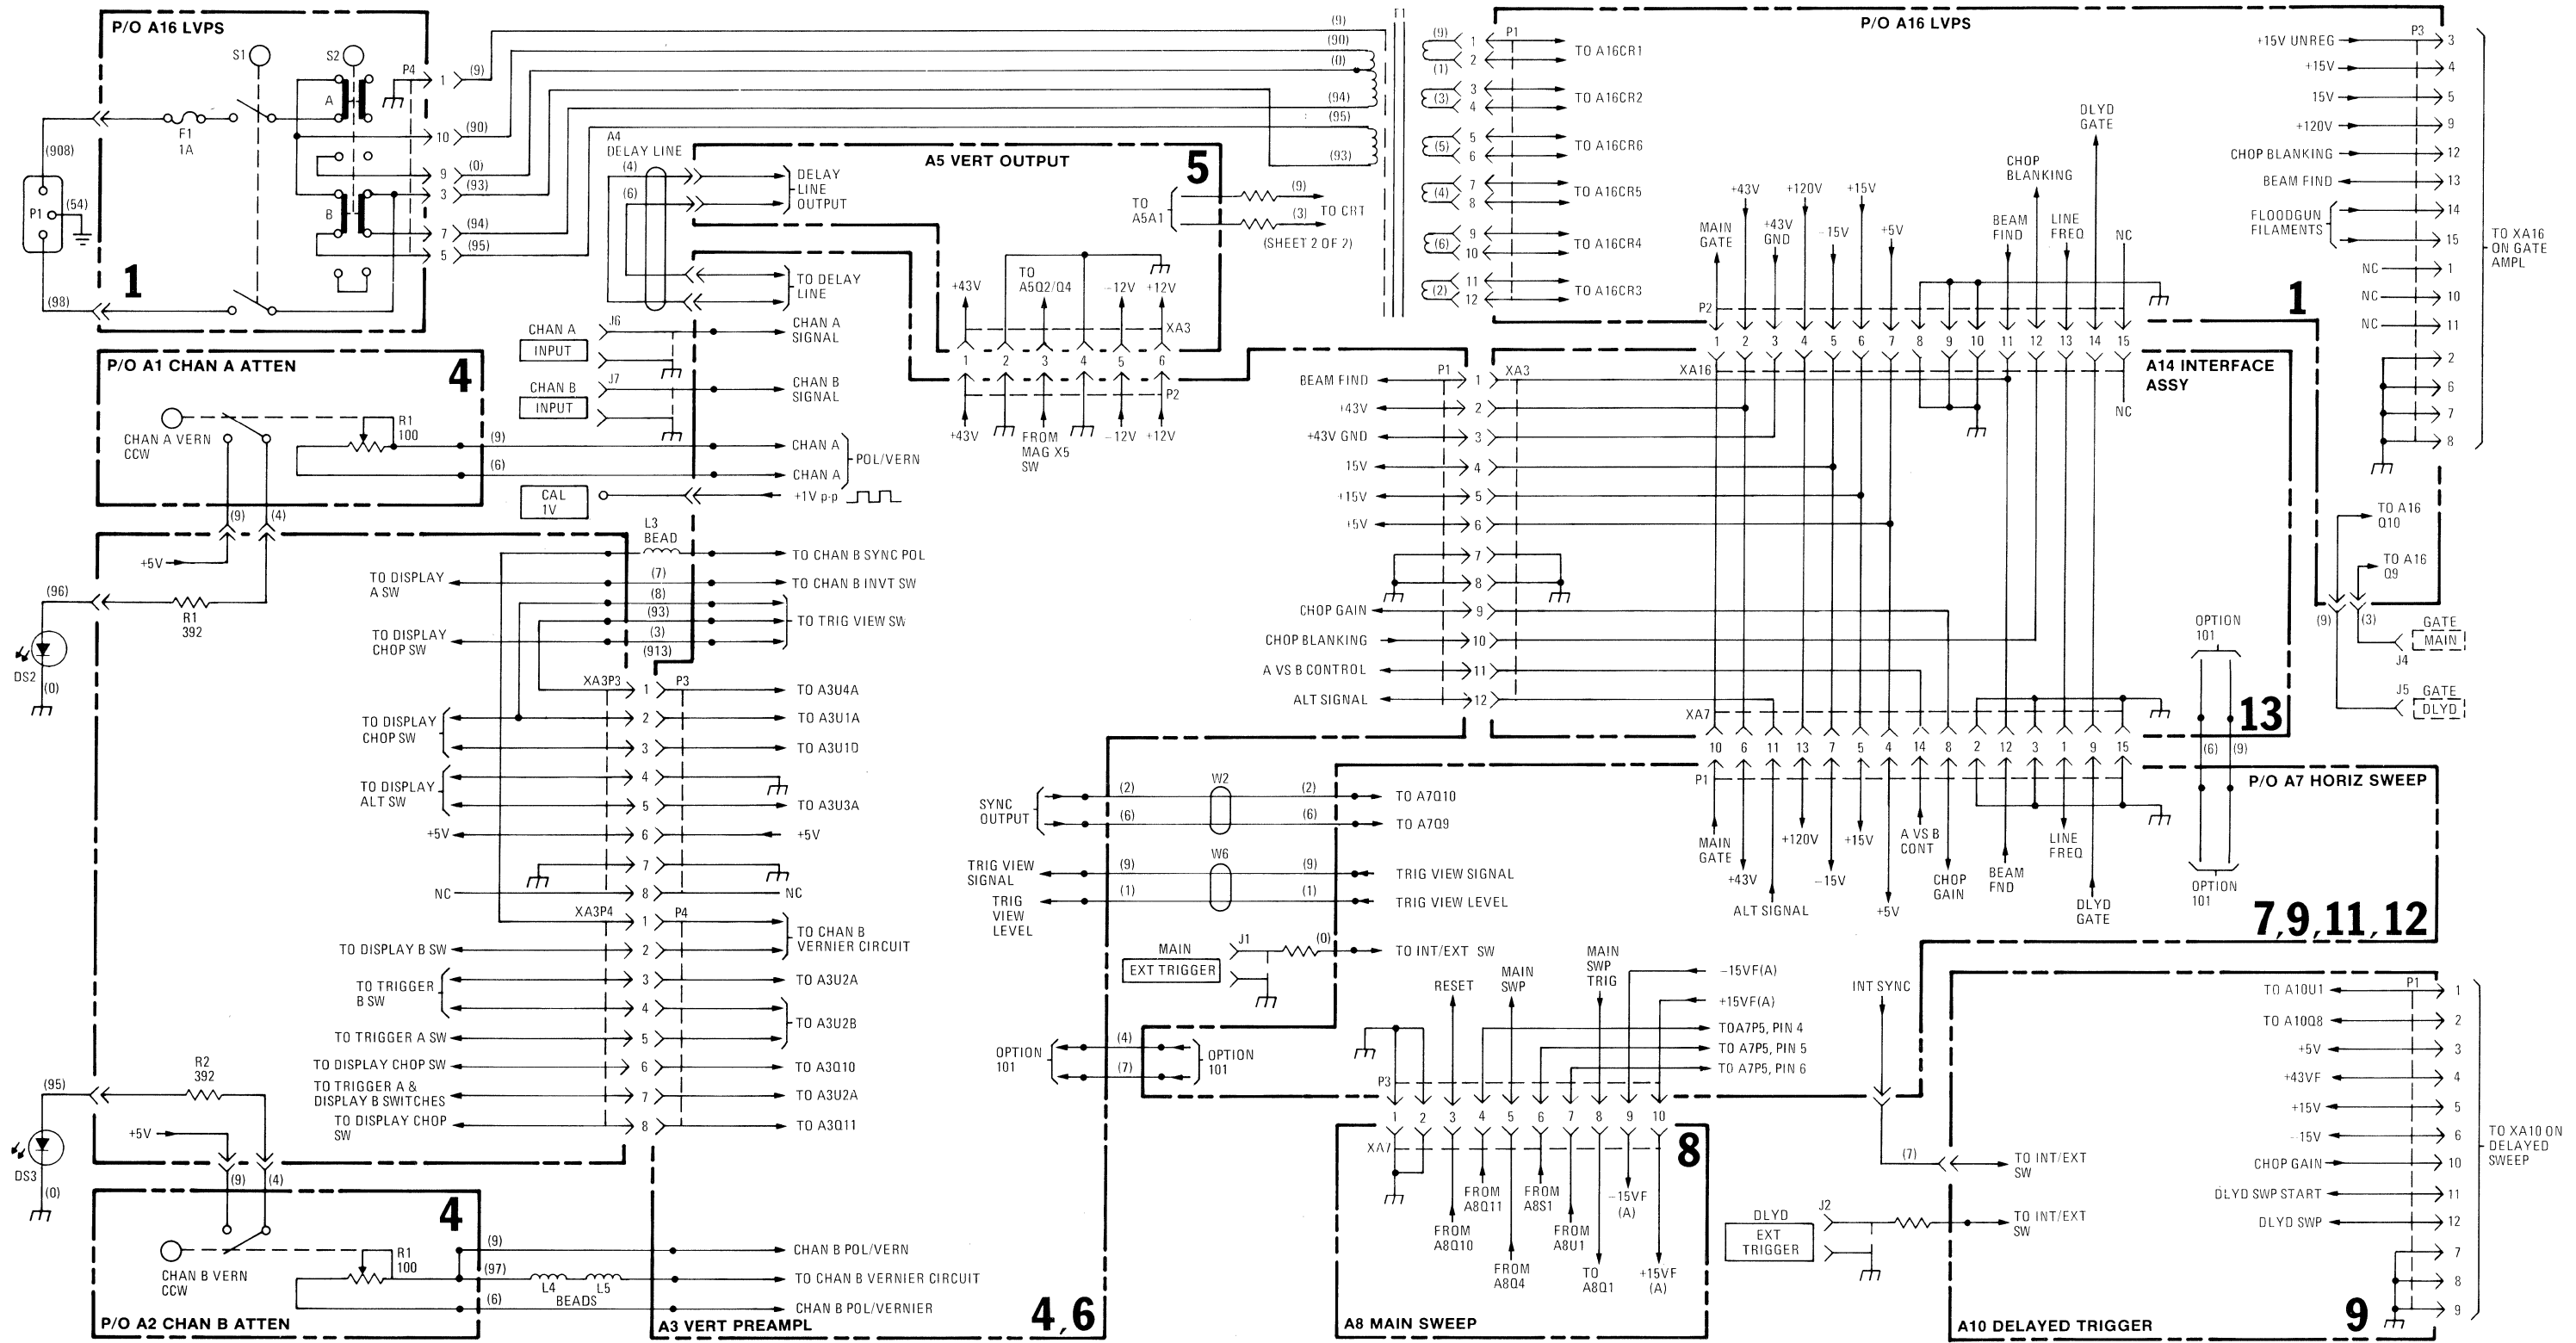


Figure 8-24. Interconnection Diagram (Sheet 1 of 2)

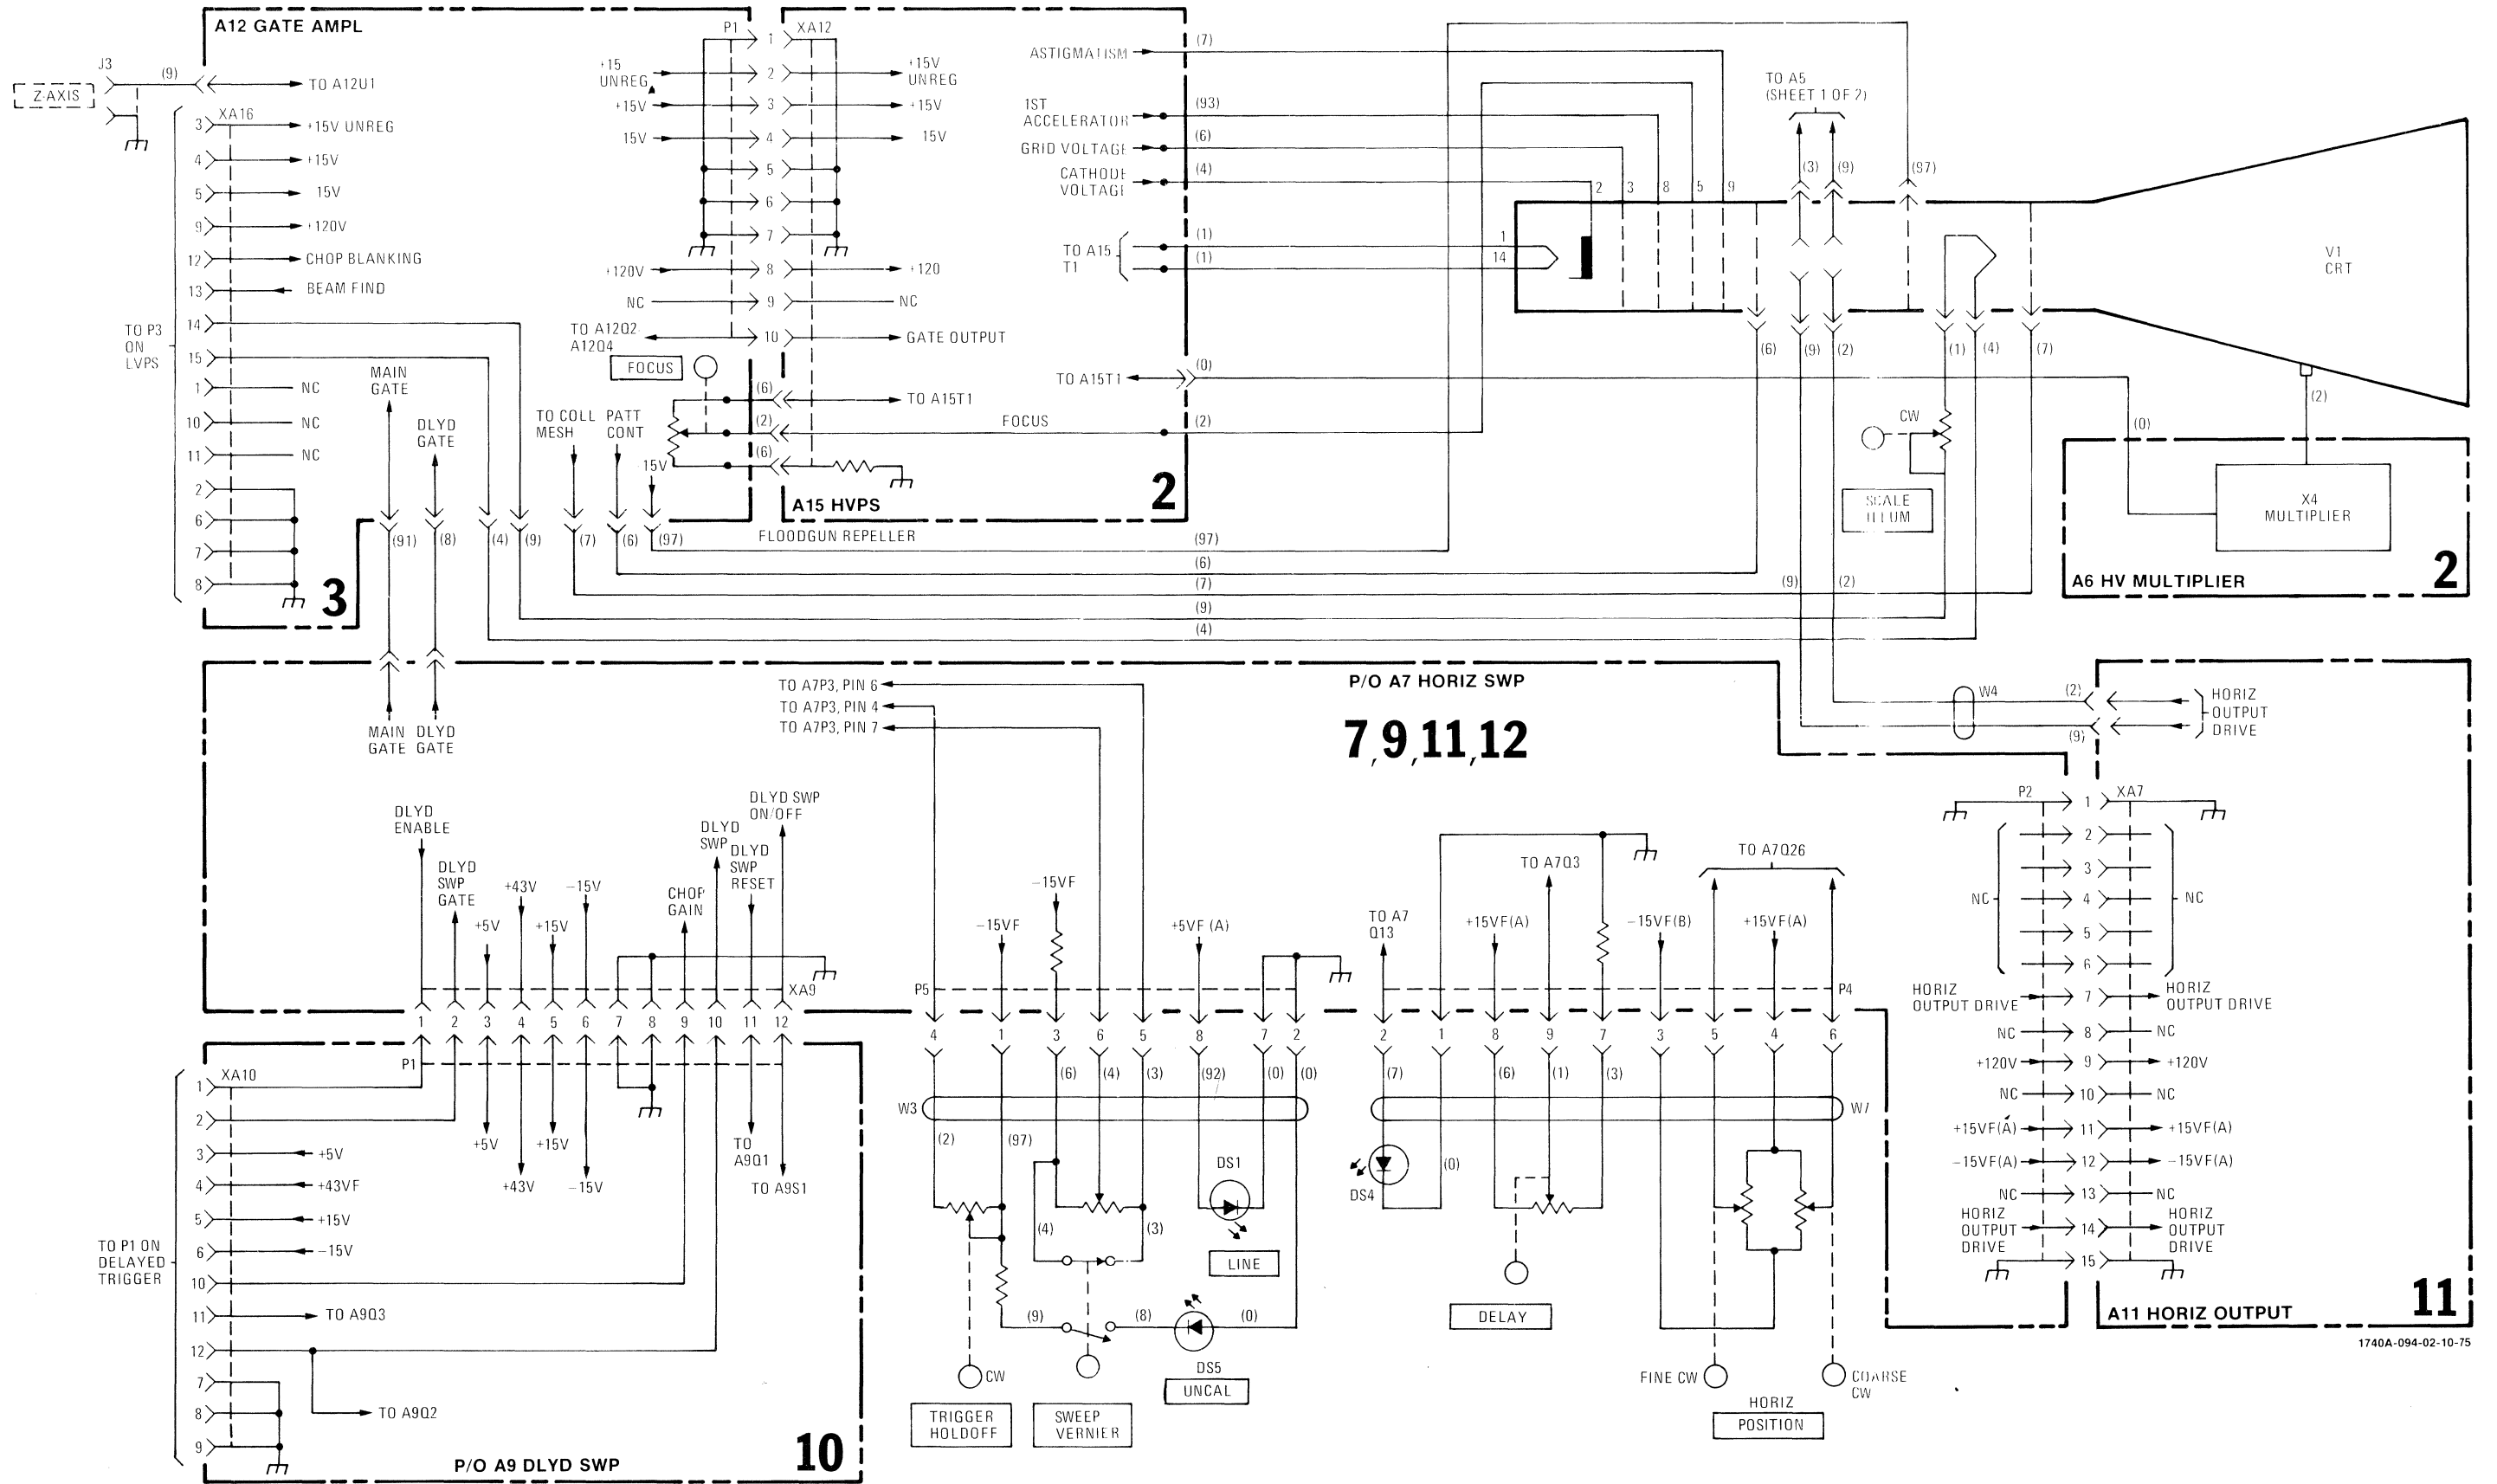


Figure 8-24.
 Interconnection Diagram (Sheet 2 of 2)
 8-41/(8-42 blank)

MANUAL CHANGES

MANUAL IDENTIFICATION

Model Number: 1740A
Date Printed: August 1976
Part Number: 01740-90909

This supplement contains important information for correcting manual errors and for adapting the manual to instruments containing improvements made after the printing of the manual.

To use this supplement:

Make all ERRATA corrections.

Make all appropriate serial number related changes indicated in the tables below.

Serial Prefix or Number	Make Manual Changes	Serial Prefix or Number	Make Manual Changes
1705A	1		
1705A 03700	A		
1729A	A,1,2		
1738A	A,1,2,3		

▲ NEW ITEM

CHANGE 1

Table 6-2,

R3, R4: Add to description: (FACTORY SELECTED VALUE).

A5A1: Change HP Part No. and Mfr Part No. to 1NA9-8005.

A5C17: Add to description: (LOADED ONLY WHEN REQUIRED AT THE FACTORY).

A5VR1: Change to HP Part No. 1902-3059, DIODE-ZNR 3.83V 5% PD=.4W, Mfr Code 28480, Mfr Part No. 1902-3059.

Schematic 5,

Add A5C17, 3.3PF, in parallel with A5R21. Add note to A5C17: (LOADED ONLY WHEN REQUIRED AT THE FACTORY).

Change A5VR1 to 3.83V.

NOTE

Manual change supplements are revised as often as necessary to keep manuals as current and accurate as possible. Hewlett-Packard recommends that you periodically request the latest edition of this supplement. Free copies are available from all HP offices. When requesting copies quote the manual identification information from your supplement, or the model number and print date from the title page of the manual.

21 June 1978

Page 1 of 3

HEWLETT  PACKARD

▲ CHANGE A

Table 6-2,

Add: A15CR8, HP Part No. 19101-0040, DIODE-SWITCHING 30V 50MA 2NS D0-35, Mfr Code 28480, Mfr Part No. 19101-0040.

Change: A15R30, HP Part No. 0757-0437, RESISTOR 4.75K 10% .25W FC TC=-400/+700, Mfr Code 24546, Mfr Part No. C4-1/8-TO-4751-F.


Change: A15R31, HP Part No. 0698-3449, RESISTOR 38.7K 1% .125W F TC = -100, Mfr Code 24546, Mfr Part No. C4 1/8 TO-2872 F.

Add: A15R33, HP Part No. 0757-0437, RESISTOR 4.75K 10% .25W FC TC = -400/+700, Mfr Code 24546, Mfr Part No. C4-1/8-TO-4751-F.

Add: A15R34, HP Part No. 0683-1025, RESISTOR 1K 5% .25W FC TC=-400/+600 Mfr Code 01121, Mfr Part No. CB1025.

Add: A15VR2, HP Part No. 1902-0766, DIODE-ZNR 18.2V 5% D0-7 PD=.4W TC =+.68%, Mfr Code 04713, Mfr Part No. SZ 10939-257.

Schematic 2, Change HV DISABLE Q1/Q2 circuitry as follows:

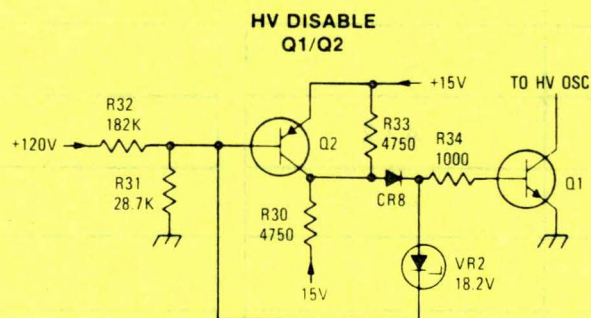

CHANGE 2

Table 6-2,

R12: Change to HP Part No. 2100-1439, RESISTOR-VAR 1K C, Mfr Code 04485, Mfr Part No. T200.

W8: Change to HP Part No. 01743-61605, CABLE ASSY: CRT, Mfr Code 28480, Mfr Part No. 01743-61605.

Add: W9, HP Part No. 01743-61606, CABLE ASSY: SCALE POT, Mfr Code 28480, Mfr Part No. 01743-61606.

A16: Change HP Part No. and Mfr Part No. to 01740-66537.

Delete: A16C20, A16Q11, A16Q12, A16R41, A16R42, A16R43, A16VR3, and A16VR4.

Add: A16C21, HP Part No. 0180-0100, CAPACITOR-FXD 4.7UF +-10% 35WVDC, Mfr Code 03923, Mfr Part No. D4R7B35K1.

Add: A16CR8, HP Part No. 1901-0040, DIODE-SWITCHING 30V 50MA 2NS D0-35, Mfr Code 28480, Mfr Part No. 1901-0040.

Add: A16P5, HP Part No. 1251-3192, CONNECTOR 3 PIN M POST TYPE, Mfr Code 03418, Mfr Part No. 09-60-1031.

Add: A16Q13, HP Part No. 1854-0472, TRANSISTOR NPN SI DARL PD=500MW, Mfr Code 02037, Mfr Part No. SPS6707.

Add: A16Q14, HP Part No. 1854-0558, TRANSISTOR NPN SI DARL PD=70W, Mfr Code 02037, Mfr Part No. SJE723.

Add: A16R44, R45, HP Part No. 0757-0477, RESISTOR 332K 1% .125W F, Mfr Code 01074, Mfr Part No. H8.

Add: A16R46, HP Part No. 0757-0429, RESISTOR 1.82K 1% .125W F, Mfr Code 01074, Mfr Part No. H8.

Add: A16R47, HP Part No. 0757-0406, RESISTOR 182 1% .125W F, Mfr Code 01074, Mfr Part No. H8.

Add: A16VR5, HP Part No. 1902-3086, DIODE-ZENER 4.75V 2% D0-7 PD=.4W, Mfr Code 02037, Mfr Part No. SZ10939-90.


CHANGE 2 (Cont'd)

Table 6-2 (Cont'd),

Schematic 1,

Delete: A16C20, A16Q11, A16Q12, A16R41, A16R42, A16R43, A16VR3, and A16VR4.

Add: A16C21, A16CR8, A16P5, A16Q13, A16Q14, A16R44, A16R45, A16R46, A16R47, and A16VR5 as shown below:

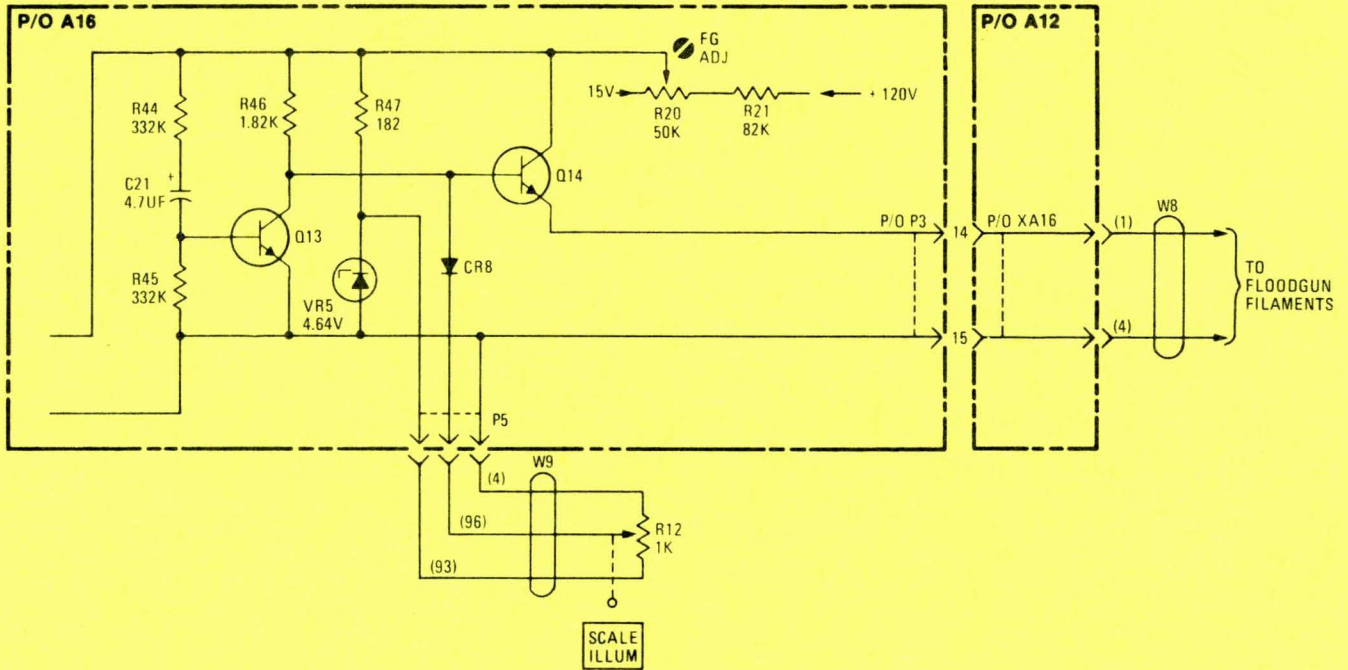

▲ CHANGE 3

Table 6-2,

A14: Change HP Part No. and Mfr Part No. to 01740-66540.

A14 Option 101: Change HP Part No. and Mfr Part No. to 01740-66541.

A14XA16: Change to HP Part No. 1251-5092, CONNECTOR 15-PIN, Mfr Code 28480, Mfr Part No. 1251-5092.

A16: Change HP Part No. and Mfr Part No. to 01740-66542.

A16P2: Change to HP Part No. 1251-5093, CONNECTOR 15-PIN, Mfr Code 28480, Mfr Part No. 1251-5093.

