




Software Technical Bulletin

October 1987

Software Information Services

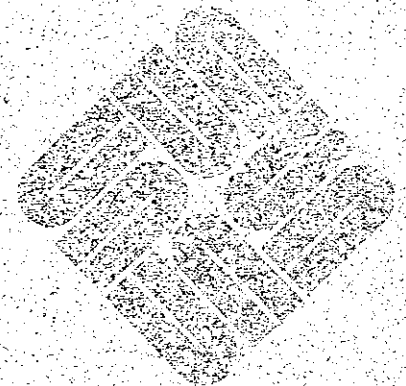

Part Number 812-8701-09
Issue 1987-9
October 1987






Software Technical Bulletin

October 1987

Software Information Services

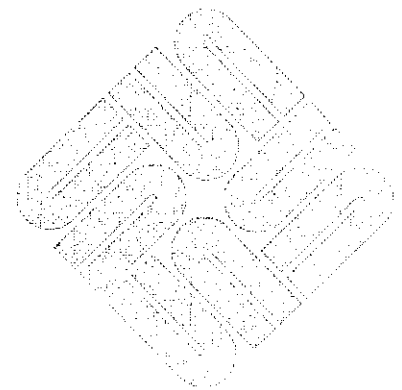

Part Number 812-8701-09
Issue 1987 - 9
October 1987

Software Technical Bulletins are distributed to customers with software/hardware or software only support contracts. Send comments or corrections to 'Software Technical Bulletins' at Sun Microsystems, Inc., 2550 Garcia Ave., M/S 2-312, Mountain View, CA 94043 or by electronic mail to *sun/stb-editor*. Customers who have technical questions about topics in the Bulletin should call Sun Customer Software Services AnswerLine at 800 USA-4-SUN.

UNIX, UNIX/32V, UNIX System III, and UNIX System V are trademarks of AT&T Bell Laboratories. DEC, DNA, VAX, VMS, VT100, WPS-PLUS, and Ultrix are registered trademarks of Digital Equipment Corporation.

Courier 2400 is a trademark of U.S. Robotics, Inc.

Hayes is a trademark of Hayes Microcomputer Products, Inc.

Multibus is a trademark of Intel Corporation.

PostScript and TranScript are trademarks of Adobe Systems, Inc.

Ven-Tel is a trademark of Ven-Tel, Inc.

Sun-2, Sun-2/xxx, Sun-3, Deskside, SunStation, Sun Workstation, SunCore, DVMA, SunWindows, NeWS, NFS, SunUNIFY™, SunView™, SunGKS, SunCGI, SunGuide, SunSimplify, SunLink, Sun Microsystems, and the Sun logo are trademarks of Sun Microsystems, Inc.

UNIFY™ is a trademark of Unify Corporation.

ENTER, PAINT, ACCELL, and RPT are trademarks of Unify Corporation.

SQL™ is a trademark of International Business Machines Corporation.

Applix® is a registered trademark of Applix, Inc.

SunAlis™ is a trademark of Sun Microsystems, Inc. and is derived from Alis, a product marketed by Applix, Inc.

SunINGRES™ is a trademark of Sun Microsystems, Inc. and is derived from INGRES, a product marketed by Relational Technology, Inc.

Copyright © 1987 by Sun Microsystems.

This publication is protected by Federal Copyright Law, with all rights reserved. No part of this publication may be reproduced, stored in a retrieval system, translated, transcribed, or transmitted, in any form, or by any means manual, electric, electronic, electro-magnetic, mechanical, chemical, optical, or otherwise, without prior explicit written permission from Sun Microsystems.

Contents

Section 1 NOTES & COMMENTS	673
Editor's Notes	673
New SunOS 'Dot Dot' Releases	675
Sun Software Produce Releases	681
Becoming a Sun Beta Site	683
Sun Education e-mail Board	688
Errata	689
Section 2 ARTICLES	693
Adding 2400 Baud Modems	693
SCLISP Quick Check	698
FPA and Recomputation	700
SunUnify Configurations	703
FORTRAN 1.0 Announcement	707
Section 3 STB SHORT SUBJECTS	719
Bridge Box Processing Overloads	719
Using the <code>id</code> Utility	720
Section 4 IN DEPTH	723
Network Information Transfers	723
Section 5 QUESTIONS, ANSWERS, HINTS, AND TIPS	737
Q&A, and Tip of the Month	737
Section 6 THE HACKERS' CORNER	743
Logging Console Messages	743
Section 7 CUMULATIVE INDEX: 1987	749




NOTES & COMMENTS

NOTES & COMMENTS	673
Editor's Notes	673
New SunOS 'Dot Dot' Releases	675
Sun Software Produce Releases	681
Becoming a Sun Beta Site	683
Sun Education e-mail Board	688
Errata	689



NOTES & COMMENTS

Editor's Notes



Editor's Notes

The October editor's notes for the Software Technical Bulletin (STB) include an announcement of new SunOS 'Dot Dot' releases, the current Sun software products and release levels table, becoming a beta test site volunteer, announcement of a Sun Education email bulletin board, a note on STB editor email responses, and a console messages log program in "The Hackers' Corner".

SunOS 'Dot Dot' Releases

Sun Microsystems is now releasing bundled patches every two or three months. These releases are called 'Dot Dot' releases and appear between other SunOS releases. See the 'Dot Dot' release article in this *Notes and Comments* section for lists of fixes that appear and are available now in SunOS releases 3.4.1 and 3.4.2.

Current Sun Software Products and Release Levels Table

The October Software Technical Bulletin (STB) includes the current version table. The current release level is shown for each product.

Use this table along with STB articles that appear in one or two issues after a new current release is available for a particular product. You can then better determine what your software needs are, what functions are available in a new release, and whether the release you are using is down-level from the most current product release.

Beta Site Volunteers

Look to an article in this *Notes and Comments* section about becoming a beta site volunteer to test upcoming new releases of Sun software products. If you are interested, simply fill out the enclosed questionnaire. A product manager for the appropriate product will then contact you for further details.

Sun Education email Bulletin Board

Sun Educational Services has set up an email bulletin board facility for use by Sun customers. Look to the article in this section for details on course outlines, catalogs, and the like.

STB Editor Email Responses

Every effort is made to respond to each email message sent to the STB editor. However, you may not receive a direct reply in the case that your reply is returned to Sun by the network daemon. Please note, however, that each request for back copies, changes in mailing addresses, and subscription-related issues is forwarded to the appropriate Sun group.

The Hackers' Corner

This month's code comes from Sun Europe and is useful to those needing a log of console messages, both stored in a file and available to a printer.

Again, please note that such applications, scripts, or code are not offered as released Sun products, but as items of interest to enthusiasts wanting to try out something for themselves. They may not work in all cases, and may not be compatible with future SunOS releases. Please consult your local shell script or programming expert regarding any application, script, or code problems.

Thanks.

The STB Editor

New SunOS 'Dot Dot' Releases

SunOS 'Dot Dot' Releases

Sun Microsystems is now releasing tapes containing bundled patches every two or three months, between other SunOS releases. These new releases are called 'Dot Dot' releases. Look to this article and future articles in the STB 'Notes and Comments' section that contain announcements of 'Dot Dot' releases, lists of specific fixes, fix reference numbers, and a synopsis of each corrected problem.

SunOS 'Dot Dot' Release Availability

SunOS 'Dot Dot' releases are available at no charge to Sun customers holding software support contracts, and to all Sun customers under warranty. Other Sun customers wishing to purchase a particular release may do so for \$200 USD.

To request or order a release, please call 1-800-USA-4-SUN and request the release by its 'Dot Dot' number, or by the Order Management and Retrieval (OMAR) number appearing in the next paragraph and in the Customer Support price list. For Sun Europe customers, please call your local support group or sales representative.

The first two releases available at this time are SunOS releases 3.4.1 and 3.4.2. Please note that these two dot dot releases can be installed separately or together on systems currently running SunOS release 3.4.

'Dot Dot' Ordering Information

Use the information below to order SunOS releases 3.4.1 or 3.4.2 or both.

A list of release contents appears at the end of this article. Use these two lists to determine whether you need either release.

SunOS Release 3.4.1

Description	CPU-type	Media Size	OMAR #	Unit Price
Docs, & Tape	68010	1/4"	DOT2-01-3.4.1	\$200
Docs, & Tape	68010	1/2"	DOT2-02-3.4.1	\$200
Docs, & Tape	68020	1/4"	DOT3-01-3.4.1	\$200
Docs, & Tape	68020	1/2"	DOT3-02-3.4.1	\$200

SunOS Release 3.4.2

Description	CPU-type	Media Size	OMAR #	Unit Price
Docs, & Tape	68010	1/4"	DOT2-01-3.4.2	\$200
Docs, & Tape	68010	1/2"	DOT2-02-3.4.2	\$200
Docs, & Tape	68020	1/4"	DOT3-01-3.4.2	\$200
Docs, & Tape	68020	1/2"	DOT3-02-3.4.2	\$200

SunOS Release 3.4.1

A list of SunOS 3.4.1 fixes, fix reference numbers, and a synopsis for each solved problem appears below.

- blank, Reference Number: 1004642
Synopsis: screenblank allows the -k and -m options while in suntools.
- cgi, Reference Number: 1003572
Synopsis: Bad inquire_cell_array and inquire_pixel_array name argument.
- cgi, Reference Number: 1003687
Synopsis: The CGI Mouse cursor is always visible.
- cgi, Reference Number: 1004825
Synopsis: -lcgi requires -lsuntool to compile a cgi program.
- cgi, Reference Number: 1005251
Synopsis: close_cgi_pw() fails if no viewsurface is active.
- cursor, Reference Number: 1003864
Synopsis: The crosshair cursor does not work when CANVAS_FAST_MONO is used.
- fpa, Reference Number: 1004500
Synopsis: A program compiled using -ffpa causes an FPA KERNEL BUS ERROR to occur.
- fsck, Reference Number: 1003023
Synopsis: The fsck: HOLD BAD BLOCK message is undocumented.
- gp1, Reference Number: 1004863
Synopsis: This is a GP1_PR_PGON_TEX problem.
- gp1, Reference Number: 1004984
Synopsis: GP1_PR_ROP_TEX semantics are wrong for a 1-bit deep src.

- `loopback`, Reference Number: 1005131
Synopsis: The resolver has the wrong `loopback` address.
- `make`, Reference Number: 1003151
Synopsis: `make` does not always build the objects that it should.
- `ping`, Reference Number: 1004791
Synopsis: `ping` says machines are up even when they are not.
- `printer`, Reference Number: 1004074
Synopsis: `lprm` causes line printer daemon to disappear.
- `rex`, Reference Number: 1005140
Synopsis: A `rex` race condition occurs when mounting in `/tmp`.
- `scsi2`, Reference Number: 1004639
Synopsis: This is a bug in the Sun-2 SCSI driver.
- `sendmail`, Reference Number: 1005042
Synopsis: Yellow Page alias must use primary host names.
- `socket`, Reference Number: 1003135
Synopsis: `panic: mfree` occurs with `AF_UNIX SOCK_STREAM` out-of-band (OOB) data.
- `suncore`, Reference Number: 1000895
Synopsis: Transformation of text that does not clip.
- `sunpro`, Reference Number: 1004898
Synopsis: The `install_sunpro` script fails for all configurations.
- `termcap`, Reference Number: 1004731
Synopsis: `termcap` entry for `TERM=wy` breaks `initscr()`.

SunOS Release 3.4.2

A list of SunOS 3.4.2 fixes, fix reference numbers, and a synopsis for each solved problem appears below.

- dbx, Reference Number: 1003647
Synopsis: Lexically recursive #includes confuse dbx
- dbx, Reference Number: 1004996
Synopsis: dbx shows segmentation violation while stepping
- diag, Reference Number: 1005466
Synopsis: sysdiag's sptest fails with /dev/tty[a,b]; does not respond
- disk, Reference Number: 1005360
Synopsis: SCSI disk driver hangs when ACB4000 reports write fault
- disk, Reference Number: 1005363
Synopsis: Some SCSI MD21 (141 MB) errors cause system hang
- ether, Reference Number: 1006127
Synopsis: Ethernet problems induced by bad ICMP address mask reply.
- io, Reference Number: 1005930
Synopsis: physio bug causes writev(2V) failure
- io, Reference Number: 1001069
Synopsis: bug in physio breaks readv
- kernel, Reference Number: 1006165
Synopsis: sysdiag's softfp and mc68881 core dump (illegal instruction)
- line, Reference Number: 1004863
Synopsis: This is a GP1_PR_PGON_TEX problem.

- `line`, Reference Number: 1004984
Synopsis: `GP1_PR_ROP_TEX` semantics are wrong for a 1-bit deep `src`.
- `line`, Reference Number: 1005359
Synopsis: Problem using `pw_line` and `pw_polyline`
- `lockf`, Reference Number: 1004336
Synopsis: `lockf()` very slow
- `look`, Reference Number: 1003885
Synopsis: `look` may dump core on long lines
- `net`, Reference Number: 1004765
Synopsis: subnet broadcast address computed incorrectly
- `nfs`, Reference Number: 1005489
Synopsis: NFS attribute cache functions incorrectly
- `rpc`, Reference Number: 1004739
Synopsis: `rpc.lockd` fails to free, thus using excess memory
- `sccs`, Reference Number: 1003207
Synopsis: SCCS uses delta times for `diffs`
- `sccs`, Reference Number: 1005438
Synopsis: SCCS `deledit` duplicates random lines in a file
- `scsi3`, Reference Number: 1005366
Synopsis: System panics when using `ttya` with SCSI3
- `serial`, Reference Number: 1006154
Synopsis: system is flooded with `zs` interrupts on `synca/b` transitions
- `sunpro`, Reference Number: 1004598
Synopsis: `make` does not handle square bracket characters in target filenames

- sunpro, seven unnumbered fixes

Descriptions:

- 1) No longer dumps core if the source needed to build a library member does not exist; instead reports "Don't know how to build x".
- 2) Fixed the `-k` option so that it works for lists of targets given on the make command line.
- 3) Remove the `.make.state` lock file if make is interrupted.
- 4) Use the `varargs` mechanism for the error routines.
- 5) Fixed bug that caused very long command lines to be read incorrectly.
- 6) Fixed bug that caused `$$ {X} .il` to be read incorrectly when used as a dependency.
- 7) Made it possible to undefine default suffix rules from the user's makefile.

- tape, Reference Number: 1004559

Synopsis: UNIX hangs while booting if `xt` controller has on-line drive

- transfer, Reference Number: 1006132

Synopsis: TCP/IP file transfer using `ftp` hangs/stops when using 3.4

Sun Software Produce Releases

Current Software Sun Products and Release Levels

Product Name	Current Release
SunOS	3.4
Cross Compiler	1.0
SunLink BSC3270	4.0
SunLink Local 3270	4.0
SunLink SNA3270	5.0
SunLink IR	5.0
SunLink DDN	5.0
SunLink DNI	4.0
SunLink OSI	5.0
SunLink MCP	5.0
SunLink TE100	4.0
SunLink X.25	5.0
FORTRAN	1.0
NeWS	1.0
Sun Common Lisp	2.0
Modula-2	1.0
SunAlis	2.1
SunGKS	2.0
SunINGRES	5.0
SunSimplify	1.0
SunUNIFY	2.0
Transcript	2.0
SunIPC	1.1
PC-NFS	2.0

Current Sun Software Products and Release Levels

The table appearing above contains a list of current Sun software products and their respective current release levels.

You will note that the Software Technical Bulletin (STB) contains articles from time to time that detail technical changes in a given software product's next available release.

Please contact your sales representative if you decide that you would like to update the release level of a Sun software product you already use, or wish to purchase another product. Use the table below to determine whether your release is the current release level.

This table appears monthly in the STB for your convenience.

Becoming a Sun Beta Site



Beta Sites for Sun Software Products

This article contains an introduction, overview of beta site benefits and risks, software testing activities associated with beta sites, a description of beta site contact persons, a list of Sun software product categories, and a survey questionnaire for those Sun customers interested in further beta site information or in volunteering to become a beta site for future releases of Sun software products.

Introduction

Software products go through several phases within manufacturing companies before and after becoming available for purchase. These phases, including beta site testing, are listed below.

- Initial conceptualization
- Market analysis
- Development and debugging
- Alpha site testing (internal)
- Beta site testing (internal and customer)
- Released, First Customer Ship (FCS)
- Subsequent release levels
- End-of-life, support ends

Of course, the goal is to ship a perfect product every time. The purpose of Sun beta testing is to test debugged code in order to release a thoroughly tested First Customer Ship (FCS) product. However, product complexity requires testing in many environments to discover applications where actual use reveals product areas needing further development. This is where beta site testing can be of advantage to both the manufacturer and the customer.

Beta Sites: An Overview

Sun Microsystems is interested in developing beta sites at customers' places of business as one of the several testing phases of Sun software product development.

Being a beta site really means a new relationship between the customer and Sun, plus additional understanding of software product applications. Part of this relationship includes testing of new products and a written non-disclosure agreement for beta site testing.

There are both benefits and risks in such testing, and both need to be considered.

Benefits!

As a beta testing site for Sun software products, you will be among the first to gain product knowledge and to know how applicable a particular Sun software product is to your ongoing production or manufacturing needs. (Beta software is not intended for use in developing 'ongoing, current, and immediate' products.)

Your own product planning and development processes can be done in light of *hands on* experience with Sun software products.

Your employees will be trained through on-the-job use of a software product that may subsequently become part of their work processes.

You will get first-hand knowledge of how the product behaves, solving actual end-user problems. Ease of use, operator guides, and development of user notes and procedures all may result. *Seeing is believing* and *show me* often allow better understanding of a product's capabilities.

Beta site testing allows input to Sun developers since product design includes flexibility to include changes. This is the case both at the beta site phase for first-time products, as well as including changes in subsequent releases following FCS. Flexibility exists to include minor changes from beta testing before FCS, with more extensive design and development scheduled for subsequent releases.

Risks!

Customers interested in becoming beta test sites for particular Sun software products may minimize risks associated with testing unreleased products. Approached with common sense, the risks can be minimized and are outweighed by the mutual benefits.

A beta site is a test site for an unreleased product. Customers interested in testing need to have enough resources to use the unreleased product in *test* mode. Beta sites are not for those needing early, pre-release versions of a working product.

End-users need to know that the product is being *tested*, outside the usual and ongoing production or manufacturing processes at the customer site. The ideal test is exercising all

features to the extent possible, not a limited use in a routine sequence, and yet not impacting ongoing production processes.

Finally, the benefit from beta site testing will be known for sure only *after* the testing. However, weighed against the greater benefits, many customers choose to take the risks to gain the benefits.

Beta Site Testing Activities

Beta site testing is best done by getting as many customer points of view as possible. Managers, project leaders, software developers, and end-users all have important feedback to give in beta sites.

Tests need to be done based on a mutually agreed upon schedule, both within the customer's ongoing production or manufacturing schedule as well as within Sun's product development and release schedule. The resources for beta testing need to be anticipated and allocated in advance of each test period. This would be done after follow-up discussions to the survey questionnaire at the end of this article.

The test feedback is best when specific, clear comments are made for a particular feature or application. The feedback is best summarized in writing, allowing Sun program managers and developers an opportunity to develop follow-up responses, questions, and product improvements.

Specific beta site activities begin with choosing a particular product with potential application in the customer's ongoing production or manufacturing processes. See the table in this article for a list of Sun software products and current release levels.

Beta Site Contact Person

Sun software product managers and customer managers will each designate a primary, beta site contact person. These two people will act as liaisons to whom technical information and test results will be directed. The contact person from Sun will be someone assigned to a technical position who can effect technical change.

This will not be a sales-oriented contact, but one of a necessary two-way exchange of technical information. One of the points that will be covered is a test agreement to be signed prior to testing.

Current Software Sun Product Categories

General categories of Sun software products are listed below. List one or more of these categories on your beta site interest questionnaire which appears in the next paragraph.

- SunOS
- Graphics

- Window Environments
- Communication
- Network Products
- Languages (Specify C, FORTRAN, Pascal)
- OA Products
- Development Environments
- PC-Based Products

**Beta Site Interest
Questionnaire**

If you are interested in further information about becoming a beta test site for a product listed in the table above, please fill out the questionnaire at the end of this article. The appropriate Sun product manager will then contact you regarding further, detailed information.

Fill out the beta site interest questionnaire and send it to the address shown below.

Software Technical Bulletins
Sun Microsystems, Inc.
2550 Garcia Avenue
M/S 2-312
Mountain View, CA 94043

You can also send your response by electronic mail to *sun!stb-editor*. Your response will result in a follow up contact from the appropriate product manager for more detailed discussions on beta site testing, planning, scheduling, and the like.

As a beta site, Sun will loan you the product for test installation and use by technically qualified managers, project leaders, or end-users.

Name _____

Position: End-User Product Manager
 Manager Project Leader
 Other

Company Name _____

Company Address _____

E-Mail Address _____

Phone Number _____

Product (s) _____

Type of Industry: Aerospace Automotive
 Academic Manufacturing
 Automotive Oil & Gas
 Civil A/E Pharmaceutical
 Defense Power Utilities
 Financial Semiconductor
 Software

Sun Workstations:

Type _____

Configuration _____

SunOS Release _____

Sun Product Categories of Interest:

Automotive
 Communication
 Development Environments
 Graphics
 Languages (Specify C, FORTRAN, Pascal)
 Network Products
 QA Products
 PC-Based Products
 SunOS
 Window Environments

Sun Education e-mail Board

**Sun Educational Services
email Bulletin Board**

Sun Educational Services, located in Milpitas, California, has set up an 'email Bulletin Board' facility for Sun Microsystems customers.

This facility provides a means for interested customers to learn about new courses and related developments happening within Educational Services. This facility is also a good means for customers to direct questions and general requests for information to Educational Services. These questions and requests might be regarding course outlines, catalogs, how to arrange for a dedicated class at the customer's site, and so on.

**How to Be Added to the email
Bulletin Board**

Customers who want to be added to the Education Services email Bulletin Board should send their Usenet or DARPA addresses to:

customer-training@sun.com
suncustomer-training

To ask questions, simply send the question to one of the above email addresses.

**The New Educational Services
Course Brochure**

Sun Microsystems customers should soon be receiving the new Sun Educational Services course brochure. The brochure contains complete course descriptions as well as the course offerings scheduled from January, 1988 through June, 1988.

If you do not receive this brochure by November 10, 1987, please contact your local sales office or Sun Educational Services directly at either of the toll-free numbers listed below.

In California:	800-423-8020
Elsewhere in the continental U.S.:	800-422-8020

Sun customers in the United Kingdom and in Europe should contact their local service center or sales representative.

Errata

Errata: Unsupported `asm` Usage

A short subject on page 215 of the June STB recommends using `asm` to embed assembly code in a C source file. Please delete this short subject since this is an unsupported mechanism. This causes numerous problems, especially when used with the optimizer.

A Supported Mechanism

A supported mechanism uses assembly-level, inline expansion. This is fully documented in Appendix G of the *Floating-Point Programmer's Guide for the Sun Workstation*, part number 800-1552.

You can use a simple, inline expansion facility to integrate assembly routines into higher-level C, Pascal, or FORTRAN routines. The peephole optimizer `c2` has been modified to accept code containing inline-expanded routines.

The C, FORTRAN, and Pascal compilers assume that file names ending with the `.il` suffix contain inline-expandable assembly routines. Several examples are provided to illustrate proper uses of the `/usr/lib/inline` program.



ARTICLES

ARTICLES	693
Adding 2400 Baud Modems	693
SCLISP Quick Check	698
FPA and Recomputation	700
SunUnify Configurations	703
FORTTRAN 1.0 Announcement	707



ARTICLES

Adding 2400 Baud Modems



Using 2400 Baud Modems with UUCP

Higher-speed modems are becoming more cost effective in data transfer due to increasing phone line costs and decreasing modem prices. This article explains how to modify the appropriate files on a Sun workstation to enable higher-speed modems to be used with UUCP.

Overview

Once the modems have been properly attached to the workstation, the SunOS and UUCP software need to be modified in order to use the faster transmission rates. An overview of the steps required to add higher-speed capabilities to your workstation is shown below.

- Edit `/etc/gettytab` to add the new speeds into the 'Fast dialup terminals' definition
- Edit `/usr/lib/uucp/L-devices` to define the new line speeds to UUCP
- Edit `/usr/lib/uucp/L.sys` to modify the remote site modem speed
- Edit `/etc/ttys` to modify the initial line speed setting
- Reinitialize `/etc/init` to use the new line speed settings

These steps are detailed below. See the references at the end of this article for additional, detailed information.

Adding 2400 Baud Capability: A Procedure

Use the following procedure to add 2400 baud or other higher-speed capabilities to your Sun workstation. Each step includes examples of typical files before and after the file modifications. The information applies to SunOS release 3.2 and subsequent releases.

Step 1: Login

Login as superuser to modify the system and UUCP files.

Step 2: Modify /etc/gettytab

The /etc/gettytab file defines the terminal line characteristics. You need to add a 2400 baud entry to the 'Fast dialup terminals' definition.

In the standard SunOS release of UNIX, this definition is set to start at 1200 baud and then to cycle down to 300 baud if needed. The standard definition will then cycle back to 1200 baud if needed. In order to add the new 2400 baud speed into this loop, it is necessary to add a new entry into this cycle. Modifying the /etc/gettytab file, as shown below, will add the 2400 baud capability.

Original File:

```
#
# Fast dialup terminals, 1200/300 rotary (can start either way)
#
3|D1200|Fast-Dial-1200:\
      :nx=D300:fd@:tc=1200-baud:
5|D300|Fast-Dial-300:\
      :nx=D1200:tc=300-baud:
```

Modified File:

```
#
# Fast dialup terminals, 2400/1200/300 rotary (can start any way)
#
3|D1200|Fast-Dial-1200:\
      :nx=D2400:fd@:tc=1200-baud:
5|D300|Fast-Dial-300:\
      :nx=D1200:tc=300-baud:
J|D2400|Fast-Dial-2400:\
      :nx=D300:tc=2400-baud:
```

Note that the last two lines, the one starting with 'J' and its continuation, have been added to the definition. In the second line, the entry 'nx=D300' has been changed to 'nx=D2400' to force the line speed to jump from 1200 to 2400 baud if a 'break' condition is generated by a dialed-up terminal or equivalent device. Should the 2400 baud test unsuccessfully, the line will skip to 300 baud. Similar changes may be made to add 4800 or 9600 baud capabilities.

Also, note that you may wish to remove the 300 baud entry from the cycle since 300-baud modems are used in fewer and fewer applications. Do this by changing 'nx=D300' to 'nx=D1200' in the 'D2400' definition.

The terminal line speed may now be cycled from 2400 to 1200 baud and back, normally by pressing the 'break' key of most terminals. Your modified `/etc/gettytab` file should now look like the example shown below.

Modified File (reduced 300 baud cycling capability):

```
#
# Fast dialup terminals, 2400/1200 rotary (can start any way)
#
3|D1200|Fast-Dial-1200:\
    :nx=D2400:fd@:tc=1200-baud:
5|D300|Fast-Dial-300:\
    :nx=D1200:tc=300-baud:
J|D2400|Fast-Dial-2400:\
    :nx=D1200:tc=2400-baud:
```

Step 3: Modify `/usr/lib/uucp/L-devices`

Now that the new baud rate has been added, you need to get UUCP to use it. To add 2400 baud capabilities to UUCP, modify the `/usr/lib/uucp/L-devices` file by adding definitions for the new speed. A standard file set to use 1200 baud with two modems might look like the example shown below.

Original File:

```
ACUHAYES cua1 cua1 1200
ACUHAYES cua0 cua0 1200
```

The example file, after being modified for 2400 baud, now looks like the following example. This example allows the both modem ports to start at either 1200 or 2400 baud.

Modified File:

```
ACUHAYES cua1 cua1 1200
ACUHAYES cua1 cua1 2400
ACUHAYES cua0 cua0 1200
ACUHAYES cua0 cua0 2400
```

Step 4: Modify `/usr/lib/uucp/L.sys`

Modify the `/usr/lib/uucp/L.sys` file by changing the modem speed definition. UUCP will now call sites at the new 2400 baud rate whenever either dialer is available at the time it tries to dial out. A typical `/usr/lib/uucp/L.sys` entry is given below.

Original File:

```
sun Any ACUHAYES 1200 5551212 ogin: Usun ssword: stbuucp
```

You need to change the modem speed, the fourth field from the left, from '1200' to '2400'. This change causes UUCP to call the specified site at 2400 baud automatically. Your modified entry should look like the example shown below.

Modified File:

```
sun Any ACUHAYES 2400 5551212 ogin: Usun ssword: stbuucp
```

Repeat this step as needed to call other systems at other sites at the 2400 baud rate.

Step 5: Modify /etc/ttys

Since a 'J' entry was added to the /etc/gettytab file in step 2, line speed initialization field(s) in the /etc/ttys file may now include a 'J' in the second column to allow dialins at 2400 baud. Make this change if most of the modems calling your system do so at 2400 baud. A standard /etc/ttys file contains entries similar to those shown below.

Original File:

```
13ttyd0
13ttyd1
```

These entries are the definitions for the dialup lines. To enable the modem to answer at 2400 baud, change the '3' to 'J' in each line. Your modified file should now look like the sample shown below.

Modified File:

```
1Jttyd0
1Jttyd1
```

Step 6: Reinitialize /etc/init

The /etc/init process must re-read the /etc/ttys file to use the new initialization. You can reinitialize /etc/init by issuing it a SIGHUP.

The /etc/init process is the first process started when the system is booted, and therefore has a process id of '1'. Issuing a SIGHUP to /etc/init causes it to reread /etc/ttys and to reset all of the changed parameters. Use the following command to accomplish this.

```
# kill -HUP 1
```


This completes the procedure to add 2400 baud rates to reduce the cost of phone line service by using faster modems. Again, note that similar changes may be made to include the 4800 or 9600 baud rates as well. Please note that UUCP has a maximum speed of 4800 baud, while the Sun workstation has 9600 and 19.2 kbaud capability. The highest useful rate is thus limited to 4800 baud.

Summary

You have now added the 2400 baud definition to all of the appropriate system and UUCP files. The system and UUCP can now use the new transmission rate. Not only will UUCP dial and receive calls at 2400 baud, but users can now use 2400 baud modems for dialin as well. This will cut the data transfer transmission time and improve interactive response.

References


See the following two sections of *System Administration for the Sun Workstation*, part number 800-1323, for more information on the UUCP file changes.

- Chapter 5.4, 'Adding a Modem to Your System'
- Appendix C, 'UUCP Implementation Description'

See the following two manual pages for more information on the system file changes and procedural steps.

- `gettytab(5)`
- `ttys(5)`
- `init(8)`

SCLISP Quick Check



Sun Common Lisp Quick Check

The following interactive sequence provides the system administrator with a means to quickly and easily check a newly-installed Sun Common Lisp (SCLISP) development environment.

Functions Performed by the Quick Check

The functions performed by this quick check, namely garbage collection (which reorganizes the dynamic memory) and computation with large integers, both give SCLISP considerable exercise, and can be performed very easily.

The object of this check is to ensure that the computations are performed without aborting or returning error messages, rather than to verify the correctness of the numerical values produced. The values returned by Garbage Collection (GC) will differ from system to system. Note that the factorial function definition in the interactive sequence below omits type checking.

Running the Quick Check

To run the quick check, enter Lisp. After the banner text is displayed, the SCLISP > prompt appears. If the Editor subsystem is present, the interactive sequence can be performed in the *Lisp Buffer* window of the Editor. To enter the Editor, enter **(ed)** at the prompt, then perform the interactive sequence as shown below from within the *Lisp Buffer* window.

To run the sequence, enter the information shown in **bold** following the SCLISP > prompt.

In the system responses shown below, note that carriage returns have been inserted to break the large integers into two lines. This prevents truncation during printing.

FPA and Recomputation



Floating-Point Accelerator
Performance Description
Enhancement

The following is an enhancement to the description of Floating-Point Acceleration (FPA) beginning on page 26 of the *Floating-Point Programmer's Guide for the Sun Workstation*, part number 800-1552-10.

Performance

Because the treatment of floating-point exceptions is so variable, most floating-point programs that run reliably on machines with different types of arithmetic do not cause any floating-point exceptions to occur, other than in an inexact case. Consequently, Sun's FPA recomputation scheme was designed without consideration of efficiency, other than in the inexact case. Programs that generate many exceptions may run extremely slowly -- slower than software floating-point -- due to the intervention of the operating system to handle bus errors and signaling. The most likely instances where this might arise are in computations which frequently underflow, or which handle many 'Not a Number' (NaN) circumstances.

The most common symptom indicating that frequent recomputation may be occurring is that the proportion of system time to user time consumed by a process is far greater than normal. If frequent recomputation is suspected, it may be investigated by running the program under the control of `adb` or `dbx`, then examining `WSTATUS` register bits 8 to 11 after each recomputation request. Bits 8 to 11 of the `WSTATUS` register correspond to the Weitek 1164/1165 S+ bus output status codes as shown in the table below.

WEITEK 1164/1165 S+ BUS EXCEPTION STATUS CODES	
Code	Exception Status
0	Exact zero result
1	Exact infinite result
3	Exact finite result
4	Not used
5	Overflow and inexact
6	Underflow
7	Underflow and inexact
8	Operand A subnormal
9	Operand B subnormal
10	Both operands subnormal
11	Division by zero
12	Operand A is NaN
13	Operand B is NaN
14	Both operands NaN
15	IEEE invalid operation

Interaction Examples

The interactions shown in the examples below demonstrate some typical results of suspected frequent recomputation investigations using `adb.a`.

Example One: In the example below, the '3' in `wstat = 2300` indicates inexact result.

```
host% adb.a out

:r
SIGFPE 8: numerical exception, CHK, or TRAP
stopped at      _MAIN_+0x48:      cml     #0x989680,d7
$X
mode3 = 2 wstat = 2300 state = 11 imask = 1 ldptr = 0 ierr = 20
```

The FPA always requests recomputation on the first inexact result.

Example Two: In the example below, the '7' in `wstat = 2700` indicates an inexact underflow.

```
host% adb.a out
```

```
:c
SIGFPE 8: numerical exception, CHK, or TRAP
stopped at      _MAIN_+0x48:          cmpl      #0x989680,d7
$x
mode3 = 2 wstat = 2700 state = 11 imask = 0 ldptr = 0 ierr = 20
```

The result of recomputation will be a subnormal number.

Example Three: In the example below, the '8' in wstat = 2800 indicates a subnormal operand.

```
host% adb.a out
```

```
:c
SIGFPE 8: numerical exception, CHK, or TRAP
stopped at      _MAIN_+0x3c:          fpmul3s fpa5,fpa4,fpa4
$x
mode3 = 2 wstat = 2800 state = 11 imask = 0 ldptr = 0 ierr = 20
```

Recomputation will treat the operand according to its current nonzero value. If the 'fast' Weitek mode had been selected, mode3 = 3 and its operand would have been treated as a zero, without generating this exception.

If recomputation performance is an issue, it can be partially ameliorated by using the Weitek chips in 'fast' mode. 'Fast' mode, although inconsistent with the IEEE standard, causes no ill effects on programs that work correctly on a variety of non-IEEE machines. This is because non-IEEE machines most likely underflow abruptly to zero, without creating subnormal (denormalized) numbers as IEEE machines do. In the normal 'IEEE' mode of Weitek chips, recomputation is invoked if either the operand or the result is a subnormal number. In the 'fast' mode of Weitek chips, recomputation is only invoked if the result would be a subnormal number. In this case, subnormal operands are treated as zero without generating any exception.




SunUnify Configurations

SunUnify Configuration Considerations

This article describes how to properly configure a SunUnify installation so that the following features are set up for correct operation.

- SunUnify database
- Data manager
- Session manager
- The SunUnify Software including
 - executables
 - libraries
 - include files
 - compat directory




The most important aspect to keep in mind when configuring a SunUnify installation is that the SunUnify session manager *must* run on the same machine as the database. Three common Sun hardware configurations are illustrated in the following pages.

A Diskful Machine Configuration

When SunUnify is configured for a diskful machine, such as a Sun-3/180S, the SunUnify database, the session manager, and the SunUnify software all reside on one machine.

In the example below, the diskful machine named **daisy** is configured for the user named **donald** to properly use SunUnify.

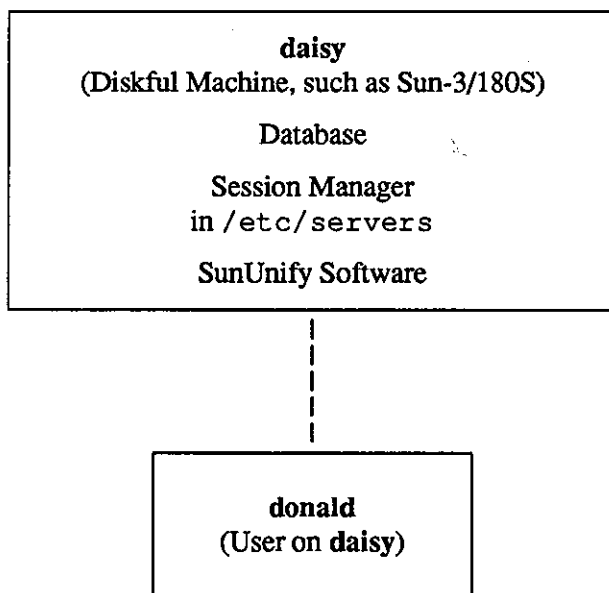


The session manager entry in `/etc/servers` takes the form shown below.

```
rcp tcp /<path_name>/unify/bin/dbsessionmgr 100016 3
```


Configuring a User on Another Diskful Machine

If SunUnify is being configured for a diskful machine, such as a Sun3-160, where the SunUnify software is NFS mounted and the database resides locally, the correct mount entry must appear in `/etc/fstab`. The entry for the session manager must appear in `/etc/servers`.

In the example below, the machine named **scrooge** has the SunUnify database on its local disk. The session manager is running on **scrooge**, and the necessary SunUnify libraries and executables are mounted from **huey**, as shown below.

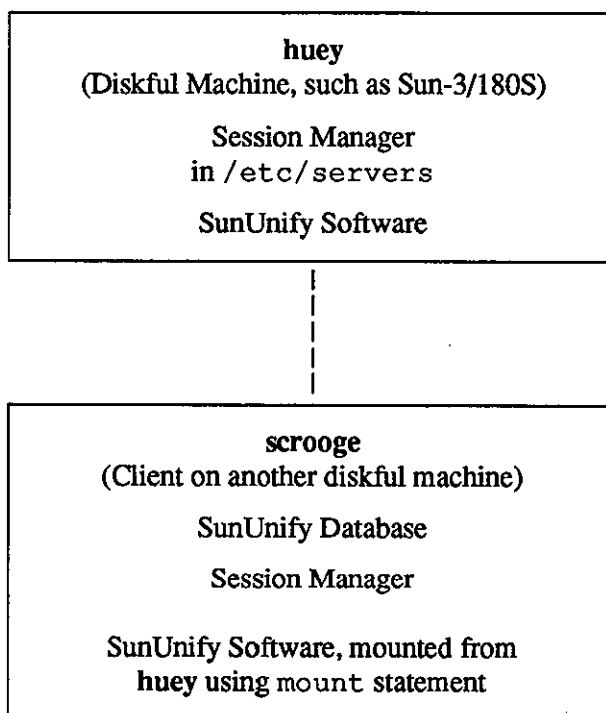

The mount statement on **scrooge** takes the form shown below.

```
huey: /<path_name>/unify /<new_path_name>/unify nfs rw,hard,bg 0 0
```


The session manager entry in `/etc/servers` takes the form shown below.

```
rcp tcp /<path_name>/unify/bin/dbsessionmgr 100016 3
```

A Diskless Client Configuration

When configuring a diskless client such as Sun-3/50, the database resides in the user's NFS-mounted home directory. The SunUnify software is mounted from the diskful machine to the diskless client and the client's nfs server. The session manager runs on the nfs server.

In the example below, **louie** is a diskless client on **dewey**. The database resides in the user's home directory, which is NFS mounted from **dewey**. The SunUnify software is mounted on both **louie** and **dewey** from **huey**, and the database session manager is running on **dewey**, as shown below.

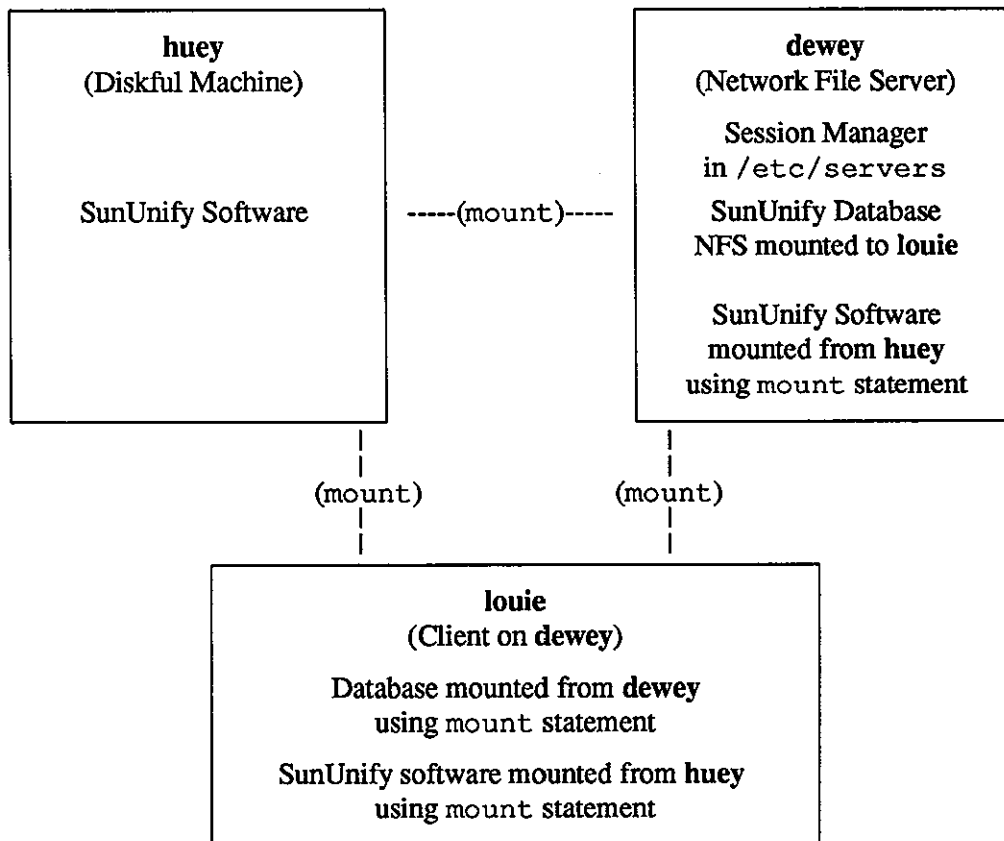

The mount statements on **louie** take the form shown below.

```
huey: /<path_name>/unify /<new_path_name>/unify nfs rw,hard,bg 0 0
```

```
dewey: /<path_name>/<home_directory> /<new_path_name>/<home_directory> nfs rw hard bg 0 0
```

The session manager entry in **dewey's** `/etc/servers` takes the form shown below.

```
rcp tcp /<path_name>/unify/bin/dbsessionmgr 100016 3
```

FORTRAN 1.0 Announcement

Sun FORTRAN 1.0

This article is a brief overview of VMS-compatible Sun FORTRAN 1.0, including new features, functions, and usage considerations.

Introduction

Sun FORTRAN 1.0 is an enhanced ANSI FORTRAN 77 development system. It is Government Services Administration (GSA)-certified with VAX/VMS FORTRAN 4.0 extensions, thus providing a development system for a significantly expanded body of FORTRAN source code. Existing VMS FORTRAN applications can be ported to the Sun workstation environment. Through SunLink DNI, users can develop the same FORTRAN programs on both Sun and DEC/VAX systems with only minor modifications.

The package consists of three components: extensions to the `f77` compiler to support most of the VMS FORTRAN features; extensions to the debugger to support some of these same VMS FORTRAN features; and the `f77cvt` Source-Code Converter program, used to convert most of the remaining extensions into statements that the Sun FORTRAN compiler will accept. When used together, the compiler and converter provide almost total compatibility with VMS FORTRAN.

Sun FORTRAN 1.0 is designed to be compatible with Sun Operating System (SunOS) release 3.2 and release 3.4 for Sun2 and Sun3 systems.

Sun FORTRAN Compiler Extensions

The new compiler consists of the previous Sun FORTRAN compiler, `f77`, and several language extensions. These extensions have been separated into the three groups listed below.

- Group I: Direct compiler, run-time, library, and debugger extensions to Sun FORTRAN
- Group II: Extensions that are converted from VMS FORTRAN to Sun FORTRAN
- Group III: Unimplemented extensions from VMS FORTRAN, which are diagnosed by the source code translator

Each of these groups is discussed in detail below.

Group I: Direct Sun FORTRAN Extensions

Group I consists of direct extensions to Sun FORTRAN to provide general enhancements as well as VMS-specific features. These direct extensions include compiler, run-time, library, and `dbx` debugger extensions. These extensions provide additional facilities for FORTRAN program developers, and significantly decrease the time required to port applications to the Sun environment. The most significant extensions are listed below.

Compiler, Run-time, and Library Extensions

The extensions for the compiler, run-time, and library are listed below.

- Namelist-directed I/O
- DO/END DO and DO WHILE statements
- BYTE datatype, logical operations on integers, and arithmetic operations on logicals
- Long identifier names (up to 32 characters)
- Long source lines (up to 132 characters)
- Identifiers containing '_' and '\$'
- STRUCTURE, RECORD, UNION, and MAP declarations
- Additional field and edit descriptors for FORMAT statements, and default field indicators for certain field descriptors
- POINTER datatype, which provides increased compatibility with vectorized FORTRAN versions
- Intrinsic functions in DATA and PARAMETER statements, such as AND, OR, NOT, XOR, LSHIFT, RSHIFT, LGE, LGT, LLE, LLT
- Improved error messages and error recovery
- Run-time generation of upper-case strings
- Flagging of non-ANSI constructs under the control of a compiler option

dbx Debugger Extensions

The extensions for the dbx debugger are listed below.

- STRUCTURE, RECORD, UNION, and MAP declarations
- POINTER datatype
- Improved error messages and error recovery

Group II: Converted VMS FORTRAN Extensions

The `f77cvt` Source Code Converter program accepts valid VMS FORTRAN code and outputs code that is compatible with Sun FORTRAN. In addition to the direct translations and extensions in Group I, the converter program handles many indirect conversions. In these instances, the VMS FORTRAN extensions have an equivalent, but not identical, Sun FORTRAN extension. These indirect extensions are listed below.

- Embedded comments
- Debugging statements
- VMS tab format
- Alternate syntax for direct-access I/O
- Radix-50 constants
- Typeless hex and octal constants
- %VAL() and %LOC() functions
- Non-standard length specifiers in FUNCTION statements
- REAL*16 constants and declarations, which are converted to REAL*8
- Initialization of variables in COMMON blocks
- Non-Standard PARAMETER statement
- DATA statements mixed with specification statements
- ENCODE and DECODE statements
- VIRTUAL statement
- IMPLICIT NONE statement
- Variable initialization in declaration statements
- Implicit type conversion from REAL to INTEGER
- TYPE and ACCEPT statements
- Options to OPEN: TYPE, NAME, and RECORDSIZE
- Options to CLOSE: DISP and DISPOSE
- Non-CHARACTER run-time format and file specifiers
- Non-Standard alternate return actual arguments
- Omitted actual arguments

- %REF () function with non-CHARACTER argument
- Flagging of unsupported VMS extensions

Group III: Unsupported VMS Extensions

Some VMS FORTRAN extensions cannot be transferred or converted by the `f77cvt` Source-Code Translator into Sun FORTRAN. In these instances, the unsupported extensions will be identified and diagnosed by the translator for quick identification and resolution once the porting process is complete. These unsupported VMS FORTRAN extensions are listed below.

- DEFINE FILE, FIND, DELETE, REWRITE, and UNLOCK statements
- OPTIONS statement
- Nonstandard INQUIRE specifiers: CARRIAGECONTROL, DEFAULTSFILE, KEYED, ORGANIZATION, and RECORDTYPE
- Nonstandard OPEN specifiers, such as ASSOCIATEVARIABLE, BLOCKSIZE, CARRIAGECONTROL, EXTENDSIZE, NOSPANDBLOCKS, RECORDTYPE, and so on
- READs into Hollerith edit descriptors
- Variable expressions in FORMAT statements
- Structure field initialization
- %REF () function when used with CHARACTER argument
- %DESCR
- Non-CHARACTER dummy argument used as ENCODE/DECODE buffer
- Intrinsic that convert to a specific INTEGER size, such as IINT, JINT, IIDINT, JIDINT, and so on
- VMS system calls

The `f77cvt` Source-Code Converter

The migration of VMS FORTRAN code into Sun FORTRAN 1.0 format is accomplished through the `f77cvt` Source-Code Converter. This program accepts a file containing valid VMS FORTRAN source code, and produces a file containing FORTRAN source code that is acceptable to the `f77` compiler. If the converter finds a construct that it cannot convert, it produces an appropriate message on standard error.

The resulting output file contains few, if any, nonstandard features or syntax of the `f77` compiler that are not also supported by the VMS compiler. One of the converter's options generates a list of warning messages for each nonstandard `f77` extension that it produces. A new compiler option identifies all non-ANSI extensions, including those that are not the result of conversion. Thus, in most cases the user should be able to compile the converted code on both the VMS FORTRAN and the `f77` compilers.

The source code converter accepts options that correspond to similar options on the VMS compiler. These options either generate the appropriate FORTRAN statements, or produce a diagnostic message indicating that the option is unrecognizable by the program. The converter has an option to write to standard output a comment on each conversion it has performed.

This conversion is performed as a separate step, and is a one-way translation. Therefore, the `f77cvt` Source-Code Converter cannot be used to transfer Sun FORTRAN 1.0 back to VMS FORTRAN; however, in most cases, the converted code will run under the VMS compiler.

There are some important considerations to keep in mind when using Sun FORTRAN and the converter program. These are discussed below.

Changes to Comment Lines and Indentation

Due to parser limitations, comment lines move and indentation is changed in the converted code when the compiler of the `f77cvt` converter program is parsing VMS FORTRAN code.

The before-and-after conversion examples below demonstrate how comment lines and indentation are affected in the source code file named `test.for`. Note the messages inserted by the converter program during the conversion process.

VMS FORTRAN source code comments before conversion

```

i = i
c   all comments between the beginning of statement N and the
1   +
c   beginning of statement N+1 are moved to precede statement N
2   1
c   in f77cvt output.
   j = i
   end

```

VMS FORTRAN source code comments after conversion

```

c      all comments between the beginning of statement N and the
c      beginning of statement N+1 are moved to precede statement N
c      in f77cvt output.
# 1 "test.for"
    i = i + 1
# 7 "test.for"
    j = i
    end

```

VMS FORTRAN source code indents before conversion

```

c      original indentation is lost:
    dimension a(5, 10)
    do 20 i = 1, 5
        do 10 j = 1, 10
            a(i, j) = 0.0
10      continue
20      continue
    end

```

VMS FORTRAN source code indents after conversion

```

c      original indentation is lost:
    dimension a(5, 10)
# 3 "test.for"
    do 20 i = 1, 5
    do 10 j = 1, 10
    a(i,j) = 0.0
10 continue
20 continue
    end

```

INCLUDE Statements

The files referred to in the `INCLUDE` statements must be also be converted prior to use if they make use of VMS FORTRAN extensions.

The design of the converter program expects legal FORTRAN input; that is, complete program units. Therefore, files referred to within `INCLUDE` statements must be manually edited prior to conversion by appending an `END` statement to make the file appear as a program unit. After conversion, the `END` statement should be removed to return to the `INCLUDE` file back to its normal format.

The `INCLUDE` files must be separately converted prior to usage if they make use of VMS FORTRAN extensions.

Additional Code Conversion Characteristics

The following before-and-after example demonstrates some additional characteristics of how the conversion program translates code from VMS FORTRAN into Sun FORTRAN 1.0.

VMS FORTRAN source code before conversion

```
integer function binary_search(a, n, x)
integer a(n)           ! the array to be searched
integer x              ! the search object

integer i              ! lower end of search range
integer j              ! upper limit
integer k              ! midpoint

i = 1
j = n
do while (i .le. j)
    k = (i+j) / 2
d    type *, k
    if (a(k) .eq. x) then
        binary_search = k
        return
    else if (a(k) .lt. x) then
        i = k + 1
    else
        j = k - 1
    endif
end do
binary_search = 0
end
```

VMS FORTRAN source code after conversion

```

        integer function binary_search(a, n, x)
c the array to be searched
        integer a(n)
c the search object
        integer x
c lower end of search range
        integer i
c upper limit
        integer j
c midpoint
        integer k
# 9 "test.for"
        i = 1
        j = n
        do while (i .le. j)
c
c         type *, k
# 12 "test.for"
        k = (i + j) / 2
# 14 "test.for"
        if (a(k) .eq. x) then
            binary_search = k
            return
        else if (a(k) .lt. x) then
            i = k + 1
        else
            j = k - 1
        end if
        end do
        binary_search = 0
    end

```

Use of Double Quotes

In VMS FORTRAN and *f77cvt*, double quotes are used as an octal constant delimiter. For example, the statement `x = "77` is equivalent to `x = 63`. In Sun FORTRAN 1.0, double quotes are used to indicate a character string delimiter.

**New and Changed FORMAT
Statement Options**

The following table lists new and changed FORMAT statement options and descriptors that are included with Sun FORTRAN 1.0.

Note that the field descriptors A, D, E, F, G, I, L, O, and Z can be written without the w, d, and e field indicators. If these are left unspecified, the appropriate defaults will be used, based on the data type of the I/O list element.

Option	Description
Q	Returns the length of an input record, or of the remaining portion that is unread
\$	Suppresses the carriage return, and does not depend on the first character of the format.
O	Octal notation
Z	Hexadecimal notation

STB SHORT SUBJECTS

STB SHORT SUBJECTS	719
Bridge Box Processing Overloads	719
Using the id Utility	720



STB SHORT SUBJECTS

Bridge Box Processing Overloads

Bridge Box Processing Power

Some customers have observed problems between two machines connected to each other through a bridge box. With one machine mounted to the second machine's file system and all `fstab` entries correct, the error message shown below may result. This occurs with large files or during an attempt to run an executable. It does not occur when working with small files.

```
NFS Read Error for Server B
RPC timeout
```

The Workaround

Many Ethernet bridge boxes do not have the processing power necessary to keep up with a busy Ethernet, especially Sun workstations sending back-to-back packets on the net. It is possible to tune the NFS using parameters to the `mount` command to avoid placing too much processing demand on the bridge box.

Use the parameters shown below for use over Sun Internetwork Routers.

```
rsize=512, wsize=512, timeo=100
```

These should cause the amount of back-to-back traffic to remain within the power of the bridge box, at the price of reduced NFS throughput.

Refer to the article *Back-to-Back Ethernet Packets* on page 245 of the July STB for additional details on bridge box processing problems associated with sending large files across busy networks.

Using the `id` Utility

The `id` Utility

The `id` utility is new starting with SunOS release 3.2 and is loaded only if you select the System V optional software category. The `id` utility tells you who you are. This may be helpful in the case that you run into permission problems when you think you are logged in as root. You may be yourself instead.

An example of using the `id` utility is shown below.

```
plaid# id
uid=0(root) gid=1(daemon)
plaid# exit
plaid# plaid% id
uid=2295(chuq) gid=40(support)
plaid%
```

The `id` utility is also useful in determining group permissions and investigating other permissions problems since the command `whoami` may be used to determine user id (UID).

An example of this use is the situation when password files are not consistent between the NFS server and client, a user has one UID on the server and another UID on the client, and the user's login name is the same. In this case, everything *appears* to be correct, but the user is unable to access or modify files as expected.

Using `id` with `usr/5bin/ls -n` quickly identifies these discrepancies.

IN DEPTH

IN DEPTH	723
Network Information Transfers	723



Network Information Transfers**Networking: Transfer of Information**

This article contains an overview of several network-related topics. Most of the topics are software aspects of networking, with some hardware topics describing the physical network layout.

The major topics in this article are listed below.

- Ethernet theory of operation
- Network analysis and troubleshooting hints
- Network performance
- Subnet addressing
- Avoiding physical network problems
- Thin Ethernet (Cheapernet) specifications
- Level 1 and Level 2 equipment differences
- Frequently asked questions and answers

Ethernet Theory of Operation

Ethernet theory of operation includes a definition of CSMA/CD and a description of how the single network channel (Ether) is used.

CSMA/CD Definition

Ethernet activity is Carrier Sense Multiple Access with Collision Detection (CSMA/CD). CSMA/CD technology allows many devices access to the same network, in the absence of any central controller that manages channel access. Further, there are neither pre-allocated time slots as in token ring technology, nor fixed sharing of frequency bands.

Any device wanting to transmit onto the shared channel *contends* for channel (Ether) use until the channel is *acquired*. The device then transmits a packet onto the acquired channel. In this process, each device senses the channel carrier level and looks for collisions on the network.

Ether Use

Each device wanting to transmit a packet of information onto the Ether first senses whether or not a carrier signal level is present on the Ether. One of two voltages is sensed, depending on whether another device on the network is transmitting a message at that moment in time. This is Carrier Sense (CS) and your device considers the net busy if a carrier is sensed.

Your device *defers transmitting* your message until it senses that the Ether is quiet. This is when no carrier voltage level is sensed and the net is then considered *not busy*. Once a quiet net is detected, the deferring device immediately begins transmitting the packet containing your message. This is Multiple Access (MA) since each device connected to the Ether shares the channel in real time, in some ways similar to a 'party-line' telephone service.

Your device listens for a collision during the time it takes to transmit the packet containing your message. This is the Collision Detection (CD) that lets each device know that its messages have been transmitted without any other device trying to 'break into' your 'conversation'. A collision is defined as any two devices transmitting to the same network at the same time. Unlike the old-fashioned, 'party line' telephone line, all messages are *retransmitted* if a collision is detected.

All devices look for collisions when transmitting since there is a short time interval just after a transmission begins when another device on the Ether might also begin to transmit its message. This occurs since the second device may not have sensed the carrier voltage that the first device places on the channel to transmit the packet containing the message.

This time interval is called the *collision window* or *collision interval*, after which all devices on the network will detect your carrier and defer their transmissions until yours is completed. This interval is a result of the end-to-end propagation delay on the net.

Your device continues to transmit the packet if no collision is detected during the collision window. However, each device continues to look for any collisions during the entire transmission process, in the case that a malfunctioning device is connected to the network. For example, a machine can lose the ability to detect a carrier on the network and therefore cannot sense collisions. This is known as *babble mode*.

If your station detects a collision, the current transmission is *aborted*. The network is briefly jammed by any connected station that detects a collision by invoking a collision consensus enforcement procedure. Basically, a given packet is fully transmitted only when no device on the net senses a collision, either during or after the collision window.

Each machine involved in the collisions then schedules its packet for *retransmission* at a later time. The two stations sharing the collision use a random delay period so that they each retransmit at a different time. This delay reduces the possibility that each station will retransmit at the same time and cause a second collision.

Network Analysis and Troubleshooting Hints

This discussion of network analysis and troubleshooting includes running the proper SunOS release level with a proper netmask and diagnosing network routing problems.

SunOS Releases 3.3 and 3.4; and Subnetting

Most customer calls on networking result from trying to use subnets on SunOS release that do not support subnetting. You need to run SunOS release 3.3 or subsequent releases for subnetting. Further, you need to use the proper netmask. Subnet addressing and netmasks are discussed later in this article.

Routing Problem Troubleshooting

Several commands may be issued from your command line to diagnose network routing problems. Commands discussed in this topic are shown below. Please note that the following examples are provided for illustrative purposes only and do not represent actual networks.

- Using `netstat -r`
- Using `ifconfig`
- Using `/etc/networks`

Using `netstat -r`

When `ping` or `rlogin` report *Network Unreachable*, you will need to look at the network routing tables. This allows you to see what gateway the machines think they should use to access other networks. An example of output from the `network` command using the `-r` option is shown below.

```
machine# netstat -r
```

```
Routing tables
```

Destination	Gateway	Flags	Refcnt	Use	Interface
sunpie-ntp	sunsnow	UGH	0	0	1e0
dish-ntp	sunsnow	UGH	0	0	1e0
backbone	sunsnow	UG	1	249	1e0
gsd-localnet	sunsnow	UG	0	0	1e0
supnet	machine	U	9	16631	1e0
loopback	localhost	U	2	1363	1o0

```
machine#
```

Your device and your internal, loopback network are designated as being UP in the 'Flags' column by U. G denotes a machine that is a gateway to the

network named in the 'Destination' column. H signifies the network host, the gateway to be used to gain access to the named network.

Using the `-r` option gives similar information with networks identified by the Internet subnet addresses. An example is shown below.

```
machine# netstat -n -r
```

```
Routing tables
```

Destination	Gateway	Flags	Refcnt	Use	Interface
192.9.22.1	192.8.5.44	UGH	0	0	le0
192.9.21.1	192.8.5.44	UGH	0	0	le0
192.9.3	192.8.5.44	UG	1	249	le0
192.9.133	192.8.5.44	UG	0	0	le0
192.9.9	192.9.2.14	U	8	16949	le0
127.0.1	127.0.0.1	U	3	1396	lo0

```
machine#
```

Using ifconfig

When `ping` or `rlogin` report *Connection Timed Out*, you will need to determine whether the Internet address has changed, or whether the gateway between the machines is down. The problem can also be lack of physical connection between machines.

Use the `ifconfig` command to determine the status of a network interface, its hostname, and network address.

```
machine# ifconfig le0
```

```
le0: 192.9.1.14 flags=63<UP,BROADCAST,NOTRAILERS,RUNNING>
```

```
machine# ifconfig le0 netmask 0xffffffff00
```

```
machine# ifconfig le0
```

```
le0: 192.9.1.14 netmask 255.255.255.0 flags=63<UP,BROADCAST,NOTRAILERS,RUNNING>
```

Note that `ifconfig` reports the netmask only if it has been set. If it has not been set, the appropriate default netmask shown below is in use.

Network Address Class	Default Netmask (Hexadecimal)	Default Netmask (Decimal)
Class A	0xff 00 00 00	255 00 00 00
Class B	0xff ff 00 00	255 255 00 00
Class C	0xff ff ff 00	255 255 255 00

Using /etc/networks

The `networks` file is located in either the `/etc` or `yp domain_name` directory. This file is needed for correct propagation of routing tables. This file allows you to more conveniently refer to networks by name rather than by Internet number. A sample `networks` file is shown below.

```

machine# more /etc/networks

#
# Sun customer networks
#
loopback      127
sun-ether     192.8.193   sunether ethernet localnet
#
# Internet networks
#
arpanet       10         arpa
#
# Local networks
#
ptp-net       192.2.300   my-net her-net
gymnet        128.8.3     # Home Ec subnet
solnet        192.8.21   # Solidarity Lab Network
nflsubnet     192.8.14.145 # NFL Subnet
lasernet      192.8.54   # Laser lab net
#
# Internetwork Routers
#
spdinr7       192.8.13    # Rond Road
spdinr8       192.8.14    # Rond Road
spdinr9       192.8.15    # Calistoga

```

Network Performance

Use the `netstat` and `nfsstat` commands to determine whether your network error, collisions, and `nfs` and `nd` statistics are within acceptable limits.

Using netstat

Calculate your collision rate by first dividing the amount shown under 'Collis' by the amount shown under 'Opkts' and then multiplying the quotient by 100; $(\text{Collis}/\text{Opkts}) \times 100 = \text{collision rate}$. Collision rate acceptability is great for a 1-2% range, fair for 3-5%, and poor for over 5%. Note that errors are never acceptable.

An example of netstat output using the `-i` option is shown below. This example shows a bad collision rate of 9.3%. This was calculated as $16477 / 177024 \times 100 = 9.3\%$, a very bad collision rate.

```
machine# netstat -i
```

Name	Mtu	Net/Dest	Address	Ipkts	Ierrs	Opkts	Oerrs	Collis	Queue
le0	1500	supnet	snowflake	832513	0	177024	1	16477	0
lo0	1536	loopback	localhost	1961	0	1961	0	0	0

A second use of netstat using the `-i` and `5` options is shown below. This shows the packets and errors for the input, output, and total input and output, for the time since the machine was booted, and every five seconds.

```
machine# netstat -i 5
```

input (le0)		output			input (Total)		output		
packets	errs	packets	errs	colls	packets	errs	packets	errs	colls
832857	0	177306	1	16486	834838	0	179287	1	16486
16	0	65	0	0	16	0	65	0	0
13	0	0	0	0	13	0	0	0	0
7	0	0	0	0	7	0	0	0	0

The final example shows netstat using the `-m` option. This option reports the buffers allocated to network processes.

```
machine# netstat -m
```

```
302/448 mbufs in use:
    65 mbufs allocated to socket structures
    83 mbufs allocated to protocol control blocks
    154 mbufs allocated to routing table entries
0/16 mapped pages in use
184 Kbytes allocated to network (20% in use)
0 requests for memory denied
```

Using nfsstat

Use the `nfsstat` command for checking `nfs` and `nd` statistics, particularly retransmission figures. These figures give you an idea of how good the network connection is. Look for timeouts and any entry labeled *bad*.... A sample usage of `nfsstat` is shown below.

machine# /usr/etc/nfsstat

Network Disk:

rcv 188971 snd 161467 retrans 66 (0.04%)
 notuser 0 noumatch 107 nobuf 0 lbusy 0 operrs 0
 rseq 41 wseq 0 badreq 0 stimo 0 utimo 0 iseq 0

Server rpc:

calls	badcalls	nullrecv	badlen	xdr call
0	0	0	0	0

Server nfs:

calls	badcalls					
0	0					
null	getattr	setattr	root	lookup	readlink	read
0 0%	0 0%	0 0%	0 0%	0 0%	0 0%	0 0%
wr cache	write	create	remove	rename	link	symlink
0 0%	0 0%	0 0%	0 0%	0 0%	0 0%	0 0%
mkdir	rmdir	readdir	fsstat			
0 0%	0 0%	0 0%	0 0%			

Client rpc:

calls	badcalls	retrans	badxid	timeout	wait	newcred
13048	0	3	1	3	0	0


Client nfs:

calls	badcalls	nclget	nclsleep			
13048	0	13048	0			
null	getattr	setattr	root	lookup	readlink	read
0 0%	4346 33%	10 0%	0 0%	2021 15%	4656 35%	1325 10%
wr cache	write	create	remove	rename	link	symlink
0 0%	93 0%	52 0%	1 0%	6 0%	0 0%	0 0%
mkdir	rmdir	readdir	fsstat			
0 0%	0 0%	532 4%	6 0%			


Subnet Addressing

You cannot determine the meaning of a class B subnet address by inspection. The host address and net address share the address digits in one of several ways. See the following figure for one non-subnetted class B example, and three subnetted class B address examples.


Subnet Addressing

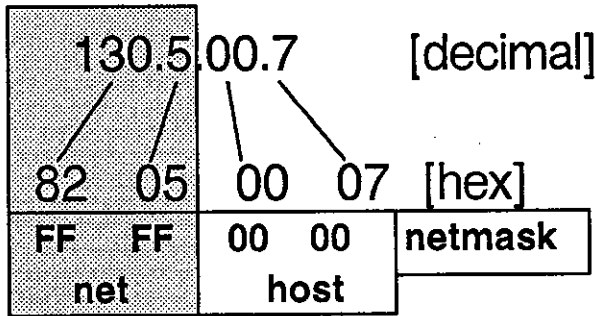


non-subnetted Class B
net = 130.5

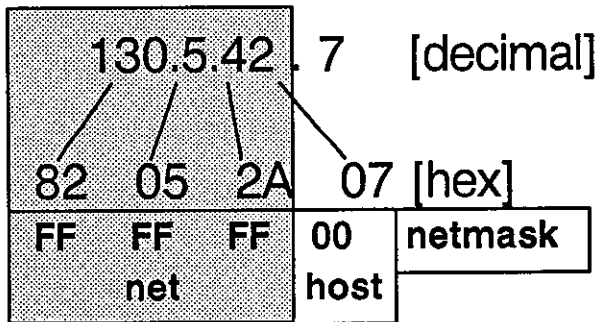

subnetted Class B
net = 130.5, subnet = 42

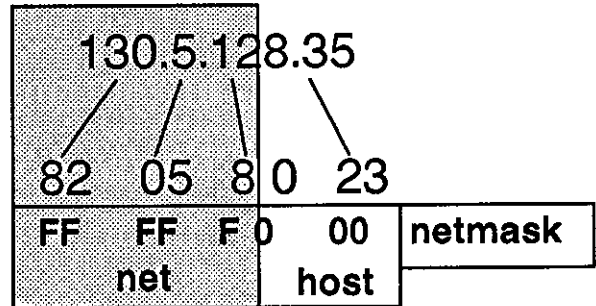

subnetted Class B
host = $23_{16} = 35_{10}$
net = 130.5, subnet = 8

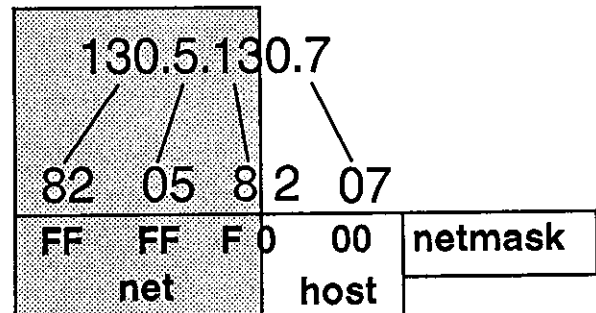

subnetted Class B
host = $0207_{16} = 519_{10}$
net = 130.5, subnet = 8

Avoiding Physical Network Problems

You can avoid problems with the network hardware by observing the following points.

- Avoid flourescent lights and power conduits when running network coaxial cables through the ceiling.
- Ground an Ethernet segment in a *single* place only. Multiple grounding points cause ground loops which may be misinterpreted by machines connected to the network as transmission carriers.
- Have 100 or fewer nodes on the net, not up to 1024 as indicated in the network specification.
- Place nodes only every 2.5m on the thick Ethernet coax. Any other placement causes standing waves on the cable which may be misinterpreted by machines. High error and collision rates may result.
- Place only one or two Ethernet repeaters between *any* two nodes.
- Place only one or two thick-to-thin Ethernet converters on a network.
- Have only a single network number on any one physical network. Multi-casting is not supported in SunOS releases 3.x.
- Ensure that the bore is cleaned out using a swab when installing a vampire-type transceiver.
- Define only a single Ethernet address for a gateway machine. A gateway has only one Ethernet address, but two Internet addresses, and two hostnames. The Ethernet address originates from the CPU HostID chip. Note that an Ethernet address needs to be unique for any one network only. The same Ethernet address may be used on *different* networks.

Thin Ethernet (Cheapernet) Specifications

The trunk cable (thin enet cable) is of constant impedance, coaxial construction. It is terminated at each of the two ends by a terminator of 50 ohms, plus or minus 1%, measured from 0 - 20 MHz. The terminator power rating shall be 0.5 watts or greater.⁶

The cable parameters are normally met by cable types RG58 A/U or RG 58 C/U. The center conductor shall be stranded, tinned copper with an overall diameter of 0.89mm, plus or minus 0.05mm. Devices attached to the trunk require a BNC 'T' connector of 50-ohm impedance. Note that this connector must be connected *directly* to the device, *without* any additional connecting cable.

⁶ The information contained in this discussion is taken from *IEEE Draft Standard 802.3*, Section 10, 'Medium Attachment Unit and Baseband Medium Specifications', Type 10BASE2, dated March 1985.

The attenuation of a cable of the maximum 600 foot (185m) length shall not exceed 8.5dB measured at 10MHz, or 6.0dB measured at 5MHz. Also, the maximum length of a segment is 600 feet, with a maximum of 30 devices or Medium Attachment Units (MAUs) connected to the segment.

The maximum end-to-end propagation delay for a coaxial segment is 950ns.

The maximum transmission path permitted between any two MAUs is limited by the maximum of four repeater sets that can be connected in series. This shall consist of no more than three tapped coaxial segments; the remainder shall be link segments.

The minimum distance between any two nodes is 1.6 feet (0.5m). No more than 30 nodes shall be on a single network segment. *No cables are allowed between the BNC T-connector and the device!* Finally, the network may neither loop nor branch.

Level 1 and Level 2 Equipment Differences

Ethernet hardware equipment is available in two versions or levels. These two versions are also known as DIX 1 and DIX 2 (DEC, Intel, Xerox). The two levels are compatible on the coaxial cable. However, a level 1 Ethernet board should be connected to a level 1 transceiver, and similarly for level 2 boards and transceivers. There are usually no problems communicating between level 1 and 2 systems across the coaxial cable, unless the network has grown extremely large.

Two features distinguish level 2 transceivers from level 1 equipment. The first feature is *jabber* which allows the transceiver to watch the packet data stream during transmission. If the data stream is longer than the maximum legal packet size, the level 2 transceiver shuts down. Note that this feature is not universally available on all level 2 transceivers. The *jabber* feature prevents a malfunctioning CPU from rendering the network unusable.

The second unique, level 2 feature is *heartbeat* which is a signal that occurs each time the transceiver receives a transmission from the attached device. The heartbeat signal is transmitted back to the device using a specific line in the transceiver cable.

The IEEE 802.3 standard is an Ethernet-like protocol, and is hardware-compatible with level 2 Ethernet equipment. However, the packet structure differs such that the two protocols do not work together on the software level. From the hardware perspective, IEEE 802.2 packets, IEEE 802.3 packets, and Ethernet packets *can* coexist on the same physical network. The Ethernet controllers read all three types of packets.

The driver software, however, must treat some of the packet fields differently. Therefore, IEEE 802.3 and Ethernet machines can talk to like-machines only on the same physical network, with unlike-machines being transparent.

Frequently Asked Questions and Answers

Ethernet level 1 and level 2 differences are found in Ethernet controller and transceiver interaction only. The differences effect neither the electrical interface nor packets sent between transceivers on the coaxial cable. Note that the Sun Ethernet board can be configured as either level 1 or level 2.

1. *What is the longest length of Ethernet cable in a network?*

The longest length possible is 1640.5 feet (500m). This length can be composed of one full, continuous piece of cable. It can also be composed of segments of 23.4m, 70.2m, or 117m lengths.

If odd-length cable sections must be used, choose the length so that the resulting reflected signals on the cable are not out of phase with the actual signal. This is usually accomplished by using lengths which are odd multiples of the half-wave length at 5Mhz. This length corresponds to the recommended segment lengths of 23.4m 70.2m, and 117m.

Transceiver drop cables have a maximum length of 164 feet (50m).

2. *What is the maximum time between recognition of the collision and repeating of the collision?*

The maximum time interval between collision recognition and a repeat collision excluding the carrier sense random retiming delays is 200ns.

3. *Should I ground the device or system?*

Yes! The sheath conductor of the transceiver shall be connected to an earth ground or chassis, but at *one and only one* point per segment. Any second or additional ground points will only introduce degenerative ground loops, which are seen as a higher voltage level on the coaxial cable. This can be misinterpreted and sensed as a transmission carrier signal voltage.

4. *What are the proper lengths for adding transceivers to the network cable?*

Transceivers may be added at a minimum of 2.5m from each other, or at multiples of 2.5m. Proper intervals are printed on the outside plastic sheath of the Ethernet coaxial cable.

5. *How many transceivers may be placed on the network?*

A maximum of 100 nodes may be placed on the network.

6. *What are the timing constraints between a detected collision and carrier sense?*

The channel logic must assert the collision-detect signal within 200ns following the collision. The channel must then deassert the collision-detect signal within 160ns after the loss of the collision-occurring signal. The carrier-sense is asserted when two stations are transmitting at the same time

must be asserted within 200ns. The channel then has 160ns to deassert carrier-sense after a carrier is no longer present on the network.

7. *What do I need to know about repeaters?*

A repeater is a device used to extend the cable length beyond the single coaxial segment length of 500m. Repeaters require a transceiver at each of the segments for which it is repeating signals. A maximum of two repeaters may be in the signal path between any two transceivers.

The repeater implements the carrier-sense and the collision-detect/repeat function for each cable segment it connects. All signals are retimed and amplified to allow for propagation to the other connected cable segment. With carrier-detect, the propagation delay through the repeater cannot exceed 800ns. With collision-detect and retransmission, the delay cannot exceed 200ns.

The repeater ensures that the signal retransmitted from one cable segment to the other has the same amplification as it would when leaving a station's transceiver and entering the Ethernet coaxial cable.

8. *How do I know that a packet preamble is correct?*

The preamble should appear as shown below. This 64-bit preamble may be viewed with proper software or a waveform analyzer. The preamble will appear on an oscilloscope as a periodic waveform of 5Mhz frequency.

10101010 10101010 10101010 10101010 10101010 10101010 10101010 10101011

QUESTIONS, ANSWERS, HINTS, AND TIPS

QUESTIONS, ANSWERS, HINTS, AND TIPS	737
Q&A, and Tip of the Month	737



QUESTIONS, ANSWERS, HINTS, AND TIPS

Q&A, and Tip of the Month

Hints & Tips #7

This is the seventh in a continuing series of this column which I have created for two purposes.⁷ First, some questions are asked regularly on the AnswerLine. I feel everyone can benefit from distributing discussions of these problems as widely as possible. Second, a large and constantly growing body of information, hints, and tips are not documented anywhere.

I will collect and distribute these information nuggets in this continuing column so that we can all learn from them. I will cover unusual topics, but this column should not be used as an alternative to contacting your support center or using the AnswerLine.

If you have a question that you would like answered in this column, please mail your question to 'Software Technical Bulletins' at Sun Microsystems, Inc., 2550 Garcia Avenue, M/S 2-312, Mountain View, CA 94043. You can also send in your question by electronic mail to *sun!stb-editor*. U. S. customers can call Sun Customer Software Services AnswerLine at 800 USA-4-SUN for technical questions on this column or any other article in this bulletin. I look forward to hearing from you!

The SunOS and Network
Services

Many parts of the Sun operating system (SunOS) use network services -- programs and features such as NeWS and perfmeters (performance meters) that are based on the code that interacts with the ethernet and other machines.

Some machines, however, are not attached to networks. Without some changes to a couple of files, you will not be able to use most network services. These changes are not clearly documented and are not done automatically by setup during SunOS installation.

⁷ This continuing column is submitted by Chuq Von Rospach, Customer Software Services.

The way to get the network services to work properly when no network exists is to change your system to use the internal 'loopback' network. To do this, you have to change two files.

SunOS File Changes

First, edit `/etc/hosts`. On a non-networked machine, there should be two entries in the file as shown below.

```
192.9.200.1 hostname      # the number may vary
127.0.0.1  localhost
```

Change the file so that both names are defined to be host number 127.0.0.1. This is done by deleting the *hostname line*, and by adding *hostname* to the original *localhost line*. See the example below, and note that *hostname* must appear first. Also ensure that you do not define your hostname twice by forgetting to delete the original hostname line.

```
127.0.0.1  hostname localhost # order is important!
```

Second, edit `/etc/rc.boot`. Three lines configure the network interfaces and initialize them using the `ifconfig` command. Comment-out the three lines as shown in the following example.

```
#!/etc/ifconfig ec0 $hostname -trailers up
#!/etc/ifconfig ie0 $hostname -trailers up
#!/etc/ifconfig le0 $hostname -trailers up
```

After this, you will need to reboot as shown below.

```
machine% su
machine# /etc/halt
...
Syncing disks... done
Unix Halted

>b
...
machine login:
```

Your system is now configured to use the loopback device as the network, and all network programs should function normally. If you later decide to install the machine on a real network, it is simple to remove the changes to these two files and return your system to the normal networking functions.

Tip of the Month (TOM)

This month's tip discusses a way of letting the Mail program send messages to the printer. Mail does not have the capability of spooling a copy of a mail message to the printer. You must first save the message in a file, then print the file, and finally delete it. A better solution is to allow the message to be printed without first saving it in a file. The way to do this is to set the EDITOR variable in /usr/lib/Mail.rc, the system-wide parameter list, to /usr/ucb/lpr, as shown in the following example.

```
set EDITOR=/usr/ucb/lpr
```

If you do not want to change the EDITOR variable for the entire machine, a user can put the command shown above in his or her personal .mailrc file. This sets EDITOR for that individual only. The user then can enter e <message-number>, and the message is printed.

Users who are accustomed to using the ex editor by entering e <message-number> can set the VISUAL variable to /usr/ucb/ex and edit by entering v <message-number>. You could otherwise set the EDITOR variable back to /usr/ucb/ex and set the VISUAL variable to /usr/ucb/lpr. You would then use v <message-number> for the printing function. Again, these changes would be made in the user's personal .mailrc file.



THE HACKERS' CORNER

THE HACKERS' CORNER	743
Logging Console Messages	743



THE HACKERS' CORNER

Logging Console Messages



A Console Messages Log Program

The program shown below was developed by Sun in the United Kingdom. It logs console messages into a file or onto a printer. The program uses the same `ioctl` as `cmdtool`. Before using this program, you may need to search all `.suntools` files as well as the system-wide `.suntools` file to remove the `-C` option for the console `cmdtool`.

Note that a better method than that shown above is to remove the `-C` option from the `cmdtool` program itself.

Program Use

Comments on console messages log program features, improvements, or the user interface are welcomed. Please send them to `sun!stb-editor`. I will then forward them to Sun Europe.

Please consult your local shell script or programming expert regarding any script or code problems. The console messages log program is not offered as a supported Sun product, but as an item of interest to enthusiasts wanting to try out something for themselves. Note that the program may not work in all cases (e.g. guaranteed append mode is not supported over NFS), and may not be compatible with future SunOS releases.

The Program

The program code appears on the following pages.

```
/* Program to log console messages in a file. */
/* Command syntax: conslog [file]. */
/* If no file is given, logging is done on 'stdout'. */
/* 'cmdtool' also takes control of console logging (-C option). */
/* Make sure all 'cmdtool -C' options are removed from all '.suntools' */
/* and '/usr/lib/suntools' files,
/* or change the 'toolmerge' or the 'cmdtool' itself. */
/* The program uses 1 'pty, to connect to the console. */
```

```
#include <sys/ioctl.h>
#include <sys/time.h>
#include <sys/file.h>
#include <stdio.h>
```

```
int width;
int cons,mstr,ctty;
```

```
char pty[]={
    "/dev/ptyp0"};
char tty[]={
    "/dev/ttyp0"};
```

```
struct timeval timeout;
```

```
char buffer[512];
```

```
#define MAX1 '9'+1
#define MAX2 'f'+1
```

```
char *timestr()
{
    int t;
    char *ctime(),*s;

    t=time(0);
    s=ctime(&t);
    return(s);
}
```

```
main(argc,argv)
int argc;
char **argv;
{
    int r,w,s,log;
    register int rmask,i;

    if (argc > 1)
    {
        if((log=open(argv[1],O_RDWR | O_APPEND)) < 0)
            if((log=creat(argv[1],O_RDWR | 0666)) < 0)
            {
```



```

        perror("conslog: cannot create ",argv[1]);
        exit(2);
    }
}
else
    log=1;

mstr=getpty();
ctty=open(tty,O_RDWR);

if(ioctl(ctty,TIOCCONS) == -1)
{
    perror("conslog: Cannot attach console to pty.\n");
    exit(1);
}

width=32;
rmask=(1<<mstr);

s=0;
w=0;
do {
    r=rmask;
    select(width,&r,&w,&s,0);
    if(r)
    {
        i=read(mstr,buffer,512);

        write(log,timestr(),25);
        write(log,buffer,i);
    }
} while (i >= 0);
close(mstr);
perror("conslog:");
exit(3);
}

getpty()
{
    int i=0,f= -1;
    while(i < 48)
    {
        if((f=open(pty,O_RDWR)) > 0)
            return(f);
        i++;

        ++pty[9];
        ++tty[9];
        switch(pty[9])
        {
            case 'MAX1':
                pty[9]='a';
                tty[9]='a';

```

```
        break;
    case 'MAX2':
        pty[9]='0';
        pty[8]++;
        tty[9]='0';
        tty[8]++;
        break;
    }
}
perror("conslog: Cannot open a pty");
exit(4);
}
```

CUMULATIVE INDEX: 1987

CUMULATIVE INDEX: 1987 749



Index

Special Characters

- .cshrc
 - at usage, 211
 - slow, 67
 - with interactive shell, 68
- .login, 67
- /dev
 - ownership, 54
- /etc/group
 - searches, 26
 - YP master server, 27
- /etc/hosts
 - INR, 51
- /tmp
 - with NFS partitions, 355

8

- 800 USA-4-SUN
 - use of, 364

A

- ACCELL
 - databases, 271
- accelerator
 - floating point, 700
- address
 - device drivers, 195
- address mask, 74
- addresses
 - classes of, 391
 - Internet, 391
- aliases
 - mail, 291
 - namestripes, 220
 - sendmail, 269
- AnswerLine, 5, 26, 67, 219, 291, 401, 605, 737
- answermail
 - script, 321, 324
 - script installation, 321
- architecture
 - Prism, 287
 - Sun4, 403
- ARP, 393
- arrow keys
 - mapping, 265
- asm
 - errata, 689

- asm, *continued*
 - with C source, 215
- assembler
 - bugs, 416
- assembly code
 - with C source, 215
- at
 - used with .cshrc, 211
- at (1)
 - answermail script, 321

B

- back-to-back packets, 245
- beta sites, 673, 683
 - questionnaire, 687
- bind
 - port numbers, 213
- blocking
 - using select (), 62
- Bourne shell
 - bugs, 478
- bridge box, 719
- broadcasting
 - subnets, 391
- brouchure
 - Sun Education, 688
- Browser
 - installation, 612
 - program, 611
- bsc3270
 - bugs, 507
- bscrje
 - bugs, 507
- buffer
 - Ethernet, 245
- buffers
 - color frame, 276
 - frame, 358
- bug
 - 3/50 CPU board, 189
 - reporting, 206
- bugs
 - assembler, 83, 416
 - Bourne shell, 140, 478
 - bsc3270, 103, 507
 - bscrje, 103, 507
 - C compiler, 84, 417

bugs, *continued*

- C shell, 140, 478
- cgi, 120, 454
- compiler library, 99, 437
- compiler utilities, 102, 444
- compilers, 83, 416
- Datacomm, 103, 507
- debugger, 90, 423
- demo, 123
- diagnostics, 109, 445
- dna, 105, 511
- documentation, 111, 447
- driver, 460
- editor utility, 495
- formatter, 156, 495
- FORTTRAN compiler, 93, 426
- FORTTRAN documentation, 447
- gp, 123, 456
- graphics, 120, 454
- index entries, 347
- installation, 490
- kernel, 128, 460
- linker, 440
- lint, 100, 440
- LISP, 170, 528
- mail, 158, 497
- make, 158, 498
- Modula 2, 171, 529
- network, 135, 470
- network general, 474
- network library, 135, 470
- network program, 137, 474
- nfs, 135, 470
- optimizer, 100, 441
- PC-NFS, 530
- pixrect, 123, 457
- printer, 159, 498
- program utility, 499
- protocol, 138, 475
- setup, 490
- shell, 140, 478
- sna3270, 108, 515
- SunAlis, 167, 504
- SunAlis database, 504
- SunAlis documentation, 504
- SunAlis general, 504
- SunAlis spreadsheet, 505
- SunCORE, 124
- SunCORE documentation, 447
- SunCORE graphics, 457
- SunGKS, 520
- SunGKS library, 520
- SunINGRES, 168, 523
- SunINGRES documentation, 523
- SunINGRES general, 525
- SunINGRES library, 525
- SunINGRES program, 527
- SunSimplify, 532
- SunSimplify library, 532
- SunSimplify program, 532
- SunUNIFY, 172, 534
- SunView, 142, 480
- SunView documentation, 448
- SunView library, 480

bugs, *continued*

- SunView program, 486
- SunWindows, 488
- syscall, 467
- system administration, 148, 490
- system administration documentation, 448
- system administration utilities, 494
- transcript, 531
- user manuals, 451
- utilities, 156, 495
- utility programs, 160
- uucp, 165, 501
- vt100tool, 108, 517
- X.25, 517
- yellow pages, 139
- Bulletin Board, 250
- bulletin board
 - Sun Education, 688

C

- C
 - calling NeWS, 407
- C compiler
 - bugs, 417
- C shell
 - bugs, 478
- canvas
 - colormaps, 282
- carrier sense, 724
- CDB
 - errata, 296
- cgi
 - bugs, 454
- checksum
 - Ethernet, 380
- child processes
 - dbxtool, 192
 - PID, 192
- chip
 - 83586, 188
- client
 - sample programs, 13
 - stream socket, 12
- collisions
 - detection of, 724
- color, 275
 - maps, 276
- colormaps, 357
- compatibility
 - Sun4 binary, 403
 - SunView 2, 597
- compiler
 - FORTTRAN 1.0 extensions, 707
- compiler utility
 - bugs, 444
- compilers
 - assembler bugs, 83, 416
 - bugs, 83, 416
 - C compiler bugs, 84, 417
 - compiler library bugs, 99, 437
 - debugger bugs, 90, 423
 - FORTTRAN compiler bugs, 93, 426

compilers, *continued*
 linker bugs, 440
 lint bugs, 100, 440
 optimizer bugs, 100, 441
 utility bugs, 102, 444

configurations
 controllers, 580
 disks, 580
 Sun-2, 582
 Sun-3, 581

console messages
 program, 743

controller
 Ethernet, 245

controllers
 combinations with disks, 581, 582
 disk configurations, 580

conversion
 color to monochrome, 358

corrections
 April TOM, 224
 routing, 296

courses
 Sun Education, 688

CPU
 multiple, 244

CR LF
 end-of-line, 44

cumulative index
 use of, 347

Customer Software Services, 5, 39
customer-training@sun.com
 Sun Education, 688

D

DARPA, 73

databases
 incompatible, 271
 SunAlis database bugs, 504

Datacomm
 bsc3270 bugs, 103, 507
 bscrje bugs, 103, 507
 bugs, 103, 507
 dna bugs, 105, 511
 sna3270 bugs, 108, 515
 vt100tool bugs, 108, 517
 X.25 bugs, 517

datagrams
 fragmentation of, 393
 reassembly of, 393

daylight savings time
 kernel, 24

dbxtool
 child processes, 192

dd (1)
 slow disk test, 263

debuggers
 bugs, 423

defaults
 monitor types, 402

defaultsedit
 mouse, 606

demultiplexing
 TCP/IP, 377

device drivers
 Consulting Services, 194
 device addresses, 195

devices
 ones present, 301

diagnostics
 bugs, 109, 445

disk
 combinations with controllers, 581, 582
 determining configurations, 580
 enlarging procedure, 569
 enlarging SunIPC, 569
 slow test, 263

disk space
 saving, 355

disks
 size using *mkfs*, 267
 size using *setup*, 267

dispatching
 procedures, 567

DMA, 194

dna
 bugs, 511

documentation
 bugs, 111, 447
 FORTRAN documentation bugs, 447
 SunAlis documentation bugs, 504
 SunCORE documentation bugs, 447
 SunINGRES documentation bugs, 523
 SunView documentation bugs, 448
 user manual bugs, 451

DoD, 73

domain system
 Internet, 387

driver
 bugs, 460

DST, 24
 Australia, 24
 Europe, 24
 rules table, 25

dump
 nd1 partitions, 266
 with host names, 270

DVMA, 194

E

editor utility
 bugs, 495

education
 courses, 688

Educational Services
 courses, 688

email
 Sun Education, 688

end-of-line
 definitions, 44

environment
 answermail variables, 322

errata, 563

errata, *continued*
 April TOM, 224
 a sm usage, 689
 May CDB, 296
 routing, 296

errno
 EWOULDBLOCK, 64

errors
 1e0, 21

Ethernet, 380
 back-to-back packets, 245
 buffer, 245
 controller, 245
 header, 380
 throughput, 246, 719

Europe
 hotlines, 562

experiment
 answermail script, 321
 calling NeWS from C, 407
 devices present, 301

extensions
 FORTRAN 1.0 compiler, 707

F

fast mode
 Weitek chips, 702

floating point
 accellerator, 700

fork ()
 child processes, 192

formatter
 bugs, 495

FORTRAN
 1.0 announcement, 707
 1.0 extensions, 707
 compiler bugs, 426

FORTRAN documentation
 bugs, 447

fragmentation
 datagrams, 393

frame buffers
 with screendump, 358

ftime, 24

FTP, 370

G

gateway, 74

gateways, 390

getpagesize (), 300

gettimeofday, 24

gettytab
 modem entries, 209

GMT, 24

gp
 bugs, 456

graphics
 bugs, 120, 454
 cgi bugs, 120, 454
 demo bugs, 123
 gp bugs, 123, 456

graphics, *continued*
 pixrect bugs, 123, 457
 SunCORE bugs, 124, 457

grpck
 YP map problems, 27

H

Hackers' Corner
 answermail script, 321
 devices present, 301
 memory size, 299
 NeWS, 407
 survey, 239

hardware
 color frame buffers, 276

Hayes-Compatible, 219

headers
 IP, 379
 octets, 375
 overview, 377

host names
 with dump, 270
 with fdump, 270

hotline
 Europe, 562
 procedures, 567
 UK, 562
 use of, 363

hotline@sun.COM
 reporting bugs, 206

I

I/O
 sockets, 9

ICMP, 386

id, 720

ie0 spurious interrupt
 SunOS 3.2, 187

images
 converting to monochrome, 358

incompatibility
 databases, 271

index
 bug entries, 347

inline, 689

INR, 51
 requirements for, 53

installation
 bugs, 490

Internet
 addresses, 391
 domain system, 387
 protocols, 369

IP, 369
 headers, 379

K

kernel
 bugs, 128, 460
 daylight savings time, 24
 driver bugs, 460
 general bugs, 462

kernel, *continued*
 swap space, 232
 syscall bugs, 467
 time zones, 23

keys
 mapping, 265

L

labels
 pedestal, 580
 LANCE, 21
 packets, 21
 layering
 mail, 375
 le0
 errors, 21
 level 1
 network hardware, 732
 level 2
 network hardware, 732
 library bugs
 compilers, 437
 network, 470
 SunINGRES, 525
 SunSimplify, 532
 SunView, 480
 line speeds
 uucp, 214
 linker
 bugs, 440
 lint
 bugs, 440
 LISP
 bugs, 170, 528
 Lisp
 quick check, 698
 localtime, 25
 lockd
 needing statd, 589
 lpr
 flow control, 43

M

mail, 371
 aliases, 291
 bugs, 497
 formats, 293
 layering, 375
 pitfalls, 293
 routing, 389
 systems, 353
 transport systems, 354
 user agents, 353
 Mail Service, 250
 make
 bugs, 498
 manuals
 proprietary, 197
 maps
 color, 276
 YP, 34
 mask

mask, *continued*
 address, 74
 memory
 size, 299
 SunAlis requirements, 251
 SunINGRES requirements, 259

mkfs
 disk sizes, 267
 MMU, 366
 modems
 gettytab entries, 209
 high speed, 693
 software installation, 693

Modula 2
 bugs, 171, 529

monitors
 defaults, 402
 determining type, 401
 high-resolution, 358

mouse
 defaultsedit, 606
 MS-DOS, 569

N

namestripes
 aliases, 220
 reprogramming, 27
 naming convention
 read, 243
 transfer, 243
 write, 243

ND
 swap space, 229

nd1
 dumping partitions, 266

network
 bugs, 135, 470
 general bugs, 474
 library bugs, 135, 470
 nfs bugs, 135, 470
 program bugs, 137, 474
 protocol bugs, 138, 475
 yellow pages bugs, 139

networks
 carrier sense, 724
 collision detection, 724
 Ethernet theory, 723
 hardware problems, 731
 loopback, 738
 performance of, 727
 Q & A, 733
 services, 737
 thin Ethernet, 731

newfs
 dumping partitions, 266

NeWS
 called from C, 407
 with SunView 2, 595

NFS, 372
 bugs, 470
 partitions, 57
 partitions with root, 355

nodes
multiple, 244

O

octets
TCP/IP headers, 375
optimizer, 689
bugs, 441
out-of-band data
sockets, 9

P

packets, 380
back-to-back, 245
LANCE, 21
page faults
overview, 366
panic: iechkcca, 187
partition
calculating size, 230
swap space, 229
partitions
dumping nd1, 266
read protection, 57
PC-NFS
bugs, 530
pedestal
information, 580
Personal AnswerLine, 5
PF keys
mapping, 265
physmem, 299
PID
child processes, 192
ping, 577
script, 578
pixrect
bugs, 457
pmap_rmtcall, 578
port number
assignment of, 213
PostScript
pscat output, 198
setlinewidth, 208
pounds sterling
symbol printing, 49
printer
bugs, 498
printing
images, 357
Prism
windows, 287
procedure
enlarging SunIPC disk, 569
hotline, 567
products
release levels, 349, 560, 681
program bugs
network, 474
SunINGRES, 527
SunSimplify, 532

program bugs, *continued*
SunView, 486
program utility
bugs, 499
proprietary manuals, 197
protocol
bugs, 475
pscat
PostScript, 198
ptroff
pounds sterling, 49
pty
ownership, 54

Q

questionnaire
beta sites, 687
quota
delays, 605
symbolic links, 606

R

rdump
with host names, 270
read
naming convention, 243
read optimization, 59
reduced time, 591
write permission, 59
read protection
NFS, 57
Read This First
purpose, 584
reassembly
datagrams, 393
recomputation
floating point, 700
register
saving D2, 46
release level
SunOS, 205
releases
software products, 349, 560, 681
reporting bugs, 206
RETRN
end-of-line, 44
root
access, 355
file permissions, 57
read permissions, 57
rotdelay, 591
routing
mail, 389
RPC, 577
rpc.etherd, 578
rpc.rstatd, 578
RTF
purpose, 584
Rutgers University, 369

S

- SCB, 188
- SCLISP
 - quick check, 698
- screendump, 357
 - color windows, 288
- screenload, 358
- script
 - answermail, 324
- SCSI
 - slow disk test, 263
- seek
 - read optimization, 59
- select ()
 - exceptions, 64
 - non-blocking mode, 62
- sendmail, 353
 - aliases, 269
- server
 - stream socket, 10
 - SunView 2, 596
- setlinewidth, 208
- setup
 - bugs, 490
 - disk sizes, 267
- shell
 - Bourne shell bugs, 140, 478
 - bugs, 140, 478
 - C shell bugs, 140, 478
- shoebox
 - disk labels, 581
- SIGIO, 9
- SIGPIPE
 - server, 10
- SIGQUIT
 - server, 10
- SIGURG, 9
- sleep, 43
- SMTP
 - application example, 384
- sna3270
 - bugs, 515
- sockets
 - example programs, 10
 - out-of-band data, 9, 15
 - programming examples, 9
 - servers, 10
 - well-known, 381
- Software Information Services, 1, 39
- spreadsheet bugs
 - SunAlis spreadsheet, 505
- statd
 - with lockd, 589
- STB
 - duplication of, 181
- stdio
 - read optimization, 59
- subnets
 - address mask, 74
 - broadcasting, 391
 - definition, 73
 - subnets, *continued*
 - enabling, 77
 - Exterior Gateway Protocol, 73
 - limitations, 75
 - SunOS release 3.3, 264
 - subnetting, 73
 - sun!hotline*
 - reporting bugs, 206
 - use of, 363
 - sun!stb-editor*, 26, 39, 67, 70, 181, 219, 291, 401, 605, 737
 - sun!sunbugs*
 - reporting bugs, 206
 - suncustomer-training*
 - Sun Education, 688
 - Sun4
 - architecture, 403
 - binary compatibility, 403
 - SunAlis
 - bugs, 167, 504
 - database bugs, 504
 - documentation bugs, 504
 - general bugs, 504
 - memory requirements, 251
 - release 2.0, 249
 - spreadsheet bugs, 505
 - support of, 592
 - windows, 252
 - SunAlis 1.0
 - discontinued support of, 592
 - SunAlis 2.0
 - upgrade program, 592
 - sunbugs@sun.COM*
 - reporting bugs, 206
 - SunCGI, 280
 - SunCore, 282
 - SunCORE
 - documentation bugs, 447
 - SunCore
 - printing images, 357
 - SunCORE graphics
 - bugs, 457
 - SunGKS
 - bugs, 520
 - library bugs, 520
 - SunGKS library
 - bugs, 520
 - SunINGRES
 - bugs, 168, 523
 - documentation bugs, 523
 - general bugs, 525
 - installing release 5.0, 258
 - library bugs, 525
 - memory requirements, 259
 - program bugs, 527
 - release 5.0, 254
 - SunIPC
 - enlarging disk, 569
 - SunLink Internet Router, 51
 - requirements for, 53
 - SunOS
 - determining release of, 205
 - network services, 737

SunOS, *continued*
 release 3.3 and subnets, 264

SunSimplify
 bugs, 532
 library bugs, 532
 program bugs, 532

Suntools
 exiting, 55

suntools
 frame buffers, 277
 reprogramming namestripes, 27

SunUNIFY
 bugs, 172, 534

SunUnify
 diskful configuration, 705
 diskless configuration, 706
 installation, 703

SunView
 bugs, 142, 480
 color frame buffers, 278
 documentation bugs, 448
 library bugs, 480
 program bugs, 486
 SunWindow bugs, 488

SunView 2
 changes, 597
 compatibility issues, 597
 differences from SunView, 595
 introduction, 595

SunView documentation
 bugs, 448

SunWindow
 bugs, 488

support
 discontinuation of, 592

swap space
 ND, 229

switcher(1)
 colormaps, 287

symbolic links
 quota, 606

syscall
 bugs, 467

system administration
 bugs, 148, 490
 documentation bugs, 448
 installation bugs, 490
 setup bugs, 490
 utility bugs, 494

system administration utilities
 bugs, 494

T

tables
 software release levels, 349, 560, 681

tape verification, 210

TCP, 369
 sockets, 12

TCP/IP
 demultiplexing, 377
 references, 394

telnet, 44, 370

telnet, *continued*
 Bridge terminal server, 44

terminal
 tty problems, 590

testing
 beta sites, 683

The Hacker's Corner
 Browser, 611
 console messages, 743

thin Ethernet
 specification, 731

throughput
 Ethernet, 246, 719

time zones
 TZ, 23
 uucico, 23

training
 Sun Education, 688

transcript
 bugs, 531

transfer
 naming convention, 243

troff
 previewing output, 198

tty
 ownership, 54
 virtual, 590

tunefs(8)
 read times, 591

TZ, 23
 DST rules table, 25

U

UDP, 386

UK
 hotline, 562

UNIX
 monitoring status of, 577

upgrade
 SunAlis program, 592

USA-4-SUN
 use of, 364, 567

USAC
 feedback, 365

user manuals
 bugs, 451

utilities
 bugs, 156, 495
 editor bugs, 495
 formatter bugs, 156, 495
 mail bugs, 158, 497
 make bugs, 158, 498
 printer bugs, 159, 498
 program bugs, 499
 utility program bugs, 160
 uucp bugs, 165, 501
 yellow pages, 33

uucico
 time zones, 23

uucp
 bugs, 501

uucp, *continued*
Hayes-Compatible, 220
line speeds, 214

V

variables
 answermail environment, 322
verification
 tapes, 210
vi
 maps, 69
vt100tool
 bugs, 517

W

Weitek
 fast mode chips, 702
well-known sockets, 381
windows, 276
 color frame buffers, 277
 Prism, 287
 server-based, 596
 with SunAlis, 252
write
 naming convention, 243
write permission
 read, 59
wstat
 floating point, 701

X

X.11
 with SunView 2, 595
X.25, 61
 bugs, 517


Y

yellow pages, 31
 installation, 32
 mail aliases, 291
 utilities list, 33
YP, 31
 clients, 31
 domains, 32
 installation, 32
 maps, 34
 master server, 32
 rpc, 33
 server maps, 31
 slave servers, 31
 utilities list, 33
ypbind, 32
ypserv, 32




Revision History

<i>Revision</i>	<i>Date</i>	<i>Comments</i>
FINAL	October 1987	Ninth issue of Software Technical Bulletin (Software Information Services).

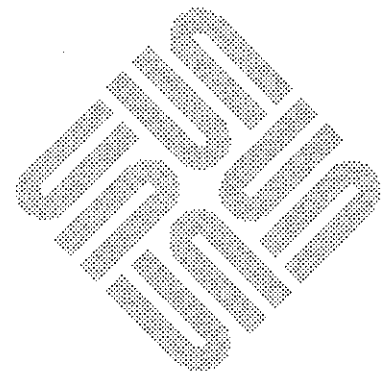



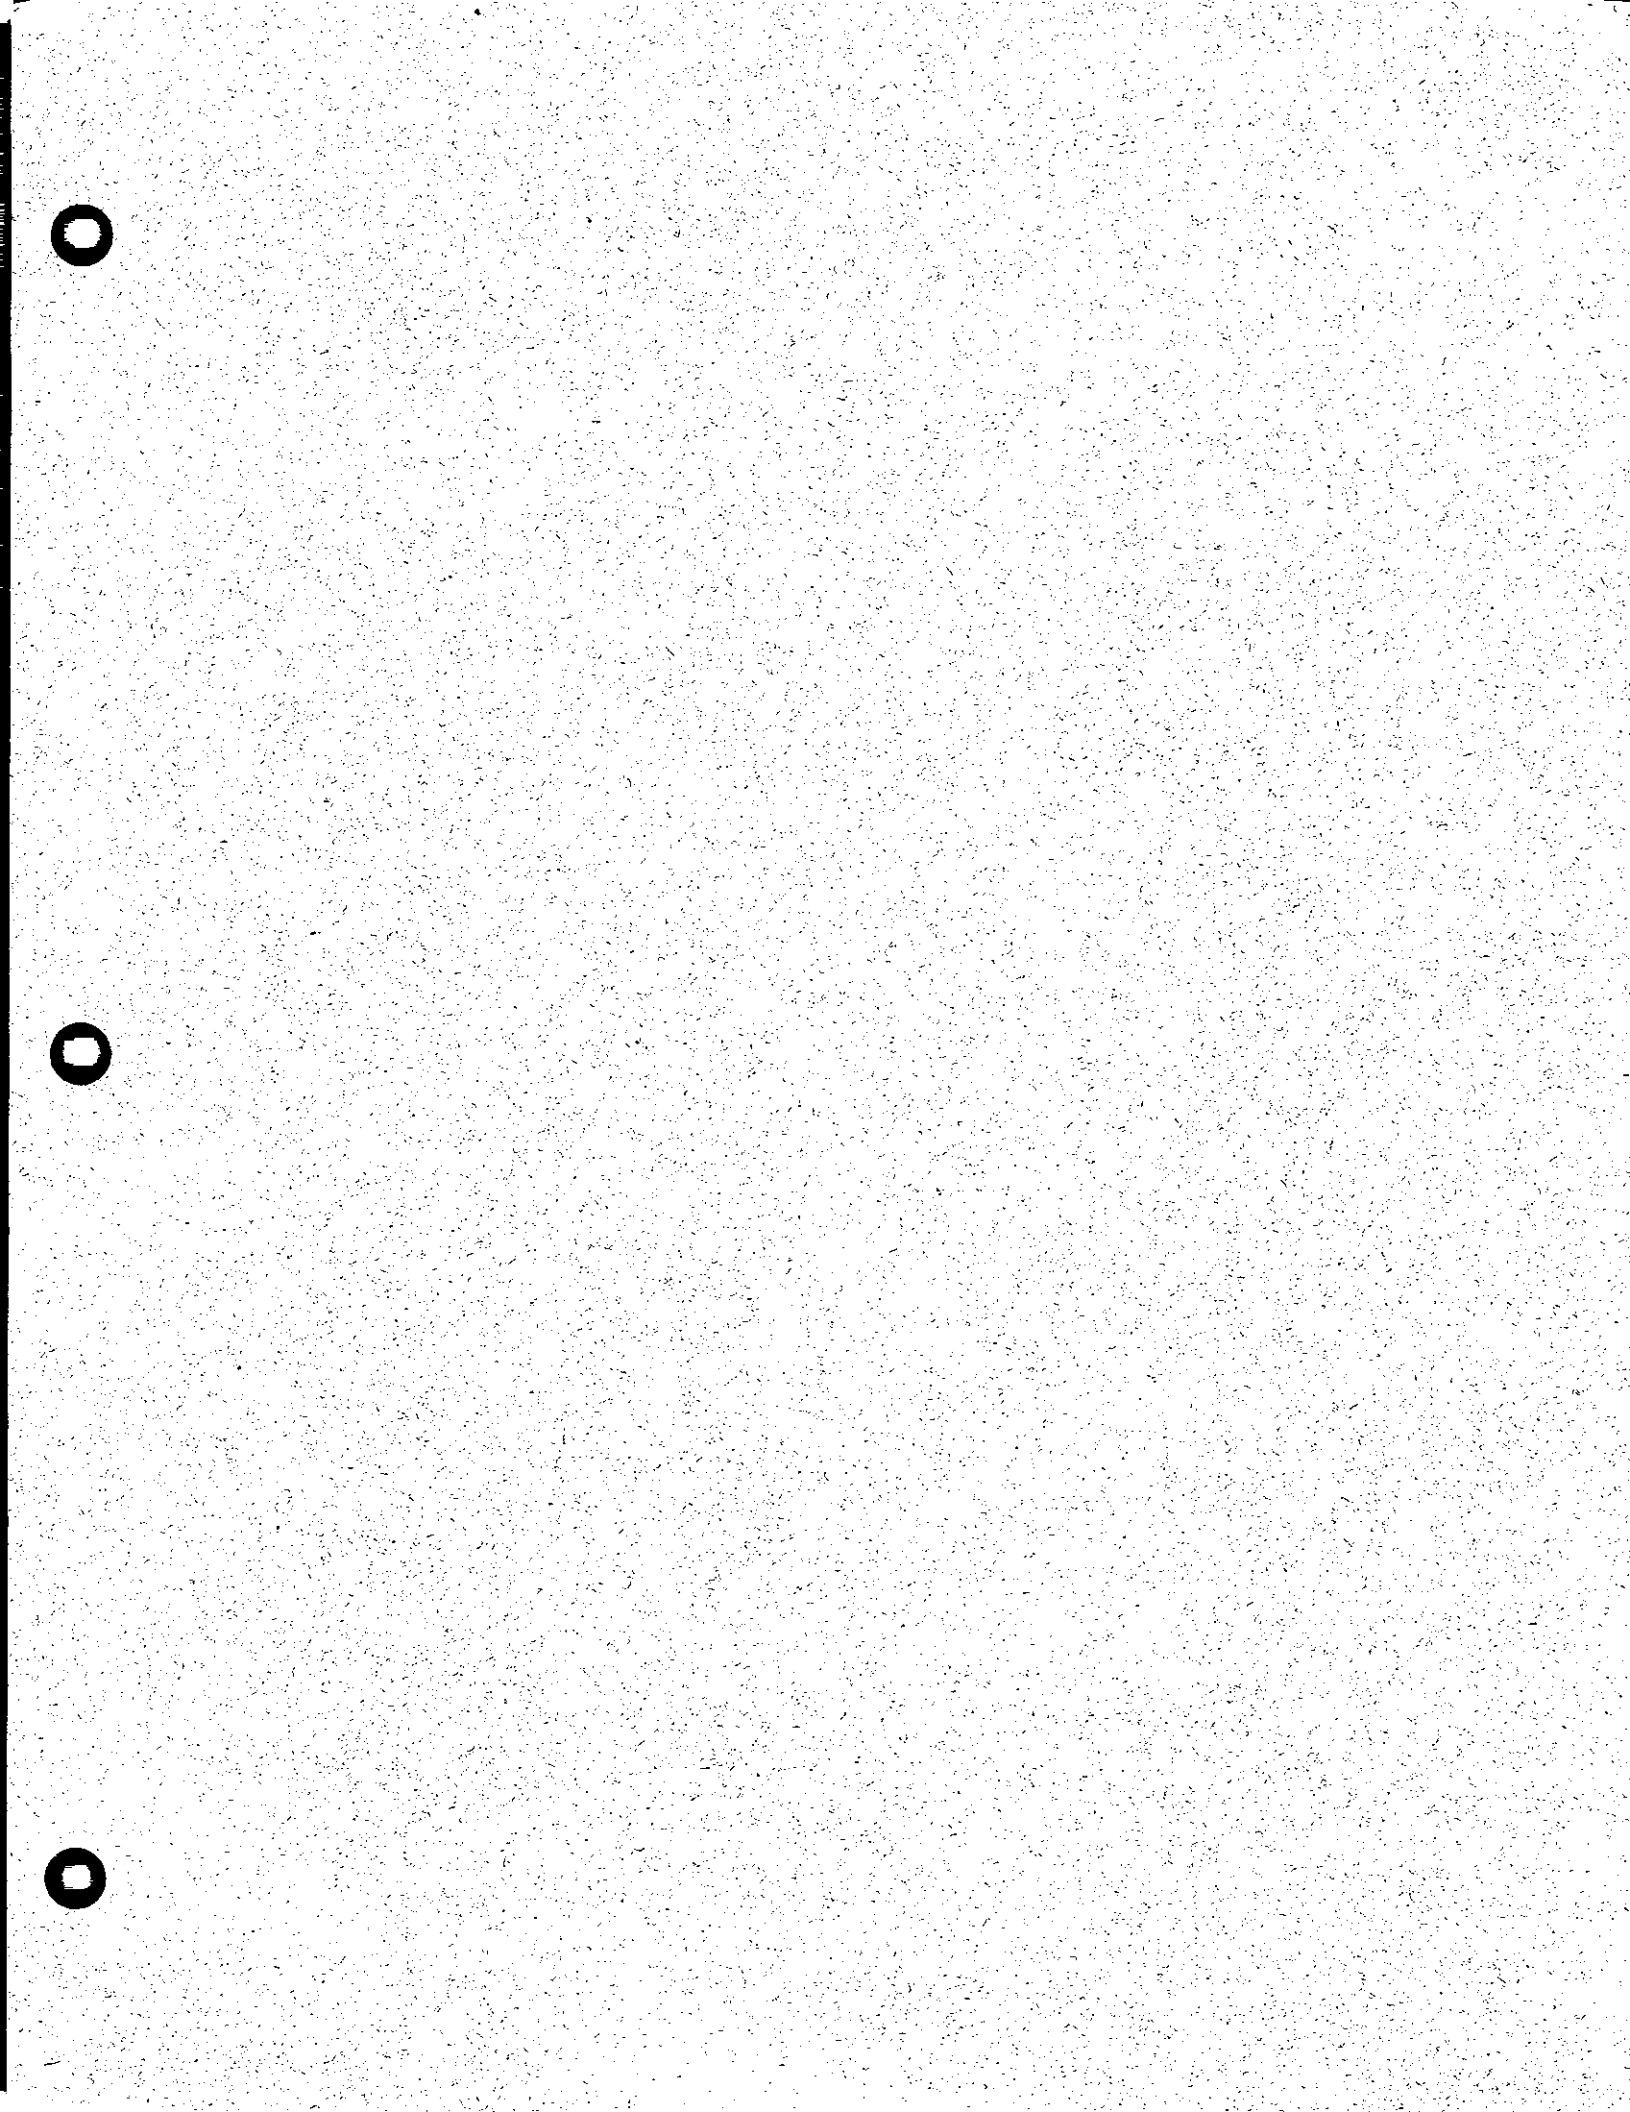

Bulk Rate
U.S. Postage
PAID
Permit No. 515
Mountain View, CA

Corporate Headquarters
Sun Microsystems, Inc.
2550 Garcia Avenue
Mountain View, CA 94043
415 960-1300
TLX 287815

**For U.S. Sales Office
locations, call:**
800 821-4643
In CA: 800 821-4642

European Headquarters
Sun Microsystems Europe, Inc.
Sun House
31-41 Pembroke Broadway
Camberley
Surrey GU15 3XD
England
0276 62111
TLX 859017

Australia: 61-2-436-4699
Canada: 416 477-6745
France: (1) 46 30 2324
Germany: (089) 95094-0
Japan: (03) 221-7021
The Netherlands: 02155 24888
UK: 0276 62111

**Europe, Middle East, and Africa,
call European Headquarters:**
0276 62111

**Elsewhere in the world, call
Corporate Headquarters:**
415 960-1300
Intercontinental Sales

